


TORO®

MODEL NO. 22026-8900001 & UP

PARTS CATALOG

PROLINE 21" Side Discharge Mower

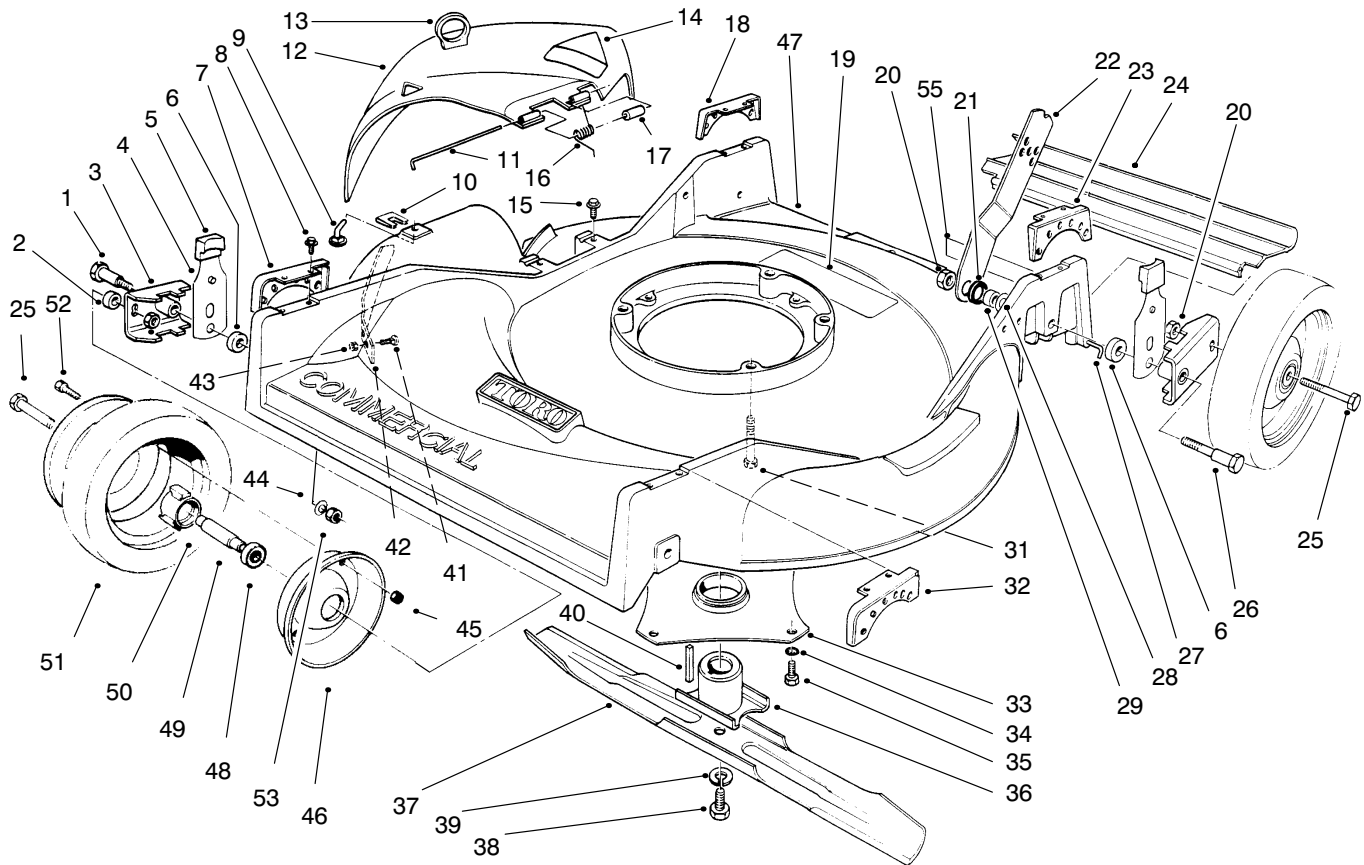


C-1012C

HOUSING & WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	49-9180	Screw - Pivot	2
2	52-2480	Spacer - Wheel	4
3	49-9160	Pivot Arm Assembly	4
4	49-8800	Spring Arm Assembly	4
5	25-7740	Knob - Arm	4
6	53-7930	Spacer - Pivot Arm	4
7	52-2510	Quadrant - Front R.H.	1
8	49-2040	Screw - Thread Forming	8
9	28-3260	Pin - Chute	1
10	28-3250	Clip - Pin	1
11	52-2570	Pin - Deflector Hinge	1
12	12-4739	Deflector (Incl. Ref. #14)	1
13	28-1430	Loop - Lift	1
14	39-5770	Decal - Danger	1
15	46-6811	Screw/Washer Assembly	2
16	52-2560	Spring - Deflector	1
17	28-3270	Sleeve - Spring	1

Ref. No.	Part No.	Description	No. Used
18	52-2530	Quadrant - Rear R.H.	1
19	71-1280	Decal - Safety Instructions	1
20	3296-39	Nut - Lock	6
21	27-6510	Spacer - Latch, Handle	2
22	27-7071	Latch - Handle	2
23	52-2540	Quadrant - Rear L.H.	1
24	52-2640	Shield - Rear, Safety	1
25	323-12	Screw - Cap, Hex Hd.	4
26	52-2260	Screw - Pivot, Rear	2
27	33-3201	Rod - Shield	1
28	3290-340	Washer - Belleville	2
29	52-2360	Spacer - Handle, Brace	2
30	68-7410	Decal - Blade Warning	1
31	66-9303	Screw - Hex. Washer Hd.	4
32	52-2520	Quadrant - Front L.H.	1
33	52-2500	Crankshaft Protector	1
34	3254-6	Washer - Lock, Int. Tooth	4

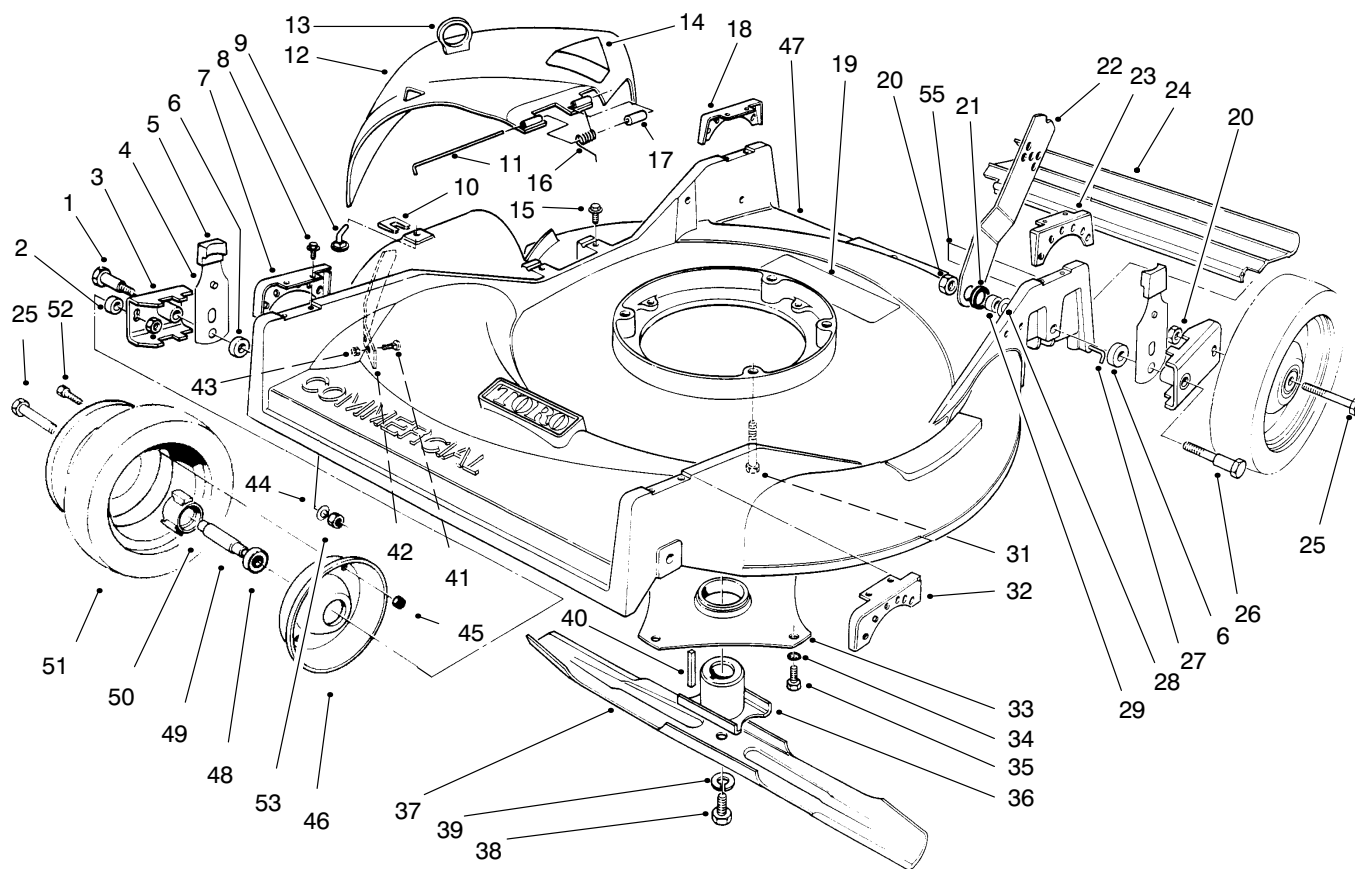


C-1012C

HOUSING & WHEEL ASSEMBLY (Cont.)

Ref. No.	Part No.	Description	No. Used
35	32144-70	Screw – Thread Forming	4
36	52-2170	Retainer, Blade	1
37	8-5230	Blade 21"	1
38	26-0671	Screw – Blade	1
39	3253-22	Washer – Lock	1
40	27-8590	Key – Square	1
41	3230-16	Bolt – Carriage	2
42	52-2650	Bar – Safety	1
43	3296-29	Nut – Lock	2
44	3290-455	Washer – Belleville	2
45	3296-42	Nut – Lock	16
46	53-7780	Plate – Wheel Half	8

Ref. No.	Part No.	Description	No. Used
47	12-4729	Housing (Incl. Ref. #19, & 55)	1
48	52-2450	Bearing – Wheel	8
49	52-2440	Spacer – Bearing	4
50	52-2410	Hub	4
51	53-7740	Tire	4
52	321-2	Screw – Cap, Hex. Hd.	16
53	32152-2	Nut – Lock	2
54	71-8650	Decal – Danger	1
55	92-1779	Decal – Warning	1
*	53-7720	Tire & Wheel Assembly (Incl. Ref. #45, 46 & 48-52)	4

*Not Illustrated

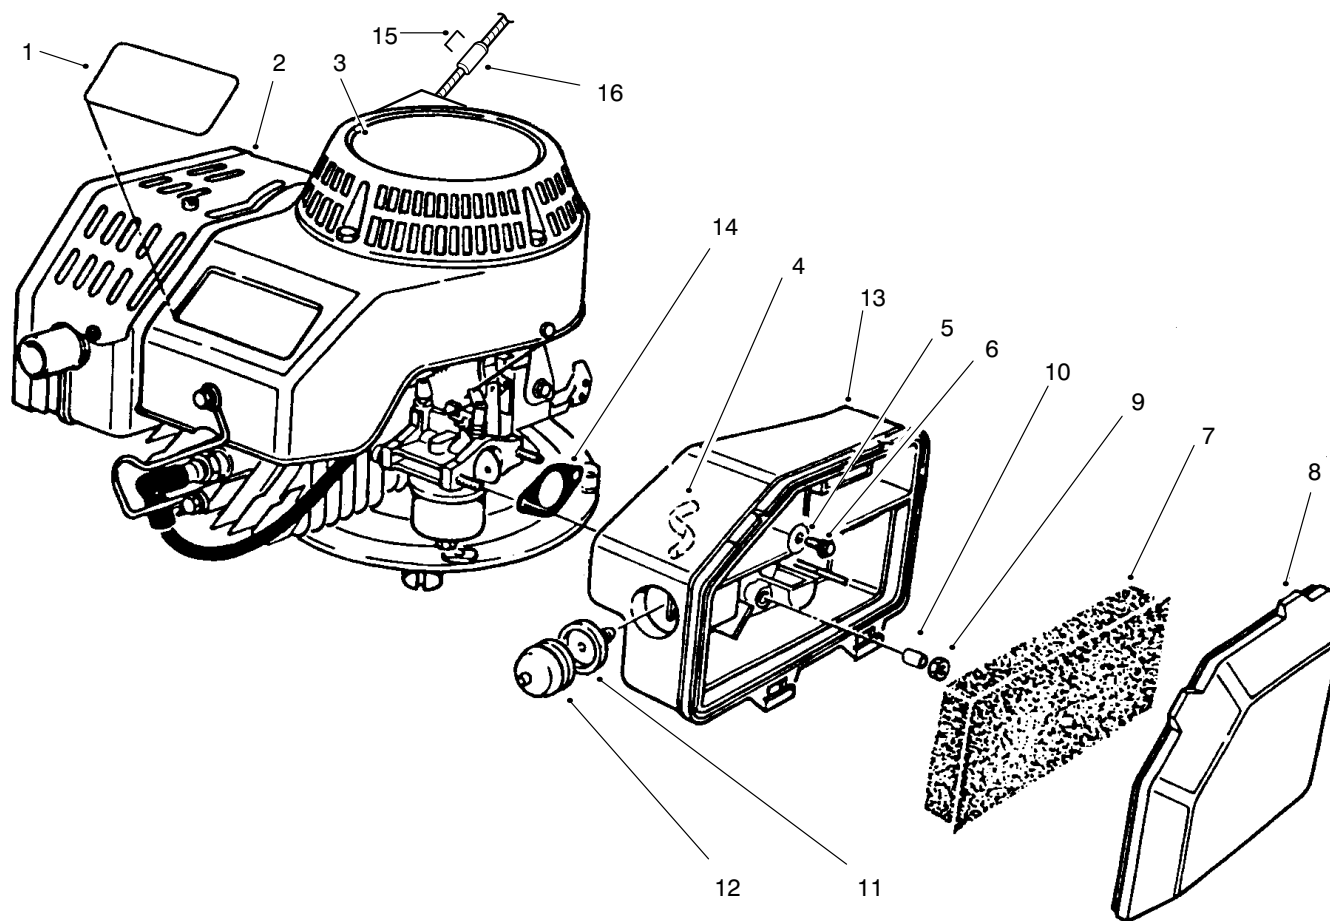


C-1013

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-1260	Decal - Pro Line	1
2	61-8062	Engine - Complete	1
3	77-0040	Decal - Recoil	1
4	44-3172	Hose - Primer	1
5	3256-16	Washer	1
6	51-2690	Screw - Hex. Flange Hd.	1
7	63-9380	Filter - Foam	1
8	63-9340	Cover - Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
9	50-7180	Nut	2
10	62-3980	Sleeve	2
11	44-2750	Body - Primer	1
12	66-7460	Bulb - Primer	1
13	63-9330	Body - Air Cleaner	1
14	81-0090	Gasket - Air Cleaner	1
†15		Staple	1
16	47-2480	Stop - Recoil	1


† Obtain Locally

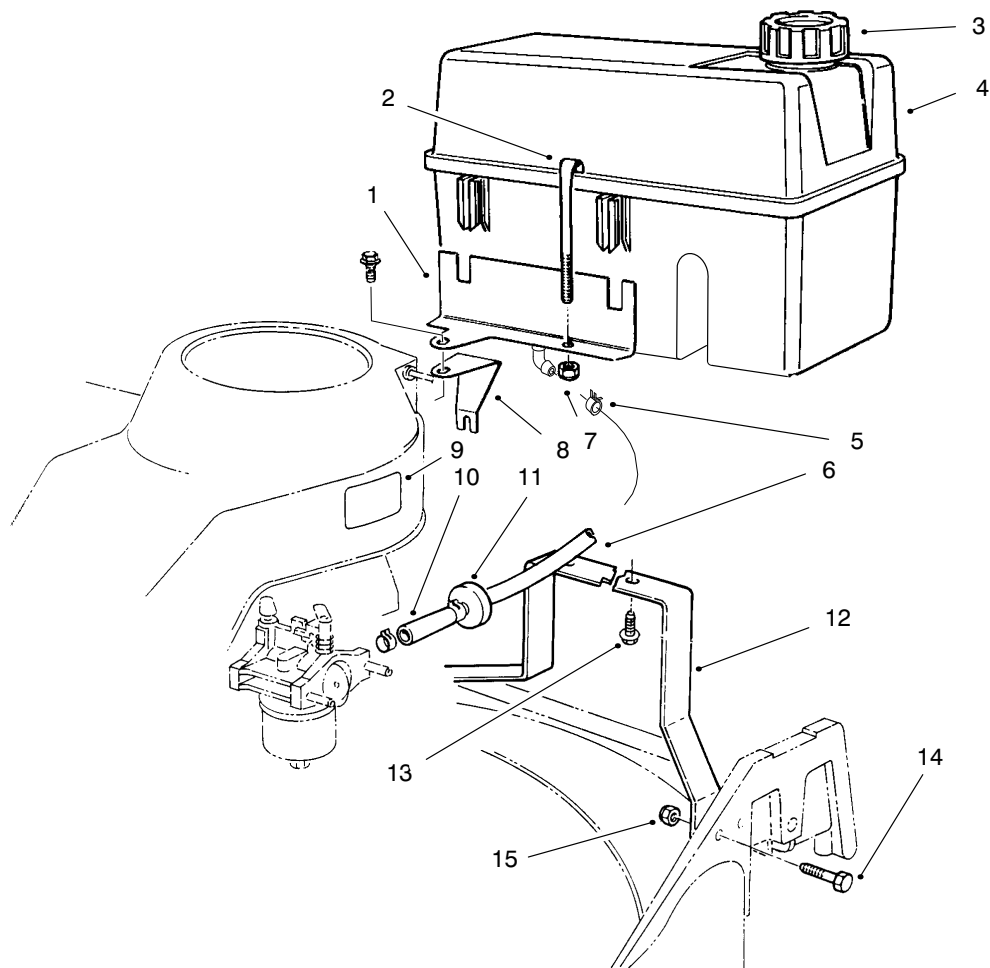

C-2421

FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	74-2110	Bracket – Tank	1	9	62-7600	Decal – Fuel Mix	1
2	77-2840	Retainer – Fuel Tank	1	10	51-3211	Hose – Fuel	1
3	55-3575	Gas Cap Assembly	1	11	71-9280	Filter – Fuel	1
4	94-5827	Fuel Tank Assembly	1	12	74-2020	Base – Tank, Fuel	1
5	2412-95	Clamp – Fuel Line	4	13	46-8091	Screw – Hex. Washer Hd.	2
6	68-3633	Hose – Fuel	1	14	322-6	Screw – Cap, Hex. Hd.	2
7	3296-42	Nut – Lock	1	15	3296-29	Nut – Lock	2
8	77-0520	Support – Bracket	1				

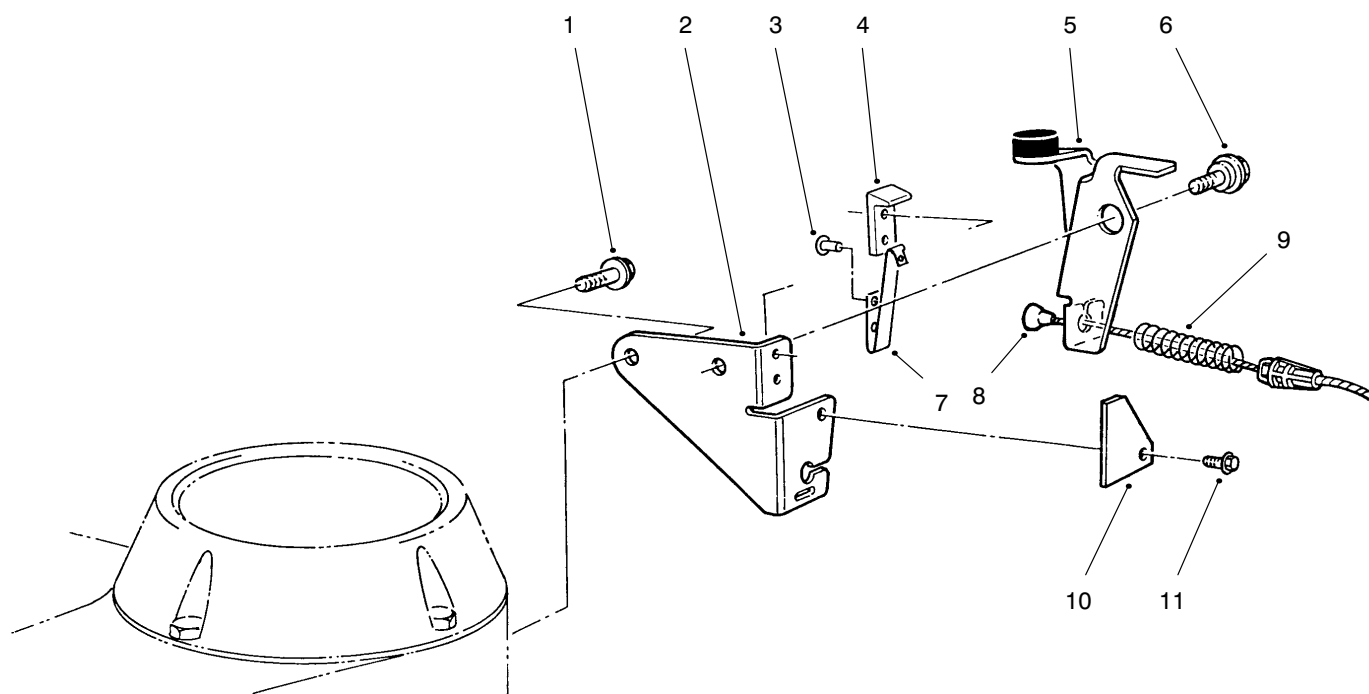


C-0531

BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-10	Screw - Self Tapping	1
2	84-7820	Plate - Mounting	1
3	3290-459	Rivet	2
4	77-5260	Strap - Insulation	1
5	66-5380	Brake Plate Assembly	1
6	92-9698	Screw - Shoulder, Metric	1
7	60-9010	Strap - Ground	1

Ref. No.	Part No.	Description	No. Used
8	85-6870	Cable - Brake	1
9	66-5370	Spring - Compression	1
10	53-4690	Stop - Ground Strap	1
11	32144-112	Screw - Self Tapping	1
*	14-6009	Mounting Plate Assembly (Incl. Ref. #2-4, & 7)	1

* Not Illustrated

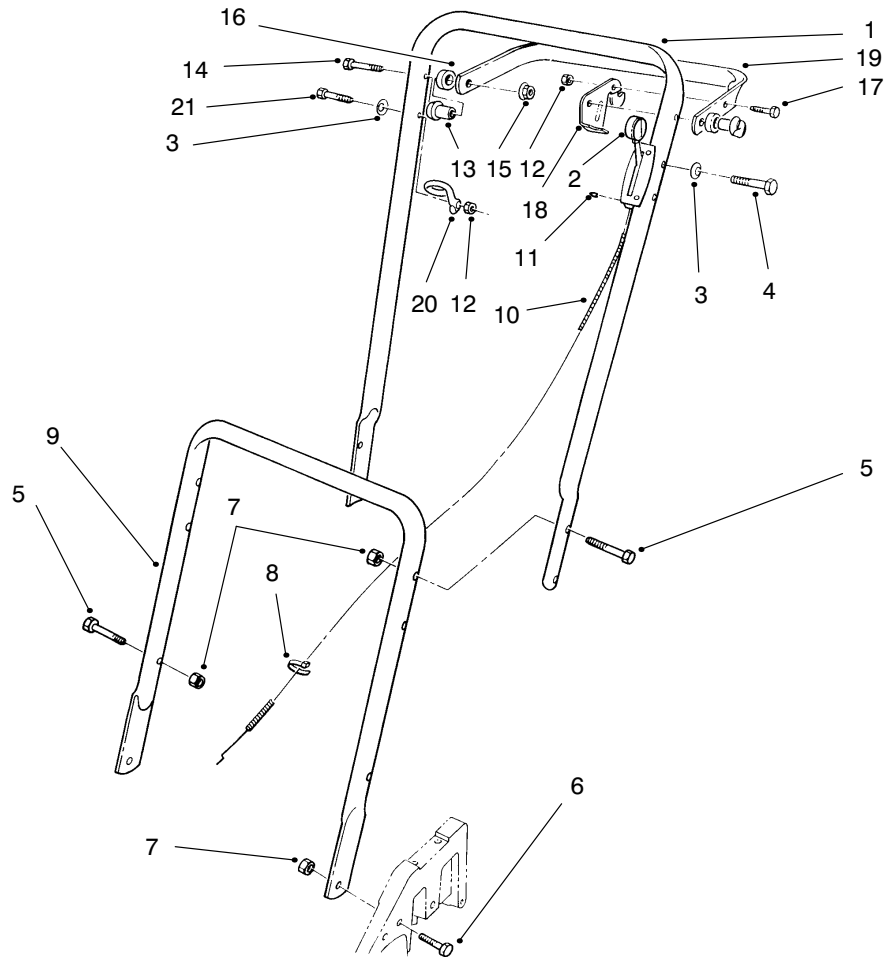


C-1015

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	74-2150	Handle - Upper	1
2	82-9950	Bracket - Throttle	1
3	3-7501	Washer - Curved	3
4	321-13	Screw - Cap, Hex. Hd.	2
5	322-7	Screw - Cap, Hex. Hd.	6
6	322-6	Screw - Cap, Hex. Hd.	2
7	3296-29	Nut - Lock	8
8	3290-378	Tie - Cable	1
9	52-2370	Handle - Lower	1
10	70-1062	Cable - Throttle	1
11	32151-86	Clip - Throttle	2

Ref. No.	Part No.	Description	No. Used
12	3296-42	Nut - Lock	2
13	49-1630	Support - Spacer	2
14	322-10	Screw - Hex Hd. Cap	2
15	3296-58	Nut - Lock	2
16	256-276	Spacer	1
17	321-4	Screw - Hex Hd. Cap	1
18	66-5350	Lever - Control	1
19	61-8270	Bar - Control	1
20	46-8081	Guide - Rope	1
21	321-9	Screw - Hex Hd. Cap	1

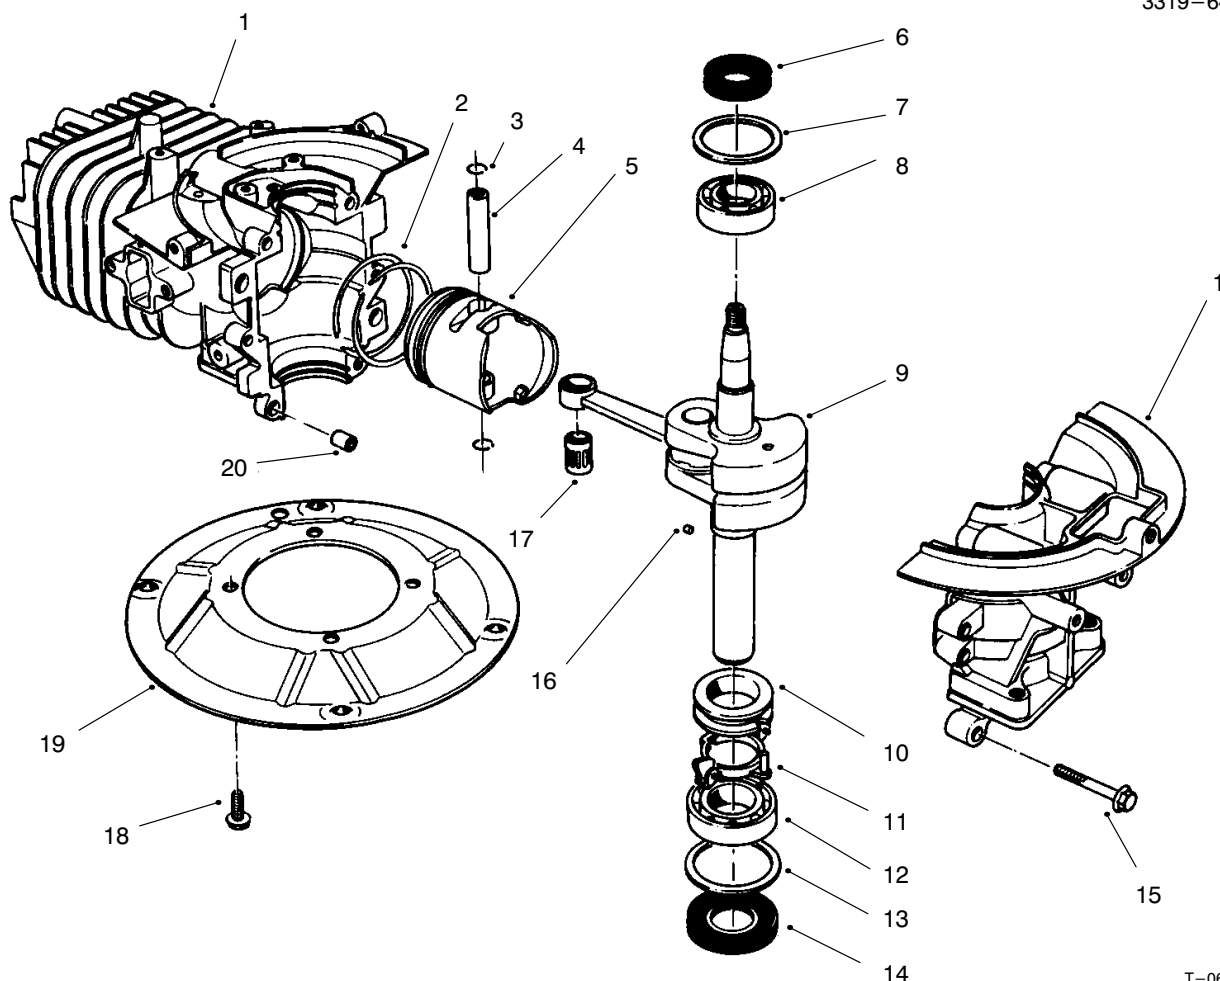


T-0663

CRANKSHAFT ASSEMBLY (Model No. 47PT7-3)

Ref. No.	Part No.	Description	No. Used
1	94-1685	Crankcase/Cylinder Assy.	1
2	81-0590	Piston Ring Set	1
3	81-0620	Circlip	2
4	81-0600	Pin - Wrist	1
5	81-2140	Piston - 58mm	1
6	81-0720	Seal - Oil, Upper	1
7	81-0710	Washer - Thrust, Upper	1
8	81-0690	Bearing - Upper 20mm	1
9	81-4680	Crankshaft/Connecting Rod Assembly	1
10	81-0770	Spacer - Governor	1

Ref. No.	Part No.	Description	No. Used
11	81-0750	Bracket - Arm, Governor	1
12	81-0700	Bearing - Lower 25mm	1
13	81-0730	Washer - Thrust, Lower	1
14	81-0740	Seal - Oil, Lower	1
15	81-0540	Bolt 30mm Lg.	5
16	81-0760	Pin - Crankshaft	1
17	81-0610	Bearing - Wrist Pin	1
18	81-0570	Bolt	4
19	81-0560	Plate - Mounting	1
20	81-0520	Pin - Crankcase	2
*	98-2041	Short Block	1

*Not Illustrated

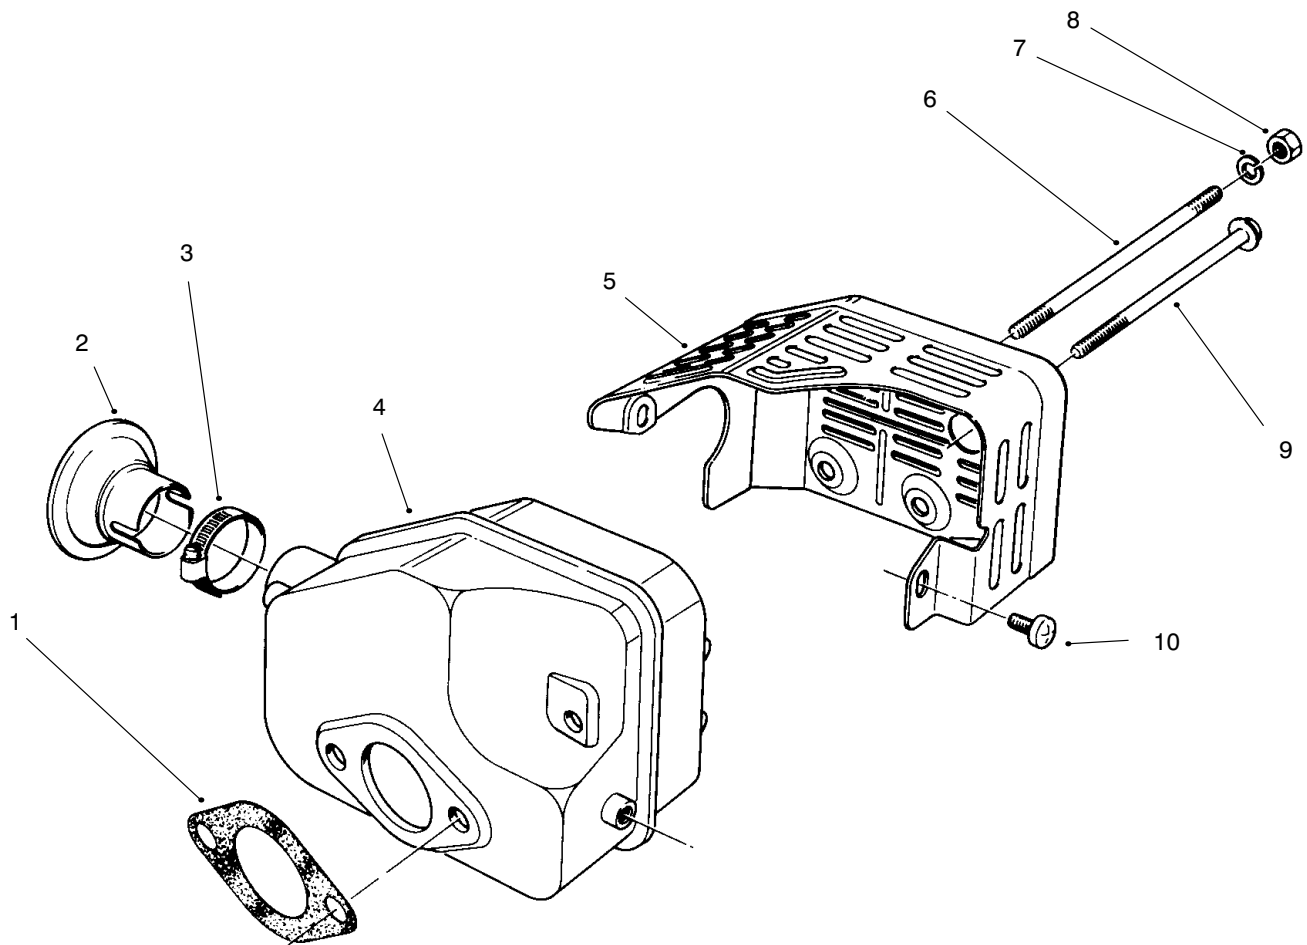


T-0667

MUFFLER ASSEMBLY
(Model No. 47PT7-3)

Ref. No.	Part No.	Description	No. Used
1	81-1080	Gasket - Muffler	1
2	81-0200	Spark Arrester (Optional)	1
†3		Clamp	1
4	81-5690	Muffler	1
5	81-2450	Cover - Muffler	1

Ref. No.	Part No.	Description	No. Used
6	81-1100	Bolt	2
7	81-1120	Washer - Lock	2
8	81-1110	Nut	2
9	81-1150	Bolt - Self Tapping	1
10	81-1140	Screw - Phillips Hd.	2

†Obtain Locally

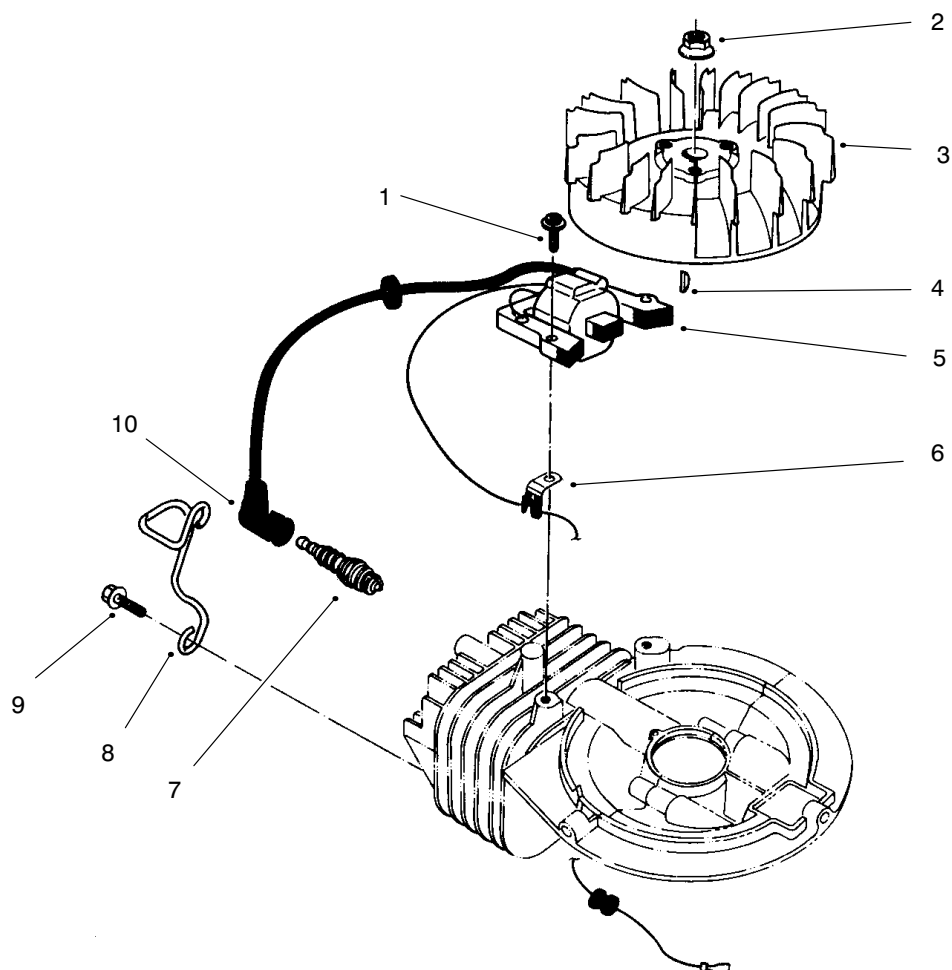


T-0664

IGNITION ASSEMBLY (Model No. 47PT7-3)

Ref. No.	Part No.	Description	No. Used
1	81-5680	Screw - Cap, Hex Hd.	2
2	81-1330	Nut	1
3	81-2810	Flywheel - Magneto	1
4	81-2370	Key - Flywheel	1
5	81-2820	Coil/Ignition Assembly	1
6	81-1480	Clamp	1

Ref. No.	Part No.	Description	No. Used
7	81-0181	Spark Plug	1
8	81-2120	Guard - Spark Plug	1
9	81-2350	Bolt - Self Tapping (20mm Lg.)	2
10	81-1500	Cap Assembly - Spark Plug	1
*	41-7650	Puller - Flywheel	1

*Not Illustrated

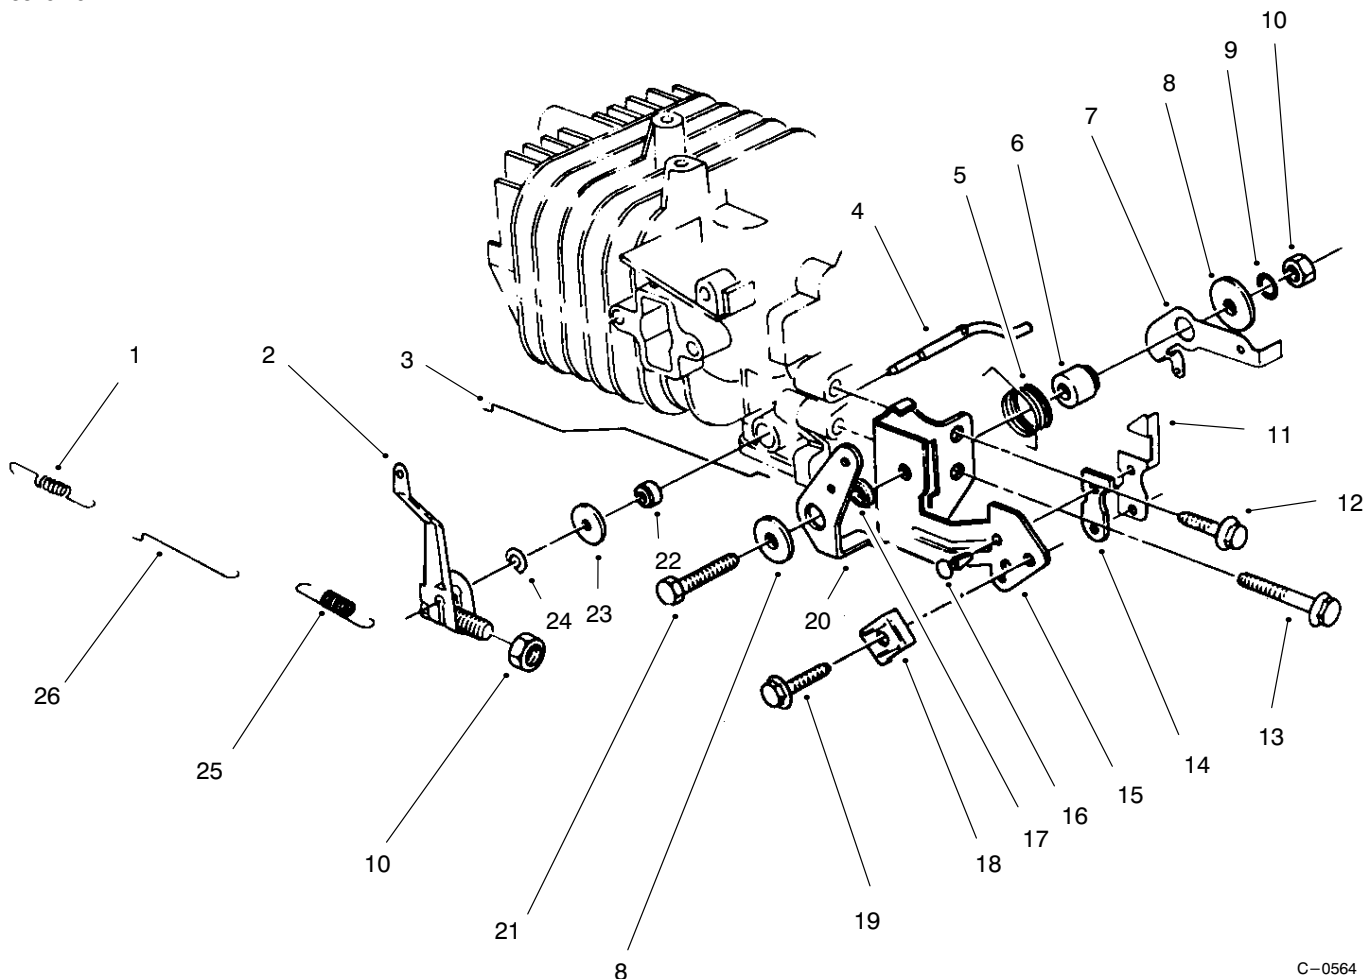


C-0564

GOVERNOR ASSEMBLY (Model No. 47PT7-3)

Ref. No.	Part No.	Description	No. Used
1	81-0920	Spring - Carburetor Rod	1
2	81-5420	Governor Arm/Bolt Assy.	1
3	81-5410	Rod - Choke	1
4	81-2880	Shaft - Governor	1
5	81-2460	Spring - Lever, Choke	1
6	81-5780	Spacer - Lever, Governor	1
7	81-2850	Lever - Governor	1
8	81-1750	Washer - Lever, Choke	2
9	81-1450	Washer - Lock	1
10	81-0900	Nut	2
11	81-1840	Terminal - Kill Switch	1
12	81-1170	Bolt - Self Tapping	1
13	81-0540	Bolt	1

Ref. No.	Part No.	Description	No. Used
14	81-1830	Insulator - Kill Switch	1
15	81-2420	Bracket - Throttle	1
16	81-4530	Rivet - Kill Switch	2
17	81-2470	Spacer - Lever, Choke	1
18	81-2430	Clamp - Cable	1
19	50-0130	Bolt - Clamp, Cable	1
20	81-1710	Lever - Choke	1
21	81-1730	Bolt - Bracket, Throttle	1
22	81-0850	Seal - Shaft, Governor	1
23	81-0860	Washer	1
24	81-0870	Ring - Retaining	1
25	81-2830	Spring - Governor	1
26	81-0910	Rod - Carburetor	1

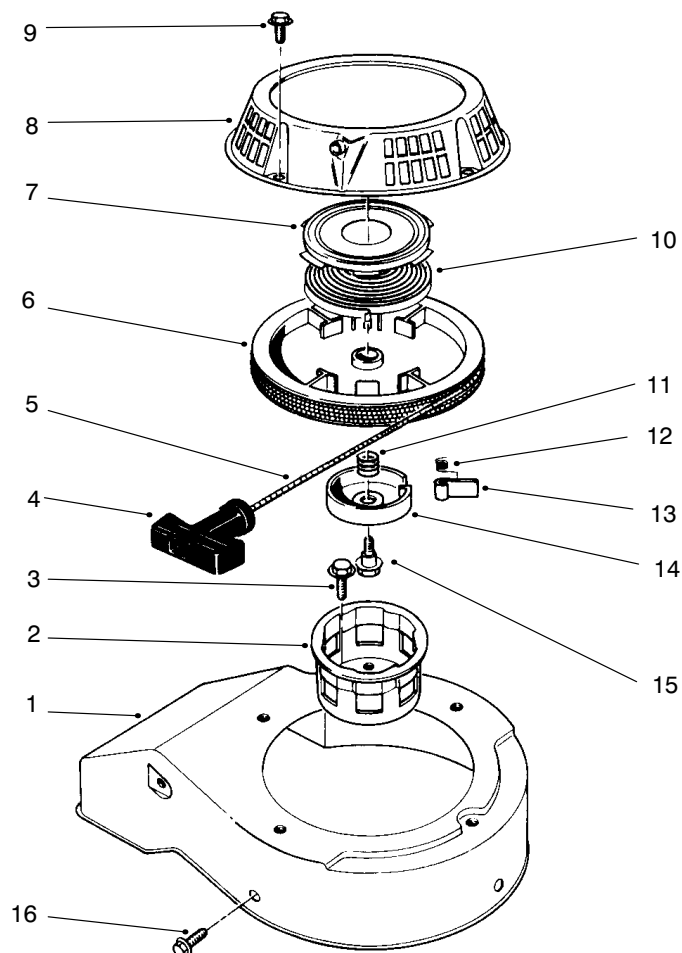


T-1102

RECOIL ASSEMBLY (Model No. 47PT7-3)

Ref. No.	Part No.	Description	No. Used
1	81-2080	Cover - Fan, Cooling	1
2	81-2170	Cup - Pulley, Starter	1
3	81-1300	Bolt	3
4	81-1630	Handle - Recoil	1
5	81-1270	Rope	1
6	81-1210	Pulley - Rope	1
7		Retainer - Spring, Recoil	1
8	81-2100	Case - Starter	1
9	81-1280	Bolt	4
10		Spring - Recoil	1
11	81-1240	Spring - Compression	1

Ref. No.	Part No.	Description	No. Used
12	81-1220	Spring - Dog	1
13	81-1230	Dog - Starter	1
14	81-1250	Retainer - Dog	1
15	81-1260	Bolt - Shoulder	1
16	53-1340	Bolt - Self Tapping (15mm Lg.)	3
*	81-5940	Starter Assembly (Incl. Ref. #4-15)	1
*	81-2300	Spring & Retainer Assembly (Incl. Ref. #7 & 10)	1

*Not Illustrated

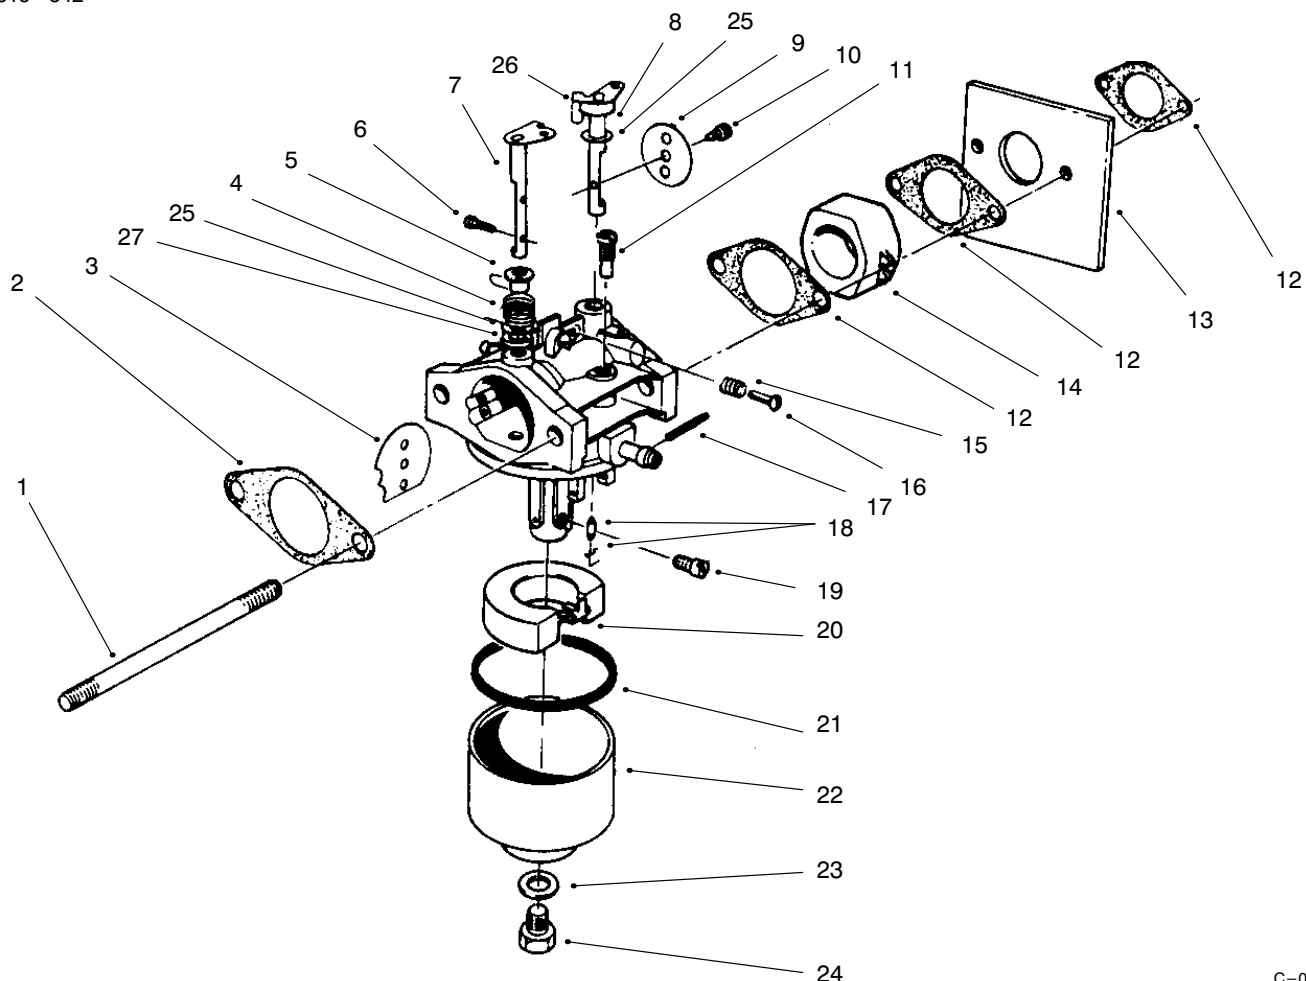

C-0563

CARBURETOR ASSEMBLY (Model No. 47PT7-3)

Ref. No.	Part No.	Description	No. Used
1	81-5450	Stud Bolt, Carburetor	2
2	81-0090	Gasket	1
3	81-0240	Valve - Choke	1
4	81-0230	Spring - Choke	1
5	81-0220	Bushing - Choke	1
6	81-2160	Screw - Choke Plate	2
7	81-1950	Shaft - Choke	1
8	81-0250	Shaft - Throttle	1
9	81-0260	Valve - Throttle	1
10	81-0270	Screw - Throttle	1
11	94-1684	Jet - Pilot #42.5	1
12	81-0780	Gasket - Carburetor	3
13	81-5490	Shield - Carburetor	1
14	81-5440	Insulator - Carburetor	1
15	81-2580	Spring - Idle Stop	1
16	50-0250	Screw - Idle Stop	1
17	81-2600	Pin - Float	1
18	81-4910	Needle Valve	1

Ref. No.	Part No.	Description	No. Used
19	81-1060	Jet - Main #75	1
*	81-2340	Jet - Main #72.5 High Alt. Above 6,000 Ft. (Optional)	A/R
20	81-0970	Float	1
21	81-1010	Gasket - Bowl, Float	1
22	81-5660	Bowl - Float	1
23	81-1020	Gasket - Capscrew, Bowl	1
24	81-5670	Capscrew - Bowl	1
25	81-2530	Seal	2
26	81-2540	Ring	1
27	81-2550	Packing	1
*	12-6379	Carburetor Kit (Incl. Ref. #2, 12, 18, 21 & 23)	1
*	81-2520	Carburetor Assy. Complete	1
*	81-5810	Seat Kit (Incl. Valve Seat & Ref. #18)	1
*	94-1687	Carburetor Ass'y w/Primer	1

*Not Illustrated

TORO PART NUMBER INDEX

3319-642

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3-7501	Washer - Curved	6 3 3	63-9340	Cover - Air Cleaner	3 8 1
8-5230	Blade 21	2 37 1	63-9380	Filter - Foam	3 7 1
12-4729	Housing	2 47 1	66-5350	Lever - Control	6 18 1
12-4739	Deflector	1 12 1	66-5370	Spring - Compression	5 9 1
12-6379	Carburetor Kit	12 * 1	66-5380	Brake Plate Assembly	5 5 1
14-6009	Mounting Plate Assembly	5 * 1	66-7460	Bulb - Primer	3 12 1
25-7740	Knob - Arm	1 5 4	66-9303	Screw - Hex. Washer Hd.	1 31 4
26-0671	Screw - Blade	2 38 1	68-3633	Hose - Fuel	4 6 1
27-6510	Spacer - Latch, Handle	1 21 2	68-7410	Decal - Blade Warning	1 30 1
27-7071	Latch - Handle	1 22 2	70-1062	Cable - Throttle	6 10 1
27-8590	Key - Square	2 40 1	71-1260	Decal - Pro Line	3 1 1
28-1430	Loop - Lift	1 13 1	71-1280	Decal - Safety Instructions	1 19 1
28-3250	Clip - Pin	1 10 1	71-8650	Decal - Danger	2 54 1
28-3260	Pin - Chute	1 9 1	71-9280	Filter - Fuel	4 11 1
28-3270	Sleeve - Spring	1 17 1	74-2020	Base - Tank, Fuel	4 12 1
33-3201	Rod - Shield	1 27 1	74-2110	Bracket - Tank	4 1 1
39-5770	Decal - Danger	1 14 1	74-2150	Handle - Upper	6 1 1
41-7650	Puller - Flywheel	9 * 1	77-0040	Decal - Recoil	3 3 1
44-2750	Body - Primer	3 11 1	77-0520	Support - Bracket	4 8 1
44-3172	Hose - Primer	3 4 1	77-2840	Retainer - Fuel Tank	4 2 1
46-6811	Screw/Washer Assembly	1 15 2	77-5260	Strap - Insulation	5 4 1
46-8081	Guide - Rope	6 20 1	81-0090	Gasket	12 2 1
46-8091	Screw - Hex. Washer Hd.	4 13 2	81-0090	Gasket - Air Cleaner	3 14 1
47-2480	Stop - Recoil	3 16 1	81-0181	Spark Plug	9 7 1
49-1630	Support - Spacer	6 13 2	81-0200	Spark Arrester (Optional)	8 2 1
49-2040	Screw - Thread Forming	1 8 8	81-0220	Bushing - Choke	12 5 1
49-8800	Spring Arm Assembly	1 4 4	81-0230	Spring - Choke	12 4 1
49-9160	Pivot Arm Assembly	1 3 4	81-0240	Valve - Choke	12 3 1
49-9180	Screw - Pivot	1 1 2	81-0250	Shaft - Throttle	12 8 1
50-0130	Bolt - Clamp, Cable	10 19 1	81-0260	Valve - Throttle	12 9 1
50-0250	Screw - Idle Stop	12 16 1	81-0270	Screw - Throttle	12 10 1
50-7180	Nut	3 9 2	81-0520	Pin - Crankcase	7 20 2
51-2690	Screw - Hex. Flange Hd.	3 6 1	81-0540	Bolt	10 13 1
51-3211	Hose - Fuel	4 10 1	81-0540	Bolt 30mm Lg.	7 15 5
52-2170	Retainer, Blade	2 36 1	81-0560	Plate - Mounting	7 19 1
52-2260	Screw - Pivot, Rear	1 26 2	81-0570	Bolt	7 18 4
52-2360	Spacer - Handle, Brace	1 29 2	81-0590	Piston Ring Set	7 2 1
52-2370	Handle - Lower	6 9 1	81-0600	Pin - Wrist	7 4 1
52-2410	Hub	2 50 4	81-0610	Bearing - Wrist Pin	7 17 1
52-2440	Spacer - Bearing	2 49 4	81-0620	Circlip	7 3 2
52-2450	Bearing - Wheel	2 48 8	81-0690	Bearing - Upper 20mm	7 8 1
52-2480	Spacer - Wheel	1 2 4	81-0700	Bearing - Lower 25mm	7 12 1
52-2500	Crankshaft Protector	1 33 1	81-0710	Washer - Thrust, Upper	7 7 1
52-2510	Quadrant - Front R.H.	1 7 1	81-0720	Seal - Oil, Upper	7 6 1
52-2520	Quadrant - Front L.H.	1 32 1	81-0730	Washer - Thrust, Lower	7 13 1
52-2530	Quadrant - Rear R.H.	1 18 1	81-0740	Seal - Oil, Lower	7 14 1
52-2540	Quadrant - Rear L.H.	1 23 1	81-0750	Bracket - Arm, Governor	7 11 1
52-2560	Spring - Deflector	1 16 1	81-0760	Pin - Crankshaft	7 16 1
52-2570	Pin - Deflector Hinge	1 11 1	81-0770	Spacer - Governor	7 10 1
52-2640	Shield - Rear, Safety	1 24 1	81-0780	Gasket - Carburetor	12 12 3
52-2650	Bar - Safety	2 42 1	81-0850	Seal - Shaft, Governor	10 22 1
53-1340	Bolt - Self Tapping	11 16 3	81-0860	Washer	10 23 1
53-4690	Stop - Ground Strap	5 10 1	81-0870	Ring - Retaining	10 24 1
53-7720	Tire & Wheel Assembly	2 * 4	81-0900	Nut	10 10 2
53-7740	Tire	2 51 4	81-0910	Rod - Carburetor	10 26 1
53-7780	Plate - Wheel Half	2 46 8	81-0920	Spring - Carburetor Rod	10 1 1
53-7930	Spacer - Pivot Arm	1 6 4	81-0970	Float	12 20 1
55-3575	Gas Cap Assembly	4 3 1	81-1010	Gasket - Bowl, Float	12 21 1
60-9010	Strap - Ground	5 7 1	81-1020	Gasket - Capscrew, Bowl	12 23 1
61-8062	Engine - Complete	3 2 1	81-1060	Jet - Main #75	12 19 1
61-8270	Bar - Control	6 19 1	81-1080	Gasket - Muffler	8 1 1
62-3980	Sleeve	3 10 2	81-1100	Bolt	8 6 2
62-7600	Decal - Fuel Mix	4 9 1	81-1110	Nut	8 8 2
63-9330	Body - Air Cleaner	3 13 1	81-1120	Washer - Lock	8 7 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
81-1140	Screw - Phillips Hd.	8	10	2	81-5490	Shield - Carburetor	12	13	1
81-1150	Bolt - Self Tapping	8	9	1	81-5660	Bowl - Float	12	22	1
81-1170	Bolt - Self Tapping	10	12	1	81-5670	Capscrew - Bowl	12	24	1
81-1210	Pulley - Rope	11	6	1	81-5680	Screw - Cap, Hex Hd.	9	1	2
81-1220	Spring - Dog	11	12	1	81-5690	Muffler	8	4	1
81-1230	Dog - Starter	11	13	1	81-5780	Spacer - Lever, Governor	10	6	1
81-1240	Spring - Compression	11	11	1	81-5810	Seat Kit	12	*	1
81-1250	Retainer - Dog	11	14	1	81-5940	Starter Assembly	11	*	1
81-1260	Bolt - Shoulder	11	15	1	82-9950	Bracket - Throttle	6	2	1
81-1270	Rope	11	5	1	84-7820	Plate - Mounting	5	2	1
81-1280	Bolt	11	9	4	85-6870	Cable - Brake	5	8	1
81-1300	Bolt	11	3	3	92-1779	Decal - Warning	2	55	1
81-1330	Nut	9	2	1	92-9698	Screw - Shoulder, Metric	5	6	1
81-1450	Washer - Lock	10	9	1	94-1684	Jet - Pilot #42.5	12	11	1
81-1480	Clamp	9	6	1	94-1685	Crankcase/Cylinder Assy.	7	1	1
81-1500	Cap Assembly - Spark Plug	9	10	1	94-1687	Carburetor Ass'y w/Primer	12	*	1
81-1630	Handle - Recoil	11	4	1	94-5827	Fuel Tank Assembly	4	4	1
81-1710	Lever - Choke	10	20	1	98-2041	Short Block	7	*	1
81-1730	Bolt - Bracket, Throttle	10	21	1	2412-95	Clamp - Fuel Line	4	5	4
81-1750	Washer - Lever, Choke	10	8	2	256-276	Spacer	6	16	1
81-1830	Insulator - Kill Switch	10	14	1	321-2	Screw - Cap, Hex. Hd.	2	52	16
81-1840	Terminal - Kill Switch	10	11	1	321-4	Screw - Hex Hd. Cap	6	17	1
81-1950	Shaft - Choke	12	7	1	321-9	Screw - Hex Hd. Cap	6	21	1
81-2080	Cover - Fan, Cooling	11	1	1	321-13	Screw - Cap, Hex. Hd.	6	4	2
81-2100	Case - Starter	11	8	1	322-6	Screw - Cap, Hex. Hd.	6	6	2
81-2120	Guard - Spark Plug	9	8	1	322-6	Screw - Cap, Hex. Hd.	4	14	2
81-2140	Piston - 58mm	7	5	1	322-7	Screw - Cap, Hex. Hd.	6	5	6
81-2160	Screw - Choke Plate	12	6	2	322-10	Screw - Hex Hd. Cap	6	14	2
81-2170	Cup - Pulley, Starter	11	2	1	323-12	Screw - Cap, Hex Hd.	1	25	4
81-2300	Spring & Retainer Assembly	11	*	1	3230-16	Bolt - Carriage	2	41	2
81-2340	Jet - Main #72.5 High Alt.	12	*	A/R	3253-22	Washer - Lock	2	39	1
81-2350	Bolt - Self Tapping	9	9	2	3254-6	Washer - Lock, Int. Tooth	1	34	4
81-2370	Key - Flywheel	9	4	1	3256-16	Washer	3	5	1
81-2420	Bracket - Throttle	10	15	1	3290-340	Washer - Belleville	1	28	2
81-2430	Clamp - Cable	10	18	1	3290-378	Tie - Cable	6	8	1
81-2450	Cover - Muffler	8	5	1	3290-455	Washer - Belleville	2	44	2
81-2460	Spring - Lever, Choke	10	5	1	3290-459	Rivet	5	3	2
81-2470	Spacer - Lever, Choke	10	17	1	3296-29	Nut - Lock	6	7	8
81-2520	Carburetor Assy. Complete	12	*	1	3296-29	Nut - Lock	4	15	2
81-2530	Seal	12	25	2	3296-29	Nut - Lock	2	43	2
81-2540	Ring	12	26	1	3296-39	Nut - Lock	1	20	6
81-2550	Packing	12	27	1	3296-42	Nut - Lock	4	7	1
81-2580	Spring - Idle Stop	12	15	1	3296-42	Nut - Lock	6	12	2
81-2600	Pin - Float	12	17	1	3296-42	Nut - Lock	2	45	16
81-2810	Flywheel - Magneto	9	3	1	3296-58	Nut - Lock	6	15	2
81-2820	Coil/Ignition Assembly	9	5	1	32144-10	Screw - Self Tapping	5	1	1
81-2830	Spring - Governor	10	25	1	32144-70	Screw - Thread Forming	2	35	4
81-2850	Lever - Governor	10	7	1	32144-112	Screw - Self Tapping	5	11	1
81-2880	Shaft - Governor	10	4	1	32151-86	Clip - Throttle	6	11	2
81-4530	Rivet - Kill Switch	10	16	2	32152-2	Nut - Lock	2	53	2
81-4680	Crankshaft/Connecting Rod	7	9	1					
81-4910	Needle Valve	12	18	1					
81-5410	Rod - Choke	10	3	1					
81-5420	Governor Arm/Bolt Assy.	10	2	1					
81-5440	Insulator - Carburetor	12	14	1					
81-5450	Stud Bolt, Carburetor	12	1	2					

OPTIONAL EQUIPMENT

Bagging Kit Part No. 38-0050

Spark Arrestor Muffler Part No. 81-0200

MAINTENANCE RECORD

[illegible]