




MODEL NO. 09120-80001 & UP

**PARTS
CATALOG**

GREENS AERATOR

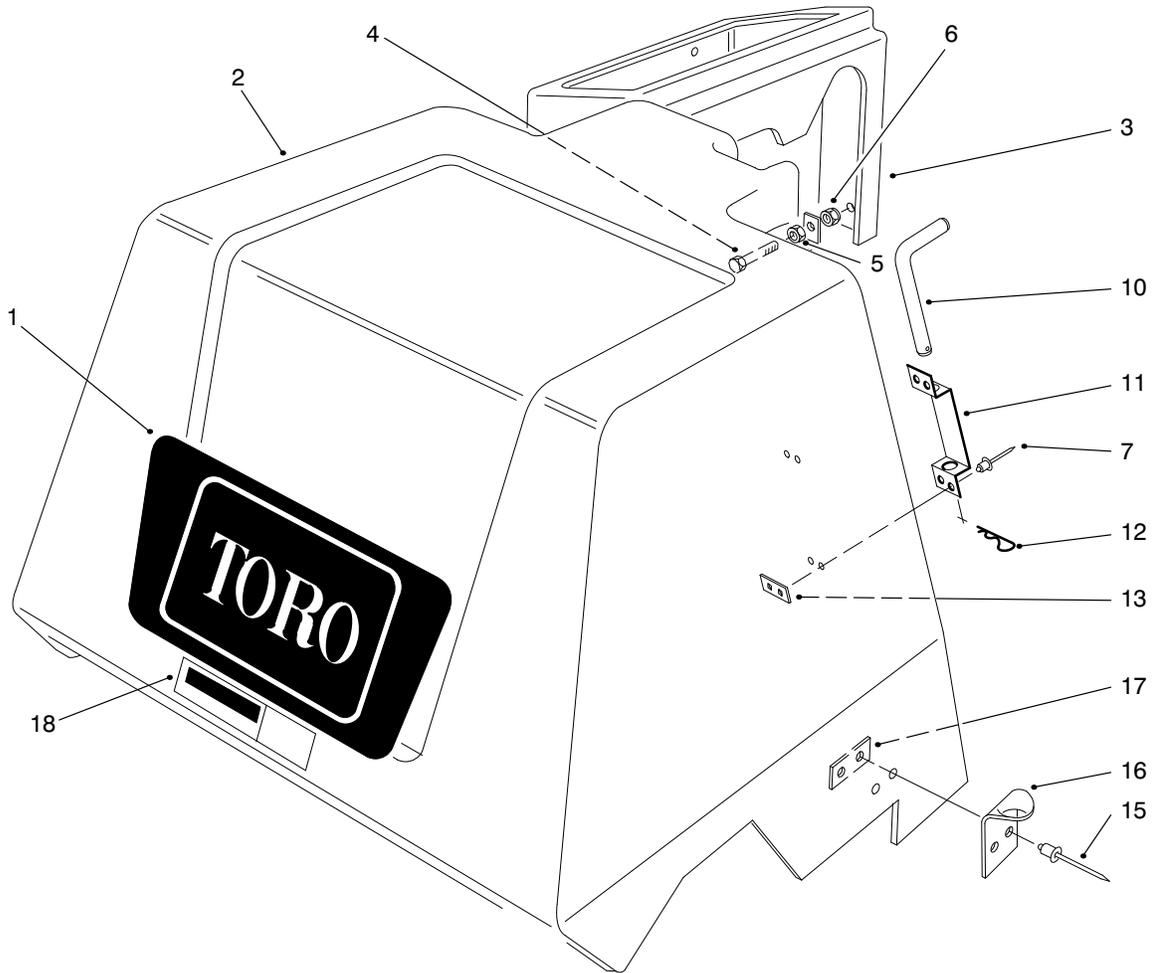


T-0223-1

COVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	59-4350	Decal-Toro	1
2	66-4130	Cover-Coring Head	1
3	66-4110	Cover-Controls	1
4	322-2	Screw-HH	1
5	3218-2	Nut-Jam	1
6	32111-8	Cap & Locknut	1
7	3269-8	Rivet-Pop	4
10	66-4060	Pin-Idler	1

Ref. No.	Part No.	Description	No. Used
11	66-4440	Holder-Idler Pin	1
12	3290-355	Pin-Hair, Cotter	1
13	59-9610	Plate-Backup	2
15	3269-4	Rivet-Pop	4
16	249-38	Keeper	2
17	59-9611	Plate-Backup	2
18	59-9930	Decal-Danger	1

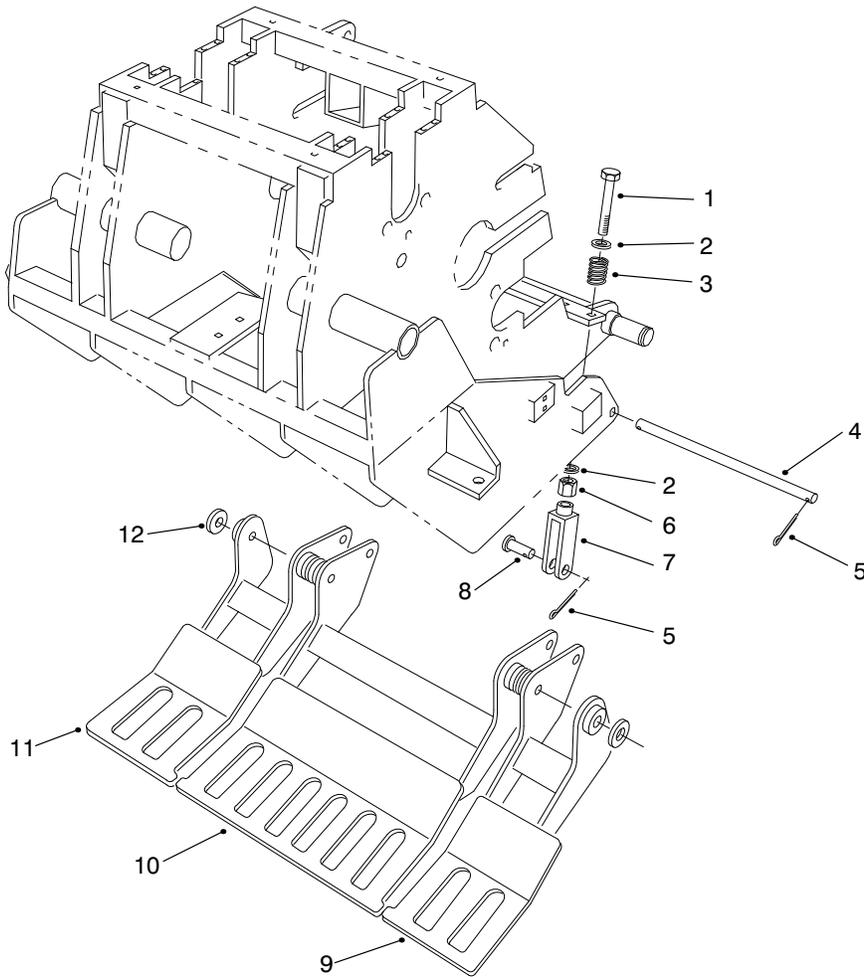


T-0224-2

TURF GUARD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3211-12	Screw-HH	4
2	3256-4	Washer-Flat	8
3	59-3490	Spring-Compression	4
4	59-2770	Rod-Pivot	2
5	3272-6	Pin-Cotter	8
6	3219-3	Nut-Hex.	4

Ref. No.	Part No.	Description	No. Used
7	282-22	Clevis	4
8	283-2	Pin-Clevis	4
9	72-4660	Turf Guard-RH	1
10	72-4680	Turf Guard-Center	1
11	72-4640	Turf Guard-LH	1
12	3256-26	Washer-Flat	6

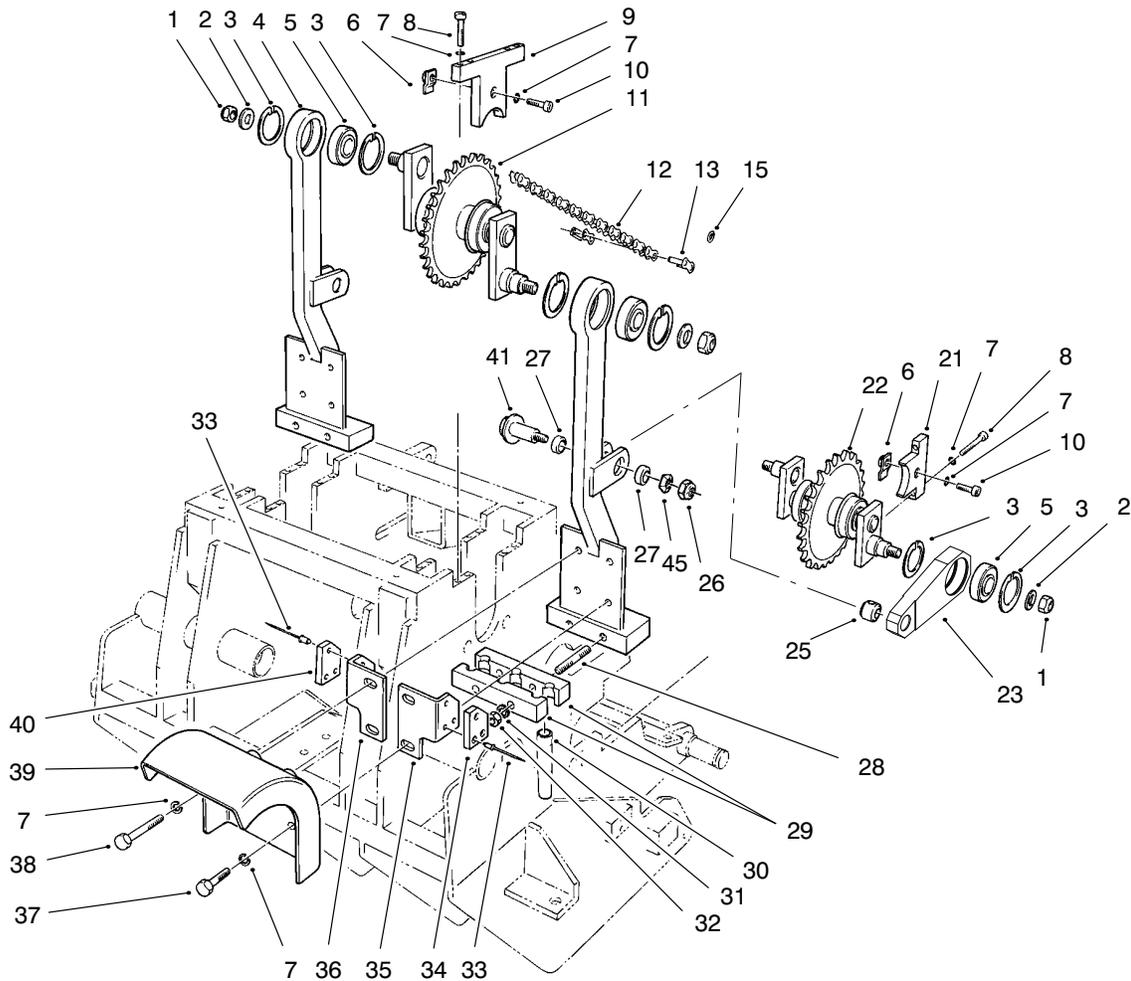

T-0225-2

TINE ARM & CRANK ASSEMBLY




Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-67	Nut-Hex	8	27	59-3510	Bushing-Short	8
2	3256-44	Washer-Flat	8	28	61-9160	Stud	8
3	32120-22	Ring-Retaining	16	29		Block	
4	13-1509	Arm-Tine (Incl. Ref. #1, 27 & 28)	4	30		Tine	
5	251-312	Bearing	8	31	3253-7	Washer-Lock	8
6	59-2710	Clip-Retaining	12	32	3217-9	Nut-Hex	8
7	3253-21	Washer-Lock	52	33	3269-3	Rivet-Pop	24
8	3274-50	Screw-HSH	24	34	59-2520	Plate-Wear RH	4
†9		Cap-Bearing	4	35	66-8980	Asm-Wear Plate, RH (Incl. Ref. #33 & 34)	4
10	3274-7	Screw-HSH	12	36	66-8990	Asm-Wear Plate, LH (Incl. Ref. #33 & 40)	4
11	66-4030	Asm-Crank, Long	2	37	323-6	Screw-HH	8
12	59-2080	Chain-Roller	2	38	323-11	Screw-HH	8
13	287-13	Link-Connecting	2	39	59-4220	Deflector-Kickout	4
15	72-4760	O-Ring	AR	40	59-2550	Plate-Wear LH	4
†21		Cap-Bearing	4	41	80-3830	Bolt-Shoulder	4
22	66-4040	Asm-Crank, Short	2	45	3290-224	Washer-Pyramidal	4
23	95-3106	Rod-Connecting	4	*	62-4740	Timing Rod	4
25	95-3107	Asm-Rubber Bushing	4				
26	32153-2	Nut-Lock	4				

*Not Illustrated

†Not Serviced Separately.

■ See pages 4 & 5 for selection.

3319-712

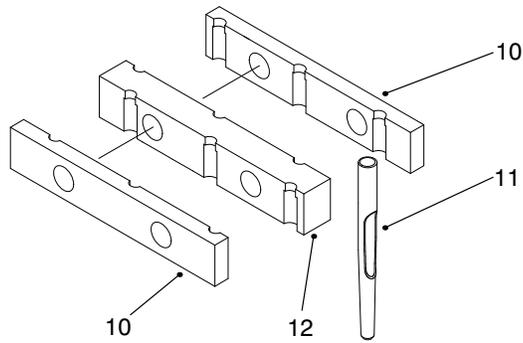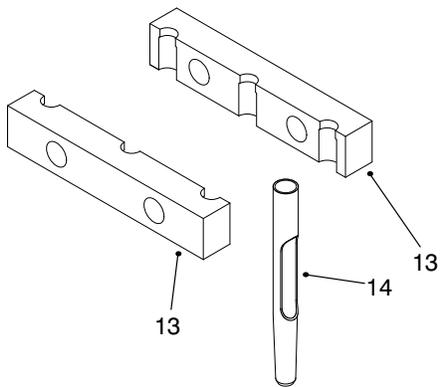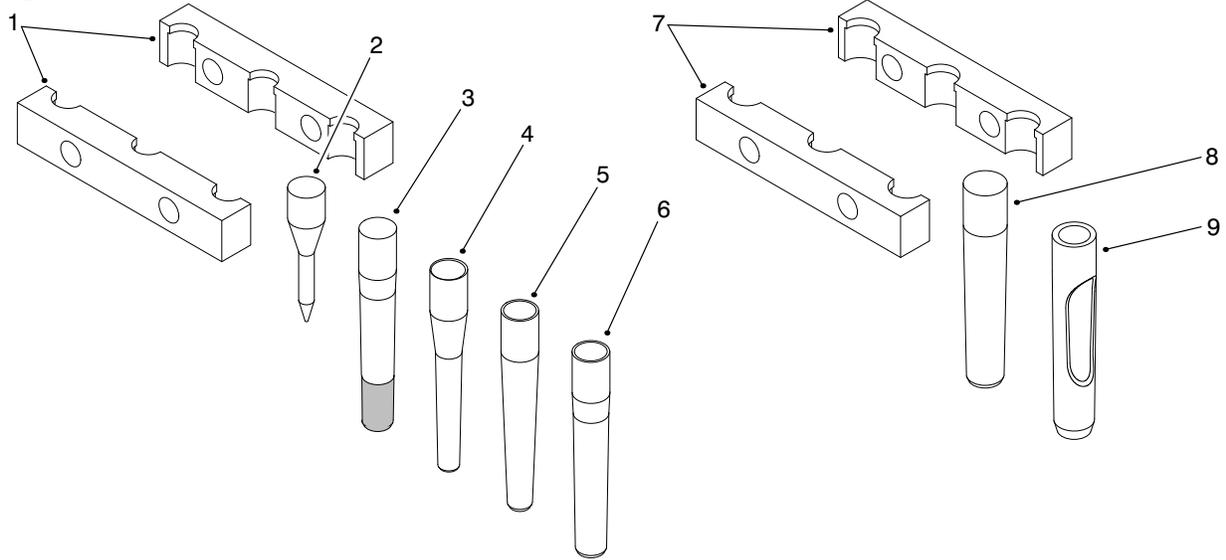


T-2506-1

TINE BLOCK & TINE SELECTION

Ref. No.	Part No.	Description	No. Used
1	59-2500	Block	8
2	77-5320	Tine-Spiker, 5/16" x 3 1/4"	12
3	59-9770	Tine-Coring, Long Wear 5/8" x 4 3/4"	12
4	59-3690	Tine-Coring, 3/8" x 4 3/4"	12
5	94-3419	Tine-Coring, 1/2" x 4 3/4"	12
6	59-3670	Tine-Coring, 5/8" x 4 3/4"	12
7	62-4610	Block	8
8	62-4600	Tine-Coring, 3/4" x 4 3/4"	12

Ref. No.	Part No.	Description	No. Used
9	92-7941	Tine-Open Center, 3/4" x 4 3/4"	12
*	94-6823	Kit- 1/4" Open Center Tine (Opt.) (Incl. Ref. #10-12)	1
10	94-3421	Block-Outboard	8
11	94-3417	Tine-Open Center 1/4" x 4 1/4"	24
12	94-6822	Block-Inboard	4
*	94-6814	Kit-3/8" Open Center Tine (Opt.) (Incl. Ref. #13-14)	1
13	94-3420	Block	8
14	94-3418	Tine-Open Center, 3/8" x 4 3/4"	12

*Not Illustrated

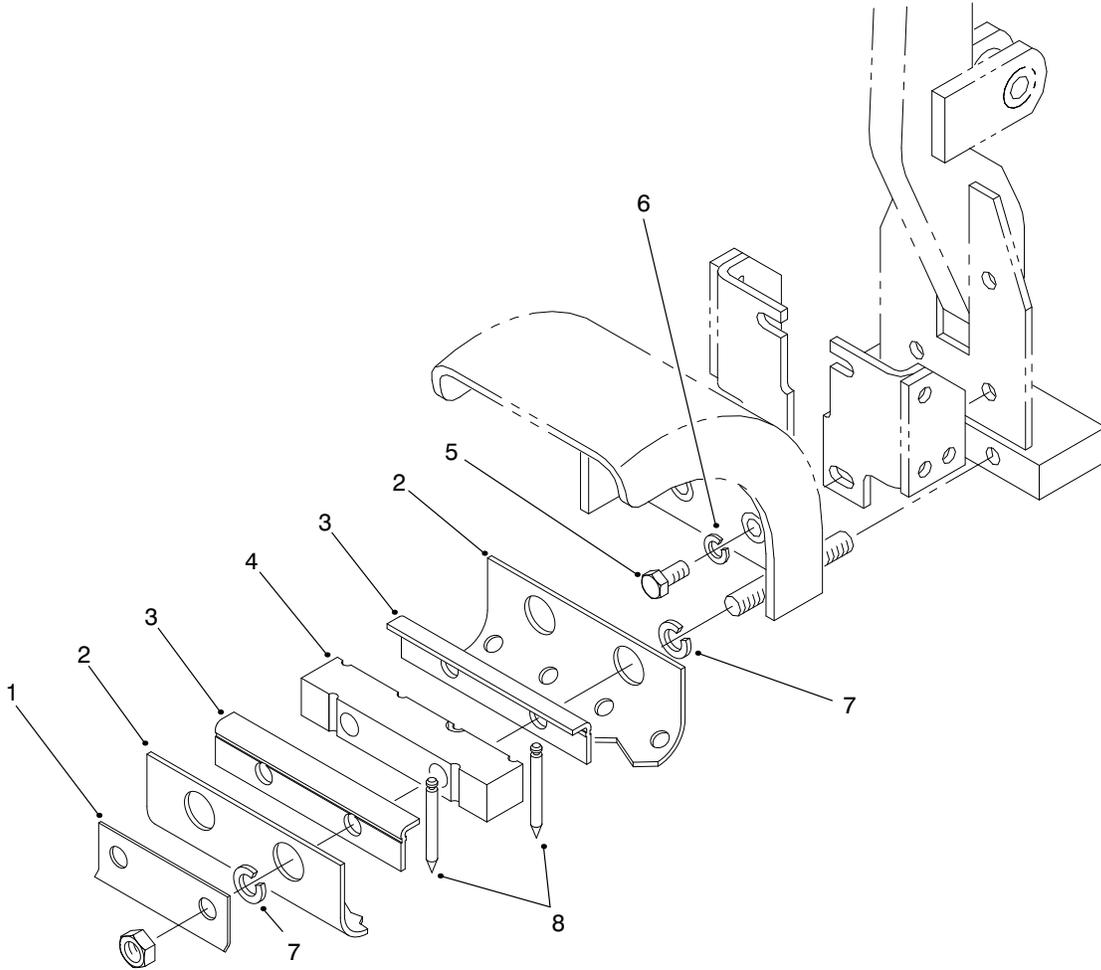


T-1944-1

KIT-SPIKER 1/4" MODEL NO. 09153 (Optional)

Ref. No.	Part No.	Description	No. Used
1	77-5360	Plate-Holder, Turf	4
2	77-5380	Guard-Turf	4
3	77-5350	Clamp-Holder, Tine	8
4	77-5370	Holder-Tine	4

Ref. No.	Part No.	Description	No. Used
5	323-4	Screw-HH	16
6	3253-21	Washer-Lock	16
7	3253-7	Washer-Lock	16
8	77-5340	Tine-Spiker, 1/4" x 2 1/2"	28

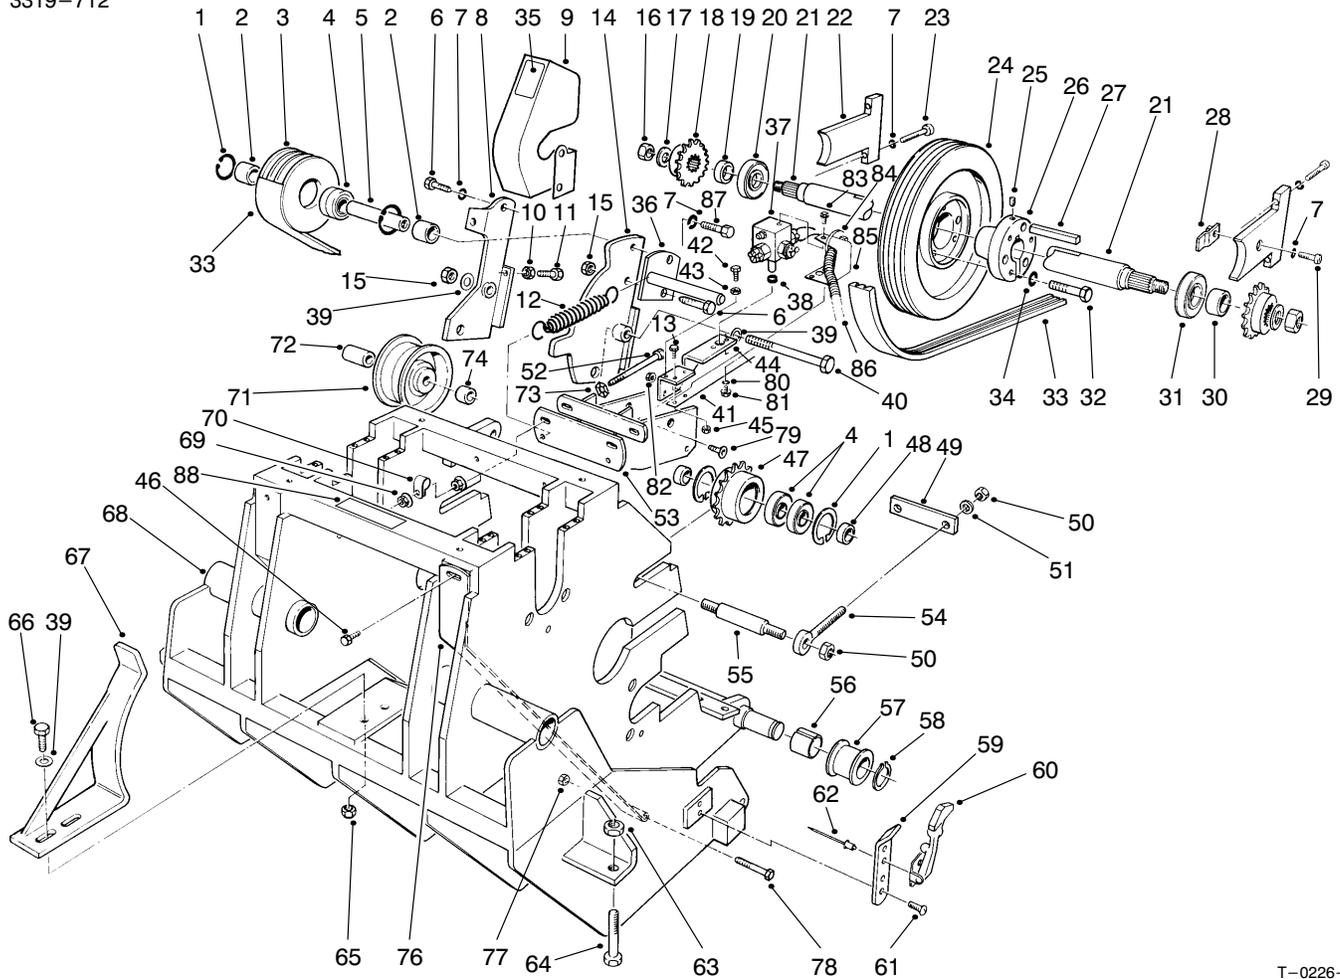

T-0226-2


CORING HEAD DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32120-11	Ring-Retaining	6
2	66-4380	Spacer	2
3	66-3470	Pulley-Idler	1
4	251-297	Bearing	6
5	66-3480	Shaft-Idler	1
6	323-6	Screw-HH	2
7	3253-21	Washer-Lock	9
8	95-3126	Bracket-Idler LH	1
9	94-1751	Guard-Pulley	1
10	3218-2	Nut-Jam	2
11	3242-9	Screw-Sq. Hd.	2
12	66-4270	Spring-Extension	2
13	3290-359	Screw-Machine, Hex. Hd.	2
14	95-3125	Bracket-Idler RH	1
15	32153-2	Nut-Lock	2
16	3296-67	Nut-Lock	2
17	3256-44	Washer-Flat	2
18	66-3790	Sprocket	2
19	66-4690	Spacer	1
20	251-312	Bearing	1
21	66-3840	Shaft-Power	1
†22		Cap-Bearing	2
23	3274-50	Screw-HSH	4
24	59-2130	Pulley	1
25	3245-2	Screw-Set	1
26	59-3790	Asm-Bushing (Incl. Ref. #25, 32 & 34)	1

Ref. No.	Part No.	Description	No. Used
27	59-4210	Key	1
28	59-2710	Clip-Retaining	3
29	3274-7	Screw-HSH	3
30	66-4680	Spacer	1
31	251-313	Bearing	1
32	322-7	Screw-HH	3
33	66-4070	V-Belt	1
34	3253-4	Washer-Lock	3
35	94-9111	Decal-Warning	1
36	94-6808	Handle	1
‡37		Asm-Switch	1
38	253-166	Seal	1
39	3256-24	Washer-Flat	4
40	323-25	Screw-HH	1
41	66-4480	Actuator-Switch	1
42	3290-360	Screw-Hex. Head	1
43	3217-26	Nut-Jam	1
44	80-3820	Bracket-Switch	1
45	3296-12	Nut-Lock	2
46	46-8560	Screw-TAP	2
47	59-2390	Sprocket	2
48	59-2600	Bushing	4
49	59-2070	Bar-Keeper	2
50	3296-23	Nut-Lock	8
51	3256-26	Washer-Flat	4
52	323-20	Screw-HH	2
53	95-3124	Bracket-Idler Pulley Pivot	1

† Not Serviced Separately.

‡ See following page for individual parts.

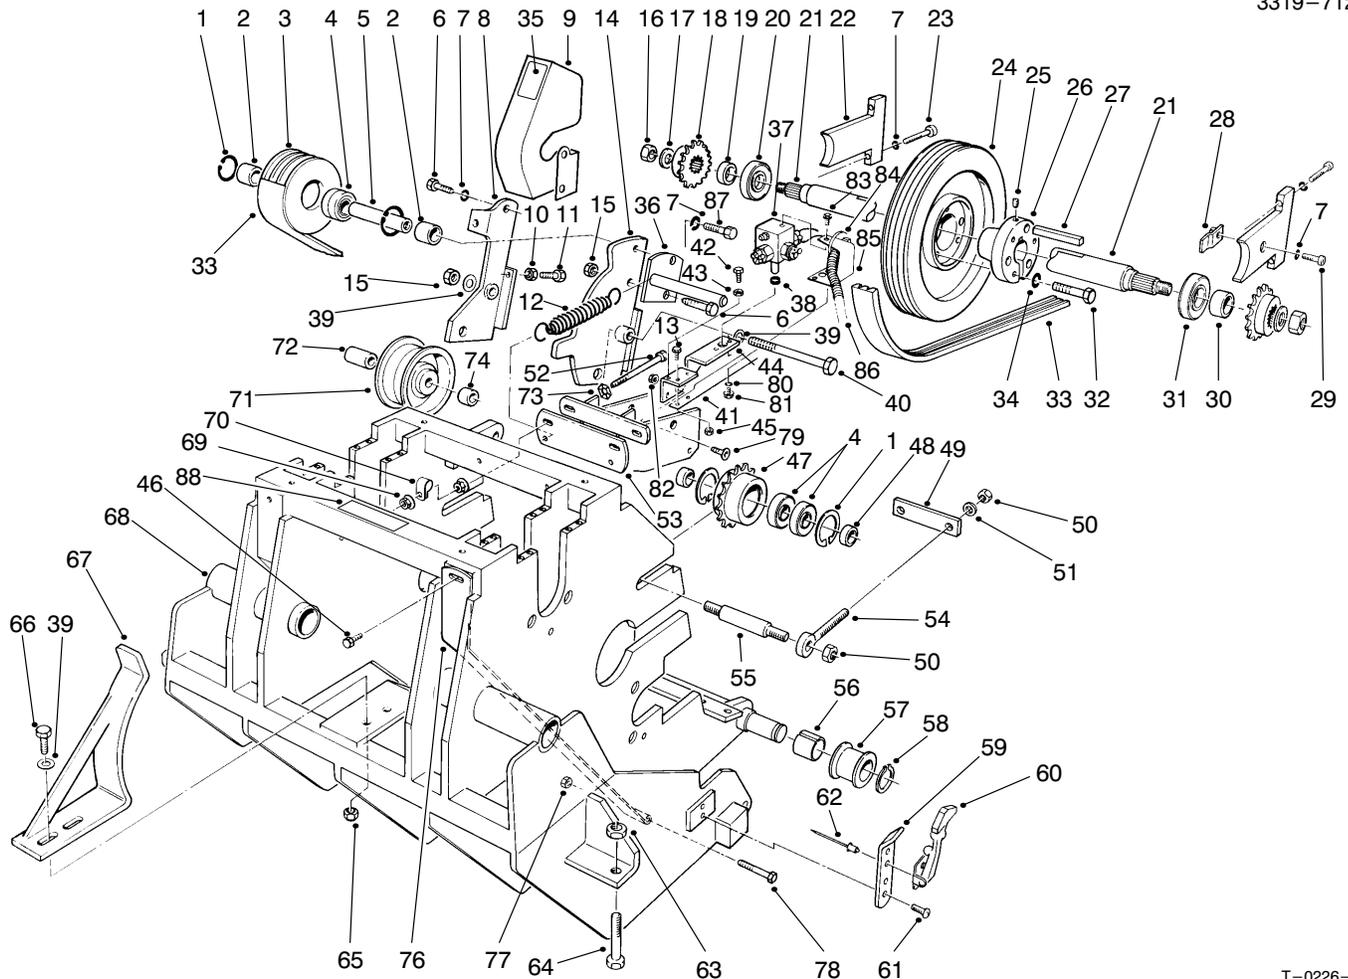


T-0226-2

CORING HEAD DRIVE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
54	59-2620	Eye Bolt	4	73	3290-224	Washer-Lock, Pyramidal	2
55	59-2610	Shaft	2	74	59-2570	Spacer-Short	1
56	256-319	Bushing-Split	2	76	76-2370	Guard-Chain	2
57	84-8480	Sleeve	2	77	3296-42	Nut-Lock	2
58	32151-77	Ring-Retaining	2	78	321-33	Screw-HH	2
59	59-9640	Plate-Handle	2	79	3289-4	Screw-HSFH	2
60	59-9750	Asm-Latch	2	80	3253-12	Washer-Lock	2
61	32140-29	Screw-HWH	4	81	32105-8	Screw-SHH	2
62	3269-4	Rivet-Pop	4	82	32128-33	Nut-Flange	2
63	3218-5	Nut-Jam	2	83	32144-73	Screw-TAP	1
64	60-9870	Screw-Adjustment	2	84	3290-378	Tie-Cable	1
65	3296-59	Nut-Lock	2	85	80-3930	Guard-Switch	1
66	323-4	Screw-HH	2	86	94-9108	Wiring Harness-Coring	
67	66-3810	Guide-Belt	1			Head Switch	1
68	72-9100	Frame	1	87	323-7	Screw-HH	1
69	32128-19	Nut-Hex. Flange	3	88	67-5360	Decal-Danger	1
70	94-6821	Clamp-Wire	1	*		Coring Head Stand	
71	37-5760	Pulley-Idler	1			Model No. 09152 (Optional)	1
72	59-2580	Spacer-Long	1				

*Not Illustrated

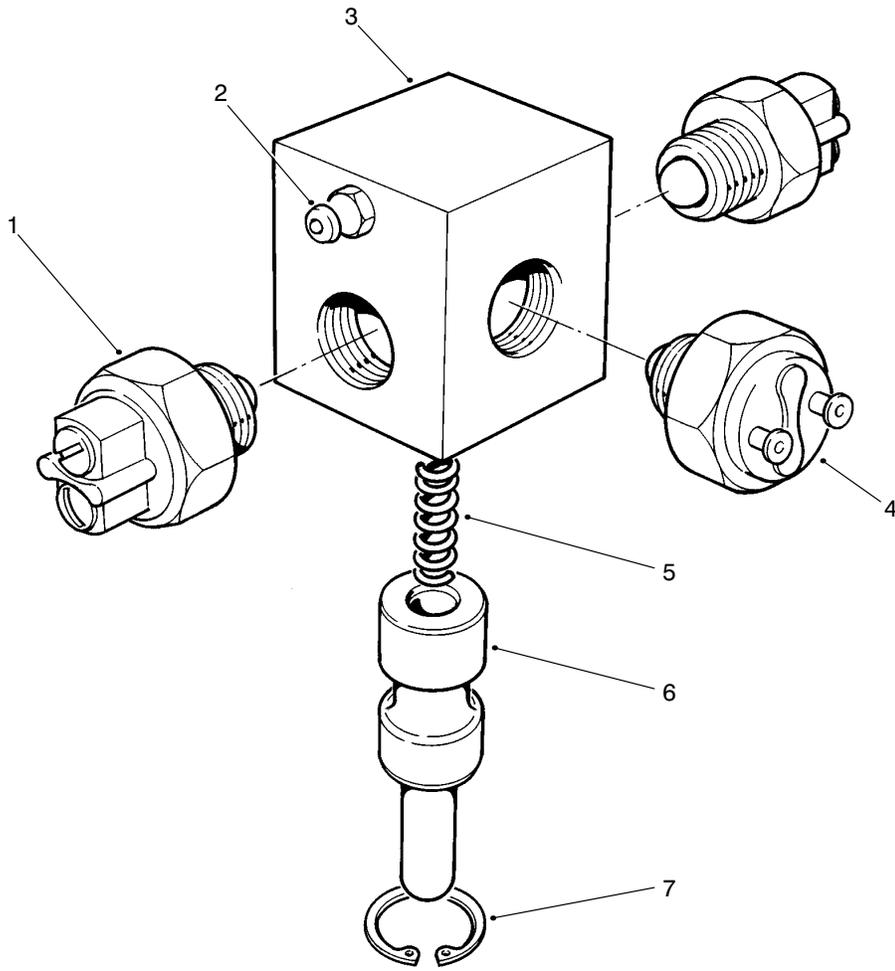


T-1173-1

SWITCH ASSEMBLY - CORING HEAD

Ref. No.	Part No.	Description	No. Used
1	19-2530	Switch-Start. Safety N.O.	2
2	302-22	Fitting-Grease	1
3	80-2830	Housing Switch	1
4	28-4250	Switch-Neutral N. C.	1

Ref. No.	Part No.	Description	No. Used
5	10-4850	Spring-Compression	1
6	80-2840	Plunger-Switch	1
7	32151-54	Ring-Retaining	1

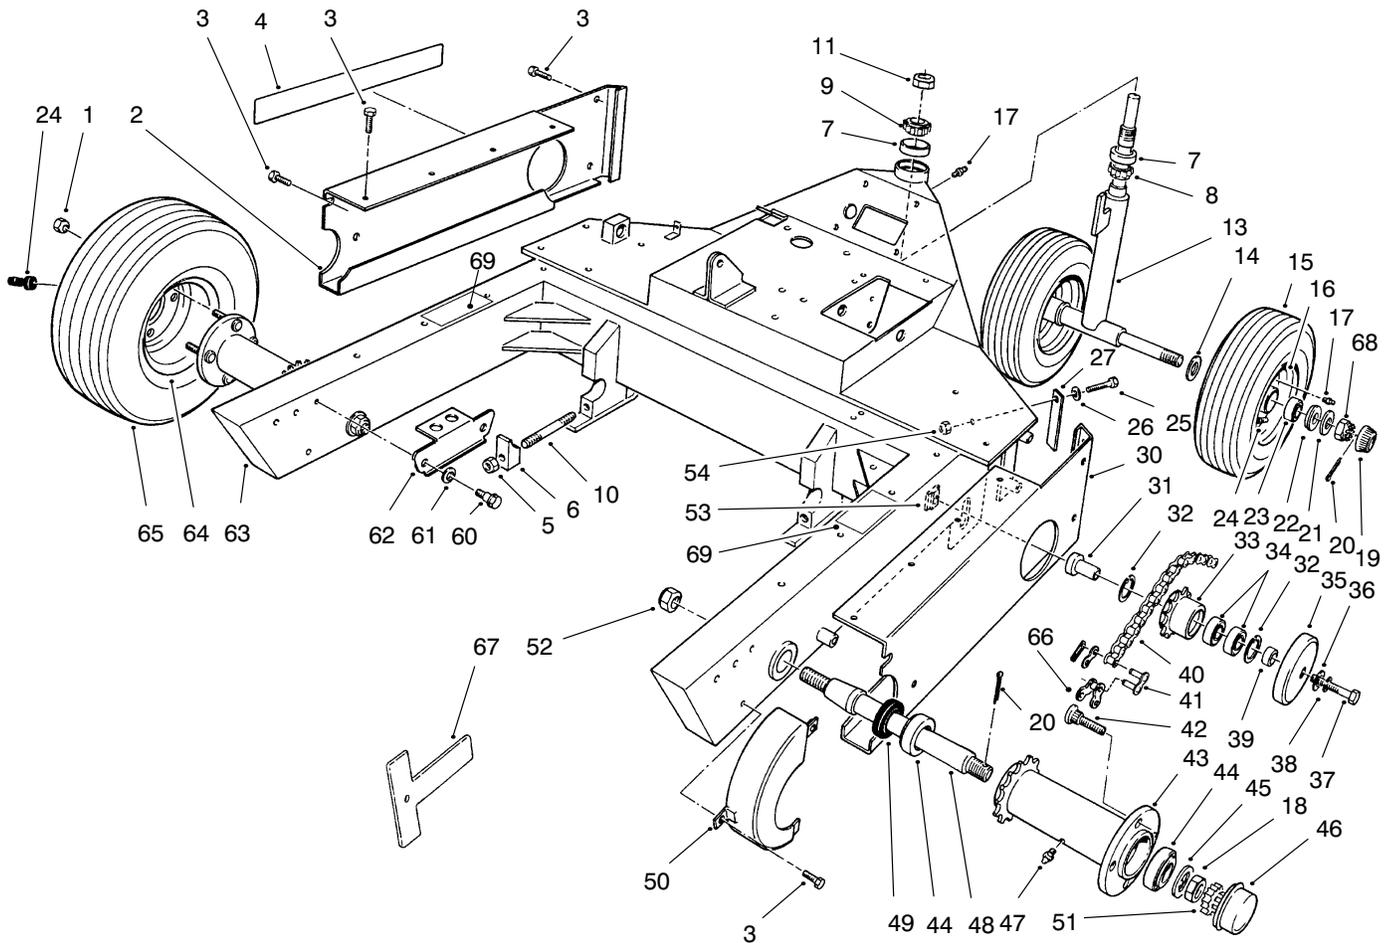


T-0227-3

CHASSIS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	242-50	Nut-Lug	8
2	66-9070	Guard-Chassis LH	1
3	46-8560	Screw-HH	17
4	59-4440	Decal-Greens Aerator	2
5	3296-45	Nut-Lock	2
6	82-8020	Clamp	2
7	254-61	Cup-Bearing	2
8	254-70	Cone-Bearing	1
9	254-62	Cone-Bearing	1
10	61-9160	Stud	2
11	3296-68	Nut-Lock	1
13	80-2710	Asm-Front Axle	1
14	22-6090	Washer-Thrust	2
15	231-126	Tire	2
16	241-123	Wheel	2
17	302-5	Fitting-Grease	3
18	3220-7	Nut-Jam	2
19	61-9780	Cap-Hub	2
20	3272-13	Pin-Cotter	4
21	28-2480	Washer	2
22	59-9650	Retainer-Bearing	4
23	252-105	Bearing-Roller	4
24	232-35	Stem-Valve w/Cap	4
25	321-4	Screw-HH	2
26	3256-22	Washer-Flat	2
27	59-9460	Guide	2

Ref. No.	Part No.	Description	No. Used
30	94-6813	Guard-Chassis RH	1
31	59-2420	Bushing	2
32	32120-11	Ring-Retaining	4
33	59-2390	Sprocket-Idler	2
34	251-297	Bearing-Ball	4
35	59-9620	Cover-Idler	2
36	3256-26	Washer-Flat	2
37	325-13	Screw-HH	2
38	3253-7	Washer-Lock	2
39	59-9630	Spacer	2
40	95-3111	Chain-Roller	2
41	2710-16	Link-Connecting	2
42	10-6830	Stud-Drive	8
43	59-4040	Asm-Hub (Incl. Ref. #42)	2
44	254-105	Bearing-Roller	4
45	93-0309	Washer-Tab	2
46	59-2380	Cap-Dust	2
47	302-10	Grease Fitting	2
48	93-0177	Shaft	2
49	253-158	Seal-Shaft	2
50	59-3280	Guard-Sprocket RH	1
*	59-3270	Guard-Sprocket LH	1
51	93-0307	Nut-Retainer	2
52	3296-15	Nut-Lock	2
53	59-2430	Nut-Special	2

*Not Illustrated

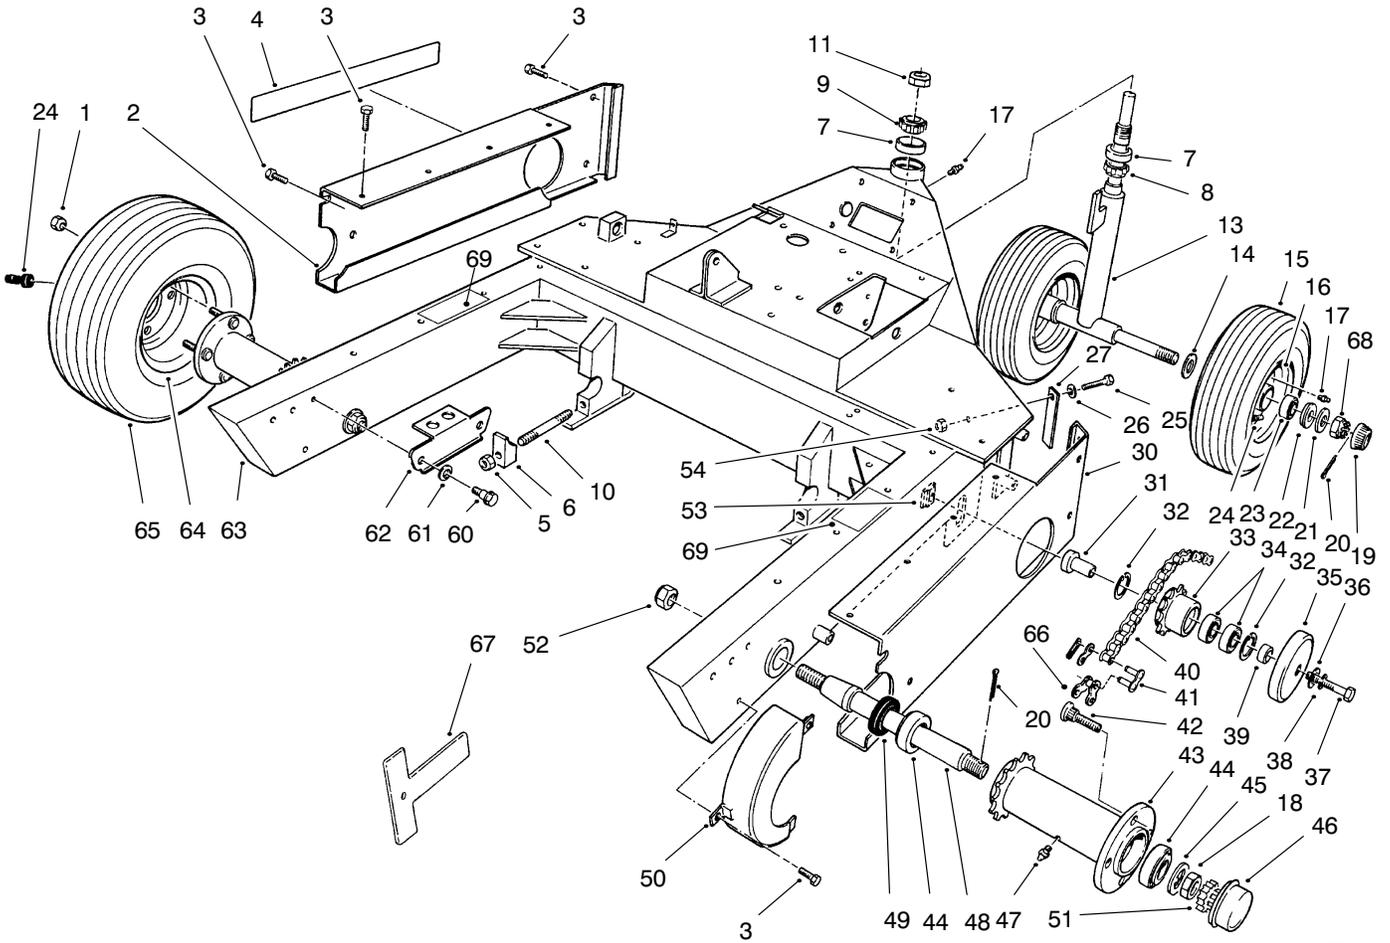


T-0227-3

CHASSIS ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
54	3296-42	Nut-Lock	2
60	5-2490	Bolt-Shoulder	2
61	3-3287	Spacer	2
62	66-4530	Bracket-Lockup	2
63	94-3442	Frame	1
64	217-60	Wheel	2

Ref. No.	Part No.	Description	No. Used
65	231-119	Tire	2
66	2710-20	Link-Single Pitch	2
67	60-9930	Frame Gauge	1
68	32136-5	Nut-Hex. Slotted	2
69	67-5360	Decal-Danger	2

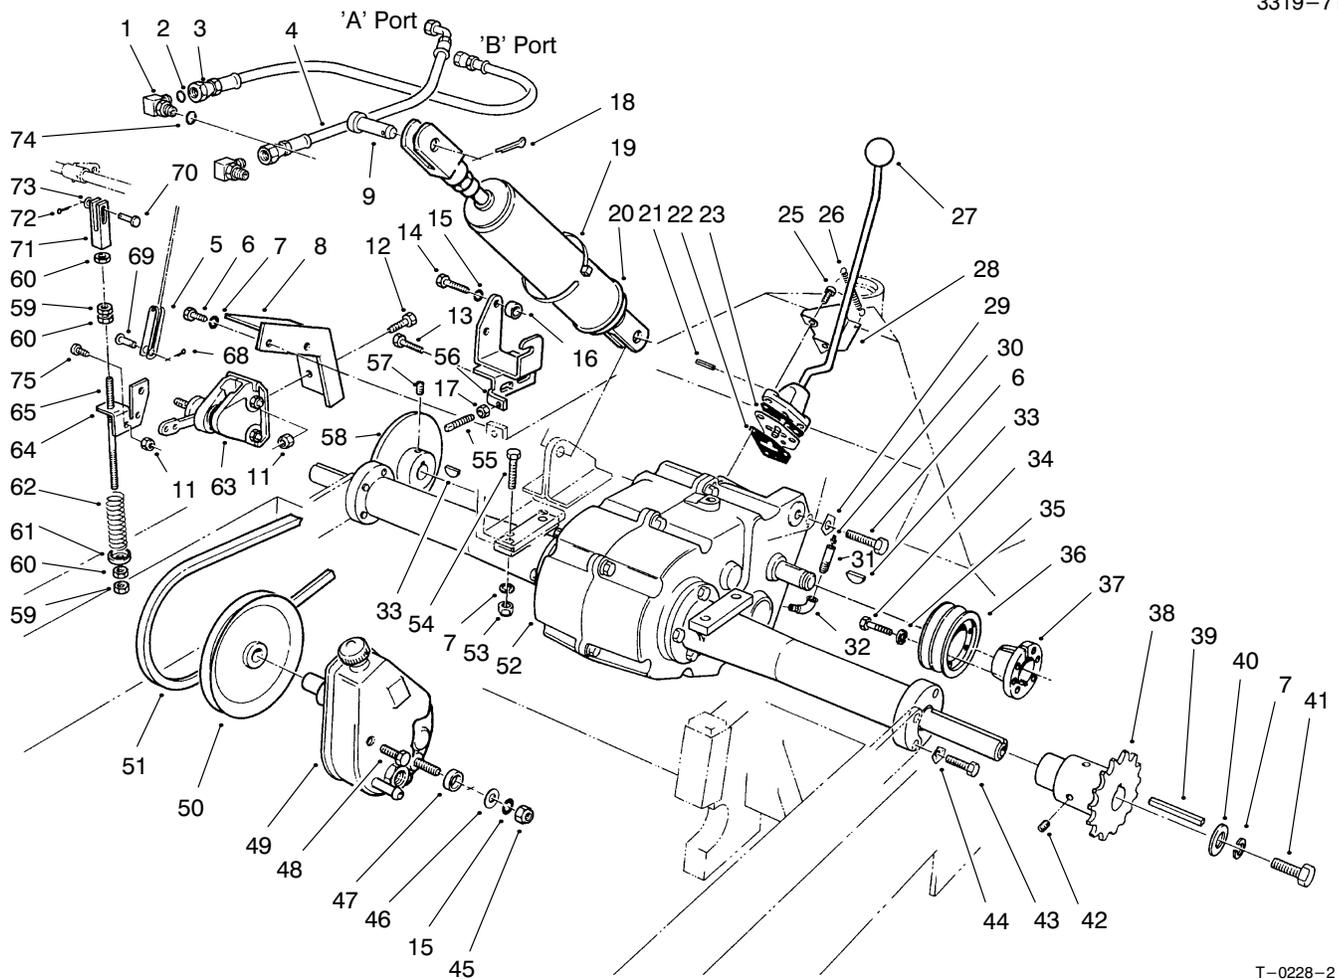


T-0228-2

TRANSAXLE, BRAKE & PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	340-82	Fitting (Incl. Ref. #2 & 74)	2	30	281-1	Plug-Oil	1
2	237-21	O-Ring	2	31	68-3110	Tube-Oil	1
3	76-2300	Hose-Cylinder	1	32	2811-10	Elbow-Street	1
4	59-4160	Hose-Cylinder	1	33	3257-5	Key	2
5	66-3930	Clevis	1	34	321-13	Screw-HH	3
6	323-6	Screw-HH	3	35	3253-3	Washer-Lock	3
7	3253-21	Washer-Lock	8	36	59-2140	Pulley	1
8	76-2620	Bracket	1	37	59-2150	Bushing (Inc. Ref. #34 & 35)	1
9	283-74	Pin-Clevis	2	38	95-3109	Sprocket-19 Tooth	2
11	3296-42	Nut-Lock	3	39	5-0786	Key	2
12	321-4	Screw-HH	2	40	3-4685	Washer-Thrust	2
13	11-0590	Screw-TAP	2	41	323-5	Screw-HH	2
14	33115-030	Screw-HH	2	42	3247-2	Screw-Set	4
15	3253-6	Washer-Lock	3	43	322-5	Screw-HH	4
16	59-4320	Spacer	2	44	3290-238	Washer-Pyramidal	4
17	3218-3	Nut-Jam	1	45	21-0360	Hex Nut (Metric)	1
18	3272-12	Pin-Cotter	2	46	3256-25	Washer-Flat	1
19	3290-379	Tie-Cable	1	47	59-4310	Spacer	1
20	62-4660	Asm-Cylinder	1	48	60-9920	Screw (Metric)	1
21	32121-20	Pin-Roll	1	49	44-7800	Pump-Steering	1
22	27-6390	Gasket	2	50	38-1830	Pulley	1
23	66-3290	Plate-Guide Shift	1	51	59-4200	V-Belt	1
25	3274-26	Screw-Socket Hd.	3	52	66-4590	Transaxle	1
26	66-4460	Spring	1	53	3217-7	Nut	4
27	233-13	Knob	1	54	323-10	Screw-HH	4
28	66-3920	Bracket-Spring	1	55	3243-9	Screw-Set, Sq. Hd.	1
29	3290-224	Washer-Pyramidal	1	56	72-4860	Bracket-Pump Support	1

3319-712

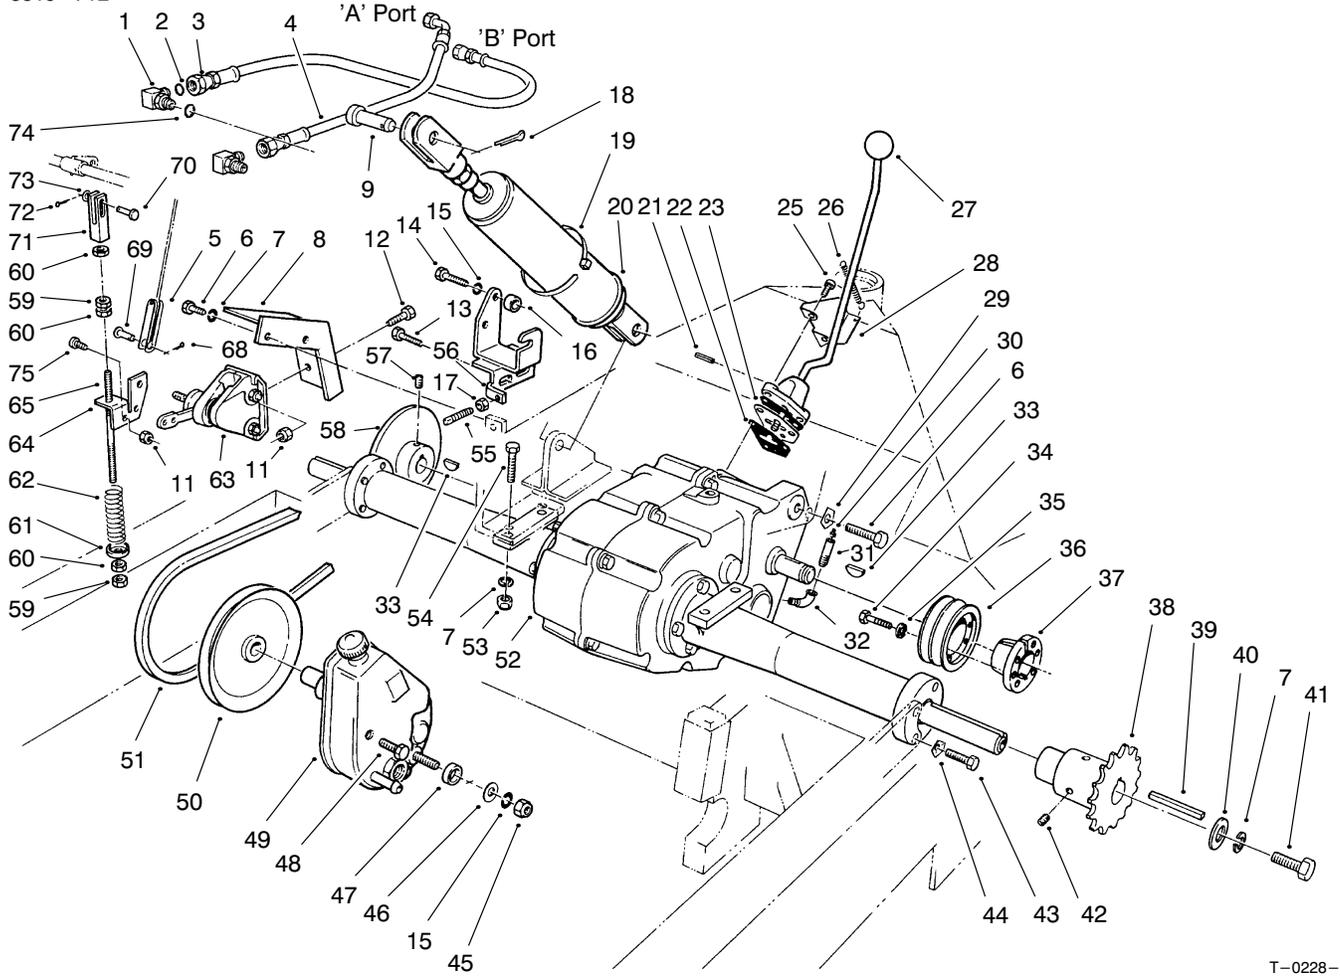


T-0228-2

TRANSAXLE, BRAKE & PUMP ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
57	3245-33	Screw-Set	2
58	59-4100	Brake-Disc	1
59	3220-1	Nut-Jam	2
60	3219-1	Nut-Hex.	3
61	66-3390	Retainer-Brake Spring	1
62	66-4150	Spring	1
63	76-2590	Brake-Caliper	1
64	80-3890	Arm-Brake	1
65	66-3400	Rod-Brake, Take-up	1

Ref. No.	Part No.	Description	No. Used
68	3272-10	Pin-Cotter	1
69	283-2	Pin-Clevis	1
70	283-67	Pin-Clevis	1
71	66-4600	Clevis-Brake	1
72	3272-4	Pin-Cotter	1
73	3256-22	Washer-Flat	1
74	237-42	O-Ring	2
75	321-5	Screw-HH	2

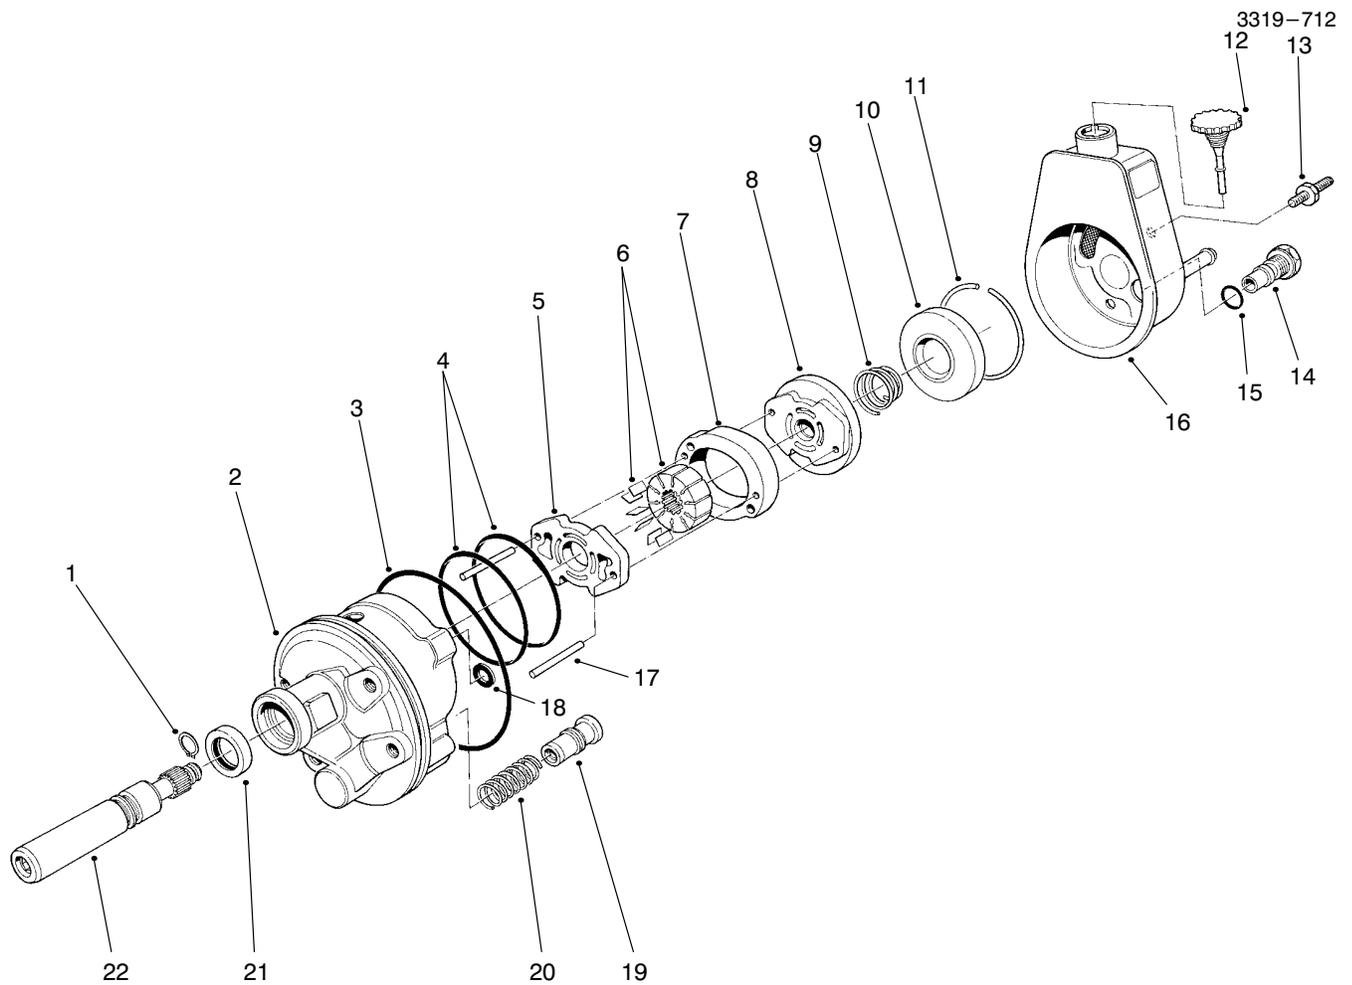

T-0230-2

PUMP ASSEMBLY NO. 44-7800


Ref. No.	Part No.	Description	No. Used
1	44-7850	Ring-Shaft Retaining	1
†2		Housing-Hydraulic Pump (Incl. Ref. #21)	1
3	37-8360	O-Ring	1
4		O-Ring	2
5	44-7840	Thrust Plate	1
6	44-7810	Ring Service Kit Rotor Vane (Incl. Ref. #1 & 7)	1
†7		Pump Ring	1
8	44-7830	Pressure Plate	1
9	44-7820	Spring Pressure Plate	1
10	37-8380	End Plate	1
11	37-8440	Ring-Retaining	1
12	37-8420	Asm-Cap, Reservoir	1
13	39-8700	Stud Pump Mounting	2
14	39-8680	Asm-Fitting (Incl. Ref. #15)	1

Ref. No.	Part No.	Description	No. Used
15	39-8710	O-Ring	1
16	37-8400	Kit-Pump Reservoir Service (Incl. Ref. #3 & 18)	1
17	37-8300	Pin-Pump, Ring Dowel	2
18		Seal	2
19	37-8410	Asm-Valve, Control	1
20	37-8450	Spring-Flow Control	1
21	37-8340	Seal-Drive Shaft	1
22	44-2680	Shaft-Service Retaining Ring & Drive Kit (Incl. Ref. #1)	1
*	37-8460	Kit-Seal Service (Incl. Ref. #3, 4, 15, 18 & 21)	1
*	44-7860	Kit-Retaining Ring Service (Incl. Ref. #1)	1

*Not Illustrated

†Not Serviced Separately


TRANSAXLE ASSEMBLY MODEL NO. 66-4590

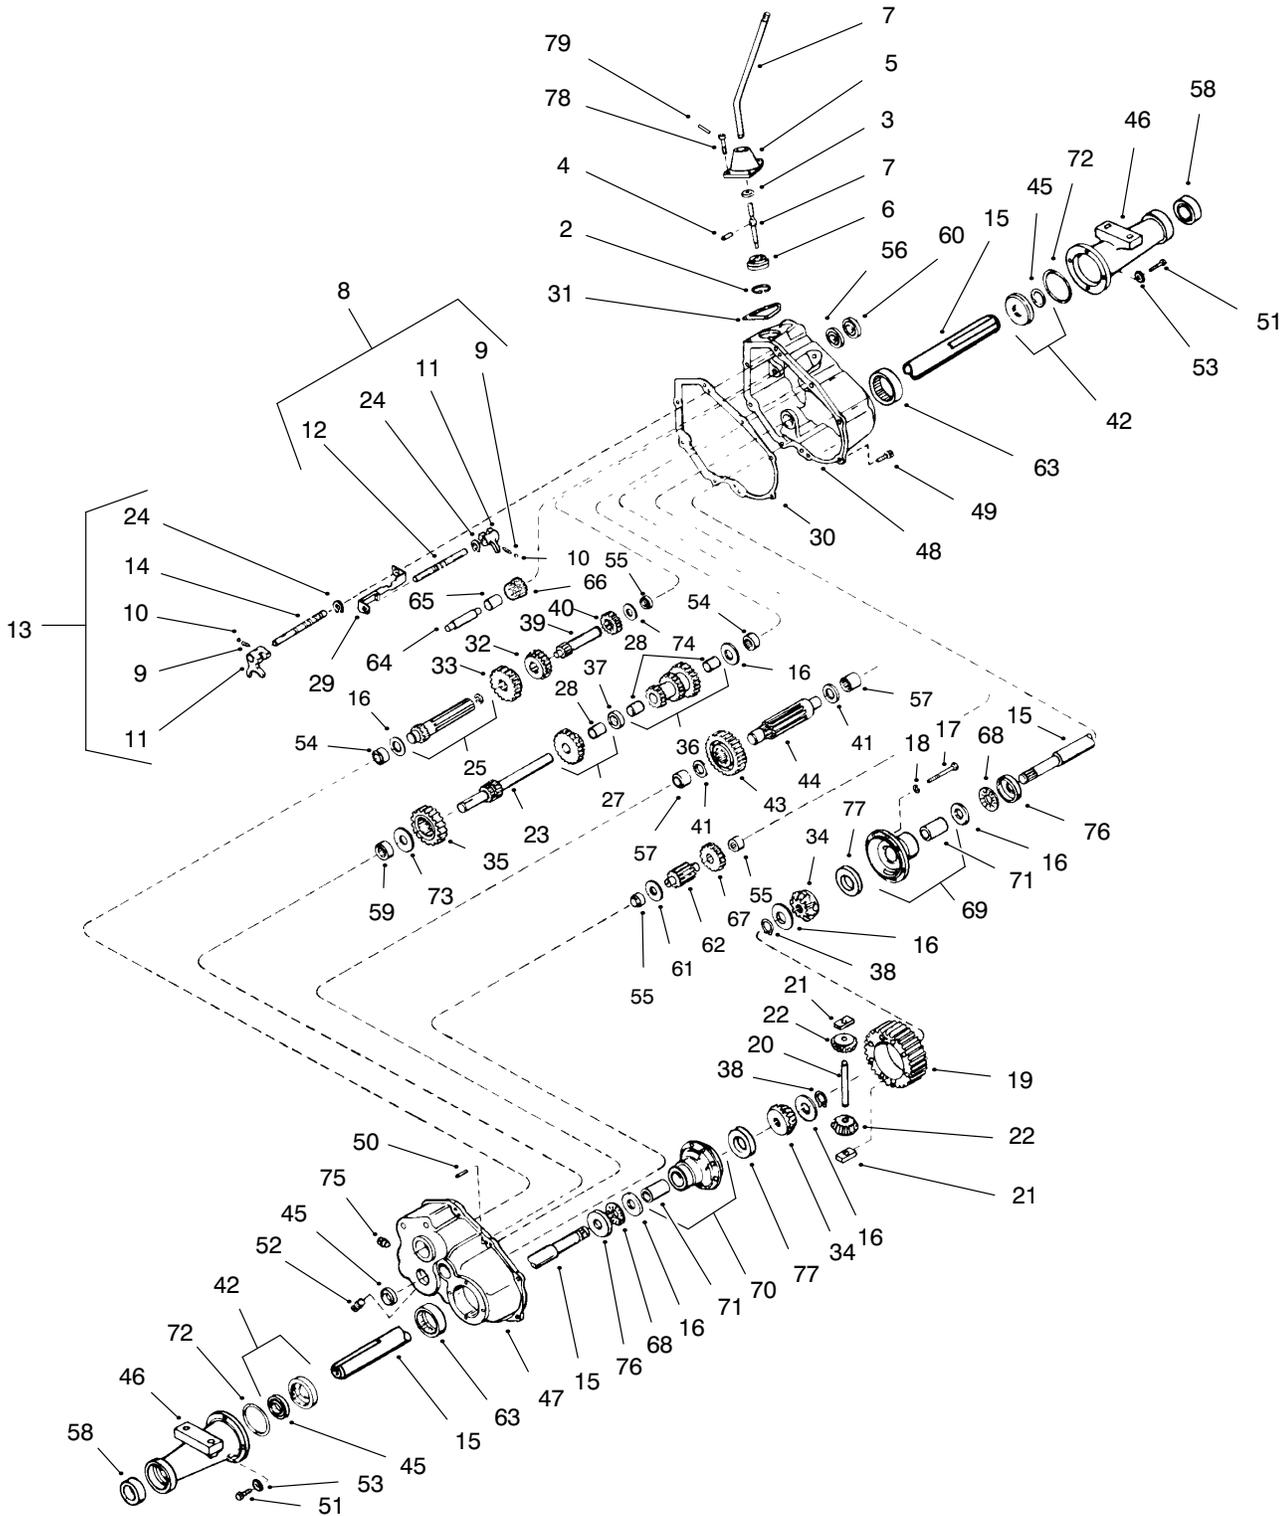

TRANSAXLE ASSEMBLY MODEL NO. 66-4590 (Cont.)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
2	32151-34	Ring-Snap	1	41	95-7230	Washer-Thrust	2
3	95-7203	Ring-Quad	1	42	95-7231	Asm-Seal & Retainer, Oil (Incl. Ref. #45)	2
4	95-7209	Pin-Roll	1	43	95-7232	Gear-Output	1
5	95-7200	Housing-Shift Lever	1	44	95-7233	Pinion-Output	1
6	66-9080	Keeper-Shift Lever	1	45	27-6420	Seal-Oil	3
7	80-3970	Lever-Shift	1	46	95-7234	Housing-Axle (10.906" lo,ng)	2
8	95-7201	Asm-Rod, Shift (Incl. Ref. #9-12 & 24)	1	†47		Asm-Cover Transaxle (Incl. Ref. #54, 55, 57, 59 63)	1
9	95-7202	Spring	2	†48		Asm-Case, Transaxle (Incl. Ref. #54, 55, 57 & 63)	1
10	255-5	Ball-Steel	2	49	95-7235	Screw-HHF	11
11	95-7204	Fork-Shifter	2	50	95-7236	Pin-Dowel	2
12	95-7205	Rod-Shifter (3rd & 4th)	1	51	95-7237	Screw-HH	8
13	95-7206	Asm-Rod, Shift (Incl. Ref. #9,10,11,14 & 24)	1	52	281-11	Plug-Magnetic Drain	1
14	95-7207	Rod-Shift (Low)	1	54	95-7238	Bearing-Needle	2
15	95-7208	Axle (17-7/8" Long)	2	55	95-7239	Bearing-Needle	3
16	252-80	Washer-Thrust	6	56	95-7240	Bearing-Ball	1
17	95-7210	Screw-HH	8	57	95-7241	Bearing-Needle	2
18	3253-3	Lockwasher	8	58	95-7242	Bearing-Ball	2
19	95-7211	Gear-Ring	1	59	252-95	Bearing-Needle	1
20	95-7212	Pin-Drive	1	60	95-7243	Seal-Oil	1
21	95-7213	Block-Drive	2	61	95-7244	Washer	1
22	95-7214	Pinion-Bevel	2	62	95-7245	Shaft & Pinion	1
23	95-7215	Shaft & Gear-Brake	1	63	95-7246	Bearing-Needle	2
24	32151-84	Ring-Snap	2	64	95-7247	Shaft-Reverse Idler	1
25	95-7216	Pinion Shaft & Bearing (Incl. Ref. #26)	1	65	95-7248	Spacer-Reverse Idler	1
26	252-51	Bearing-Needle	1	66	95-7249	Idler-Reverse	1
27	95-7217	Asm-Gear Cluster (Incl. Ref. #28)	1	67	95-7250	Gear-Spur (22 Teeth)	1
28	95-7218	Bushing	3	68	252-76	Bearing-Thrust	2
29	95-7219	Stop-Shifter	1	69	95-7251	Asm-Carrier, Differential (Incl. Ref. #71)	1
30	95-7220	Gasket-Case & Cover	1	70	95-7252	Asm-Carrier, Differential (Incl. Ref. #71)	1
31	27-6390	Gasket-Lever Housing	2	71	95-7253	Bushing	2
32	95-7221	Gear-Shifting (3rd & 4th)	1	72	27-6380	O-Ring	2
33	95-7222	Gear-Shifting (1st, 2nd & Rev.)	1	73	95-7254	Washer-Thrust	1
34	95-7223	Gear-Bevel	2	74	95-7255	Washer-Thrust	1
35	95-7224	Gear-Idler	1	75	281-2	Plug-Pipe	1
36	95-7225	Asm-Gear Cluster (Incl. Ref. #28)	1	76	95-7256	Race-Thrust	2
37	95-7226	Spacer	1	77	95-7257	Washer	2
38	95-7227	Ring-Snap	2	78	3274-26	Screw-Socket Hd.	3
39	95-7228	Shaft-Input	1	79	32121-20	Pin-Roll	1
40	95-7229	Spur Gear-Input Shaft	1				

†Not Serviceable Separately.

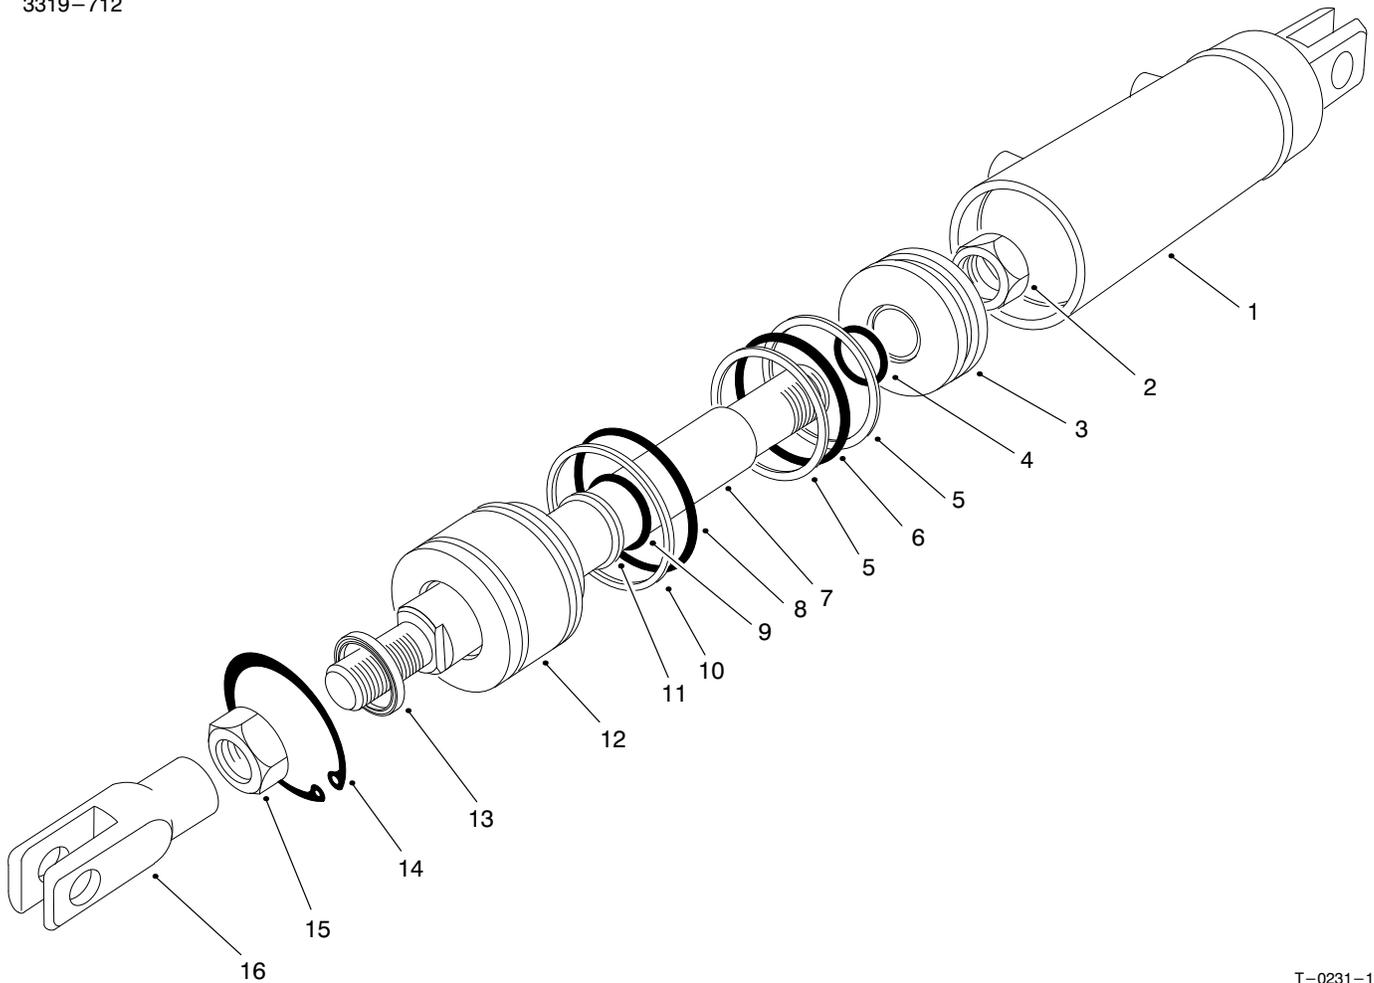

T-0231-1


HYDRAULIC CYLINDER ASSEMBLY NO. 62-4660

Ref. No.	Part No.	Description	No. Used
†1		Asm-Barrel	1
2	60-9760	Nut-Lock	1
3	62-4690	Piston	1
†4		O-Ring	1
†5		Ring-Back-Up	2
†6		O-Ring	1
7	62-4700	Rod	1
†8		O-Ring	1
†9		O-Ring	1
†10		Ring-Back-Up	1

Ref. No.	Part No.	Description	No. Used
†11		Ring-Back-Up	1
12	62-4680	Head	1
†13		Dust Seal	1
14	32120-65	Ring-Retaining	1
15	3220-7	Nut-Jam	1
16	62-4670	Clevis-Rod	1
*	62-4720	Kit-Seal Repair (Inc. Ref. #4-6, 8-11, 13 & 14)	1

*Not Illustrated


†Not Serviced Separately

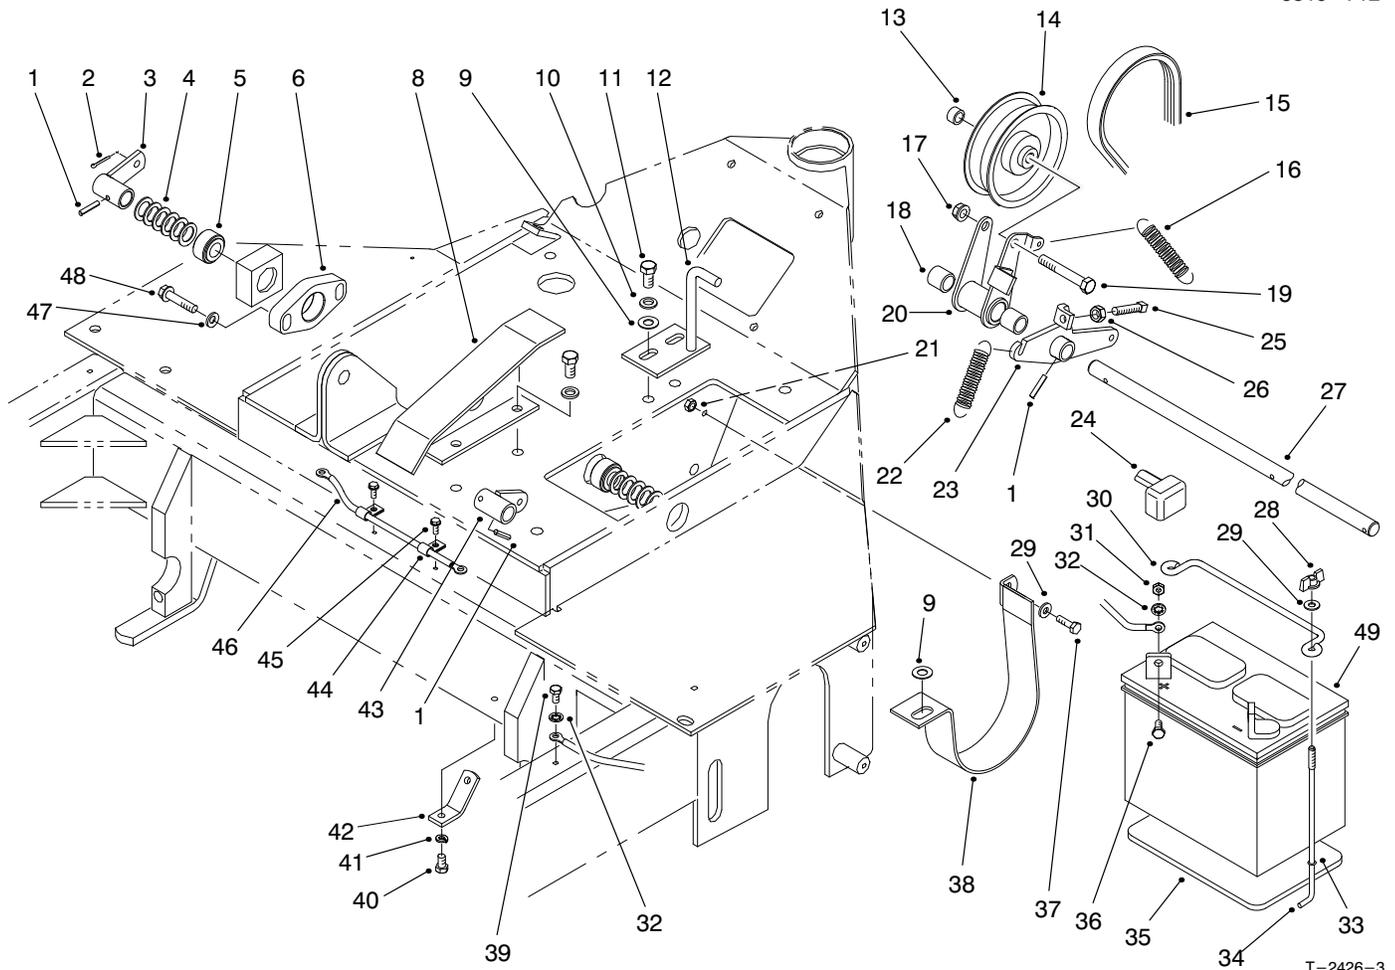

T-2426-3

BATTERY & DRIVE TAKE-UP ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32121-16	Pin-Roll	3	26	3218-2	Nut-Jam	1
2	3272-6	Pin-Cotter	1	27	66-3440	Cross Shaft-Clutch	1
3	72-8650	Arm-Cross Shaft	1	28	32103-12	Nut-Wing	2
4	3256-69	Washer-Flat	11	29	3256-22	Washer-Flat	3
5	66-4730	Bearing	3	30	94-5343	Clamp-Battery	1
6	66-4520	Housing-Bearing	1	31	3217-5	Nut-Hex.	2
8	66-4400	Guide-Belt	1	32	3254-8	Washer-Lock, Int. Tooth	3
9	3256-24	Washer-Flat	3	33	237-143	O-Ring	2
10	3253-21	Washer-Lock	1	34	7-3328	Bolt-Battery	2
11	323-4	Screw-HH	4	35	59-9470	Pad-Battery	1
12	66-3560	Guide-Belt	1	36	321-3	Screw-HH	2
13	59-4320	Spacer	1	37	321-5	Screw-HH	1
14	66-4210	Pulley-Idler	1	38	98-5004	Guide-Belt, Traction	1
15	66-4340	V-Belt	1	39	32104-17	Screw-HHST	1
16	5-7290	Spring	1	40	321-2	Screw-HH	1
17	3296-39	Nut-Lock	1	41	3253-3	Washer-Lock	1
18	256-216	Bushing	2	42	66-3420	Bracket-Spring Brake	1
19	323-12	Screw-HH	1	43	76-2610	Arm-Brake	1
20	66-3590	Bracket-Drive, Take-up (Incl. Ref. #18)	1	44	2412-131	Clamp-R	2
21	3296-42	Nut-Lock	1	45	32144-1	Screw-HHST	2
22	66-4180	Spring	1	46	94-5349	ASM-Wire	1
23	66-3360	Arm-Brake Clutch	1	47	3256-2	Washer-Flat	2
24	28-8080	Boot-Battery	1	48	32144-57	Screw-HHST	2
25	3242-9	Screw-Set, Sq. Head	1	49	28-1400	Battery	1

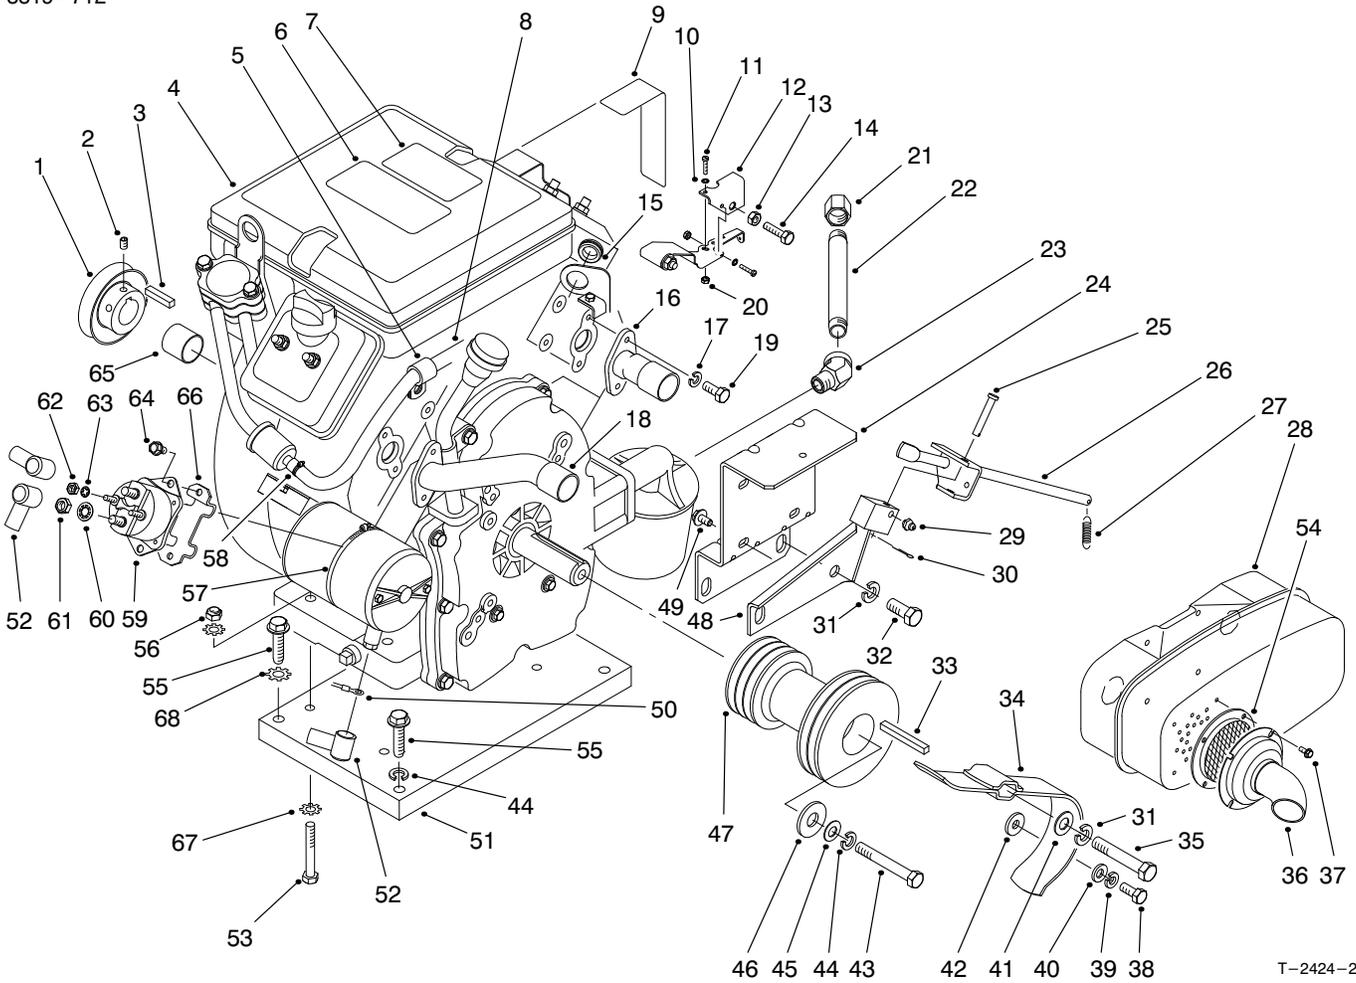


T-2424-2

ENGINE, PULLEY & MUFFLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	61-9150	Pulley	1
2	3245-2	Screw-Set	2
3	13-2840	Key	1
4		Engine-16 HP, Briggs & Stratton Model No. 303447	1
5	94-6819	Clamp-R	1
6	66-9050	Decal-Shift	1
7	66-9110	Decal-Start	1
8	94-6809	Hose-Fuel	1
9	94-5310	Decal-Choke/Throttle	1
10	3254-9	Washer-Lock, Int. Tooth	2
11	3290-93	Screw-PH	2
12	94-6810	Bracket-Adjuster, Throttle	1
13	3219-1	Nut-Hex.	1
14	329-6	Screw-HH	1
15	94-6817	Grommet	1
16	94-5314	Asm-Exhaust Tube	1
17	42-9850	Washer-Lock	4
18	94-5313	Asm-Exhaust Tube	1
19	66-3160	Screw-HH	4
20	94-9109	Nut-Hex. Keps	2
21	288-10	Cap-Pipe	1
22	94-6804	Nipple-Pipe	1
23	94-6820	Elbow-Street 45°	1
24	94-5315	Mount-Muffler	1
25	283-66	Pin-Clevis	1

Ref. No.	Part No.	Description	No. Used
26	94-6802	Rod-Control, Throttle	1
27	66-4160	Spring	1
28	94-3438	Muffler	1
29	302-5	Fitting-Grease	1
30	3272-1	Pin-Cotter	1
31	3253-6	Washer-Lock	2
32	324-4	Screw-HH	1
33	5-0930	Key	1
34	94-5316	Guide-Belt	1
35	324-10	Screw-HH	2
36	94-6803	Pipe-Exhaust	1
37	32144-107	Screw-HHST	4
38	3210-3	Screw-HH	1
39	3253-33	Washer-Lock	1
40	3256-23	Washer-Flat	1
41	3256-4	Washer-Flat	1
42	4-2390	Washer	1
43	3211-12	Screw-HH	1
44	3253-21	Washer-Lock	3
45	3256-24	Washer-Flat	1
46	3256-6	Washer-Flat	1
47	94-3432	Pulley-Engine	1
48	94-5341	Support-Muffler	1
49	46-8560	Screw-HHST	4
50	94-6800	Asm-Wire	1
51	94-3437	Plate-Mount, Engine	1

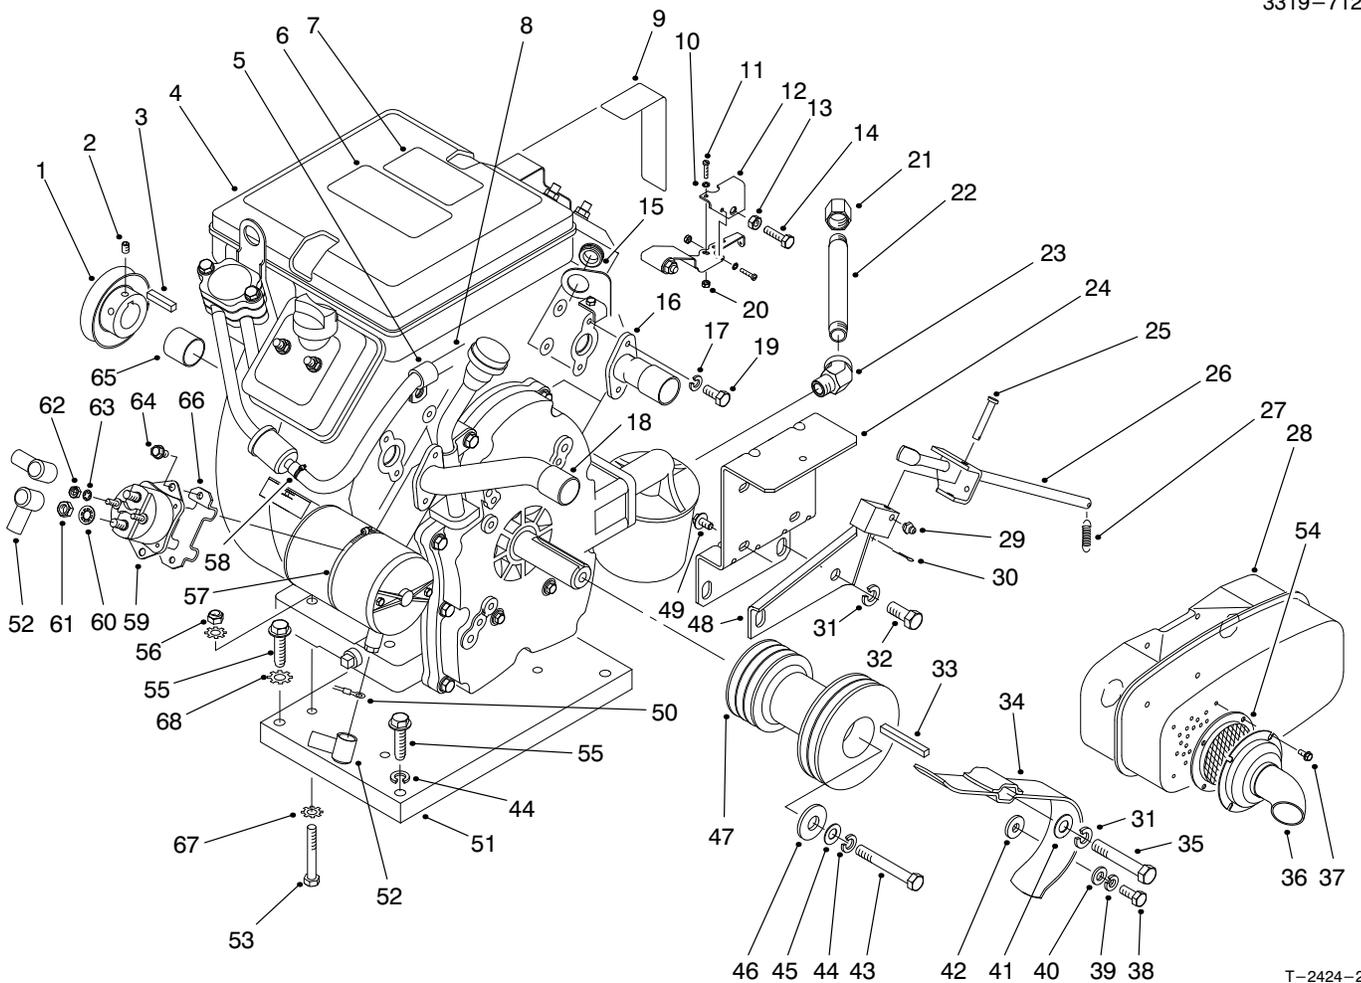


T-2424-2

ENGINE, PULLEY & MUFFLER ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
52	94-6824	Boot-Terminal	3	60	3254-2	Washer-Lock	2
53	322-11	Screw-HH	4	61	3218-13	Nut-Jam	2
54	94-5301	Spark Arrester (Optional)	1	62	3219-14	Nut-Hex.	2
55	11-0590	Screw-HH	4	63	3254-1	Washer-Lock	2
56	3296-29	Nut-Lock	4	64	32144-4	Screw-HHST	2
57	2412-110	Clamp	1	65	94-6812	Shield	1
58	2412-108	Clamp-Hose	1	†66	222934	Bracket-Solenoid	1
59	28-4210	Solenoid	1	67	3255-8	Washer-Lock, Ext. Tooth	2
				68	3255-9	Washer-Lock, Ext. Tooth	1

† Obtain from Briggs & Stratton

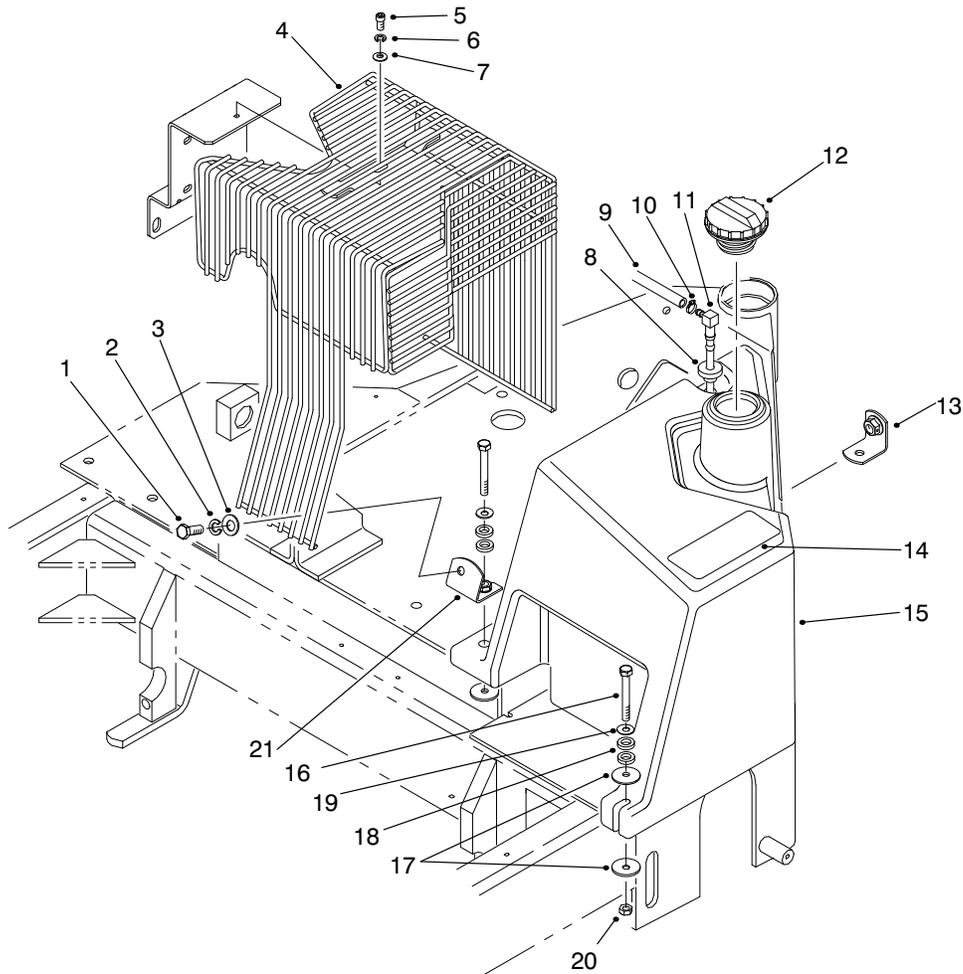


T-2425-2

MUFFLER GUARD & FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	323-6	Screw-HH	2
2	3253-21	Washer-Lock	2
3	3256-4	Washer-Flat	2
4	94-5321	Guard-Muffler	1
5	3274-84	Screw-HSH	1
6	3253-3	Washer-Lock	1
7	3256-22	Washer-Flat	1
8	46-6560	Bushing	1
9	94-6809	Hose-Fuel	1
10	2412-108	Clamp-Hose	1
11	94-6805	Asm-Stand Pipe, Fuel	1

Ref. No.	Part No.	Description	No. Used
12	93-3101	Cap-Fuel	1
13	94-6815	Bracket-Front	1
14	27-7310	Decal-Refueling	1
15	94-3435	Tank-Fuel	1
16	322-12	Screw-HH	3
17	3256-57	Washer-Flat	4
18	3-3287	Spacer	6
19	3256-2	Washer-Flat	3
20	3296-29	Nut-Lock	3
21	94-6816	Bracket-Rear	1

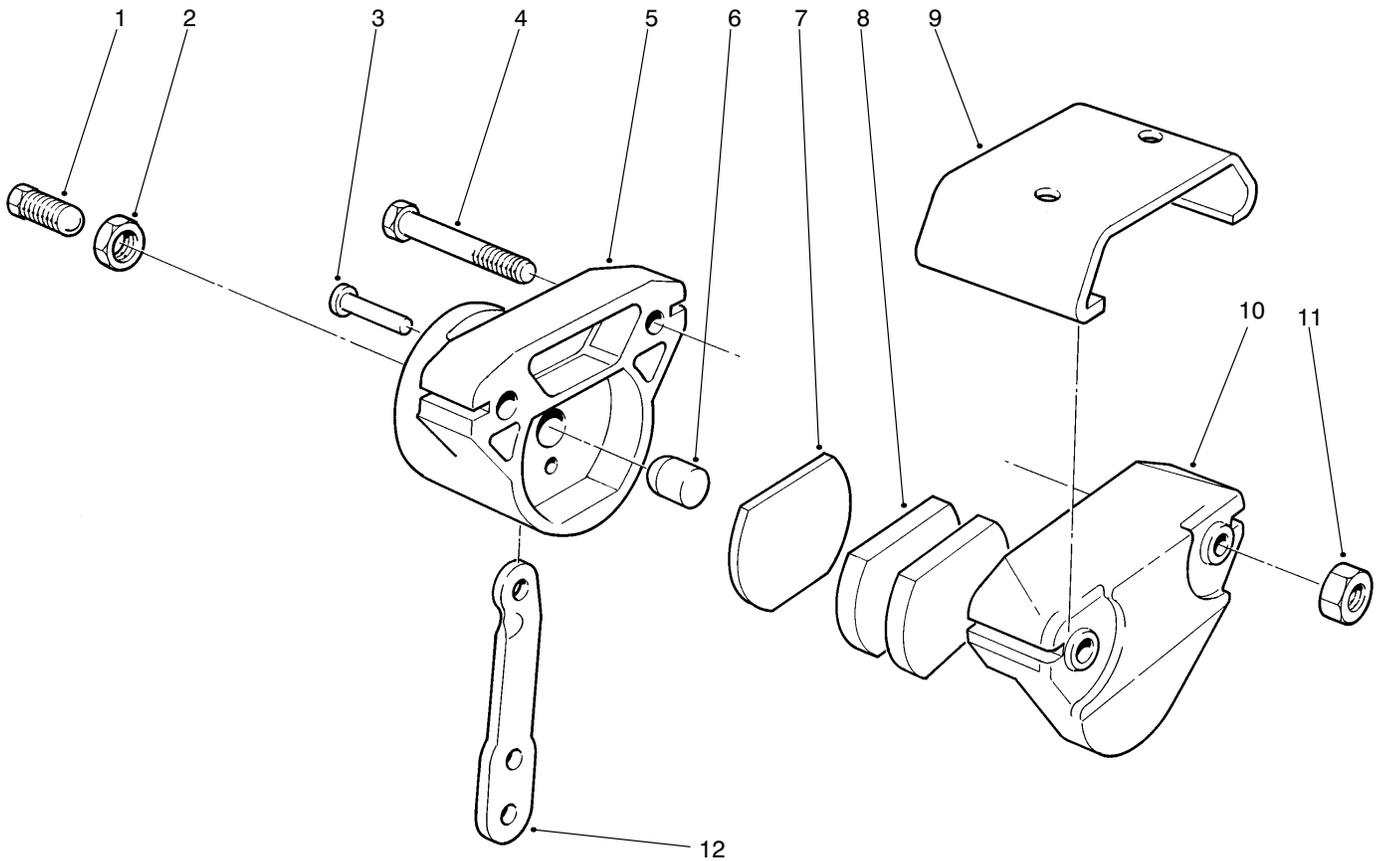


T-1243-1

BRAKE CALIPER ASSEMBLY NO. 76-2590

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	95-1842	Pin-Adjustment	1	10	80-0280	Anvil Sub ASM (Incl. 1 of Ref. #8)	1
2	3220-4	Nut-Jam	1	11	32153-11	Nut-Lock	2
3	95-1837	Pin-Groove	1	12	80-0180	Lever-Cam	1
4	3211-10	Screw-HH	2	*	80-0290	Kit-Repair, Lining (Incl. Ref. #7 & 8)	1
5	95-1844	Housing-Live Side	1	*	80-0310	Kit-Service (Incl. Ref. #3, 5, & 12)	1
6	95-1843	Pin-Actuator	1				
7	95-1845	Plate-Backing	1				
8	80-0270	Lining	2				
9	95-1841	Bracket-Floating	1				

*Not Illustrated

3319-712

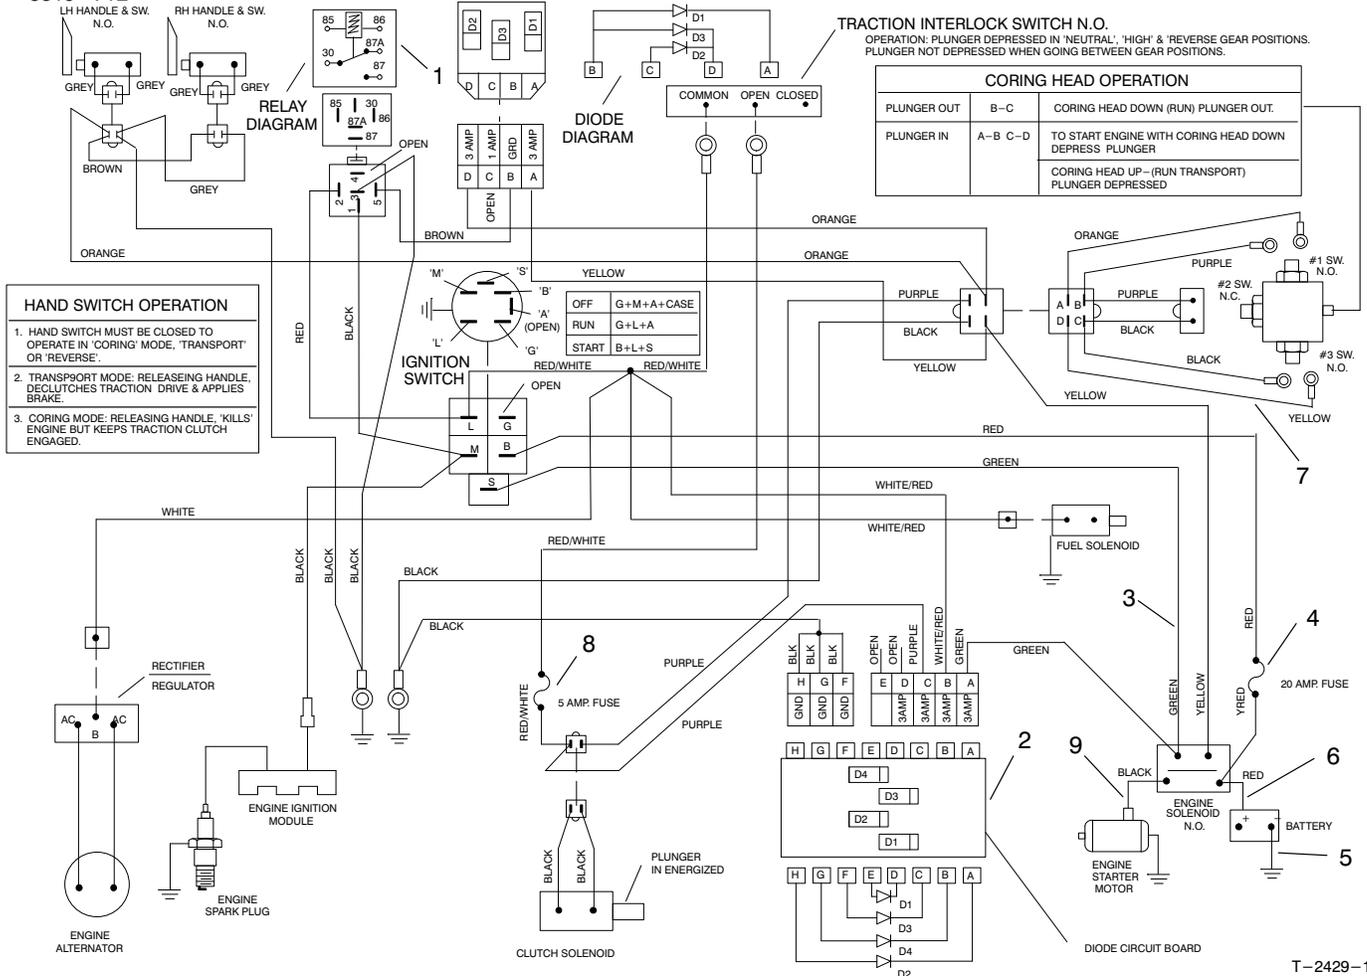


T-2429-1

ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	92-3191	Diode	1
2	92-3188	Diode	1
3	94-3433	Wire Harness—Main	1
†4		Fuse—20 Amp	1
5	28-3860	Cable—Battery, Ground	1


Ref. No.	Part No.	Description	No. Used
6	94-5349	Cable—Battery, Positive	1
7	80-3810	Wire Harness—Coring Head Switch	1
8	218-573	Fuse—5 Amp	1
9	94-6800	Asm—Wire, Positive	1

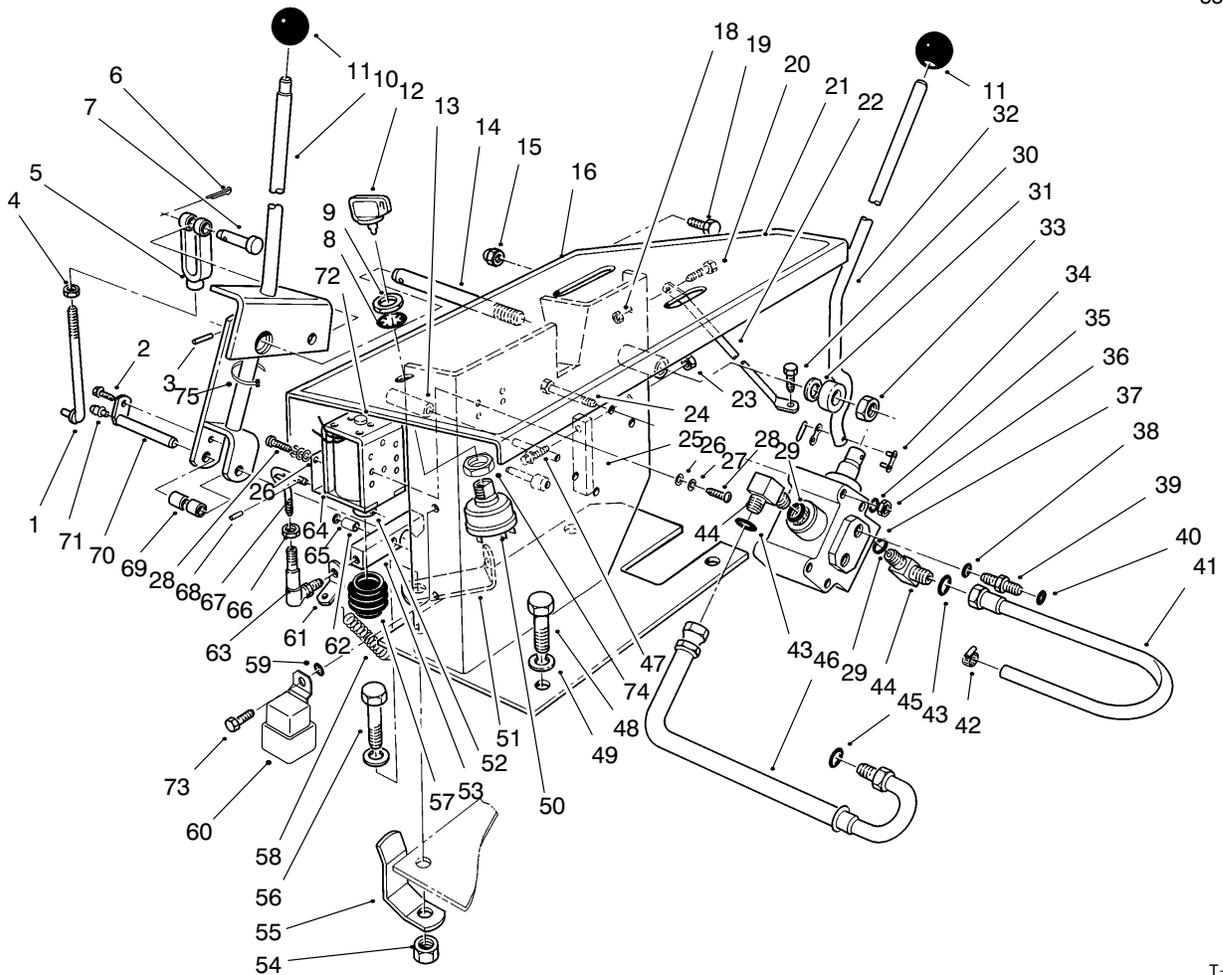

T-0958-3

CONTROL PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	5-1686	Rod-Adjusting	1	28	218-462	Screw-Machine	6
2	32144-112	Screw-Backing Plate	1	29	237-42	O-Ring	2
3	32121-23	Pin-Roll	1	30	46-8560	Screw-TAP	1
4	3220-3	Nut-Jam	1	31	3256-26	Washer-Flat	1
5	282-22	Yoke	1	32	72-8810	Asm-Handle, Valve	1
6	3272-6	Pin-Cotter	1	33	32153-5	Nut-Lock	1
7	283-2	Pin-Clevis	1	34	2710-16	Chain-Connecting Link	1
8	3254-5	Washer-Lock, Int. Tooth	1	35	3253-3	Washer-Lock	4
9	218-461	Nut-Hex	1	36	3217-5	Nut-Hex	4
10	95-7295	Handle & Latch	1	37	43-1950	Valve-Hydraulic Control	1
11	233-13	Knob-With Ring	2	38	237-78	O-Ring	2
12	63-8360	Key	2	39	340-92	Fitting-Straight (Incl. Ref. #38 & 40)	2
13	72-9060	Cushion-Solenoid Stop Latch Pin	1	40	237-21	O-Ring	2
14	72-8690	Shaft-Traction Clutch	1	41	59-4150	Hose-Return	1
15	32111-8	Nut-Lock, Cap	2	42	2412-36	Clamp-Hose	1
16	80-4030	Panel-Control	1	43	237-22	O-Ring	2
18	32128-33	Nut-Lock	1	44	340-77	Fitting-90° (Inc. Ref. #29 & 43)	2
19	322-26	Screw-HH	2	45	39-7310	O-Ring (Metric)	1
20	321-3	Screw-HH	1	46	59-4140	Hose-Pressure	1
21	80-3910	Decal-Control	1	47	3290-126	Screw-HWH	1
22	72-9110	Brace-Control Panel	1	48	11-0590	Screw-HH	3
23	3296-12	Nut-Lock	1	49	3253-21	Washer-Lock	4
24	321-14	Screw-HH	4	50	83-0020	Switch-Starter (Incl. Ref. #8 & 9)	1
25	72-9070	Pad-Bumper	1	51	72-9080	Bracket-Spring	1
26	3256-21	Washer-Flat	8				
27	3253-15	Washer-Lock	6				

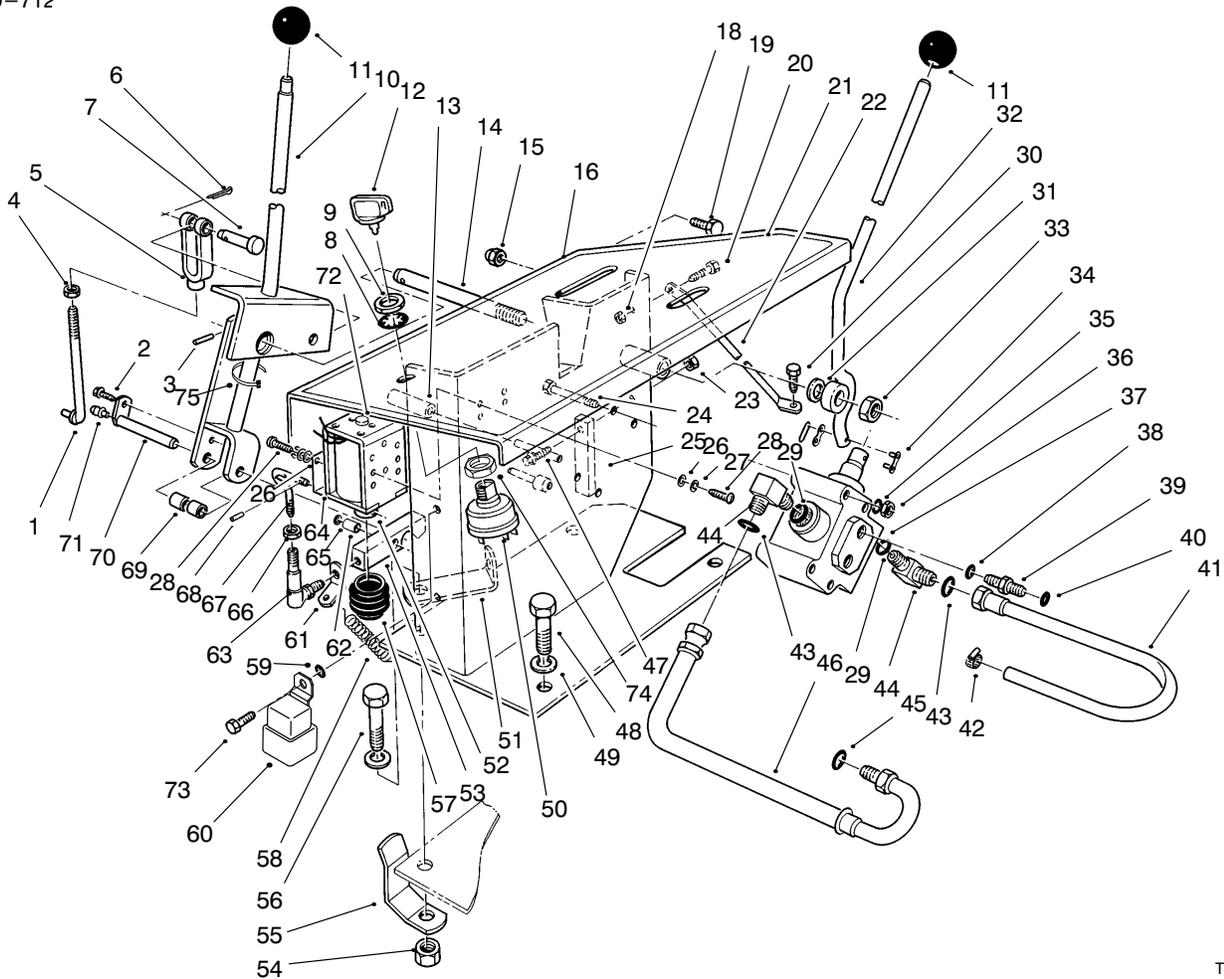


T-0958-3

CONTROL PANEL ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
52	72-4620	Plunger-Solenoid	1
53	72-8780	Latch-Clutch, Solenoid	1
54	32153-2	Nut-Lock	1
55	72-9050	Clip-Control Cover	1
56	323-7	Screw-HH	1
57	67-9510	Seal-Dust	1
58	66-4160	Spring	1
59	3254-8	Washer-Lock, Int. Tooth	1
60	70-1480	Relay	1
61	72-9090	Bracket-Spring Latch	1
62	256-312	Bushing	1
63	18-1720	Ball Joint	1
64	3290-418	Nut-Push On	1

Ref. No.	Part No.	Description	No. Used
65	80-3920	Clamp-Boot Solenoid	1
66	3296-13	Nut-Lock	1
67	72-8790	Rod-Solenoid Adjusting	1
68	32121-90	Pin-Roll	2
69	72-9140	Roller-Latch	2
70	72-9130	Pin-Roller Latch	1
71	302-18	Fitting-Grease	1
72	80-3960	Asm-Solenoid (Incl. Ref. #52)	1
73	321-5	Screw-HH	1
74	3296-42	Nut-Lock	1
75	3290-381	Tie-Cable	2
*	3290-379	Tie-Cable	2


*Not Illustrated

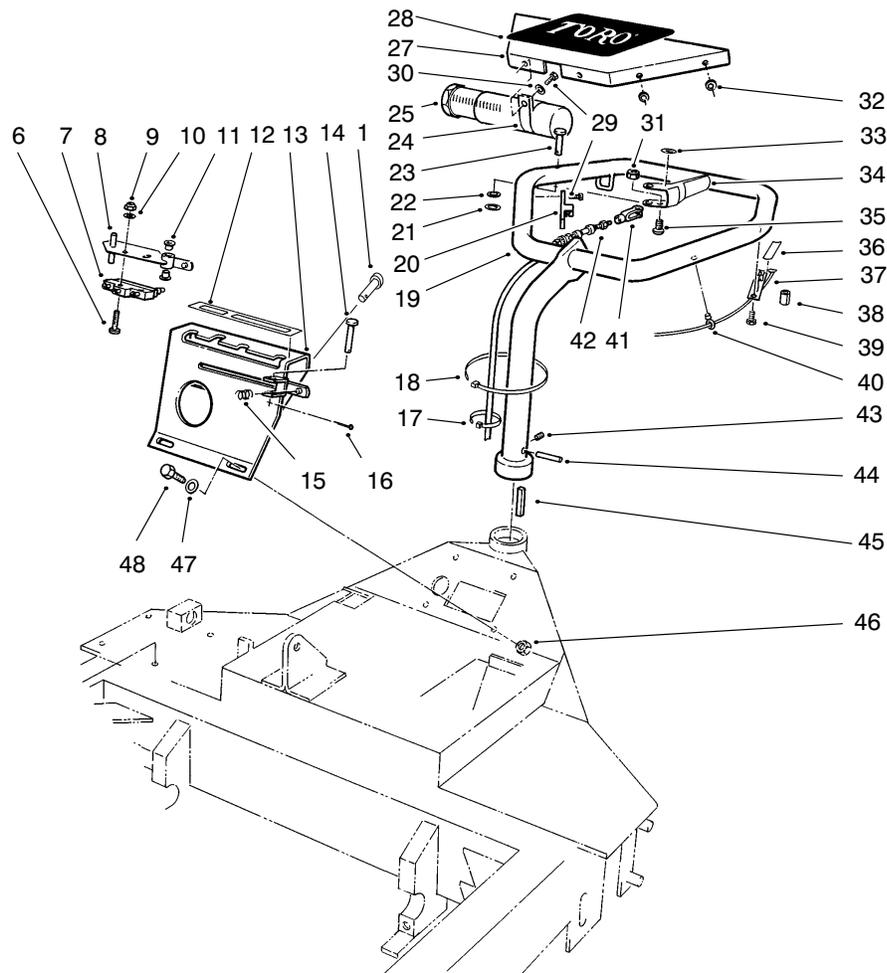

T-0235-1

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	283-89	Pin-Clevis	1	28	67-7320	Decal-Toro	1
6	32105-17	Screw-PPH	2	29	32144-64	Screw-TAP	6
7	29-6162	Switch	1	30	3256-61	Washer-Flat	2
8	66-4780	Hub & Plate (Incl. Ref. #11)	1	31	3296-12	Nut-Hex.	1
9	3296-9	Nut-Lock	2	32	3256-14	Washer-Flat	2
10	3256-53	Washer-Flat	2	33	59-9860	Decal-Brake	1
11	256-301	Bushing	2	34	59-9560	Handle-Control	1
12	66-4710	Decal-Shift Pattern	1	35	3252-3	Screw-Machine	1
13	66-4750	Plate-Shift	1	36	59-9870	Decal-Interlock	2
14	283-66	Pin-Clevis	1	37	40-9690	Interlock Handle & Switch (Incl. Ref. #40)	2
15	66-4850	Spring	1	38	72-9030	Cushion-Guard	2
16	3272-6	Pin-Cotter	1	39	32104-17	Screw-TAP	2
17	3290-381	Tie-Cable	5	40	17-9120	Mount-Wire	6
18	3290-379	Tie-Cable	3	41	282-26	Clevis	1
19	95-1902	Handle	1	42	59-4410	Cable-Brake	1
20	59-9730	Bracket-Cable	1	43	3247-2	Screw-Set	1
21	3290-418	Nut-Push On	1	44	32121-49	Pin-Roll	1
22	3-3287	Spacer-Rubber	1	45	13-2840	Key	1
23	283-11	Pin-Clevis	1	46	3296-29	Nut-Lock	4
24	2412-133	R-Clamp	2	47	3256-23	Washer-Flat	4
25	74-0720	Tube	1	48	322-4	Screw-HH	4
27	59-4530	Panel-Handle	1				

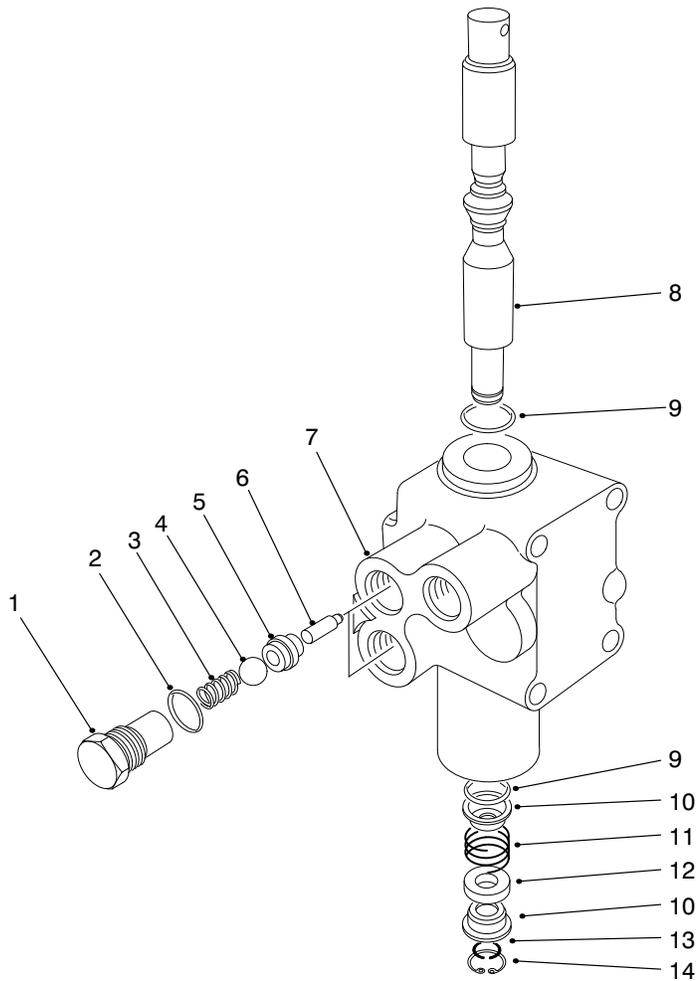


T-0280

CONTROL VALVE NO. 43-1950

Ref. No.	Part No.	Description	No. Used
1	22-8330	Plug	2
2	237-42	O-Ring	2
3	22-8340	Spring	2
4	22-8350	Ball	2
5	22-8370	Seat-Check Valve	2
6	22-8360	Pin-Cam	2
7		Body	1

Ref. No.	Part No.	Description	No. Used
8	22-8420	Spool	1
9	22-8500	O-Ring	2
10	22-8380	Retainer-Spring	2
11	22-8410	Spring	1
12	23-3030	Spacer	1
13	22-8480	Snap Ring Spool	1
14	22-8490	Snap Ring	1

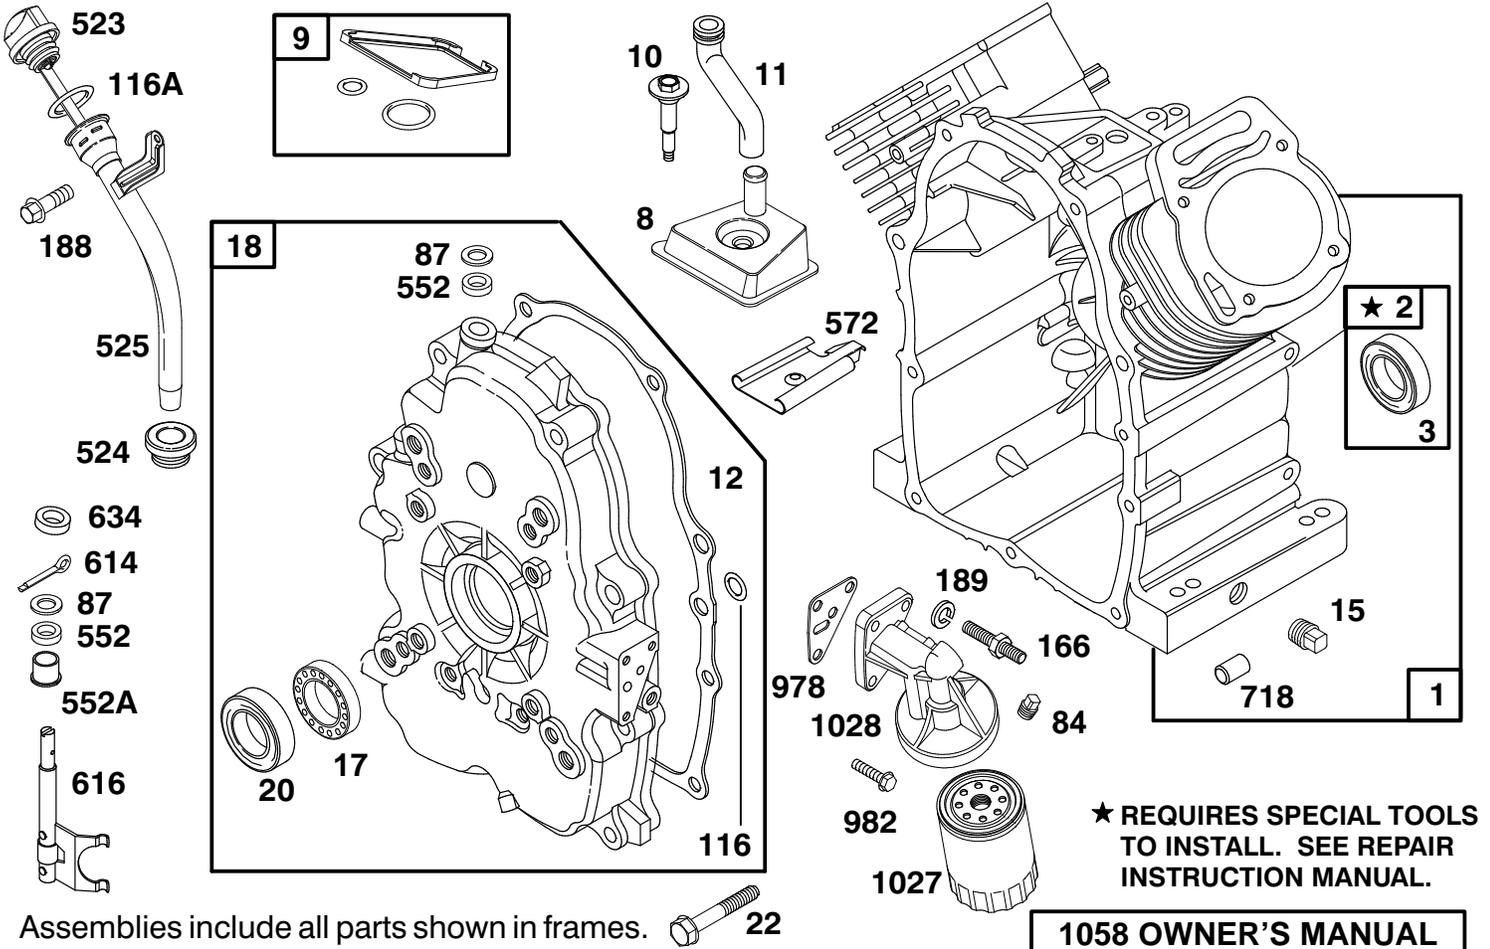


ENGINE BRIGGS & STRATTON MODEL 303447-1233-E1

Ref. No.	Part No.	Description	No. Used
1	808440	Cylinder Assembly	
2	808534	Bearing – Cylinder	
*3	805101	Seal – Oil	
8	807795	Breather Assembly	
*9	807688	Gasket – Breather	
10	805751	Screw – Hex.	
11	806083	Tube – Breather	
12	806190	Gasket – Crankcase Cover	
15	805048	Plug – Oil Drain	
17	805754	Bearing – Ball	
18	808502	Cover – Crankcase	
*20	805049	Seal – Oil	
22	805696	Screw – Crankcase Cover	
84	91488	Plug – Pipe	
*87	805054	Seal – Governor Shaft	
116	806191	O-Ring (Crankcase Cover)	
*116A	805386	O-Ring (Dipstick)	
166	805073	Stud – Oil Filter Adapter	

Ref. No.	Part No.	Description	No. Used
188	805247	Screw – Hex.	
189	805449	Lockwasher	
523	807977	Dipstick	
*524	281370	Seal – Fill Tube	
525	807976	Tube – Oil Fill	
552	805412	Bushing – Governor Shaft	
552A	805413	Bushing – Governor Shaft	
572	805197	Baffle – Breather	
614	806096	Pin – Cotter	
616	807596	Fork – Governor	
634	805416	Washer – Governor Shaft	
718	805103	Dowel – Crankcase	
*978	805250	Gasket – Oil Filter Adapter	
982	805030	Screw – Hex.	
1027	492932	Filter – Oil	
1028	808325	Adapter – Oil Filter	
1058	273685	Owner's Manual	

*Included in Gasket Set – Part No. 808390.

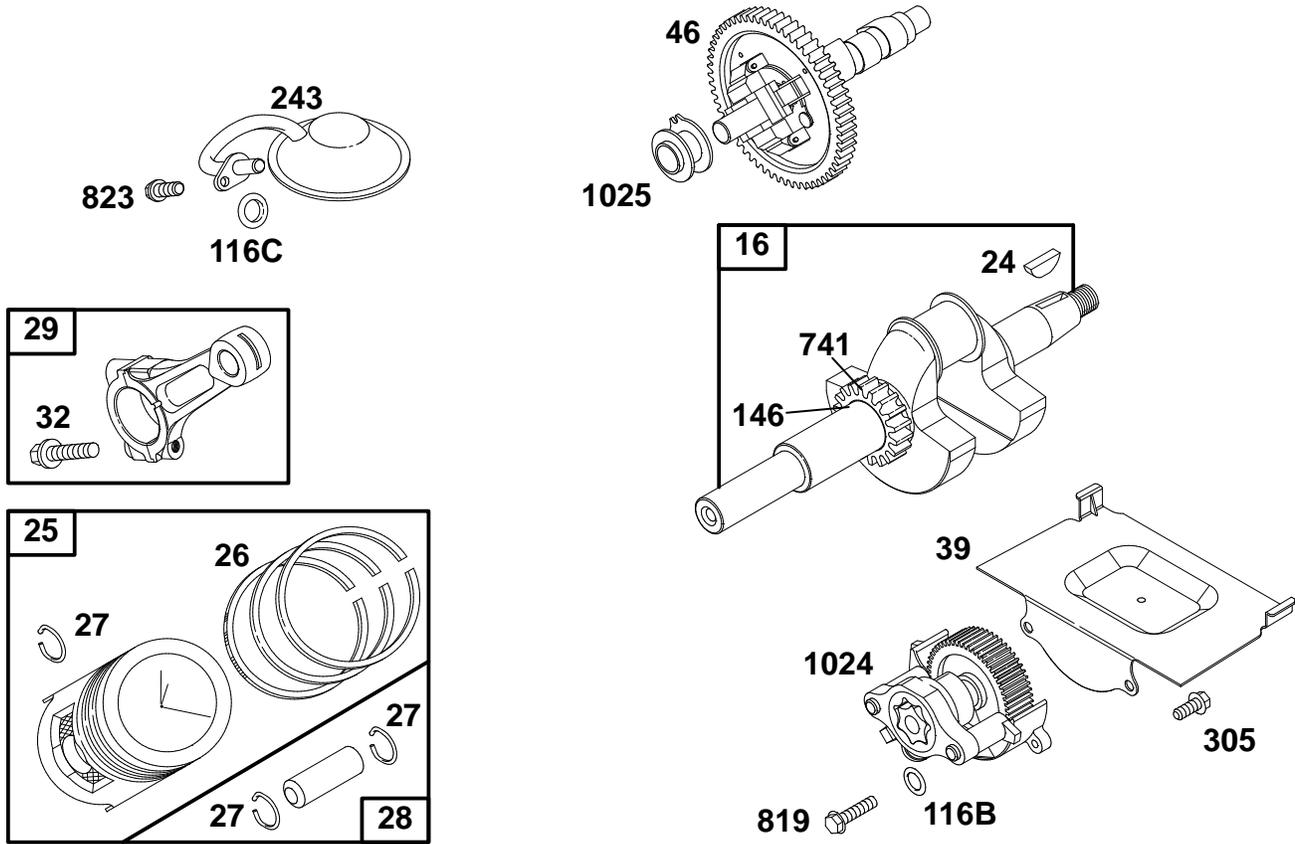





Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303447-1233-E1

Ref. No.	Part No.	Description	No. Used
16	808417	Crankshaft	
24	806066	Key - Flywheel	
25	807619	Piston Assembly (Standard)	
	807807	Piston Assembly (.010 O.S.)	
	807809	Piston Assembly (.020 O.S.)	
	807811	Piston Assembly (.030 O.S.)	
26	807620	Ring Set - Piston (Standard)	
	807808	Ring Set - Piston (.010 O.S.)	
	807810	Ring Set - Piston (.020 O.S.)	
	807812	Ring Set - Piston (.030 O.S.)	
27	805099	Lock - Piston Pin	
28	807621	Piston Pin Assembly	
29	807900	Rod - Connecting (Standard)	
	807809	Rod - Connecting (.020 U.S.)	

Ref. No.	Part No.	Description	No. Used
32	805395	Screw - Connecting Rod	
39	805654	Deflector - Oil	
46	807542	Gear - Cam	
*116B	805058	O-Ring (Oil Pump)	
*116C	805316	O-Ring (Pick - Up Tube)	
146	94196	Key - Timing	
243	807598	Screen - Oil Pump	
305	805406	Screw - Hex.	
741	805984	Gear - Timing	
819	805057	Screw - Hex.	
823	805317	Screw - Hex.	
1024	807644	Oil Pump Assembly	
1025	805313	Slider - Governor	

*Included in Gasket Set - Part No. 808390.

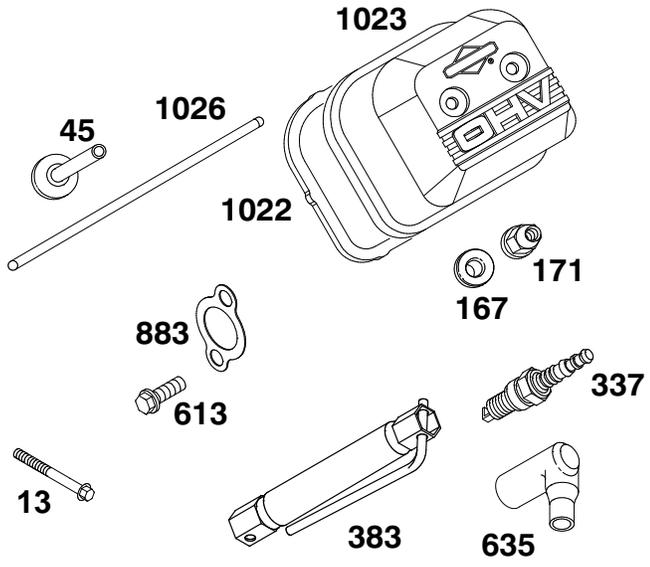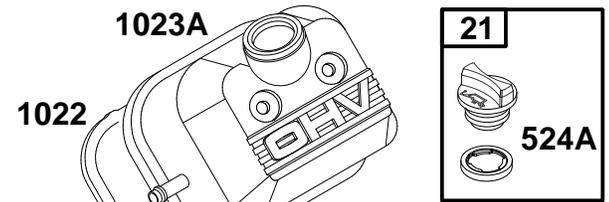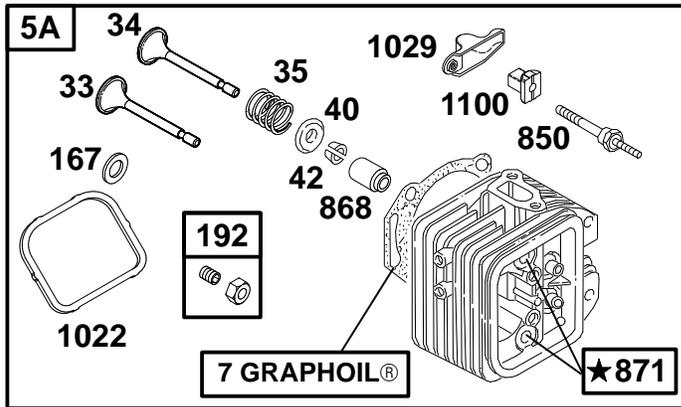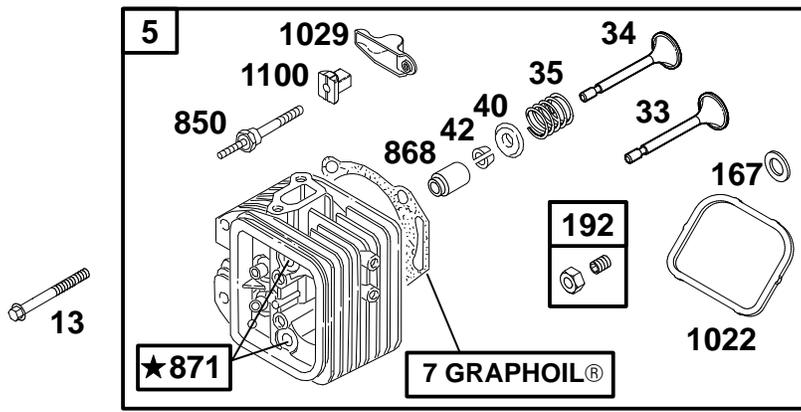

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.






Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303447-1233-E1

Ref. No.	Part No.	Description	No. Used
5	808381	Head – Cylinder (Cyl. #1)	
5A	808382	Head – Cylinder (Cyl. #2)	
*‡7	806085	Gasket – Cylinder Head	
13	805097	Screw – Cylinder Head	
21	491832	Dipstick/Fill Plug	
33	807681	Valve – Exhaust	
34	807680	Valve – Intake	
35	805937	Spring – Valve	
40	805092	Retainer – Valve Spring	
42	807683	Retainer – Valve	
45	262679	Tappet – Valve	
*‡167	805420	Washer – Valve Cover	
‡171	805019	Nut – Nylock	
192	807623	Screw – Valve Adjustment	
337	491055	Plug – Spark	
383	19374	Wrench – Spark Plug	

Ref. No.	Part No.	Description	No. Used
*‡524A	271983	Seal – Filler Plug	
613	805158	Screw – Hex.	
635	805529	Elbow – Spark Plug	
850	806037	Stud – Rocker Arm	
868	805094	Seal – Valve Guide	
871	805084	Guide – Valve	
*‡883	805024	Gasket – Exhaust	
*‡1022	806039	Gasket – Valve Cover	
1023	805100	Cover – Valve	
1023A	808032	Cover – Valve	
1026	805352	Rod – Push (Intake Valve)	
		Note: 805617 Rod – Push (Exhaust Valve)	
1029	806036	Arm – Rocker	
1100	806038	Pivot – Rocker Arm	

*Included in Gasket Set – Part No. 808390.
 ‡Included in Valve Overhaul Kit – Part No. 808392.

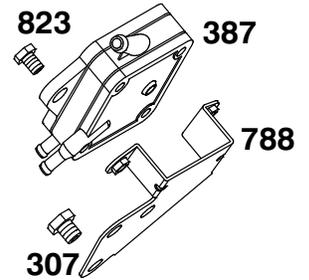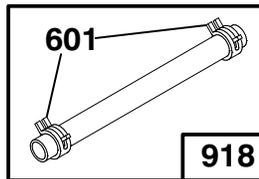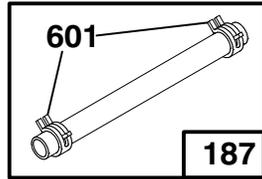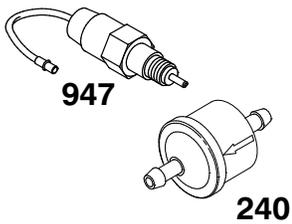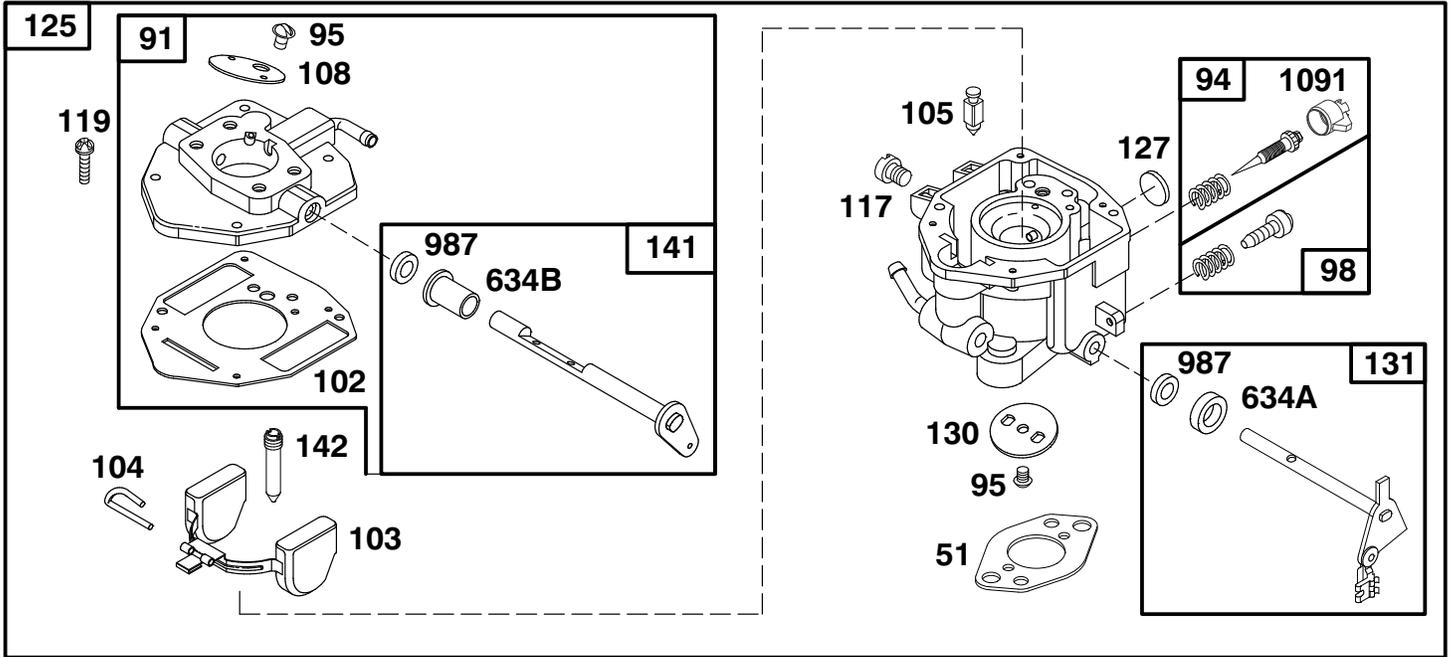

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 303447-1233-E1

Ref. No.	Part No.	Description	No. Used
*51	805700	Gasket - Carburetor Mtg.	
91	807919	Body - Upper Carburetor	
†94	808257	Valve - Idle Adjust	
95	805538	Screw - Valve Mtg.	
98	808177	Screw - Throttle Adj.	
†102	805541	Gasket - Carburetor Body	
103	805546	Float Assembly	
†104	805545	Pin - Float Hinge	
†105	805547	Valve - Fuel Inlet	
108	805539	Valve - Choke	
117	805852	Jet - Main	
	805537	Jet - Main (High Altitude)	
119	805540	Screw - Upper Body Mtg.	
125	808251	Carburetor Assembly	
†127	805559	Plug - Welch	
130	805554	Valve - Throttle	
131	807720	Shaft - Throttle	

Ref. No.	Part No.	Description	No. Used
141	807722	Shaft - Choke	
†142	805553	Nozzle - Carburetor	
187	296004	Line - Fuel (Cut to Required Length)	
240	493629	Filter - Fuel	
307	805025	Screw - Hex.	
387	491922	Pump - Fuel	
601	93053	Clamp - Hose	
†634A	805557	Collar - Throttle	
†634B	805543	Collar - Choke	
788	807685	Bracket - Fuel Pump	
823	805317	Screw - Mounting	
918	393815	Line - Vacuum (Cut to Required Length)	
947	807664	Solenoid	
†987	805544	Seal - Shaft	
†1091	805862	Cap - Limiter	

*Included in Gasket Set - Part No. 808390.

†Included in Carburetor Kit - Part No. 808273.

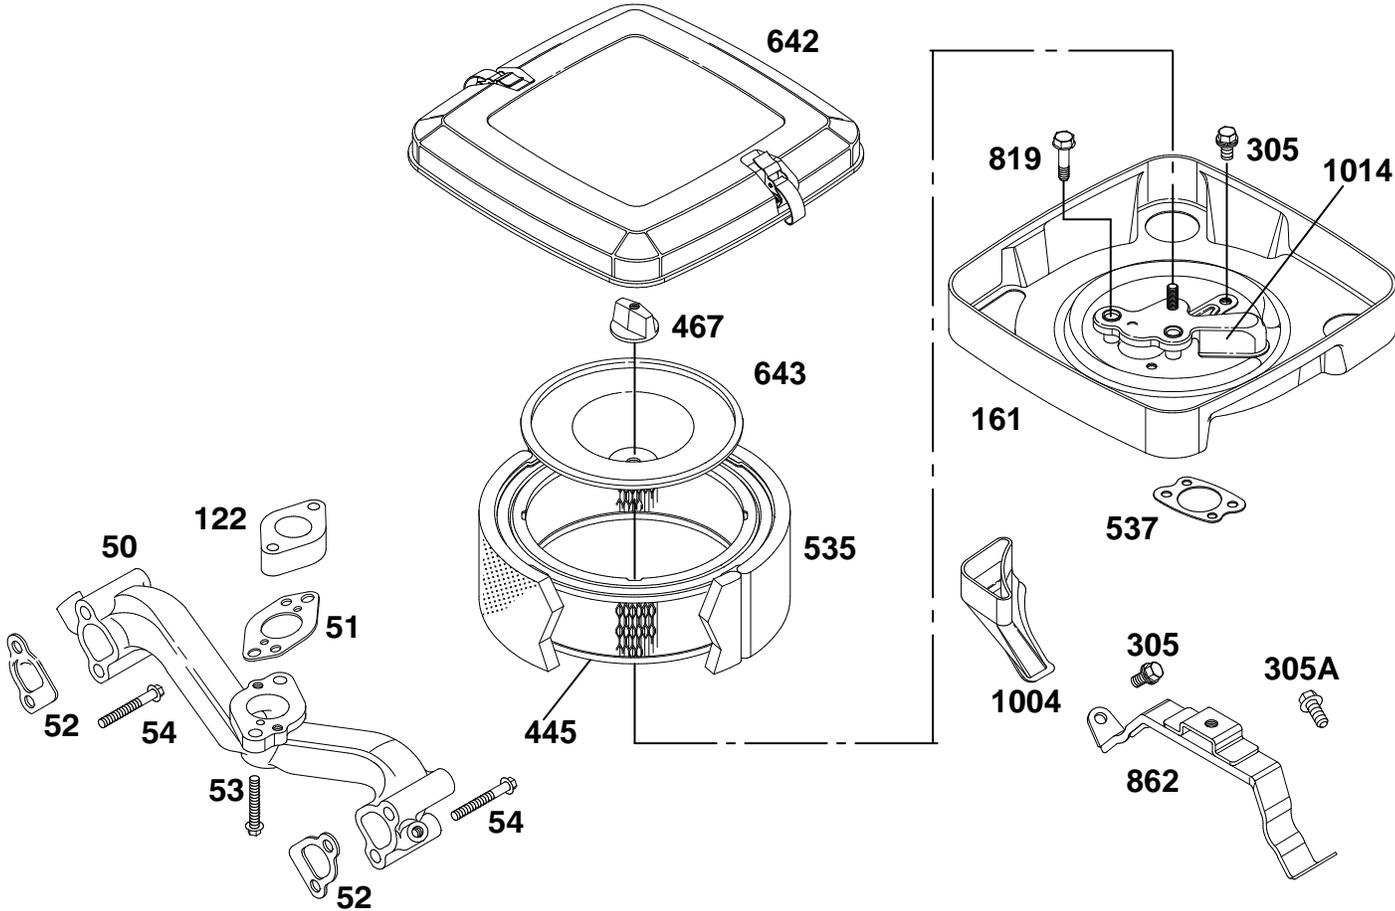


ENGINE BRIGGS & STRATTON MODEL 303447-1233-E1

Ref. No.	Part No.	Description	No. Used
50	805772	Manifold – Intake	
*51	805700	Gasket – Carburetor Mtg.	
*‡52	805023	Gasket – Intake Manifold	
53	805466	Screw – Hex.	
54	805006	Screw – Hex.	
122	805328	Spacer – Carburetor	
161	807857	Base – Air Cleaner	
305	805406	Screw – Hex.	
305A	805902	Screw – Hex. (M6 x 16 mm)	

Ref. No.	Part No.	Description	No. Used
445	394018	Filter – Air	
467	491875	Knob – Air Cleaner	
535	272490	Filter – Air	
*537	805655	Gasket – Air Cleaner	
642	807862	Cover – Air Cleaner	
643	805631	Plate – Air Cleaner	
819	805057	Screw – Hex.	
862	807796	Bracket – Air Cleaner	
1004	805632	Strap – Cleaner Mounting	
1014	807797	Shield – Carburetor	

*Included in Gasket Set – Part No. 808390.
 ‡Included in Valve Overhaul Kit – Part No. 808392.

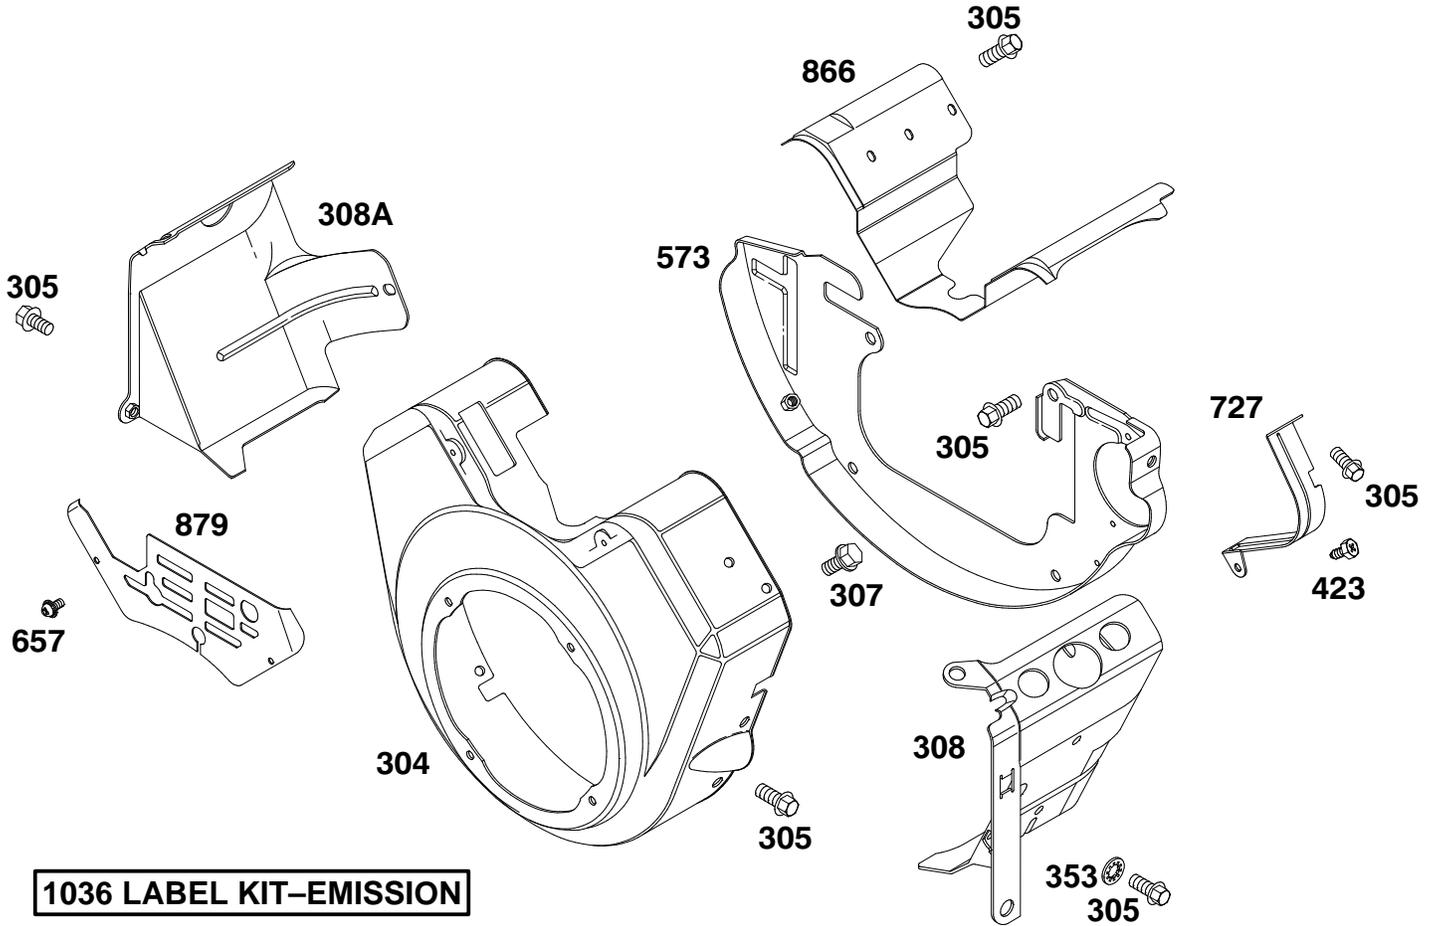


1036 LABEL KIT-EMISSION

ENGINE BRIGGS & STRATTON MODEL 303447-1233-E1

Ref. No.	Part No.	Description	No. Used
304	807898	Housing – Blower	
305	805406	Screw – Hex.	
307	805025	Screw – Hex.	
308	808309	Cover – Air Guide (Cyl. #1)	
308A	808098	Cover – Air Guide (Cyl. #2)	
353	806101	Washer – Lock	

Ref. No.	Part No.	Description	No. Used
423	805260	Screw – Phillips Hex.	
573	807663	Back Plate Assembly	
657	805009	Screw – Phillips	
727	805505	Shield – Starter	
866	805738	Valley Cover – Air Guide	
879	805841	Cover – Carburetor	
1036	499366	Label Kit – Emission	

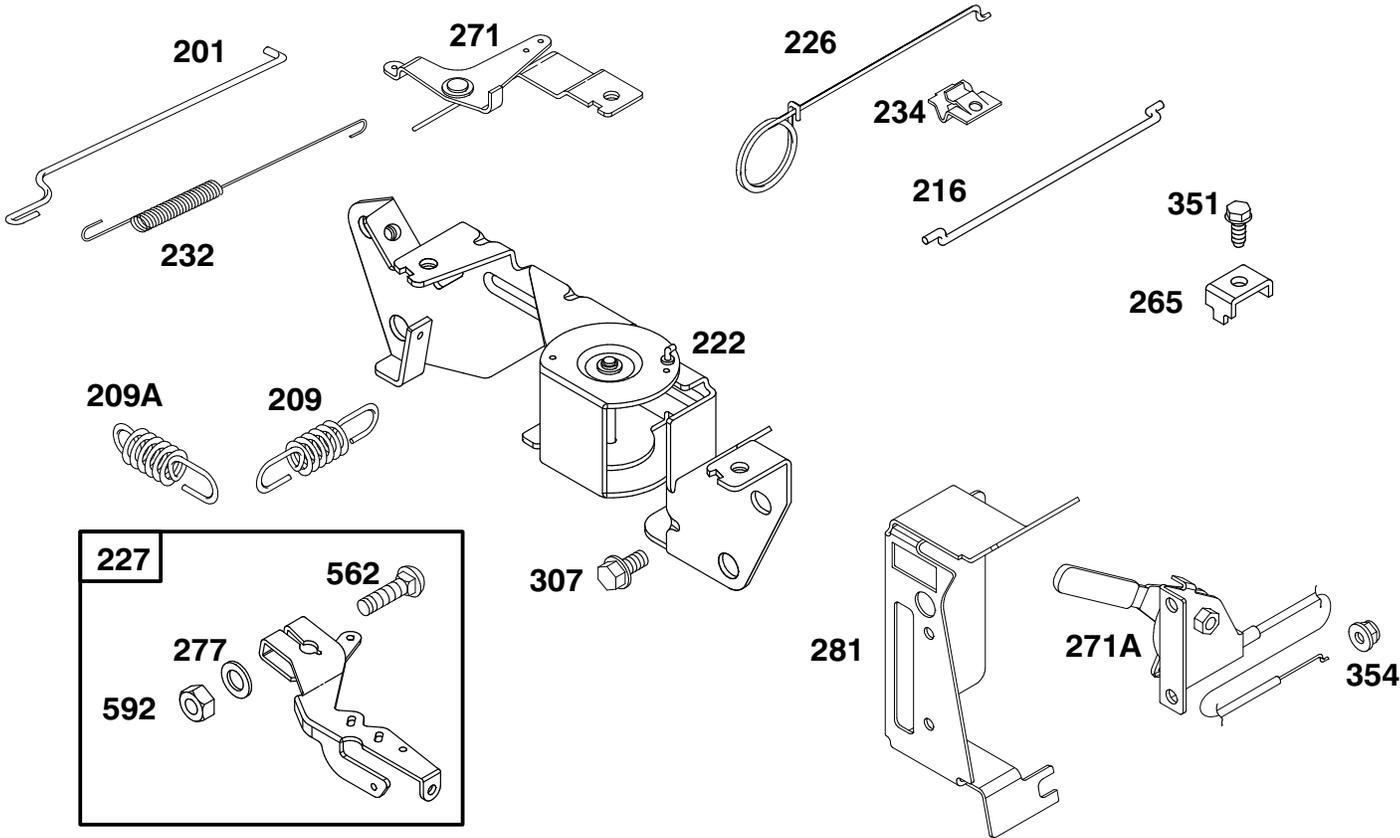


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303447-1233-E1

Ref. No.	Part No.	Description	No. Used
201	805480	Link - Governor	
209	805460	Spring - Governor	
209A	805453	Spring - Governed Idle	
216	805439	Link - Choke	
222	808115	Bracket - Governor Control	
226	805509	Rod - Hand Choke	
227	807528	Lever Assembly - Governor	
232	805465	Spring - Governor Link	
234	221372	Clip - Control Rod	
265	221535	Clamp - Casing	

Ref. No.	Part No.	Description	No. Used
271	807609	Control - Choke	
271A	808118	Lever - Control	
277	805018	Washer	
281	805627	Panel - Control	
307	805025	Screw - Hex.	
351	805762	Screw - Hex.	
354	805496	Nut - Hex.	
562	805381	Bolt - Carriage	
592	805383	Nut - Hex.	

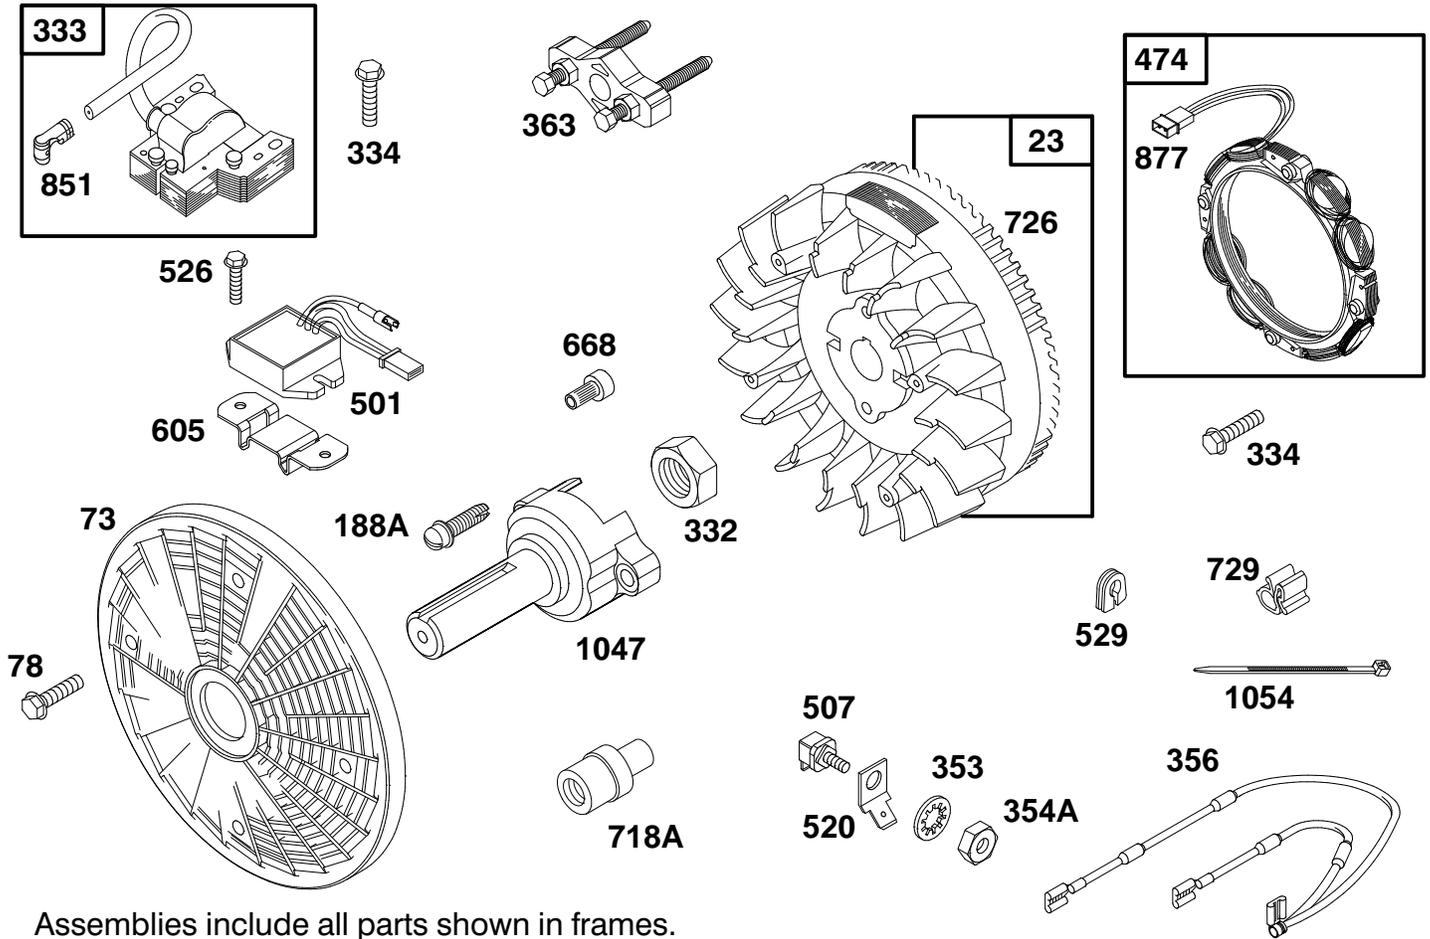


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303447-1233-E1

Ref. No.	Part No.	Description	No. Used
23	808128	Flywheel - Magneto	
73	805723	Screen - Rotating	
78	805447	Screw - Hex.	
188A	93847	Screw - Hex.	
332	806028	Nut - Hex.	
333	492341	Armature - Magneto	
334	805407	Screw - Hex.	
353	92791	Washer - Lock (Internal Tooth)	
354A	90576	Nut - Hex.	
356	493792	Wire - Stop	
363	19203	Puller - Flywheel	
474	393295	Stator - Alternator	
501	394890	Regulator - Alternator	


Ref. No.	Part No.	Description	No. Used
507	398525	Insulator	
520	93722	Terminal - Spade	
526	805448	Screw - Hex.	
529	805641	Grommet	
605	222934	Bracket - Regulator	
668	805402	Spacer	
718A	805613	Pin - Pilot	
726	808162	Gear - Flywheel Ring Includes Mounting Hardware.	
729	280470	Clip - Wire	
851	493880	Terminal - Ignition Cable	
877	393537	Wire - Alternator	
1047	262949	Shaft - Stub	
1054	280275	Tie - Cable	

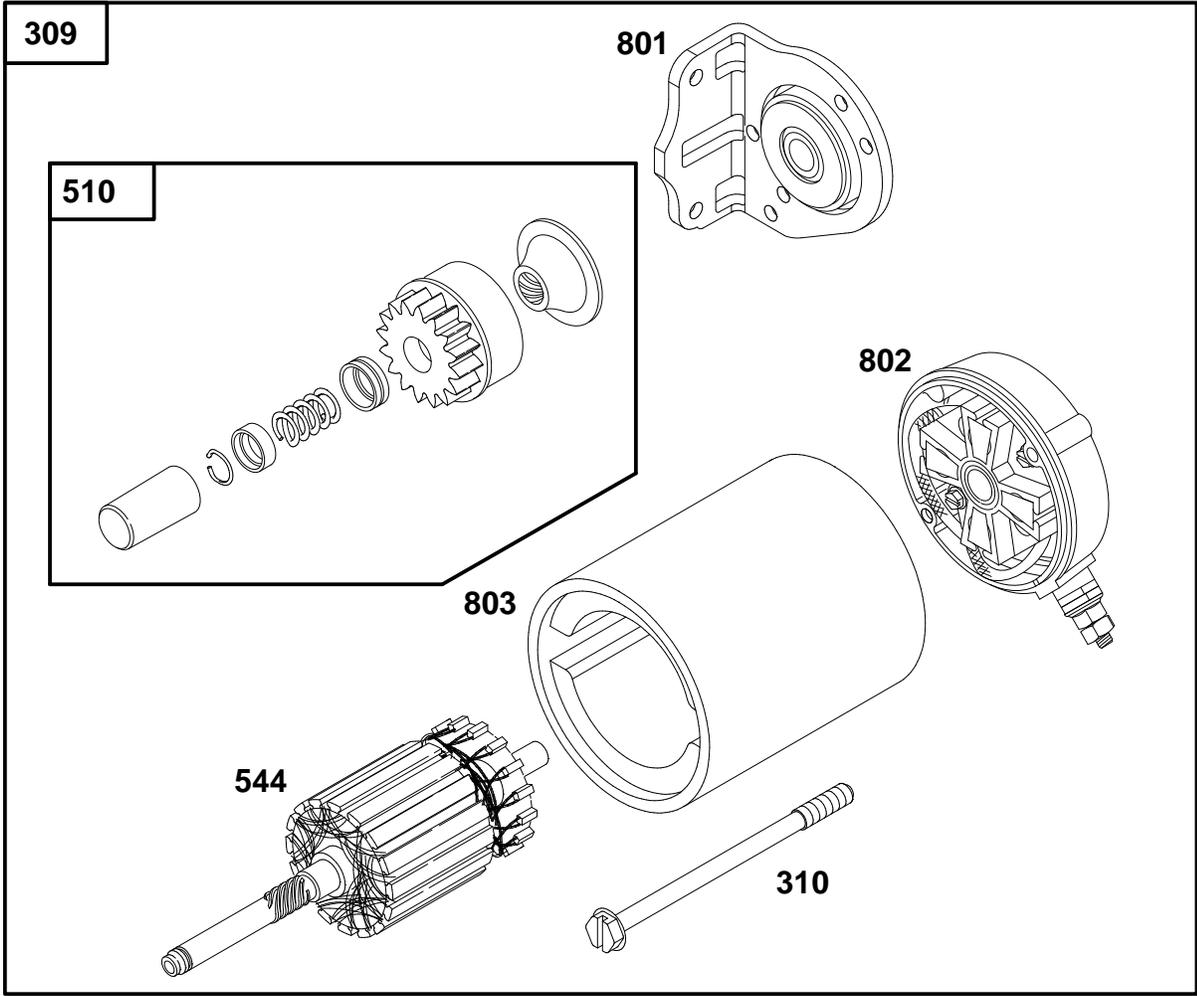

ENGINE BRIGGS & STRATTON MODEL 303447-1233-E1

Ref. No.	Part No.	Description	No. Used
188	805247	Screw-Hex.	
309	808106	Motor-Starter	
310	496880	Bolt-Thru	
510	496881	Drive-Starter	
544	496816	Armature-Starter	

Ref. No.	Part No.	Description	No. Used
801	496814	Cap-Drive	
802	496813	Cap-End Note: Includes 496887 Brush Set.	
803	496815	Housing-Starter	

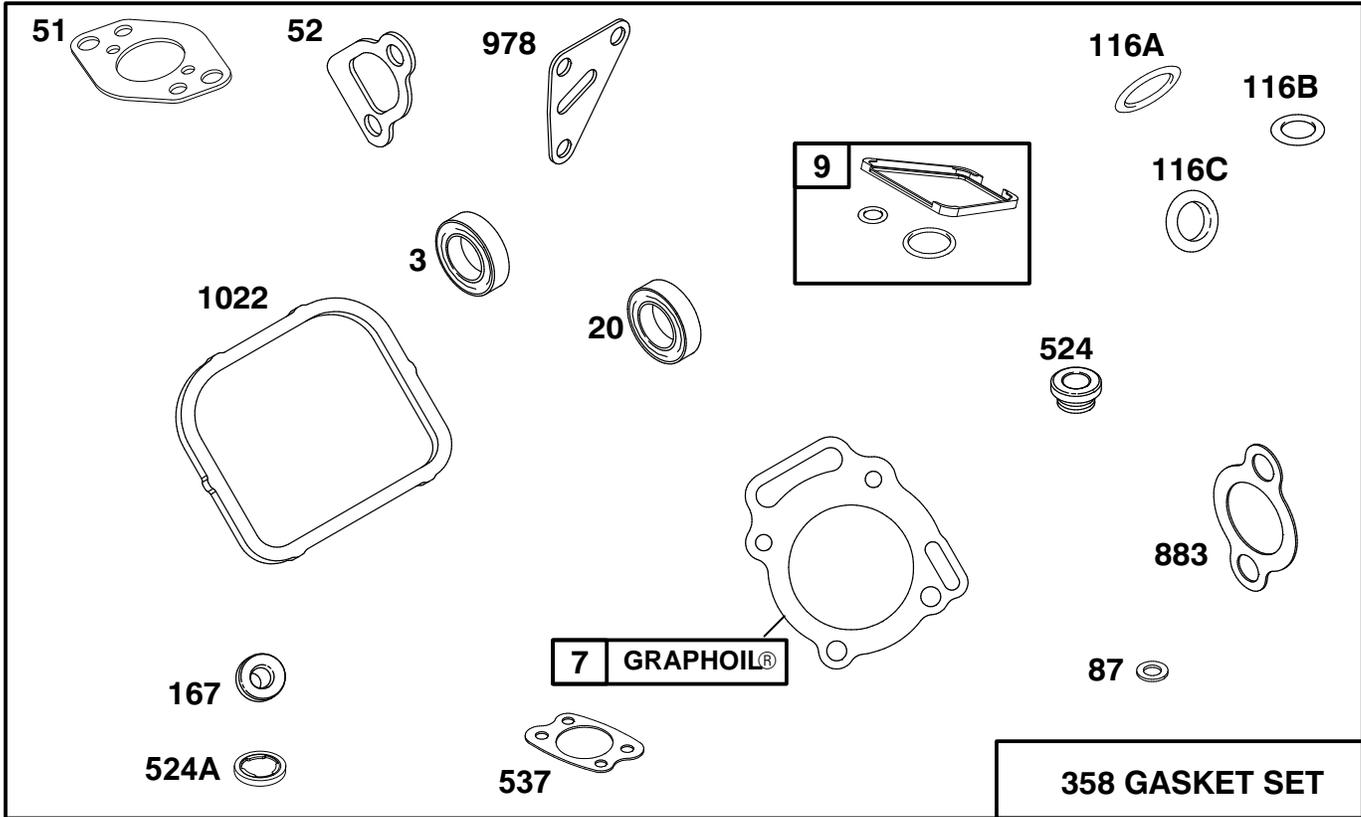

Assemblies include all parts shown in frames.



ENGINE BRIGGS & STRATTON MODEL 303447-1233-E1

Ref. No.	Part No.	Description	No. Used
*3	805101	Seal - Oil	
*‡7	806085	Gasket - Cylinder Head	
*9	807688	Gasket - Breather	
*20	805049	Seal - Oil	
*51	805700	Gasket - Carburetor Mtg.	
‡*52	805023	Gasket - Intake Manifold	
*87	805054	Seal - Governor Shaft	
*116A	805386	O-Ring	
*116B	805058	O-Ring (Oil Pump)	

Ref. No.	Part No.	Description	No. Used
*116C	805316	O-Ring (Pick - Up Tube)	
*‡167	805420	Washer - Valve Cover	
358	808390	Gasket Set	
*524	281370	Seal - Filler Tube	
*‡524A	271983	Seal - Filler Plug	
*537	805655	Gasket - Air Cleaner	
*883	805024	Gasket - Exhaust	
*978	805250	Gasket - Oil Filter Adapter	
*‡1022	806039	Gasket - Valve Cover	

*Included in Gasket Set - Part No. 808390.

‡Included in Valve Overhaul Kit - Part No 808392.

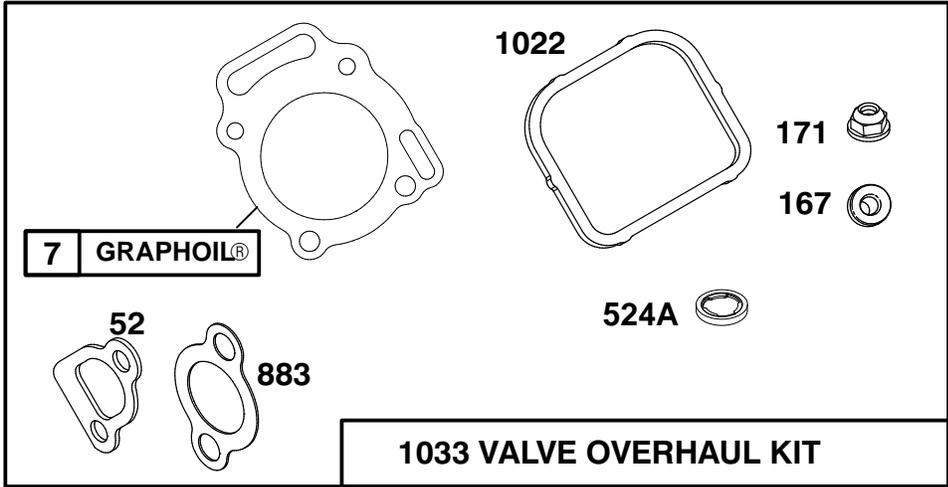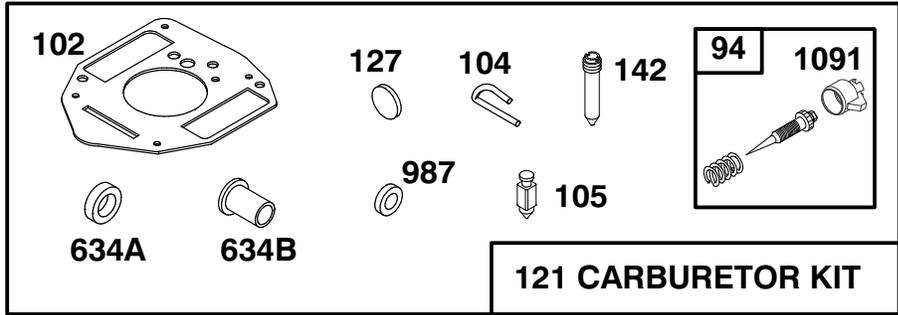

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303447-1233-E1

Ref. No.	Part No.	Description	No. Used
*‡7	806085	Gasket – Cylinder Head	
*‡52	805023	Gasket – Intake Manifold	
†94	808257	Valve – Idle Adjust	
†102	805541	Gasket – Carburetor Body	
†104	805545	Pin – Float Hinge	
†105	805547	Valve – Fuel Inlet	
121	808273	Carburetor Kit	
†127	805559	Plug – Welch	
†142	805553	Jet – Slow Speed	
*‡167	805420	Washer – Valve Cover	

Ref. No.	Part No.	Description	No. Used
‡171	805019	Nut – Nylock	
*‡524A	271983	Seal – Filler Plug	
†634A	805557	Collar – Throttle	
†634B	805543	Collar – Choke	
*‡883	805024	Gasket – Exhaust Manifold	
†987	805544	Seal – Shaft	
*‡1022	806039	Gasket – Valve Cover	
1033	808392	Overhaul Kit – Valve	
†1091	805862	Cap – Limiter	

*Included in Gasket Set – Part No. 808390.
†Included in Carburetor Kit – Part No. 808273.

‡Included in Valve Overhaul Kit – Part No. 808392.

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
3-3287	Spacer	20	18	6	44-7840	Thrust Plate	13	5	1
3-3287	Spacer	10	61	2	44-7850	Ring-Shaft Retaining	13	1	1
3-3287	Spacer-Rubber	25	22	1	44-7860	Kit-Retaining Ring Service	13	*	1
3-4685	Washer-Thrust	11	40	2	46-6560	Bushing	20	8	1
4-2390	Washer	18	42	1	46-8560	Screw-HH	9	3	17
5-0786	Key	11	39	2	46-8560	Screw-HHST	18	49	4
5-0930	Key	18	33	1	46-8560	Screw-TAP	6	46	2
5-1686	Rod-Adjusting	23	1	1	46-8560	Screw-TAP	23	30	1
5-2490	Bolt-Shoulder	10	60	2	59-2070	Bar-Keeper	6	49	2
5-7290	Spring	17	16	1	59-2080	Chain-Roller	3	12	2
7-3328	Bolt-Battery	17	34	2	59-2130	Pulley	6	24	1
10-4850	Spring-Compression	8	5	1	59-2140	Pulley	11	36	1
10-6830	Stud-Drive	9	42	8	59-2150	Bushing	11	37	1
11-0590	Screw-HH	23	48	3	59-2380	Cap-Dust	9	46	2
11-0590	Screw-HH	19	55	4	59-2390	Sprocket	6	47	2
11-0590	Screw-TAP	11	13	2	59-2390	Sprocket-Idler	9	33	2
13-1509	Arm-Tine	3	4	4	59-2420	Bushing	9	31	2
13-2840	Key	18	3	1	59-2430	Nut-Special	9	53	2
13-2840	Key	25	45	1	59-2500	Block	4	1	8
17-9120	Mount-Wire	25	40	6	59-2520	Plate-Wear RH	3	34	4
18-1720	Ball Joint	24	63	1	59-2550	Plate-Wear LH	3	40	4
19-2530	Switch-Start. Safety N.O.	8	1	2	59-2570	Spacer-Short	7	74	1
21-0360	Hex Nut (Metric)	11	45	1	59-2580	Spacer-Long	7	72	1
22-6090	Washer-Thrust	9	14	2	59-2600	Bushing	6	48	4
22-8330	Plug	26	1	2	59-2610	Shaft	7	55	2
22-8340	Spring	26	3	2	59-2620	Eye Bolt	7	54	4
22-8350	Ball	26	4	2	59-2710	Clip-Retaining	3	6	12
22-8360	Pin-Cam	26	6	2	59-2710	Clip-Retaining	6	28	3
22-8370	Seat-Check Valve	26	5	2	59-2770	Rod-Pivot	2	4	2
22-8380	Retainer-Spring	26	10	2	59-3270	Guard-Sprocket LH	9	*	1
22-8410	Spring	26	11	1	59-3280	Guard-Sprocket RH	9	50	1
22-8420	Spool	26	8	1	59-3490	Spring-Compression	2	3	4
22-8480	Snap Ring Spool	26	13	1	59-3510	Bushing-Short	3	27	8
22-8490	Snap Ring	26	14	1	59-3670	Tine-Coring,	4	6	12
22-8500	O-Ring	26	9	2	59-3690	Tine-Coring,	4	4	12
23-3030	Spacer	26	12	1	59-3790	Asm-Bushing	6	26	1
27-6380	O-Ring	15	72	2	59-4040	Asm-Hub	9	43	2
27-6390	Gasket	11	22	2	59-4100	Brake-Disc	12	58	1
27-6390	Gasket-Lever Housing	15	31	2	59-4140	Hose-Pressure	23	46	1
27-6420	Seal-Oil	15	45	3	59-4150	Hose-Return	23	41	1
27-7310	Decal-Refueling	20	14	1	59-4160	Hose-Cylinder	11	4	1
28-1400	Battery	17	49	1	59-4200	V-Belt	11	51	1
28-2480	Washer	9	21	2	59-4210	Key	6	27	1
28-3860	Cable-Battery, Ground	22	5	1	59-4220	Deflector-Kickout	3	39	4
28-4210	Solenoid	19	59	1	59-4310	Spacer	11	47	1
28-4250	Switch-Neutral N. C.	8	4	1	59-4320	Spacer	17	13	1
28-8080	Boot-Battery	17	24	1	59-4320	Spacer	11	16	2
29-6162	Switch	25	7	1	59-4350	Decal-Toro	1	1	1
37-5760	Pulley-Idler	7	71	1	59-4410	Cable-Brake	25	42	1
37-8300	Pin-Pump, Ring Dowel	13	17	2	59-4440	Decal-Greens Aerator	9	4	2
37-8340	Seal-Drive Shaft	13	21	1	59-4530	Panel-Handle	25	27	1
37-8360	O-Ring	13	3	1	59-9460	Guide	9	27	2
37-8380	End Plate	13	10	1	59-9470	Pad-Battery	17	35	1
37-8400	Kit-Pump Reservoir Service	13	16	1	59-9560	Handle-Control	25	34	1
37-8410	Asm-Valve, Control	13	19	1	59-9610	Plate-Backup	1	13	2
37-8420	Asm-Cap, Reservoir	13	12	1	59-9611	Plate-Backup	1	17	2
37-8440	Ring-Retaining	13	11	1	59-9620	Cover-Idler	9	35	2
37-8450	Spring-Flow Control	13	20	1	59-9630	Spacer	9	39	2
37-8460	Kit-Seal Service	13	*	1	59-9640	Plate-Handle	7	59	2
38-1830	Pulley	11	50	1	59-9650	Retainer-Bearing	9	22	4
39-7310	O-Ring (Metric)	23	45	1	59-9730	Bracket-Cable	25	20	1
39-8680	Asm-Fitting	13	14	1	59-9750	Asm-Latch	7	60	2
39-8700	Stud Pump Mounting	13	13	2	59-9770	Tine-Coring, Long Wear	4	3	12
39-8710	O-Ring	13	15	1	59-9860	Decal-Brake	25	33	1
40-9690	Interlock Handle & Switch	25	37	2	59-9870	Decal-Interlock	25	36	2
42-9850	Washer-Lock	18	17	4	59-9930	Decal-Danger	1	18	1
43-1950	Valve-Hydraulic Control	23	37	1	60-9760	Nut-Lock	16	2	1
44-2680	Shaft-Service Retaining	13	22	1	60-9870	Screw-Adjustment	7	64	2
44-7800	Pump-Steering	11	49	1	60-9920	Screw (Metric)	11	48	1
44-7810	Ring Service Kit Rotor Vane	13	6	1	60-9930	Frame Gauge	10	67	1
44-7820	Spring Pressure Plate	13	9	1	61-9150	Pulley	18	1	1
44-7830	Pressure Plate	13	8	1	61-9160	Stud	9	10	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3319-712

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
61-9160	Stud	3	28	8	72-4680	Turf Guard-Center	2	10	1
61-9780	Cap-Hub	9	19	2	72-4760	O-Ring	3	15	AR
62-4600	Tine-Coring,	4	8	12	72-4860	Bracket-Pump Support	11	56	1
62-4610	Block	4	7	8	72-8650	Arm-Cross Shaft	17	3	1
62-4660	Asm-Cylinder	11	20	1	72-8690	Shaft-Traction Clutch	23	14	1
62-4670	Clevis-Rod	16	16	1	72-8780	Latch-Clutch, Solenoid	24	53	1
62-4680	Head	16	12	1	72-8790	Rod-Solenoid Adjusting	24	67	1
62-4690	Piston	16	3	1	72-8810	Asm-Handle, Valve	23	32	1
62-4700	Rod	16	7	1	72-9030	Cushion-Guard	25	38	2
62-4720	Kit-Seal Repair	16	*	1	72-9050	Clip-Control Cover	24	55	1
62-4740	Timing Rod	3	*	4	72-9060	Cushion-Solenoid Stop	23	13	1
63-8360	Key	23	12	2	72-9070	Pad-Bumper	23	25	1
66-3160	Screw-HH	18	19	4	72-9080	Bracket-Spring	23	51	1
66-3290	Plate-Guide Shift	11	23	1	72-9090	Bracket-Spring Latch	24	61	1
66-3360	Arm-Brake Clutch	17	23	1	72-9100	Frame	7	68	1
66-3390	Retainer-Brake Spring	12	61	1	72-9110	Brace-Control Panel	23	22	1
66-3400	Rod-Brake, Take-up	12	65	1	72-9130	Pin-Roller Latch	24	70	1
66-3420	Bracket-Spring Brake	17	42	1	72-9140	Roller-Latch	24	69	2
66-3440	Cross Shaft-Clutch	17	27	1	74-0720	Tube	25	25	1
66-3470	Pulley-Idler	6	3	1	76-2300	Hose-Cylinder	11	3	1
66-3480	Shaft-Idler	6	5	1	76-2370	Guard-Chain	7	76	2
66-3560	Guide-Belt	17	12	1	76-2590	Brake-Caliper	12	63	1
66-3590	Bracket-Drive, Take-up	17	20	1	76-2610	Arm-Brake	17	43	1
66-3790	Sprocket	6	18	2	76-2620	Bracket	11	8	1
66-3810	Guide-Belt	7	67	1	77-5320	Tine-Spiker,	4	2	12
66-3840	Shaft-Power	6	21	1	77-5340	Tine-Spiker, 1/4" x 2 1/2"	5	8	28
66-3920	Bracket-Spring	11	28	1	77-5350	Clamp-Holder, Tine	5	3	8
66-3930	Clevis	11	5	1	77-5360	Plate-Holder, Turf	5	1	4
66-4030	Asm-Crank, Long	3	11	2	77-5370	Holder-Tine	5	4	4
66-4040	Asm-Crank, Short	3	22	2	77-5380	Guard-Turf	5	2	4
66-4060	Pin-Idler	1	10	1	80-0180	Lever-Cam	21	12	1
66-4070	V-Belt	6	33	1	80-0270	Lining	21	8	2
66-4110	Cover-Controls	1	3	1	80-0280	Anvil Sub ASM	21	10	1
66-4130	Cover-Coring Head	1	2	1	80-0290	Kit-Repair, Lining	21	*	1
66-4150	Spring	12	62	1	80-0310	Kit-Service	21	*	1
66-4160	Spring	18	27	1	80-2710	Asm-Front Axle	9	13	1
66-4160	Spring	24	58	1	80-2830	Housing Switch	8	3	1
66-4180	Spring	17	22	1	80-2840	Plunger-Switch	8	6	1
66-4210	Pulley-Idler	17	14	1	80-3810	Wire Harness-Coring	22	7	1
66-4270	Spring-Extension	6	12	2	80-3820	Bracket-Switch	6	44	1
66-4340	V-Belt	17	15	1	80-3830	Bolt-Shoulder	3	41	4
66-4380	Spacer	6	2	2	80-3890	Arm-Brake	12	64	1
66-4400	Guide-Belt	17	8	1	80-3910	Decal-Control	23	21	1
66-4440	Holder-Idler Pin	1	11	1	80-3920	Clamp-Boot Solenoid	24	65	1
66-4460	Spring	11	26	1	80-3930	Guard-Switch	7	85	1
66-4480	Actuator-Switch	6	41	1	80-3960	Asm-Solenoid	24	72	1
66-4520	Housing-Bearing	17	6	1	80-3970	Lever-Shift	15	7	1
66-4530	Bracket-Lockup	10	62	2	80-4030	Panel-Control	23	16	1
66-4590	Transaxle	11	52	1	82-8020	Clamp	9	6	2
66-4600	Clevis-Brake	12	71	1	83-0020	Switch-Starter	23	50	1
66-4680	Spacer	6	30	1	84-8480	Sleeve	7	57	2
66-4690	Spacer	6	19	1	92-3188	Diode	22	2	1
66-4710	Decal-Shift Pattern	25	12	1	92-3191	Diode	22	1	1
66-4730	Bearing	17	5	3	92-7941	Tine-Open Center,	4	9	12
66-4750	Plate-Shift	25	13	1	93-0177	Shaft	9	48	2
66-4780	Hub & Plate	25	8	1	93-0307	Nut-Retainer	9	51	2
66-4850	Spring	25	15	1	93-0309	Washer-Tab	9	45	2
66-8980	Asm-Wear Plate, RH	3	35	4	93-3101	Cap-Fuel	20	12	1
66-8990	Asm-Wear Plate, LH	3	36	4	94-1751	Guard-Pulley	6	9	1
66-9050	Decal-Shift	18	6	1	94-3417	Tine-Open Center	4	11	24
66-9070	Guard-Chassis LH	9	2	1	94-3418	Tine-Open Center,	4	14	12
66-9080	Keeper-Shift Lever	15	6	1	94-3419	Tine-Coring,	4	5	12
66-9110	Decal-Start	18	7	1	94-3420	Block	4	13	8
67-5360	Decal-Danger	10	69	2	94-3421	Block-Outboard	4	10	8
67-5360	Decal-Danger	7	88	1	94-3432	Pulley-Engine	18	47	1
67-7320	Decal-Toro	25	28	1	94-3433	Wire Harness-Main	22	3	1
67-9510	Seal-Dust	24	57	1	94-3435	Tank-Fuel	20	15	1
68-3110	Tube-Oil	11	31	1	94-3437	Plate-Mount, Engine	18	51	1
70-1480	Relay	24	60	1	94-3438	Muffler	18	28	1
72-4620	Plunger-Solenoid	24	52	1	94-3442	Frame	10	63	1
72-4640	Turf Guard-LH	2	11	1	94-5301	Spark Arrester	19	54	1
72-4660	Turf Guard-RH	2	9	1	94-5310	Decal-Choke/Throttle	18	9	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
94-5313	Asm-Exhaust Tube	18	18	1	95-7224	Gear-Idler	15	35	1
94-5314	Asm-Exhaust Tube	18	16	1	95-7225	Asm-Gear Cluster	15	36	1
94-5315	Mount-Muffler	18	24	1	95-7226	Spacer	15	37	1
94-5316	Guide-Belt	18	34	1	95-7227	Ring-Snap	15	38	2
94-5321	Guard-Muffler	20	4	1	95-7228	Shaft-Input	15	39	1
94-5341	Support-Muffler	18	48	1	95-7229	Spur Gear-Input Shaft	15	40	1
94-5343	Clamp-Battery	17	30	1	95-7230	Washer-Thrust	15	41	2
94-5349	ASM-Wire	17	46	1	95-7231	Asm-Seal & Retainer, Oil	15	42	2
94-5349	Cable-Battery, Positive	22	6	1	95-7232	Gear-Output	15	43	1
94-6800	Asm-Wire	18	50	1	95-7233	Pinion-Output	15	44	1
94-6800	Asm-Wire, Positive	22	9	1	95-7234	Housing-Axle	15	46	2
94-6802	Rod-Control, Throttle	18	26	1	95-7235	Screw-HHF	15	49	11
94-6803	Pipe-Exhaust	18	36	1	95-7236	Pin-Dowel	15	50	2
94-6804	Nipple-Pipe	18	22	1	95-7237	Screw-HH	15	51	8
94-6805	Asm-Stand Pipe, Fuel	20	11	1	95-7238	Bearing-Needle	15	54	2
94-6808	Handle	6	36	1	95-7239	Bearing-Needle	15	55	3
94-6809	Hose-Fuel	18	8	1	95-7240	Bearing-Ball	15	56	1
94-6809	Hose-Fuel	20	9	1	95-7241	Bearing-Needle	15	57	2
94-6810	Bracket- Adjuster, Throttle	18	12	1	95-7242	Bearing-Ball	15	58	2
94-6812	Shield	19	65	1	95-7243	Seal-Oil	15	60	1
94-6813	Guard-Chassis RH	9	30	1	95-7244	Washer	15	61	1
94-6814	Kit-3/8 Open Center Tine	4	*	1	95-7245	Shaft & Pinion	15	62	1
94-6815	Bracket-Front	20	13	1	95-7246	Bearing-Needle	15	63	2
94-6816	Bracket-Rear	20	21	1	95-7247	Shaft-Reverse Idler	15	64	1
94-6817	Grommet	18	15	1	95-7248	Spacer-Reverse Idler	15	65	1
94-6819	Clamp-R	18	5	1	95-7249	Idler-Reverse	15	66	1
94-6820	Elbow-Street 45°	18	23	1	95-7250	Gear-Spur (22 Teeth)	15	67	1
94-6821	Clamp-Wire	7	70	1	95-7251	Asm-Carrier, Differential	15	69	1
94-6822	Block-Inboard	4	12	4	95-7252	Asm-Carrier, Differential	15	70	1
94-6823	Kit- 1/4 Open Center Tine	4	*	1	95-7253	Bushing	15	71	2
94-6824	Boot-Terminal	19	52	3	95-7254	Washer-Thrust	15	73	1
94-9108	Wiring Harness-Coring	7	86	1	95-7255	Washer-Thrust	15	74	1
94-9109	Nut-Hex. Keys	18	20	2	95-7256	Race-Thrust	15	76	2
94-9111	Decal-Warning	6	35	1	95-7257	Washer	15	77	2
95-1837	Pin-Groove	21	3	1	95-7295	Handle & Latch	23	10	1
95-1841	Bracket-Floating	21	9	1	98-5004	Guide-Belt, Traction	17	38	1
95-1842	Pin-Adjustment	21	1	1	217-60	Wheel	10	64	2
95-1843	Pin-Actuator	21	6	1	218-461	Nut-Hex	23	9	1
95-1844	Housing-Live Side	21	5	1	218-462	Screw-Machine	23	28	6
95-1845	Plate-Backing	21	7	1	218-573	Fuse-5 Amp	22	8	1
95-1902	Handle	25	19	1	231-119	Tire	10	65	2
95-3106	Rod-Connecting	3	23	4	231-126	Tire	9	15	2
95-3107	Asm-Rubber Bushing	3	25	4	232-35	Stem-Valve w/Cap	9	24	4
95-3109	Sprocket-19 Tooth	11	38	2	233-13	Knob	11	27	1
95-3111	Chain-Roller	9	40	2	233-13	Knob-With Ring	23	11	2
95-3124	Bracket-Idler Pulley Pivot	6	53	1	237-21	O-Ring	11	2	2
95-3125	Bracket-Idler RH	6	14	1	237-21	O-Ring	23	40	2
95-3126	Bracket-Idler LH	6	8	1	237-22	O-Ring	23	43	2
95-7200	Housing-Shift Lever	15	5	1	237-42	O-Ring	26	2	2
95-7201	Asm-Rod, Shift	15	8	1	237-42	O-Ring	23	29	2
95-7202	Spring	15	9	2	237-42	O-Ring	12	74	2
95-7203	Ring-Quad	15	3	1	237-78	O-Ring	23	38	2
95-7204	Fork-Shifter	15	11	2	237-143	O-Ring	17	33	2
95-7205	Rod-Shifter (3rd & 4th)	15	12	1	241-123	Wheel	9	16	2
95-7206	Asm-Rod, Shift	15	13	1	242-50	Nut-Lug	9	1	8
95-7207	Rod-Shift (Low)	15	14	1	249-38	Keeper	1	16	2
95-7208	Axle (17-7/8" Long)	15	15	2	2412-36	Clamp-Hose	23	42	1
95-7209	Pin-Roll	15	4	1	2412-108	Clamp-Hose	20	10	1
95-7210	Screw-HH	15	17	8	2412-108	Clamp-Hose	19	58	1
95-7211	Gear-Ring	15	19	1	2412-110	Clamp	19	57	1
95-7212	Pin-Drive	15	20	1	2412-131	Clamp-R	17	44	2
95-7213	Block-Drive	15	21	2	2412-133	R-Clamp	25	24	2
95-7214	Pinion-Bevel	15	22	2	251-297	Bearing	6	4	6
95-7215	Shaft & Gear-Brake	15	23	1	251-297	Bearing-Ball	9	34	4
95-7216	Pinion Shaft & Bearing	15	25	1	251-312	Bearing	3	5	8
95-7217	Asm-Gear Cluster	15	27	1	251-312	Bearing	6	20	1
95-7218	Bushing	15	28	3	251-313	Bearing	6	31	1
95-7219	Stop-Shifter	15	29	1	252-51	Bearing-Needle	15	26	1
95-7220	Gasket-Case & Cover	15	30	1	252-76	Bearing-Thrust	15	68	2
95-7221	Gear-Shifting (3rd & 4th)	15	32	1	252-80	Washer-Thrust	15	16	6
95-7222	Gear-Shifting (1st, 2nd	15	33	1	252-95	Bearing-Needle	15	59	1
95-7223	Gear-Bevel	15	34	2	252-105	Bearing-Roller	9	23	4

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3319-712

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
253-158	Seal-Shaft	9	49	2	325-13	Screw-HH	9	37	2
253-166	Seal	6	38	1	329-6	Screw-HH	18	14	1
254-61	Cup-Bearing	9	7	2	3210-3	Screw-HH	18	38	1
254-62	Cone-Bearing	9	9	1	3211-10	Screw-HH	21	4	2
254-70	Cone-Bearing	9	8	1	3211-12	Screw-HH	2	1	4
254-105	Bearing-Roller	9	44	4	3211-12	Screw-HH	18	43	1
255-5	Ball-Steel	15	10	2	3217-5	Nut-Hex	23	36	4
256-216	Bushing	17	18	2	3217-5	Nut-Hex.	17	31	2
256-301	Bushing	25	11	2	3217-7	Nut	11	53	4
256-312	Bushing	24	62	1	3217-9	Nut-Hex	3	32	8
256-319	Bushing-Split	7	56	2	3217-26	Nut-Jam	6	43	1
2710-16	Chain-Connecting Link	23	34	1	3218-2	Nut-Jam	1	5	1
2710-16	Link-Connecting	9	41	2	3218-2	Nut-Jam	6	10	2
2710-20	Link-Single Pitch	10	66	2	3218-2	Nut-Jam	17	26	1
281-1	Plug-Oil	11	30	1	3218-3	Nut-Jam	11	17	1
281-2	Plug-Pipe	15	75	1	3218-5	Nut-Jam	7	63	2
281-11	Plug-Magnetic Drain	15	52	1	3218-13	Nut-Jam	19	61	2
282-22	Clevis	2	7	4	3219-1	Nut-Hex.	18	13	1
282-22	Yoke	23	5	1	3219-1	Nut-Hex.	12	60	3
282-26	Clevis	25	41	1	3219-3	Nut-Hex.	2	6	4
283-2	Pin-Clevis	23	7	1	3219-14	Nut-Hex.	19	62	2
283-2	Pin-Clevis	2	8	4	3220-1	Nut-Jam	12	59	2
283-2	Pin-Clevis	12	69	1	3220-3	Nut-Jam	23	4	1
283-11	Pin-Clevis	25	23	1	3220-4	Nut-Jam	21	2	1
283-66	Pin-Clevis	25	14	1	3220-7	Nut-Jam	16	15	1
283-66	Pin-Clevis	18	25	1	3220-7	Nut-Jam	9	18	2
283-67	Pin-Clevis	12	70	1	3242-9	Screw-Set, Sq. Head	17	25	1
283-74	Pin-Clevis	11	9	2	3242-9	Screw-Sq. Hd.	6	11	2
283-89	Pin-Clevis	25	1	1	3243-9	Screw-Set, Sq. Hd.	11	55	1
287-13	Link-Connecting	3	13	2	3245-2	Screw-Set	18	2	2
288-10	Cap-Pipe	18	21	1	3245-2	Screw-Set	6	25	1
2811-10	Elbow-Street	11	32	1	3245-33	Screw-Set	12	57	2
302-5	Fitting-Grease	9	17	3	3247-2	Screw-Set	11	42	4
302-5	Fitting-Grease	18	29	1	3247-2	Screw-Set	25	43	1
302-10	Grease Fitting	9	47	2	3252-3	Screw-Machine	25	35	1
302-18	Fitting-Grease	24	71	1	3253-3	Lockwasher	15	18	8
302-22	Fitting-Grease	8	2	1	3253-3	Washer-Lock	20	6	1
321-2	Screw-HH	17	40	1	3253-3	Washer-Lock	11	35	3
321-3	Screw-HH	23	20	1	3253-3	Washer-Lock	23	35	4
321-3	Screw-HH	17	36	2	3253-3	Washer-Lock	17	41	1
321-4	Screw-HH	11	12	2	3253-4	Washer-Lock	6	34	3
321-4	Screw-HH	9	25	2	3253-6	Washer-Lock	11	15	3
321-5	Screw-HH	17	37	1	3253-6	Washer-Lock	18	31	2
321-5	Screw-HH	24	73	1	3253-7	Washer-Lock	5	7	16
321-5	Screw-HH	12	75	2	3253-7	Washer-Lock	3	31	8
321-13	Screw-HH	11	34	3	3253-7	Washer-Lock	9	38	2
321-14	Screw-HH	23	24	4	3253-12	Washer-Lock	7	80	2
321-33	Screw-HH	7	78	2	3253-15	Washer-Lock	23	27	6
322-2	Screw-HH	1	4	1	3253-21	Washer-Lock	20	2	2
322-4	Screw-HH	25	48	4	3253-21	Washer-Lock	5	6	16
322-5	Screw-HH	11	43	4	3253-21	Washer-Lock	11	7	8
322-7	Screw-HH	6	32	3	3253-21	Washer-Lock	3	7	52
322-11	Screw-HH	19	53	4	3253-21	Washer-Lock	6	7	9
322-12	Screw-HH	20	16	3	3253-21	Washer-Lock	17	10	1
322-26	Screw-HH	23	19	2	3253-21	Washer-Lock	18	44	3
323-4	Screw-HH	5	5	16	3253-21	Washer-Lock	23	49	4
323-4	Screw-HH	17	11	4	3253-33	Washer-Lock	18	39	1
323-4	Screw-HH	7	66	2	3254-1	Washer-Lock	19	63	2
323-5	Screw-HH	11	41	2	3254-2	Washer-Lock	19	60	2
323-6	Screw-HH	20	1	2	3254-5	Washer-Lock, Int. Tooth	23	8	1
323-6	Screw-HH	11	6	3	3254-8	Washer-Lock, Int. Tooth	17	32	3
323-6	Screw-HH	6	6	2	3254-8	Washer-Lock, Int. Tooth	24	59	1
323-6	Screw-HH	3	37	8	3254-9	Washer-Lock, Int. Tooth	18	10	2
323-7	Screw-HH	24	56	1	3255-8	Washer-Lock, Ext. Tooth	19	67	2
323-7	Screw-HH	7	87	1	3255-9	Washer-Lock, Ext. Tooth	19	68	1
323-10	Screw-HH	11	54	4	3256-2	Washer-Flat	20	19	3
323-11	Screw-HH	3	38	8	3256-2	Washer-Flat	17	47	2
323-12	Screw-HH	17	19	1	3256-4	Washer-Flat	2	2	8
323-20	Screw-HH	6	52	2	3256-4	Washer-Flat	20	3	2
323-25	Screw-HH	6	40	1	3256-4	Washer-Flat	18	41	1
324-4	Screw-HH	18	32	1	3256-6	Washer-Flat	18	46	1
324-10	Screw-HH	18	35	2	3256-14	Washer-Flat	25	32	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
3256-21	Washer-Flat	23	26	8	3296-12	Nut-Lock	23	23	1
3256-22	Washer-Flat	20	7	1	3296-12	Nut-Lock	6	45	2
3256-22	Washer-Flat	9	26	2	3296-13	Nut-Lock	24	66	1
3256-22	Washer-Flat	17	29	3	3296-15	Nut-Lock	9	52	2
3256-22	Washer-Flat	12	73	1	3296-23	Nut-Lock	6	50	8
3256-23	Washer-Flat	18	40	1	3296-29	Nut-Lock	20	20	3
3256-23	Washer-Flat	25	47	4	3296-29	Nut-Lock	25	46	4
3256-24	Washer-Flat	17	9	3	3296-29	Nut-Lock	19	56	4
3256-24	Washer-Flat	6	39	4	3296-39	Nut-Lock	17	17	1
3256-24	Washer-Flat	18	45	1	3296-42	Nut-Lock	11	11	3
3256-25	Washer-Flat	11	46	1	3296-42	Nut-Lock	17	21	1
3256-26	Washer-Flat	2	12	6	3296-42	Nut-Lock	10	54	2
3256-26	Washer-Flat	23	31	1	3296-42	Nut-Lock	24	74	1
3256-26	Washer-Flat	9	36	2	3296-42	Nut-Lock	7	77	2
3256-26	Washer-Flat	6	51	4	3296-45	Nut-Lock	9	5	2
3256-44	Washer-Flat	3	2	8	3296-59	Nut-Lock	7	65	2
3256-44	Washer-Flat	6	17	2	3296-67	Nut-Hex	3	1	8
3256-53	Washer-Flat	25	10	2	3296-67	Nut-Lock	6	16	2
3256-57	Washer-Flat	20	17	4	3296-68	Nut-Lock	9	11	1
3256-61	Washer-Flat	25	30	2	32103-12	Nut-Wing	17	28	2
3256-69	Washer-Flat	17	4	11	32104-17	Screw-HHST	17	39	1
3257-5	Key	11	33	2	32104-17	Screw-TAP	25	39	2
3269-3	Rivet-Pop	3	33	24	32105-8	Screw-SHH	7	81	2
3269-4	Rivet-Pop	1	15	4	32105-17	Screw-PPH	25	6	2
3269-4	Rivet-Pop	7	62	4	32111-8	Cap & Locknut	1	6	1
3269-8	Rivet-Pop	1	7	4	32111-8	Nut-Lock, Cap	23	15	2
3272-1	Pin-Cotter	18	30	1	32120-11	Ring-Retaining	6	1	6
3272-4	Pin-Cotter	12	72	1	32120-11	Ring-Retaining	9	32	4
3272-6	Pin-Cotter	17	2	1	32120-22	Ring-Retaining	3	3	16
3272-6	Pin-Cotter	2	5	8	32120-65	Ring-Retaining	16	14	1
3272-6	Pin-Cotter	23	6	1	32121-16	Pin-Roll	17	1	3
3272-6	Pin-Cotter	25	16	1	32121-20	Pin-Roll	11	21	1
3272-10	Pin-Cotter	12	68	1	32121-20	Pin-Roll	15	79	1
3272-12	Pin-Cotter	11	18	2	32121-23	Pin-Roll	23	3	1
3272-13	Pin-Cotter	9	20	4	32121-49	Pin-Roll	25	44	1
3274-7	Screw-HSH	3	10	12	32121-90	Pin-Roll	24	68	2
3274-7	Screw-HSH	6	29	3	32128-19	Nut-Hex, Flange	7	69	3
3274-26	Screw-Socket Hd.	11	25	3	32128-33	Nut-Flange	7	82	2
3274-26	Screw-Socket Hd.	15	78	3	32128-33	Nut-Lock	23	18	1
3274-50	Screw-HSH	3	8	24	32136-5	Nut-Hex, Slotted	10	68	2
3274-50	Screw-HSH	6	23	4	32140-29	Screw-HWH	7	61	4
3274-84	Screw-HSH	20	5	1	32144-1	Screw-HHST	17	45	2
3289-4	Screw-HSFH	7	79	2	32144-4	Screw-HHST	19	64	2
3290-93	Screw-PH	18	11	2	32144-57	Screw-HHST	17	48	2
3290-126	Screw-HWH	23	47	1	32144-64	Screw-TAP	25	29	6
3290-224	Washer-Lock, Pyramidal	7	73	2	32144-73	Screw-TAP	7	83	1
3290-224	Washer-Pyramidal	11	29	1	32144-107	Screw-HHST	18	37	4
3290-224	Washer-Pyramidal	3	45	4	32144-112	Screw-Backing Plate	23	2	1
3290-238	Washer-Pyramidal	11	44	4	32151-34	Ring-Snap	15	2	1
3290-355	Pin-Hair, Cotter	1	12	1	32151-54	Ring-Retaining	8	7	1
3290-359	Screw-Machine, Hex. Hd.	6	13	2	32151-77	Ring-Retaining	7	58	2
3290-360	Screw-Hex. Head	6	42	1	32151-84	Ring-Snap	15	24	2
3290-378	Tie-Cable	7	84	1	32153-2	Nut-Lock	6	15	2
3290-379	Tie-Cable	24	*	2	32153-2	Nut-Lock	3	26	4
3290-379	Tie-Cable	25	18	3	32153-2	Nut-Lock	24	54	1
3290-379	Tie-Cable	11	19	1	32153-5	Nut-Lock	23	33	1
3290-381	Tie-Cable	25	17	5	32153-11	Nut-Lock	21	11	2
3290-381	Tie-Cable	24	75	2	33115-030	Screw-HH	11	14	2
3290-418	Nut-Push On	25	21	1	340-77	Fitting-90°	23	44	2
3290-418	Nut-Push On	24	64	1	340-82	Fitting	11	1	2
3296-9	Nut-Lock	25	9	2	340-92	Fitting-Straight	23	39	2
3296-12	Nut-Hex.	25	31	1					

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Greens Aerator traction unit and coring head each have two identification numbers: a model number and a serial number. The two numbers are stamped on a plate which is riveted to each frame member. In any correspondence concerning the Greens Aerator, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the machine.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied

with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

TABLE OF CONTENTS

Description	Page	Description	Page
Cover Assembly	1	Battery & Drive Take-up Assembly	17
Turf Guard Assembly	2	Engine, Pulley & Muffler Assembly	18-19
Tine Arm & Crank Assembly	3	Muffler Guard & Fuel Tank Assembly	20
Tine Block & Tine Selection	4	Brake Caliper Assembly No. 76-2590	21
Kit - Spiker 1/4" Model No. 09153 (Optional)	5	Electrical Schematic	22
Coring Head Drive Assembly	6-7	Control Panel Assembly	23-24
Switch Assembly - Coring Head	8	Handle Assembly	25
Chassis Assembly	9-10	Control Valve No. 43-1950	26
Transaxle, Brake & Pump Assembly	11-12	Engine Briggs & Stratton Model 303447	
Pump Assembly No. 44-7800	13	Type 1233-E1	27-37
Transaxle Assembly Model No. 66-4590	14-15	TORO Part Number Index	38-42
Hydraulic Cylinder Assembly No. 62-4660	16		

