



Wheel Horse<sup>®</sup>

**518xi**

**520xi**

# **Lawn and Garden Tractor**

Model No. 73470-8900001 & Up

Model No. 73540-8900001 & Up

Model No. 73541-8900001 & Up

---

## **Parts Catalog**

## ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

## Contents

Description	Page	Description	Page
Bumper and Hood Assembly .....	1	Electrical Assembly (Model 73470) .....	30
Steering Tower and Fuel Tank Assembly .....	2	Electrical Assembly (Models 73540 & 73541) ...	31
Attach A Matic and Hitch Assembly .....	3	Wiring Harness Routing (Model 73470) .....	32
Manual Steering Lower Assembly .....	4	Electrical Schematic Diagram (Model 73470) ...	33
Manual Steering and Tilt Assembly .....	5	Wiring Harness Routing (73540 & 73541) .....	34
Tie Rods, Spindle & Front Axle Assembly .....	6	Electrical Schematic Diagram (73540 & 73541) .	35
Hydro Trans Axle Assembly .....	7	Crankshaft (Model 73470) .....	36
Hydro Trans Axle Assembly (Continued) .....	8	Crankcase (Model 73470) .....	37
Transmission Assembly .....	9	Oil Pan Lubrication (Model 73470) .....	38
Transmission Assembly .....	10	Head, Valve and Breather (Model 73470) .....	39
Drive Shaft Assembly .....	11	Ignition and Electrical (Model 73470) .....	40
Hydro Lift Lower Assembly .....	12	Blower Housing & Baffles (Model 73470) .....	41
Hydro Lift Upper Assembly .....	13	Starting System (Model 73470) .....	42
Hood & Headlight Assembly .....	14	Fuel System (Model 73470) .....	43
Grille and Side Panel Assembly .....	15	Engine Controls (Model 73470) .....	44
Dash Assembly .....	16	Air Filter (Model 73470) .....	45
Fender, Footrest and Seat Assembly .....	17	Exhaust (Model 73470) .....	46
Fender, Footrest and Seat Assembly (Cont.) ....	18	Crankshaft (Model 73540 & 73541) .....	47
Smart Turn Rear Assembly .....	19	Crankcase (Models 73540 & 73541) .....	48
Hi-Lo Shift Assembly .....	20	Oil Pan/Lubrication (Models 73540 & 73541) ...	49
Upper Parking Brake Assembly .....	21	Head, Valve & Breather (Models 73540 & 73541)	50
Hydro Controls Assembly .....	22	Ignition/Electrical (Models 73540 & 73541) ....	51
Smart Turn Front Assembly .....	23	Blower Housing & Baffles (73540 & 73541) ....	52
Lower Parking Brake Assembly .....	24	Starting System (Models 73540 & 73541) .....	53
Cruise Control Assembly .....	25	Fuel System (Models 73540 & 73541) .....	54
Fender and Fuel System Assembly .....	26	Engine Controls (Models 73540 & 73541) .....	55
Wheel Assembly .....	27	Air Intake (Models 73540 & 73541) .....	56
Air Cooled Engine Assembly .....	28	Exhaust (Models 73540 & 73541) .....	57
Air Cooled Engine Assembly (Continued) .....	29		

## Accessories

Description	Model / Parts No.	Description	Model / Parts No.
42" Rear Discharge Mower (Model No. 73470 & 73540 Only) .....	78353	44" Side Discharge Low Cut Mower (Model No. 73541 Only) .....	78444
42" Rear Discharge Low Cut Mower (Model No. 73541 Only) .....	78442	48" Side Discharge Mower (Model No. 73470 & 73540 Only) .....	78363
44" Side Discharge Mower (Model No. 73470 & 73540 Only) .....	78357	48" Recycler Mower (Model No. 73470 & 73540 Only) .....	78364
44" Recycler Mower (Model No. 73470 & 73540 Only) .....	78358	48" Side Discharge Low Cut Mower (Model No. 73541 Only) .....	78448

## Accessories (Continued)

52" Side Discharge Mower (Model No. 73470 & 73540 Only) .....	78370	44" Two-Stage Snowthrower** .....	79366
52" Recycler Mower (Model No. 73470 & 73540 Only) .....	78375	48" Snow/Dozer Blade** .....	79355
52" Side Discharge Low Cut Mower (Model No. 73541 Only) .....	78452	ROPS .....	79210
60" Side Discharge Mower (Model No. 73470 & 73540 Only) .....	78395	Rear Wheel Weights .....	81115
60" Side Discharge Low Cut Mower (Model No. 73541 Only) .....	78469	Flush Mount Rear Wheel Weights .....	81117
36" Tiller* .....	79375	Front Wheel Weights .....	81214
50" Grader Blade* .....	79356	Tire Chains .....	82146
42" Single Stage Snowthrower** .....	79365	Dual Wheel Adapter .....	94–2050
		Rear Attach–A–Matic .....	95–4220
		Clevis Hitch .....	94–7800

**Note:** \* Requires 95–4220

\*\* Requires 81115

## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR .....	as required	HWHTF .....	hex washer head thread forming
ASM .....	assembly	INC .....	incorporated
CARR .....	carriage	LH .....	left hand
DEG .....	degrees	PH .....	pan head
FH .....	flat head	PPH .....	Phillips pan head
GA .....	gauge	PTO .....	power take off
HF .....	hex flange	RH .....	right hand
HFV .....	hex flange washer	SFH .....	slotted fillister head
HH .....	hex head	SH .....	square head
HHF .....	hex head flange	SHWH .....	slotted hex washer head
HHST .....	hex head self tapping	SPH .....	slotted pan head
HJ .....	hex jam	STD .....	standard
HOC .....	height-of-cut	TAP .....	self tapping
HS .....	hex socket	TH .....	truss head
HSBH .....	hex socket button head	TTH .....	Torx truss head
HSFH .....	hex socket flat head	WH .....	wing head
HSH .....	hex socket head		
HWH .....	hex washer head		

## Important Format Explanations


This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

### Service Assemblies

Parts within service assemblies have reference numbers in the form X:Y. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in part lists and as callouts in illustrations.

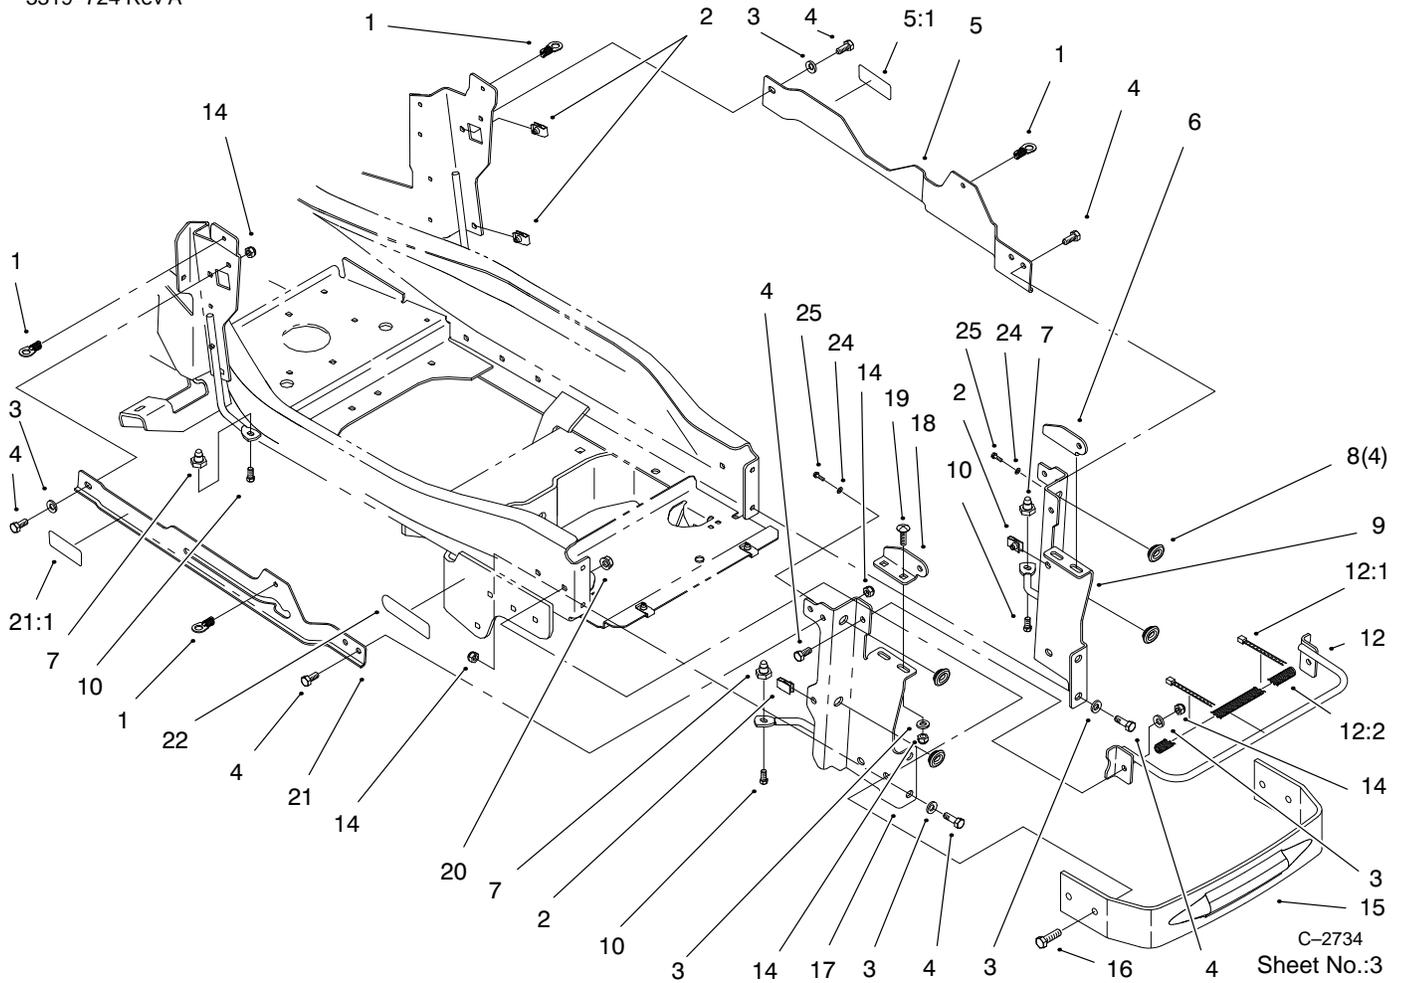

## Bumper and Hood Assembly

Ref. No.	Part No.	Qty.	Description
1	95-4013	4	Latch Assembly
2	107069	6	Nut-Panel
3	3256-23	12	Washer-Flat
4	322-3	12	Screw-HH
5	98-5064-03	1	Support ASM (Only On: 73470, 73540)
5	98-5070-03	1	Support ASM (Only On: 73541)
5:1	98-5014	1	Decal-Warning (Only On: 73470, 73540)
5:1	98-5015	1	Decal-Warning (Only On: 73541)
6	94-7995-03	1	Bracket-Hinge Lower LH
7	95-3989	4	Mount-Sidepanel
8	94-7910	4	Grommet
9	95-4082-03	1	Hood Support LH
10	46-8093	4	Screw-TAP
12	98-7203	1	Hood Support ASM
12:1	95-4258	1	Cover-Brace
12:2	614249	2	Tie Strap
14	3296-29	16	Nut-Lock
15	94-2308-03	1	Bumper-Frame
16	323-7	4	Screw-HH
17	95-4081-03	1	Hood Support RH

Ref. No.	Part No.	Qty.	Description
18	94-7994-03	1	Bracket-Hinge Lower RH
19	3230-16	4	Screw-CARR
20	3296-39	4	Nut-Lock
21	98-5061-03	1	Support ASM (Only On: 73470, 73540)
21	98-5063-03	1	Support ASM (Only On: 73541)
21:1	98-5014	1	Decal-Warning (Only On: 73470, 73540)
21:1	98-5015	1	Decal-Warning (Only On: 73541)
22	92-8747	2	Decal-Attach A Matic
24	3256-61	2	Washer-Flat (Only On: 73541)
25	32144-42	2	Screw-HH TAP (Only On: 73541)
26	98-1617	1	Clamp-Tube (Only On: 73551, 73550)
27	93-8069	2	Decal-Hot Surface (Only On: 73551, 73550)

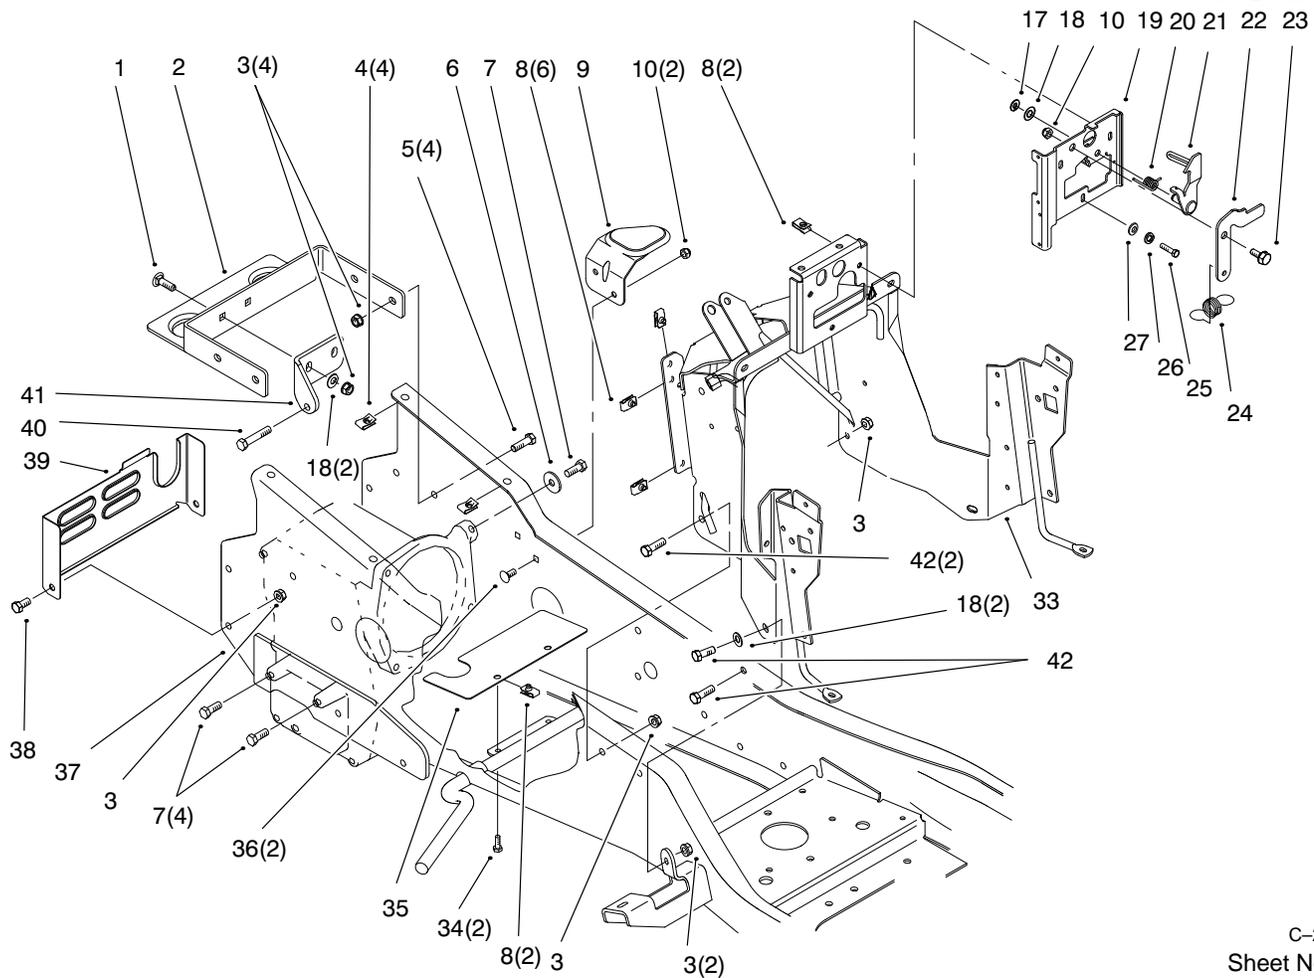


C-2719  
Sheet No.:4

## Steering Tower and Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description
1	3231-25	2	Screw-CARR
2	94-7740-03	1	Support - Gas Tank
3	3296-39	10	Nut-Lock
4	94-2413	4	U-Nut
5	323-7	4	Screw-HH
6	2844	1	Washer-Flat
7	3235-22	5	Screw-HH
8	107069	10	Nut-Panel
9	95-3961-03	1	Support-Fuel Tank
10	3296-29	3	Nut-Lock
17	105797	1	Ring-Retaining
18	3256-24	5	Washer-Flat
19	95-3892-03	1	Bracket-Latch
20	95-4165	1	Spring-Torsion
21	95-3899	1	Latch Lever
22	95-3900	1	Tension Lever-Latch
23	37-8771	1	Bolt-Shoulder
24	95-3895	1	Spring-Extension
25	321-4	3	Screw-HH
26	3253-3	3	Washer-Lock
27	3256-22	3	Washer-Flat
33	94-7643-03	1	Tower ASM
34	321-4	2	Screw-HH
35	95-4246	1	Baffle-Fan
36	3230-1	2	Screw-CARR
37	94-2083-03	1	Frame

Ref. No.	Part No.	Qty.	Description
38	323-4	2	Screw-HH
39	95-4005-03	1	Cover-Rear
40	94-7972	1	Screw-HH
41	94-7739-03	1	Strap-Torque
42	323-6	4	Screw-HH

1 2 37 3 4 5 6

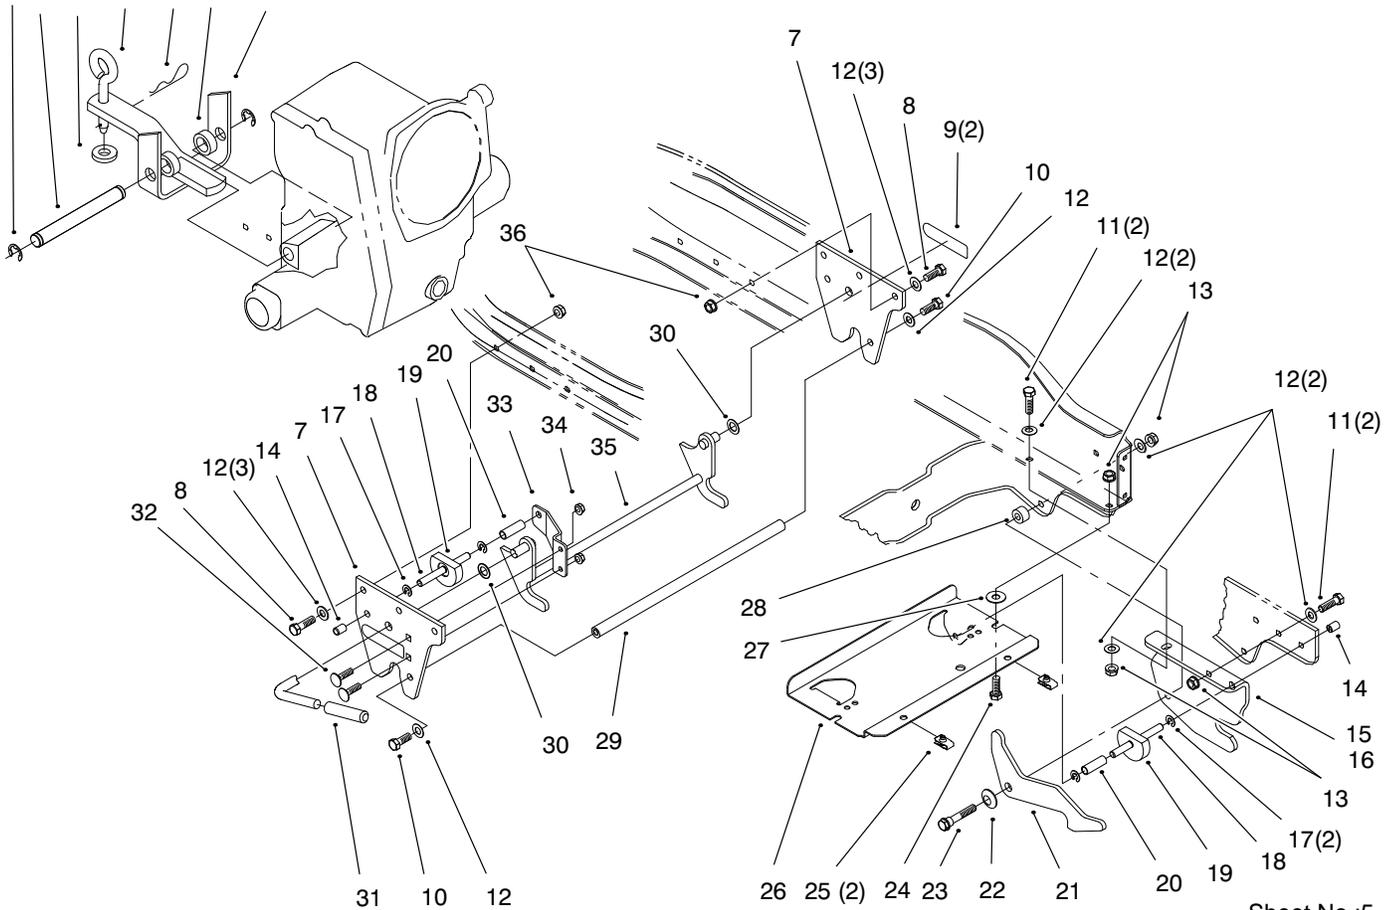


Sheet No.:5

## Attach A Matic and Hitch Assembly

Ref. No.	Part No.	Qty.	Description
1	5618	2	Ring-Retaining
2	105269	1	Pin-Hitch
3	106634	1	Pin-Attachment
4	9335054	1	Hairpin
5	9791204	2	Spacer
6	98-8083	1	Hitch ASM
7	94-2251-03	2	Plate-Hitch
8	323-44	6	Screw-HH
9	98-1632	2	Decal-Attach A Matic
10	3235-22	2	Screw-HH
11	323-7	4	Screw-HH
12	3256-24	16	Washer-Flat
13	3296-39	8	Nut-Lock
14	105316	3	Cap-Rod
*15	94-2230-03	1	Hanger RH
16	94-2231-03	1	Hanger LH
17	105797	6	Ring-Retaining
18	94-2256	3	Rod-Lock
19	94-2258	3	Lock-Latch
20	8616	3	Spring-Compression
21	94-7777-03	2	Latch-Pulley Box
22	3290-221	2	Washer-Spring
23	92-7674	2	Bolt-Shoulder
24	323-6	2	Screw-HH
25	107069	2	Nut-Panel
26	94-2304-03	1	Tray-Battery

Ref. No.	Part No.	Qty.	Description
27	3-4685	2	Washer-Thrust
28	94-2233	2	Spacer
29	94-2475	1	Rod-Spacer
30	98-1629	2	Washer
31	9038	1	Grip
32	3230-2	2	Screw-CARR
33	94-7855-03	1	Mid Bracket ASM
34	3296-29	2	Nut-Lock
35	94-2250-03	1	Latch ASM
36	108881	6	Nut-Hex
37	3256-26	1	Washer-Flat

\* Not illustrated

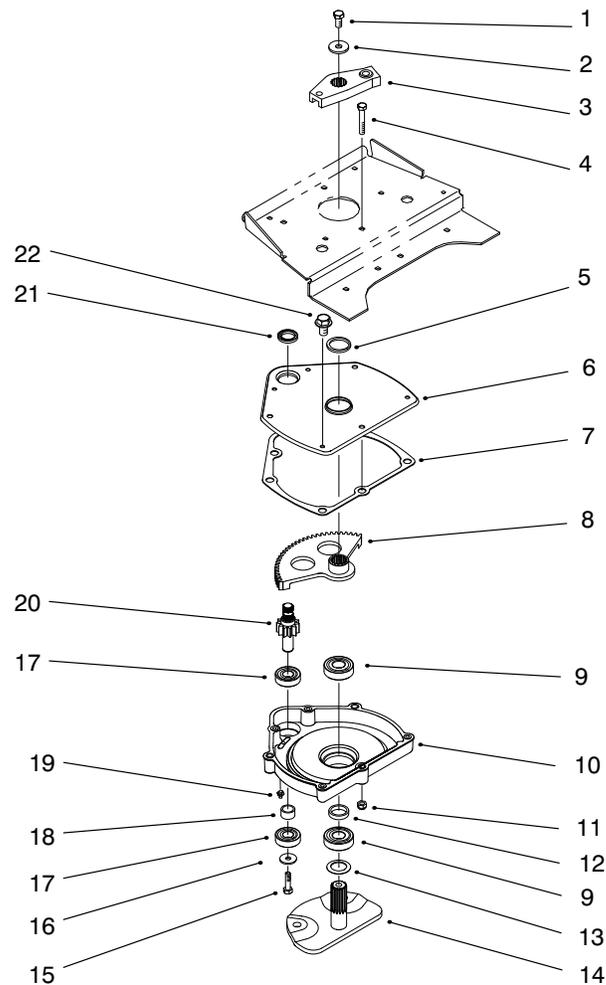


Sheet No.:6

## Manual Steering Lower Assembly

Ref. No.	Part No.	Qty.	Description
1	98-3052	1	Screw-Thread Locking
2	2844	1	Washer-Flat
3	94-2140	1	Arm-Upper
4	322-10	3	Screw-HH
5	103118	1	Seal-Oil
6	94-2134-03	1	Cover
7	94-2135	1	Gasket
8	94-2137	1	Gear-Sector
9	251-82	2	Bearing-Ball
10	94-2133	1	Housing-Steering
11	3296-29	3	Nut-Lock
12	94-2218	1	Spacer-Output Shaft
13	3256-42	1	Washer-Flat
14	94-2142-03	1	Arm-Lower
15	98-3498	1	Screw-HH
16	3256-82	1	Washer
17	38-7820	2	Bearing-Ball
18	94-2217	1	Spacer-Input Shaft
19	302-5	1	Fitting-Grease
20	94-2136	1	Pinion-Input Shaft
21	94-7856	1	Seal-Oil
22	32144-10	4	Screw-HH

Ref. No.	Part No.	Qty.	Description



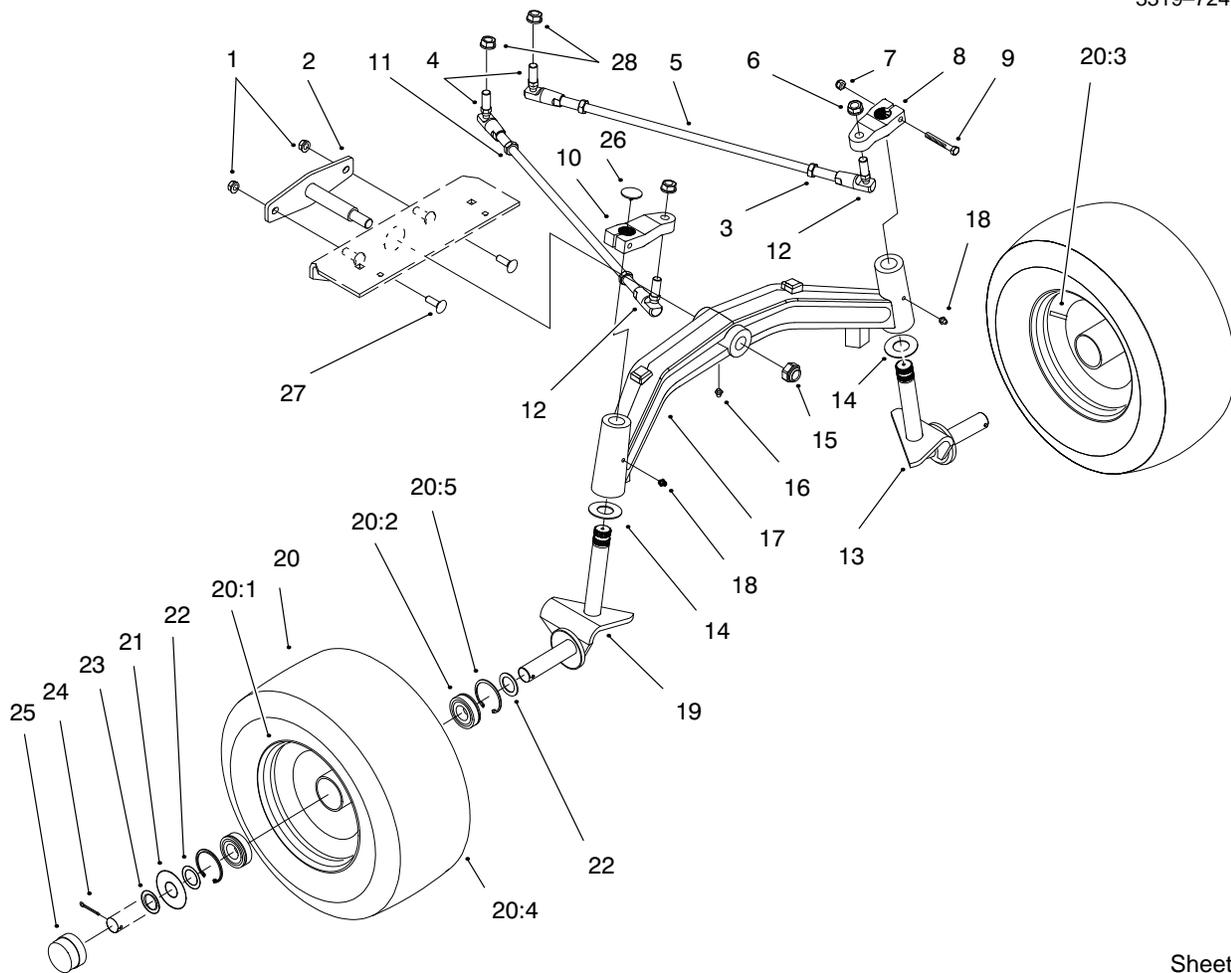


Sheet No.:14

## Tie Rods, Spindle & Front Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-39	2	Nut-Lock
2	94-2205-03	1	Pivot Pin
3	3220-5	2	Nut-Hex
4	94-2239	2	Balljoint-LH Thread (Only On: 73470)
4	94-7539	2	Balljoint-LH Thread (Only On: 73540, 73541)
5	94-2212	2	Rod-Steering
6	98-8088	2	Nut-Lock
7	3296-29	2	Nut-Lock
8	94-2197	1	Arm-LH Steering
9	322-32	2	Screw-HH
10	94-2196	1	Arm-RH Steering
11	3220-12	2	Nut-Hex
12	98-8087	2	Balljoint-RH Thread (Only On: 73470)
12	98-8086	2	Balljoint-RH Thread (Only On: 73540, 73541)
13	94-7537-03	1	LH Spindle
14	9548	2	Washer-Thrust
15	3296-61	1	Nut-Hex
16	302-11	1	Fitting-Grease
17	94-7568-03	1	Axle-Front
18	302-5	2	Fitting-Grease

Ref. No.	Part No.	Qty.	Description
19	94-7536-03	1	RH Spindle
20	94-7542	2	Wheel & Tire ASM (Only On: 73470, 73540)
20	95-4084	2	Wheel & Tire ASM (Only On: 73541)
20:1	94-7541	2	Wheel
20:2	94-7538	4	Bearing ASM (Incl. Ref. #20:5)
20:3	5108	2	Valve-Tire Tubeless
20:4	94-2191	2	Tire (Only On: 73470, 73540)
20:4	95-4085	2	Tire (Only On: 73541)
20:5	94-2053	4	Snap Ring
21	95-4060	2	Washer-Wheel
22	9202514	4	Washer-Flat
23	9202524	A/R	Washer
24	3272-18	2	Pin-Cotter
25	94-7871	2	Cap-Dust
26	98-1642	2	Cap-Spindle
27	3231-25	2	Screw-CARR
28	98-8089	2	Nut-Lock
*	112819	2	Tube-Inner

\* Not Illustrated

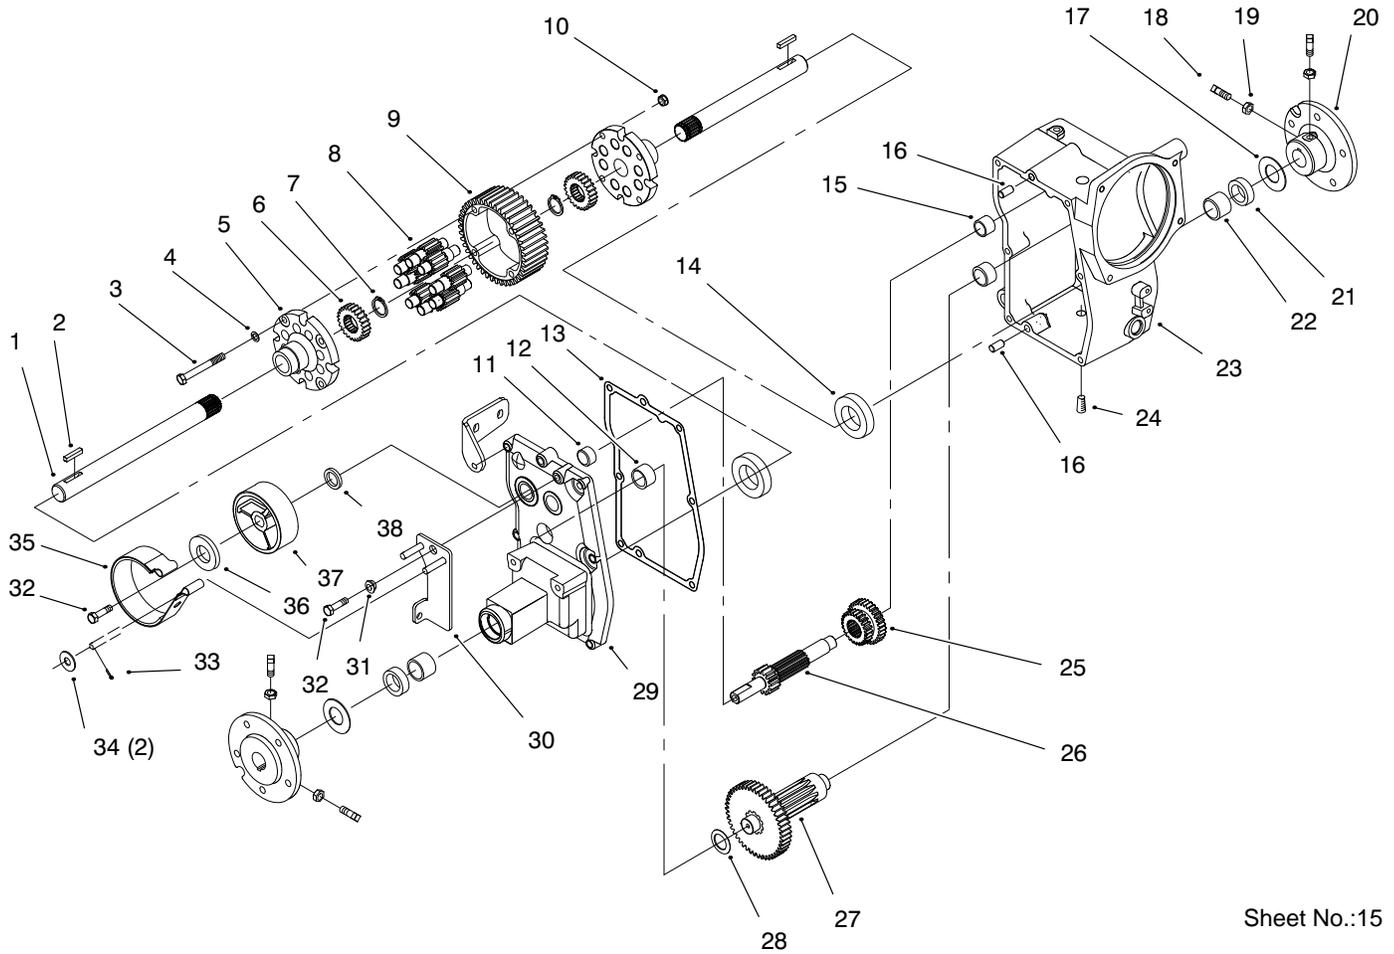


Sheet No.:15

## Hydro Trans Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	79-3340	2	Axle-Rear
2	79-3370	2	Key-Square
3	911423	4	Screw-HH
4	107374	4	Washer-Flat
5	111196	2	Cap-End
6	101889	2	Gear-Axle
7	105876	2	Ring-Retaining
8	101623	8	Gear-Pinion
9	105061	1	Gear-Differential
10	108881	4	Nut-Hex
11	1540	1	Bearing-Needle
12	94-2021	2	Bearing-Needle
13	94-2022	1	Gasket-Transaxle
14	111199	2	Bearing-Ball
15	1529	1	Bearing-Needle
16	108363	2	Pin-Locating
17	106826	2	Washer-Thrust
18	3243-5	4	Screw-Set
19	3218-3	4	Nut-HJ
20	105763-03	2	Hub-Wheel
21	6449	2	Seal-Oil
22	9416	2	Bearing-Needle
23	94-2001-03	1	Case-Transaxle
24	281-10	1	Plug-Pipe
25	94-2008	1	Gear-Sliding
26	94-2007	1	Shaft-Brake

Ref. No.	Part No.	Qty.	Description
27	94-2006	1	M-Gear
28	9547	1	Washer-Thrust
29	94-2002-03	1	Case-Transaxle
30	94-2019-03	1	Arm-Brake Pivot
31	100309	1	Bushing-Cam Pivot
32	3235-22	2	Screw-HH
33	3272-6	2	Pin-Cotter
34	3256-24	2	Washer-Flat
35	94-2419	1	Brake Band
36	2844	1	Washer-Flat
37	94-2009	1	Drum-Brake
38	253-44	1	Seal-Oil

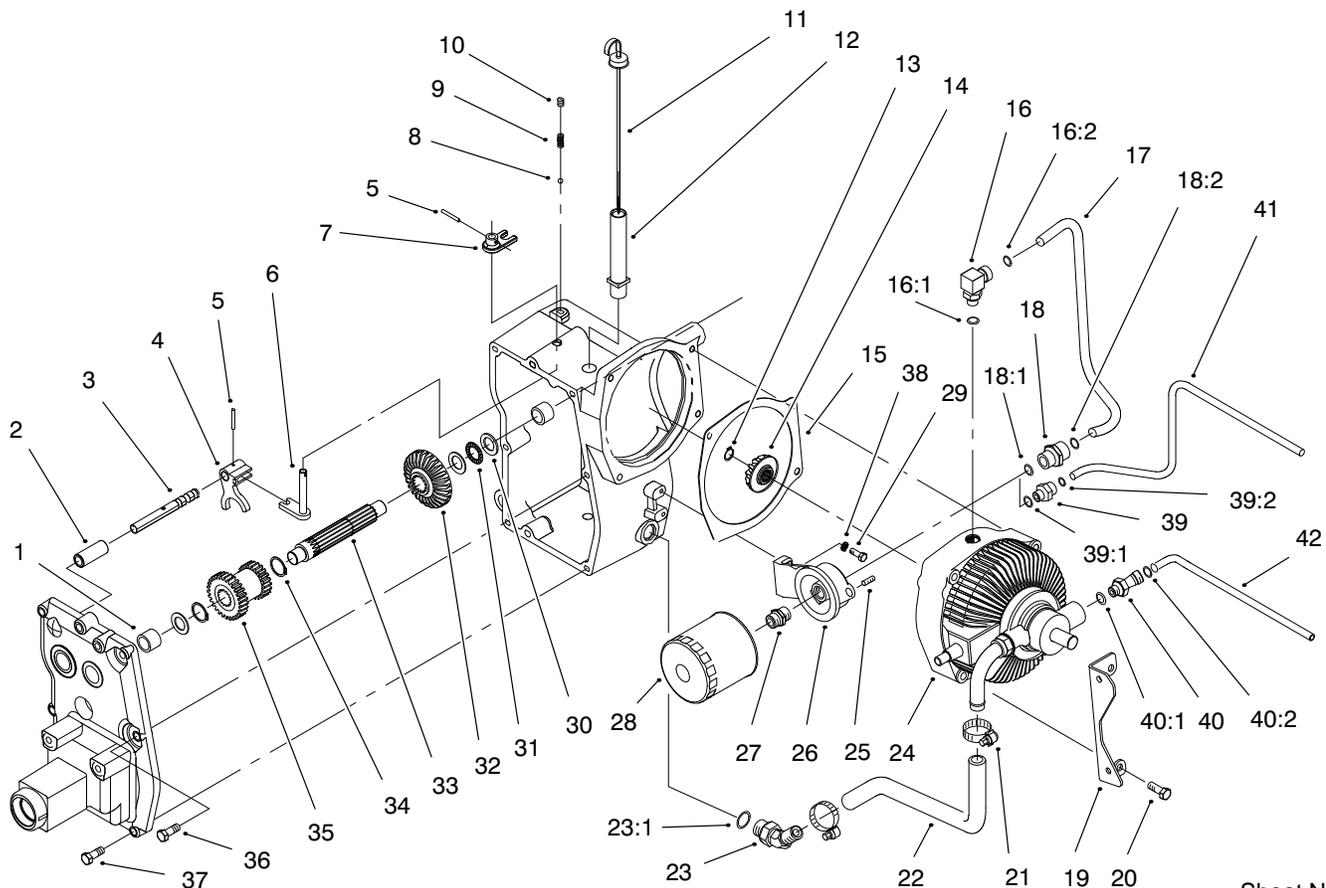


Sheet No.:16

## Hydro Trans Axle Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
1	1529	2	Bearing-Needle
2	94-2014	1	Tube-Shifter Rail
3	94-2054	1	Rail-Shift
4	94-2015	1	Fork-Hi Lo Shift
5	933154	2	Pin-Spirol
6	94-2143	1	Arm-Shifter
7	94-7510	1	Arm-Hi Lo
8	3517	1	Ball
9	94-2024	1	Spring-Shift
10	3247-2	1	Screw-Set
11	94-7680-03	1	Dipstick
12	94-7559	1	Tube-Dipstick
13	32120-64	1	Ring-Retaining
14	94-7565	1	Pinion-Bevel
15	702062	1	Gasket-Pump & Motor
16	94-7693	1	Fitting-Hydraulic
16:1	237-42	1	O-Ring
16:2	237-30	1	O-Ring
17	94-7969	1	Tube-Hydraulic
18	94-7694	1	Fitting-Hydraulic
18:1	237-42	1	O-Ring
18:2	237-30	1	O-Ring
19	94-2148-03	1	Plate-Support Bracket
20	323-13	4	Screw-HH
21	2412-141	2	Clamp-Hose
22	95-4133	1	Hose-Suction


Ref. No.	Part No.	Qty.	Description
23	94-7692	1	Fitting-Hose
23:1	237-80	1	O-Ring
24	94-2003	1	Transmission
25	281-10	1	Plug-Pipe
26	108323	1	Base-Filter
27	5991	1	Fitting-Filter
28	79-5270	1	Filter-Oil
29	321-5	2	Screw-HH
30	1535	3	Washer-Thrust
31	8571	1	Bearing-Needle
32	94-7566	1	Gear-Bevel
33	94-2010	1	Shaft-Input
34	32151-29	2	Ring-Ext. Snap
35	94-2011	1	Gear-Hi Lo
36	323-9	3	Screw-HH
37	323-8	2	Screw-HH
38	3253-3	2	Washer-Lock
39	95-4138	1	Fitting-Hydraulic
39:1	237-22	1	O-Ring
39:2	237-42	1	O-Ring
40	95-4135	1	Fitting-Hydraulic 45
40:1	237-42	1	O-Ring
40:2	237-22	1	O-Ring
41	94-7970	1	Tube-Hydraulic
42	95-3806	1	Tube-Hydraulic

# Transmission Assembly

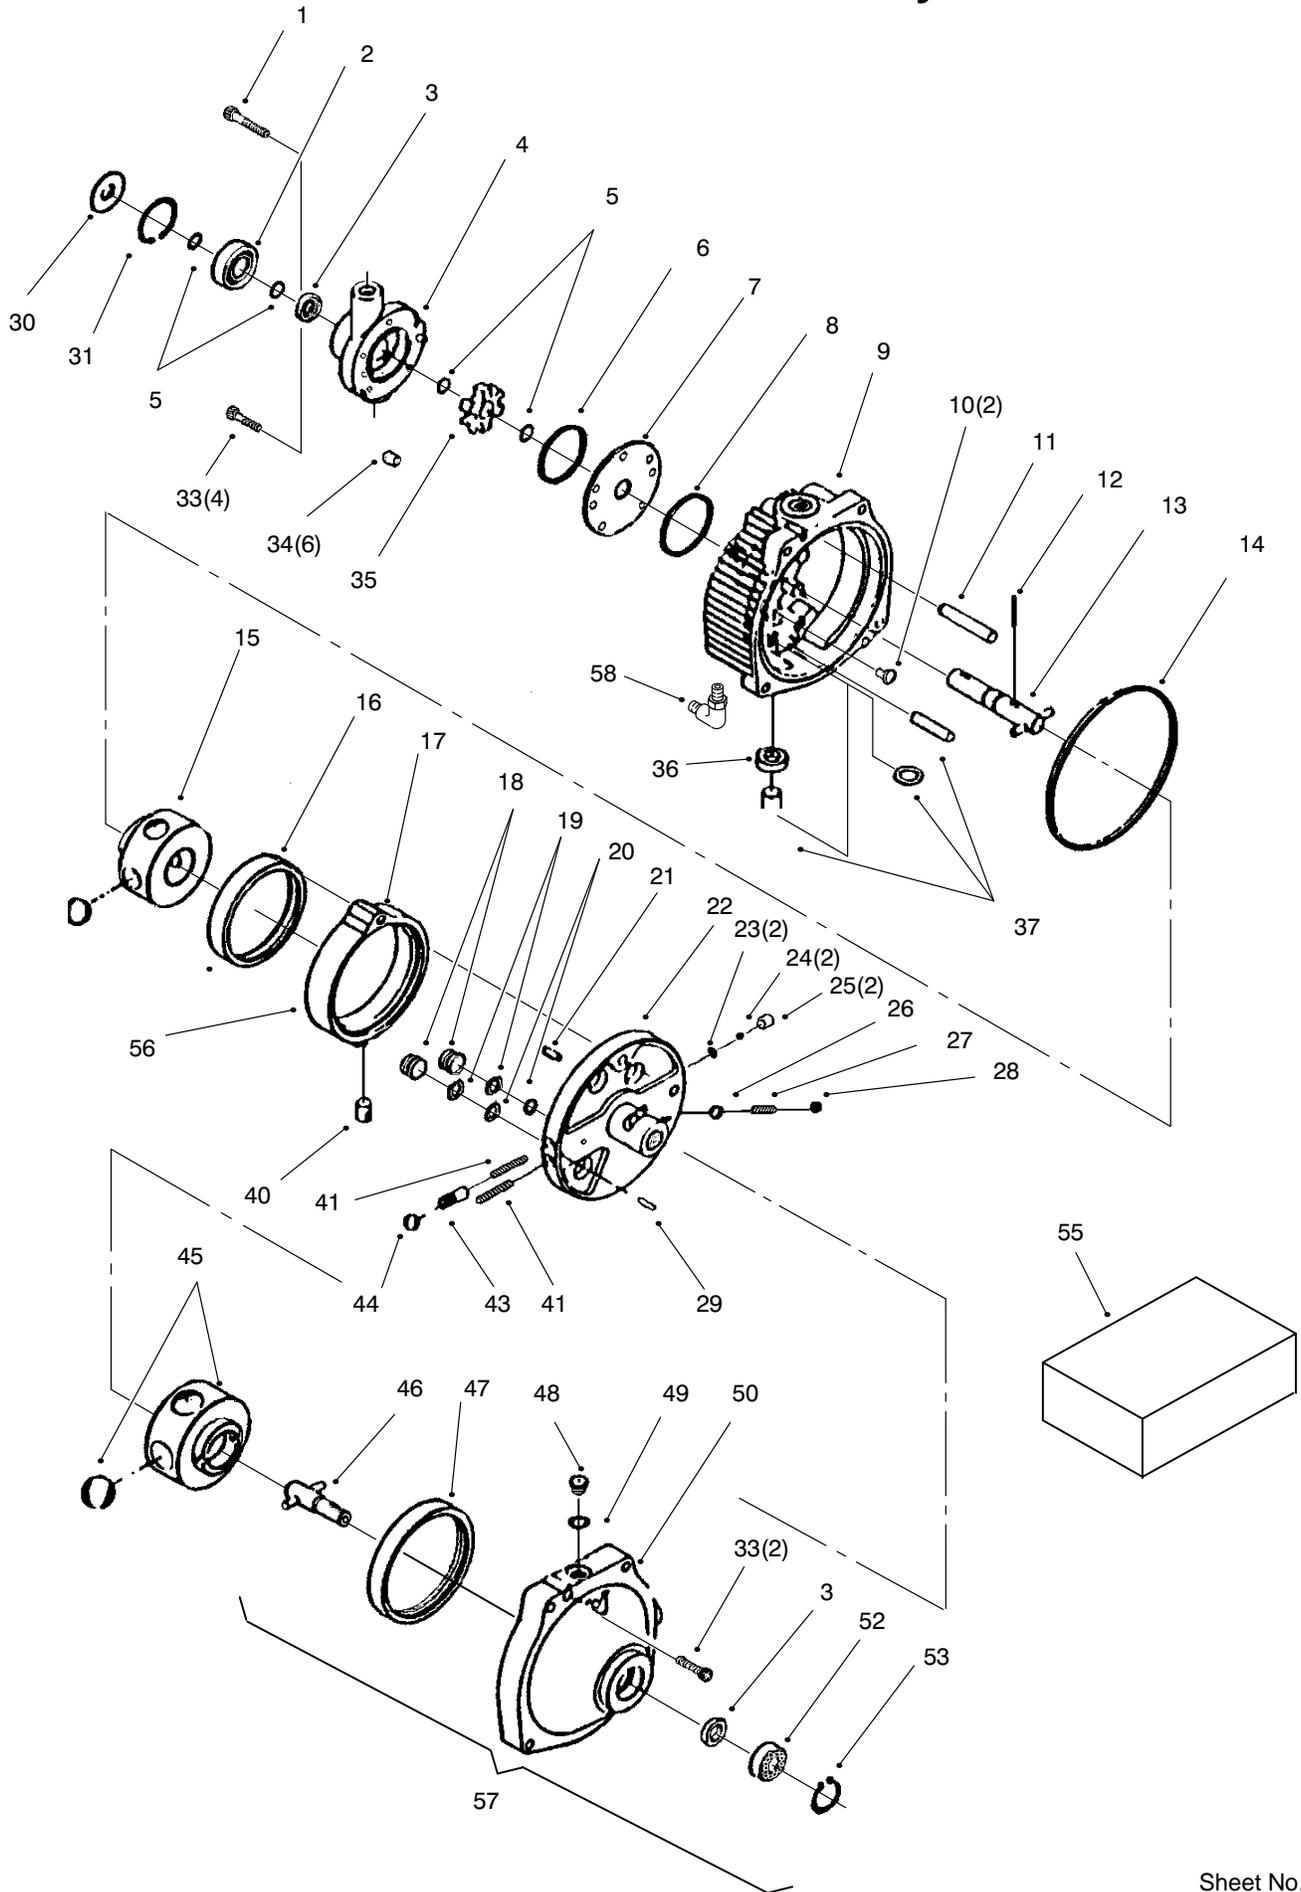





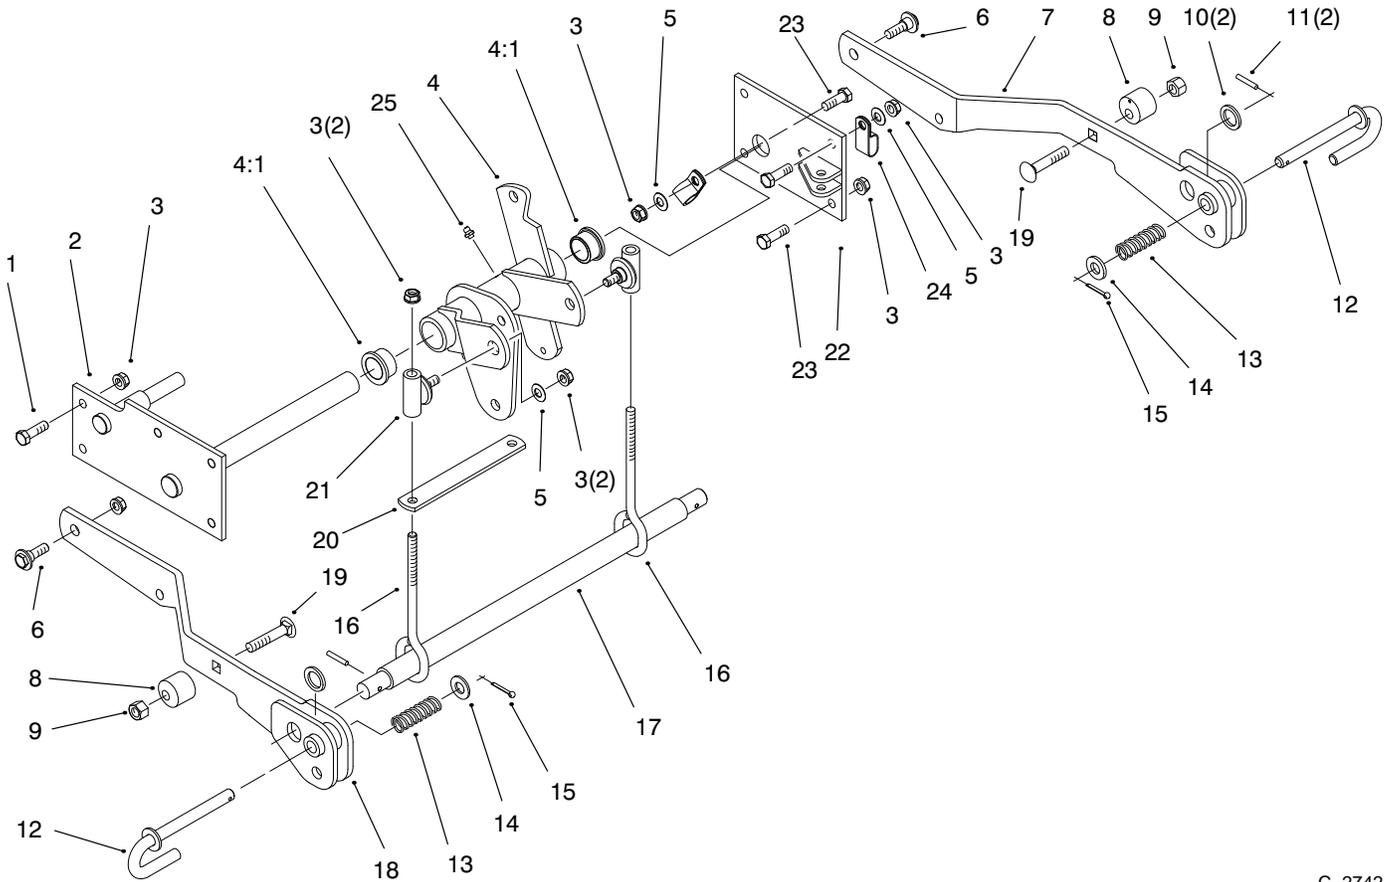


C-2742  
Sheet No.:18

## Hydro Lift Lower Assembly

Ref. No.	Part No.	Qty.	Description
1	323-7	5	Screw-HH
2	94-2263-03	1	Support-Deck Lift
3	3296-39	15	Nut-Lock
4	98-3582	1	Bellcrank & Bushing ASM
4:1	94-7574	2	Bushing-Flanged
5	3256-24	4	Washer-Flat
6	614672	2	Bolt-Shoulder
7	94-2279-03	1	Lift Arm ASM-LH
8	94-2411	2	Stop-Lift Adj.
9	3296-48	2	Nut-Lock
10	3256-28	2	Washer-Flat
11	32121-79	2	Roll Pin
12	94-2301	2	J Pin
13	95-4256	2	Spring-Compression
14	3256-26	2	Washer-Flat
15	3272-10	2	Pin-Cotter
16	94-2262	2	Rod-Lift
17	94-2277-03	1	Bar-Lift
18	94-2278-03	1	Lift Arm ASM-RH
19	3232-5	2	Screw-CARR
20	94-7600-03	1	Spacer-Strap
21	94-2260	2	Lift Sleeve ASM
22	94-7578-03	1	Plate-Support LH
23	323-18	4	Screw-HH

Ref. No.	Part No.	Qty.	Description
24	98-1617	1	Clamp-Tube
25	302-5	1	Fitting-Grease

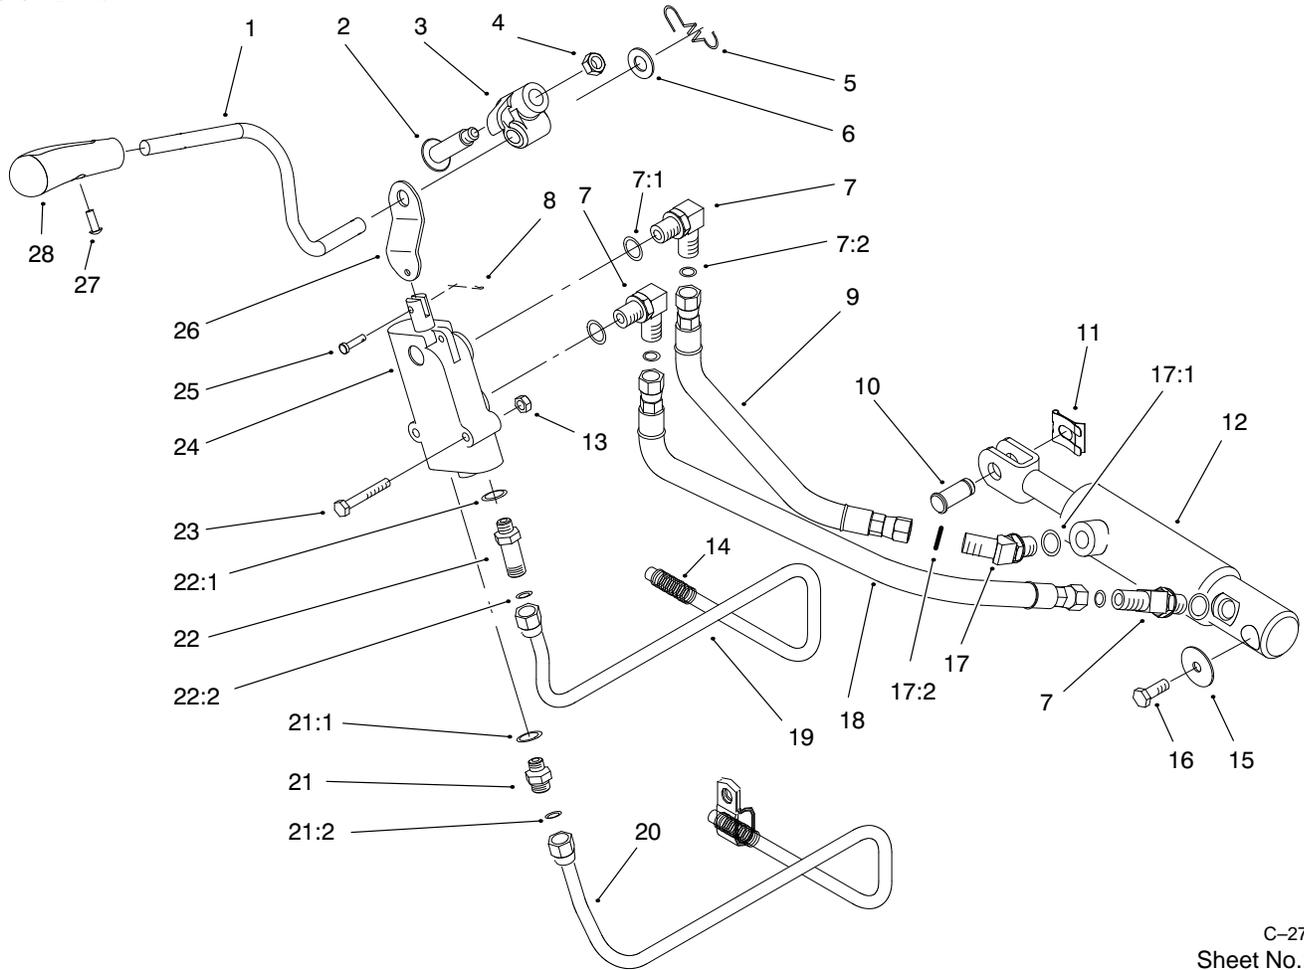


C-2735  
Sheet No.:19

## Hydro Lift Upper Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	94-7714	1	Handle-Lift	19	94-7970	1	Tube-Hydraulic
2	92-1099	1	Bolt-Shoulder	20	95-3806	1	Tube-Hydraulic
3	95-4168	1	Trunnion-Lift Lever	21	95-4138	1	Fitting-Hydraulic
4	610358	1	Nut-Lock	21:1	237-22	1	O-Ring
5	95-4221	1	Spring-Ext. Lift	21:2	237-42	1	O-Ring
6	95-4235	1	Washer	22	95-4137	1	Fitting-Hydraulic Long
7	95-4141	3	Fitting-Hydraulic 90 DEG	22:1	237-42	1	O-Ring
7:1	237-42	3	O-Ring	22:2	237-22	1	O-Ring
7:2	237-21	3	O-Ring	23	321-10	2	Screw-HH
8	3272-1	1	Pin-Cotter	24	94-2458	1	Valve-Hydraulic Lift
9	94-7945	1	Hose ASM	25	283-16	1	Pin-Clevis
10	98-1639	1	Pin-Clevis	26	98-1620	1	Link-Lift
11	95-4064	1	Clip-Pin	27	95-4236	1	Tscrew-PPH
12	94-2300	1	Lift Cylinder ASM	28	94-2100	1	Knob-Lift (Only On: 73470, 73540)
*12:1	95-4007	1	Seal Kit	28	95-4106	1	Knob-Lift (Only On: 73541)
13	3296-42	2	Nut-Lock				
14	95-4258	2	Cover-Brace				
15	3256-57	1	Washer-Flat				
16	95-4245	1	Screw-Thread Locking				
17	95-4136	1	Fitting-Hydraulic 45 DEG				
17:1	237-42	1	O-Ring				
17:2	237-21	1	O-Ring				
18	94-7944	1	Hose ASM				

\* Not illustrated

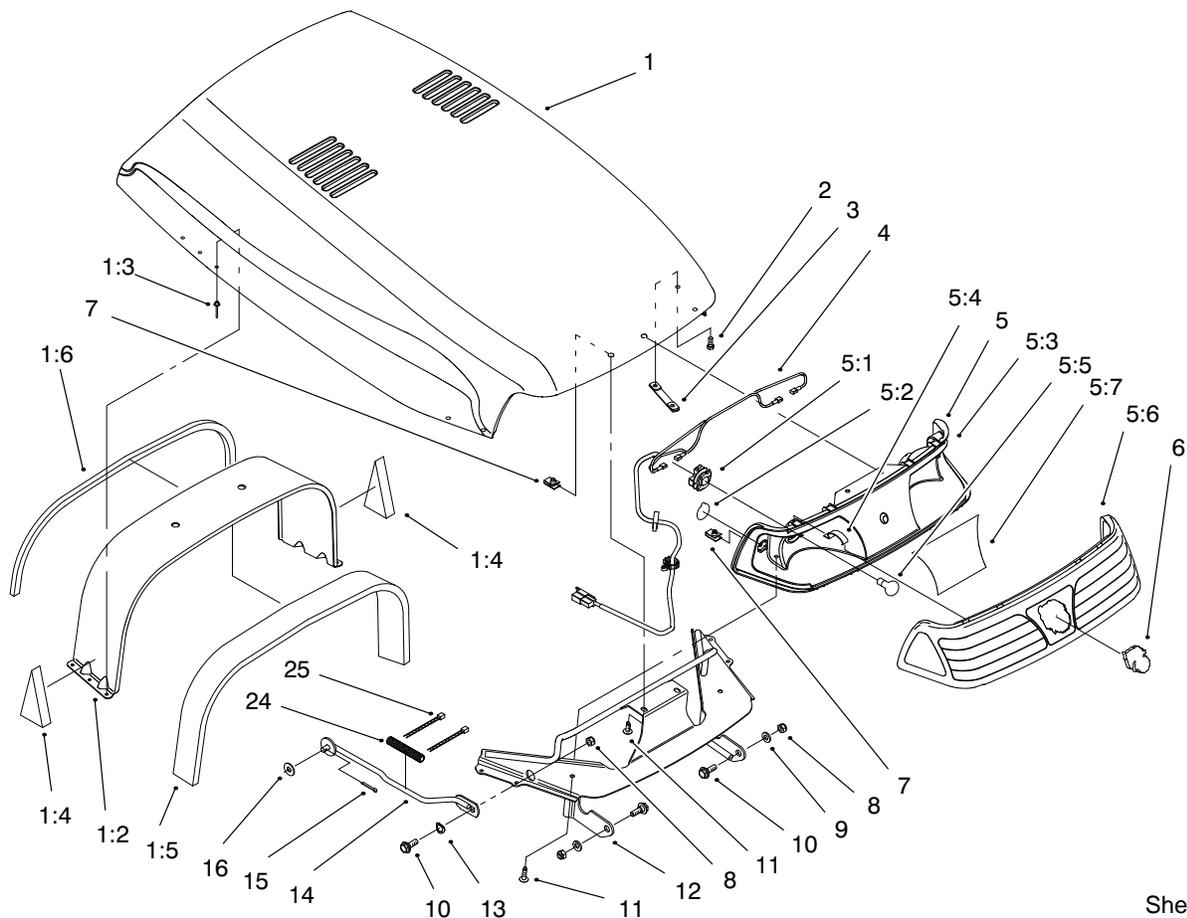


C-2722  
Sheet No.:20

## Hood & Headlight Assembly

Ref. No.	Part No.	Qty.	Description
1	98-7205	1	Hood ASM
1:2	98-7204	1	Rear Bulkhead ASM (Incl. Ref. #1:4 1:5 1:6)
1:3	3269-12	6	Rivet-Pop
1:4	95-4259	2	Foam-Lower Bulkhead
1:5	95-4078	1	Foam Seal-Rear Bulkhead
1:6	95-4233	1	Foam-Bulkhead/Hood
2	3274-31	4	Screw-HS
3	95-4197	2	Nut Plate
4	95-0691	1	Harness-Wire
5	95-4166	1	Headlight ASM
5:1	98-3591	2	Socket
5:2	98-1602	2	Decal-Sidelight
5:3	98-7210	1	Reflector ASM (Incl. Ref. #5:2 & 5:7)
5:4	95-4129	4	Clip
5:5	7228	2	Bulb-Light
5:6	94-2099	1	Lens-Headlight
5:7	98-3597	1	Decal-Headlight Reflector
6	95-4248	1	Logo-Headlight
7	107069	4	Nut-Panel
8	3296-29	3	Nut-Lock
9	3256-23	2	Washer-Flat

Ref. No.	Part No.	Qty.	Description
10	27-0410	3	Bolt-Shoulder
11	92-7020	4	Screw-TTH
12	95-3800-03	1	Front Bulkhead
13	98-1649	1	Washer-Spring
14	95-4070-03	1	Hood Support Rod
15	3272-10	1	Pin-Cotter
16	98-3051	1	Washer-Plastic
24	98-3595	1	Shield-Support Rod
25	614249	2	Tie Strap



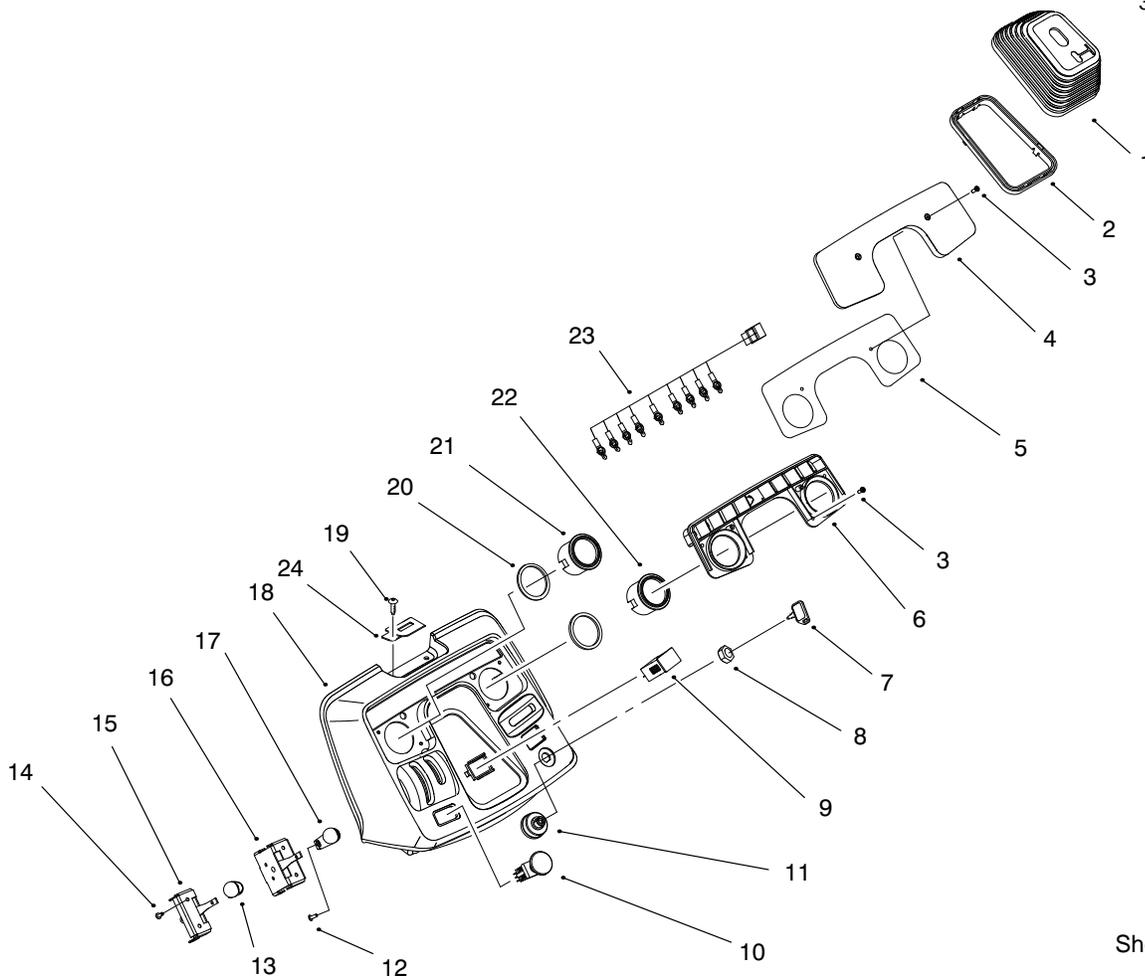


Sheet No.:22

## Dash Assembly

Ref. No.	Part No.	Qty.	Description
1	94-2102	1	Boot-Steering
2	95-3844	1	Retainer-Boot
3	95-4234	6	Screw-Pan Hd
4	95-3842	1	Lens-Dash
5	95-4071	1	Decal-Dash Lens (Only On: 73470)
5	95-4072	1	Decal-Dash Lens (Only On: 73540, 73541)
6	95-3843	1	Housing-Light
7	62-7770	1	Key-Ignition
8	700919	1	Nut
9	94-4208	1	Hourmeter
10	95-7489	1	Switch-PTO
11	92-6785	1	Switch-Ignition
12	95-4236	2	Tscrew-PPH
13	94-2121	1	Knob-Throttle
14	32144-32	4	Screw-Plastic
15	95-4036	1	Control Throttle ASM
16	95-4035	1	Control Choke ASM
17	94-2122	1	Knob-Choke
18	94-2101	1	Dash
19	92-7020	4	Screw-TTH
20	95-4238	2	Gasket-Foam
21	94-7616	1	Gauge-Oil Temperature

Ref. No.	Part No.	Qty.	Description
22	95-3830	1	Gauge-Fuel
23	94-7607	1	Harness-4 Light (Only On: 73470)
23	94-7608	1	Harness-6 Light (Only On: 73540, 73541)
24	95-4287	1	Guard-Latch (Only On: 73541)

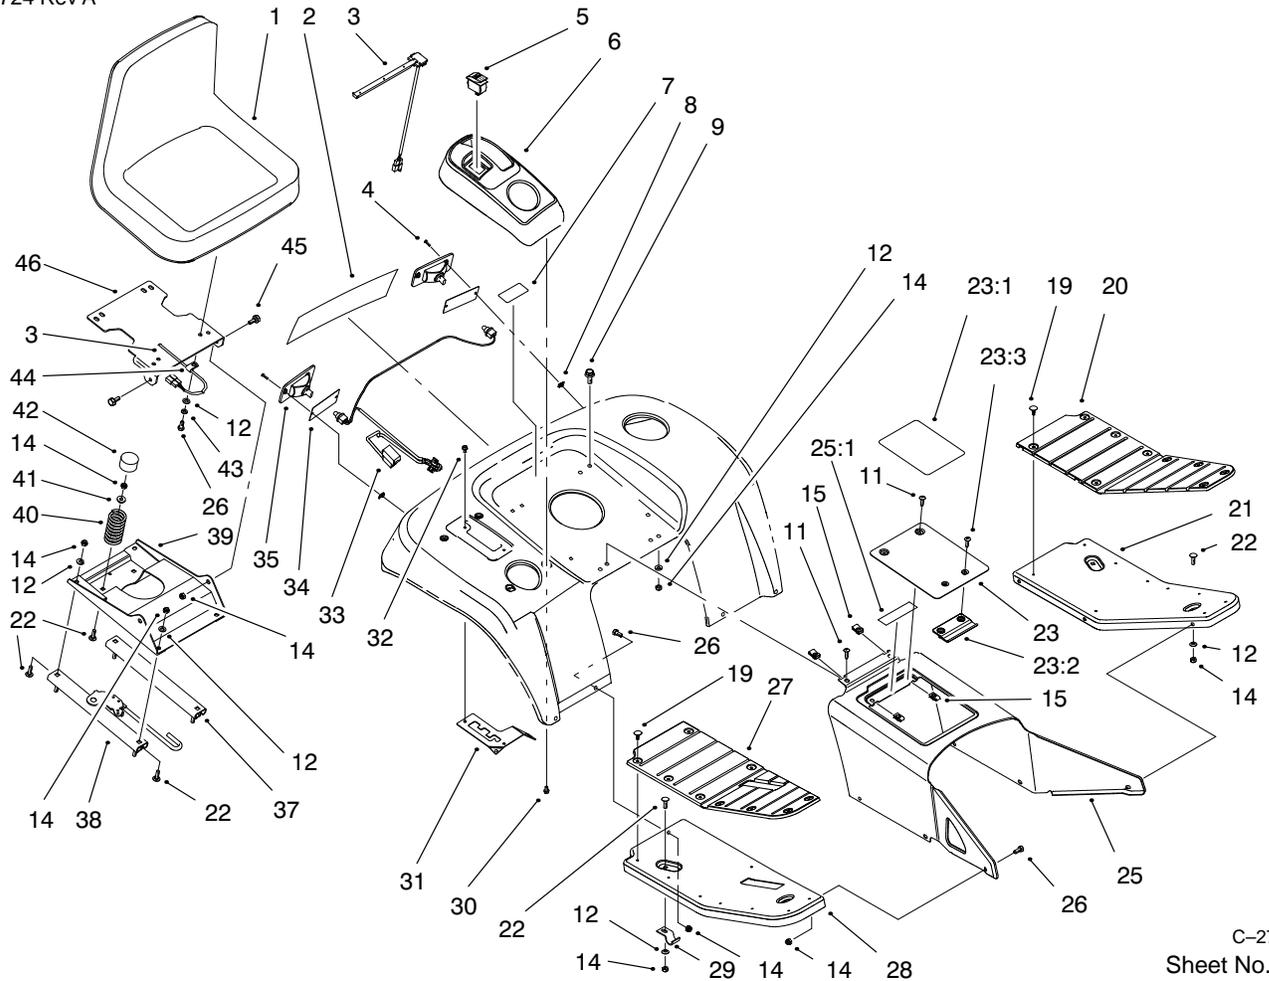


C-2736  
Sheet No.:23

## Fender, Footrest and Seat Assembly

Ref. No.	Part No.	Qty.	Description
1	92-6511	1	Seat (Only On: 73470)
1	94-3518	1	Seat V-811 (Only On: 73540, 73541)
2	95-4262	1	Decal-Fender
3	38-1420	1	Switch-Seat
4	3250-29	4	Screw
5	94-7602	1	Switch Cruise (Only On: 73540, 73541)
6	94-2120	1	Pod-Control (Only On: 73540)
6	95-4000	1	Pod-Control (Only On: 73541)
6	95-4001	1	Pod-Control (Only On: 73470)
7	76-1340	1	Decal-USA (Only On: 73470, 73540)
8	95-4115	4	Nut-Speed
9	3234-29	4	Screw-HHF
11	92-7020	4	Screw-TTH
12	3256-23	17	Washer-Flat
14	3296-29	27	Nut-Lock
15	107069	4	Nut-Panel
16	80-8760	1	Decal-Danger (Only On: 73470, 73540)
19	3290-479	18	Fastener-Panel
20	94-2096	1	Pad-Footrest

Ref. No.	Part No.	Qty.	Description
21	94-2090-01	1	Footrest
22	3230-16	10	Screw-CARR
23	98-1621	1	Tunnel Cover ASM (Only On: 73470, 73540)
23	98-1623	1	Tunnel Cover ASM (Only On: 73541)
23:1	95-4263	1	Decal-Danger (Only On: 73470, 73540)
23:1	98-1608	1	Decal-Danger (Only On: 73541)
23:2	95-4107	1	Retainer-Cover
23:4	94-4496	2	Screw
25	98-5025-01	1	Tunnel ASM (Only On: 73470, 73540)
25	98-5058-01	1	Tunnel ASM (Only On: 73541)
25:1	80-8760	1	Decal-Danger (Only On: 73470, 73540)
25:1	98-5015	1	Decal-Warning (Only On: 73541)
26	322-3	14	Screw-HH
27	94-2095	1	Pad-Footrest
28	94-2089-01	1	Footrest
29	95-3858	2	Bracket-Footrest
30	32144-20	4	Screw



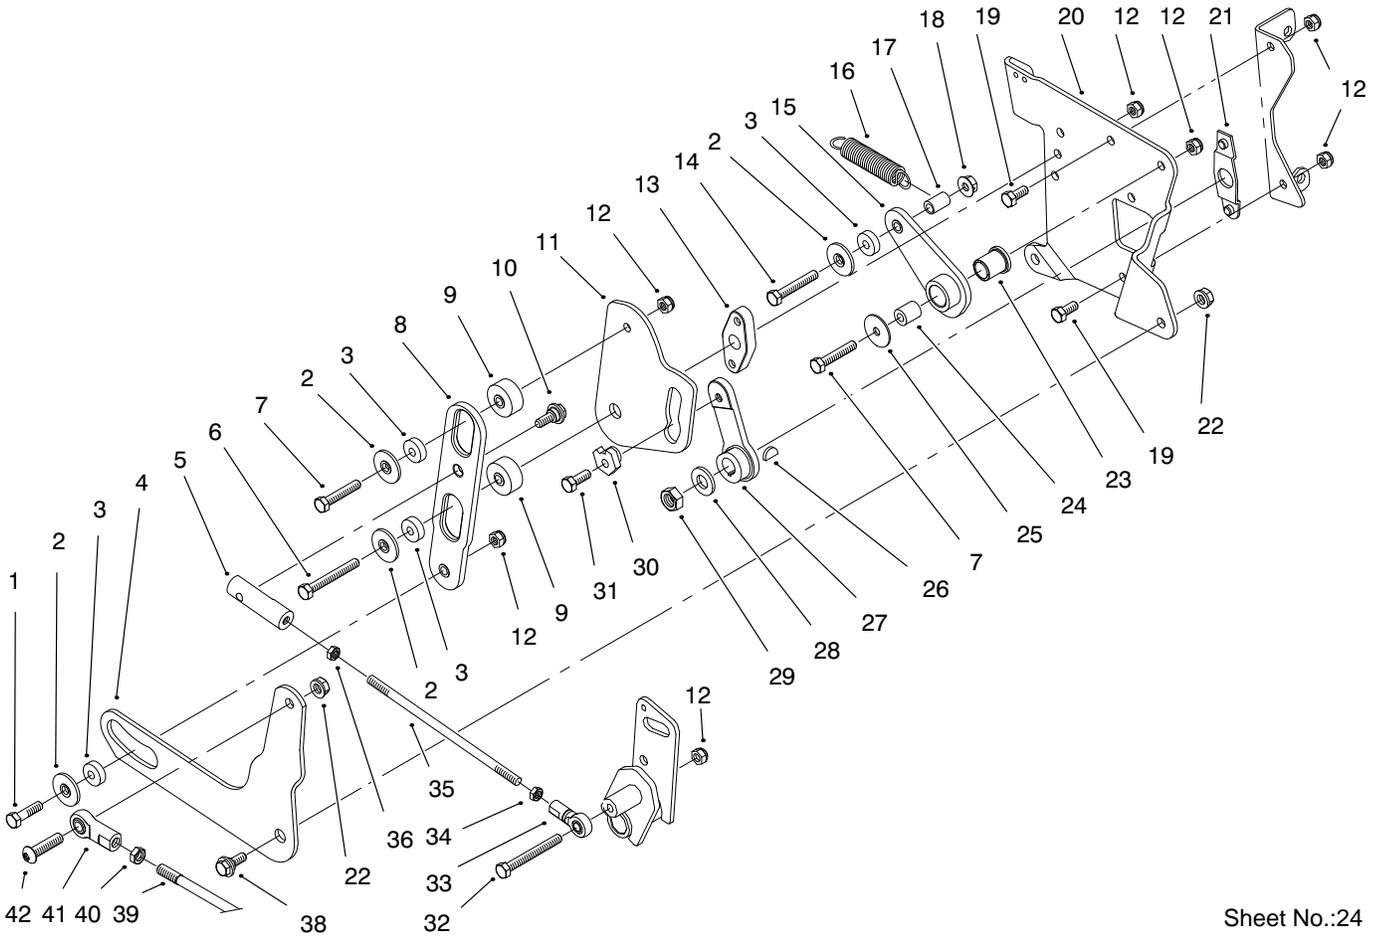


Sheet No.:24

## Smart Turn Rear Assembly

Ref. No.	Part No.	Qty.	Description
1	322-6	1	Screw-HH
2	94-2313	4	Retainer-Bearing
3	95-4185	4	Bearing-Ball
4	95-3801-03	1	Slider Lift
5	94-7637	1	Rod End RH
6	322-12	1	Screw HH
7	322-9	2	Screw-HH
8	94-2144	1	Slider-Speed Control
9	94-2169	2	Standoff-Cam
10	94-7817	1	Bolt-Shoulder
11	94-2145	1	Plate-Cam
12	3296-29	7	Nut-Lock
13	94-2168	1	Standoff-Slider
14	322-10	1	Screw-HH
15	94-7586	1	Arm-Return To Neutral
16	63-1590	1	Spring-Extension
17	94-2309	1	Standoff-Spring
18	32128-30	1	Nut-Flange
19	322-3	2	Screw-HH
20	94-2149-03	1	Plate-Control
21	94-7814	1	Locater-Control Plate
22	108881	2	Nut-Hex
23	94-7913	1	Bushing-Flange
24	94-7564	1	Spacer
25	3256-57	1	Washer-Flat

Ref. No.	Part No.	Qty.	Description
26	3257-24	1	Key-Woodruff
27	94-7816	1	Arm-Speed Control
28	3256-26	1	Washer-Flat
29	3296-45	1	Nut
30	94-2468	1	Cam-Eccentric
31	95-4245	1	Screw-Thread Locking
32	322-13	1	Screw-HH
33	94-7571	1	Rod End LH
34	3220-20	1	Nut-Hex Jam
35	94-2497	1	Rod-Slider To Pivot
36	3220-2	1	Nut-Jam
38	94-7582	1	Bolt-Shoulder
39	94-7500	1	Rod-Lift Lever
40	3220-3	1	Nut-Hex Jam
41	92-7008	1	Rod End
42	95-3857	1	Screw-Button Head



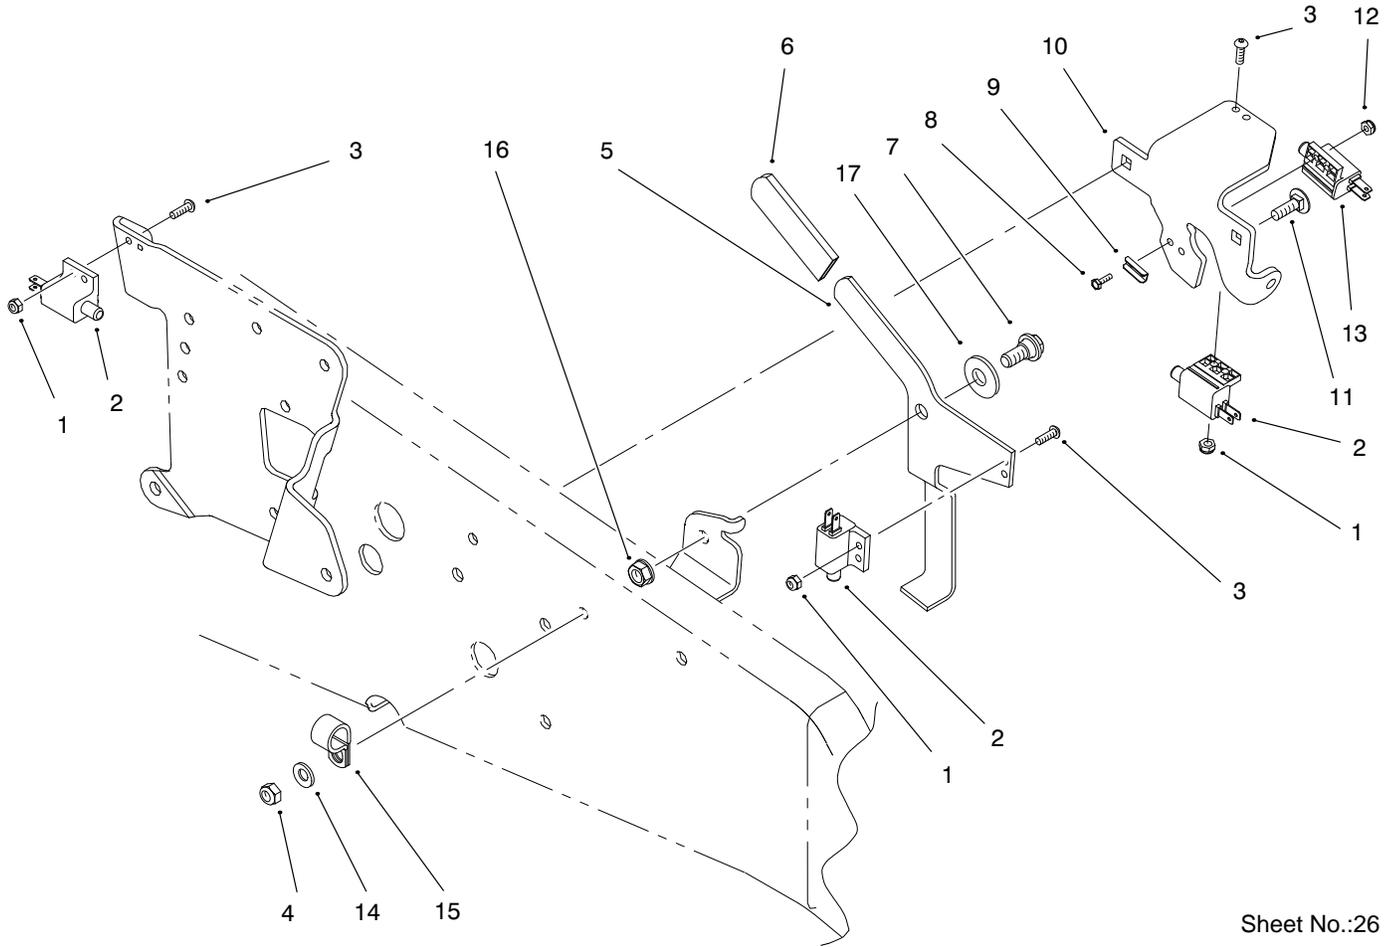


Sheet No.:26

## Upper Parking Brake Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-2	4	Nut Lock (Only On: 73470)
1	3296-2	6	Nut Lock (Only On: 73540, 73541)
2	65-7410	2	Switch-Single Pole (Only On: 73470)
2	65-7410	3	Switch-Single Pole (Only On: 73540, 73541)
3	3274-14	4	Screw-HSH (Only On: 73470)
3	3274-14	6	Screw-HSH (Only On: 73540, 73541)
4	3296-29	2	Nut-Lock
5	94-2157-03	1	Latch-Parking Brake
6	102597	1	Grip
7	94-7582	1	Bolt-Shoulder
8	3290-392	2	Screw-HH
9	94-7905	1	Retainer-Screw
10	94-7562-03	1	Bracket-Switch
11	3230-16	2	Screw-CARR
12	3296-1	2	Locknut
13	95-1653	1	Switch-Single Pole
14	3256-23	1	Washer-Flat
15	98-2358	1	Clamp-R
16	108881	1	Nut-Hex

Ref. No.	Part No.	Qty.	Description
17	98-3087	1	Washer-Power Steering



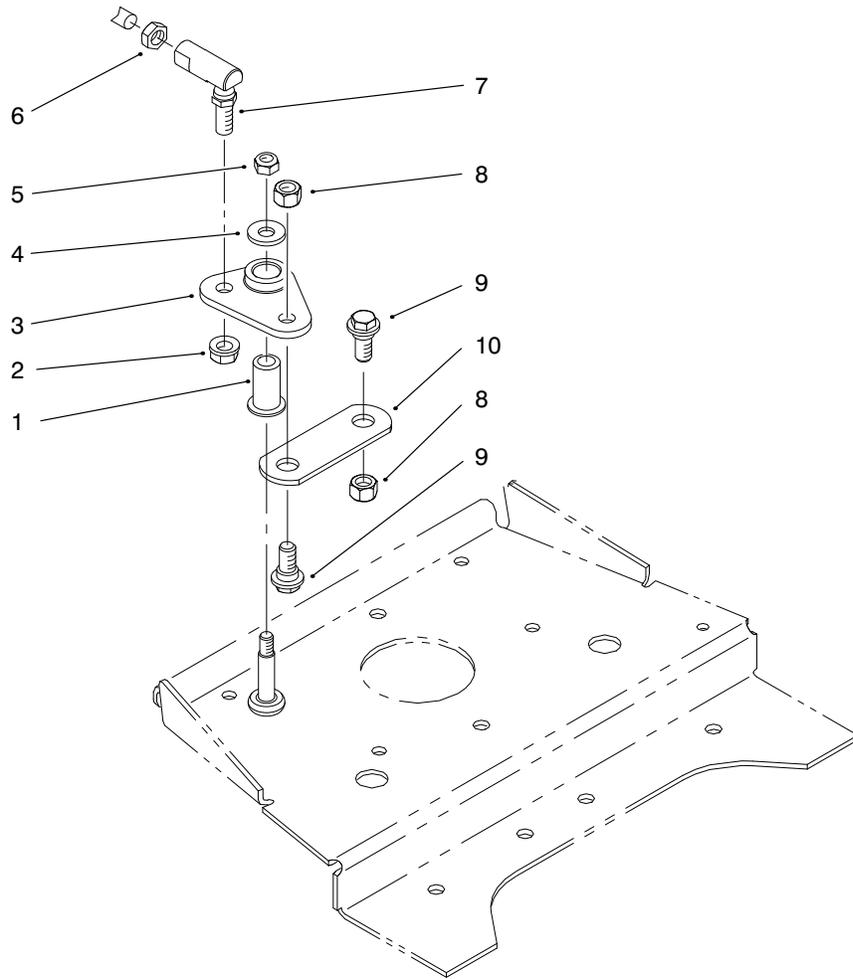


Sheet No.:28

### Smart Turn Front Assembly

Ref. No.	Part No.	Qty.	Description
1	94-7919	1	Bushing
2	3296-6	1	Nut-Lock
3	94-7579	1	Lever-Slow Down
4	98-3499	1	Washer-Flat
5	3296-29	1	Nut-Lock
6	3220-16	1	Nut-HJ
7	94-7573	1	Tie Rod End LH
8	108881	2	Nut-Hex
9	94-7582	2	Bolt-Shoulder
10	94-2409	1	Link-Slow Down

Ref. No.	Part No.	Qty.	Description



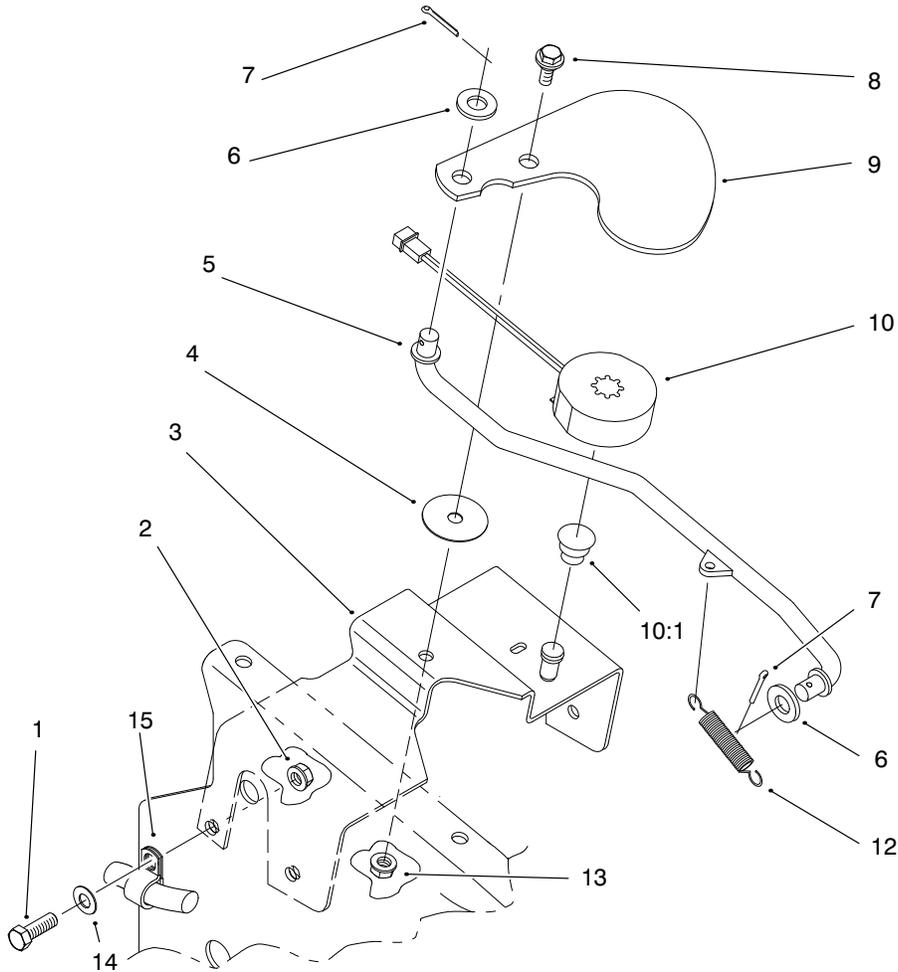


Sheet No.:30

### Cruise Control Assembly

Ref. No.	Part No.	Qty.	Description
1	323-6	2	Screw-HH (Only On: 73470)
1	323-6	4	Screw-HH (Only On: 73540, 73541)
2	3296-39	2	Nut-Lock (Only On: 73470)
2	3296-39	4	Nut-Lock (Only On: 73540, 73541)
3	94-2494-03	1	Bracket-Cruise Control (Only On: 73540, 73541)
4	94-7575	1	Spacer-Cruise (Only On: 73540, 73541)
5	94-7980	1	Rod-Cruise Control (Only On: 73540, 73541)
6	3256-26	2	Washer-Flat (Only On: 73540, 73541)
7	3272-10	2	Pin-Cotter (Only On: 73540, 73541)
8	94-7582	1	Bolt-Shoulder (Only On: 73540, 73541)
9	94-2158	1	Plate-Magnet (Only On: 73540, 73541)
10	93-4366	1	Magnet ASM (Only On: 73540, 73541)


Ref. No.	Part No.	Qty.	Description
10:1	93-6601	1	Spring-Conical (Only On: 73450, 73451)
12	66-4160	1	Spring (Only On: 73540, 73541)
13	108881	1	Nut-Hex
14	3256-24	2	Washer-Flat
15	98-2358	2	Clamp-R

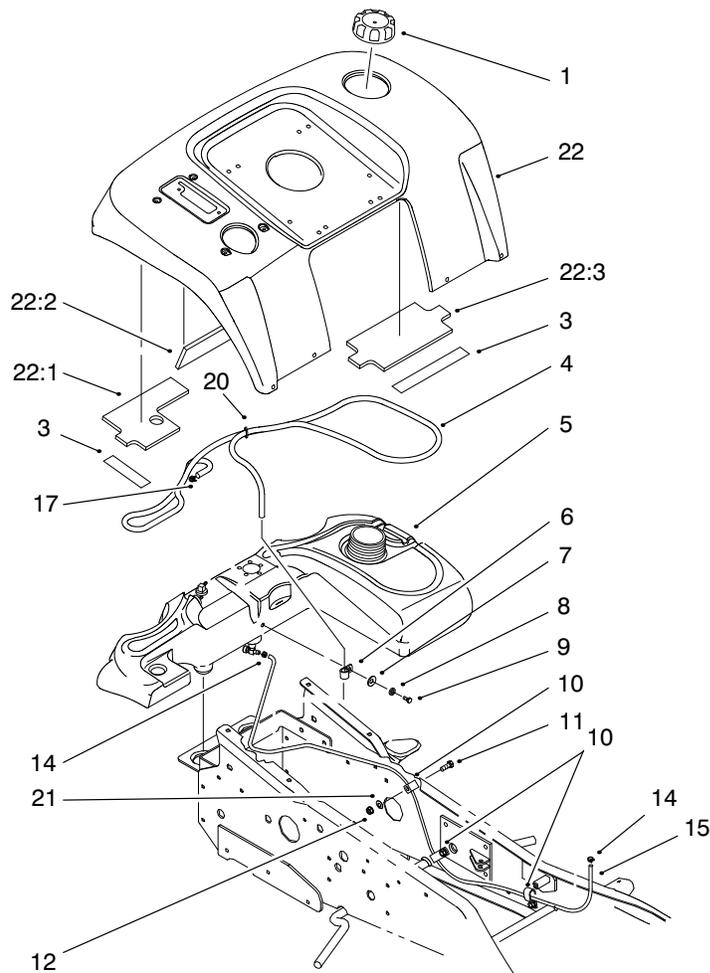C-2738  
Sheet No.:31

## Fender and Fuel System Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-4192	1	Gas Cap ASM-Unleaded	21	3256-24	1	Washer-Flat
3		1	Tape	22	98-7208	1	Rear Body ASM
4	95-4186	1	Hose-Vent	22:1	95-4159	1	Foam-Tank LH
5	95-3809	1	Tank-Gas	22:2	95-4158	1	Foam-Tank RH
*5:1	98-3050	1	Fitting Orifice	22:3	95-4157	1	Foam-Tank Center
*5:2	104047	1	Bushing				
*5:3	99-3716	1	Fitting-Fuel Shut Off				
*5:4	2412-36	1	Clamp				
*5:5	95-3971	1	Sender-Fuel level				
*5:6	99-2326	1	Gasket-Fuel Sender				
*5:7	3250-31	5	Screw				
*5:8	3253-17	5	Lockwasher				
*5:9	95-3968	1	Fitting				
*5:10	98-7390	1	Gage				
6	2412-94	1	R-Clamp				
7	3256-22	1	Washer-Flat				
8	3253-3	1	Washer-Lock				
9	321-3	1	Screw-HH				
10	98-1616	3	Clamp-Tube				
11	323-6	1	Screw-HH				
12	3296-39	1	Nut-Lock				
14	95-4271	2	Clamp-Hose				
15	95-4272	1	Hose-Fuel				
17	94-8189	1	Clamp-Hose				
20	614249	1	Tie Strap				

\* Not Illustrated

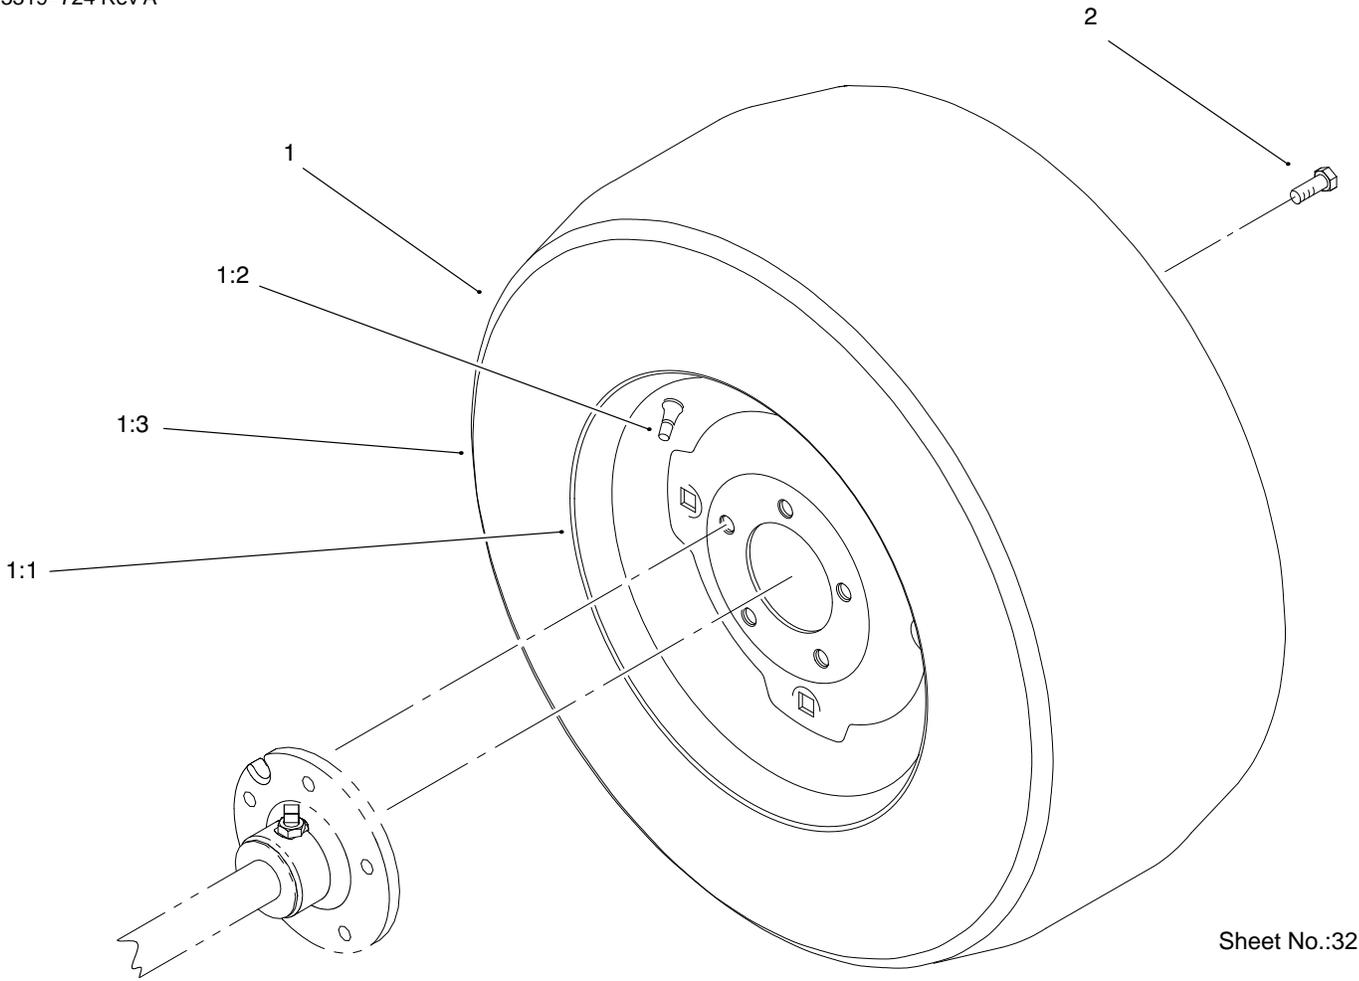


Sheet No.:32

### Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	94-2194	2	Rear Wheel & Tire ASM (Only On: 73470, 73540)
1	95-4086	2	Rear Wheel & Tire ASM (Only On: 73541)
1:1	94-2193	2	Tire (Only On: 73470, 73540)
1:1	95-4087	2	Tire (Only On: 73541)
1:2	5108	2	Valve-Tire Tubeless
1:3	110680	2	Wheel
2	83-2720	10	Bolt-Lug
*	7007	2	Tube-Inner

Ref. No.	Part No.	Qty.	Description

\* Not Illustrated

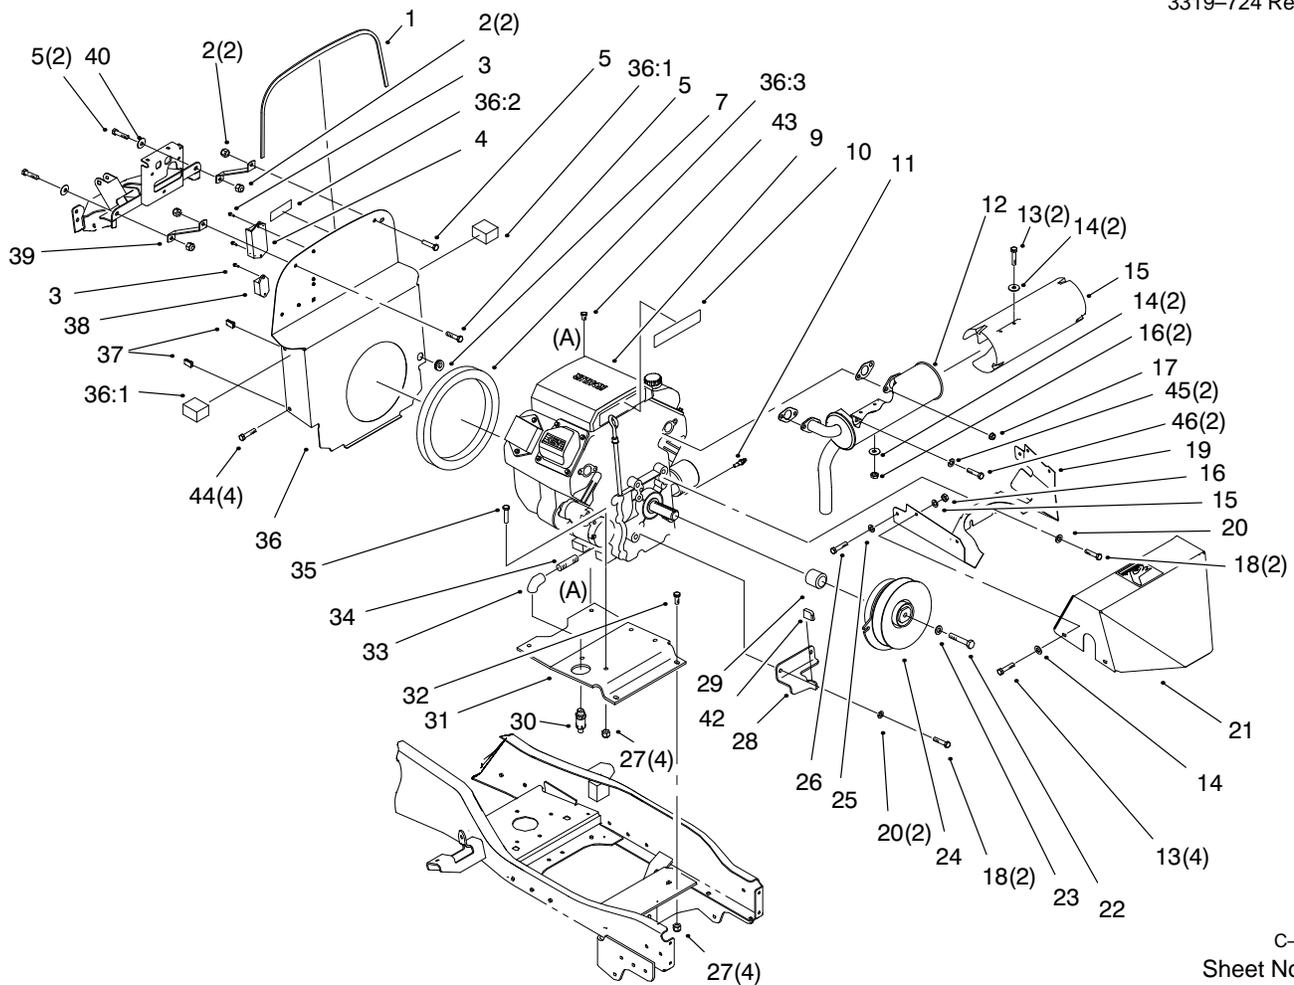

C-2739


Sheet No.:33

## Air Cooled Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	95-4125	1	Trim
1	98-8077	31	Trim-Lok
2	3296-29	4	Nut-Lock
3	12-5450	2	Screw-Thread Forming (Only On: 73470)
3	12-5450	3	Screw-Thread Forming (Only On: 73540, 73541)
4	94-7612	1	Module-Kohler
5	322-3	4	Screw-HH
7	240-9	1	Grommet
9		1	Engine (Only On: 73470)
10	98-3579	1	Decal-18hp Engine (Only On: 73470)
10	98-3580	1	Decal-20hp Engine (Only On: 73540, 73541)
11	94-7619	1	Sender-Oil Temp.
12	94-7558	1	Muffler-Kohler
13	321-3	6	Screw-HH
14	3256-22	6	Washer-Flat
15	94-7560	1	Reflector-Heat (Kohler)
16	32152-4	6	Locknut

Ref. No.	Part No.	Qty.	Description
17	92-6780	4	Nut-HHF
18	323-6	4	Screw-HH
19	94-7522-03	1	Shroud-Muffler
20	3253-5	6	Washer-Lock
21	94-7524-03	1	Shroud-Muffler
22	94-7973	1	Screw-Cap
23	3256-25	1	Washer-Flat
24	94-2190	1	Clutch-PTO
25	3253-3	2	Washer-Lock
26	33113-008	2	Screw-HH
27	3296-39	8	Nut-Lock
28	94-2356-03	1	Clutch-Stop
29	94-2068	1	Spacer-Clutch
30	92-6877	1	Valve-Oil Drain
31	94-2199-03	1	Plate-Engine
32	323-7	3	Screw-HH
33	2811-16	1	Elbow-90°
34	98-7200	1	Nipple-Pipe
35	323-9	4	Screw-HH
36	98-5060-03	1	Bulkhead ASM (Only On: 73470, 73540)
36	98-5062-03	1	Bulkhead ASM (Only On: 73541)
36:1	98-3086	2	Foam-Kohler
36:2	98-5012	1	Decal-Warning (Only On: 73470, 73540)



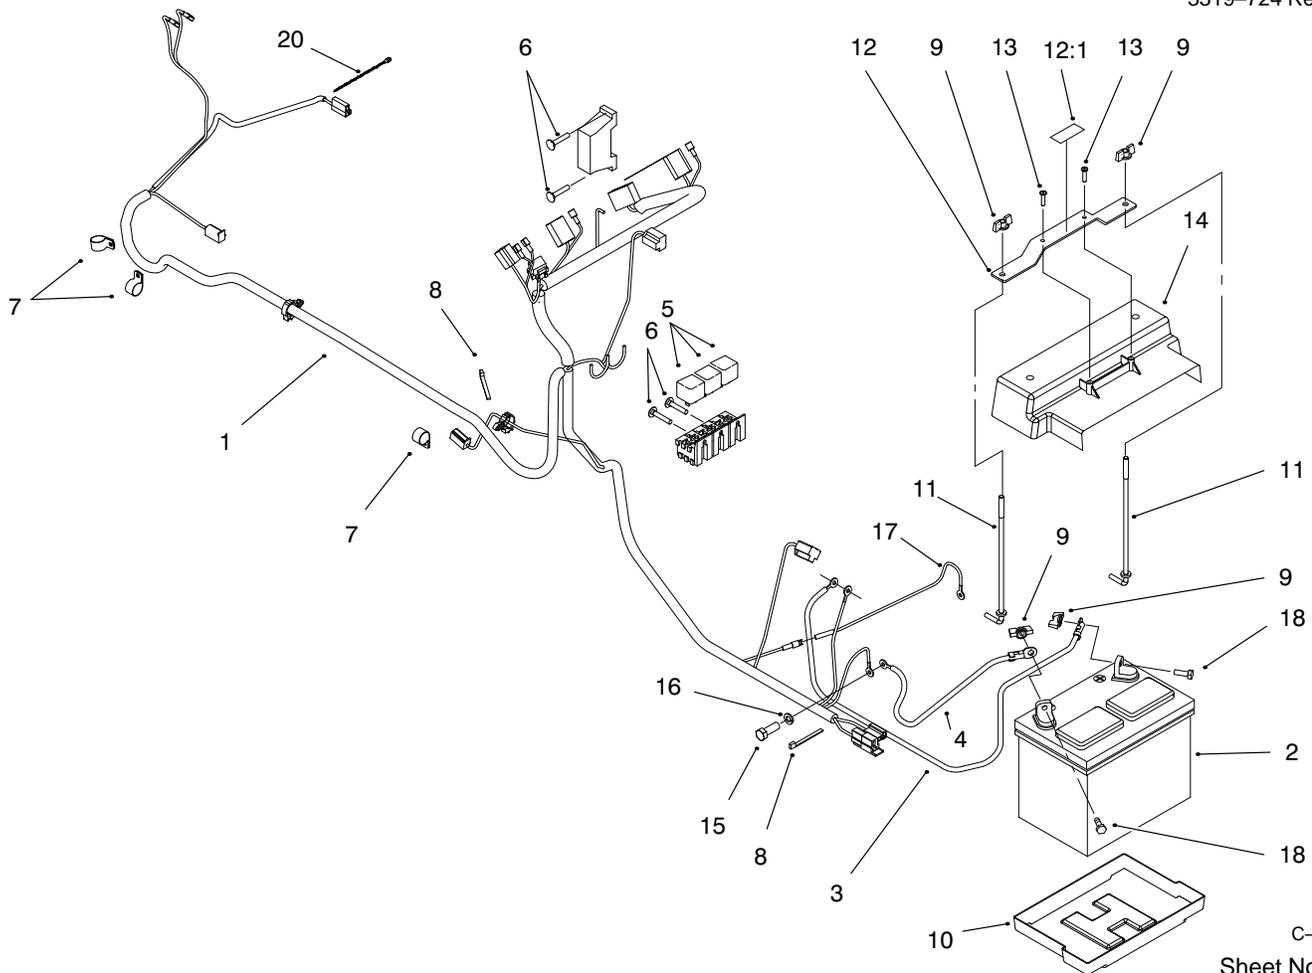

C-2740


Sheet No.:43

## Electrical Assembly (Model 73470 Only)

Ref. No.	Part No.	Qty.	Description
1	94-7603	1	Harness-Main (Only On: 73470)
2	94-1867	1	Battery (Only On: 73470)
3	95-7854	1	Cable-Battery Red (Only On: 73470)
4	95-7873	1	Cable-Battery Black (Only On: 73470)
5	98-7249	3	Relay (Only On: 73470)
6	12-5450	4	Screw-Thread Forming (Only On: 73470)
7	98-2358	3	Clamp-R (Only On: 73470)
8	614249	2	Tie Strap (Only On: 73470)
9	32103-22	4	Nut-Wing (Only On: 73470)
10	106948	1	Tray-Battery (Only On: 73470)
11	95-4042	2	Hold Down-Battery (Only On: 73470)
12	98-5056	1	Strap ASM (Only On: 73470)

Ref. No.	Part No.	Qty.	Description
12:1	93-1265	1	Decal-Hot (Only On: 73470)
13	94-4496	2	Screw (Only On: 73470)
14	95-4044	1	Shield-Battery (Only On: 73470)
15	33104-020	1	Screw-HHF (Only On: 73470)
16	3253-4	1	Washer-Lock (Only On: 73470)
17	98-1492	1	Wire (Only On: 73470)
18	321-4	2	Screw-HH (Only On: 73470)
20	98-5072	1	Tie-Cable (Only On: 73470)
*	218-578	2	10 Amp Fuse
*	109102	1	25 Amp Fuse
*	NN10277	1	30 Amp Fuse

\* Not Illustrated

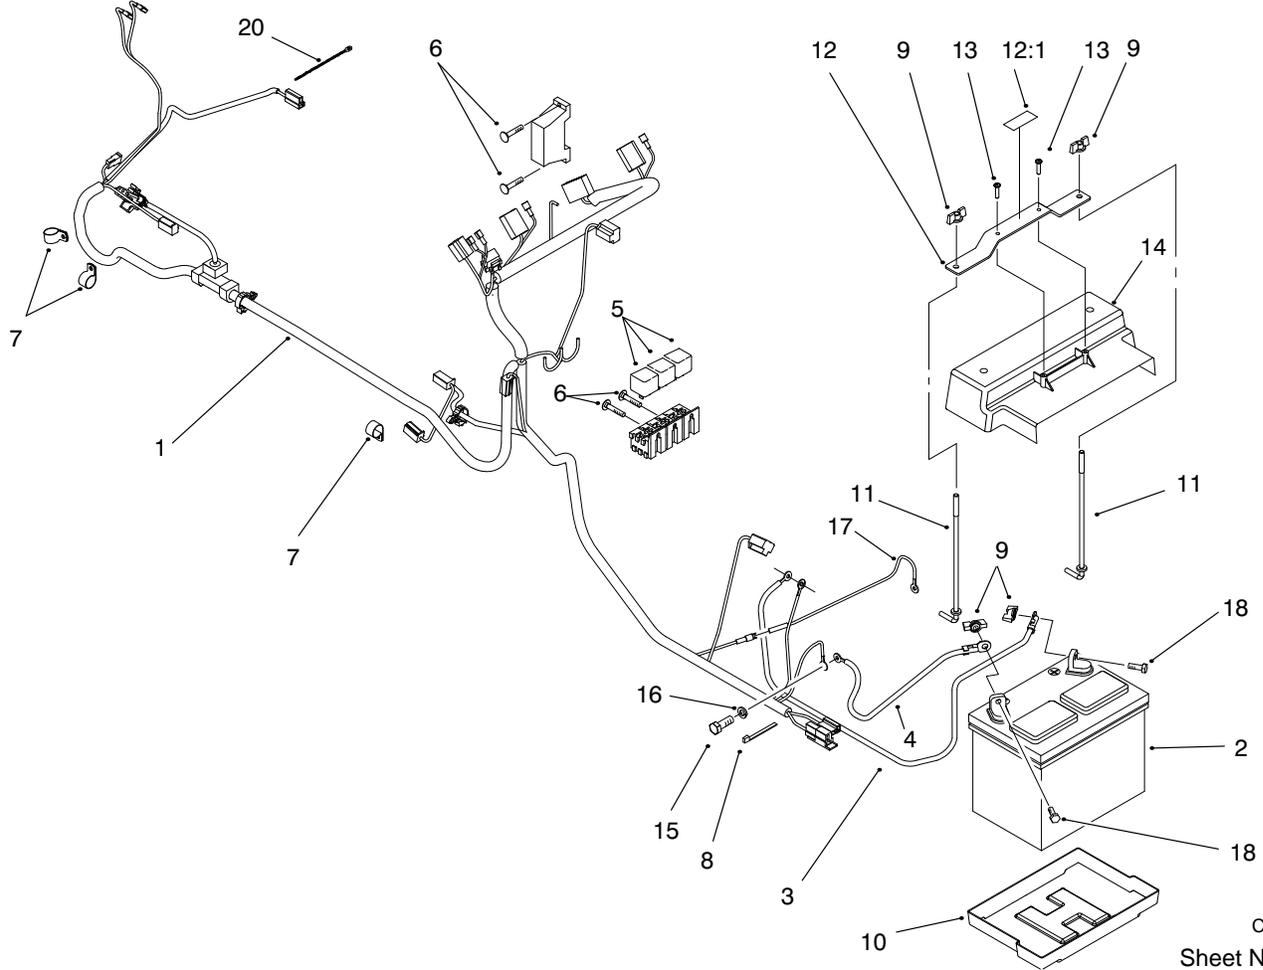

C-2741


Sheet No.:46

## Electrical Assembly (Models 73540 & 73541 Only)

Ref. No.	Part No.	Qty.	Description
1	94-7604	1	Harness-Main (Only On: 73540, 73541)
2	94-1867	1	Battery (Only On: 73540, 73541)
3	95-7854	1	Cable-Battery Red (Only On: 73540, 73541)
4	95-7873	1	Cable-Battery Black (Only On: 73540, 73541)
5	98-7249	3	Relay (Only On: 73540, 73541)
6	12-5450	4	Screw-Thread Forming (Only On: 73540, 73541)
7	98-2358	3	Clamp-R (Only On: 73540, 73541)
8	614249	1	Tie Strap (Only On: 73540, 73541)
9	32103-22	4	Nut-Wing (Only On: 73540, 73541)
10	106948	1	Tray-Battery (Only On: 73540, 73541)
11	95-4042	2	Hold Down-Battery (Only On: 73540, 73541)

Ref. No.	Part No.	Qty.	Description
12	98-5056	1	Strap ASM (Only On: 73540, 73541)
12:1	93-1265	1	Decal-Hot (Only On: 73540, 73541)
13	94-4496	2	Screw (Only On: 73540, 73541)
14	95-4044	1	Shield-Battery (Only On: 73540)
14	95-4092	1	Shield-Battery (Only On: 73541)
15	33104-020	1	Screw-HHF (Only On: 73540, 73541)
16	3253-4	1	Washer-Lock (Only On: 73540, 73541)
17	98-1492	1	Wire (Only On: 73540, 73541)
18	321-4	2	Screw-HH (Only On: 73540, 73541)
20	98-5072	1	Tie-Cable (Only On: 73540, 73541)




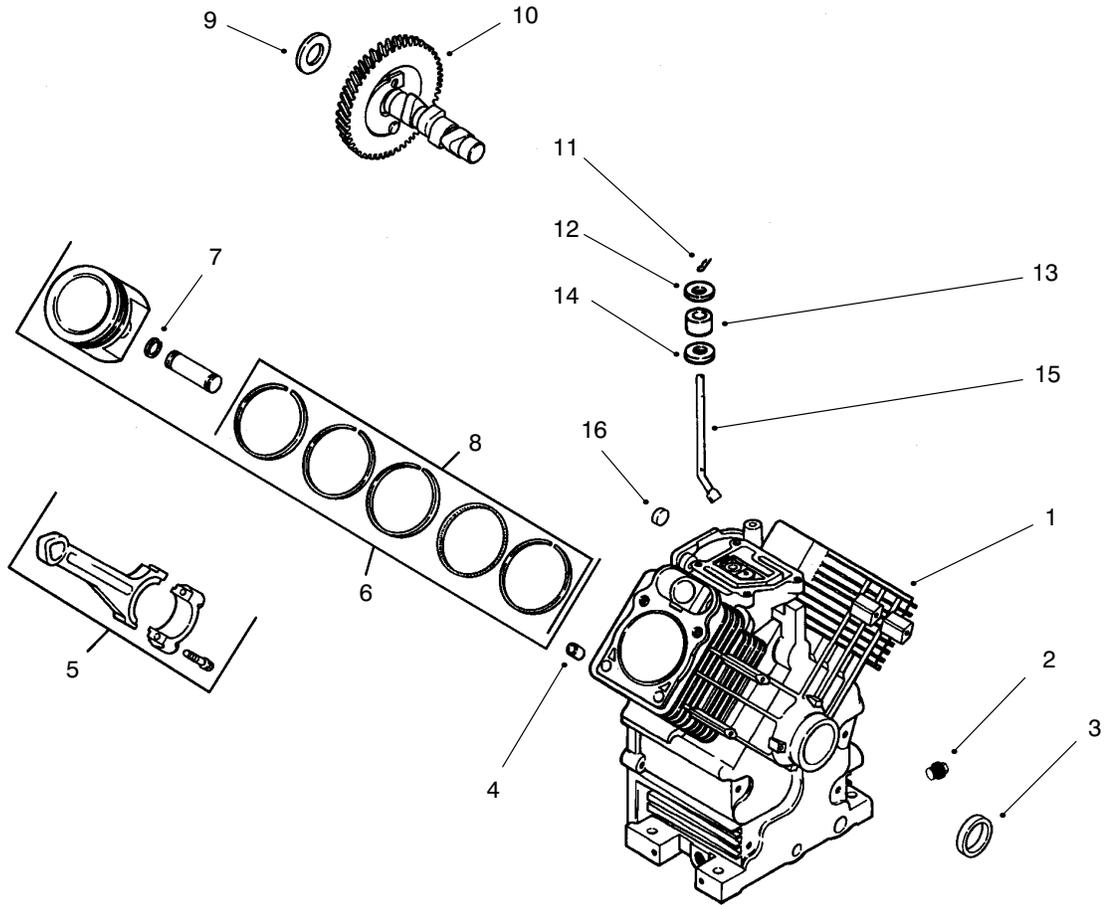

### Group 2 – Crankcase (Model 73470 Only)\*

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1		Cylinder Block (Use Miniblock 24 782 01)	1	9	12 422 09	Shim, camshaft red	A/R
2	X-75-10	Plug, hex. head	2	12 422 13	Shim, camshaft black	A/R	
3	24 032 01	Seal, oil front	1	12 422 07	Shim, camshaft white	A/R	
4	12 380 17	Pin, dowel locating	6	12 422 08	Shim, camshaft blue	A/R	
5	24 067 09	Connecting Rod (Std.)	2	12 422 10	Shim, camshaft yellow	A/R	
6	24 067 10	Connecting Rod (.25)	2	12 422 11	Shim, camshaft green	A/R	
7	24 018 01	Retainer, piston pin	4	12 422 12	Shim, camshaft gray	A/R	
8	24 108 01	Ring Set (Std.)	2	10	24 012 05	Camshaft	1
	24 108 02	Ring Set (.25)	2	11	12 380 04	Pin, hitch	1
	24 108 03	Ring Set (.50)	2	12	M-0631005	Washer, flat	1
				13	12 032 01	Seal, governor cross shaft	1
				14	X-25-102	Washer	1
				15	24 144 01	Shaft, governor cross	1
				16	52 139 09	Plug, cup	1


\* Obtain Parts From Your Local Kohler Dealer. Kohler Engine #CH18S-62579.

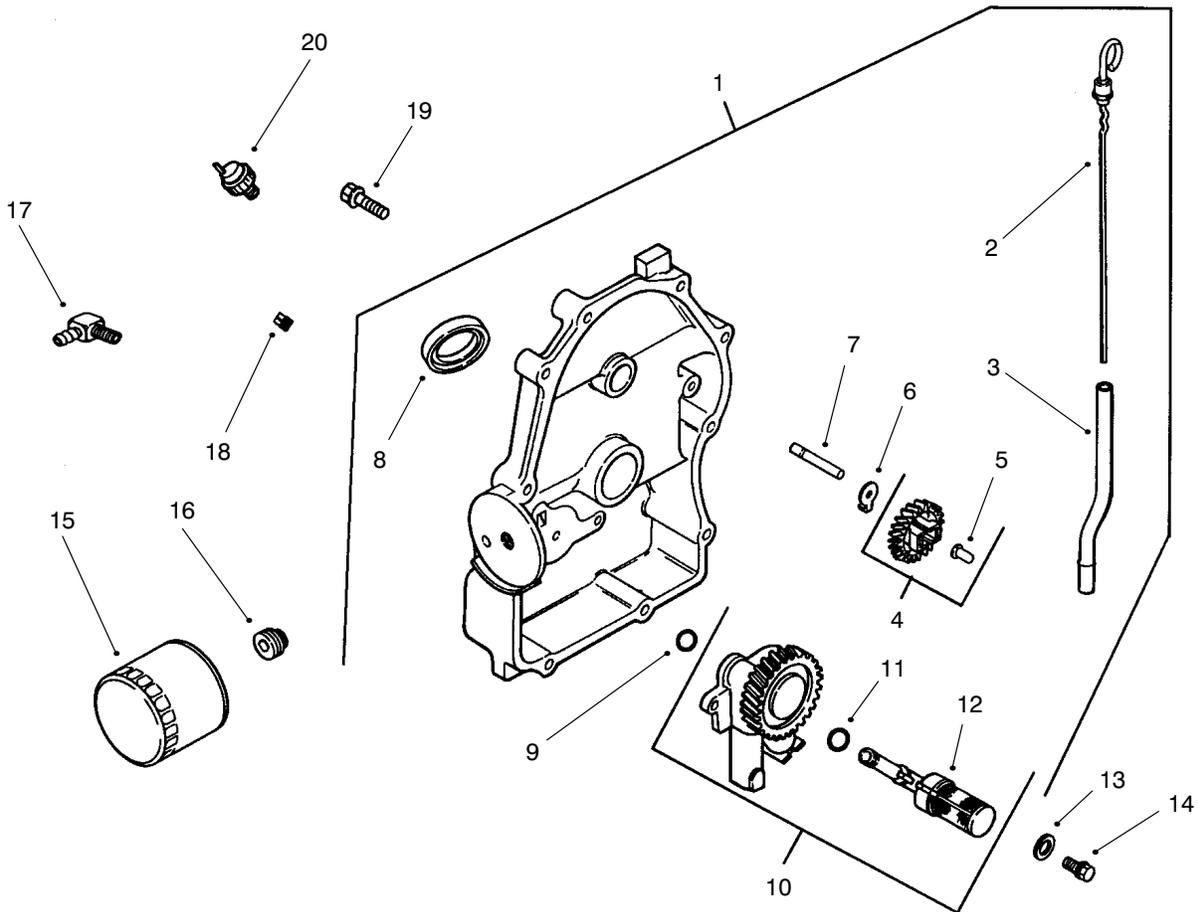

### Group 3 – Oil Pan Lubrication (Model 73470 Only)\*

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	54 009 01	Plate, closure assembly (Includes 2-12)	1	11	24 153 01	O-Ring, oil pick-up	1
2	24 038 06	Dipstick	1	12	24 381 04	Pick-up, oil	1
3	24 123 08	Tube, dipstick	1	13	M-0631005	Washer	2
4	24 043 12	Kit, governor gear (Includes 5)	1	14	M-0645025	Screw, hex. flange	2
5	12 380 01	Pin, governor regulating	1	15	12 050 01	Filter, oil	1
6	52 448 02	Tab, locking	1	16	24 136 01	Nipple, oil filter	1
7	12 144 02	Shaft, governor gear	1	17	25 155 02	Connector	1
8	52 032 08	Seal, oil (PTO end)	1	18	X-75-23	Plug, pipe	1
9	24 153 08	O-Ring	1	19	24 086 16	Screw, hex. flange	10
10	24 393 10	Oil pump assembly (Includes 11-12)	1	20	52 099 06	Switch, pressure	1
						<b>Not Illustrated</b>	
					25 113 05	Decal, oil sentry	1


\* Obtain Parts From Your Local Kohler Dealer. Kohler Engine #CH18S-62579.

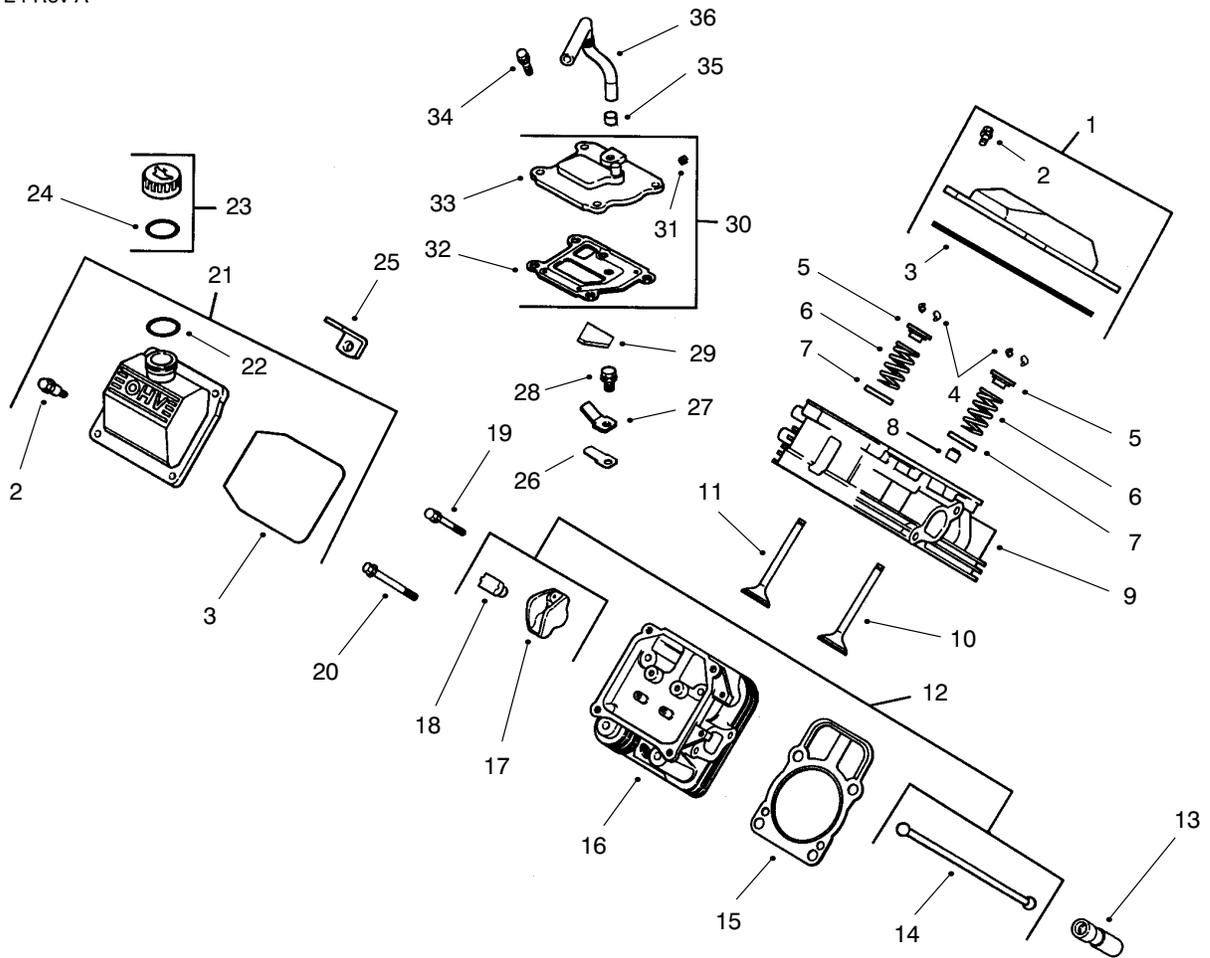

### Group 4 – Head/Valve/Breather (Model 73470 Only)\*

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	24 755 74	Kit, valve cover – plain (Includes 2-3)	1	18	24 599 01	Pivot, rocker arm	4
2	24 086 32	Screw, shoulder	4	19	M-0640034	Screw, hex. flange	4
3	24 153 16	O-Ring, valve cover	1	20	12 086 16	Screw, hex. flange	8
4	12 755 03	Kit, retainer	4	21	24 755 75	Kit, valve cover – oil fill (Includes 2,3,22)	1
5	12 173 01	Cap, valve spring	4	22	24 153 09	O-Ring	1
6	24 089 02	Spring, valve	4	23	25 755 13	Kit, oil fill cap (Includes 24)	1
7	235011	Retainer, spring	4	24	12 153 03	O-Ring, oil fill cap	1
8	24 032 05	Seal, valve stem	2	25	24 445 01	Strap, lifting	1
9	24 318 09	Head assembly, #1 cylinder	1	26	24 402 03	Reed, breather	1
10	24 017 01	Valve, intake (Std.)	2	27	12 018 01	Retainer, breather reed	1
	24 017 02	Valve, intake (.25)	2	28	M-0545010	Screw, hex. flange	1
11	24 016 01	Valve, exhaust (Std.)	2	29	24 050 01	Filter, breather	1
	24 016 02	Valve, exhaust (.25)	2	30	24 033 01	Kit, breather (Includes 31-33)	1
12	24 755 66	Kit, valve train (Includes 14,17,18)	1	31	X-75-23	Plug, allen head	1
13	12 351 02	Lifter, valve	4	32	24 041 23	Gasket, breather	1
14	24 411 05	Rod, push	4	33	24 096 02	Cover, breather	1
15	24 041 08	Gasket, cylinder head	2	34	M-0645020	Screw, hex. flange	4
16	24 318 10	Head assembly, #2 cylinder	1	35	X-426-9	Clamp, breather	1
17	25 186 01	Arm, rocker	4	36	24 326 06	Hose, breather	1

\* Obtain Parts From Your Local Kohler Dealer. Kohler Engine #CH18S-62579.

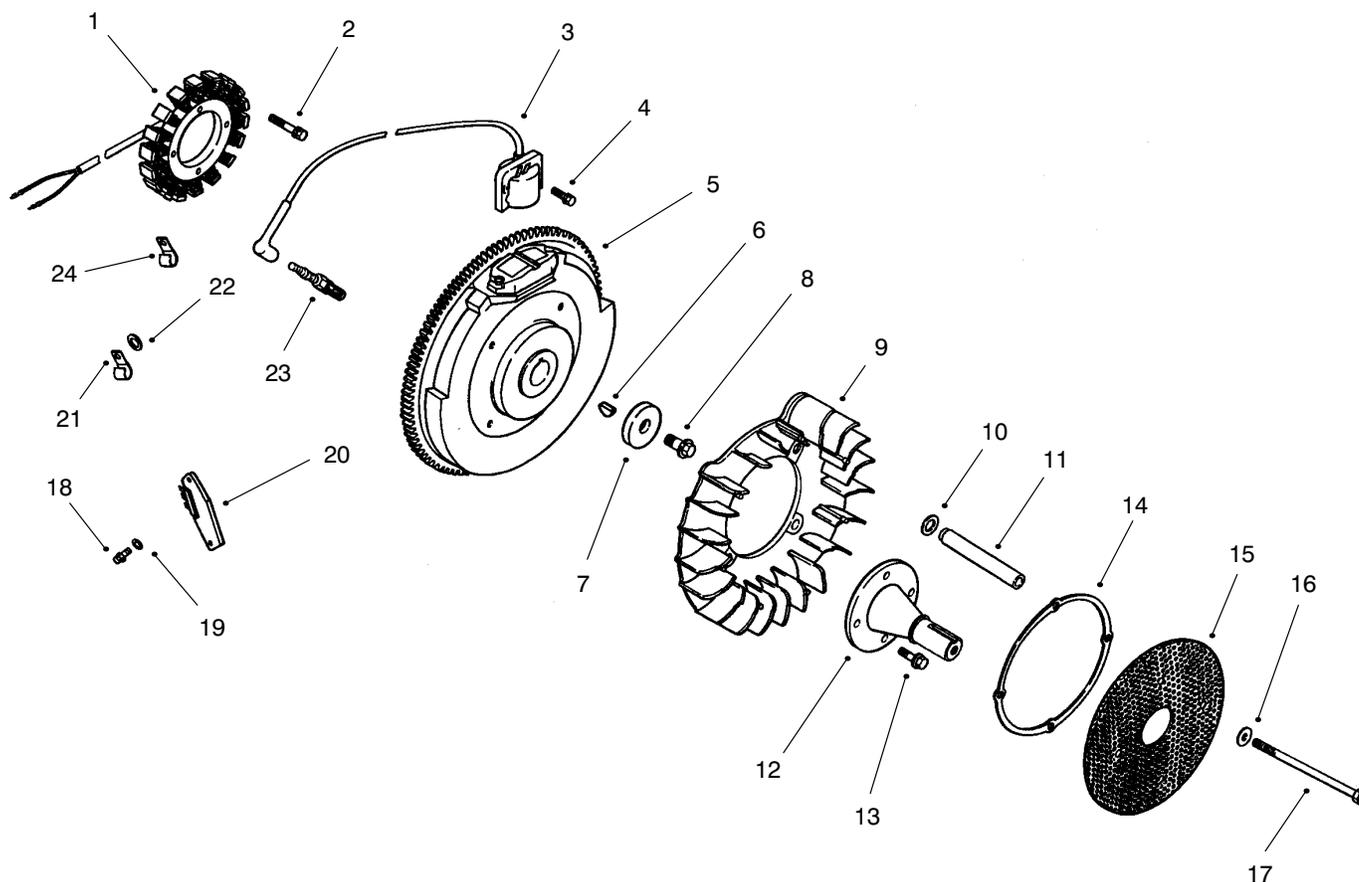


### Group 5 – Ignition/Electrical (Model 73470 Only)\*

Ref. No.	Part No.	Description	No. Used
1	24 085 03	Kit, 15 amp stator (Incl. 24 126 71 bracket)	1
2	M-0548025	Screw, hex. cap	2
3	24 584 01	Module, ignition	2
4	M-0545020	Screw, hex. flange	4
5	24 025 01	Flywheel	1
6	X-42-15	Key	1
7	12 468 03	Washer	1
8	12 086 14	Screw, hex. flange	1
9	24 157 03	Fan	1
10	24 468 11	Washer, sping	4
11	24 112 14	Spacer, grass screen	4
12	24 144 25	Shaft, front drive	1
13	M-0839025	Screw, hex. flange	4
14	24 141 06	Ring, support	1
15	24 162 22	Screen, grass	1
16	X-25-53	Washer, plain	4
17	M-0603100	Screw, hex. cap	4
18	24 086 18	Screw, phillips head	2
19	X-25-92	Washer	2
20	25 403 03	Rectifier-regulator 15 amp	1
21	235173	Clip, cable	1
22	X-25-63	Washer	1

Ref. No.	Part No.	Description	No. Used
23	12 132 02	Spark Plug	2
24	48 154 02	Clip, cable	1
		<b>Not Illustrated</b>	
	25 518 28	Lead, black, (4" – 18 gauge – insulated grip barrel eyelet terminals)	1
	24 176 08	Harness, wiring	1
	24 176 49	Harness, wiring (Includes 3 connectors)	1
	236602	Connector	1
	15 155 01	Connector	1
	52 155 04	Connector	1
	24 126 71	Bracket, stator wire	1
	25 086 43	Screw, set (adjusts grass scraper blade)	1
	X-22-11	Washer, lock(for ground screw & wire)	1
	41 155 03	Connector	1
	277563	Connector	1
	X-67-3	Screw (mounts 5 wire connector to baffle)	2


\* Obtain Parts From Your Local Kohler Dealer. Kohler Engine #CH18S-62579.

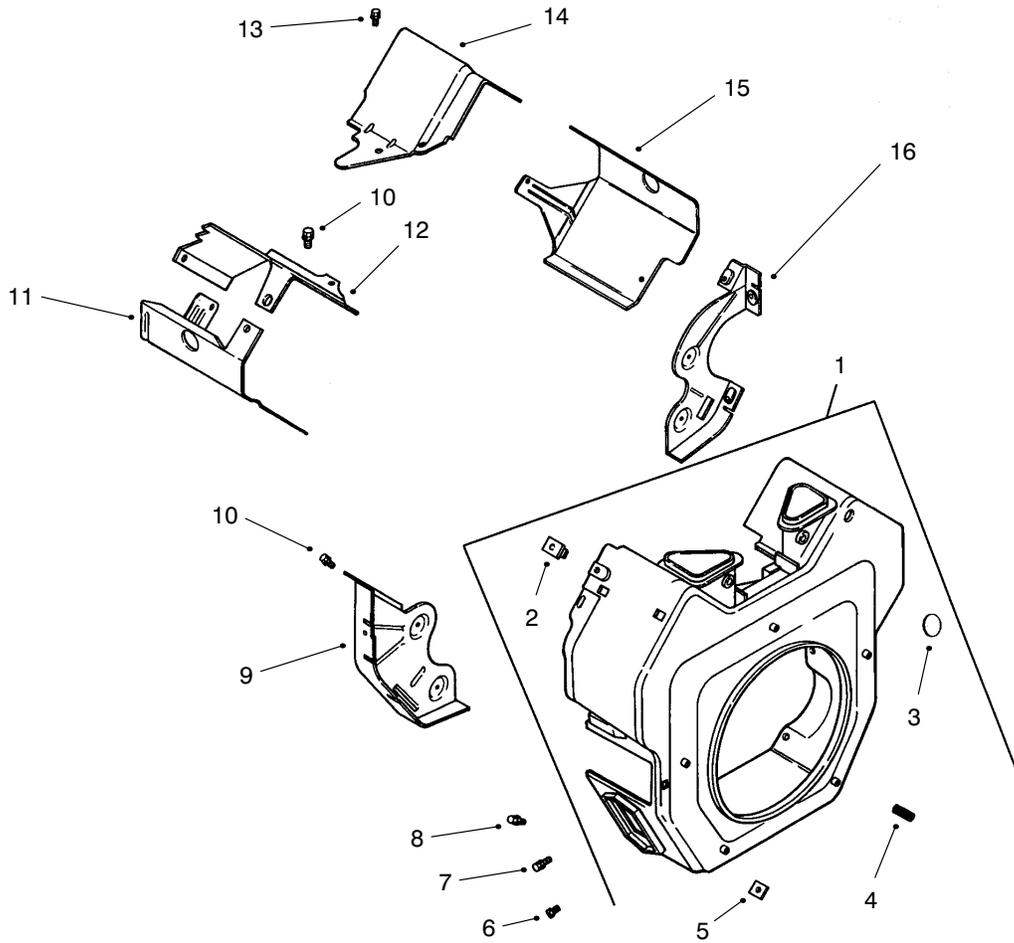

### Group 6 – Blower Housing & Baffles (Model 73470 Only)\*

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	24 027 83	Housing, blower (Includes 2-5)	1	10	M-0645016	Screw, hex. flange	6
2	24 100 02	Nut, plastic	2	11	24 063 20	Baffle, cyl. barrel-#2 side	1
3	24 755 90	Kit, button plug	1	12	24 063 17	Baffle, valley - #2 side	1
4	24 086 43	Screw, set	1	13	M-0545010	Screw, hex. flange	2
5	24 100 01	Nut, plastic	2	14	24 063 24	Baffle, valley - #1 side	1
6	M-0551016	Screw, hex. flange	1	15	24 063 30	Baffle, cyl. barrel-#1 side	1
7	M-0545016	Screw, hex. flange	5	16	24 146 08	Plate, backing - #1 side	1
8	M-0545020	Screw, hex. flange	2			<b>Not Illustrated</b>	1
9	24 146 02	Plate, backing - #2 side	1		24 113 11	Decal, HP	1

\* Obtain Parts From Your Local Kohler Dealer. Kohler Engine #CH18S-62579.

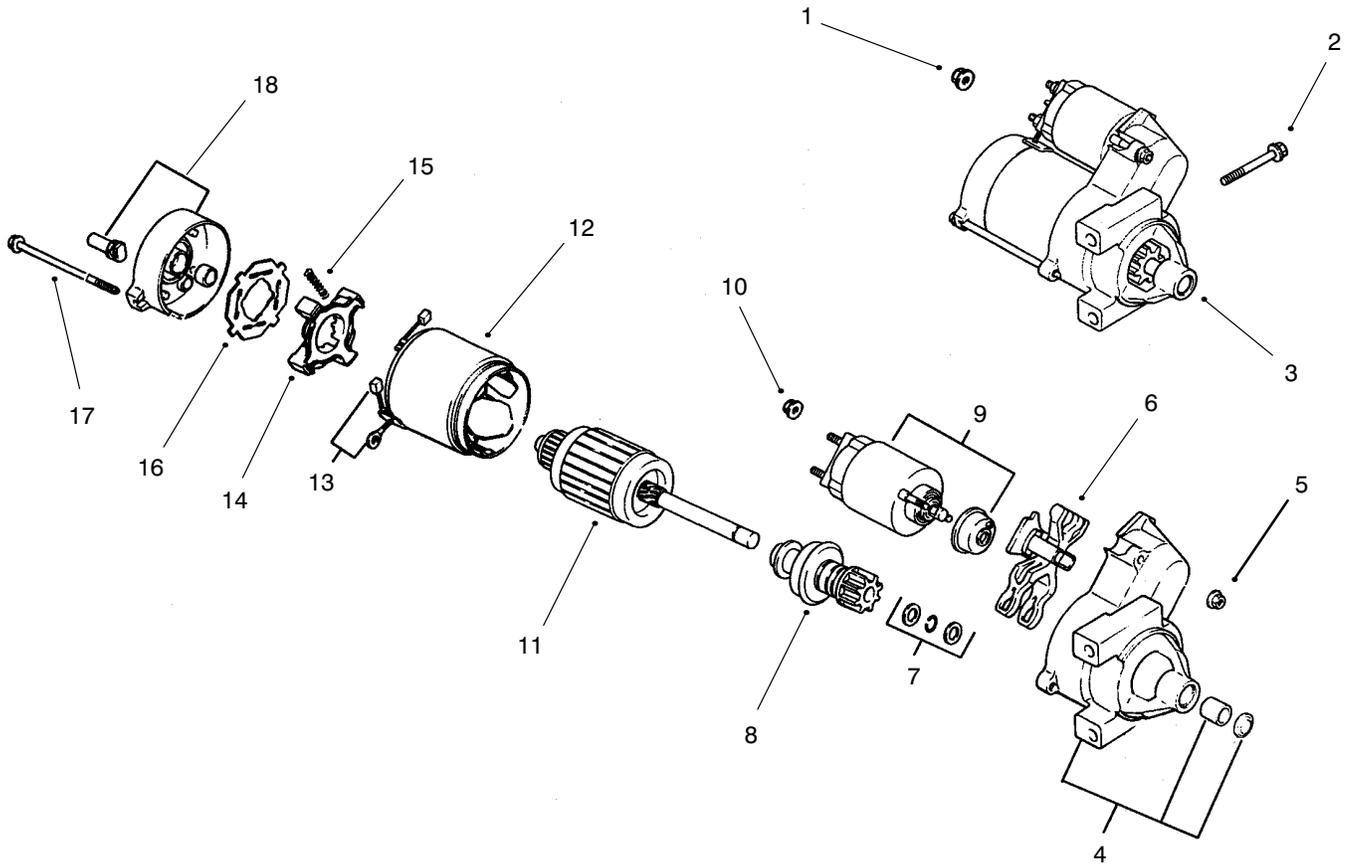


### Group 7 – Starting System (Model 73470 Only)\*

Ref. No.	Part No.	Description	No. Used
1	M-0841080	Nut, hex flange	1
2	M-0839080	Screw, hex. flange	2
3	24 098 01	Starter, solenoid shift assembly (Incl. 4-18)	1
4	24 081 04	Drive, end cap	1
5	52 100 10	Nut, starter	2
6	12 090 10	Lever, starter drive	1
7	24 755 84	Kit, starter repair	1
8	12 239 01	Drive, pinion	1
9	52 435 02	Solenoid	1

Ref. No.	Part No.	Description	No. Used
10	52 100 09	Nut, starter	1
11	12 170 04	Armature, starter	1
12	12 471 01	Frame	1
13	52 221 01	Kit, brush & spring (Includes 15)	1
14	52 323 03	Holder, brush	1
15	52 089 09	Spring, brush	4
16	52 168 01	Insulator	1
17	52 211 05	Bolt, thru	2
18	24 301 01	Commutator, end cap	1

\* Obtain Parts From Your Local Kohler Dealer. Kohler Engine #CH18S-62579.

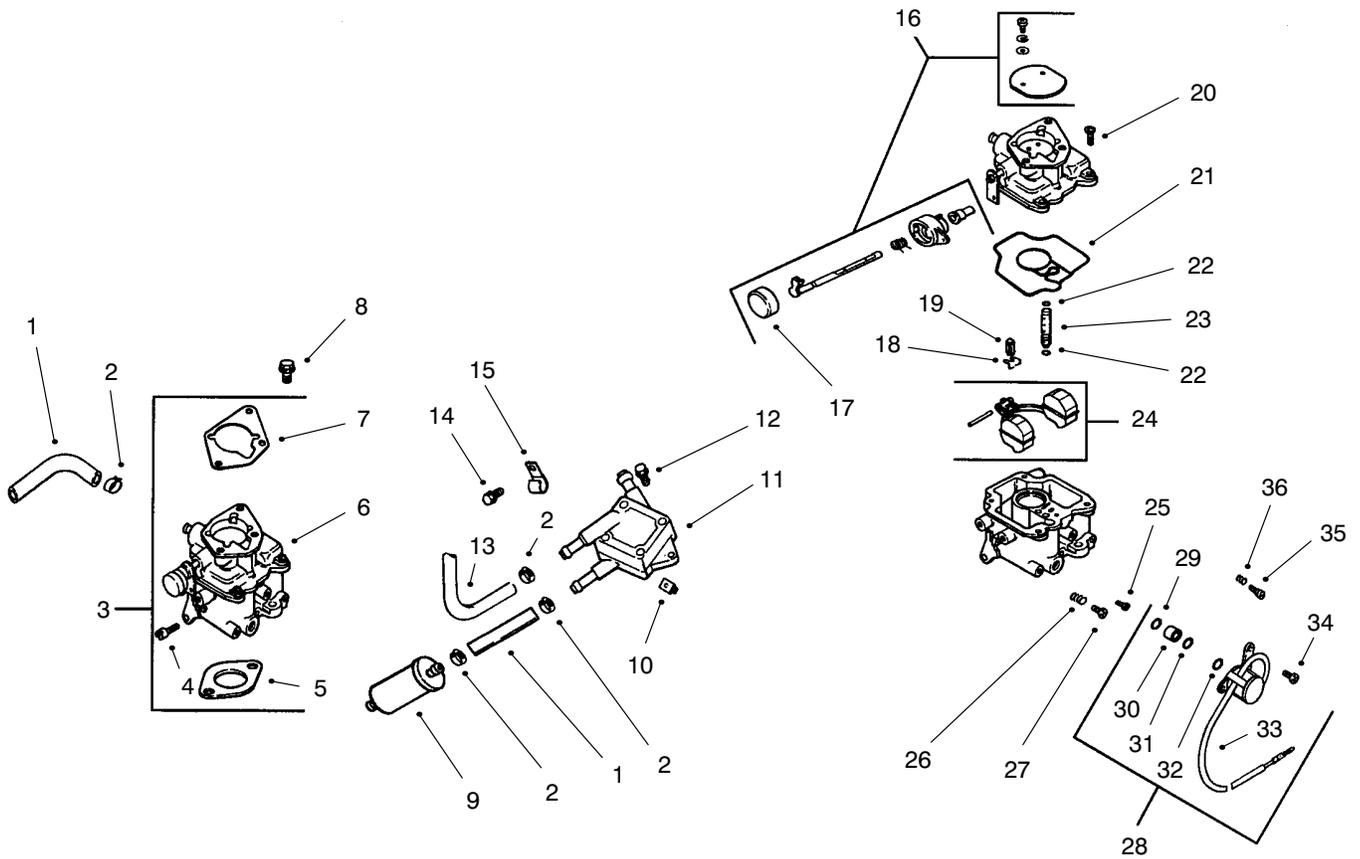


### Group 8 – Fuel System (Model 73470 Only)\*

Ref. No.	Part No.	Description	No. Used
1	25 353 10	Line, fuel 9"	2
2	X-426-9	Clamp, hose	6
3	24 853 35	Kit, carburetor w/gasket (Includes 4-7)	1
4	24 086 05	Screw, throttle stop	1
5	24 041 06	Gasket, air cleaner base	1
6	24 053 32	Carburetor assembly (Includes 16-36, carburetor repair kit 24 757 03)	1
7	24 041 17	Gasket, carburetor	1
8	M-0651030	Screw, hex. flange	2
9	24 050 02	Filter, fuel	1
10	24 100 01	Nut, plastic	2
11	24 393 04	Pump, fuel – pulse	1
12	24 086 12	Screw, hex. cap	2
13	24 353 04	Line, fuel 17"	1
14	M-0650012	Screw, hex. flange	1
15	47 154 01	Clip, cable	1
16	24 757 07	Kit, choke repair (Includes 17)	1
17	24 173 02	Cap, choke lever	1
18	24 154 01	Clip, inlet needle valve	1

Ref. No.	Part No.	Description	No. Used
19	24 462 01	Valve, inlet needle	1
20	24 086 09	Screw, carburetor body	4
21	24 041 09	Gasket, carburetor body	1
22	24 153 02	O-Ring, slow jet	2
23	24 337 01	Jet, slow	1
24	24 757 02	Kit, float repair	1
25	24 337 02	Jet, main	1
26	24 089 10	Spring, idle adjust screw	1
27	24 086 10	Screw, idle adjusting	1
28	24 757 01	Kit, solenoid (Includes 29-34)	1
29	24 153 06	O-Ring	1
30	24 521 01	Seat, solenoid	1
31	24 153 05	O-Ring	1
32	24 153 04	O-Ring	1
33	24 435 01	Solenoid	1
34	24 086 07	Screw, solenoid	2
35	24 368 01	Needle, idle	1
36	24 089 11	Spring, idle needle	1
	24 757 03	<b>Not Illustrated</b> Kit, carburetor repair	1


\* Obtain Parts From Your Local Kohler Dealer. Kohler Engine #CH18S-62579.

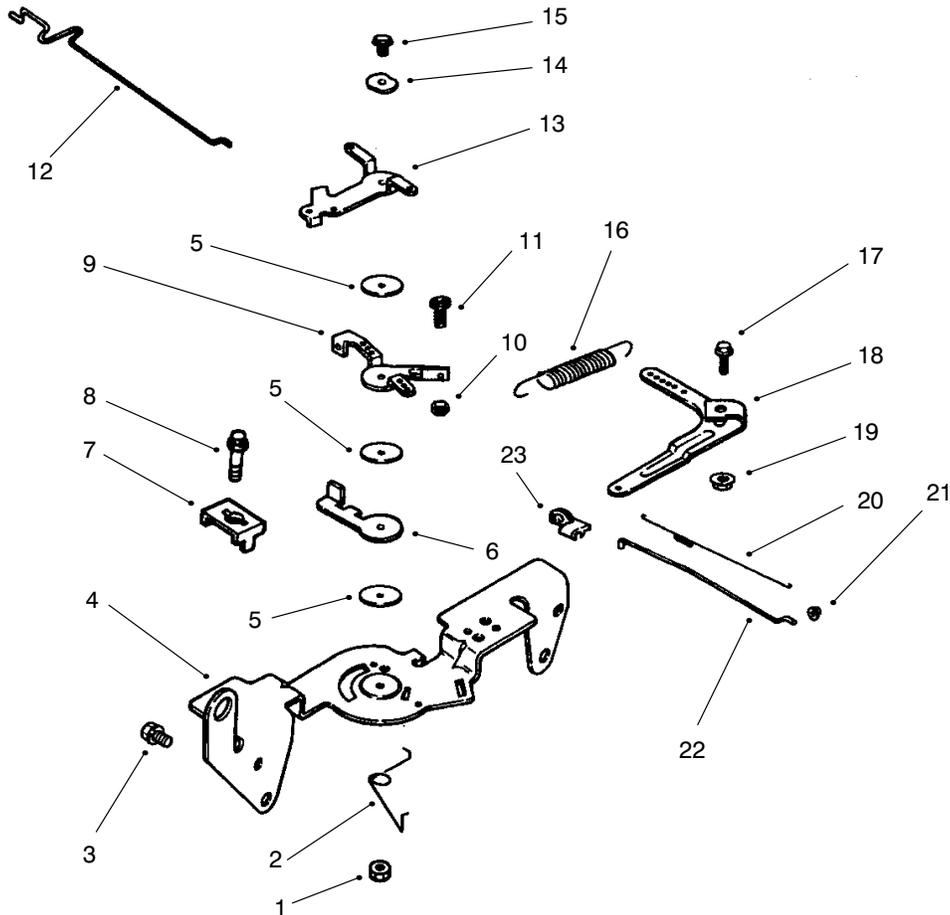

## Group 9 – Engine Controls (Model 73470 Only)\*

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	M-0547050	Nut, hex. lock	1	13	24 090 05	Lever, choke	1
2	24 089 03	Spring, choke return	1	14	41 468 03	Washer, spring	1
3	M-0645016	Screw, hex. flange	4	15	M-0545020	Screw, hex. flange	1
4	24 126 56	Bracket, control	1	16	24 089 15	Spring, governor	1
5	24 468 01	Washer	3	17	SM-0642025	Screw, hex. flange	1
6	24 090 07	Lever, throttle actuator	1	18	24 090 14	Lever, governor	1
7	12 237 01	Clamp, cable	2	19	M-0641060	Nut, hex. flange	1
8	M-0545016	Screw, hex. flange	2	20	24 089 01	Spring, linkage	1
9	24 090 03	Lever, throttle control	1	21	25 158 08	Bushing, linkage retaining	1
10	M-0446030	Nut, hex	1	22	24 079 01	Linkage, throttle	1
11	M-0401030	Screw, hex. cap	1	23	25 158 11	Bushing, linkage retaining	1
12	24 079 02	Linkage, choke	1				


\* Obtain Parts From Your Local Kohler Dealer. Kohler Engine #CH18S-62579.

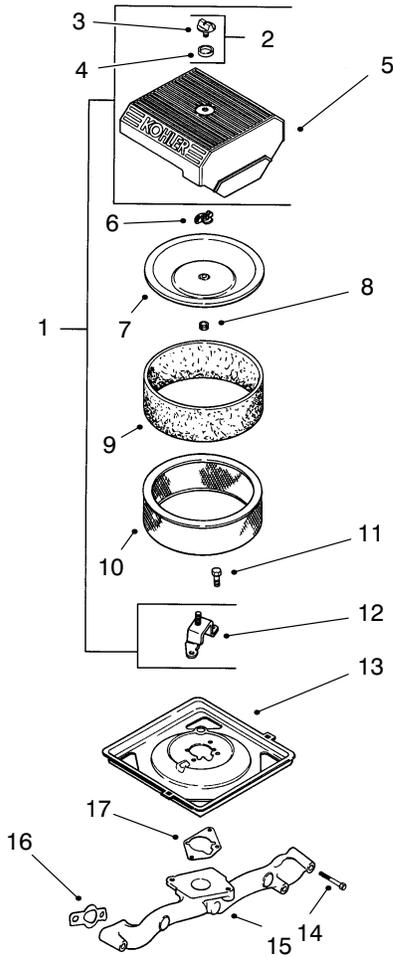

### Group 10 – Air Filter (Model 73470 Only)\*

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	24 743 05	Kit, air cleaner cover (Includes 2-5, 12)	1	9	24 083 02	Precleaner, element	1
2	54 755 01	Kit, knob with seal (Includes 3-4)	1	10	47 083 03	Element, air cleaner	1
3	25 341 03	Knob, cover	1	11	M-0639016	Screw, hex. flange	3
4	24 153 15	Seal, air cleaner cover knob	1	12	24 126 21	Bracket, air cleaner base	1
5	24 096 24	Cover, air cleaner	1	13	24 094 03	Base, air cleaner	1
6	12 100 01	Wing Nut	1	14	M-0651055	Screw, hex. flange	4
7	24 096 01	Cover, inner air cleaner	1	15	24 164 14	Manifold, intake	1
8	24 032 03	Seal, inner air cleaner	1	16	24 041 01	Gasket, intake manifold	2
				17	24 041 06	Gasket, air cleaner base	1

\* Obtain Parts From Your Local Kohler Dealer. Kohler Engine #CH18S-62579.

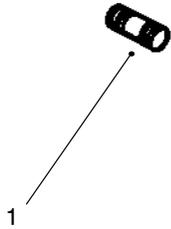


### Group 11 – Exhaust (Model 73470 Only)

Ref. No.	Part No.	Description	No. Used
1	25 072 04	Stud	4
		<b>Not Illustrated</b>	
	24 782 01	Miniblock	1
	24 755 03	Gasket Set	1

Ref. No.	Part No.	Description	No. Used

\* Obtain Parts From Your Local Kohler Dealer. Kohler Engine #CH18S-62579.

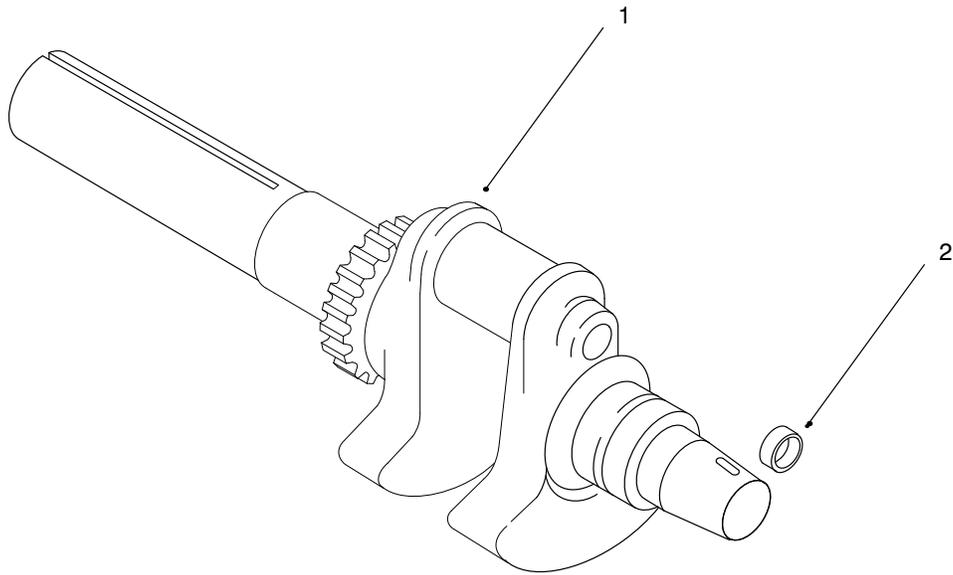


### Group 1 – Crankshaft (Model 73540 & 73541)

Ref. No.	Part No.	Description	No. Used
1	24 014 14	Crankshaft (Includes 2)	1
2	52 139 09	Plug, cup	1

Ref. No.	Part No.	Description	No. Used

**Obtain Parts From Your Local Kohler Dealer**  
 Kohler Engine #CH20S-64583

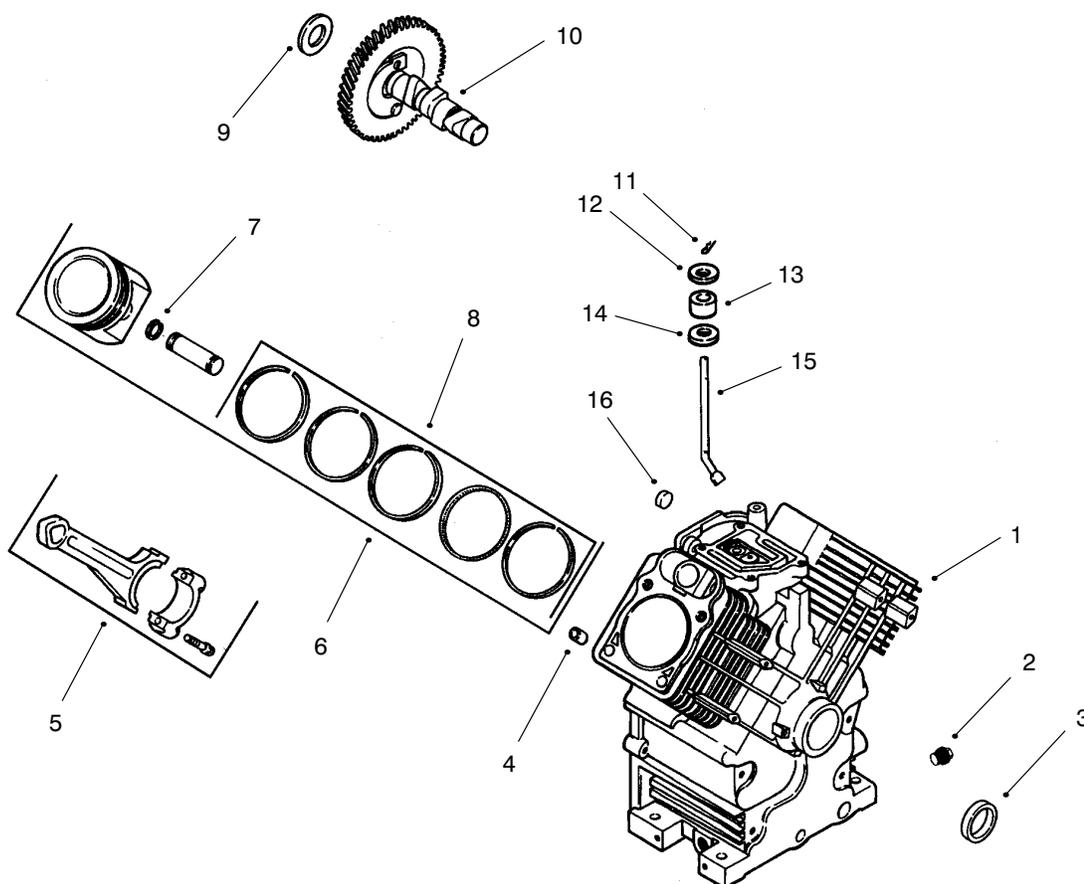


## Group 2 – Crankcase (Models 73540 & 73541)

Ref. No.	Part No.	Description	No. Used
1	X-75-10	Cylinder Block (Use Miniblock 24 782 01)	1
2	24 032 01	Plug, hex. head	2
3	12 380 17	Seal, oil front	1
4		Pin, dowel locating	6
5	24 067 09	Connecting Rod (Std.)	2
	24 067 10	Connecting Rod (.25)	2
6	24 874 01	Piston w/Ring Set (Std.)	2
	24 874 02	Piston w/Ring Set (.25)	2
	24 874 03	Piston w/Ring Set (.50)	2
7	24 018 01	Retainer, piston pin	4
8	24 108 01	Ring Set (Std.)	2
	24 108 02	Ring Set (.25)	2
	24 108 03	Ring Set (.50)	2

Ref. No.	Part No.	Description	No. Used
9	12 422 09	Shim, camshaft red	A/R
	12 422 13	Shim, camshaft black	A/R
	12 422 07	Shim, camshaft white	A/R
	12 422 08	Shim, camshaft blue	A/R
	12 422 10	Shim, camshaft yellow	A/R
	12 422 11	Shim, camshaft green	A/R
	12 422 12	Shim, camshaft gray	A/R
10	24 012 05	Camshaft	1
	11 12 380 04	Pin, hitch	1
	12 M-0631005	Washer, flat	1
	13 12 032 01	Seal, governor cross shaft	1
	14 X-25-102	Washer, plain	1
	15 24 144 01	Shaft, governor cross	1
	16 52 139 09	Plug, cup	1

Obtain Parts From Your Local Kohler Dealer  
Kohler Engine #CH20S-64583

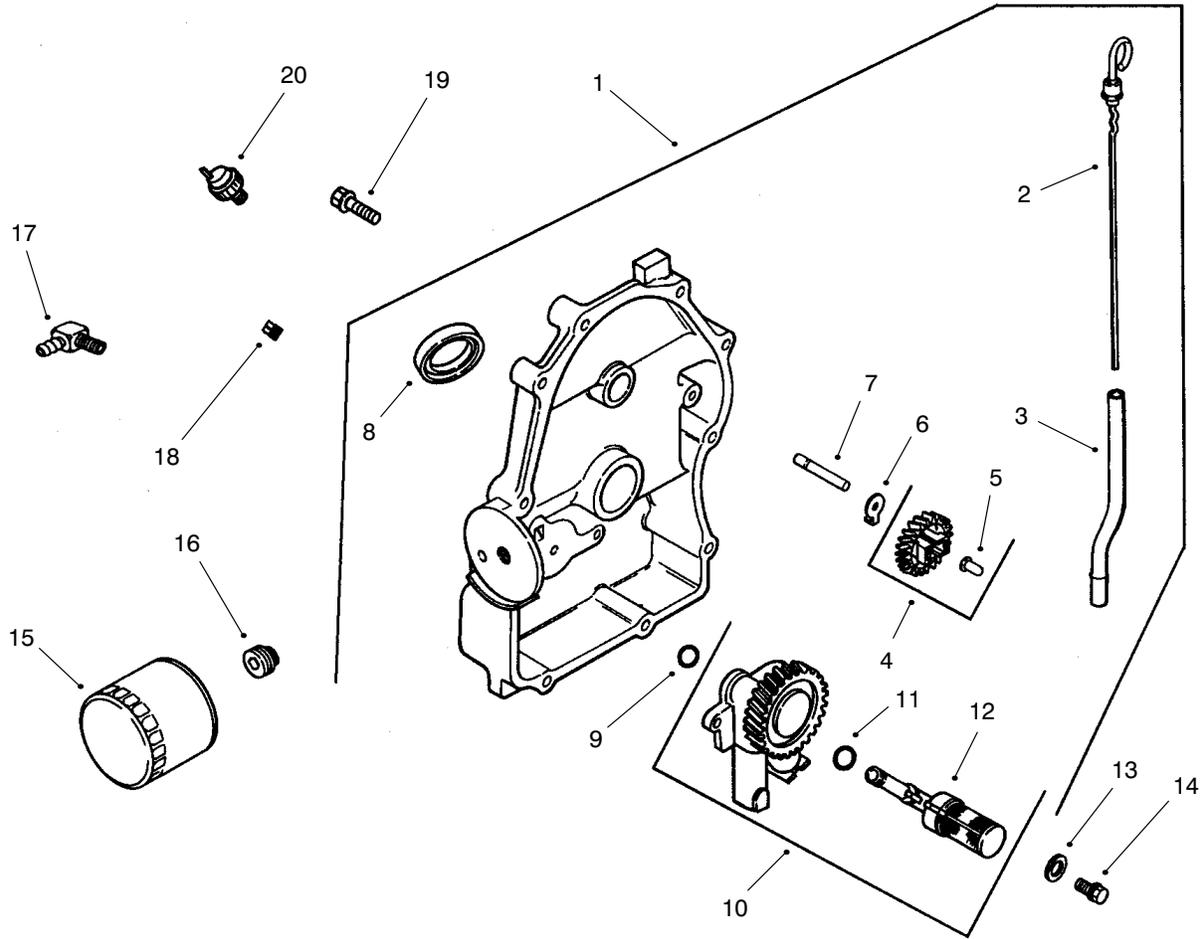


### Group 3 – Oil Pan/Lubrication (Models 73540 & 73541)

Ref. No.	Part No.	Description	No. Used
1	54 009 01	Plate, closure assembly (Includes 2-12)	1
2	24 038 06	Dipstick	1
3	24 123 08	Tube, dipstick	1
4	24 043 12	Kit, governor gear (Includes 5)	1
5	12 380 01	Pin, governor regulating	1
6	52 448 02	Tab, locking	1
7	12 144 02	Shaft, governor gear	1
8	52 032 08	Seal, oil (PTO end)	1
9	24 153 08	O-Ring	1
10	24 393 10	Oil pump assembly (Includes 11,12)	1
11	24 153 01	O-Ring, oil pick-up	1

Ref. No.	Part No.	Description	No. Used
12	24 381 04	Pick-up, oil	1
13	M-0631005	Washer, plain	2
14	M-0645025	Screw, hex. flange	2
15	12 050 01	Filter, oil	1
16	24 136 01	Nipple, oil filter	1
17	25 155 02	Connector	1
18	X-75-23	Plug, pipe	1
19	24 086 16	Screw, hex. flange	10
20	52 099 06	Switch, pressure	1
		<b>Not Illustrated</b>	
	25 113 05	Decal, oil sentry	1

Obtain Parts From Your Local Kohler Dealer


Kohler Engine #CH20S-64583

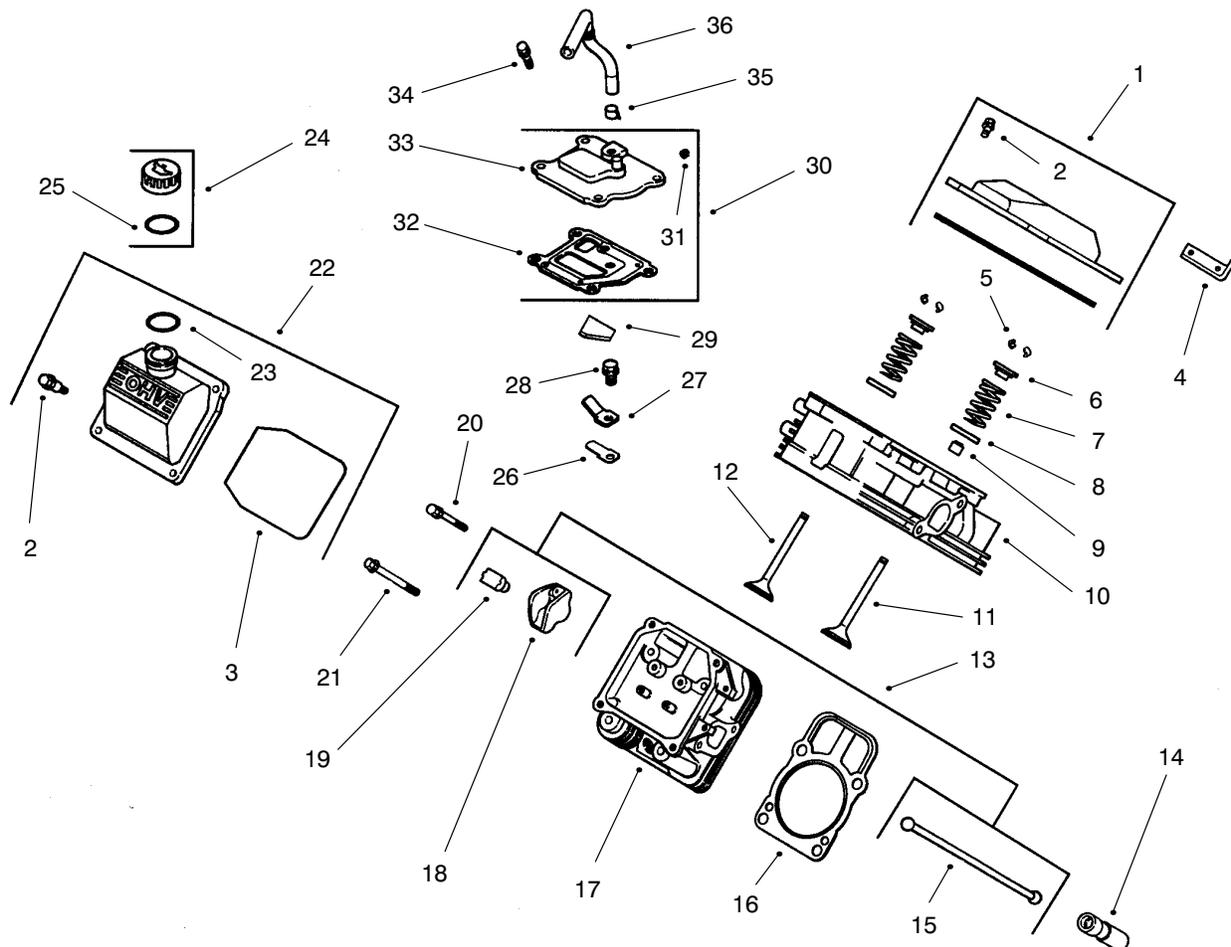

## Group 4 – Head/Valve/Breather (Models 73540 & 73541)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	24 755 74	Kit, valve cover – plain (Includes 2–3)	1	18	25 186 01	Arm, rocker	4
2	24 086 32	Screw, shoulder	4	19	24 599 01	Pivot, rocker arm	4
3	24 153 16	O–Ring, valve cover	1	20	M–0640034	Screw, hex. flange	4
4	24 445 01	Strap, lifting	1	21	12 086 16	Screw, hex. flange	8
5	12 755 03	Kit, retainer	4	22	24 755 75	Kit, valve cover – oil fill (Includes 2,3,23)	1
6	12 173 01	Cap, valve spring	4	23	24 153 09	O–Ring	1
7	24 089 02	Spring, valve	4	24	25 755 13	Kit, oil fill cap (Includes 25)	1
8	235011	Retainer, spring	4	25	12 153 03	O–Ring, oil fill cap	1
9	24 032 05	Seal, valve stem	2	26	24 402 03	Reed, breather	1
10	24 318 09	Head assembly, #1 cylinder	1	27	12 018 01	Retainer, breather reed	1
11	24 017 01	Valve, intake (Std.)	2	28	M–0545010	Screw, hex. flange	1
	24 017 02	Valve, intake (.25)	2	29	24 050 01	Filter, breather	1
12	24 016 01	Valve, exhaust (Std.)	2	30	24 033 01	Kit, breather (Includes 31–33)	1
	24 016 02	Valve, exhaust (.25)	2	31	X–75–23	Plug, allen head 1/8 pipe	1
13	24 755 66	Kit, valve train (Includes 15,18,19)	1	32	24 041 23	Gasket, breather	1
14	12 351 02	Lifter, valve	4	33	24 096 02	Cover, breather	1
15	24 411 05	Rod, push	4	34	M–0645020	Screw, hex. flange	4
16	24 041 08	Gasket, cylinder head	2	35	X–426–9	Clamp, breather	1
17	24 318 10	Head assembly, #2 cylinder	1	36	24 326 06	Hose, breather	1

Obtain Parts From Your Local Kohler Dealer  
Kohler Engine #CH20S–64583

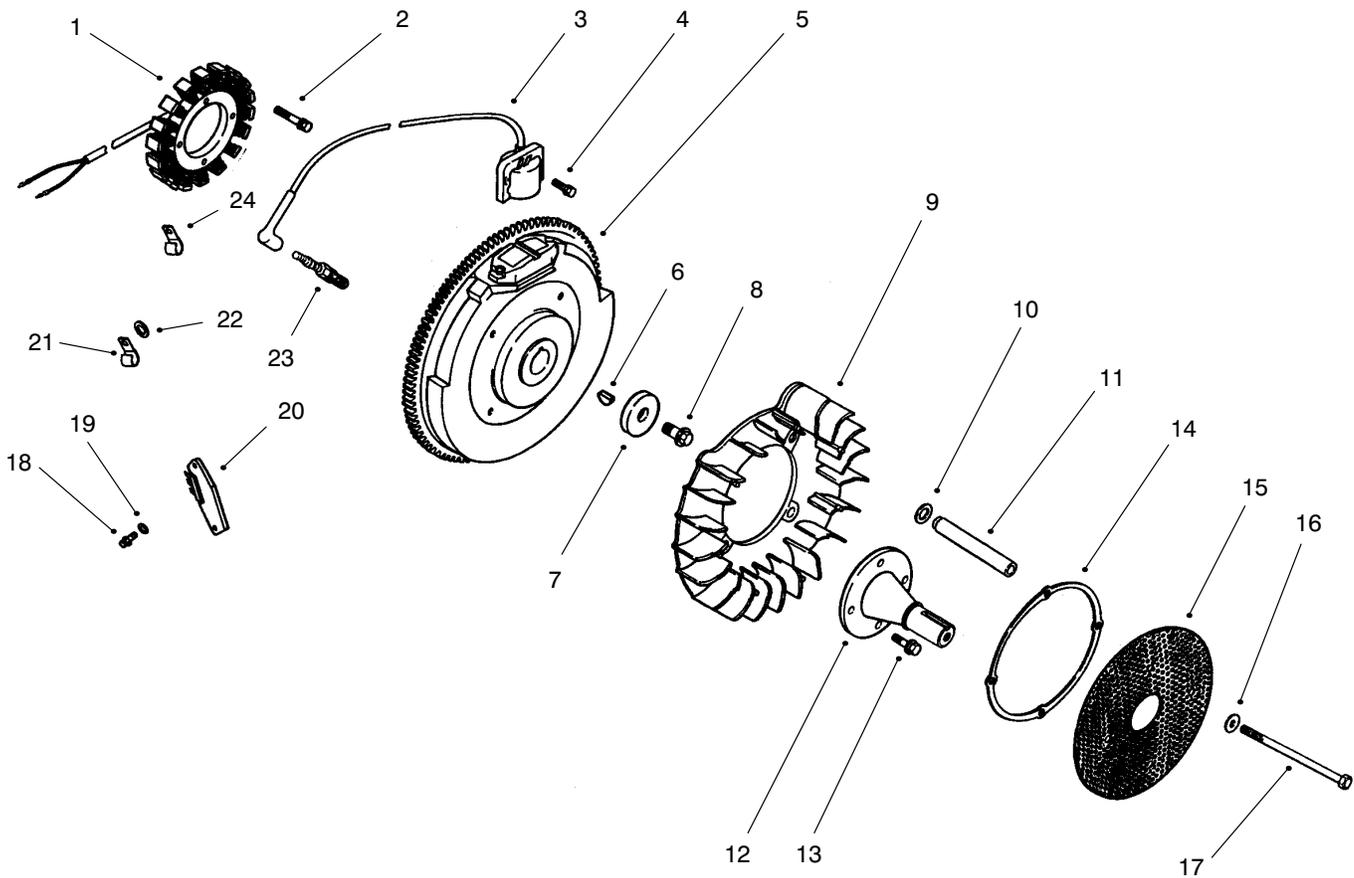


### Group 5 – Ignition/Electrical (Models 73540 & 73541)

Ref. No.	Part No.	Description	No. Used
1	54 755 09	Kit, 15 amp stator (Incl. 24 126 71 bracket)	1
2	M-0548025	Screw, hex. cap	2
3	24 584 01	Module, ignition	2
4	M-0545020	Screw, hex. flange	4
5	24 025 01	Flywheel	1
6	X-42-15	Key	1
7	12 468 03	Washer, plain	1
8	12 086 14	Screw, hex. flange	1
9	24 157 03	Fan	1
10	24 468 11	Washer, spring	4
11	24 112 14	Spacer, grass screen	4
12	24 144 25	Shaft, front drive	1
13	M-0839025	Screw, hex. flange	4
14	24 141 06	Ring, support	1
15	24 162 22	Screen, grass	1
16	X-25-53	Washer, plain	4
17	M-0603100	Screw, hex. cap	4
18	24 086 18	Screw, phillips hd.	
19	X-25-92	Washer, plain	2
20	25 403 03	Rectifier-regulator 15 amp	1
21	235173	Clip, cable	1
22	X-25-63	Washer, plain	1
23	12 132 02	Spark Plug	2

Ref. No.	Part No.	Description	No. Used
24	48 154 02	Clip, cable	1
		<b>Not Illustrated</b>	
	25 518 28	Lead, black, (4" - 18 gauge - insulated grip barrel eyelet terminals)	1
	24 176 08	Harness, wiring	1
	24 176 49	Harness, wiring (Includes 3 connectors)	1
	236602	Connector	1
	15 155 01	Connector	1
	52 155 04	Connector	1
	24 126 71	Bracket, stator wire	1
	25 086 43	Screw, set (adjusts grass scraper blade)	1
	X-22-11	Washer, lock (for ground screw & wire)	1
	41 155 03	Connector	1
	277563	Connector	1
	X-67-3	Screw (mounts 5 wire connector to baffle)	2

Obtain Parts From Your Local Kohler Dealer  
 Kohler Engine #CH20S-64583

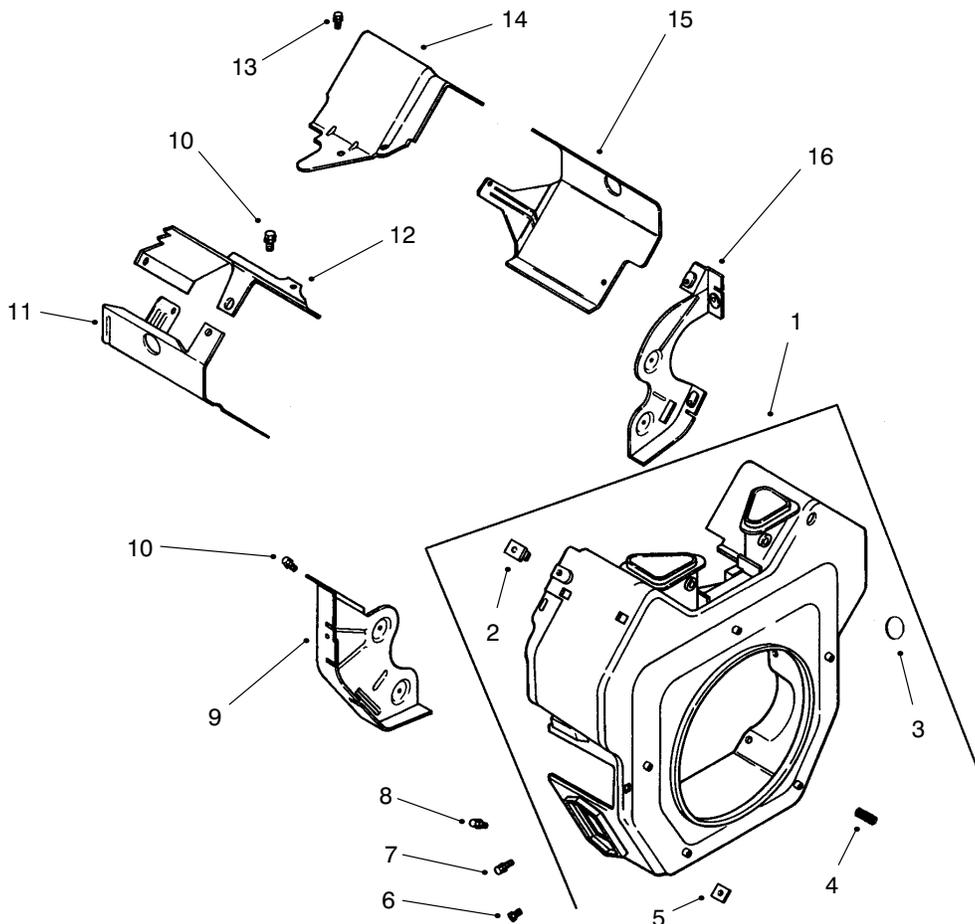


### Group 6 – Blower Housing & Baffles (Models 73540 & 73541)

Ref. No.	Part No.	Description	No. Used
1	24 027 86	Housing, blower (Includes 2-5)	1
2	24 100 02	Nut, plastic	2
3	24 755 90	Kit, button plug	1
4	24 086 43	Screw, set	1
5	24 100 01	Nut, plastic	2
6	M-0551016	Screw, hex. flange	1
7	M-0545016	Screw, hex. flange	5
8	M-0545020	Screw, hex. flange	2
9	24 146 02	Plate, backing – #2 side	1

Ref. No.	Part No.	Description	No. Used
10	M-0645016	Screw, hex. flange	6
11	24 063 20	Baffle, cyl. barrel – #2 side	1
12	24 063 17	Baffle, valley – #2 side	1
13	M-0545010	Screw, hex. flange	2
14	24 063 24	Baffle, valley – #1 side	1
15	24 063 30	Baffle, cyl. barrel – #1 side	1
16	24 146 08	Plate, backing – #1 side	1
		<b>Not Illustrated</b>	
	24 113 12	Decal, HP	1

Obtain Parts From Your Local Kohler Dealer  
Kohler Engine #CH20S-64583

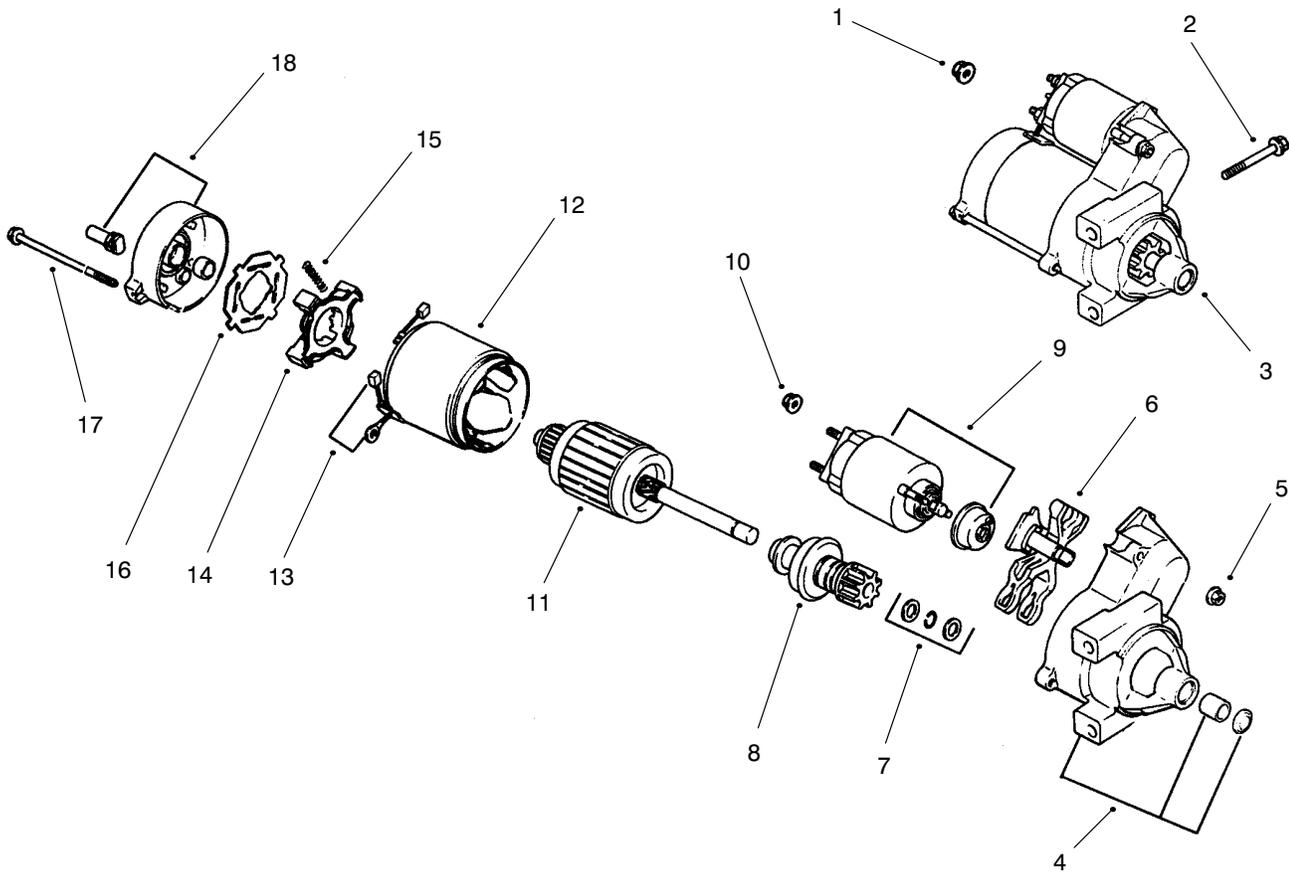


### Group 7 – Starting System (Models 73540 & 73541)

Ref. No.	Part No.	Description	No. Used
1	M-0841080	Nut, hex flange	1
2	M-0839080	Screw, hex. flange	2
3	24 098 01	Starter, solenoid shift assembly (Incl. 4-18)	1
4	24 081 04	Drive, end cap	1
5	52 100 10	Nut, starter	2
6	12 090 10	Lever, starter drive	1
7	24 755 84	Kit, starter repair	1
8	12 239 01	Drive, pinion	1
9	52 435 02	Solenoid	1

Ref. No.	Part No.	Description	No. Used
10	52 100 09	Nut, starter	1
11	12 170 04	Armature, starter	1
12	12 471 01	Frame	1
13	52 221 01	Kit, brush & spring (Includes 15)	1
14	52 323 03	Holder, brush	1
15	52 089 09	Spring, brush	4
16	52 168 01	Insulator	1
17	52 211 05	Bolt, thru	2
18	24 301 01	Commutator, end cap	1

**Obtain Parts From Your Local Kohler Dealer**  
 Kohler Engine #CH20S-64583

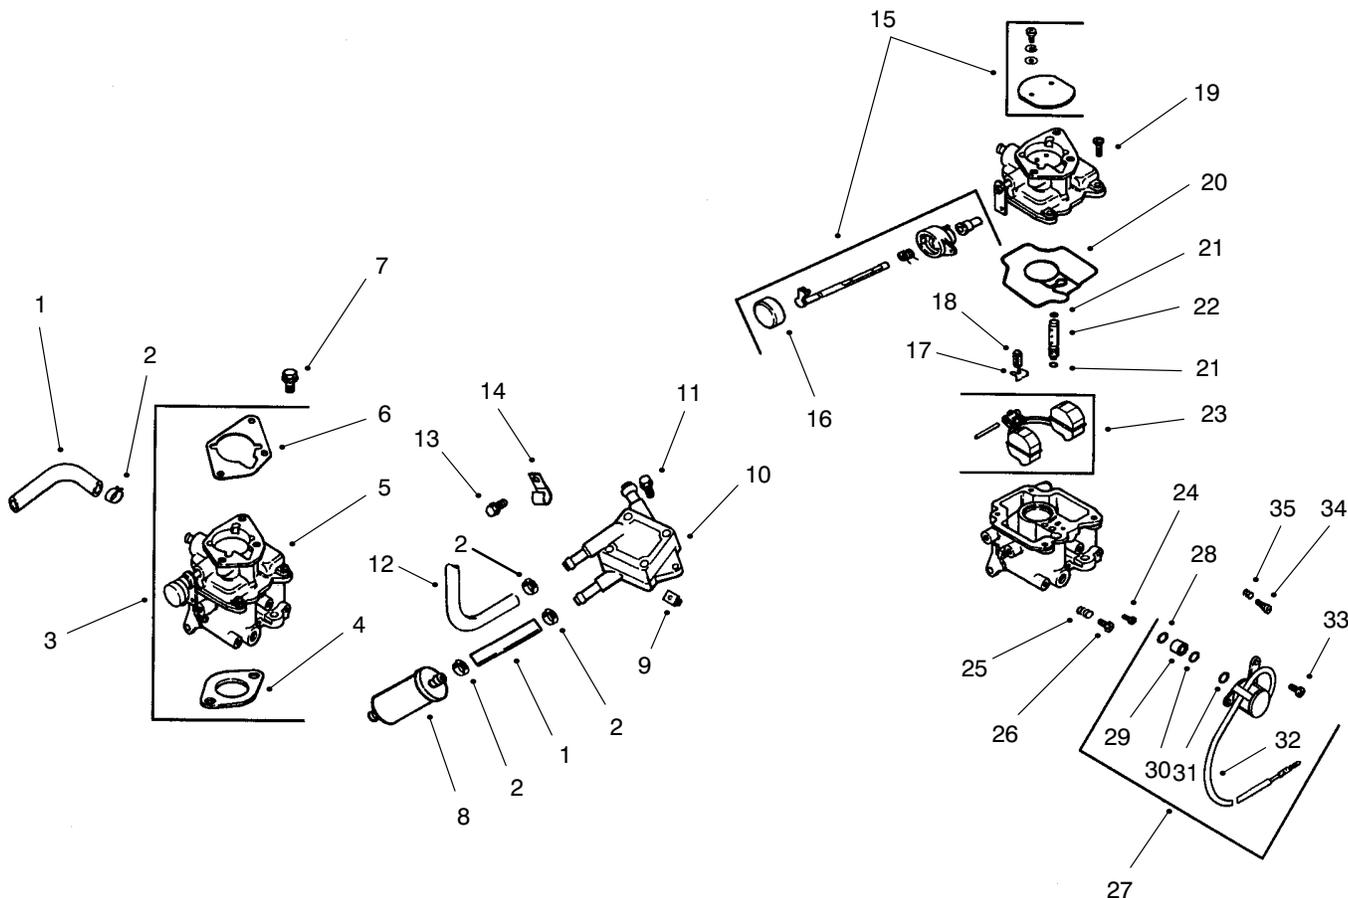


### Group 8 – Fuel System (Models 73540 & 73541)

Ref. No.	Part No.	Description	No. Used
1	25 353 10	Line, fuel 9"	2
2	X-426-9	Clamp, hose	6
3	24 853 32	Kit, carburetor w/gasket (Includes 4-6)	1
4	24 041 06	Gasket, air cleaner base	1
5	24 053 32	Carburetor assembly (Includes 15-35)	1
6	24 041 17	Gasket, carburetor	1
7	M-0651030	Screw, hex. flange	2
8	24 050 02	Filter, fuel	1
9	24 100 01	Nut, plastic	2
10	24 393 04	Pump, fuel – pulse	1
11	24 086 12	Screw, hex. cap	2
12	24 353 04	Line, fuel 17"	1
13	M-0650012	Screw, hex. flange	1
14	47 154 01	Clip, cable	1
15	24 757 07	Kit, choke repair (Includes 16)	1
16	24 173 02	Cap, choke lever	1
17	24 154 01	Clip, inlet needle valve	1
18	24 462 01	Valve, inlet needle	1

Ref. No.	Part No.	Description	No. Used
19	24 086 09	Screw, carburetor body	4
20	24 041 09	Gasket, carburetor body	1
21	24 153 02	O-Ring, slow jet	2
22	24 337 01	Jet, slow	1
23	24 757 02	Kit, float repair	1
24	24 337 02	Jet, main	1
25	24 089 10	Spring, idle adjust screw	1
26	24 086 10	Screw, idle adjusting	1
27	24 757 01	Kit, solenoid (Includes 28-33)	1
28	24 153 06	O-Ring	1
29	24 521 01	Seat, solenoid	1
30	24 153 05	O-Ring	1
31	24 153 04	O-Ring	1
32	24 435 01	Solenoid	1
33	24 086 07	Screw, solenoid	2
34	24 368 01	Needle, idle	1
35	24 089 11	Spring, idle needle	1
		<b>Not Illustrated</b>	
	24 757 03	Kit, carburetor repair	1

Obtain Parts From Your Local Kohler Dealer  
Kohler Engine #CH20S-64583

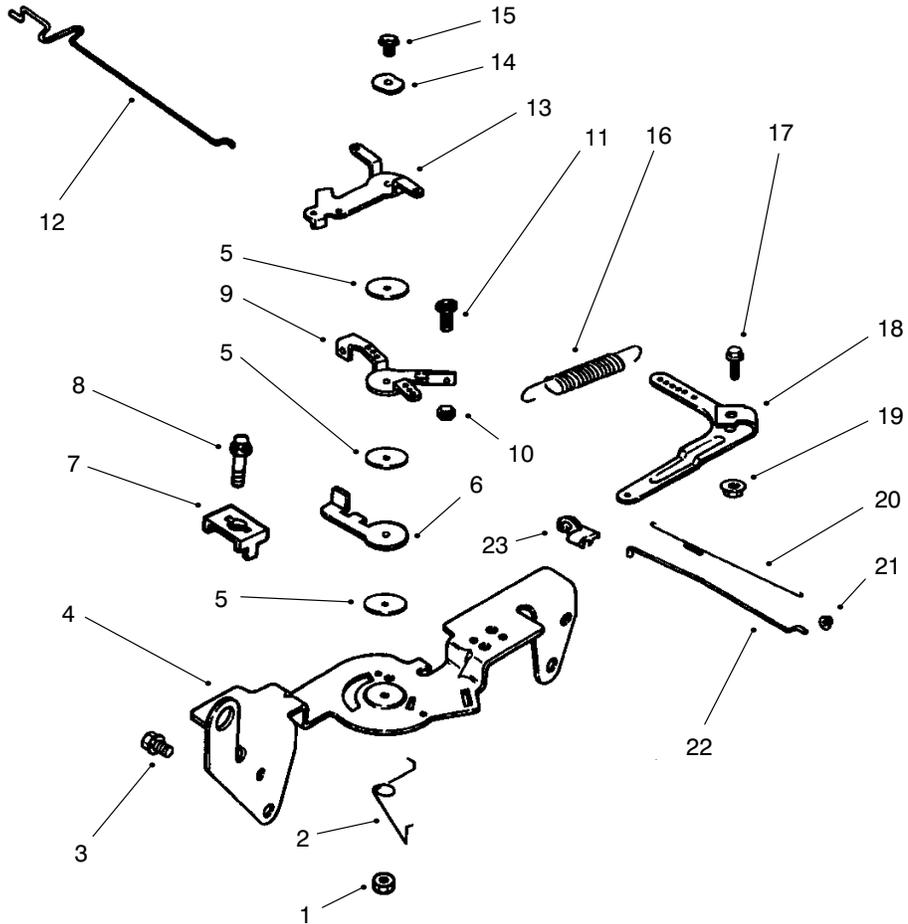


### Group 9 – Engine Controls (Models 73540 & 73541)

Ref. No.	Part No.	Description	No. Used
1	M-0547050	Nut, hex. lock	1
2	24 089 03	Spring, choke return	1
3	M-0645016	Screw, hex. flange	4
4	24 126 56	Bracket, control	3
6	24 090 07	Lever, throttle actuator	1
7	12 237 01	Clamp, cable	2
8	M-0545016	Screw, hex. flange (On: 73540 Only)	2
8	98-7374	Screw, torx (On: 73541 Only)	2
9	24 090 03	Lever, throttle control	1
10	M-0446030	Nut, hex	1
11	M-0401030	Screw, hex. cap	1
12	24 079 02	Linkage, choke	1

Ref. No.	Part No.	Description	No. Used
13	24 090 05	Lever, choke	1
14	41 468 03	Washer, spring	1
15	M-0545020	Screw, hex. flange	1
16	24 089 15	Spring, governor	1
17	SM-0642025	Screw, hex. flange	1
18	24 090 14	Lever, governor	1
19	M-0641060	Nut, hex. flange	1
20	24 089 01	Spring, linkage	1
21	25 158 08	Bushing, linkage retaining	1
22	24 079 01	Linkage, throttle	1
23	25 158 11	Bushing, linkage retaining	1


**Obtain Parts From Your Local Kohler Dealer**  
 Kohler Engine #CH20S-64583

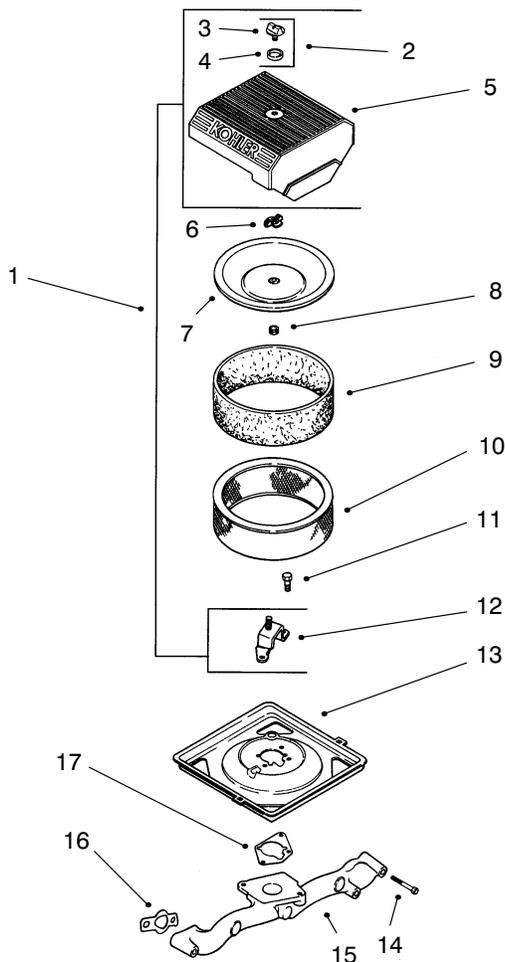

### Group 10 – Air Intake (Models 73540 & 73541)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	24 743 05	Kit, air cleaner cover (Includes 2-5, 12)	1	8	24 032 03	Seal, inner air cleaner	1
2	54 755 01	Kit, knob with sea (Includes 3,4)	1	9	24 083 02	Precleaner, element	1
3	25 341 03	Knob, cover	1	10	47 083 03	Element, air cleaner	1
4	24 153 15	Seal, air cleaner cover knob	1	11	M-0639016	Screw, hex. flange	3
5	24 096 24	Cover, air cleaner	1	12	24 126 21	Bracket, air cleaner base	1
6	12 100 01	Wing Nut	1	13	24 094 03	Base, air cleaner	1
7	24 096 01	Cover, inner air cleaner	1	14	M-0651055	Screw, hex. flange	4
				15	24 164 14	Manifold, intake	1
				16	24 041 01	Gasket, intake manifold	2
				17	24 041 06	Gasket, air cleaner base	1

**Obtain Parts From Your Local Kohler Dealer**  
 Kohler Engine #CH20S-64583

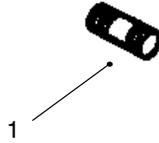

### Group 11 – Exhaust (Models 73540 & 73541)


Ref. No.	Part No.	Description	No. Used
1	25 072 04	Stud	4
	24 782 01	<b>Not Illustrated</b> Miniblock	
	24 755 03	Gasket Set	

Ref. No.	Part No.	Description	No. Used


**Obtain Parts From Your Local Kohler Dealer**  
 Kohler Engine #CH20S-64583

# Wiring Harness Routing (Model 73470 Only)


3319-724 Rev A

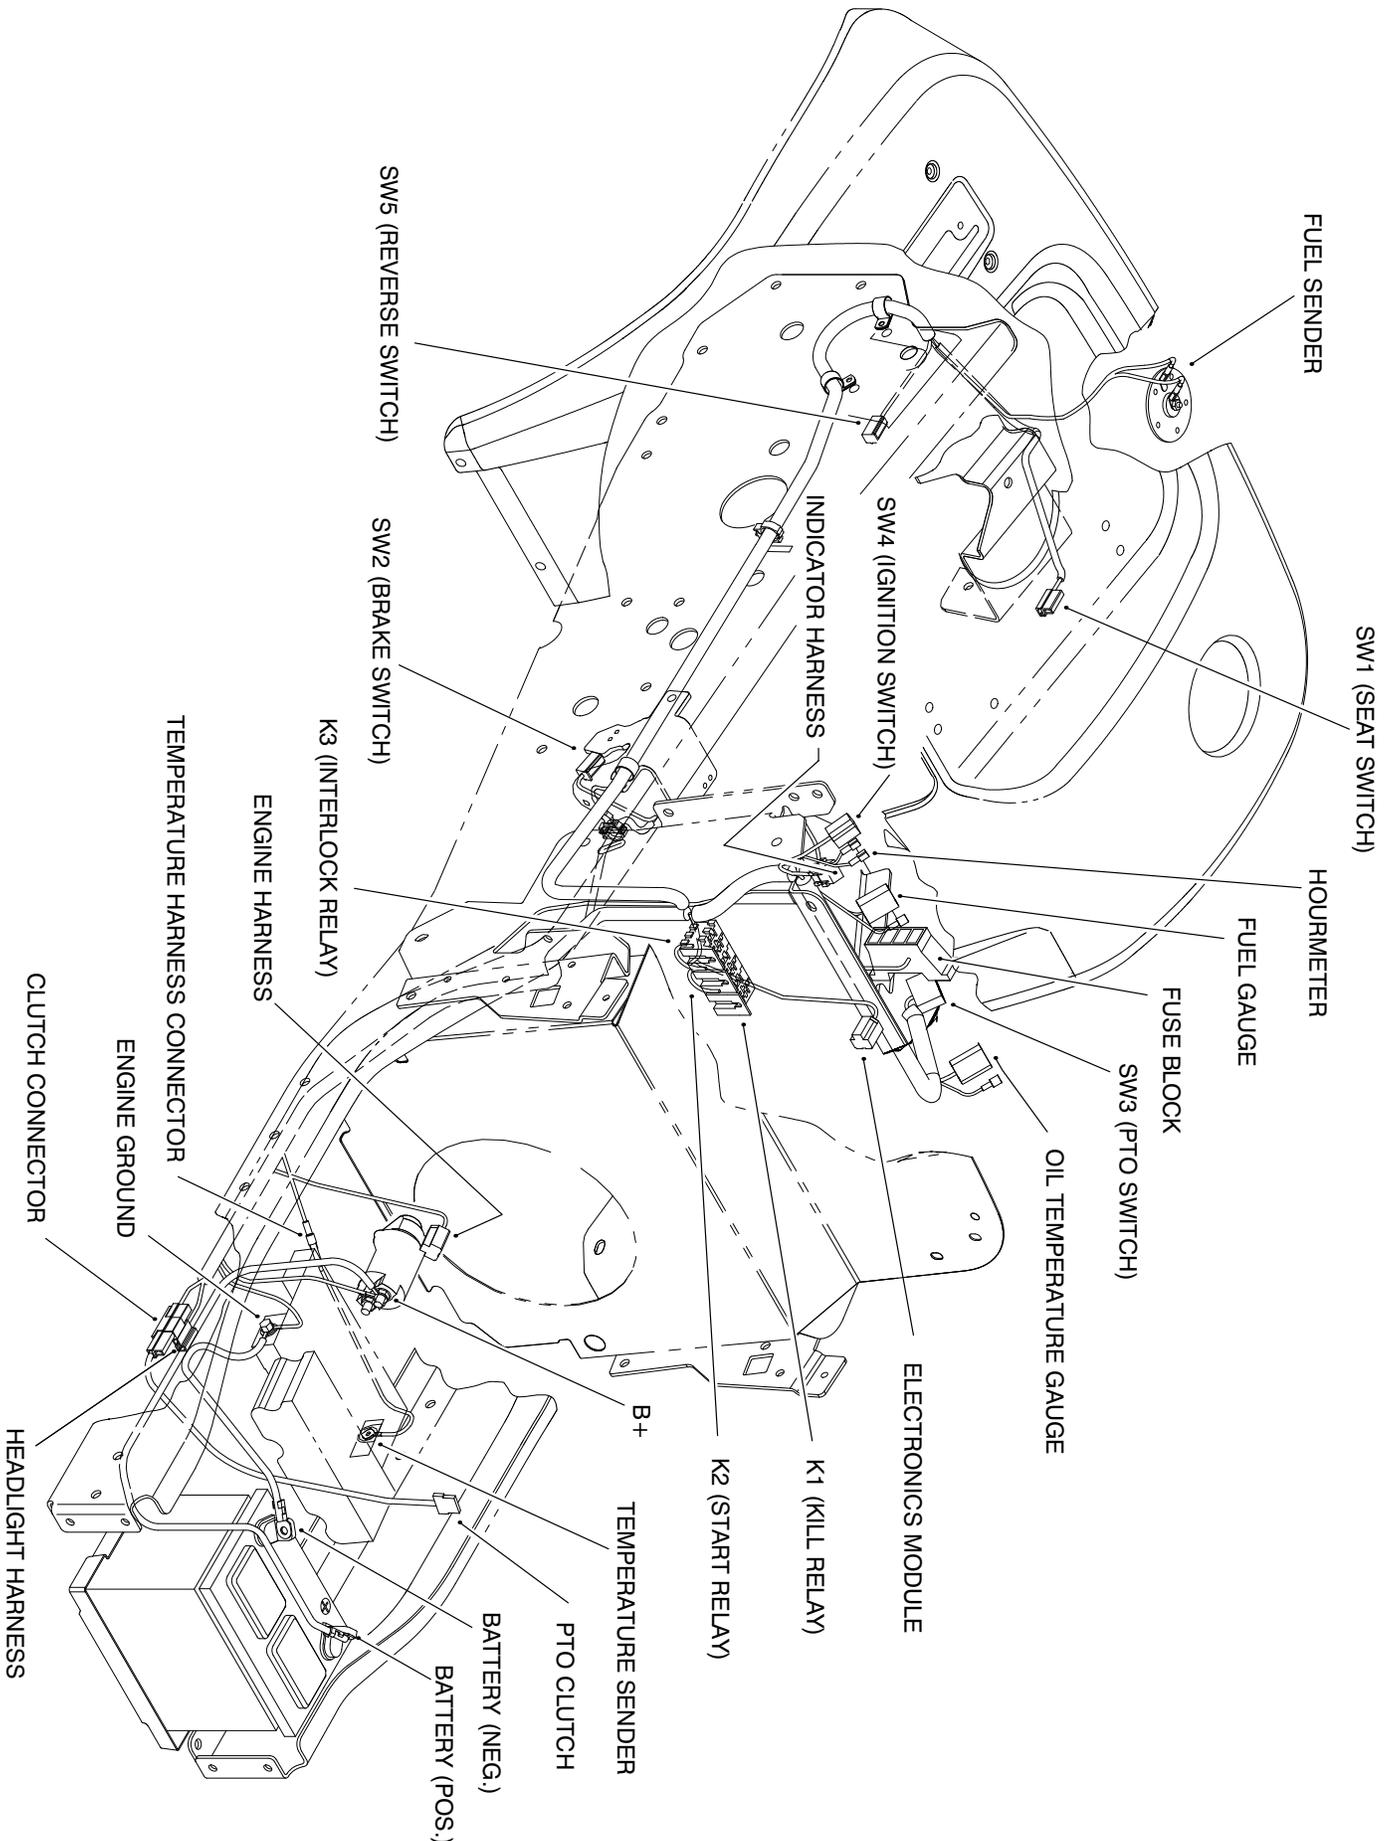

# Electrical Schematic Diagram (Model 73470 Only)

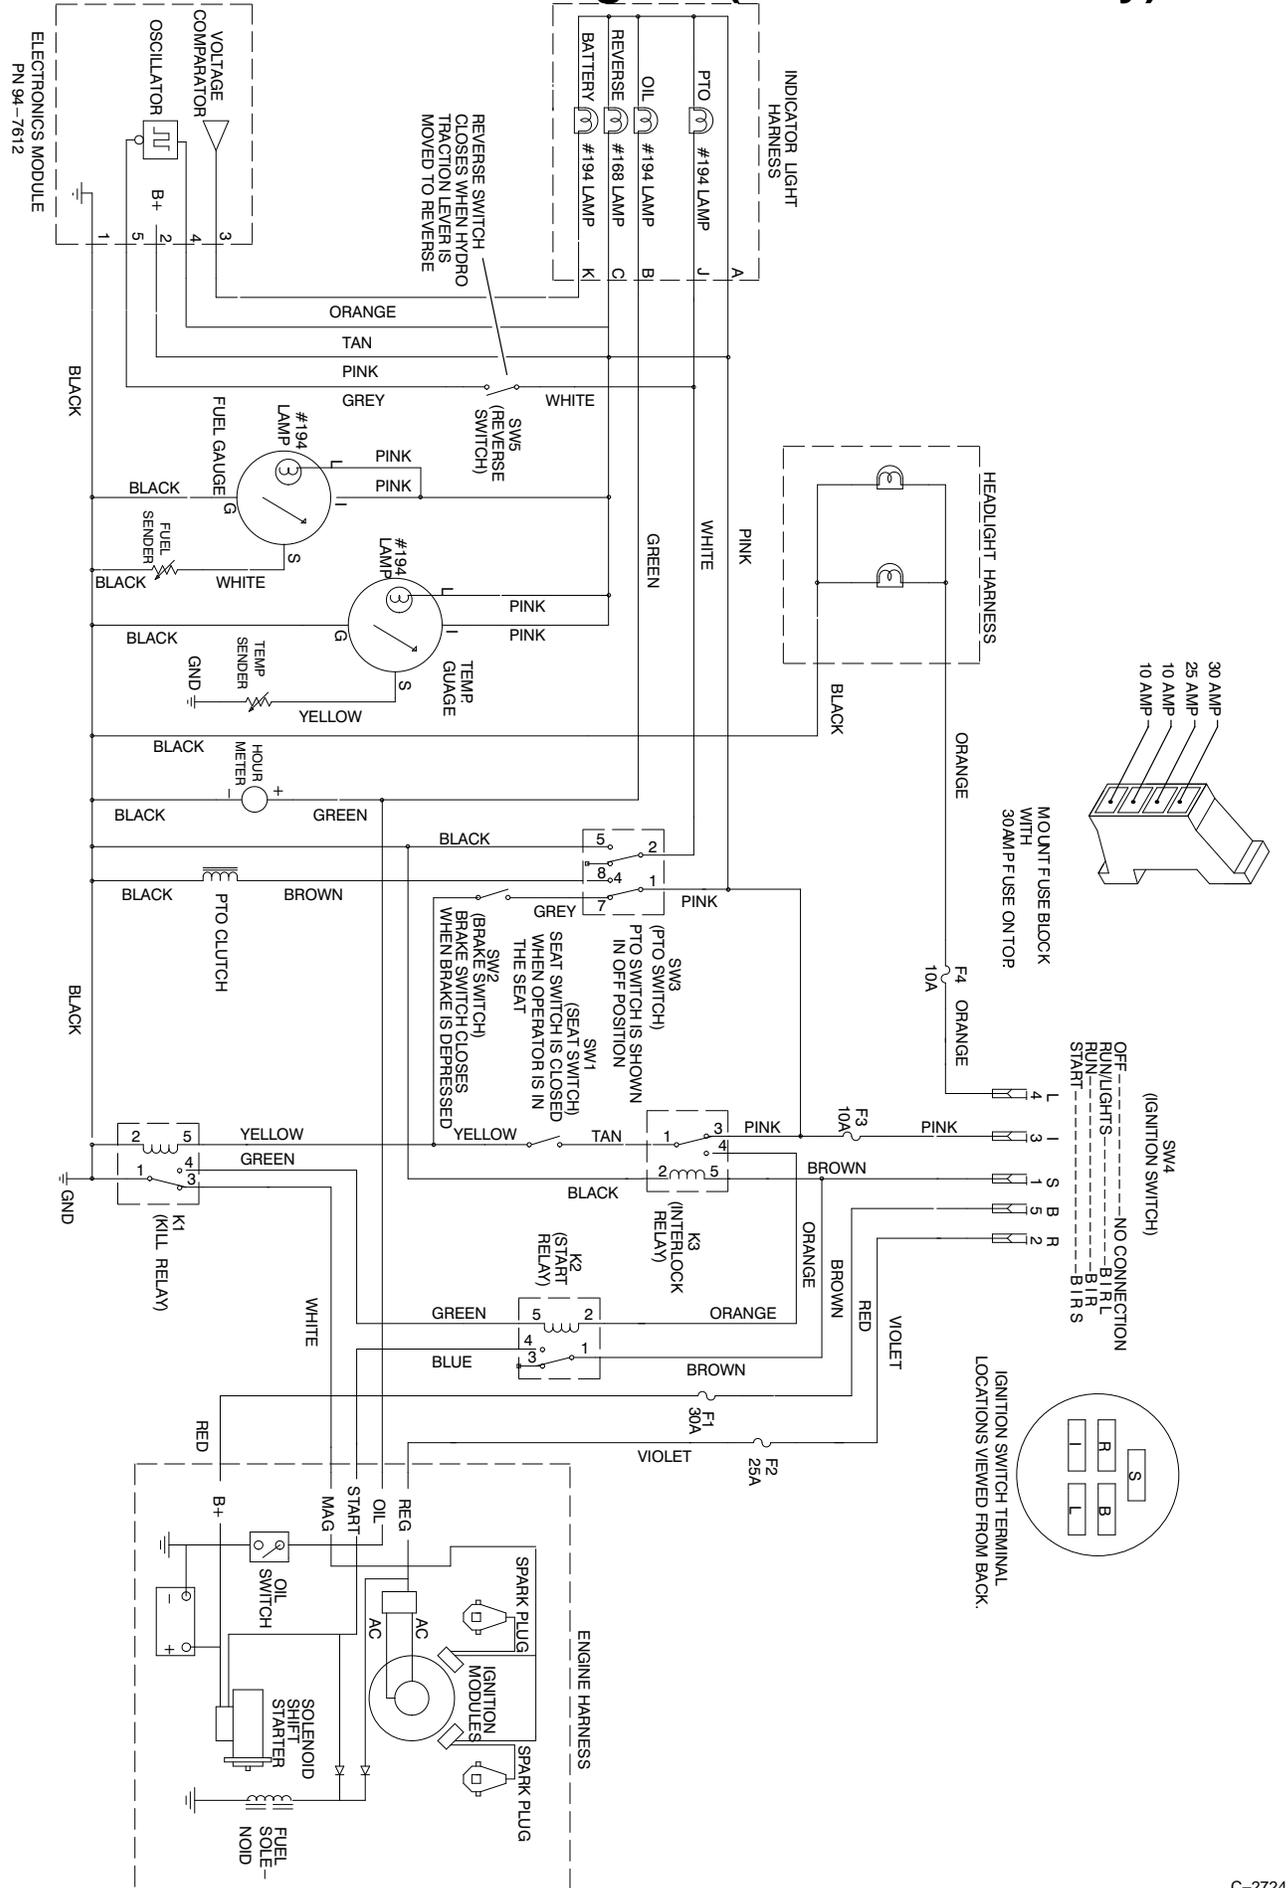

# Wiring Harness Routing (Model 73540 & 73541 Only)

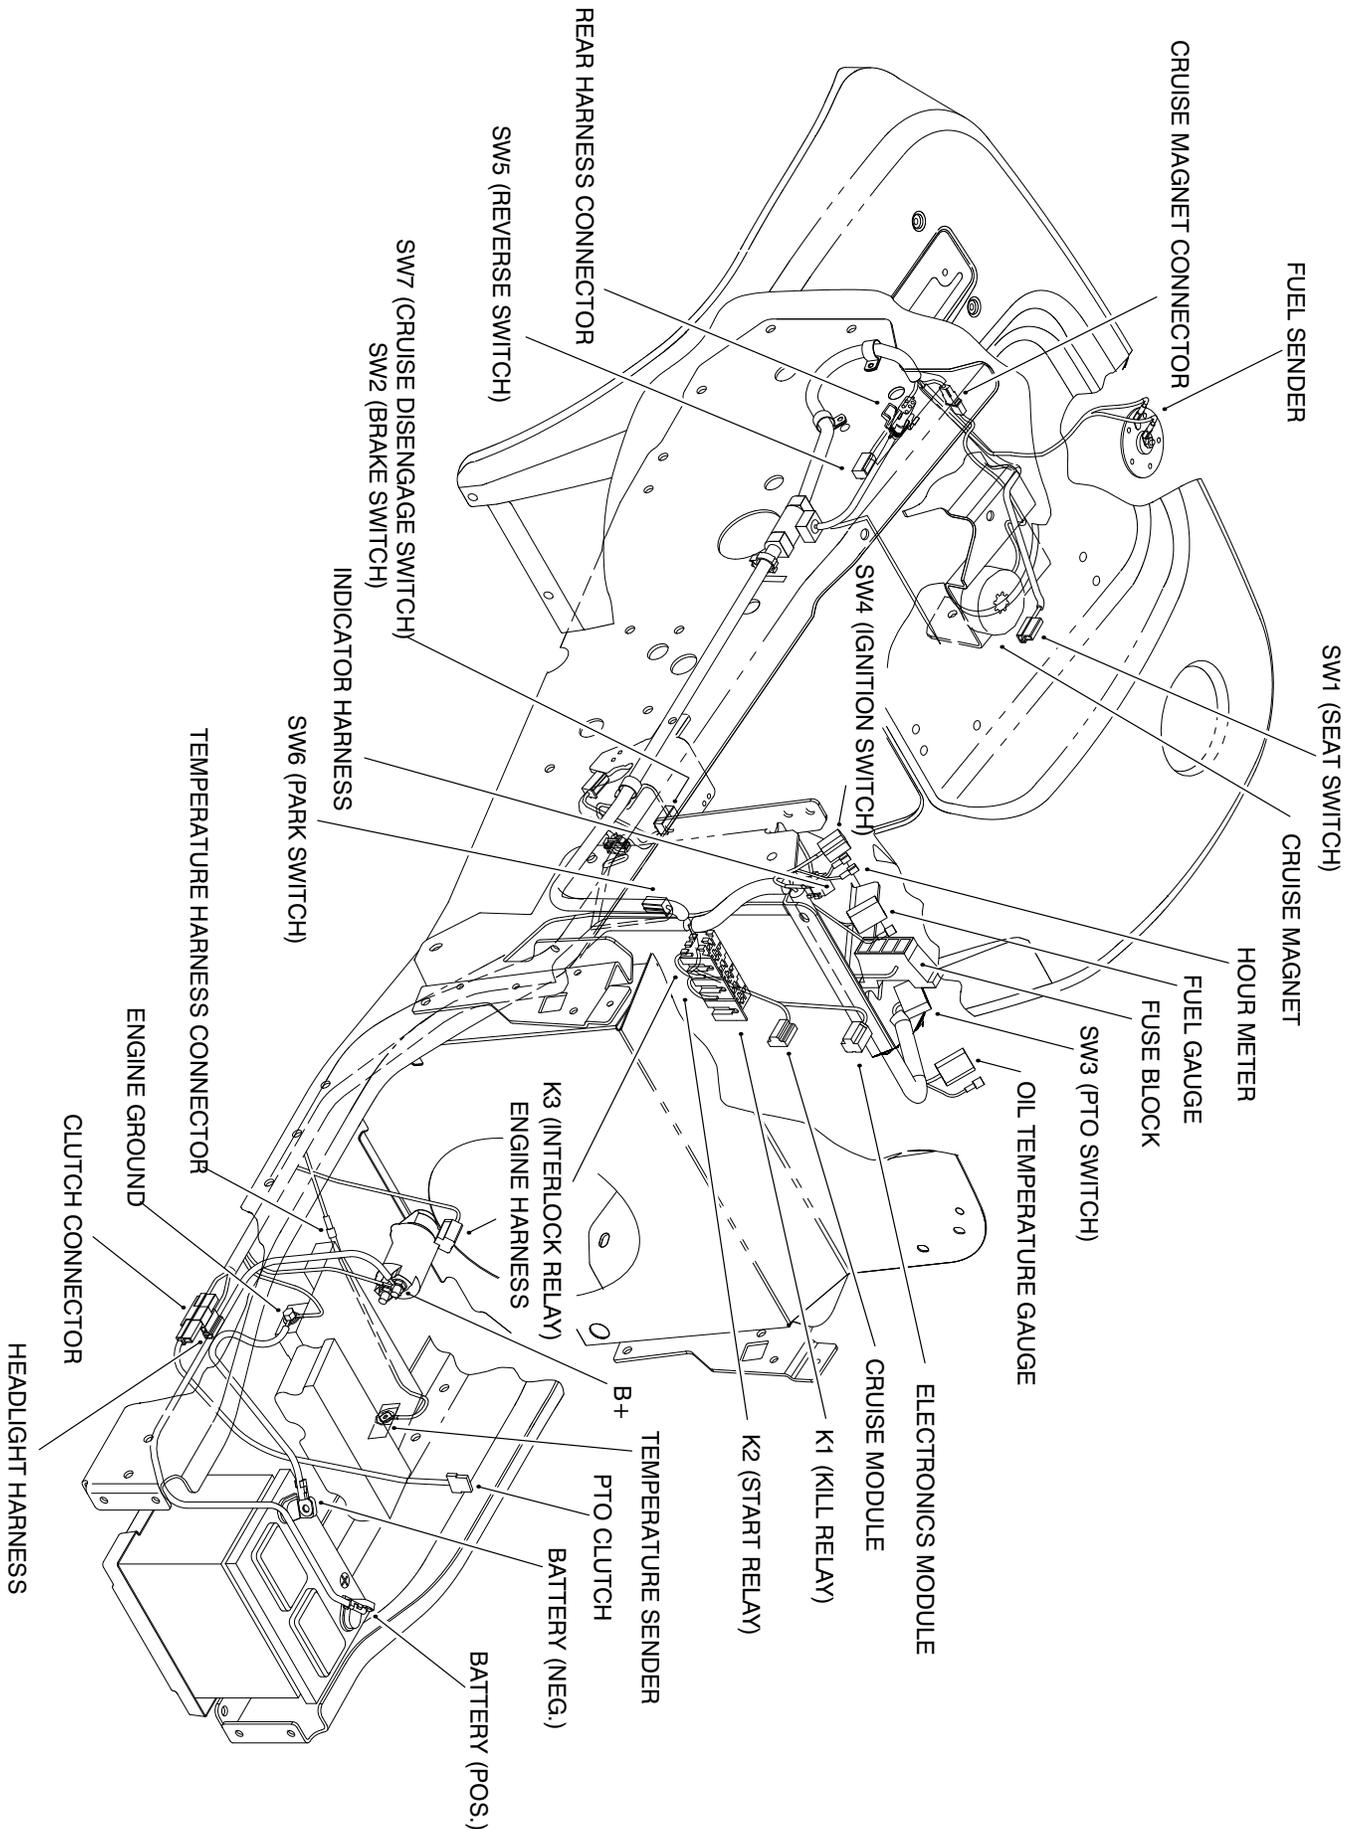



# Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
1529	7	15	1	Bearing—Needle
1529	8	1	2	Bearing—Needle
1535	8	30	3	Washer—Thrust
1540	7	11	1	Bearing—Needle
2844	2	6	1	Washer—Flat
2844	4	2	1	Washer—Flat
2844	7	36	1	Washer—Flat
3517	8	8	1	Ball
5108	6	20:3	2	Valve—Tire Tubeless
5108	28	1:2	2	Valve—Tire Tubeless
5618	3	1	2	Ring—Retaining
5991	8	27	1	Fitting—Filter
6449	7	21	2	Seal—Oil
7228	15	5:5	2	Bulb—Light
7007	27	*	2	Tube—Liner
8571	8	31	1	Bearing—Needle Thrust
8616	3	20	3	Spring—Compression
9038	3	31	1	Grip
9416	7	22	2	Bearing—Needle
9547	7	28	1	Washer—Thrust
9548	6	14	2	Washer—Thrust
100309	7	31	1	Bushing—Cam Pivot
101623	7	8	8	Gear—Pinion
101889	7	6	2	Gear—Axle
102597	22	6	1	Grip
103118	4	5	1	Seal—Oil
103995	12	16	1	Washer
104047	26	5:2	1	Bushing
105061	7	9	1	Gear—Differential
105269	3	2	1	Pin—Hitch
105316	3	14	3	Cap—Rod
105503	19	41	2	Bushing
105797	2	17	1	Ring—Retaining
105797	3	17	6	Ring—Retaining
105876	7	7	2	Ring—Retaining
106634	3	3	1	Pin—Attachment
106826	7	17	2	Washer—Thrust
106948	31	10	1	Tray—Battery (Only On: 73470)
106948	32	10	1	Tray—Battery (Only On: 73540, 73541)
107069	1	2	6	Nut—Panel
107069	2	8	10	Nut—Panel
107069	3	25	2	Nut—Panel
107069	15	7	4	Nut—Panel
107069	18	15	4	Nut—Panel
107069	30	37	4	Nut—Panel
107374	7	4	4	Washer—Flat
108323	8	26	1	Base—Filter
108363	7	16	2	Pin—Locating
108881	3	36	6	Nut—Hex
108881	7	10	4	Nut—Hex
108881	20	22	2	Nut—Hex
108881	22	16	1	Nut—Hex
108881	24	8	2	Nut—Hex
108881	26	13	1	Nut—Hex
109102	30	*	1	25 Amp Fuse
110680	28	1:3	2	Wheel
111196	7	5	2	Cap—End
111199	7	14	2	Bearing—Ball
111383	5	10	1	Collar ASM
112641	11	9	1	Cover ASM
112652	11	30	1	Shield—Grass
112653	11	31	1	Ring—Retaining

\*Not Illustrated

# Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
113136	11	16	1	Race-Pump
610358	14	4	1	Nut-Lock
614249	1	12:2	2	Tie Strap
614249	15	25	2	Tie Strap
614249	27	20	1	Tie Strap
614249	31	8	2	Tie Strap (Only On: 73470)
614249	32	8	1	Tie Strap (Only On: 73540, 73541)
614672	13	6	2	Bolt-Shoulder
700919	17	8	1	Nut
702062	8	15	1	Gasket-Pump & Motor
911423	7	3	4	Screw-HH
933154	8	5	2	Pin-Spirol
937089	12	13	1	Key-Woodruff
9202514	6	22	4	Washer-Flat
9202524	6	23	A/R	Washer
9335054	3	4	1	Hairpin
9791204	3	5	2	Spacer
3-4685	3	27	2	Washer-Thrust
12-5450	29	3	2	Screw-Thread Forming (Only On: 73470)
12-5450	31	6	4	Screw-Thread Forming (Only On: 73470)
12-5450	29	3	3	Screw-Thread Forming (Only On: 73540, 73541)
12-5450	32	6	4	Screw-Thread Forming (Only On: 73540, 73541)
27-0410	15	10	3	Bolt-Shoulder
37-8771	2	23	1	Bolt-Shoulder
37-8771	19	45	2	Bolt-Shoulder
38-1420	18	3	1	Switch-Seat
38-7820	4	17	2	Bearing-Ball
44-2230	12	3	4	Coupling-Rubber
46-8093	1	10	4	Screw-TAP
48-8070	5	15	1	Washer-Lock
56-2800	11	1	1	Screw-HH
56-2810	11	2	1	Bearing-Ball
56-2820	11	3	2	Seal-Oil
56-2850	11	6	1	Ring-Seal
56-2860	11	7	1	Plate-Pump
56-2870	11	8	1	Ring-Seal
56-2880	11	10	2	Button
56-2890	11	11	1	Pin-Dowel
56-2900	11	12	1	Pin-Drive
56-2910	11	13	1	Shaft-Input
56-2920	11	14	1	Ring-Seal
56-2930	11	15	1	Rotor/Ball-Pump
56-2940	11	56	1	Cam Ring ASM Incl 16 17
56-2950	11	18	2	Piston
56-2960	11	19	2	Ring-Backup
56-2970	11	20	2	O-Ring
56-2980	11	21	1	Pin-Coil
56-2990	11	22	1	Pintle ASM
56-3000	11	23	2	Ring-Retaining
56-3010	11	24	2	Ball-.313 Dia
56-3020	11	25	2	Body-Valve
56-3030	11	26	1	Ball-.438 Dia
56-3040	11	27	1	Spring-Valve
56-3050	11	28	1	Plug-Valve
56-3060	11	29	1	Pin-Dowel
56-3090	11	5	4	Ring-Retaining
56-3100	11	33	6	Screw-HSBH
56-3110	11	34	6	Roller
56-3120	11	35	1	Carrier
56-3130	11	36	1	Seal-Oil
56-3140	11	37	1	Kit-Shaft
56-3170	11	40	1	Insert-Ring

\*Not Illustrated

# Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
56-3180	11	41	1	Spring-Valve
56-3200	11	43	2	Body-Valve
56-3210	11	44	2	Ball-.625 Dia
56-3220	11	45	1	Rotor/Ball-Motor
56-3230	11	46	1	Shaft-Output
56-3240	11	47	1	Race-Motor
56-3250	11	48	1	ASM-Plug
56-3260	11	49	1	O-Ring
56-3280	11	52	1	Bearing-Ball
56-3290	11	53	1	Ring-Retaining
56-3310	11	55	1	Kit-Seal
62-7770	17	7	1	Key-Ignition
63-1590	20	16	1	Spring-Extension
63-1590	23	3	1	Spring-Extension
65-7410	22	2	2	Switch-Single Pole (Only On: 73470)
65-7410	22	2	3	Switch-Single Pole (Only On: 73540, 73541)
66-4160	26	12	1	Spring (Only On: 73540, 73541)
71-4410	12	6	4	Spacer-Coupling
71-4411	12	4	4	Spacer-Coupling
76-1340	18	7	1	Decal-USA (Only On: 73470, 73540)
79-3340	7	1	2	Axle-Rear
79-3370	7	2	2	Key-Square
79-5270	8	28	1	Filter-Oil
80-8760	18	16	1	Decal-Danger (Only On: 73470, 73540)
80-8760	18	25:1	1	Decal-Danger (Only On: 73470, 73540)
83-2720	28	2	10	Bolt-Lug
86-9320	21	2	2	Bushing-Nylon
92-1099	14	2	1	Bolt-Shoulder
92-6511	18	1	1	Seat (Only On: 73470)
92-6780	29	17	4	Nut-HHF
92-6785	17	11	1	Switch-Ignition
92-6798	5	4	1	Cap-Rod
92-6877	29	30	1	Valve-Oil Drain
92-7008	20	41	1	Rod End
92-7020	15	11	4	Screw-TTH
92-7020	16	2	12	Screw-TTH
92-7020	17	19	4	Screw-TTH
92-7020	18	11	4	Screw-TTH
92-7674	3	23	2	Bolt-Shoulder
92-8747	1	22	2	Decal-Attach A Matic
93-1146	5	11	2	Bushing-Steering
93-1265	31	12:1	1	Decal-Hot (Only On: 73470)
93-1265	32	12:1	1	Decal-Hot (Only On: 73540, 73541)
93-4366	26	10	1	Magnet ASM (Only On: 73540, 73541)
93-9810	11	17	1	Ring-Cam
94-1867	31	2	1	Battery (Only On: 73470)
94-1867	32	2	1	Battery (Only On: 73540, 73541)
94-2001-03	7	23	1	Case-Transaxle
94-2002-03	7	29	1	Case-Transaxle
94-2003	8	24	1	Transmission-Hydrostatic
94-2006	7	27	1	M-Gear
94-2007	7	26	1	Shaft-Brake
94-2008	7	25	1	Gear-Sliding
94-2009	7	37	1	Drum-Brake
94-2010	8	33	1	Shaft-Input
94-2011	8	35	1	Gear-Hi Lo
94-2014	8	2	1	Tube-Shifter Rail
94-2015	8	4	1	Fork-Hi Lo Shift
94-2019-03	7	30	1	Arm-Brake Pivot
94-2021	7	12	2	Bearing-Needle
94-2022	7	13	1	Gasket-Transaxle
94-2024	8	9	1	Spring-Shift

\*Not Illustrated

# Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
94-2025	5	13	1	Washer-Boot
94-2047	5	5	1	Shaft-Steering
94-2053	6	20:5	4	Snap Ring
94-2054	8	3	1	Rail-Shift
94-2059	12	11	1	Hub
94-2068	29	29	1	Spacer-Clutch
94-2083-03	2	37	1	Frame
94-2087-01	16	11	1	Sidepanel-Hood
94-2088-01	16	8	1	Sidepanel-Hood
94-2089-01	18	28	1	Footrest
94-2090-01	18	21	1	Footrest
94-2093	16	3	1	Cover-Rear
94-2095	18	27	1	Pad-Footrest
94-2096	18	20	1	Pad-Footrest
94-2099	15	5:6	1	Lens-Headlight
94-2100	14	28	1	Knob-Lift (Only On: 73470, 73540)
94-2101	17	18	1	Dash
94-2102	17	1	1	Boot-Steering
94-2103	16	10	1	Cover-Bumper
94-2104	16	9	1	Grille
94-2106-03	19	40	2	Spring-Compression
94-2107-03	19	39	1	Base-Seat
94-2111-03	19	46	1	Mount-Seat
94-2112	19	37	1	Slide-Seat
94-2120	18	6	1	Pod-Control (Only On: 73540)
94-2121	17	13	1	Knob-Throttle
94-2122	17	17	1	Knob-Choke
94-2123	23	20	1	Pad-Brake Pedal
94-2124	19	35	2	Lamp-Taillight (Only On: 73540, 73541)
94-2133	4	10	1	Housing-Steering
94-2134-03	4	6	1	Cover
94-2135	4	7	1	Gasket
94-2136	4	20	1	Pinion-Input Shaft
94-2137	4	8	1	Gear-Sector
94-2140	4	3	1	Arm-Upper
94-2142-03	4	14	1	Arm-Lower
94-2143	8	6	1	Arm-Shifter
94-2144	20	8	1	Slider-Speed Control
94-2145	20	11	1	Plate-Cam
94-2148-03	8	19	1	Plate-Support Bracket
94-2149-03	20	20	1	Plate-Control
94-2157-03	22	5	1	Latch-Parking Brake
94-2158	26	9	1	Plate-Magnet (Only On: 73540, 73541)
94-2168	20	13	1	Standoff-Slider
94-2169	20	9	2	Standoff-Cam
94-2177	19	38	1	Seat Slide-Latch
94-2190	29	24	1	Clutch-PTO
94-2191	6	20:4	2	Tire (Only On: 73470, 73540)
94-2193	28	1:1	2	Tire (Only On: 73470, 73540)
94-2194	28	1	2	Rear Wheel & Tire ASM (Only On: 73470, 73540)
94-2196	6	10	1	Arm-RH Steering
94-2197	6	8	1	Arm-LH Steering
94-2199-03	29	31	1	Plate-Engine
94-2205-03	6	2	1	Pivot Pin
94-2212	6	5	2	Rod-Steering
94-2217	4	18	1	Spacer-Input Shaft
94-2218	4	12	1	Spacer-Output Shaft
94-2230-03	3	15	1	Hanger RH
94-2231-03	3	16	1	Hanger LH
94-2233	3	28	2	Spacer
94-2239	6	4	2	Balljoint-LH Thread (Only On: 73470)
94-2250-03	3	35	1	Latch ASM

\*Not Illustrated

# Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
94-2251-03	3	7	2	Plate-Hitch
94-2256	3	18	3	Rod-Lock
94-2258	3	19	3	Lock-Latch
94-2260	13	21	2	Lift Sleeve ASM
94-2262	13	16	2	Rod-Lift
94-2263-03	13	2	1	Support-Deck Lift
94-2277-03	13	17	1	Bar-Lift
94-2278-03	13	18	1	Lift Arm ASM-RH
94-2279-03	13	7	1	Lift Arm ASM-LH
94-2300	14	12	1	Lift Cylinder ASM
94-2301	13	12	2	J Pin
94-2304-03	3	26	1	Tray-Battery
94-2308-03	1	15	1	Bumper-Frame
94-2309	20	17	1	Standoff-Spring
94-2310	12	15	1	Hub
94-2313	20	2	4	Retainer-Bearing
94-2342-03	23	15	1	Bracket-Forward Reverse
94-2343-03	23	11	1	Bracket-Support
94-2345-03	23	13	1	Pivot Shaft
94-2351-03	23	10	1	Brake Bracket
94-2352-03	23	19	1	Pedal-Brake
94-2356-03	29	28	1	Clutch-Stop
94-2371	12	12	1	Spacer-Fan
94-2373-03	12	1	1	Drive Shaft
94-2375-03	25	2	1	Brake Pivot Plate
94-2382	5	1	1	Bracket
94-2393	25	14	1	Rod-Brake
94-2409	24	10	1	Link-Slow Down
94-2411	13	8	2	Stop-Lift Adj.
94-2413	2	4	4	U-Nut
94-2417-03	16	1	1	Screen-Rear
94-2419	7	35	1	Brake Band
94-2425	12	10	1	Key-Square
94-2450-03	5	12	1	Manual Column ASM
94-2458	14	24	1	Valve-Hydraulic Lift
94-2468	20	30	1	Cam-Eccentric
94-2475	3	29	1	Rod-Spacer
94-2488-03	25	5	1	Hydro Pivot
94-2494-03	26	3	1	Bracket-Cruise Control (Only On: 73540, 73541)
94-2497	20	35	1	Rod-Slider To Pivot
94-2498	25	9	1	Rod-Pivot To Pedal
94-2499	23	4	1	Link-Brake Pedal
94-3518	18	1	1	Seat V-811 (Only On: 73540, 73541)
94-4208	17	9	1	Hourmeter
94-4496	31	13	2	Screw (Only On: 73470)
94-4496	32	13	2	Screw (Only On: 73540, 73541)
94-7500	20	39	1	Rod-Lift Lever
94-7501	23	12	1	Spacer-Pedal
94-7504	21	3	1	Shift Rod
94-7507	21	9	1	Shift Rod
94-7510	8	7	1	Arm-Hi Lo
94-7522-03	29	19	1	Shroud-Muffler
94-7524-03	29	21	1	Shroud-Muffler
94-7536-03	6	19	1	RH Spindle
94-7537-03	6	13	1	LH Spindle
94-7538	6	20:2	4	Bearing ASM (Incl. Ref. #20:5)
94-7539	6	4	2	Balljoint-LH Thread (Only On: 73540, 73541)
94-7541	6	20:1	2	Wheel
94-7542	6	20	2	Wheel & Tire ASM (Only On: 73470, 73540)
94-7558	29	12	1	Muffler-Kohler
94-7559	8	12	1	Tube-Dipstick
94-7560	29	15	1	Reflector-Heat (Kohler)

\*Not Illustrated

# Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
94-7562-03	22	10	1	Bracket-Switch
94-7564	20	24	1	Spacer
94-7565	8	14	1	Pinion-Bevel
94-7566	8	32	1	Gear-Bevel
94-7568-03	6	17	1	Axle-Front
94-7569	25	3	2	Bushing
94-7571	20	33	1	Rod End LH
94-7572	23	14	1	Tie Rod End RH
94-7573	24	7	1	Tie Rod End LH
94-7573	25	6	1	Tie Rod End LH
94-7574	13	4:1	2	Bushing-Flanged
94-7574	25	1	2	Bushing-Flanged
94-7575	26	4	1	Spacer-Cruise (Only On: 73540, 73541)
94-7578-03	13	22	1	Plate-Support LH
94-7579	24	3	1	Lever-Slow Down
94-7582	20	38	1	Bolt-Shoulder
94-7582	22	7	1	Bolt-Shoulder
94-7582	24	9	2	Bolt-Shoulder
94-7582	26	8	1	Bolt-Shoulder (Only On: 73540, 73541)
94-7586	20	15	1	Arm-Return To Neutral
94-7600-03	13	20	1	Spacer-Strap
94-7602	18	5	1	Switch Cruise (Only On: 73540, 73541)
94-7603	31	1	1	Harness-Main (Only On: 73470)
94-7604	32	1	1	Harness-Main (Only On: 73540, 73541)
94-7607	17	23	1	Harness-4 Light (Only On: 73470)
94-7608	17	23	1	Harness-6 Light (Only On: 73540, 73541)
94-7611	19	33	1	Harness-Rear (Only On: 73540, 73541)
94-7612	29	4	1	Module-Kohler
94-7616	17	21	1	Gauge-Oil Temperature
94-7619	29	11	1	Sender-Oil Temp.
94-7637	20	5	1	Rod End RH
94-7643-03	2	33	1	Tower ASM
94-7680-03	8	11	1	Dipstick
94-7692	8	23	1	Fitting-Hose
94-7693	8	16	1	Fitting-Hydraulic
94-7694	8	18	1	Fitting-Hydraulic
94-7714	14	1	1	Handle-Lift
94-7739-03	2	41	1	Strap-Torque
94-7740-03	2	2	1	Support - Gas Tank
94-7777-03	3	21	2	Latch-Pulley Box
94-7814	20	21	1	Locater-Control Plate
94-7816	20	27	1	Arm-Speed Control
94-7817	20	10	1	Bolt-Shoulder
94-7818	23	5	1	Retainer-Screw
94-7824	23	18:1	1	Pad-Hydro Pedal
94-7833	21	5	1	Lever-Hi Lo
94-7834	21	8	1	Bracket-Pivot
94-7835	21	4	1	Spring-Torsion
94-7855-03	3	33	1	Mid Bracket ASM
94-7856	4	21	1	Seal-Oil
94-7871	6	25	2	Cap-Dust
94-7905	22	9	1	Retainer-Screw
94-7906	25	15	1	Spring-Compression
94-7910	1	8	4	Grommet
94-7913	20	23	1	Bushing-Flange
94-7919	24	1	1	Bushing
94-7944	14	18	1	Hose ASM
94-7945	14	9	1	Hose ASM
94-7955	12	17	1	Screw-Lock
94-7955	25	7	1	Screw-Lock
94-7969	8	17	1	Tube-Hydraulic
94-7970	9	41	1	Tube-Hydraulic

\*Not Illustrated

# Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
94-7970	14	19	1	Tube-Hydraulic
94-7972	2	40	1	Screw-HH
94-7973	29	22	1	Screw-Cap
94-7975	12	18	4	Screw-Square Set
94-7980	26	5	1	Rod-Cruise Control (Only On: 73540, 73541)
94-7994-03	1	18	1	Bracket-Hinge Lower RH
94-7995-03	1	6	1	Bracket-Hinge Lower LH
94-8189	27	17	1	Clamp-Hose
95-0691	15	4	1	Harness-Wire
95-1653	22	13	1	Switch-Single Pole
95-3029	30	38	1	Cruise Module (Only On: 73540, 73541)
95-3800-03	15	12	1	Front Bulkhead
95-3801-03	20	4	1	Slider Lift
95-3805	5	8	1	Spring
95-3806	9	42	1	Tube-Hydraulic
95-3806	14	20	1	Tube-Hydraulic
95-3809	27	5	1	Tank-Gas
95-3830	17	22	1	Gauge-Fuel
95-3842	17	4	1	Lens-Dash
95-3843	17	6	1	Housing-Light
95-3844	17	2	1	Retainer-Boot
95-3857	20	42	1	Screw-Button Head
95-3858	18	29	2	Bracket-Footrest
95-3892-03	2	19	1	Bracket-Latch
95-3895	2	24	1	Spring-Extension
95-3899	2	21	1	Latch Lever
95-3900	2	22	1	Tension Lever-Latch
95-3961-03	2	9	1	Support-Fuel Tank
95-3964	5	3	1	Lever-Tilt
95-3971	26	5:5	1	Sender-Fuel Level
95-3989	1	7	4	Mount-Sidepanel
95-4000	18	6	1	Pod-Control (Only On: 73541)
95-4001	18	6	1	Pod-Control (Only On: 73470)
95-4005-03	2	39	1	Cover-Rear
95-4007	14	12:1	1	Seal Kit
95-4013	1	1	4	Latch Assembly
95-4022	21	7	1	Knob-Hi Lo Shift
95-4035	17	16	1	Control Choke ASM
95-4036	17	15	1	Control Throttle ASM
95-4042	31	11	2	Hold Down-Battery (Only On: 73470)
95-4042	32	11	2	Hold Down-Battery (Only On: 73540, 73541)
95-4044	31	14	1	Shield-Battery (Only On: 73470)
95-4044	32	14	1	Shield-Battery (Only On: 73540)
95-4060	6	21	2	Washer-Wheel
95-4064	14	11	1	Clip-Pin
95-4070-03	15	14	1	Hood Support Rod
95-4071	17	5	1	Decal-Dash Lens (Only On: 73470)
95-4072	17	5	1	Decal-Dash Lens (Only On: 73540, 73541)
95-4078	15	1:5	1	Foam Seal-Rear Bulkhead
95-4081-03	1	17	1	Hood Support RH
95-4082-03	1	9	1	Hood Support LH
95-4084	6	20	2	Wheel & Tire ASM (Only On: 73541)
95-4085	6	20:4	2	Tire (Only On: 73541)
95-4086	28	1	2	Rear Wheel & Tire ASM (Only On: 73541)
95-4087	28	1:1	2	Tire (Only On: 73541)
95-4089	19	35	2	Reflector (Only On: 73470)
95-4092	32	14	1	Shield-Battery (Only On: 73541)
95-4104	30	36:3	1	Foam Seal
95-4106	14	28	1	Knob-Lift (Only On: 73541)
95-4107	18	23:2	1	Retainer-Cover
95-4113-03	16	13	1	Cover-Side RH
95-4114-03	16	5	1	Cover-Side LH

\*Not Illustrated

# Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
95-4115	18	8	4	Nut-Speed
95-4117-03	30	39	2	Bracket-Bulkhead
95-4123	19	34	2	Gasket-Tail Light (Only On: 73470)
95-4125	29	1	1	Trim
95-4129	15	5:4	4	Clip
95-4133	8	22	1	Hose-Suction
95-4135	8	40	1	Fitting-Hydraulic 45 DEG
95-4136	14	17	1	Fitting-Hydraulic 45 DEG
95-4137	14	22	1	Fitting-Hydraulic Long
95-4138	8	39	1	Fitting-Hydraulic Straight
95-4138	14	21	1	Fitting-Hydraulic Straight
95-4141	14	7	3	Fitting-Hydraulic 90 DEG
95-4157	27	22:3	1	Foam-Tank Center
95-4158	27	22:2	1	Foam-Tank RH
95-4159	27	22:1	1	Foam-Tank LH
95-4165	2	20	1	Spring-Torsion
95-4166	15	5	1	Headlight ASM
95-4168	14	3	1	Trunnion-Lift Lever
95-4185	20	3	4	Bearing-Ball
95-4186	27	4	1	Hose-Vent
95-4192	27	1	1	Gas Cap ASM-Unleaded
95-4197	15	3	2	Nut Plate
95-4221	14	5	1	Spring-Ext. Lift
95-4223	12	14	1	Fan-Hydro
95-4231	16	4	2	Foam-Seal
95-4233	15	1:6	1	Foam-Bulkhead/Hood
95-4234	17	3	6	Screw-Pan Hd
95-4235	14	6	1	Washer
95-4236	14	27	1	Tscrew-PPH
95-4236	17	12	2	Tscrew-PPH
95-4238	17	20	2	Gasket-Foam
95-4242	19	42	2	Cap-Seat Spring
95-4245	14	16	1	Screw-Thread Locking
95-4245	20	31	1	Screw-Thread Locking
95-4246	2	35	1	Baffle-Fan
95-4248	15	6	1	Logo-Headlight
95-4256	13	13	2	Spring-Compression
95-4258	1	12:1	1	Cover-Brace
95-4258	14	14	2	Cover-Brace
95-4259	15	1:4	2	Foam-Lower Bulkhead
95-4260	16	7	1	Decal-Hood LH
95-4261	16	12	1	Decal-Hood RH
95-4262	18	2	1	Decal-Fender
95-4263	18	23:1	1	Decal-Danger (Only On: 73470, 73540)
95-4271	27	14	2	Clamp-Hose
95-4272	27	15	1	Hose-Fuel
95-4287	17	24	1	Guard-Latch (Only On: 73541)
95-7489	17	10	1	Switch-PTO
95-7854	31	3	1	Cable-Battery Red (Only On: 73470)
95-7854	32	3	1	Cable-Battery Red (Only On: 73540, 73541)
95-7873	31	4	1	Cable-Battery Black (Only On: 73470)
95-7873	32	4	1	Cable-Battery Black (Only On: 73540, 73541)
98-1459	5	17	1	Decal
98-1471	5	14	1	Steering Wheel ASM (Only On: 73470)
98-1474	5	14	1	Steering Wheel ASM (Only On: 73540, 73541)
98-1492	31	17	1	Wire (Only On: 73470)
98-1492	32	17	1	Wire (Only On: 73540, 73541)
98-1602	15	5:2	2	Decal-Sidelight
98-1603	16	6	2	Decal-518xi (Only On: 73470)
98-1604	16	6	2	Decal-520xi (Only On: 73540, 73541)
98-1608	18	23:1	1	Decal-Danger (Only On: 73541)
98-1616	27	10	3	Clamp-Tube

\*Not Illustrated

# Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
98-1617	13	24	1	Clamp-Tube
98-1620	14	26	1	Link-Lift
98-1621	18	23	1	Tunnel Cover ASM (Only On: 73470, 73540)
98-1623	18	23	1	Tunnel Cover ASM (Only On: 73541)
98-1629	3	30	2	Washer
98-1632	3	9	2	Decal-Attach A Matic
98-1636	23	9	4	Bushing-Flange
98-1639	14	10	1	Pin-Clevis
98-1642	6	26	2	Cap-Spindle
98-1649	15	13	1	Washer-Spring
98-2358	22	15	1	Clamp-R
98-2358	26	15	2	Clamp-R
98-2358	31	7	3	Clamp-R (Only On: 73470)
98-2358	32	7	3	Clamp-R (Only On: 73540, 73541)
98-2390	19	44	1	Clamp-R
98-3050	26	5:1	1	Fitting-Orifice
98-3051	15	16	1	Washer-Plastic
98-3052	4	1	1	Screw-Thread Locking
98-3086	29	36:1	2	Foam-Kohler
98-3087	22	17	1	Washer-Power Steering
98-3498	4	15	1	Screw-HH
98-3499	24	4	1	Washer-Flat
98-3579	29	10	1	Decal-18hp Engine (Only On: 73470)
98-3580	29	10	1	Decal-20hp Engine (Only On: 73540, 73541)
98-3582	13	4	1	Bellcrank & Bushing ASM
98-3591	15	5:1	2	Socket
98-3595	15	24	1	Shield-Support Rod
98-3597	15	5:7	1	Decal-Headlight Reflector
98-5012	29	36:2	1	Decal-Warning (Only On: 73470, 73540)
98-5014	1	5:1	1	Decal-Warning (Only On: 73470, 73540)
98-5014	1	21:1	1	Decal-Warning (Only On: 73470, 73540)
98-5015	30	36:2	1	Decal-,Warning (Only On: 73541)
98-5015	1	5:1	1	Decal-Warning (Only On: 73541)
98-5015	1	21:1	1	Decal-Warning (Only On: 73541)
98-5015	18	25:1	1	Decal-Warning (Only On: 73541)
98-5023	30	42	1	Bumper
98-5025-01	18	25	1	Tunnel ASM (Only On: 73470, 73540)
98-5056	31	12	1	Strap ASM (Only On: 73470)
98-5056	32	12	1	Strap ASM (Only On: 73540, 73541)
98-5058-01	18	25	1	Tunnel ASM (Only On: 73541)
98-5060-03	29	36	1	Bulkhead ASM (Only On: 73470, 73540)
98-5061-03	1	21	1	Support ASM (Only On: 73470, 73540)
98-5062-03	29	36	1	Bulkhead ASM (Only On: 73541)
98-5063-03	1	21	1	Support ASM (Only On: 73541)
98-5064-03	1	5	1	Support ASM (Only On: 73470, 73540)
98-5070-03	1	5	1	Support ASM (Only On: 73541)
98-5072	31	20	1	Tie-Cable (Only On: 73470)
98-5072	32	20	1	Tie-Cable (Only On: 73540, 73541)
98-7200	29	34	1	Nipple-Pipe
98-7203	1	12	1	Hood Support ASM
98-7205	15	1	1	Hood ASM
98-7204	15	1:2	1	Rear Bulkhead ASM (Incl. Ref. #1:4 1:5 1:6)
98-7207	23	18	1	Hydro Pedal ASM
98-7208	27	22	1	Rear Body ASM
98-7210	15	5:3	1	Reflector ASM (Incl. Ref. #5:2 & 5:7)
98-7211	5	14:1	1	Cover ASM (Incl. Ref. #17)
98-7249	31	5	3	Relay (Only On: 73470)
98-7249	32	5	3	Relay (Only On: 73540, 73541)
98-7374	44	8	2	Screw-Torx (Only On: 73541)
98-7377	11	4	1	ASM-Pump
98-7378	11	58	1	Fitting-90 Bent Tube
98-7379	11	50	1	Body

\*Not Illustrated

# Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
98-7380	11	57	1	ASM-Body
98-7390	26	5:10	1	Gage
98-8083-03	3	6	1	Hitch ASM
98-8086	6	12	2	Balljoint-RH Thread (Onlt On: 73540,73541)
98-8087	6	12	2	Balljoint-LH Thread (Onlt On: 73470)
98-8088	6	6	2	Nut-Lock
98-8089	6	28	2	Nut-Lock
98-8711-03	19	31	1	Gate-Hi Lo Shift
99-2326	26	5:6	1	Gasket-Fuel Sender
99-3716	26	5:3	1	Fitting-Fuel Shut Off
105763-03	7	20	2	Hub-Wheel
218-578	30	*	2	10 Amp Fuse
237-21	14	7:2	3	O-Ring
237-21	14	17:2	1	O-Ring
237-22	8	39:1	1	O-Ring
237-22	9	40:2	1	O-Ring
237-22	14	21:1	1	O-Ring
237-22	14	22:2	1	O-Ring
237-30	8	16:2	1	O-Ring
237-30	8	18:2	1	O-Ring
237-42	8	16:1	1	O-Ring
237-42	8	18:1	1	O-Ring
237-42	8	39:2	1	O-Ring
237-42	8	40:1	1	O-Ring
237-42	14	7:1	3	O-Ring
237-42	14	17:1	1	O-Ring
237-42	14	21:2	1	O-Ring
237-42	14	22:1	1	O-Ring
237-80	8	23:1	1	O-Ring
240-9	29	7	1	Grommet
2412-36	26	5:4	1	Clamp
2412-94	27	6	1	R-Clamp
2412-141	8	21	2	Clamp-Hose
251-82	4	9	2	Bearing-Ball
253-44	7	38	1	Seal-Oil
281-10	7	24	1	Plug-Pipe
281-10	8	25	1	Plug-Pipe
283-16	14	25	1	Pin-Clevis
283-47	21	11	1	Pin-Clevis
2811-16	29	33	1	Elbow-90 DEG
302-5	4	19	1	Fitting-Grease
302-5	6	18	2	Fitting-Grease
302-5	13	25	1	Fitting-Grease
302-5	23	24	1	Fitting-Grease
302-5	25	17	2	Fitting-Grease
302-11	6	16	1	Fitting-Grease
321-3	27	9	1	Screw-HH
321-3	29	13	6	Screw-HH
321-4	2	25	3	Screw-HH
321-4	2	34	2	Screw-HH
321-4	31	18	2	Screw-HH (Only On: 73470)
321-4	32	18	2	Screw-HH (Only On: 73540, 73541)
321-5	8	29	2	Screw-HH
321-10	14	23	2	Screw-HH
322-3	1	4	12	Screw-HH
322-3	18	26	14	Screw-HH
322-3	20	19	2	Screw-HH
322-3	29	5	4	Screw-HH
322-5	23	17	2	Screw-HH
322-6	20	1	1	Screw-HH
322-7	12	5	4	Screw-HH
322-7	30	44	4	Screw-HH

\*Not Illustrated

# Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
322-9	20	7	2	Screw-HH
322-10	4	4	3	Screw-HH
322-10	12	7	4	Screw-HH
322-10	20	14	1	Screw-HH
322-12	20	6	1	Screw HH
322-13	20	32	1	Screw-HH
322-32	6	9	2	Screw-HH
323-4	2	38	2	Screw-HH
323-6	2	42	4	Screw-HH
323-6	3	24	2	Screw-HH
323-6	29	18	4	Screw-HH
323-7	1	16	4	Screw-HH
323-7	2	5	8	Screw-HH
323-7	3	11	4	Screw-HH
323-7	13	1	5	Screw-HH
323-7	23	1	4	Screw-HH
323-7	27	11	1	Screw-HH
323-7	29	32	3	Screw-HH
323-8	8	37	2	Screw-HH
323-9	8	36	3	Screw-HH
323-9	29	35	4	Screw-HH
323-13	8	20	4	Screw-HH
323-18	13	23	4	Screw-HH
323-18	26	1	4	Screw-HH (Only On: 73540, 73541)
323-44	3	8	6	Screw-HH
3218-3	7	19	4	Nut-HJ
3220-2	20	36	1	Nut-Jam
3220-3	20	40	1	Nut-Hex Jam
3220-3	23	23	1	Nut-Hex Jam
3220-3	25	10	1	Nut-Hex Jam
3220-5	6	3	2	Nut-Hex
3220-12	6	11	2	Nut-Hex
3220-16	24	6	1	Nut-HJ
3220-16	25	8	1	Nut-HJ
3220-20	20	34	1	Nut-Hex Jam
3229-1	5	9	2	Screw-CARR
3230-1	2	36	2	Screw-CARR
3230-2	3	32	2	Screw-CARR
3230-16	1	19	4	Screw-CARR
3230-16	18	22	10	Screw-CARR
3230-16	22	11	2	Screw-CARR
3231-22	21	12	1	Bolt-CARR
3231-25	2	1	2	Screw-CARR
3231-25	6	27	2	Screw-CARR
3231-25	23	6	2	Screw-CARR
3232-5	13	19	2	Screw-CARR
3234-29	18	9	4	Screw-HHF
3235-22	2	7	5	Screw-HH
3235-22	3	10	2	Screw-HH
3235-22	7	32	2	Screw-HH
3243-5	7	18	4	Screw-Set
3245-32	5	10:1	1	Screw-Set
3247-2	8	10	1	Screw-Set
3250-29	18	4	4	Screw
3250-31	26	5:7	5	Screw
3253-3	2	26	3	Washer-Lock
3253-3	8	38	2	Washer-Lock
3253-3	27	8	1	Washer-Lock
3253-3	29	25	2	Washer-Lock
3253-4	5	6	1	Washer-Lock
3253-4	19	43	4	Washer-Lock
3253-4	30	45	2	Washer-Lock

\*Not Illustrated

# Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3253-4	31	16	1	Washer-Lock (Only On: 73470)
3253-4	32	16	1	Washer-Lock (Only On: 73540, 73541)
3253-5	29	20	6	Washer-Lock
3253-17	26	5:8	5	Lockwasher
3256-3	12	8	4	Washer-Flat
3256-22	2	27	3	Washer-Flat
3256-22	5	18	2	Washer-Flat
3256-22	27	7	1	Washer-Flat
3256-22	29	14	6	Washer-Flat
3256-23	1	3	12	Washer-Flat
3256-23	15	9	2	Washer-Flat
3256-23	18	12	17	Washer-Flat
3256-23	22	14	1	Washer-Flat
3256-24	2	18	5	Washer-Flat
3256-24	3	12	16	Washer-Flat
3256-24	7	34	2	Washer-Flat
3256-24	13	5	4	Washer-Flat
3256-24	21	13	1	Washer-Flat
3256-24	23	8	3	Washer-Flat
3256-24	25	13	2	Washer-Flat
3256-24	26	14	2	Washer-Flat
3256-24	27	21	1	Washer-Flat
3256-24	30	40	2	Washer-Flat
3256-25	29	23	1	Washer-Flat
3256-26	3	37	1	Washer-Flat
3256-26	13	14	2	Washer-Flat
3256-26	20	28	1	Washer-Flat
3256-26	26	6	2	Washer-Flat (Only On: 73540, 73541)
3256-28	13	10	2	Washer-Flat
3256-42	4	13	1	Washer-Flat
3256-55	25	11	1	Washer-Flat
3256-57	14	15	1	Washer-Flat
3256-57	20	25	1	Washer-Flat
3256-61	1	24	2	Washer-Flat (Only On: 73541)
3256-82	4	16	1	Washer
3257-24	20	26	1	Key-Woodruff
3269-12	15	1:3	6	Rivet-Pop
3272-1	14	8	1	Pin-Cotter
3272-6	7	33	2	Pin-Cotter
3272-10	13	15	2	Pin-Cotter
3272-10	15	15	1	Pin-Cotter
3272-10	21	6	1	Pin-Cotter
3272-10	23	7	2	Pin-Cotter
3272-10	25	12	1	Pin-Cotter
3272-10	26	7	2	Pin-Cotter (Only On: 73540, 73541)
3272-18	6	24	2	Pin-Cotter
3274-14	22	3	4	Screw-HSH (Only On: 73470)
3274-14	22	3	6	Screw-HSH (Only On: 73540, 73541)
3274-31	15	2	4	Screw-HS
3277-1	5	16	1	Nut-HH
3290-221	3	22	2	Washer-Spring
3290-392	22	8	2	Screw-HH
3290-479	18	19	18	Fastener-Panel
3296-1	22	12	2	Locknut
3296-2	22	1	4	Nut Lock (Only On: 73470)
3296-2	22	1	6	Nut Lock (Only On: 73540, 73541)
3296-6	23	22	1	Nut-Lock
3296-6	24	2	1	Nut-Lock
3296-6	25	4	1	Nut-Lock
3296-29	1	14	16	Nut-Lock
3296-29	2	10	3	Nut-Lock
3296-29	3	34	2	Nut-Lock

\*Not Illustrated

# Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3296-29	4	11	3	Nut-Lock
3296-29	6	7	2	Nut-Lock
3296-29	12	9	8	Nut-Lock
3296-29	15	8	3	Nut-Lock
3296-29	18	14	27	Nut-Lock
3296-29	20	12	7	Nut-Lock
3296-29	22	4	2	Nut-Lock
3296-29	23	16	2	Nut-Lock
3296-29	24	5	1	Nut-Lock
3296-29	29	2	4	Nut-Lock
3296-39	1	20	4	Nut-Lock
3296-39	2	3	10	Nut-Lock
3296-39	3	13	8	Nut-Lock
3296-39	6	1	2	Nut-Lock
3296-39	13	3	15	Nut-Lock
3296-39	21	1	1	Nut-Lock
3296-39	23	2	6	Nut-Lock
3296-39	25	16	1	Nut-Lock
3296-39	27	12	1	Nut-Lock
3296-39	29	27	8	Nut-Lock
3296-39	26	2	4	Nut-Lock (Only On: 73540, 73541)
3296-42	5	2	2	Nut-Lock
3296-42	14	13	2	Nut-Lock
3296-45	20	29	1	Nut
3296-48	13	9	2	Nut-Lock
3296-61	6	15	1	Nut-Hex
32103-22	31	9	4	Nut-Wing (Only On: 73470)
32103-22	32	9	4	Nut-Wing (Only On: 73540, 73541)
32104-121	18	23:3	2	Screw-PH
32120-64	8	13	1	Ring-Retaining
32121-16	21	10	1	Pin-Roll
32121-79	13	11	2	Roll Pin
32128-30	20	18	1	Nut-Flange
33114-030	5	7	1	Screw-HH
32144-4	19	32	2	Screw-TAP
32144-10	4	22	4	Screw-HH
32144-20	18	30	4	Screw
32144-32	17	14	4	Screw-Plastic
32144-42	1	25	2	Screw-HH TAP (Only On: 73541)
32144-109	30	43	1	Screw-Taptite
32151-29	8	34	2	Ring-Ext. Snap
32152-4	29	16	6	Locknut
33104-020	30	46	2	Screw-HHF
33104-020	31	15	1	Screw-HHF (Only On: 73470)
33104-020	32	15	1	Screw-HHF (Only On: 73540, 73541)
33113-008	29	26	2	Screw-HH
NN10277	30	*	1	30 Amp Fuse





