



Wheel Horse®

42" Rear Discharge Cutting Unit

Model No. 78353 – 8900001 & Up

Model No. 78442 – 8900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Deck Assembly	1	Deck Suspension Assembly (continued)	4
Spindle & Blade Assembly	2	Pulley Box Assembly	5
Deck Suspension Assembly	3	Note:	

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
-------------	-------------------	-------------	-------------------

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFV	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form X:Y. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X(Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.


For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

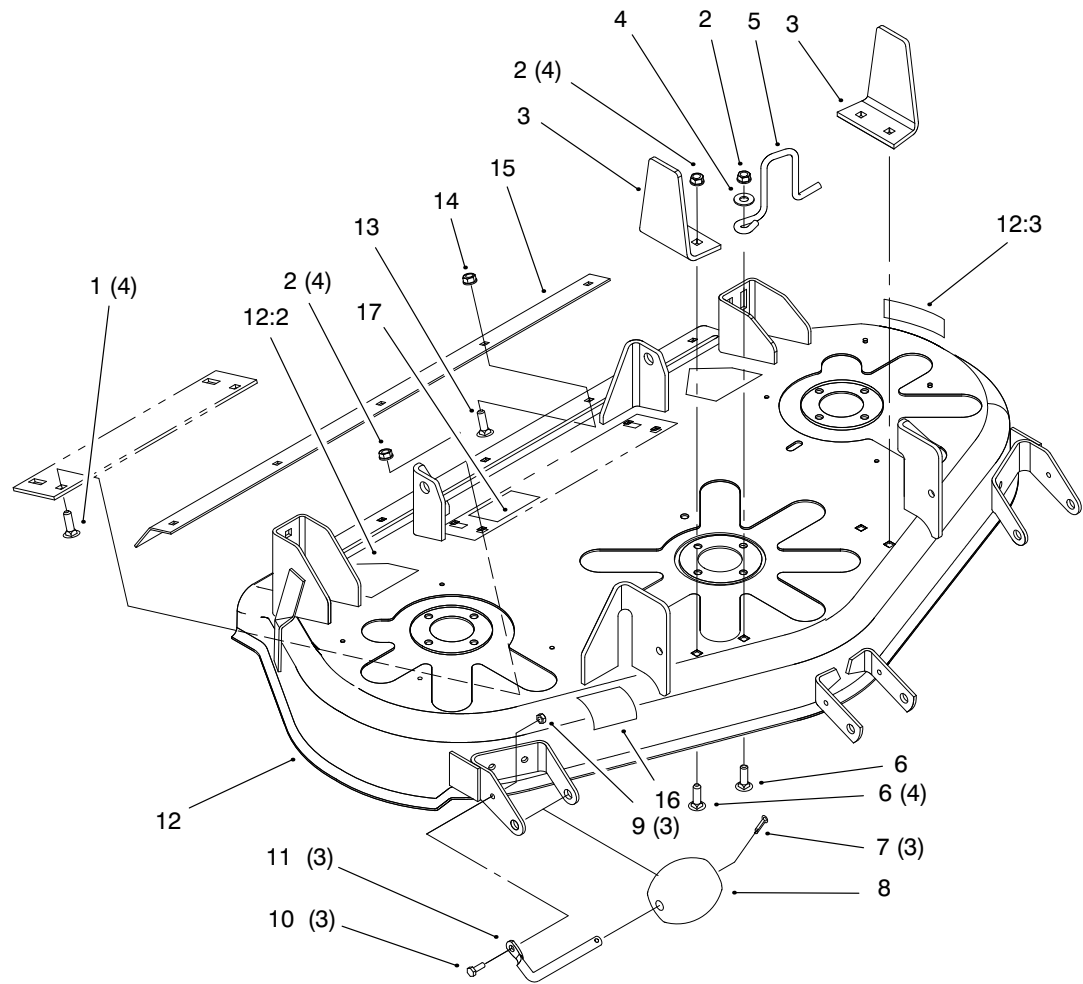

Sheet No.:2

Deck Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3231-2	4	Screw-CARR	16	98-3481	1	Decal-PTO Belt Routing
2	3296-39	9	Nut-Lock	17	98-3480	1	Decal-Belt Routing
3	94-7642-01	2	Bracket-Guide				
4	3256-41	1	Washer-Flat				
5	95-3953	1	Guide-Belt				
6	3231-25	5	Screw-CARR				
7	3272-21	3	Pin-Cotter				
8	94-1599	3	Roller (Only On: 78353)				
8	95-4057	3	Roller-Low Cut (Only On: 78442)				
9	3296-42	3	Nut-Lock				
10	321-4	3	Screw-HH				
11	110847	3	Shaft-Roller				
12	98-5088	1	Deck ASM (Only On: 78353)				
12	98-5089	1	Deck ASM (Only On: 78442)				
12:2	93-1122	2	Decal-Danger (Only On: 78353)				
12:3	92-7108	2	Decal-Danger (Only On: 78353)				
13	3230-1	5	Bolt-CARR				
14	3296-29	5	Nut-Lock				
15	98-3494-01	1	Deflector				

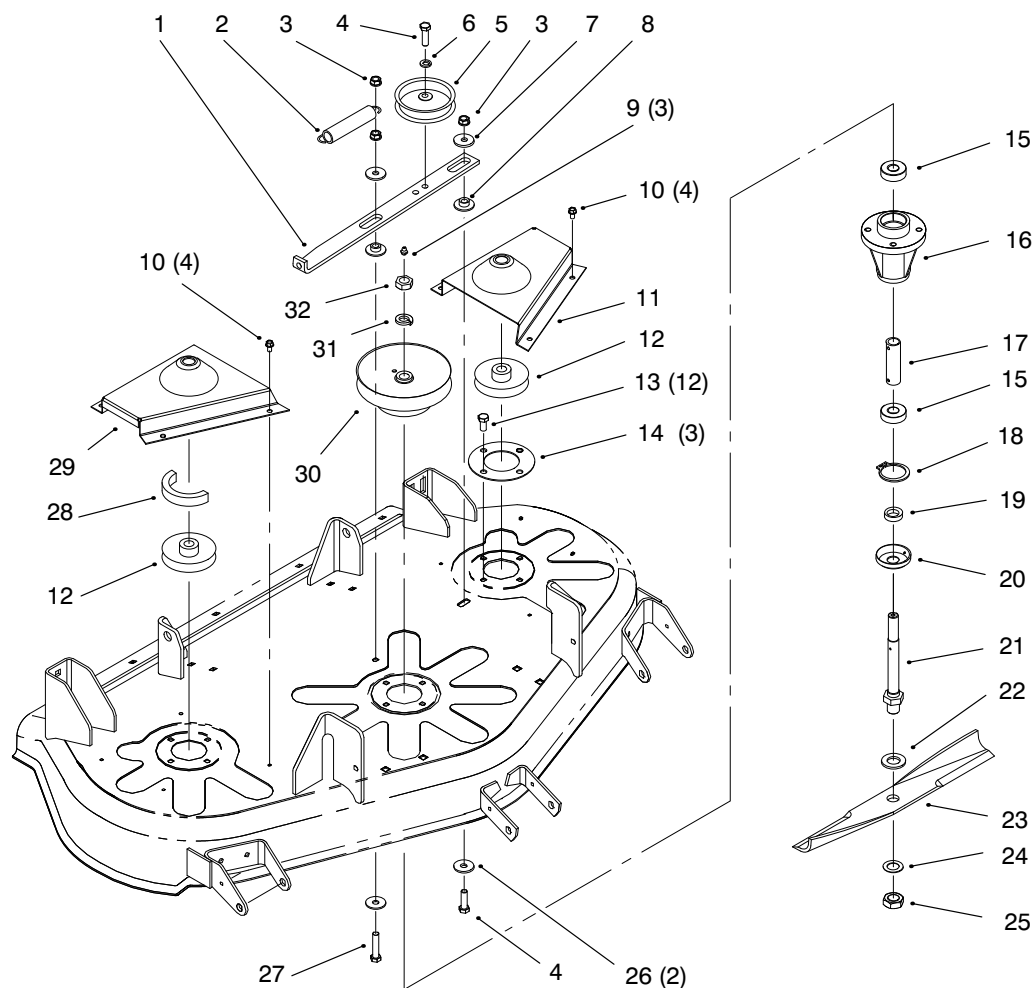

Sheet No.:3

Spindle & Blade Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	106120	1	Bar-Support	27	323-9	1	Screw-HH
2	100071	1	Spring-Extention	28	95-4230	1	Belt-V
3	3296-39	3	Nut-Lock	29	95-4099-01	1	Cover-Belt
4	323-7	2	Screw-HH	30	95-4049	1	Pulley-Double
5	92-7101	1	Pulley-Flat	31	3253-8	3	Washer-Lock
6	3253-21	1	Washer-Lock	32	3220-6	3	Nut-Jam
7	107675	2	Washer-Rubber				
8	107674	2	Spacer-Bushing				
9	302-5	3	Fitting-Grease				
10	46-8560	8	Screw-HHF				
11	95-4098-01	1	Cover-Belt				
12	109967	2	Pulley-Drive				
13	9080326	12	Screw-HH				
14	106117	3	Plate-Spindle				
15	109966	6	Bearing-Ball				
16	114568	3	Housing-Spindle				
17	116085	3	Tube				
18	32120-42	3	Ring-Int. Ret.				
19	106068	3	Spacer				
20	106067	3	Cup-Spindle				
21	112674	3	Shaft-Spindle				
22	9202574	3	Washer-Flat				
23	106108	3	Blade-14.5"				
24	3256-28	3	Washer-Flat				
25	3220-7	3	Nut-Jam				
26	2844	2	Washer-Flat				

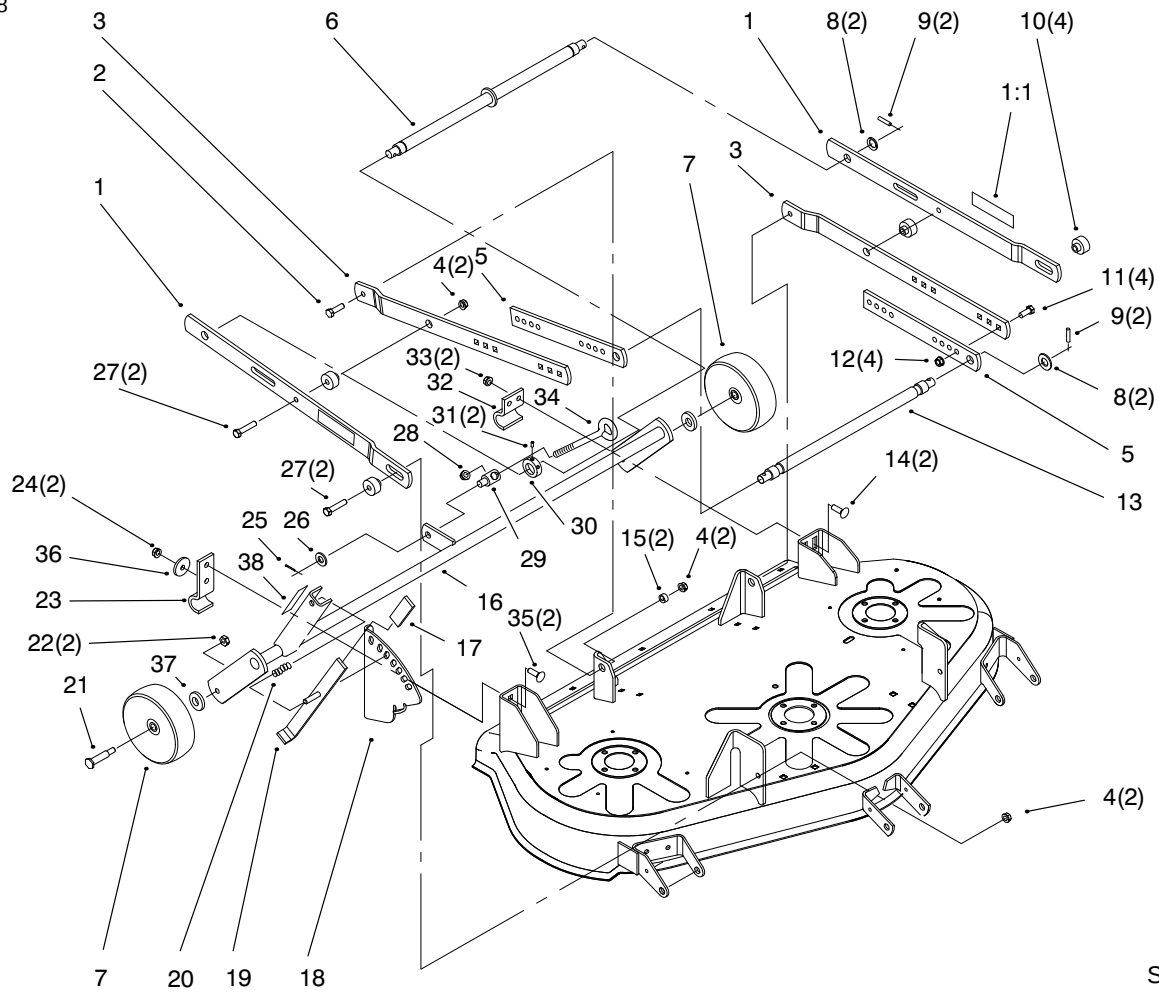

Sheet No.:4


Deck Suspension Assembly

Ref. No.	Part No.	Qty.	Description
1	98-5041	1	Leveler ASM LH (Only On: 78353)
1	98-5042	1	Leveler ASM LH (Only On: 78442)
1	98-5043	1	Leveler ASM RH (Only On: 78353)
1	98-5044	1	Leveler ASM RH (Only On: 78442)
1:1	93-9367	1	Decal-Warning (Only On: 78442)
1:1	98-3478	1	Decal-Warning (Only On: 78353)
2	323-7	2	Screw-HH
3	94-7801-01	2	Draftbar
4	102809	6	Nut-Hex Lock
5	94-7804-01	2	Bar-Draftbar Adj.
6	94-7943-01	1	Leveler Shaft ASM
7	109375	2	Wheel (Only On: 78442)
7	95-4102	2	Wheel (Only On: 78353)
8	3256-69	4	Washer-Flat
9	933216	4	Pin
10	115706	4	Spacer
11	3231-38	4	Screw-CARR
12	32152-2	4	Nut-Lock HH

Ref. No.	Part No.	Qty.	Description
13	94-2130-01	1	Shaft-Draftbar
14	3231-2	2	Screw-CARR
15	114127	2	Spacer
16	95-4054-01	1	Wheel Support ASM
17	102597	1	Grip
18	95-4056-01	1	Quadrant
19	94-7965-01	1	HOC Lever ASM
20	101853	1	Spring-Compression
21	92-1057	2	Bolt-Shoulder
22	32146-2	2	Nut-Hex Lock
23	110837-03	1	Bracket-Pivot
24	3296-39	2	Nut-Lock
25	3272-12	1	Pin-Cotter
26	3256-26	1	Washer-Flat
27	323-9	4	Screw-HH
28	3296-23	1	Nut-Lock
29	94-7802	1	Trunnion

Deck Suspension Assembly (continued)

Ref. No.	Part No.	Qty.	Description

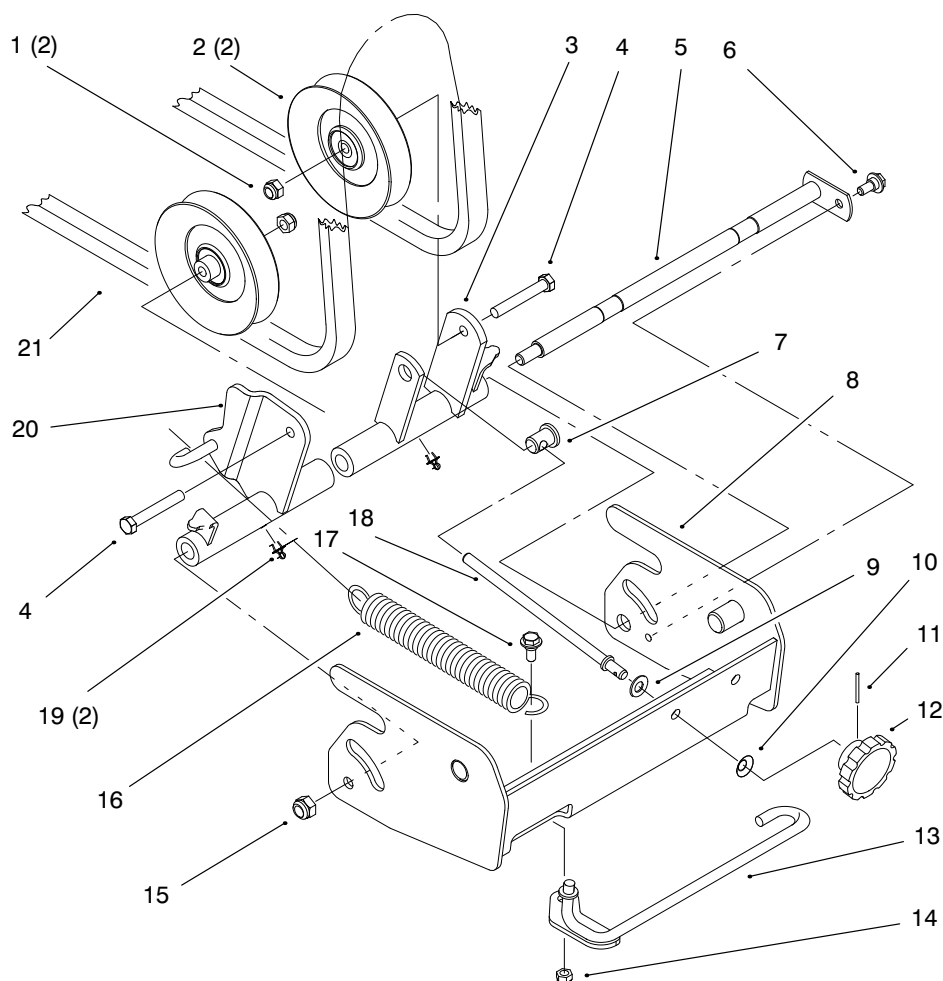

Sheet No.:5

Pulley Box Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-39	2	Nut-Lock
2	94-2447	2	Pulley-Idler
3	94-2284-01	1	Idler Lever ASM
4	323-10	2	Screw-HH
5	94-2423	1	Pivot Rod
6	32144-70	1	Screw-TAP
7	94-2449	1	Ferrule-Adjuster
8	94-2287-03	1	Pulley Box ASM
9	3256-24	1	Washer-Flat
10	108571	1	Washer-Spring
11	933156	1	Pin-Spirol
12	101851	1	Knob-Adjustment
13	94-7764	1	Idler Tensioner
14	3296-29	1	Nut-Lock
15	32152-9	1	Nut-Lock
16	94-2460	1	Spring-Extension
17	19-1471	1	Bolt-Shoulder
18	94-2288	1	Rod-Tension
19	302-5	2	Fitting-Grease
20	94-2462-01	1	Idler Arm ASM
21	95-4093	1	Belt-V

Ref. No.	Part No.	Qty.	Description

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
2844	2	26	2	Washer—Flat
100071	2	2	1	Spring—Extention
101851	5	12	1	Knob—Adjustment
101853	3	20	1	Spring—Compression
102597	3	17	1	Grip
102809	3	4	6	Nut—Hex Lock
106067	2	20	3	Cup—Spindle
106068	2	19	3	Spacer
106108	2	23	3	Blade—14.5"
106117	2	14	3	Plate—Spindle
106120	2	1	1	Bar—Support
107674	2	8	2	Spacer—Bushing
107675	2	7	2	Washer—Rubber
108571	5	10	1	Washer—Spring
109375	3	7	2	Wheel (Only On: 78442)
109966	2	15	6	Bearing—Ball
109967	2	12	2	Pulley—Drive
110847	1	11	3	Shaft—Roller
111655	4	38	1	Decal—Height Of Cut (Only On: 78353)
112674	2	21	3	Shaft—Spindle
114127	3	15	2	Spacer
114568	2	16	3	Housing—Spindle
115706	3	10	4	Spacer
116085	2	17	3	Tube
933156	5	11	1	Pin—Spirol
933216	3	9	4	Pin
9080326	2	13	12	Screw—HH
9202424	4	37	2	Washer—Flat (Only On: 78442)
9202574	2	22	3	Washer—Flat
19-1471	5	17	1	Bolt—Shoulder
46-8560	2	10	8	Screw—HHF
92-1057	3	21	2	Bolt—Shoulder
92-7101	2	5	1	Pulley—Flat
92-7108	1	12:3	2	Decal—Danger (Only On: 78353)
93-1122	1	12:2	2	Decal—Danger (Only On: 78353)
93-9367	3	1:1	1	Decal—Warning (Only On: 78442)
94-1599	1	8	3	Roller (Only On: 78353)
94-2130-01	3	13	1	Shaft—Draftbar
94-2284-01	5	3	1	Idler Lever ASM
94-2287-03	5	8	1	Pulley Box ASM
94-2288	5	18	1	Rod—Tension
94-2423	5	5	1	Pivot Rod
94-2447	5	2	2	Pulley—Idler
94-2449	5	7	1	Ferrule—Adjuster
94-2460	5	16	1	Spring—Extension
94-2462-01	5	20	1	Idler Arm ASM
94-7543-03	4	32	1	Clamp
94-7642-01	1	3	2	Bracket—Guide
94-7764	5	13	1	Idler Tensioner
94-7801-01	3	3	2	Draftbar
94-7802	3	29	1	Trunnion
94-7804-01	3	5	2	Bar—Draftbar Adj.
94-7943-01	3	6	1	Leveler Shaft ASM
94-7953	4	30	1	Collar
94-7965-01	3	19	1	HOC Lever ASM
95-3953	1	5	1	Guide—Belt
95-4049	2	30	1	Pulley—Double
95-4050	4	34	1	Rod—Level Adjust
95-4054-01	3	16	1	Wheel Support ASM
95-4056-01	3	18	1	Quadrant
95-4057	1	8	3	Roller—Low Cut (Only On: 78442)
95-4093	5	21	1	Belt—V

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
95-4098-01	2	11	1	Cover-Belt
95-4099-01	2	29	1	Cover-Belt
95-4102	3	7	2	Wheel (Only On: 78353)
95-4230	2	28	1	Belt-V
98-3478	3	1:1	1	Decal-Warning (Only On: 78353)
98-3479	4	36	1	Washer-Support
98-3480	1	17	1	Decal-Belt Routing
98-3481	1	16	1	Decal-PTO Belt Routing
98-3494-01	1	15	1	Deflector
98-5041	3	1	1	Leveler ASM LH (Only On: 78353)
98-5042	3	1	1	Leveler ASM LH (Only On: 78442)
98-5043	3	1	1	Leveler ASM RH (Only On: 78353)
98-5044	3	1	1	Leveler ASM RH (Only On: 78442)
98-5088	1	12	1	Deck ASM (Only On: 78353)
98-5089	1	12	1	Deck ASM (Only On: 78442)
110837-03	3	23	1	Bracket-Pivot
302-5	2	9	3	Fitting-Grease
302-5	5	19	2	Fitting-Grease
321-4	1	10	3	Screw-HH
323-7	2	4	2	Screw-HH
323-7	3	2	2	Screw-HH
323-9	2	27	1	Screw-HH
323-9	3	27	4	Screw-HH
323-10	5	4	2	Screw-HH
3220-6	2	32	3	Nut-Jam
3220-7	2	25	3	Nut-Jam
3230-1	1	13	5	Bolt-CARR
3231-2	1	1	4	Screw-CARR
3231-2	3	14	2	Screw-CARR
3231-4	4	35	2	Bolt-CARR
3231-25	1	6	5	Screw-CARR
3231-38	3	11	4	Screw-CARR
3245-2	4	31	2	Screw-Set
3253-8	2	31	3	Washer-Lock
3253-21	2	6	1	Washer-Lock
3256-24	5	9	1	Washer-Flat
3256-26	3	26	1	Washer-Flat
3256-28	2	24	3	Washer-Flat
3256-41	1	4	1	Washer-Flat
3256-69	3	8	4	Washer-Flat
3272-12	3	25	1	Pin-Cotter
3272-21	1	7	3	Pin-Cotter
3296-23	3	28	1	Nut-Lock
3296-29	1	14	5	Nut-Lock
3296-29	5	14	1	Nut-Lock
3296-39	1	2	9	Nut-Lock
3296-39	2	3	3	Nut-Lock
3296-39	3	24	2	Nut-Lock
3296-39	5	1	2	Nut-Lock
3296-42	1	9	3	Nut-Lock
32120-42	2	18	3	Ring-Int. Ret.
32128-40	4	33	2	Nut-HFW
32144-70	5	6	1	Screw-TAP
32146-2	3	22	2	Nut-Hex Lock
32152-2	3	12	4	Nut-Lock HH
32152-9	5	15	1	Nut-Lock

*Not Illustrated

