



48" Dozer Blade

Model No. 79355 – 8900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Frame Assembly	1	Toro Part Number Index	4
Blade Assembly	2	Maintenance	5
Mounting Assembly	3	Note:	

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
-------------	-------------------	-------------	-------------------

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form X:Y. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
2354	1	3:2	1	Spring-Compression
4564	2	11	1	Rod-Lower
4944	1	10	2	Plug
5120	2	1	2	Rod-Blade Pivot
5359	1	16	1	Grip-Handle
9335044	3	2	2	Hairpin
9335054	1	19	2	Hairpin
9335124	1	14	1	Hairpin
9335124	2	3	2	Hairpin
78-1330-01	2	6	1	Wa-Blade
78-8760	2	12	1	Wa-Quadrant
88-2080	2	2	4	Lug-Spring
88-6520	1	3:1	1	Index Pin
92-8748	2	10	1	Decal-Attachment
93-1611-01	2	4	2	Spring-Return
93-1612-01	2	7	1	Plate-Blade Edge
94-7782	1	5	1	Bracket-Cable
94-7787	1	12	1	Rod-Blade Control
94-7788	1	4	1	Cable-Indexing
94-7792-01	1	3	1	Frame-ASM
94-7793-03	1	2	1	Link-Lift
94-7987-03	1	2	1	Link-Lift
98-1743	1	17	1	Lever
98-5053-01	1	13	1	Lever Indexing
98-5055	1	1	2	Pin
283-2	1	1	2	Pin-Clevis
283-2	3	1	2	Pin-Clevis
321-6	1	15	1	Screw-HH
3216-7	1	9	1	Screw-HH
3231-1	2	8	5	Screw-CARR
3272-11	1	3:3	1	Pin-Cotter
3272-11	1	11	1	Pin-Cotter
3272-11	2	5	4	Pin-Cotter
3272-12	1	6	1	Pin-Cotter
3296-15	1	8	1	Nut-Hex Lock
3296-39	2	9	5	Nut-Lock
32146-17	1	18	1	Nut-Lock

*Not Illustrated

