



1338XL LAWN TRACTOR

Model No. 71208 – 8900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Frame Assembly	1	Pulley & Belt Assembly (38" Cutting Unit)	11
Hood Assembly	2	Suspension Assembly (38" Cutting Unit)	12
Seat Assembly	3	Height Of Cut Assembly	13
Front Axle Assembly	4	Electrical Assembly	14
Steering Assembly	5	Electrical Schematic	15
Gas Tank & Engine Pulley Assembly	6	Engine Assembly	16
Clutch Assembly	7	Engine Briggs & Stratton	
Shift Assembly	8	Model 28M707-1122-E1	17-25
Transaxle Assembly	9	Toro Part Number Index	26-32
Deck Assembly (38" Cutting Unit)	10		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Easy Empty Bagger Kit	Model No. 79117	42" (106.7cm) Snowblade Kit ...	Model No. 79150
Twin Bagger	Model No. 79103	Wheel Weight Kit	Model No. 59159
Recycler Kit (Std.)	Model No. 79170	Anti-Scalp Kit	Model No. 79182
Hi-Sail Bagging Blade	Part No. 57-4700	Exhaust Deflector Kit	Part No. 94-6872
Tire Chains	Part No. 11-0430		
Headlight Kit (Std.)	Model No. 79180		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

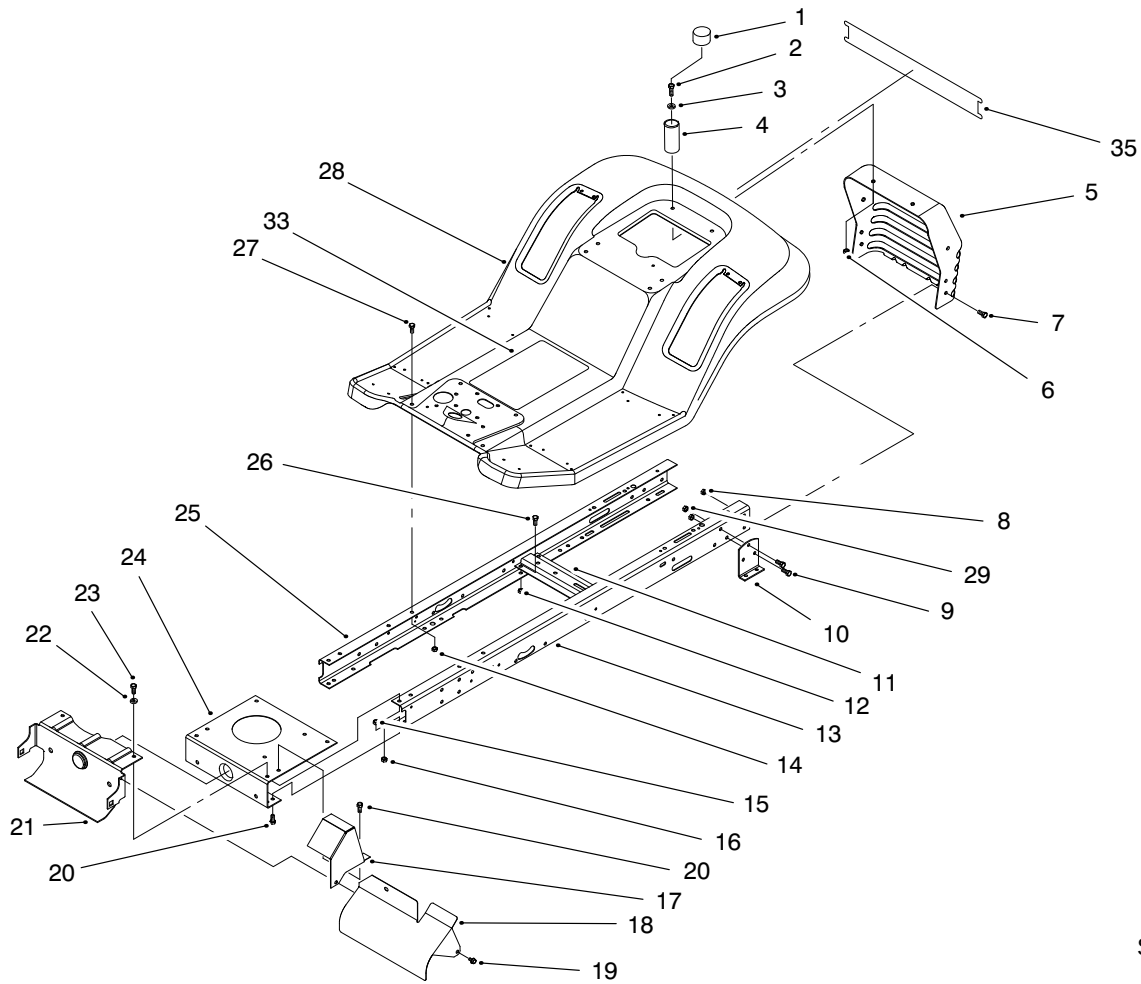


Sheet No.:2

Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	701178	2	Cap-Protector
2	322-5	2	Screw-HH
3	3256-23	2	Washer-Flat
4	88-6220	2	Spring - Compression
5	88-3940-03	1	Panel - Rear
6	3296-29	2	Nut-Lock
7	322-3	4	Screw-HH
8	3296-29	4	Nut-Lock
9	322-3	4	Screw-HH
10	88-5260-03	2	Bracket-Transaxle Mounti
11	88-4620-03	1	Bracket - Idler Pivot
12	3296-29	4	Nut-Lock
13	94-1999-03	1	Frame Rail-LH
14	3296-29	2	Nut-Lock
15	3296-29	6	Nut-Lock
16	3296-29	2	Nut-Lock
17	88-4960-03	1	Shield - Exh. Pipe
18	88-6290-03	1	Shield - Muffler
19	32104-76	1	Screw-Self TAP
20	322-3	6	Screw-HH
21	98-3575-03	1	Support-Axle
22	3256-23	2	Washer-Flat
23	322-3	2	Screw-HH
24	88-4630-03	1	Plate - Engine Mounting


Ref. No.	Part No.	Qty.	Description
25	94-1998-03	1	Frame Rail-RH
26	322-3	4	Screw-HH
27	322-3	2	Screw-HH
28	88-3840	1	Body - Rear
29	3296-29	4	Nut-Lock
33	93-6675	1	Decal-Instruct
35	95-0809	1	Decal-Rear Fender

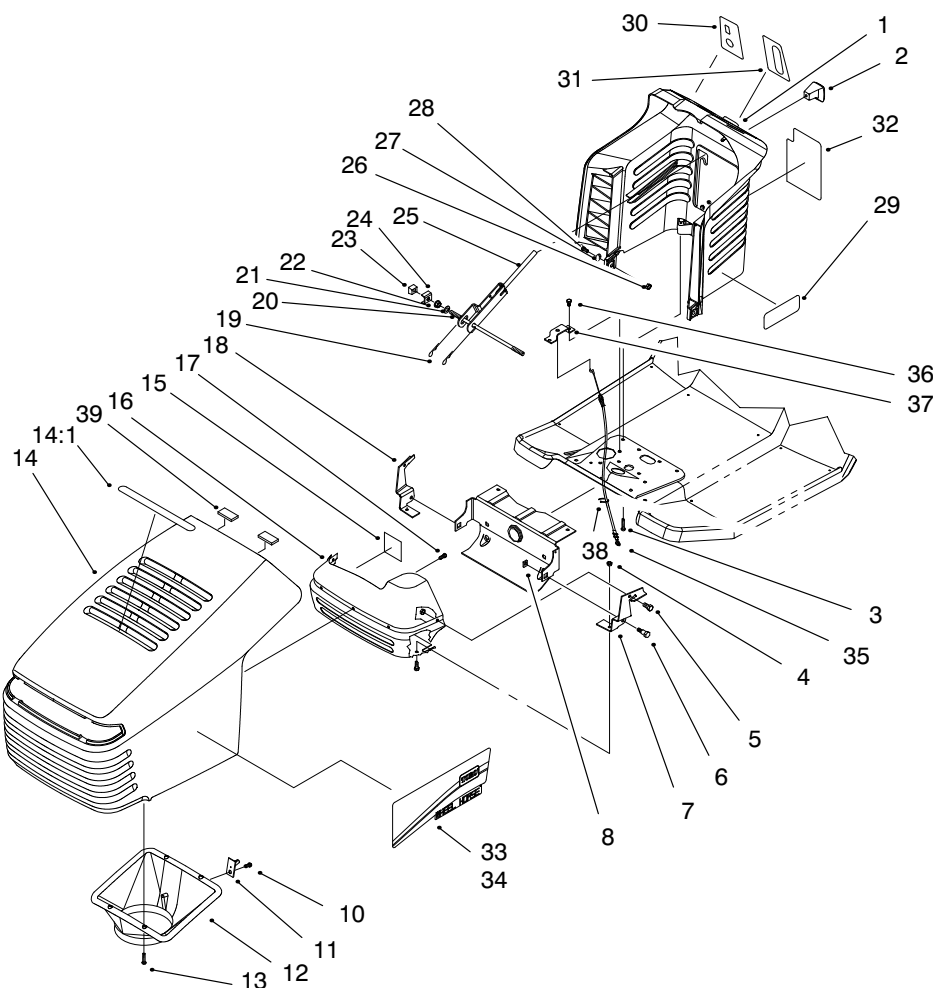

Sheet No.:3

Hood Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	93-0303	1	Tower-Steering Toro	26	3296-29	2	Nut-Lock
2	94-5565	1	Knob - Control	27	3256-23	2	Washer-Flat
3	46-8091	2	Screw-Tapping	28	322-3	2	Screw-HH
4	3296-42	4	Nut-Lock	29	93-4145	2	Decal - Tower
5	321-2	4	Screw-HH	30	92-5731	1	Decal-Ign/Lights
6	28-0540	2	Bolt-Shoulder	31	92-5730	1	Decal - Throttle
7	88-6050-03	1	Bracket - Hinge	32	93-6673	1	Decal - Deck Engage
8	3290-496	2	Nut - Retained	33	95-0808	1	Decal-Side Panel L.H.
10	46-8091	1	Screw-Tapping	34	95-0807	1	Decal-Side Panel R.H.
11	94-1984	1	Pin-Latch	35	94-4293	1	Cable ASM-Deck Engage
12	88-4050	1	Duct - Hood Air	36	9266714	2	Screw-HWHTF
13	46-8090	4	Screw-Tapping	37	93-3849	1	Brkt-Cable
14	92-8650	1	Hood-Toro	38	614249	1	Tie Strap
14:1	92-5748	1	Decal - Air Duct	39	94-1980	2	Foam-Hood
15	92-5782	1	Patch - Heat Tape				
16	88-3930-03	1	Shield - Heat				
17	46-8090	3	Screw-Tapping				
18	88-6040-03	1	Bracket - Hinge				
19	3290-307	2	Pin-Cotter				
20	88-4170	1	Rod - Pivot				
21	3256-24	2	Washer-Flat				
22	32128-43	2	Nut-Flange				
23	88-4140	2	Nut - Wedge				
24	88-4160	2	Clamp - Pivot Rod				
25	88-5190-03	1	Lever W.a. - Deck Engage				

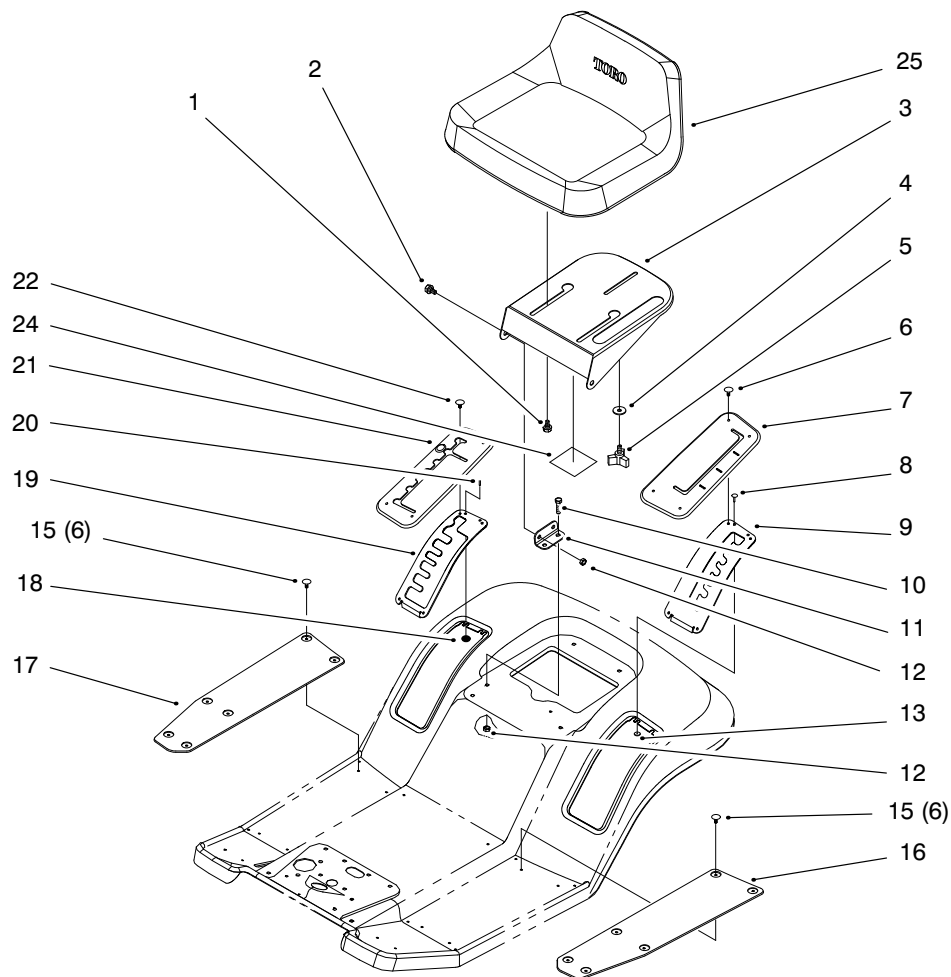


Sheet No.:4

Seat Assembly

Ref. No.	Part No.	Qty.	Description
1	37-8770	2	Bolt-Shldr
2	37-8770	2	Bolt-Shldr
3	88-4910-03	1	Support - Seat
4	5-4460	1	Washer-Fender
5	92-9674	1	Knob-Studded
6	3290-479	4	Fastener-Panel
7	93-7657	1	Cover - HOC
8	3290-282	2	Pop Rivet
9	88-5030-03	1	Gate - HOC
10	322-3	4	Screw-HH
11	88-4820-03	2	Bracket - Seat Hinge
12	3296-29	6	Nut-Lock
13	3269-26	2	Washer
15	3290-479	12	Fastener-Panel
16	88-5240	1	Foot Mat
17	88-5220	1	Foot Mat
18	3269-26	2	Washer
19	88-5020-03	1	Plate - Shift Gate
20	3290-282	2	Pop Rivet
21	93-7656	1	Cover - Shift Gate
22	3290-479	4	Fastener-Panel
24	114621	1	Decal-Noise
25	88-3950	1	Seat

Ref. No.	Part No.	Qty.	Description

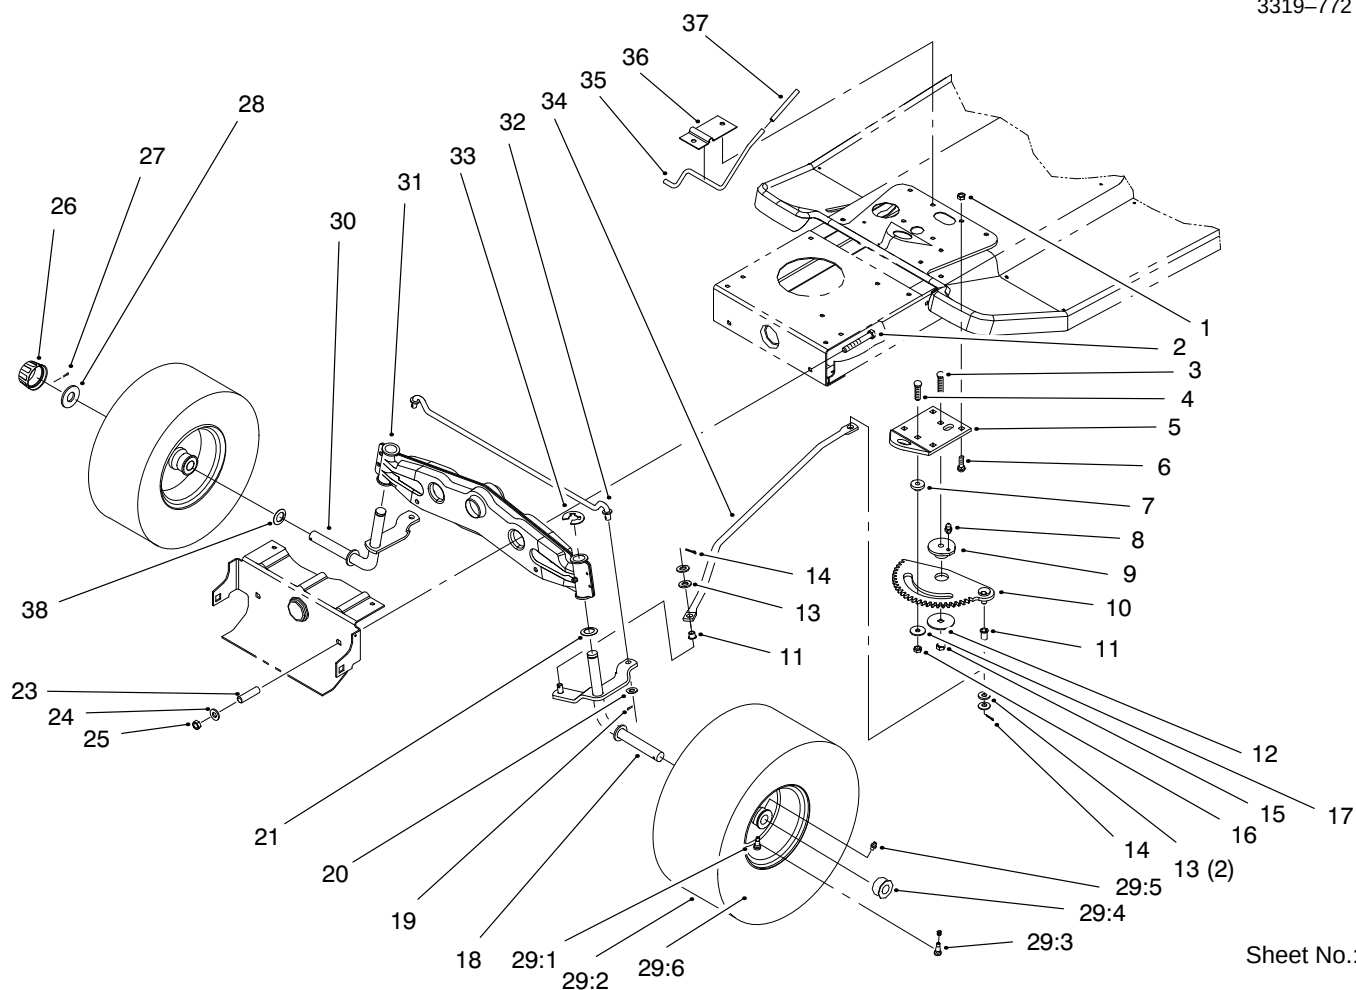


Sheet No.:5

Front Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-29	4	Nut-Lock
2	323-13	2	Screw-HH
3	3231-4	1	Bolt-CARR
4	3230-3	1	Screw-CARR
5	88-5130-03	1	Bracket - Steering Rack
6	3230-1	4	Bolt-CARR
7	88-5010	1	Spacer - Steering Rack
8	302-26	1	Fitting-Grease
9	88-4670	1	Bushing - Eccentric
10	88-5200	1	Steering Rack W.a.
11	52-2891	2	Bushing - Steering Links
12	111419	1	Washer-Bearing
13	3256-25	4	Washer-Flat
14	3272-10	2	Pin-Cotter
15	3296-39	1	Nut-Lock
16	3296-29	1	Nut-Lock
17	5-4460	1	Washer-Fender
18	92-7890-03	1	Spindle Wa-LH
19	3272-10	2	Pin-Cotter
20	3256-24	2	Washer-Flat
21	3-6498	2	Washer-Thrust
23	88-5470	2	Spacer - Front Axle
24	3256-24	2	Washer-Flat

Ref. No.	Part No.	Qty.	Description
25	3296-39	2	Nut-Lock
26	61-9780	2	Hubcap
27	3272-12	2	Pin-Cotter
28	28-2480	2	Washer-Flat
29:1	88-4370	2	Rim ASM-15" Front
29:2	88-4070	2	Tire 15x6.00-6
29:3	232-27	2	Valve Stem
29:4	88-4400	2	Bearing-Wheel
29:5	302-5	2	Fitting-Grease
29:6	232-39	2	Tube-Inner 15x6-6
30	92-7889-03	1	Spindle Wa-RH
31	94-1962-03	1	Front Axle Wa
32	88-5380	1	Tie Rod - Steering
33	32151-48	2	Ring-Retaining
34	88-4830	1	Link - Drag
35	88-5510	1	Rod-Parking Brake
36	88-5520-03	1	Bracket-Parking Brake
37	88-0890	1	Grip - Parking Brake
38	3-6498	4	Washer-Thrust

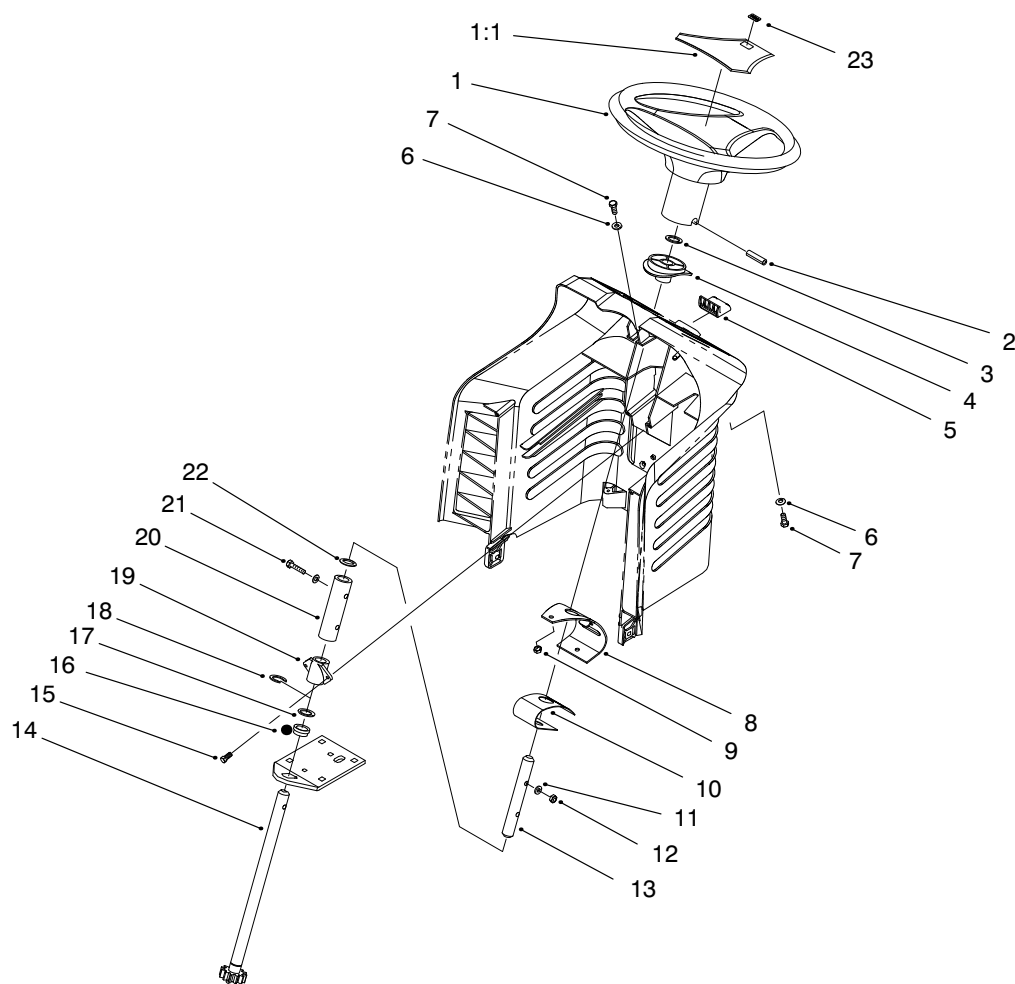


Sheet No.:6

Steering Assembly

Ref. No.	Part No.	Qty.	Description
1	98-1467	1	Steering Wheel ASM 14"
1:1	98-1468	1	Cover-Wheel
2	32121-111	1	Pin-Spiral
3	32151-81	1	Retaining Ring Push-On
4	88-4190	1	Bushing - Sliding
5	88-4180	1	Button - Release
6	3256-22	2	Washer-Flat
7	321-4	2	Screw-HH
8	88-5180-01	1	Bracket - Backup
9	3296-42	2	Nut-Lock
10	88-4890	1	Spring - Leaf
11	3-7501	4	Washer-Curved
12	3296-42	2	Nut-Lock
13	88-6300	1	Shaft - Steering
14	88-6370	1	Shaft W.a. - Steering
15	27-0220	2	Screw-Special HWH
16	88-5150	1	Bushing - Flange
17	3-6498	1	Washer-Thrust
18	32151-48	1	Ring-Retaining
19	88-4210	1	Bushing - Stationary
20	88-6090	1	Coupling - Steering
21	321-9	2	Screw-HH
22	3-6498	1	Washer-Thrust
23	98-1459	1	Decal


Ref. No.	Part No.	Qty.	Description

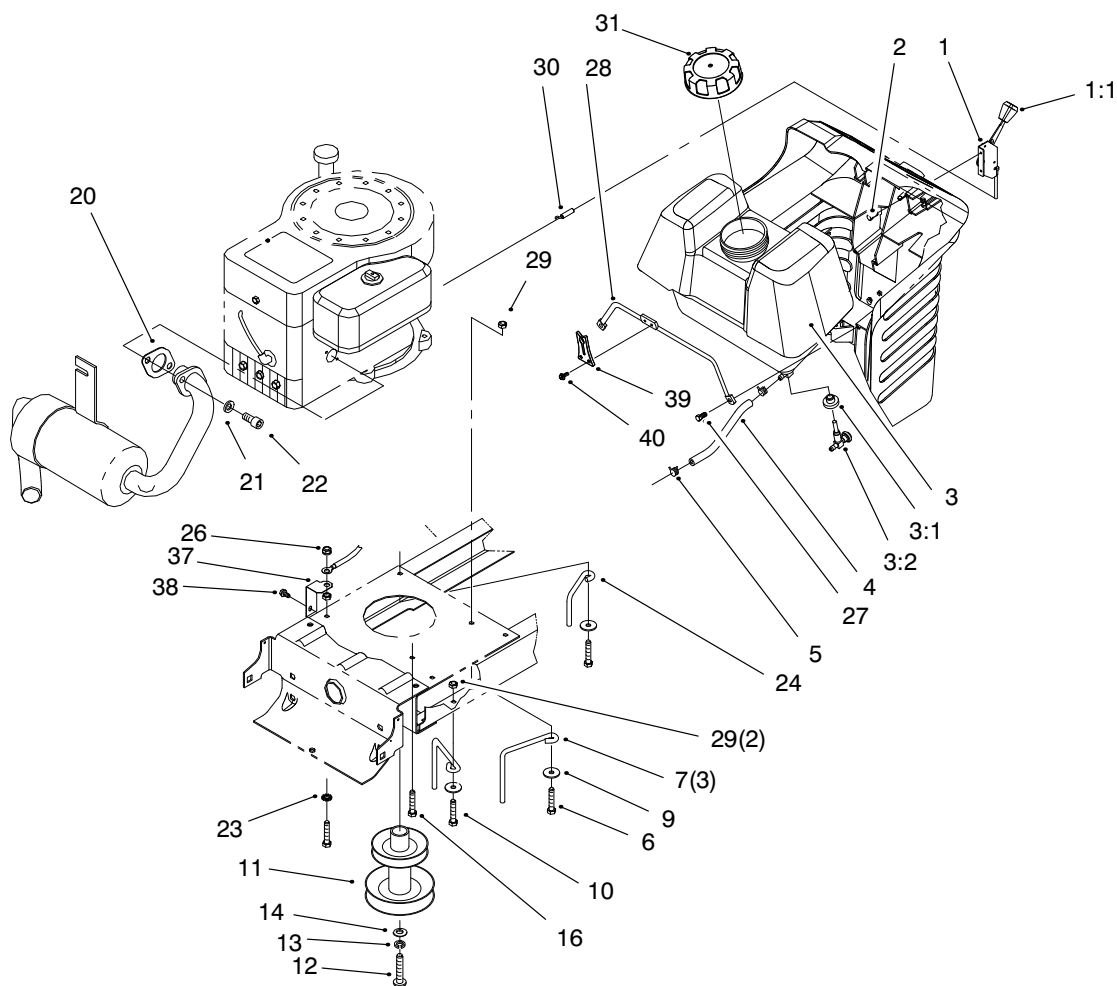

Sheet No.:8

Gas Tank & Engine Pulley Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	88-4340	1	Throttle Control ASM	30	88-4350	1	Cable ASM-Throttle
1:1	66-0120	1	Knob	31	88-3980	1	Gas Cap ASM
2	27-0220	2	Screw-Special HWH	37	93-3809	1	Bracket-Ground
3	88-3880	1	Gas Tank Assembly	38	9266714	1	Screw-HWHTF
3:1	104047	1	Bushing	39	94-1951	1	Latch-Hood
3:2	104048	1	Valve ASM	40	32144-112	2	Screw-TAP
4	47-2963	1	Fuel Line				
5	2412-98	2	Clamp-Hose				
6	322-9	3	Screw-HH				
7	93-3854	3	Belt Guide - Engine				
9	5-4460	4	Washer-Fender				
10	322-5	2	Screw-HH				
11	94-1963	1	Pulley Assy-Engine				
12	26-0671	1	Bolt-Blade				
13	3253-22	1	Washer-Lock				
14	3256-25	1	Washer-Flat				
16	9267154	1	Screw				
20	88-4410	1	Gasket - Muffler				
21	3253-4	2	Washer-Lock				
22	3274-10	2	Screw-Sckt Hd				
23	3255-8	1	Washer-Lock				
24	93-3855	1	Belt Guide - R.h.				
26	32149-1	2	Nut				
27	27-0220	2	Screw-Special HWH				
28	94-1952	1	Rod-Gas Tank				
29	3296-29	4	Nut-Lock				

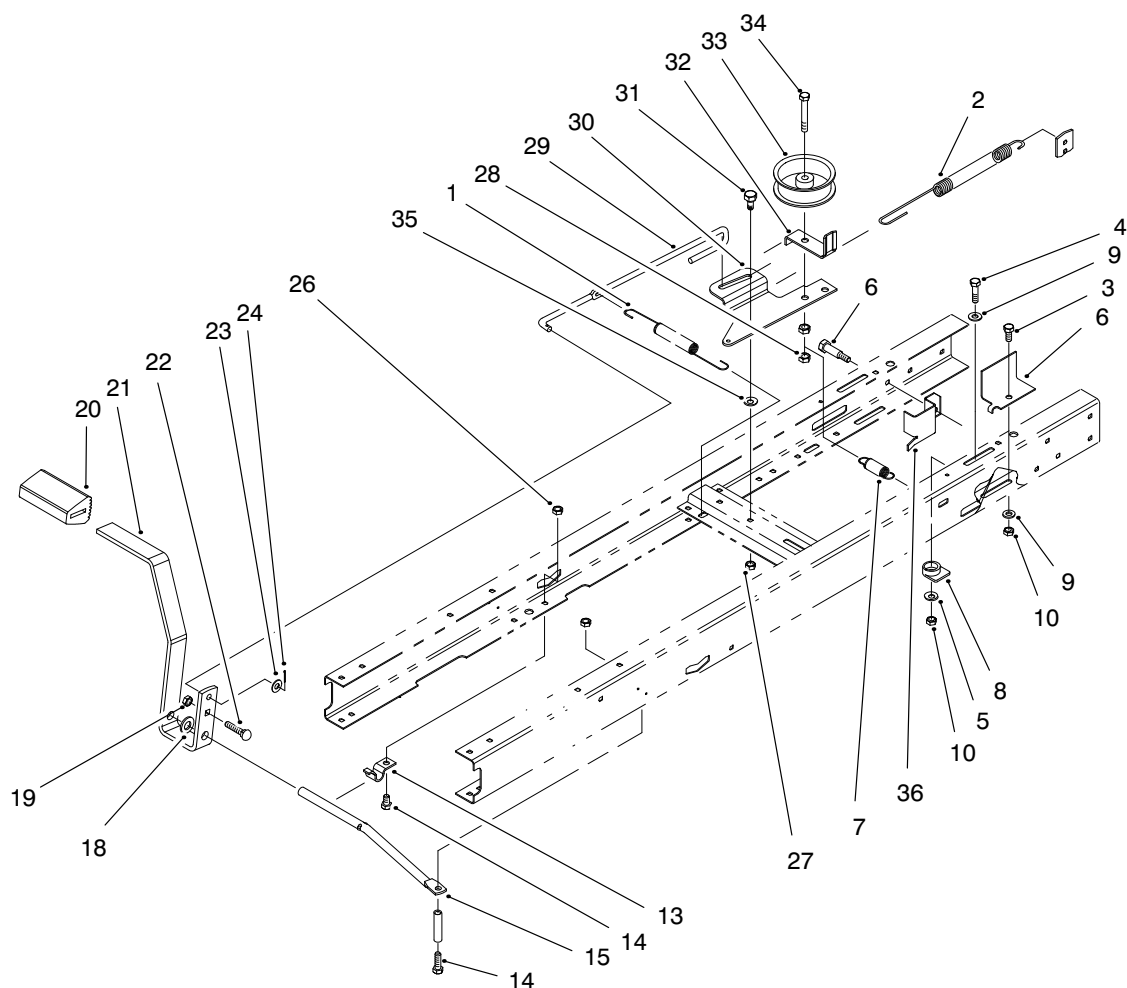


Sheet No.:9

Clutch Assembly

Ref. No.	Part No.	Qty.	Description
1	27-8890	1	Spring – Pedal Return
2	94-4294	1	Spring-Brake
3	322-3	1	Screw-HH
4	322-6	1	Screw-HH
5	5-4460	1	Washer-Fender
6	94-5433	1	Bracket-Belt Guide
7	88-6330	1	Spring – Extension
8	84-5610	1	Guide-Cable
9	3256-23	2	Washer-Flat
10	3296-29	2	Nut-Lock
13	88-4810	1	Clamp – Shift Pivot
14	322-3	2	Screw-HH
15	88-5500	1	Rod – Pedal Pivot
18	3256-26	1	Washer-Flat
19	3296-29	1	Nut-Lock
20	65-2920	1	Pad-Pedal
21	88-5000-03	1	Pedal – Clutch/Brake
22	3230-3	1	Screw-CARR
23	3256-23	1	Washer-Flat
24	3272-10	1	Pin-Cotter
26	3296-29	2	Nut-Lock
27	3296-29	1	Nut-Lock
28	3296-59	2	Nut-Lock
29	88-5270	1	Rod – Clutch/Brake
30	88-6070	1	Arm -Idler
31	37-8770	1	Bolt-Shldr


Ref. No.	Part No.	Qty.	Description
32	88-5560	1	Belt Guide – Idler
33	88-5680	1	Idler Pulley
34	323-11	1	Screw
35	5-4460	1	Washer-Fender
36	94-4926	1	Bracket-Belt Guide

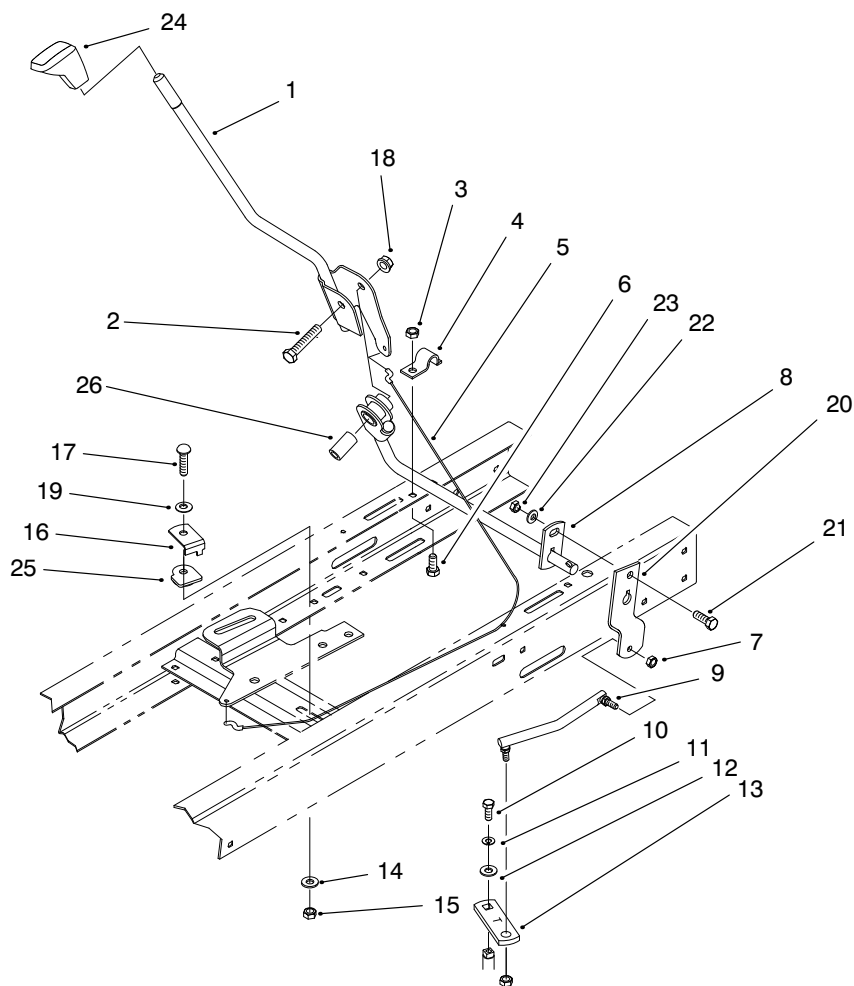

Sheet No.:10

Shift Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	94-1991-03	1	Shift Lever Wa	25	84-5610	1	Guide-Cable
2	323-10	1	Screw-HH	26	94-1997	1	Bushing-Shift Lever
3	3296-29	2	Nut-Lock				
4	88-4810	2	Clamp - Shift Pivot				
5	55-9321	1	Cable-Clutch				
6	322-3	2	Screw-HH				
7	3296-3	2	Nut-Lock				
8	94-1993-03	1	Shift Pivot Wa				
9	94-5431	1	Link-Shift				
10	329-23	1	Screw				
11	3253-3	1	Washer-Lock				
12	7-5461	1	Spacer-Transmission				
13	88-5340	1	Lever - Shift (Transaxle				
14	3256-23	1	Washer-Flat				
15	3296-29	1	Nut-Lock				
16	88-5930	1	Keeper - Cable				
17	3230-3	1	Screw-CARR				
18	3296-39	1	Nut-Lock				
19	3256-25	1	Washer-Flat				
20	94-1968	1	Lever-Shift Pivot				
21	322-3	1	Screw-HH				
22	3256-23	1	Washer-Flat				
23	3296-29	1	Nut-Lock				
24	94-5565	1	Knob - Control				

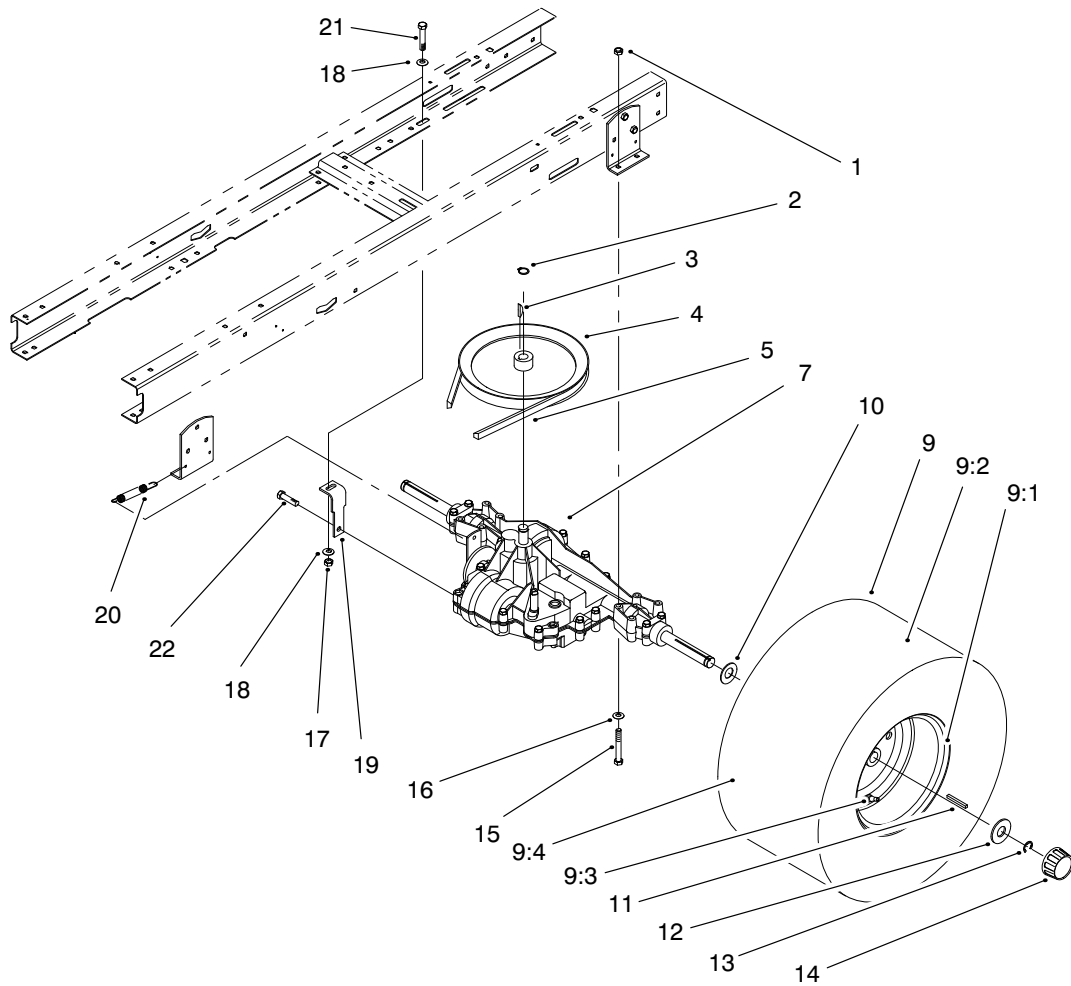


Sheet No.:11

Transaxle Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-29	4	Nut-Lock
2	32120-64	1	Ring-Retaining
3	3257-23	1	Key-Woodruff
4	88-4840	1	Pulley - Transmission
5	88-6270	1	V-Belt
7	94-6022	1	Transaxle - Peerless 931
9	88-4300	2	Rear Wheel & Tire ASM
9:1	88-4390	2	Rim ASM-18" Rear
9:2	88-4090	2	Tire 18x9.50-8
9:3	232-27	2	Valve Stem
9:4	232-41	2	Tube-Inner 18x9.50-8
10	3-6498	2	Washer-Thrust
11	7-0036	2	Key-Square
12	28-2480	2	Washer-Flat
13	32151-48	2	Ring-Retaining
14	61-9780	2	Hubcap
15	322-12	4	Screw HH
16	3256-23	4	Washer-Flat
17	3296-29	2	Nut-Lock
18	3256-23	4	Washer-Flat
19	94-1969	2	Strap-Torque
20	26-6701	1	Spring - Extension


Ref. No.	Part No.	Qty.	Description
21	322-3	2	Screw-HH
22	32144-14	2	Screw-HWH

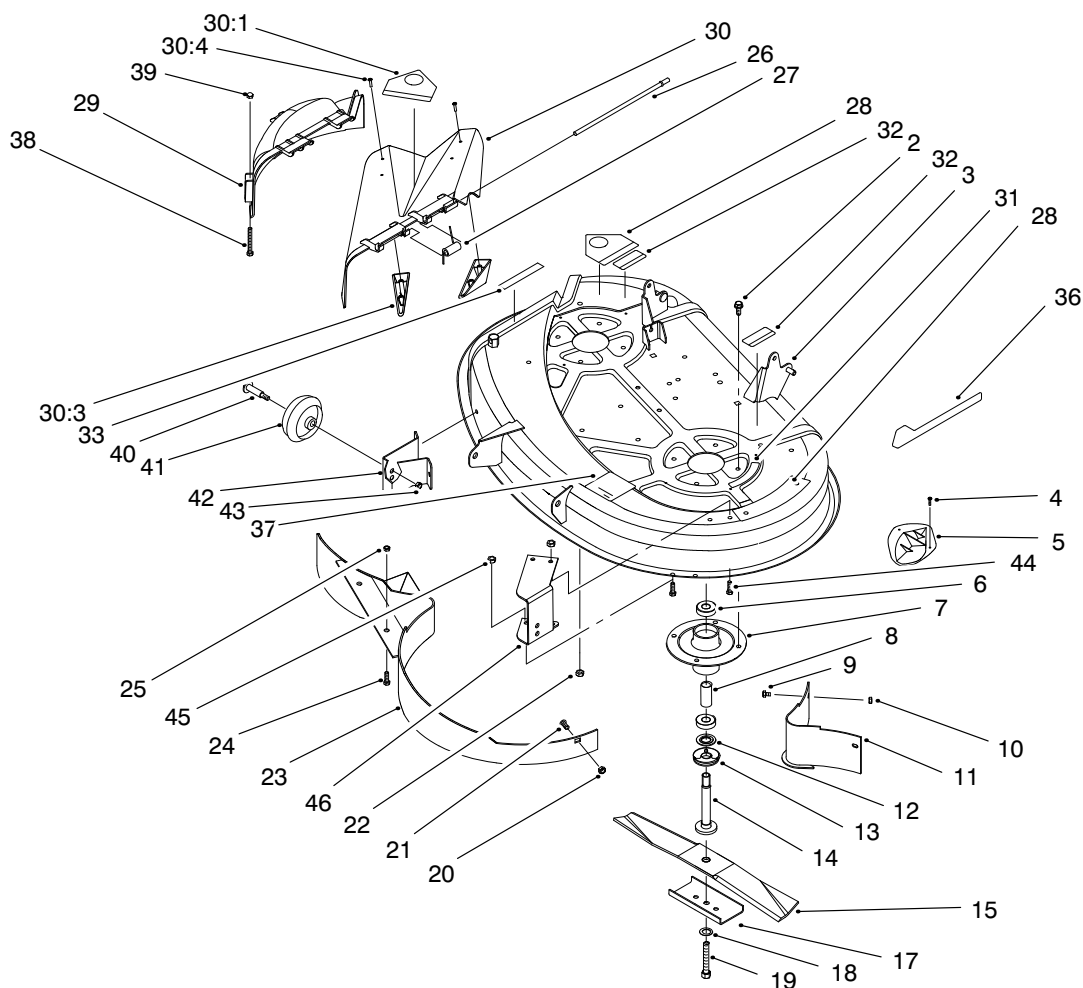

Sheet No.:16

Deck Assembly (38" Cutting Unit)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	32144-41	8	Screw-HWHTF	28	93-7010	2	Decal-Danger
3	94-1949-01	1	Deck Wa-38"	29	88-4430	1	Recycler Cover ASM
4	32144-111	8	Screw - PPH	30	93-7695	1	ASM.-38" Deflector
5	76-2160	4	Plate-Kicker	30:1	93-7010	1	Decal-Danger
6	38-7820	4	Bearing-Ball	30:3	93-7696	2	Kicker - Ce
7	88-4510	2	Spindle	30:4	93-0231	4	Screw-Plastite
8	62-3661	2	Spacer - Bearing	31	93-6677	1	Decal - Shield Danger
9	321-4	2	Screw-HH	32	93-6674	2	Decal-Warning
10	3296-42	2	Nut-Lock	33	93-7009	1	Decal-Deflector
11	79-1640-03	1	Wa-Baffle				Danger
12	80-4380	2	Spacer	36	92-9520	1	Decal-Deck
13	80-4360	2	Shield - Bearing	37	93-6679	1	Decal - Belt Routing
14	80-4341	2	Shaft - Spindle	38	321-15	2	Screw-HH
15	79-3061	2	Blade-19.32 Recycler	39	32111-7	2	Nut-Cap
17	80-0510-03	2	Stiffener-Blade	40	56-6591	2	Wheel Bolt
18	3290-465	2	Washer-Spring	41	701756	2	Wheel - Deck
19	26-0671	2	Bolt-Blade	42	88-5740-03	1	Bracket-Deck Wheel
20	3296-29	1	Nut-Lock				RH
21	3230-1	1	Bolt-CARR	43	3296-39	2	Nut-Lock
22	3296-39	1	Nut-Lock	44	322-3	6	Screw-HH
23	79-1600-03	1	Wa-Baffle	45	3296-29	6	Nut-Lock
24	323-5	2	Screw-HH	46	93-3896-03	1	Bracket-Deck Wheel
25	3296-39	2	Nut-Lock				LH
26	95-1661	1	Rod-Pivot				
27	57-6950	1	Spring-Torsion				
			Deflector				

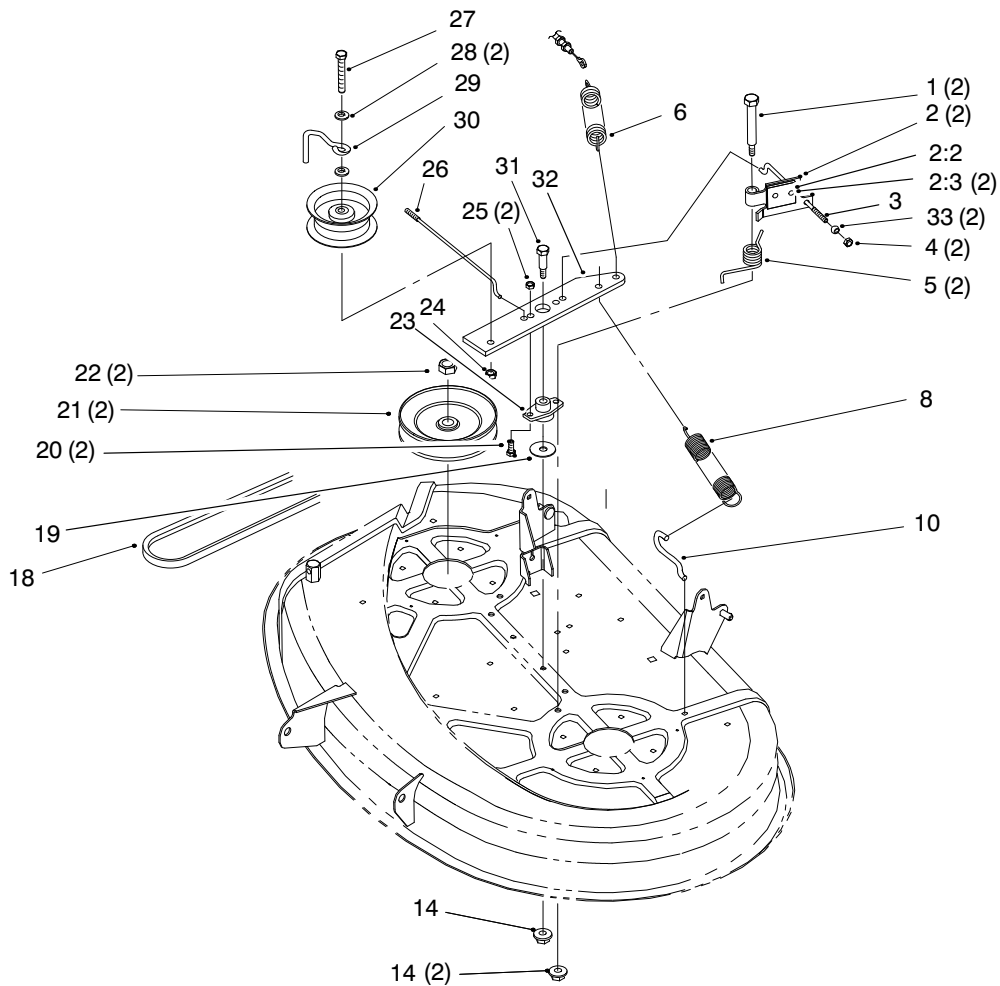

Sheet No.:17

Pulley & Belt Assembly (38" Cutting Unit)


Ref. No.	Part No.	Qty.	Description
1	88-4590	2	Bolt-Shoulder
2	88-6100	2	ASM. - Deck Brake
2:2	56-9830	2	Brake Pad
2:3	3290-282	4	Pop Rivet
3	88-5550	1	Rod -LH Deck Brake
4	3296-42	2	Nut-Lock
5	88-5910	2	Spring - Torsion
6	88-6130	1	Spring - Deck Engage
8	92-8934	1	Spring - Extension
10	88-5970	1	Hook - Return Spring
14	3296-58	3	Nut-Flange
18	88-6250	1	V-Belt
19	3256-68	1	Washer-Flat
20	322-5	2	Screw-HH
21	88-5330	2	Pulley - Deck
22	3219-6	2	Nut-Hex
23	88-4980	1	Bushing - Idler Arm
24	3296-39	1	Nut-Lock
25	3296-29	2	Nut-Lock
26	88-5540	1	Rod -RH Deck Brake
27	323-12	1	Screw
28	3256-24	2	Washer-Flat
29	88-5070	1	Belt Guide - Idler
30	88-5630	1	Pulley - Idler
31	7-0030	1	Shoulder Bolt

Ref. No.	Part No.	Qty.	Description
32	88-4870-03	1	Arm - Idler
33	67-0710	2	Ball - Swivel

Sheet No.:18

Suspension Assembly (38" Cutting Unit)

Ref. No.	Part No.	Qty.	Description
1	32104-76	5	Screw-Self TAP
2	88-4030	1	Belt Guide – Deck
3	3296-39	2	Nut-Lock
4	93-3881-03	1	Pan – Front Deck Suspens
5	94-5823	2	Bolt-Shoulder
6	94-1971-03	1	Bracket-Deck Susp
7	88-4020	1	Belt Guide – Deck
8	61-9980	2	Screw-Adjusting
9	80-6990	4	Washer-Hardened
10	3256-22	2	Washer-Flat
11	3296-42	2	Nut-Lock
12	93-9847	2	Spacer
13	323-9	2	Screw-HH
14	94-1970-03	1	Bracket-Deck Susp
15	3296-29	2	Nut-Lock
16	322-12	2	Screw HH
17	3296-23	2	Nut-Lock
18	3296-16	2	Nut-Lock
19	3256-1	2	Washer-Flat
20	95-2747	1	Fitting-Washout
21	46-6290	1	O-Ring
22	3229-1	2	Bolt-CARR

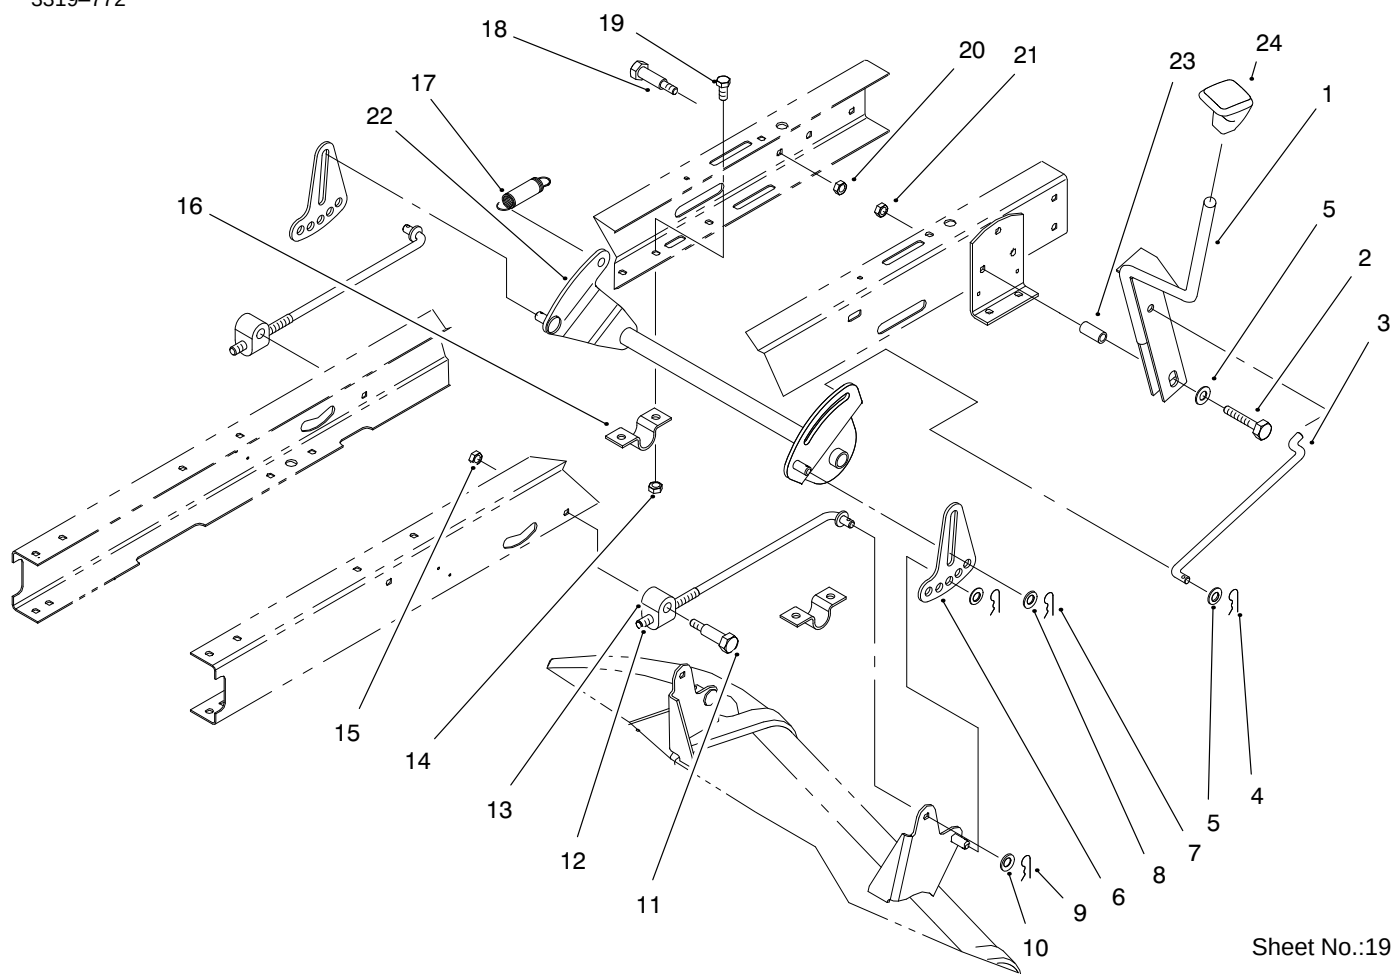


Sheet No.:19

Height Of Cut Assembly

Ref. No.	Part No.	Qty.	Description
1	93-3822-03	1	Lever-HOC
2	322-39	1	Screw-HH
3	88-5900	1	Link - HOC
4	3290-307	1	Pin-Cotter
5	3256-24	2	Washer-Flat
6	88-5570-03	2	Link-Adjusting HOC
7	3290-307	4	Pin-Cotter
8	80-6990	4	Washer-Hardened
9	3290-307	2	Pin-Cotter
10	3256-24	2	Washer-Flat
11	7-0030	2	Shoulder Bolt
12	88-5450	2	Rod - Hanger
13	88-4230	2	Trunnion - HOC
14	3296-29	4	Nut-Lock
15	3296-29	2	Nut-Lock
16	88-4730	2	Clamp - HOC Pivot
17	88-6460	1	Spring - Extension
18	7-0030	1	Shoulder Bolt
19	322-3	4	Screw-HH
20	3296-29	1	Nut-Lock
21	3296-29	1	Nut-Lock
22	88-5110-03	1	Pivot W.a. (H.o.c.)
23	65-7210	1	Spacer
24	94-5565	1	Knob - Control

Ref. No.	Part No.	Qty.	Description

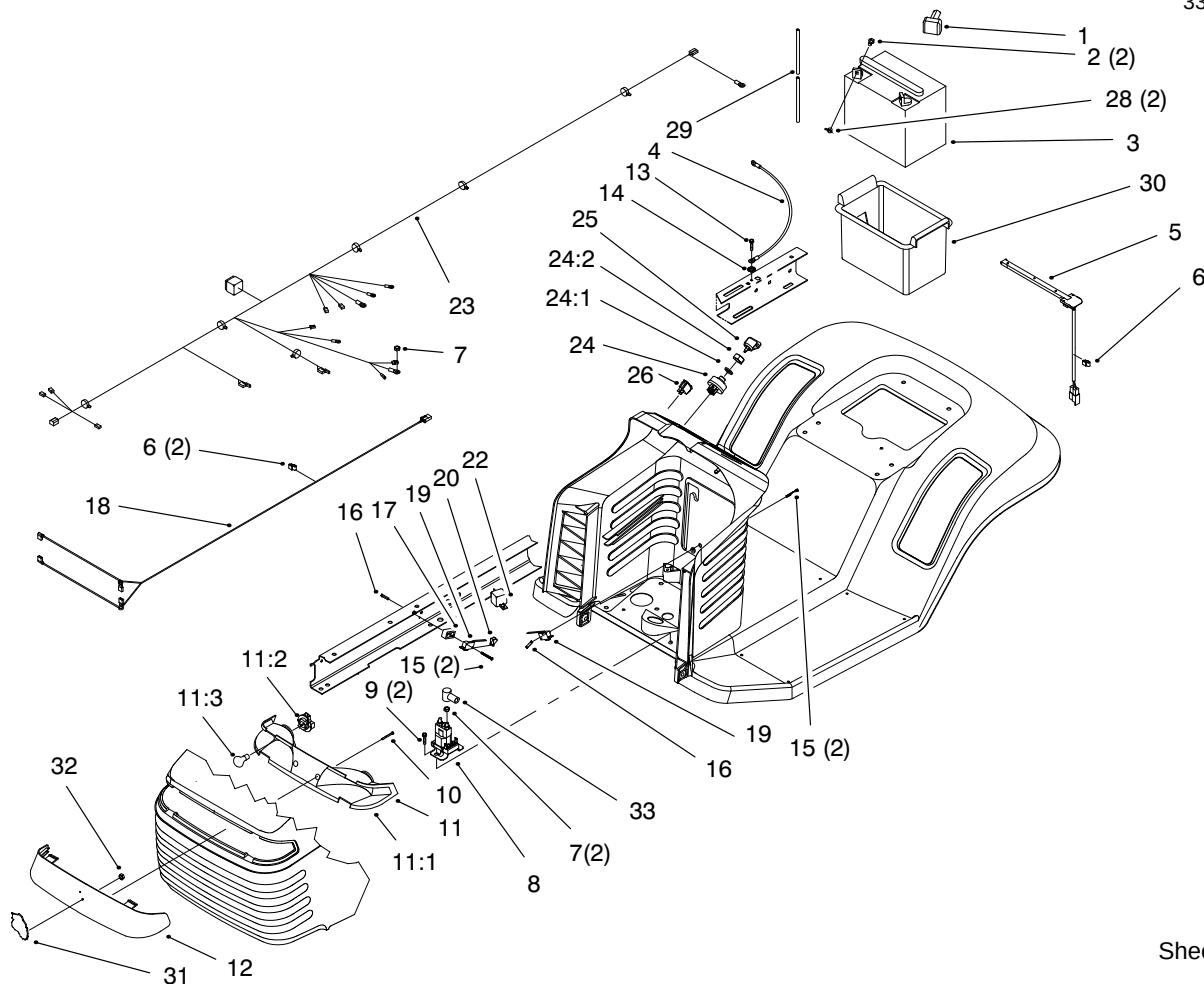


Sheet No.:20

Electrical Assembly

Ref. No.	Part No.	Qty.	Description
1	28-8080	1	Boot-Terminal
2	321-4	2	Screw-HH
3	80-2600	1	Battery - 7 Plate
4	44-8110	1	Battery Cable -Neg
5	38-1420	1	Switch-Seat
6	702366	1	Clip-Wire Retainer
6	702366	2	Clip-Wire Retainer
7	32149-2	3	Nut-Hex Lock
8	92-9845	1	Solenoid
9	9266714	2	Screw-HWHTF
10	32144-32	2	Screw-Plastic
11	88-3970	1	Reflector-Lamp
11:1	93-8741	1	Reflector - Headlight
11:2	111686	2	Socket Assembly
11:3	7228	2	Bulb-Light
12	88-3960	1	Lense - Headlights
13	9266714	1	Screw-HWHTF
14	3255-7	1	Washer-Lk
15	93-0539	4	Screw-PPH
16	3290-354	2	Nut-Speed
17	88-4880	1	Spacer - Microswitch
18	88-4320	1	Harness-Wire
19	88-9932	2	Switch - Micro
20	93-3240	1	Seal-Plunger
22	116397	1	Relay
23	93-3810	1	Wire Harness

Ref. No.	Part No.	Qty.	Description
24	88-9830	1	Switch-Ignition
24:1	3254-5	1	Washer-Lock
24:2	218-461	1	Nut-HH (F/W Sw)
25	63-8360	1	Key-Ignition
26	92-8875	1	Switch-Rocker
28	32103-22	2	Nut-Wing
29	56-2540	1	Tube-Vent Use w/80-2600
30	88-4040	1	Battery Box
31	80-2240	1	Plate-Name Grille
32	3290-299	1	Nut - Tinnerman
33	94-5362	1	Boot-Terminal Insulator

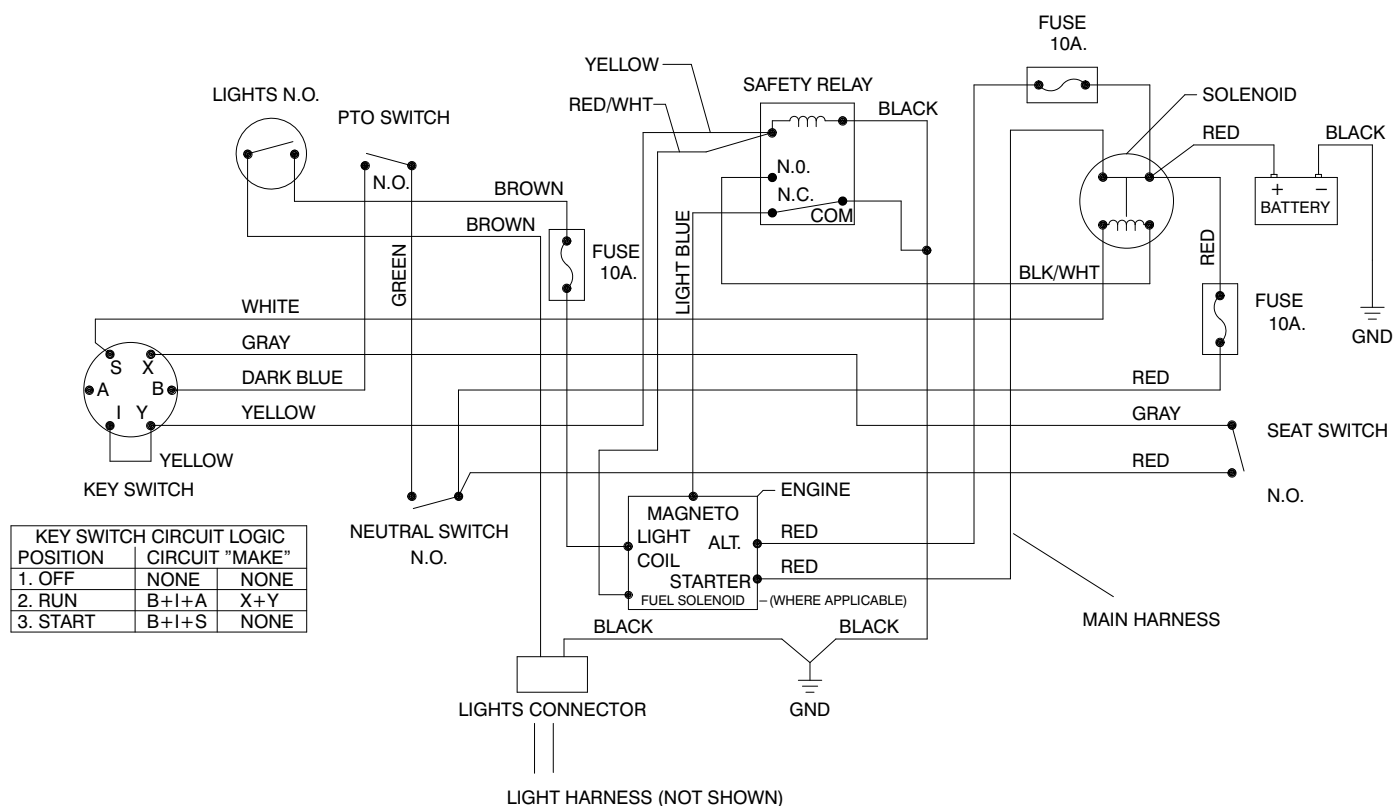


Sheet No.:21

Electrical Schematic

Ref. No.	Part No.	Qty.	Description
*	218-578	3	Fuse-10 Amp


Ref. No.	Part No.	Qty.	Description

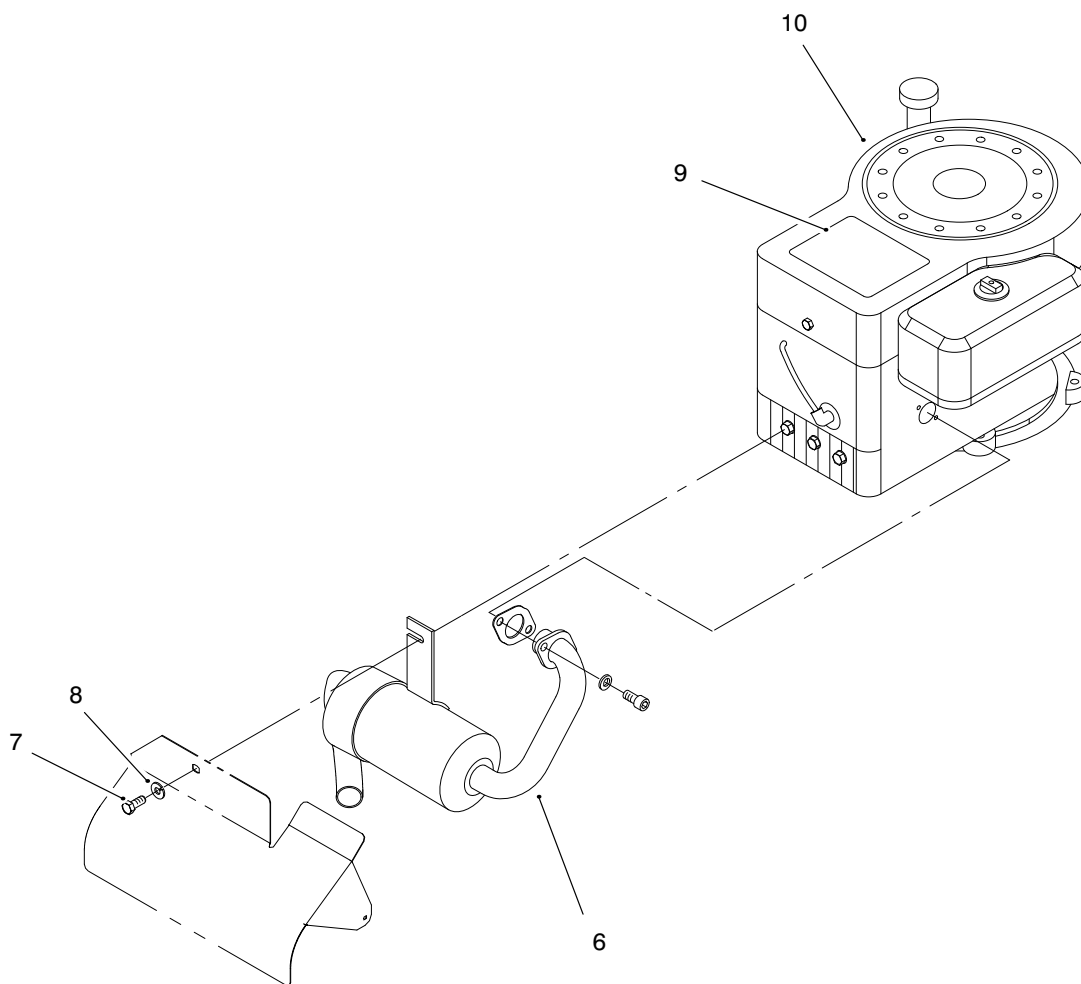

Sheet No.:25

Engine Assembly

Ref. No.	Part No.	Qty.	Description
6	88-6480	1	Muffler W.a.
7	321-4	1	Screw-HH
8	3253-3	1	Washer-Lock
9	92-8757	1	Decal - Engine
10		1	Engine-13 Hp B&s (Carb)

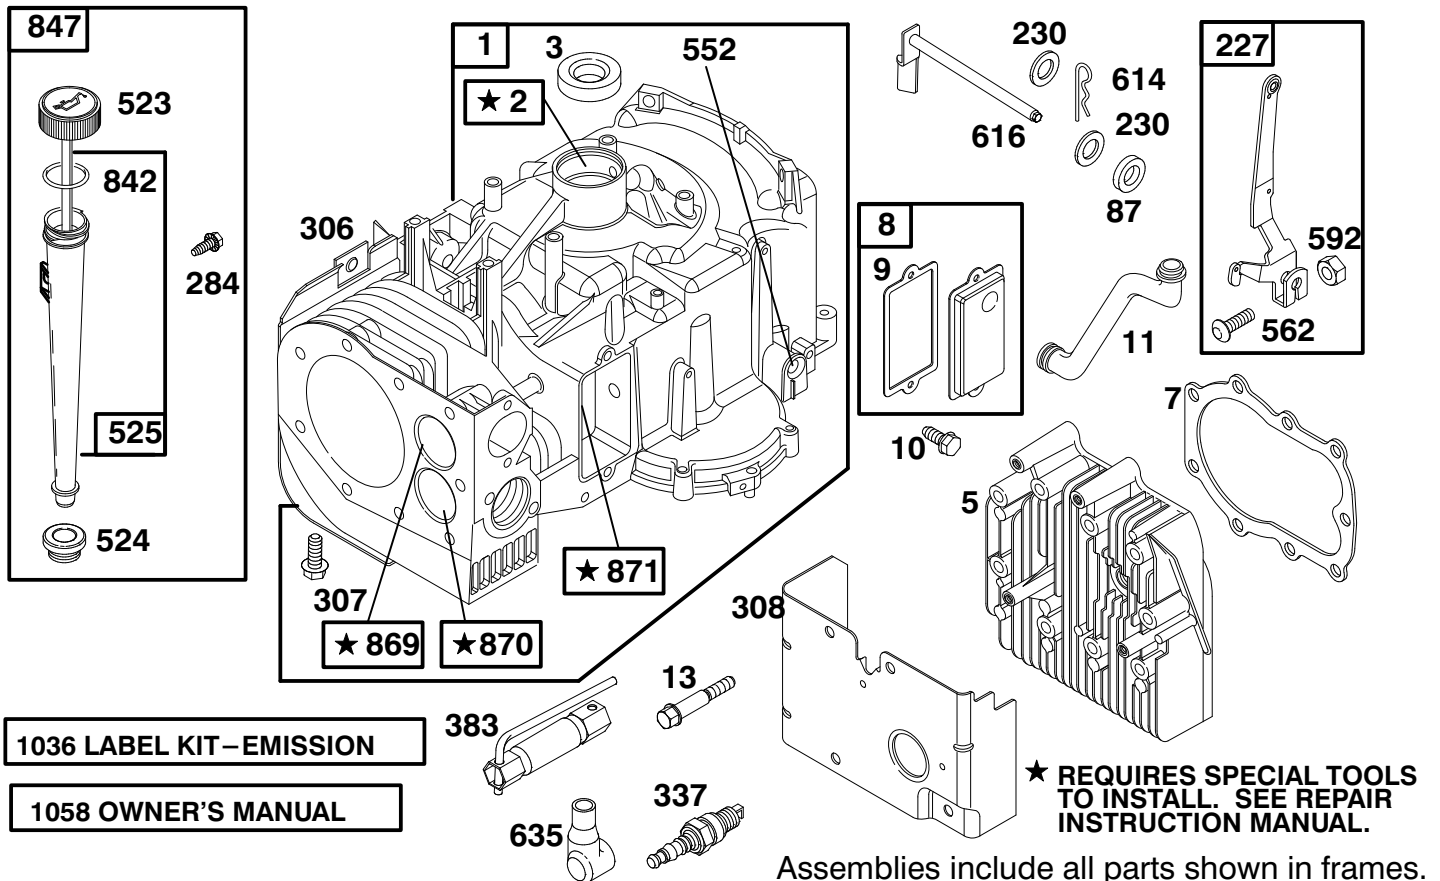

ENGINE BRIGGS & STRATTON MODEL 28M707-1122-E1

Ref. No.	Part No.	Description	No. Used
1	496413	Cylinder Assembly	1
2	399265	Bushing	1
★3	391086	Seal-Oil	1
5	494240	Head-Cylinder	1
†★7	271866	Gasket-Cylinder Head	1
8	495735	Breather Assembly	1
†★9	27803	Gasket-Valve Cover	1
10	94621	Screw-Sem	1
11	280100	Tube-Breather	1
13	94622	Screw-Cylinder Head	1
★87	491323	Seal-Governor Shaft	1
227	493935	Lever-Governor	1
230	94927	Washer-Flat	1
284	94903	Screw-Shoulder	1
306	224545	Shield-Cylinder	1
307	94930	Screw-Hex. Head	1
308	491490	Cover-Cylinder Head	1
337	802592	Plug-Spark	1
383	89838	Wrench-Spark Plug	1
523	495230	Dipstick	1
★524	281370	Seal-Fill Tube	1


Ref. No.	Part No.	Description	No. Used
525	496113	Tube-Oil Fill	1
552	491986	Bushing-Gov. Crank	1
		Note: Includes Seal, Ref. No. 87	
562	94907	Bolt-Governor Lever	1
592	231978	Nut-Hex.	1
614	93306	Pin-Cotter	1
616	495157	Crank-Governor	1
635	66538	Boot-Spark Plug	1
★842	270920	Seal-O-Ring	1
847	496415	Dipstick/Tube Assembly	1
869	261463	Seat-Intake Valve	1
870	262924	Seat-Exhaust Valve	1
871	261961	Bushing-Valve Guide (Exhaust)	1
		Note: 231218 Bushing-Valve Guide (Intake)	
1036	499362	Label Kit-Emission	1
1058	273681	Owner's Manual	1

★ Included in Gasket Set-Part No. 494241.

◆ Included in Carburetor Gasket Set-Part No. 494385.

● Included in Carburetor Kit-Part No. 499220.

† Included in Valve Overhaul Gasket Set-Part No. 498539.

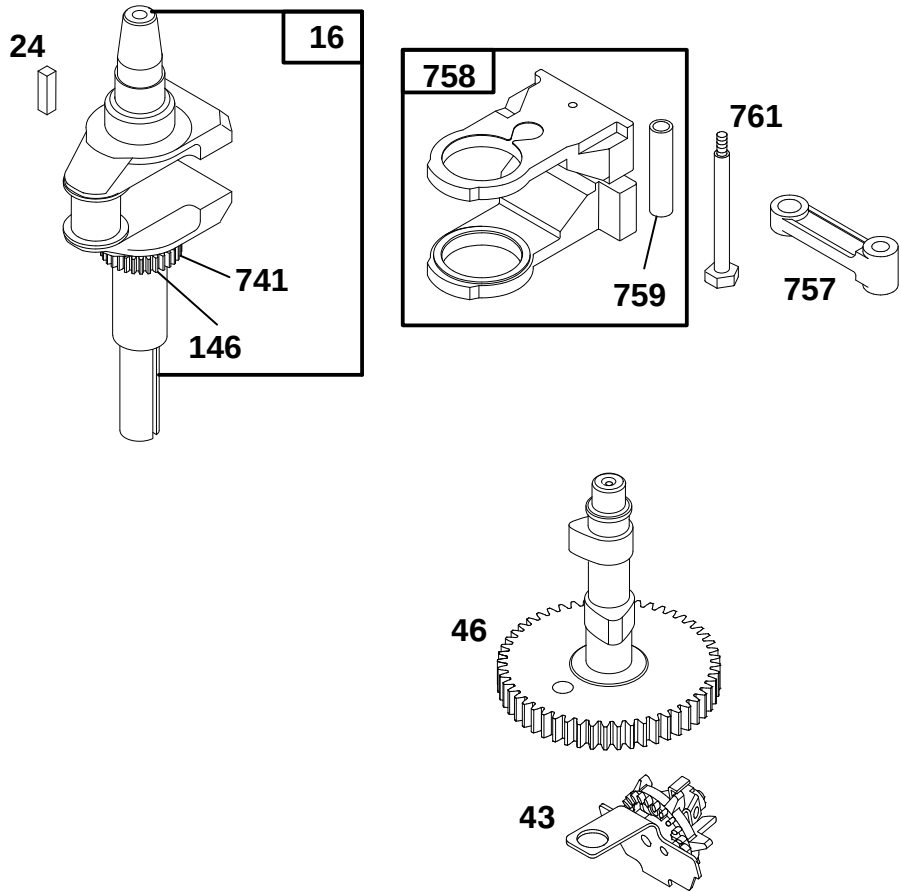


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-1122-E1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
16	498971	Crankshaft	1	757	213998	Link-Counterweight	1
24	222698	Key-Flywheel	1	758	399891	Counterweight	1
43	490815	Governor/Oil Slinger	1	759	230787	Pin-Counterweight	1
46	212897	Gear-Cam	1	761	94593	Screw-Counterweight	1
146	94196	Key-Timing	1				
741	262932	Gear-Timing	1				

★ Included in Gasket Set-Part No. 494241.
◆ Included in Carburetor Gasket Set-Part No. 494385.

● Included in Carburetor Kit-Part No. 499220.
† Included in Valve Overhaul Gasket Set-Part No. 498539.

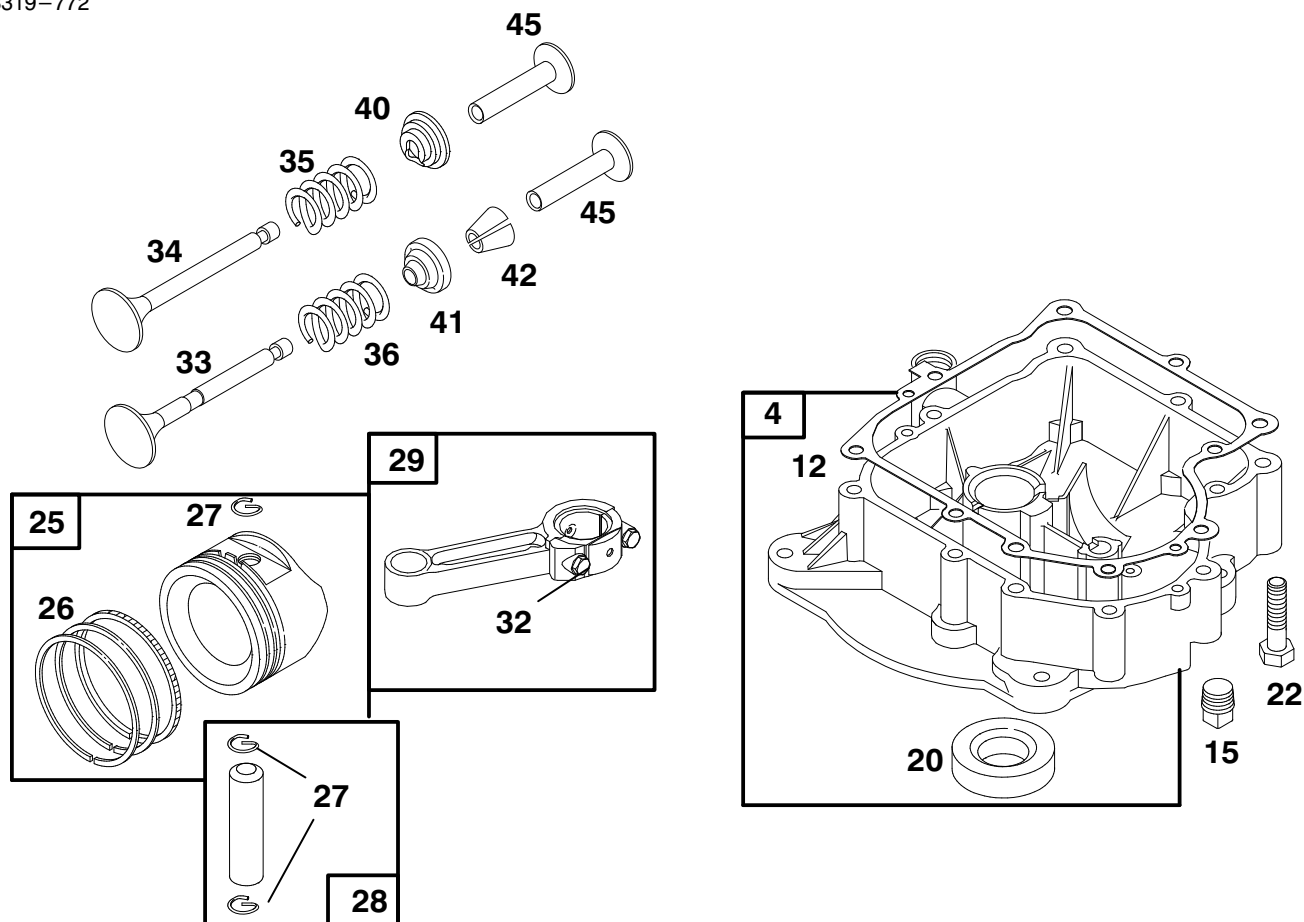

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-1122-E1

Ref. No.	Part No.	Description	No. Used
4	494238	Sump-Engine	1
★12	271916	Gasket-Crankcase (.015" Thick)	1
★	271997	Gasket-Crankcase (.005" Thick)	1
★	271996	Gasket-Crankcase (.009" Thick)	1
15	94239	Plug-Oil Drain	1
★20	291675	Seal-Oil	1
22	94624	Screw-Base Mtg. Sem	1
25	499282	Piston Assy. (Std.)	1
	499286	Piston Assy. (.010" O.S.)	1
	499290	Piston Assy. (.020" O.S.)	1
	499294	Piston Assy. (.030" O.S.)	1
26	391780	Ring Set-Piston (Std.)	1
	391781	Ring Set-Piston (.010" O.S.)	1
	391782	Ring Set-Piston (.020" O.S.)	1
	391783	Ring Set-Piston (.030" O.S.)	1


★ Included in Gasket Set-Part No. 494241.

◆ Included in Carburetor Gasket Set-Part No. 494385.

Ref. No.	Part No.	Description	No. Used
27	263129	Lock-Piston Pin	1
28	498319	Pin Assy.-Piston (Standard)	1
	498320	Pin Assy.-Piston (.005" O.S.)	1
29	490348	Rod Assembly-Connecting	1
	490469	Rod-Connecting (020" U.S. Crankpin Bore)	1
32	94671	Screw-Connecting Rod	1
33	262246	Valve-Exhaust	1
34	262247	Valve-Intake	1
35	65906	Spring-Intake Valve	1
36	26828	Spring-Exhaust Valve	1
40	221596	Retainer-Intake Valve	1
41	292260	Retainer-Exhaust Valve	1
42	494553	Keeper-Valve	1
45	262248	Tappet-Valve	1

● Included in Carburetor Kit-Part No. 499220.

† Included in Valve Overhaul Gasket Set-Part No. 498539.

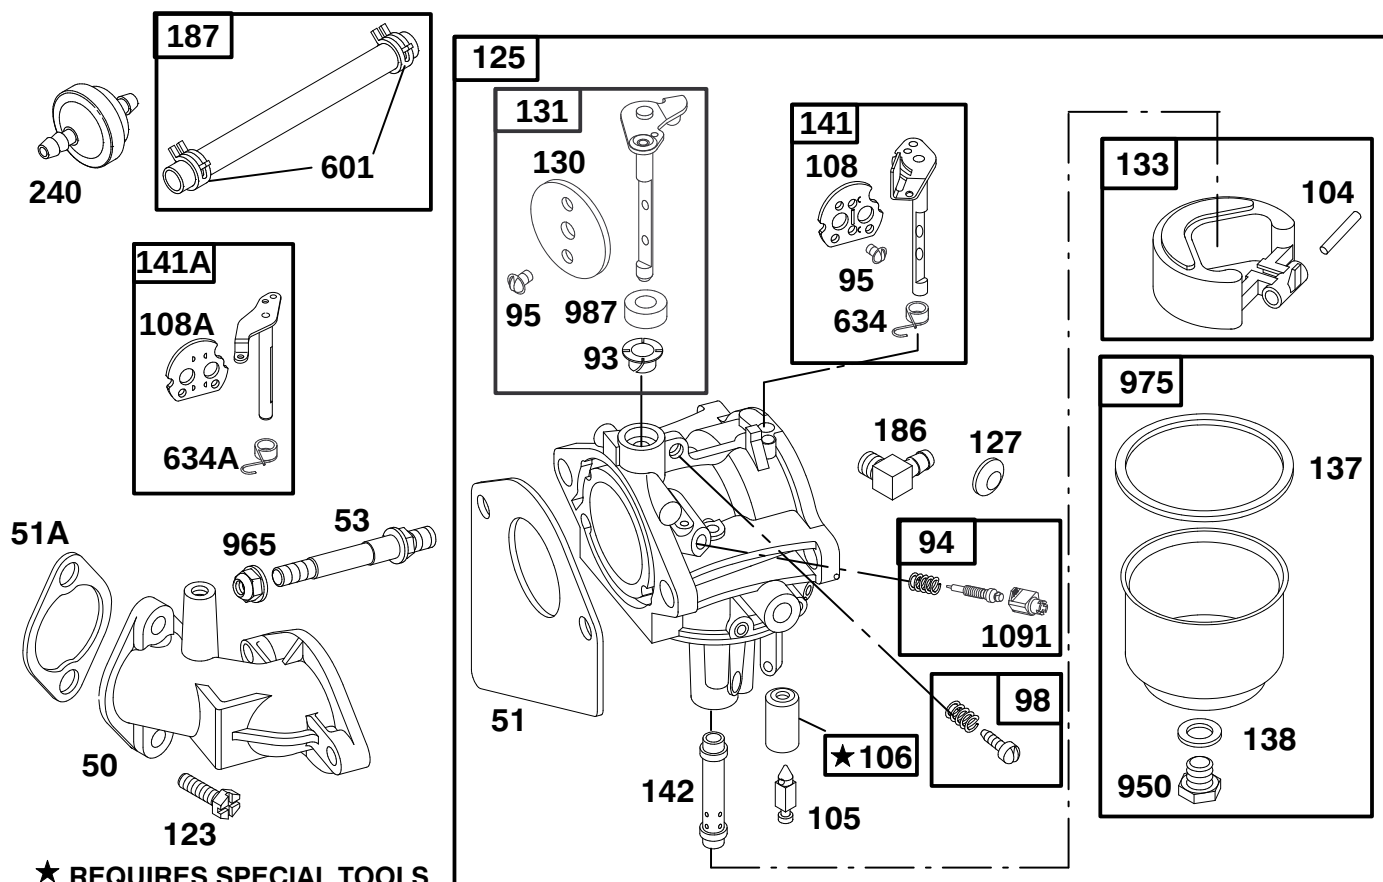

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-1122-E1


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
50	213819	Manifold-Intake	1	◆◆138	281164	Washer-Float	
◆◆51	272465	Gasket-Carburetor (Carb. to Manifold)	1	141	495097	Bowl Screw	1
†★51A	272554	Gasket-Carburetor (Manifold to Cylinder)	1			Shaft Kit-Choke (Manual Choke)	1
53	94637	Stud-Carb. Mtg.	1	141A	495931	Shaft Kit-Choke (Choke-A-Matic)	1
●93	281346	Bushing-Throttle Shaft	1	●142	497566	Nozzle-Carburetor (Standard)	1
94	498030	Valve-Needle	1		497567	Nozzle-Carburetor (High Alt.)	1
●95	94098	Screw-Throttle	1	186	493496	Connector-Fuel	1
98	495800	Screw-Idle Speed	1	187	298049	Line-Fuel	1
●104	231789	Pin-Float Hinge	1	240	394358	Filter-Fuel	1
●105	231855	Valve-Float Needle	1	601	93053	Clamp-Hose	1
●106	231854	Inlet Valve Seat	1	618	262803	Spring-Choke Return	1
108	224667	Valve-Choke	1	●634	494453	Seal-Spring Assembly	1
108A	224540	Valve-Choke	1	●634A	494455	Seal-Spring Assembly	1
123	94913	Screw-Torx® Hex.	1	950	94642	Screw-Fuel Bowl	1
125	498027	Carburetor Assembly	1	965	94010	Nut-Hex.	1
●127		Plug-Welch (Sold in Kit Only)	1	975	494378	Bowl-Float	1
130	224539	Valve-Throttle	1	●987	281166	Seal-Throttle Shaft	1
131	494379	Shaft Kit-Throttle	1	1091	281364	Cap-Limiter	1
133	494381	Float-Carburetor	1				
◆◆137	281165	Gasket-Float Bowl	1				

★ Included in Gasket Set-Part No. 494241.

◆ Included in Carburetor Gasket Set-Part No. 494385.

● Included in Carburetor Kit-Part No. 499220

† Included in Valve Overhaul Gasket Set-Part No. 498539.

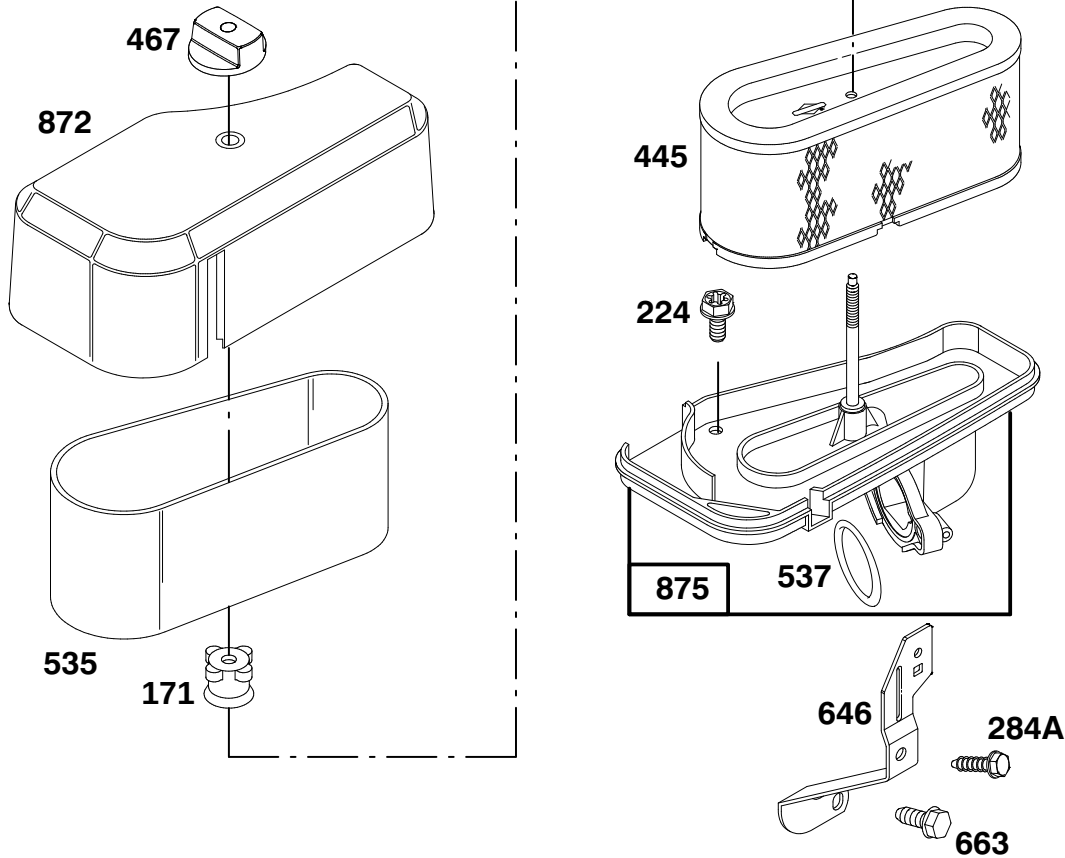

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-1122-E1

Ref. No.	Part No.	Description	No. Used
171	281051	Nut-Air Cleaner	1
224	94905	Screw-Torx® Hex.	1
284A	94704	Screw Hex. Head	1
445	496894	Filter-A/C Element	1
467	493903	Nut-Air Cleaner	1
535	272403	Filter-Precleaner	1

Ref. No.	Part No.	Description	No. Used
†★537	281106	Gasket-Air Cleaner	1
646	224546	Brace-Air Cleaner	1
663	94620	Screw-Hex. Hd.	1
872	281361	Cover-Air Cleaner	1
875	494237	Base-Air Cleaner	1

★ Included in Gasket Set-Part No. 494241.
◆ Included in Carburetor Gasket Set-Part No. 494385.


● Included in Carburetor Kit-Part No. 499220
† Included in Valve Overhaul Gasket Set-Part No. 498539.

ENGINE BRIGGS & STRATTON MODEL 28M707-1122-E1

Ref. No.	Part No.	Description	No. Used
201	262767	Link—Governor	1
209	260871	Spring—Governor	1
216	262766	Link—Choke	1
222	495611	Bracket—Control	1
232	262785	Spring—Link	1
265	221535	Clamp—Casing	1
333	492341	Armature—Magneto	1
334	94731	Screw—Hex.	1

Ref. No.	Part No.	Description	No. Used
356	494328	Wire—Stop	1
474	393474	Alternator	1
482	93621	Screw—Sem	1
657	94906	Screw—Sem	1
663	94929	Screw—Hex. Head	1
851	493880	Terminal—Ignition Cable	1
877	393456	Wire—Alternator	1

- Included in Carburetor Kit—Part No. 499220
- † Included in Valve Overhaul Gasket Set—Part No. 498539.

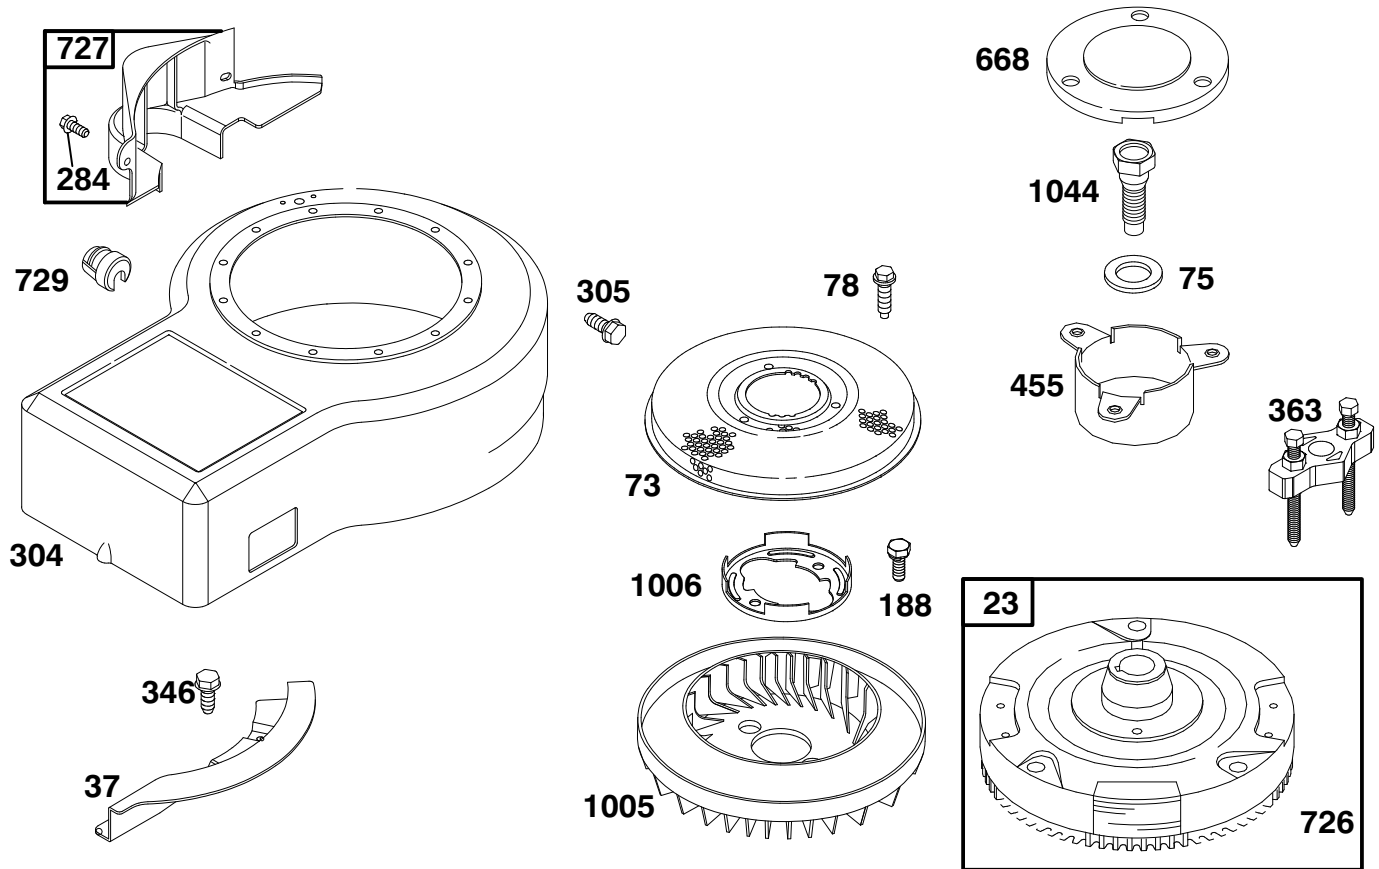

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-1122-E1

Ref. No.	Part No.	Description	No. Used
23	492326	Flywheel	1
37	224502	Guard—Flywheel	1
73	224948	Screen—Rotating	1
75	225136	Washer—Flywheel	1
78	94626	Screw—Phillips	1
188	94627	Screw—Sem	1
284	94903	Screw—Shoulder	1
304	496431	Housing—Blower	1
305	94786	Screw—Hex.	1
346	94896	Screw—Hex. Head	1
363	19203	Puller—Flywheel	1


★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

Ref. No.	Part No.	Description	No. Used
455	222561	Cup—Flywheel	1
668	280848	Spacer	1
726	392134	Gear—Ring	1
		(Includes Mtg Hardware)	1
727	490324	Cover—Starter Drive	1
729	281159	Clip—Wire	1
1005	281400	Fan—Flywheel	1
1006	224413	Retainer—Fan	1
1044	94673	Screw—Shoulder	1

● Included in Carburetor Kit—Part No. 499220

† Included in Valve Overhaul Gasket Set—Part No. 498539.

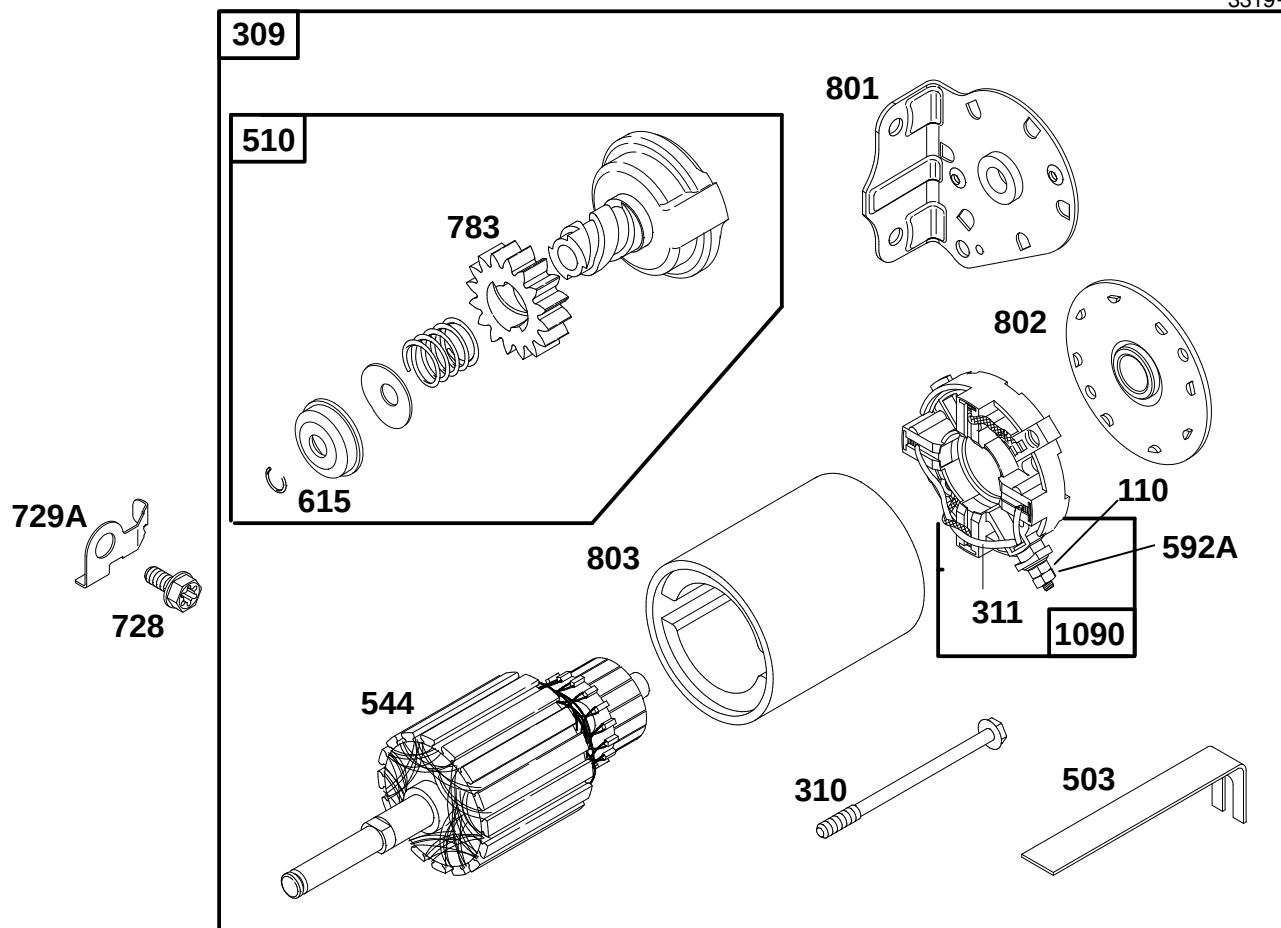

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-1122-E1





Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
110	225137	Washer-Flat	1	615	263080	Ring-Retaining	1
309	497595	Motor-Starter	1	728	94951	Screw-Torx®	1
310	94003	Bolt-Thru	1	729A	225170	Clip-Wire	1
311	497608	Brush Set	1	783	280104	Gear-Starter	1
503	806000	Strap-Starter	1	801	394856	Cap-Drive	1
510	497606	Drive-Starter	1	802	497607	Cap-End	1
544	497603	Armature-Starter	1	803	497604	Housing-Starter	1
592A	92278	Nut-Hex.	1	1090	497605	Retainer-Brush	1

★ Included in Gasket Set-Part No. 494241.

◆ Included in Carburetor Gasket Set-Part No. 494385.

● Included in Carburetor Kit-Part No. 499220

† Included in Valve Overhaul Gasket Set-Part No. 498539.

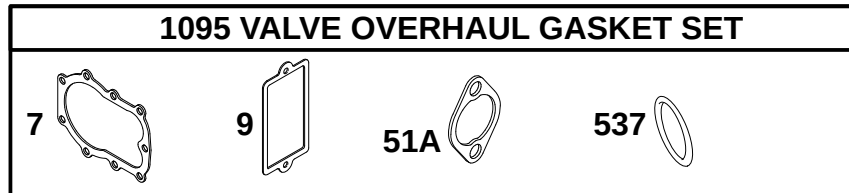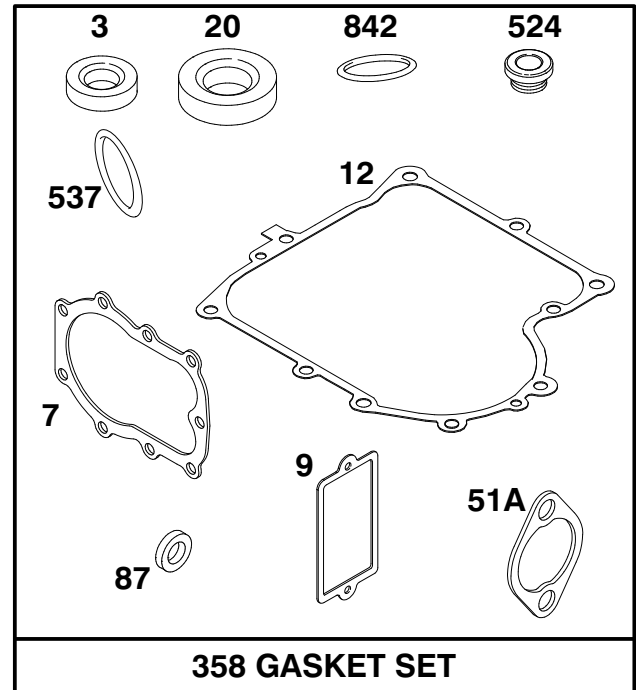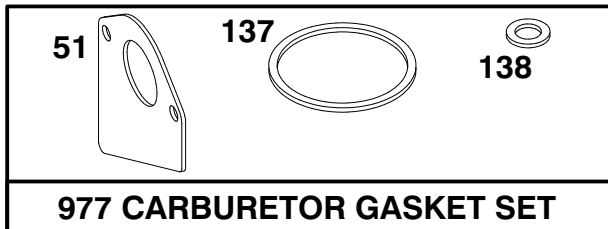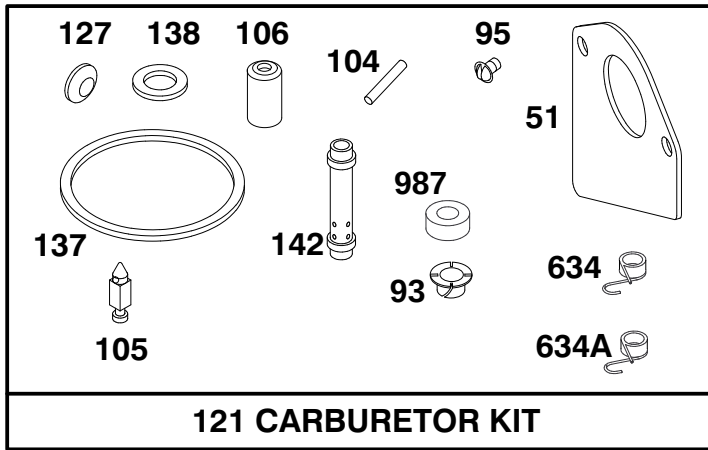

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-1122-E1

Ref. No.	Part No.	Description	No. Used
★3	391086	Seal—Oil	1
★†7	271866	Gasket—Cylinder Head	1
★†9	27803	Gasket—Valve Cover	1
★12	271916	Gasket—Crankcase (.015" Thick)	1
★	271997	Gasket—Crankcase (.005" Thick)	1
★	271996	Gasket—Crankcase (.009" Thick)	1
★20	291675	Seal—Oil	1
◆●51	272465	Gasket—Carburetor (Carb. to Manifold)	1
★†51A	272554	Gasket—Carburetor (Manifold to Cylinder)	1
★87	491323	Seal—Governor Shaft	1
●93	281346	Bushing—Throttle Shaft	1
●95	94098	Screw—Throttle	1
●104	231789	Pin—Float Hinge	1

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

Ref. No.	Part No.	Description	No. Used
●105	231855	Valve—Float Needle	1
●106	231854	Seat—Inlet	1
121	499220	Carburetor Kit	1
●127		Plug—Welch (Sold in Kit Only)	1
◆●137	281165	Gasket—Float Bowl	1
◆●138	281164	Washer—Float Bowl Screw	1
●142	494566	Nozzle—Carburetor	1
358	494241	Gasket Set	1
★524	281370	Seal—Fill Tube	1
★†537	281106	Gasket—Air Cleaner	1
●634	494453	Seal—Spring Assembly	1
●634A	494455	Seal—Spring Assembly	1
★842	270920	Seal—O-Ring	1
977	494385	Carburetor Gasket Set	1
●987	281166	Seal—Throttle Shaft	1
1095	498539	Gasket Set—Valve Overhaul	1

● Included in Carburetor Kit—Part No. 499220

† Included in Valve Overhaul Gasket Set—Part No. 498539.

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
7228	14	11:3	2	Bulb—Light
104047	6	3:1	1	Bushing
104048	6	3:2	1	Valve ASM
111419	4	12	1	Washer—Bearing
111686	14	11:2	2	Socket Assembly
114621	3	24	1	Decal—Noise
116397	14	22	1	Relay
614249	2	38	1	Tie Strap
701178	1	1	2	Cap—Protector
701756	10	41	2	Wheel — Deck
702366	14	6	1	Clip—Wire Retainer
702366	14	6	2	Clip—Wire Retainer
9266714	2	36	2	Screw—HWHTF
9266714	6	38	1	Screw—HWHTF
9266714	14	9	2	Screw—HWHTF
9266714	14	13	1	Screw—HWHTF
9267154	6	16	1	Screw
3-6498	4	21	2	Washer—Thrust
3-6498	4	38	4	Washer—Thrust
3-6498	5	17	1	Washer—Thrust
3-6498	5	22	1	Washer—Thrust
3-6498	9	10	2	Washer—Thrust
3-7501	5	11	4	Washer—Curved
5-4460	3	4	1	Washer—Fender
5-4460	4	17	1	Washer—Fender
5-4460	6	9	4	Washer—Fender
5-4460	7	5	1	Washer—Fender
5-4460	7	35	1	Washer—Fender
7-0030	11	31	1	Shoulder Bolt
7-0030	13	11	2	Shoulder Bolt
7-0030	13	18	1	Shoulder Bolt
7-0036	9	11	2	Key—Square
7-5461	8	12	1	Spacer—Transmission
26-0671	6	12	1	Bolt—Blade
26-0671	10	19	2	Bolt—Blade
26-6701	9	20	1	Spring — Extension
27-0220	5	15	2	Screw—Special HWH
27-0220	6	2	2	Screw—Special HWH
27-0220	6	27	2	Screw—Special HWH
27-8890	7	1	1	Spring — Pedal Return
28-0540	2	6	2	Bolt—Shoulder
28-2480	4	28	2	Washer—Flat
28-2480	9	12	2	Washer—Flat
28-8080	14	1	1	Boot—Terminal
37-8770	3	1	2	Bolt—Shldr
37-8770	3	2	2	Bolt—Shldr
37-8770	7	31	1	Bolt—Shldr
38-1420	14	5	1	Switch—Seat
38-7820	10	6	4	Bearing—Ball
44-8110	14	4	1	Battery Cable —Neg
46-6290	12	21	1	O—Ring
46-8090	2	13	4	Screw—Tapping
46-8090	2	17	3	Screw—Tapping
46-8091	2	3	2	Screw—Tapping
46-8091	2	10	1	Screw—Tapping
47-2963	6	4	1	Fuel Line
52-2891	4	11	2	Bushing — Steering Links
55-9321	8	5	1	Cable—Clutch
56-2540	14	29	1	Tube—Vent Use w/80-2600
56-6591	10	40	2	Wheel Bolt
56-9830	11	2:2	2	Brake Pad
57-6950	10	27	1	Spring—Torsion Deflector

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
61-9780	4	26	2	Hubcap
61-9780	9	14	2	Hubcap
61-9980	12	8	2	Screw-Adjusting
62-3661	10	8	2	Spacer - Bearing
63-8360	14	25	1	Key-Ignition
65-2920	7	20	1	Pad-Pedal
65-7210	13	23	1	Spacer
66-0120	6	1:1	1	Knob
67-0710	11	33	2	Ball - Swivel
76-2160	10	5	4	Plate-Kicker
79-1600-03	10	23	1	Wa-Baffle
79-1640-03	10	11	1	Wa-Baffle
79-3061	10	15	2	Blade-19.32 Recycler
80-0510-03	10	17	2	Stiffener-Blade
80-2240	14	31	1	Plate-Name Grille
80-2600	14	3	1	Battery - 7 Plate
80-4341	10	14	2	Shaft - Spindle
80-4360	10	13	2	Shield - Bearing
80-4380	10	12	2	Spacer
80-6990	12	9	4	Washer-Hardened
80-6990	13	8	4	Washer-Hardened
84-5610	7	8	1	Guide-Cable
84-5610	8	25	1	Guide-Cable
88-0890	4	37	1	Grip - Parking Brake
88-3840	1	28	1	Body - Rear
88-3880	6	3	1	Gas Tank Assembly
88-3930-03	2	16	1	Shield - Heat
88-3940-03	1	5	1	Panel - Rear
88-3950	3	25	1	Seat
88-3960	14	12	1	Lense - Headlights
88-3970	14	11	1	Reflector-Lamp
88-3980	6	31	1	Gas Cap ASM
88-4020	12	7	1	Belt Guide - Deck
88-4030	12	2	1	Belt Guide - Deck
88-4040	14	30	1	Battery Box
88-4050	2	12	1	Duct - Hood Air
88-4070	4	29:2	2	Tire 15x6.00-6
88-4090	9	9:2	2	Tire 18x9.50-8
88-4140	2	23	2	Nut - Wedge
88-4160	2	24	2	Clamp - Pivot Rod
88-4170	2	20	1	Rod - Pivot
88-4180	5	5	1	Button - Release
88-4190	5	4	1	Bushing - Sliding
88-4210	5	19	1	Bushing - Stationary
88-4230	13	13	2	Trunnion - HOC
88-4300	9	9	2	Rear Wheel & Tire ASM
88-4320	14	18	1	Harness-Wire
88-4340	6	1	1	Throttle Control ASM
88-4350	6	30	1	Cable ASM-Throttle
88-4370	4	29:1	2	Rim ASM-15" Front
88-4390	9	9:1	2	Rim ASM-18" Rear
88-4400	4	29:4	2	Bearing-Wheel
88-4410	6	20	1	Gasket - Muffler
88-4430	10	29	1	Recycler Cover ASM
88-4510	10	7	2	Spindle
88-4590	11	1	2	Bolt-Shoulder
88-4620-03	1	11	1	Bracket - Idler Pivot
88-4630-03	1	24	1	Plate - Engine Mounting
88-4670	4	9	1	Bushing - Eccentric
88-4730	13	16	2	Clamp - HOC Pivot
88-4810	7	13	1	Clamp - Shift Pivot
88-4810	8	4	2	Clamp - Shift Pivot

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
88-4820-03	3	11	2	Bracket – Seat Hinge
88-4830	4	34	1	Link – Drag
88-4840	9	4	1	Pulley – Transmission
88-4870-03	11	32	1	Arm – Idler
88-4880	14	17	1	Spacer – Microswitch
88-4890	5	10	1	Spring – Leaf
88-4910-03	3	3	1	Support – Seat
88-4960-03	1	17	1	Shield – Exh. Pipe
88-4980	11	23	1	Bushing – Idler Arm
88-5000-03	7	21	1	Pedal – Clutch/Brake
88-5010	4	7	1	Spacer – Steering Rack
88-5020-03	3	19	1	Plate – Shift Gate
88-5030-03	3	9	1	Gate – HOC
88-5070	11	29	1	Belt Guide – Idler
88-5110-03	13	22	1	Pivot W.a. (H.o.c.)
88-5130-03	4	5	1	Bracket – Steering Rack
88-5150	5	16	1	Bushing – Flange
88-5180-01	5	8	1	Bracket – Backup
88-5190-03	2	25	1	Lever W.a. – Deck Engage
88-5200	4	10	1	Steering Rack W.a.
88-5220	3	17	1	Foot Mat
88-5240	3	16	1	Foot Mat
88-5260-03	1	10	2	Bracket–Transaxle Mounti
88-5270	7	29	1	Rod – Clutch/Brake
88-5330	11	21	2	Pulley – Deck
88-5340	8	13	1	Lever – Shift (Transaxle
88-5380	4	32	1	Tie Rod – Steering
88-5450	13	12	2	Rod – Hanger
88-5470	4	23	2	Spacer – Front Axle
88-5500	7	15	1	Rod – Pedal Pivot
88-5510	4	35	1	Rod–Parking Brake
88-5520-03	4	36	1	Bracket–Parking Brake
88-5540	11	26	1	Rod –RH Deck Brake
88-5550	11	3	1	Rod –LH Deck Brake
88-5560	7	32	1	Belt Guide – Idler
88-5570-03	13	6	2	Link–Adjusting HOC
88-5630	11	30	1	Pulley – Idler
88-5680	7	33	1	Idler Pulley
88-5740-03	10	42	1	Bracket–Deck Wheel RH
88-5900	13	3	1	Link – HOC
88-5910	11	5	2	Spring – Torsion
88-5930	8	16	1	Keeper – Cable
88-5970	11	10	1	Hook – Return Spring
88-6040-03	2	18	1	Bracket – Hinge
88-6050-03	2	7	1	Bracket – Hinge
88-6070	7	30	1	Arm –Idler
88-6090	5	20	1	Coupling – Steering
88-6100	11	2	2	ASM. – Deck Brake
88-6130	11	6	1	Spring – Deck Engage
88-6220	1	4	2	Spring – Compression
88-6250	11	18	1	V–Belt
88-6270	9	5	1	V–Belt
88-6290-03	1	18	1	Shield – Muffler
88-6300	5	13	1	Shaft – Steering
88-6330	7	7	1	Spring – Extension
88-6370	5	14	1	Shaft W.a. – Steering
88-6460	13	17	1	Spring – Extension
88-6480	16	6	1	Muffler W.a.
88-9830	14	24	1	Switch–Ignition
88-9932	14	19	2	Switch – Micro
92-5730	2	31	1	Decal – Throttle
92-5731	2	30	1	Decal–Ign/Lights

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92-5748	2	14:1	1	Decal – Air Duct
92-5782	2	15	1	Patch – Heat Tape
92-7889-03	4	30	1	Spindle Wa–RH
92-7890-03	4	18	1	Spindle Wa–LH
92-8650	2	14	1	Hood–Toro
92-8757	16	9	1	Decal – Engine
92-8875	14	26	1	Switch–Rocker
92-8934	11	8	1	Spring – Extension
92-9520	10	36	1	Decal–Deck
92-9674	3	5	1	Knob–Studded
92-9845	14	8	1	Solenoid
93-0231	10	30:4	4	Screw–Plastite
93-0303	2	1	1	Tower–Steering Toro
93-0539	14	15	4	Screw–PPH
93-3240	14	20	1	Seal–Plunger
93-3809	6	37	1	Bracket–Ground
93-3810	14	23	1	Wire Harness
93-3822-03	13	1	1	Lever–HOC
93-3849	2	37	1	Brkt–Cable
93-3854	6	7	3	Belt Guide – Engine
93-3855	6	24	1	Belt Guide – R.h.
93-3881-03	12	4	1	Pan – Front Deck Suspens
93-3896-03	10	46	1	Bracket–Deck Wheel LH
93-4145	2	29	2	Decal – Tower
93-6673	2	32	1	Decal – Deck Engage
93-6674	10	32	2	Decal–Warning
93-6675	1	33	1	Decal–Instruct
93-6677	10	31	1	Decal – Shield Danger
93-6679	10	37	1	Decal – Belt Routing
93-7009	10	33	1	Decal–Deflector Danger
93-7010	10	28	2	Decal–Danger
93-7010	10	30:1	1	Decal–Danger
93-7656	3	21	1	Cover – Shift Gate
93-7657	3	7	1	Cover – HOC
93-7695	10	30	1	ASM.–38” Deflector
93-7696	10	30:3	2	Kicker – Ce
93-8741	14	11:1	1	Reflector – Headlight
93-9847	12	12	2	Spacer
94-1949-01	10	3	1	Deck Wa–38”
94-1951	6	39	1	Latch–Hood
94-1952	6	28	1	Rod–Gas Tank
94-1962-03	4	31	1	Front Axle Wa
94-1963	6	11	1	Pulley Assy–Engine
94-1968	8	20	1	Lever–Shift Pivot
94-1969	9	19	2	Strap–Torque
94-1970-03	12	14	1	Bracket–Deck Susp
94-1971-03	12	6	1	Bracket–Deck Susp
94-1980	2	39	2	Foam–Hood
94-1984	2	11	1	Pin–Latch
94-1991-03	8	1	1	Shift Lever Wa
94-1993-03	8	8	1	Shift Pivot Wa
94-1997	8	26	1	Bushing–Shift Lever
94-1998-03	1	25	1	Frame Rail–RH
94-1999-03	1	13	1	Frame Rail–LH
94-4293	2	35	1	Cable ASM–Deck Engage
94-4294	7	2	1	Spring–Brake
94-4926	7	36	1	Bracket–Belt Guide
94-5362	14	33	1	Boot–Terminal Insulator
94-5431	8	9	1	Link–Shift
94-5433	7	6	1	Bracket–Belt Guide
94-5565	2	2	1	Knob – Control
94-5565	8	24	1	Knob – Control

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
94-5565	13	24	1	Knob - Control
94-5823	12	5	2	Bolt-Shoulder
94-6022	9	7	1	Transaxle - Peerless 931
95-0807	2	34	1	Decal-Side Panel R.H.
95-0808	2	33	1	Decal-Side Panel L.H.
95-0809	1	35	1	Decal-Rear Fender
95-1661	10	26	1	Rod-Pivot
95-2747	12	20	1	Fitting-Washout
98-1459	5	23	1	Decal
98-1467	5	1	1	Steering Wheel ASM 14"
98-1468	5	1:1	1	Cover-Wheel
98-3575-03	1	21	1	Support-Axle
218-461	14	24:2	1	Nut-HH (F/W Sw)
218-578	15	*	3	Fuse-10 Amp
232-27	4	29:3	2	Valve Stem
232-27	9	9:3	2	Valve Stem
232-39	4	29:6	2	Tube-Inner 15x6-6
232-41	9	9:4	2	Tube-Inner 18x9.50-8
2412-98	6	5	2	Clamp-Hose
302-5	4	29:5	2	Fitting-Grease
302-26	4	8	1	Fitting-Grease
321-2	2	5	4	Screw-HH
321-4	5	7	2	Screw-HH
321-4	10	9	2	Screw-HH
321-4	14	2	2	Screw-HH
321-4	16	7	1	Screw-HH
321-9	5	21	2	Screw-HH
321-15	10	38	2	Screw-HH
322-3	1	7	4	Screw-HH
322-3	1	9	4	Screw-HH
322-3	1	20	6	Screw-HH
322-3	1	23	2	Screw-HH
322-3	1	26	4	Screw-HH
322-3	1	27	2	Screw-HH
322-3	2	28	2	Screw-HH
322-3	3	10	4	Screw-HH
322-3	7	3	1	Screw-HH
322-3	7	14	2	Screw-HH
322-3	8	6	2	Screw-HH
322-3	8	21	1	Screw-HH
322-3	9	21	2	Screw-HH
322-3	10	44	6	Screw-HH
322-3	13	19	4	Screw-HH
322-5	1	2	2	Screw-HH
322-5	6	10	2	Screw-HH
322-5	11	20	2	Screw-HH
322-6	7	4	1	Screw-HH
322-9	6	6	3	Screw-HH
322-12	9	15	4	Screw HH
322-12	12	16	2	Screw HH
322-39	13	2	1	Screw-HH
323-5	10	24	2	Screw-HH
323-9	12	13	2	Screw-HH
323-10	8	2	1	Screw-HH
323-11	7	34	1	Screw
323-12	11	27	1	Screw
323-13	4	2	2	Screw-HH
329-23	8	10	1	Screw
3219-6	11	22	2	Nut-Hex
3229-1	12	22	2	Bolt-CARR
3230-1	4	6	4	Bolt-CARR
3230-1	10	21	1	Bolt-CARR

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3230-3	4	4	1	Screw-CARR
3230-3	7	22	1	Screw-CARR
3230-3	8	17	1	Screw-CARR
3231-4	4	3	1	Bolt-CARR
3253-3	8	11	1	Washer-Lock
3253-3	16	8	1	Washer-Lock
3253-4	6	21	2	Washer-Lock
3253-22	6	13	1	Washer-Lock
3254-5	14	24:1	1	Washer-Lock
3255-7	14	14	1	Washer-Lk
3255-8	6	23	1	Washer-Lock
3256-1	12	19	2	Washer-Flat
3256-22	5	6	2	Washer-Flat
3256-22	12	10	2	Washer-Flat
3256-23	1	3	2	Washer-Flat
3256-23	1	22	2	Washer-Flat
3256-23	2	27	2	Washer-Flat
3256-23	7	9	2	Washer-Flat
3256-23	7	23	1	Washer-Flat
3256-23	8	14	1	Washer-Flat
3256-23	8	22	1	Washer-Flat
3256-23	9	16	4	Washer-Flat
3256-23	9	18	4	Washer-Flat
3256-24	2	21	2	Washer-Flat
3256-24	4	20	2	Washer-Flat
3256-24	4	24	2	Washer-Flat
3256-24	11	28	2	Washer-Flat
3256-24	13	5	2	Washer-Flat
3256-24	13	10	2	Washer-Flat
3256-25	4	13	4	Washer-Flat
3256-25	6	14	1	Washer-Flat
3256-25	8	19	1	Washer-Flat
3256-26	7	18	1	Washer-Flat
3256-68	11	19	1	Washer-Flat
3257-23	9	3	1	Key-Woodruff
3269-26	3	13	2	Washer
3269-26	3	18	2	Washer
3272-10	4	14	2	Pin-Cotter
3272-10	4	19	2	Pin-Cotter
3272-10	7	24	1	Pin-Cotter
3272-12	4	27	2	Pin-Cotter
3274-10	6	22	2	Screw-Sckt Hd
3290-282	3	8	2	Pop Rivet
3290-282	3	20	2	Pop Rivet
3290-282	11	2:3	4	Pop Rivet
3290-299	14	32	1	Nut - Tinnerman
3290-307	2	19	2	Pin-Cotter
3290-307	13	4	1	Pin-Cotter
3290-307	13	7	4	Pin-Cotter
3290-307	13	9	2	Pin-Cotter
3290-354	14	16	2	Nut-Speed
3290-465	10	18	2	Washer-Spring
3290-479	3	6	4	Fastener-Panel
3290-479	3	15	12	Fastener-Panel
3290-479	3	22	4	Fastener-Panel
3290-496	2	8	2	Nut - Retained
3296-3	8	7	2	Nut-Lock
3296-16	12	18	2	Nut-Lock
3296-23	12	17	2	Nut-Lock
3296-29	1	6	2	Nut-Lock
3296-29	1	8	4	Nut-Lock
3296-29	1	12	4	Nut-Lock

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3296-29	1	14	2	Nut-Lock
3296-29	1	15	6	Nut-Lock
3296-29	1	16	2	Nut-Lock
3296-29	1	29	4	Nut-Lock
3296-29	2	26	2	Nut-Lock
3296-29	3	12	6	Nut-Lock
3296-29	4	1	4	Nut-Lock
3296-29	4	16	1	Nut-Lock
3296-29	6	29	4	Nut-Lock
3296-29	7	10	2	Nut-Lock
3296-29	7	19	1	Nut-Lock
3296-29	7	26	2	Nut-Lock
3296-29	7	27	1	Nut-Lock
3296-29	8	3	2	Nut-Lock
3296-29	8	15	1	Nut-Lock
3296-29	8	23	1	Nut-Lock
3296-29	9	1	4	Nut-Lock
3296-29	9	17	2	Nut-Lock
3296-29	10	20	1	Nut-Lock
3296-29	10	45	6	Nut-Lock
3296-29	11	25	2	Nut-Lock
3296-29	12	15	2	Nut-Lock
3296-29	13	14	4	Nut-Lock
3296-29	13	15	2	Nut-Lock
3296-29	13	20	1	Nut-Lock
3296-29	13	21	1	Nut-Lock
3296-39	4	15	1	Nut-Lock
3296-39	4	25	2	Nut-Lock
3296-39	8	18	1	Nut-Lock
3296-39	10	22	1	Nut-Lock
3296-39	10	25	2	Nut-Lock
3296-39	10	43	2	Nut-Lock
3296-39	11	24	1	Nut-Lock
3296-39	12	3	2	Nut-Lock
3296-42	2	4	4	Nut-Lock
3296-42	5	9	2	Nut-Lock
3296-42	5	12	2	Nut-Lock
3296-42	10	10	2	Nut-Lock
3296-42	11	4	2	Nut-Lock
3296-42	12	11	2	Nut-Lock
3296-58	11	14	3	Nut-Flange
3296-59	7	28	2	Nut-Lock
32103-22	14	28	2	Nut-Wing
32104-76	1	19	1	Screw-Self TAP
32104-76	12	1	5	Screw-Self TAP
32111-7	10	39	2	Nut-Cap
32120-64	9	2	1	Ring-Retaining
32121-111	5	2	1	Pin-Spiral
32128-43	2	22	2	Nut-Flange
32144-14	9	22	2	Screw-HWH
32144-32	14	10	2	Screw-Plastic
32144-41	10	2	8	Screw-HWHTF
32144-111	10	4	8	Screw - PPH
32144-112	6	40	2	Screw-TAP
32149-1	6	26	2	Nut
32149-2	14	7	3	Nut-Hex Lock
32151-48	4	33	2	Ring-Retaining
32151-48	5	18	1	Ring-Retaining
32151-48	9	13	2	Ring-Retaining
32151-81	5	3	1	Retaining Ring Push-On

*Not Illustrated

[illegible]