



1338XL LAWN TRACTOR

Model No. 71190 – 8900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Frame Assembly	1	Suspension Assembly (38" Cutting Unit)	12
Hood Assembly	2	Height of Cut Assembly	13
Seat Assembly	3	Electrical Assembly	14
Front Axle Assembly	4	Electrical Schematic	15
Steering Assembly	5	Engine Assembly	16
Gas Tank & Engine Pulley Assembly	6	Battery Assembly	17
Clutch Assembly	7	Engine Briggs & Stratton	
Shift Assembly	8	Model 28M707–1122–E1	18–26
Transaxle Assembly	9	Peerless Transaxle Model MST 205–509 ..	27–28
Deck Assembly (38" Cutting Unit)	10	Toro Part Number Index	29–35
Pulley & Belt Assembly (38" Cutting Unit)	11		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Easy Empty Bagger	Model No. 79116 or Model No. 79117	Tire Chains	Part No. 11–0430
Twin Bag Bagger Kit	Model No. 79101 or Model No. 79103	Headlight Kit (Standard)	Model No. 79180
Recycler Kit (Standard)	Model No. 79170	42" Snowblade Kit	Model No. 79150
Hi–Sail Bagging Blade	Part No. 57–4700	Wheel Weight Kit	Model No. 59159
		Anti–Scalp Kit	Model No. 79182
		Exhaust Deflector Kit	Part No. 94–6872

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

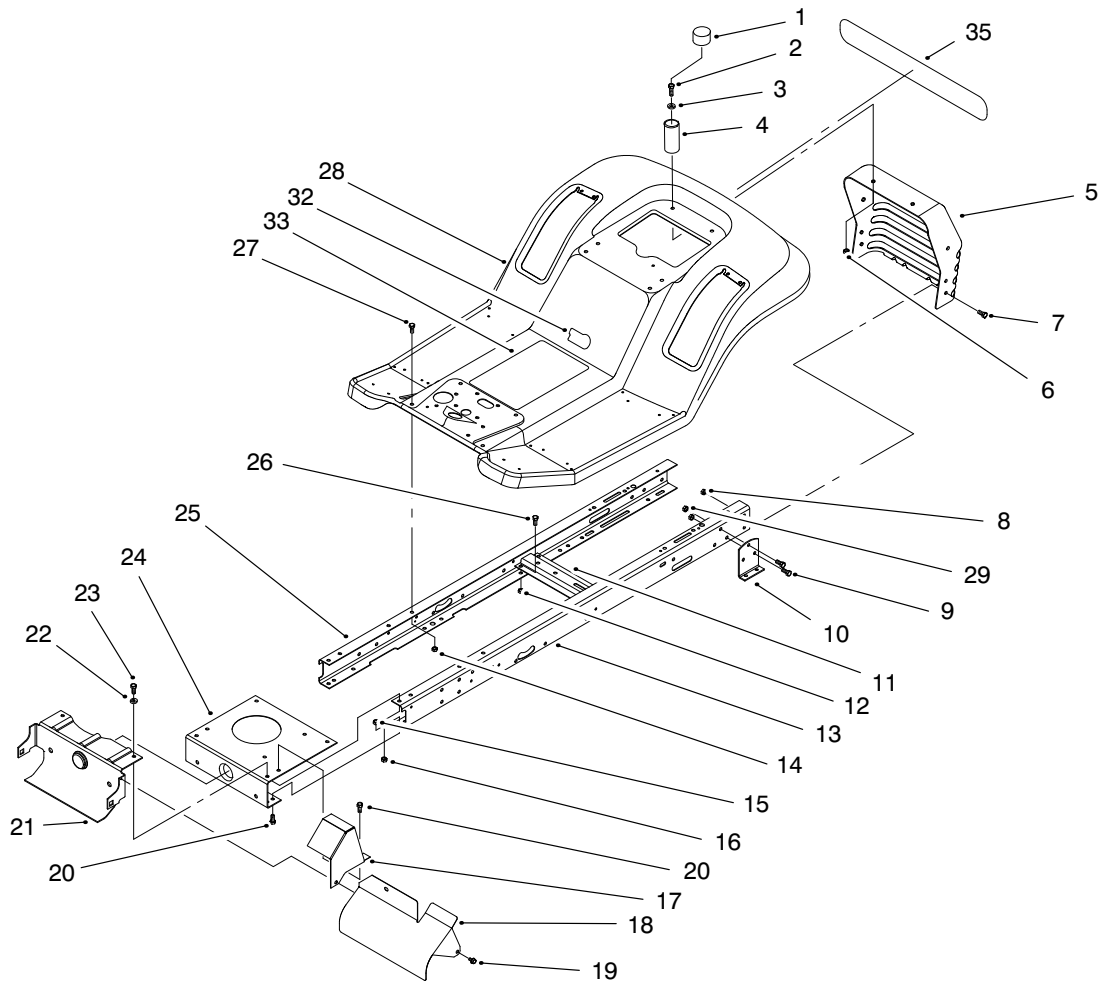


Sheet No.:2

Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	701178	2	Cap-Protector
2	322-5	2	Screw-HH
3	3256-23	2	Washer-Flat
4	88-6220	2	Spring - Compression
5	88-3940-03	1	Panel - Rear
6	3296-29	2	Nut-Lock
7	322-3	4	Screw-HH
8	3296-29	4	Nut-Lock
9	322-3	4	Screw-HH
10	88-5260-03	2	Bracket-Transaxle Mounti
11	88-4620-03	1	Bracket - Idler Pivot
12	3296-29	4	Nut-Lock
13	94-1999-03	1	Frame Rail-LH
14	3296-29	2	Nut-Lock
15	3296-29	6	Nut-Lock
16	3296-29	2	Nut-Lock
17	88-4960-03	1	Shield - Exh. Pipe
18	88-6290-03	1	Shield - Muffler
19	32104-76	1	Screw-Self TAP
20	322-3	6	Screw-HH
21	98-3575-03	1	Support-Axle
22	3256-23	2	Washer-Flat
23	322-3	2	Screw-HH
24	88-4630-03	1	Plate - Engine Mounting


Ref. No.	Part No.	Qty.	Description
25	94-1998-03	1	Frame Rail-RH
26	322-3	4	Screw-HH
27	322-3	2	Screw-HH
28	88-3840	1	Body - Rear
29	3296-29	4	Nut-Lock
32	76-1340	1	Decal-USA
33	94-1237	1	Decal-Instruction
35	95-0809	1	Decal-Rear Fender

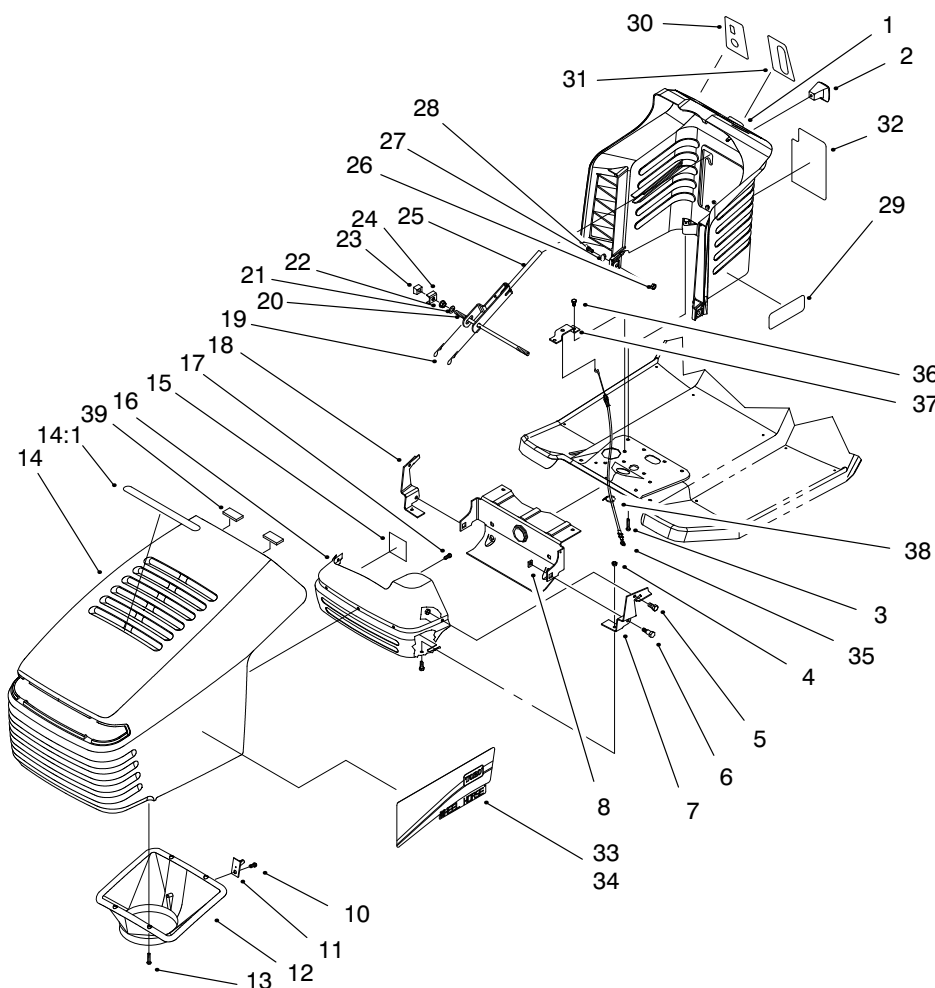

Sheet No.:3

Hood Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	93-0303	1	Tower-Steering Toro	26	3296-29	2	Nut-Lock
2	94-5565	1	Knob - Control	27	3256-23	2	Washer-Flat
3	46-8091	2	Screw-Tapping	28	322-3	2	Screw-HH
4	3296-42	4	Nut-Lock	29	93-4145	2	Decal - Tower
5	321-2	4	Screw-HH	30	92-2460	1	Decal - Ignition/Lights
6	28-0540	2	Bolt-Shoulder	31	92-2461	1	Decal - Throttle
7	88-6050-03	1	Bracket - Hinge	32	92-2462	1	Decal - Deck Engage
8	3290-496	2	Nut - Retained	33	95-0808	1	Decal-Side Panel LH
10	46-8091	1	Screw-Tapping	34	95-0807	1	Decal-Side Panel RH
11	94-1984	1	Pin-Latch	35	94-4293	1	Cable ASM-Deck Engage
12	88-4050	1	Duct - Hood Air	36	9266714	2	Screw-HWHTF
13	46-8090	4	Screw-Tapping	37	93-3849	1	Brkt-Cable
14	92-8650	1	Hood-Toro	38	614249	1	Tie Strap
14:1	92-5748	1	Decal - Air Duct	39	94-1980	2	Foam-Hood
15	92-5782	1	Patch - Heat Tape				
16	88-3930-03	1	Shield - Heat				
17	46-8090	3	Screw-Tapping				
18	88-6040-03	1	Bracket - Hinge				
19	3290-307	2	Pin-Cotter				
20	88-4170	1	Rod - Pivot				
21	3256-24	2	Washer-Flat				
22	32128-43	2	Nut-Flange				
23	88-4140	2	Nut - Wedge				
24	88-4160	2	Clamp - Pivot Rod				
25	88-5190-03	1	Lever W.a. - Deck Engage				

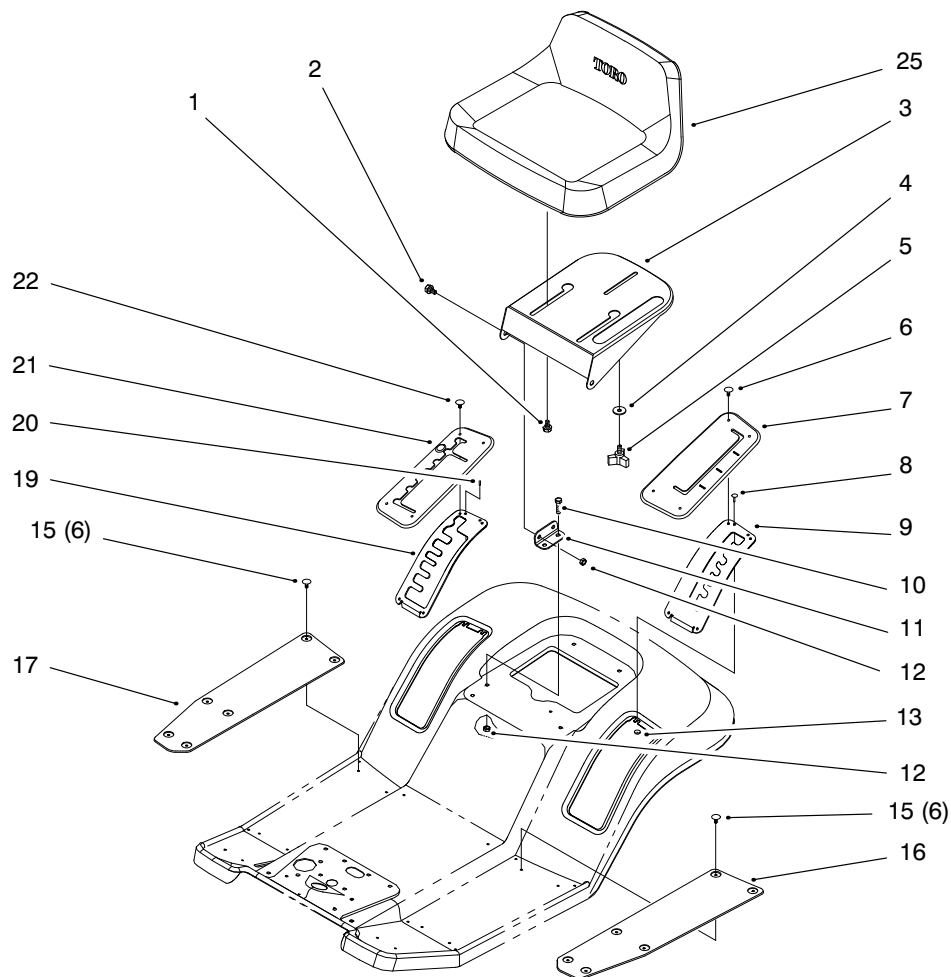


Sheet No.:4

Seat Assembly

Ref. No.	Part No.	Qty.	Description
1	37-8770	2	Bolt-Shldr
2	37-8770	2	Bolt-Shldr
3	88-4910-03	1	Support - Seat
4	5-4460	1	Washer-Fender
5	92-9674	1	Knob-Studded
6	3290-479	4	Fastener-Panel
7	88-5170	1	Cover - HOC
8	3290-282	2	Pop Rivet
9	88-5030-03	1	Gate - HOC
10	322-3	4	Screw-HH
11	88-4820-03	2	Bracket - Seat Hinge
12	3296-29	6	Nut-Lock
13	3269-26	2	Washer
15	3290-479	12	Fastener-Panel
16	88-5240	1	Foot Mat
17	88-5220	1	Foot Mat
18	3269-26	2	Washer
19	88-5020-03	1	Plate - Shift Gate
20	3290-282	2	Pop Rivet
21	88-5160	1	Cover - Shift Gate
22	3290-479	4	Fastener-Panel
25	88-3950	1	Seat

Ref. No.	Part No.	Qty.	Description

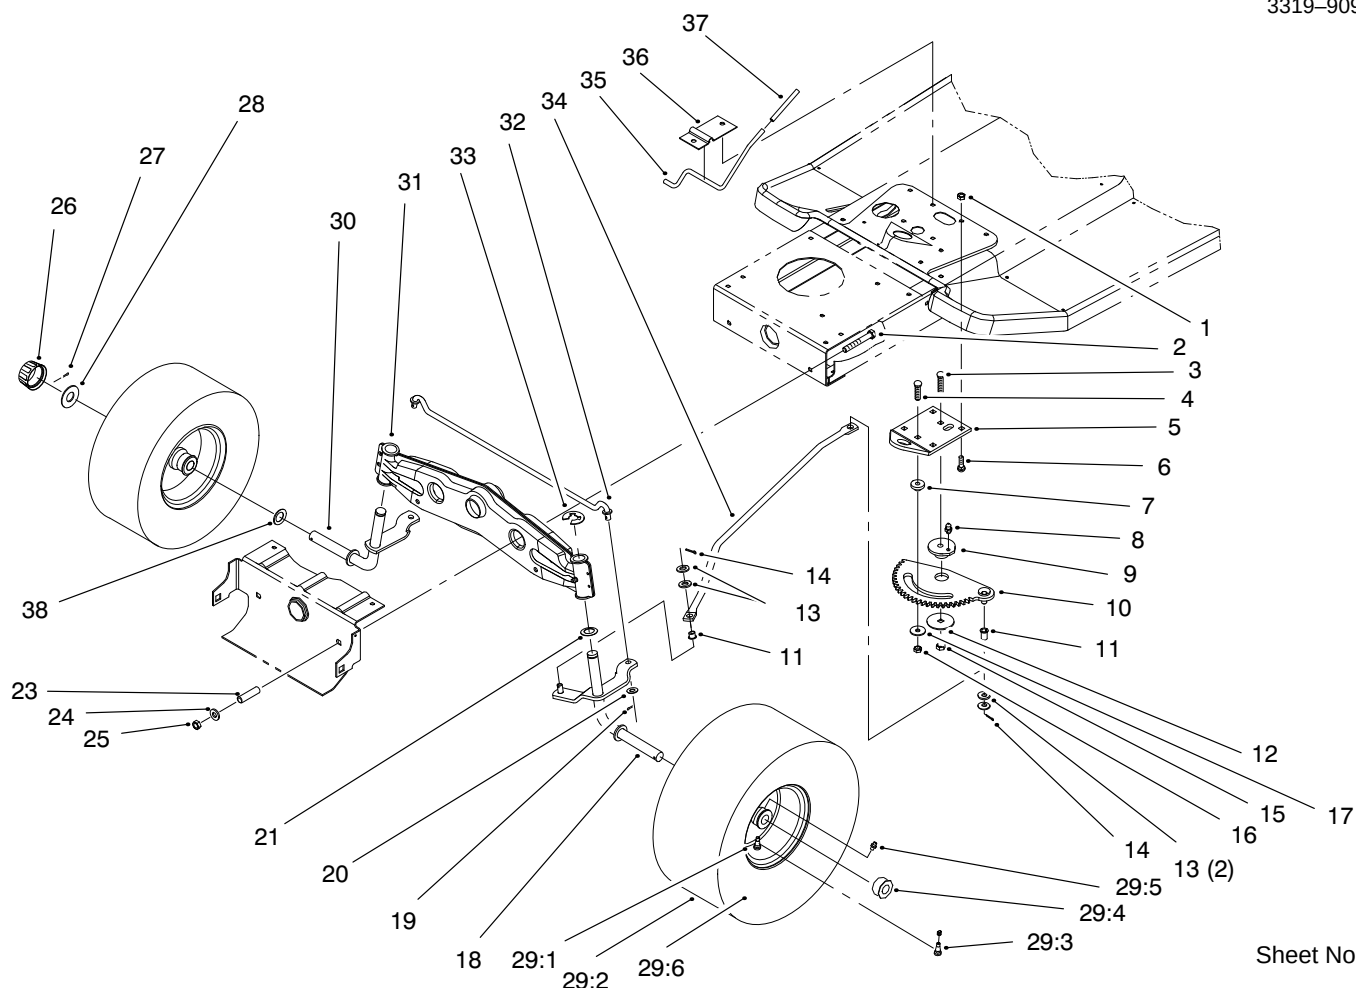


Sheet No.:5

Front Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-29	4	Nut-Lock
2	323-13	2	Screw-HH
3	3231-4	1	Bolt-CARR
4	3230-3	1	Screw-CARR
5	88-5130-03	1	Bracket - Steering Rack
6	3230-1	4	Bolt-CARR
7	88-5010	1	Spacer - Steering Rack
8	302-26	1	Fitting-Grease
9	88-4670	1	Bushing - Eccentric
10	88-5200	1	Steering Rack W.a.
11	52-2891	2	Bushing - Steering Links
12	111419	1	Washer-Bearing
13	3256-25	4	Washer-Flat
14	3272-10	2	Pin-Cotter
15	3296-39	1	Nut-Lock
16	3296-29	1	Nut-Lock
17	5-4460	1	Washer-Fender
18	92-7890-03	1	Spindle Wa-LH
19	3272-10	2	Pin-Cotter
20	3256-24	2	Washer-Flat
21	3-6498	2	Washer-Thrust
23	88-5470	2	Spacer - Front Axle
24	3256-24	2	Washer-Flat

Ref. No.	Part No.	Qty.	Description
25	3296-39	2	Nut-Lock
26	61-9780	2	Hubcap
27	3272-12	2	Pin-Cotter
28	28-2480	2	Washer-Flat
29:1	88-4370	2	Rim ASM-15" Front
29:2	88-4070	2	Tire 15x6.00-6
29:3	232-27	2	Valve Stem
29:4	88-4400	2	Bearing-Wheel
29:5	302-5	2	Fitting-Grease
29:6	232-39	2	Tube-Inner 15x6-6
30	92-7889-03	1	Spindle Wa-RH
31	94-1962-03	1	Front Axle Wa
32	88-5380	1	Tie Rod - Steering
33	32151-48	2	Ring-Retaining
34	88-4830	1	Link - Drag
35	88-5510	1	Rod-Parking Brake
36	88-5520-03	1	Bracket-Parking Brake
37	88-0890	1	Grip - Parking Brake
38	3-6498	4	Washer-Thrust

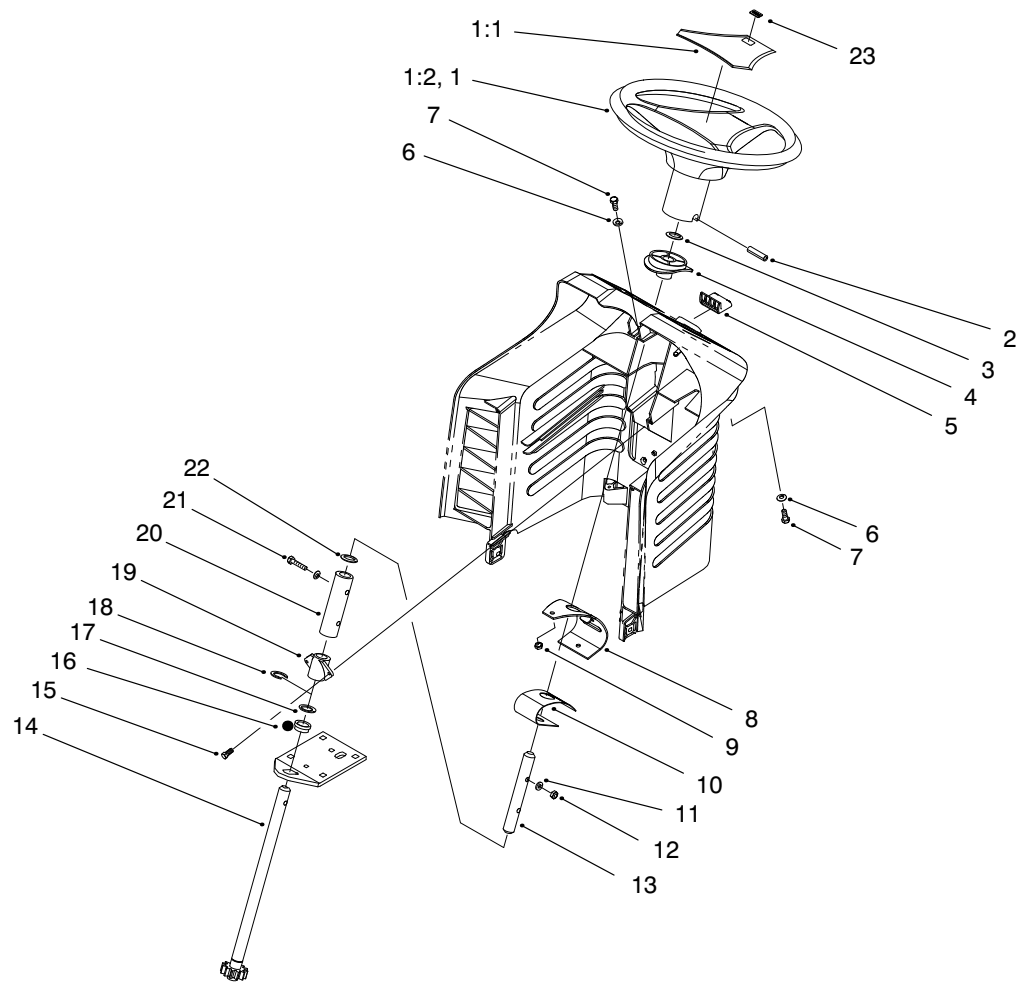


Sheet No.:6

Steering Assembly

Ref. No.	Part No.	Qty.	Description
1	98-1467	1	Steering Wheel ASM 14"
1:1	98-1468	1	Cover-Wheel
1:2	98-1469	1	Steering Wheel 14"
2	32121-111	1	Pin-Spiral
3	32151-81	1	Retaining Ring Push-On
4	88-4190	1	Bushing - Sliding
5	88-4180	1	Button - Release
6	3256-22	2	Washer-Flat
7	321-4	2	Screw-HH
8	88-5180-01	1	Bracket - Backup
9	3296-42	2	Nut-Lock
10	88-4890	1	Spring - Leaf
11	3-7501	4	Washer-Curved
12	3296-42	2	Nut-Lock
13	88-6300	1	Shaft - Steering
14	88-6370	1	Shaft W.a. - Steering
15	27-0220	2	Screw-Special HWH
16	88-5150	1	Bushing - Flange
17	3-6498	1	Washer-Thrust
18	32151-48	1	Ring-Retaining
19	88-4210	1	Bushing - Stationary
20	88-6090	1	Coupling - Steering
21	321-9	2	Screw-HH


Ref. No.	Part No.	Qty.	Description
22	3-6498	1	Washer-Thrust
23	98-1459	1	Decal

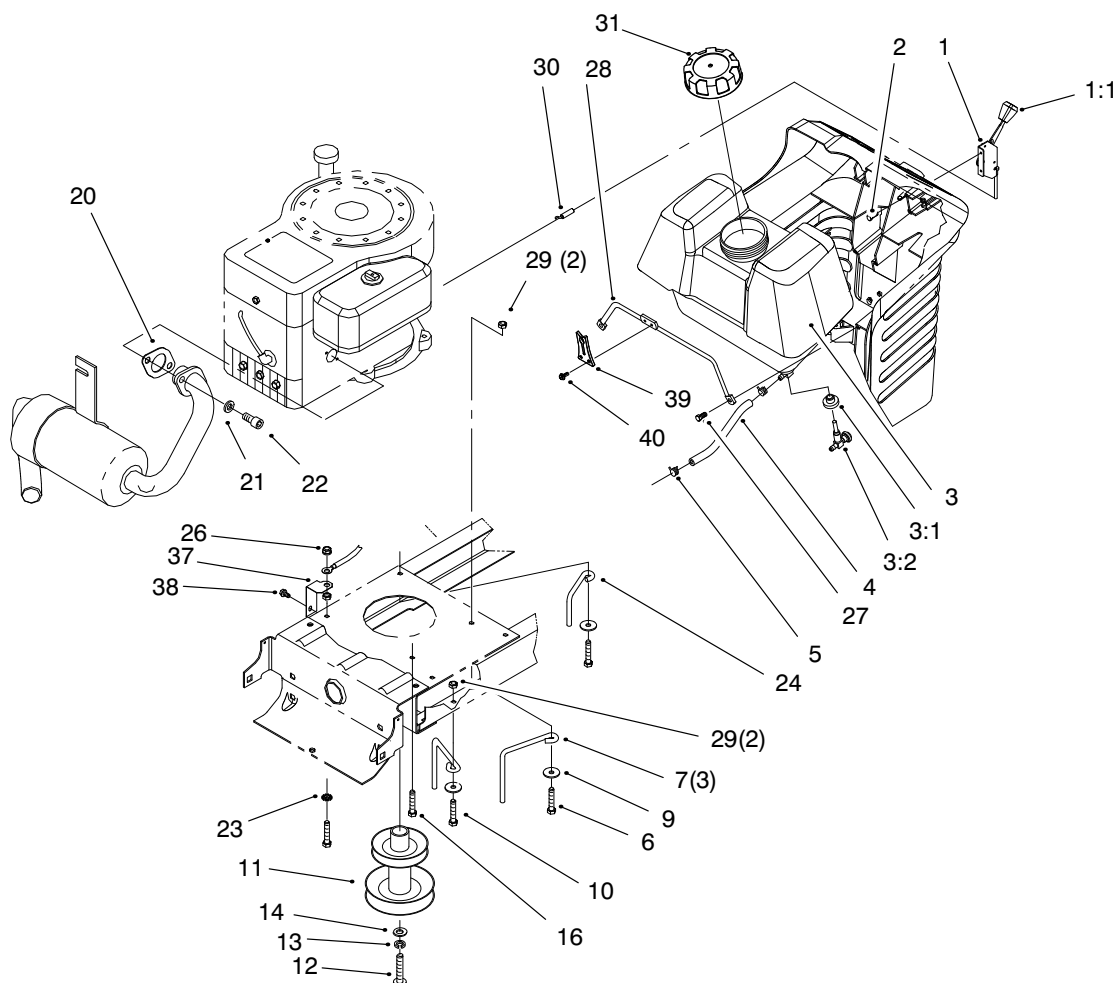

Sheet No.:8

Gas Tank & Engine Pulley Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	88-4340	1	Throttle Control ASM	30	88-4350	1	Cable ASM-Throttle
1:1	66-0120	1	Knob	31	88-3980	1	Gas Cap ASM
2	27-0220	2	Screw-Special HWH	37	93-3809	1	Bracket-Ground
3	88-3880	1	Gas Tank Assembly	38	9266714	1	Screw-HWHTF
3:1	104047	1	Bushing	39	94-1951	1	Latch-Hood
3:2	104048	1	Valve ASM	40	32144-112	2	Screw-TAP
4	47-2963	1	Fuel Line				
5	2412-98	2	Clamp-Hose				
6	322-9	3	Screw-HH				
7	93-3854	3	Belt Guide - Engine				
9	5-4460	4	Washer-Fender				
10	322-5	2	Screw-HH				
11	94-1963	1	Pulley Assy-Engine				
12	26-0671	1	Bolt-Blade				
13	3253-22	1	Washer-Lock				
14	3256-25	1	Washer-Flat				
16	9267154	1	Screw				
20	88-4410	1	Gasket - Muffler				
21	3253-4	2	Washer-Lock				
22	3274-10	2	Screw-Sckt Hd				
23	3255-8	1	Washer-Lock				
24	93-3855	1	Belt Guide - R.h.				
26	32149-1	2	Nut				
27	27-0220	2	Screw-Special HWH				
28	94-1952	1	Rod-Gas Tank				
29	3296-29	4	Nut-Lock				

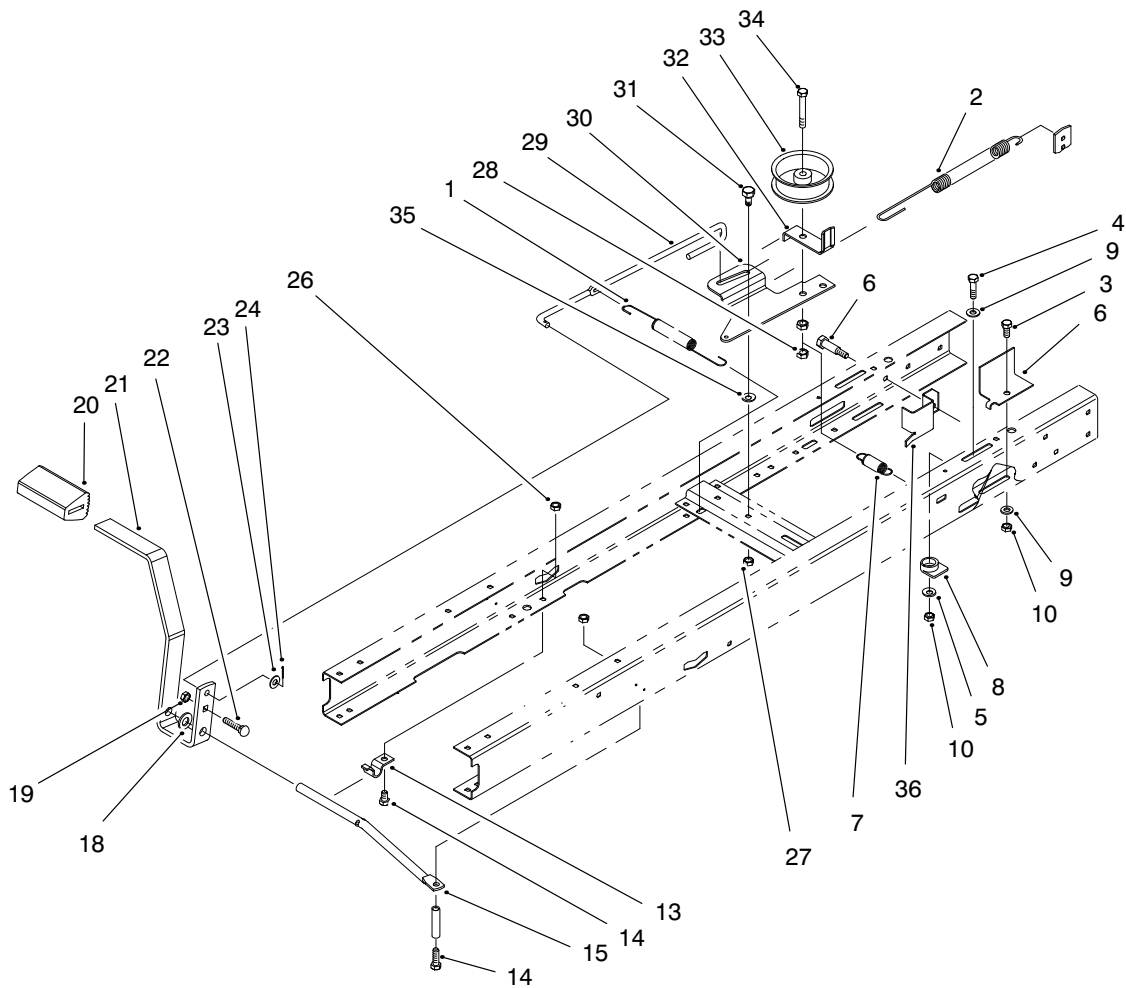


Sheet No.:9

Clutch Assembly

Ref. No.	Part No.	Qty.	Description
1	27-8890	1	Spring – Pedal Return
2	94-4294	1	Spring-Brake
3	322-3	1	Screw-HH
4	322-6	1	Screw-HH
5	5-4460	1	Washer-Fender
6	94-5433	1	Bracket-Belt Guide
7	88-6330	1	Spring – Extension
8	84-5610	1	Guide-Cable
9	3256-23	2	Washer-Flat
10	3296-29	2	Nut-Lock
13	88-4810	1	Clamp – Shift Pivot
14	322-3	2	Screw-HH
15	88-5500	1	Rod – Pedal Pivot
18	3256-26	1	Washer-Flat
19	3296-29	1	Nut-Lock
20	65-2920	1	Pad-Pedal
21	88-5000-03	1	Pedal – Clutch/Brake
22	3230-3	1	Screw-CARR
23	3256-23	1	Washer-Flat
24	3272-10	1	Pin-Cotter
26	3296-29	2	Nut-Lock
27	3296-29	1	Nut-Lock
28	3296-59	2	Nut-Lock
29	88-5270	1	Rod – Clutch/Brake
30	88-6070	1	Arm –Idler
31	37-8770	1	Bolt-Shldr


Ref. No.	Part No.	Qty.	Description
32	88-5560	1	Belt Guide – Idler
33	88-5680	1	Idler Pulley
34	323-11	1	Screw
35	5-4460	1	Washer-Fender
36	94-4926	1	Bracket-Belt Guide

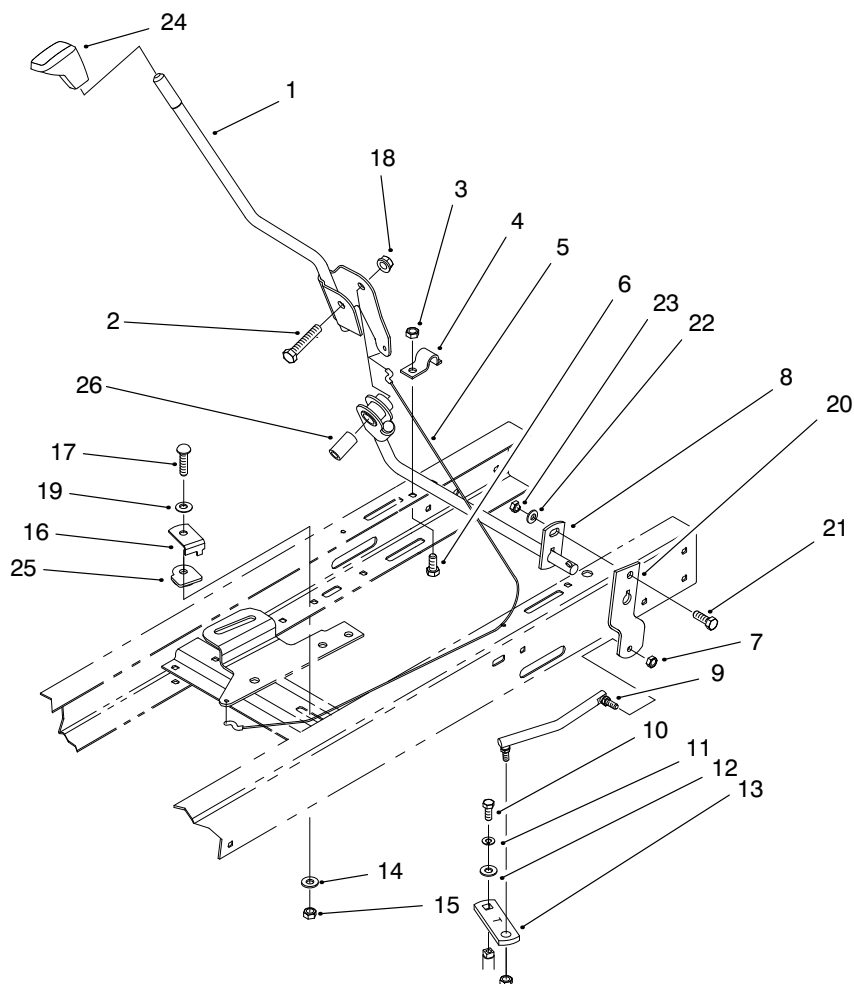

Sheet No.:10

Shift Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	94-1991-03	1	Shift Lever Wa	25	84-5610	1	Guide-Cable
2	323-10	1	Screw-HH	26	94-1997	1	Bushing-Shift Lever
3	3296-29	2	Nut-Lock				
4	88-4810	2	Clamp - Shift Pivot				
5	55-9321	1	Cable-Clutch				
6	322-3	2	Screw-HH				
7	3296-3	2	Nut-Lock				
8	94-1993-03	1	Shift Pivot Wa				
9	94-5431	1	Link-Shift				
10	329-23	1	Screw				
11	3253-3	1	Washer-Lock				
12	7-5461	1	Spacer-Transmission				
13	88-5340	1	Lever - Shift (Transaxle				
14	3256-23	1	Washer-Flat				
15	3296-29	1	Nut-Lock				
16	88-5930	1	Keeper - Cable				
17	3230-3	1	Screw-CARR				
18	3296-39	1	Nut-Lock				
19	3256-25	1	Washer-Flat				
20	94-1968	1	Lever-Shift Pivot				
21	322-3	1	Screw-HH				
22	3256-23	1	Washer-Flat				
23	3296-29	1	Nut-Lock				
24	94-5565	1	Knob - Control				

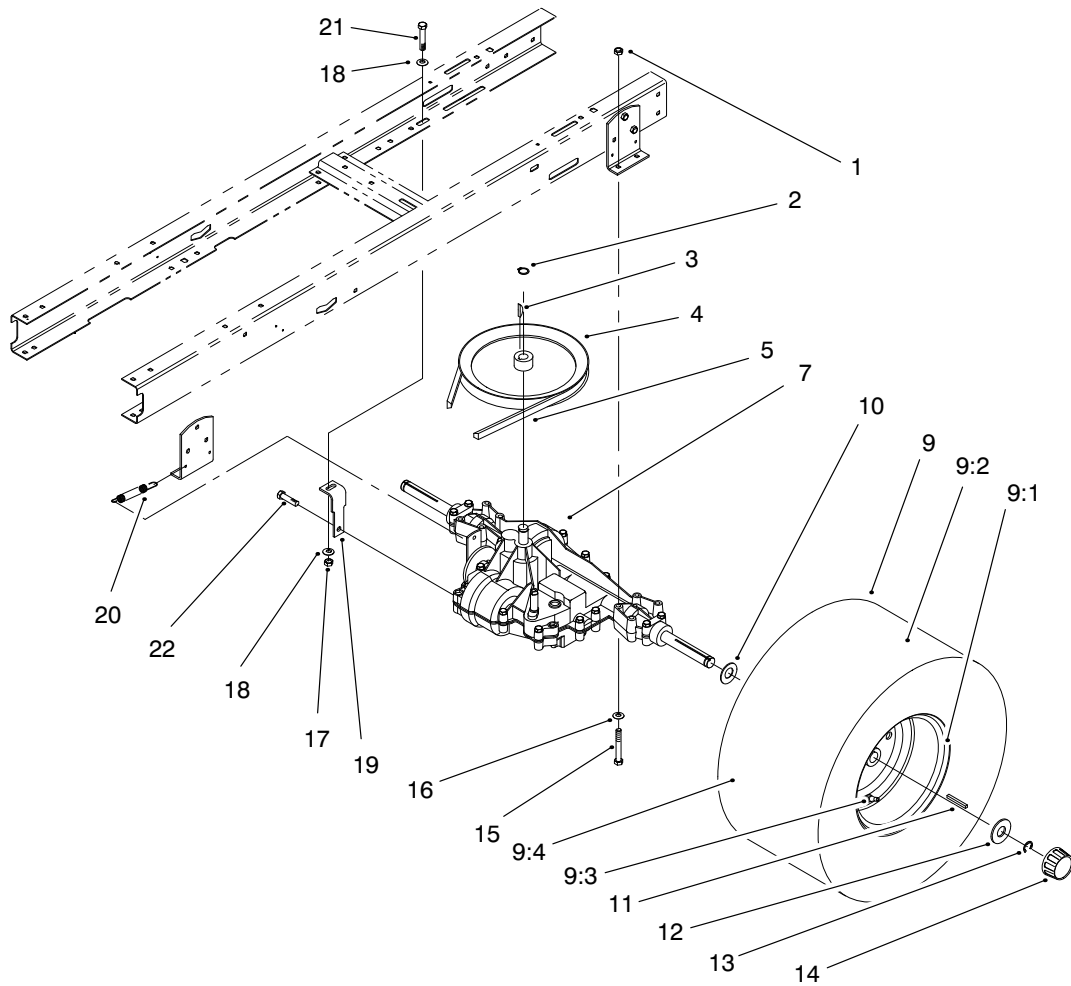


Sheet No.:11

Transaxle Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-29	4	Nut-Lock
2	32120-64	1	Ring-Retaining
3	3257-23	1	Key-Woodruff
4	88-4840	1	Pulley - Transmission
5	88-6270	1	V-Belt
7	94-6022	1	Transaxle - Peerless 931
9	88-4300	2	Rear Wheel & Tire ASM
9:1	88-4390	2	Rim ASM-18" Rear
9:2	88-4090	2	Tire 18x9.50-8
9:3	232-27	2	Valve Stem
9:4	232-41	2	Tube-Inner 18x9.50-8
10	3-6498	2	Washer-Thrust
11	7-0036	2	Key-Square
12	28-2480	2	Washer-Flat
13	32151-48	2	Ring-Retaining
14	61-9780	2	Hubcap
15	322-12	4	Screw HH
16	3256-23	4	Washer-Flat
17	3296-29	2	Nut-Lock
18	3256-23	4	Washer-Flat
19	94-1969	2	Strap-Torque
20	26-6701	1	Spring - Extension


Ref. No.	Part No.	Qty.	Description
21	322-3	2	Screw-HH
22	32144-14	2	Screw-HWH

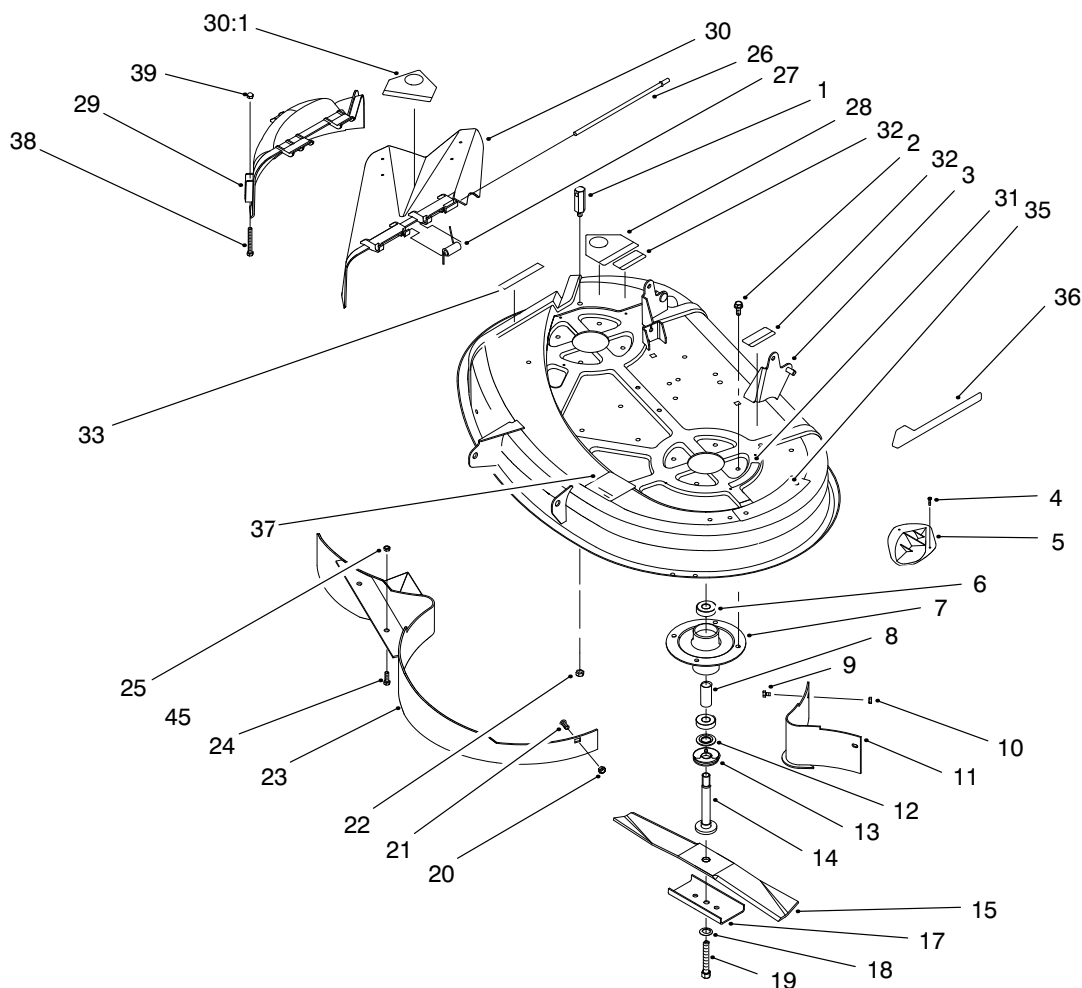

Sheet No.:16

Deck Assembly (38" Cutting Unit)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	32144-41	8	Screw-HWHTF	28	93-1122	1	Decal-Danger
3	94-1949-01	1	Deck Wa-38"	29	88-4430	1	Recycler Cover ASM
4	32144-111	8	Screw - PPH	30	93-0317	1	ASM-Deflector
5	76-2160	4	Plate-Kicker	30:1	93-1122	1	Decal-Danger
6	38-7820	4	Bearing-Ball	31	68-3660	1	Decal - Shield Danger
7	88-4510	2	Spindle	32	55-4300	2	Decal-Warning
8	62-3661	2	Spacer - Bearing	33	68-3650	1	Decal-Danger
9	321-4	2	Screw-HH	35	79-3140	1	Decal-Danger
10	3296-42	2	Nut-Lock	36	92-9520	1	Decal-Deck
11	79-1640-03	1	Wa-Baffle	37	93-6679	1	Decal - Belt Routing
12	80-4380	2	Spacer	38	321-15	2	Screw-HH
13	80-4360	2	Shield - Bearing	39	32111-7	2	Nut-Cap
14	80-4341	2	Shaft - Spindle				
15	79-3061	2	Blade-19.32 Recycler				
17	80-0510-03	2	Stiffener-Blade				
18	3290-465	2	Washer-Spring				
19	26-0671	2	Bolt-Blade				
20	3296-29	1	Nut-Lock				
21	3230-1	1	Bolt-CARR				
22	3296-39	1	Nut-Lock				
23	79-1600-03	1	Wa-Baffle				
24	323-5	2	Screw-HH				
25	3296-39	2	Nut-Lock				
26	95-1661	1	Rod-Pivot				
27	57-6950	1	Spring-Torsion				
			Deflector				

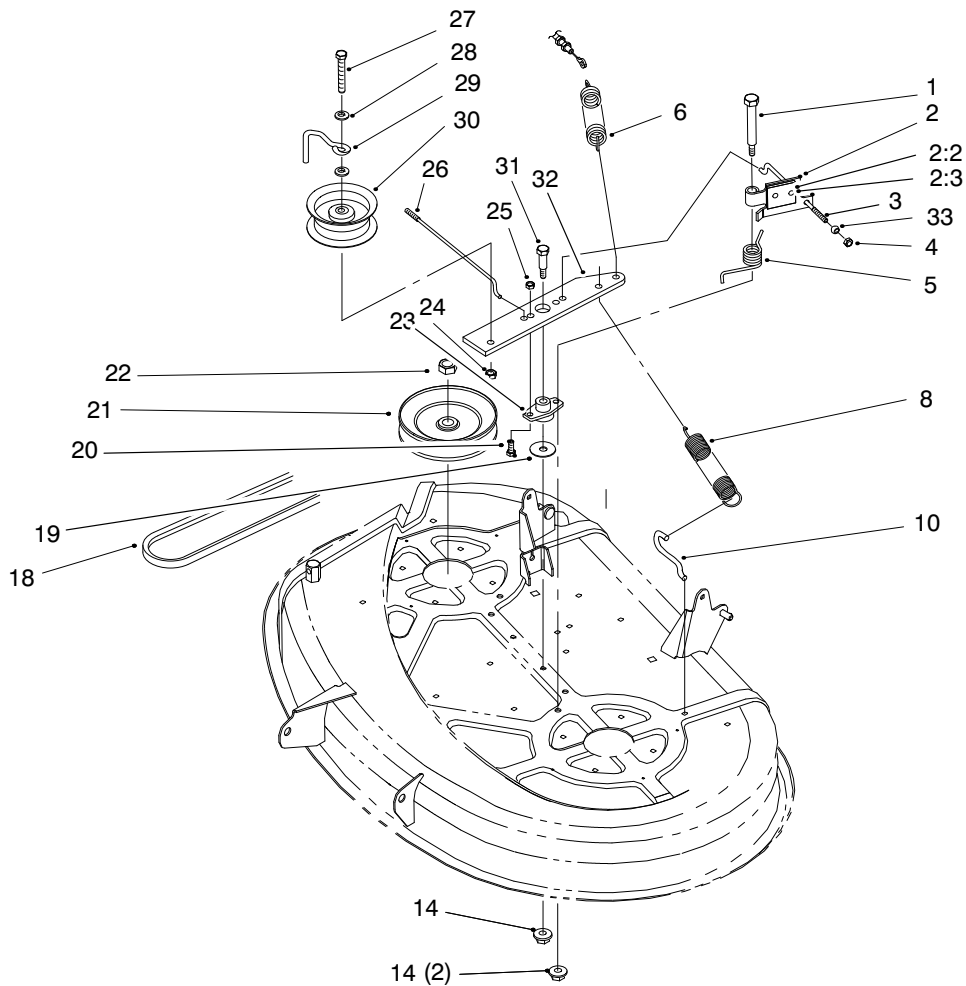


Sheet No.:17

Pulley & Belt Assembly (38" Cutting Unit)

Ref. No.	Part No.	Qty.	Description
1	88-4590	2	Bolt-Shoulder
2	88-6100	2	ASM. - Deck Brake
2:2	56-9830	2	Brake Pad
2:3	3290-282	4	Pop Rivet
3	88-5550	1	Rod -LH Deck Brake
4	3296-42	2	Nut-Lock
5	88-5910	2	Spring - Torsion
6	88-6130	1	Spring - Deck Engage
8	92-8934	1	Spring - Extension
10	88-5970	1	Hook - Return Spring
14	3296-58	3	Nut-Flange
18	88-6250	1	V-Belt
19	3256-68	1	Washer-Flat
20	322-5	2	Screw-HH
21	88-5330	2	Pulley - Deck
22	3219-6	2	Nut-Hex
23	88-4980	1	Bushing - Idler Arm
24	3296-39	1	Nut-Lock
25	3296-29	2	Nut-Lock
26	88-5540	1	Rod -RH Deck Brake
27	323-12	1	Screw
28	3256-24	2	Washer-Flat
29	88-5070	1	Belt Guide - Idler
30	88-5630	1	Pulley - Idler
31	7-0030	1	Shoulder Bolt


Ref. No.	Part No.	Qty.	Description
32	88-4870-03	1	Arm - Idler
33	67-0710	2	Ball - Swivel

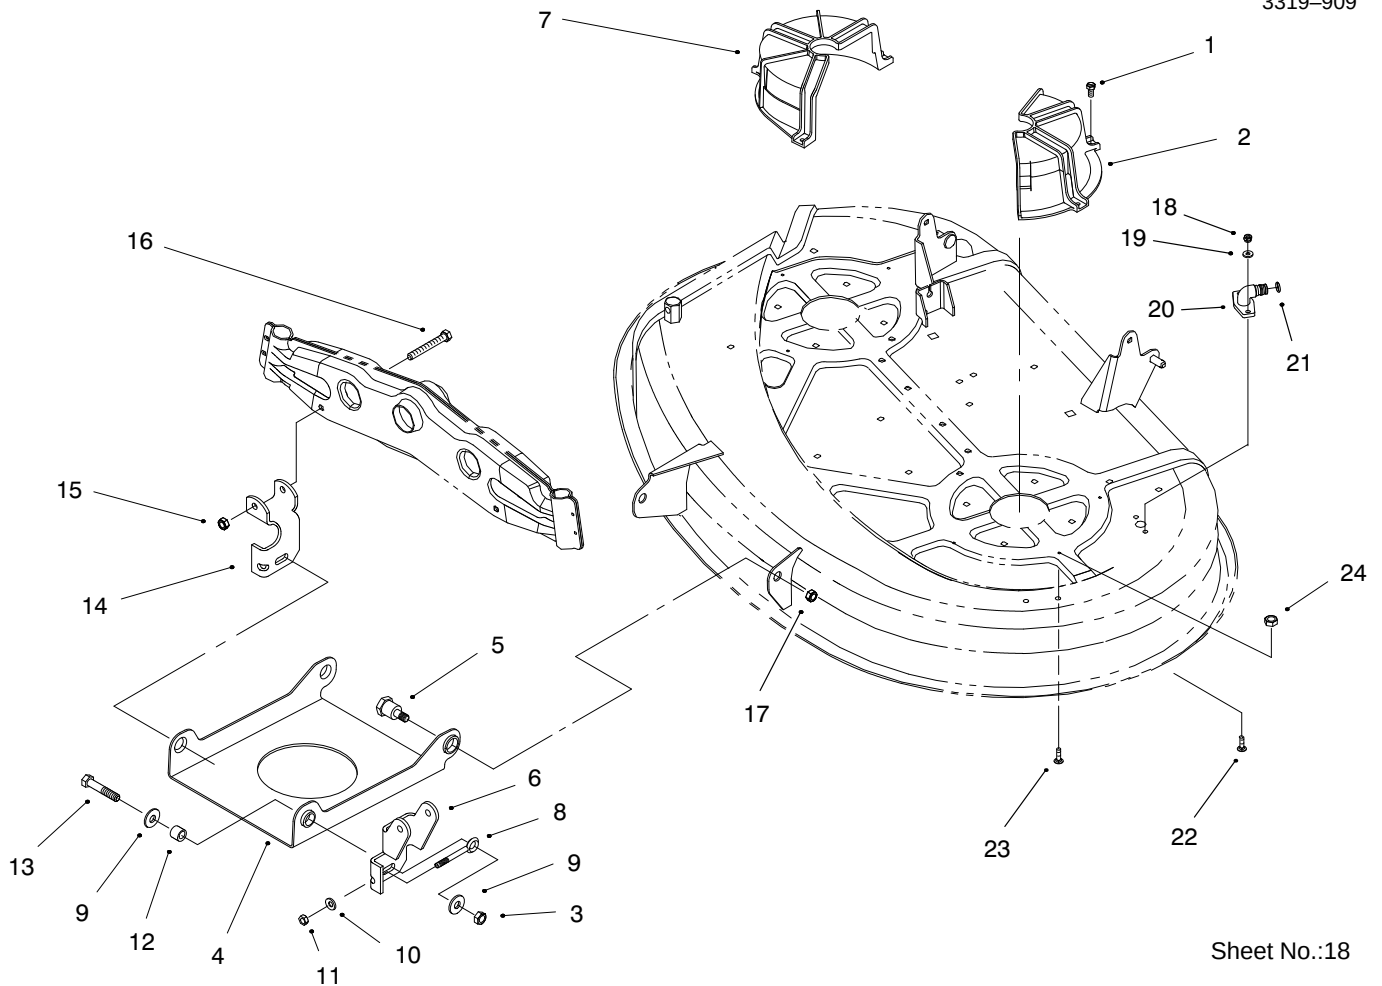

Sheet No.:18

Suspension Assembly (38" Cutting Unit)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	32104-76	5	Screw-Self TAP				
2	88-4030	1	Belt Guide – Deck				
3	3296-39	2	Nut-Lock				
4	93-3881-03	1	Pan – Front Deck Suspens				
5	94-5823	2	Bolt-Shoulder				
6	94-1971-03	1	Bracket-Deck Susp				
7	88-4020	1	Belt Guide – Deck				
8	61-9980	2	Screw-Adjusting				
9	80-6990	4	Washer-Hardened				
10	3256-22	2	Washer-Flat				
11	3296-42	2	Nut-Lock				
12	93-9847	2	Spacer				
13	323-9	2	Screw-HH				
14	94-1970-03	1	Bracket-Deck Susp				
15	3296-29	2	Nut-Lock				
16	322-12	2	Screw HH				
17	3296-23	2	Nut-Lock				
18	3296-16	2	Nut-Lock				
19	3256-1	2	Washer-Flat				
20	95-2747	1	Fitting-Washout				
21	46-6290	1	O-Ring				
22	3229-1	2	Bolt-CARR				
23	322-1	2	Screw-HH				
24	3296-29	2	Nut-Lock				

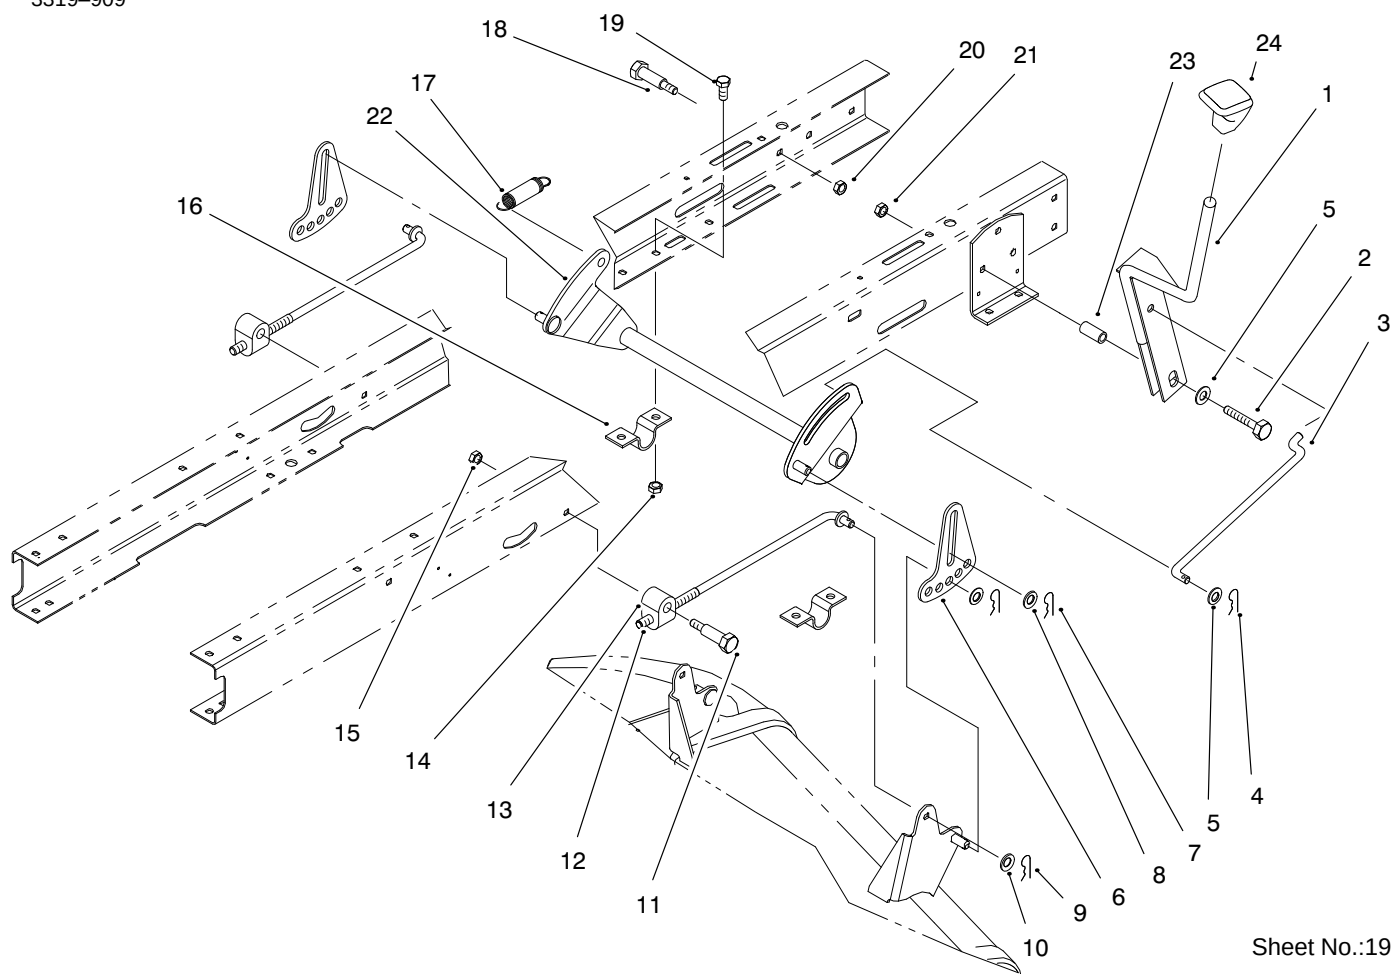


Sheet No.:19

Height of Cut Assembly

Ref. No.	Part No.	Qty.	Description
1	93-3822-03	1	Lever-HOC
2	322-39	1	Screw-HH
3	88-5900	1	Link - HOC
4	3290-307	1	Pin-Cotter
5	3256-24	2	Washer-Flat
6	88-5570-03	2	Link-Adjusting HOC
7	3290-307	4	Pin-Cotter
8	80-6990	4	Washer-Hardened
9	3290-307	2	Pin-Cotter
10	3256-24	2	Washer-Flat
11	7-0030	2	Shoulder Bolt
12	88-5450	2	Rod - Hanger
13	88-4230	2	Trunnion - HOC
14	3296-29	4	Nut-Lock
15	3296-29	2	Nut-Lock
16	88-4730	2	Clamp - HOC Pivot
17	88-6460	1	Spring - Extension
18	7-0030	1	Shoulder Bolt
19	322-3	4	Screw-HH
20	3296-29	1	Nut-Lock
21	3296-29	1	Nut-Lock
22	88-5110-03	1	Pivot W.a. (H.o.c.)
23	65-7210	1	Spacer
24	94-5565	1	Knob - Control

Ref. No.	Part No.	Qty.	Description

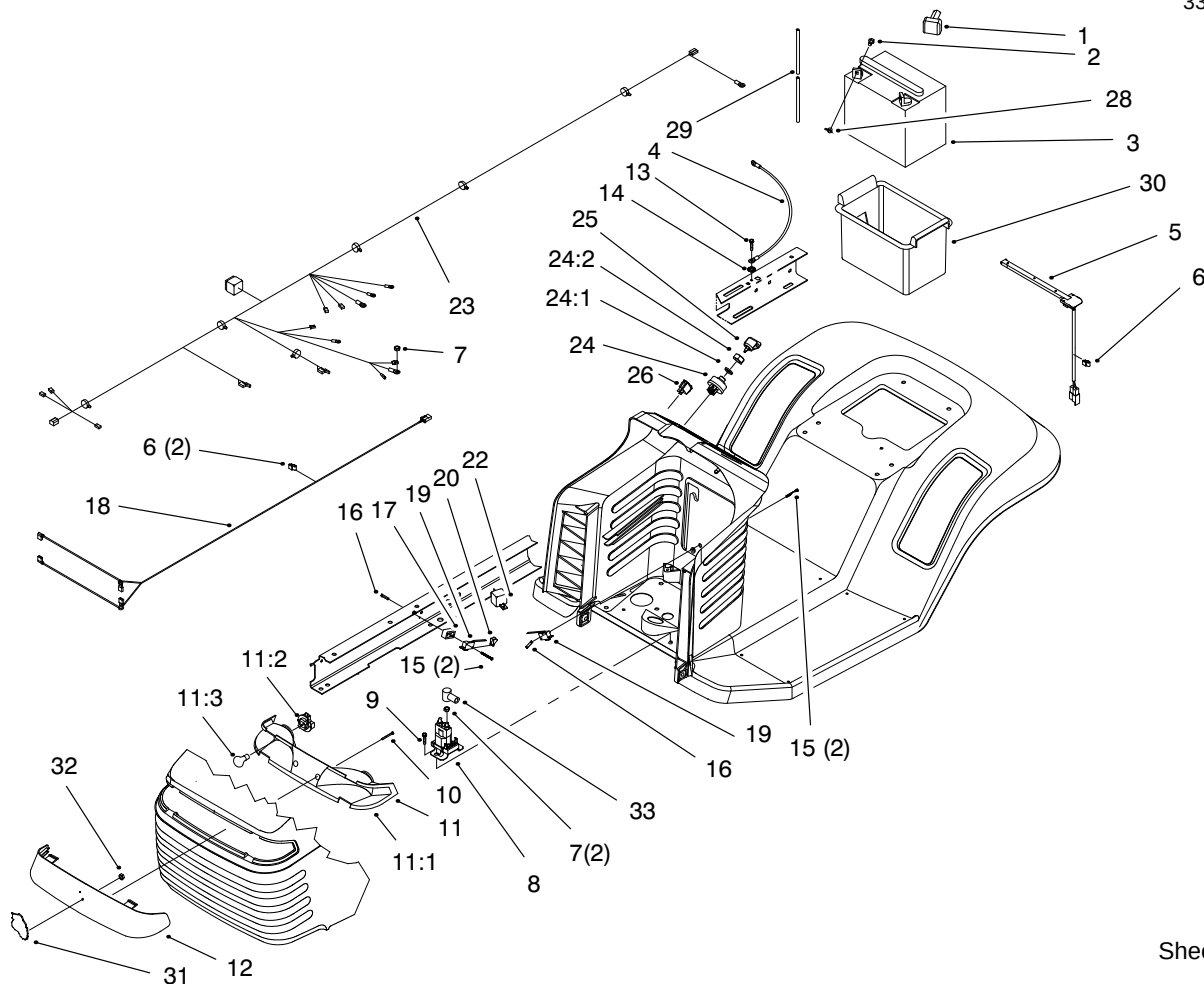


Sheet No.:20

Electrical Assembly

Ref. No.	Part No.	Qty.	Description
1	28-8080	1	Boot-Terminal
2	321-4	2	Screw-HH
3	80-2600	1	Battery - 7 Plate
4	44-8110	1	Battery Cable -Neg
5	38-1420	1	Switch-Seat
6	702366	1	Clip-Wire Retainer
6	702366	2	Clip-Wire Retainer
7	32149-2	3	Nut-Hex Lock
8	92-9845	1	Solenoid
9	9266714	2	Screw-HWHTF
10	32144-32	2	Screw-Plastic
11	88-3970	1	Reflector-Lamp
11:1	93-8741	1	Reflector - Headlight
11:2	111686	2	Socket Assembly
11:3	7228	2	Bulb-Light
12	88-3960	1	Lense - Headlights
13	9266714	1	Screw-HWHTF
14	3255-7	1	Washer-Lk
15	93-0539	4	Screw-PPH
16	3290-354	2	Nut-Speed
17	88-4880	1	Spacer - Microswitch
18	88-4320	1	Harness-Wire
19	88-9932	2	Switch - Micro
20	93-3240	1	Seal-Plunger
22	116397	1	Relay
23	93-3810	1	Wire Harness

Ref. No.	Part No.	Qty.	Description
24	88-9830	1	Switch-Ignition
24:1	3254-5	1	Washer-Lock
24:2	218-461	1	Nut-HH (F/W Sw)
25	63-8360	1	Key-Ignition
26	92-8875	1	Switch-Rocker
28	32103-22	2	Nut-Wing
29	56-2540	1	Tube-Vent Use w/80-2600
30	88-4040	1	Battery Box
31	80-2240	1	Plate-Name Grille
32	3290-299	1	Nut - Tinnerman
33	94-5362	1	Boot-Terminal Insulator

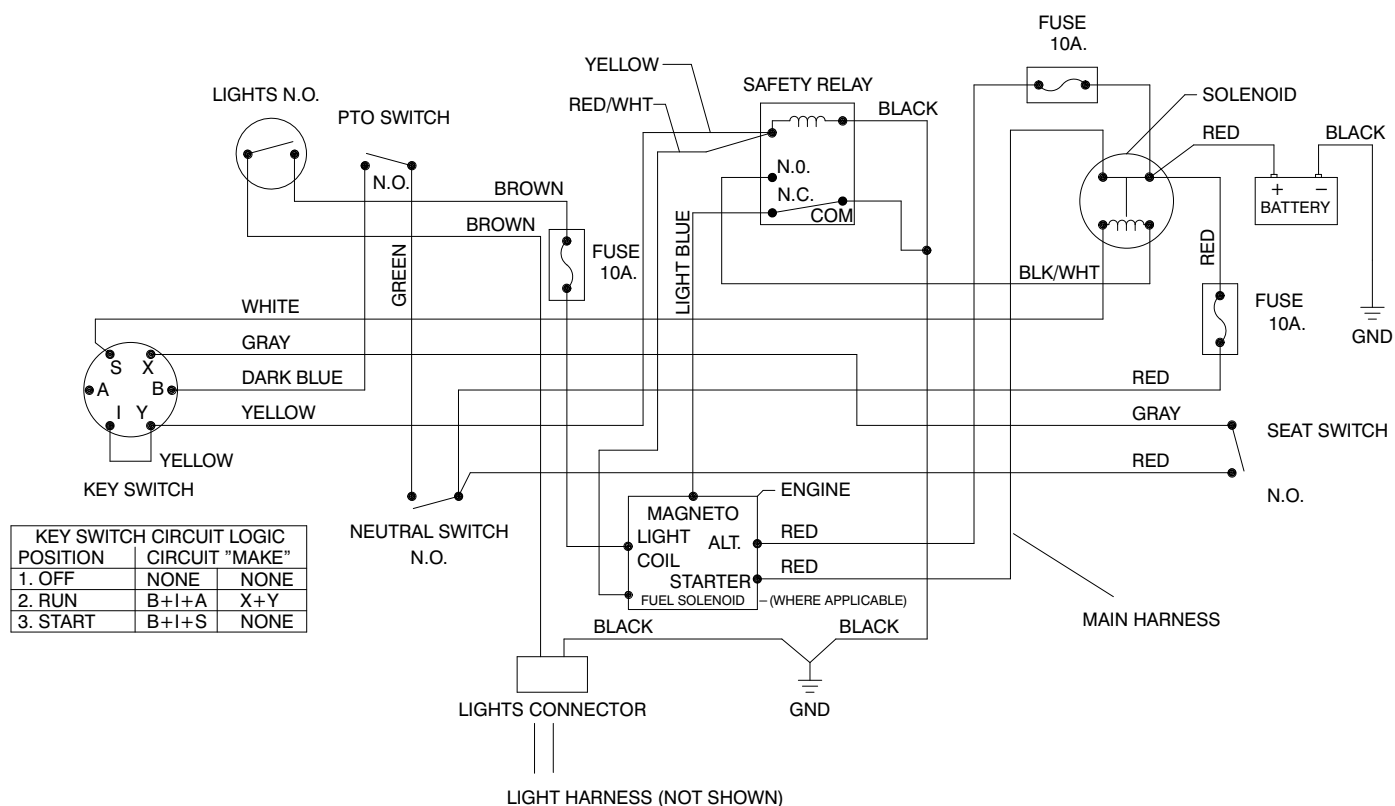


Sheet No.:21

Electrical Schematic

Ref. No.	Part No.	Qty.	Description
*	218-578	3	Fuse-10 Amp

Ref. No.	Part No.	Qty.	Description

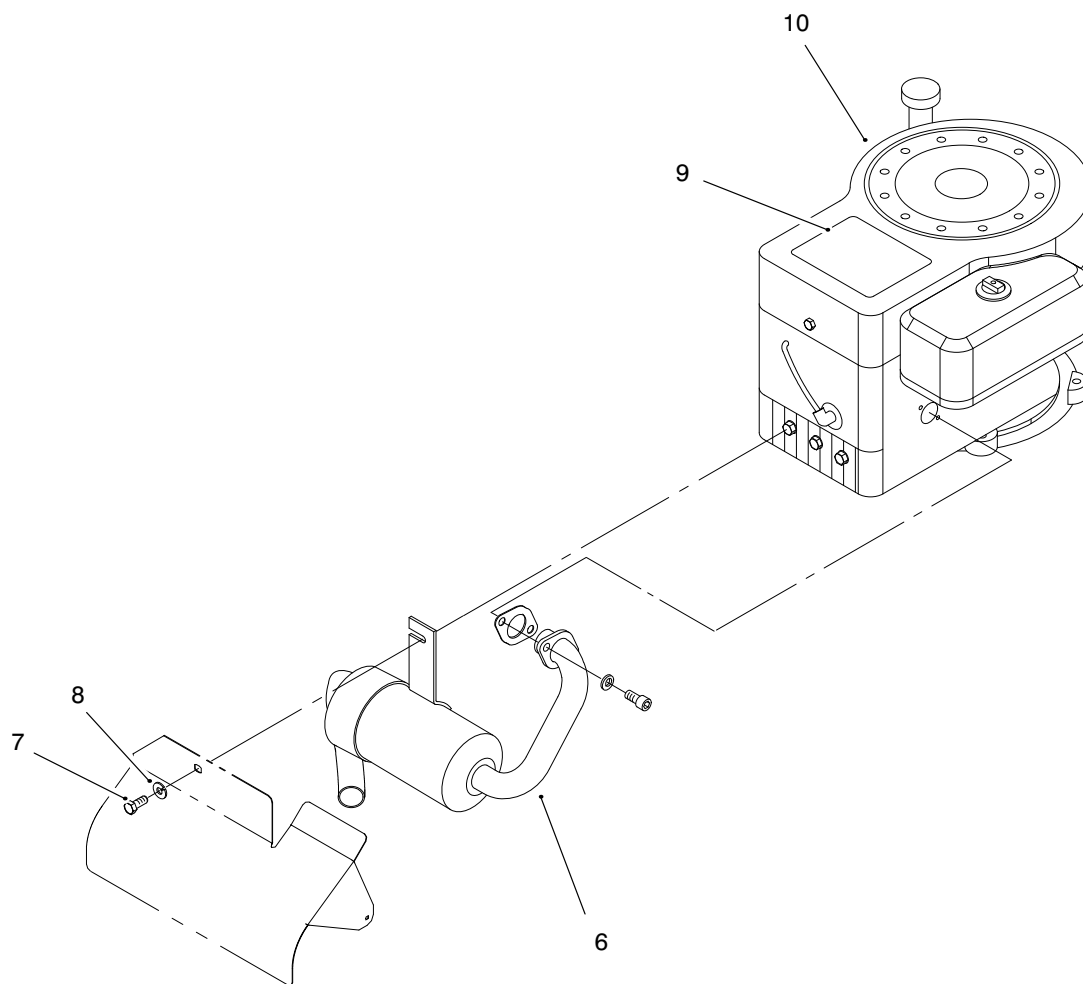

Sheet No.:25


Engine Assembly

Ref. No.	Part No.	Qty.	Description
6	88-6480	1	Muffler W.a.
7	321-4	1	Screw-HH
8	3253-3	1	Washer-Lock
9	92-8757	1	Decal - Engine
10		1	Engine-13 Hp B&s (Carb)



Battery Assembly

Ref. No.	Part No.	Qty.	Description

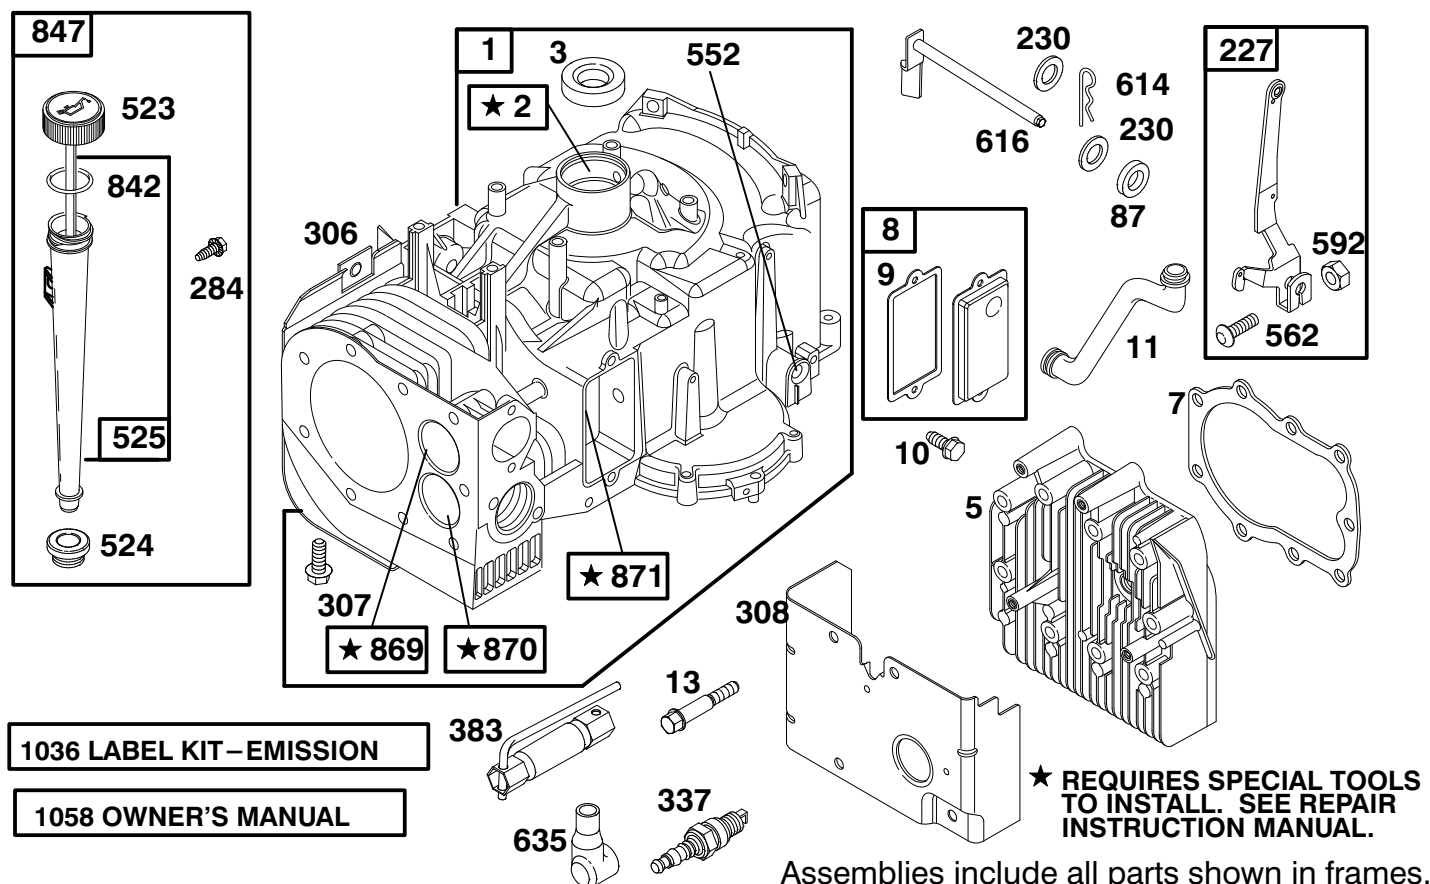

ENGINE BRIGGS & STRATTON MODEL 28M707-1122-E1


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	496413	Cylinder Assembly	1	525	496113	Tube-Oil Fill	1
2	399265	Bushing	1	552	491986	Bushing-Gov. Crank	1
★3	391086	Seal-Oil	1			Note: Includes Seal, Ref. No. 87	
5	494240	Head-Cylinder	1	562	94907	Bolt-Governor Lever	1
†★7	271866	Gasket-Cylinder Head	1	592	231978	Nut-Hex.	1
8	495735	Breather Assembly	1	614	93306	Pin-Cotter	1
†★9	27803	Gasket-Valve Cover	1	616	495157	Crank-Governor	1
10	94621	Screw-Sem	1	635	66538	Boot-Spark Plug	1
11	280100	Tube-Breather	1	★842	270920	Seal-O-Ring	1
13	94622	Screw-Cylinder Head	1	847	496415	Dipstick/Tube Assembly	1
★87	491323	Seal-Governor Shaft	1	869	261463	Seat-Intake Valve	1
227	493935	Lever-Governor	1	870	262924	Seat-Exhaust Valve	1
230	94927	Washer-Flat	1	871	261961	Bushing-Valve Guide (Exhaust)	1
284	94903	Screw-Shoulder	1			Note: 231218 Bushing-Valve	
306	224545	Shield-Cylinder	1			Guide (Intake)	1
307	94930	Screw-Hex. Head	1	1036	499362	Label Kit-Emission	1
308	491490	Cover-Cylinder Head	1	1058	273681	Owner's Manual	1
337	802592	Plug-Spark	1				
383	89838	Wrench-Spark Plug	1				
523	495230	Dipstick	1				
★524	281370	Seal-Fill Tube	1				

★ Included in Gasket Set-Part No. 494241.

◆ Included in Carburetor Gasket Set-Part No. 494385.

● Included in Carburetor Kit-Part No. 499220.

† Included in Valve Overhaul Gasket Set-Part No. 498539.

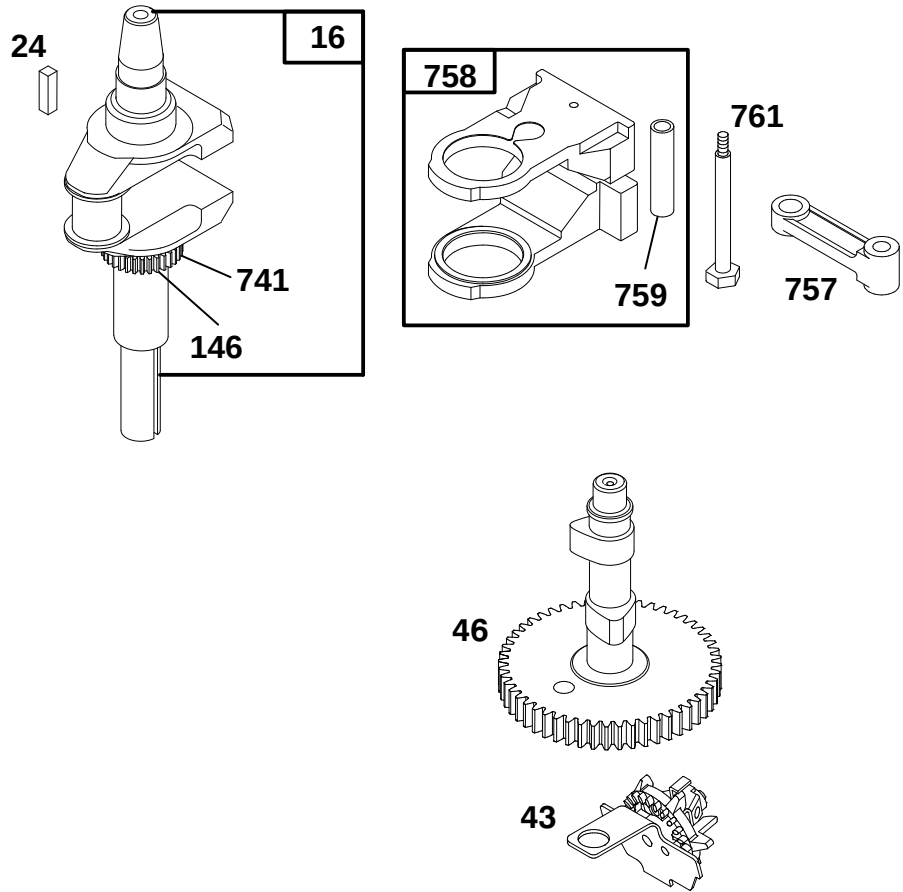

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28M707-1122-E1

Ref. No.	Part No.	Description	No. Used
16	498971	Crankshaft	1
24	222698	Key-Flywheel	1
43	490815	Governor/Oil Slinger	1
46	212897	Gear-Cam	1
146	94196	Key-Timing	1
741	262932	Gear-Timing	1

Ref. No.	Part No.	Description	No. Used
757	213998	Link-Counterweight	1
758	399891	Counterweight	1
759	230787	Pin-Counterweight	1
761	94593	Screw-Counterweight	1

★ Included in Gasket Set-Part No. 494241.
◆ Included in Carburetor Gasket Set-Part No. 494385.

● Included in Carburetor Kit-Part No. 499220.
† Included in Valve Overhaul Gasket Set-Part No. 498539.

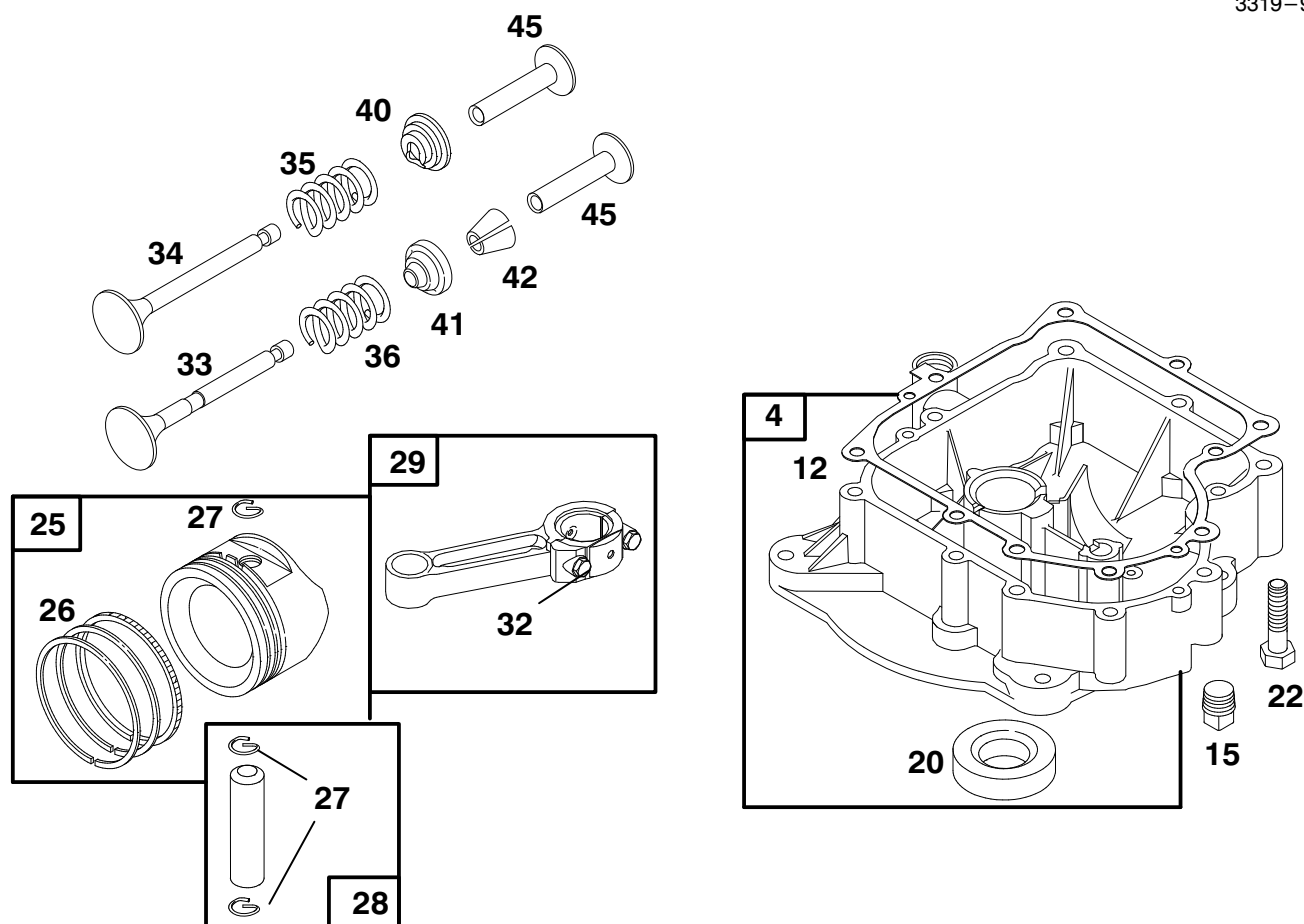

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-1122-E1


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
4	494238	Sump-Engine	1	27	263129	Lock-Piston Pin	1
★12	271916	Gasket-Crankcase (.015" Thick)	1	28	498319	Pin Assy.-Piston (Standard)	1
★	271997	Gasket-Crankcase (.005" Thick)	1		498320	Pin Assy.-Piston (.005" O.S.)	1
★	271996	Gasket-Crankcase (.009" Thick)	1	29	490348	Rod Assembly-Connecting	1
15	94239	Plug-Oil Drain	1		490469	Rod-Connecting (020" U.S. Crankpin Bore)	1
★20	291675	Seal-Oil	1	32	94671	Screw-Connecting Rod	1
22	94624	Screw-Base Mtg. Sem	1	33	262246	Valve-Exhaust	1
25	499282	Piston Assy. (Std.)	1	34	262247	Valve-Intake	1
	499286	Piston Assy. (.010" O.S.)	1	35	65906	Spring-Intake Valve	1
	499290	Piston Assy. (.020" O.S.)	1	36	26828	Spring-Exhaust Valve	1
	499294	Piston Assy. (.030" O.S.)	1	40	221596	Retainer-Intake Valve	1
26	391780	Ring Set-Piston (Std.)	1	41	292260	Retainer-Exhaust Valve	1
	391781	Ring Set-Piston (.010" O.S.)	1	42	494553	Keeper-Valve	1
	391782	Ring Set-Piston (.020" O.S.)	1	45	262248	Tappet-Valve	1
	391783	Ring Set-Piston (.030" O.S.)	1				

★ Included in Gasket Set-Part No. 494241.

◆ Included in Carburetor Gasket Set-Part No. 494385.

● Included in Carburetor Kit-Part No. 499220.

† Included in Valve Overhaul Gasket Set-Part No. 498539.

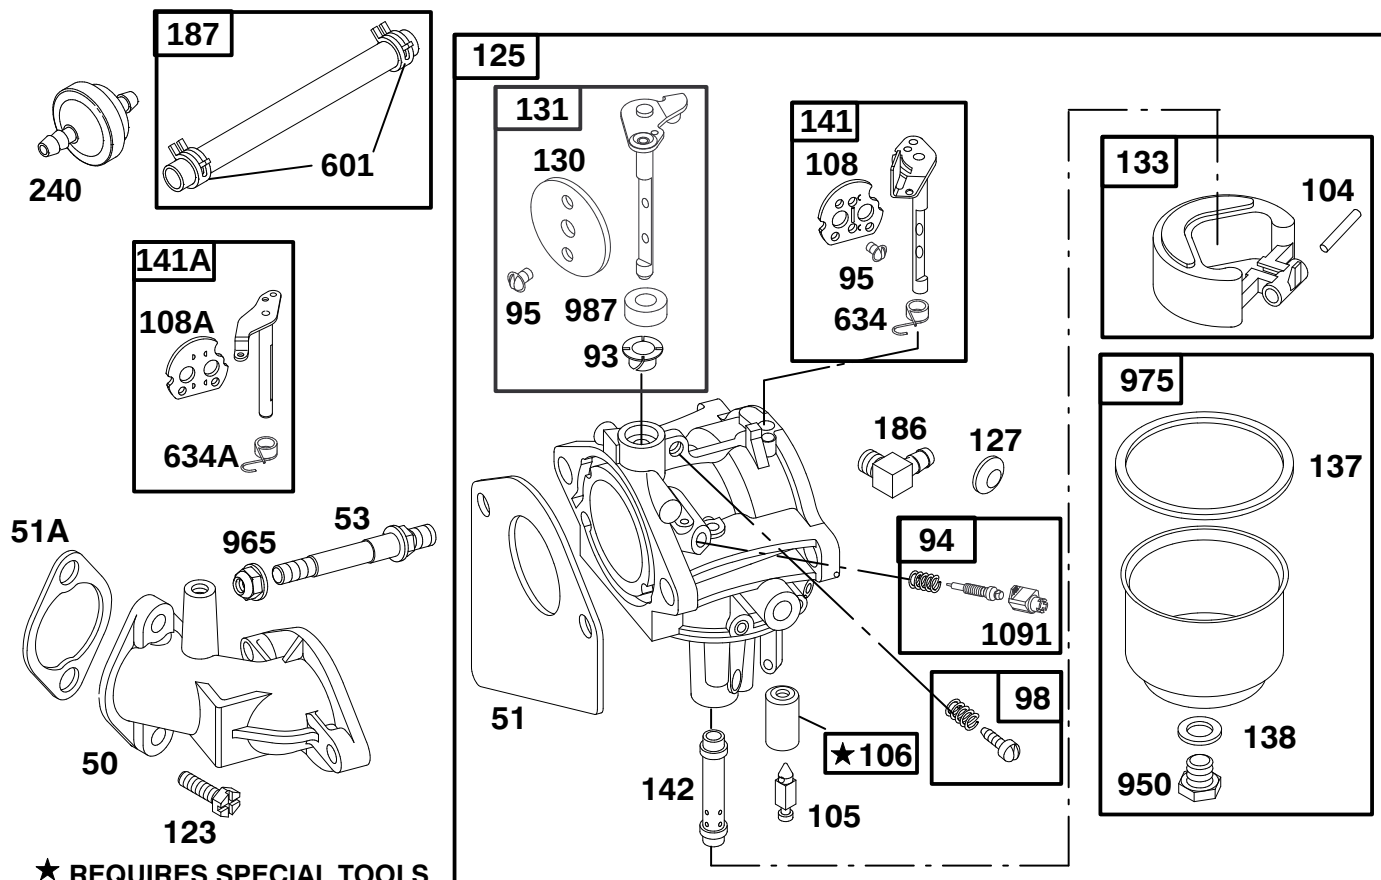

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-1122-E1

Ref. No.	Part No.	Description	No. Used
50	213819	Manifold-Intake	1
◆51	272465	Gasket-Carburetor (Carb. to Manifold)	1
†★51A	272554	Gasket-Carburetor (Manifold to Cylinder)	1
53	94637	Stud-Carb. Mtg.	1
●93	281346	Bushing-Throttle Shaft	1
94	498030	Valve-Needle	1
●95	94098	Screw-Throttle	1
98	495800	Screw-Idle Speed	1
●104	231789	Pin-Float Hinge	1
●105	231855	Valve-Float Needle	1
●106	231854	Inlet Valve Seat	1
108	224667	Valve-Choke	1
108A	224540	Valve-Choke	1
123	94913	Screw-Torx® Hex.	1
125	498027	Carburetor Assembly	1
●127		Plug-Welch (Sold in Kit Only)	1
130	224539	Valve-Throttle	1
131	494379	Shaft Kit-Throttle	1
133	494381	Float-Carburetor	1
◆137	281165	Gasket-Float Bowl	1


Ref. No.	Part No.	Description	No. Used
◆◆138	281164	Washer-Float Bowl Screw	1
141	495097	Shaft Kit-Choke (Manual Choke)	1
141A	495931	Shaft Kit-Choke (Choke-A-Matic)	1
●142	497566	Nozzle-Carburetor (Standard)	1
	497567	Nozzle-Carburetor (High Alt.)	1
186	493496	Connector-Fuel	1
187	298049	Line-Fuel	1
240	394358	Filter-Fuel	1
601	93053	Clamp-Hose	1
618	262803	Spring-Choke Return	1
●634	494453	Seal-Spring Assembly	1
●634A	494455	Seal-Spring Assembly	1
950	94642	Screw-Fuel Bowl	1
965	94010	Nut-Hex.	1
975	494378	Bowl-Float	1
●987	281166	Seal-Throttle Shaft	1
1091	281364	Cap-Limiter	1

★ Included in Gasket Set-Part No. 494241.

◆ Included in Carburetor Gasket Set-Part No. 494385.

● Included in Carburetor Kit-Part No. 499220

† Included in Valve Overhaul Gasket Set-Part No. 498539.

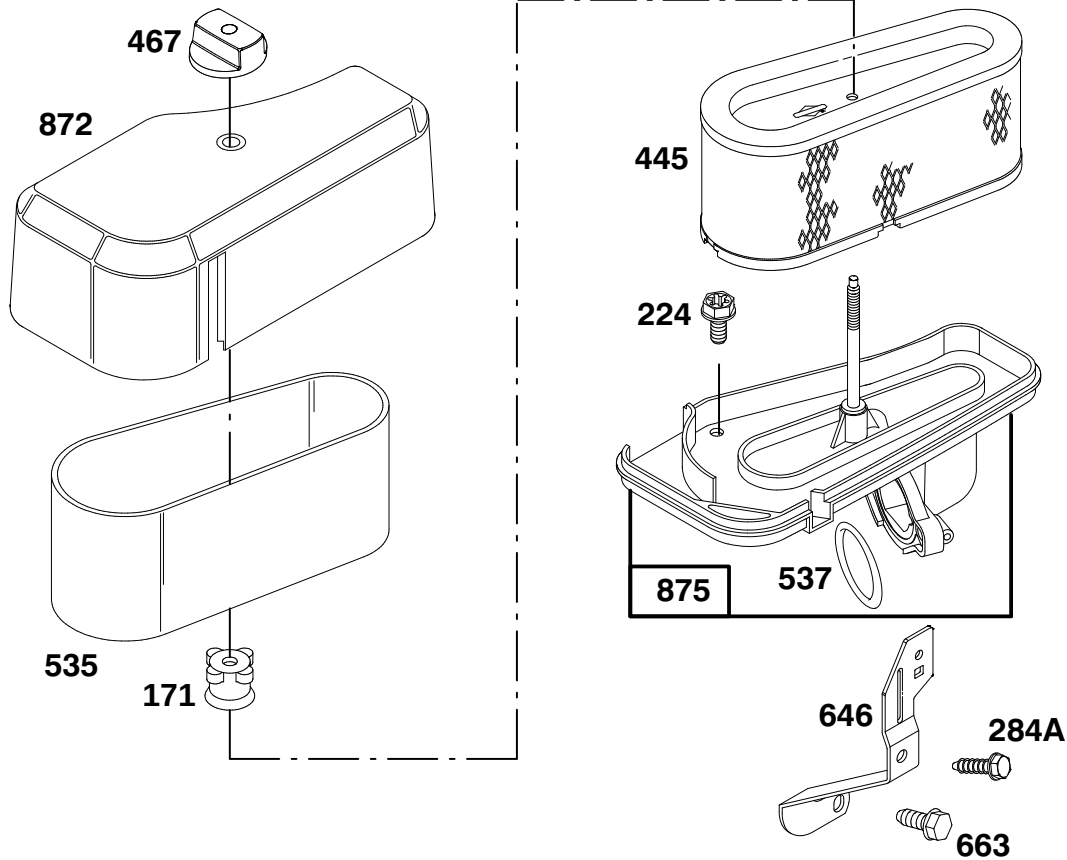

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28M707-1122-E1

Ref. No.	Part No.	Description	No. Used
171	281051	Nut-Air Cleaner	1
224	94905	Screw-Torx® Hex.	1
284A	94704	Screw Hex. Head	1
445	496894	Filter-A/C Element	1
467	493903	Nut-Air Cleaner	1
535	272403	Filter-Precleaner	1

Ref. No.	Part No.	Description	No. Used
†★537	281106	Gasket-Air Cleaner	1
646	224546	Brace-Air Cleaner	1
663	94620	Screw-Hex. Hd.	1
872	281361	Cover-Air Cleaner	1
875	494237	Base-Air Cleaner	1

★ Included in Gasket Set-Part No. 494241.
 ◆ Included in Carburetor Gasket Set-Part No. 494385.

● Included in Carburetor Kit-Part No. 499220
 † Included in Valve Overhaul Gasket Set-Part No. 498539.

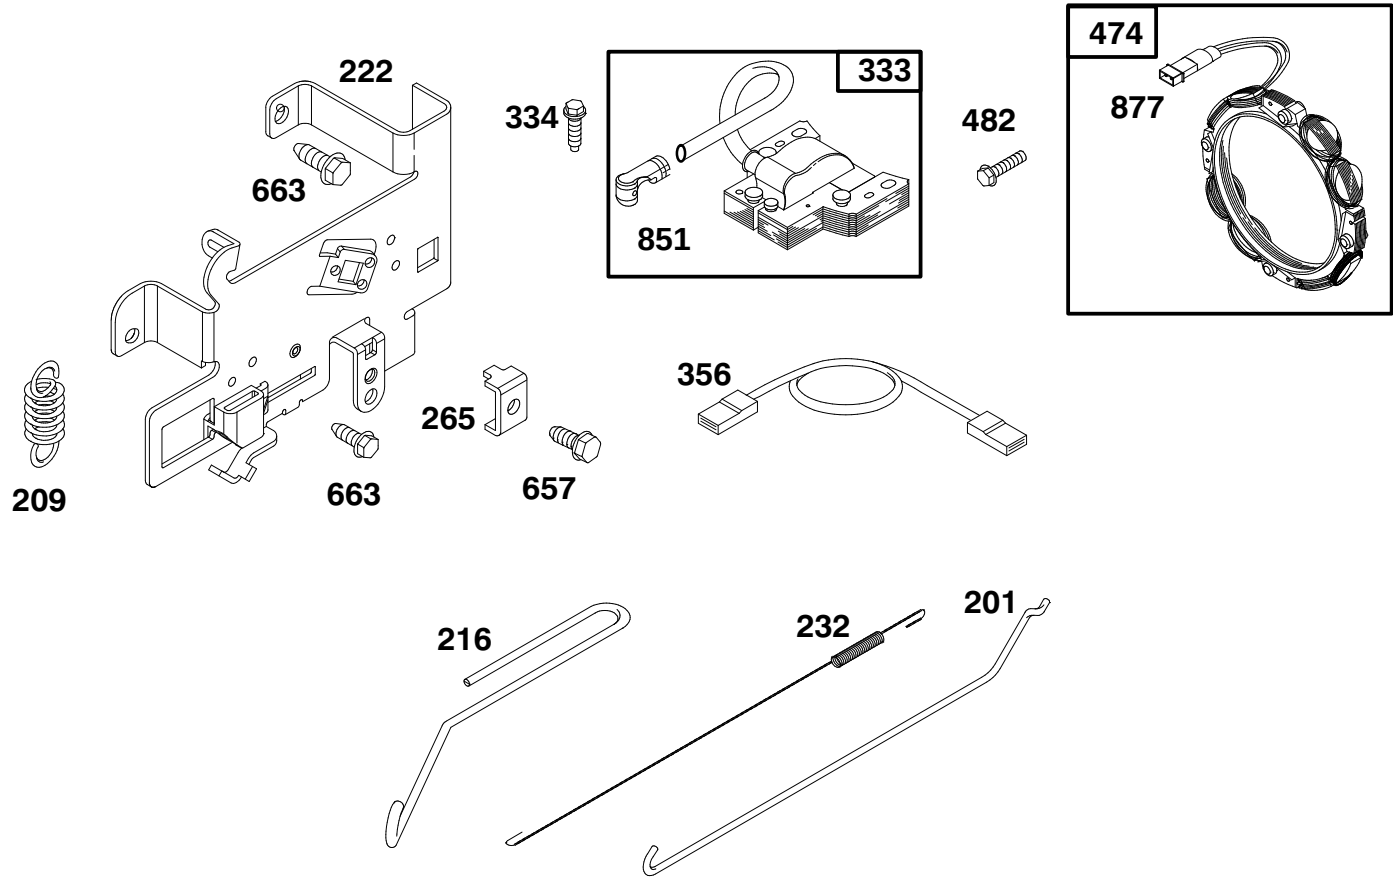

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28M707-1122-E1

Ref. No.	Part No.	Description	No. Used
201	262767	Link-Governor	1
209	260871	Spring-Governor	1
216	262766	Link-Choke	1
222	495611	Bracket-Control	1
232	262785	Spring-Link	1
265	221535	Clamp-Casing	1
333	492341	Armature-Magneto	1
334	94731	Screw-Hex.	1

Ref. No.	Part No.	Description	No. Used
356	494328	Wire-Stop	1
474	393474	Alternator	1
482	93621	Screw-Sem	1
657	94906	Screw-Sem	1
663	94929	Screw-Hex. Head	1
851	493880	Terminal-Ignition Cable	1
877	393456	Wire-Alternator	1

★ Included in Gasket Set-Part No. 494241.
◆ Included in Carburetor Gasket Set-Part No. 494385.

● Included in Carburetor Kit-Part No. 499220
† Included in Valve Overhaul Gasket Set-Part No. 498539.

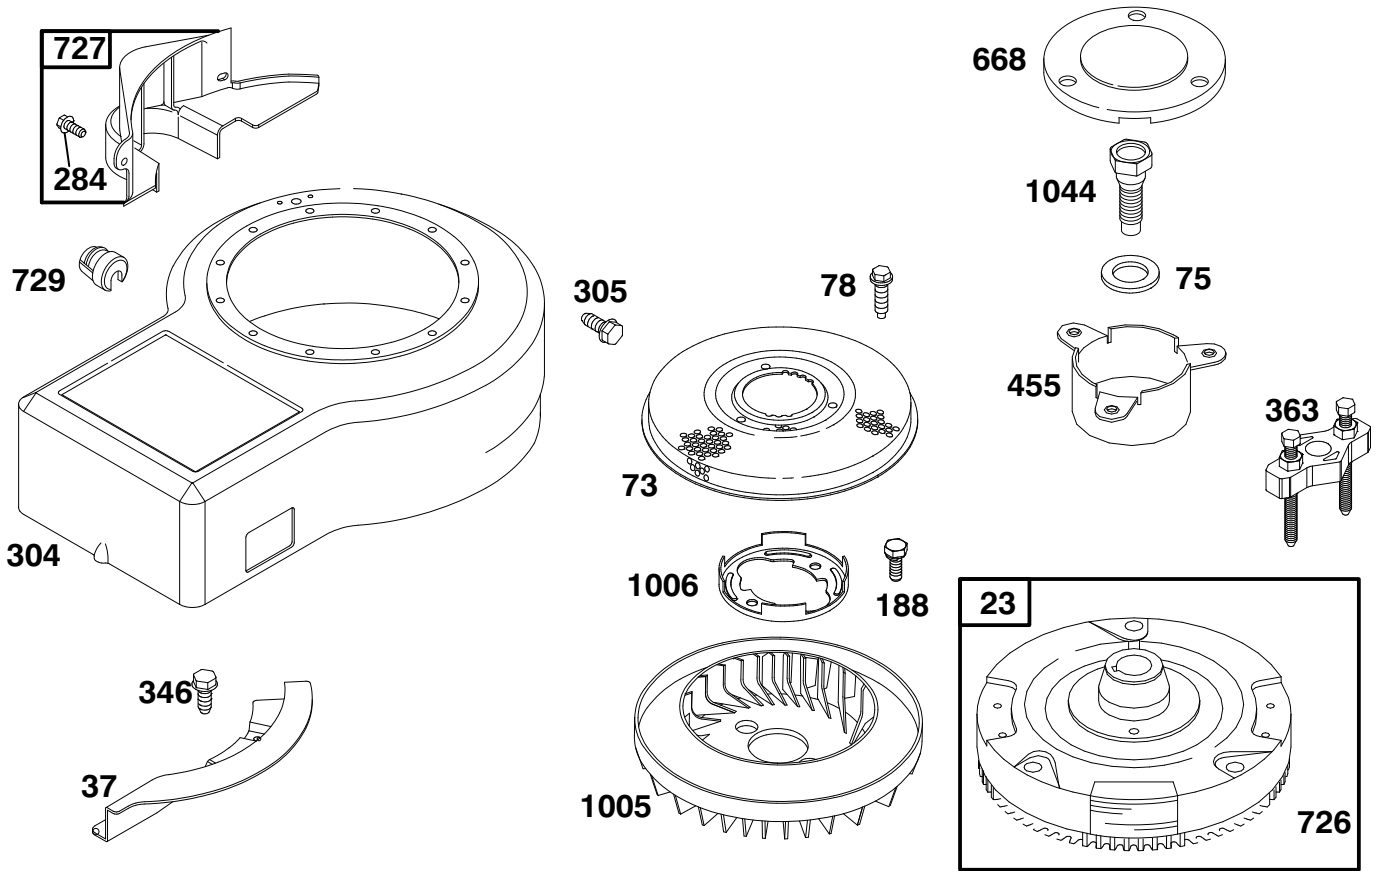

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28M707-1122-E1

Ref. No.	Part No.	Description	No. Used
23	492326	Flywheel	1
37	224502	Guard-Flywheel	1
73	224948	Screen-Rotating	1
75	225136	Washer-Flywheel	1
78	94626	Screw-Phillips	1
188	94627	Screw-Sem	1
284	94903	Screw-Shoulder	1
304	496431	Housing-Blower	1
305	94786	Screw-Hex.	1
346	94896	Screw-Hex. Head	1
363	19203	Puller-Flywheel	1

Ref. No.	Part No.	Description	No. Used
455	222561	Cup-Flywheel	1
668	280848	Spacer	1
726	392134	Gear-Ring (Includes Mtg Hardware)	1
727	490324	Cover-Starter Drive	1
729	281159	Clip-Wire	1
1005	281400	Fan-Flywheel	1
1006	224413	Retainer-Fan	1
1044	94673	Screw-Shoulder	1

★ Included in Gasket Set-Part No. 494241.
 ◆ Included in Carburetor Gasket Set-Part No. 494385.

● Included in Carburetor Kit-Part No. 499220
 † Included in Valve Overhaul Gasket Set-Part No. 498539.

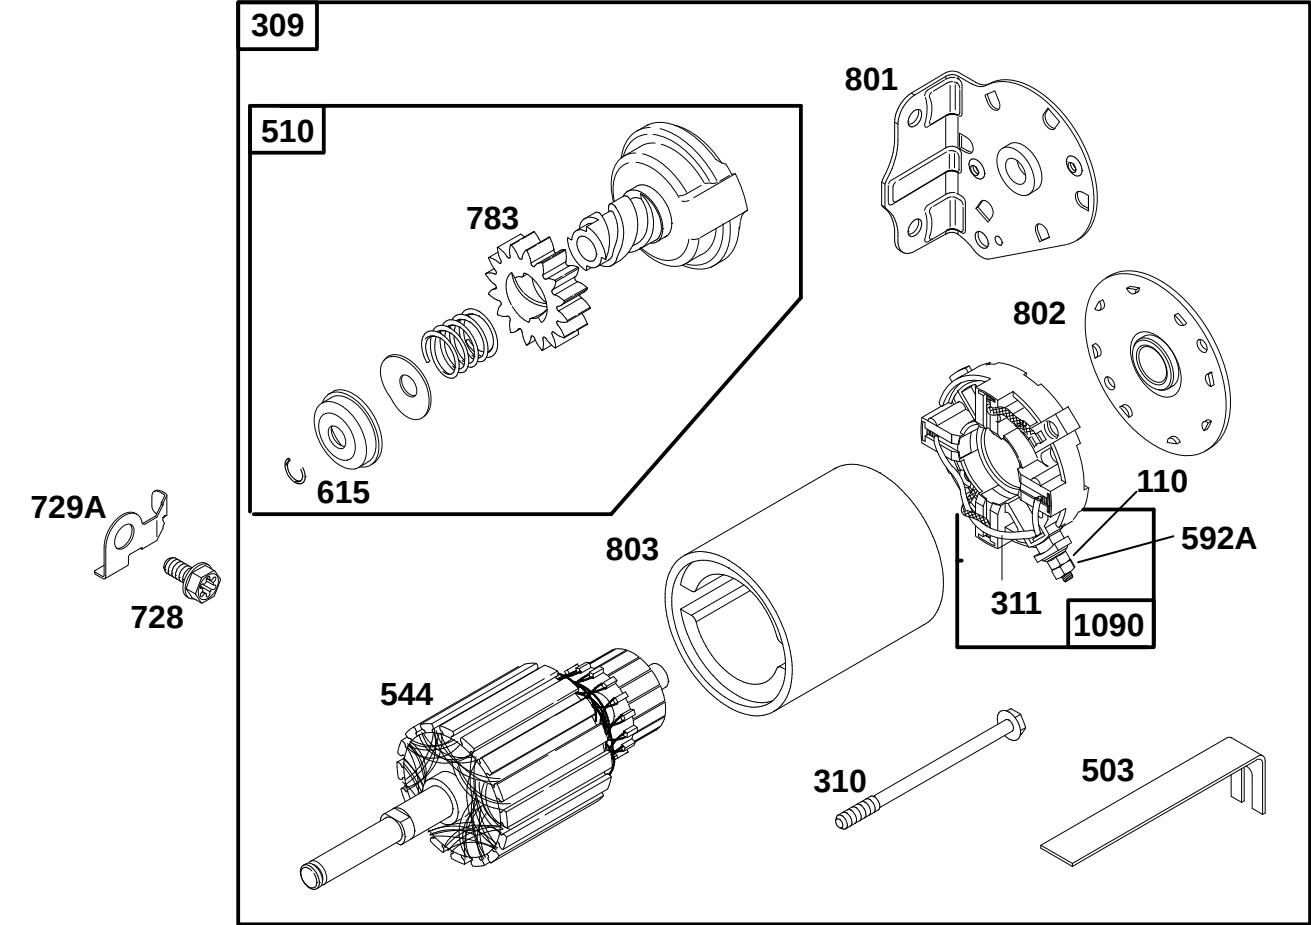

Assemblies include all parts shown in frames.





ENGINE BRIGGS & STRATTON MODEL 28M707-1122-E1

Ref. No.	Part No.	Description	No. Used
110	225137	Washer-Flat	1
309	497595	Motor-Starter	1
310	94003	Bolt-Thru	1
311	497608	Brush Set	1
503	806000	Strap-Starter	1
510	497606	Drive-Starter	1
544	497603	Armature-Starter	1
592A	92278	Nut-Hex.	1

Ref. No.	Part No.	Description	No. Used
615	263080	Ring-Retaining	1
728	94951	Screw-Torx®	1
729A	225170	Clip-Wire	1
783	280104	Gear-Starter	1
801	394856	Cap-Drive	1
802	497607	Cap-End	1
803	497604	Housing-Starter	1
1090	497605	Retainer-Brush	1

★ Included in Gasket Set-Part No. 494241.
◆ Included in Carburetor Gasket Set-Part No. 494385.

● Included in Carburetor Kit-Part No. 499220
† Included in Valve Overhaul Gasket Set-Part No. 498539.

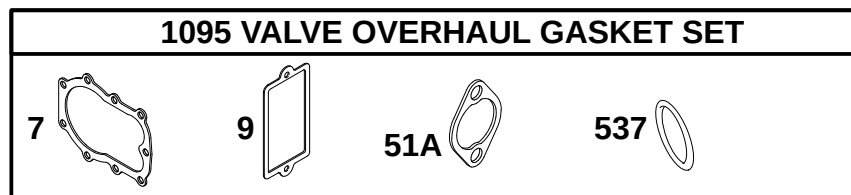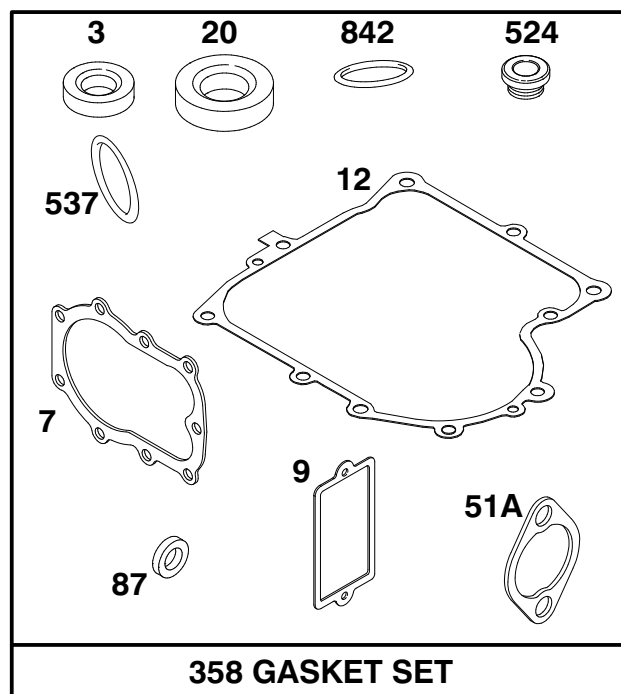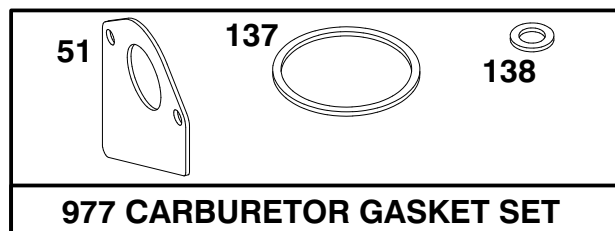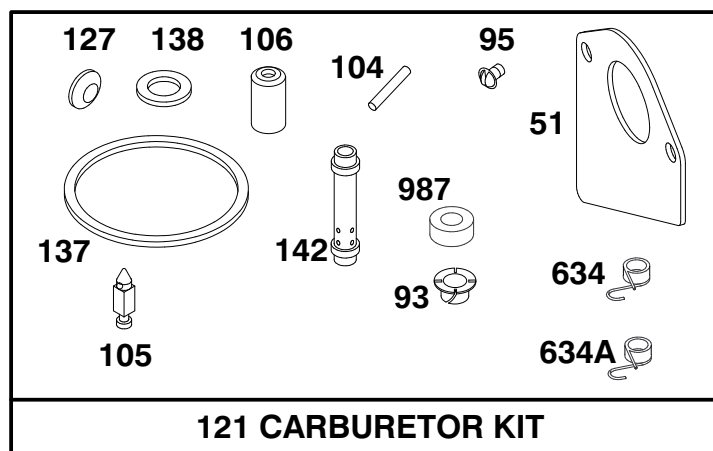

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-1122-E1


Ref. No.	Part No.	Description	No. Used
★3	391086	Seal—Oil	1
★†7	271866	Gasket—Cylinder Head	1
★†9	27803	Gasket—Valve Cover	1
★12	271916	Gasket—Crankcase (.015" Thick)	1
★	271997	Gasket—Crankcase (.005" Thick)	1
★	271996	Gasket—Crankcase (.009" Thick)	1
★20	291675	Seal—Oil	1
◆●51	272465	Gasket—Carburetor (Carb. to Manifold)	1
★†51A	272554	Gasket—Carburetor (Manifold to Cylinder)	1
★87	491323	Seal—Governor Shaft	1
●93	281346	Bushing—Throttle Shaft	1
●95	94098	Screw—Throttle	1
●104	231789	Pin—Float Hinge	1

Ref. No.	Part No.	Description	No. Used
●105	231855	Valve—Float Needle	1
●106	231854	Seat—Inlet	1
121	499220	Carburetor Kit	1
●127		Plug—Welch (Sold in Kit Only)	1
◆●137	281165	Gasket—Float Bowl	1
◆●138	281164	Washer—Float Bowl Screw	1
●142	494566	Nozzle—Carburetor	1
358	494241	Gasket Set	1
★524	281370	Seal—Fill Tube	1
★†537	281106	Gasket—Air Cleaner	1
●634	494453	Seal—Spring Assembly	1
●634A	494455	Seal—Spring Assembly	1
★842	270920	Seal—O-Ring	1
977	494385	Carburetor Gasket Set	1
●987	281166	Seal—Throttle Shaft	1
1095	498539	Gasket Set—Valve Overhaul	1

★ Included in Gasket Set—Part No. 494241.
 ◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 499220
 † Included in Valve Overhaul Gasket Set—Part No. 498539.

PEERLESS TRANSAXLE MODEL MST 205-509

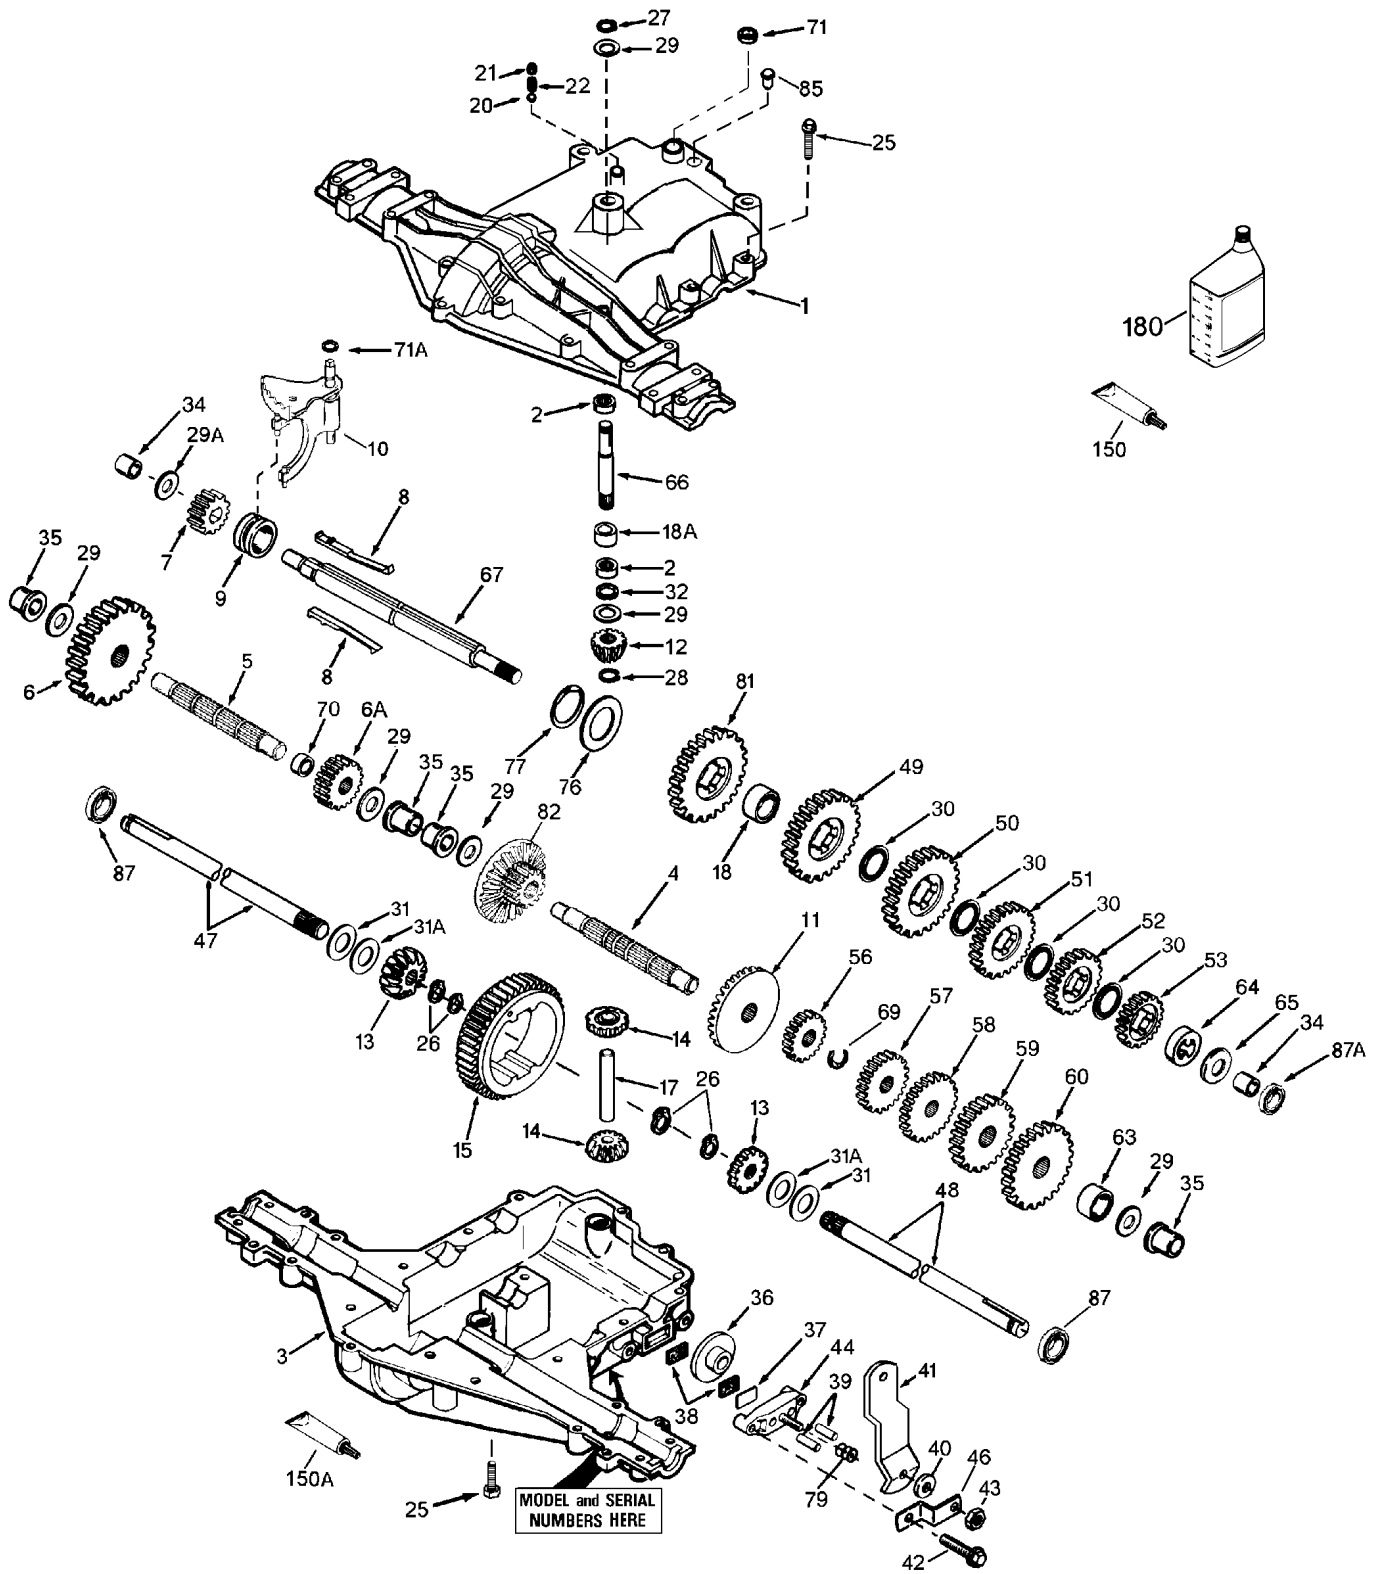

PEERLESS TRANSAXLE MODEL MST 205–509

Ref. No.	Part No.	Description	No. Used
1	772137	Transaxle Cover	1
2	780086A	Needle Bearing	2
3	770123	Transaxle Case	1
4	776395	Countershaft	1
5	776397	Output Shaft	1
6	778331	Spur Gear (38 teeth)	1
6A	778332	Spur Gear (15 teeth–steel)	1
7	778330	Spur Gear (11 teeth–steel)	1
8	792136A	Shift Key	2
9	784352	Shift Collar	1
10	784378	Shift Rod & Fork	1
11	778334	Bevel Gear (30 teeth)	1
12	778309	Input Bevel Pinion (13 teeth)	1
13	778327	Bevel Gear (16 teeth–steel)	2
		(Incl. 14)	2
14	778327	Bevel Gear (16 teeth–steel)	2
		(Incl. 13)	2
15	778312A	Ring Gear (43 teeth)	1
17	786139	Drive Pin	1
18	786102	Spacer	1
18A	786175	Spacer	1
20	792077	Ball 5/16" dia	1
21	792078	Set Screw	1
22	792079	Spring	1
25	792073	Screw	18
26	792125	Retaining Ring (pkg of 2)	4
27	792035	Retaining Ring	1
28	788040	Retaining Ring	1
29	780072	Washer	6
29A	780160	Washer	1
30	780108	Washer	4
31	780001	Washer (.056 wide)	2
		(USE AS NEEDED)	2
31A	780195	Flat Washer (.062 wide)	2
32	788083	Oil Seal	1
34	780194	Bushing	2
35	780193	Flanged Bushing	4
36	790075	Brake Disk	1
37	790007	Brake Pad Plate	1
38	799021	Brake Pad (pkg of 2)	2

Ref. No.	Part No.	Description	No. Used
39	786026	Dowel Pin	2
40	792076A	Flat Washer	1
41	790080	Brake Lever	1
42	792073	Screw	2
43	792075	Locknut	1
44	790025	Brake Pad Holder	1
46	786086	Brake Lever Bracket	1
47	774690	Axle (11–15/16" long)	1
48	774691	Axle (16–1/2" long)	1
49	778356	Spur Gear (29 teeth–steel)	1
50	778354	Spur Gear (23 teeth–steel)	1
51	778344	Spur Gear (20 teeth)	1
52	778350	Spur Gear (16 teeth–steel)	1
53	778346	Spur Gear (15 teeth–steel)	1
56	778355	Spur Gear (11 teeth–steel)	1
57	778353	Spur Gear (17 teeth–steel)	1
58	778343	Spur Gear (20 teeth)	1
59	778349	Spur Gear (24 teeth–steel)	1
60	778345	Spur Gear (25 teeth)	1
63	786071	Countershaft Spacer	1
64	786072	Brake Shaft Spacer	1
65	780189	Washer	1
66	776394	Input Shaft	1
67	776396	Shifter & Brake Shaft	1
69	792170	Retaining Ring	1
70	786172	Spacer	1
71	788069	Square Cut Ring	1
71A	788092	"O" Ring	1
76	780090	Washer	1
77	788078A	Inverted Retaining Ring	1
79	792144	Spring	1
81	778338	Spur Gear (27 teeth)	1
82	778333	Bevel & Spur Gear (30 & 13 teeth)	1
85	792154	Pipe Plug	1
87	788088	Oil Seal	2
87A	788089	Oil Seal	1
150	788093	Liquid Gasket RTV Silicone	1
150A	788094	Liquid Gasket Loctite #242	1
180	730229A	Gear Oil 80W90	1

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
7228	14	11:3	2	Bulb—Light
104047	6	3:1	1	Bushing
104048	6	3:2	1	Valve ASM
111419	4	12	1	Washer—Bearing
111686	14	11:2	2	Socket Assembly
116397	14	22	1	Relay
614249	2	38	1	Tie Strap
701178	1	1	2	Cap—Protector
702366	14	6	1	Clip—Wire Retainer
702366	14	6	2	Clip—Wire Retainer
9266714	2	36	2	Screw—HWHTF
9266714	6	38	1	Screw—HWHTF
9266714	14	9	2	Screw—HWHTF
9266714	14	13	1	Screw—HWHTF
9267154	6	16	1	Screw
3-6498	4	21	2	Washer—Thrust
3-6498	4	38	4	Washer—Thrust
3-6498	5	17	1	Washer—Thrust
3-6498	5	22	1	Washer—Thrust
3-6498	9	10	2	Washer—Thrust
3-7501	5	11	4	Washer—Curved
5-4460	3	4	1	Washer—Fender
5-4460	4	17	1	Washer—Fender
5-4460	6	9	4	Washer—Fender
5-4460	7	5	1	Washer—Fender
5-4460	7	35	1	Washer—Fender
7-0030	11	31	1	Shoulder Bolt
7-0030	13	11	2	Shoulder Bolt
7-0030	13	18	1	Shoulder Bolt
7-0036	9	11	2	Key—Square
7-5461	8	12	1	Spacer—Transmission
26-0671	6	12	1	Bolt—Blade
26-0671	10	19	2	Bolt—Blade
26-6701	9	20	1	Spring — Extension
27-0220	5	15	2	Screw—Special HWH
27-0220	6	2	2	Screw—Special HWH
27-0220	6	27	2	Screw—Special HWH
27-8890	7	1	1	Spring — Pedal Return
28-0540	2	6	2	Bolt—Shoulder
28-2480	4	28	2	Washer—Flat
28-2480	9	12	2	Washer—Flat
28-8080	14	1	1	Boot—Terminal
37-8770	3	1	2	Bolt—Shldr
37-8770	3	2	2	Bolt—Shldr
37-8770	7	31	1	Bolt—Shldr
38-1420	14	5	1	Switch—Seat
38-7820	10	6	4	Bearing—Ball
44-8110	14	4	1	Battery Cable —Neg
46-6290	12	21	1	O—Ring
46-8090	2	13	4	Screw—Tapping
46-8090	2	17	3	Screw—Tapping
46-8091	2	3	2	Screw—Tapping
46-8091	2	10	1	Screw—Tapping
47-2963	6	4	1	Fuel Line
52-2891	4	11	2	Bushing — Steering Links
55-4300	10	32	2	Decal—Warning
55-9321	8	5	1	Cable—Clutch
56-2540	14	29	1	Tube—Vent Use w/80-2600
56-9830	11	2:2	2	Brake Pad
57-6950	10	27	1	Spring—Torsion Deflector
61-9780	4	26	2	Hubcap
61-9780	9	14	2	Hubcap

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
61-9980	12	8	2	Screw-Adjusting
62-3661	10	8	2	Spacer - Bearing
63-8360	14	25	1	Key-Ignition
65-2920	7	20	1	Pad-Pedal
65-7210	13	23	1	Spacer
66-0120	6	1:1	1	Knob
67-0710	11	33	2	Ball - Swivel
68-3650	10	33	1	Decal-Danger
68-3660	10	31	1	Decal - Shield Danger
76-1340	1	32	1	Decal-USA
76-2160	10	5	4	Plate-Kicker
79-1600-03	10	23	1	Wa-Baffle
79-1640-03	10	11	1	Wa-Baffle
79-3061	10	15	2	Blade-19.32 Recycler
79-3140	10	35	1	Decal-Danger
80-0510-03	10	17	2	Stiffener-Blade
80-2240	14	31	1	Plate-Name Grille
80-2600	14	3	1	Battery - 7 Plate
80-4341	10	14	2	Shaft - Spindle
80-4360	10	13	2	Shield - Bearing
80-4380	10	12	2	Spacer
80-6990	12	9	4	Washer-Hardened
80-6990	13	8	4	Washer-Hardened
84-5610	7	8	1	Guide-Cable
84-5610	8	25	1	Guide-Cable
88-0890	4	37	1	Grip - Parking Brake
88-3840	1	28	1	Body - Rear
88-3880	6	3	1	Gas Tank Assembly
88-3930-03	2	16	1	Shield - Heat
88-3940-03	1	5	1	Panel - Rear
88-3950	3	25	1	Seat
88-3960	14	12	1	Lense - Headlights
88-3970	14	11	1	Reflector-Lamp
88-3980	6	31	1	Gas Cap ASM
88-4020	12	7	1	Belt Guide - Deck
88-4030	12	2	1	Belt Guide - Deck
88-4040	14	30	1	Battery Box
88-4050	2	12	1	Duct - Hood Air
88-4070	4	29:2	2	Tire 15x6.00-6
88-4090	9	9:2	2	Tire 18x9.50-8
88-4140	2	23	2	Nut - Wedge
88-4160	2	24	2	Clamp - Pivot Rod
88-4170	2	20	1	Rod - Pivot
88-4180	5	5	1	Button - Release
88-4190	5	4	1	Bushing - Sliding
88-4210	5	19	1	Bushing - Stationary
88-4230	13	13	2	Trunnion - HOC
88-4300	9	9	2	Rear Wheel & Tire ASM
88-4320	14	18	1	Harness-Wire
88-4340	6	1	1	Throttle Control ASM
88-4350	6	30	1	Cable ASM-Throttle
88-4370	4	29:1	2	Rim ASM-15" Front
88-4390	9	9:1	2	Rim ASM-18" Rear
88-4400	4	29:4	2	Bearing-Wheel
88-4410	6	20	1	Gasket - Muffler
88-4430	10	29	1	Recycler Cover ASM
88-4510	10	7	2	Spindle
88-4590	11	1	2	Bolt-Shoulder
88-4620-03	1	11	1	Bracket - Idler Pivot
88-4630-03	1	24	1	Plate - Engine Mounting
88-4670	4	9	1	Bushing - Eccentric
88-4730	13	16	2	Clamp - HOC Pivot

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
88-4810	7	13	1	Clamp - Shift Pivot
88-4810	8	4	2	Clamp - Shift Pivot
88-4820-03	3	11	2	Bracket - Seat Hinge
88-4830	4	34	1	Link - Drag
88-4840	9	4	1	Pulley - Transmission
88-4870-03	11	32	1	Arm - Idler
88-4880	14	17	1	Spacer - Microswitch
88-4890	5	10	1	Spring - Leaf
88-4910-03	3	3	1	Support - Seat
88-4960-03	1	17	1	Shield - Exh. Pipe
88-4980	11	23	1	Bushing - Idler Arm
88-5000-03	7	21	1	Pedal - Clutch/Brake
88-5010	4	7	1	Spacer - Steering Rack
88-5020-03	3	19	1	Plate - Shift Gate
88-5030-03	3	9	1	Gate - HOC
88-5070	11	29	1	Belt Guide - Idler
88-5110-03	13	22	1	Pivot W.a. (H.o.c.)
88-5130-03	4	5	1	Bracket - Steering Rack
88-5150	5	16	1	Bushing - Flange
88-5160	3	21	1	Cover - Shift Gate
88-5170	3	7	1	Cover - HOC
88-5180-01	5	8	1	Bracket - Backup
88-5190-03	2	25	1	Lever W.a. - Deck Engage
88-5200	4	10	1	Steering Rack W.a.
88-5220	3	17	1	Foot Mat
88-5240	3	16	1	Foot Mat
88-5260-03	1	10	2	Bracket-Transaxle Mounti
88-5270	7	29	1	Rod - Clutch/Brake
88-5330	11	21	2	Pulley - Deck
88-5340	8	13	1	Lever - Shift (Transaxle
88-5380	4	32	1	Tie Rod - Steering
88-5450	13	12	2	Rod - Hanger
88-5470	4	23	2	Spacer - Front Axle
88-5500	7	15	1	Rod - Pedal Pivot
88-5510	4	35	1	Rod-Parking Brake
88-5520-03	4	36	1	Bracket-Parking Brake
88-5540	11	26	1	Rod -RH Deck Brake
88-5550	11	3	1	Rod -LH Deck Brake
88-5560	7	32	1	Belt Guide - Idler
88-5570-03	13	6	2	Link-Adjusting HOC
88-5630	11	30	1	Pulley - Idler
88-5680	7	33	1	Idler Pulley
88-5900	13	3	1	Link - HOC
88-5910	11	5	2	Spring - Torsion
88-5930	8	16	1	Keeper - Cable
88-5970	11	10	1	Hook - Return Spring
88-6040-03	2	18	1	Bracket - Hinge
88-6050-03	2	7	1	Bracket - Hinge
88-6070	7	30	1	Arm -Idler
88-6090	5	20	1	Coupling - Steering
88-6100	11	2	2	ASM. - Deck Brake
88-6130	11	6	1	Spring - Deck Engage
88-6220	1	4	2	Spring - Compression
88-6250	11	18	1	V-Belt
88-6270	9	5	1	V-Belt
88-6290-03	1	18	1	Shield - Muffler
88-6300	5	13	1	Shaft - Steering
88-6330	7	7	1	Spring - Extension
88-6370	5	14	1	Shaft W.a. - Steering
88-6460	13	17	1	Spring - Extension
88-6480	16	6	1	Muffler W.a.
88-9830	14	24	1	Switch-Ignition

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
88-9932	14	19	2	Switch – Micro
92-2460	2	30	1	Decal – Ignition/Lights
92-2461	2	31	1	Decal – Throttle
92-2462	2	32	1	Decal – Deck Engage
92-5748	2	14:1	1	Decal – Air Duct
92-5782	2	15	1	Patch – Heat Tape
92-7889-03	4	30	1	Spindle Wa-RH
92-7890-03	4	18	1	Spindle Wa-LH
92-8650	2	14	1	Hood-Toro
92-8757	16	9	1	Decal – Engine
92-8875	14	26	1	Switch-Rocker
92-8934	11	8	1	Spring – Extension
92-9520	10	36	1	Decal-Deck
92-9674	3	5	1	Knob-Studded
92-9845	14	8	1	Solenoid
93-0303	2	1	1	Tower-Steering Toro
93-0317	10	30	1	ASM-Deflector
93-0539	14	15	4	Screw-PPH
93-1122	10	28	1	Decal-Danger
93-1122	10	30:1	1	Decal-Danger
93-3240	14	20	1	Seal-Plunger
93-3809	6	37	1	Bracket-Ground
93-3810	14	23	1	Wire Harness
93-3822-03	13	1	1	Lever-HOC
93-3849	2	37	1	Brkt-Cable
93-3854	6	7	3	Belt Guide – Engine
93-3855	6	24	1	Belt Guide – R.h.
93-3881-03	12	4	1	Pan – Front Deck Suspens
93-4145	2	29	2	Decal – Tower
93-6668	17	3	1	Decal-Instruct
93-6679	10	37	1	Decal – Belt Routing
93-7276	17	2	1	Decal-Danger
93-8741	14	11:1	1	Reflector – Headlight
93-9354	17	1	1	Decal-Battery
93-9847	12	12	2	Spacer
94-1237	1	33	1	Decal-Instruction
94-1949-01	10	3	1	Deck Wa-38”
94-1951	6	39	1	Latch-Hood
94-1952	6	28	1	Rod-Gas Tank
94-1962-03	4	31	1	Front Axle Wa
94-1963	6	11	1	Pulley Assy-Engine
94-1968	8	20	1	Lever-Shift Pivot
94-1969	9	19	2	Strap-Torque
94-1970-03	12	14	1	Bracket-Deck Susp
94-1971-03	12	6	1	Bracket-Deck Susp
94-1980	2	39	2	Foam-Hood
94-1984	2	11	1	Pin-Latch
94-1991-03	8	1	1	Shift Lever Wa
94-1993-03	8	8	1	Shift Pivot Wa
94-1997	8	26	1	Bushing-Shift Lever
94-1998-03	1	25	1	Frame Rail-RH
94-1999-03	1	13	1	Frame Rail-LH
94-4293	2	35	1	Cable ASM-Deck Engage
94-4294	7	2	1	Spring-Brake
94-4926	7	36	1	Bracket-Belt Guide
94-5362	14	33	1	Boot-Terminal Insulator
94-5431	8	9	1	Link-Shift
94-5433	7	6	1	Bracket-Belt Guide
94-5565	2	2	1	Knob – Control
94-5565	8	24	1	Knob – Control
94-5565	13	24	1	Knob – Control
94-5823	12	5	2	Bolt-Shoulder

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
94-6022	9	7	1	Transaxle - Peerless 931
95-0807	2	34	1	Decal-Side Panel RH
95-0808	2	33	1	Decal-Side Panel LH
95-0809	1	35	1	Decal-Rear Fender
95-1661	10	26	1	Rod-Pivot
95-2747	12	20	1	Fitting-Washout
98-1459	5	23	1	Decal
98-1467	5	1	1	Steering Wheel ASM 14"
98-1468	5	1:1	1	Cover-Wheel
98-1469	5	1:2	1	Steering Wheel 14"
98-3575-03	1	21	1	Support-Axle
218-461	14	24:2	1	Nut-HH (F/W Sw)
218-560	17	5	6	Caps - Battery
218-578	15	*	3	Fuse-10 Amp
232-27	4	29:3	2	Valve Stem
232-27	9	9:3	2	Valve Stem
232-39	4	29:6	2	Tube-Inner 15x6-6
232-41	9	9:4	2	Tube-Inner 18x9.50-8
2412-98	6	5	2	Clamp-Hose
302-5	4	29:5	2	Fitting-Grease
302-26	4	8	1	Fitting-Grease
321-2	2	5	4	Screw-HH
321-4	5	7	2	Screw-HH
321-4	10	9	2	Screw-HH
321-4	14	2	2	Screw-HH
321-4	16	7	1	Screw-HH
321-9	5	21	2	Screw-HH
321-15	10	38	2	Screw-HH
322-1	12	23	2	Screw-HH
322-3	1	7	4	Screw-HH
322-3	1	9	4	Screw-HH
322-3	1	20	6	Screw-HH
322-3	1	23	2	Screw-HH
322-3	1	26	4	Screw-HH
322-3	1	27	2	Screw-HH
322-3	2	28	2	Screw-HH
322-3	3	10	4	Screw-HH
322-3	7	3	1	Screw-HH
322-3	7	14	2	Screw-HH
322-3	8	6	2	Screw-HH
322-3	8	21	1	Screw-HH
322-3	9	21	2	Screw-HH
322-3	13	19	4	Screw-HH
322-5	1	2	2	Screw-HH
322-5	6	10	2	Screw-HH
322-5	11	20	2	Screw-HH
322-6	7	4	1	Screw-HH
322-9	6	6	3	Screw-HH
322-12	9	15	4	Screw HH
322-12	12	16	2	Screw HH
322-39	13	2	1	Screw-HH
323-5	10	24	2	Screw-HH
323-9	12	13	2	Screw-HH
323-10	8	2	1	Screw-HH
323-11	7	34	1	Screw
323-12	11	27	1	Screw
323-13	4	2	2	Screw-HH
329-23	8	10	1	Screw
3219-6	11	22	2	Nut-Hex
3229-1	12	22	2	Bolt-CARR
3230-1	4	6	4	Bolt-CARR
3230-1	10	21	1	Bolt-CARR

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3230-3	4	4	1	Screw-CARR
3230-3	7	22	1	Screw-CARR
3230-3	8	17	1	Screw-CARR
3231-4	4	3	1	Bolt-CARR
3253-3	8	11	1	Washer-Lock
3253-3	16	8	1	Washer-Lock
3253-4	6	21	2	Washer-Lock
3253-22	6	13	1	Washer-Lock
3254-5	14	24:1	1	Washer-Lock
3255-7	14	14	1	Washer-Lk
3255-8	6	23	1	Washer-Lock
3256-1	12	19	2	Washer-Flat
3256-22	5	6	2	Washer-Flat
3256-22	12	10	2	Washer-Flat
3256-23	1	3	2	Washer-Flat
3256-23	1	22	2	Washer-Flat
3256-23	2	27	2	Washer-Flat
3256-23	7	9	2	Washer-Flat
3256-23	7	23	1	Washer-Flat
3256-23	8	14	1	Washer-Flat
3256-23	8	22	1	Washer-Flat
3256-23	9	16	4	Washer-Flat
3256-23	9	18	4	Washer-Flat
3256-24	2	21	2	Washer-Flat
3256-24	4	20	2	Washer-Flat
3256-24	4	24	2	Washer-Flat
3256-24	11	28	2	Washer-Flat
3256-24	13	5	2	Washer-Flat
3256-24	13	10	2	Washer-Flat
3256-25	4	13	4	Washer-Flat
3256-25	6	14	1	Washer-Flat
3256-25	8	19	1	Washer-Flat
3256-26	7	18	1	Washer-Flat
3256-68	11	19	1	Washer-Flat
3257-23	9	3	1	Key-Woodruff
3269-26	3	13	2	Washer
3269-26	3	18	2	Washer
3272-10	4	14	2	Pin-Cotter
3272-10	4	19	2	Pin-Cotter
3272-10	7	24	1	Pin-Cotter
3272-12	4	27	2	Pin-Cotter
3274-10	6	22	2	Screw-Sckt Hd
3290-282	3	8	2	Pop Rivet
3290-282	3	20	2	Pop Rivet
3290-282	11	2:3	4	Pop Rivet
3290-299	14	32	1	Nut - Tinnerman
3290-307	2	19	2	Pin-Cotter
3290-307	13	4	1	Pin-Cotter
3290-307	13	7	4	Pin-Cotter
3290-307	13	9	2	Pin-Cotter
3290-354	14	16	2	Nut-Speed
3290-465	10	18	2	Washer-Spring
3290-479	3	6	4	Fastener-Panel
3290-479	3	15	12	Fastener-Panel
3290-479	3	22	4	Fastener-Panel
3290-496	2	8	2	Nut - Retained
3296-3	8	7	2	Nut-Lock
3296-16	12	18	2	Nut-Lock
3296-23	12	17	2	Nut-Lock
3296-29	1	6	2	Nut-Lock
3296-29	1	8	4	Nut-Lock
3296-29	1	12	4	Nut-Lock

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3296-29	1	14	2	Nut-Lock
3296-29	1	15	6	Nut-Lock
3296-29	1	16	2	Nut-Lock
3296-29	1	29	4	Nut-Lock
3296-29	2	26	2	Nut-Lock
3296-29	3	12	6	Nut-Lock
3296-29	4	1	4	Nut-Lock
3296-29	4	16	1	Nut-Lock
3296-29	6	29	4	Nut-Lock
3296-29	7	10	2	Nut-Lock
3296-29	7	19	1	Nut-Lock
3296-29	7	26	2	Nut-Lock
3296-29	7	27	1	Nut-Lock
3296-29	8	3	2	Nut-Lock
3296-29	8	15	1	Nut-Lock
3296-29	8	23	1	Nut-Lock
3296-29	9	1	4	Nut-Lock
3296-29	9	17	2	Nut-Lock
3296-29	10	20	1	Nut-Lock
3296-29	11	25	2	Nut-Lock
3296-29	12	15	2	Nut-Lock
3296-29	12	24	2	Nut-Lock
3296-29	13	14	4	Nut-Lock
3296-29	13	15	2	Nut-Lock
3296-29	13	20	1	Nut-Lock
3296-29	13	21	1	Nut-Lock
3296-39	4	15	1	Nut-Lock
3296-39	4	25	2	Nut-Lock
3296-39	8	18	1	Nut-Lock
3296-39	10	22	1	Nut-Lock
3296-39	10	25	2	Nut-Lock
3296-39	11	24	1	Nut-Lock
3296-39	12	3	2	Nut-Lock
3296-42	2	4	4	Nut-Lock
3296-42	5	9	2	Nut-Lock
3296-42	5	12	2	Nut-Lock
3296-42	10	10	2	Nut-Lock
3296-42	11	4	2	Nut-Lock
3296-42	12	11	2	Nut-Lock
3296-58	11	14	3	Nut-Flange
3296-59	7	28	2	Nut-Lock
32103-22	14	28	2	Nut-Wing
32104-76	1	19	1	Screw-Self TAP
32104-76	12	1	5	Screw-Self TAP
32111-7	10	39	2	Nut-Cap
32120-64	9	2	1	Ring-Retaining
32121-111	5	2	1	Pin-Spiral
32128-43	2	22	2	Nut-Flange
32144-14	9	22	2	Screw-HWH
32144-32	14	10	2	Screw-Plastic
32144-41	10	2	8	Screw-HWHTF
32144-111	10	4	8	Screw - PPH
32144-112	6	40	2	Screw-TAP
32149-1	6	26	2	Nut
32149-2	14	7	3	Nut-Hex Lock
32151-48	4	33	2	Ring-Retaining
32151-48	5	18	1	Ring-Retaining
32151-48	9	13	2	Ring-Retaining
32151-81	5	3	1	Retaining Ring Push-On

*Not Illustrated

[illegible]

MAINTENANCE RECORD

[illegible]