




MODEL NO. 03857-80001 & UP
MODEL NO. 03858-80001 & UP
MODEL NO. 03859-80001 & UP

PARTS CATALOG

5/7/11 BLADE REELS REELMASTER® 6500D/6700D

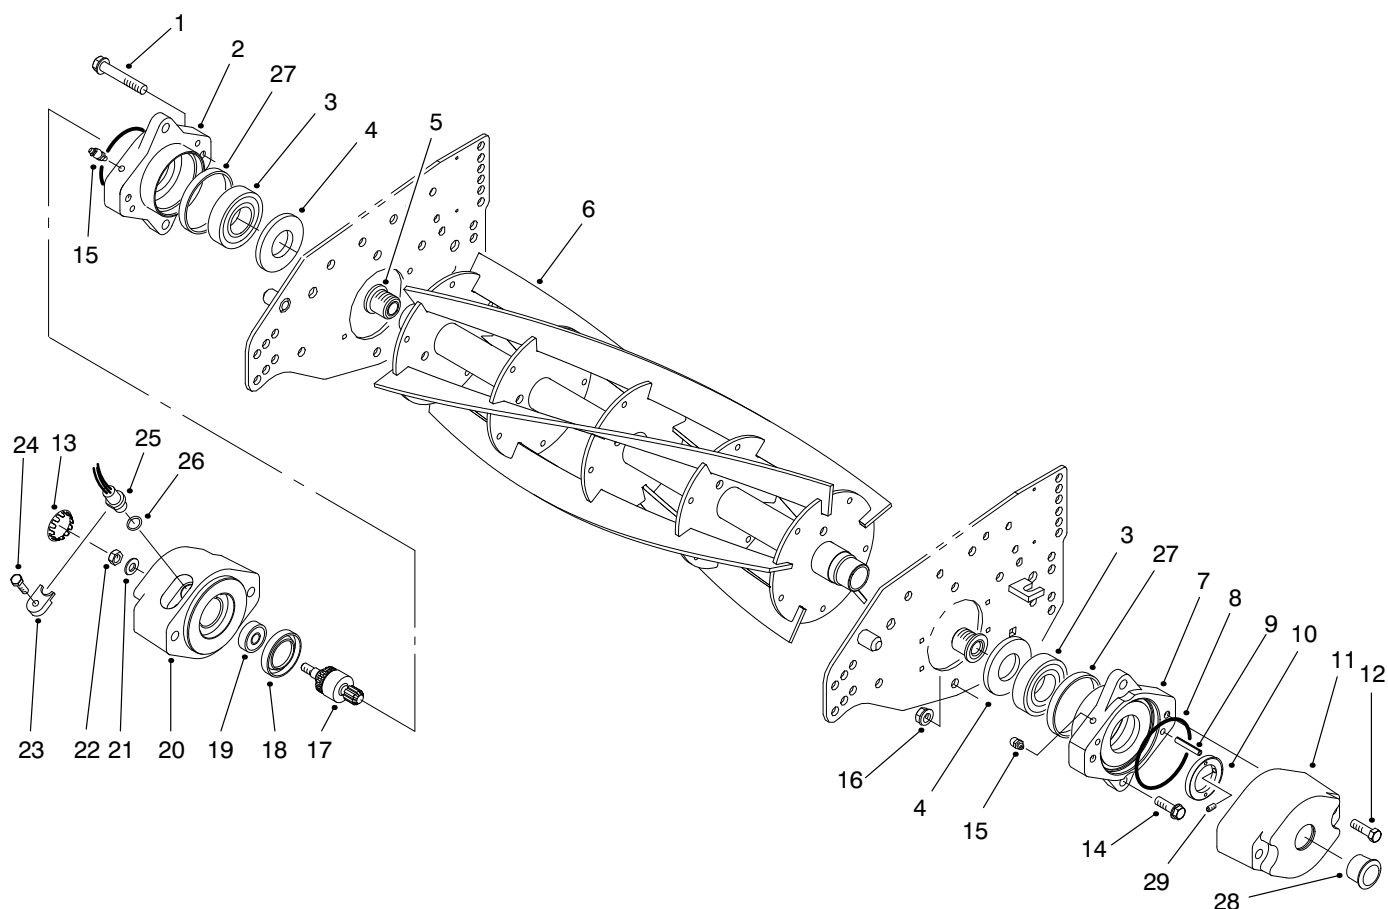


T-1979-2

REEL & BEARING HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	33105-060	Screw - HHF	2
2	93-9794	Housing - Bearing, RH (Incl. Ref. #27)	1
3	93-2489	Bearing	2
4	94-8908	Seal - Grease	2
5	94-2732	Insert - Threaded RH	1
*	94-2733	Insert - Threaded LH	1
6	94-4337	5 Blade Reel Assembly Model 03857 (Incl. Ref. #5)	1
*	95-2770	7 Blade Reel Assembly Model 03858 (Incl. Ref. #5)	1
*	94-4338	11 Blade Reel Assembly Model 03859 (Incl. Ref. #5)	1

Ref. No.	Part No.	Description	No. Used
7	93-9795	Housing - Bearing, LH (Incl. Ref. #27)	1
8	93-9783	O-Ring (Shipped with Traction Unit)	10
9	32121-69	Pin - Roll	4
10	95-2793	Nut - Bearing Adj.	1
11	94-4347	Weight - End (Shipped with Traction Unit)	3
12	93-7522	Screw - HH	2
13	93-3094	Plug - Cap	1
14	33105-030	Screw - HHF	4
15	302-11	Fitting - Grease 45°	2
16	33025-00	Nut - Lock	4
17	93-3085	Asm. - Shaft, Magnet	1
18	253-165	Seal - Outer	1
19	93-2956	Bearing	1
20	93-3080	Weight - Housing, End	1

*Not Illustrated

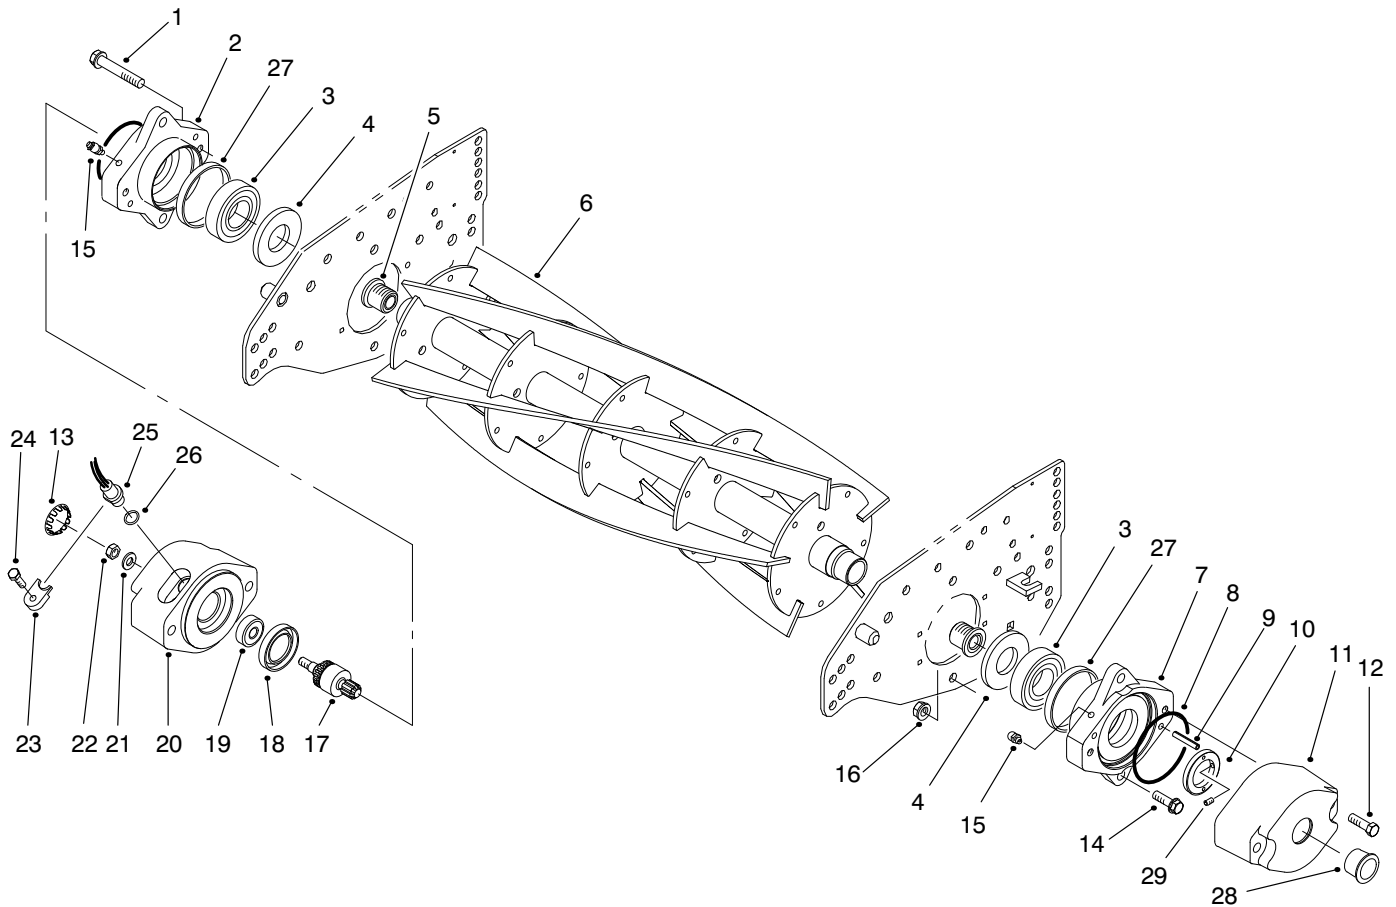


T-1979-2

REEL & BEARING HOUSING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
21	3256-23	Washer – Flat	1
22	33024-00	Nut – Lock	1
23	93-3088	Clamp (Shipped with Traction Unit)	2
24	33103-020	Screw – HH (Shipped with Traction Unit)	2

Ref. No.	Part No.	Description	No. Used
25	94-6980	Sensor – Speed (Shipped with Traction Unit)	2
26	237-30	O-Ring (Shipped with Traction Unit)	2
27	93-2922	Ring – Bearing	2
28	93-8717	Plug	1
29	3245-42	Screw – Set	1

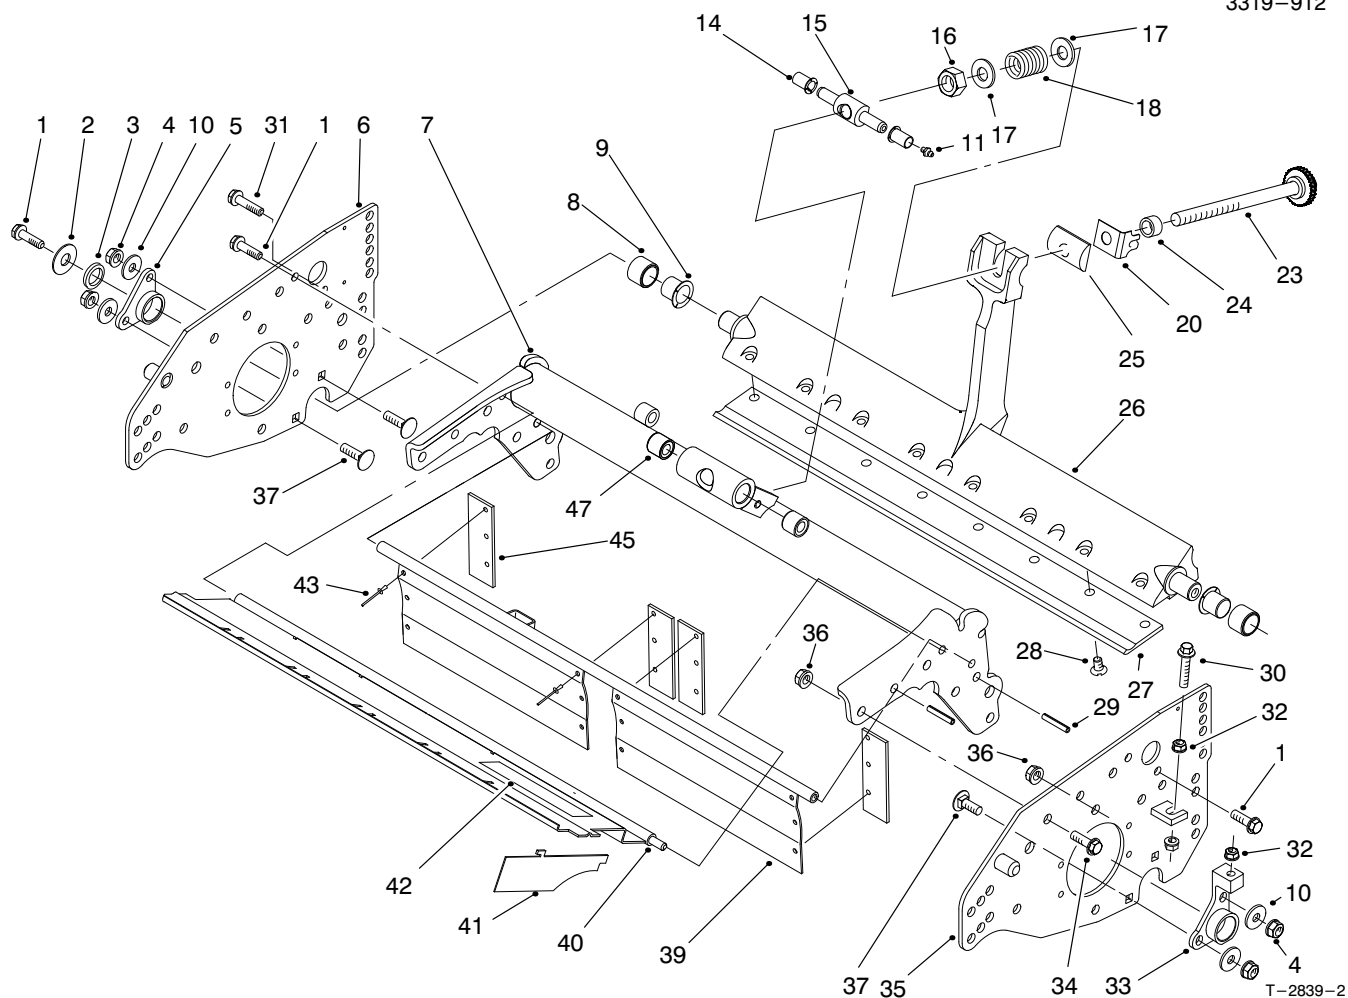


T-2839-2

FRAME & BEDBAR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	33104-020	Screw - HHF	3	27	98-3994	Bedknife - 2.200 (5.59 cm)	
2	3256-82	Washer	1	*	93-9774	Bedknife - 2.235" (5.68 cm) (Optional)	1
3	93-7510	Ring - Quad	1	*	94-8936	Bedknife - 2.535" (6.44 cm) (Optional)	1
4	33024-00	Nut - Lock	4	28	57-4910	Screw - Special	8
5	93-2513	Pivot Hub RH	1	29	32121-36	Pin - Roll	4
6	93-2981	Sideplate - RH	1	30	94-3489	Screw	1
7	98-7971	Reel Frame	1	31	33104-040	Screw - HHF	1
8	93-7501	Bushing Assembly	2	32	33004-00	Nut - Flange	3
9	93-7502	Bushing - Flange	2	33	93-2512	Pivot Hub LH	1
10	33094-00	Washer - Flat	4	34	33105-025	Screw - HHF	8
11	302-18	Fitting - Grease, Str.	1	35	93-2982	Sideplate - LH	1
14	52-2890	Bushing - Plastic	2	36	33025-00	Nut - Lock	8
15	57-5260	Pivot Screw Adj.	1	37	94-2738	Screw - Carriage	4
16	3296-62	Nut - Lock	1	39	98-3998	Rear Grass Shield	1
17	29-8910	Washer	2	40	98-7978	Asm. - Grass Shield (Incl. Ref. #42)	1
18	95-0772	Spring - Compression	1	41	93-9759	Deflector - Grass Shield	5
20	95-8752	Arm - Spring	1	42	93-6688	Decal - Danger	1
23	95-2762	Bedbar Adjuster Assy.	1	42	94-4584	Decal - Danger (Japanese)	1
24	93-2959	Spacer - Adjuster	1	43	700382	Rivet	14
25	93-2892	Pivot - Bedbar, Man. Adj.	1	45	98-3999	Flap - Side	4
26	95-3458	Bedbar	1	47	62-5510	Bushing	2

*Not Illustrated

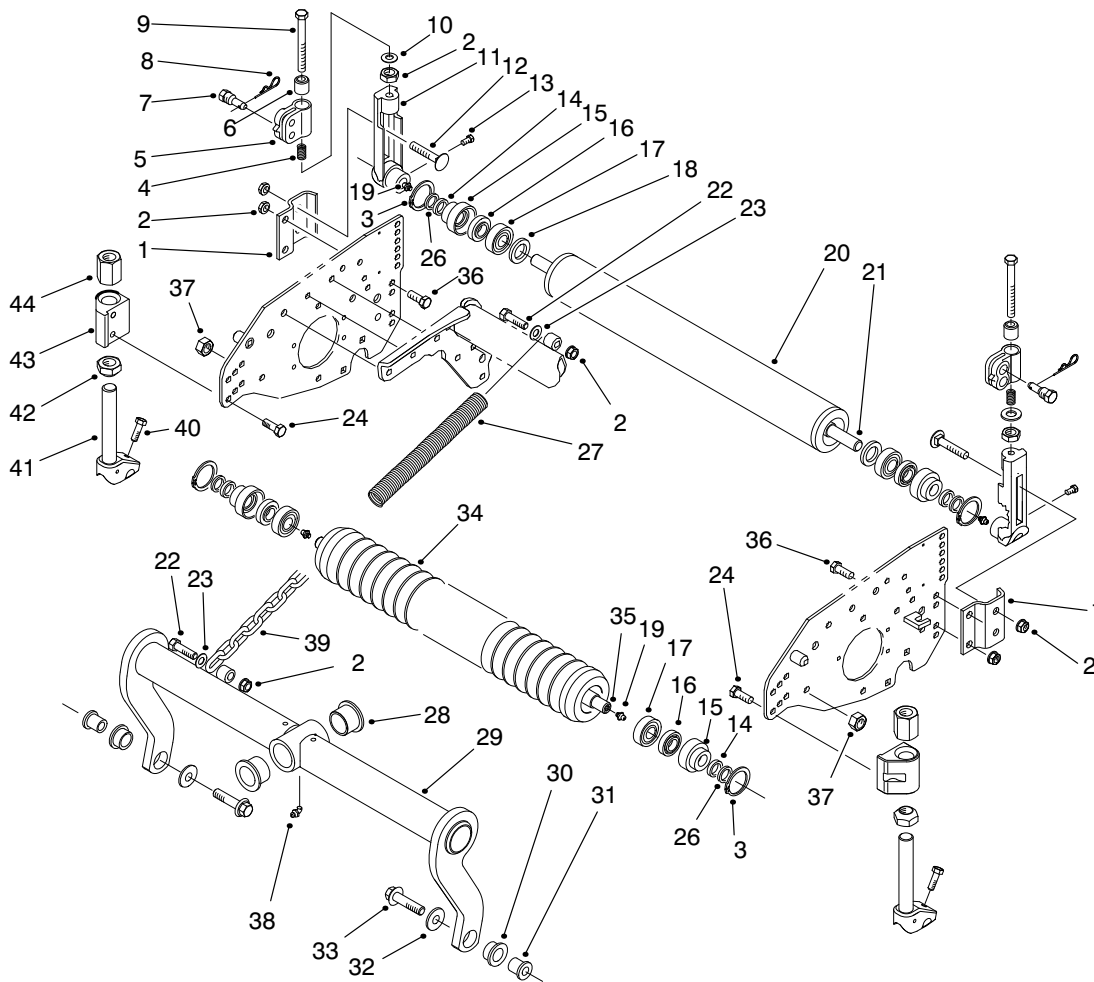

T-2840-1

ROLLERS & CARRIER FRAME ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	61-0910	Bracket - Angle	2
2	33025-00	Nut - Lock	10
3	32120-62	Snap Ring	4
4	93-2921	Spring - Compression HOC	2
5	93-2902	Support - HOC, Rear	2
6	94-4344	Spacer	2
7	93-2906	Pin - HOC	2
8	3290-467	Pin - Cotter, Hair	2
9	93-7500	Screw - HH	2
10	93-7509	Washer - Special	2
11	93-2904	Bracket - HOC, Rear	2
12	33125-030	Screw - Carriage	2
13	93-9757	Screw - HH	2
14	253-70	Seal - Oil	4
15	93-1252	Seal - Outer	4
16	93-1251	Seal - Inner	4
17	109966	Bearing - Ball	4
18	93-3007	Seal - Oil	4
19	302-5	Fitting - Grease, Straight	4
20	98-3706	Tube Assy. - Rear Roller	1
21	94-4328	Shaft - Rear Roller	1
22	33115-045	Screw - HH	2
23	3256-24	Washer - Flat	2
24	33115-016	Screw - HH	4
26	93-2931	Washer - Roller	4

Ref. No.	Part No.	Description	No. Used
27	98-7982	Cover - Chain	1
28	94-1291	Bushing - Special	2
29	98-7972	Carrier Frame Assembly	1
30	93-2877	Bushing	2
31	98-1885	Spacer - Frame	2
32	94-2701	Washer - Hardened	2
33	94-2702	Bolt	2
34	94-4336	Roller - Wiehle	1
35	94-4329	Shaft - Wiehle Roller	1
36	33105-025	Screw - HHF	4
37	94-4307	Nut - Lock	2
38	302-60	Fitting - Grease, 90°	1
39	98-7981	Chain - Straight Link	1
40	33114-025	Screw - HH	2
41	95-2783	Support Rod Assembly	2
42	95-2789	Nut - Special	2
43	95-7733	Bracket - HOC	2
44	95-2790	Nut - Special, Long	2
*	98-7966	Rear Roller Assembly (Incl. Ref. #3, 14-21 & 26)	1
*	94-4330	Wiehle Roller Assembly (Incl. Ref. #3, 14-19, 26 & 34-35)	1
*	98-7973	Carrier Frame Assembly (Incl. Ref. #28, 30 & 38)	1

*Not Illustrated

SPECIAL TOOLS


GAUGE BAR ASSEMBLY NO. 98-1852

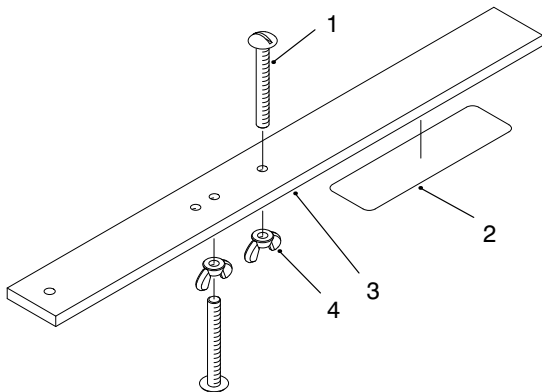

T-2933-1

Ref. No.	Part No.	Description	No. Used
1	32122-54	Screw – Mach. Slot. Hd.	2
2	98-7976	Decal	1
3		Bar	1
4	32103-3	Nut – Wing	2


BACKLAPPING BRUSH ASSEMBLY NO. *TOR299100

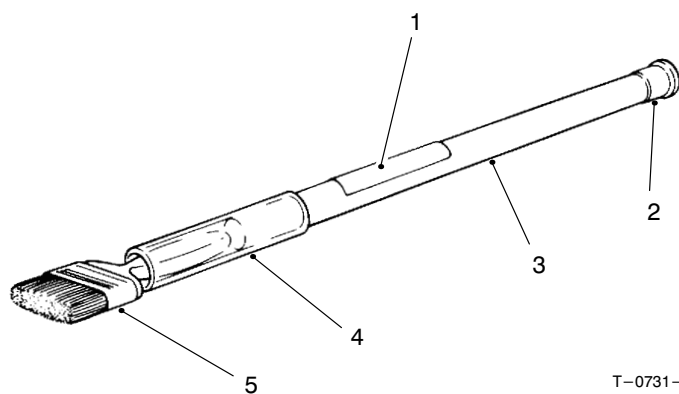

T-0731-1

Ref. No.	Part No.	Description	No. Used
1	12-9140	Decal	1
2	2410-18	Plug	1
3	29-9080	Handle	1
4	29-9090	Hose – Handle	1
5	36-4310	Brush	1


BEDKNIFE SCREW TOOL NO. *TOR510880

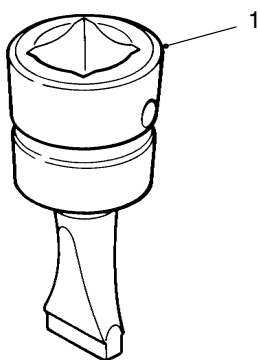

T-0729-1

Ref. No.	Part No.	Description	No. Used
1		Tool – Bedknife Screw	1

REEL DRIVE SHAFT NO. *TOR4074

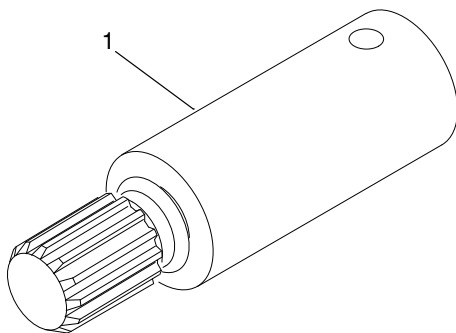


T-2383-2

Ref. No.	Part No.	Description	No. Used
1		Shaft – Reel Drive	1

*Obtain these items directly from OTC 2013 4th St. Owatonna, MN. 55060 1-800-533-0492
(in Minnesota and Canada 1-507-455-7050) Fax. 507-455-7011.

SPECIAL TOOLS

CUTTING UNIT TOOL KIT NO. *TOR4070

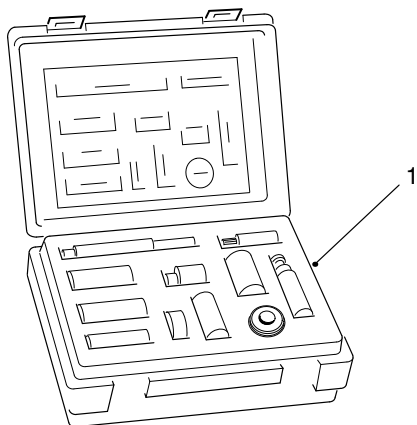

T-2676

Ref. No.	Part No.	Description	No. Used
1	*TOR 4064	Spanner Wrench	1
	*TOR4065	Inner Oil Seal Installer	1
	*TOR4066	Bearing Installer	1
	*TOR4067	Shaft Support Tool	1
	*TOR4068	Inner Seal Installer	1
	*TOR4069	Outer Seal Installer	1
	*TOR4071	Outer Oil Seal Installer	1
	*TOR4072	Reel Motor Shaft Seal Protector	1
	*TOR4073	Handle	1
	*TOR4074	Spline Insert Tool	1

*Obtain these items directly from OTC 2013 4th St. Owatonna, MN. 55060 1-800-533-0492
(in Minnesota and Canada 1-507-455-7050) Fax. 507-455-7011.

TORO PART NUMBER INDEX

3319-912

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
109966	Bearing – Ball	4 17 4	94-4584	Decal – Danger (Japanese)	3 42 1
700382	Rivet	3 43 14	94-6980	Sensor – Speed	2 25 2
12-9140	Decal	5 1 1	94-8908	Seal – Grease	1 4 2
29-8910	Washer	3 17 2	94-8936	Bedknife – 2.535, (6.44 cm)	3 * 1
29-9080	Handle	5 3 1	95-0772	Spring – Compression	3 18 1
29-9090	Hose – Handle	5 4 1	95-2762	Bedbar Adjuster Assy.	3 23 1
36-4310	Brush	5 5 1	95-2770	7 Blade Reel Assembly	1 * 1
52-2890	Bushing – Plastic	3 14 2	95-2783	Support Rod Assembly	4 41 2
57-4910	Screw – Special	3 28 8	95-2789	Nut – Special	4 42 2
57-5260	Pivot Screw Adj.	3 15 1	95-2790	Nut – Special, Long	4 44 2
61-0910	Bracket – Angle	4 1 2	95-2793	Nut – Bearing Adj.	1 10 1
62-5510	Bushing	3 47 2	95-3458	Bedbar	3 26 1
93-1251	Seal – Inner	4 16 4	95-7733	Bracket – HOC	4 43 2
93-1252	Seal – Outer	4 15 4	95-8752	Arm – Spring	3 20 1
93-2489	Bearing	1 3 2	98-1885	Spacer – Frame	4 31 2
93-2512	Pivot Hub LH	3 33 1	98-3706	Tube Assy. – Rear Roller	4 20 1
93-2513	Pivot Hub RH	3 5 1	98-3994	Bedknife – 2.200 (5.59 cm)	3 27
93-2877	Bushing	4 30 2	98-3998	Rear Grass Shield	3 39 1
93-2892	Pivot – Bedbar, Man. Adj.	3 25 1	98-3999	Flap – Side	3 45 4
93-2902	Support – HOC, Rear	4 5 2	98-7966	Rear Roller Assembly	4 * 1
93-2904	Bracket – HOC, Rear	4 11 2	98-7971	Reel Frame	3 7 1
93-2906	Pin – HOC	4 7 2	98-7972	Carrier Frame Assembly	4 29 1
93-2921	Spring – Compression HOC	4 4 2	98-7973	Carrier Frame Assembly	4 * 1
93-2922	Ring – Bearing	2 27 2	98-7976	Decal	5 2 1
93-2931	Washer – Roller	4 26 4	98-7978	Asm. – Grass Shield	3 40 1
93-2956	Bearing	1 19 1	98-7981	Chain – Straight Link	4 39 1
93-2959	Spacer – Adjuster	3 24 1	98-7982	Cover – Chain	4 27 1
93-2981	Sideplate – RH	3 6 1	237-30	O-Ring	2 26 2
93-2982	Sideplate – LH	3 35 1	2410-18	Plug	5 2 1
93-3007	Seal – Oil	4 18 4	253-70	Seal – Oil	4 14 4
93-3080	Weight – Housing, End	1 20 1	253-165	Seal – Outer	1 18 1
93-3085	Asm. – Shaft, Magnet	1 17 1	302-5	Fitting – Grease, Straight	4 19 4
93-3088	Clamp	2 23 2	302-11	Fitting – Grease 45°	1 15 2
93-3094	Plug – Cap	1 13 1	302-18	Fitting – Grease, Str.	3 11 1
93-6688	Decal – Danger	3 42 1	302-60	Fitting – Grease, 90°	4 38 1
93-7500	Screw – HH	4 9 2	3245-42	Screw – Set	2 29 1
93-7501	Bushing Assembly	3 8 2	3256-23	Washer – Flat	2 21 1
93-7502	Bushing – Flange	3 9 2	3256-24	Washer – Flat	4 23 2
93-7509	Washer – Special	4 10 2	3256-82	Washer	3 2 1
93-7510	Ring – Quad	3 3 1	3290-467	Pin – Cotter, Hair	4 8 2
93-7522	Screw – HH	1 12 2	3296-62	Nut – Lock	3 16 1
93-8717	Plug	2 28 1	32103-3	Nut – Wing	5 4 2
93-9757	Screw – HH	4 13 2	32120-62	Snap Ring	4 3 4
93-9759	Deflector – Grass Shield	3 41 5	32121-36	Pin – Roll	3 29 4
93-9774	Bedknife – 2.235, (5.68 cm)	3 * 1	32121-69	Pin – Roll	1 9 4
93-9783	O-Ring	1 8 10	32122-54	Screw – Mach. Slot. Hd.	5 1 2
93-9794	Housing – Bearing, RH	1 2 1	33004-00	Nut – Flange	3 32 3
93-9795	Housing – Bearing, LH	1 7 1	33024-00	Nut – Lock	3 4 4
94-1291	Bushing – Special	4 28 2	33024-00	Nut – Lock	2 22 1
94-2701	Washer – Hardened	4 32 2	33025-00	Nut – Lock	4 2 10
94-2702	Bolt	4 33 2	33025-00	Nut – Lock	1 16 4
94-2732	Insert – Threaded RH	1 5 1	33025-00	Nut – Lock	3 36 8
94-2733	Insert – Threaded LH	1 * 1	33094-00	Washer – Flat	3 10 4
94-2738	Screw – Carriage	3 37 4	33103-020	Screw – HH	2 24 2
94-3489	Screw	3 30 1	33104-020	Screw – HHF	3 1 3
94-4307	Nut – Lock	4 37 2	33104-040	Screw – HHF	3 31 1
94-4328	Shaft – Rear Roller	4 21 1	33105-025	Screw – HHF	3 34 8
94-4329	Shaft – Wiehle Roller	4 35 1	33105-025	Screw – HHF	4 36 4
94-4330	Wiehle Roller Assembly	4 * 1	33105-030	Screw – HHF	1 14 4
94-4336	Roller – Wiehle	4 34 1	33105-060	Screw – HHF	1 1 2
94-4337	5 Blade Reel Assembly	1 6 1	33114-025	Screw – HH	4 40 2
94-4338	11 Blade Reel Assembly	1 9* 1	33115-016	Screw – HH	4 24 4
94-4344	Spacer	4 6 2	33115-045	Screw – HH	4 22 2
94-4347	Weight – End	1 11 3	33125-030	Screw – Carriage	4 12 2

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]