



Carefree[®] Recycler[®] Mower

E120 Electric

Model No.20646 – 8900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Deck, Liner and Wheel Assembly	1	Connectors and Side Discharge Chute	5
Motor and Blade Assembly	2		
Cover, Mulch Plug and Panel Assembly	3		
Handle and Controls Assembly	4	Note:	

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
..			

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFV	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.


For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

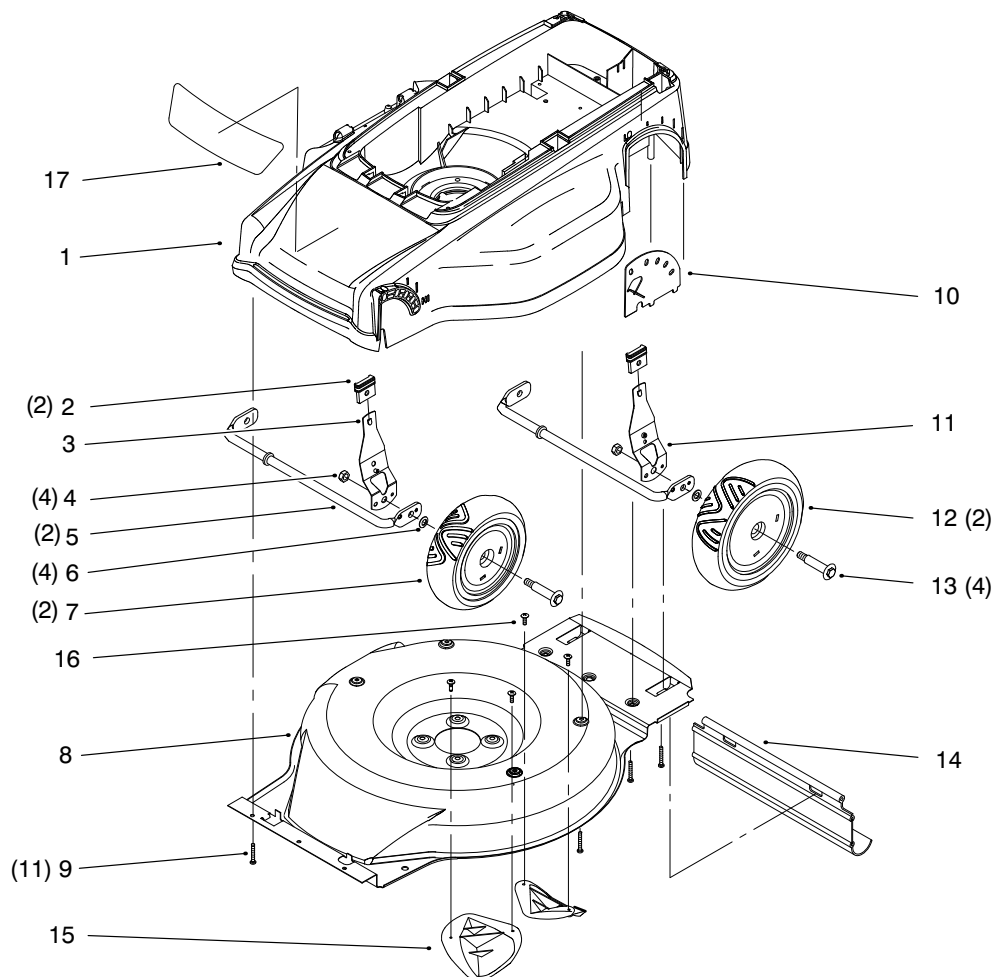

Sheet No.: 2

Deck, Liner and Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	94-3895	1	ASM-Deck
2	92-1008	2	Knob-Height Adjust
3	94-3870	1	ASM-Front HOC Lever
4	610358	4	Nut-Lock
5	93-3952	2	Axle
6	40-1940	4	Washer
7	92-9586	2	ASM-Wheel
8	95-5167	1	ASM-Liner
9	93-3985	11	Screw-PPH
10	95-5037	1	Plate-HOC
11	94-3871	1	ASM-Rear HOC Lever
12	93-0344	2	ASM-Wheel
13	92-1057	4	Bolt-Shoulder
14	94-7417	1	Trailing Shield
15	76-2160	2	Plate-Kicker
16	94-6961	4	Screw
17	98-1491	1	Decal-Deck

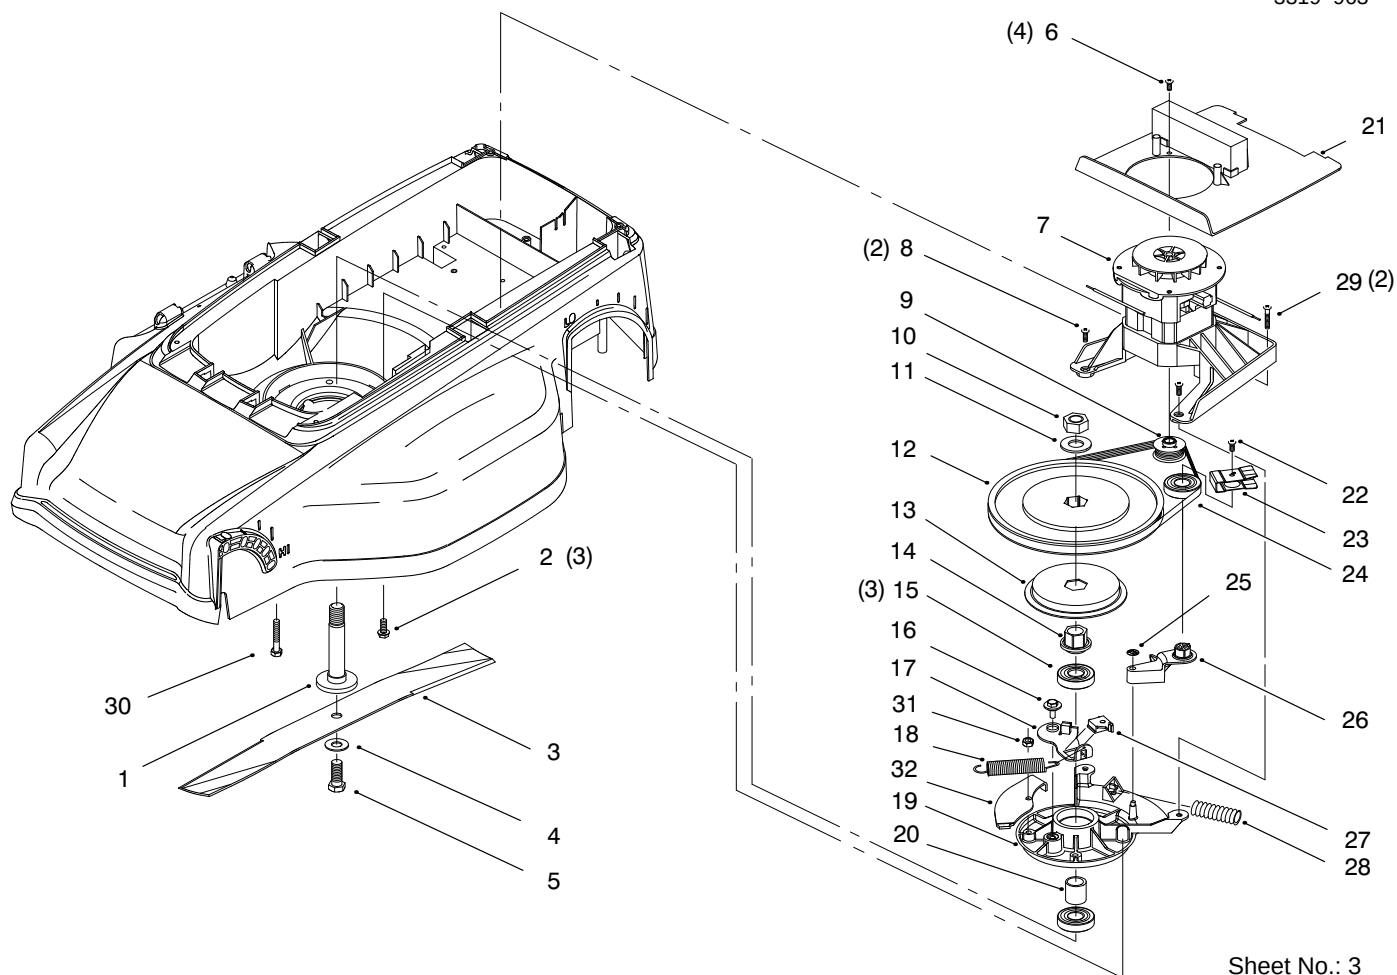


Sheet No.: 3

Motor and Blade Assembly

Ref. No.	Part No.	Qty.	Description
1	93-3329	1	Shaft-Spindle
2	32144-44	3	Screw-HWHTF
3	93-3954	1	Blade
4	3290-465	1	Washer-Spring
5	26-0671	1	Bolt-Blade
6	94-4496	4	Screw
7	94-6917	1	Motor ASM-120v
8	32144-8	2	Screw-PPH
9	93-3331	1	Pulley-Motor
10	3219-6	1	Nut-Hex
11	3256-27	1	Washer-Flat
12	93-3321	1	Pulley-Driven
13	93-3328	1	Drum-Brake
14	93-3330	1	Hub-Pulley
15	61-8780	3	Bearing-Ball
16	92-9698	1	Screw-Shoulder
17	93-3991	1	ASM-Brake Lever
18	93-3995	1	Spring-Brake/Switch
19	93-3325	1	Spindle
20	93-3980	1	Spacer-Bearing
21	94-3873	1	ASM-Baffle
22	94-6961	1	Screw
23	94-3866	1	Guide-Belt
24	93-3989	1	Belt
25	93-3988	1	Pushnut
26	93-3323	1	Idler


Ref. No.	Part No.	Qty.	Description
27	93-3322	1	Mount-Cable
28	61-8880	1	Spring-Compression
29	93-3985	2	Screw-PPH
30	32144-110	1	Screw-HWHTF
31	3296-56	1	Nut-Lock
32	94-9155	1	Bracket

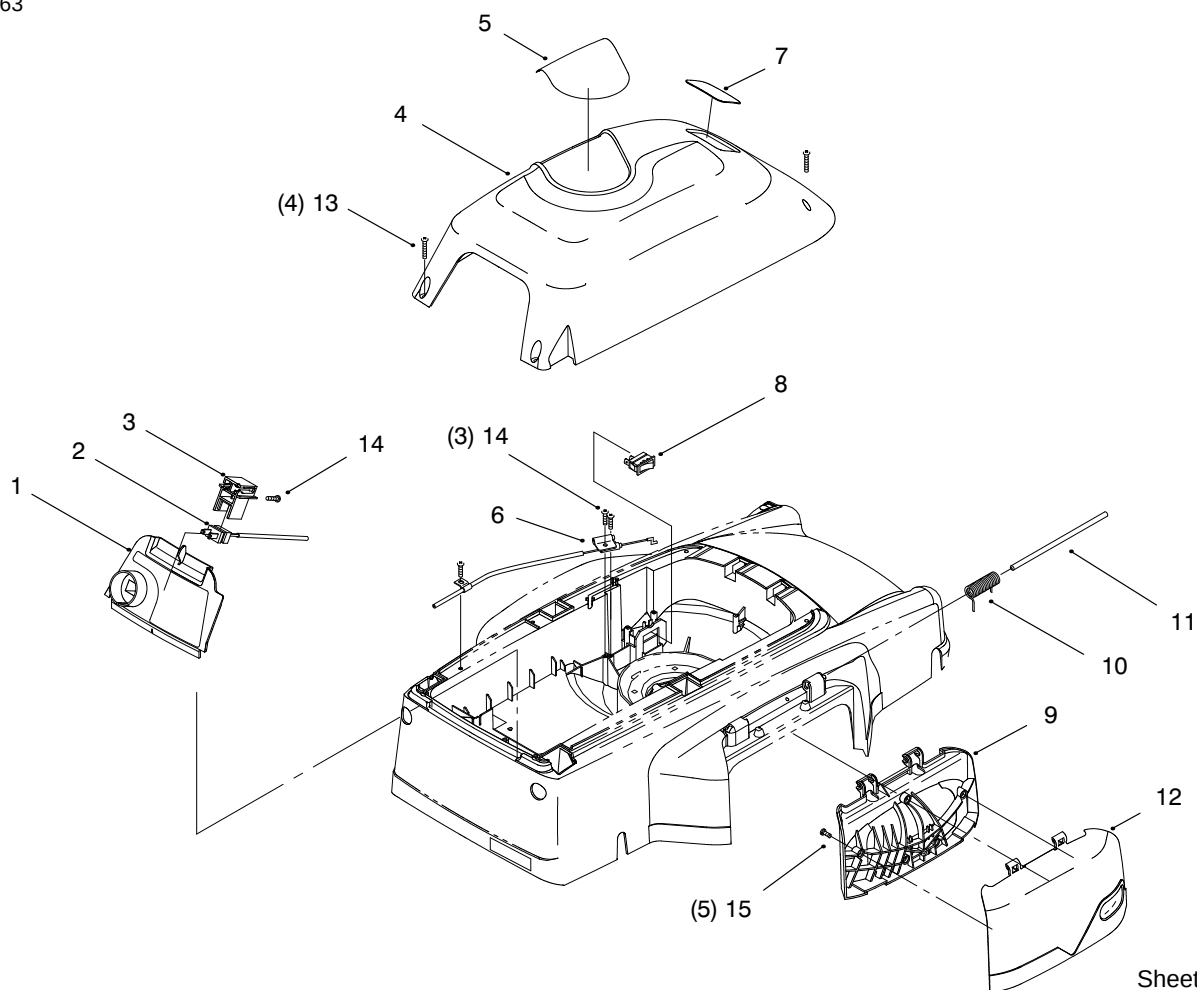

Sheet No.: 4

Cover, Mulch Plug and Panel Assembly

Ref. No.	Part No.	Qty.	Description
1	94-3880	1	ASM-Panel
2	93-3979	1	Wire Harness
3	93-3344	1	Housing-Plug
4	94-3898	1	ASM-Cover
5	98-1490	1	Decal-120 Volt
6	93-3975	1	Bracket-Cable
7	92-2289	1	Plate-Logo
8	94-3886	1	Switch
9	93-3956	1	Mulch Plug-Inside
10	94-3865	1	Spring-Torsion
11	93-3990	1	Pin-Hinge
12	93-3957	1	Mulch Plug-Outside
13	93-3986	4	Screw-PPH
14	94-4496	4	Screw
15	94-6961	5	Screw


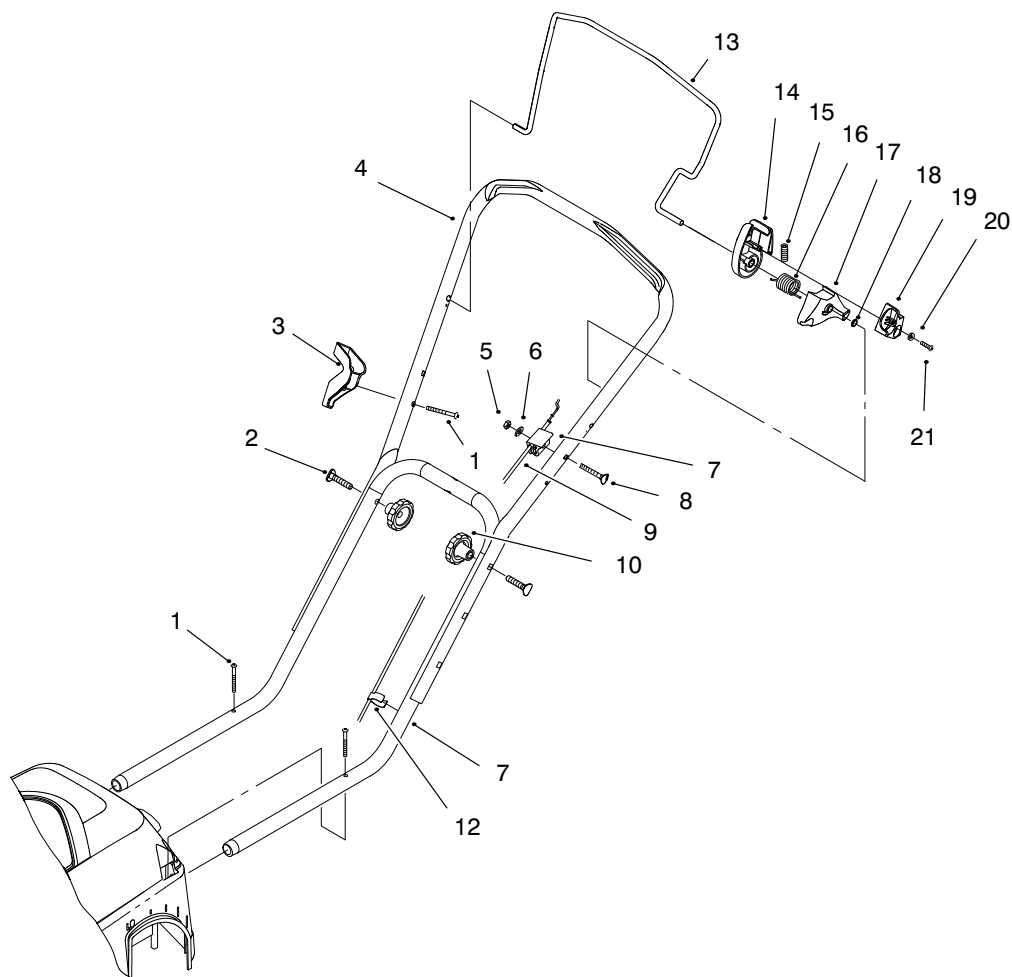


Sheet No.: 5

Handle and Controls Assembly

Ref. No.	Part No.	Qty.	Description
1	93-3986	3	Screw-PPH
2	92-2260	2	Screw-Handle
3	93-3996	1	Lock-Cord
4	95-2742	1	Handle-Upper
5	3296-8	1	Nut-Lock
6	3256-2	1	Washer-Flat
7	94-7407	1	Support-Cable
8	92-2269	1	Screw-Handle
9	93-3978	1	Cable-Control
10	19-4050	2	Knob
11	93-3972	1	Handle-Lower
12	94-7409	1	Clip-Cable
13	95-3000	1	Bail-Comfort Grip
14	93-3969	1	Housing-Bail
15	94-3851	1	Spring-Slide
16	94-1154	1	Spring-Bail
17	93-3967	1	Cam
18	94-1191	1	Nut-Push
19	93-3968	1	Slide
20	94-3868	1	Washer-Flat
21	94-4496	1	Screw

Ref. No.	Part No.	Qty.	Description

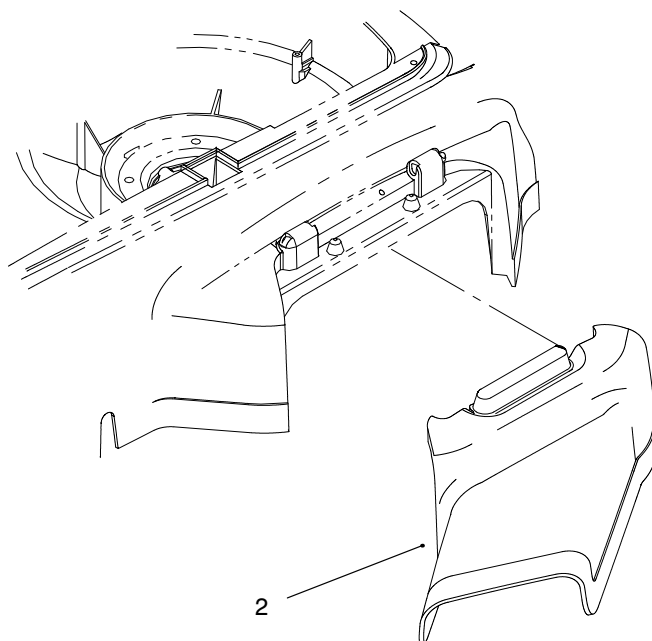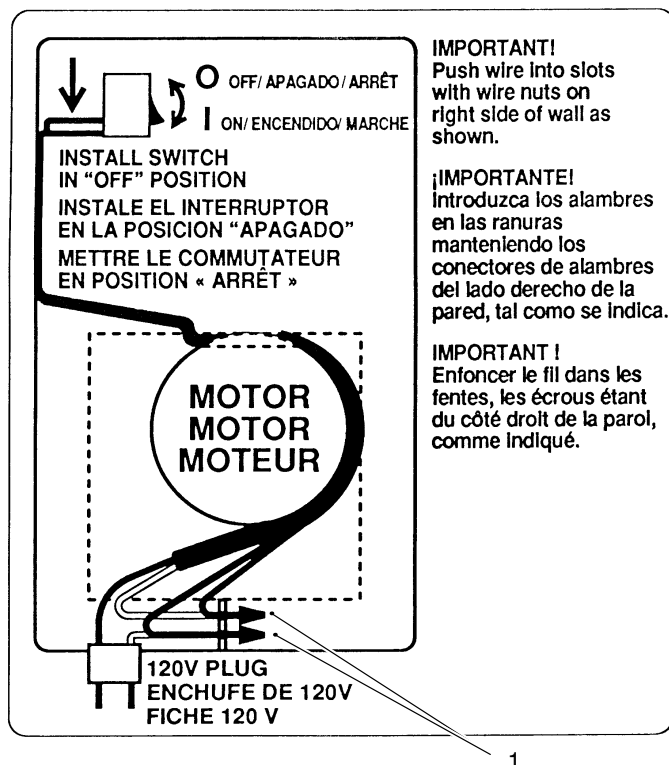

Sheet No.: 6

Connectors and Side Discharge Chute

Ref. No.	Part No.	Qty.	Description
1	73-6570	2	Connector-Wire Nut
2	93-3963	1	Chute-Side Discharge

Ref. No.	Part No.	Qty.	Description

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
610358	1	4	4	Nut—Lock
19-4050	4	10	2	Knob
26-0671	2	5	1	Bolt—Blade
40-1940	1	6	4	Washer
61-8780	2	15	3	Bearing—Ball
61-8880	2	28	1	Spring—Compression
73-6570	5	1	2	Connector—Wire Nut
76-2160	1	15	2	Plate—Kicker
92-1008	1	2	2	Knob—Height Adjust
92-1057	1	13	4	Bolt—Shoulder
92-2260	4	2	2	Screw—Handle
92-2269	4	8	1	Screw—Handle
92-2289	3	7	1	Plate—Logo
92-9586	1	7	2	ASM—Wheel
92-9698	2	16	1	Screw—Shoulder
93-0344	1	12	2	ASM—Wheel
93-3321	2	12	1	Pulley—Driven
93-3322	2	27	1	Mount—Cable
93-3323	2	26	1	Idler
93-3325	2	19	1	Spindle
93-3328	2	13	1	Drum—Brake
93-3329	2	1	1	Shaft—Spindle
93-3330	2	14	1	Hub—Pulley
93-3331	2	9	1	Pulley—Motor
93-3344	3	3	1	Housing—Plug
93-3952	1	5	2	Axle
93-3954	2	3	1	Blade
93-3956	3	9	1	Mulch Plug—Inside
93-3957	3	12	1	Mulch Plug—Outside
93-3963	5	2	1	Chute—Side Discharge
93-3967	4	17	1	Cam
93-3968	4	19	1	Slide
93-3969	4	14	1	Housing—Bail
93-3972	4	11	1	Handle—Lower
93-3975	3	6	1	Bracket—Cable
93-3978	4	9	1	Cable—Control
93-3979	3	2	1	Wire Harness
93-3980	2	20	1	Spacer—Bearing
93-3985	1	9	11	Screw—PPH
93-3985	2	29	2	Screw—PPH
93-3986	3	13	4	Screw—PPH
93-3986	4	1	3	Screw—PPH
93-3988	2	25	1	Pushnut
93-3989	2	24	1	Belt
93-3990	3	11	1	Pin—Hinge
93-3991	2	17	1	ASM—Brake Lever
93-3995	2	18	1	Spring—Brake/Switch
93-3996	4	3	1	Lock—Cord
94-1154	4	16	1	Spring—Bail
94-1191	4	18	1	Nut—Push
94-3851	4	15	1	Spring—Slide
94-3865	3	10	1	Spring—Torsion
94-3866	2	23	1	Guide—Belt
94-3868	4	20	1	Washer—Flat
94-3870	1	3	1	ASM—Front HOC Lever
94-3871	1	11	1	ASM—Rear HOC Lever
94-3873	2	21	1	ASM—Baffle
94-3880	3	1	1	ASM—Panel
94-3886	3	8	1	Switch
94-3895	1	1	1	ASM—Deck
94-3898	3	4	1	ASM—Cover

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
94-4496	2	6	4	Screw
94-4496	3	14	4	Screw
94-4496	4	21	1	Screw
94-6917	2	7	1	Motor ASM-120v
94-6961	1	16	4	Screw
94-6961	2	22	1	Screw
94-6961	3	15	5	Screw
94-7407	4	7	1	Support-Cable
94-7409	4	12	1	Clip-Cable
94-7417	1	14	1	Trailing Shield
94-9155	2	32	1	Bracket
95-2742	4	4	1	Handle-Upper
95-3000	4	13	1	Bail-Comfort Grip
95-5037	1	10	1	Plate-HOC
95-5167	1	8	1	ASM-Liner
98-1490	3	5	1	Decal-120 Volt
98-1491	1	17	1	Decal-Deck
3219-6	2	10	1	Nut-Hex
3256-2	4	6	1	Washer-Flat
3256-27	2	11	1	Washer-Flat
3290-465	2	4	1	Washer-Spring
3296-8	4	5	1	Nut-Lock
3296-56	2	31	1	Nut-Lock
32144-8	2	8	2	Screw-PPH
32144-44	2	2	3	Screw-HWHTF
32144-110	2	30	1	Screw-HWHTF

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

[illegible]