



44" CUTTING UNIT

Model No. 79108 – 8900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Deck Assembly	1	Toro Part Number Index	5-6
Baffle & Cover Assembly	2	Maintenance	7-9
Brake & Idler Assembly	3		
Belt & Decal Assembly	4	Note:	

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
-------------	-------------------	-------------	-------------------

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFV	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HS	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

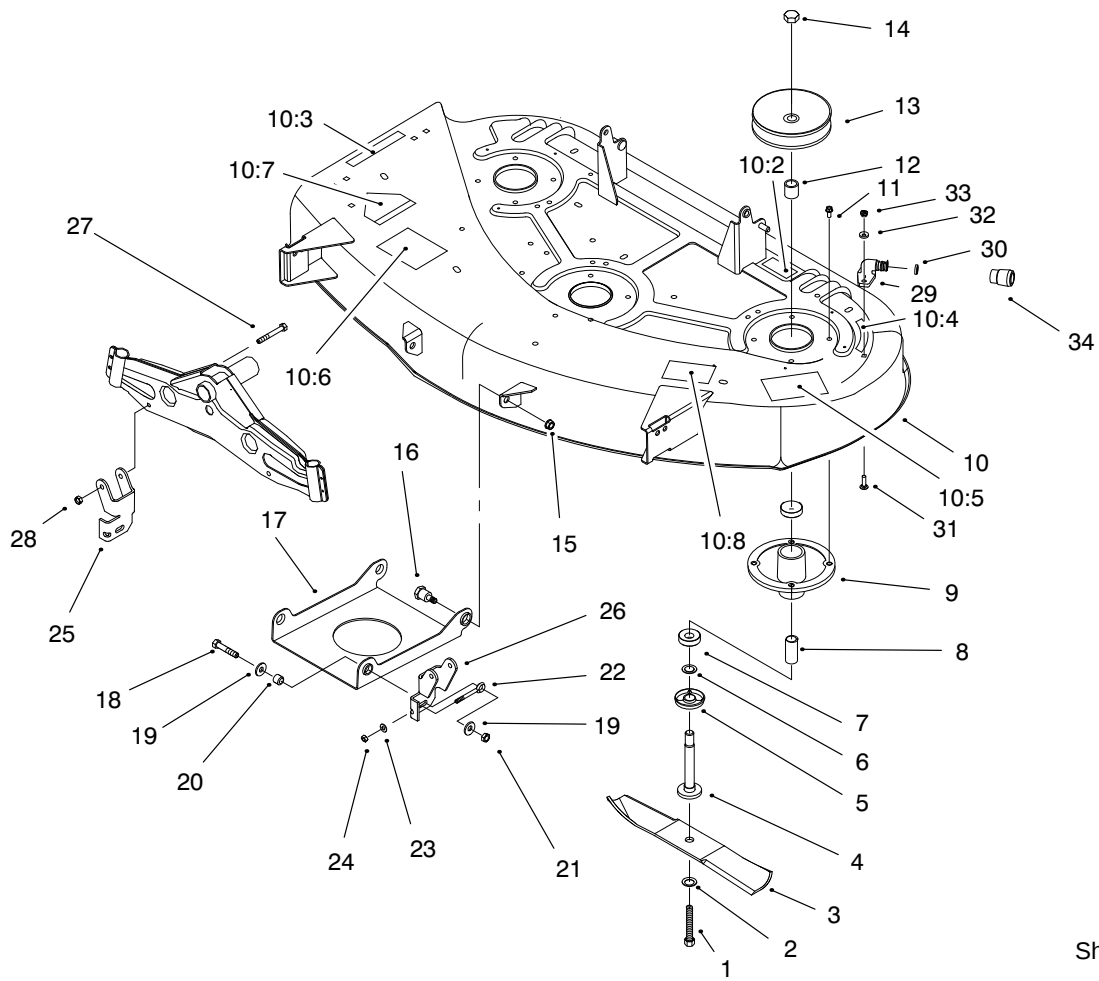


Sheet No.:2

Deck Assembly

Ref. No.	Part No.	Qty.	Description
1	26-0671	3	Bolt-Blade
2	3290-465	3	Washer-Spring
3	92-7952	3	Blade-Recycler
4	80-4342	3	Shaft-Spindle
5	80-4360	3	Shield - Bearing
6	80-4380	3	Spacer
7	38-7820	6	Bearing-Ball
8	62-3661	3	Spacer - Bearing
9	88-4510	3	Spindle
10	95-6107	1	Deck ASM-Dom. (Service)
10:2	55-4300	2	Decal-Warning
10:3	68-3650	1	Decal-Danger
10:4	68-3660	2	Decal - Shield Danger
10:5	66-1340	1	Decal-Discharge
10:6	93-3777	1	Decal-Belt
10:7	93-1122	1	Decal-Danger
10:8	93-7282	1	Decal-Wheel Adjustment
11	32144-41	12	Screw-HWHTF
12	88-5360	3	Spacer - Pulley
13	88-5330	3	Pulley - Deck
14	3219-6	3	Nut-Hex
15	3296-23	2	Nut-Lock
16	94-5823	2	Bolt-Shoulder

Ref. No.	Part No.	Qty.	Description
17	93-3881-03	1	Pan - Front Deck Suspens
18	323-9	2	Screw-HH
19	80-6990	4	Washer-Hardened
20	93-9847	2	Spacer
21	3296-39	2	Nut-Lock
22	61-9980	2	Screw-Adjusting
23	3256-22	2	Washer-Flat
24	3296-42	2	Nut-Lock
25	93-9849-03	1	Bracket-Deck
26	93-9848-03	1	Bracket-Deck
27	322-12	2	Screw HH
28	3296-29	2	Nut-Lock
29	95-2747	1	Fitting-Washout
30	46-6290	1	O-Ring
31	3229-1	2	Bolt-CARR
32	3256-1	2	Washer-Flat
33	3296-16	2	Nut-Lock
34	95-3270	1	Connector-Hose

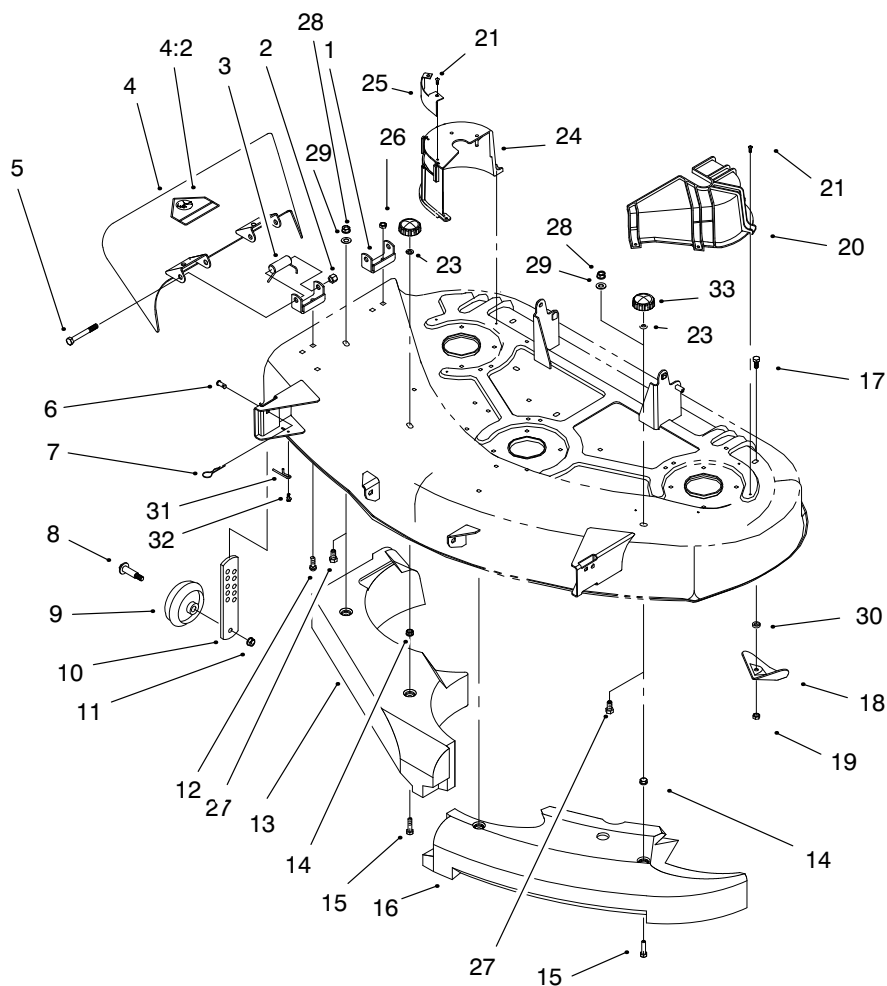


Sheet No.:3

Baffle & Cover Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	29-5590-03	2	Fincket-Pivot	26	3296-29	4	Nut-Lock
2	3296-5	2	Nut-Lock	†27	3231-21	2	Bolt-CARR
3	40-6230	2	Spring-Torsion	†28	3296-39	2	Nut-Lock
4	57-6980-03	1	Deflector ASM-44"	†29	3256-5	2	Washer-Flat
			Deck	30	59-4310	4	Spacer
4:2	43-8480	1	Decal-Danger	31	94-1981	2	Spring-Gage Wheel
5	3211-15	2	Screw-HH	32	32104-76	2	Screw-Self TAP
6	283-2	2	Pin-Clevis	33	94-5583	4	Knob
7	3290-307	2	Pin-Cotter				
8	56-6591	2	Wheel Bolt				
9	701756	2	Wheel - Deck				
10	93-8010	2	Plate - Gage Wheel				
11	3296-59	2	Nut-Lock				
12	3230-23	4	Bolt-CARR				
13	93-7651	1	Baffle-RH				
14	32149-1	4	Nut				
15	322-6	4	Screw-HH				
16	93-7652	1	Baffle-LH				
17	3230-23	4	Bolt-CARR				
18	84-5760	4	Plate-Kicker				
19	3296-29	4	Nut-Lock				
20	93-3866	1	Cover-Belt				
21	32104-76	9	Screw-Self TAP				
23	3290-456	4	Washer-Lock				
24	93-3865	1	Cover-Belt				
25	93-3876-03	1	Insert-Belt Cover				

† Included in a service kit or in an assembly

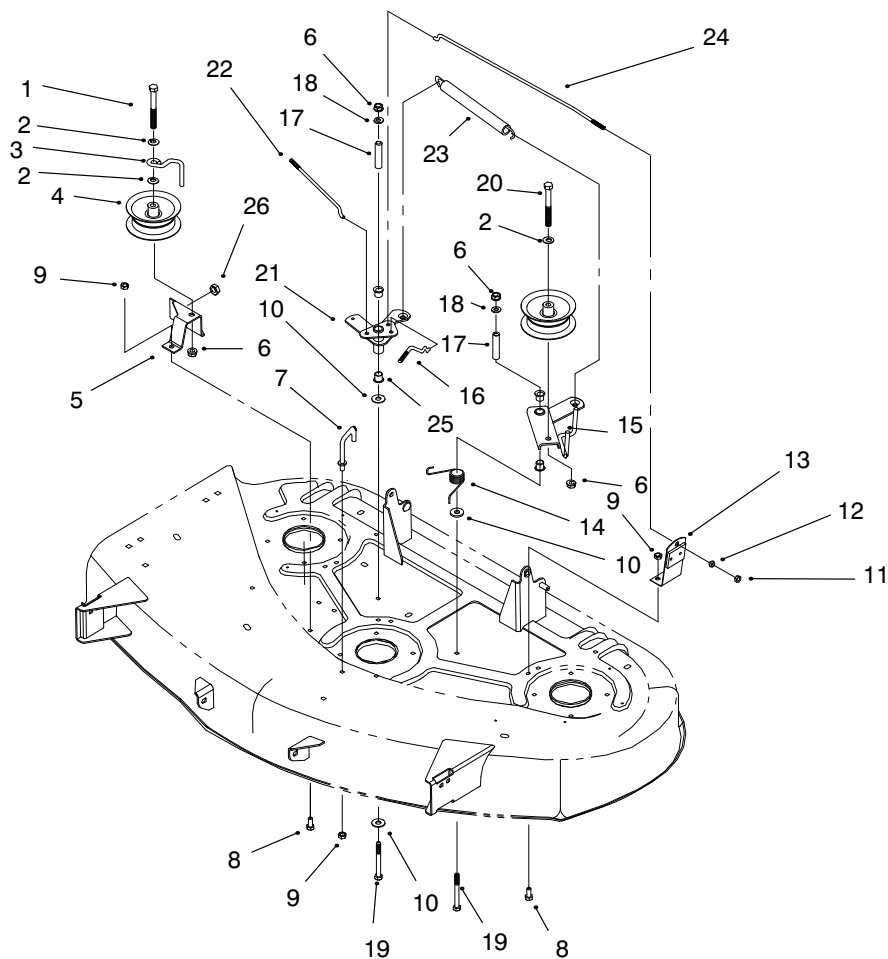


Sheet No.:4

Brake & Idler Assembly

Ref. No.	Part No.	Qty.	Description
1	323-12	1	Screw
2	3256-24	3	Washer-Flat
3	88-5070	1	Belt Guide - Idler
4	88-5630	2	Pulley - Idler
5	93-3860-03	1	Bracket-Idler
6	3296-39	4	Nut-Lock
7	88-5960	1	Belt Guide - Trans. LH
8	322-3	9	Screw-HH
9	3296-29	10	Nut-Lock
10	80-6990	3	Washer-Hardened
11	3296-42	3	Nut-Lock
12	67-0710	3	Ball - Swivel
13	93-3841	3	Brake Assembly
14	93-9342	1	Spring-Torsion
15	94-1986-03	1	Bellcrank Wa
16	93-3852	1	Rod-Brake
17	94-1988	2	Spacer-Pivot
18	3256-24	2	Washer-Flat
19	323-14	2	Screw-HH
20	323-10	1	Screw-HH
21	94-1989-03	1	Bellcrank Wa
22	93-3853	1	Rod-Brake
23	93-3850	1	Spring - Deck Engage
24	93-3851	1	Rod-Brake
25	256-257	4	Bushing-Flange
26	3220-2	1	Nut-Jam

Ref. No.	Part No.	Qty.	Description

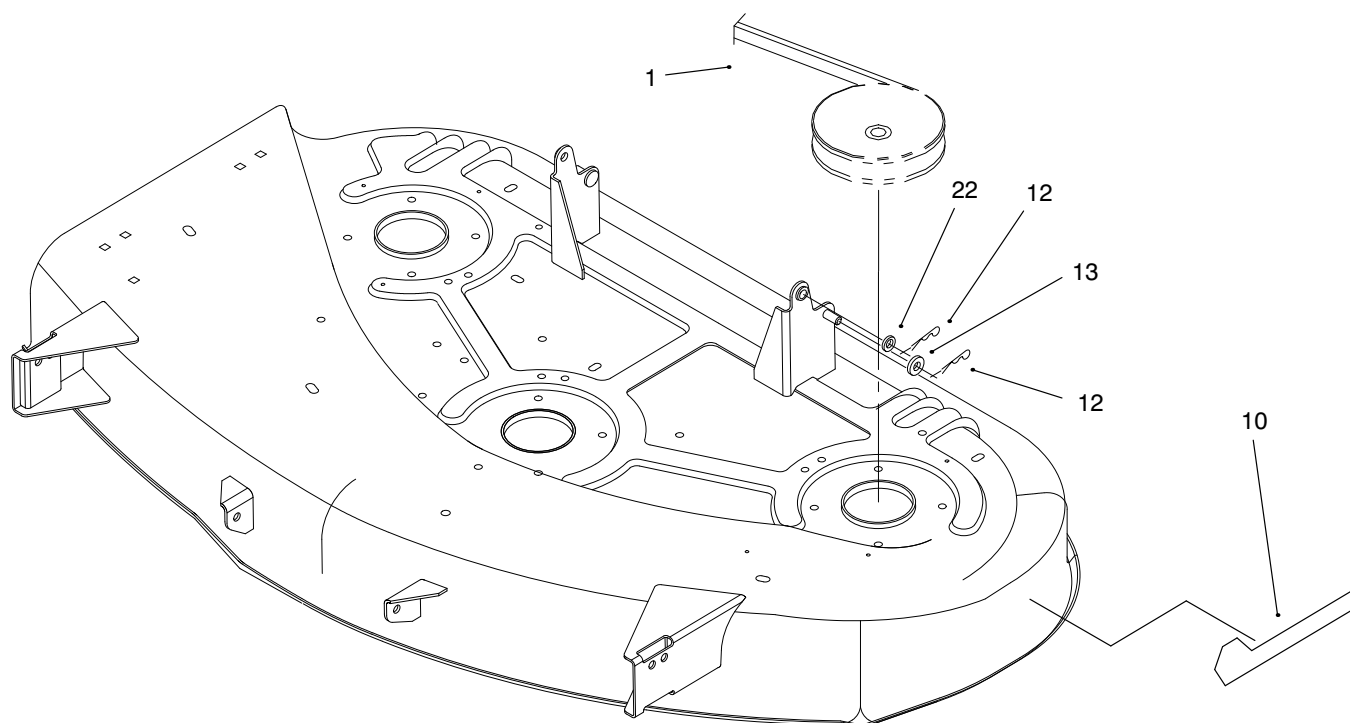

Sheet No.:5

Belt & Decal Assembly

Ref. No.	Part No.	Qty.	Description
1	93-3884	1	V-Belt
10	93-3776	1	Decal-Deck
12	3290-307	4	Pin-Cotter
13	80-6990	2	Washer-Hardened
22	3256-24	2	Washer-Flat

Ref. No.	Part No.	Qty.	Description

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
701756	2	9	2	Wheel – Deck
26-0671	1	1	3	Bolt – Blade
29-5590-03	2	1	2	Bracket – Pivot
38-7820	1	7	6	Bearing – Ball
40-6230	2	3	2	Spring – Torsion
43-8480	2	4:2	1	Decal – Danger
46-6290	1	30	1	O – Ring
55-4300	1	10:2	2	Decal – Warning
56-6591	2	8	2	Wheel Bolt
57-6980-03	2	4	1	Deflector ASM – 44" Deck
59-4310	2	30	4	Spacer
61-9980	1	22	2	Screw – Adjusting
62-3661	1	8	3	Spacer – Bearing
66-1340	1	10:5	1	Decal – Discharge
67-0710	3	12	3	Ball – Swivel
68-3650	1	10:3	1	Decal – Danger
68-3660	1	10:4	2	Decal – Shield Danger
80-4342	1	4	3	Shaft – Spindle
80-4360	1	5	3	Shield – Bearing
80-4380	1	6	3	Spacer
80-6990	1	19	4	Washer – Hardened
80-6990	3	10	3	Washer – Hardened
80-6990	4	13	2	Washer – Hardened
84-5760	2	18	4	Plate – Kicker
88-4510	1	9	3	Spindle
88-5070	3	3	1	Belt Guide – Idler
88-5330	1	13	3	Pulley – Deck
88-5360	1	12	3	Spacer – Pulley
88-5630	3	4	2	Pulley – Idler
88-5960	3	7	1	Belt Guide – Trans. LH
92-7952	1	3	3	Blade – Recycler
93-1122	1	10:7	1	Decal – Danger
93-3776	4	10	1	Decal – Deck
93-3777	1	10:6	1	Decal – Belt
93-3841	3	13	3	Brake Assembly
93-3850	3	23	1	Spring – Deck Engage
93-3851	3	24	1	Rod – Brake
93-3852	3	16	1	Rod – Brake
93-3853	3	22	1	Rod – Brake
93-3860-03	3	5	1	Bracket – Idler
93-3865	2	24	1	Cover – Belt
93-3866	2	20	1	Cover – Belt
93-3876-03	2	25	1	Insert – Belt Cover
93-3881-03	1	17	1	Pan – Front Deck Suspens
93-3884	4	1	1	V – Belt
93-7282	1	10:8	1	Decal – Wheel Adjustment
93-7651	2	13	1	Baffle – RH
93-7652	2	16	1	Baffle – LH
93-8010	2	10	2	Plate – Gage Wheel
93-9342	3	14	1	Spring – Torsion
93-9847	1	20	2	Spacer
93-9848-03	1	26	1	Bracket – Deck
93-9849-03	1	25	1	Bracket – Deck
94-1981	2	31	2	Spring – Gage Wheel
94-1986-03	3	15	1	Bellcrank Wa
94-1988	3	17	2	Spacer – Pivot
94-1989-03	3	21	1	Bellcrank Wa
94-5583	2	33	4	Knob
94-5823	1	16	2	Bolt – Shoulder
95-2747	1	29	1	Fitting – Washout
95-3270	1	34	1	Connector – Hose
95-6107	1	10	1	Deck ASM – Dom. (Service)

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
256-257	3	25	4	Bushing-Flange
283-2	2	6	2	Pin-Clevis
322-3	3	8	9	Screw-HH
322-6	2	15	4	Screw-HH
322-12	1	27	2	Screw HH
323-9	1	18	2	Screw-HH
323-10	3	20	1	Screw-HH
323-12	3	1	1	Screw
323-14	3	19	2	Screw-HH
3211-15	2	5	2	Screw-Cap
3219-6	1	14	3	Nut-Hex
3220-2	3	26	1	Nut-Jam
3229-1	1	31	2	Bolt-CARR
3230-23	2	12	4	Bolt-CARR
3230-23	2	17	4	Bolt-CARR
3231-21	2	27	2	Bolt-CARR
3256-1	1	32	2	Washer-Flat
3256-5	2	29	2	Washer-Flat
3256-22	1	23	2	Washer-Flat
3256-24	3	2	3	Washer-Flat
3256-24	3	18	2	Washer-Flat
3256-24	4	22	2	Washer-Flat
3290-307	2	7	2	Pin-Cotter
3290-307	4	12	4	Pin-Cotter
3290-456	2	23	4	Washer-Lock
3290-465	1	2	3	Washer-Spring
3296-5	2	2	2	Nut-Lock
3296-16	1	33	2	Nut-Lock
3296-23	1	15	2	Nut-Lock
3296-29	1	28	2	Nut-Lock
3296-29	2	19	4	Nut-Lock
3296-29	2	26	4	Nut-Lock
3296-29	3	9	10	Nut-Lock
3296-39	1	21	2	Nut-Lock
3296-39	2	28	2	Nut-Lock
3296-39	3	6	4	Nut-Lock
3296-42	1	24	2	Nut-Lock
3296-42	3	11	3	Nut-Lock
3296-59	2	11	2	Nut-Lock
32104-76	2	21	9	Screw-Self TAP
32104-76	2	32	2	Screw-Self TAP
32144-41	1	11	12	Screw-HWHTF
32149-1	2	14	4	Nut

7

[illegible]

[illegible]