



Form No. 3401-465 Rev A

Count on it.

Parts Catalog

Stand-On Spreader/Sprayer

Model No. 34215—Serial No. 316000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard


TAP: self tapping

TTH: torx truss head

Contents

Frame Assembly	4
Knee Pad Assembly	6
Steering Assembly	8
Steering Linkage Assembly No. 126-3699	10
Ground Drive Assembly	12
Transaxle Cover Assembly No. 126-1462	14
Engine Assembly	16
Electrical Assembly	18
Spray System Assembly	20
Sprayer Tank Assembly No. 126-0286	22
Strainer Assembly No. 126-4358	24
Control Valve Manifold Assembly	26
Spray Manifold Assembly No. 126-7635	28
Hose Assembly No. 126-2250	30
Hose Assembly No. 126-7304	32
Left Nozzle Assembly No. 126-3667	34
Right Nozzle Assembly No. 126-3669	36
Center Nozzle Assembly No. 126-3668	38
Spreader Assembly	40
Spreader Hopper Assembly	42
Side Deflector Assembly	44

Frame Assembly

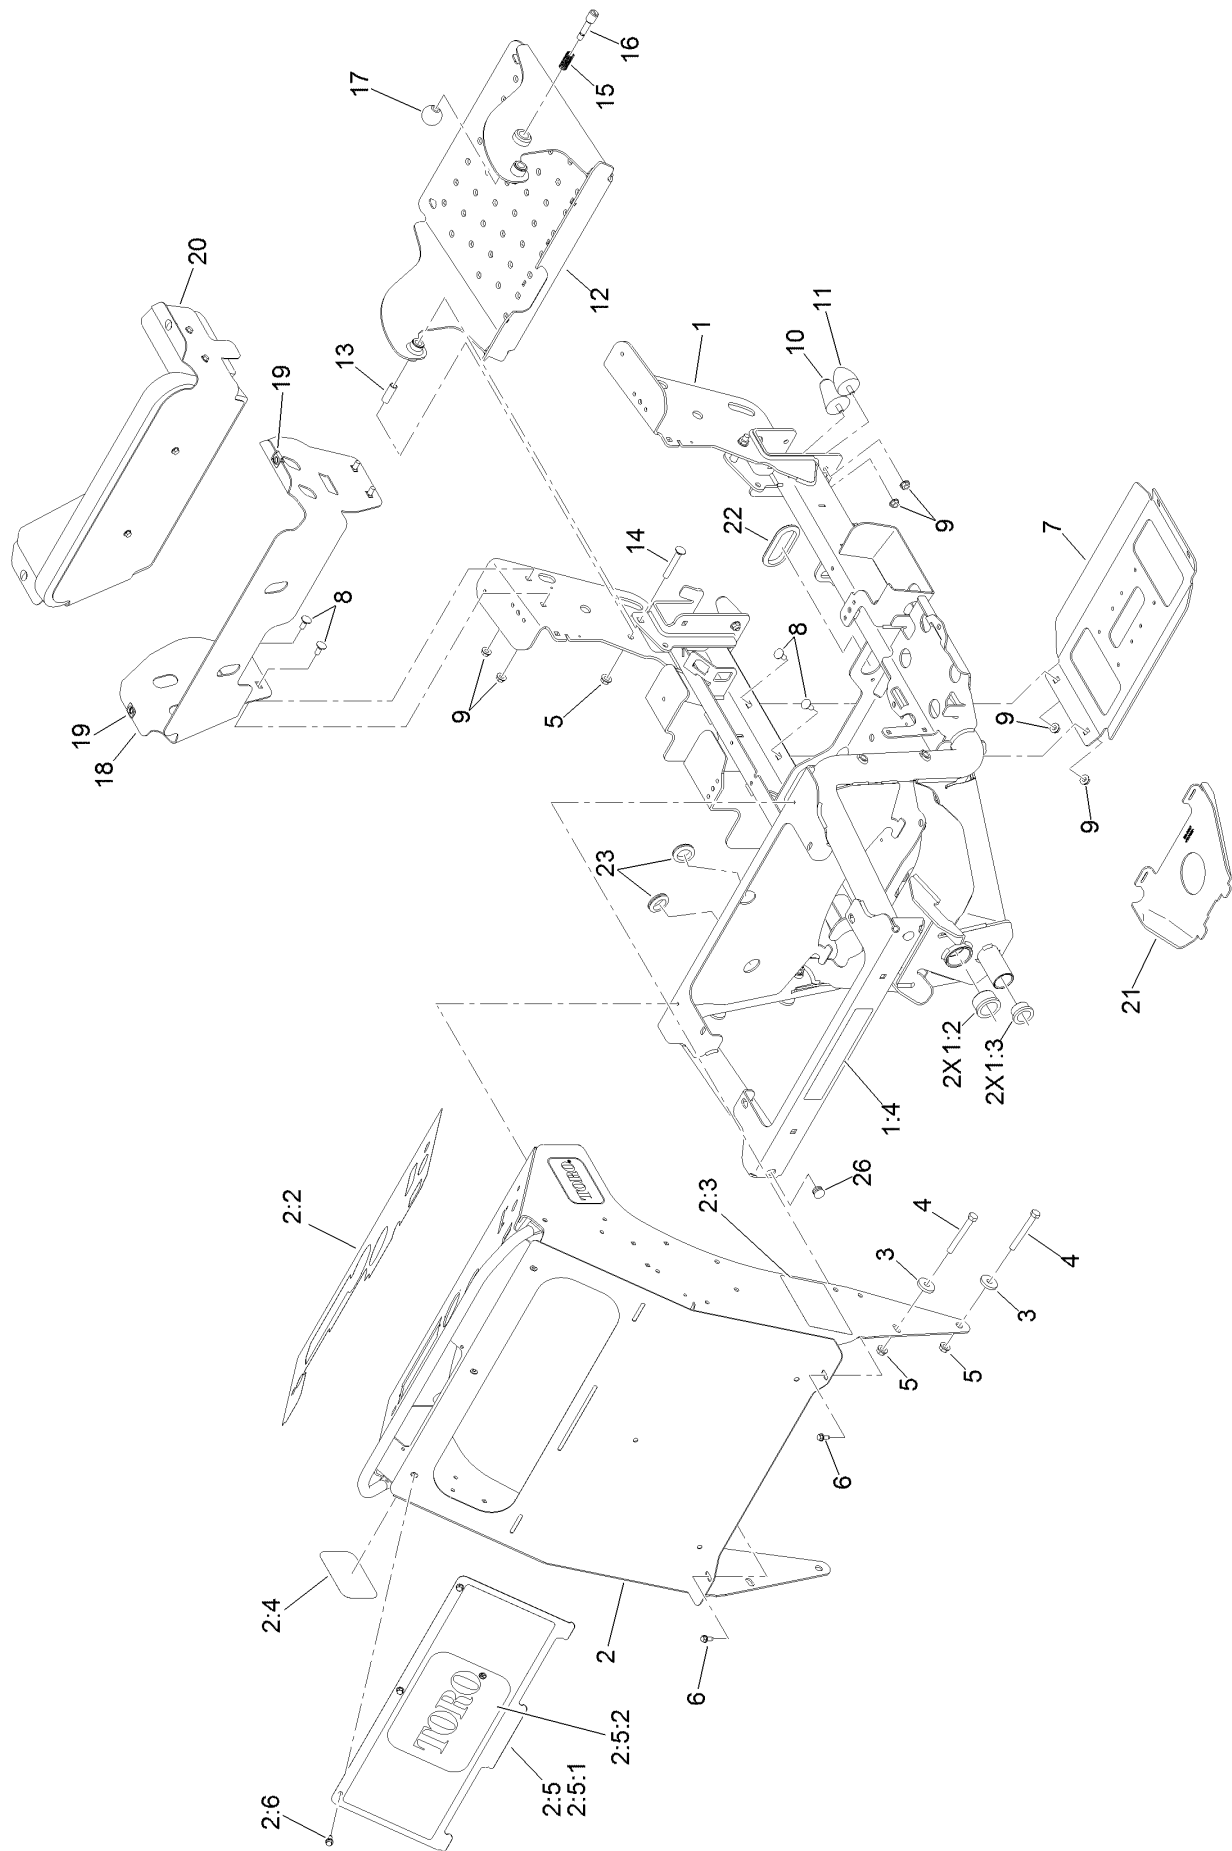


Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-0198	1	Frame ASM	8	126-0695	8	Screw-CARR
1:2	126-3008	2	Bearing-Flanged	9	126-2232	12	Nut-HF
1:3	126-3002	2	Bearing-Flanged	10	114-1925	2	Bumper-Rubber
1:4	126-4994	1	Decal-Tie Down	11	114-1926	2	Bumper-Rubber
2	126-6401	1	Control Tower ASM	12	126-0435	1	Operator Platform ASM
2:2	126-7312	1	Decal-Control	13	126-0434	2	Bushing-Pivot, Platform
2:3	126-5186	1	Decal-Service Aid	14	126-0702	2	Screw-CARR
2:4	126-5060	2	Decal-Logo, Toro	15	114-5348	1	Spring
2:5	126-7216	1	Access Panel W/ Decal	16	119-8650	1	Pin-Latch
2:5:1	126-6402-01	1	Panel-Access	17	1-603175	1	Knob-Ball
2:5:2	126-7225	1	Decal-Toro	18	126-1234-03	1	Mount-Pad, Knee
2:6	32144-10	3	Screw-HWH	19	119-1730	2	Receptacle-Clip, Mini
3	126-3875	4	Washer	20		1	Knee Pad ASM ●
4	126-2661	4	Screw-HH	21	126-2567	1	Shield-Dust
5	126-2233	6	Nut-HF	22	237-164	2	Grommet
6	32144-10	2	Screw-HWH	23	240-5	2	Grommet
7	126-1415	1	Guard-Lower	26	126-5147	2	Plug-Tube

● Not serviced separately

Knee Pad Assembly

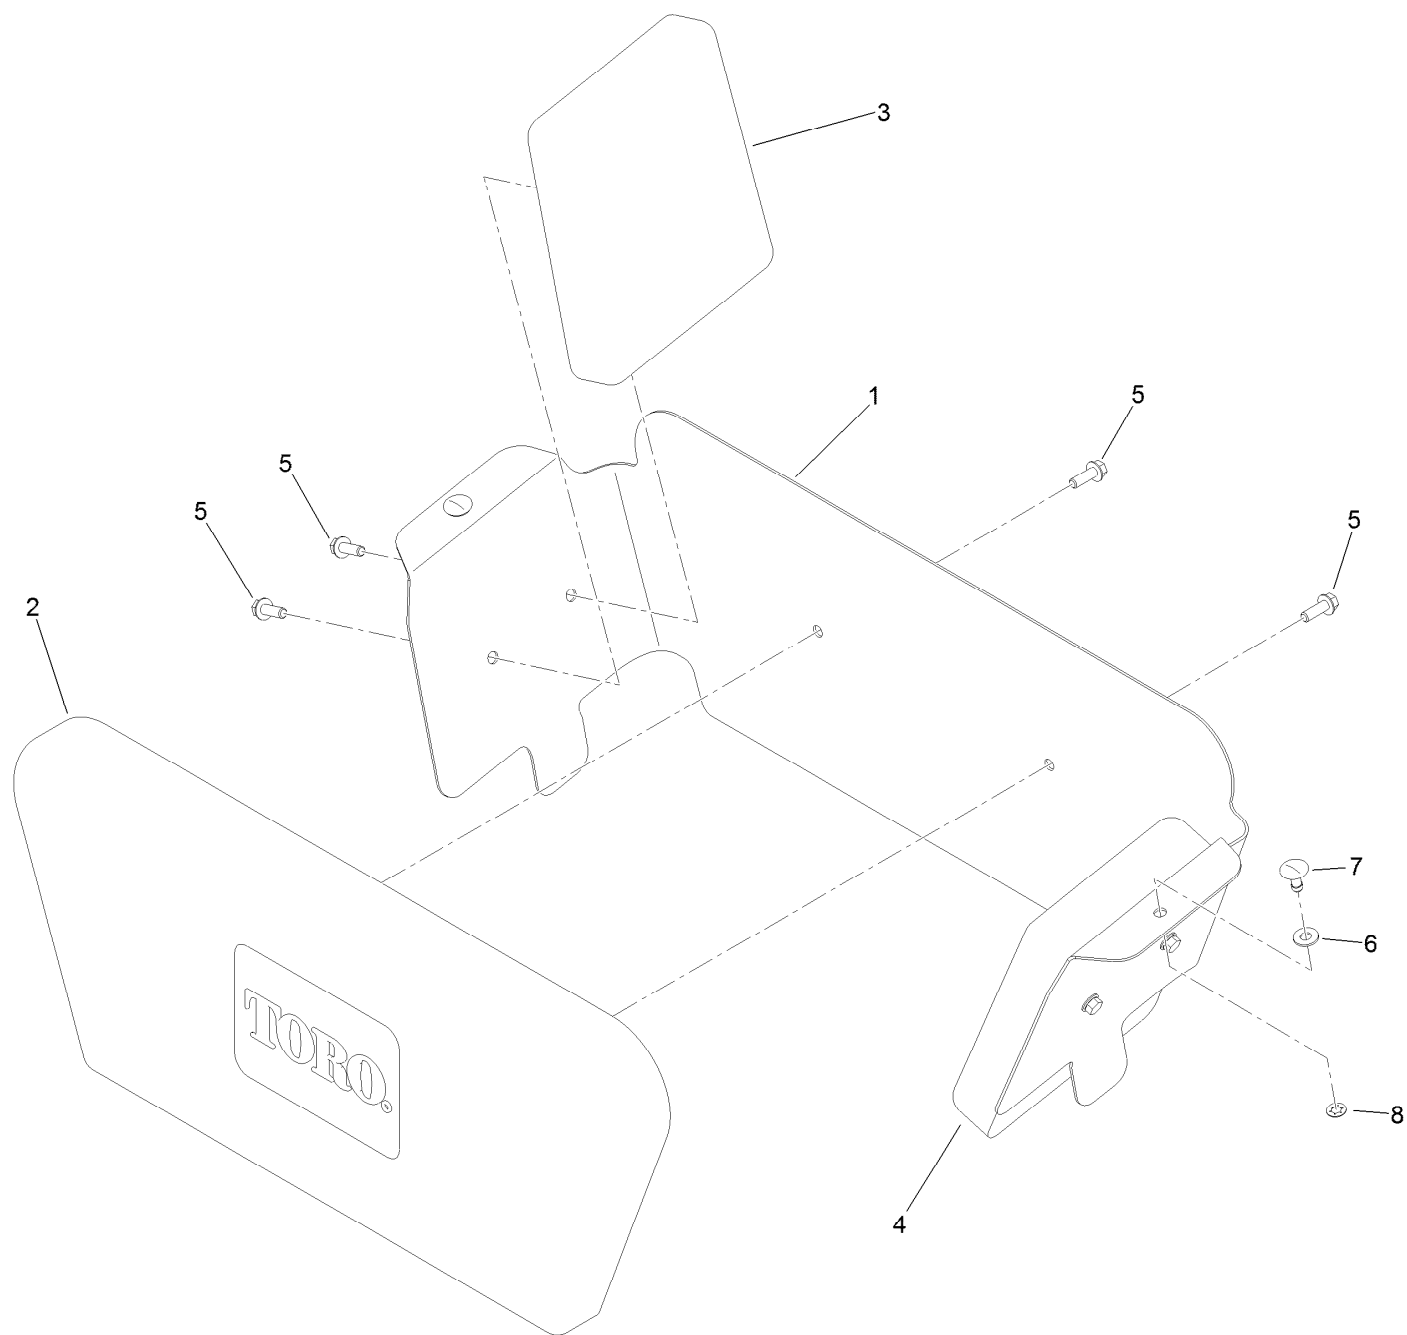

Knee Pad Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-1244-03	1	Bracket-Pad, Knee	5	117-8304	6	Screw-HHF
2	126-2776	1	Pad-Knee, Center	6	360-0140	2	Washer-Flat
3	126-2780	1	Pad-Knee, Side (LH)	7	119-1728	2	Stud-1/4 Turn
4	126-2781	1	Pad-Knee, Side (RH)	8	119-1729	2	Retainer-Stud

This exploded perspective view illustrates the assembly of a mechanical component, likely a pump or actuator. The main housing (1) is shown with internal components (2, 3, 4) and a mounting bracket (5). A long, curved arm (29) is attached to the housing via a pivot (31) and a spring (28). The arm is connected to a lever (27) which is part of a linkage mechanism (20). The lever is actuated by a cable (25) connected to a spring (26). The assembly is mounted on a base (13) which includes a wheel (13:2) and a pivot (13:1). The pivot is connected to a lever (13:1:1) which is part of a linkage mechanism (13:1:2). The lever is actuated by a cable (13:3) connected to a spring (13:4). The assembly is also connected to a cable (16) which is part of a linkage mechanism (1:3).

Steering Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-7045	1	Front Axle ASM	15	126-0980	2	Screw-CARR
1:2	126-7048	4	Bearing-Sleeve	16	126-2233	2	Nut-HF
1:3	126-1375	3	Zerk-Grease	17	3257-7	1	Key-Woodruff
2	126-0656	2	Washer-Flat	18	126-1614	1	Motion Handle ASM
3	126-3841	2	Nut-Hex, NI	18:2	126-2612	1	Decal-Warning
4	126-6048	1	Steering Shaft ASM	19	126-1598	1	Motion Handle ASM
4:2	126-1375	1	Zerk-Grease	19:2	103-9928	2	Bearing
5	126-7044	4	Washer-Thrust	20	126-0496	1	Shaft-Pivot, Speed Control
6	126-6733	2	Front Axle ASM	21	116-4198	1	Spacer-Shaft, Drive Lever
7	126-7069	2	Arm-Steering	22	117-8304	2	Screw-HHF
8	126-3875	4	Washer	23	126-1604-03	1	Panel-Rear, Steering
10	126-3699	2	Steering Linkage ASM	24	32144-10	4	Screw-HWH
11	3235-22	4	Screw-HH, Lock	25	2411-41	2	Rod End-Ball Joint
12	98-5975	2	Washer-Belleville	26	126-0498	2	Screw-HH
13	126-7221	2	Wheel And Tire ASM	27	126-2231	2	Nut-HF
13:1	126-7261	1	Wheel ASM	28	126-2169	1	Cable-Motion
13:1:1	116-0720	2	Bearing-Ball	29	1-303335	2	Tie-Plastic
13:1:2	126-7260	1	Spacer	30	104-1412	2	Bumper-Rubber
13:2	126-1509	1	Tire	31	3210-8	2	Screw-HH
13:3	232-27	1	Stem-Valve	32	32152-5	2	Nut-Hex
13:4	302-62	1	Fitting-Grease	33	126-7050	2	Spacer-Relief
14	116-9789	1	Bumper-Front				

Steering Linkage Assembly No. 126-3699

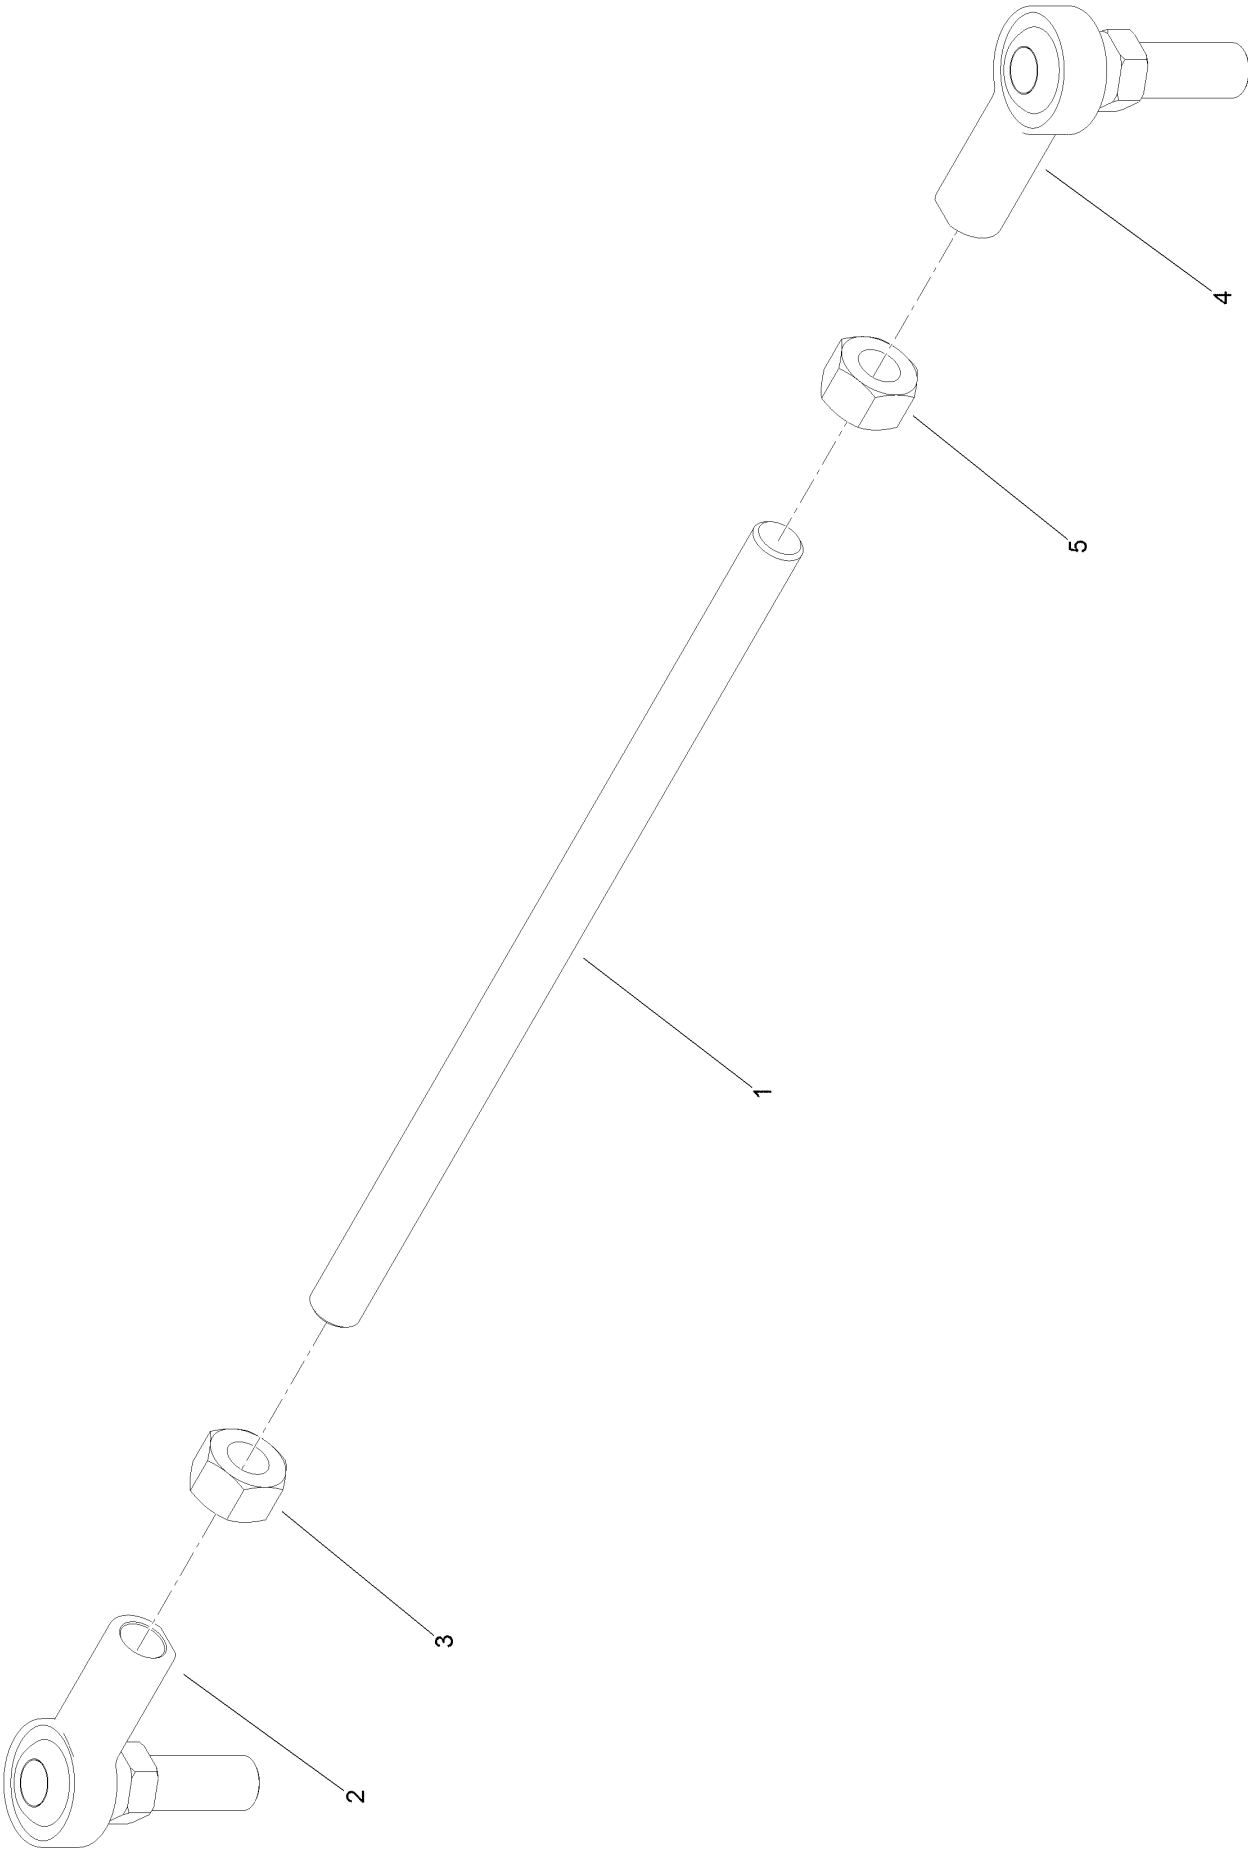


Steering Linkage Assembly No. 126-3699 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-0689	1	Rod-Linkage, Steering
2	126-3697	1	Rod-End, RH
3	126-0687	1	Nut-Hex

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	126-3698	1	Rod-End, LH
5	126-0688	1	Nut-Hex, LH


Ground Drive Assembly

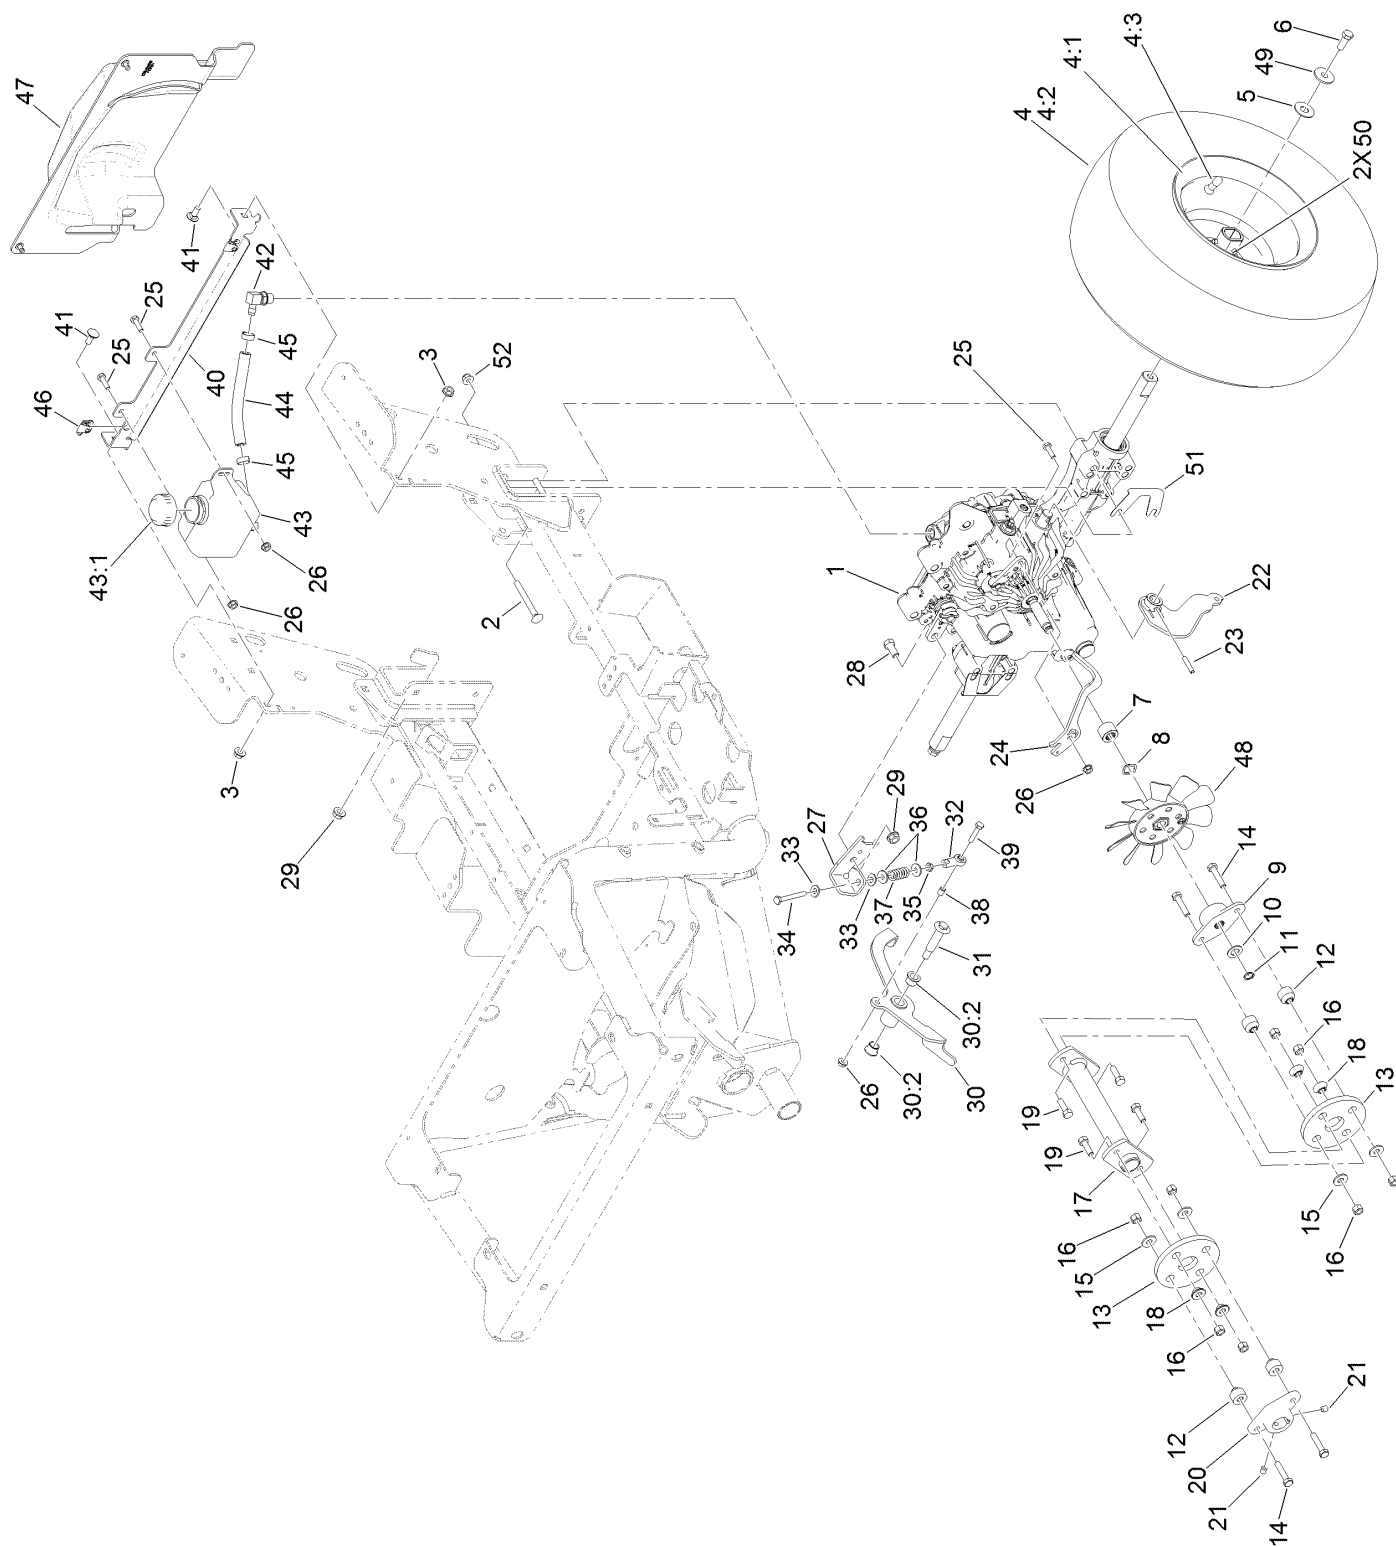

Ground Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-2814	1	Transaxle	27	126-3937-03	1	Arm-Brake
2	3230-13	4	Screw-CARR	28	126-0520	1	Screw-HH
3	126-2232	2	Nut-HF	29	126-2233	2	Nut-HF
4	126-7267	2	Wheel And Tire ASM	30	126-0433	1	Brake Lever ASM
4:1	126-7268	1	Wheel	30:2	116-4279	2	Bearing-Flange
4:2	126-1618	1	Tire	31	92-1057	1	Bolt-Shoulder
4:3	232-27	1	Stem-Valve	32	2411-41	1	Rod End-Ball Joint
5	126-7888	2	Washer-Nylon	33	1-303334	2	Washer-Spring
6	3235-22	2	Screw-HH, Lock	34	126-4009	1	Screw-HH
7	126-2983	1	Spacer-Shaft, Input	35	3220-1	1	Nut-Jam
8	3290-317	1	Washer-Spring	36	3256-78	2	Washer-Flat
9	116-9787	1	Hub-Shaft, Transaxle	37	1-323245	1	Spring-Compression
10	605256	1	Washer-Plain	38	612503	1	Spacer
11	32151-61	1	Ring-Retaining	39	321-8	1	Screw-HH
12	27-6590	4	Spacer-Coupling, Rubber	40	126-4423-03	1	Bracket-Mount, Tank
13	115-4523	2	Coupling-Rubber	41	126-0695	2	Screw-CARR
14	3210-8	4	Screw-HH	42	126-2927	1	Fitting-90 DEG
15	3256-3	4	Washer-Flat	43	126-2578	1	Tank ASM
16	32152-5	8	Nut-Hex	43:1	126-2579	1	Cap-Tank
17	126-3838-03	1	Shaft-Drive	44	126-2842	1	Hose-Expansion
18	125-9249	4	Spacer-Coupler, Rubber	45	126-3749	2	Clamp
19	3210-5	4	Screw-HH	46	119-1730	2	Receptacle-Clip, Mini
20	116-9788	1	Hub-Shaft, Engine	47	126-1462	1	Transaxle Cover ASM
21	3246-18	2	Setscrew	48	126-2980	1	Fan-7 Inch
22	126-6243-03	1	Arm-Motion	49	126-7889	2	Spacer-Wheel
23	126-4295	1	Pin-Spiral	50	126-3824	4	Screw-Set, SQH
24	126-2811-03	1	Arm-Release	51	126-8711	2	Spacer-Transaxle
25	126-0498	3	Screw-HH	52	104-8300	2	Nut-Flange, NI
26	126-2231	4	Nut-HF				

Transaxle Cover Assembly No. 126-1462

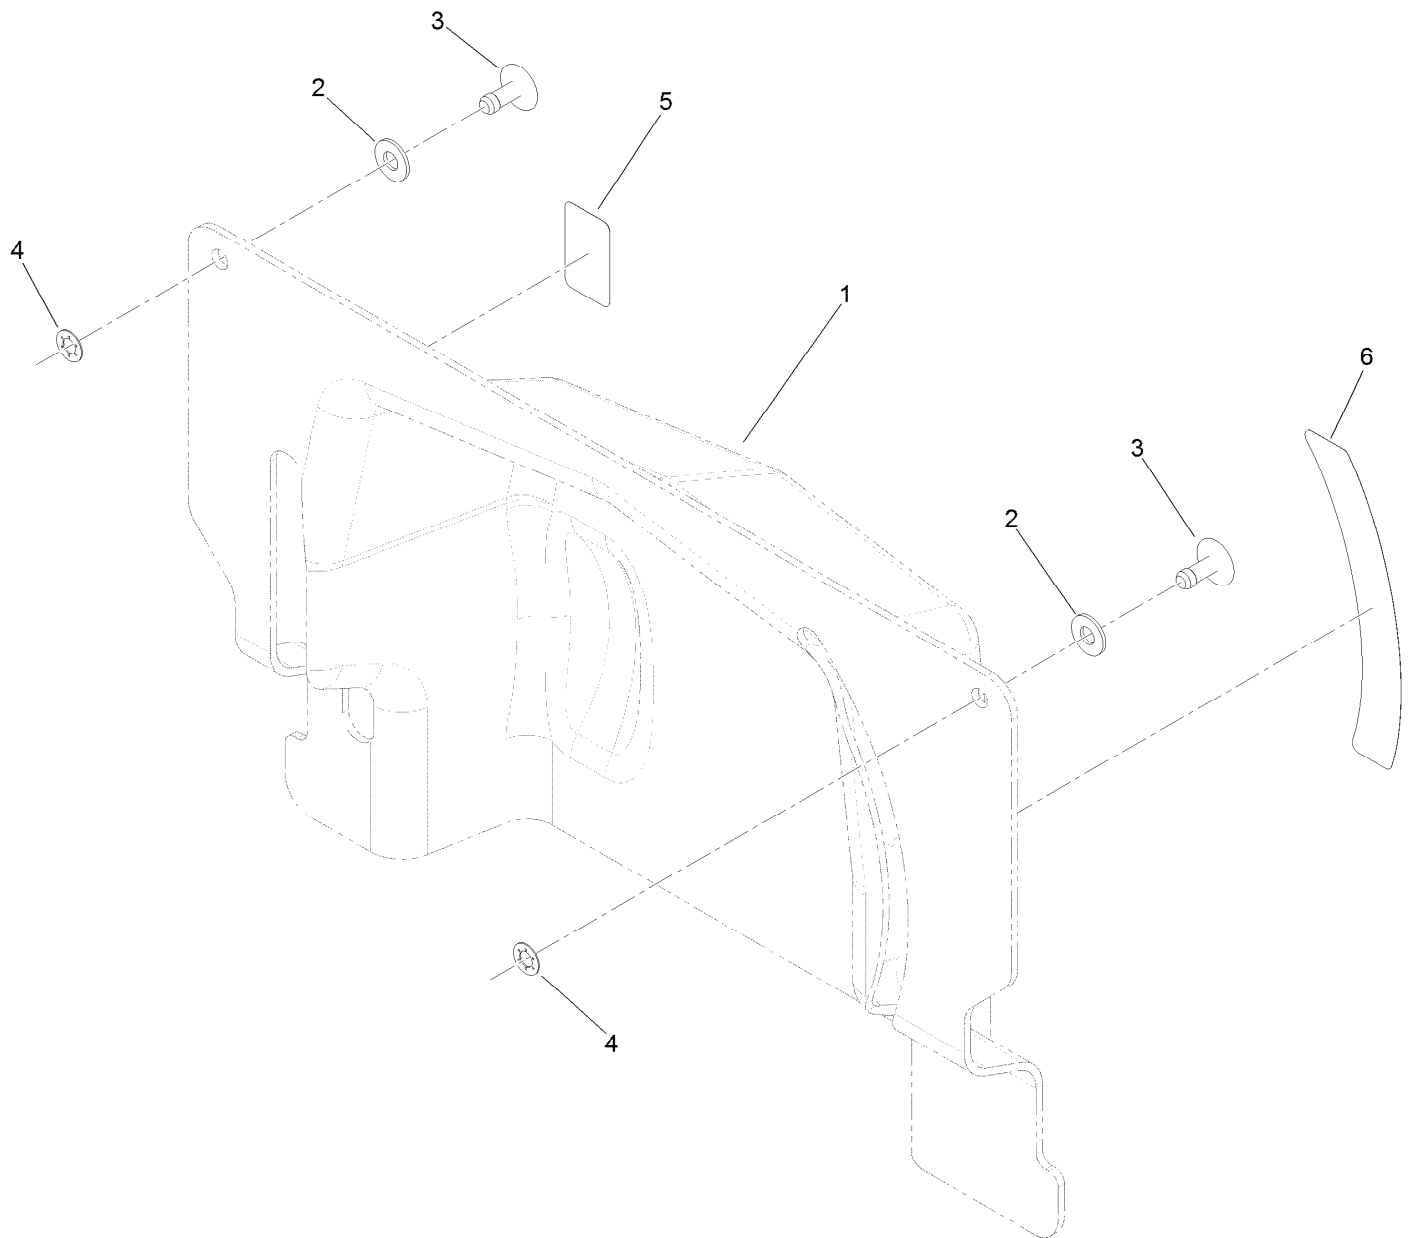


Transaxle Cover Assembly No. 126-1462 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Cover-Transaxle ●
2	360-0140	2	Washer-Flat
3	119-1728	2	Stud-1/4 Turn

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	119-1729	2	Retainer-Stud
5	126-2620	1	Decal-Brake, Park
6	126-2621	1	Decal-Release, Drive

● Not serviced separately

Engine Assembly


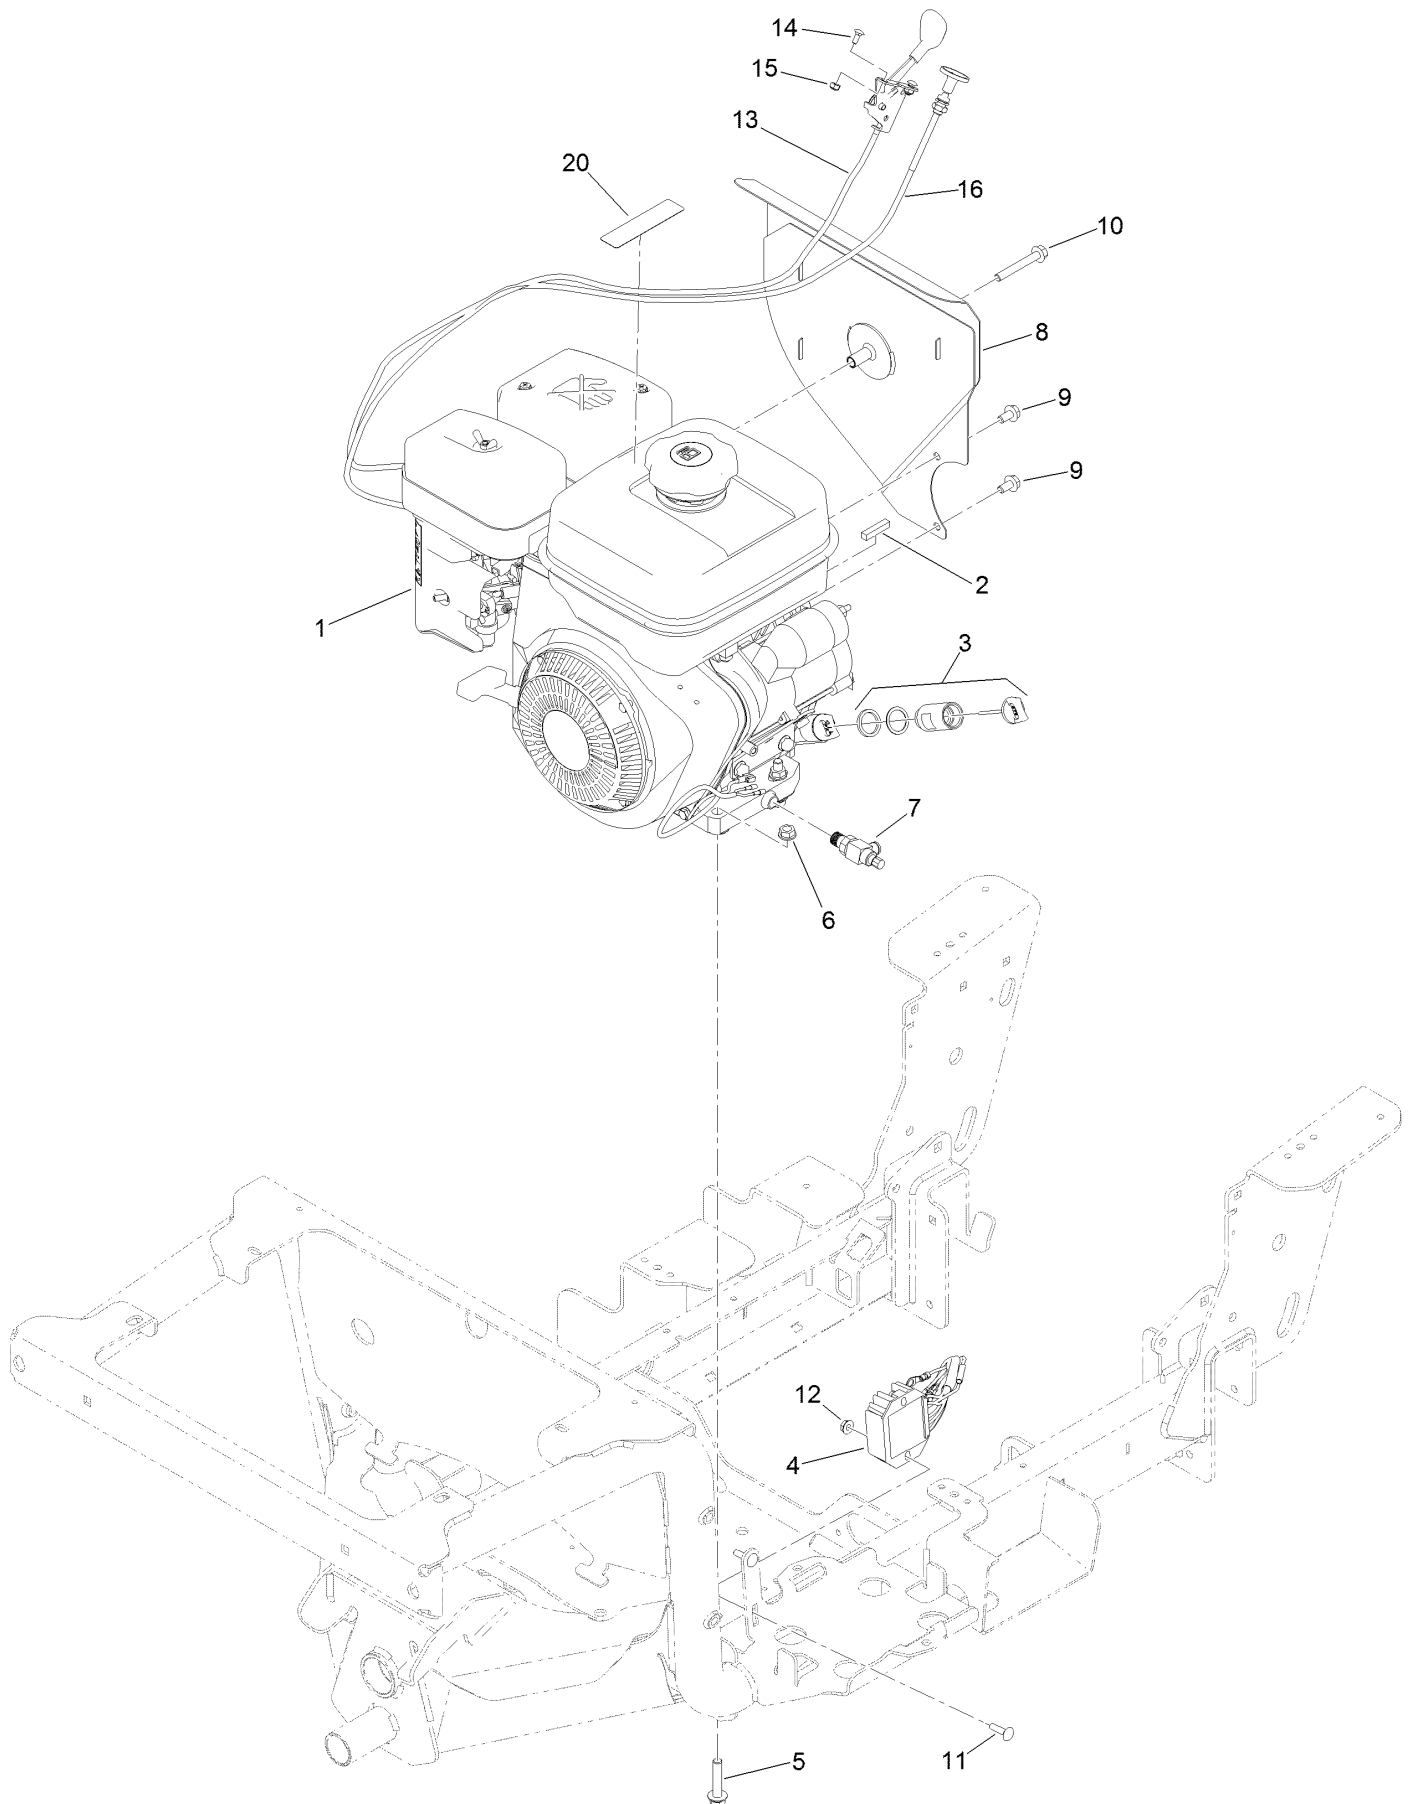


Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Engine-Subaru, Ex27 ●	10	33104-060	1	Screw-HHF
2	126-2532	1	Key-Crankshaft	11	126-1455	2	Screw-CARR
3	126-1432	1	Extender-Dipstick	12	126-2231	2	Nut-HF
4	126-4658	1	Regulator	13	126-2240	1	Control-Throttle
5	126-2710	4	Screw-HHF	14	1-807513	2	Bolt-CARR
6	126-2233	4	Nut-HF	15	3296-2	2	Nut-Lock, NI
7	103-6602	1	Valve-Oil Drain	16	126-2285	1	Cable-Choke, Push/Pull
8	126-2426	1	Heat Shield ASM	20	117-2718	1	Decal-Arrester, Spark
9	117-1836	2	Screw-HHF, Lock				

● Not serviced separately

Electrical Assembly

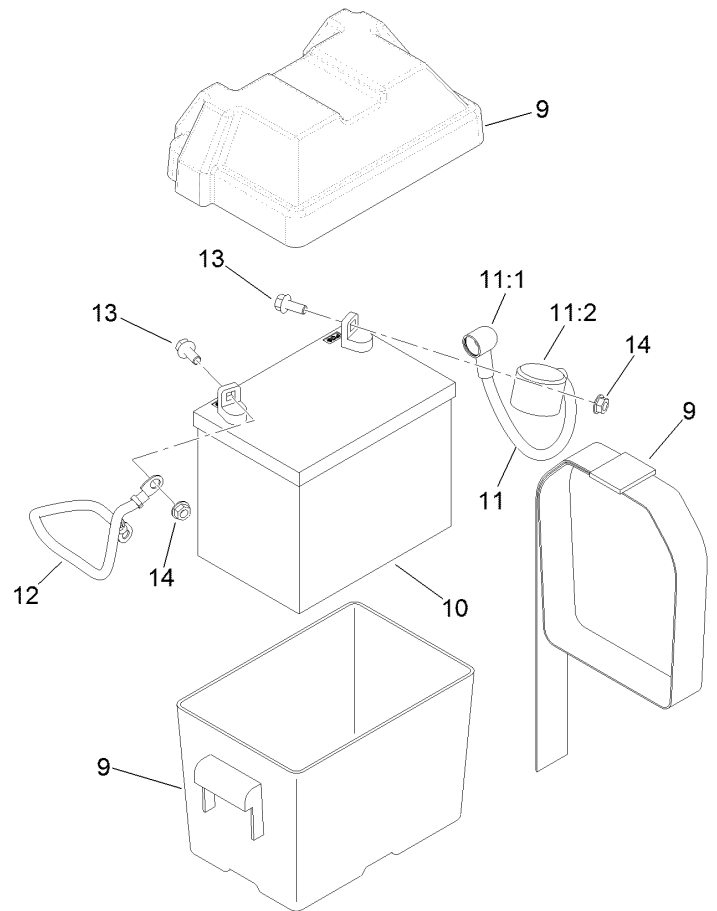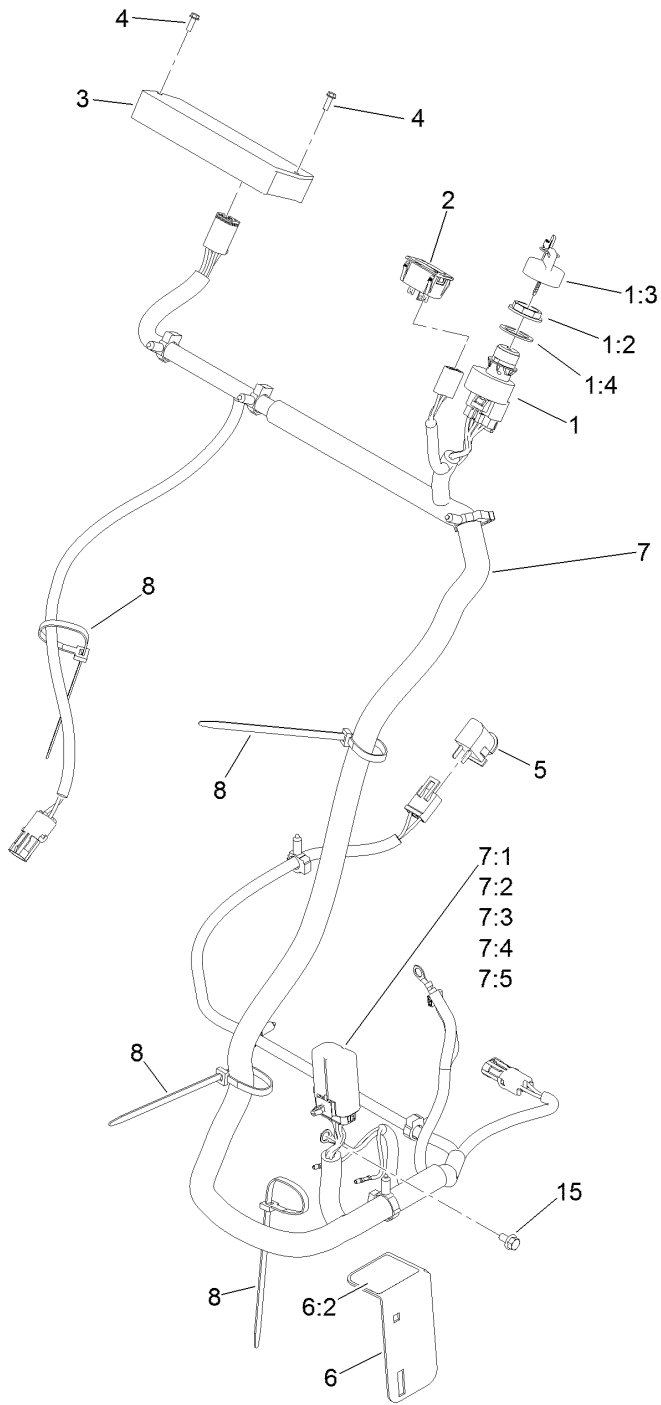


Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-3956	1	Ignition Switch ASM	7:4	126-4102	1	Clip-Power Distribution Module
1:2	108-8660	1	Nut-Mounting	7:5	126-6343	1	Block-Foam
1:3	106-5270	1	Ignition Key Set	8	1-303335	4	Tie-Plastic
1:4	108-8659	1	Washer-Backup	9	126-1424	1	Battery Box
2	126-3931	1	Hour Meter	10		1	Battery (300 Cca, Wet) ●
3	126-6622	1	Controller-Dc	11	116-4730	1	Cable-Battery, Positive
4	32144-87	2	Screw-HWHTF	11:1	1-543393	1	Insulator-Solenoid
5	82-2190	1	Switch-Bail	11:2	109-2407	1	Insulator-Battery
6	126-4656	1	Fuse Bracket ASM	12	114-9715	1	Cable-Battery, Negative
6:2	126-4122	1	Decal-Fuse	13	126-2712	2	Screw-HHF
7	126-3458	1	Harness-Wire ■	14	126-2232	2	Nut-HF
7:1	121-8868	2	Fuse-Mini Blade, 20 Amp	15	33103-012	1	Screw-HHF
7:2	126-3991	1	Relay-Micro				
7:3	126-4101	1	Cap-Power Distribution Module				

● Not serviced separately

■ Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.

Spray System Assembly

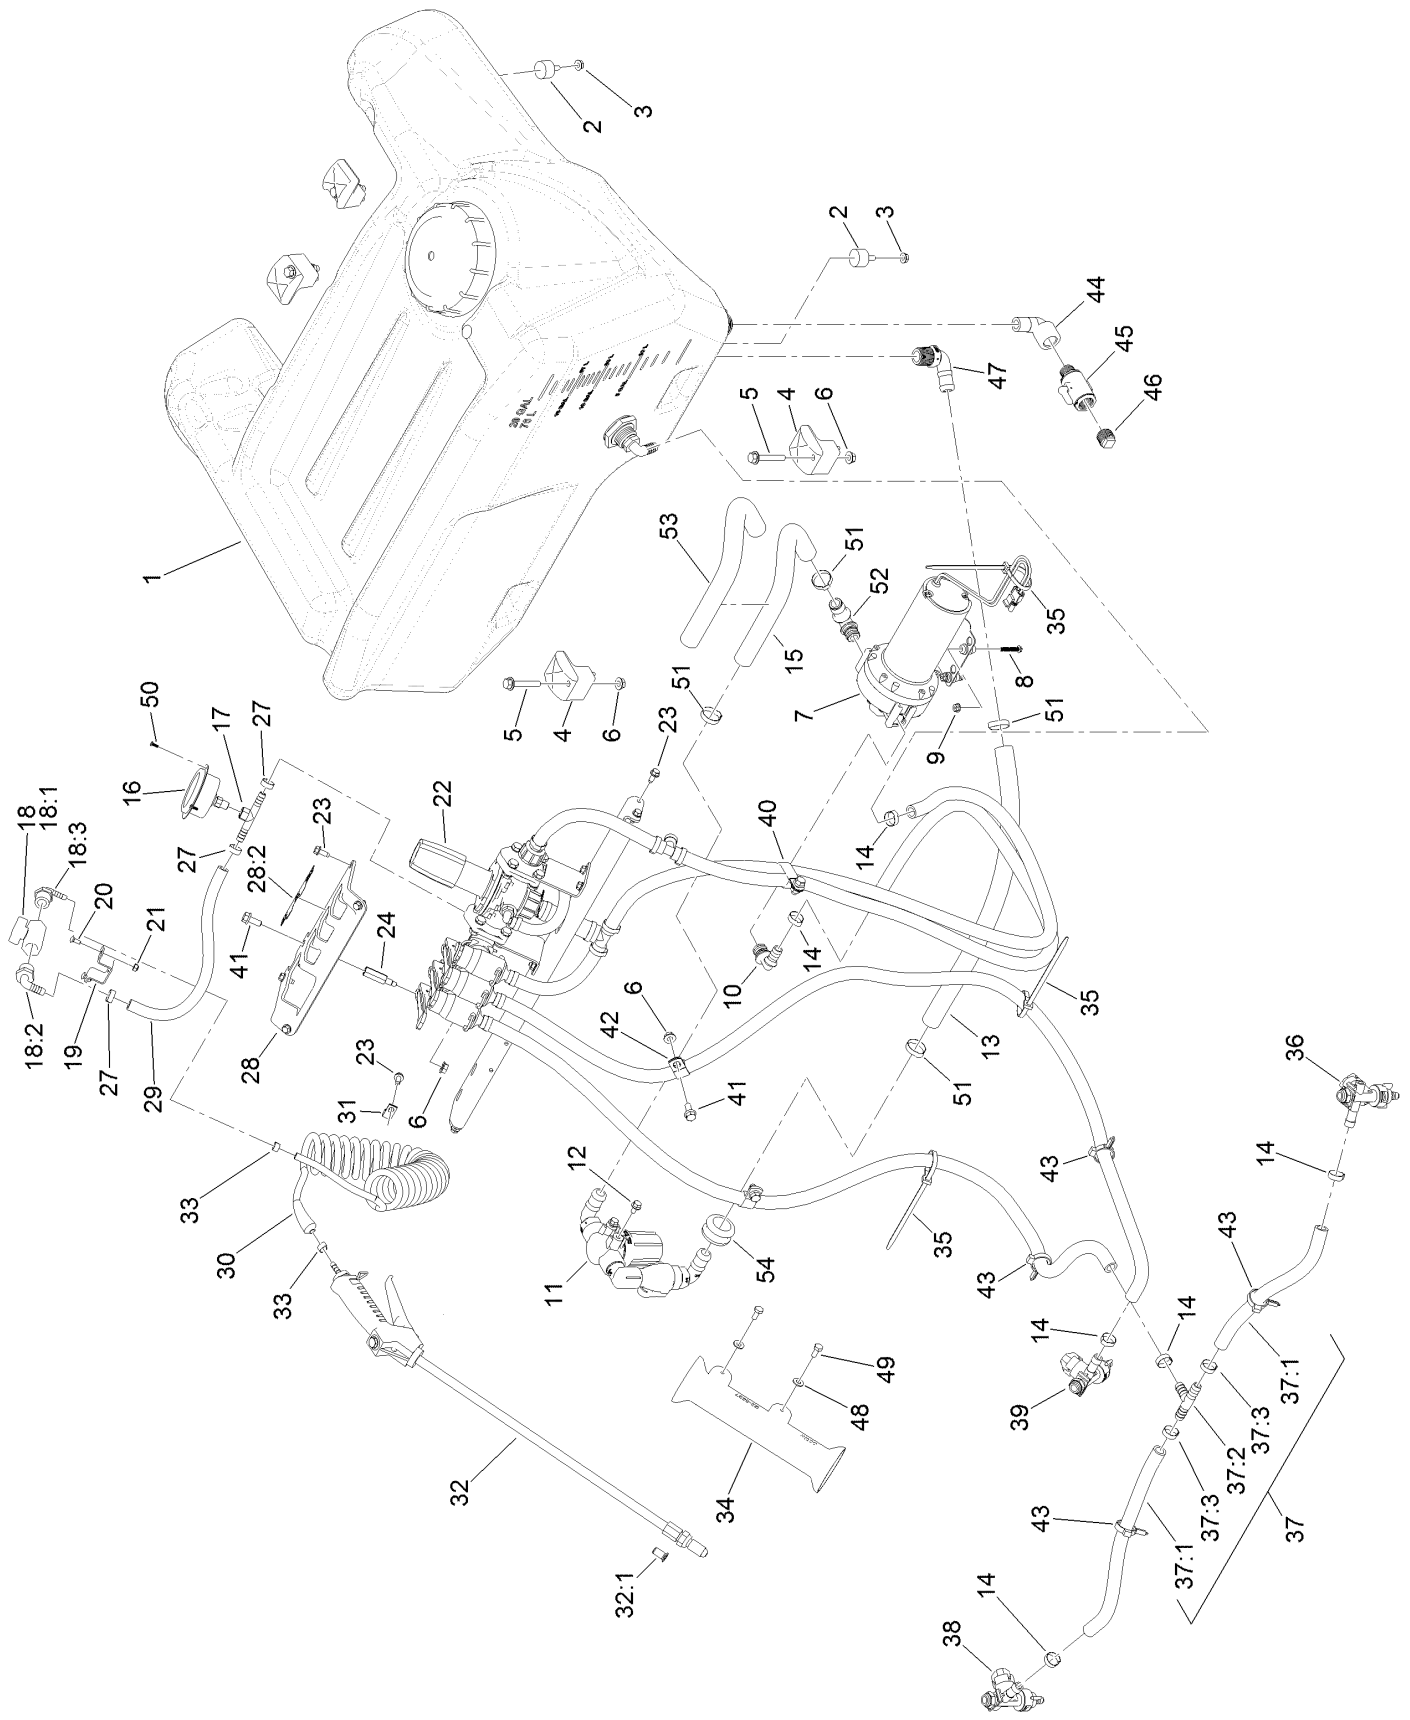


Spray System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-0286	1	Tank-Sprayer	29	126-5847	1	Hose-Water, 3/8 Pvc Red
2	116-6380	4	Bumper-Rubber (W/ Stud)	30	126-1493	1	Hose-Coiled
3	126-2231	5	Nut-HF	31	2412-89	1	Clamp-R
4	107-4543	4	Clamp	32	126-8000	1	Spray Wand ASM
5	126-2711	4	Screw-HHF	32:1	126-3943	1	Strainer-Nozzle, 50M 5Psi
6	126-2232	7	Nut-HF				Check
7	126-4839	1	Pump-Diaphragm, 3.8 Gpm	33	126-2707	2	Clamp
8	692501	4	Screw-SHWH	34	126-3987	1	Holder-Wand
9	126-2645	4	Nut-HF	35	1-303335	5	Tie-Plastic
10	126-0961	1	Fitting-Elbow, Barbed	36	126-3667	1	Left Nozzle Sub ASM
11	126-4358	1	Strainer ASM	37	126-2252	1	Hose ASM
12	126-2713	2	Screw-HHF	37:1	126-2264	2	Hose-Water
13	126-4422	1	Hose-Water	37:2	126-0968	1	Fitting-Tee
14	126-4778	6	Clamp	37:3	126-4778	2	Clamp
15	126-4637	1	Hose-Water	38	126-3669	1	Right Nozzle Sub ASM
16	126-4110	1	Gauge-Pressure	39	126-3668	1	Center Nozzle Sub ASM
17	126-2348	1	Fitting-Tee	40	120-1959	1	Clamp-R, Double
18		1	Wand Control ASM ●	41	126-2712	4	Screw-HHF
18:1	126-0242	1	Valve-Ball	42	1-633396	2	Clip-Loom
18:2	126-4992	1	Fitting-Elbow-90	43	105-1853	4	Clamp-Hose
18:3	126-4993	1	Fitting-Elbow-90	44	108-3573	1	Elbow-90 DEG
19	126-0239-03	1	Bracket-Valve	45	126-1494	1	Microvalve
20	1-807513	2	Bolt-CARR	46	363-3125	1	Plug
21	3296-2	2	Nut-Lock, NI	47	119-0490	1	Elbow-Hosebarb
22		1	Control Valve Manifold ASM ●	48	360-0140	2	Washer-Flat
23	32144-10	9	Screw-HWH	49	126-1290	2	Screw-HH
24	126-4914	1	Spacer-Mount, Manifold	50	363-8552	3	Screw-TAP
27	126-3749	3	Clamp	51	126-4779	6	Clamp
28	126-4180	1	Cover-Controls	52	126-4420	1	Fitting-Elbow
28:2	126-4161	1	Decal-Control, Lever	53	126-5065	1	Sleeve-Corrugated, Split
				54	126-7410	1	Grommet

● Not serviced separately

Sprayer Tank Assembly No. 126-0286

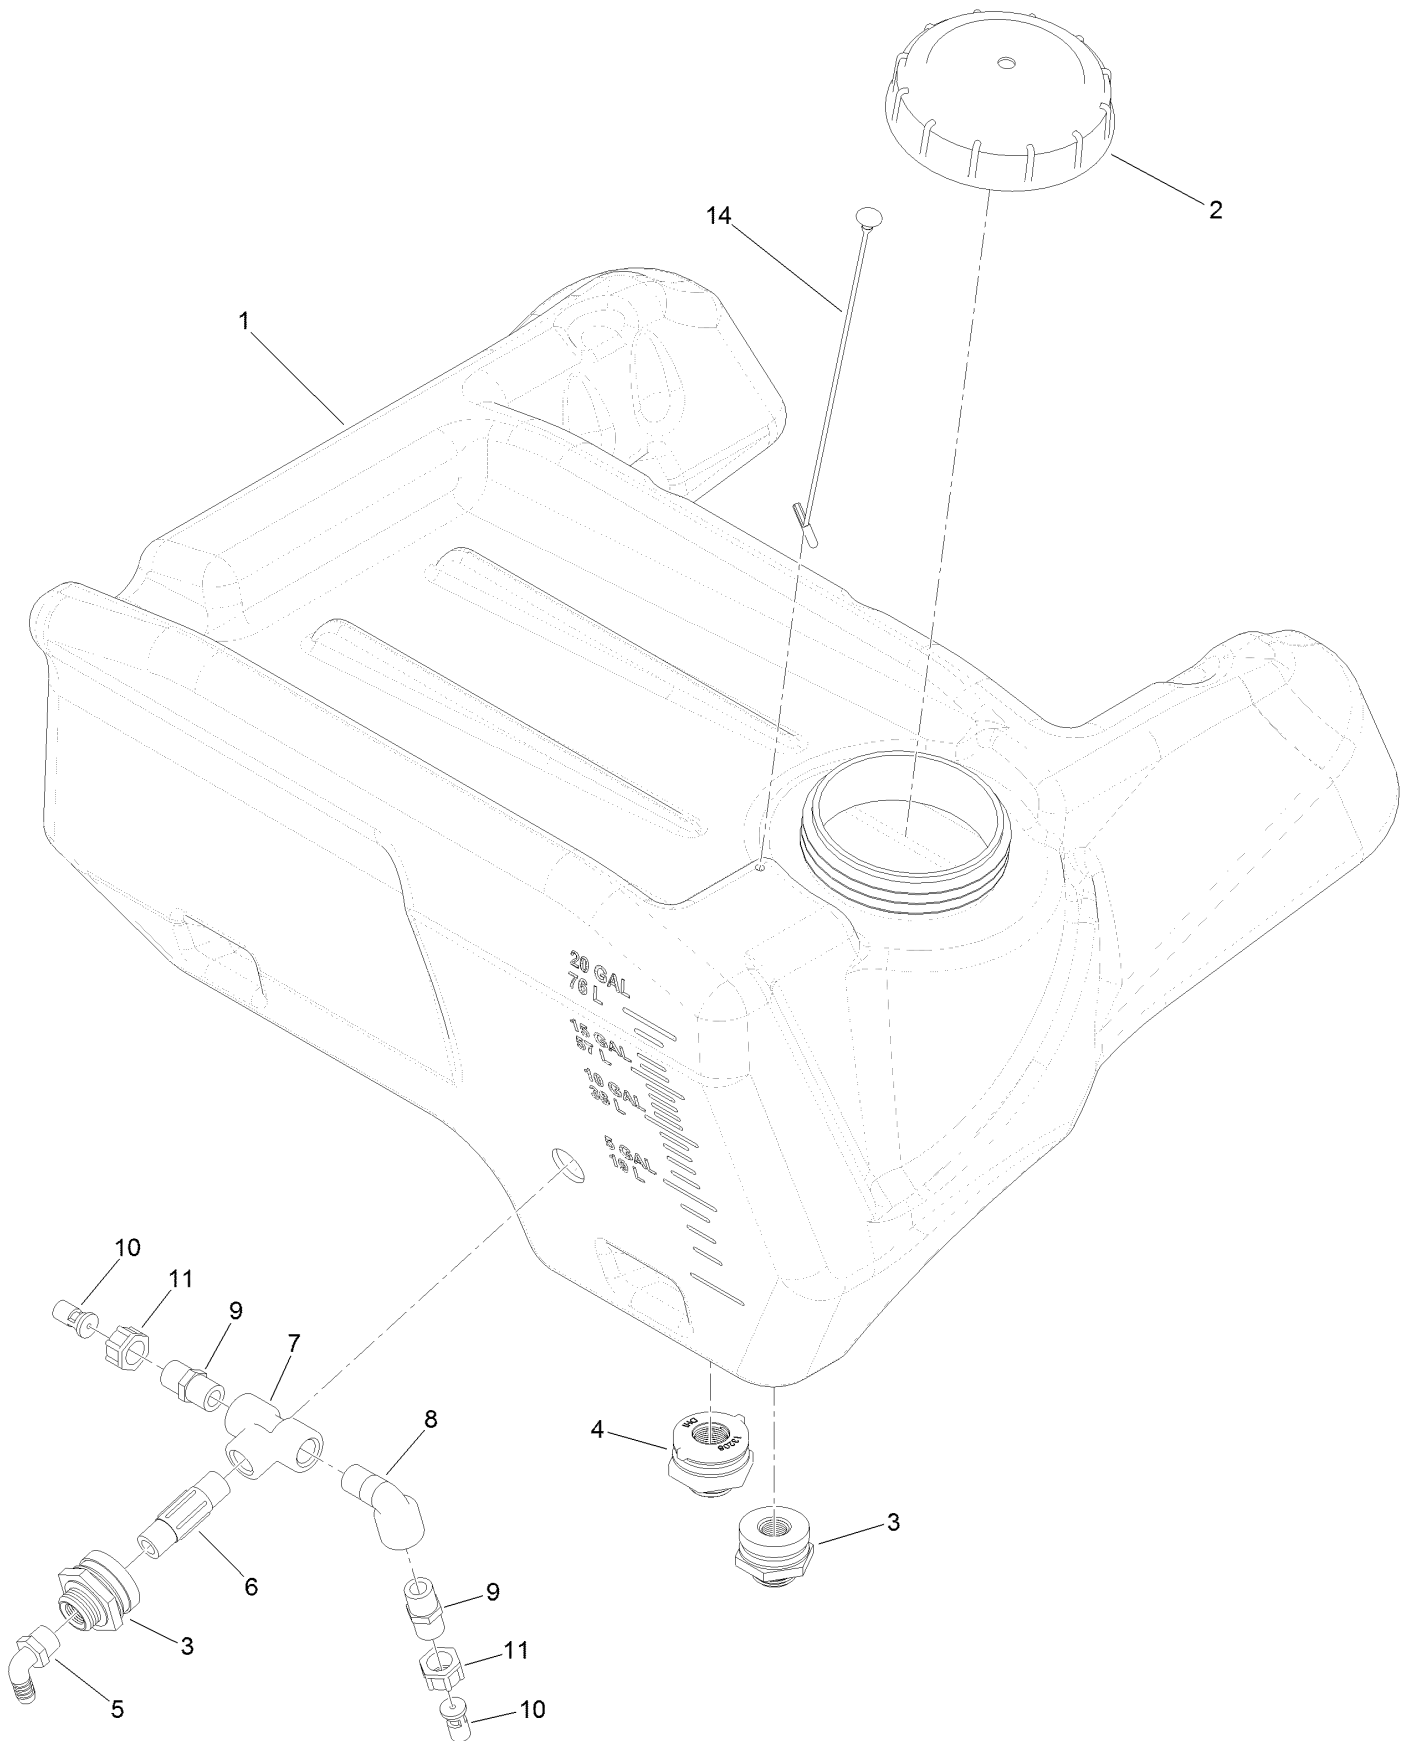


Sprayer Tank Assembly No. 126-0286 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Tank-Sprayer ●
2	126-0285	1	Cap-Water, 5 Inch Vent
3	126-0400	2	Fitting-Bulkhead
4	126-4393	1	Fitting-Bulkhead
5	42046	1	Elbow-90 DEG
6	94-7103	1	Nipple
7	94-7100	1	Tee

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
8	108-3573	1	Elbow-90 DEG
9	108-3574	2	Nipple-Short
10	100-6705	2	Nozzle-Agitation
11	99-0766	2	Nut
14	126-3381	1	Lanyard-Cap, Self Anchoring (12 Inch)

● Not serviced separately

Strainer Assembly No. 126-4358

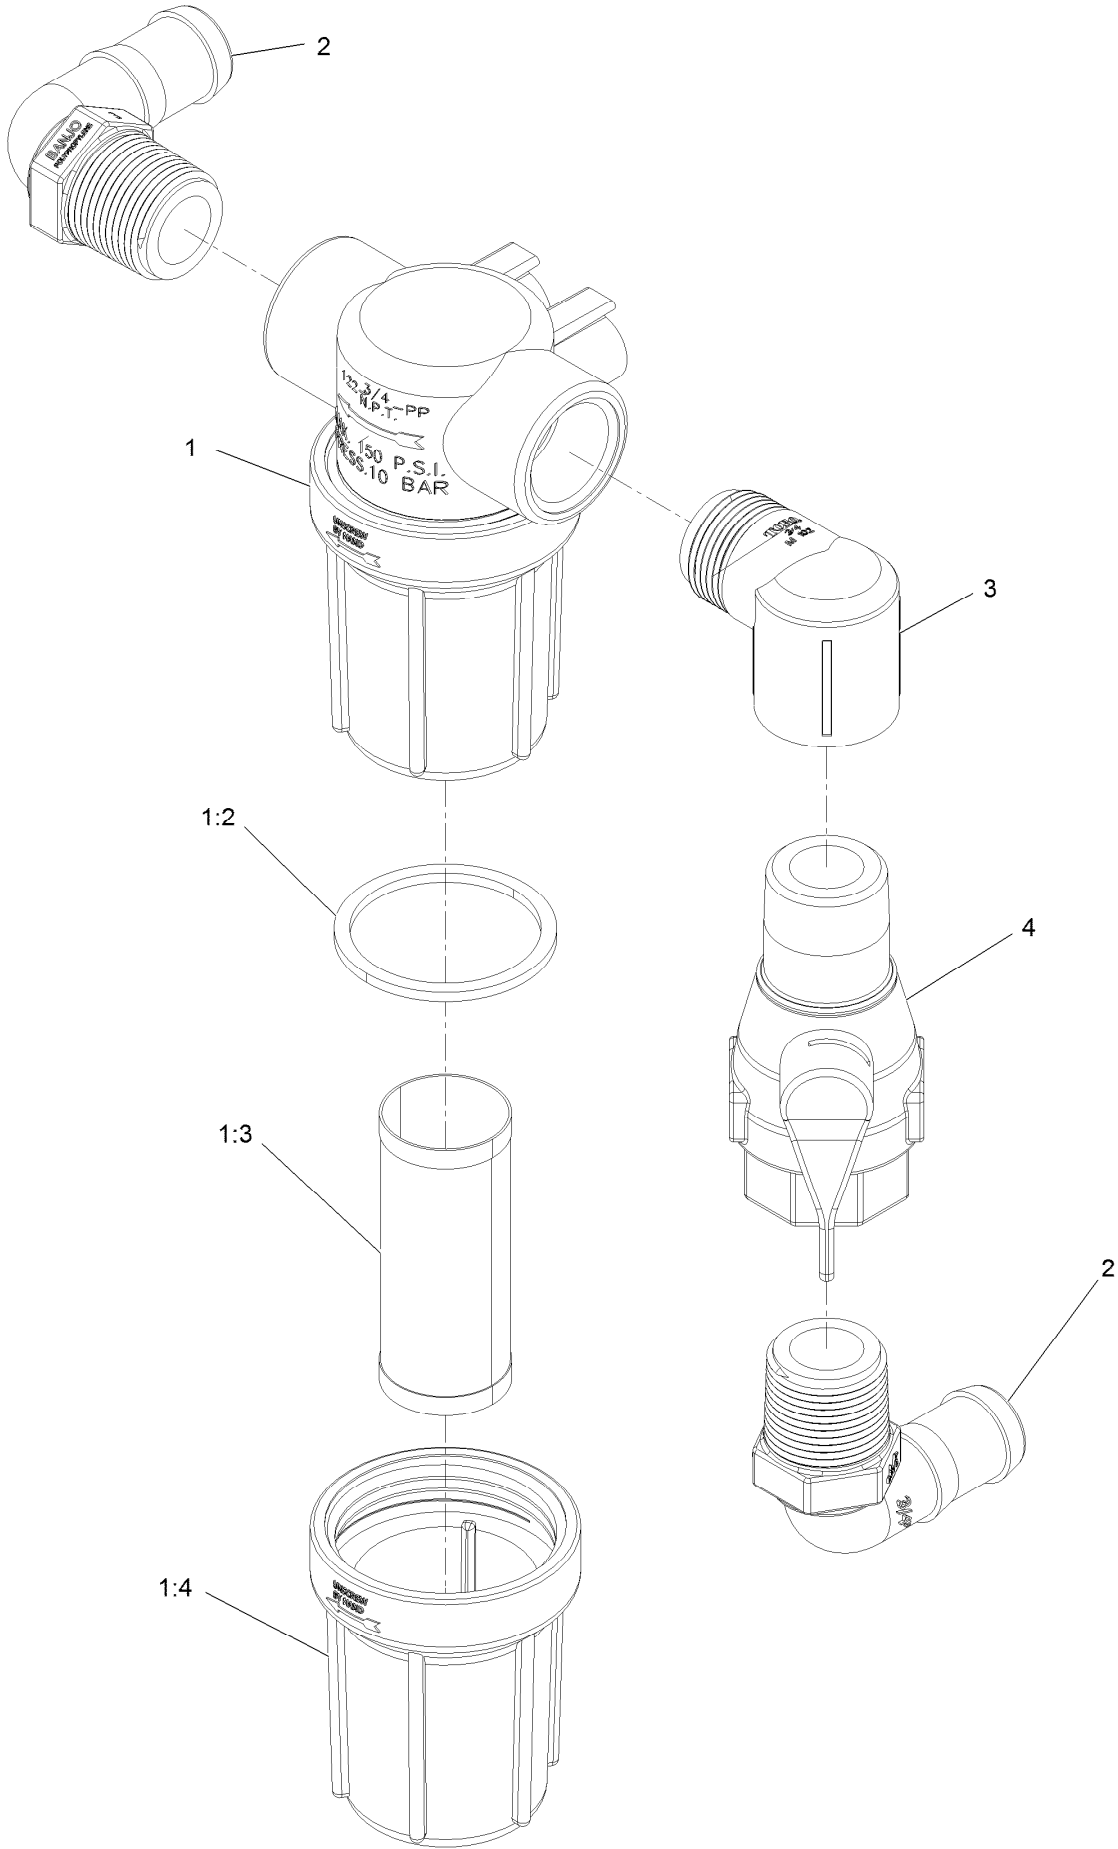


Strainer Assembly No. 126-4358 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-4374	1	Strainer-Line
1:2	126-2272	1	Gasket-Head, Line Strainer
1:3	126-2273	1	Screen-Strainer, 30 Mesh Ss

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1:4	126-7195	1	Bowl-Strainer
2	119-0490	2	Elbow-Hosebarb
3	102-4272	1	Elbow
4	126-4451	1	Valve-Ball

Control Valve Manifold Assembly

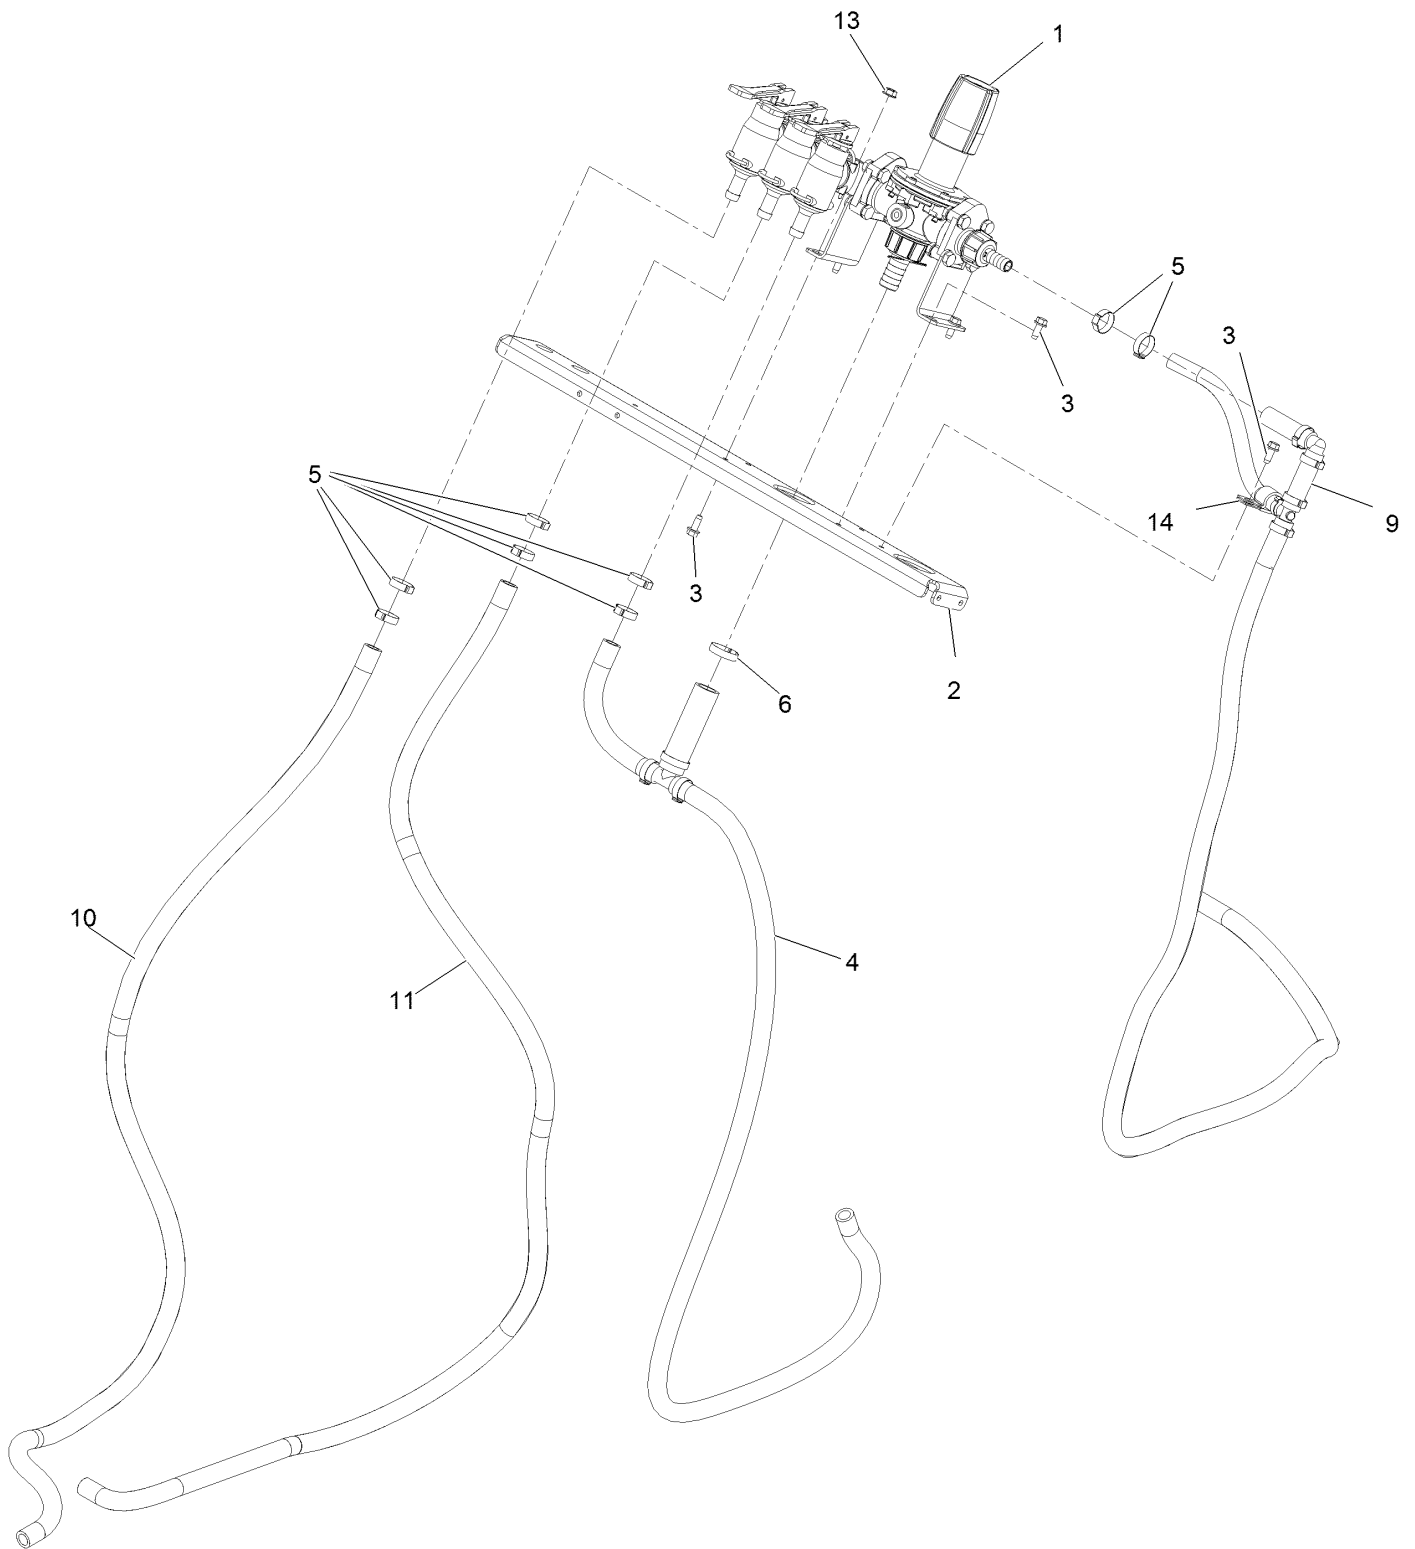


Control Valve Manifold Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-7635	1	Spray Manifold Assembly
2	126-7302-03	1	Crossmember-Column
3	32144-10	5	Screw-HWH
4	126-2250	1	Hose ASM
5	126-4778	8	Clamp
6	126-4779	1	Clamp

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
9	126-7304	1	Hose ASM
10	126-2263	1	Hose-Water
11	126-2261	1	Hose-Water
13	126-2231	1	Nut-HF
14	1-633396	1	Clip-Loom

Spray Manifold Assembly No. 126-7635

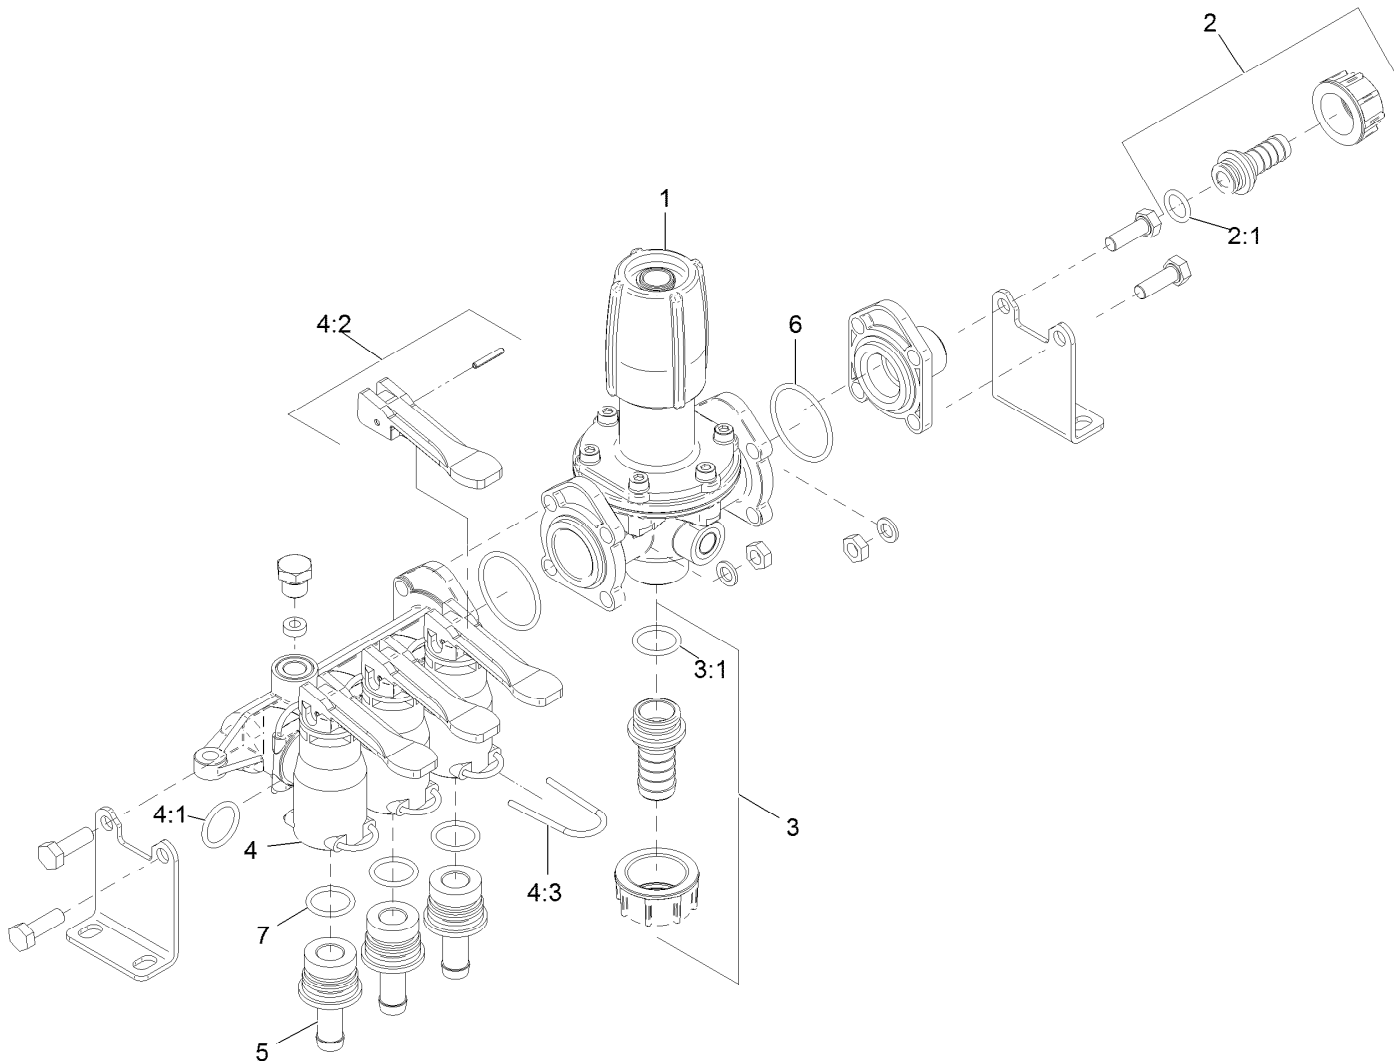


Spray Manifold Assembly No. 126-7635 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-6303	1	Regulator
2	126-6304	1	Flynut Assembly
2:1	126-6322	1	O-Ring Kit, Regulator Inlet Barb
3	126-6317	1	Flynut Assembly
3:1	126-6323	1	O-Ring Kit, Regulator Outlet Barb
4	126-7641	1	Valve Assembly W/ O-Ring

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4:1	126-6328	1	O-Ring Kit, Valve Inlet
4:2	126-6319	1	Lever And Pin Assembly
4:3	126-6332	1	Wireform Retainer Kit
5	126-6321	1	Hose Barb
6	126-6326	1	O-Ring Kit, Regulator Flange
7	126-6327	1	O-Ring Kit, Valve Outlet Barb

Hose Assembly No. 126-2250

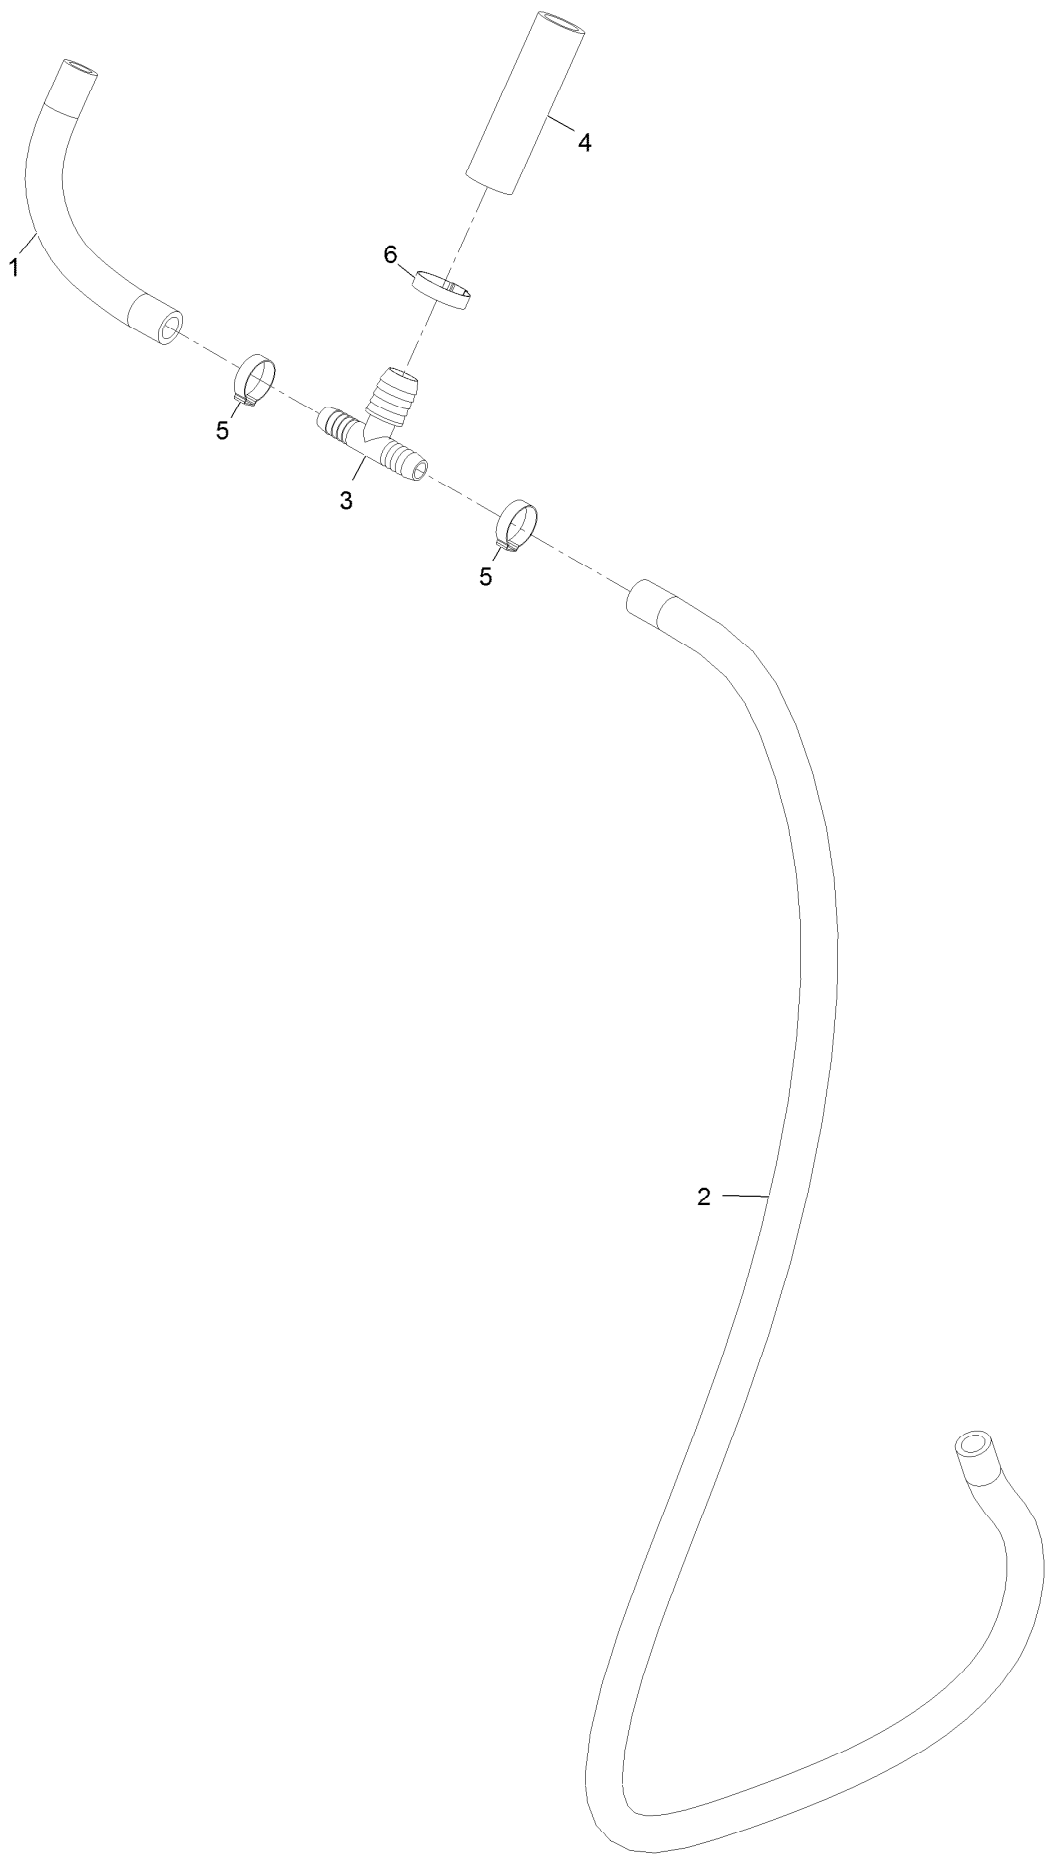


Hose Assembly No. 126-2250 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-2257	1	Hose-Water
2	126-2259	1	Hose-Water
3	126-0969	1	Fitting-Tee

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	126-0865	1	Hose-Water
5	126-4778	2	Clamp
6	126-4779	1	Clamp

Hose Assembly No. 126-7304

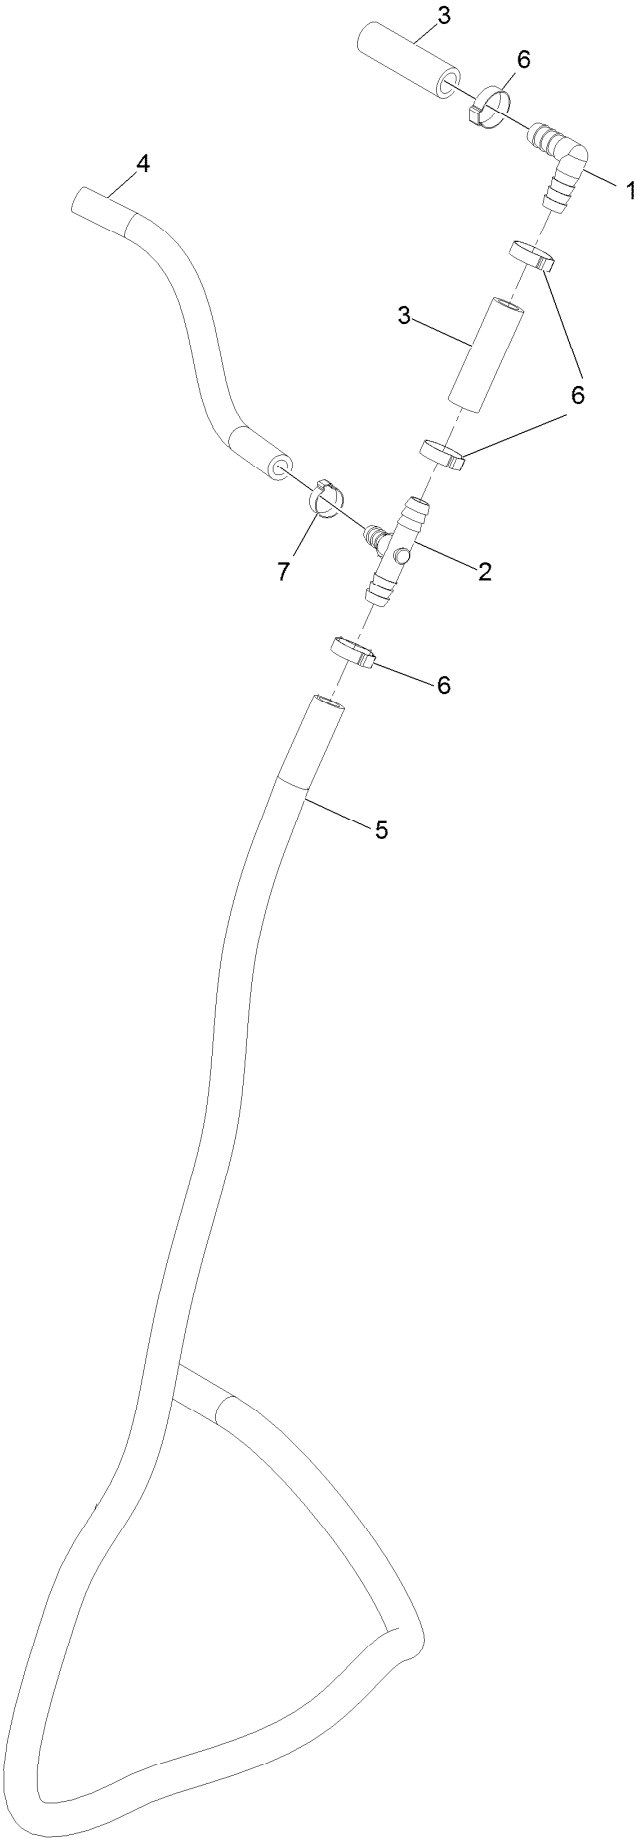


Hose Assembly No. 126-7304 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-1001	1	Fitting-Elbow-90
2	99-7371	1	Connector-Tee
3	126-7231	2	Hose-Water
4	126-7307	1	Hose-Water

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	126-7306	1	Hose-Water
6	126-4778	4	Clamp
7	126-3749	1	Clamp

Left Nozzle Assembly No. 126-3667

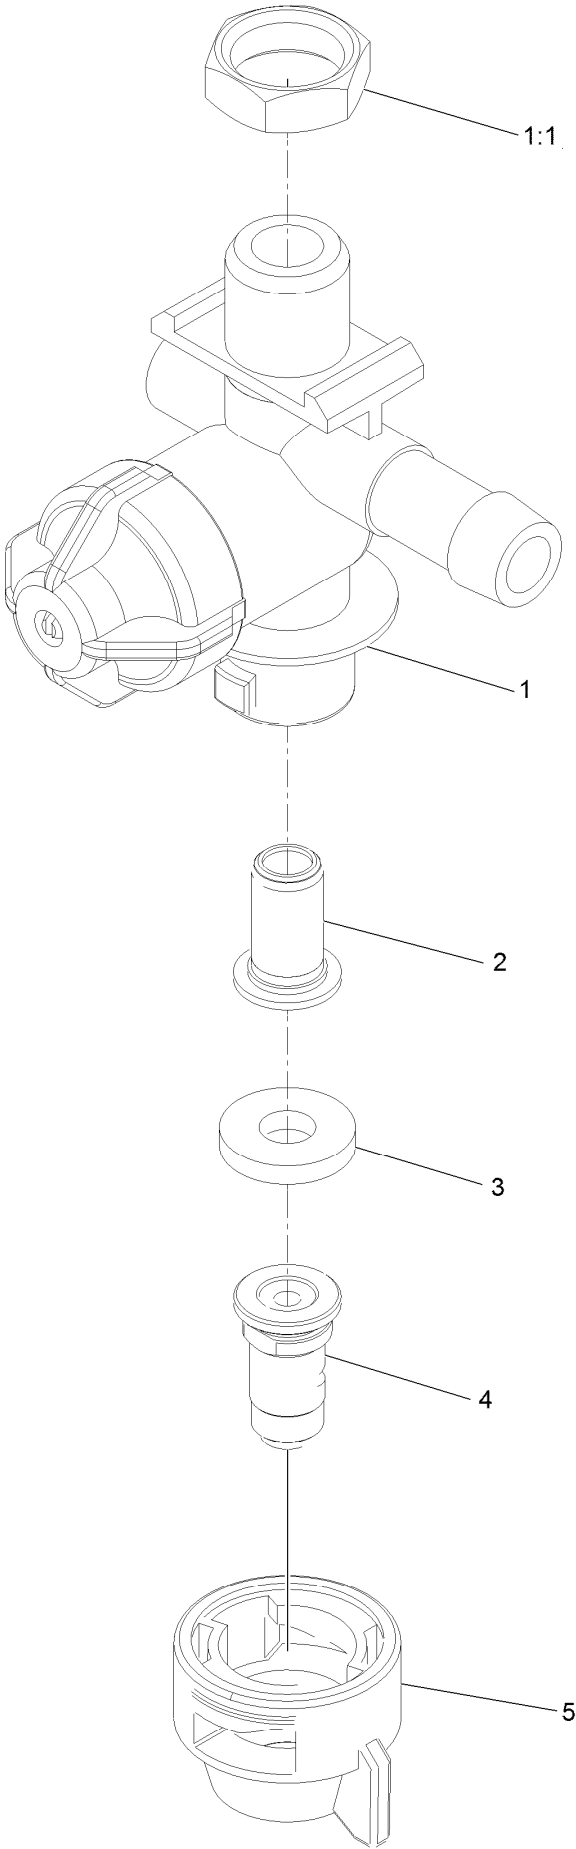


Left Nozzle Assembly No. 126-3667 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-9790	1	LH Nozzle Body ASM	5	116-9796	1	Cap-Nozzle
1:1	126-2801	1	Nut-Nylon	99	126-7172	1	Nozzle-Spray, Blue ●■
2	126-1212	1	Strainer-Tip	99	126-7171	1	Nozzle-Spray, Brown ●■
3	116-9797	1	Gasket-Seal	99	126-7170	1	Nozzle-Spray, Gray ●■
4	116-9798	1	Nozzle-Spray, White	99	126-2566	1	Nozzle-Spray, Red ●■

● Not illustrated

■ Sold separately

Right Nozzle Assembly No. 126-3669

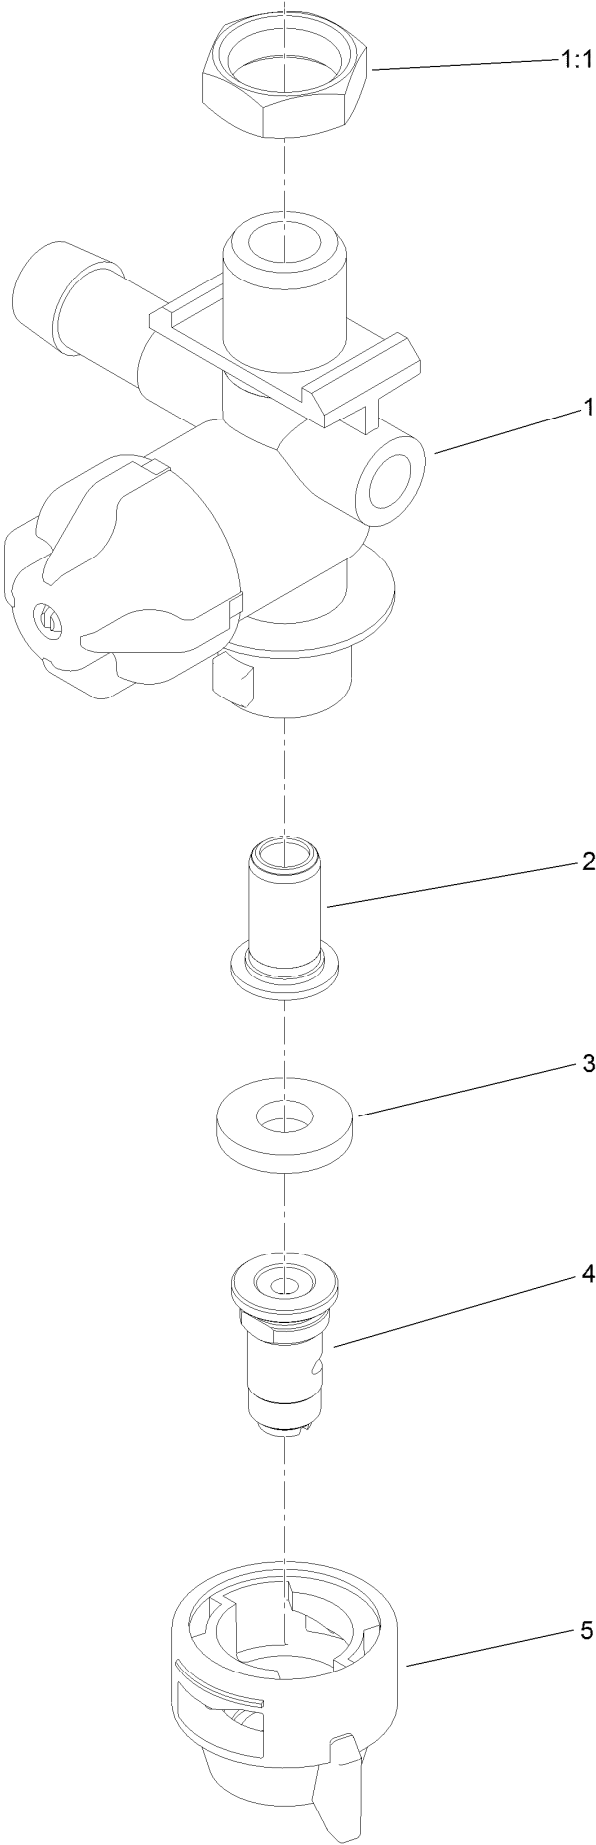


Right Nozzle Assembly No. 126-3669 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-9791	1	RH Nozzle Body ASM
1:1	126-2801	1	Nut-Nylon
2	126-1212	1	Strainer-Tip
3	116-9797	1	Gasket-Seal
4	116-9798	1	Nozzle-Spray, White

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	116-9796	1	Cap-Nozzle
99	126-7172	1	Nozzle-Spray, Blue ●
99	126-7171	1	Nozzle-Spray, Brown ●
99	126-7170	1	Nozzle-Spray, Gray ●
99	126-2566	1	Nozzle-Spray, Red ●

● Not illustrated

Center Nozzle Assembly No. 126-3668

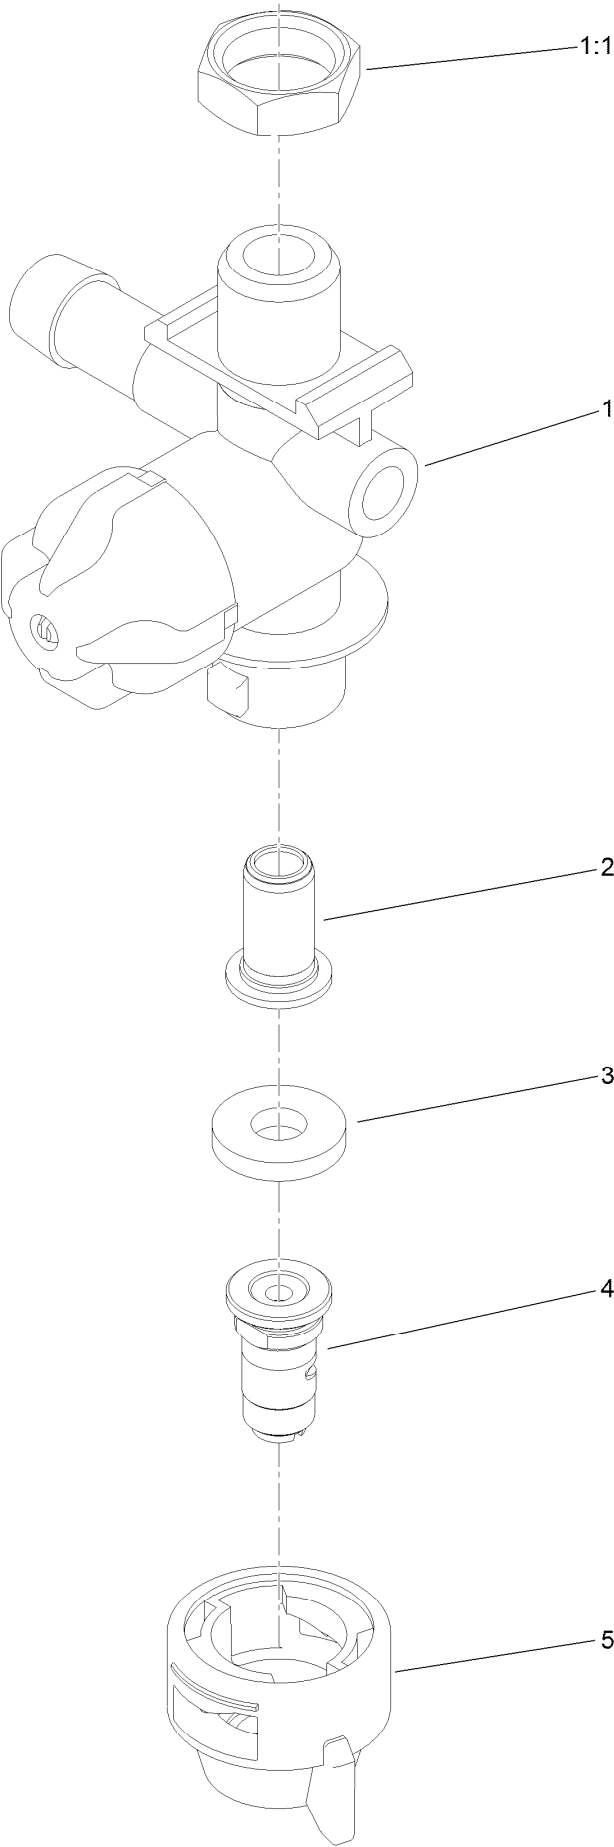

Center Nozzle Assembly No. 126-3668 (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-9791	1	RH Nozzle Body ASM
1:1	126-2801	1	Nut-Nylon
2	126-1212	1	Strainer-Tip
3	116-9797	1	Gasket-Seal
4	126-2566	1	Nozzle-Spray, Red

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	116-9796	1	Cap-Nozzle
99	126-7170	1	Nozzle-Spray, Gray ●■
99	116-9798	1	Nozzle-Spray, White ●■
99	126-7171	1	Nozzle-Spray, Brown ●■
99	126-7172	1	Nozzle-Spray, Blue ●■

● Not illustrated

■ Sold separately

Spreader Assembly

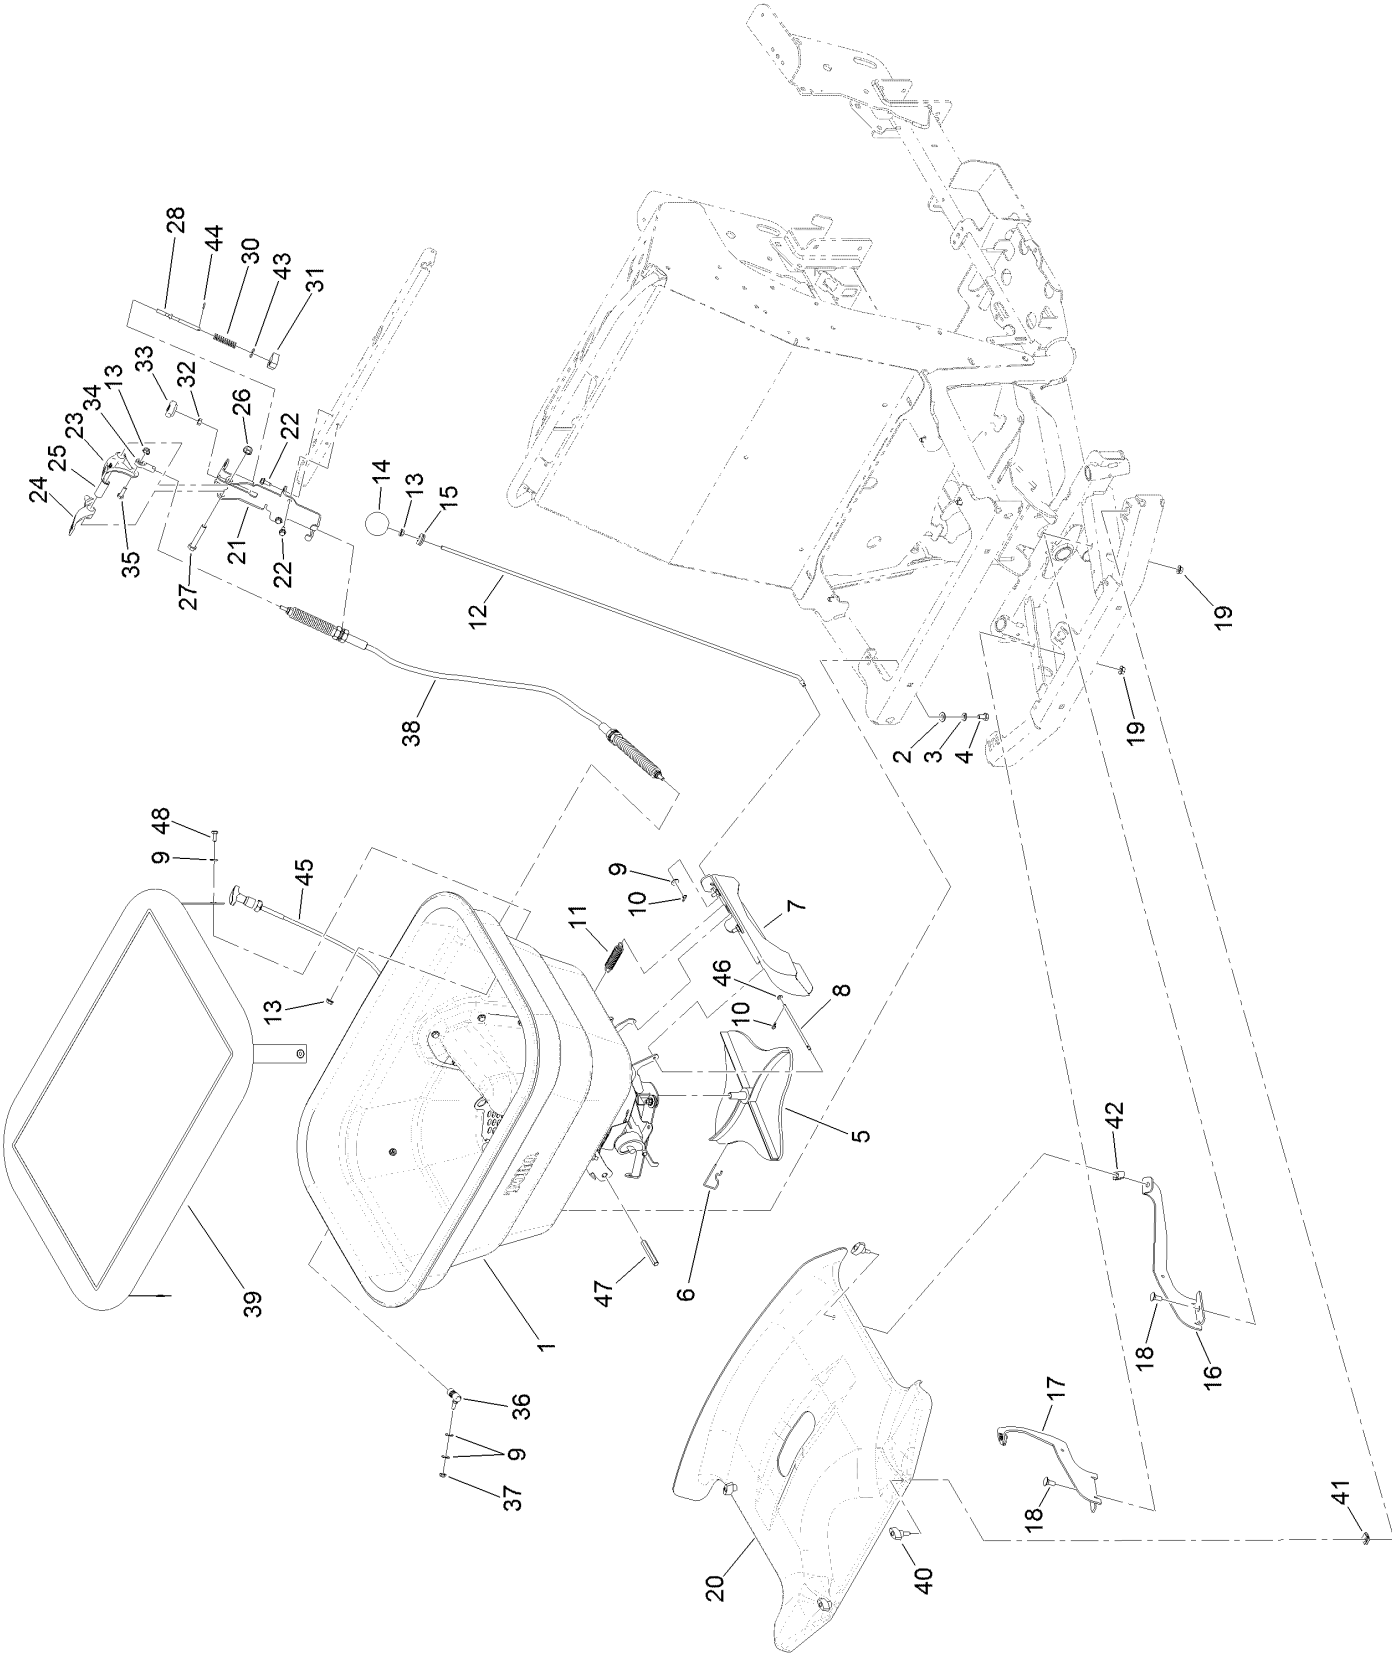


Spreader Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Spreader Hopper ASM ●	24	126-3948	1	Lever-Spread, Narrow
2	107-0279	4	Washer	25	126-3984	1	Spacer
3	107-0280	4	Washer-Lock	26	126-2233	1	Nut-HF
4	126-2506	4	Screw-HH	27	323-11	1	Screw-HH
5	126-0858	1	Spinner-Spreader	28	126-3929	1	Link-Adjust, Narrow
6	126-1246	1	Spinner Clip	30	125-0547	1	Spring-Compression, Bail
7		1	Side Deflector ASM ●	31	126-3147	1	Stop-Spread, Narrow
8	126-1629	1	Pin-Deflector	32	126-4891	1	Nut-Coupler
9	360-0140	5	Washer-Flat	33	126-3905	1	Knob
10	126-1631	2	Pin-Cotter, Hair	34	2411-41	1	Rod End-Ball Joint
11	126-2127	1	Spring-Extension	35	126-0498	1	Screw-HH
12	126-2190	1	Rod-Control, Deflector	36	126-2005	1	Ball-Joint
13	126-2231	4	Nut-HF	37	126-2725	1	Nut-Hex, NI
14	121-1877	1	Knob-Rate, Flow	38	126-1783	1	Cable
15	1-633630	1	Grommet	39	126-2815	1	Cover-Hopper
16	126-2145	1	Bracket-Cover, Front (LH)	40	126-5846	4	Knob-T
17	126-2146	1	Bracket-Cover, Front (RH)	41	126-3740	2	Nut-Retainer, U Style
18	126-0695	2	Screw-CARR	42	126-3739	2	Nut-Retainer, U Style
19	126-2232	2	Nut-HF	43	3256-78	1	Washer-Flat
20	126-2063	1	Cover-Front, Spreader/Sprayer	44	3272-5	1	Pin-Cotter
21	126-3133	1	Mount-Handle	45	126-4150	1	Cable-Control, Turn Lock
22	32144-10	3	Screw-HWH	46	126-0759	1	Washer-Flat
23	126-3947	1	Lever-Spread, Wide	47	126-4655	1	Post-Hex, Diffuser Guide
				48	126-1290	2	Screw-HH

● Not serviced separately

Spreader Hopper Assembly

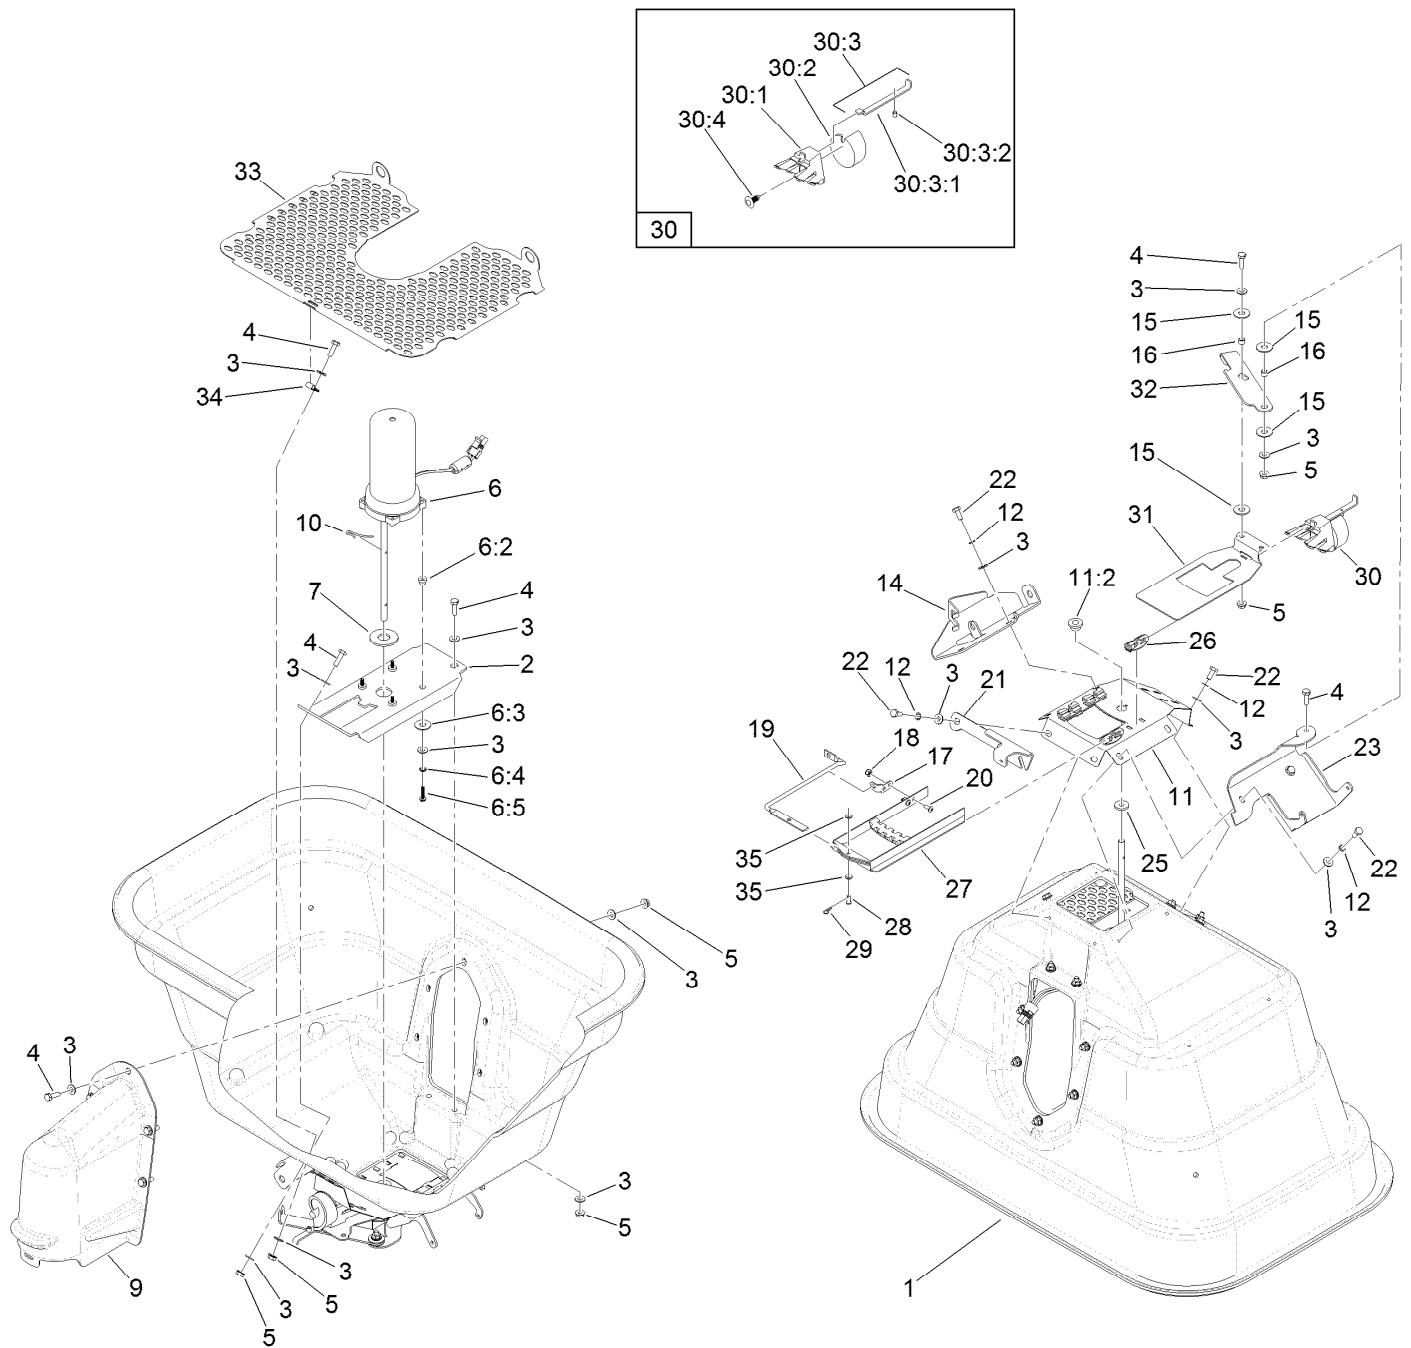


Spreader Hopper Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-3407	1	Hopper-Spreader	21	126-2082	1	Bracket-Spring, Hopper
2	126-4245	1	Bracket-Mount, Motor				Deflector
3	360-0140	34	Washer-Flat	22	126-1290	8	Screw-HH
4	126-0498	12	Screw-HH	23	126-1916	1	Bracket-Lever, Hopper Gate
5	126-2231	12	Nut-HF	25	126-1252	1	Washer-Felt
6	126-6231	1	Spreader Motor ASM	26	126-0990	4	Guide-Rate, Gate
6:2	126-6190	4	Spacer-Flanged	27	126-0991	1	Diffuser
6:3	360-0140	4	Washer-Flat	28	126-3729	1	Pin-Clevis
6:4	363-8641	4	Washer-Lock, Int	29	126-1631	1	Pin-Cotter, Hair
6:5	739001	4	Screw-SHWH	30	126-0998	1	Rate Dial ASM
7	83-2400	1	Spacer	30:1	126-0985	1	Mount-Dial
9	126-1348	1	Cover-Motor	30:2	126-0988	1	Dial
10	126-1247	1	Agitator	30:3		1	Rate Gate Link ASM ●
11	126-6284	1	Mulch Plate W/ Bearing ASM	30:3:1	126-0987	1	Link-Gate, Rate
11:2	126-0984	1	Bearing-Bottom, Hopper	30:3:2	126-4196	1	Screw-Shoulder, Slotted
12	363-8641	12	Washer-Lock, Int	30:4	126-0986	1	Clip
14	126-4650	1	Bracket-Hopper, Gate Controls	31	126-1903	1	Gate-Rate
15	93-1633	4	Washer	32	126-4112	1	Lever-Gate
16	126-3684	2	Spacer	33	126-3143	1	Screen-Hopper-Large Hole
17	126-1237	1	Bracket-Diffuser	33	126-3240	1	Screen-Hopper-Medium Hole
18	364-0371	2	Nut-HJ, NI	33	126-3242	1	Screen-Hopper-Small Hole
19	126-1646	1	Rod-Control, Diffuser	34	126-1624	1	Clamp-Loop
20	363-3707	2	Screw-PPH	35	126-0759	2	Washer-Flat

● Not serviced separately

Side Deflector Assembly

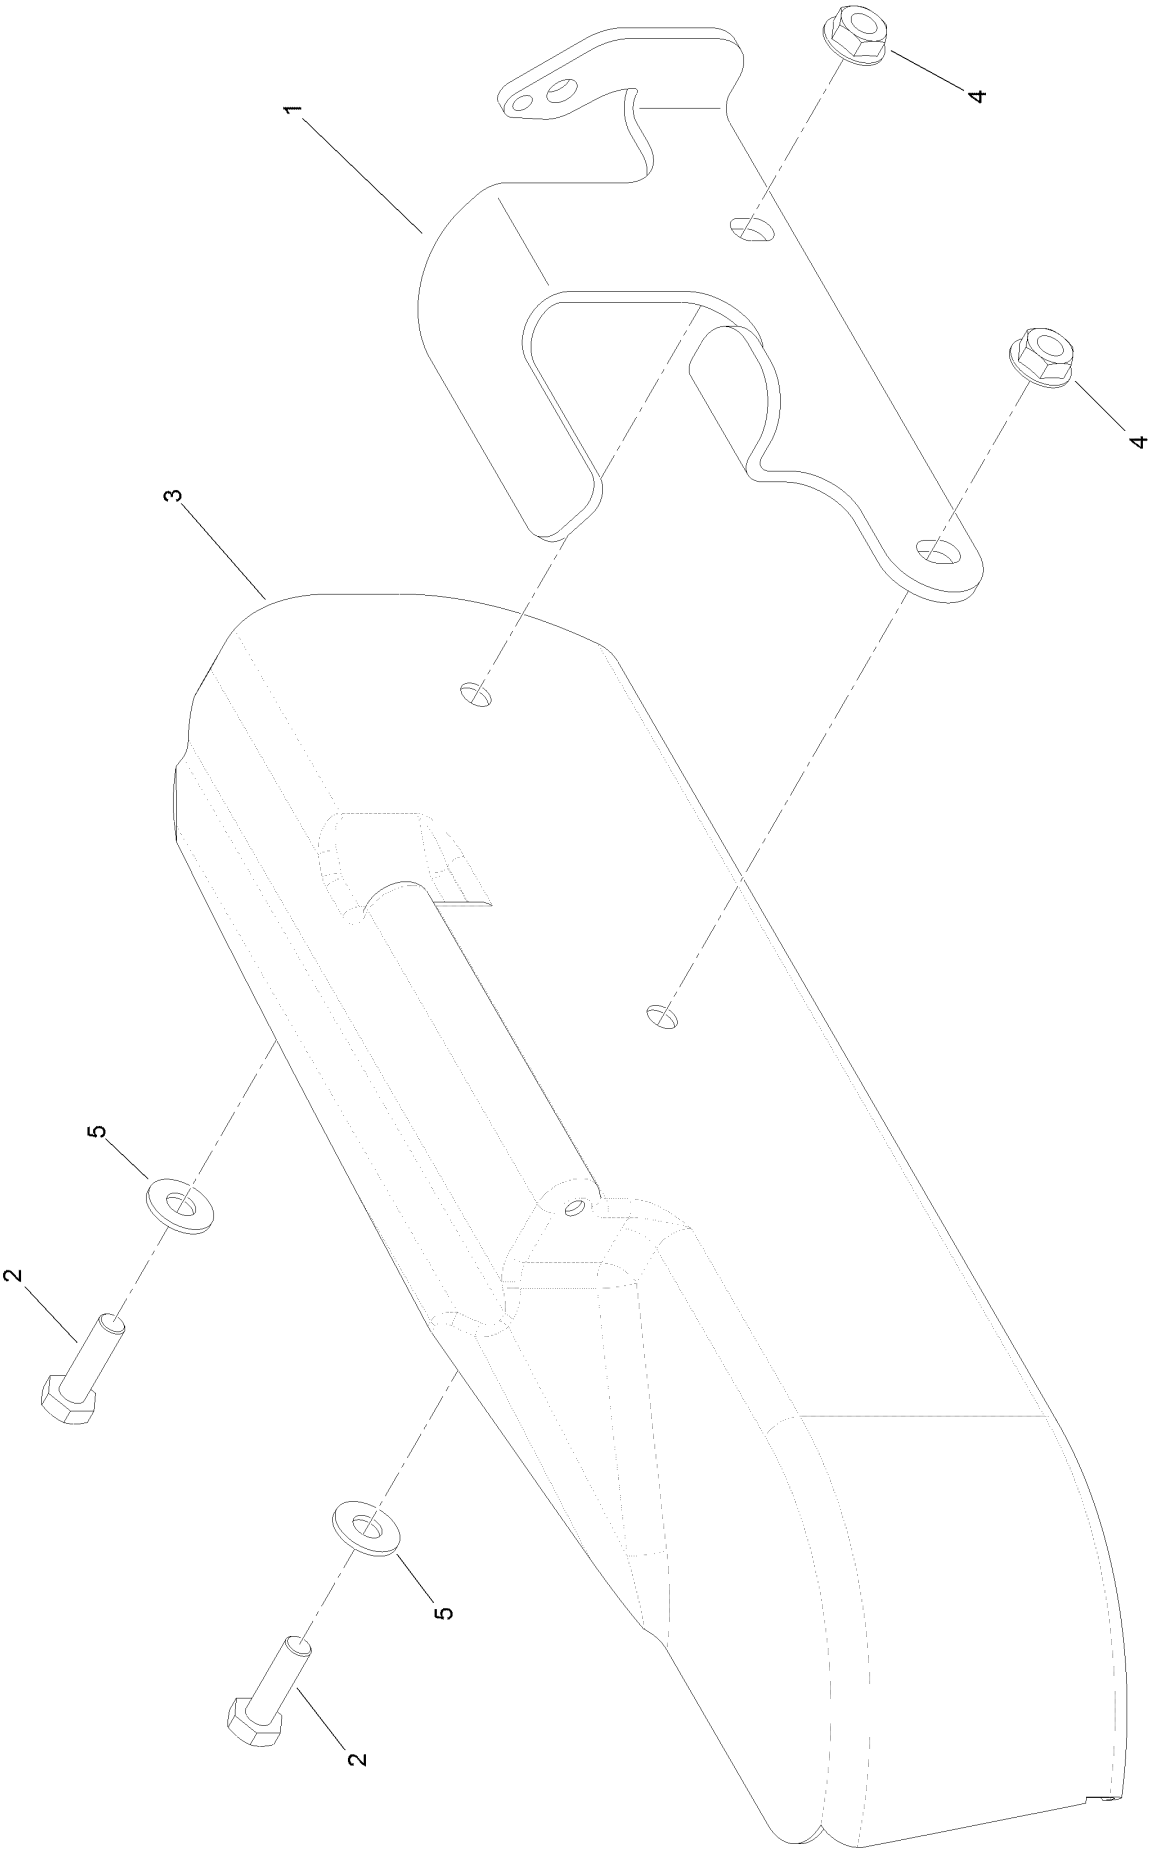

Side Deflector Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-0374	1	Bracket-Deflector, Side
2	126-0498	2	Screw-HH
3	126-1217	1	Deflector-Side

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	126-2231	2	Nut-HF
5	360-0140	2	Washer-Flat

Notes:

Notes:



Count on it.