



Count on it.

Form No. 3407-359 Rev A

Parts Catalog

Combo for Direct Drive Trencher and P85 Plow

RT600 Traction Unit

Model No. 25201

Model No. 25201E



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Mount Assembly 4


Trencher Lift/Lower Hose Assembly 6

Fitting Assembly 8

Hydraulic Hose and Valve Assembly 10

Wheel and Cylinder Stop Assembly 12


Mount Assembly

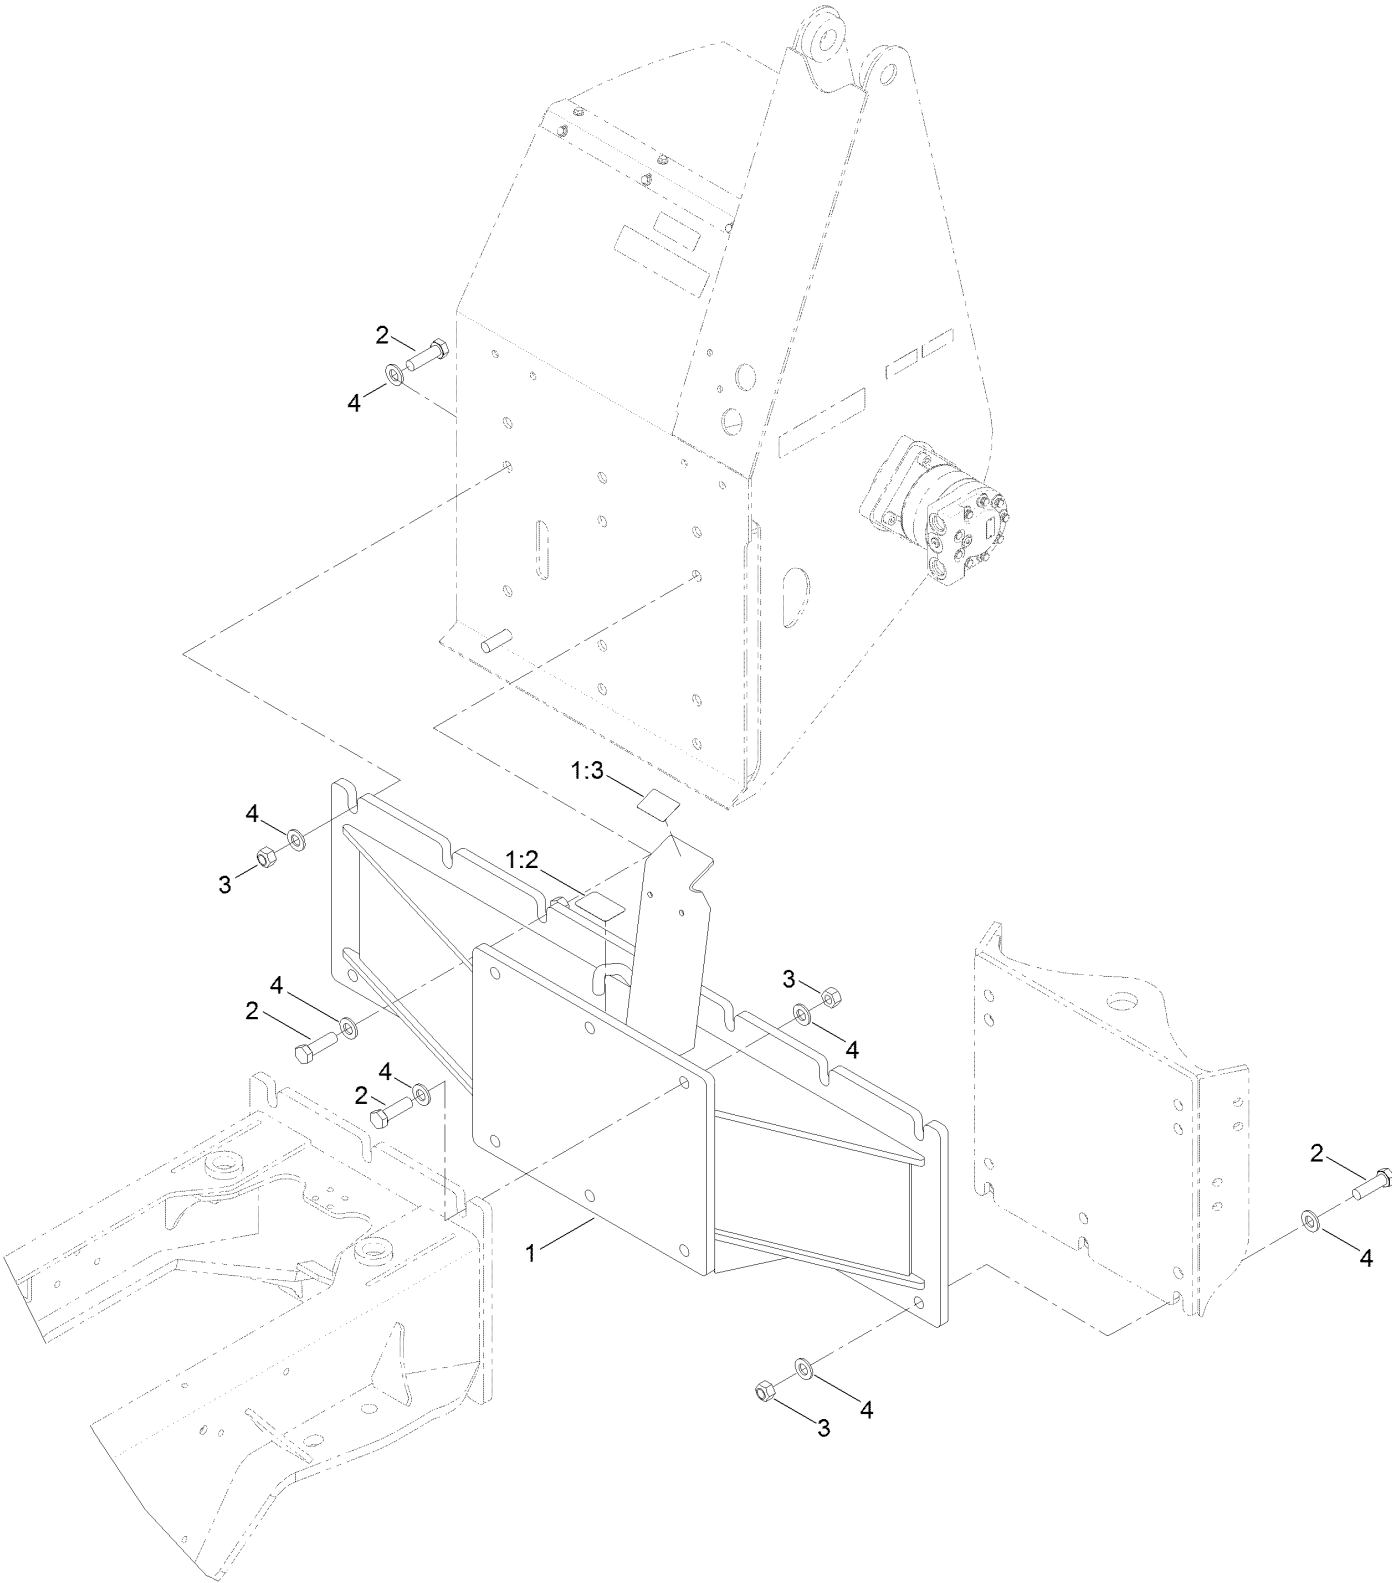

Mount Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-2672	1	Rt600 Combo Mount	2	AU426-1240	17	Bolt
1:2	125-6139	1	Decal-Lift/Tie Down	3	120-7252	17	Nut-Lock
1:3	131-2682	1	Decal-Selector	4	AUH426817	33	Washer-Flat

Trencher Lift/Lower Hose Assembly

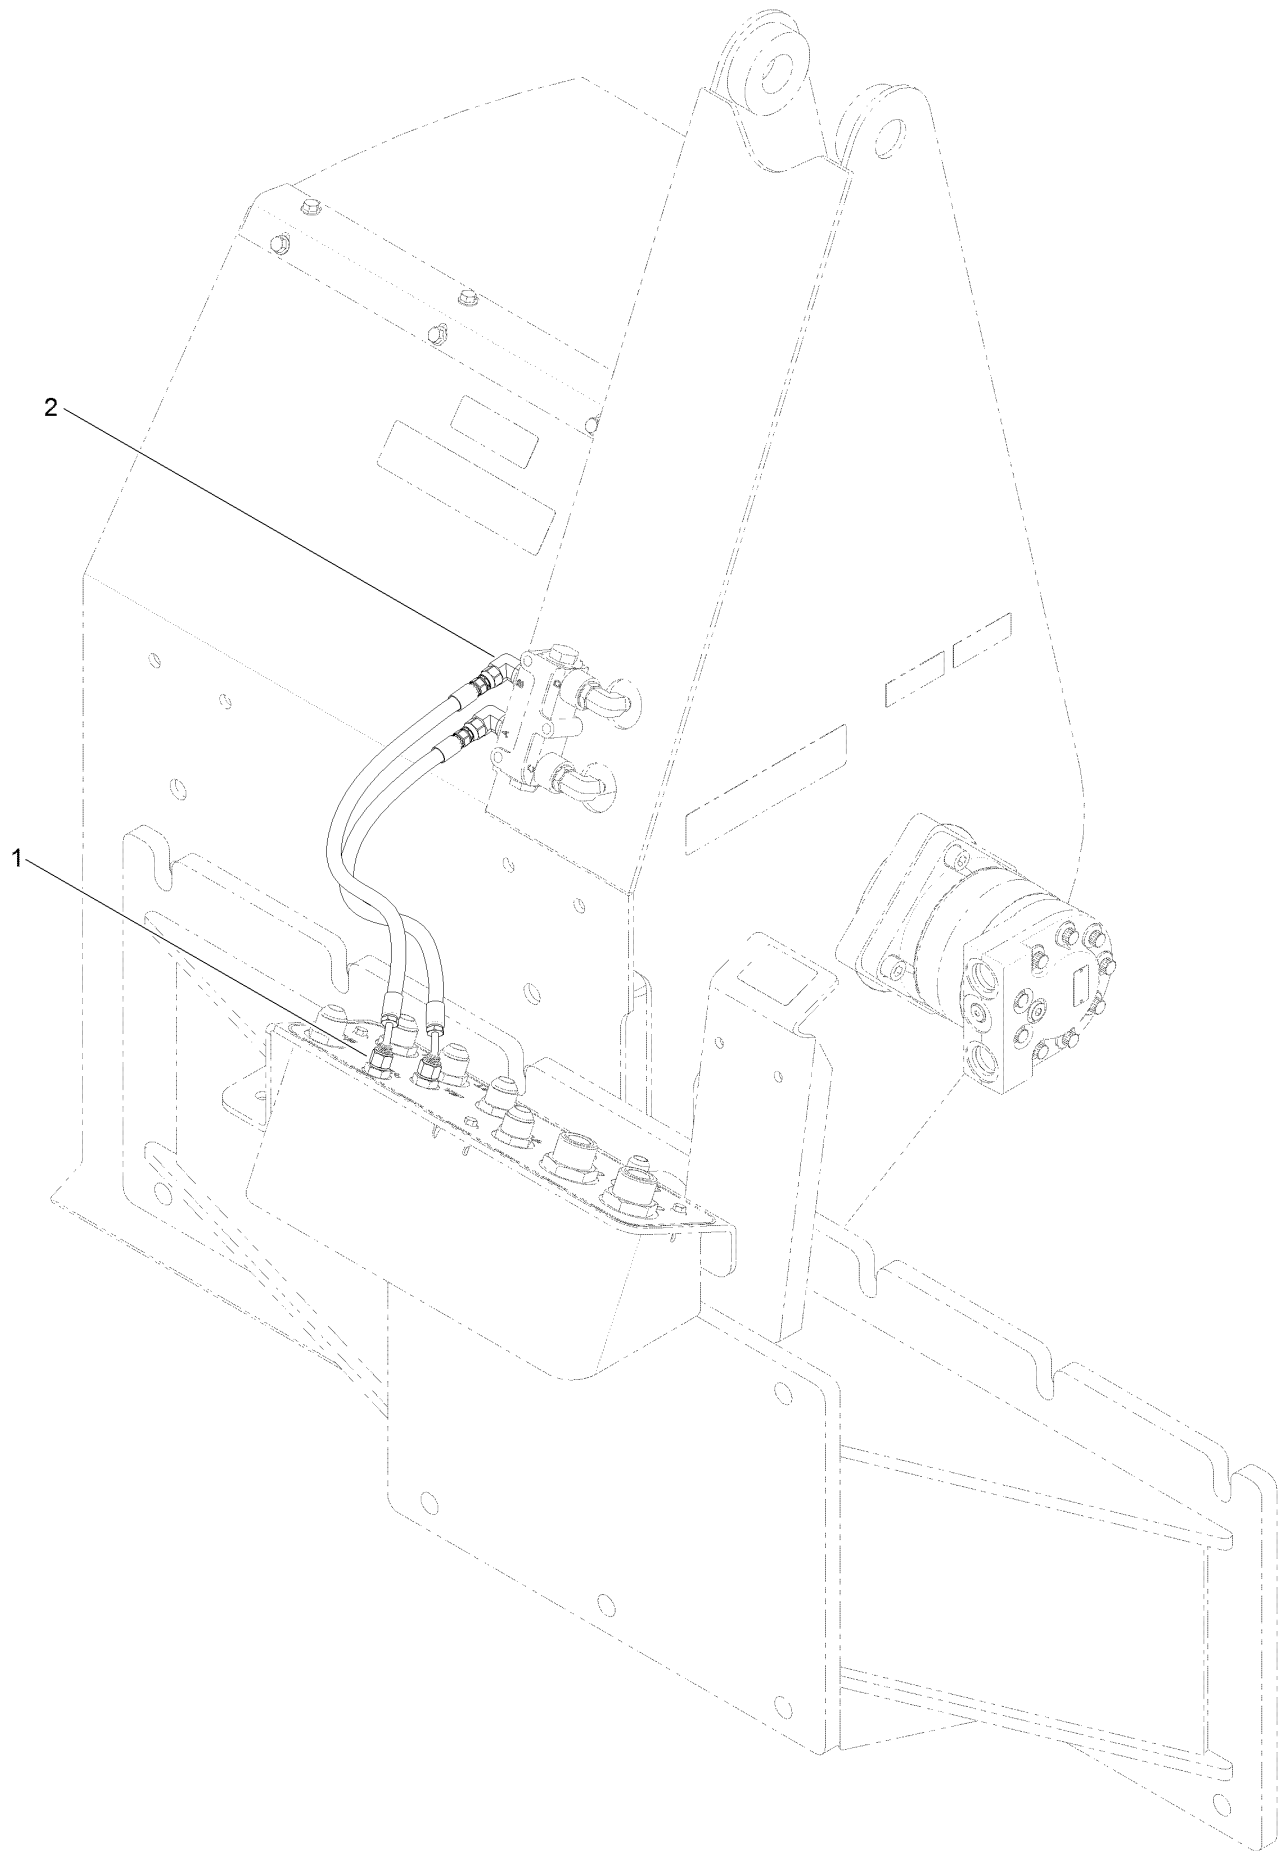


Trencher Lift/Lower Hose Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-2581	2	Hose ASM
2	353-537	2	Fitting-Elbow, 90 DEG
2:1	237-79	1	O-Ring ●

● Not illustrated

Fitting Assembly

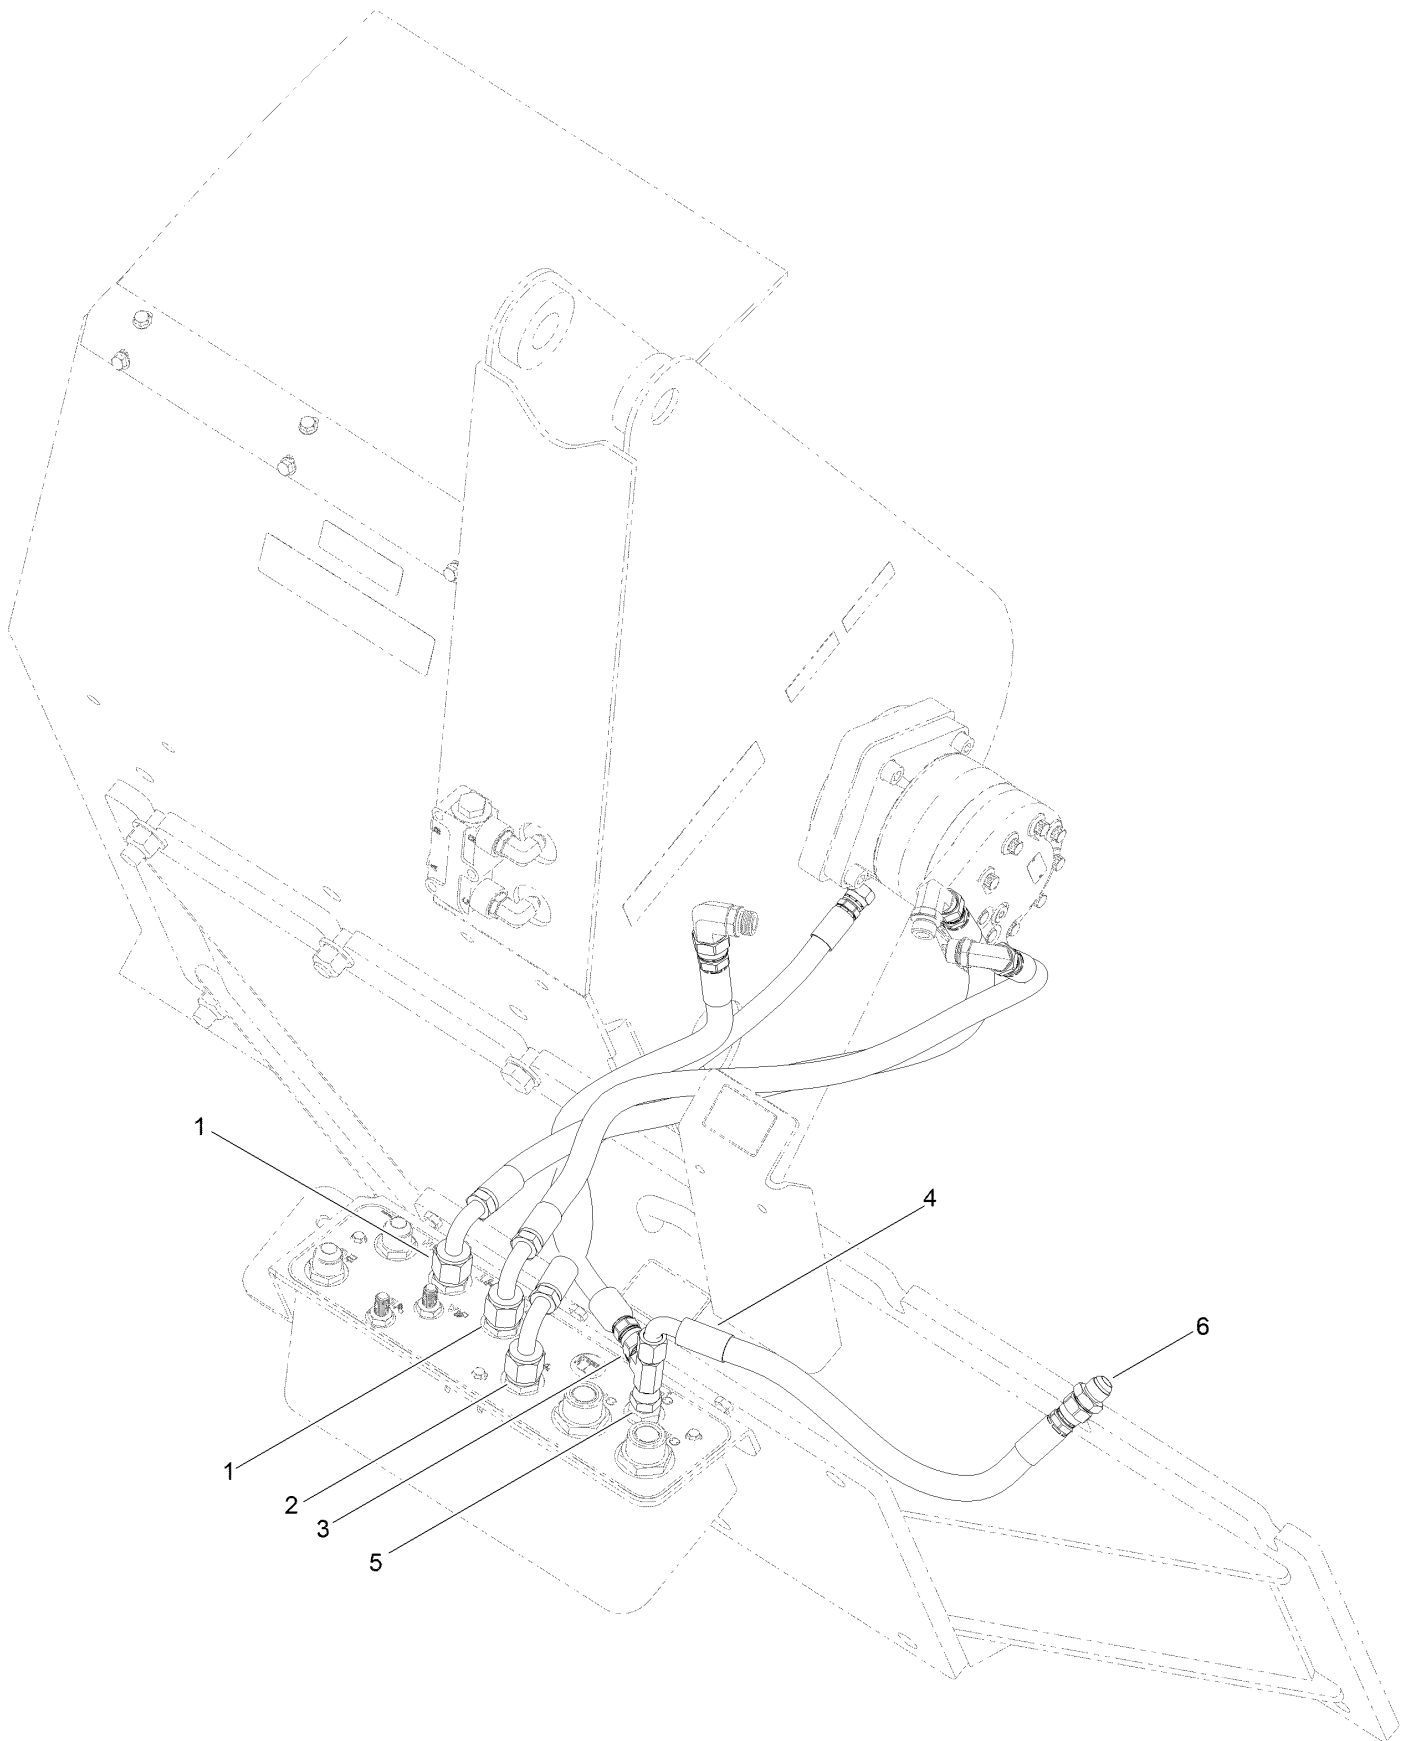


Fitting Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-2582	2	Hose ASM
2	131-2603	1	Hose ASM
3	131-2584	1	Hose ASM

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	130-4312	1	HYD Hose ASM
5	94-7022	1	Fitting-Tee
6	AU218-736	1	Fitting-Union

Hydraulic Hose and Valve Assembly

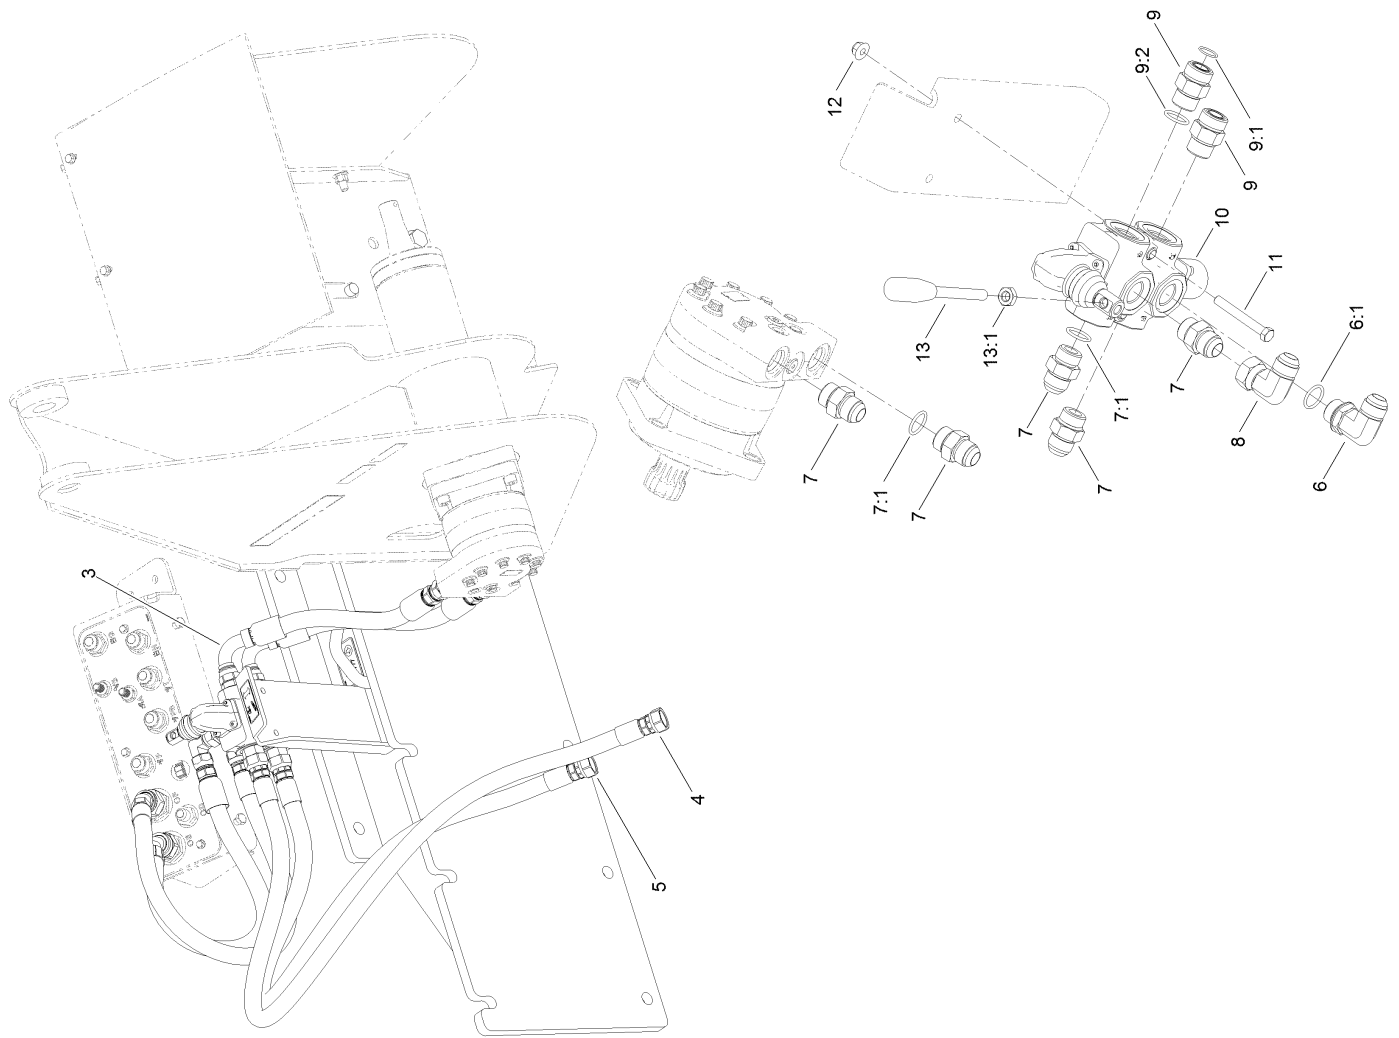


Hydraulic Hose and Valve Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	131-2580	2	Hose ASM	9:1	237-58	1	O-Ring
4	131-2594	1	Hose ASM	9:2	237-81	1	O-Ring
5	131-2583	1	Hose ASM	10	131-2666	1	Valve-Selector
6	353-369	1	Fitting-Elbow, 90 DEG	11	323-14	2	Screw-HH
6:1	237-81	1	O-Ring	12	104-8301	2	Nut-Flange, NI
7	AU218-5064	5	Fitting-Straight	13	131-2671	1	Handle-Selector
7:1	237-81	1	O-Ring	13:1	51-2070	1	Nut
8	AU218-5231	1	Fitting-Elbow, 90	99	3290-379	3	Tie-Cable ●
9	340-9	2	Fitting-HYD, Straight	99	AU112950	1	Protector-Hose, 4 Inch ●

● Not illustrated

Wheel and Cylinder Stop Assembly

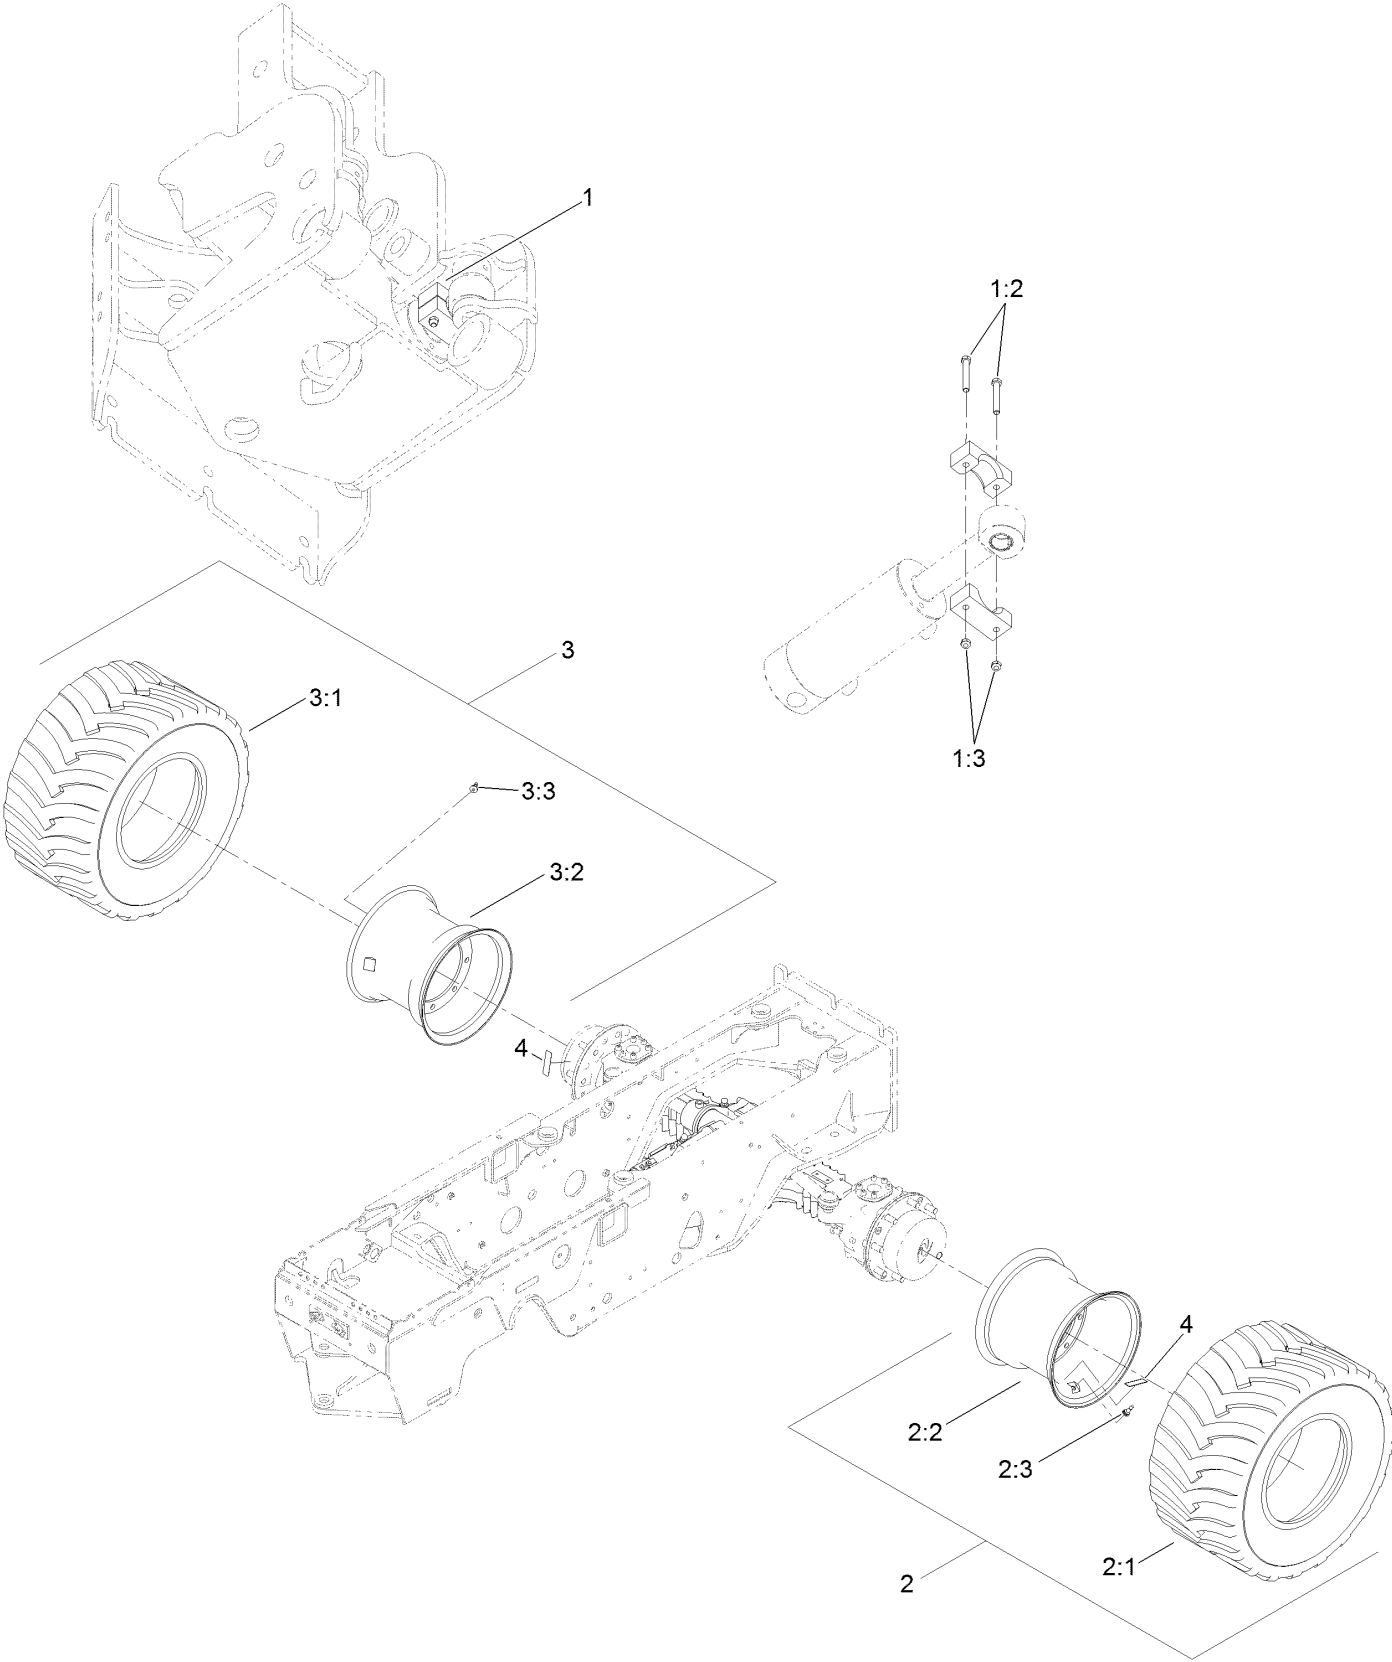

Wheel and Cylinder Stop Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AUH675015	1	Plow Swing Cylinder Stop ASM
1:2	323-13	2	Screw-HH
1:3	AU232-4116	2	Nut-Hex
2	131-2698	1	Rt600 HD Tire ASM (Left)
2:1	131-2696	1	Tire-31X15.50-15Nhs (10 Ply)
2:2	136-3974	1	Wheel ASM

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2:3	232-24	1	Stem-Valve
3	131-2699	1	Rt600 HD Tire ASM (Right)
3:1	131-2696	1	Tire-31X15.50-15Nhs (10 Ply)
3:2	136-3974	1	Wheel ASM
3:3	232-24	1	Stem-Valve
4	133-5056	2	Decal-Rear Wheel Only

Notes:

Notes:



Count on it.