



27" Verticutting Reel for Reelmaster® 3100D

Model No. 03216—90001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

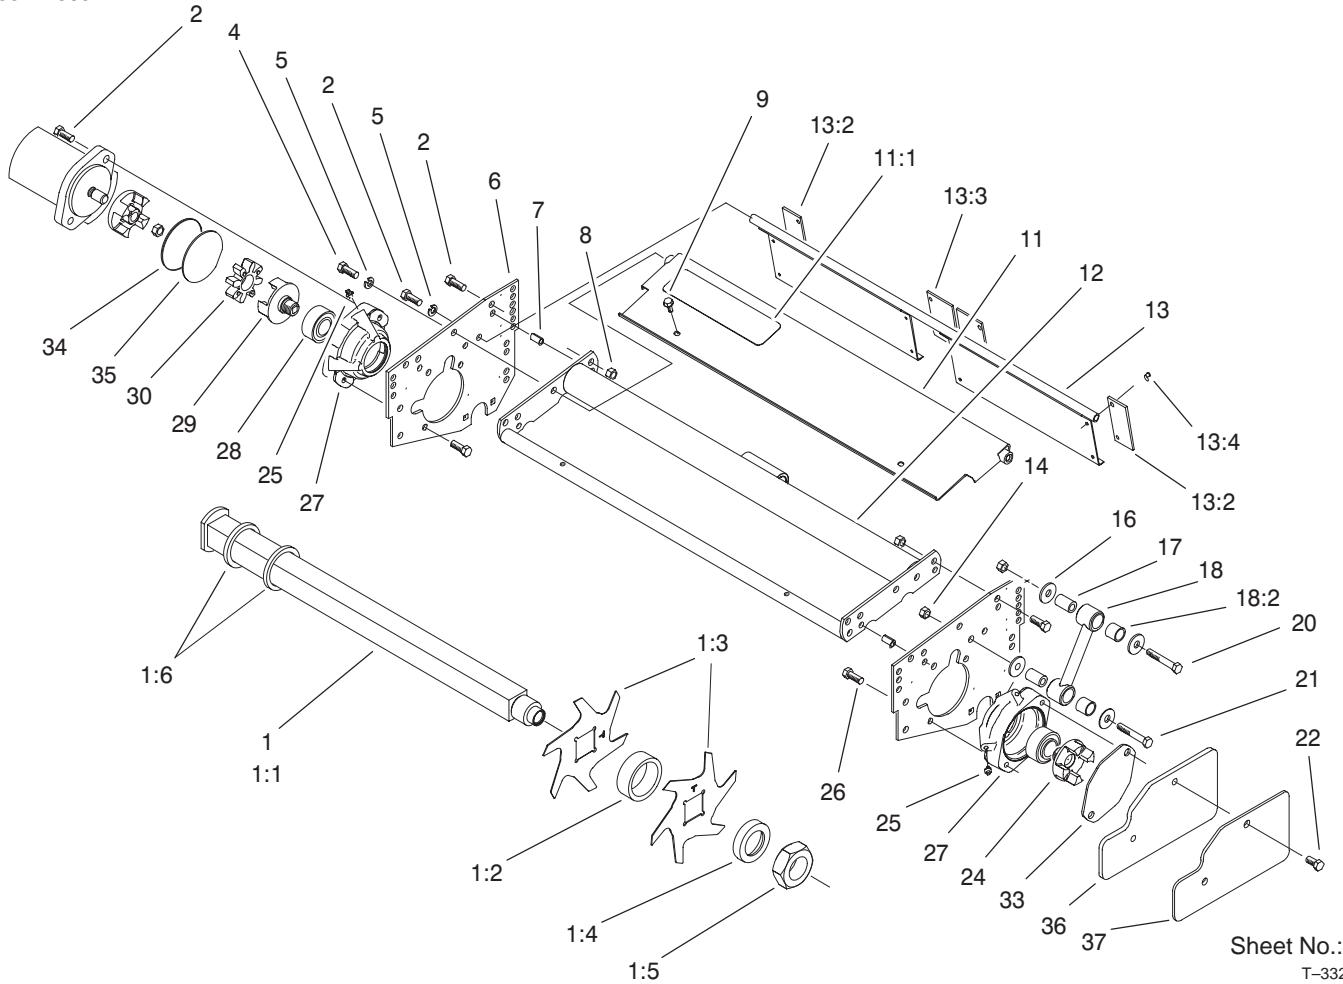

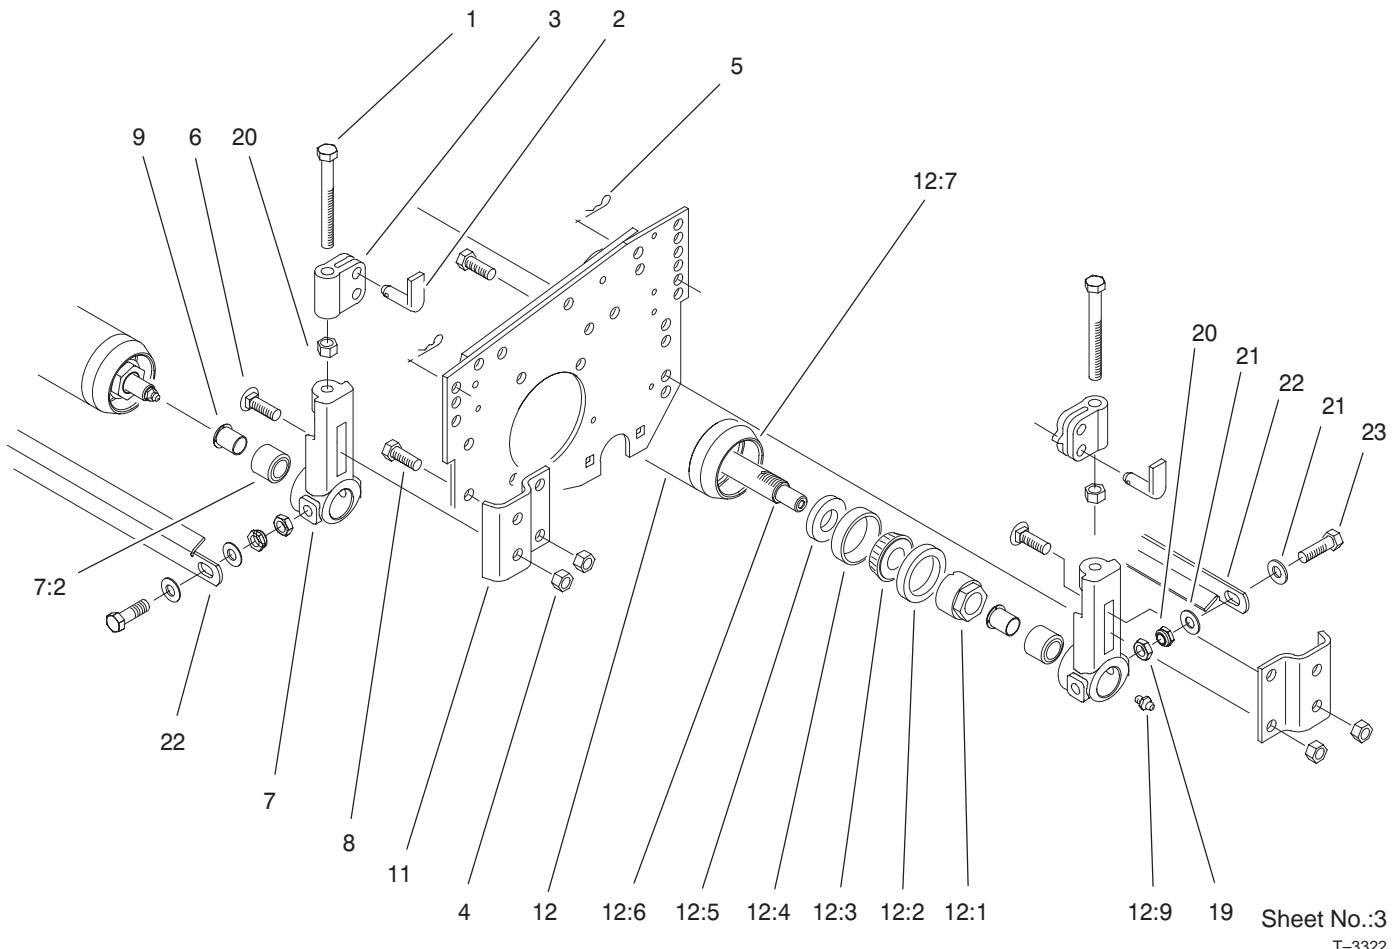

Sheet No.:3

T-3322

Roller Assembly

| Ref. No. | Part No. | Qty. | Description | Ref. No. | Part No. | Qty. | Description |
|----------|------------|------|---------------------|----------|----------|------|-------------|
| 1 | 323-57 | 4 | Screw-HH | | | | |
| 2 | 71-3690 | 4 | Spade-Bent | | | | |
| 3 | 61-0420-01 | 4 | Support-HOC | | | | |
| 4 | 3296-39 | 16 | Nut-Lock, NI | | | | |
| 5 | 3290-467 | 4 | Pin-Hair | | | | |
| 6 | 3231-25 | 4 | Screw-CARR | | | | |
| 7 | 14-4489 | 4 | Front HOC | | | | |
| 7:2 | 56-9510 | 4 | Bushing ASM | | | | |
| 8 | 323-6 | 8 | Screw-HH | | | | |
| 9 | 56-9520 | 2 | Bushing-Flanged | | | | |
| 11 | 61-0910 | 4 | Bracket-Angle | | | | |
| 12 | 61-0410 | 2 | Full Roller ASM | | | | |
| 12:1 | 71-3590 | 2 | Nut-Adjustment | | | | |
| 12:2 | 253-153 | 2 | Seal-Oil | | | | |
| 12:3 | 254-78 | 2 | Cone-Bearing | | | | |
| 12:4 | 254-79 | 2 | Bearing-Roller, Cup | | | | |
| 12:5 | 253-152 | 2 | Seal-Oil | | | | |
| 12:6 | 61-0400 | 1 | Shaft-Roller | | | | |
| 12:7 | 12-4989-01 | 1 | End Cap & Tube ASM | | | | |
| 12:9 | 302-5 | 2 | Fitting-Lube | | | | |
| 19 | 3218-3 | 4 | Nut-Jam | | | | |
| 20 | 3296-59 | 8 | Nut-Lock, NI | | | | |
| 21 | 3256-24 | 8 | Washer-Flat | | | | |
| 22 | 61-0590 | 2 | Roller-Scraper | | | | |
| 23 | 323-7 | 4 | Screw-HH | | | | |

