



MODEL NO. 08886 - 80001 &amp; OVER

**OPERATOR'S  
MANUAL****SAND PRO<sup>®</sup> 5020**

To assure maximum safety, optimum performance, and to gain knowledge of the product, it is essential that you or any other operator of the machine read and understand the contents of this manual before the engine is ever started. Pay particular attention to the **SAFETY INSTRUCTIONS** highlighted by this symbol-

The safety alert symbol means **CAUTION**, **WARNING** or **DANGER**—personal safety instruction. Failure to comply with the instruction may result in personal injury.



# FOREWORD

The SAND PRO 5020 was developed to provide an efficient, trouble free and economical method of sand trap maintenance. The latest concepts of engineering, design and safety have been incorporated into this machine, along with the highest quality parts and workmanship. Excellent service will be derived if proper operation and maintenance practices are followed.

You know, since you have purchased the industry leader in sand trap and other maintenance excellence, that future performance and dependability are of prime importance. TORO also is concerned about future use of the machine and of safety to the user. Therefore, this manual must be read by you and those involved with the SAND PRO 5020 to make sure that safety, proper set—up, operation and maintenance procedures are followed at all times.

Safety, mechanical and some general information in this manual are emphasized. DANGER, WARNING and CAUTION identify safety messages. Whenever the triangle safety symbol appears, it is followed by a safety message that must be read and understood. For more details concerning safety, read the safety instructions on pages 4 and 5. IMPORTANT identifies special mechanical information and NOTE identifies general information worthy of special attention.

If help concerning, operation, maintenance or safety is ever needed, contact your local Authorized TORO

Distributor. In addition to genuine TORO replacement parts, the distributor also has optional equipment for the complete line of TORO turf care equipment. Keep your Toro all TORO. Buy genuine TORO parts and accessories.

# IDENTIFICATION AND ORDERING

## MODEL AND SERIAL NUMBERS

The SAND PRO 5020 has two identification numbers: a model number and a serial number. These numbers are stamped into a plate located on the left frame rail. In any correspondence concerning the unit, supply the model and serial numbers to ensure correct information and replacement parts are obtained.

**Note:** Do not order by reference number if a parts catalog is being used; use the part number.

To order replacement parts from an authorized TORO Distributor, supply the following information:

1. Model and serial numbers.
2. Part number, description, and quantity of parts desired.

# Table of Contents

SAFETY INSTRUCTIONS	4
SYMBOL GLOSSARY	7
SPECIFICATIONS	8
BEFORE OPERATING	9
KNOW YOUR CONTROLS	12
OPERATING INSTRUCTIONS	14
MAINTENANCE	16

# Safety Instructions

The SAND PRO 5020 was designed and tested to offer safe service when operated and maintained properly. Although hazard control and accident prevention partially depend up the design and configuration of the machine, these factors also depend on the awareness, concern, and proper training of the personnel involved in the operation, transport, maintenance, and storage of the machine. Improper use or maintenance of the machine can result in injury or death. To reduce the potential for injury or death, comply with the following safety instructions.

**WARNING:** Engine exhaust contains carbon monoxide which is an odorless, deadly poison. Do not run the engine indoors or in an enclosed area.

## BEFORE OPERATING

1. Operate the machine only after reading and understanding the contents of this manual. A replacement manual is available by sending complete model and serial number to: The Toro Company, 8111 Lyndale Avenue South, Minneapolis, Minnesota 55420.
2. Never allow children to operate the machine or adults to operate it without proper instructions.
3. Become familiar with the controls and know how to stop the engine quickly.
4. Keep all shields, safety devices and decals in place. If a shield, safety device or decal is malfunctioning, illegible, or damaged, repair or replace it before operating the machine.
5. Always wear substantial shoes. Do not operate the machine while wearing sandals, tennis shoes or sneakers. Do not wear loose fitting clothing which could get caught in moving parts and cause personal injury.
6. Wearing safety glasses, safety shoes, long pants and a helmet is advisable and required by some local safety and insurance regulations.
7. Ensure traction neutral is adjusted correctly so the engine cannot be started unless the traction pedal is released and in neutral position.
8. Keep everyone, especially children and pets away from the areas of operation.
9. Since gasoline is highly flammable, handle it carefully.
  - A. Use an approved gasoline container.
  - B. Do not remove cap from fuel tank when the engine is hot or running.
  - C. Do not smoke while handling gasoline.
  - D. Fill fuel tank outdoors and to about one inch below top of tank, (bottom of filler neck). Do not overfill.
  - E. Wipe up any spilled gasoline.
10. Check the safety interlock system daily for proper operation; refer to page 14. If the switch should malfunction, replace the switch before operating the machine. (After every two years, replace the interlock switch in the safety system, whether it is working properly or not.)

## WHILE OPERATING

11. Exhaust fumes are hazardous and could be deadly, so do not run the engine in a confined area without adequate ventilation.
12. Sit on the seat when operating the machine. Never carry passengers.
13. When starting the engine:
  - A. Make sure the traction pedal is released.
  - B. After the engine is started, keep foot off the traction pedal. The machine must not move. If movement is evident, the neutral return mechanism is adjusted incorrectly; therefore, shut the engine off and readjust so the machine does not move when in neutral position. If the engine does not start, check interlock switch connections.
14. Using the machine demands attention. To prevent tipping or loss of control:
  - A. Use care when entering and leaving sand

traps. Use extreme caution around ditches, creeks or other hazards.

- B.** Watch for holes or other hidden hazards.
  - C.** Use caution when operating the machine on a steep slope. Reduce speed when making sharp turns or when turning on hillsides.
  - D.** Avoid sudden stops and starts. Do not go from reverse to full forward without first coming to a complete stop.
  - E.** Before backing up, look to the rear and assure no one is behind the machine.
  - F.** Watch out for traffic when near or crossing roads. Always yield the right of way.
- 15.** If optional Hitch Kit, model 08833, is installed on the machine, vertical load on hitch should not exceed 200 lbs.
- 16.** Do not touch the engine, muffler or muffler shield while the engine is running or soon after it has stopped because these areas are hot enough to cause burns.
- 17.** If the machine ever vibrates abnormally, stop immediately, turn the engine off, wait for all motion to stop and inspect for damage. Repair all damage before commencing operation.
- 18.** Before getting off the seat:
- A.** Stop movement of the machine. Take precautions to prevent accidental starts, rolling away, etc.
  - B.** Shut the engine off and wait for all movement to stop.
  - C.** Lower attachments to the ground.
- 19.** Whenever the machine is left unattended, be sure engine is stopped, implement is lowered and key is removed from ignition.

## MAINTENANCE

- 20.** Before servicing or making adjustments to the machine, stop the engine and pull the spark plug wire off the spark plug to prevent accidental

starting of the engine.

- 21.** Make sure all hydraulic line connectors are tight, and all hydraulic hoses and lines are in good condition before applying pressure to the system.
- 22.** Keep body and hands away from pin hole leaks or nozzles that eject hydraulic fluid under high pressure. Use paper or cardboard, not hands, to search for leaks. Hydraulic fluid escaping under pressure can have sufficient force to penetrate skin and do serious damage. If fluid is injected into the skin it must be surgically removed within a few hours by a doctor familiar with this form of injury or gangrene may result.
- 23.** Before disconnecting or performing any work on the hydraulic system, all pressure in system must be relieved by stopping the engine and lowering attachments to the ground.
- 24.** To make sure the entire machine is in good condition, keep all nuts, bolts and screws properly tightened.
- 25.** If major repairs are ever needed or assistance is required, contact an Authorized TORO Distributor.
- 26.** To reduce potential fire hazard, keep the engine area free of excessive grease, grass, leaves and accumulation of dirt.
- 27.** If the engine must be running to perform a maintenance adjustment, keep hands, feet, clothing, and any parts of the body away from the engine and any moving parts. Keep everyone away.
- 28.** Do not overspeed the engine by changing governor settings. Maximum engine speed is 3200 rpm. To assure safety and accuracy, have an Authorized Toro Distributor check maximum engine speed with a tachometer.
- 29.** The engine must be shut off before checking oil or adding oil to the crankcase.
- 30.** To be sure of optimum performance and safety, always purchase genuine TORO replacement parts and accessories. Replacement parts and accessories made by other manufacturers could be dangerous. Such use could void the product

warranty of The Toro Company.

## **Sound & Vibration Levels**

### **Sound Levels**

This unit has a continuous A-weighted sound pressure level of 82.5 dB(A), based on measurements of identical machines per Directive 91/386/EEC and amendments.


This unit has a sound power level of 93 LWA, based on measurements of identical machines per Directive 84/538/EEC and amendments

### **Vibration Levels**

This unit has a vibration level of 0.07 m/s<sup>2</sup> at the hands, based on measurements of identical machines per ISO 5349 procedures.

This unit has a vibration level of 0.63 m/s<sup>2</sup> at the posterior, based on measurements of identical machines per ISO 2631 procedures.

# Symbol Glossary

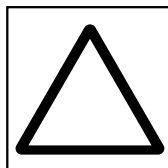


SICHERHEITS-  
WARNDREIECK




ALLGEMEINE  
SICHERHEITS-  
WARNUNG



GESPEICHERTE  
ENERGIE, RÜCK  
SCHLAG ODER  
AUFWÄRTSBEWEGUNG

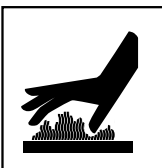

HEISSE OBERFLÄCHE,  
VERBRENNUNGSGEFAHR  
FÜR FINGER ODER HÄNDE

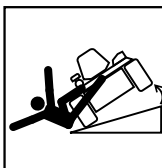


UMKIPPGEFAHR



ÜBERFAHRGEFAHR




QUETSCHGEFAHR FÜR  
ZEHEN ODER FUSS, VON  
OBEN ANGESETZTE KRAFT

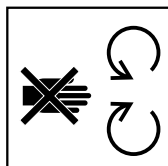

SICHERHEITSBLECHE NIE  
BEI LAUFENDEM MOTOR  
ÖFFNEN ODER ENTFERNEN




BEIZENDE FLÜSSIGKEITEN,  
CHEMISCHE  
VERBRENNUNGSGEFAHR  
FÜR FINGER ODER HÄNDE

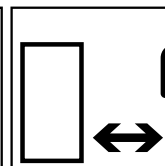


SICHEREN ABSTAND  
ZUR MASCHINE EINHALTEN



SICHEREN ABSTAND ZUR  
MASCHINE EINHALTEN

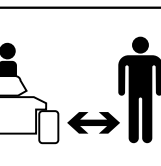


SICHEREN ABSTAND ZUR  
MASCHINE EINHALTEN

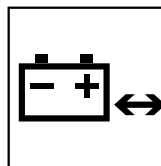

KINDER IN SICHEM  
ABSTAND VON DER  
BATTERIE HALTEN



EXPLOSIONSGEFAHR

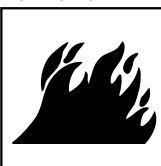

FEUER ODER  
OFFENE FLAMME



FEUER, OFFENES LICHT  
& RAUCHEN VERBOTEN



SCHUTZBRILLEN  
TRAGEN




VORSICHT – GIFT



ERSTE HILFE




MIT WASSER WASCHEN

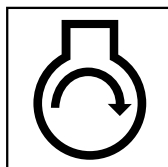


MOTORSTART




MOTORSTOPP

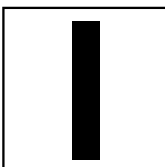


EIN/START

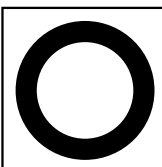


AUS/STOP

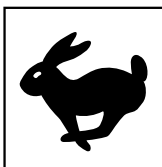

SCHNELL

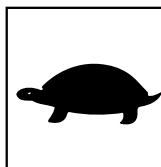

LANGSAM

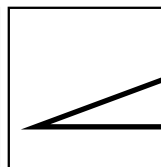


STUFENLOS  
EINSTELLBAR, LINEAR




VERRIEGELN




ENTRIEGLN

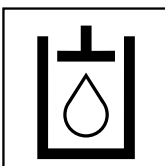


HYDRAULIKÖL

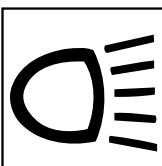


SCHEINWERFER

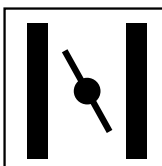

CHOKE

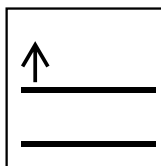

GERÄT ANHEBEN

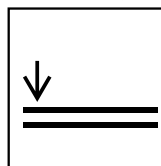

GERÄT ABSENKEN



PARKEN




VORWÄRTS



RÜCKWÄRTS



NEUTRAL




SCHALTHEBEL  
BETÄTIGUNGS-  
RICHTUNG  
VOR- UND  
RÜCKWÄRTS




FAHRPEDALFUNKTION




NICHT IM MÜLL  
ENTSORGEN

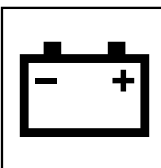


BATTERIE-  
LADEZUSTAND

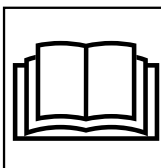


HANDBUCH  
DURCHLESEN

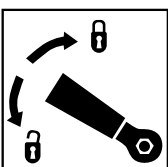


LENKRADSPERR-  
FUNKTION

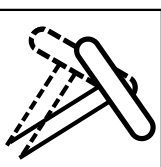


LENKRADKIPP-  
FUNKTION

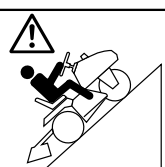

BEI EINSATZ DER  
EINHEIT AN STEILEN  
HÄNGEN MIT VORSICHT  
VORGEHEN

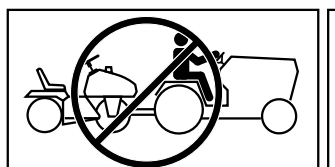

NIE ABSCHLEPPEN

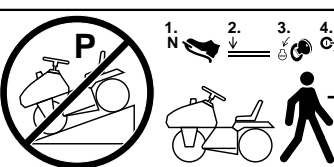

NIE AN HÄNGEN ABSTELLEN. VOR VERLASSEN DES  
FAHRERSITZES, DAS FAHRPEDAL AUF NEUTRAL STELLEN,  
ALLE GERÄTE AUF DEN BODEN ABSENKEN,  
DEN ZÜNDSCHLÜSSEL AUF "AUS" STELLEN UND ZIEHEN.

# Specifications

**Configuration:** Tricycle vehicle with welded steel frame construction. Rear engine placement. All wheels powered.

**Engine:** Briggs & Stratton, V-twin cylinder, 4-cycle, OHV, air-cooled, gas engine. 13.4 kW @ 3600 rpm, 570 cc displacement, 1.7 l. oil capacity. Electronic ignition. Full pressure lubrication, oil filter.

**Gauges:** Hour meter.

**Controls:** Hand-operated throttle, choke and lift lever. Foot pedal controls traction forward/reverse speed.

**Steering:** Front wheel steering with adjustable tilt steering wheel.

**Gas Tank:** 20.8 l capacity.

**Battery:** 12-volt, lead acid, 32 amp hour.

**Drive:** Hydraulic. Coupling driven variable displacement piston pump with integral auxiliary charge pump to hydraulic motors which directly drive wheels.

**Hydraulic Oil Filter:** 25-micron, spin-on type.

**Hydraulic Oil Reservoir:** 11.4 l capacity.

**Valve:** Single section for raising and lowering of implement.

**Cylinder:** Double acting.

**Tires:** 22 x 11.00 - 8 two-ply pneumatic tubeless. De-mountable and interchangeable. Recommended tire pressure is 28 kPa.

**Speeds** (at 3200 RPM): Variable between 0 and 17.7 kmh forward and 0 and 6.4 kmh reverse.

**Seat Adjustment:** 10 cm—fore and aft. Additional 4 cm forward adjustment available by using front mounting holes. Additional adjustment for small operator attained by removing the seat slides and base and mounting the seat directly to support.

**Dimensions:**

Width w/o implements:	147 cm
Width w/rake (Model 08812):	190.5 cm
Height:	114.9 cm
Length w/o implements:	163.8 cm
Wheelbase	108.5 cm
Net Weight: (Wet)	302 kg

## Optional Equipment:

Drag Mat, Model	08845
Rake Mounting Kit, Model No.	08814
Tooth Rake, Model No.	08812
Weeder/Cultivator, Model No.	08815
Finish Grader, Model No.	08867
Spiker, Model No.	08856
Hitch,	Part No. 20-3900
Front Blade	Model No.08821

# Before Operating



## CAUTION

Before servicing or making adjustments to the machine, stop the engine, pull the wires off the spark plugs and remove the key from the switch.

## CHECK CRANKCASE OIL (Fig. 1)

The engine is shipped with 1.7 l (w/ filter) of oil in the crankcase; however, the oil level must be checked before and after the engine is first started.

1. Position the machine on a level surface.
2. Pivot the seat upward and engage the seat prop.
3. Unscrew the dipstick and wipe it with a clean cloth. Screw the dipstick into the tube and make sure it is seated fully. Unscrew the dipstick from the tube and check the level of oil. If the oil level is low, remove the filler cap from the valve cover (next to the dipstick) and add enough oil to raise the level to the FULL mark on the dipstick.
4. The engine uses any high-quality detergent oil having the American Petroleum Institute — API— “service classification” SE, SF or SG. Recommended viscosity (weight) is SAE 30.

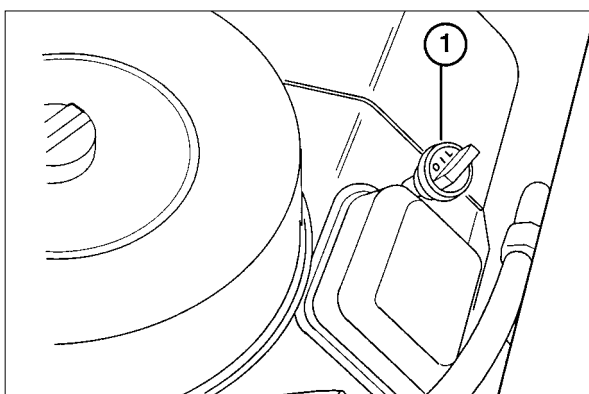


Figure 1

1. Dipstick

5. Install the dipstick firmly in place.

**IMPORTANT:** The dipstick must be fully seated

in the tube to provide proper sealing of the engine crankcase. Failure to seal the crankcase may result in engine damage.

**IMPORTANT:** Check the level of oil every 8 operating hours or daily. Initially, change the oil after the first 8 hours of operation; thereafter, under normal conditions, change the oil every 50 hours and the filter every 100 hours. However, change the oil more frequently when the engine is operated in extremely dusty or dirty conditions.

## FILL THE FUEL TANK



## DANGER

Because gasoline is flammable, caution must be used when storing or handling it. Do not fill the fuel tank while the engine is running, hot or when the machine is in an enclosed area. Vapors may build up and be ignited by a spark or flame source many feet away.

DO NOT SMOKE while filling the fuel tank to prevent the possibility of an explosion. Always fill the fuel tank outside and wipe up any spilled gasoline before starting the engine. Use a funnel or spout to prevent spilling gasoline, and fill the tank no higher than one inch below the top of the tank (bottom of the filler neck). DO NOT OVER FILL.

Store gasoline in a clean safety approved container and keep the cap on the container. Keep gasoline in a cool, well-ventilated place; never in an enclosed area such as a hot storage shed. To assure volatility, do not buy more than a 30-day supply of gasoline. Gasoline is a fuel for internal combustion engines; therefore do not use it for any other purpose. Since many children like the smell of gas, keep it out of their reach because the fumes are explosive and dangerous to inhale.

Fuel tank capacity is approximately 20.8 l.

THE TORO COMPANY STRONGLY RECOMMENDS THE USE OF FRESH, CLEAN, UNLEADED REGULAR GRADE GASOLINE IN TORO GASOLINE POWERED PRODUCTS. UNLEADED



GASOLINE BURNS CLEANER, EXTENDS ENGINE LIFE, AND PROMOTES GOOD STARTING BY REDUCING THE BUILD-UP OF COMBUSTION CHAMBER DEPOSITS. LEADED GASOLINE CAN BE USED IF UNLEADED IS NOT AVAILABLE.

**NOTE:** NEVER USE METHANOL, GASOLINE CONTAINING METHANOL, GASOLINE CONTAINING MORE THAN 10% ETHANOL, GASOLINE ADDITIVES, PREMIUM GASOLINE OR WHITE GAS BECAUSE ENGINE FUEL SYSTEM DAMAGE COULD RESULT.

1. Clean the area around the fuel tank cap.
2. Remove the fuel tank cap.
3. Fill the tank to about 2.5 cm below top of the tank, (bottom of the filler neck). DO NOT OVERFILL. Then install cap.
4. Wipe up any fuel that may have spilled to prevent a fire hazard.

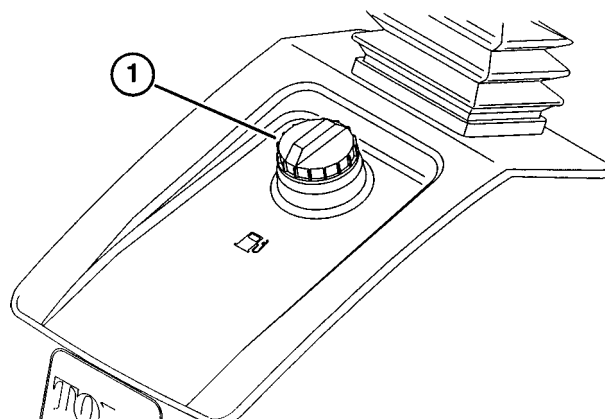


Figure 2

1. Fuel tank cap

## CHECK THE HYDRAULIC SYSTEM (Fig. 3)

The hydraulic system is designed to operate on Mobil 424 or equivalent anti-wear hydraulic fluid. The machine's hydraulic reservoir is filled at the factory with approximately 11.4 l of fluid. However, check the level of hydraulic fluid before the engine is first started and daily thereafter.

### Group 1 Hydraulic Oil (Recommended for ambient temperatures consistently below 38° C):

Mobil	Mobil Fluid 424
Amoco	Amoco 1000
International Harvester	Hy-Tran
Texaco	TDH
Shell	Donax TD
Union Oil	Hydraulic/Tractor Fluid
Chevron	Tractor Hydraulic Fluid
BP Oil	BP HYD TF
Boron Oil	Eldoran UTH
Exxon	Torque Fluid
Conoco	Pwer-Tran 3
Kendall	Hyken 052
Phillips	HG Fluid

**Note:** All are interchangeable.

**IMPORTANT:** Use only hydraulic oils specified. Other fluids could cause system damage.

1. Remove the cap from hydraulic oil reservoir.
2. Check the level of oil in the reservoir. The oil level should be up to the top of the cone point on the tank screen.
3. If the oil level is low, slowly fill with Mobil 424 or equivalent hydraulic oil until the level is up to the top of the cone point on the tank screen. DO NOT OVERFILL.

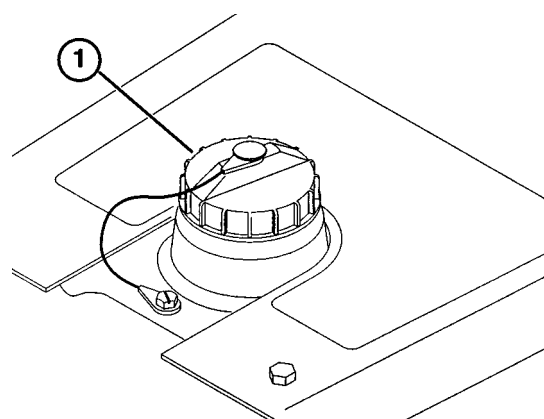


Figure 3

1. Oil reservoir cap


- 4.. Install the reservoir cap.

**IMPORTANT:** To prevent system contamination, clean the tops of hydraulic oil containers before

**opening. Assure pour spout and funnel are clean.**

## **CHECK TIRE PRESSURE (Fig. 4)**

The tires are over-inflated at the factory for shipping purposes. Reduce the pressure to the proper levels before starting the machine.

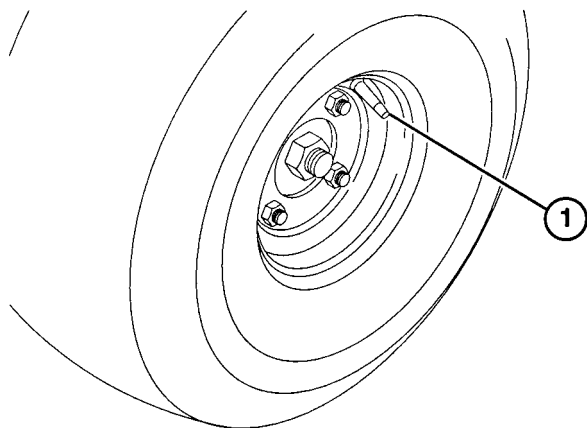

Correct air pressure in front and rear tires is 4–6 psi.

**Figure 4**

1. Air valve

---

# Controls

**Traction and Stopping Pedal** (Fig. 5–6)—The traction pedal has three functions: one, to make the machine move forward, two, to move it backward and three, to stop the machine. Using the heel and toe of the right foot, depress the top of the pedal to move forward and bottom of the pedal to move backward or to assist in stopping when moving forward. Allowing the pedal to move to the neutral position will stop the machine. **Do not rest your heel on reverse when operating forward (Fig. 6).**

Ground speed is proportionate to how far the traction pedal is depressed. For maximum ground speed, the pedal must be fully depressed while the throttle is in the FAST position. To get maximum power or when ascending a hill, have the throttle in the FAST position while depressing the pedal slightly to keep engine rpm high. When engine rpm begins to decrease, release the pedal slightly to allow rpm to increase.



## CAUTION

Use the maximum ground speed **ONLY** when driving from one area to another. Maximum speed is not recommended when using an attached or towed implement.

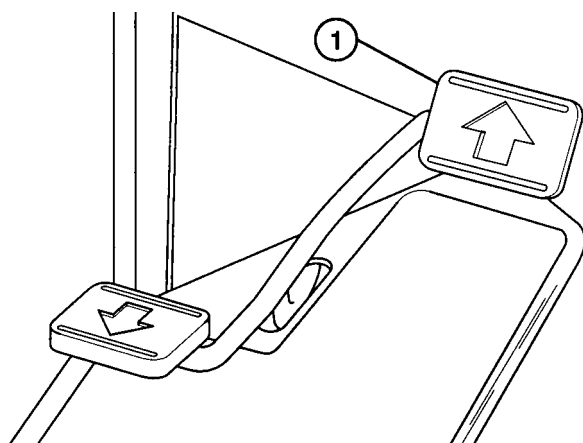


Figure 5

1. Traction & Stopping Pedal

**IMPORTANT:** For maximum pulling power, the throttle should be in “Fast” position, and the traction pedal just barely depressed.

**IMPORTANT:** The SAND PRO must not be operated in reverse with the implement in the down (operating) position, or the implement could be severely damaged.

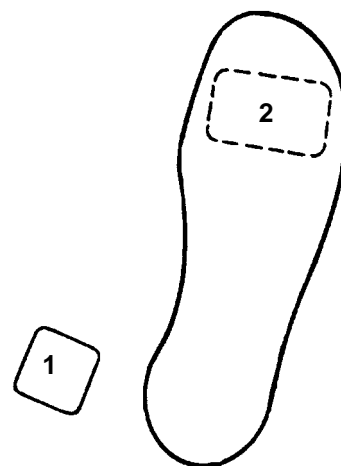


Figure 6

1. Reverse
2. Forward

**Ignition Switch** (Fig. 7)—The ignition switch, used to start and stop the engine, has three positions: OFF, RUN and START. Turn the key clockwise—START position—to engage the starter motor. Release the key when the engine starts. The key will move automatically to the RUN position. To shut the engine off, turn the key counterclockwise to the OFF position.

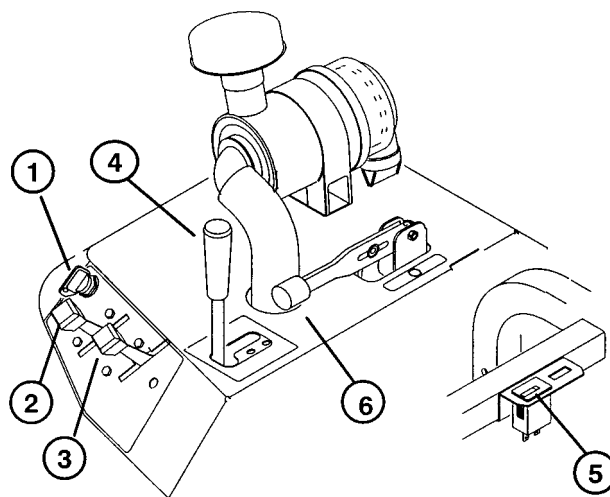


Figure 7

1. Ignition switch
2. Choke control
3. Throttle control
4. Lift lever
5. Hour meter
6. Parking brake

**Choke Control** (Fig. 7)—To start a cold engine, close the carburetor choke by moving the choke control forward to the “CLOSED” position. After the

engine starts, regulate the choke to keep the engine running smoothly. As soon as possible, open the choke by pulling upward to the “OPEN” position. A warm engine requires little or no choking.

**Throttle Control** (Fig. 7)—A lever connects to and operates the throttle linkage to carburetor. The throttle control has two positions: SLOW and FAST. Engine speed can be varied between the two settings.


**Note:** The engine cannot be stopped by the throttle control.

**Hour Meter** (Fig. 7)— Shows the total hours of machine operation. The hour meter operates whenever the key switch is turned to “ON”.

**Lift Lever** (Fig. 7)—To raise the implement, pull the lever up; to lower implement, push the lever down. When the desired position is attained, release the lever and it will return to neutral.

**Note:** The SAND PRO has a double-acting lift cylinder. Down pressure can be applied to the implement for certain operating conditions.

**Parking Brake** (Fig. 7)—To engage the parking brake, pull back on the lever. To disengage the brake, push the lever forward.

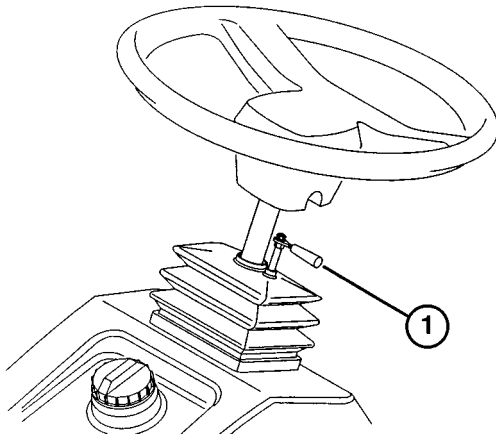


**Figure 8**

1. Steering wheel tilt lever

**Steering Wheel Tilt Lever** (Fig. 8)—Lever on the left side of steering column allows steering wheel to be adjusted for operator comfort.


**Seat Adjusting Lever** (Fig. 9)—Lever on the right side of the seat allows the seat to be adjusted fore and aft for operator comfort.

**Fuel Shut-Off Valve** (Fig. 10)—Close the fuel shut-off valve when storing the machine.

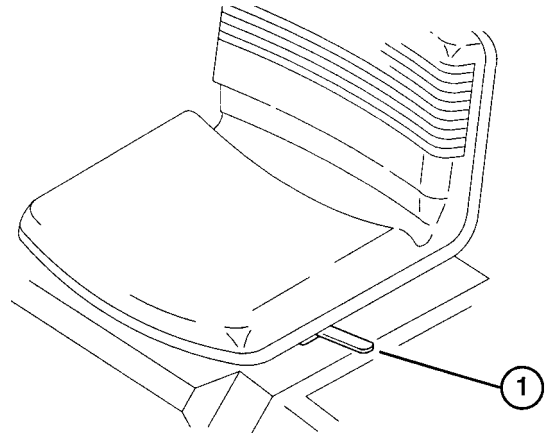

**Figure 9**

1. Seat adjusting lever

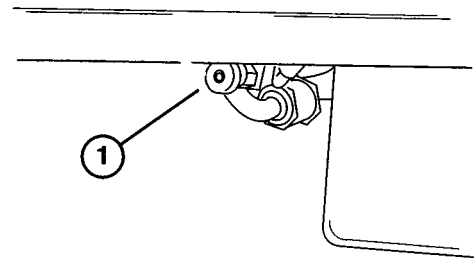

**Figure 10**

1. Fuel shut-off valve

# Operation

## STARTING AND STOPPING THE ENGINE

1. Remove your foot from the traction pedal, make sure the pedal is in the neutral position and engage the parking brake.
2. Push the choke forward to the ON position—when starting a cold engine—and the throttle lever to the SLOW position.
3. Insert the key into the ignition switch and turn it clockwise to start the engine. Release the key when the engine starts. Regulate the choke to keep the engine running smoothly.

**IMPORTANT:** To prevent overheating of the starter motor, do not engage starter longer than 10 seconds. After 10 seconds of continuous cranking, wait 60 seconds before engaging starter motor again.

4. When the engine is started for the first time, or after overhaul of the engine, operate the machine in forward and reverse for one to two minutes. Also operate the lift lever to be sure of proper operation of all parts. Shut off the engine and check for oil leaks, loose parts and any other noticeable malfunctions.



### CAUTION

Shut off the engine and wait for all moving parts to stop before checking for leaks, loose parts and other malfunctions.

5. To stop the engine, move the throttle control to the SLOW position and turn the ignition key to OFF. Remove the key from the switch to prevent accidental starting.
6. Close the fuel shut-off valve before storing the machine.

## CHECK THE TRACTION INTERLOCK SYSTEM

The interlock system prevents the engine from cranking or starting unless the traction pedal is in “NEUTRAL”.



### CAUTION

The interlock switch is for the operator’s protection, so do not disconnect it. Check operation of the switch daily to assure the interlock system is operating. If the switch is defective, replace it before operating. Regardless of whether the switch is operating correctly, replace it every two years to assure maximum safety. Do not rely entirely on safety switches—use common sense.

1. Check interlock operation in an open area free of debris and bystanders. Stop the engine.
2. Sit on the seat. Depress the traction pedal in forward and reverse directions, while trying to start the engine. If the engine cranks, there may be a malfunction in the interlock system. Repair immediately. If the engine does not crank, the system is operating correctly.

## TOWING THE SAND PRO

In case of emergency, the SAND PRO can be towed for a short distance. However, Toro does not recommend this as a standard procedure.

**IMPORTANT:** Do not tow the machine faster than 3-5 kmh because the drive system may be damaged. If the machine must be moved a considerable distance, transport it on a truck or trailer.

## BREAK-IN PERIOD

1. Only 8 hours operating time is required for the SAND PRO break-in period.
2. The first hours of operation are critical to future dependability of the machine. Monitor its functions and performance closely so that minor difficulties, which could lead to major problems, are noted and can be corrected. Inspect the SAND PRO frequently during break-in for signs of oil leakage, loose fasteners, or any other malfunction.

## OPERATING CHARACTERISTICS



### CAUTION

Using the machine demands attention. To prevent tipping or loss of control, use care when entering and leaving sand traps. Use extreme caution around ditches, creeks or other hazards. Use caution when operating the machine on a steep slope. Reduce speed when making sharp turns or when turning on hillsides. Avoid sudden stops and starts. Do not go from reverse to full forward without first coming to a complete stop.

Practice driving the SAND PRO because its operating characteristics are different than some utility vehicles. Two points to consider when operating the vehicle are transmission and engine speed.

To maintain somewhat constant engine speed, depress the traction pedal slowly. This allows the engine to keep up with ground speed of the vehicle. By contrast, pushing down quickly on the traction pedal will reduce engine rpm and, as a result, there will not be enough torque-power-to move the vehicle. Therefore, to transfer maximum power to the wheels, move the throttle to FAST and slightly depress the traction pedal. By comparison, maximum ground speed with no load results when the throttle is in the FAST position and the traction pedal is slowly but fully depressed. In summary, always keep the engine speed high enough to deliver maximum torque-power-to the wheels.

## INSPECTION AND CLEAN-UP

At the completion of operation, after the engine has cooled, thoroughly wash the machine with a garden hose—without a nozzle—so excessive water pressure will not cause contamination and damage to seals and bearings.

Make sure cooling fins and area around the engine cooling air intake are kept free of debris. After cleaning, it is recommended the machine be inspected for possible hydraulic fluid leaks, damage or wear to hydraulic and mechanical components.

# Maintenance

## Minimum Recommended Maintenance Intervals


Maintenance Procedure		Maintenance Interval & Service			
†	Check battery fluid level	Every 25 hours	Every 100 hours	Every 400 hours	Every 800 hours
	Check battery cable connections				
	Change engine oil				
	Lube front wheel bearing				
	Lube traction control linkage				
	Replace the engine oil filter				
	Inspect the remote air filter element				
	Inspect the engine air filter element				
	Lube the steering shaft grease fitting				
	Check the steering chain adjustment				
†	Torque the wheel lug nuts				
	Change the hydraulic oil				
†	Replace the hydraulic oil filter				
	Replace the remote air filter element				
	Replace the engine air filter element				
	Replace spark plugs				
	Replace the fuel filter				
	De-carbon the combustion chamber				
	Adjust valves and torque the head				
	Check engine rpm (at idle and full throttle)				
	Drain and clean the fuel tank				
†Initial break in at 8 hours					
Replace moving hoses			<b>Recommendations:</b> Every 1500 hours or two years, whichever occurs first.		
Replace the traction safety switch					

## SandPro 5020

### QUICK REFERENCE AID

#### CHECK/SERVICE (DAILY)

1. Oil level, engine
2. Oil level, hydraulic tank
3. Neutral interlock switch
4. Air filter
5. Engine cooling fins
6. Tire pressure (.27,6 - 41,4 kPa)
7. Wheel nut torque (61-74 Nm)
8. Battery
9. Lubrication
10. Fuel—Gas only

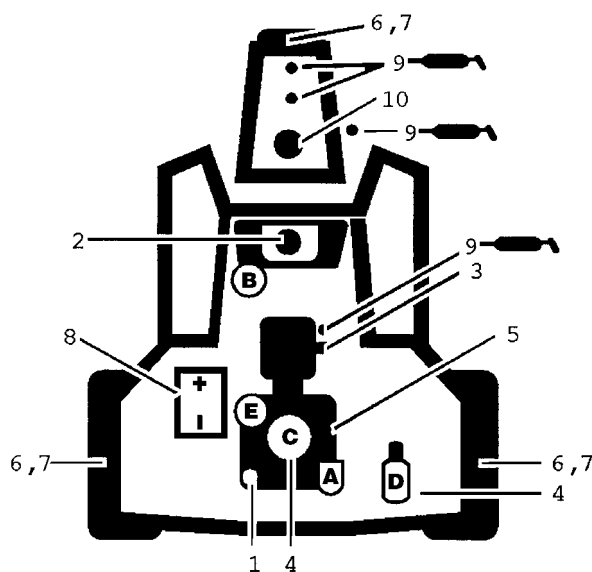

See Operator's Manual For Initial Change	Fluid Type	Capacity	Change Intervals		Filter Part No.
			Fluid	Filter	
Engine oil	SAE 30 SG	1.7 l	25 hours	100 hours	++492932 A
Hydraulic oil	Mobil 424	11.4	400 hour	400 hours	23-9740 B
Air cleaner (on engine)				**400 hours	++394018 C
Air cleaner (on fender)				**400 hours	93-2195 D
Fuel tank/filter	Unleaded Gas			+400 hours	94-2690 E

\* Including filter

\*\* Clean every 100 hours

+or yearly, which ever is less

++Briggs & Stratton Part No.





## CAUTION

Before servicing or making adjustments to the machine, stop the engine,, pull wires off the spark plugs and remove the key from the switch.

## LUBRICATION

The Sand Pro has (3) grease fittings that must be lubricated regularly with No. 2 General Purpose Lithium Base Grease. Lubricate the front wheel bearing and traction control linkage after every 50 hours of operation. Lubricate the steering shaft annually.

The bearings and bushings that must be lubricated are: the front wheel bearing (Fig. 12), the traction control linkage (Fig. 13) and steering shaft (Fig. 14).

1. Wipe grease fittings clean so foreign matter cannot enter the bearing or bushing.
2. Pump grease into the bearing or bushing.
3. Wipe up excess grease.

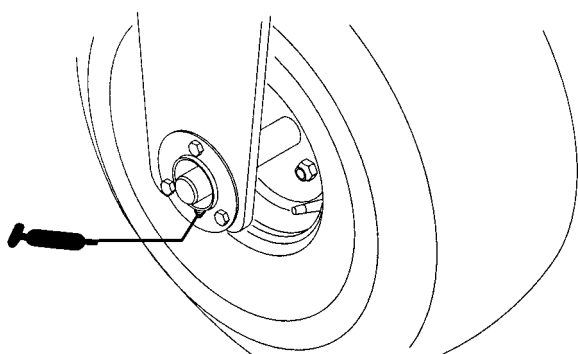


Figure 11

**Note:** To gain access to the grease fitting on the traction control linkage (Fig. 13), remove the (3) screws securing the side panel to the right side of the machine and remove the panel.

**Note:** We do not recommend lubricating the steering chain unless it becomes stiff because of rust. If the chain rusts, it may be lubricated

lightly with a DRY-TYPE LUBRICANT.

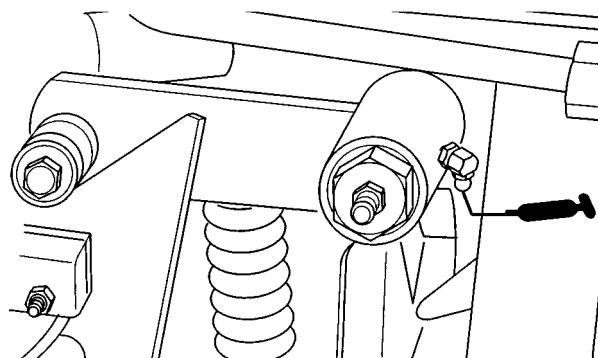


Figure 12

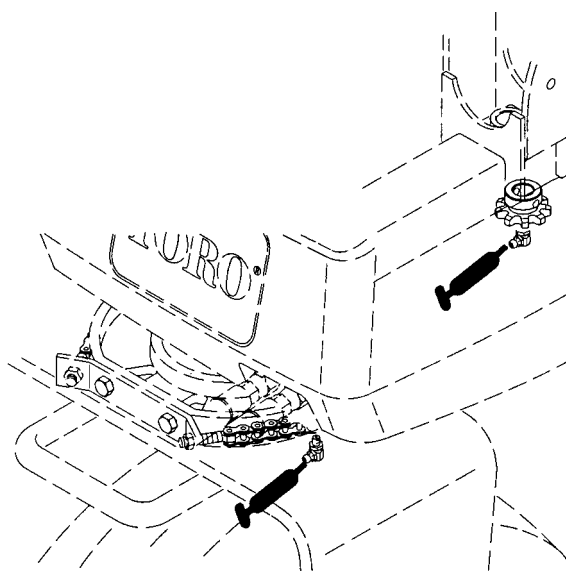


Figure 13

## CHANGING ENGINE OIL AND FILTER

Change the oil initially after the first 8 hours of operation; thereafter change the oil every 50 hours and the filter every 100 hours.

1. Park the machine on a level surface and turn the engine off.
2. Remove the drain plug and let the oil flow into the drain pan. When the oil stops, install the drain plug.
3. Remove the oil filter. Apply a light coat of clean oil to the new filter gasket.
4. Screw the filter on by hand until the gasket contacts the filter adapter, then tighten  $\frac{1}{2}$  to  $\frac{3}{4}$  turn further. **DO NOT OVERTIGHTEN.**
5. Add oil to crankcase, refer to CHECK CRANKCASE OIL.
6. Dispose of oil properly.

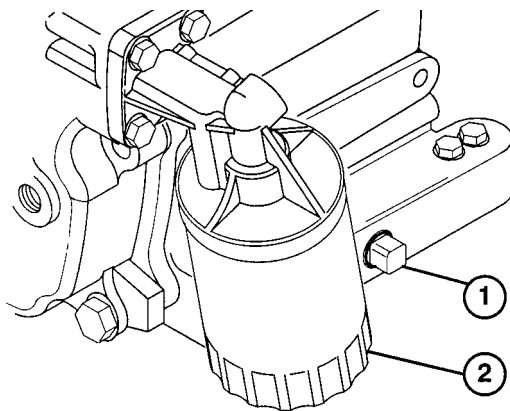


Figure 14

1. Drain plug
2. Oil filter

## SERVICING THE ENGINE AIR CLEANER

Inspect the paper element every 100 hours of operation and replace it when dirty or damaged. Do not wash the paper element or clean it with compressed air as damage will occur.

1. Park the machine on a level surface and turn the engine off.
2. Pivot the seat upward.
3. Remove the knobs and air cleaner cover.
4. Remove the filter and cover plate. Inspect the filter for cleanliness, ruptures, holes, and tears. Replace a defective filter element.

**Note:** With the air cleaner disassembled, check its components for damage. Replace if necessary. Make sure the rubber breather tube in the base plate is securely in place or severe engine damage may occur. Also, make sure the carburetor breather hose is routed out through the engine vents.

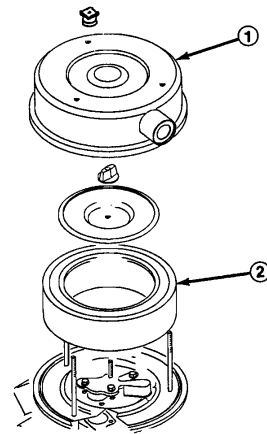


Figure 15


1. Air cleaner cover
2. Paper element

5. Install the air cleaner and cover plate.
6. Install the air cleaner cover and secure with knobs.

## SERVICING THE REMOTE AIR CLEANER

Inspect the dust cup and once a week or every 50 hours of operation. However, daily or more frequent inspection is required when operating conditions are extremely dusty and dirty.

1. Release the latches securing the air cleaner cover to the air cleaner body. Separate the cover from the body. Clean inside the air cleaner cover.

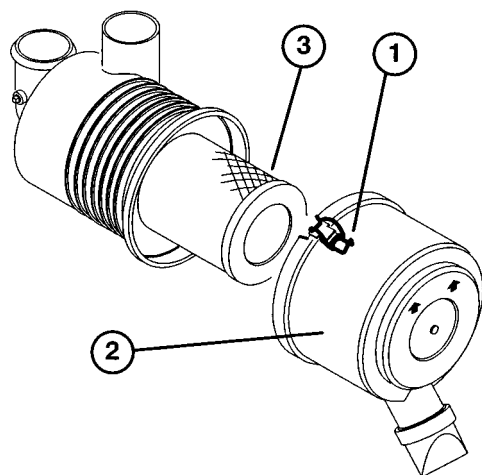**Figure 16**

1. Air cleaner latches
2. dust cup
3. Filter

2. Gently slide the filter out of the air cleaner body to reduce the amount of dust dislodged. Avoid knocking the filter against the air cleaner body.
3. Inspect the filter and discard it if it is damaged. Do not wash or reuse a damaged filter.
4. Service the air cleaner filter every 400 hours (more often in extremely dusty or dirty conditions). Do not over service the air filter.

### Washing Method

- A. Prepare a solution of filter cleaner and water and soak the filter element about 15 minutes. Refer to directions on the filter cleaner carton for complete information.
- B. After soaking the filter for 15 minutes, rinse it with clear water. Maximum water pressure must not exceed 275 kPa to prevent damage to the filter element.
- C. Dry the filter element using warm, flowing air (71°C max), or allow element to air-dry. Do not use compressed air or a light bulb to dry the filter element because damage could result.

### Compressed Air Method

- A. Blow compressed air from inside to the outside of the dry filter element. Do not exceed

689 kPa psi to prevent damage to the element.

- B. Keep the air hose nozzle at least 5 cm from the filter and move the nozzle up and down while rotating the filter element. Inspect for holes and tears by looking through the filter toward a bright light.
5. Inspect the new filter for shipping damage. Check the sealing end of the filter. Do not install a damaged filter.
6. Insert the new filter into the air cleaner body. Make sure the filter is sealed correctly by applying pressure to the outer rim of the filter when installing it. Do not press on the flexible center of the filter.
7. Install the cover and secure the latches. Make sure the cover is positioned with the TOP side up.

## ADJUSTING THE THROTTLE CONTROL

Proper throttle operation depends on proper adjustment of the throttle control. Before adjusting the carburetor, make sure the throttle control functions correctly.

1. Pivot the seat upward.
2. Loosen the cable clamp screw securing the cable to the engine.
3. Move the remote throttle control lever forward to the FAST position.
4. Pull firmly on the throttle cable until the back of the swivel contacts stop.
5. Tighten the cable clamp screw and check the engine RPM setting.  
High Idle: 3150 ± 50  
Low Idle: 1750 ± 50

## ADJUSTING THE CHOKE CONTROL

1. Pivot the seat upward.

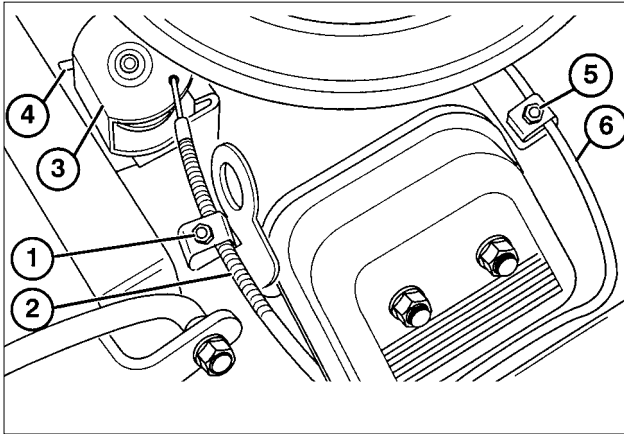


Figure 17

1. Throttle casing clamp screw
2. Throttle cable
3. Swivel
4. Stop
5. Choke casing clamp screw
6. Choke cable

2. Loosen the cable clamp screw securing the cable to the engine.
3. Move the remote choke control lever forward to the CLOSED position.
4. Pull firmly on the choke cable until the choke butterfly is completely closed, then tighten the cable clamp screw.

## REPLACING SPARK PLUGS

Replace the spark plugs after every 100 operating hours or yearly, whichever occurs first. Recommended air gap is 0.030".

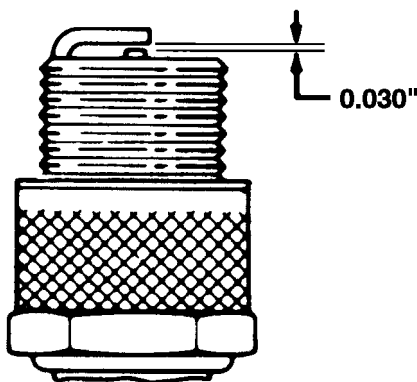


Figure 18

Correct spark plug to use is a Champion RC 12YC.

**Note:** The spark plug usually lasts a long time; how-

ever, the plug should be removed and checked whenever the engine malfunctions.

1. Clean the area around the spark plugs so foreign matter cannot fall into the engine cylinder when you remove the spark plug.
  2. Pull the spark plug wires off spark plugs and remove the plugs from the cylinder head.
  3. Check the condition of the side electrode, center electrode, and center electrode insulator to assure there is no damage.
- IMPORTANT: A cracked, fouled, dirty or otherwise malfunctioning spark plug must be replaced. Do not sand blast, scrape, or clean electrodes by using a wire brush because grit may eventually release from the plug and fall into the cylinder. The result is usually a damaged engine.**
4. Set air gap between the center and side of electrodes at 0.030". Install a correctly gapped spark plug w/gasket seal, and tighten the plug firmly.

## CLEANING CYLINDER HEAD FINS

To avoid overheating and possible engine damage, cooling fins on the cylinder head must be kept clean.

## CHANGING THE HYDRAULIC SYSTEM OIL AND FILTER


Normally, change the hydraulic oil and filter after every 500 operating hours. If the oil becomes contaminated, contact your local TORO distributor because the system must be flushed. Contaminated oil looks milky or black when compared to clean oil.

1. Park the machine on a level surface and turn the engine off.
2. Remove the screws securing the side panels from the right and left sides of machine and remove the panels.

**Note:** Place a funnel or trough under the drain plug, to direct oil into the drain pan and prevent

hydraulic oil from running onto the machine components.


3. Remove the drain plug from reservoir and let hydraulic oil flow into the drain pan. Reinstall and tighten the plug when hydraulic oil stops draining.

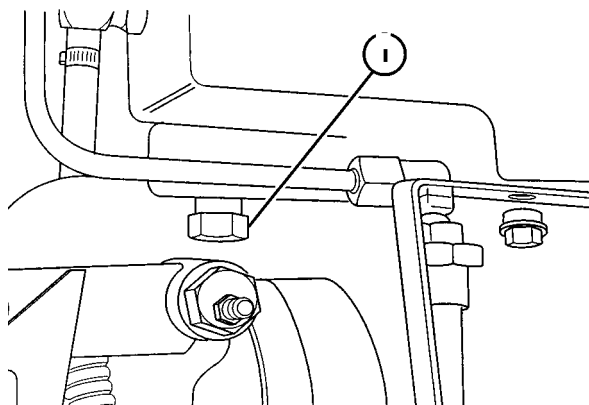

**Figure 19**

1. Hydraulic reservoir drain plug

4. Clean area around the filter mounting area. Place the drain pan under the filter and remove the filter.
5. Lubricate the sealing gasket on the replacement filter with Mobil DTE 26 hydraulic fluid, and hand turn it until gasket contacts the filter head. Then tighten  $\frac{3}{4}$  turn further. The filter should now be sealed.
6. Fill the hydraulic tank with hydraulic oil until the level is up to the top of cone point on the tank screen. **DO NOT OVERFILL.** Refer to *Check the Hydraulic System*.
7. Run the engine until the lift cylinder extends and retracts and forward and reverse wheel motion is achieved.
8. Stop the engine and check the oil level in the reservoir; add oil if necessary.
9. Check all connections for leaks.
10. Dispose of oil properly.

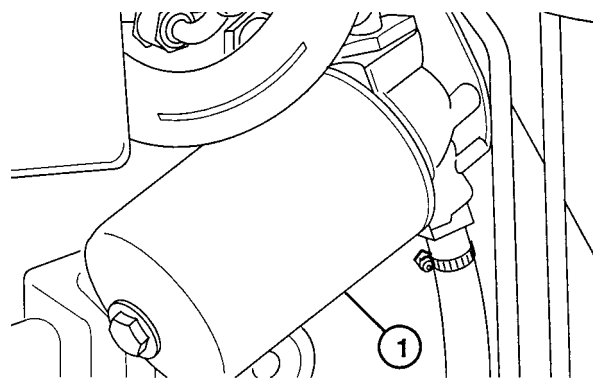

**Figure 20**

1. Hydraulic oil filter

## CHECKING HYDRAULIC LINES AND HOSES

After every 100 operating hours, check hydraulic lines and hoses for leaks, kinked lines, loose mounting supports, wear, loose fittings, weather deterioration and chemical deterioration. Make all necessary repairs before operating.



### WARNING

Keep your body and hands away from pin hole leaks or nozzles that eject high-pressure hydraulic fluid. Use cardboard or paper to find hydraulic leaks. Hydraulic fluid escaping under pressure can penetrate skin and cause injury. Fluid accidentally injected into the skin must be surgically removed within a few hours by a doctor familiar with this form of injury or gangrene may result.

## CHARGING THE HYDRAULIC SYSTEM

Whenever a hydraulic component is repaired or replaced the hydraulic oil filter should be changed and hydraulic system charged.

**IMPORTANT: Make sure the hydraulic reservoir is filled with oil at all times when charging the hydraulic system.**

1. Park the machine on a level surface and turn the engine off.
2. Remove the (3) screws securing the side panel to the right side of the machine and remove the panel.

3. Loosen the lock nut on the spring adjusting pin until the bearing moves freely from the cam on the lever, allowing pump shaft freedom to rotate during start-up.
4. Raise one rear wheel off the floor and place support blocks under the frame.
5. Start the engine and set the throttle to allow the engine to run at slow idle at 1800 rpm.

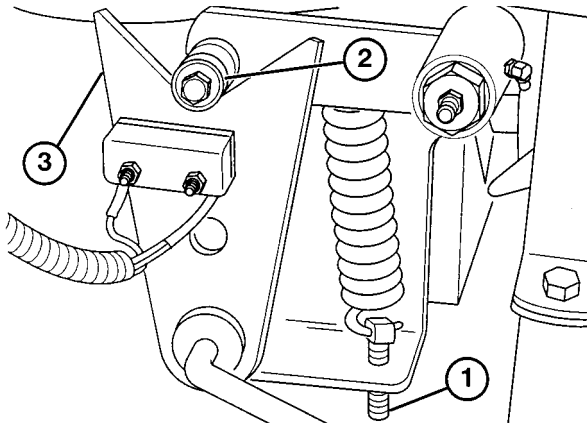


Figure 21

1. Spring adjusting pin
2. Bearing
3. Cam

6. Actuate the lift valve lever until the lift cylinder rod moves in and out several times. If the cylinder rod does not move after 10–15 seconds, or the pump emits abnormal sounds, shut the engine off immediately and find the cause or problem. Inspect for the following:
  - A. Loose filter or suction lines.
  - B. Blocked suction line.
  - C. Faulty charge relief valve.
  - D. Faulty charge pump.

If the cylinder moves in 10–15 seconds, go to step 7.

**Note:** A hydrostatic transmission service manual (bulletin No. 9646) and a repair manual (bulletin No. 9659) can be obtained from:

**Sundstrand Corporation**  
 2800 East 13th Street  
 Ames, Iowa 50010

7. Operate the traction pedal in forward and reverse directions. If the wheel rotates in the correct direction, stop the engine and adjust the spring adjusting pin lock nut. Adjust the traction neutral position: refer to *Adjusting The traction Drive For Neutral*.

## ADJUSTING THE STEERING CHAIN

1. Place the front wheel in the straight-ahead position.
2. Adjust the locknuts until the chain is snug on both sides of the sprocket.

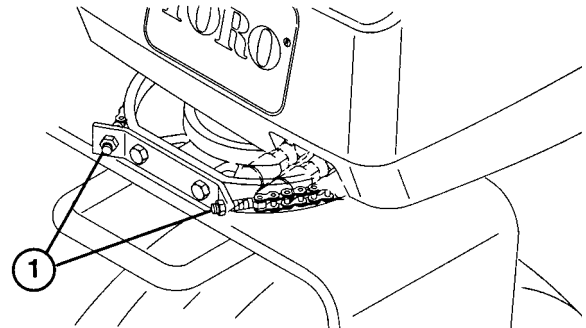


Figure 22

1. Adjusting nuts

3. Turn the steering wheel full left and full right to be sure the chain does not bind or hang up in either direction. Readjust as required.

## REPLACING THE FUEL FILTER

An in-line filter is incorporated into the fuel line between the fuel tank and carburetor. Replace the filter every 800 hours or sooner if fuel flow is restricted. Be sure the arrow on the filter is pointing away from the fuel tank (toward the carburetor).

1. Remove the (3) screws securing the side panel to the left side of the machine and remove the panel.
2. Close fuel shut-off valve, loosen the hose clamp on the carburetor side of filter and remove the fuel line from the filter.
3. Place a drain pan under the filter, loosen the remaining hose clamp and remove the filter.

4. Install the new filter with arrow on the filter body pointing away from the fuel tank (toward the carburetor).

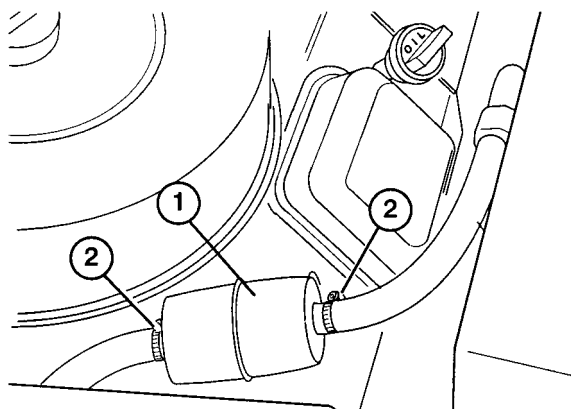


Figure 23

1. Fuel filter
2. Hose clamps

5. Start the engine and turn the cam hex in

## ADJUSTING THE TRACTION DRIVE FOR NEUTRAL

If the machine “creeps” when the traction pedal is in the neutral position, the traction cam must be adjusted.

1. Park the machine on a level surface and turn the engine off.
2. Remove the (3) screws securing the side panel to the right side of the machine and remove the panel.
3. Raise one rear wheel off the floor and place support blocks under the frame.
4. Loosen the locknut on the traction adjustment cam.
5. Start the engine and rotate the cam in both directions to determine the mid position of the neutral span (Fig. 24).

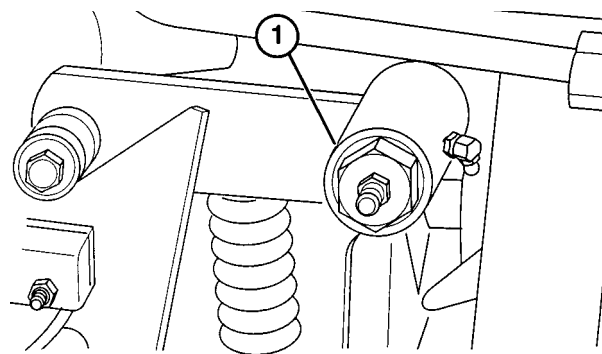


Figure 24

1. Traction adjustment cam

### WARNING

The engine must be running so final adjustment of the traction adjustment cam can be performed. To guard against possible personal injury, keep hands, feet, face and other parts of the body away from the muffler, other hot parts of the engine, and other rotating parts.

6. Tighten the locknut securing adjustment.
7. Stop the engine. Remove the jack stands and lower the machine to the shop floor. Test drive the machine to make sure it does not creep.

## ADJUSTING THE PEDAL FOR FORWARD (Fig. 25)

The pedal must be adjusted for forward if the jam nuts on the control rod are loosened or if the pedal is removed.

1. Park the machine on a level surface and turn the engine off.
2. Make sure the pump is in neutral.
3. Loosen the jam nuts on the control rod.
4. Press down on the forward pad of the pedal until the pedal rod contacts the footrest. Tighten the jam nuts.

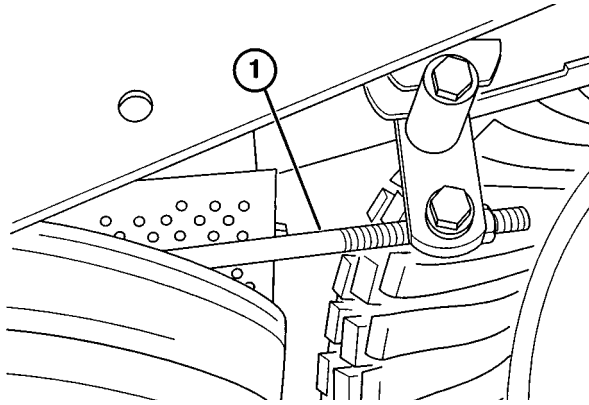


Figure 25

1. Control rod

## ADJUSTING THE STEERING WHEEL TILT LEVER

If the steering wheel tilt lever does not lock after adjusting the wheel position, an adjustment to the lever is required.

1. Loosen the capscrew securing the lever to the locking pin.
2. Lift the lever off the hex on the locking pin. Turn the lever counterclockwise to the next hex on the pin.
3. Push the lever onto the locking pin hex and secure it with a capscrew.
4. Check adjustment and repeat if necessary.

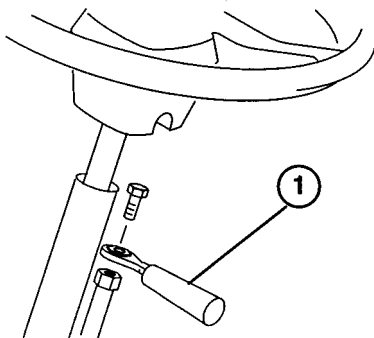


Figure 26

1. Lever

## ADJUSTING THE PARKING BRAKE

The brakes have been set at the factory for optimum performance but after use and wear, an adjustment

may be needed.

1. Park the machine on a level surface, turn off the engine and block the wheels.
2. Loosen the jam nut on the adjustment rod clevis.

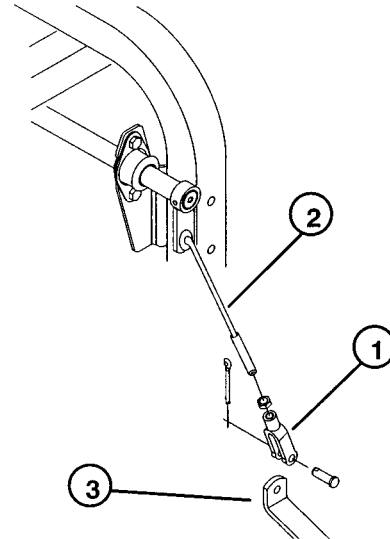


Figure 30

1. Adjustment rod clevis
2. Adjustment rod
3. Brake arm

3. Remove the cotter pin and clevis pin that retain the adjustment rod clevis to the brake arm.
4. Increase or decrease the adjustment rod length by turning the clevis. Reinstall the adjusting rod clevis with the clevis pin and a new cotter pin. Secure the jam nut.
5. Repeat the procedure on the opposite adjustment rod clevis.
6. Check adjustment and re-adjust, if necessary.

## BATTERY STORAGE

If the machine will be stored for more than 30 days, remove the battery and charge it fully. Either store it on a shelf or on the machine. Leave the cables disconnected if stored on the machine. Store the battery in a cool atmosphere to avoid quick deterioration of the charge in the battery. To prevent the battery from freezing, make sure it is fully charged. The specific gravity of a fully charged battery is 1.250.



## BATTERY CARE

1. The battery's electrolyte level must be properly maintained and the top of the battery kept clean. If the machine is stored in a location where temperatures are extremely high, the battery will run down more rapidly than if the machine is stored in a location where temperatures are cool.
2. Keep the top of the battery clean by washing it periodically with a brush dipped in an ammonia or bicarbonate of soda solution. Flush the top surface with water after cleaning. Do not remove the fill cap while cleaning.



### WARNING

Connecting cables to the wrong post could result in personal injury and/or damage to the electrical system

3. Battery cables must be tight on the terminals to provide good electrical contact.
4. If corrosion occurs at the battery terminals, disconnect the cables—negative (–) cable first—and scrape the clamps and terminals separately. Reconnect the cables—positive (+) cable first—and coat the terminals with petroleum jelly.
5. Check the electrolyte level every 25 operating hours or, if the machine is in storage, every 30 days.
6. Maintain the cell fluid level with distilled or demineralized water. Do not fill cells above the fill line.



### CAUTION

Wear safety goggles and rubber gloves when working with electrolyte. Charge the battery in a well ventilated place so gasses produced while charging can dissipate. Since the gases are explosive, keep open flames and electrical sparks away from the battery; do not smoke. Nausea may result if the gases are inhaled. Unplug the charger from the electrical outlet before connecting or disconnecting the charger leads.

## IDENTIFICATION AND ORDERING

### Model and Serial Number

The SAND PRO 5020 has two identification numbers: a model number and a serial number. These numbers are stamped into a plate located on the left frame rail. In any correspondence concerning the unit, supply the model and serial numbers to ensure correct information and replacement parts are obtained.

Note: Do not order by reference number if a parts catalog is being used; use the part number.

To order replacement parts from an authorized TORO distributor, supply the following information:

1. Model and serial numbers
2. Part number, description and quantity of parts desired.





