



# **Reelmaster 5200-D/5400-D**

## **Two-Wheel and Four-Wheel Drive Traction Units**

03540—220000001 and Up

03541—220000001 and Up

03543—220000001 and Up

03544—220000001 and Up

**Operator's Manual**



## Warning



**The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.**

**Important** The engine in this product is not equipped with a spark arrester muffler. It is a violation of California Public Resource Code Section 4442 to use or operate this engine on any forest-covered, brush-covered, or grass-covered land as defined in CPRC 4126. Other states or federal areas may have similar laws.

# Contents

|  | Page |
|--|------|
| Contents .....   | 2    |
| Introduction .....   | 3    |
| Safety .....   | 3    |
| Safe Operating Practices .....                                     | 3    |
| Toro Mower Safety .....  | 4    |
| Sound Pressure Level .....   | 5    |
| Sound Power Level .....  | 6    |
| Vibration Level .....  | 6    |
| Safety and Instruction Decals .....                                | 6    |
| Specifications .....   | 10   |
| General Specifications .....                                       | 10   |
| Measurements .....   | 11   |
| Optional Equipment .....   | 11   |
| Setup .....  | 12   |
| Loose Parts .....  | 12   |
| Connecting the Battery .....                                       | 12   |
| Mounting the Hood Latch .....                                      | 13   |
| Replacing the Panel Fasteners .....                                | 14   |
| Checking the Tire Pressure .....                                   | 14   |
| Installing the Cutting Units .....                                 | 14   |
| Adjusting the Turf Compensation Spring .....                       | 16   |
| Lifted Height of Outer Front Cutting Units (Enable Position) ..... | 17   |
| Installing the Rear Weight .....                                   | 17   |
| Before Operating .....   | 18   |
| Checking the Engine Oil .....                                      | 18   |
| Checking the Cooling System .....                                  | 18   |
| Filling the Fuel Tank .....  | 19   |
| Checking the Transmission Fluid .....                              | 19   |
| Checking the Hydraulic Fluid .....                                 | 19   |
| Checking the Rear Axle Lubricant .....                             | 20   |

|  |    |
|--|----|
| Checking Reel to Bedknife Contact .....          | 20 |
| Checking the Torque of the Wheel Nuts .....      | 20 |
| Operation .....                                  | 21 |
| Controls .....                                   | 21 |
| Starting and Stopping .....                      | 23 |
| Bleeding the Fuel System .....                   | 23 |
| Setting the Reel Speed .....                     | 24 |
| Adjusting the Lift Arm Down Pressure .....       | 25 |
| Towing the Traction Unit .....                   | 25 |
| Diagnostic Light .....                           | 26 |
| Diagnostic ACE Display .....                     | 26 |
| Checking the Interlock Switches .....            | 26 |
| Hydraulic Valve Solenoid Functions .....         | 28 |
| Operating Characteristics .....                  | 28 |
| Logic Chart .....                                | 29 |
| Maintenance .....                                | 30 |
| Recommended Maintenance Schedule .....           | 30 |
| Daily Maintenance Checklist .....                | 31 |
| Service Interval Chart .....                     | 32 |
| Greasing the Bearing and Bushings .....          | 32 |
| Servicing the Air Cleaner .....                  | 34 |
| Engine Oil and Filter .....                      | 35 |
| Servicing the Fuel System .....                  | 35 |
| Bleeding Air from the Injectors .....            | 36 |
| Servicing the Engine Cooling System .....        | 37 |
| Servicing the Engine Belts .....                 | 38 |
| Adjusting the Throttle .....                     | 38 |
| Changing the Hydraulic Fluid .....               | 39 |
| Replacing the Hydraulic Filter .....             | 39 |
| Checking the Hydraulic Lines and Hoses .....     | 40 |
| Hydraulic System Test Ports .....                | 40 |
| Adjusting the Traction Drive for Neutral .....   | 40 |
| Adjusting the Cutting Unit Lift Rate .....       | 41 |
| Checking and Adjusting the Traction Linkage ...  | 42 |
| Adjusting the Service Brakes .....               | 42 |
| Changing the Transmission Fluid .....            | 42 |
| Replacing the Transmission Filter .....          | 43 |
| Changing the Rear Axle Lubricant .....           | 43 |
| Adjusting Rear Wheel Toe-In .....                | 43 |
| Servicing the Battery .....                      | 44 |
| Fuses .....                                      | 45 |
| Optional Lighting .....                          | 45 |
| Backlapping the Cutting Units .....              | 45 |
| Electrical Schematic .....                       | 47 |
| Hydraulic Schematic .....                        | 48 |
| Preparation for Seasonal Storage .....           | 49 |
| The Toro General Commercial Products Warranty .. | 52 |

# Introduction

Read this manual carefully to learn how to operate and maintain your product properly. The information in this manual can help you and others avoid injury and product damage. Although Toro designs and produces safe products, you are responsible for operating the product properly and safely.

Whenever you need service, genuine Toro parts, or additional information, contact an Authorized Service Dealer or Toro Customer Service and have the model and serial numbers of your product ready. The model and serial number is on a plate that is mounted on the left side of the footrest.

Write the product model and serial numbers in the space below:

|                         |
|-------------------------|
| <b>Model No.</b> _____  |
| <b>Serial No.</b> _____ |

This manual identifies potential hazards and has special safety messages that help you and others avoid personal injury and even death. ***Danger***, ***Warning***, and ***Caution*** are signal words used to identify the level of hazard. However, regardless of the hazard, be extremely careful.

***Danger*** signals an extreme hazard that *will* cause serious injury or death if you do not follow the recommended precautions.

***Warning*** signals a hazard that *may* cause serious injury or death if you do not follow the recommended precautions.

***Caution*** signals a hazard that may cause minor or moderate injury if you do not follow the recommended precautions.


This manual uses two other words to highlight information.

**Important** calls attention to special mechanical information and **Note:** emphasizes general information worthy of special attention.

## Safety

**This machine meets or exceeds the B71.4 1999 specifications of the American National Standards Institute, in effect at time of production, when ballast is installed according to the chart on page 17.**

**Note:** The addition of attachments made by other manufacturers that do not meet American National Standards Institute certification will cause noncompliance of this machine.

**Improper use or maintenance by the operator or owner can result in injury. To reduce the potential for injury, comply with these safety instructions and always pay attention to the safety alert  symbol, which means CAUTION, WARNING, or DANGER—“personal safety instruction.” Failure to comply with the instruction may result in personal injury or death.**

## Safe Operating Practices

The following instructions are from ANSI standard B71.4—1999.

### Training

- Read the Operator’s Manual and other training material. If the operator(s) or mechanic(s) can not read English it is the owner’s responsibility to explain this material to them.
- Become familiar with the safe operation of the equipment, operator controls, and safety signs.
- All operators and mechanics should be trained. The owner is responsible for training the users.
- Never let children or untrained people operate or service the equipment. Local regulations may restrict the age of the operator.
- The owner/user can prevent and is responsible for accidents or injuries occurring to himself or herself, other people or property.

### Preparation

- Evaluate the terrain to determine what accessories and attachments are needed to properly and safely perform the job. Only use accessories and attachments approved by the manufacturer.
- Wear appropriate clothing including hard hat, safety glasses and ear protection. Long hair, loose clothing or jewelry may get tangled in moving parts.
- Inspect the area where the equipment is to be used and remove all objects such as rocks, toys and wire which can be thrown by the machine.
- Use extra care when handling gasoline and other fuels. They are flammable and vapors are explosive.
  - Use only an approved container.
  - Never remove gas cap or add fuel with engine running. Allow engine to cool before refueling. Do not smoke.
  - Never refuel or drain the machine indoors.

- Check that operator's presence controls, safety switches and shields are attached and functioning properly. Do not operate unless they are functioning properly.

## Operation

- Never run an engine in an enclosed area.
- Only operate in good light, keeping away from holes and hidden hazards.
- Be sure all drives are in neutral and parking brake is engaged before starting engine. Only start engine from the operator's position. Use seat belts if provided.
- Slow down and use extra care on hillsides. Be sure to travel in the recommended direction on hillsides. Turf conditions can affect the machine's stability. Use caution while operating near drop-offs.
- Slow down and use caution when making turns and when changing directions on slopes.
- Never operate with guards not securely in place. Be sure all interlocks are attached, adjusted properly, and functioning properly.
- Do not change the engine governor setting or overspeed the engine.
- Stop on level ground, raise the cutting units, disengage drives, engage parking brake (if provided), shut off engine before leaving the operator's position for any reason including emptying the grass baskets.
- Stop equipment and inspect the machine after striking objects or if an abnormal vibration occurs. Make necessary repairs before resuming operations.
- Keep hands and feet away from the cutting units.
- Look behind and down before backing up to be sure of a clear path.
- Never carry passengers and keep pets and bystanders away.
- Slow down and use caution when making turns and crossing roads and sidewalks. Stop reels if not mowing.
- Do not operate the mower under the influence of alcohol or drugs.
- Use care when loading or unloading the machine into a trailer or truck.
- Use care when approaching blind corners, shrubs, trees, or other objects that may obscure vision.

## Maintenance and Storage

- Disengage drives, raise the cutting units, set parking brake, stop engine and remove key and disconnect spark plug wire. Wait for all movement to stop before adjusting, cleaning or repairing.

- Clean grass and debris from cutting units, drives, mufflers, and engine to help prevent fires. Clean up oil or fuel spillage.
- Let engine cool before storing and do not store near flame.
- Shut off fuel while storing or transporting. Do not store fuel near flames or drain indoors.
- Park machine on level ground. Never allow untrained personnel to service machine.
- Use jack stands to support components when required.
- Carefully release pressure from components with stored energy.
- Disconnect battery and remove spark plug wire before making any repairs. Disconnect the negative terminal first and the positive last. Reconnect positive first and negative last.
- Use care when checking the reels. Wear gloves and use caution when servicing them.
- Keep hands and feet away from moving parts. If possible, do not make adjustments with the engine running.
- Charge batteries in an open well ventilated area, away from spark and flames. Unplug charger before connecting or disconnecting from battery. Wear protective clothing and use insulated tools.
- Keep all parts in good working condition and all hardware and hydraulic fittings tightened. Replace all worn or damaged decals.

## Toro Mower Safety

The following list contains safety information specific to Toro products or other safety information that you must know that is not included in the ANSI standards.

This product is capable of amputating hands and feet and throwing objects. Always follow all safety instructions to avoid serious injury or death.

Use of this product for purposes other than its intended use could prove dangerous to user and bystanders.

## Preparation

- Always wear substantial shoes. Do not operate the machine while wearing sandals, tennis shoes, sneakers, or when barefoot.
- Wearing safety shoes and long pants is advisable and required by some local ordinances and insurance regulations.
- Only fill the fuel tank to within 1 inch of the top of the tank, not the filler neck. Do not overfill.

- Handle fuel carefully. Wipe up any spills.

## Operation

- Know how to stop the machine and engine quickly.
- Check the safety interlock switches daily for proper operation. If a switch should fail, replace the switch before operating the machine. After every two years, replace all interlock switches in the safety system, **regardless** if they are working properly or not.
- Before starting the engine, engage the parking brake, put the traction pedal in neutral, and the enable/disable switch in disable.
- Using the machine demands attention. To prevent loss of control:
  - Do not drive close to sand traps, ditches, creeks, or other hazards.
  - Reduce speed when making sharp turns. Avoid sudden stops and starts.
  - Drive slowly.
- Do not touch the engine, muffler, or exhaust pipe while the engine is running or soon after it has stopped because these areas could be hot enough to cause burns.
- If a cutting unit strikes a solid object or vibrates abnormally, stop immediately, turn the engine off, wait for all motion to stop, and inspect the machine for damage. A damaged reel or bedknife must be repaired or replaced before operation is continued. Do not attempt to free a blocked cutting unit by reversing reel direction or damage to the reel may result.
- Before getting off of the seat, move the traction pedal to neutral, set the parking brake, disengage the cutting units, and wait for the reels to stop. Stop the engine and remove the key from the ignition switch.
- Traverse slopes carefully. Do not start or stop suddenly when traveling uphill or downhill.
- The operator must be skilled and trained in how to drive on hillsides. Failure to use caution on slopes or hills may cause loss of control and cause the vehicle to tip or roll, possibly resulting in personal injury or death.
- If the engine stalls or loses headway and cannot make it to the top of a slope, do not turn the machine around. Always back slowly, straight down the slope.
- When a person or pet appears unexpectedly in or near the mowing area, **stop mowing**. Careless operation, combined with terrain angles, ricochets, or improperly positioned guards can lead to thrown object injuries. Do not resume mowing until the area is cleared.

- Whenever the machine is left unattended, make sure the cutting units are lowered to the ground, the key is removed from the ignition switch, and the parking brake is set.
- Do not park on slopes unless the wheels are chocked or blocked.
- On 4 wheel drive models, always use the seat belt and ROPS together.

## Maintenance and Storage

- Make sure all hydraulic line connectors are tight and all hydraulic hoses and lines are in good condition before applying pressure to the system.
- Keep your body and hands away from pin hole leaks or nozzles that eject hydraulic fluid under high pressure. Use paper or cardboard, not your hands, to search for leaks. Hydraulic fluid escaping under pressure can have sufficient force to penetrate the skin and cause serious injury.
- Before disconnecting or performing any work on the hydraulic system, all pressure in the system must be relieved by stopping the engine and lowering the cutting units to the ground.
- If the engine must be running to perform a maintenance adjustment, keep hands, feet, clothing, and any parts of the body away from the cutting units, attachments, and any moving parts. Keep everyone away.
- Do not overspeed the engine by changing governor settings. To ensure safety and accuracy, have an Authorized Toro Distributor check the maximum engine speed.
- The engine must be shut off before checking the oil or adding oil to the crankcase.
- If major repairs are ever needed or if assistance is desired, contact an Authorized Toro Distributor.
- To make sure of optimum performance and continued safety certification of the machine, use only genuine Toro replacement parts and accessories. Replacement parts and accessories made by other manufacturers could be dangerous, and such use could void the product warranty.

## Sound Pressure Level

This unit has an equivalent continuous A-weighted sound pressure at the operator ear of: 88 dB(A), based on measurements of identical machines per procedures outlined in Directive 98/37/EC and amendments.

# Sound Power Level

This unit has a guaranteed sound power level of: 105 dBA/1 pW, based on measurements of identical machines per Directive 2000/14/EC and amendments.

# Vibration Level

This unit does not exceed a vibration level of 2.5 m/s<sup>2</sup> at the hands based on measurements of identical machines per ISO 5349 procedures.

This unit does not exceed a vibration level of 0.5 m/s<sup>2</sup> at the posterior based on measurements of identical machines per ISO 2631 procedures.

# Safety and Instruction Decals



Safety decals and instructions are easily visible to the operator and are located near any area of potential danger. Replace any decal that is damaged or lost.

## REELMASTER 5200-D 5400-D / 5500-D

### QUICK REFERENCE AID

CHECK/SERVICE (daily)

- 1. OIL LEVEL, ENGINE
- 2. OIL LEVEL, TRANSMISSION
- 3. OIL LEVEL, HYDRAULIC TANK
- 4. COOLANT LEVEL, RADIATOR
- 5. FUEL /WATER SEPARATOR
- 6. PRECLEANER -- AIR CLEANER
- 7. RADIATOR SCREEN
- 8. BRAKE FUNCTION
- 9. TIRE PRESSURE
- 10. BATTERY
- 11. BELTS (FAN, ALT.)

GREASING -- SEE OPERATOR'S MANUAL

1


| FLUID SPECIFICATIONS/CHANGE INTERVALS      |                             |            |                         |               |                 |
|--|-----------------------------|------------|-------------------------|---------------|-----------------|
| SEE OPERATOR'S MANUAL FOR INITIAL CHANGES. | FLUID TYPE                  | CAPACITY   | CHANGE INTERVAL         |               | FILTER PART NO. |
|  |                             |            | FLUID                   | FILTER        |                 |
| A. ENGINE OIL                              | SAE 10W-30CD                | 4.0 QTS.   | 50 HRS.                 | 100 HRS.      | <p>1</p>        |
| B. TRANSMISSION OIL                        | MOBIL 424                   | 5 QTS.*    | 800 HRS.                | 800 HRS.      |                 |
| C. HYD. CIRCUIT OIL                        | MOBIL 424                   | 8.5 GALS.* | 800 HRS.                | SEE INDICATOR |                 |
| D. AIR CLEANER                             |                             |            |                         | 400 HRS.      |                 |
| E. FILTER, IN-LINE FUEL                    |                             |            |                         | 400 HRS.      |                 |
| F. WATER SEPARATOR                         |                             |            |                         | 400 HRS.      |                 |
| G. FUEL TANK                               | NO. 2-Diesel                | 10 GALS.   | Drain and flush, 2 yrs. |               |                 |
| H. COOLANT                                 | 50/50 Ethylene glycol/water | 9.6 QTS.   | Drain and flush, 2 yrs. |               |                 |

\* INCLUDING FILTER

105-7515

105-7515 & 105-7527

1. Read the *Operator's Manual*

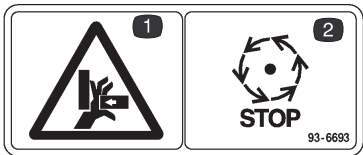


93-6693

- 1. Hazard to hands--pinch points
- 2. Stop reels before touching



104-2052

1. See operator's manual

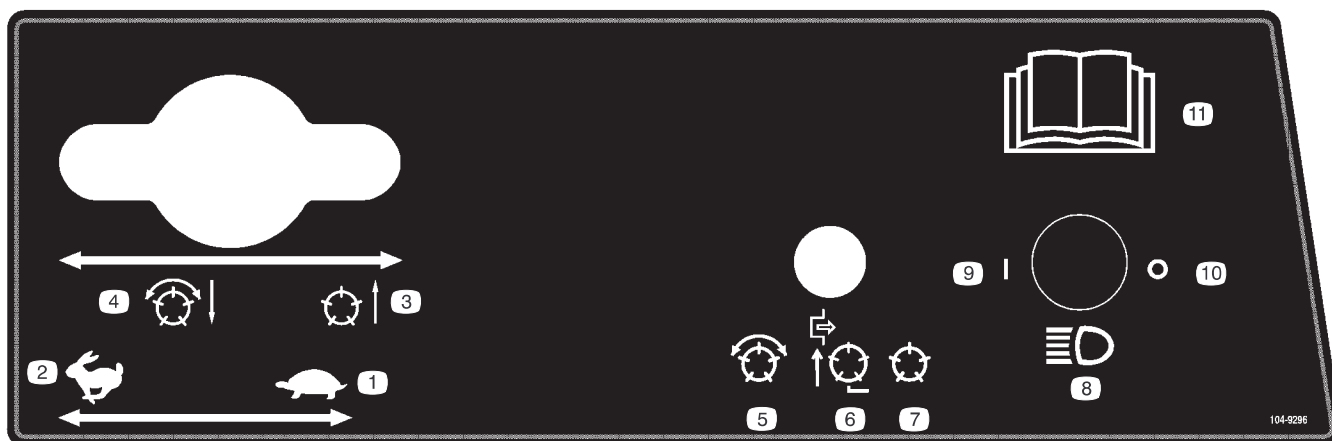


### 104-9296

1. Throttle—slow
2. Throttle—fast
3. Reels raised & off
4. Reels lowered and on when enabled—forward and backlap
5. Reels—enabled
6. Reels disabled—lift only
7. Reels disabled—lift and lower
8. Headlights (optional)
9. Headlights—on
10. Headlights—off
11. Read operator's manual




### 104-9298

1. Read operator's manual

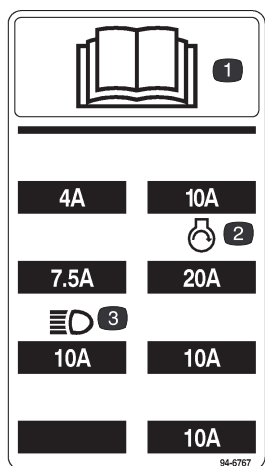

### 94-6767


1. Read operator's manual
2. Engine start
3. Headlights (Optional)

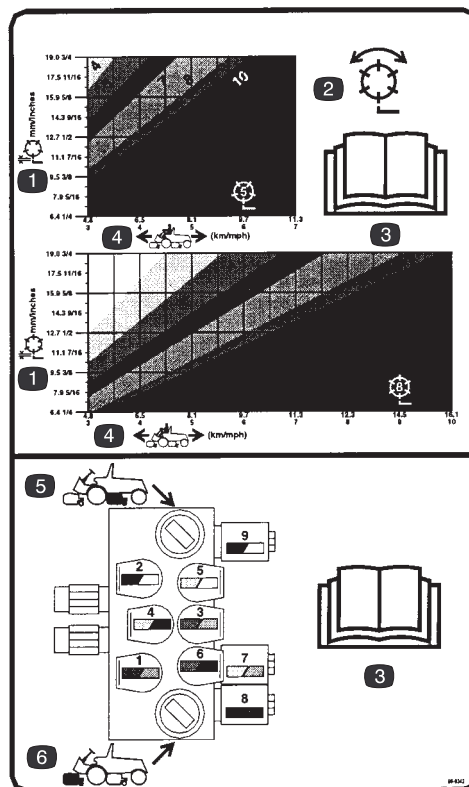

### 98-9342

1. Height-of-cut
2. Mow and backlap
3. Read operator's manual
4. Traction unit speed
5. Rear reels circuit controls
6. Front reels circuit controls



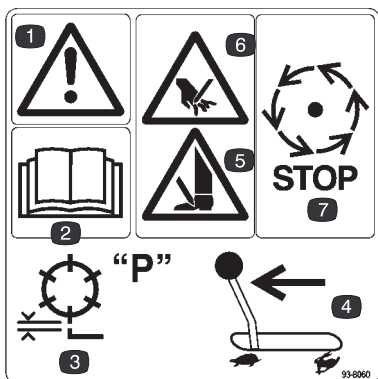


**93-8060**

1. Danger
2. Read operator's manual
3. Height-of-cut
4. Move throttle to slow
5. Hazard to feet
6. Hazard to hands
7. Stop reels before touching



**93-6697**  
**(Model 03541 & 03544 only)**

1. Read operator's manual
2. Lubrication point
3. Time interval




**98-9335**

1. Cutting dismemberment hazard—stay away from moving parts




**93-6696**

1. Danger—spring loaded device
2. Read operator's manual

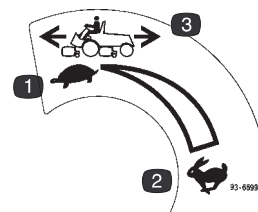

**93-6699**

1. Slow
2. Fast
3. Traction speed




**93-6691**

1. Read operator's manual—eccentric bolt



**93-8050**  
**(Model 03541 & 03544 only)**

1. Danger
2. Read operator's manual
3. Tipping hazard
4. Wear seat belts

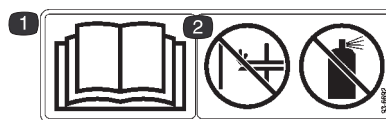

**93-6692**


1. Read operator's manual
2. Do not prime engine
3. Do not use starting fluid



**93-6687**

1. Do not step



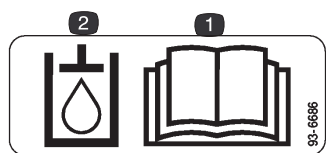


93-6686

1. Hydraulic oil level
2. Read operator's manual



76-8730

1. See operator's manual
2. Wheel torque specifications

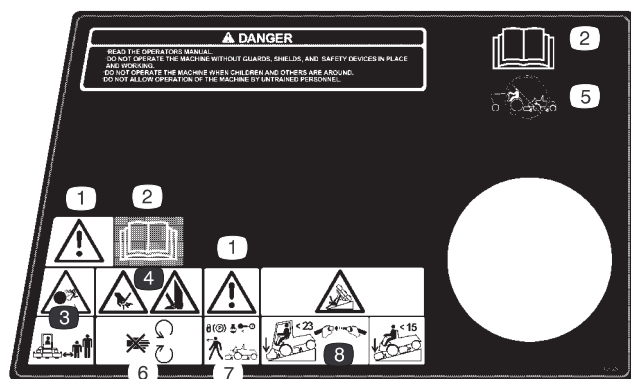


104-9294

1. Danger
2. Read operator's manual
3. Thrown objects—keep bystanders away
4. Cutting hazard to hands and feet
5. Do not tow
6. Cutting hazard to hands—keep away from moving parts
7. Danger—set the parking brake, stop the engine, and remove the key before leaving the operator's position
8. Tipping hazard—always fasten seat belts




P93-6680

1. Diesel fuel

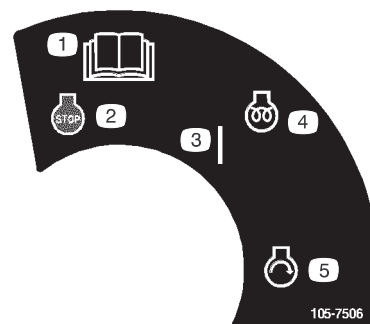


105-7506

1. Read the *Operator's Manual*
2. Engine—stop
3. On
4. Engine—preheat
5. Engine—start

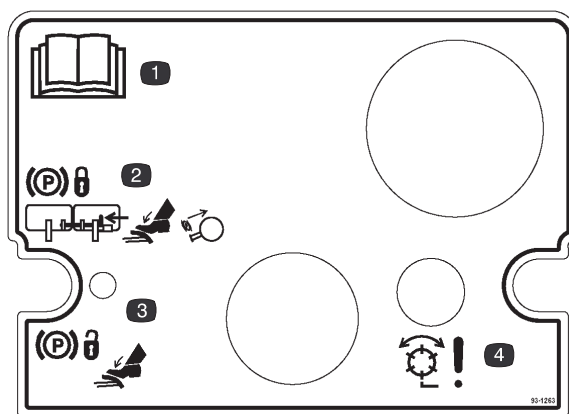

93-1263

1. Read operator's manual
2. To engage parking brake—connect pedals with locking pin, push down on both pedals and pull parking brake latch out.
3. To release parking brake—press both pedals until parking brake latch retracts.
4. Danger —reels enabled



93-6689

1. Danger—no riders

# Specifications

## General Specifications

|                           |  |
|---------------------------|--|
| Engine                    | Kubota three cylinder, 4 cycle liquid cooled diesel engine. 25 hp @ 3000 rpm for Reelmaster 5200 and 31.5 hp @ 3000 rpm for Reelmaster 5400. Both governed to 3200 rpm. 68.5 cu. in. (1123 cc) displacement. Heavy duty, 3-stage, remote mounted air cleaner. High water temperature shutdown switch.  |
| Cooling System            | Radiator capacity is approximately 7-1/2 qt. of 50/50 mixture of ethylene glycol anti-freeze. Remote mounted 1 qt. expansion tank. A two speed fan drive controls air flow from fan.   |
| Fuel System               | Fuel tank capacity is 9.5 gal. of #2 diesel fuel. Equipped with a fuel filter/water separator to capture water in the fuel.  |
| Traction System           | Foot pedal controls forward/reverse ground speed. Ground speed: 0–10 mph forward and 0–4 reverse. Hydrostatic transmission mounted directly on a 20.9:1 ratio front axle. Axle/reservoir capacity is 5 qt. Replaceable filter mounted directly on transmission housing. Models 03541 and 03544 only—mechanical rear axle is coupled to front axle by a driveshaft and overrunning clutch.    |
| Cutting Unit Drive System | Hydraulic reel motors feature quick disconnects to ease removal/installation on cutting units. Hydraulic fluid reservoir capacity is 8 gal. System protected by a filter assembly with service indicator.  |
| Seat                      | Deluxe high back seat with adjustable fore and aft travel, weight and height. Tool box at left side of seat.   |
| Steering System           | Power steering with dedicated power source   |
| Tires                     | Two rear tires: 20 x 10.00-10, tubeless, 6-ply rating. Two front tires: 26.5 x 14.00-12 tubeless, 4-ply rating. Recommended tire pressure for front and rear tires is 10–15 psi.   |
| Brakes                    | Individual drum type wheel brakes on front traction wheels. Brakes controlled by individual pedals operated by the left foot. Hydrostatic braking through traction drive.  |
| Electrical System         | Automotive type electrical system. 12 volt, maintenance free battery with 530 cold cranking Amps @ 0 degrees F. and 85 minute reserve capacity @ 85 degrees F. 40 amp alternator with I.C. regulator/rectifier. Seat switch, reel and traction interlock switches. An electronic controller monitors and controls safety and operational functions. Parking brake switch in steering column. |
| Controls                  | Foot operated traction and brake pedals. Hand operated throttle, traction speed control lever, parking brake lock, ignition switch with automatic preheat cycle, single joy stick control for cutting unit on/off and lift/lower. Cutting unit backlap switch and reel speed controls located under control console.   |
| Gauges                    | Hour meter, speedometer, fuel gauge, temperature gauge. 4 warning lamps: oil pressure, water temperature, amps, and glow plug.   |
| Diagnostics               | The Automatic Control Electronics, ACE™ system allows precise timing and control of machine functions for maximum reliability. Optional hand held diagnostic display connects to an electronic control unit to pin point any electrical problems quickly and easily. Available DATA LOG™ system allows mechanic to find intermittent problems.   |

## Measurements

|                           |             |
|---------------------------|-------------|
| Width of Cut              | 95 in.      |
| Overall Width             |             |
| Transport                 | 87 in.      |
| Outside of front tires    | 87 in.      |
| Outside of rear tires     | 52-1/2 in.  |
| Overall Length            |             |
| Without grass baskets     | 103-1/2 in. |
| With grass baskets        | 116 in.     |
| Height                    |             |
| Without ROPS installed    | 56-1/2 in.  |
| With ROPS installed       | 85 in.      |
| Recommended Height of Cut |             |
| 5 Blade Cutting Unit      | 1/2–3/4 in. |
| 8 Blade Cutting Unit      | 1/4–5/8 in. |
| Weight                    |             |
| Models 03540 & 03543      | 2320 lb.*   |
| Models 03541 & 03544      | 2675 lb.*   |

\* With 8 Blade Cutting Units, baskets, and full fluid levels

## Optional Equipment

|                             |                  |
|-----------------------------|------------------|
| 5 Blade Cutting Unit        | Model No. 03506  |
| 8 Blade Cutting Unit        | Model No. 03509  |
| Premium 2-1/2" Rear Roller* | Model No. 03523  |
| Standard 2" Rear Roller*    | Model No. 03525  |
| Rear Roller Scraper*        | Part No. 98-1450 |
| Comb Kit*                   | Model No. 03518  |

|   |                      |
|---|----------------------|
| Rear Roller Brush Kit*  | Model No. 03526      |
| Solid Front Roller*   | Part No. 82-6680     |
| Front Wiehle Roller Scraper*  | Part No. 83-5400     |
| 5 Blade Cutting Unit  | Model No. 03527      |
| 8 Blade Cutting Unit  | Model No. 03528      |
| Comb Kit†   | Part No. 104-3385    |
| Rear Roller Brush Kit†  | Model No. 03533      |
| Front H.O.C. Adjusting Kit†   | Part No. 104-8205    |
| Wiehle Scraper Kit†   | Part No. 104-3380-03 |
| Rear Roller Scraper Kit†  | Part No. 104-3395    |
| Shoulder Roller Scraper Kit†  | Part No. 104-8208-03 |
| 3" Collar Kit   | Part No. 104-8215    |
| Shoulder Roller   | Part No. 104-3369    |
| High Height of Cut Kit  | Part No. 83-5300     |
| Grass Basket Kit  | Model No. 03532      |
| Armrest Kit   | Model No. 30707      |
| Thatching Reel  | Model No. 03516      |
| 4 Wheel Drive Kit (for use with models 03540 and 03543 only)                                | Model No. 03538      |
| TurfDefender® Electronic Leak Detector Kit  | Model No. 03521      |
| Rear Weight Kit   | Part No. 75-6690     |
| Rear Weight Kit—25 lb.  | Part No. 98-9780     |
| Wheel Weight Kit  | Part No. 104-1478    |
| Precleaner Bowl Extension Tube (clamp, Part No. 20-4840 required to install extension tube) | Part No. 43-3810     |
| Accessory Kit   | Part No. 100-3712    |
| Diagnostic ACE  | Part No. 85-4750     |
| * For use with model 03506 and 03509 only   |                      |
| † For use with model 03527 and 03528 only   |                      |

**Specifications and design subject to change without notice.**

# Setup



**Note:** Determine the left and right sides of the machine from the normal operating position.

## Loose Parts

**Note:** Use this chart as a checklist to ensure that all parts necessary for assembly have been received. Without these parts, total setup cannot be completed.


| Description                          | Qty. | Use   |
|--------------------------------------|------|---|
| Locking hood switch                  | 1    | Mounting locking hood latch for CE                      |
| Lock washer                          | 1    |   |
| Nut                                  | 1    |   |
| Key                                  | 2    |   |
| Hood latch bracket                   | 1    |   |
| Capscrew, 1/4 x 3/4 in.              | 2    |   |
| Flat washer, 1/4 in.                 | 2    |   |
| Locknut, 1/4 in.                     | 2    |   |
| Flange head capscrew, 5/16 x 5/8 in. | 1    | Replacing floor panel fastener for CE                   |
| Flange head capscrew, 5/16 x 3/4 in. | 1    | Securing access panel for CE                            |
| Hydraulic filter (transmission)      | 1    | Change filter after first 10 hours of operation.        |
| CE decal                             | 1    | Affix to machine.                                       |
| CE certificate                       | 2    |   |
| Service decal, blank                 | 1    | Affix to machine (International only).                  |
| Diagnostic ACE display overlay       | 1    | Diagnosing machine (store in service shop until needed) |
| Video                                | 1    | View before operating the machine.                      |
| Parts catalog                        | 1    |   |
| Operator's Manual (Traction Unit)    | 2    | Read before operating the machine.                      |
| Engine Manual                        | 1    |   |
| Registration card                    | 1    | Fill out and return to Toro.                            |

## Connecting the Battery

**Warning**

Connecting cables to the wrong post could result in personal injury and/or damage to the electrical system.

1. Open hood.
2. Ensure battery is securely fastened in place and check battery charge with a hydrometer. If battery needs charging, be sure at least one battery cable, preferable the positive (+) cable, is disconnected from the battery before connecting the charger (Fig. 1).

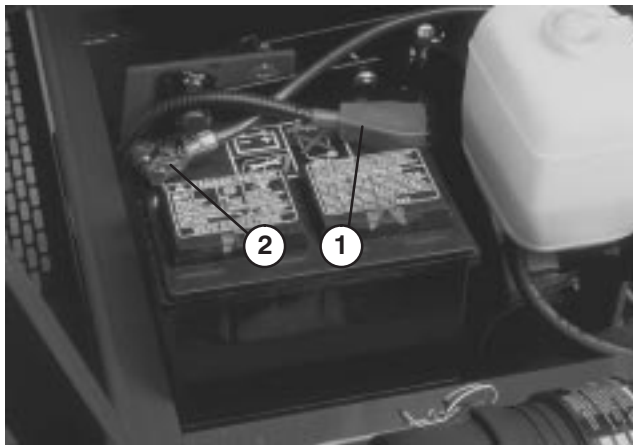

**Figure 1**

1. Positive battery cable      2. Negative battery cable

! **Warning** !

**Charging the battery produces gasses that can explode.**

**Never smoke near the battery and keep sparks and flames away from the battery.**

! **Warning** !

**Battery terminals or metal tools could short against metal tractor components, causing sparks. Sparks can cause the battery gasses to explode, resulting in personal injury.**

- **When removing or installing the battery, do not allow the battery terminals to touch any metal parts of the tractor.**
- **Do not allow metal tools to short between the battery terminals and metal parts of the tractor.**

3. Slide the red, positive battery cable onto the positive battery post and tighten nut securely.

! **Warning** !


**Incorrect battery cable routing could damage the tractor and cables, causing sparks. Sparks can cause the battery gasses to explode, resulting in personal injury.**

- **Always *disconnect* the negative (black) battery cable before disconnecting the positive (red) cable.**
- **Always *reconnect* the positive (red) battery cable before reconnecting the negative (black) cable.**

4. Slide the black, negative battery cable onto the negative battery post and tighten nut securely.
5. Coat both battery connections with Grafo 112X (skin over) grease, Toro Part No. 505-47, petroleum jelly or light grease to prevent corrosion and slide rubber boot over positive terminal.
6. Close hood.

## Mounting the Hood Latch


1. Remove plug from hole in left front corner of hood (Fig. 2).
2. Open hood.

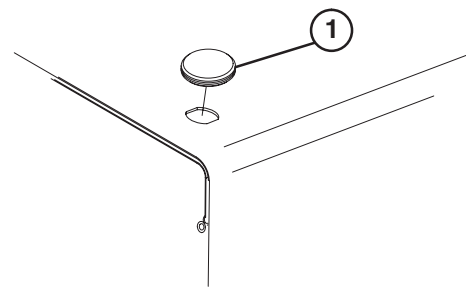

**Figure 2**

1. Hood plug

3. Mount locking switch to hood with lock washer and nut. Position switch with latch toward front of machine (Fig. 3).

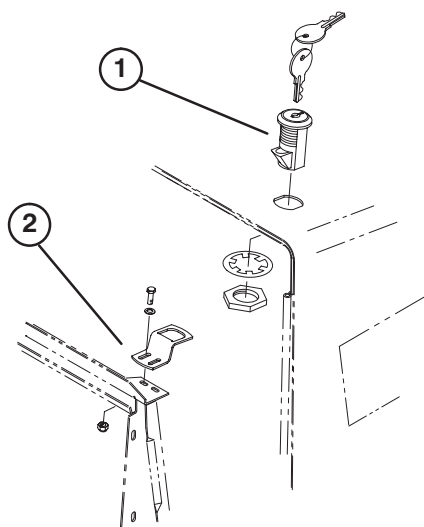


**Figure 3**

1. Locking switch
  2. Latch bracket
- 
4. Loosely mount latch bracket to radiator support with 2 capscrews (1/4 x 3/4 in.), flat washers, and locknuts (Fig. 3).
  5. Adjust latch bracket, until aligned with switch latch, then tighten capscrews.
  6. Rotate latch to locked and unlocked position with key. Remove key and store in memorable place.
  7. Close hood.

## Replacing the Panel Fasteners

1. Remove fasteners securing left front corner of floor panel and left end of access panel to frame (Fig. 4).

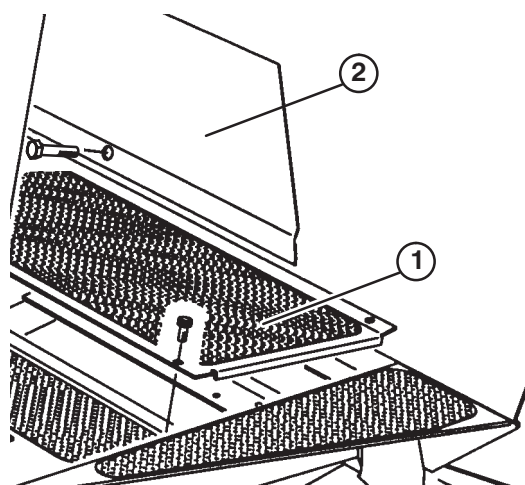

**Figure 4**

1. Floor panel
2. Access panel

2. Replace floor panel fastener with flange head capscrew (5/16 x 5/8 in.) supplied in loose parts (Fig. 4).
3. Replace access panel fastener with flange head capscrew (5/16 x 3/4 in.) supplied in loose parts (Fig. 4).


## Checking the Tire Pressure

The tires are over-inflated for shipping. Therefore, release some of the air to reduce the pressure. Correct air pressure in the front and rear tires is 10–15 psi.

**Important** Maintain even pressure in all tires to ensure uniform contact with turf.


## Installing the Cutting Units

1. Remove cutting units from cartons. Assemble and adjust per the Operator's Manual for the cutting unit.
2. If baskets will be installed, use chart below (Fig. 5) to determine locations at which basket guides or basket brackets must be mounted to cutting unit carrier frames. If baskets are not to be installed, proceed to step 7.

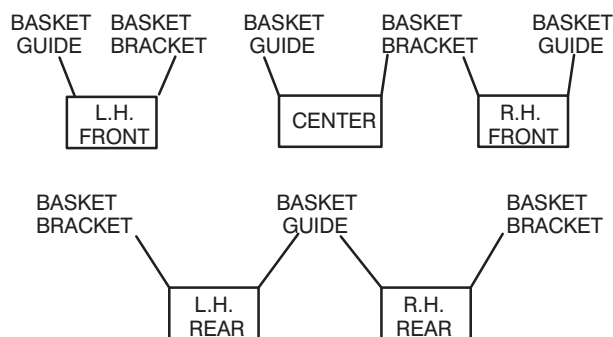

**Figure 5**


3. Remove hardware securing Turf compensation kit to each end of carrier frame (Fig. 6 and 7) and reuse when installing basket guides and basket brackets (Cutting unit models 03506 and 03509 only).
4. Mount a basket guide (Fig. 6) to the appropriate side of each cutting unit carrier frame (see Figure 7) with a capscrew (5/16 x 1-3/4 in.), flat washer, and lock washer or fasteners previously removed, as shown in Figure 6.

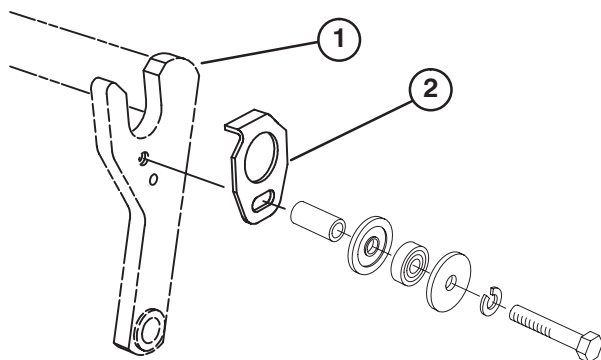

**Figure 6**

- |                  |                 |
|------------------|-----------------|
| 1. Carrier frame | 2. Basket guide |
|------------------|-----------------|


5. Install a roll pin (Fig. 7) into hole in appropriate side of each cutting unit carrier frame (Fig. 5).

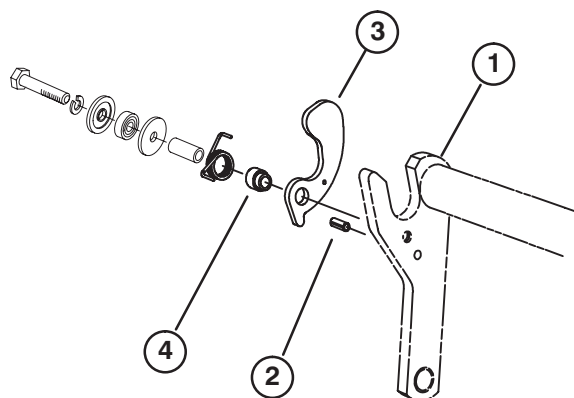

**Figure 7**

- |                  |                   |
|------------------|-------------------|
| 1. Carrier frame | 3. Basket bracket |
| 2. Roll pin      | 4. Basket collar  |


6. On the same side of carrier frame as roll pin is installed, mount a basket bracket with a capscREW (5/16 x 1-3/4 in.), lock washer, flat washer, torsion spring, basket collar, or fasteners previously removed, as shown in Figure 7. Torsion springs are different for left-hand and right-hand sides of carrier frames. There are 2 left-hand and 3 right-hand springs. Longer leg of spring is to be positioned forward as shown in Figure 8.

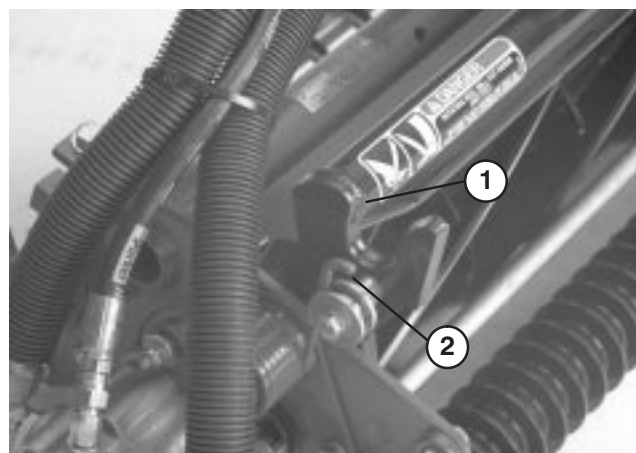

**Figure 8**

- |                   |                   |
|-------------------|-------------------|
| 1. Basket bracket | 2. Torsion spring |
|-------------------|-------------------|

7. Align the mounting shaft of the cutting unit with the pivot tube on the carrier frame. Insert the shaft into the tube (Fig. 9).

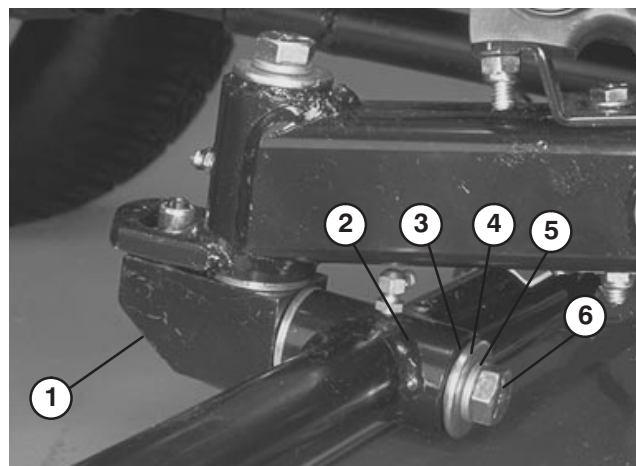


**Figure 9**

- |                                |                |
|--------------------------------|----------------|
| 1. Cutting unit mounting shaft | 4. Flat washer |
| 2. Carrier frame pivot tube    | 5. Lock washer |
| 3. Thrust washer               | 6. Capscrew    |

8. Secure shaft in pivot tube with a thrust washer, flat washer, lock washer, and cap screw (Fig. 9).
9. Assemble the mounting nuts for the reel drive motor to each cutting unit (Fig. 10). Leave approximately 1/2 in. of threads exposed on each mounting stud.



10. Coat the spline shaft of the motor with clean grease and install the motor by rotating the motor clockwise so the motor flanges clear the studs. Rotate the motor counterclockwise until the flanges encircle the studs and tighten the mounting nuts. Ensure that the washers are against the nuts.

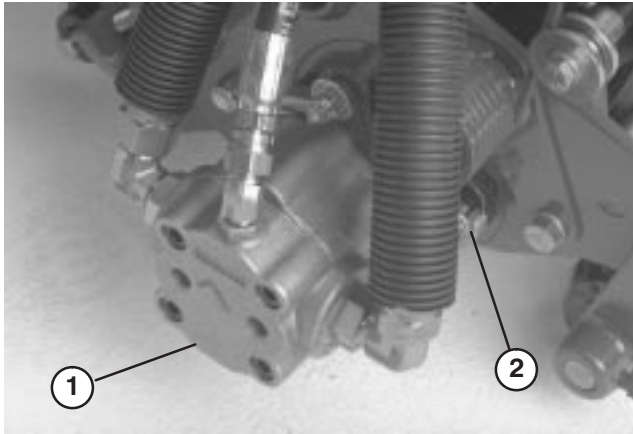

**Figure 10**

1. Reel drive motor                      2. Mounting nuts

11. Detach chain from lift arm and secure it to cross tube on each rear cutting unit with a capscrew, flat washer, and locknut (Fig. 11).




**Figure 11**

1. Lock-up chain

**Important** Make sure that all hydraulic hoses are routed away from cutting unit so when cutting unit pivots excessive rubbing does not occur.

12. Check adjustment of lock-up rollers (Fig. 12). When properly adjusted, they will contact the lock-up levers on rear lift arms and support the cutting units when fully raised.

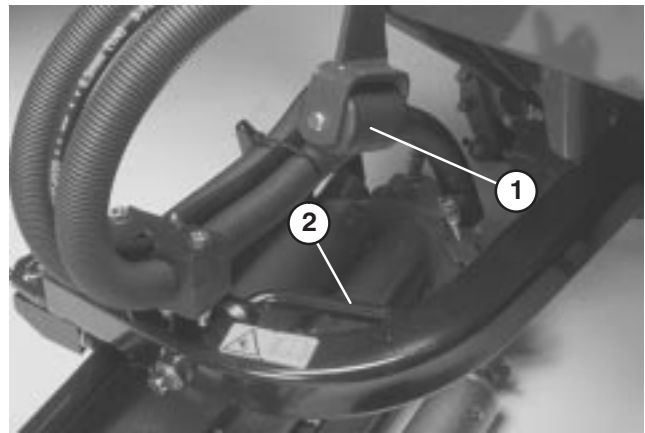

**Figure 12**

1. Lock-up rollers                      2. Lock-up levers

13. Mount a basket to each cutting unit carrier frame by inserting basket mounting pin into basket bracket and depressing opposite mounting pin into pivoting bracket.

## Adjusting the Turf Compensation Spring

**Note:** This adjustment is needed for Cutting Unit Models 03527 and 03528 only.

The turf compensation spring (Fig. 13), connecting carrier frame to cutting unit, controls the amount of fore-aft rotation available.

The Turf Compensation Spring also transfers weight from the front to rear roller. (This helps to reduce a wave pattern in the turf, also known as bobbing.)

**Important** Make spring adjustments with cutting unit mounted to traction unit and lowered to shop floor.

1. Tighten locknut on rear of spring rod until the gap (C) between rear of spring bracket and front of washer is 1.25 in. (32 mm) (Fig. 13).
2. Tighten hex nuts on front end of spring rod until the compressed length (A) of spring is 6.25 in. (328 mm) (Fig. 13).

**Note:** As compressed spring length (A) **decreases**, weight transfer from front roller to rear roller **increases** and carrier frame/cutting unit rotation angle (B) **decreases**.

**Note:** As gap (C) between spring bracket and washer **increases**, carrier frame/cutting unit rotation angle (B) **increases**.

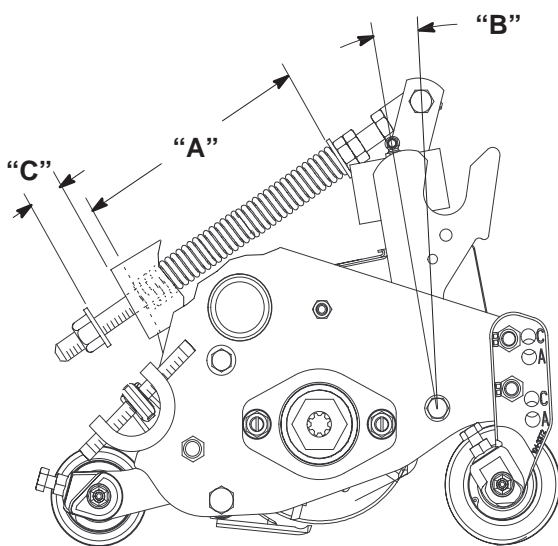


Figure 13

## Lifted Height of Outer Front Cutting Units (Enable Position)

The turnaround height of the front outer cutting units (#4 & #5) may be increased to provide additional ground clearance on contoured fairways. Contact your distributor for assistance in adjusting the ECU settings.

## Installing the Rear Weight

The Reelmaster 5200-D & 5400-D Traction Units comply with ANSI B71.4-1999 Standards when equipped with rear weight and 90 lb. of calcium chloride ballast is added to rear wheels. Use chart below to determine combinations of weight required. Order parts from your local Authorized Toro Distributor.

|  | Rear Weight Required | Weight Part Number | Weight Description     | Qty. |
|--|----------------------|--------------------|------------------------|------|
| 2wd Traction Unit with ROPS w/o baskets  | 291 lb.              | 75-6690            | Rear Weight Kit        | 3    |
| 2wd Traction Unit with ROPS with baskets | 358 lb.              | 75-6690            | Rear Weight Kit        | 4    |
| 2wd Traction Unit w/o ROPS w/o baskets   | 157 lb.              | 75-6690            | Rear Weight Kit        | 1    |
| 2wd Traction Unit w/o ROPS with baskets  | 224 lb.              | 75-6690            | Rear Weight Kit        | 2    |
| 4wd Traction Unit with ROPS w/o baskets  | 157 lb.              | 75-6690            | Rear Weight Kit        | 1    |
| 4wd Traction Unit with ROPS with baskets | 249 lb.              | 75-6690            | Rear Weight Kit        | 2    |
|  |                      | 98-9780            | Rear Weight Kit—25 lb. | 1    |

**Important** If a puncture occurs in a tire with calcium chloride, remove unit from turf area as quickly as possible. To prevent possible damage to turf, immediately soak affected area with water.

# Before Operating



## Caution



If you leave the key in the ignition switch, someone could accidentally start the engine and seriously injure you or other bystanders.

Remove the key from the ignition switch and lower the cutting units to the ground before servicing or making adjustments to the machine.

## Checking the Engine Oil

1. Park machine on a level surface, stop engine, and remove key from ignition switch. Open hood.
2. Remove dipstick, wipe clean, and reinstall dipstick. Remove dipstick and check oil level on dipstick; Oil level should be up to FULL mark (Reelmaster 5200—Fig. 14, Reelmaster 5400—Fig. 15).

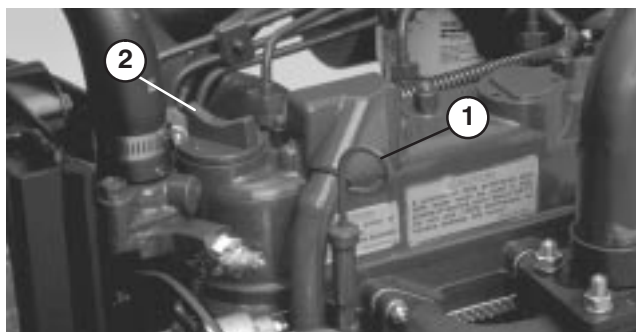


Figure 14

1. Dipstick                      2. Oil fill cap

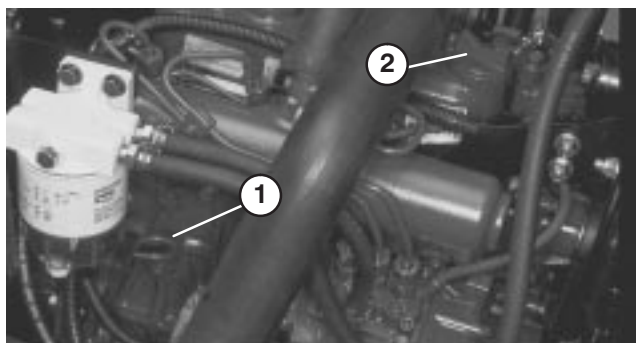


Figure 15

1. Dipstick                      2. Oil fill cap

3. If oil is below FULL mark, remove fill cap and add SAE 10W-30 CD, CE, CF, CF-4, or CG-4 classification oil until level reaches FULL mark on dipstick. **Do not overfill.** Crankcase capacity is 4.0 qt. with filter.
4. Install oil fill cap and close hood.

## Checking the Cooling System

Clean debris off screen, oil cooler and front of radiator daily, more often if conditions are extremely dusty and dirty; refer to section on Engine Cooling System.

The cooling system is filled with a 50/50 solution of water and permanent ethylene glycol anti-freeze. Check level of coolant in expansion tank at beginning of each day before starting the engine. Capacity of cooling system is 9.6 quarts.



## Caution



If the engine has been running, the pressurized, hot coolant can escape and cause burns.

- Do not open the radiator cap when the engine is running.
- Use a rag when opening the radiator cap, and open the cap slowly to allow steam to escape.

1. Check level of coolant in expansion tank (Fig. 16). Coolant level should be between the marks on side of tank.





Figure 16

1. Expansion tank
2. If coolant level is low, remove expansion tank cap and replenish the system. **Do not overfill.**
3. Install expansion tank cap.

## Filling the Fuel Tank

1. Remove fuel tank cap (Fig. 17).
2. Fill tank to about one inch below top tank, not filler neck with No. 2 diesel fuel. Then install cap.

**Danger**

Under certain conditions, diesel fuel and fuel vapors are highly flammable and explosive. A fire or explosion from fuel can burn you and others and can cause property damage.

- Use a funnel and fill the fuel tank outdoors, in an open area, when the engine is off and is cold. Wipe up any fuel that spills.
- Do not fill the fuel tank completely full. Add fuel to the fuel tank until the level is 1/4 to 1/2 in. (6 to 13 mm) below the bottom of the filler neck. This empty space in the tank allows the fuel to expand.
- Never smoke when handling fuel, and stay away from an open flame or where fuel fumes may be ignited by a spark.
- Store fuel in a clean, safety-approved container and keep the cap in place.



Figure 17

1. Fuel tank cap

## Checking the Transmission Fluid

The front axle housing acts as the reservoir for the system. The transmission and axle housing are shipped from the factory with approximately 5 quarts of Mobil 424 hydraulic fluid. However, check level of transmission oil before engine is first started and daily thereafter.

1. Position machine on a level surface, lower the cutting units and stop the engine.
2. Remove floor panel.

3. Unscrew dipstick cap from the transmission filler neck (Fig. 18) and wipe it with a clean rag. Screw dipstick into filler neck. Remove the dipstick and check level of oil. If level is not within 1/2 inch from the groove in the dipstick, add enough oil to raise level to groove mark. **Do not overfill** by more than 1/4 inch above groove.

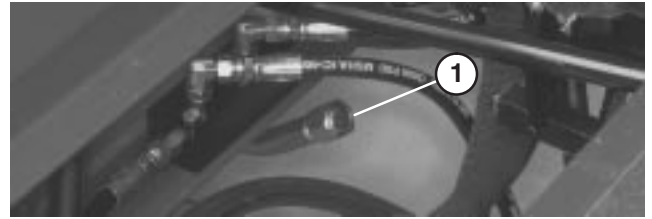


Figure 18

1. Transmission dipstick cap

4. Screw dipstick filler cap finger-tight onto filler neck. It is not necessary to tighten cap with a wrench.

## Checking the Hydraulic Fluid

The machine's reservoir is filled at the factory with approximately 8 gallons of high quality hydraulic fluid. **Check the level of hydraulic fluid before the engine is first started and daily thereafter.** Appropriate hydraulic oils are listed below.

The following list is not assumed to be all-inclusive. Hydraulic fluids produced by other manufacturers may be used if they can cross reference to find an equivalent to the products listed. Toro will not assume responsibility for damage caused by improper substitutions, so use only products from reputable manufacturers who will stand behind their recommendation.


### Universal Tractor Hydraulic Fluid

|          |                         |
|----------|-------------------------|
| Mobil    | Mobil Fluid 424         |
| Amoco    | 1000 Fluid              |
| Chevron  | Tractor Hydraulic Fluid |
| Conoco   | Power-Tran 3            |
| Exxon    | Torque Fluid            |
| Pennzoil | Hydra-Tranz             |
| Shell    | Donax TD                |
| Texaco   | TDH                     |

**Note:** Many hydraulic fluids are almost colorless, making it difficult to spot leaks. A red dye additive for the hydraulic system oil is available in 2/3 oz. (20 ml) bottles. One bottle is sufficient for 4–6 gal (15–22 l) of hydraulic oil. Order part no.44–2500 from your authorized Toro distributor.

1. Position machine on a level surface, lower the cutting units and stop the engine.

2. Clean area around filler neck and cap of hydraulic tank (Fig. 19). Remove cap from filler neck.

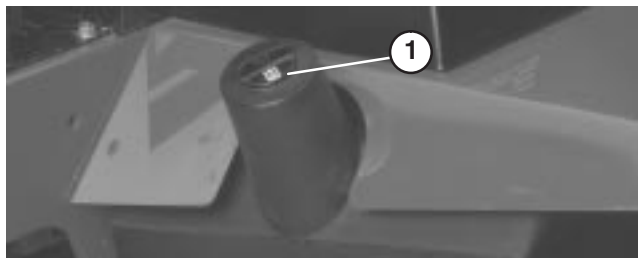

**Figure 19**

1. Hydraulic tank cap


3. Remove dipstick from filler neck and wipe it with a clean rag. Insert dipstick into filler neck; then remove it and check level of fluid. Fluid level should be within 1/4 inch of mark on dipstick.
4. If level is low, add appropriate fluid to raise level to full mark.
5. Install dipstick and cap onto filler neck.

## Checking the Rear Axle Lubricant

**Note:** This procedure is for Models 03541 and 03544 only.


The rear axle has three separate reservoirs which use SAE 80W-90 wt. gear lube. Although the axle is shipped with lubricant from the factory, check the level before operating the machine.

1. Position the machine on a level surface.
2. Remove the 3 check plugs from axle (Fig. 20 and 21) and make sure lubricant is up to bottom of each hole.

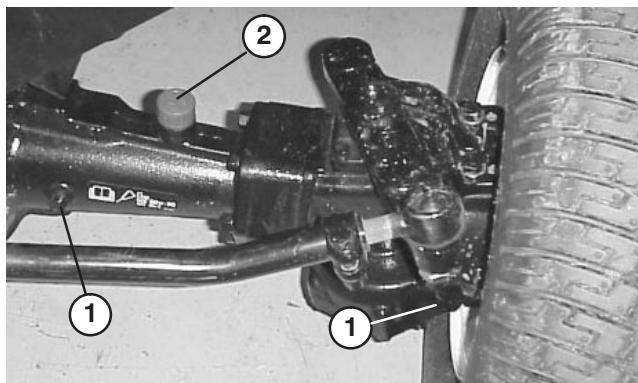

**Figure 20**

1. Check plug
2. Fill plug

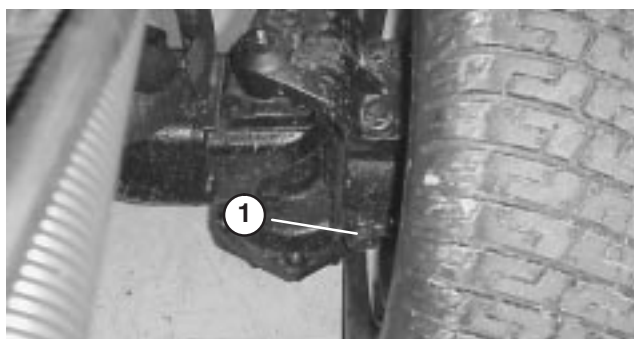

**Figure 21**

1. Left check plug (rear of axle)
3. If level is low, remove center fill plug and add enough lubricant to bring the level up to the bottom of the center check plug hole.
4. Remove each end check plug and add enough lubricant to bring the level up to the bottom of each check plug hole.
5. Install all plugs.

## Checking Reel to Bedknife Contact

Each day before operating, check reel to bedknife contact, regardless if quality of cut had previously been acceptable. There must be light contact across the full length of the reel and bedknife (refer to Adjusting Reel to Bedknife in Cutting Unit Operator's Manual).

## Checking the Torque of the Wheel Nuts



### Warning



Failure to maintain proper torque of the wheel nuts could result in personal injury.

Torque the wheel nuts to 45–55 ft.-lb. after 1–4 hours of operation and again after 10 hours of operation. Torque every 250 hours thereafter.



# Operation

**Note:** Determine the left and right sides of the machine from the normal operating position.



## Caution



If you leave the key in the ignition switch, someone could accidentally start the engine and seriously injure you or other bystanders.

Remove the key from the ignition switch and lower the cutting units to the ground before servicing or making adjustments to the machine.

## Controls

### Seat

The seat adjusting lever (Fig. 22) allows 4 inch fore and aft adjustment. Seat adjusting knob (Fig. 22) adjusts seat for operators weight. To adjust seat fore and aft, pull lever on left side of seat assembly outward. After moving seat to desired location, release lever to lock seat into position. To adjust for operators weight, turn spring tension knob; clockwise to increase tension, counterclockwise to decrease spring tension.



**Figure 22**

1. Seat adjusting lever

2. Seat adjusting knob

### Traction Pedal

The traction pedal (Fig. 23) controls forward and reverse operation. Depress top of pedal to move forward and bottom to move backward. Ground speed depends on how far pedal is depressed. For no load, maximum ground speed, fully depress pedal while throttle is in FAST.

To stop, reduce foot pressure on traction pedal and allow it to return to center position.



**Figure 23**

1. Traction pedal

### Traction Speed Limiter

Preset this lever (Fig. 24) to limit the amount the traction pedal can be depressed in the forward direction to maintain a constant mowing speed.

### Reel Control Light

The light (Fig. 24) illuminates when glow is preheating or blinks when there is a control system problem.

### Speedometer

The speedometer (Fig. 24) indicates ground speed at which machine is traveling.

### Brake Pedals


Two foot pedals (Fig. 24) operate individual wheel brakes for turning assistance, parking, and to aid in obtaining better sidehill traction. Locking pin connects the pedals for parking brake operation and transport.

### Parking Brake Latch

A knob on the left side of console (Fig. 24) actuates parking brake lock. To engage parking brake, connect pedals with locking pin, push down on both pedals and pull parking brake latch out. To release parking brake, depress both pedals until parking brake latch retracts.

### Key Switch

The key switch (Fig. 24) has three positions: OFF, ON/Preheat, and START.

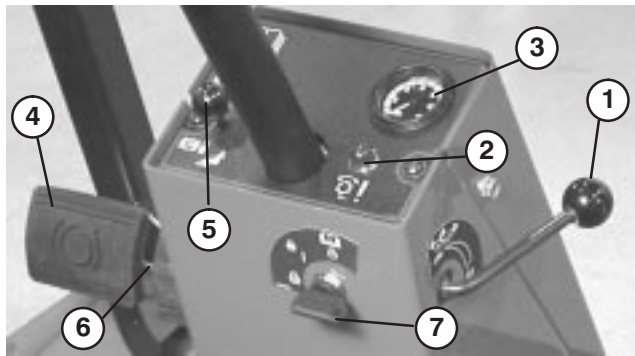

**Figure 24**


- |                           |                        |
|---------------------------|------------------------|
| 1. Traction speed limiter | 5. Parking brake latch |
| 2. Reel control light     | 6. Locking pin         |
| 3. Speedometer            | 7. Key switch          |
| 4. Brake pedals           |                        |

## Engine Coolant Temperature Warning Light

The light (Fig. 25) illuminates and engine shuts down when coolant reaches a dangerously high temperature.

## Throttle Control

Move control (Fig. 25) forward to increase engine speed, rearward to decrease speed.

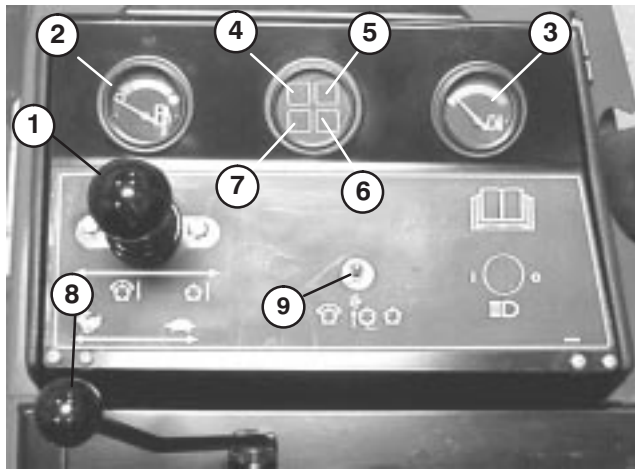

**Figure 25**

- |                                      |   |
|--------------------------------------|---|
| 1. Lower mow/raise control lever     | 5. Engine coolant temperature warning light |
| 2. Fuel gauge                        | 6. Glow plug indicator light                |
| 3. Engine coolant temperature gauge  | 7. Charge indicator                         |
| 4. Engine oil pressure warning light | 8. Throttle control                         |
|                                      | 9. Enable/disable switch                    |

## Fuel Gauge

The fuel gauge (Fig. 25) shows amount of fuel in tank.

## Lower Mow/Raise Control Lever

The lever (Fig. 25) raises and lowers the cutting units and also starts and stops the reels.

## Glow Plug Indicator Light

When lit (Fig. 25), indicates a control system problem. Light blinks when glow plugs are preheating.

## Engine Oil Pressure Warning Light

This light (Fig. 25) indicates dangerously low engine oil pressure.

## Charge Indicator

The charge indicator (Fig. 25) illuminates when system charging circuit malfunctions.

## Enable/Disable Switch

The enable/disable switch (Fig. 25) is used in conjunction with lower mow / raise control lever (Joystick) to operate reels. Reels can be raised but not lowered when in mid position.

## Backlap Switch

The backlap switch (Fig. 26) is used in conjunction with lower mow / raise control lever for backlapping operation. Refer to Cutting Unit Maintenance, Backlapping.



**Figure 26**

1. Backlap switch



## Reel Speed Controls

The reel speed controls (Fig. 27) control the RPM of front and rear cutting units. #1 position is for backlapping. Remaining settings are for mowing operations. See section in manual for operating instructions.

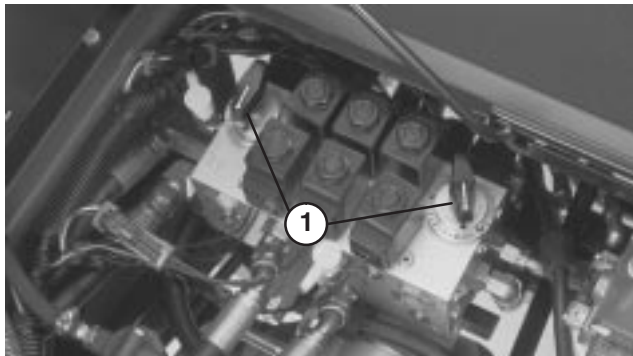


Figure 27

1. Reel speed controls

## Hour Meter

The hour meter (Fig. 28) shows total hours that machine has been operated.

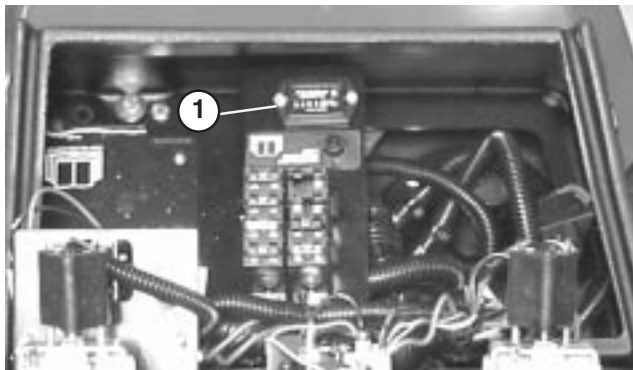


Figure 28

1. Hour meter

## Starting and Stopping

**Important** The fuel system must be bled if any of the following situations have occurred:

- A. Initial start up of a new machine.
- B. Engine has ceased running due to lack of fuel.
- C. Maintenance has been performed upon fuel system components; i.e., filter replaced, separator serviced, etc.

Refer to Bleeding the Fuel System, page 23.

1. Sit on the seat, keep foot off traction pedal. Ensure that the parking brake is engaged, traction pedal is in NEUTRAL, throttle is in FAST position and the ENABLE/DISABLE switch is in the DISABLE position.
  2. Turn ignition switch to ON/Preheat position. An automatic timer will control preheat for 6 seconds. After preheat, turn key to START position. Crank the engine for no longer than **15 seconds**. Release key when engine starts. If additional preheat is required, turn key to OFF position then to ON/preheat position. Repeat process as required.
  3. Run engine at idle speed or partial throttle until engine warms up.
- Note:** Move throttle to FAST position when restarting a warm engine.
4. To stop, move all controls to NEUTRAL and set parking brake. Return throttle to the idle position, turn key to OFF and remove it from switch.

## Bleeding the Fuel System

1. Park the machine on a level surface. Make sure fuel tank is at least half full.
2. Raise hood over engine.
3. Open the air bleed screw on the fuel injection pump (Fig. 29) with a 12 mm wrench.

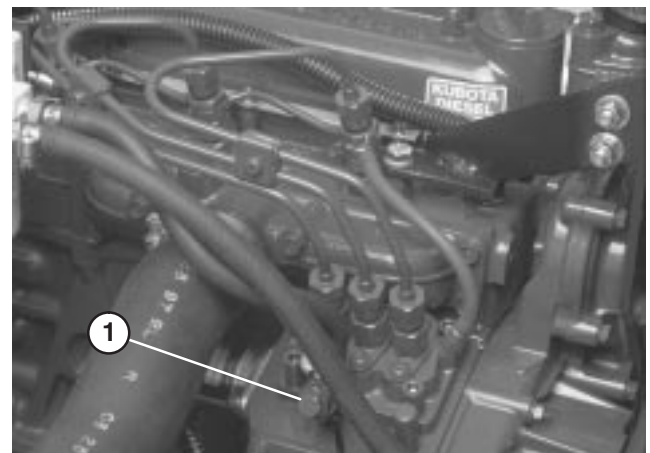


Figure 29

1. Fuel injection pump bleed screw
4. Turn key in ignition switch to the ON position. Electric fuel pump will begin operation, thereby forcing air out around air bleed screw. Leave key in ON position until solid stream of fuel flows out around screw. Tighten screw and turn key to OFF.



## Danger



Under certain conditions, diesel fuel and fuel vapors are highly flammable and explosive. A fire or explosion from fuel can burn you and others and can cause property damage.

- Use a funnel and fill the fuel tank outdoors, in an open area, when the engine is off and is cold. Wipe up any fuel that spills.
- Do not fill the fuel tank completely full. Add fuel to the fuel tank until the level is 1/4 to 1/2 in. (6 to 13 mm) below the bottom of the filler neck. This empty space in the tank allows the fuel to expand.
- Never smoke when handling fuel, and stay away from an open flame or where fuel fumes may be ignited by a spark.
- Store fuel in a clean, safety-approved container and keep the cap in place.

**Note:** Normally, engine should start after above bleeding procedures are followed. However, if engine does not start, air may be trapped between injection pump and injectors; refer to Bleeding Air from the Injectors, page 36.

## Setting the Reel Speed

To achieve a consistent, high quality-of-cut and a uniform after cut appearance, it is important that the reel speed controls (located under seat) be correctly set.

Adjust the reel speed controls as follows:

1. Select the height-of-cut at which the cutting units are set.
2. Choose the desired ground speed best suited for conditions.
3. Using the appropriate graph (Fig. 30) for 5 blade or 8 blade cutting units, determine the proper reel speed setting.

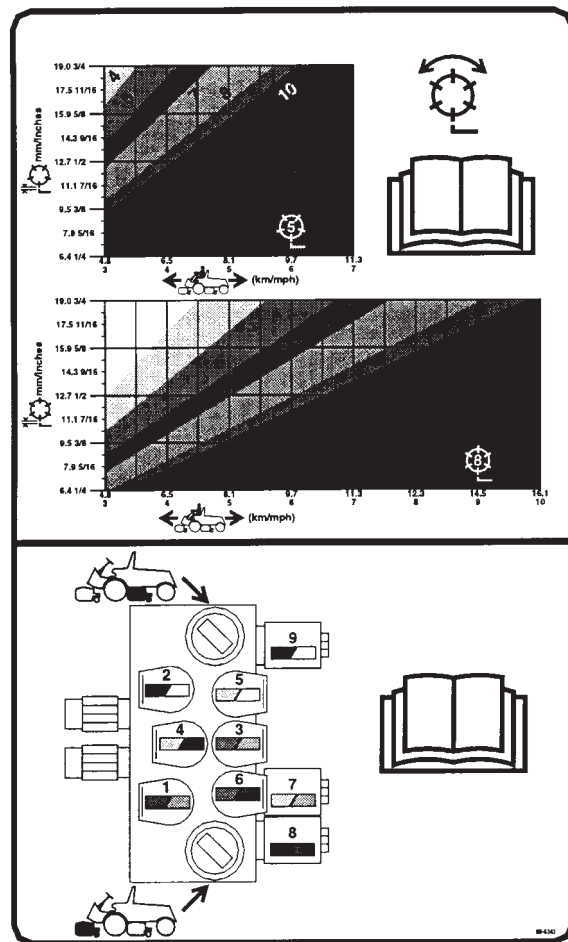


Figure 30

4. To set reel speed, rotate knobs (Fig. 31) until indicator arrows are in line with the number designating desired setting.

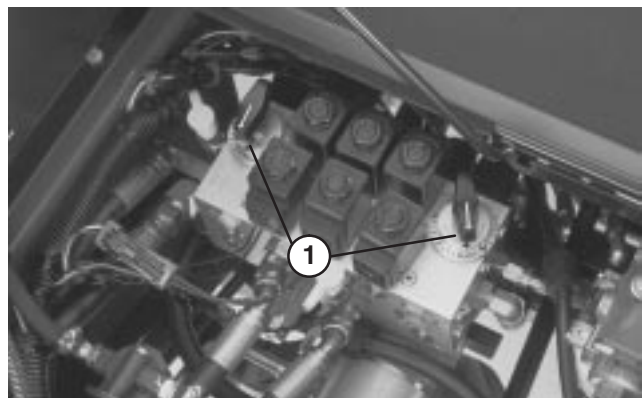


Figure 31

1. Reel speed control knobs

**Note:** Reel speed can be increased or decreased to compensate for turf conditions.

## Adjusting the Lift Arm Down Pressure

The down pressure spring on each cutting unit lift arm can be adjusted to compensate for different turf conditions. Increased down pressure will help keep the cutting units on the ground when mowing at higher speeds and helps maintain a uniform height-of-cut in rough conditions or in areas of thatch build up.

Each down pressure spring may be adjusted to one of four settings. Each increment increases or decreases down pressure on cutting unit by 8 lb.

1. Position machine on a level surface, lower the cutting units, stop the engine, engage the parking brakes, and remove key from ignition switch.
2. Remove floor plate in front of seat and open the hood to gain access to all 5 springs.




### Caution



**Springs are under tension.**

**Use caution when adjusting.**

3. Place an open end wrench on the hex shaft of the spring bracket (Fig. 32).
4. Remove the capscrew and locknut securing retaining bracket (Fig. 32), while rotating hex shaft to relieve spring tension.

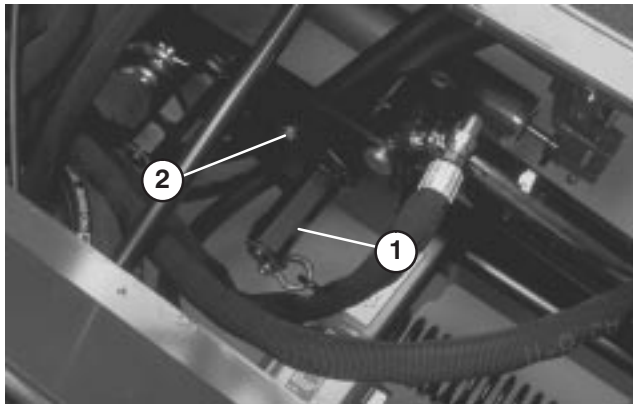

**Figure 32**

1. Spring bracket hex shaft
2. Retaining bracket

5. Move spring bracket to desired location and install capscrew and locknut, while rotating hex shaft to relieve spring tension.


## Towing the Traction Unit

If it becomes necessary to tow the machine, tow it forward only, for a short distance and at a speed no greater than 3 mph.

**Important** If these towing limits are exceeded, severe damage to the hydrostatic transmission may occur.

To tow a disabled machine:

1. Loosen and remove capscrews securing the drive shaft to the engine drive coupler. Loosen capscrews clamping drive shaft to transmission (Fig. 33). Remove drive shaft.

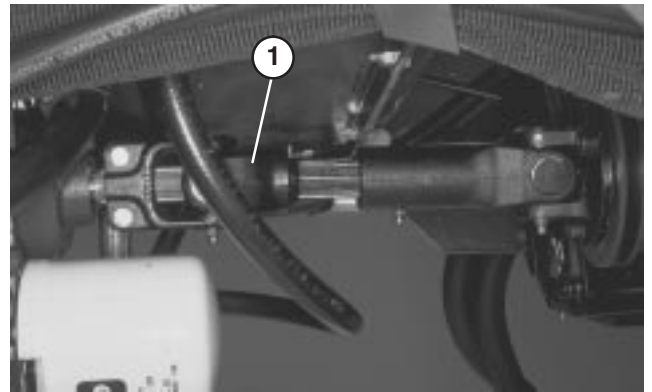


**Figure 33**

1. Drive shaft

**Important** If drive shaft is not removed before towing, the transmission input shaft will not be able to rotate, thus not allowing the transmission to maintain its internal lubrication. Severe damage to the hydrostatic transmission may occur.

2. Attach a suitable chain, strap or cable to the center of the front frame member (Fig. 34).

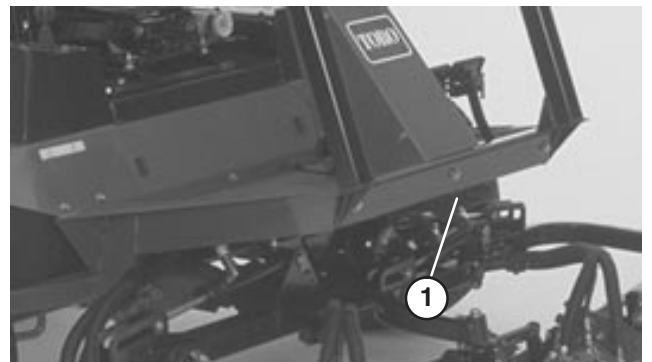

**Figure 34**


1. Center of front frame member

**Note:** Lock both brake pedals together before towing.

3. Attach the other end of the towing device to a vehicle that is capable of towing the machine safely and at speeds below 3 mph.
4. An operator must be on the machine to steer it and keep the traction pedal fully depressed in the forward position while towing.
5. When towing is completed, reinstall driveshaft as shown in Figure 33. The splines are designed to allow assembly only when the two halves of the shaft are properly oriented.

## Diagnostic Light

The RM 5200-D/5400-D is equipped with a diagnostic light which indicates if the electronic controller is functioning correctly. The green diagnostic light is located under the control panel, next to the fuse block (Fig. 35). When the electronic controller is functioning correctly and the key switch is moved to the ON position, the controller diagnostic light will be illuminated. The light will blink if the controller detects a malfunction in the electrical system. The light will stop blinking and automatically reset when the key switch is turned to the OFF position.

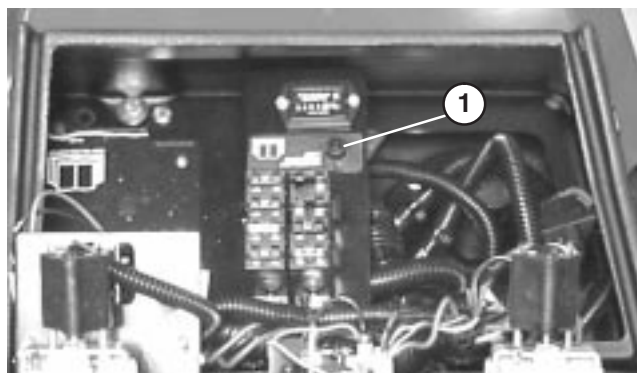

**Figure 35**

1. Electronic controller light

When the controller diagnostic light blinks, one of the following problems has been detected by the controller:

- One of the outputs has been shorted.
- One of the outputs is open circuited.

Using the diagnostic display, determine which output is malfunctioning; refer to Checking the Interlock Switches, page 26.

If the diagnostic light is not illuminated when the key switch is in the ON position, this indicates that the electronic controller is not operating. Possible causes are:

- Loopback is not connected.
- The light is burned out.

- Fuses are blown.
- Not functioning correctly.

Check electrical connections, input fuses and diagnostic light bulb to determine malfunction. Make sure loopback connector is secured to wire harness connector.

## Diagnostic ACE Display

The RM 5200-D/5400-D is equipped with an electronic controller which controls most machine functions. The controller determines what function is required for various input switches (i.e. seat switch, key switch, etc.) and turns on the outputs to actuate solenoids or relays for the requested machine function.

For the electronic controller to control the machine as desired, each of the input switches, output solenoids and relays must be connected and functioning properly.

The Diagnostic ACE display is a tool to help the user verify correct electrical functions of the machine.

## Checking the Interlock Switches

The purpose of the interlock switches are to prevent the engine from cranking or starting unless the traction pedal is in NEUTRAL, the Enable/Disable switch is in DISABLE and the Lower Mow / Raise control is in the neutral position. In addition, the engine will stop when the traction pedal is depressed with operator off the seat.



### Caution




**If safety interlock switches are disconnected or damaged the machine could operate unexpectedly causing personal injury.**

- **Do not tamper with the interlock switches.**
- **Check the operation of the interlock switches daily and replace any damaged switches before operating the machine.**
- **Replace switches every two years regardless of whether they are operating properly or not.**

## Verifying Interlock Switch Function

1. Park machine on a level surface, lower the cutting units, stop the engine and engage the parking brake.
2. Open control panel cover. Locate wire harness and connectors near controller (Fig. 36). Carefully unplug loop back connector from harness connector.




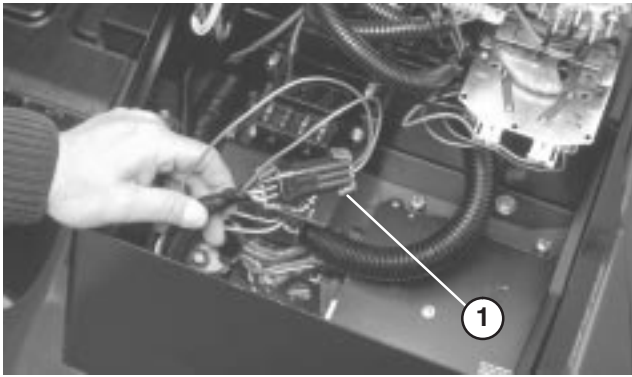

**Figure 36**

1. Wire harness and connectors

3. Connect the Diagnostic ACE display connector to the harness connector (Fig. 37). Make sure correct overlay decal is positioned on Diagnostic ACE display.
4. Turn the key switch to the ON position, but do not start machine.

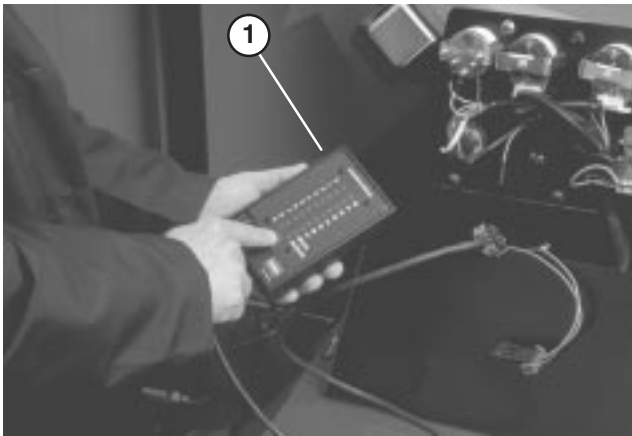

**Figure 37**

1. Diagnostic ACE

**Note:** The red text on the overlay decal refers to input switches and the green text refers to outputs.

5. The “inputs displayed” LED, on lower right column of the Diagnostic ACE, should be illuminated. If “outputs displayed” LED is illuminated, press the toggle button, on Diagnostic ACE, to change LED to “inputs displayed”.
6. The Diagnostic ACE will illuminate the LED associated with each of the inputs when that input switch is closed.

Individually, change each of the switches from open to closed (i.e., sit on seat, engage traction pedal, etc.), and note that the appropriate LED on Diagnostic ACE will

blink on and off when corresponding switch is closed. Repeat on each switch that is it possible to be changed by hand.

7. If switch is closed and appropriate LED does not turn on, check all wiring and connections to switch and/or check switches with an ohm meter. Replace any defective switches and repair any defective wiring.

The Diagnostic ACE also has the ability to detect which output solenoids or relays are turned on. This is a quick way to determine if a machine malfunction is electrical or hydraulic.

## Verifying Output Function

1. Park machine on a level surface, lower the cutting units, stop the engine and engage the parking brake.
2. Open control panel cover. Locate wire harness and connectors near controller. Carefully unplug loopback connector from harness connector.
3. Connect the Diagnostic ACE connector to the harness connector. Make sure correct overlay decal is positioned on Diagnostic ACE.
4. Turn the key switch to the ON position, but do not start machine.

**Note:** The red text on the overlay decal refers to input switches and the green text refers to outputs.

5. The “outputs displayed” LED, on lower right column of Diagnostic ACE, should be illuminated. If “inputs displayed” LED is illuminated, press the toggle button, on Diagnostic ACE, to change LED to “outputs displayed”.

**Note:** It may be necessary to toggle between “inputs displayed” and “outputs displayed” several times to do the following step. To toggle back and forth, press toggle button once. This may be done as often as required. **Do not hold the button.**

6. Sit on the seat and attempt to operate the desired function of the machine. (If you need help verifying the correct input settings for each function, refer to the Logic Chart on page 29) The appropriate output LED’s should illuminate to indicate that the ECU is turning on that function. (Refer to the list on page 28, or the logic chart to be certain of the specified output LED’s.

**Note:** If any output LED is blinking, this indicates an electrical problem with that OUTPUT. Repair / replace defective electrical parts immediately. To reset a blinking LED, turn the key switch “OFF”, then back “ON”.

If no output LED’s are blinking, but the correct output LED’s do not illuminate, verify that the required input switches are in the necessary positions to allow that function to occur. Verify correct switch function.

If the output LED's are on as specified, but the machine does not function properly, this indicates a non-electrical problem. Repair as necessary.

**Note:** Due to electrical system constraints, the output LED's for "START", "PREHEAT" and "ETR/ALT" may not blink even though an electrical problem may exist for those functions. If the machine problem appears to be with one of these functions, be certain to check the electrical circuit with a volt/ohm meter to verify that no electrical problem exists to these functions.

If each output switch is in the correct position and functioning correctly, but the output LED's are not correctly illuminated, this indicates an ECU problem. If this occurs, contact your Toro Distributor for assistance.

**Important** The Diagnostic ACE display must not be left connected to the machine. It is not designed to withstand the environment of the machine's every day use. When done using Diagnostic ACE, disconnect it from the machine and reconnect loopback connector to harness connector. Machine will not operate without loopback connector installed on harness. Store Diagnostic ACE in dry, secure location in shop, not on machine.

## Hydraulic Valve Solenoid Functions

Use the list below to identify and describe the different functions of the solenoids in the hydraulic manifold. Each solenoid must be energized to allow function to occur.

| Solenoid | Function                            |
|----------|-------------------------------------|
| S1       | Front reel circuit                  |
| S2       | Rear reel circuit                   |
| S3       | Lift/lower front wing cutting units |
| S4       | Lift/lower center cutting unit      |
| S5       | Lift/lower rear cutting unit        |
| S6       | Lower any cutting units             |
| S7       | Lift any cutting units              |
| S8, S9   | Backlap any cutting units           |

## Operating Characteristics

### Familiarization

Before mowing grass, practice operating machine in an open area. Start and stop the engine. Operate in forward and reverse. Lower and raise cutting units and engage and disengage reels. When you feel familiar with the machine, practice operating up and down slopes at different speeds.

The brakes can be used to assist in turning the machine. However, use them carefully, especially on soft or wet grass conditions because the turf may be torn accidentally. Individual turning brakes may also be used to help maintain traction. For example, in some slope conditions, the uphill wheel slips and loses traction. If this situation occurs, depress uphill turn pedal gradually and intermittently until the uphill wheel stops slipping, thus, increasing traction on the downhill wheel.



### Warning



**When operating the machine, always use the seat belt and ROPS together.**

### Warning System

If a warning light comes on during operation, stop the machine immediately and correct the problem before continuing operation. Serious damage could occur if the machine is operated with a malfunction.

### Mowing

Start engine and move throttle to FAST so engine is running at maximum speed. Move the ENABLE/DISABLE switch to ENABLE and use the LOWER MOW/RAISE lever to control the cutting units (front cutting units are timed to lower before the rear cutting units). To move forward and cut grass, press traction pedal forward.

### Transport

Move the ENABLE/DISABLE switch to joy stick DISABLE and raise the cutting units to the transport position. Be careful when driving between objects so you do not accidentally damage the machine or cutting units. Use extra care when operating machine on slopes. Drive slowly and avoid sharp turns on slopes to prevent roll overs. The cutting units should be lowered when going downhill for steering control.

# LOGIC GRID

RM 5200—D  
RM 5400—D

X=CLOSED, O=OPEN, P=OUTPUT ON,  
KEY: M=MOMENTARILY CLOSED,  
A=OUTPUT ON IF REELS WERE PREVIOUSLY RUNNING

| RM 5200—D<br>RM 5400—D              |  | INPUTS |   |           |                    |               |                     |   |         |                |                    |                  |                 |                |    |    |    |    | OUTPUTS |              |    |                  |                    |         |      |      |      |      |      |                  |       |       |          |            |  |
|-------------------------------------|--|--------|---|-----------|--------------------|---------------|---------------------|---|---------|----------------|--------------------|------------------|-----------------|----------------|----|----|----|----|---------|--------------|----|------------------|--------------------|---------|------|------|------|------|------|------------------|-------|-------|----------|------------|--|
| ACTIONS                             |  | 0      | 1 | 2 Key Run | 3 Traction Neutral | 4 Seat Switch | 5 High Coolant Temp | 6 | 7 Raise | 8 Enable Reels | 9 Front Units Down | 10 Backlap Front | 11 Backlap Rear | 12 Lower / Mow | 13 | 14 | 15 | 16 | 17      | A0 Start Key | A1 | T Timer Involved | 0 Diagnostic Light | 1 S8,S9 | 2 S2 | 3 S3 | 4 S4 | 5 S5 | 6 S6 | 7 ETR Hold / Alt | 10 S1 | 11 S7 | 12 Start | 13 Preheat |  |
| 0) Controller OK                    |  |        |   | X         |                    |               |                     |   |         |                |                    |                  |                 |                |    |    |    |    |         |              |    |                  | P                  |         |      |      |      |      |      |                  |       |       |          |            |  |
| 1) Preheat                          |  |        |   | X         |                    |               |                     |   |         |                |                    |                  |                 |                |    |    |    |    |         |              |    | T6               | P                  |         |      |      |      |      |      |                  |       |       | P        |            |  |
| 2) Start                            |  |        |   |           | X                  |               |                     |   | O       | O              |                    |                  |                 | O              |    |    |    |    |         | X            |    |                  | P                  |         |      |      |      |      |      |                  |       | P     | P        |            |  |
| 3) Run (No operator)                |  |        |   | X         | X                  |               | O                   |   |         |                |                    |                  |                 |                |    |    |    |    |         |              |    |                  | P                  |         |      |      |      |      |      | P                |       |       |          |            |  |
| Run (with operator)                 |  |        |   | X         | O                  | X             | O                   |   |         |                |                    |                  |                 |                |    |    |    |    |         |              |    |                  | P                  |         |      |      |      |      |      | P                |       |       |          |            |  |
| 4) Lower (To turn around)           |  |        |   | X         |                    |               |                     |   | O       | O              | O                  | O                | O               | X              |    |    |    |    |         |              |    |                  | P                  |         |      | P    |      |      | P    |                  |       |       |          |            |  |
| Lower (All units when disabled)     |  |        |   | X         |                    |               |                     |   | O       | O              | X                  | O                | O               | X              |    |    |    |    |         |              |    |                  | P                  |         |      | P    | P    | P    | P    |                  |       |       |          |            |  |
| Lower (All units when enabled)      |  |        |   | X         |                    | X             |                     |   | O       | X              | O                  | O                | O               | X              |    |    |    |    |         |              |    |                  | P                  |         |      | P    | P    |      | P    |                  |       |       |          |            |  |
| Lower / Mow—Front                   |  |        |   | X         |                    | X             |                     |   | O       | X              | X                  | O                | O               | M              |    |    |    |    |         |              |    | T1               | P                  |         |      | P    | P    |      | P    |                  | P     |       |          |            |  |
| Lower / Mow—Front & Rear            |  |        |   | X         |                    | X             |                     |   | O       | X              | X                  | O                | O               | X              |    |    |    |    |         |              |    | T2               | P                  |         | P    | P    | P    | P    | P    |                  | P     |       |          |            |  |
| 5) Mow                              |  |        |   | X         |                    | X             |                     |   | O       | X              | X                  | O                | O               | M              |    |    |    |    |         |              |    |                  | P                  |         | P    |      |      |      |      |                  | P     |       |          |            |  |
| 6) Raise (transport)                |  |        |   | X         |                    |               |                     |   | X       | O              |                    | O                | O               | O              |    |    |    |    |         |              |    |                  | P                  |         |      | P    | P    | P    |      |                  |       | P     |          |            |  |
| Raise (To turn around front)        |  |        |   | X         |                    | X             |                     |   | M       | X              | X                  | O                | O               | O              |    |    |    |    |         |              |    | T3               | P                  |         | A    | P    | P    |      |      |                  | P     |       |          |            |  |
| Raise (To turn around front & rear) |  |        |   | X         |                    | X             |                     |   | X       | X              | X                  | O                | O               | O              |    |    |    |    |         |              |    |                  | P                  |         |      | P    | P    | P    |      |                  | P     |       |          |            |  |
| Raise (To turn around front & rear) |  |        |   | X         |                    | X             |                     |   | X       | X              | O                  | O                | O               | O              |    |    |    |    |         |              |    | T5               | P                  |         |      |      | P    | P    |      |                  | P     |       |          |            |  |
| 7) Backlap Front                    |  |        |   | X         | X                  |               |                     |   | O       | X              | X                  | X                | O               | M              |    |    |    |    |         |              |    | T2               | P                  | P       |      | P    | P    | P    | P    |                  | P     |       |          |            |  |
|                                     |  |        |   | X         | X                  |               |                     |   | O       | X              | X                  | X                | O               |                |    |    |    |    |         |              |    |                  | P                  | P       |      |      |      |      |      |                  | P     |       |          |            |  |
| 8) Backlap Rear                     |  |        |   | X         | X                  |               |                     |   | O       | X              | X                  | O                | X               | M              |    |    |    |    |         |              |    | T2               | P                  | P       | P    | P    | P    | P    | P    |                  |       |       |          |            |  |
|                                     |  |        |   | X         | X                  |               |                     |   | O       | X              | X                  | O                | X               |                |    |    |    |    |         |              |    |                  | P                  | P       | P    |      |      |      |      |                  |       |       |          |            |  |

## TIMERS

T1= .5 sec  
T2= 5.0 sec  
T3= .9 sec  
T4= .1 sec  
T5= .9 sec  
T6= 6 sec



# Maintenance

**Note:** Determine the left and right sides of the machine from the normal operating position.

**Important** Refer to your engine operator's manual for additional maintenance procedures.

## Recommended Maintenance Schedule

| Maintenance Service Interval                        | Maintenance Procedure  |
|---|--|
| After first 10 hours                                | <ul style="list-style-type: none"> <li>• Check the fan and alternator belt tension.</li> <li>• Torque the wheel lug nuts.</li> <li>• Change the transmission fluid.</li> <li>• Replace the transmission filter.</li> </ul>   |
| After first 50 hours                                | <ul style="list-style-type: none"> <li>• Replace the engine oil filter.</li> <li>• Check the engine RPM (idle and full throttle).</li> </ul>   |
| Every 50 hours                                      | <ul style="list-style-type: none"> <li>• Check the battery fluid level.</li> <li>• Check the battery cable connections.</li> <li>• Lubricate all grease fittings.</li> <li>• Change the engine oil.</li> <li>• Inspect the air filter, dust cup, and baffle.</li> </ul>  |
| Every 100 hours                                     | <ul style="list-style-type: none"> <li>• Check the fan and alternator belt tension.</li> <li>• Replace the engine oil filter.</li> <li>• Inspect the cooling system hoses.</li> </ul>  |
| Every 200 hours                                     | <ul style="list-style-type: none"> <li>• Torque the wheel lug nuts.</li> <li>• Drain moisture from the hydraulic tank.</li> <li>• Drain moisture from the fuel tank.</li> <li>• Check the reel bearing preload.</li> <li>• Lubricate the front axle bearings.</li> </ul>   |
| Every 400 hours                                     | <ul style="list-style-type: none"> <li>• Service the air cleaner (when the indicator shows red).</li> <li>• Replace the fuel/water separator filter.</li> <li>• Replace the fuel filter.</li> <li>• Inspect the traction linkage movement.</li> <li>• Check the engine RPM (idle and full throttle).</li> </ul>  |
| Every 800 hours                                     | <ul style="list-style-type: none"> <li>• Change the hydraulic filter.</li> <li>• Change the transmission fluid.</li> <li>• Replace the transmission filter.</li> <li>• Check rear wheel toe-in.</li> <li>• Pack the bearings to both rear wheels (2WD).</li> <li>• Change the rear axle lubricant (4WD).</li> <li>• Adjust the valves (Kubota diesel engine).</li> </ul> |
| Every 1600 hours or 2 years, whichever occurs first | <ul style="list-style-type: none"> <li>• Replace all moving hoses.</li> <li>• Replace the interlock safety switches.</li> <li>• Flush/replace the cooling system fluid.</li> <li>• Drain/flush the fuel tank.</li> <li>• Drain/flush the hydraulic tank.</li> </ul>  |

# Daily Maintenance Checklist

Duplicate this page for routine use.

| Maintenance Check Item                             | For the week of: |       |      |        |      |      |      |
|--|------------------|-------|------|--------|------|------|------|
|  | Mon.             | Tues. | Wed. | Thurs. | Fri. | Sat. | Sun. |
| Check safety interlock operation.                  |                  |       |      |        |      |      |      |
| Check brake operation.                             |                  |       |      |        |      |      |      |
| Check engine oil and fuel level.                   |                  |       |      |        |      |      |      |
| Drain the water/fuel separator.                    |                  |       |      |        |      |      |      |
| Check the air filter restriction indicator.        |                  |       |      |        |      |      |      |
| Check the radiator and screen for debris.          |                  |       |      |        |      |      |      |
| Check unusual engine noises. <sup>1</sup>          |                  |       |      |        |      |      |      |
| Check unusual operating noises.                    |                  |       |      |        |      |      |      |
| Check the transmission oil level.                  |                  |       |      |        |      |      |      |
| Check the hydraulic system oil level.              |                  |       |      |        |      |      |      |
| Check the hydraulic filter indicator. <sup>2</sup> |                  |       |      |        |      |      |      |
| Check hydraulic hoses for damage.                  |                  |       |      |        |      |      |      |
| Check for fluid leaks.                             |                  |       |      |        |      |      |      |
| Check the tire pressure.                           |                  |       |      |        |      |      |      |
| Check instrument operations.                       |                  |       |      |        |      |      |      |
| Check the reel-to-bedknife adjustment.             |                  |       |      |        |      |      |      |
| Check the height-of-cut adjustment.                |                  |       |      |        |      |      |      |
| Check the cutting units shear pin.                 |                  |       |      |        |      |      |      |
| Lubricate all grease fittings. <sup>3</sup>        |                  |       |      |        |      |      |      |
| Touch up damaged paint.                            |                  |       |      |        |      |      |      |

<sup>1</sup>Check the glow plugs and injector nozzles if excess smoke or rough running is noted.

<sup>2</sup>Check with the engine running and the oil at operating temperature.

<sup>3</sup>Grease immediately after **every** washing, regardless of the interval listed.

## Notation for Areas of Concern

| Inspection performed by: |      |             |
|--------------------------|------|-------------|
| Item                     | Date | Information |
| 1                        |      |             |
| 2                        |      |             |
| 3                        |      |             |
| 4                        |      |             |
| 5                        |      |             |
| 6                        |      |             |
| 7                        |      |             |
| 8                        |      |             |

# Service Interval Chart

## REELMASTER 5200-D 5400-D / 5500-D

### QUICK REFERENCE AID

CHECK/SERVICE (daily)

1. OIL LEVEL, ENGINE

2. OIL LEVEL, TRANSMISSION

3. OIL LEVEL, HYDRAULIC TANK

4. COOLANT LEVEL, RADIATOR

5. FUEL /WATER SEPARATOR

6. PRECLEANER -- AIR CLEANER

7. RADIATOR SCREEN


8. BRAKE FUNCTION

9. TIRE PRESSURE


10. BATTERY

11. BELTS (FAN, ALT.)


GREASING -- SEE OPERATOR'S MANUAL

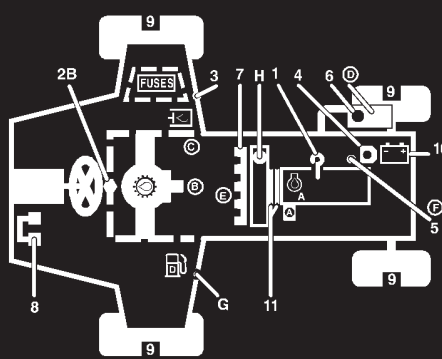

#### FLUID SPECIFICATIONS/CHANGE INTERVALS

| SEE OPERATOR'S MANUAL FOR INITIAL CHANGES. | FLUID TYPE                  | CAPACITY   | CHANGE INTERVAL         |               | FILTER PART NO.   |  |
|--|-----------------------------|------------|-------------------------|---------------|---|--|
|  |                             |            | FLUID                   | FILTER        |   |  |
| A. ENGINE OIL                              | SAE 10W-30CD                | 4.0 QTS.   | 50 HRS.                 | 100 HRS.      |  |  |
| B. TRANSMISSION OIL                        | MOBIL 424                   | 5 QTS.*    | 800 HRS.                | 800 HRS.      |   |  |
| C. HYD. CIRCUIT OIL                        | MOBIL 424                   | 8.5 GALS.* | 800 HRS.                | SEE INDICATOR |   |  |
| D. AIR CLEANER                             |                             |            |                         | 400 HRS.      |   |  |
| E. FILTER, IN-LINE FUEL                    |                             |            |                         | 400 HRS.      |   |  |
| F. WATER SEPARATOR                         |                             |            |                         | 400 HRS.      |   |  |
| G. FUEL TANK                               | NO. 2-Diesel                | 10 GALS.   | Drain and flush, 2 yrs. |               |   |  |
| H. COOLANT                                 | 50/50 Ethylene glycol/water | 9.6 QTS.   | Drain and flush, 2 yrs. |               |   |  |


\* INCLUDING FILTER



### Caution

If you leave the key in the ignition switch, someone could accidentally start the engine and seriously injure you or other bystanders.

Remove the key from the ignition switch and lower the cutting units to the ground before servicing or making adjustments to the machine.



## Greasing the Bearing and Bushings

The machine has grease fittings that must be lubricated regularly with No. 2 General Purpose Lithium Base Grease. If machine is operated under normal conditions, lubricate all bearings and bushings after every 50 hours of operation. Lubricate bearings and bushings immediately **after every** washing, regardless of the interval listed.

The grease fitting locations and quantities are: Engine Drive shaft (3), (Fig. 38); Cutting unit carrier frame and pivot (2 ea.), (Fig. 39); Lift arm pivots (5), Drive shaft clutch (1) (Fig. 40); Rear axle tie rod (2), Steering cylinder ball joints (2), Axle steering pivots (2) Rear axle pivot (1) (Fig. 41); Traction control linkage at transmission (1),

Drive shaft support bearing (1), Rear axle drive shaft (3) (Fig. 42); Brake pedal (1) (Fig. 43); Lift cylinders (5) (Fig. 44) and Fan shaft (Fig. 45).

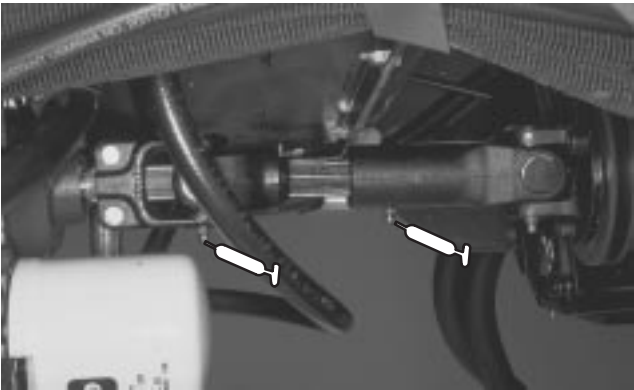


Figure 38

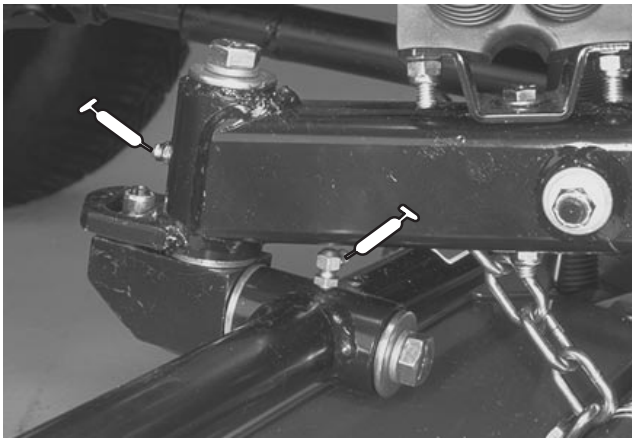


Figure 39

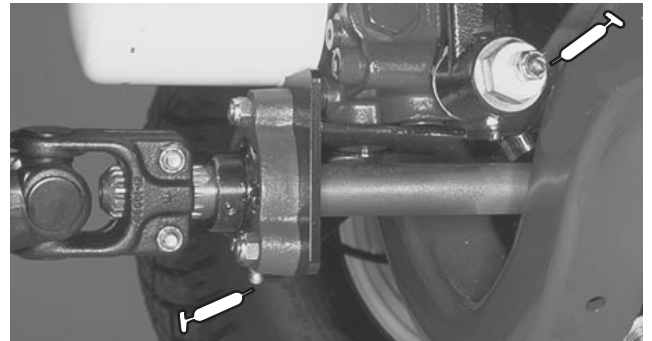


Figure 42

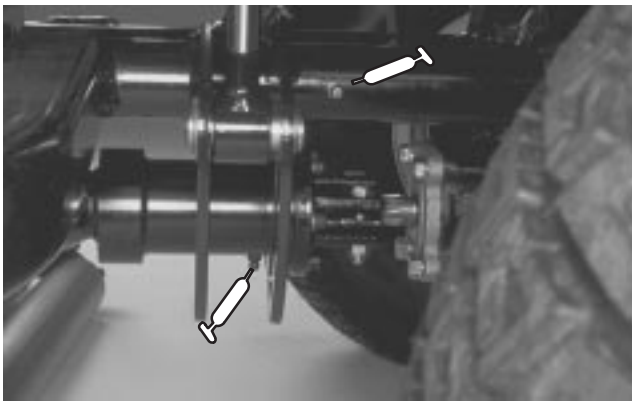


Figure 40



Figure 43


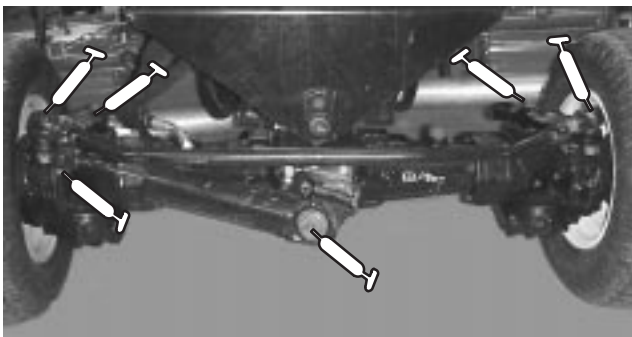



Figure 41



Figure 44

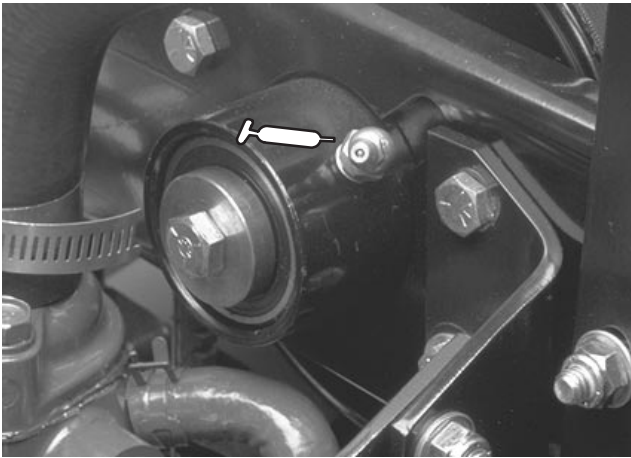

**Figure 45**

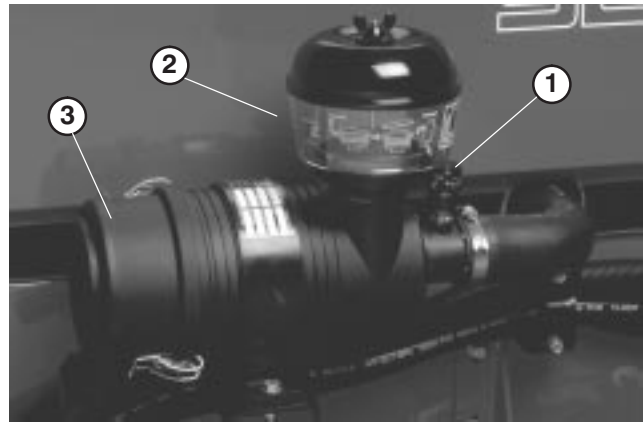

**Figure 46**

- |                          |             |
|--------------------------|-------------|
| 1. Air cleaner indicator | 3. Dust cup |
| 2. Precleaner bowl       |             |

## Servicing the Air Cleaner

### General Air Cleaner Maintenance

1. Check air cleaner body for damage which could possibly cause an air leak. Replace a damaged air cleaner body.
2. Service the air cleaner filters whenever air cleaner indicator (Fig. 46) shows red or every 400 hours (more frequently in extreme dusty or dirty conditions). Do not over service air filter.
3. Be sure cover is sealing around air cleaner body.

### Servicing the Precleaner Bowl


Normally, inspect precleaner bowl daily. When conditions are extremely dusty and dirty, inspect more frequently. Do not let dust or debris build up above level marks on precleaner bowl.

1. Remove thumb screw and separate cover from precleaner bowl (Fig. 46).
2. Empty precleaner bowl and wipe clean.
3. Assemble and install precleaner bowl, cover, and thumb screw.

**Note:** When operating machine in extremely dusty conditions, an optional extension tube (Toro Part No. 43-3810), which raises precleaner bowl above hood, thus, lengthening the time between precleaner bowl servicing, is available from your local authorized Toro Distributor.

### Servicing the Filter Element

1. Release latches securing air cleaner cover to air cleaner body. Separate cover from body. Clean inside of air cleaner cover.
2. Gently slide filter element out of air cleaner body (Fig. 47) to reduce the amount of dust dislodged. Avoid knocking filter against air cleaner body.

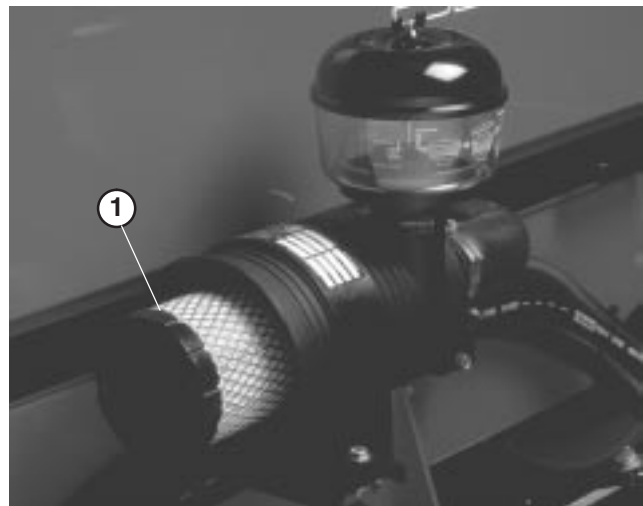

**Figure 47**

1. Filter element
3. Inspect filter element and discard if damaged. Do not wash or reuse a damaged filter.

#### 4. Washing Method

- A. Prepare a solution of filter cleaner and water and soak filter element about 15 minutes. Refer to directions on filter cleaner carton for complete information.
- B. After soaking filter for 15 minutes, rinse it with clear water. Maximum water pressure must not exceed 40 psi to prevent damage to the filter element. Rinse filter from clean side to dirty side.
- C. Dry filter element using warm, flowing air (160°F max), or allow element to air-dry. Do not use a light bulb to dry the filter element because damage could result.


#### 5. Compressed Air Method

- A. Blow compressed air from inside to the outside of dry filter element. Do not exceed 40 psi to prevent damage to the element.
  - B. Keep air hose nozzle at least 2 in. from filter and move nozzle up and down while rotating the filter element. Inspect for holes and tears by looking through the filter toward a bright light.
6. Inspect new filter for shipping damage. Check sealing end of filter. Do not install a damaged filter.
  7. Insert new filter properly into air cleaner body. Make sure filter is sealed properly by applying pressure to outer rim of filter when installing. Do not press on flexible center of filter.
  8. Install cover and secure latches.
  9. Reset indicator (Fig. 46) if showing red.

## Engine Oil and Filter

Change oil and filter initially after the first 50 hours of operation, thereafter change oil every 50 hours and filter every 100 hours.

1. Remove drain plug (Fig. 48) and let oil flow into drain pan. When oil stops, install drain plug.

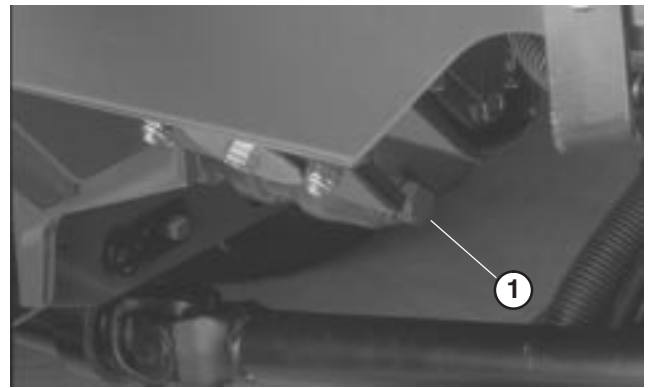

**Figure 48**

1. Engine oil drain plug

2. Remove oil filter (Fig. 49). Apply a light coat of clean oil to the new filter seal before screwing it on. **Do not over-tighten.**



**Figure 49**

1. Engine oil filter

3. Add oil to crankcase; refer to Checking the Engine Oil, page 18.

## Servicing the Fuel System

### Fuel Tank

Drain and clean fuel tank every 2 years. Also, drain and clean tank if fuel system becomes contaminated or if machine is to be stored for an extended period. Use clean fuel to flush out the tank.

### Fuel Lines and Connections

Check lines and connections every 400 hours or yearly, whichever comes first. Inspect for deterioration, damage, or loose connections.



## Fuel Filter/Water Separator

Drain water or other contaminants from fuel filter / water separator (Fig. 50) daily.

1. Locate fuel filter, under hydraulic tank, and place a clean container under it.
2. Loosen drain plug on bottom of filter canister. Tighten plug after draining.

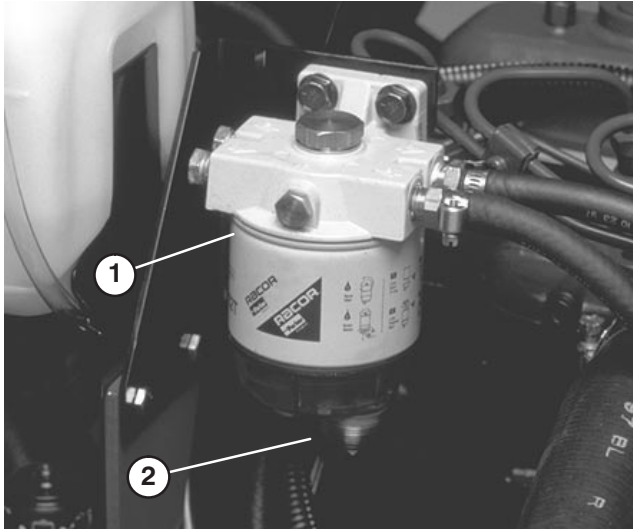


Figure 50

1. Fuel filter/water separator      2. Drain plug

Replace filter canister after every 400 hours of operation.



1. Clean area where filter canister mounts.
2. Remove filter canister and clean mounting surface.
3. Lubricate gasket on filter canister with clean oil.
4. Install filter canister by hand until gasket contacts mounting surface, then rotate an additional 1/2 turn.

## Replacing the Fuel Pre Filter

Replace the fuel pre filter after every 400 operating hours or yearly, whichever occurs first.

1. Remove screw securing filter to frame rail.
2. Clamp both fuel lines that connect to the fuel filter so fuel cannot drain when lines are removed.

3. Loosen the hose clamps at both ends of the filter and pull fuel lines off filter.
4. Slide hose clamps onto ends of fuel lines. Push fuel lines onto fuel filter and secure them with hose clamps. Be sure arrow on side of filter points toward the injection pump.

**Danger**

**Under certain conditions, diesel fuel and fuel vapors are highly flammable and explosive. A fire or explosion from fuel can burn you and others and can cause property damage.**

- Use a funnel and fill the fuel tank outdoors, in an open area, when the engine is off and is cold. Wipe up any fuel that spills.
- Do not fill the fuel tank completely full. Add fuel to the fuel tank until the level is 1/4 to 1/2 in. (6 to 13 mm) below the bottom of the filler neck. This empty space in the tank allows the fuel to expand.
- Never smoke when handling fuel, and stay away from an open flame or where fuel fumes may be ignited by a spark.
- Store fuel in a clean, safety-approved container and keep the cap in place.

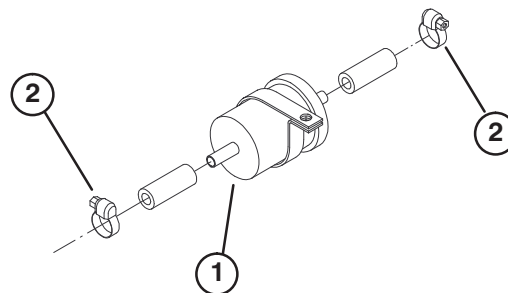


Figure 51


1. Fuel filter      2. Hose clamps

## Bleeding Air from the Injectors

**Note:** This procedure should be used only if fuel system has been purged of air through normal priming procedures and engine will not start; refer to Bleeding the Fuel System, page 23.



1. Loosen the pipe connection to the No. 1 nozzle and holder assembly (Fig. 52).

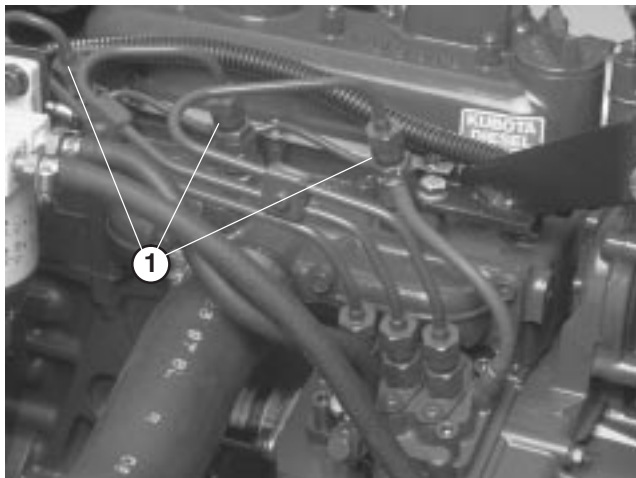

**Figure 52**

1. Fuel injectors (3)


2. Move throttle to FAST position.
3. Turn key in key switch to START position and watch fuel flow around connector. Turn key to OFF position when solid flow is observed.
4. Tighten pipe connector securely.
5. Repeat steps on remaining nozzles.

## Servicing the Engine Cooling System

### Removing Debris

Remove debris from screen, oil coolers and radiator daily, clean more frequently in dirty conditions.


1. Turn engine off and raise hood. Clean engine area thoroughly of all debris.
2. Loosen clamps and pull up on screen to slide it out of mounting tracks (Fig. 53). Clean screen thoroughly with compressed air.

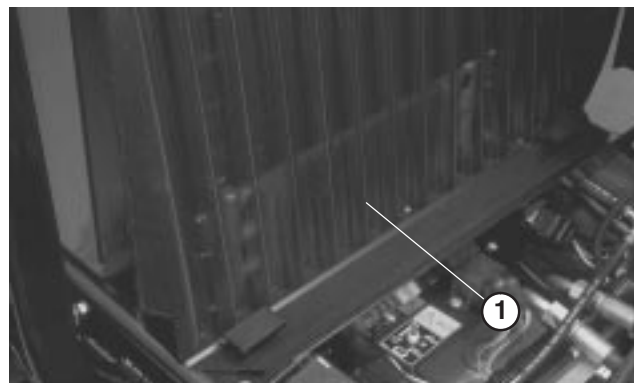

**Figure 53**

1. Screen

3. Slightly raise oil coolers and pivot forward (Fig. 54). Clean both sides of oil coolers and radiator area thoroughly with compressed air. Pivot oil coolers back into position.
4. Install screen and close hood.

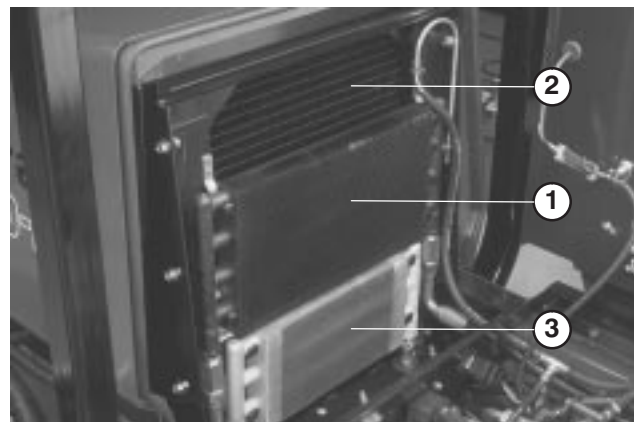

**Figure 54**

1. Reel oil cooler
2. Radiator
3. Transmission oil cooler


# Servicing the Engine Belts

Check condition and tension of all belts after first day of operation and every 100 operating hours thereafter.

## Alternator Belt

To Check Tension:

1. Open hood.
2. Check tension by depressing belt (Fig. 55) midway between alternator and crankshaft pulleys with 22 lb. of force. Belt should deflect 7/16 in. If deflection is incorrect, proceed to step 3. If correct, continue operation.

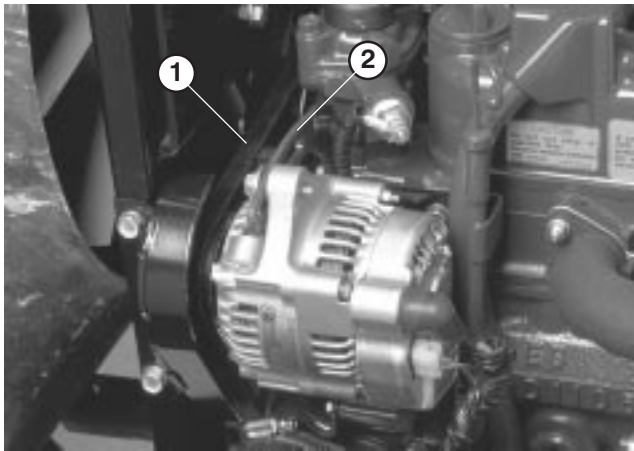


**Figure 55**

1. Alternator belt
2. Brace

3. Loosen bolt securing brace to engine (Fig. 55) and bolt securing alternator to brace.
4. Insert pry bar between alternator and engine and pry out on alternator.
5. When proper tension is achieved, tighten alternator and brace bolts to secure adjustment.

## Cooling Fan Belt

1. Loosen locknut on belt tensioner lever (Fig. 56).
2. Apply 5–10 lb. of force at end of lever to set the proper tension on the fan belt.
3. Tighten locknut to secure adjustment.

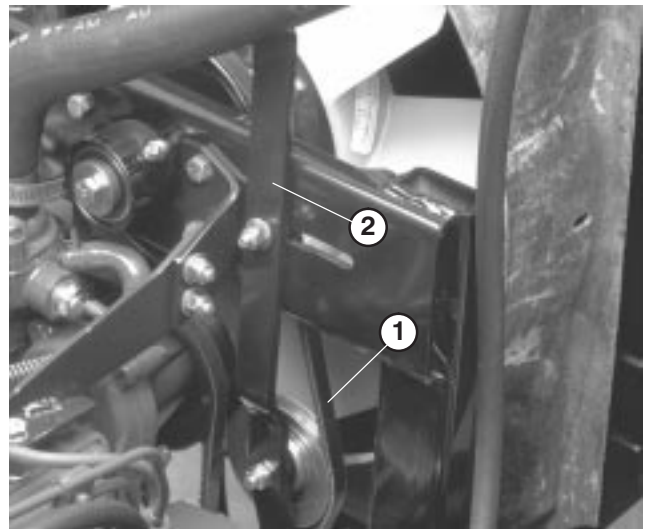

**Figure 56**

1. Cooling fan belt
2. Tensioner lever

## Adjusting the Throttle

1. Position throttle lever forward so it stops against seat base slot.
2. Loosen the throttle cable connector on the lever arm at the injection pump.
3. Hold the injection pump lever arm (Fig. 57) against the high idle stop and tighten the cable connector.

**Note:** When tightened, the cable connector must be free to swivel.

4. Torque the locknut, used to set the friction device on the throttle lever, to 40–55 in.-lb. The maximum force required to operate the throttle lever should be 20 lb.



**Figure 57**

1. Injection pump lever arm

## Changing the Hydraulic Fluid

Change hydraulic fluid after every 800 operating hours, in normal conditions. If fluid becomes contaminated, contact your local Toro distributor because the system must be flushed. Contaminated fluid looks milky or black when compared to clean oil.

1. Turn engine off and raise hood.
2. Remove drain plug from bottom of reservoir (Fig. 58) and let hydraulic fluid flow into drain pan. Reinstall and tighten plug when hydraulic fluid stops draining.

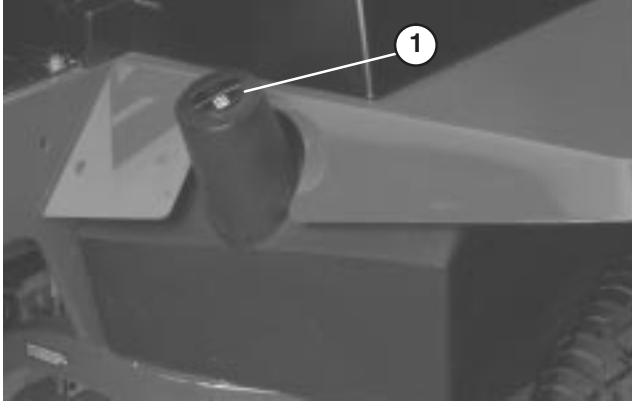


Figure 58

1. Hydraulic reservoir

3. Fill reservoir with approximately 8.5 gallons of hydraulic fluid; refer to Checking the Hydraulic Fluid, page 19.

**Important** Use only hydraulic fluids specified. Other fluids could cause system damage.

4. Install reservoir cap. Start engine and use all hydraulic controls to distribute hydraulic fluid throughout the system. Also check for leaks. Then stop the engine.
5. Check level of fluid and add enough to raise level to FULL mark on dipstick. **Do not over-fill.**

## Replacing the Hydraulic Filter

The hydraulic system filter head is equipped with a service interval indicator. With the engine running, view the indicator, it should be in the GREEN zone. When the indicator is in the RED zone, the filter element should be changed.

Use the Toro replacement filter (Part No. 75-1310).

**Important** Use of any other filter may void the warranty on some components.

1. Position machine on a level surface, lower the cutting units, stop the engine, engage the parking brakes, and remove key from ignition switch.
2. Clean area around filter mounting area (Fig. 59). Place drain pan under filter and remove filter.

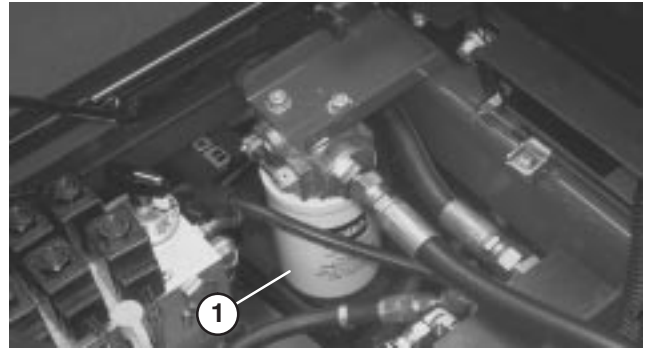


Figure 59

1. Hydraulic filter

3. Lubricate new filter gasket and fill the filter with hydraulic fluid.
4. Ensure that the filter mounting area is clean. Screw filter on until gasket contacts mounting plate. Then tighten filter one half turn.
5. Start engine and let run for about two minutes to purge air from the system. Stop the engine and check for leaks.

## Checking the Hydraulic Lines and Hoses

Daily, check hydraulic lines and hoses for leaks, kinked lines, loose mounting supports, wear, loose fittings, weather deterioration and chemical deterioration. Make all necessary repairs before operating.



### Warning



**Hydraulic fluid escaping under pressure can penetrate skin and cause injury.**

- **Make sure all hydraulic fluid hoses and lines are in good condition and all hydraulic connections and fittings are tight before applying pressure to the hydraulic system.**
- **Keep your body and hands away from pin hole leaks or nozzles that eject high pressure hydraulic fluid.**
- **Use cardboard or paper to find hydraulic leaks.**
- **Safely relieve all pressure in the hydraulic system before performing any work on the hydraulic system.**
- **Get immediate medical help if fluid is injected into skin.**


## Hydraulic System Test Ports

The test ports are used to test pressure in the hydraulic circuits. Contact your local Toro distributor for assistance.

Test Port #1 (Fig. 60) is used to assist in trouble shooting the hydraulic circuit for the front cutting units and lift cylinders.

Test Port #2 (Fig. 60) is used to assist in trouble shooting the hydraulic circuit for the rear cutting units.

Test Port #3 (not shown) is located on the rear of the hydrostatic transmission and is used to measure the charge pressure of the transmission.

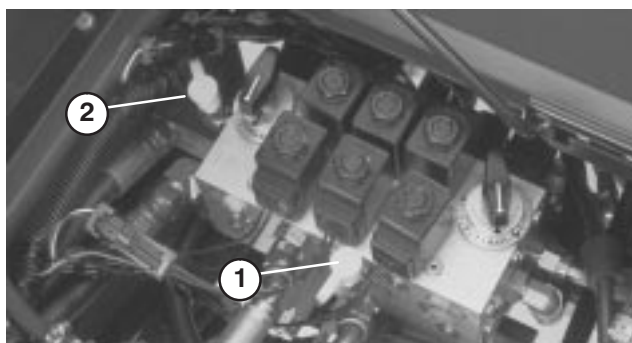

**Figure 60**

1. Test port #1

2. Test port #2


## Adjusting the Traction Drive for Neutral

The machine must not creep when traction pedal is released. If it does creep, an adjustment is required.

1. Park machine on a level surface, shut engine off, and lower cutting units to the floor. Depress only the right brake pedal and engage the parking brake.
2. Jack up left side of machine until front tire is off the shop floor. Support machine with jack stands to prevent it from falling accidentally.

**Note:** On 4 wheel drive models, left rear tire must also be off the shop floor or 4 wheel drive driveshaft must be removed.

3. Under right side of machine, loosen locknut on traction adjustment cam (Fig. 61).

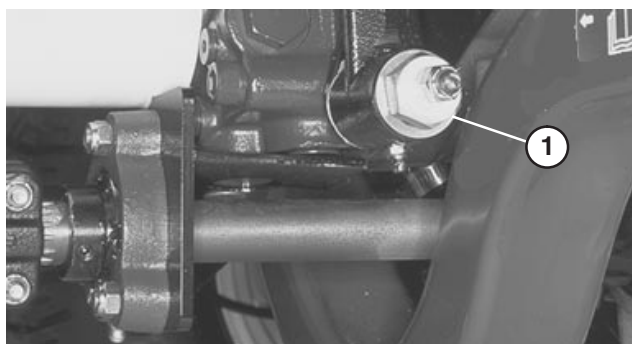

**Figure 61**

1. Traction adjustment cam



## Warning



**The engine must be running so the final adjustment of the traction adjustment cam can be performed. This could cause personal injury.**

**Keep hands, feet, face, and other body parts away from the muffler, other hot parts of the engine, and any rotating parts.**


4. Start engine and rotate cam hex in either direction until wheel ceases rotation.
5. Tighten locknut securing adjustment.
6. Stop the engine and release the right brake. Remove jack stands and lower the machine to the shop floor. Test drive the machine to make sure it does not creep.

## Adjusting the Cutting Unit Lift Rate

The cutting unit lift circuit is equipped with (3) adjustable valves used to ensure the cutting units do not raise too quickly and bang against lift stops. Adjust cutting units as follows:

### Center Cutting Unit

1. Locate valve behind access panel above operator's platform (Fig. 62).
2. Loosen setscrew on valve and rotate valve approximately 1/2 turn clockwise.
3. Verify lift rate adjustment by raising and lowering cutting unit several times. Readjust as required.
4. After desired lift rate is attained, tighten setscrew to lock adjustment.

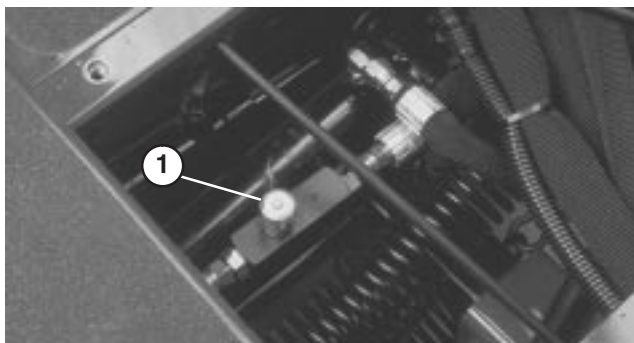


**Figure 62**

1. Center cutting unit adjustment valve

### Outside Front Cutting Units

1. Locate valve on flow divider (under foot rest) (Fig. 63).
2. Loosen setscrew on valve. Rotate valve 1/2 turn clockwise.
3. Verify lift rate adjustment by raising and lowering cutting units several times. Readjust as required.
4. After desired lift rate is attained, tighten set screw to lock adjustment.

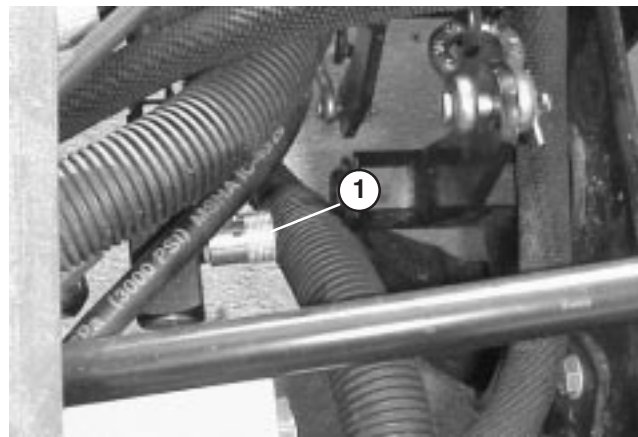


**Figure 63**

1. Outside front cutting units adjustment valve

### Rear Cutting Units

1. Raise hood and locate valve on left rear side of machine (Fig. 64).

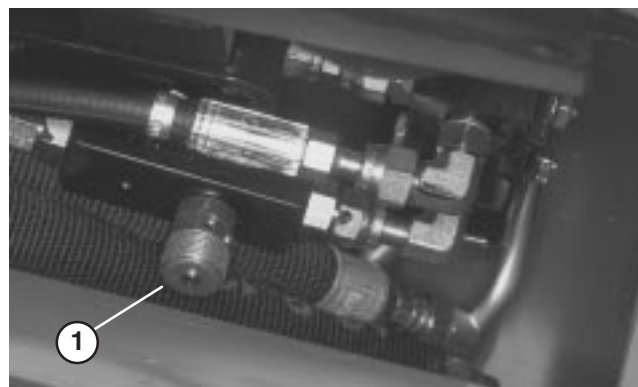

**Figure 64**

1. Rear cutting units adjustment valve
2. Loosen setscrew on valve and rotate valve approximately 1/2 turn clockwise.
3. Verify lift rate adjustment by raising and lowering cutting units several times. Readjust as required.



4. After desired lift rate is attained, tighten setscrew to lock adjustment.

## Checking and Adjusting the Traction Linkage

Due to normal wear in the control linkage and hydrostatic transmission, an increased amount of force may be required to return the transmissions to neutral. Periodically check the machine.

1. Park machine on a level surface, lower cutting units to the floor and shut engine off.
2. Connect brake pedals together with locking pin, push both pedals down and pull parking brake latch out.
3. Loosen outer hex nut securing eye bolt to spring anchor plate (Fig. 65).

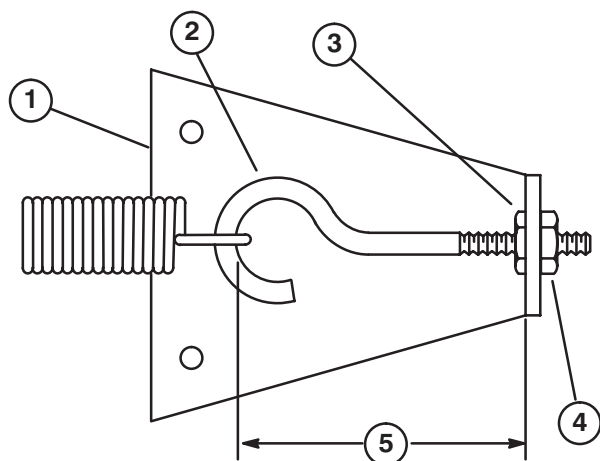


Figure 65

1. Spring anchor plate
2. Eye bolt
3. Inner locknut
4. Outer locknut
5. Shorten distance to decrease time required to stop machine.

4. Rotate clockwise until distance between inside of eye bolt loop and inside of spring anchor plate is shortened 1/8 in., as shown in Figure 65. Tighten hex nut.
5. Operate the machine and check stopping distance. Repeat procedure if required.

**Note:** Shortening the distance between inside of eye bolt loop and inside of spring anchor plate increases the pedal force on the traction pedal. Therefore, do not over adjust.

## Adjusting the Service Brakes

Adjust the service brakes when there is more than 1 inch of “free travel” of the brake pedal, or when the brakes do not work effectively. Free travel is the distance the brake pedal moves before braking resistance is felt.

1. Disengage locking pin from brake pedals so both pedals work independently of each other.
2. To reduce free travel of brake pedals, tighten the brakes by loosening the front nut on threaded end of brake cable (Fig. 66). Then tighten rear nut to move cable backward until brake pedals have 1/2 to 1 inch of free travel. Tighten front nuts after brakes are adjusted correctly.

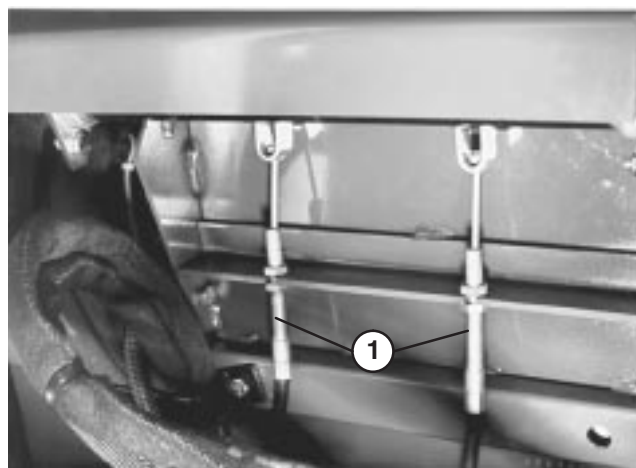


Figure 66

1. Brake cables


## Changing the Transmission Fluid

Change the transmission fluid after every 800 hours of operation, in normal conditions.

1. Position machine on a level surface, lower the cutting units, stop the engine, engage the parking brakes, and remove key from ignition switch.
2. Clean area around suction line on bottom of transmission (Fig. 67). Place drain pan under line.
3. Remove line from transmission allowing fluid to drain into drain pan.
4. Install suction line to transmission.
5. Fill with oil; refer to Checking the Transmission Fluid, page 19.



6. Before starting the engine after changing transmission fluid, disconnect the run (ETR) solenoid on the engine, and crank the engine several times for 15 seconds. This allows the charge pump to fill the transmission with fluid before the engine is started.

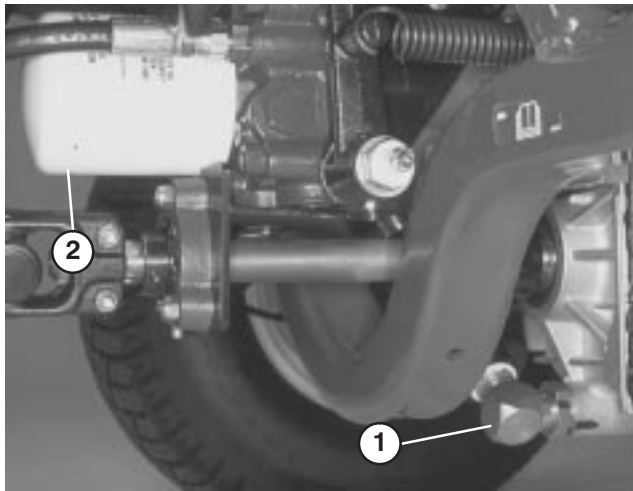

**Figure 67**

1. Transmission suction line
2. Transmission oil filter

## Replacing the Transmission Filter

Change the transmission filter after the first 10 hours of operation and every 800 hours thereafter.

Only the Toro replacement filter (Part No.75-1330) can be used in the hydraulic system.

**Important** Use of any other filter may void the warranty on some components.


1. Position machine on a level surface, lower the cutting units, stop the engine, engage the parking brakes, and remove key from ignition switch.
2. Clean area around filter mounting area (Fig. 67). Place drain pan under filter and remove filter.
3. Lubricate new filter gasket with hydraulic oil.
4. Ensure that the filter mounting area is clean. Screw filter on until gasket contacts mounting plate. Then tighten filter 1/2 turn.
5. Start engine and let run for about two minutes to purge air from the system. Stop the engine and check for leaks. Check fluid level and replenish if necessary.

## Changing the Rear Axle Lubricant

**Note:** This procedure is for models 03541 and 03544 only.

After every 800 hours of operation the oil in the rear axle must be changed.

1. Position machine on a level surface.
2. Clean area around the drain plugs (Fig. 68).
3. Remove plug allowing oil to drain into drain pans.
4. After oil is drained, apply thread locking compound on drain plug threads and reinstall in axle.
5. Fill axle with lubricant; refer to Checking the Rear Axle Lubricant, page 20.

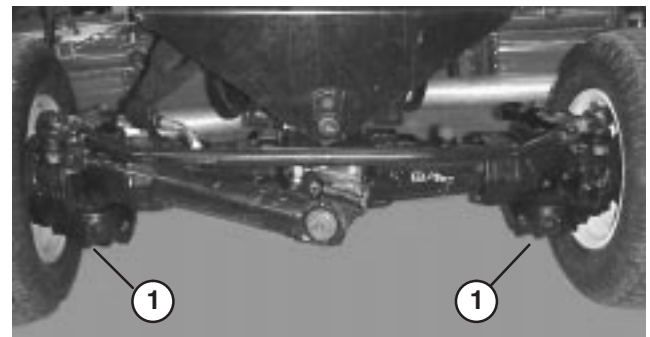

**Figure 68**


1. Drain plugs

## Adjusting Rear Wheel Toe-In

The rear wheels should have 0 to 1/8 in. toe-in when they are pointed straight ahead. To check toe-in, measure the center-to-center distance, at axle height, in front and rear of steering tires. If toe-in is not within specifications, an adjustment is required. After every 800 operating hours or annually, check rear wheel toe-in.

### Models 03540 and 03543

1. Rotate the steering wheel so the rear wheels are straight ahead.
2. Loosen the jam nuts on both tie rods (Fig. 69). Adjust both tie rods equally until center-to-center distance at front of rear wheels is 0–1/8 in. (0–3 mm) less than at the rear of the wheels.

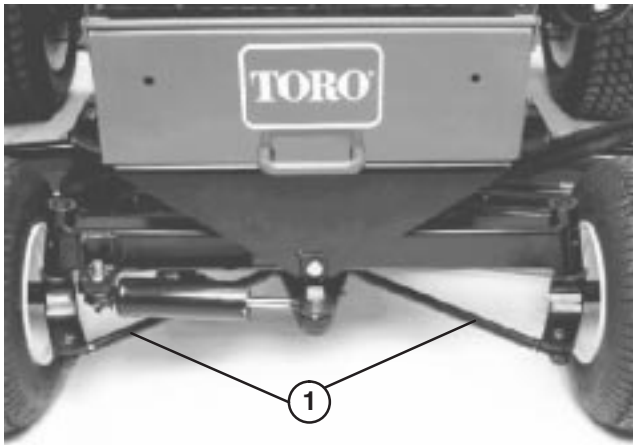


**Figure 69**

1. Tie rods

3. When toe-in is correct, tighten jam nuts against tie rods.

### Models 03541 and 03544

1. Rotate the steering wheel so the rear wheels are straight ahead.
2. Remove the cotter pin and slotted hex nut from either tie rod ball joint. Use a ball joint fork and remove the tie rod ball joint from the axle case support.
3. Loosen clamps on both ends of tie rod (Fig. 70).

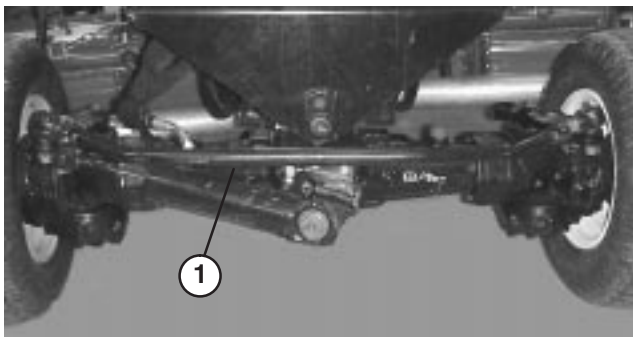

**Figure 70**

1. Tie rod

4. Rotate the detached ball joint inward or outward one (1) complete revolution. Tighten the clamp at the loose end of the tie rod.
5. Rotate the entire tie rod assembly the same direction (inward or outward) one (1) complete revolution. Tighten the clamp at the connected end of the tie rod.
6. Install the ball joint in the axle case support and tighten the slotted hex nut finger tight.

7. Measure the distance at the front and the rear of the rear wheels at axle height. The distance at the front of the rear wheels should be 0–1/8 in. (0–3 mm) less than the distance measured at the rear of the wheels.
8. Repeat steps 3 through 7 if necessary.
9. Tighten ball joint hex nut and install a new cotter pin.

## Servicing the Battery



### Warning



**Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling.**

### Important

Before welding on the machine, disconnect both cables from the battery, disconnect both wire harness plugs from the electronic control unit and the terminal connector from the alternator to prevent damage to the electrical system.



### Danger



**Battery electrolyte contains sulfuric acid which is a deadly poison and causes severe burns.**

- Do not drink electrolyte and avoid contact with skin, eyes or clothing. Wear safety glasses to shield your eyes and rubber gloves to protect your hands.
- Fill the battery where clean water is always available for flushing the skin.



### Warning



**Charging the battery produces gasses that can explode.**

**Never smoke near the battery and keep sparks and flames away from battery.**

**Note:** Check battery condition weekly or after every 50 hours of operation. Keep terminals and entire battery case clean because a dirty battery will discharge slowly. To clean the battery, wash the entire case with solution of baking soda and water. Rinse with clear water. Coat the battery posts and cable connectors with Grafo 112X (skin-over) grease (Toro Part No. 505-47) or petroleum jelly to prevent corrosion.

## Fuses

There are 4 fuses in the machines electrical system. They are located below control panel (Fig. 71 and 72).

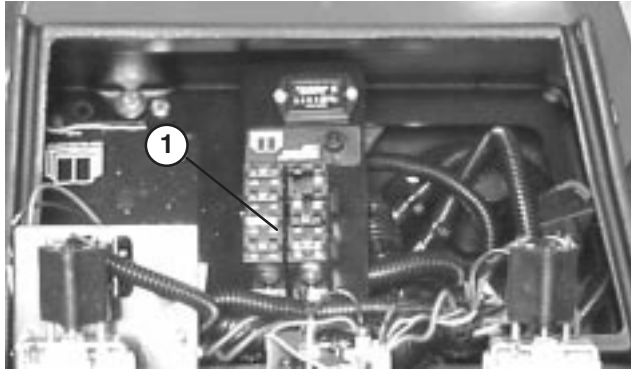


Figure 71

1. Fuses


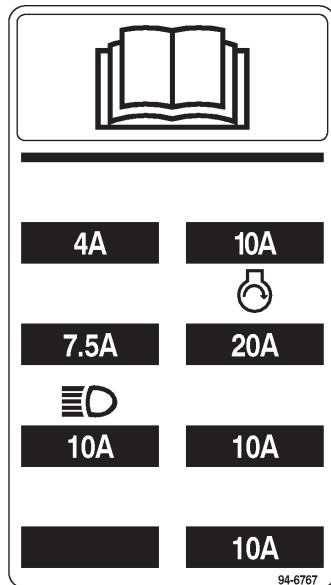


Figure 72

## Optional Lighting

**Important** If optional lighting is to be added to the traction unit, use the following schematic and part numbers to prevent damage to the traction units electrical system.

### SCHEMATIC FOR OPTIONAL LIGHTING

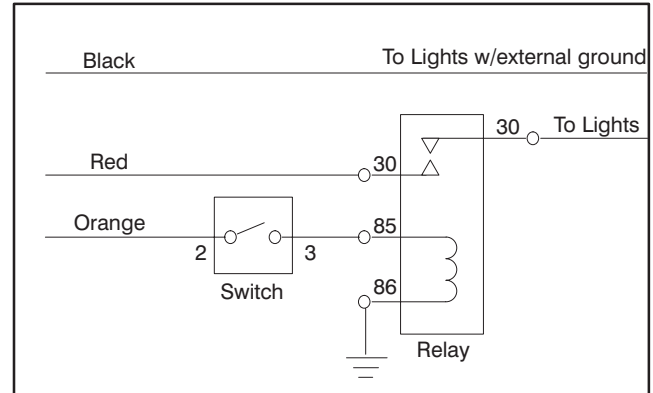

#### Switch\*

Toro Part No. 75-1010  
Honeywell Part No.  
1TL1-2

#### Relay

Toro Part No. 70-1480  
Bosch Part No.  
0-332-204

Black, red and orange wires are located in control console.

Add 10 Amp fuse to fuse block at location shown

\* Punch out in control panel provided for switch installation

**Note:** Make sure a good ground is achieved to prevent damage to traction unit.

## Backlapping the Cutting Units



### Warning



Contact with the reels or other moving parts can result in personal injury.

- Keep fingers, hands, and clothing away from the reels or other moving parts.
- Never attempt to turn the reels by hand or foot while the engine is running.

**Note:** When backlapping, the front units all operate together, and the rear units operate together.

1. Position the machine on a level surface, lower the cutting units, stop the engine, engage the parking brake, and move the Enable/Disable switch to disable position.
2. Unlock and raise the seat to expose controls.
3. Make initial reel to bedknife adjustments appropriate for backlapping on all cutting units which are to be backlapped.
4. Start engine and run at **idle speed**.



## Danger



Changing the engine speed while backlapping may cause the reels to stall.

- **Never change the engine speed while backlapping.**
- **Only backlap at idle engine speed.**

5. Set both reel speed controls to position 11. Select either front or rear on backlap switch to determine which units to backlap.



## Danger




To avoid personal injury, be certain that you are clear of the cutting units before proceeding.


6. Move Enable/Disable switch to Enable position. Move Lower Mow/Lift control forward to start backlapping operation on designated reels.
7. For the cutting units being backlapped, move the reel speed control to position 1.
8. Apply lapping compound with the long handle brush supplied with machine. Never use a short handled brush.
9. If reels stall or become erratic while backlapping, select a higher speed setting until speed stabilizes, then return reel speed to setting 1 or desired speed.
10. To make an adjustment to the cutting units while backlapping, turn reels OFF by moving the Lower Mow/Raise lever rearward; move the Enable/Disable switch to Disable and turn the engine OFF. After adjustments have been completed, repeat steps 5–9.
11. Repeat procedure for all cutting units to be backlapped.
12. When backlap operation has been completed, return the backlap switch to OFF, lower seat and tighten both locking bolts securely, and wash all lapping compound off cutting units. Adjust cutting unit reel to bedknife as needed.

**Important** If the backlap switch is not returned to OFF position after backlapping, the cutting units will not raise or function properly.

# Electrical Schematic

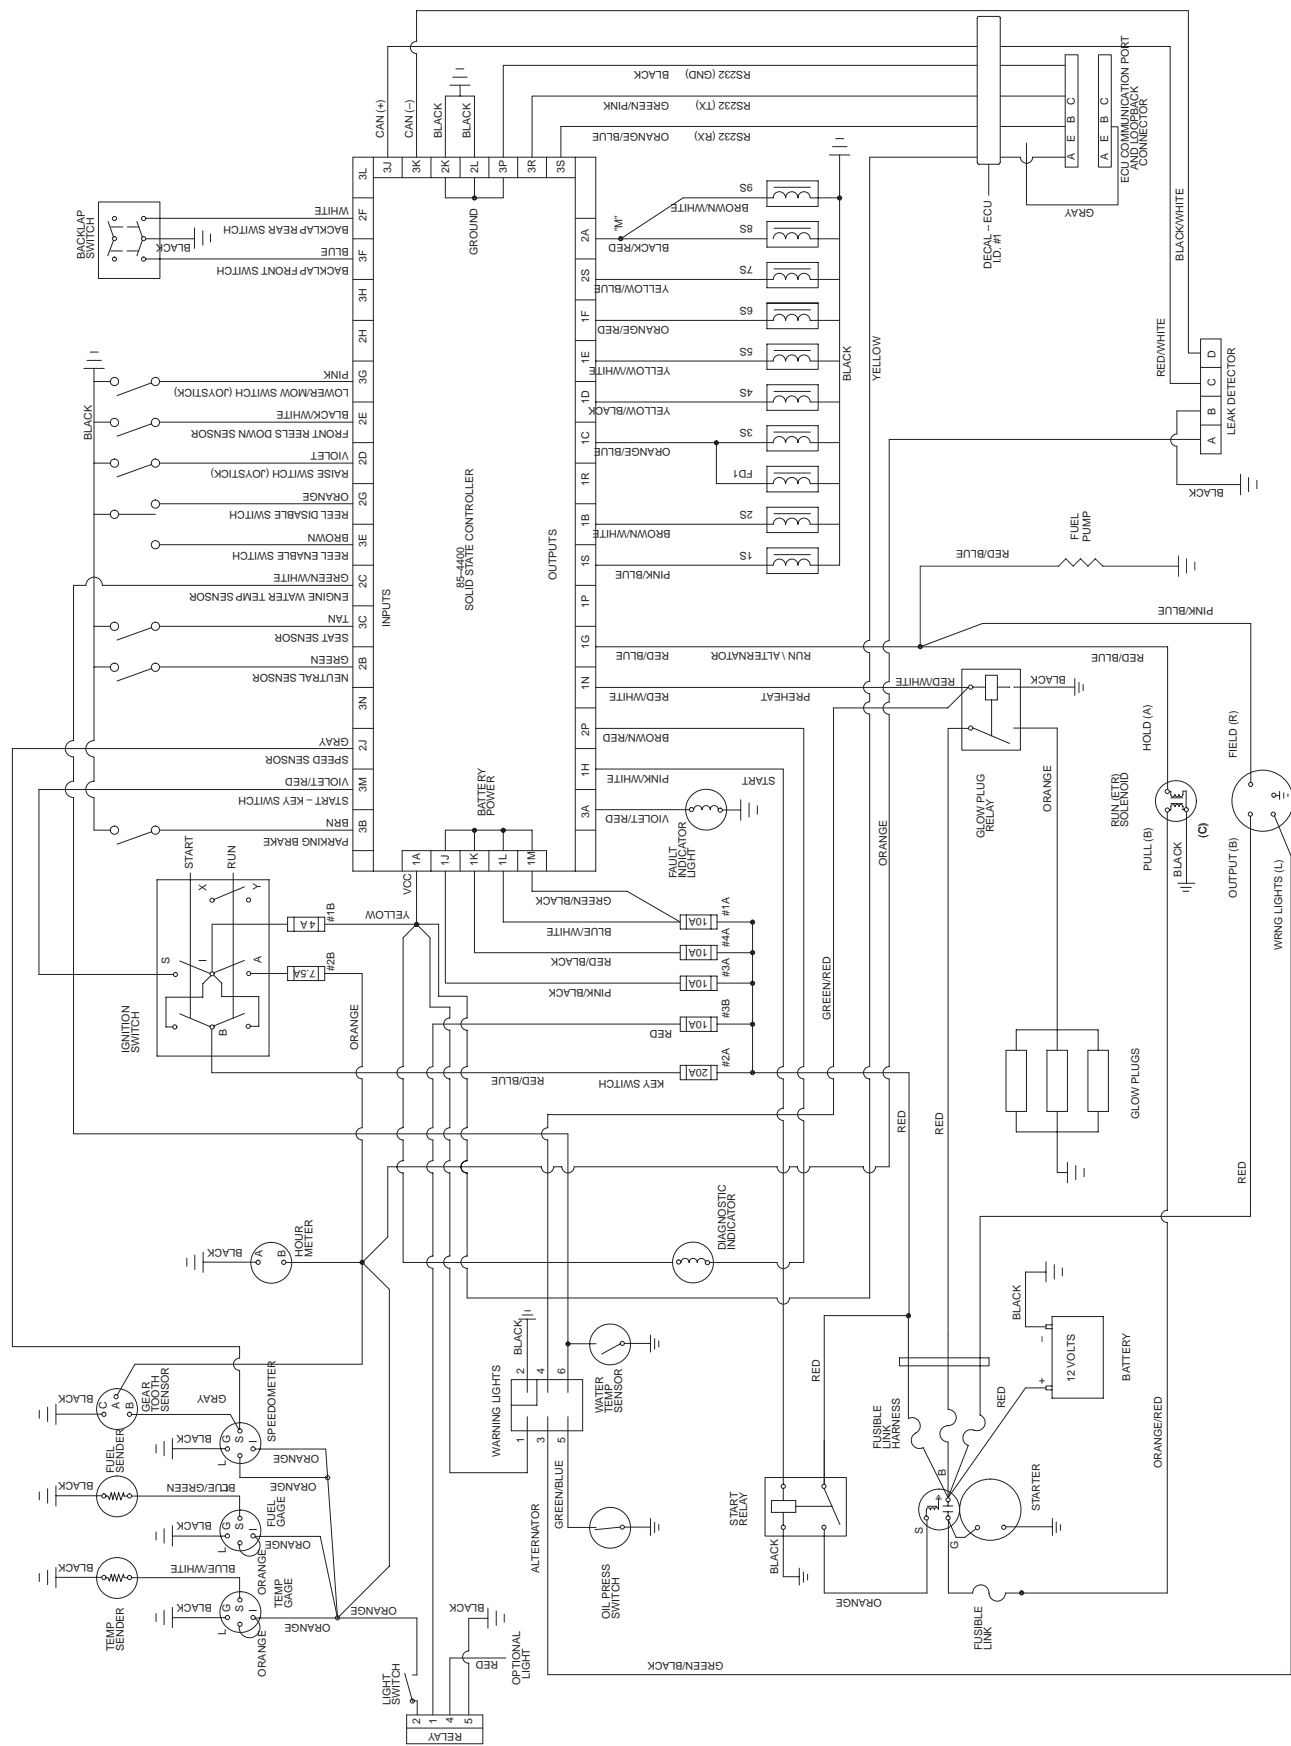

# Hydraulic Schematic

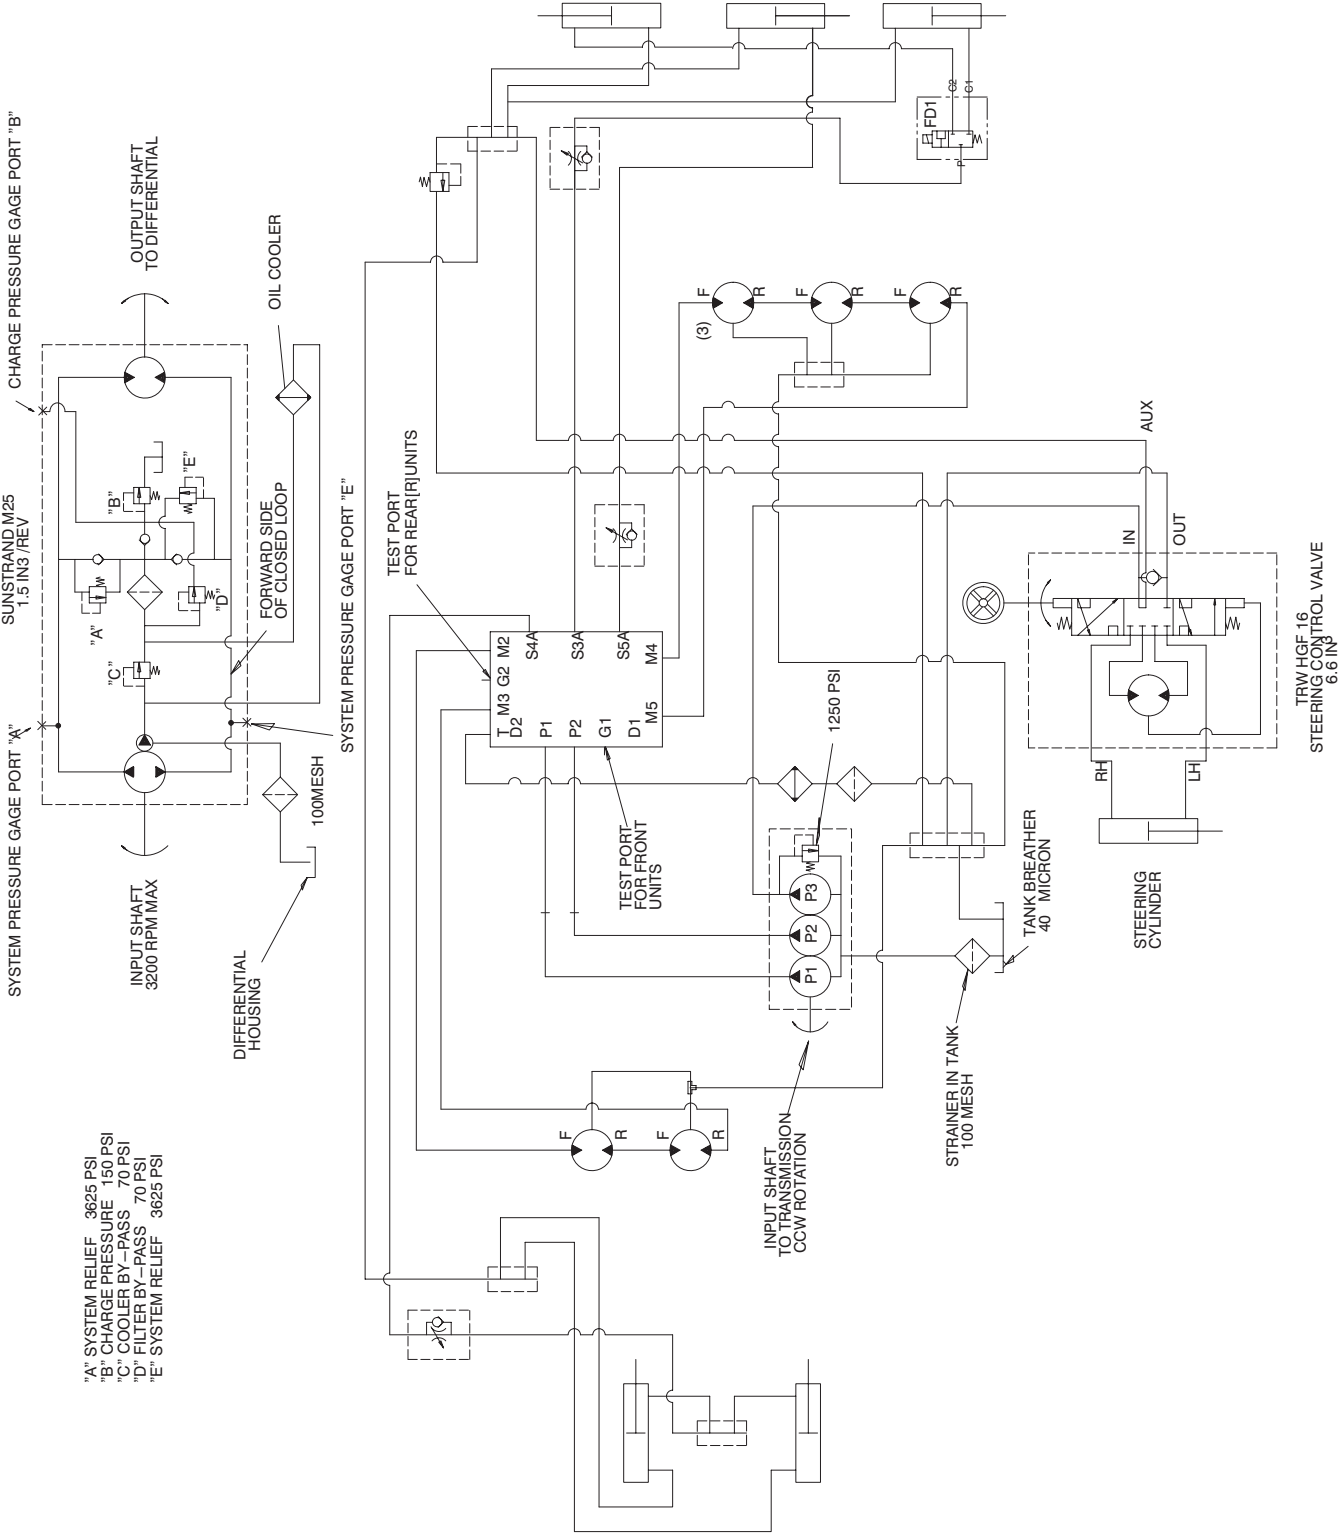



# Preparation for Seasonal Storage

## Traction Unit

1. Thoroughly clean the traction unit, cutting units and the engine.
2. Check the tire pressure. Inflate all traction unit tires to 15–20 psi.
3. Check all fasteners for looseness; tighten as necessary.
4. Grease or oil all grease fittings and pivot points. Wipe up any excess lubricant.
5. Lightly sand and use touch-up paint on painted areas that are scratched, chipped, or rusted. Repair any dents in the metal body.
6. Service the battery and cables as follows:
  - A. Remove the battery terminals from the battery posts.
  - B. Clean the battery, terminals, and posts with a wire brush and baking soda solution.
  - C. Coat the cable terminals and battery posts with Grafo 112X skin-over grease (Toro Part No. 505-47) or petroleum jelly to prevent corrosion.
  - D. Slowly recharge the battery every 60 days for 24 hours to prevent lead sulfation of the battery.

## Engine

1. Drain the engine oil from the oil pan and replace the drain plug.
2. Remove and discard the oil filter. Install a new oil filter.
3. Refill oil pan with 4 quarts of SAE 10W-30 motor oil.
4. Start the engine and run at idle speed for approximately two minutes.
5. Stop the engine.
6. Thoroughly drain all fuel from the fuel tank, lines and the fuel filter/water separator assembly.
7. Flush the fuel tank with fresh, clean diesel fuel.
8. Re-secure all fuel system fittings.
9. Thoroughly clean and service the air cleaner assembly.
10. Seal the air cleaner inlet and the exhaust outlet with weatherproof tape.
11. Check anti-freeze protection and add as needed for expected minimum temperature in your area.







## The Toro General Commercial Products Warranty

### A Two-Year Limited Warranty

#### Conditions and Products Covered

The Toro Company and its affiliate, Toro Warranty Company, pursuant to an agreement between them, jointly warrant your 1996 or newer Toro Commercial Product ("Product") purchased after January 1, 1997, to be free from defects in materials or workmanship for two years or 1500 operational hours\*, whichever occurs first. Where a warrantable condition exists, we will repair the Product at no cost to you including diagnosis, labor, parts, and transportation. This warranty begins on the date the Product is delivered to the original retail purchaser.

\* Product equipped with hour meter

#### Instructions for Obtaining Warranty Service

You are responsible for notifying the Commercial Products Distributor or Authorized Commercial Products Dealer from whom you purchased the Product as soon as you believe a warrantable condition exists.

If you need help locating a Commercial Products Distributor or Authorized Dealer, or if you have questions regarding your warranty rights or responsibilities, you may contact us at:

Toro Commercial Products Service Department  
Toro Warranty Company  
8111 Lyndale Avenue South  
Bloomington, MN 55420-1196  
952-888-8801 or 800-982-2740  
E-mail: commercial.service@toro.com

#### Owner Responsibilities

As the Product owner, you are responsible for required maintenance and adjustments stated in your operator's manual. Failure to perform required maintenance and adjustments can be grounds for disallowing a warranty claim.

#### Items and Conditions Not Covered

Not all product failures or malfunctions that occur during the warranty period are defects in materials or workmanship. This express warranty does not cover the following:

- Product failures which result from the use of non-Toro replacement parts, or from installation and use of add-on, modified, or unapproved accessories
- Product failures which result from failure to perform required maintenance and/or adjustments
- Product failures which result from operating the Product in an abusive, negligent or reckless manner
- Parts subject to consumption through use unless found to be defective. Examples of parts which are consumed, or used up, during normal Product operation include, but are not limited to, blades, reels, bedknives, tines, spark plugs, castor wheels, tires, filters, belts, etc.

#### Countries Other than the United States or Canada

Customers who have purchased Toro products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province, or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the Toro importer. If all other remedies fail, you may contact us at Toro Warranty Company.

- Failures caused by outside influence. Items considered to be outside influence include, but are not limited to, weather, storage practices, contamination, use of unapproved coolants, lubricants, additives, or chemicals, etc.
- Normal "wear and tear" items. Normal "wear and tear" includes, but is not limited to, damage to seats due to wear or abrasion, worn painted surfaces, scratched decals or windows, etc.

#### Parts

Parts scheduled for replacement as required maintenance are warranted for the period of time up to the scheduled replacement time for that part.

Parts replaced under this warranty become the property of Toro. Toro will make the final decision whether to repair any existing part or assembly or replace it. Toro may use factory remanufactured parts rather than new parts for some warranty repairs.

#### General Conditions

Repair by an Authorized Toro Distributor or Dealer is your sole remedy under this warranty.

**Neither The Toro Company nor Toro Warranty Company is liable for indirect, incidental or consequential damages in connection with the use of the Toro Products covered by this warranty, including any cost or expense of providing substitute equipment or service during reasonable periods of malfunction or non-use pending completion of repairs under this warranty. Except for the Emissions warranty referenced below, if applicable, there is no other express warranty. All implied warranties of merchantability and fitness for use are limited to the duration of this express warranty.**

Some states do not allow exclusions of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions and limitations may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**Note regarding engine warranty:** The Emissions Control System on your Product may be covered by a separate warranty meeting requirements established by the U.S. Environmental Protection Agency (EPA) and/or the California Air Resources Board (CARB). The hour limitations set forth above do not apply to the Emissions Control System Warranty. Refer to the Engine Emission Control Warranty Statement printed in your operator's manual or contained in the engine manufacturer's documentation for details.