




**Count on it.**

# Operator's Manual

## **Commercial Walk-Behind Mower** **Fixed Deck, T-Bar, Gear, with 40in TURBO** **FORCE® Cutting Unit**

**Model No. 39696—Serial No. 280000001 and Up**

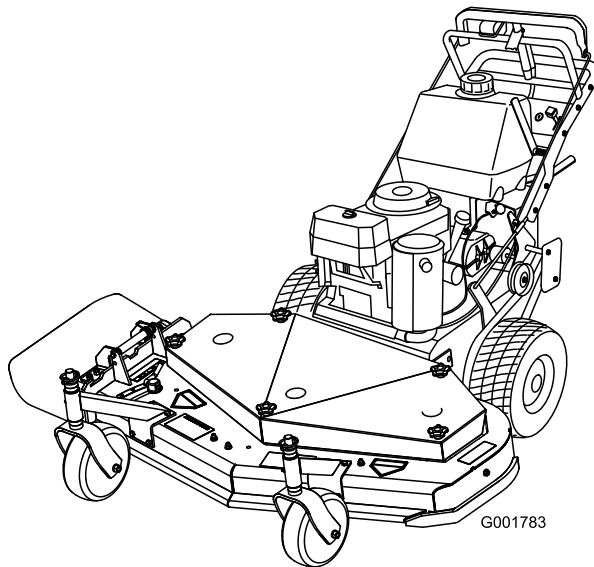

## Warning

### CALIFORNIA

#### Proposition 65 Warning

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

This spark ignition system complies with Canadian ICES-002.

**Important:** This engine is not equipped with a spark arrester muffler. It is a violation of California Public Resource Code Section 4442 to use or operate the engine on any forest-covered, brush-covered, or grass-covered land. Other states or federal areas may have similar laws.

The enclosed *Engine Owner's Manual* is supplied for information regarding the US Environmental Protection Agency (EPA) and the California Emission Control Regulation of emission systems, maintenance, and warranty. Replacements may be ordered through the engine manufacturer.

## Introduction

Read this information carefully to learn how to operate and maintain your product properly and to avoid injury and product damage. You are responsible for operating the product properly and safely.

You may contact Toro directly at [www.Toro.com](http://www.Toro.com) for product and accessory information, help finding a dealer, or to register your product.

Whenever you need service, genuine Toro parts, or additional information, contact an Authorized Service Dealer or Toro Customer Service and have the model and serial numbers of your product ready. Figure 1 identifies the location of the model and serial numbers on the product. Write the numbers in the space provided.

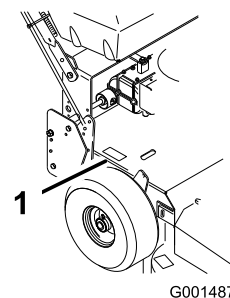


Figure 1

1. Model and serial number location

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

This manual identifies potential hazards and has safety messages identified by the safety alert symbol (Figure 2), which signals a hazard that may cause serious injury or death if you do not follow the recommended precautions.



Figure 2

1. Safety alert symbol

This manual uses 2 other words to highlight information. **Important** calls attention to special mechanical information and **Note** emphasizes general information worthy of special attention.

## Contents

|                                                         |    |
|---------------------------------------------------------|----|
| Introduction.....                                       | 2  |
| Safety .....                                            | 3  |
| Safe Operating Practices .....                          | 3  |
| Toro Mower Safety .....                                 | 4  |
| Slope Chart .....                                       | 6  |
| Safety and Instructional Decals .....                   | 7  |
| Setup.....                                              | 10 |
| 1 Checking the Fluids and Tire Pressure .....           | 10 |
| 2 Reading the Manual and Viewing the Safety Video ..... | 10 |
| Product Overview .....                                  | 11 |
| Controls .....                                          | 11 |
| Specifications .....                                    | 12 |
| Attachments/Accessories.....                            | 12 |
| Operation.....                                          | 13 |
| Adding Fuel .....                                       | 13 |

# Safety

**Note:** The addition of attachments made by other manufacturers that do not meet American National Standards Institute certification will cause noncompliance of this machine.

Improper use or maintenance by the operator or owner can result in injury. To reduce the potential for injury, comply with these safety instructions and always pay attention to the safety alert symbol , which means CAUTION, WARNING, or DANGER—"personal safety instruction." Failure to comply with the instruction may result in personal injury or death.

## Safe Operating Practices

The following instructions are from ANSI standard B71.4-2004.

### Training

- Read the Operator's Manual and other training material. If the operator(s) or mechanic(s) can not read English it is the owner's responsibility to explain this material to them.
- Become familiar with the safe operation of the equipment, operator controls, and safety signs.
- All operators and mechanics should be trained. The owner is responsible for training the users.
- Never let children or untrained people operate or service the equipment. Local regulations may restrict the age of the operator.
- The owner/user can prevent and is responsible for accidents or injuries occurring to himself or herself, other people or property.

### Preparation

- Evaluate the terrain to determine what accessories and attachments are needed to properly and safely perform the job. Only use accessories and attachments approved by the manufacturer.
- Wear appropriate clothing including hard hat, safety glasses and hearing protection. Long hair, loose clothing or jewelry may get tangled in moving parts.
- Inspect the area where the equipment is to be used and remove all objects such as rocks, toys and wire which can be thrown by the machine.
- Use extra care when handling gasoline and other fuels. They are flammable and vapors are explosive.
  - Use only an approved container

|                                                    |    |
|----------------------------------------------------|----|
| Think Safety First .....                           | 14 |
| Operating the Parking Brake .....                  | 14 |
| Starting and Stopping the Engine .....             | 14 |
| Operating the Blade Control Lever<br>(PTO) .....   | 15 |
| The Safety Interlock System.....                   | 16 |
| Driving Forward or Backward.....                   | 16 |
| Using the Lower Control Bar .....                  | 16 |
| Stopping the Machine .....                         | 17 |
| Transporting Machines .....                        | 18 |
| Side Discharging or Mulching the Grass .....       | 18 |
| Adjusting the Height-of-Cut .....                  | 18 |
| Adjusting the Flow Baffle .....                    | 19 |
| Positioning the Flow Baffle .....                  | 20 |
| Adjusting the Handle Height .....                  | 21 |
| Height of Cut Chart.....                           | 23 |
| Maintenance.....                                   | 24 |
| Recommended Maintenance Schedule(s) .....          | 24 |
| Lubrication.....                                   | 24 |
| How to Grease .....                                | 24 |
| Lubricating the Caster and Wheel<br>Bearings ..... | 25 |
| Greasing the Transmission Couplers .....           | 25 |
| Greasing the Mower Belt Idler .....                | 25 |
| Engine Maintenance.....                            | 26 |
| Servicing the Air Cleaner .....                    | 26 |
| Servicing the Engine Oil .....                     | 27 |
| Servicing the Spark Plugs .....                    | 28 |
| Fuel System Maintenance .....                      | 29 |
| Servicing the Fuel Tank .....                      | 29 |
| Servicing the Fuel Filter .....                    | 30 |
| Drive System Maintenance .....                     | 31 |
| Checking the Tire Pressure .....                   | 31 |
| Cooling System Maintenance.....                    | 31 |
| Cleaning the Air Intake Screen .....               | 31 |
| Cleaning the Cooling System.....                   | 31 |
| Brake Maintenance .....                            | 32 |
| Servicing the Brakes .....                         | 32 |
| Belt Maintenance.....                              | 33 |
| Checking the Belts.....                            | 33 |
| Replacing the Traction Drive Belt.....             | 33 |
| Replacing the Transmission Drive Belt .....        | 33 |
| Replacing the Mower Belt .....                     | 33 |
| Adjusting the Mower Belt Tension .....             | 34 |
| Mower Deck Maintenance .....                       | 37 |
| Servicing the Cutting Blades .....                 | 37 |
| Adjusting the Blade Brake.....                     | 38 |
| Replacing the Grass Deflector.....                 | 39 |
| Storage.....                                       | 40 |
| Troubleshooting.....                               | 41 |
| Schematics .....                                   | 43 |

- Never remove gas cap or add fuel with engine running. Allow engine to cool before refueling. Do not smoke.
- Never refuel or drain the machine indoors.
- Check that operator's presence controls, safety switches and shields are attached and functioning properly. Do not operate unless they are functioning properly.

## Operation

- Never run an engine in an enclosed area.
- Only operate in good light, keeping away from holes and hidden hazards.
- Be sure all drives are in neutral and parking brake is engaged before starting engine. Only start engine from the operator's position.
- Be sure of your footing while using this machine, especially when backing up. Walk, don't run. Never operate on wet grass. Reduced footing could cause slipping.
- Slow down and use extra care on hillsides. Be sure to travel side to side on hillsides. Turf conditions can affect the machine's stability. Use caution while operating near drop-offs.
- Slow down and use caution when making turns and when changing directions on slopes.
- Never raise deck with the blades running.
- Never operate with the PTO shield, or other guards not securely in place. Be sure all interlocks are attached, adjusted properly, and functioning properly.
- Never operate with the discharge deflector raised, removed or altered, unless using a grass catcher.
- Do not change the engine governor setting or overspeed the engine.
- Stop on level ground, disengage drives, engage parking brake (if provided), shut off engine before leaving the operator's position for any reason including emptying the catchers or unclogging the chute.
- Stop equipment and inspect blades after striking objects or if an abnormal vibration occurs. Make necessary repairs before resuming operations.
- Keep hands and feet away from the cutting unit.
- Look behind and down before backing up to be sure of a clear path.
- Keep pets and bystanders away.
- Slow down and use caution when making turns and crossing roads and sidewalks. Stop blades if not mowing.

- Be aware of the mower discharge direction and do not point it at anyone.
- Do not operate the mower under the influence of alcohol or drugs.
- Use care when loading or unloading the machine into or from a trailer or truck.
- Use care when approaching blind corners, shrubs, trees, or other objects that may obscure vision.

## Maintenance and storage

- Disengage drives, set parking brake, stop engine and remove key or disconnect spark plug wire. Wait for all movement to stop before adjusting, cleaning or repairing.
- Clean grass and debris from cutting unit, drives, mufflers, and engine to help prevent fires. Clean up oil or fuel spillage.
- Let engine cool before storing and do not store near flame.
- Shut off fuel while storing or transporting. Do not store fuel near flames or drain indoors.
- Park machine on level ground. Set parking brake. Never allow untrained personnel to service machine.
- Use jack stands to support components when required.
- Carefully release pressure from components with stored energy.
- Disconnect the battery or remove spark plug wire before making any repairs. Disconnect the negative terminal first and the positive last. Reconnect the positive first and negative last.
- Use care when checking blades. Wrap the blade(s) or wear gloves, and use caution when servicing them. Only replace blades. Never straighten or weld them.
- Keep hands and feet away from moving parts. If possible, do not make adjustments with the engine running.
- Keep all parts in good working condition and all hardware tightened. Replace all worn or damaged decals.

## Toro Mower Safety

The following list contains safety information specific to Toro products and other safety information you must know.

This product is capable of amputating hands and feet and throwing objects. Always follow all safety instructions to avoid serious injury or death.

This product is designed for cutting and recycling grass or, when equipped with a grass bagger, for catching cut grass. Any use for purposes other than these could prove dangerous to user and bystanders.

- Use only genuine replacement parts to ensure that original standards are maintained.
- Check brake operation frequently. Adjust and service as required.

## General Operation

- Be sure the area is clear of other people before mowing. Stop the machine if anyone enters the area.
- Do not touch equipment or attachment parts which may be hot from operation. Allow to cool before attempting to maintain, adjust or service.
- Use only Toro-approved attachments. Warranty may be voided if used with unapproved attachments.
- Check carefully for overhead clearances (i.e. branches, doorways, electrical wires) before operating under any objects and do not contact them.

## Slope Operation


All slopes and ramps require extra caution. If you feel uneasy on a slope, do not mow it.

- Remove obstacles such as rocks, tree limbs, etc. from the mowing area.
- Watch for holes, ruts or bumps. Tall grass can hide obstacles.
- Use caution near drop-offs, ditches, or embankments. The machine could suddenly turn over if a wheel goes over the edge of a cliff or ditch, or if an edge caves in.
- Use extra care with grass catchers or other attachments. These can change the stability of the machine.
- Keep all movement on slopes slow and gradual. Do not make sudden changes in speed or direction.
- Mow slopes side to side.
- Do not mow slopes greater than 15 degrees.

## Service

- Never store the machine or fuel container inside where there is an open flame, such as near a water heater or furnace.
- Keep nuts and bolts tight, especially the blade attachment bolts and nuts. Keep equipment in good condition.
- Never tamper with safety devices. Check safety systems for proper operation before each use.

# Slope Chart

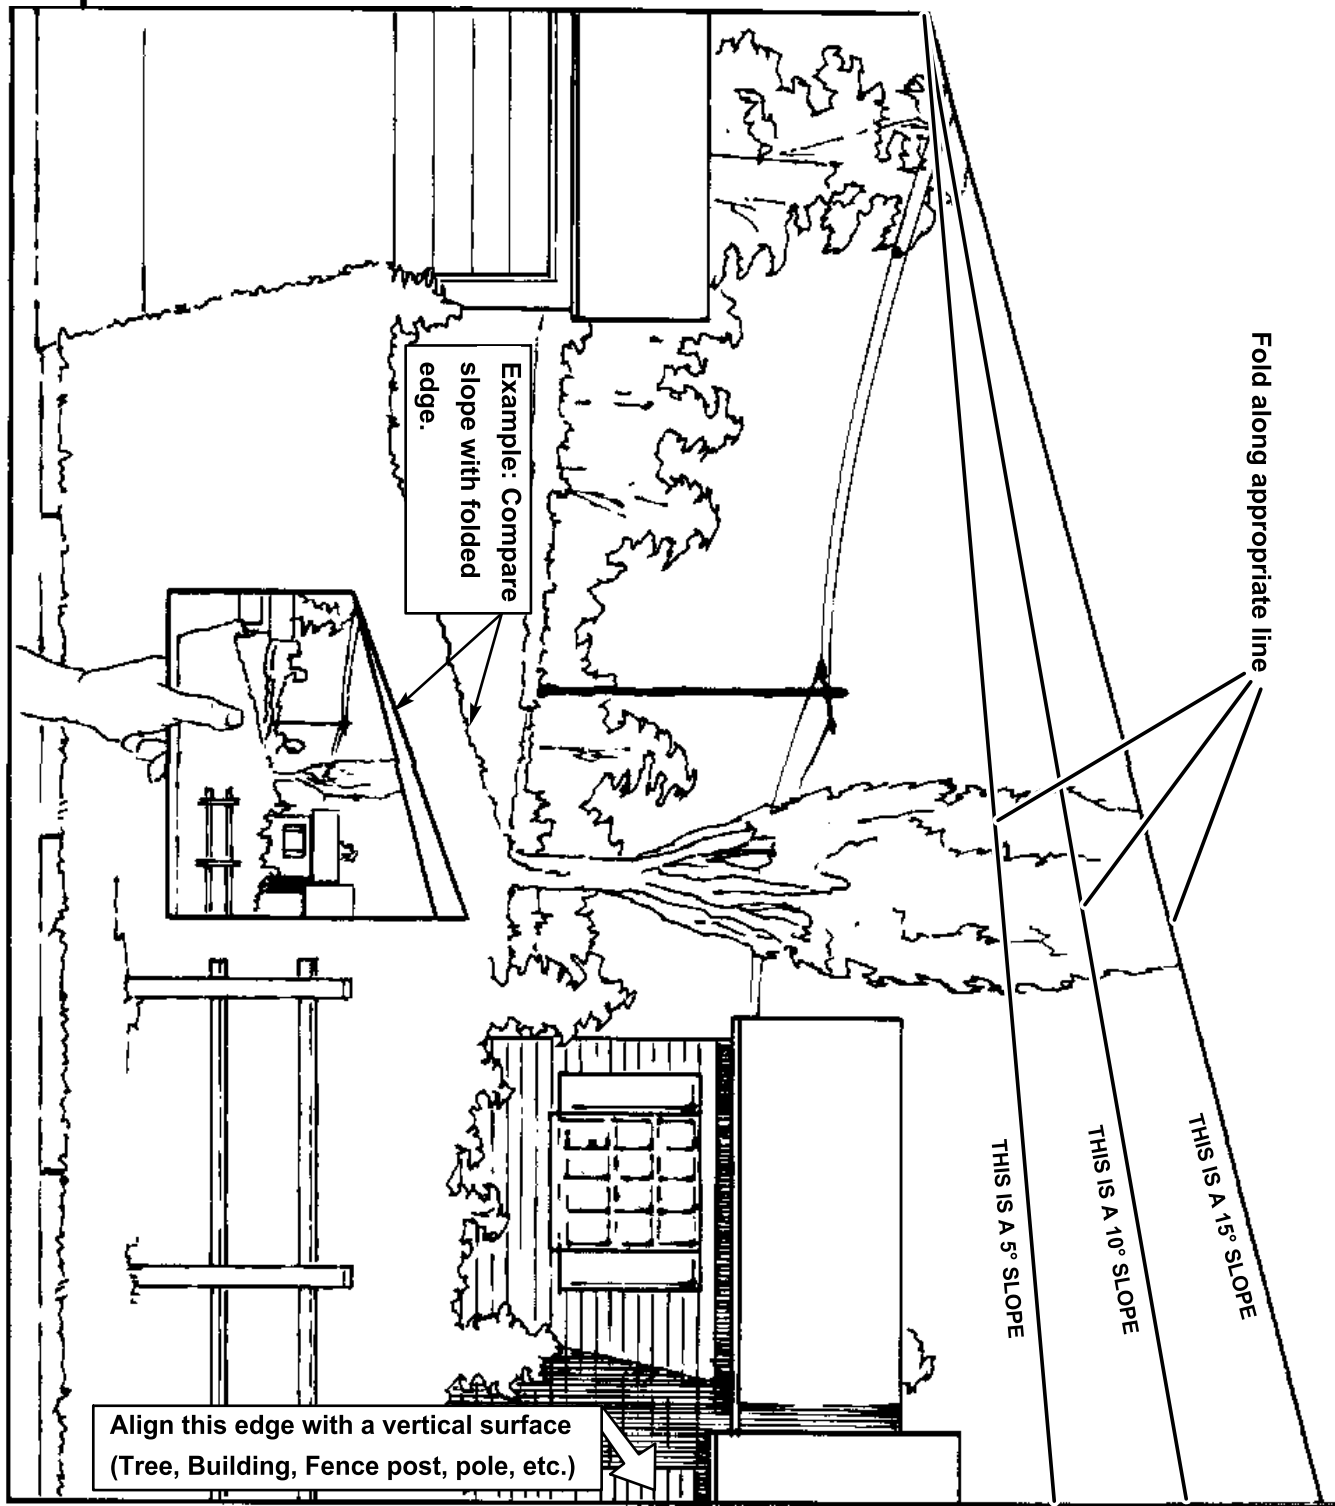

# Safety and Instructional Decals



Safety decals and instructions are easily visible to the operator and are located near any area of potential danger. Replace any decal that is damaged or lost.



43-8480



98-0776



98-3256



66-1340



82-2280




98-3266



82-2290



95-2814

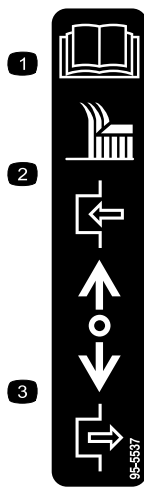


95-5537

1. Read the *Operator's Manual* for instructions on operating the cutting blade
2. Push forward to engage
3. Pull back to disengage



98-4387

1. Warning—wear hearing protection.

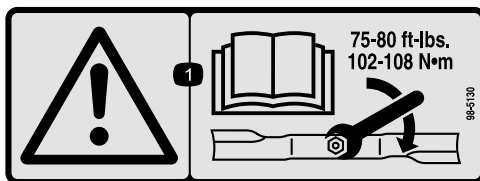


98-5130

1. Warning—read the *Operator's Manual* for instructions on torquing the blade bolt/nut to 75-80 ft-lb (102-106 N·m).



98-5954

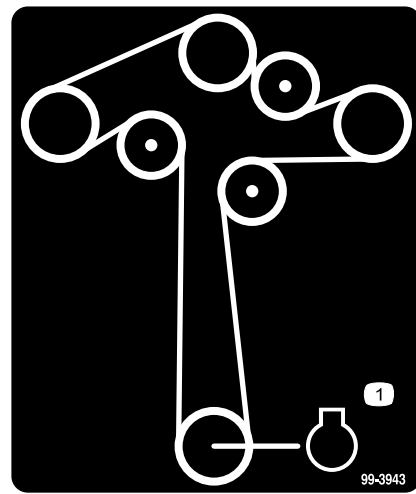

99-3943


1. Engine



104-8569



106-0699

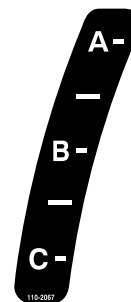

110-2067

# ADJUSTABLE BAFFLE

## BAFLE AJUSTABLE

**A -**

- Short, light grass
- Dry conditions
- Maximum dispersion

- *Césped corto y ligero*
- *Condiciones secas*
- *Maxima dispersion*

**B -**

- Bagging setting

- *Posicion para usar con bolsa*


**C -**

- Tall, dense grass
- Wet conditions
- Maximum ground speed

- *Césped alto y denso*
- *Condiciones mojadas*
- *Maxima velocidad*

1110-2068

1. Read the *Operator's Manual*.



- 
- 9

# Setup

## Loose Parts

Use the chart below to verify that all parts have been shipped.

| Procedure | Description                                                                                                           | Qty.                       | Use                                                                          |
|-----------|-----------------------------------------------------------------------------------------------------------------------|----------------------------|------------------------------------------------------------------------------|
| 1         | No parts required                                                                                                     | –                          | Check the fluids and tire pressure.                                          |
| 2         | Operator's Manual<br>Engine Operator's Manual<br>Parts Catalog<br>Safety Video<br>Registration Card<br>Oil drain hose | 1<br>1<br>1<br>1<br>1<br>1 | Read the Operator's Manual and watch the video before operating the machine. |

**Note:** Determine the left and right sides of the machine from the normal operating position.

# 1

## Checking the Fluids and Tire Pressure

### No Parts Required

#### Procedure

- Before you start the engine and use the machine, check the oil level in the engine crankcase; refer to Checking the Engine Oil Level.
- Check the grease for the mower and mower deck.
- Check the tire pressure; refer to Checking the Tire Pressure.

**Note:** The cutting blades are set to a 3 inch (76mm) height-of-cut at initial purchase. The axle position is **D**, with 4 spacers below both the spindle and the caster.

# 2

## Reading the Manual and Viewing the Safety Video

### Parts needed for this procedure:

|   |                                 |
|---|---------------------------------|
| 1 | <i>Operator's Manual</i>        |
| 1 | <i>Engine Operator's Manual</i> |
| 1 | <i>Parts Catalog</i>            |
| 1 | <i>Safety Video</i>             |
| 1 | <i>Registration Card</i>        |
| 1 | <i>Oil drain hose</i>           |

#### Procedure

- Read the *Operator's Manual*.
- View the safety video.
- Fill out the registration card and mail it in or register online at [www.Toro.com](http://www.Toro.com).
- Use the oil drain hose when changing the engine oil.

# Product Overview

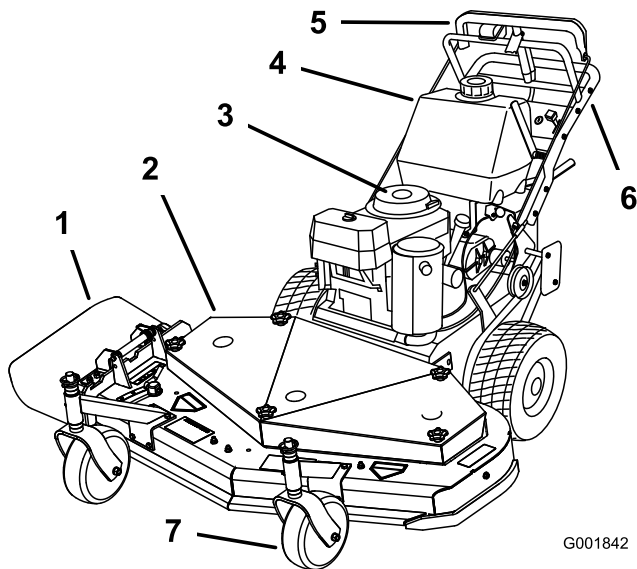


Figure 3

- |                   |                       |
|-------------------|-----------------------|
| 1. Side discharge | 5. T-bar control      |
| 2. Mower deck     | 6. Handle             |
| 3. Recoil starter | 7. Front caster wheel |
| 4. Gas tank       |                       |

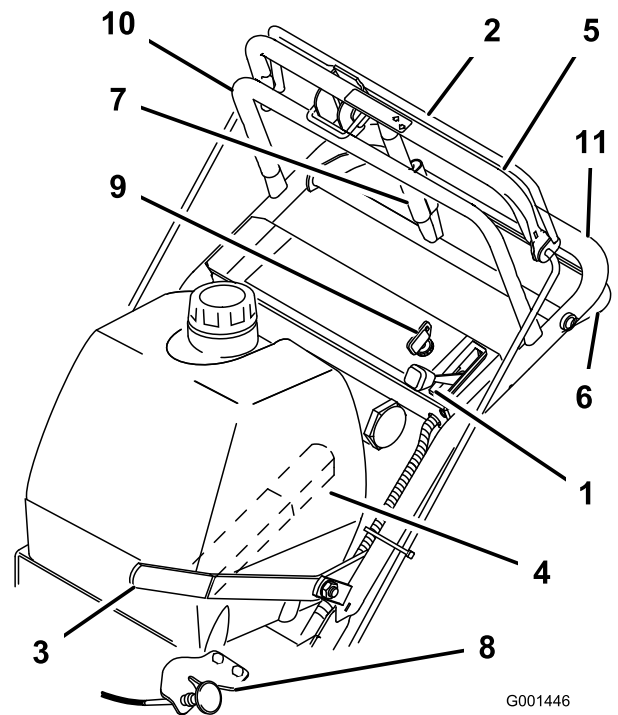


Figure 4

- |                               |                                          |
|-------------------------------|------------------------------------------|
| 1. Throttle control           | 7. Parking brake lever-released position |
| 2. Blade control bail         | 8. Choke                                 |
| 3. Power take off lever (PTO) | 9. Ignition switch                       |
| 4. Gear shift lever           | 10. Upper handle                         |
| 5. Upper control bar          | 11. Lower handle                         |
| 6. Lower control bar          |                                          |

## Controls

Become familiar with all the controls (Figure 4) before you start the engine and operate the machine.

### Throttle Control

The throttle control has two positions: **Fast** and **Slow**.

### Blade Control Bail

The bail is used in conjunction with the blade control lever (PTO) to engage the clutch and drive the mower blades. Releasing the blade control bail will stop the engine with the PTO engaged.

### Blade Control Lever (PTO)

This lever is used in conjunction with the blade control bail to engage and disengage the mower deck belt and drive the mower blades.

### Gear Shift Lever

The transmission has five forward speeds, neutral and reverse, and has an in-line shift pattern.

**Important:** Do not shift while unit is moving, as transmission damage may occur.

## Upper Control Bar

Shift to the desired gear and push forward on the upper control bar and blade control bail to engage forward traction operation and pull back to brake forward movement. Pull back on right side of upper control bar to turn right and left side to turn left.

## Lower Control Bar

Shift the transmission to reverse and squeeze the lower control bar and handle together to engage the rearward traction assist.

## Parking Brake Lever

Pull back on upper control bar and swing brake lever up against the upper handle to set the parking brake (Figure 4).

## Ignition Switch

This switch is used in conjunction with recoil starter and has two positions: **Run** and **Off**.

## Recoil Starter

Pull recoil starter handle to start engine (not shown in Figure 4).

## Fuel Shut-off Valve

Close the fuel shut-off valve when transporting or storing mower.

## Choke

Use the choke to start a cold engine.

## Specifications

**Note:** Specifications and design are subject to change without notice.

|                           |                        |
|---------------------------|------------------------|
| Width with deflector down | 55–1/2 inches (141 cm) |
| Length                    | 69–3/8 inches (176 cm) |
| Height                    | 41 inches (104.1 cm)   |
| Weight                    | 475 lb (215 kg)        |

## Attachments/Accessories

A selection of Toro approved attachments and accessories are available for use with the machine to

enhance and expand its capabilities. Contact your Authorized Service Dealer or Distributor or go to [www.Toro.com](http://www.Toro.com) for a list of all approved attachments and accessories.

# Operation

## Adding Fuel

Use **Unleaded** Regular Gasoline suitable for automotive use (85 pump octane minimum). Leaded regular gasoline may be used if unleaded regular is not available.

**Important:** Never use methanol, gasoline containing methanol, or gasohol containing more than 10% ethanol because the fuel system could be damaged. Do not mix oil with gasoline.



In certain conditions, gasoline is extremely flammable and highly explosive. A fire or explosion from gasoline can burn you and others and can damage property.

- Fill the fuel tank outdoors, in an open area, when the engine is cold. Wipe up any gasoline that spills.
- Never fill the fuel tank inside an enclosed trailer.
- Do not fill the fuel tank completely full. Add gasoline to the fuel tank until the level is 1/4 to 1/2 inch (6 to 13 mm) below the bottom of the filler neck. This empty space in the tank allows gasoline to expand.
- Never smoke when handling gasoline, and stay away from an open flame or where gasoline fumes may be ignited by a spark.
- Store gasoline in an approved container and keep it out of the reach of children. Never buy more than a 30-day supply of gasoline.
- Do not operate without entire exhaust system in place and in proper working condition.



In certain conditions during fueling, static electricity can be released causing a spark which can ignite the gasoline vapors. A fire or explosion from gasoline can burn you and others and can damage property.

- Always place gasoline containers on the ground away from your vehicle before filling.
- Do not fill gasoline containers inside a vehicle or on a truck or trailer bed because interior carpets or plastic truck bed liners may insulate the container and slow the loss of any static charge.
- When practical, remove gas-powered equipment from the truck or trailer and refuel the equipment with its wheels on the ground.
- If this is not possible, then refuel such equipment on a truck or trailer from a portable container, rather than from a gasoline dispenser nozzle.
- If a gasoline dispenser nozzle must be used, keep the nozzle in contact with the rim of the fuel tank or container opening at all times until fueling is complete.



Gasoline is harmful or fatal if swallowed. Long-term exposure to vapors can cause serious injury and illness.

- Avoid prolonged breathing of vapors.
- Keep face away from nozzle and gas tank or conditioner bottle opening.
- Keep gas away from eyes and skin.

## Using Stabilizer/Conditioner

Use a fuel stabilizer/conditioner in the machine to provide the following benefits:

- Keeps gasoline fresh during storage of 90 days or less. For longer storage it is recommended that the fuel tank be drained.
- Cleans the engine while it runs
- Eliminates gum-like varnish buildup in the fuel system, which causes hard starting

**Important:** Do not use fuel additives containing methanol or ethanol.

Add the correct amount of gas stabilizer/conditioner to the gas.

**Note:** A fuel stabilizer/conditioner is most effective when mixed with fresh gasoline. To minimize the chance of varnish deposits in the fuel system, use fuel stabilizer at all times.

## Filling the Fuel Tank

1. Shut the engine off and set the parking brake.
2. Clean around fuel tank cap and remove the cap. Add unleaded regular gasoline to fuel tank, until the level is 1/4 to 1/2 inch (6 to 13 mm) below the bottom of the filler neck. This space in the tank allows gasoline to expand. Do not fill the fuel tank completely full.
3. Install fuel tank cap securely. Wipe up any gasoline that may have spilled.

## Think Safety First

Carefully read all the safety instructions and decals in the safety section. Knowing this information could help you or any bystanders avoid injury.

The use of protective equipment for eyes, hearing, feet and head is recommended.



This machine produces sound levels in excess of 85 dBA at the operator's ear and can cause hearing loss through extended periods of exposure.

Wear hearing protection when operating this machine.



Figure 5

1. Warning—wear hearing protection.

## Operating the Parking Brake

Stop on level ground, disengage drives, engage parking brake, shut off engine and remove key. Always set the parking brake when you stop the machine or leave it unattended.



Children or bystanders may be injured if they move or attempt to operate the machine while it is unattended.


Always remove the ignition key and set the parking brake when leaving the machine unattended, even if just for a few minutes.

## Setting the Parking Brake

1. Pull the upper control bar rearward and hold it in this position (Figure 6).
2. Lift the parking brake lock up and gradually release the upper control bar. The brake lock should stay in the set (locked) position (Figure 6).

## Releasing the Parking Brake

1. Pull rearward on the upper control bar. Lower the parking brake lock to the released position.
2. Gradually release the upper control bar.

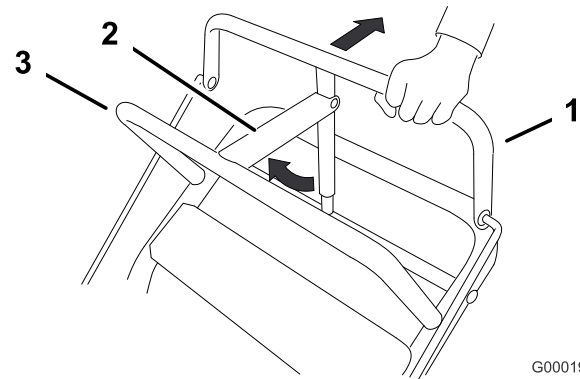

G000195

Figure 6

1. Upper control bar
2. Parking brake lever-set position
3. Fixed bar

## Starting and Stopping the Engine

### Starting the Engine

1. Connect the wires to the spark plugs.
2. Open the fuel valve.
3. Disengage the blade control (PTO) lever and move the shift lever to the **neutral** position.
4. Set the parking brakes.
5. Turn the ignition key to the **run** position (Figure 7).

6. To start a cold engine, move the throttle control midway between the **fast** and **slow** positions.
7. To start a warm engine, move the throttle control to the **fast** position.
8. Pull the choke knob if the engine is cold (Figure 7).

**Note:** A warm or hot engine usually does not require any choking.

9. Grasp the recoil starter handle firmly and pull it out until positive engagement results; then pull the handle vigorously to start the engine. Allow the rope to recoil slowly.

**Important:** Do not pull the recoil rope to its limit or release the starter handle when you pull out the rope because the rope may break or the recoil assembly may be damaged.

10. Push the choke to off as the engine warms up.
11. If the engine is cold, allow it to warm up and then move the throttle control to the **fast** position.

## Stopping the Engine

**Important:** In an emergency, you can stop the engine immediately by turning the ignition key to the **off** position.

1. Move the throttle lever to the **slow** position (Figure 7).
2. Let engine idle for 30 to 60 seconds before turning the ignition key to **off**.
3. Turn the ignition key to **off** (Figure 7).

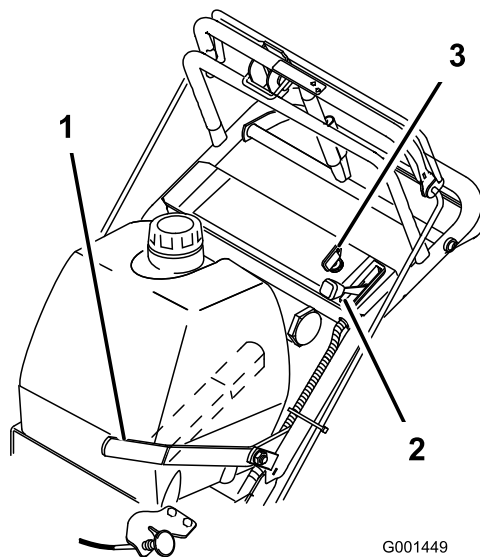


Figure 7

1. Blade control lever (PTO)
2. Throttle lever
3. Ignition key

4. Set the parking brake and remove key.

5. Pull wire off spark plug(s) to prevent possibility of accidental starting before storing or performing maintenance on the machine.
6. Close the fuel shut off valve before storing or transporting the machine.

**Important:** Make sure fuel shut off valve is closed before transporting or storing machine, as fuel leakage may occur.

## Operating the Blade Control Lever (PTO)

The blade control lever (PTO) engages and disengages power to the mower blades.

### Engaging the Mower Blades

1. To engage the blades, squeeze blade control bail against the upper control bar (Figure 8).
2. Push the blade control lever firmly forward, until it latches over-center.
3. Restart the engine and repeat the procedure to engage the mower blades if the blade control bail is released.

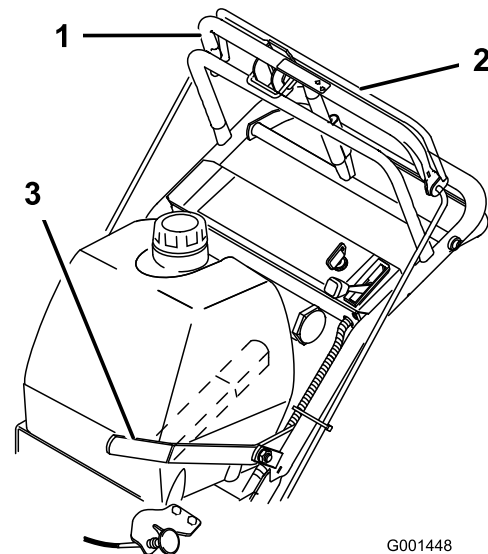


Figure 8

1. Upper control bar
2. Blade control bail
3. Blade control lever (PTO)

### Disengaging the Mower Blades (PTO)

To disengage the blades, pull the blade control lever rearward all the way (Figure 8). The engine will kill when the blade control bail is released with the blade control lever engaged.

**Note:** It is necessary to fully and manually disengage the blade control lever.

## The Safety Interlock System



If safety interlock switches are disconnected or damaged the machine could operate unexpectedly causing personal injury.

- Do not tamper with the interlock switches.
- Check the operation of the interlock switches daily and replace any damaged switches before operating the machine.

The safety interlock system is designed to prevent the engine from starting when:

- The blade control lever (PTO) is engaged.
- The ignition key is off.

The safety interlock system is also designed to stop the engine when:

- The blade control bail is released with the blade control lever (PTO) engaged.
- The ignition switch is turned to the **off** position.

## Testing the Safety Interlock System

Test the safety interlock system before you use the machine each time. If the safety system does not operate as described below, have an Authorized Service Dealer repair the safety system immediately.

1. Set the parking brake, disengage the PTO and place the throttle forward.
2. Start the engine; refer to Starting the Engine.
3. With the engine running, squeeze the blade control bail against upper control bar and push the mower blade control lever forward. The mower blades begin rotating.
4. With the engine running, release the blade control bail. The engine should stop.
5. Start the engine again.
6. With the engine running, turn the key switch to the **off** position. The engine should stop.

## Driving Forward or Backward

The throttle control regulates the engine speed as measured in RPM (revolutions per minute). Place the


throttle control in the **fast** position for best mowing performance.

## Driving Forward

1. To go forward, move the shift lever to a forward gear (Figure 9).
2. Release the parking brake; refer to Releasing the Parking Brake.
3. Slowly press on the upper control bar to move forward (Figure 9).

To go straight, apply equal pressure to both ends of the upper control bar (Figure 9).

To turn, release pressure on the upper control bar side in the direction you want to turn (Figure 9).

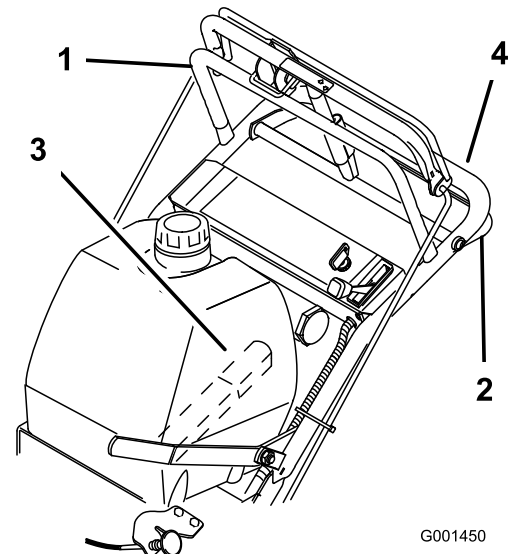

**Figure 9**

- |                      |                 |
|----------------------|-----------------|
| 1. Upper control bar | 3. Shift lever  |
| 2. Lower control bar | 4. Lower handle |

## Driving Backward

1. To go backward, move the shift lever to reverse gear.
2. Release the parking brake; refer to Releasing the Parking Brake.
3. Slowly squeeze the lower control bar and lower handle together to move rearward (Figure 9).

## Using the Lower Control Bar

This procedure is for driving up a curb. This can be performed while driving forward or backward.

**Note:** Some curbs do not allow the rear drive tires to contact the curb. If this happens, drive the machine up the curb at an angle.



A blade can be bent or damaged when driving up a curb. Pieces of blade that may be thrown could seriously injure or kill you or bystanders.

Do not run blades while driving up a curb forward or backward.

## Driving Forward Up a Curb

1. Disengage the mower blades.
2. Select first gear to drive the machine.
3. Drive machine until the castor wheels contact curb (Figure 10).
4. Lift the front of the machine by pushing down on the lower handle (Figure 10).
5. Drive the machine until drive wheels contact the curb (Figure 10).
6. Lower the front of the machine (Figure 10).

**Note:** Both drive wheels should contact the curb and caster wheels straight.

7. At the same time engage the lower control bar and lift up on the lower handle to drive over the curb (Figure 9 and Figure 10).

**Note:** Lifting up on the lower handle will assist driving the machine up a curb and not spin the drive wheels.

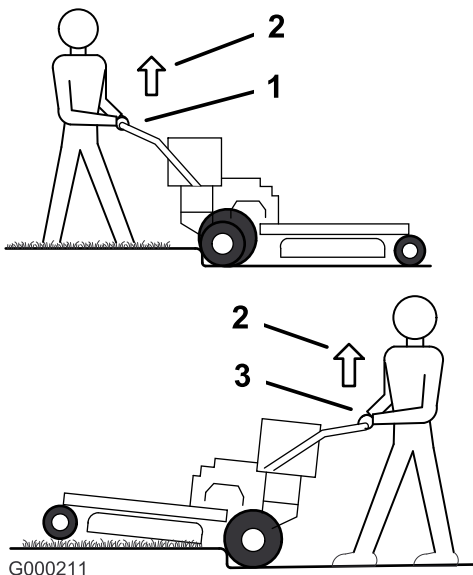


Figure 10

1. Lower Control Bar engaged and mower in reverse.
2. Pull up to assist machine
3. Lower Control Bar engaged and mower going forward.

## Driving Backward Up a Curb

1. Disengage the mower blades.
2. Select reverse to drive the machine.
3. Drive the machine until drive wheels contact curb (Figure 10).

**Note:** Both drive wheels should contact the curb and caster wheels straight.

4. At the same time engage lower control bar and lift up on the lower handle (Figure 9 and Figure 11).

**Note:** Lifting up on the lower handle will assist driving the machine up a curb and not spin the drive wheels.

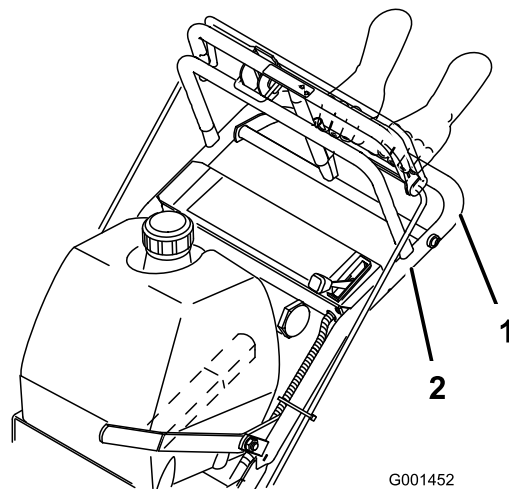


Figure 11

1. Lower control bar (engaged)
2. Handle

## Stopping the Machine

To stop the machine, pull back on the upper control bar, release the blade control bail, turn the ignition key to off and set the parking brake; refer to Setting the Parking Brake in Operation, page 13. Remember to remove the key from the ignition switch.



Children or bystanders may be injured if they move or attempt to operate the machine while it is unattended.

Always remove the ignition key and set the parking brake when leaving the machine unattended, even if just for a few minutes.

## Transporting Machines

Use a heavy-duty trailer or truck to transport the machine. Ensure that the trailer or truck has all necessary lighting and marking as required by law. Please carefully read all the safety instructions. Knowing this information could help you, your family, pets or bystanders avoid injury.

To transport the machine:

- Stop the engine, remove the key, set the brake, and close the fuel valve.
- Securely fasten the machine to the trailer or truck with straps, chains, cable, or ropes.
- Secure a trailer to the towing vehicle with safety chains.

## Side Discharging or Mulching the Grass

This mower has a hinged grass deflector that disperses clippings to the side and down toward the turf.



**Without the grass deflector, discharge cover, or complete grass catcher assembly mounted in place, you and others are exposed to blade contact and thrown debris. Contact with rotating mower blade(s) and thrown debris will cause injury or death.**

- Never remove the grass deflector from the mower because the grass deflector routes material down toward the turf. If the grass deflector is ever damaged, replace it immediately.
- Never put your hands or feet under the mower.
- Never try to clear discharge area or mower blades unless you release the bail and the power take off (PTO) is off. Rotate the ignition key to Off. Also remove the key and pull the wires off the spark plug(s).


## Adjusting the Height-of-Cut

This machine has a 1 to 4-1/4 inch (26 to 108 mm) range for the height-of-cut. This can be achieved by adjusting blade spacers, rear axle height, and front caster spacers. Use the Height-of-Cut Chart to select the combination of adjustments required.

## Adjusting the Blade Height

Adjust the blades by using the 4 spacers (1/4 inch (6 mm)) on the blade spindle bolts. This allows for a 1-inch (25 mm) adjustment range, in 1/4 inch (6 mm) increments, of cutting height in any axle position. Use the same number of blade spacers on all blades to achieve a level cut (2 above and 2 below, 1 above and 3 below, etc.).

1. Disengage the blade control (PTO) lever and set the parking brakes.
2. Stop the engine and wait for all moving parts to stop before leaving the operating position.
3. Hold the blade bolt and remove the nut (Figure 12).

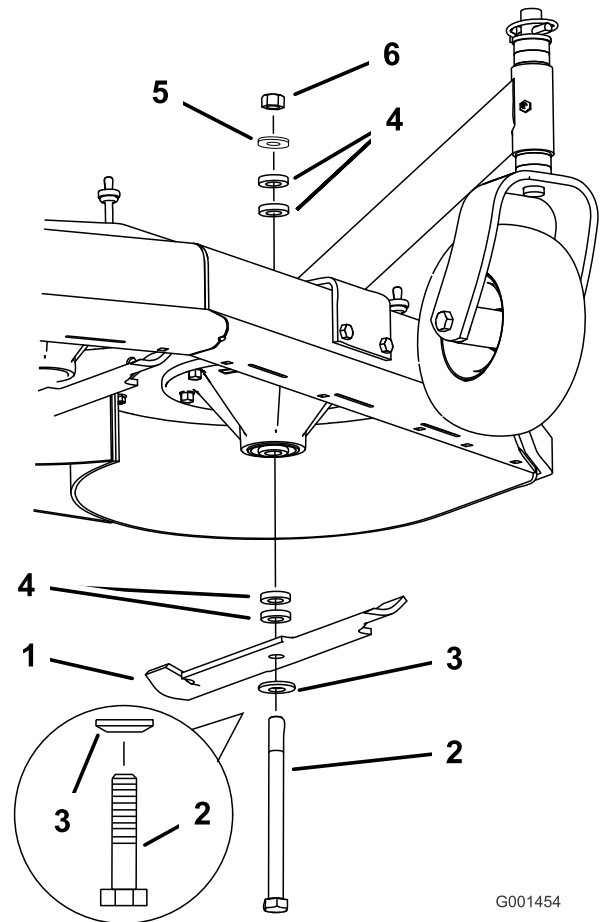

**Figure 12**

- |                  |                |
|------------------|----------------|
| 1. Blade         | 4. Spacer      |
| 2. Blade bolt    | 5. Thin washer |
| 3. Curved washer | 6. Nut         |

4. Slide the bolt down through the spindle, and change the spacers as needed (Figure 12).
5. Install the bolt and curved washer, add extra spacer(s), and secure them with a thin washer and a nut (Figure 12).
6. Torque the blade bolt to 75-80 ft-lb (101-108 N•m).

## Adjusting the Axle Height

Adjust the axle position to the selected height-of-cut setting. Refer to the Height-of-Cut Chart.

1. Disengage the blade control (PTO) lever and set the parking brakes.
2. Stop the engine and wait for all moving parts to stop before leaving the operating position.
3. Loosen, but do not remove, the 2 axle pivot bolts and the 2 axle adjustment bolts (Figure 13).

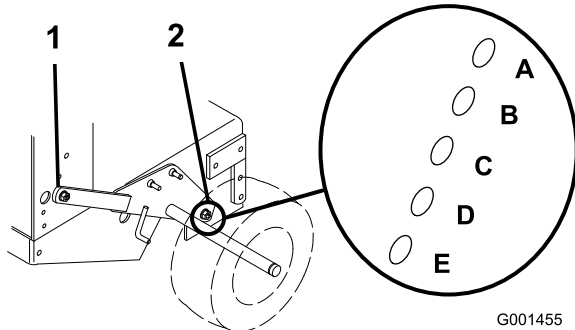


Figure 13

1. Axle pivot bolt
2. Axle adjustment bolt

4. Place a jack under the rear center of the engine frame. Raise the back end of the engine frame up enough to remove the front 2 axle adjustment bolts (Figure 13).

**Note:** Use jack stands to support the machine.

5. Raise or lower the engine frame with the jack so that you can install the front 2 axle adjustment bolts in the desired hole location (Figure 13).

**Note:** Use a tapered punch to help align the holes.

6. Tighten all 4 bolts and lower the mower.
7. Adjust the control rods and the brake linkages as required. Refer to Servicing the Brakes and Adjusting the Control Rods.

**Important:** You must adjust the control rods and the brake linkage when you change the axle positions for proper traction and brake function.

## Adjusting the Caster Position

1. Using the Height-of-Cut Chart, adjust the caster spacers to match with the axle hole selected (Figure 14).

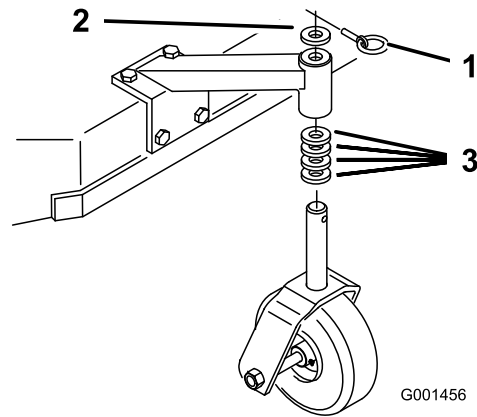


Figure 14


1. Latch pin
2. Spacer, 3/16 inch (5 mm)
3. Spacer, 1/2 inch (13 mm)

2. Remove the latch pin, slide the caster from the support, and change the spacers (Figure 14).
3. Install the caster in the support and insert the latch pin (Figure 14).

## Adjusting the Flow Baffle

The mower discharge flow can be adjusted for different types of mowing conditions. Position the cam lock and baffle to give the best quality of cut.

1. Disengage the PTO, move the motion control levers to the neutral locked position and set the parking brake.
2. Stop the engine, remove the key, and wait for all moving parts to stop before leaving the operating position.
3. To adjust the cam lock, swing the lever up to loosen the cam lock (Figure 15).
4. Adjust the baffle and cam lock in the slot to the desired discharge flow.
5. Swing the lever back over to tighten the baffle and cam lock (Figure 15).
6. If the cam does not lock the baffle into place or it is too tight, loosen the lever and then rotate the cam lock. Adjust the cam lock until the desired locking pressure is achieved.

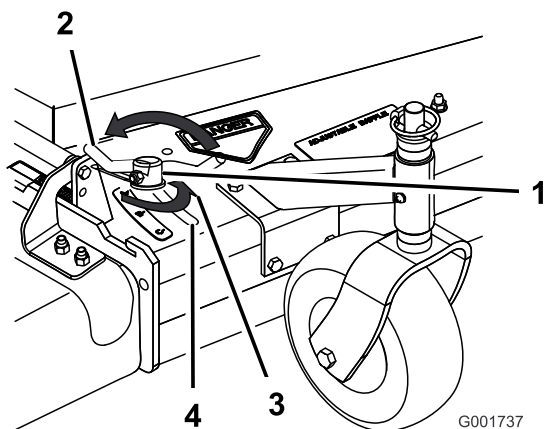

**Figure 15**

- |             |                                                        |
|-------------|--------------------------------------------------------|
| 1. Cam lock | 3. Rotate cam to increase or decrease locking pressure |
| 2. Lever    | 4. Slot                                                |

## Positioning the Flow Baffle


The following figures are only recommendations for use. Adjustments will vary by grass type, moisture content, and height of grass.

**Note:** If the engine power draws down and the mower ground speed is the same, open up the baffle.

## Position A

This is the full rear position. The suggested use for this position is as follows (Figure 16).



- Use for short, light grass mowing conditions.
- Use in dry conditions.
- For smaller grass clippings.
- Propels grass clippings farther away from the mower.

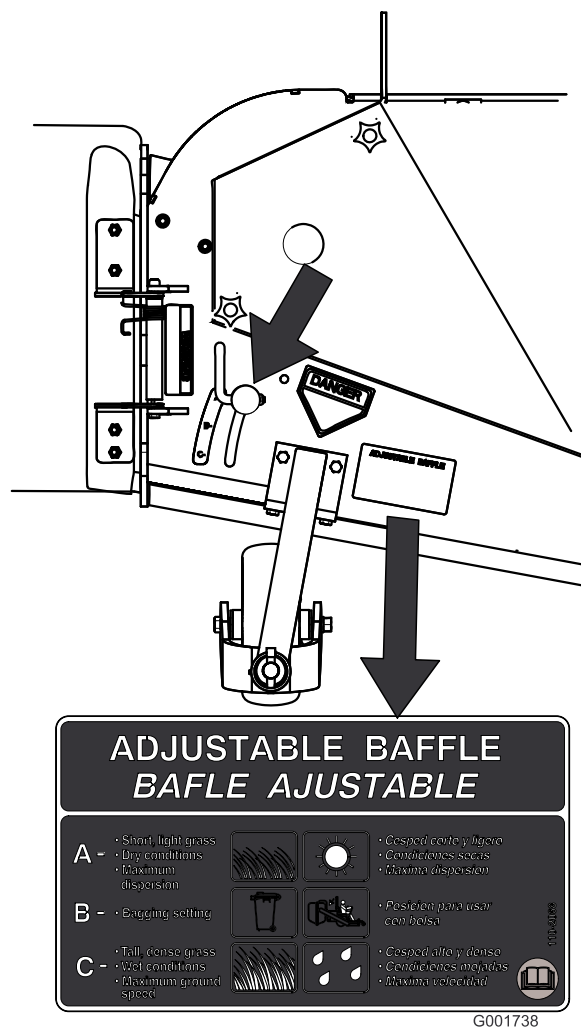

**Figure 16**



## Position B

Use this position when bagging (Figure 17).

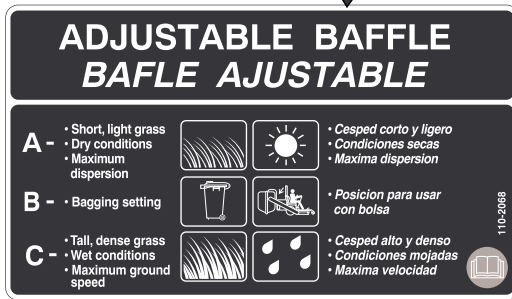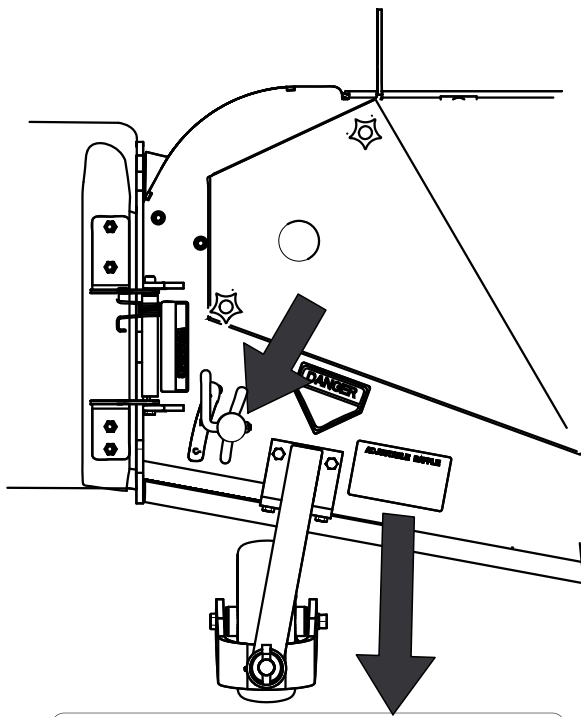

G001739

Figure 17

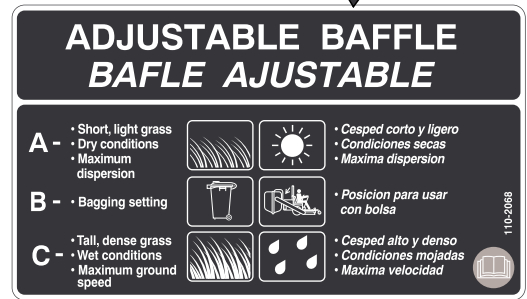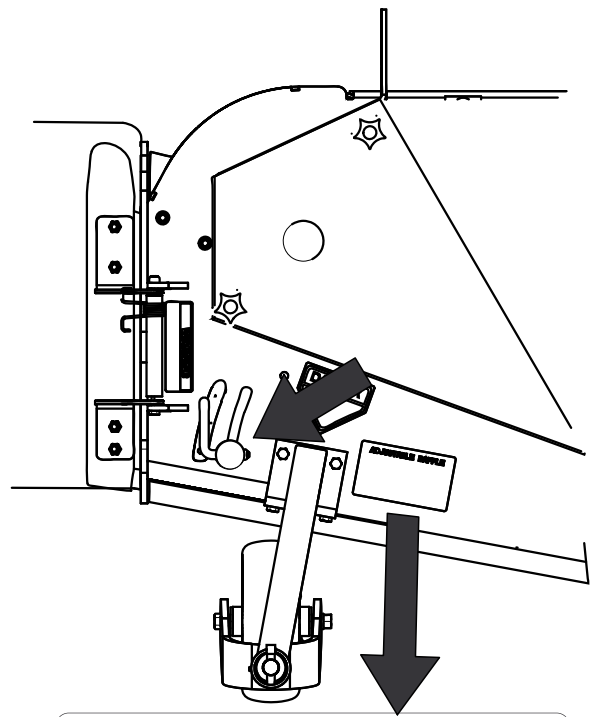

G001740

Figure 18

## Position C


This is the full open position. The suggested use for this position is as follows (Figure 18).

- Use in tall, dense grass mowing conditions.
- Use in wet conditions.
- Lowers the engine power consumption.
- Allows increased ground speed in heavy conditions.
- This position is similar to the benefits of the Toro SFS mower.

## Adjusting the Handle Height

The handle position can be adjusted to match the operator's height preference.


1. Remove hairpin cotter, washer and clevis pin securing control rod fitting to idler bracket (Figure 19).

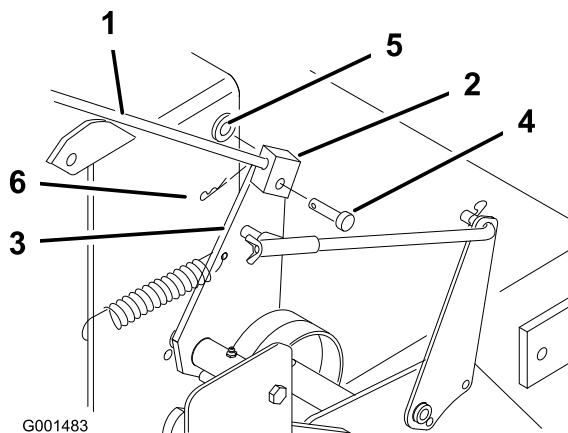

**Figure 19**

- |                        |                       |
|------------------------|-----------------------|
| 1. Control rod         | 4. Clevis pin         |
| 2. Control rod fitting | 5. Washer             |
| 3. Idler bracket       | 6. Hairpin cotter pin |

2. Loosen the upper flange bolts (3/8 x 1 inch) and flange nut securing handle to rear frame (Figure 20).

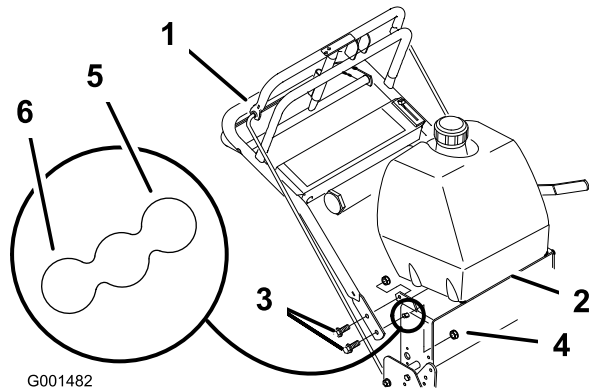

**Figure 20**

- |                               |                        |
|-------------------------------|------------------------|
| 1. Upper handle               | 4. Lock nut (3/8 inch) |
| 2. Rear frame                 | 5. Upper mounting hole |
| 3. Flange bolt (3/8 x 1 inch) | 6. Lower mounting hole |

3. Remove the lower flange bolts (3/8 x 1 inch) and flange nuts securing handle to rear frame (Figure 20).
4. Pivot handle to desired operating position and install lower flange bolts (3/8 x 1 inch) and flange nuts into mounting holes. Tighten all flange bolts.
5. Thread rod fitting up or down on rod until proper position is attained and install into fitting to idler bracket with clevis pin, washer and hairpin cotter.
6. Check the parking brake adjustment. Refer to Checking the Brakes in Brake Maintenance , page 32.

# Height of Cut Chart

| Axle Position | Number of spacers<br>below caster |                     | Number of 1/4 inch blade spacers below spindle |                       |                       |                       |                        |
|---------------|-----------------------------------|---------------------|------------------------------------------------|-----------------------|-----------------------|-----------------------|------------------------|
|               | 1/2 inch<br>(13mm)                | 3/16 inch (5<br>mm) | 4                                              | 3                     | 2                     | 1                     | 0                      |
| A             | 0                                 | 0                   | 1 inch (26<br>mm)                              | 1-1/4 inch<br>(32 mm) | 1-1/2 inch<br>(38 mm) | 1-3/4 inch<br>(45 mm) | 2 inch (51<br>mm)      |
| A             | 0                                 | 1                   | 1-1/8 inch<br>(29 mm)                          | 1-3/8 inch<br>(35 mm) | 1-5/8 inch<br>(41 mm) | 1-7/8 inch<br>(48 mm) | 2-1/8 inch<br>(54 mm)  |
| A             | 1                                 | 0                   | 1-3/8 inch<br>(35 mm)                          | 1-5/8 inch<br>(41 mm) | 1-7/8 inch<br>(48 mm) | 2-1/8 inch<br>(54 mm) | 2-3/8 inch<br>(60 mm)  |
| B             | 0                                 | 1                   | 1-3/8 inch<br>(35 mm)                          | 1-5/8 inch<br>(41 mm) | 1-7/8 inch<br>(48 mm) | 2-1/8 inch<br>(54 mm) | 2-3/8 inch<br>(60 mm)  |
| B             | 1                                 | 0                   | 1-5/8 inch<br>(41 mm)                          | 1-7/8 inch<br>(48 mm) | 2-1/8 inch<br>(54 mm) | 2-3/8 inch<br>(60 mm) | 2-5/8 inch<br>(67 mm)  |
| B             | 1                                 | 1                   | 1-3/4 inch<br>(45 mm)                          | 2 inch (51<br>mm)     | 2-1/4 inch<br>(57 mm) | 2-1/2 inch<br>(64 mm) | 2-3/4 inch<br>(70 mm)  |
| B             | 2                                 | 0                   | 2 inch (51<br>mm)                              | 2-1/4 inch<br>(57 mm) | 2-1/2 inch<br>(64 mm) | 2-3/4 inch<br>(70 mm) | 3 inch (76<br>mm)      |
| C             | 1                                 | 1                   | 1-7/8 inch<br>(48 mm)                          | 2-1/8 inch<br>(54 mm) | 2-3/8 inch<br>(60 mm) | 2-5/8 inch<br>(67 mm) | 2-7/8 inch<br>(73 mm)  |
| C             | 2                                 | 0                   | 2-1/8 inch<br>(55 mm)                          | 2-3/8 inch<br>(60 mm) | 2-5/8 inch<br>(67 mm) | 2-7/8 inch<br>(73 mm) | 3-1/8 inch<br>(79 mm)  |
| C             | 2                                 | 1                   | 2-1/4 inch<br>(57 mm)                          | 2-1/2 inch<br>(64 mm) | 2-3/4 inch<br>(70 mm) | 3 inch (76<br>mm)     | 3-1/4 inch<br>(83 mm)  |
| C             | 3                                 | 0                   | 2-1/2 inch<br>(64 mm)                          | 2-3/4 inch<br>(70 mm) | 3 inch (76<br>mm)     | 3-1/4 inch<br>(83 mm) | 3-1/2 inch<br>(89 mm)  |
| D             | 2                                 | 1                   | 2-3/8 inch<br>(61 mm)                          | 2-5/8 inch<br>(67 mm) | 2-7/8 inch<br>(73 mm) | 3-1/8 inch<br>(79 mm) | 3-3/8 inch<br>(86 mm)  |
| D             | 3                                 | 0                   | 2-1/2 inch<br>(64 mm)                          | 2-3/4 inch<br>(70 mm) | 3 inch (76<br>mm)     | 3-1/4 inch<br>(82 mm) | 3-1/2 inch<br>(89 mm)  |
| D             | 3                                 | 1                   | 2-3/4 inch<br>(70 mm)                          | 3 inch (76<br>mm)     | 3-1/4 inch<br>(82 mm) | 3-1/2 inch<br>(89 mm) | 3-3/4 inch<br>(95 mm)  |
| D             | 4                                 | 0                   | 3 inch (76<br>mm)                              | 3-1/4 inch<br>(82 mm) | 3-1/2 inch<br>(89 mm) | 3-3/4 inch<br>(95 mm) | 4 inch (102<br>mm)     |
| E             | 3                                 | 1                   | 2-7/8 inch<br>(73 mm)                          | 3-1/8 inch<br>(79 mm) | 3-3/8 inch<br>(86 mm) | 3-5/8 inch<br>(92 mm) | 3-7/8 inch<br>(98 mm)  |
| E             | 4                                 | 0                   | 3-1/8 inch<br>(79 mm)                          | 3-3/8 inch<br>(86 mm) | 3-5/8 inch<br>(92 mm) | 3-7/8 inch<br>(98 mm) | 4-1/8 inch<br>(105 mm) |
| E             | 4                                 | 1                   | 3-1/4 inch<br>(82 mm)                          | 3-1/2 inch<br>(89 mm) | 3-3/4 inch<br>(95 mm) | 4 inch (102<br>mm)    | 4-1/4 inch<br>(108 mm) |

# Maintenance

**Note:** Determine the left and right sides of the machine from the normal operating position.

## *Recommended Maintenance Schedule(s)*

| Maintenance Service Interval | Maintenance Procedure                                                                                                                                                                                                                                                                                  |
|------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| After the first 8 hours      | <ul style="list-style-type: none"><li>• Change the engine oil.</li><li>• Check the mower belt tension.</li></ul>                                                                                                                                                                                       |
| After the first 25 hours     | <ul style="list-style-type: none"><li>• Check the mower belt tension.</li></ul>                                                                                                                                                                                                                        |
| Before each use or daily     | <ul style="list-style-type: none"><li>• Check the safety system.</li><li>• Grease the caster wheels and caster pivot.</li><li>• Check the engine oil level.</li><li>• Clean the air intake screen.</li><li>• Check the brakes.</li><li>• Inspect the blades.</li><li>• Clean the mower deck.</li></ul> |
| Every 25 hours               | <ul style="list-style-type: none"><li>• Clean foam air cleaner element.</li></ul>                                                                                                                                                                                                                      |
| Every 50 hours               | <ul style="list-style-type: none"><li>• Grease the mower belt idler.</li><li>• Check the paper air cleaner element.</li><li>• Check the tire pressure</li><li>• Check the belts.</li><li>• Check the mower belt tension.</li></ul>                                                                     |
| Every 100 hours              | <ul style="list-style-type: none"><li>• Change the engine oil.</li><li>• Check the spark plugs.</li><li>• Check and clean engine cooling fins and shrouds.</li></ul>                                                                                                                                   |
| Every 200 hours              | <ul style="list-style-type: none"><li>• Replace the paper air cleaner element.</li><li>• Replace the oil filter.</li><li>• Replace the fuel filter.</li></ul>                                                                                                                                          |
| Every 250 hours              | <ul style="list-style-type: none"><li>• Grease the transmission couplers (more often in dirty or dusty conditions).</li></ul>                                                                                                                                                                          |
| Every 400 hours              | <ul style="list-style-type: none"><li>• Grease the wheel bearings (more often in dirty or dusty conditions).</li><li>• Lubricate cam lock with Never-Seez®.</li></ul>                                                                                                                                  |
| Before storage               | <ul style="list-style-type: none"><li>• Paint chipped surfaces.</li><li>• Perform all maintenance procedures listed above before storage.</li></ul>                                                                                                                                                    |

**Important:** Refer to your engine operator's manual for additional maintenance procedures.



If you leave the key in the ignition switch, someone could accidentally start the engine and seriously injure you or other bystanders.

Remove the key from the ignition and disconnect the spark plug wire from the spark plug(s) before you do any maintenance. Set the wire aside so that it does not accidentally contact the spark plug.

## *Lubrication*

Grease with No. 2 general purpose lithium base or molybdenum base grease.

## **How to Grease**

1. Disengage the PTO and set the parking brake.

2. Stop the engine, remove the key, and wait for all moving parts to stop before leaving the operating position.
3. Clean the grease fittings with a rag. Make sure to scrape any paint off the front of the fitting(s).
4. Connect a grease gun to the fitting. Pump grease into the fittings until grease begins to ooze out of the bearings.
5. Wipe up any excess grease.

## Lubricating the Caster and Wheel Bearings

1. Lubricate the front wheel bearings and front spindles (Figure 21).
2. Lubricate the drive wheel bearings (Figure 21).

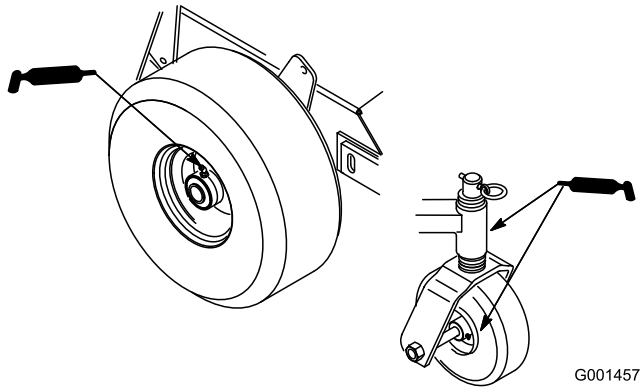


Figure 21

## Greasing the Transmission Couplers

Lubricate the transmission couplers and idler arm pivots located in the back of the machine (Figure 22).

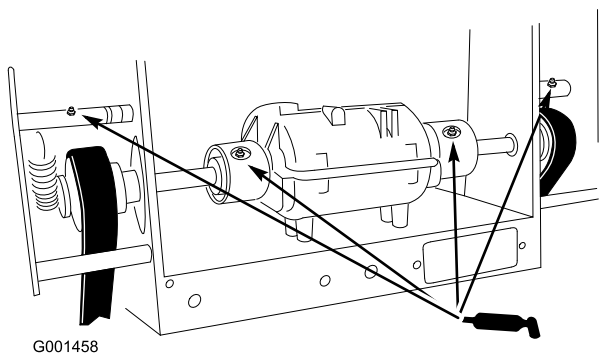


Figure 22

## Greasing the Mower Belt Idler

Grease the fitting on the mower belt idler arm pivot (Figure 23).

**Note:** Remove the mower deck cover to access the grease fitting for the mower belt idler arm.

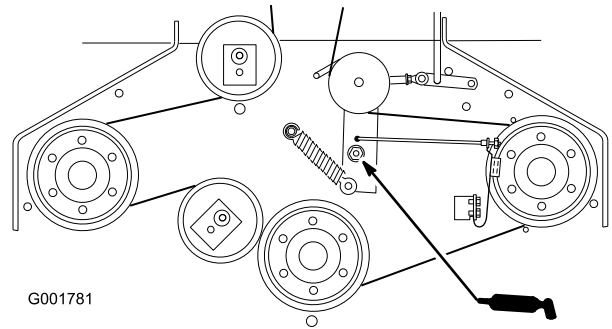


Figure 23

# Engine Maintenance

## Servicing the Air Cleaner


### Service Interval/Specification

**Note:** Service the air cleaner more frequently (every few operating hours) if the operating conditions are extremely dusty or sandy.

**Important:** Do not oil the foam or paper element.

### Removing the Foam and Paper Elements

1. Disengage the PTO and set the parking brake.
2. Stop the engine, remove the key, and wait for all moving parts to stop before leaving the operating position.
3. Clean around the air cleaner to prevent dirt from getting into the engine and causing damage (Figure 24).
4. Unscrew the cover knob and remove the air cleaner cover (Figure 24).
5. Remove the 2 wing nuts and remove the air cleaner assembly (Figure 24).
6. Carefully pull the foam element off the paper element (Figure 24).

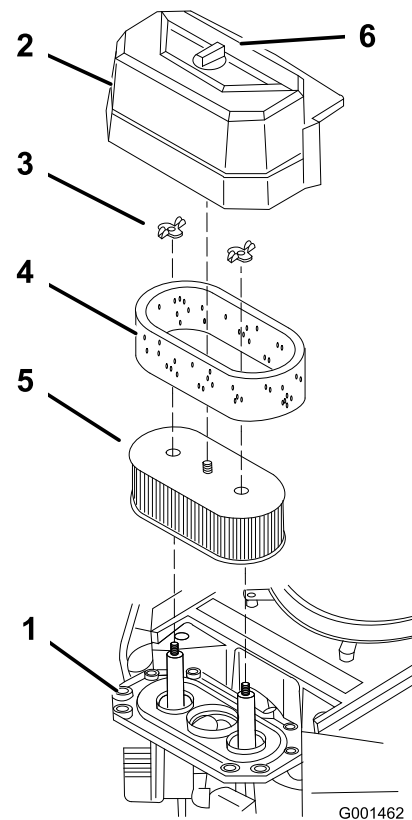

**Figure 24**

- |             |                  |
|-------------|------------------|
| 1. Engine   | 4. Foam element  |
| 2. Cover    | 5. Paper element |
| 3. Wing nut | 6. Cover knob    |

### Cleaning the Foam Air Cleaner Element

1. Wash the foam element in liquid soap and warm water. When the element is clean, rinse it thoroughly.
2. Dry the element by squeezing it in a clean cloth.

**Important:** Replace the foam element if it is torn or worn.

### Servicing the Paper Air Cleaner Element

**Service Interval:** Every 50 hours

Every 200 hours

1. Do not clean the paper filter, replace it (Figure 24).
2. Inspect the element for tears, an oily film, or damage to the rubber seal.
3. Replace the paper element if it is damaged.

### Installing the Foam and Paper Elements

**Important:** To prevent engine damage, always operate the engine with the complete foam and paper air cleaner assembly installed.

1. Carefully slide the foam element onto the paper air cleaner element (Figure 24).
2. Place the air cleaner assembly onto the air cleaner base and secure it with the 2 wing nuts (Figure 24).
3. Place the air cleaner cover into position and tighten the cover knob (Figure 24).

## Servicing the Engine Oil


### Service Interval/Specification

**Note:** Change the oil more frequently when the operating conditions are extremely dusty or sandy.

**Oil Type:** Detergent oil (API service SF, SG, SH, or SJ)

**Crankcase Capacity:** 58 ounces (1.7 liter) with the filter removed; 51 ounces (1.5 liter) without the filter removed


**Viscosity:** Refer to the table (Figure 25).

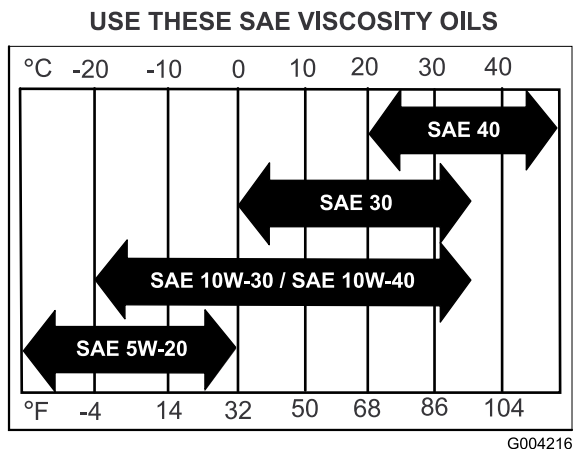

**Figure 25**

### Checking the Engine Oil Level

1. Park the machine on a level surface.
2. Disengage the PTO and set the parking brake.
3. Stop the engine, remove the key, and wait for all moving parts to stop before leaving the operating position.
4. Clean around the oil dipstick (Figure 26) so that dirt cannot fall into the filler hole and damage the engine.

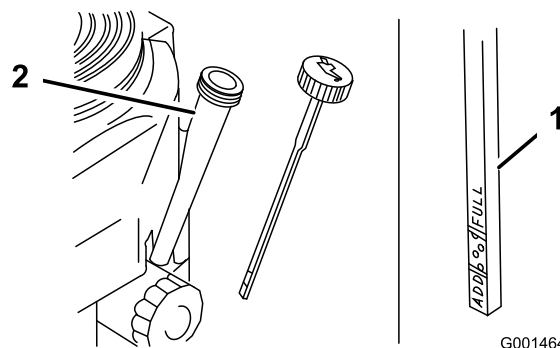

**Figure 26**

1. Oil dipstick
2. Filler tube

5. Unscrew the oil dipstick and wipe the end clean (Figure 26).
6. Slide the oil dipstick fully into the filler tube, but do not thread onto tube (Figure 26).
7. Pull the dipstick out and look at the end. If the oil level is low, slowly pour only enough oil into the filler tube to raise the level to the Full mark.

**Important:** Do not overfill the crankcase with oil and run the engine; engine damage can result.


### Changing the Oil

**Service Interval:** After the first 8 hours

Every 100 hours

1. Start the engine and let it run five minutes. This warms the oil so it drains better.
2. Park the machine so that the drain side is slightly lower than the opposite side to assure the oil drains completely.
3. Disengage the PTO and set the parking brake.
4. Stop the engine, remove the key, and wait for all moving parts to stop before leaving the operating position.
5. Slide the drain hose over the oil drain valve.
6. Place a pan below the drain hose. Rotate oil drain valve to allow oil to drain (Figure 27).
7. When oil has drained completely, close the drain valve.
8. Remove the drain hose (Figure 27).

**Note:** Dispose of the used oil at a recycling center.

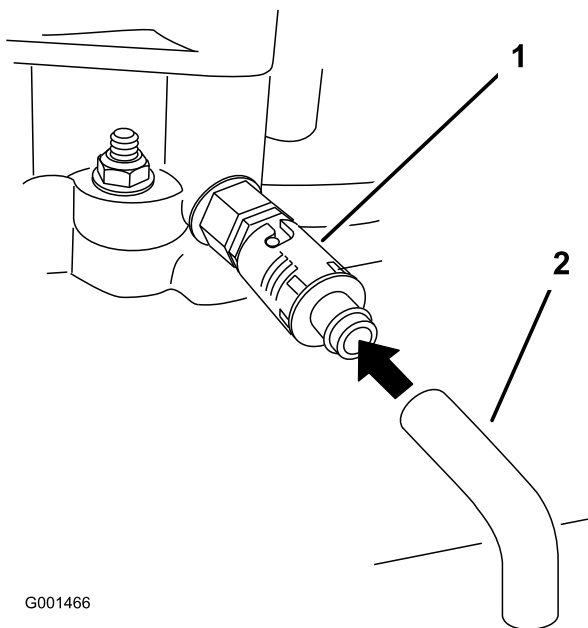

G001466

**Figure 27**

1. Oil drain valve                      2. Oil drain hose


9. Slowly pour approximately 80% of the specified oil into the filler tube (Figure 26).
10. Check the oil level; refer to Checking the Engine Oil Level.
11. Slowly add the additional oil to bring it to the **Full** mark.

## Changing the Oil Filter

**Service Interval:** Every 200 hours

**Note:** Change the oil filter more frequently when the operating conditions are extremely dusty or sandy.

1. Drain the oil from the engine; refer to Changing the Engine Oil.
2. Remove the old filter (Figure 28).

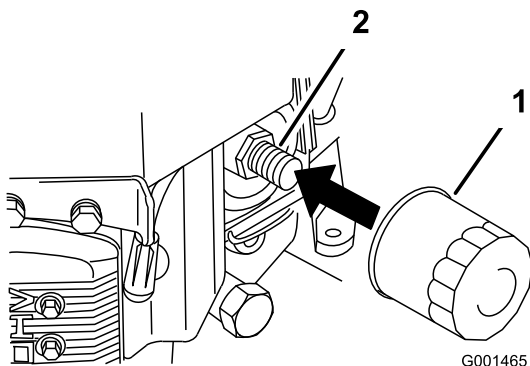

G001465

**Figure 28**

1. Oil filter                              2. Adapter

3. Apply a thin coat of new oil to the rubber gasket on the replacement filter (Figure 28).
4. Install the replacement oil filter to the filter adapter, turn the oil filter clockwise until the rubber gasket contacts the filter adapter, then tighten the filter an additional 3/4 turn (Figure 28).
5. Fill the crankcase with the proper type of new oil; refer to Servicing the Engine Oil.
6. Run the engine for about 3 minutes, stop the engine, and check for oil leaks around the oil filter and drain valve.
7. Check the engine oil level and add oil if needed.

## Servicing the Spark Plugs


### Service Interval/Specification

Ensure that the air gap between the center and side electrodes is correct before installing the spark plug. Use a spark plug wrench for removing and installing the spark plugs and a gapping tool/feeler gauge to check and adjust the air gap. Install a new spark plugs if necessary.

**Type:** Champion® RCJ8Y or equivalent **Air Gap:** 0.030 inch (0.75 mm)

### Removing the Spark Plugs

1. Disengage the PTO and set the parking brake.
2. Stop the engine, remove the key, and wait for all moving parts to stop before leaving the operating position.
3. Disconnect the wires from the spark plugs (Figure 29).

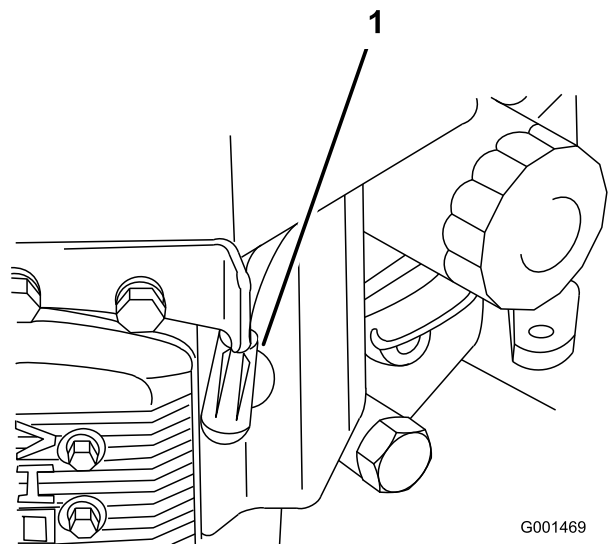

G001469


**Figure 29**

1. Spark-plug wire/spark plug

4. Clean around the spark plugs to prevent dirt from falling into the engine and potentially causing damage.
5. Remove the spark plugs and the metal washers.

## Checking the Spark Plugs

1. Look at the center of the spark plugs (Figure 30). If you see light brown or gray on the insulator, the engine is operating properly. A black coating on the insulator usually means that the air cleaner is dirty.
2. If needed, clean the spark plug with a wire brush to remove carbon deposits.

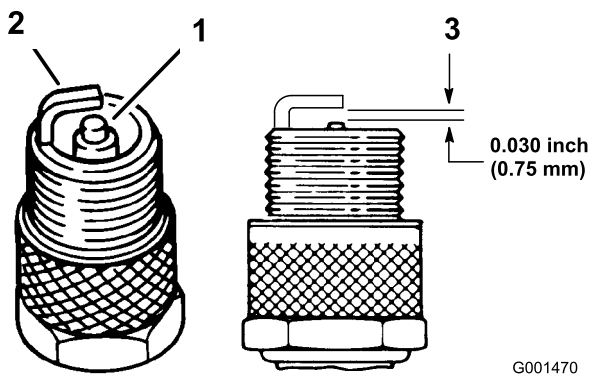

**Figure 30**

1. Center electrode insulator
2. Side electrode
3. Air gap (not to scale)

**Important:** Always replace the spark plugs when it has a black coating, worn electrodes, an oily film, or cracks.

3. Check the gap between the center and side electrodes (Figure 30). Bend the side electrode (Figure 30) if the gap is not correct.

## Installing the Spark Plugs

1. Install the spark plugs and the metal washer. Ensure that the air gap is set correctly.
2. Tighten the spark plugs to 16 ft-lb (22 N•m).
3. Connect the wires to the spark plugs (Figure 30).

# Fuel System Maintenance

## Servicing the Fuel Tank



**In certain conditions, gasoline is extremely flammable and highly explosive. A fire or explosion from gasoline can burn you and others and can damage property.**


- Drain gasoline from the fuel tank when the engine is cold. Do this outdoors in an open area. Wipe up any gasoline that spills.
- Never smoke when draining gasoline, and stay away from an open flame or where a spark may ignite the gasoline fumes.

## Draining the Fuel Tank

1. Park the machine on a level surface, to assure fuel tank drains completely. Then disengage the power take off (PTO), set the parking brake, and turn the ignition key to **off**. Remove the key.
2. Close the fuel shut-off valve at the fuel tank (Figure 31).
3. Squeeze the ends of the hose clamp together and slide it up the fuel line away from fuel filter (Figure 31).
4. Pull the fuel line off the fuel filter (Figure 31). Open the fuel shut-off valve and allow the gasoline to drain into a gas can or drain pan.

**Note:** Now is the best time to install a new fuel filter because the fuel tank is empty. Refer to Replacing the Fuel Filter.

5. Install the fuel line onto the fuel filter. Slide the hose clamp close to the valve to secure the fuel line.

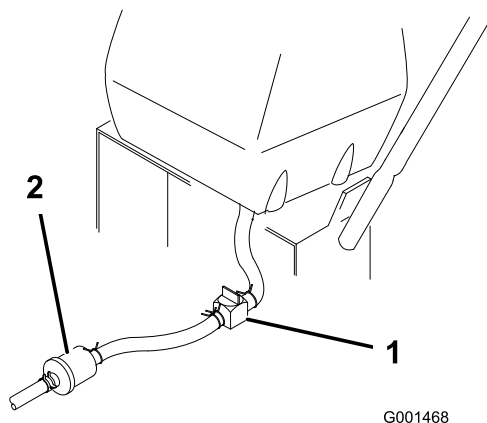

**Figure 31**

1. Fuel shut-off valve      2. Clamp

5. Remove the filter from the fuel lines.
6. Install a new filter and move the hose clamps close to the filter.
7. Open fuel shut-off valve at fuel tank (Figure 31).
8. Check for fuel leaks and repair if needed.
9. Wipe up any fuel that spilled.

## Servicing the Fuel Filter


### Replacing the Fuel Filter

Never install a dirty filter if it is removed from the fuel line.

**Note:** Note how the fuel filter is installed in order to install the new filter correctly.

**Note:** Wipe up any spilled fuel.

1. Disengage the PTO and set the parking brake.
2. Stop the engine, remove the key, and wait for all moving parts to stop before leaving the operating position.
3. Close fuel shut-off valve at the fuel tank (Figure 31).
4. Squeeze the ends of the hose clamps together and slide them away from the filter (Figure 32).

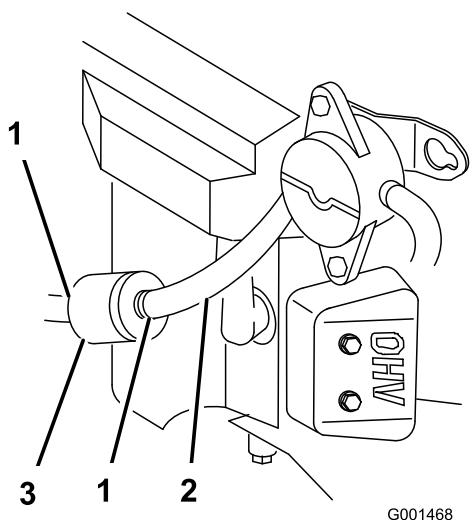

**Figure 32**

1. Hose clamp      3. Filter  
2. Fuel line

# Drive System Maintenance


## Checking the Tire Pressure

**Service Interval:** Every 50 hours/Monthly (whichever comes first)—Check the tire pressure

Check the pressure at the valve stem (Figure 33).

Maintain the air pressure in the rear tires at 12-14 psi (83-97 kPa). Uneven tire pressure can cause an uneven cut.

**Note:** The front tires are semi-pneumatic tires and do not require air pressure maintenance.

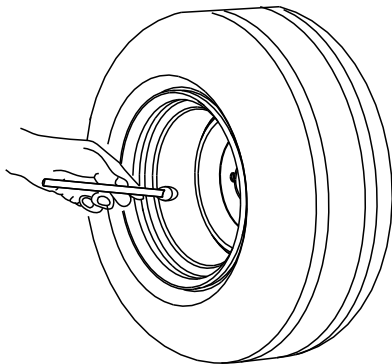

G001055

**Figure 33**

# Cooling System Maintenance

## Cleaning the Air Intake Screen


Before each use remove any build-up of grass, dirt or other debris from the cylinder and cylinder head cooling fins, air intake screen on flywheel end, and carburetor-governor levers and linkage. This will help insure adequate cooling and correct engine speed and will reduce the possibility of overheating and mechanical damage to the engine.

## Cleaning the Cooling System

**Service Interval:** Every 100 hours

Clean the air intake screen from grass and debris before each use.

1. Disengage the PTO and set the parking brake.
2. Stop the engine, remove the key, and wait for all moving parts to stop before leaving the operating position.
3. Remove the air intake screen, recoil starter and fan housing (Figure 34).
4. Clean the debris and grass from the engine parts.
5. Install air intake screen, recoil starter and fan housing (Figure 34).

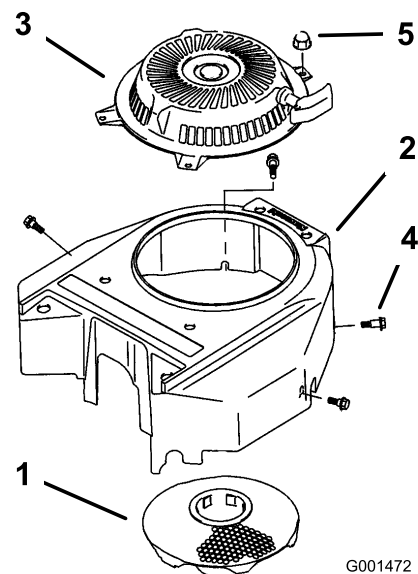

G001472

**Figure 34**

- |                      |         |
|----------------------|---------|
| 1. Air intake screen | 4. Bolt |
| 2. Fan housing       | 5. Nut  |
| 3. Recoil starter    |         |

# Brake Maintenance

## Servicing the Brakes

Before each use, check brakes on both a level surface and slope.

Always set the parking brake when you stop the machine or leave it unattended. If the parking brake does not hold securely, an adjustment is required.

## Checking the Brakes

1. Park the machine on a level surface, disengage the blade control (PTO).
2. Stop the engine, remove the key, and wait for all moving parts to stop before leaving the operating position.
3. Apply the parking brake. The wheels must lock when you try to push the machine forward.
4. If the wheels do not lock, adjust the brakes. Refer to Adjusting the Brakes.
5. Release the brake and press upper control bar very lightly, approximately 1/2 inch (13 mm). The wheels should rotate freely, if not; refer to Adjusting the Brakes.

## Adjusting the Brakes

The brake lever is on the upper control bar. If the parking brake does not hold securely, an adjustment is required.

1. Park the machine on a level surface, disengage the PTO, and set the parking brake.
2. Stop the engine, remove the key, and wait for all moving parts to stop before leaving the operating position.
3. Check the brake before you adjust it; refer to Checking the Brakes.
4. Release the parking brake; refer to Releasing the Parking Brake in Operation , page 13.
5. To adjust the brake, rotate the wing nuts on the brake rods (Figure 35). Turn the wing nuts clockwise to tighten the brake and counterclockwise to loosen the brake.

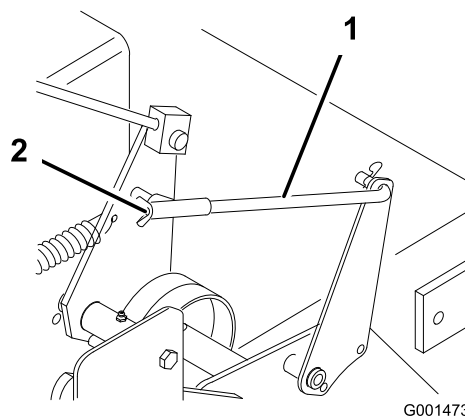


Figure 35

1. Brake rod
2. Wing nut

**Note:** Control bar should be parallel with the reference bar when properly adjusted.

6. Check the brake operation again; refer to Checking the Brakes.

**Important:** With the parking brake released, the rear wheels must rotate freely when you push the mower. If brake action and free wheel rotation cannot be achieved contact your service dealer immediately.

# Belt Maintenance


## Checking the Belts

**Service Interval:** Every 50 hours/Monthly (whichever comes first)

Squealing when the belt is rotating, blades slipping when cutting grass, frayed belt edges, burn marks and cracks are signs of a worn deck belt. Replace the deck belt if any of these conditions are evident.

## Replacing the Traction Drive Belt

1. Remove hairpin cotter securing brake rod to brake arm to relax belt idler tension (Figure 36).
2. Remove bottom and loosen top bolts of shield to rotate for belt clearance (Figure 36).
3. Lift the belt past idler and off the drive pulley (Figure 36).
4. Raise the wheel off ground enough to allow belt removal.
5. Replace the traction drive belt.
6. Secure shield with previously removed bolt and tighten bolts (Figure 36).
7. Secure brake rod to brake arm with hairpin cotter (Figure 36).

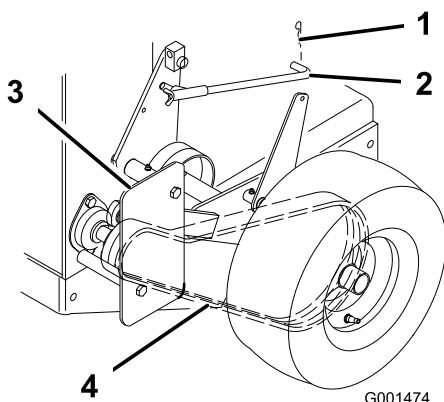


**Figure 36**

- |                   |               |
|-------------------|---------------|
| 1. Hairpin cotter | 3. Shield     |
| 2. Brake rod      | 4. Drive belt |

## Replacing the Transmission Drive Belt

1. Disengage the blade control (PTO) lever and set the parking brakes.

2. Stop the engine and wait for all moving parts to stop before leaving the operating position.
3. Raise the rear of the machine and hold it up with jack stands.
4. Remove the mower belt; refer to Replacing the Mower Belt (Figure 37).

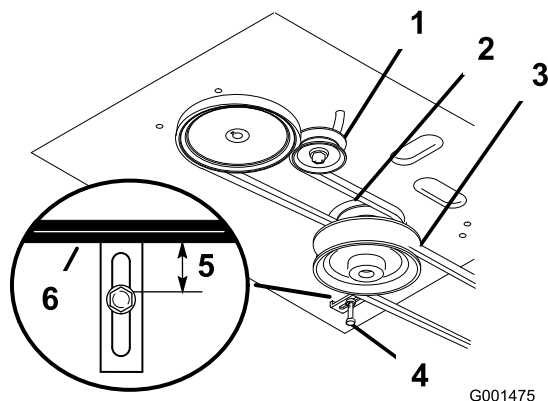

**Figure 37**

- |                         |                     |
|-------------------------|---------------------|
| 1. Idler pulley in slot | 4. Belt guide       |
| 2. Traction belt        | 5. 3/4 inch (19 mm) |
| 3. Mower belt           | 6. Mower belt       |

5. Loosen the pivot bolt enough to slide the idler pulley in the slot and remove the traction belt from the engine and the drive pulleys (Figure 37).
6. Install the new drive belt around the engine and the drive pulleys (Figure 37).
7. Slide the idler pulley in the engine frame to tension the traction belt (Figure 37).
8. Install the mower belt (Figure 37).
9. Check the belt guide under the engine frame for the proper adjustment (Figure 37).


**Note:** The distance between the belt guide and mower belt should be 3/4 inch (19 mm) when the mower belt is engaged. Adjust the belt if necessary. The disengaged belt should not drag or fall off the pulley when the guides are properly adjusted.

## Replacing the Mower Belt

1. Disengage the blade control (PTO) lever and set the parking brakes.
2. Stop the engine and wait for all moving parts to stop before leaving the operating position.
3. Remove the knobs and the belt cover on the mower.
4. Remove the idler pulley and the worn belt (Figure 38).
5. Install the new mower belt.

6. Install the idler pulley.
7. Engage the blade control (PTO) lever and check the belt tension. Refer to Adjusting the Mower Belt Tension.

**Note:** The proper mower belt tension is 10-15 lbf. (44-67 N) with the belt deflected 1/2 inch (13 mm) halfway between the pulleys (Figure 38).

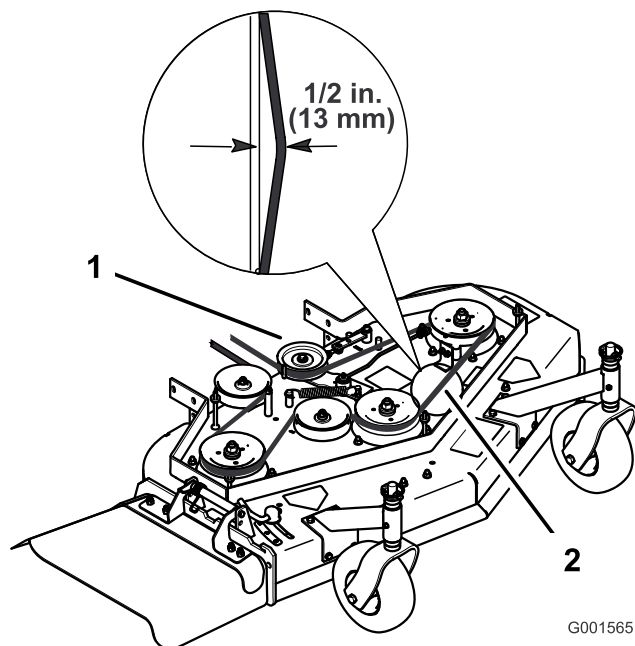


**Figure 38**

1. Mower belt with 1/2 inch (13 mm) deflection
2. Idler pulley

3. Loosen the locknut on the turnbuckle (Figure 39).
4. Rotate the turnbuckle toward the rear of the mower to increase the tension on the belt. Rotate the turnbuckle toward the front of the mower to decrease the tension on the belt (Figure 39).

**Note:** The eyebolt threads on both ends of the turnbuckle should be engaged a minimum of 5/16 inch (8 mm).

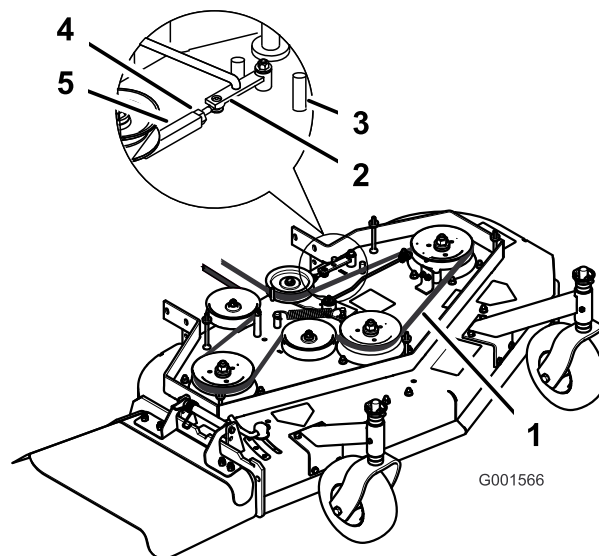

**Figure 39**

1. 1/2 inch (13 mm) deflection
2. Assist arm
3. Front stop
4. Locknut here
5. Turnbuckle

## Adjusting the Mower Belt Tension

### Adjusting the Tension

**Service Interval:** After the first 8 hours

After the first 25 hours


Every 50 hours

**Important:** The blade brake needs to be adjusted when the belt tension or the brake linkage is adjusted.

**Important:** The belt must be tight enough to not slip during heavy loads while cutting grass. Over tensioning the belt will reduce the spindle bearing life, the belt life and the idler pulley life.

1. Disengage the blade control (PTO) lever and set the parking brakes.
2. Stop the engine and wait for all moving parts to stop before leaving the operating position.

5. Engage the bladed control lever (PTO) and check the belt tension.
6. If there is no adjustment left in the turnbuckle and the belt is still loose, the rear idler pulley needs to be positioned to the middle or front hole (Figure 40). Use the hole that will give the correct adjustment.
7. When the idler pulley is moved the belt guide must be moved. Move the belt guide to the front position (Figure 40).

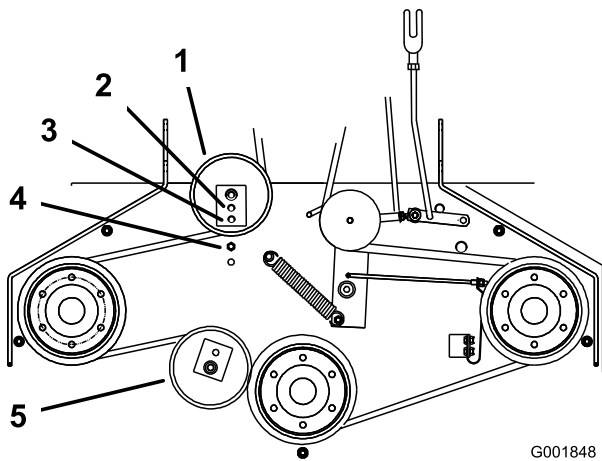


**Figure 40**

1. Rear idler pulley
2. Middle hole
3. Front hole
4. Belt guide in back position
5. Front idler pulley

8. Check the belt guide under the engine frame for proper adjustment (Figure 41).

**Note:** The distance between the belt guide and the mower belt should be  $\frac{3}{4}$  inch (19 mm) when you engage the mower belt (Figure 41). Adjust the mower belt as necessary. The disengaged belt should not drag or fall off the pulley when the guides and belt tension are properly adjusted.

9. Check the blade brake adjustment; refer to Adjusting the Blade Brake.

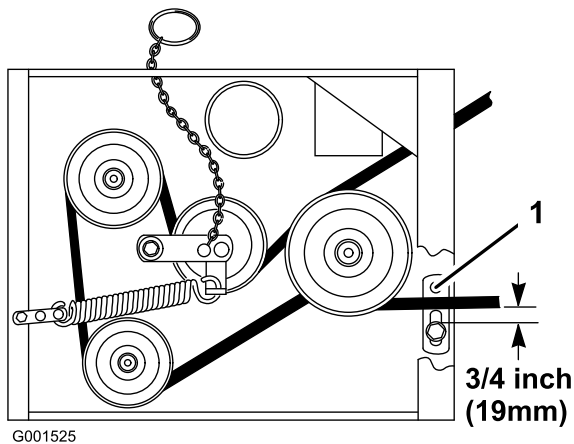

**Figure 41**


1. Belt guide

## Adjusting the PTO Engagement Linkage

**Important:** The blade brake needs to be adjusted when the belt tension or the brake linkage is adjusted.

The PTO engagement linkage adjustment is located beneath the front left hand corner of the engine deck.


1. Disengage the blade control (PTO) lever and set the parking brakes.
2. Stop the engine and wait for all moving parts to stop before leaving the operating position.
3. Engage the blade control lever (PTO).
4. Adjust the linkage length to where the lower end of the bellcrank just clears the axle support gusset (Figure 42).

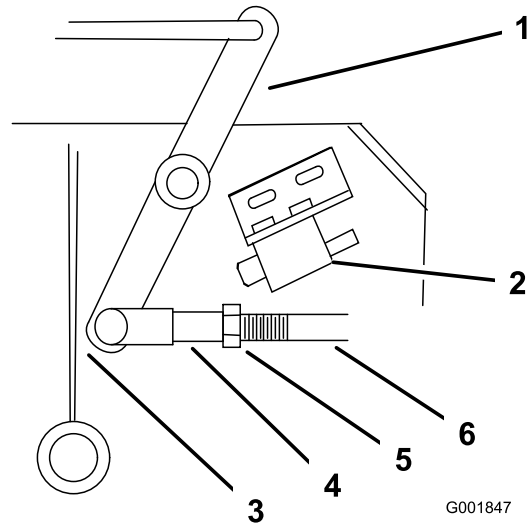

**Figure 42**


1. Bellcrank
2. Safety switch located under engine deck
3. Bellcrank just clears the gusset with the PTO engaged
4. Yoke
5. Nut
6. Assist arm link

5. Make sure the assist arm is against the rear assist arm stop on the deck (Figure 43).
6. Push the blade control lever (PTO) down to the disengaged position.
7. The assist arm should contact the front assist arm stop on the deck. If it does not contact, adjust the bellcrank so it is closer to the gusset (Figure 43).

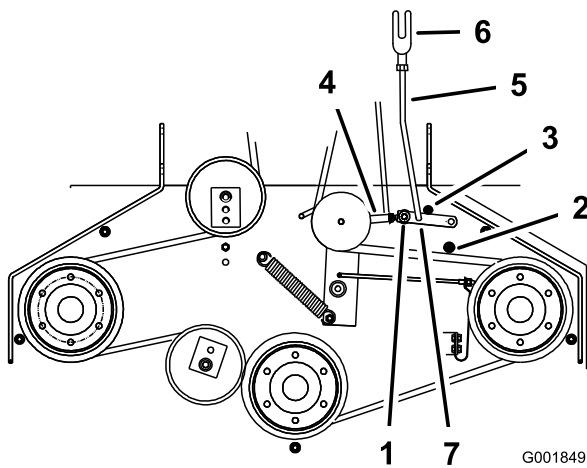

**Figure 43**

- |                          |                         |
|--------------------------|-------------------------|
| 1. Assist arm            | 3. Rear assist arm stop |
| 2. Front assist arm stop | 4. Turnbuckle           |

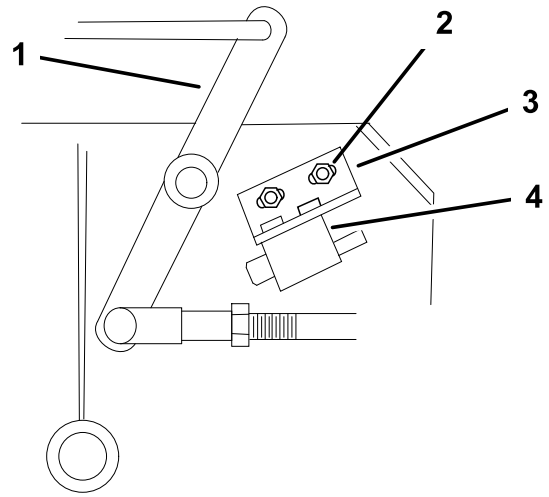

**Figure 44**

- |                   |                            |
|-------------------|----------------------------|
| 1. Bellcrank      | 3. Switch mounting bracket |
| 2. Bolts and nuts | 4. Switch body             |

8. To adjust the assist arm link, remove the hairpin cotter pin from the assist arm (Figure 43).
9. Loosen the nut against the yoke (Figure 42).
10. Remove the assist arm link from the assist arm and rotate the link to adjust the length.
11. Install the assist arm link into the assist arm and secure it with the hairpin cotter pin (Figure 43).
12. Check if the assist arm hits against the stops correctly.

## Adjusting the PTO Safety Switch

1. Disengage the blade control (PTO) lever and set the parking brakes.
2. Stop the engine and wait for all moving parts to stop before leaving the operating position.
3. Disengage the blade control lever (PTO). Make sure the assist arm is against the front assist stop arm.
4. If needed, adjust the blade safety switch by loosening the bolts holding the switch bracket (Figure 44).
5. Move the mounting bracket until the bellcrank depresses the plunger by a 1/4 inch (6 mm).
- 6.

**Note:** Make sure the bellcrank **does not** touch the switch body or damage to the switch could occur (Figure 44).

Tighten the switch mounting bracket.

# Mower Deck Maintenance

## Servicing the Cutting Blades

To ensure a superior quality of cut, keep the blades sharp. For convenient sharpening and replacement, you may want to keep extra blades on hand.



**A worn or damaged blade can break, and a piece of the blade could be thrown into the operator's or bystander's area, resulting in serious personal injury or death.**


- Inspect the blade periodically for wear or damage.
- Replace a worn or damaged blade.

## Before Inspecting or Servicing the Blades

Park the machine on a level surface, disengage the blade control bail and set the parking brake. Turn the ignition key to off. Remove the key and disconnect the spark plug wire(s) from the spark plug(s).

## Inspecting the Blades

1. Inspect the cutting edges (Figure 45). If the edges are not sharp or have nicks, remove and sharpen the blades. Refer to Sharpening the Blades.

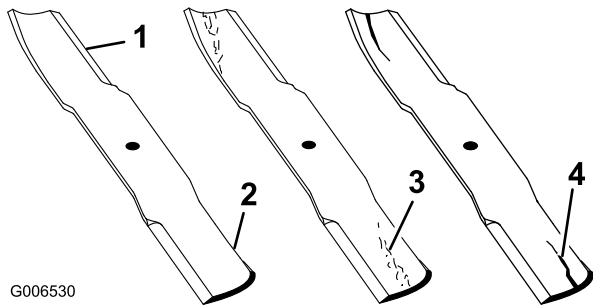


**Figure 45**

- |                 |                                     |
|-----------------|-------------------------------------|
| 1. Cutting Edge | 3. Wear/slot forming in curved area |
| 2. Sail         | 4. Crack in the curved area         |


2. Inspect the blades, especially the curved area (Figure 45). If you notice any damage, wear, or a slot forming in this area (item 3 in Figure 45), immediately install a new blade.

## Checking for Bent Blades

1. Rotate the blades until the ends face forward and backward (Figure 46).

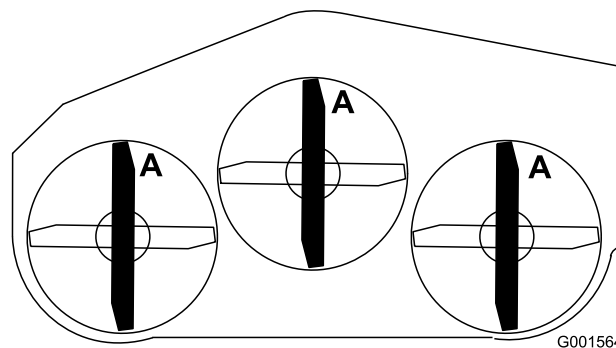

**Figure 46**

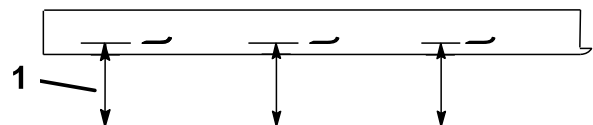

**Figure 47**

1. Measure from cutting edge to a level surface
2. Measure from a level surface to the cutting edge, position A, of the blades (Figure 47). Note this dimension.
3. Rotate the opposite ends of the blades forward.
4. Measure from a level surface to the cutting edge of the blades at the same position as in step 1. The difference between the dimensions obtained in steps 1 and 2 must not exceed 1/8 inch (3 mm). If this dimension exceeds 1/8 inch (3 mm), the blade is bent and must be replaced. Refer to Removing the Blades and Installing the Blades.



**A blade that is bent or damaged could break apart and could seriously injure or kill you or bystanders.**

- Always replace bent or damaged blade with a new blade.
- Never file or create sharp notches in the edges or surfaces of blade.

## Removing the Blades

Replace the blades if you hit a solid object or if the blades are out of balance or bent. To ensure optimum performance and continued safety conformance of

the machine, use genuine Toro replacement blades. Replacement blades made by other manufacturers may result in non-conformance with safety standards.

1. Hold the blade bolt with a wrench.
2. Remove the nut, blade bolt, curved washer, blade, spacers, and thin washer from the spindle (Figure 48).

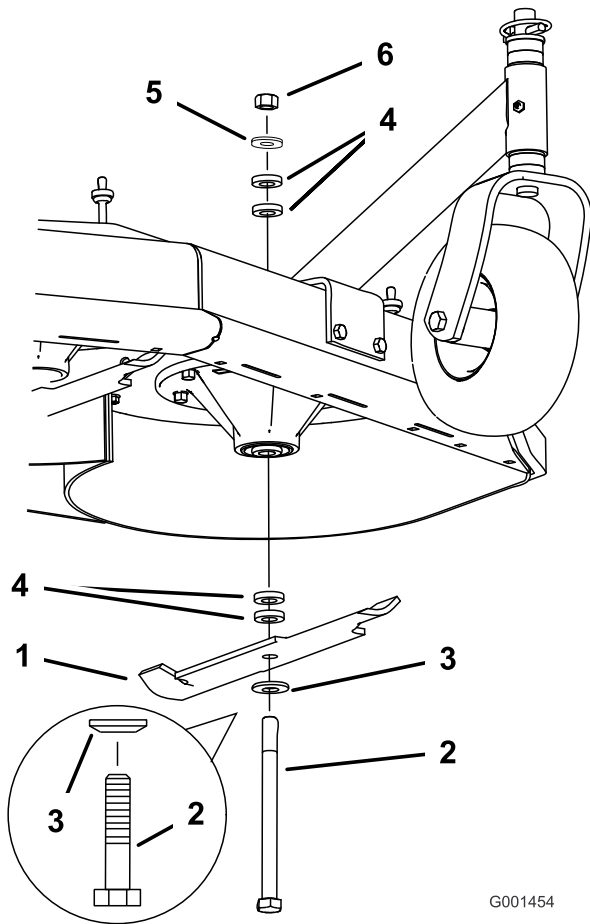


Figure 48

- |                  |                |
|------------------|----------------|
| 1. Blade         | 4. Spacer      |
| 2. Blade bolt    | 5. Thin washer |
| 3. Curved washer | 6. Nut         |

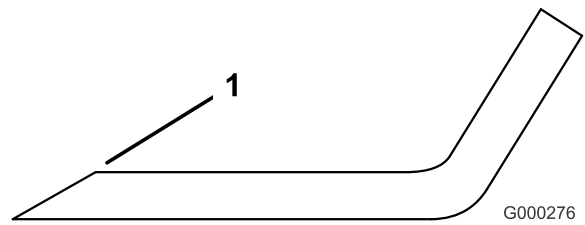


Figure 49

1. Sharpen at original angle

2. Check the balance of the blade by putting it on a blade balancer (Figure 50). If the blade stays in a horizontal position, the blade is balanced and can be used. If the blade is not balanced, file some metal off the end of the sail area only (Figure 50). Repeat this procedure until the blade is balanced.

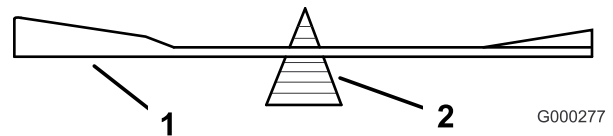


Figure 50

- |          |             |
|----------|-------------|
| 1. Blade | 2. Balancer |
|----------|-------------|

## Installing the Blades

1. Place the blade onto the bolt and over the cone washer. Select the proper number of spacer(s) for the height-of-cut, and slide the bolt into the spindle (Figure 48).

**Important:** The curved part of the blade must point upward toward the inside of the mower to ensure proper cutting.


2. Install the remaining spacer(s) and secure them with a thin washer and a nut (Fig. Figure 48).
3. Torque the blade bolt to 75-80 ft-lb (101-108 N·m).

## Adjusting the Blade Brake

1. Disengage the PTO, turn the ignition key to off, and remove the key.
2. Wait for all moving parts to stop before leaving the operating position and then set the parking brakes.
3. If necessary, adjust the spring mounting bolts so that the blade brake pad rubs against both sides of the pulley groove (Figure 51).
4. Adjust the nut at the end of the blade brake rod until there is 1/8-3/16 inch (3 mm–5 mm) between the nut and spacer (Figure 51).
5. Engage the blades. Ensure the blade brake pad no longer contacts the pulley groove.


## Sharpening the Blades

1. Use a file to sharpen the cutting edge at both ends of the blade (Figure 49). Maintain the original angle. The blade retains its balance if the same amount of material is removed from both cutting edges.

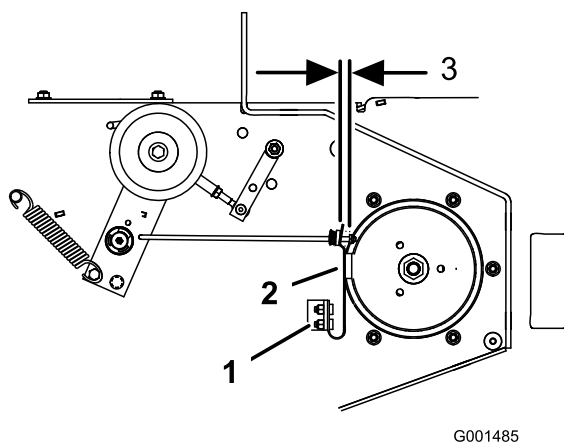

**Figure 51**

- |                          |                              |
|--------------------------|------------------------------|
| 1. Spring mounting bolts | 3. 1/8-3/16 inch (3 mm–5 mm) |
| 2. Blade brake pad       |                              |

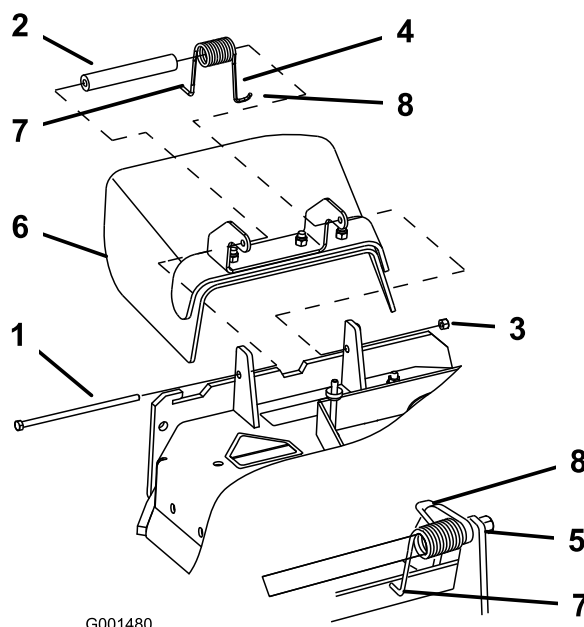

**Figure 52**

- |            |                                                                   |
|------------|-------------------------------------------------------------------|
| 1. Bolt    | 5. Spring installed                                               |
| 2. Spacer  | 6. Grass Deflector                                                |
| 3. Locknut | 7. L end of spring, place behind deck edge before installing bolt |
| 4. Spring  | 8. J hook end of spring                                           |

## Replacing the Grass Deflector



An uncovered discharge opening could allow the lawn mower to throw objects in the operator's or bystander's direction and result in serious injury or death. Also, contact with the blade could occur.

Never operate the lawn mower with the grass deflector removed unless you install a cover plate, a mulch plate, or a grass chute and catcher.

1. Remove the locknut, bolt, spring and spacer holding the deflector to the pivot brackets (Figure 52). Remove damaged or worn grass deflector.

2. Place spacer and spring onto grass deflector. Place the L end of spring behind deck edge.

**Note:** Make sure the L end of spring is installed behind deck edge before installing the bolt as shown in Figure 52.

3. Install bolt and nut. Place the J hook end of spring around grass deflector (Figure 52).

**Important:** The grass deflector must be free to rotate. Lift the deflector up to the full open position and ensure that it rotates freely without binding into the full down position.

# Storage

1. Disengage the power take off (PTO), set the parking brake, and turn the ignition key to off. Remove the key.
2. Remove grass clippings, dirt, and grime from the external parts of the entire machine, especially the engine. Clean dirt and chaff from the outside of the engine's cylinder head fins and blower housing.  
**Important:** You can wash the machine with mild detergent and water. Do not pressure wash the machine. Avoid excessive use of water, especially near the shift lever plate, and engine.
3. Check the brake; refer to Servicing the Brake in Brake Maintenance , page 32.
4. Service the air cleaner; refer to Servicing the Air Cleaner.
5. Grease the machine; refer to Greasing and Lubrication in Lubrication , page 24.
6. Change the crankcase oil; refer to Servicing the Engine in.
7. Check the tire pressure; refer to Checking the Tire Pressure in Drive System Maintenance , page 31.
8. For long-term storage:
  - A. Add stabilizer/conditioner additive to fuel in the tank.
  - B. Run engine to distribute conditioned fuel through the fuel system (5 minutes).
  - C. Stop engine, allow to cool and drain the fuel tank; refer to Servicing the Fuel Tank in Fuel System Maintenance , page 29, or operate engine until it stops.
  - D. Restart engine and run until it stops. Repeat, on Choke until engine will not restart.
  - E. Dispose of fuel properly. Recycle as per local codes.**Note:** Do not store stabilizer/conditioned gasoline over 90 days.
9. Remove the spark plug(s) and check its condition; refer to Servicing the Spark Plug. With the spark plug(s) removed from the engine, pour two tablespoons of engine oil into the spark plug hole. Now use the starter to crank the engine and distribute the oil inside the cylinder. Install the spark plug(s). Do not install the wire on the spark plug(s).
10. Check and tighten all bolts, nuts, and screws. Repair or replace any part that is damaged or defective.
11. Paint all scratched or bare metal surfaces. Paint is available from your Authorized Service Dealer.
12. Store the machine in a clean, dry garage or storage area. Remove the key from the ignition switch and keep it in a memorable place. Cover the machine to protect it and keep it clean.

# Troubleshooting


| Problem                                                       | Possible Cause                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Corrective Action                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Engine will not start, starts hard, or fails to keep running. | <ol style="list-style-type: none"> <li>1. Fuel tank is empty.</li> <li>2. Fuel shut off valve is closed.</li> <li>3. Choke is not on.</li> <li>4. Air cleaner is dirty.</li> <li>5. Spark plug wire is loose or disconnected.</li> <li>6. Spark plug is pitted, fouled, or the gap is incorrect.</li> <li>7. Dirt in the fuel filter.</li> <li>8. Dirt, water, or stale fuel is in the fuel system.</li> </ol>                                                                 | <ol style="list-style-type: none"> <li>1. Fill the fuel tank with gasoline.</li> <li>2. Open the fuel shut off valve.</li> <li>3. Move the throttle lever to choke position.</li> <li>4. Clean or replace the air cleaner element.</li> <li>5. Install the wire on spark plug.</li> <li>6. Install a new, correctly gapped spark plug.</li> <li>7. Replace the fuel filter.</li> <li>8. Contact an Authorized Service Dealer.</li> </ol> |
| Engine loses power.                                           | <ol style="list-style-type: none"> <li>1. Engine load is excessive.</li> <li>2. Air cleaner is dirty.</li> <li>3. Oil level in the crankcase is low.</li> <li>4. Cooling fins and air passages under the engine blower housing are plugged.</li> <li>5. Spark plug is pitted, fouled, or the gap is incorrect.</li> <li>6. Vent hole in the fuel cap is plugged.</li> <li>7. Dirt in the fuel filter.</li> <li>8. Dirt, water, or stale fuel is in the fuel system.</li> </ol> | <ol style="list-style-type: none"> <li>1. Reduce the ground speed.</li> <li>2. Clean the air cleaner element.</li> <li>3. Add oil to the crankcase.</li> <li>4. Remove the obstruction from the cooling fins and air passages.</li> <li>5. Install a new, correctly gapped spark plug.</li> <li>6. Clean or replace the fuel cap.</li> <li>7. Replace the fuel filter.</li> <li>8. Contact an Authorized Service Dealer.</li> </ol>      |
| Engine overheats.                                             | <ol style="list-style-type: none"> <li>1. Engine load is excessive.</li> <li>2. Oil level in the crankcase is low.</li> <li>3. Cooling fins and air passages under the engine blower housing are plugged.</li> </ol>                                                                                                                                                                                                                                                           | <ol style="list-style-type: none"> <li>1. Reduce the ground speed.</li> <li>2. Add oil to the crankcase.</li> <li>3. Remove the obstruction from the cooling fins and air passages.</li> </ol>                                                                                                                                                                                                                                           |
| Machine does not drive.                                       | <ol style="list-style-type: none"> <li>1. Shift lever is in neutral.</li> <li>2. Traction belt is worn, loose or broken.</li> <li>3. Traction belt is off a pulley.</li> </ol>                                                                                                                                                                                                                                                                                                 | <ol style="list-style-type: none"> <li>1. Move the shift lever to a drive gear position.</li> <li>2. Change the belt.</li> <li>3. Change the belt.</li> </ol>                                                                                                                                                                                                                                                                            |
| Abnormal vibration.                                           | <ol style="list-style-type: none"> <li>1. Cutting blade(s) is/are bent or unbalanced.</li> <li>2. Blade mounting bolt is loose.</li> <li>3. Engine mounting bolts are loose.</li> <li>4. Loose engine pulley, idler pulley, or blade pulley.</li> <li>5. Engine pulley is damaged.</li> <li>6. Blade spindle is bent.</li> </ol>                                                                                                                                               | <ol style="list-style-type: none"> <li>1. Install new cutting blade(s).</li> <li>2. Tighten the blade mounting bolt.</li> <li>3. Tighten the engine mounting bolts.</li> <li>4. Tighten the appropriate pulley.</li> <li>5. Contact an Authorized Service Dealer.</li> <li>6. Contact an Authorized Service Dealer.</li> </ol>                                                                                                           |
| Uneven cutting height.                                        | <ol style="list-style-type: none"> <li>1. Blade(s) not sharp.</li> <li>2. Cutting blade(s) is/are bent.</li> <li>3. Mower is not level.</li> <li>4. Underside of mower is dirty.</li> <li>5. Tire pressure is not correct.</li> <li>6. Blade spindle bent.</li> </ol>                                                                                                                                                                                                          | <ol style="list-style-type: none"> <li>1. Sharpen the blade(s).</li> <li>2. Install new cutting blade(s).</li> <li>3. Level the mower from side-to-side and front-to-rear.</li> <li>4. Clean the underside of the mower.</li> <li>5. Adjust the tire pressure.</li> <li>6. Contact an Authorized Service Dealer.</li> </ol>                                                                                                              |

| Problem               | Possible Cause                                                                                                                                                                                                       | Corrective Action                                                                                                                                                                                                                                                |
|-----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Blades do not rotate. | <ol style="list-style-type: none"> <li>1. Mower deck belt is worn or loose.</li> <li>2. Mower deck belt is broken.</li> <li>3. Mower deck belt is off pulley.</li> <li>4. Broken or missing idler spring.</li> </ol> | <ol style="list-style-type: none"> <li>1. Check the belt tension.</li> <li>2. Install a new deck belt.</li> <li>3. Inspect the belt and replace if damaged. Check the pulleys and idlers and adjust the belt tension.</li> <li>4. Replace the spring.</li> </ol> |

# Schematics

## KAWASAKI TWIN

| WIRE COLOR CODES |       |   |       |
|------------------|-------|---|-------|
| BLK              | BLACK | W | WHITE |
| BU               | BLUE  |   |       |

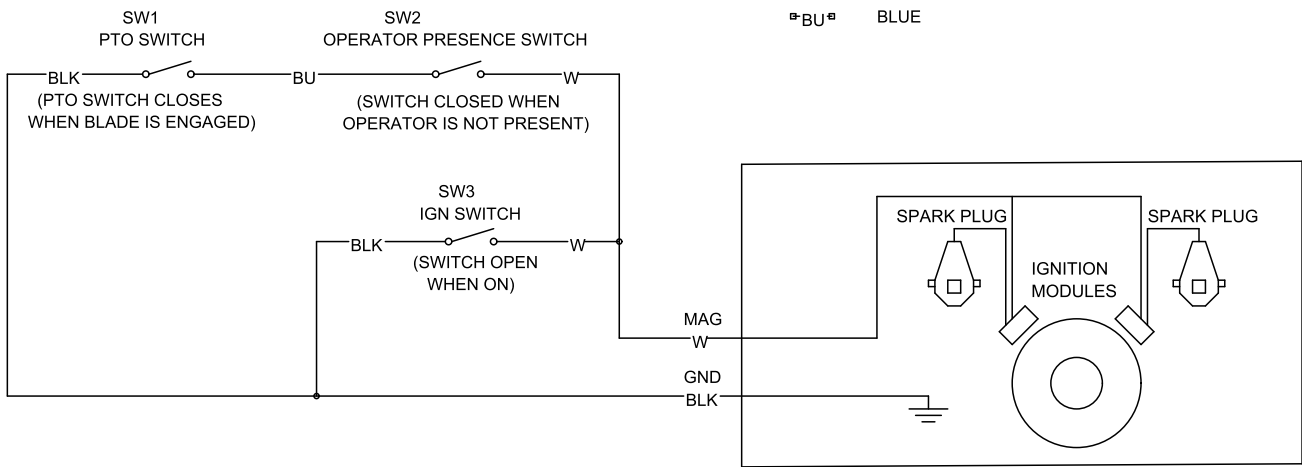

G001471

Electrical Schematic (Rev. -)



Landscape  
Contractor  
Equipment (LCE)

## The Toro Total Coverage Guarantee

### A Limited Warranty

#### Conditions and Products Covered

The Toro® Company and its affiliate, Toro Warranty Company, pursuant to an agreement between them, jointly promise to repair the listed Toro Products if defective in materials or workmanship. The following time periods apply from the date of purchase:

This warranty applies to:

- ProLine Mid-Size Mowers and Attachments 1 year
- Z Master Mid-Mount ZRTs and Attachments 1 year

| Components                                      | Warranty Period                |
|-------------------------------------------------|--------------------------------|
| Traction Unit Frame and Carrier Frame           | 2 year                         |
| All Spindles                                    | 3 years Parts<br>2 years Labor |
| Engines* and /Hydraulic System                  | 2 years                        |
| Deck Shells (34 <sup>2</sup> -72 <sup>2</sup> ) | 2 years                        |
| Z500 Series Electric Clutch                     | 2 years                        |
| Remaining Components                            | 1 year                         |

\*Some engines used on Toro LCE Products are warranted by the engine manufacturer. This warranty includes the cost of parts and labor, but you must pay transportation costs.

#### Instructions for Obtaining Warranty Service

If you think that your Toro Product contains a defect in materials or workmanship, follow this procedure:

- Contact any Toro Authorized or Master Service Dealer to arrange service at their dealership. To locate a dealer convenient to you, access our website at [www.Toro.com](http://www.Toro.com). You may also call our Toro Customer Care Department toll free at 888-865-5676 (U.S. Customers) or 888-865-5691 (Canada customers).
- Bring the product and your proof of purchase (sales receipt) to the Service Dealer.

If for any reason you are dissatisfied with the Service Dealer's analysis or with the assistance provided, contact us at:

LCB Customer Service Department  
Toro Warranty Company  
8111 Lyndale Avenue South  
Bloomington, MN 55420-1196

#### Owner Responsibilities

You must maintain your Toro Product by following the maintenance procedures described in the operator's manual. Such routine maintenance, whether performed by a dealer or by you, is at your expense.

#### Items and Conditions Not Covered

There is no other express warranty except for special emission system coverage on some products. This express warranty does not cover the following:

- Cost of regular maintenance service or parts, such as filters, fuel, lubricants, tune-up parts, blade sharpening, brake and clutch adjustments.
- Any product or part which has been altered or misused or required replacement or repair due to normal wear, accidents, or lack of proper maintenance.
- Repairs necessary due to improper fuel, contaminants in the fuel system, or failure to properly prepare the fuel system prior to any period of non-use over three months.
- Pickup and delivery charges.

#### General Conditions

All repairs covered by this warranty must be performed by an Authorized Toro Service Dealer using Toro approved replacement parts.

**Neither The Toro® Company nor Toro Warranty Company is liable for indirect, incidental or consequential damages in connection with the use of the Toro Products covered by this warranty, including any cost or expense of providing substitute equipment or service during reasonable periods of malfunction or non-use pending completion of repairs under this warranty.**

**Some states do not allow exclusions of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions and limitations may not apply to you.**

**All implied warranties of merchantability (that the product is fit for ordinary use) and fitness for use (that the product is fit for a particular purpose) are limited to the duration of the express warranty.**

**This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.**

#### Countries Other than the United States or Canada

Customers who have purchased Toro products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province, or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the Toro importer. If all other remedies fail, you may contact us at Toro Warranty Company.