




HAYTER

HOBBY EXECUTIVE

**HAND PROPELLED
ELECTRIC LAWN MOWER**

FROM MACHINE NUMBER 005 567

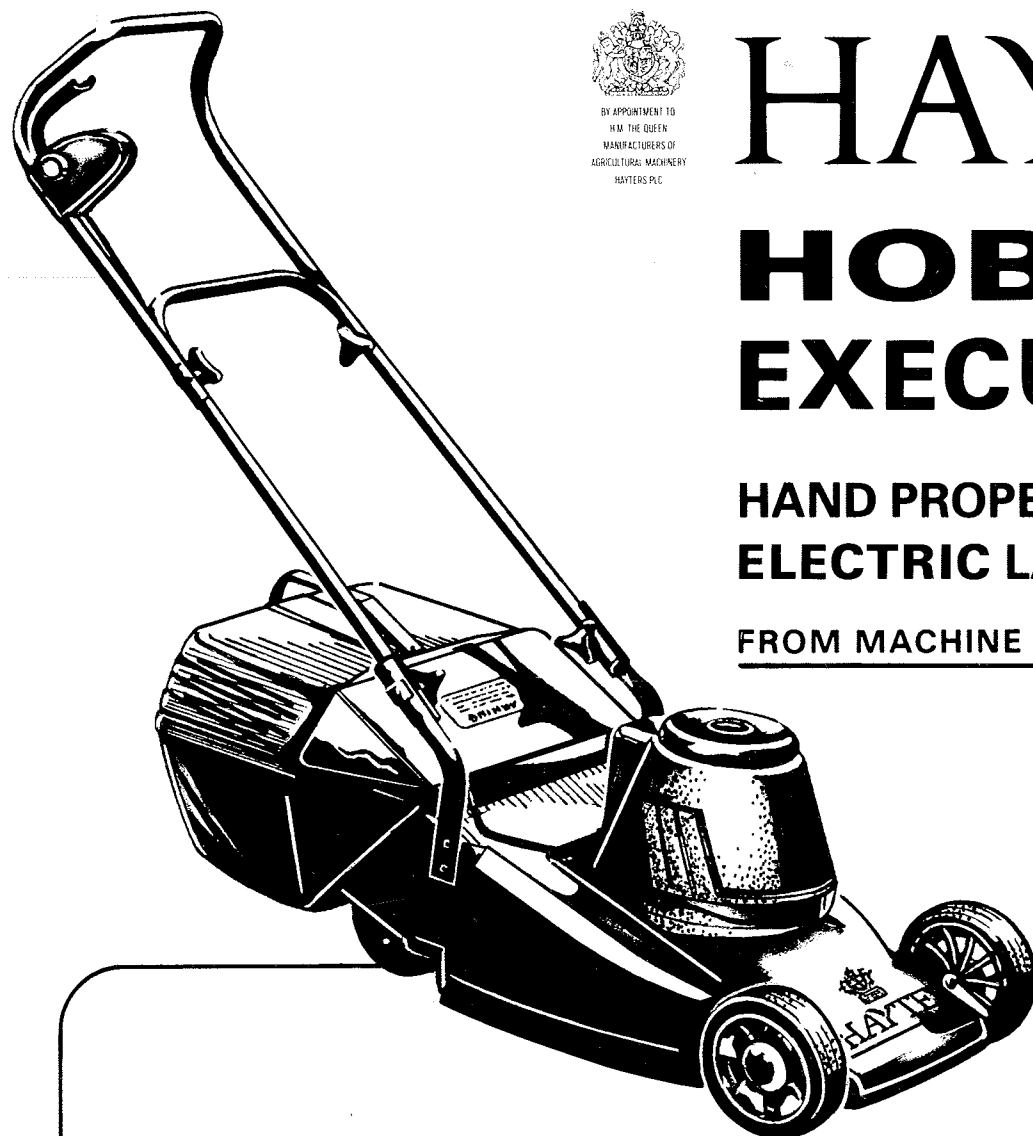

**OPERATING INSTRUCTIONS
ILLUSTRATED PARTS LIST**

HAYTERS PLC. SPELLBROOK BISHOP'S STORTFORD
HERTS ENGLAND CM23 4BU



This symbol is used to indicate a hazardous situation.
Please note especially the instruction.

SAFETY PRECAUTIONS



Know your controls. Read the user instructions carefully.
Learn how to stop the mower quickly in an emergency.
Do not mow in rain, wet ground conditions or leave outside.



Before using always visually inspect to see that blades,
blade bolts and cutter assembly are not worn or damaged.
Replace worn or damaged blades together with their fixings
in sets to preserve the balance.



Always be sure the mower is in safe operating condition.
Use only replacement parts made and guaranteed by the
original manufacturer of your mower.



Damaged blades and worn bolts are major hazards. Check all
nuts, bolts and screws frequently.



Never use the mower unless the grassbox or guards provided
by the manufacturer are in position.



Do not mow barefoot or in open sandals. Wear stout footwear.
Wearing of shoes with rubber or manmade soles will enhance
safety.



Make sure the lawn is clear of sticks, stones, bones, wire
and debris; they could be thrown by the blade.



Start the mower carefully with feet well away from the blades.



Do not mow whilst people, especially children, or pets are
in the mowing area.



Remove the plug from the mains before leaving the mower
unattended for any period.



Switch off before pushing the mower over surfaces other than
grass.



Do not allow children or people unfamiliar with these instructions
to use the mower.

SAFETY PRECAUTIONS contd.



On slopes, be extra careful of your footing and wear non-slip footwear.



Never cut grass by pulling the mower towards you.



Never pick up or carry a mower when it is operating or still connected to the mains supply.



CUTTERBAR CONTINUES TO ROTATE AFTER MACHINE IS SWITCHED OFF. INDICATOR DISC IN TOP OF MOTOR COVER WILL SHOW WHEN ROTATION HAS STOPPED.



You must stop and inspect the machine should you strike any solid object.



Any damage should be repaired before restarting to operate machine.

INTRODUCTION

The Hayter 16" Hobby Electric mower is robustly constructed and designed to give an efficient, economical performance combined with ease of operation. The correct operation and attention to routine maintenance as recommended will ensure the long and efficient service from the machine. It is important that the machine is not abused or neglected.

The machine is carefully checked at our works prior to despatch, every effort is made by Hayters to see that it arrives in perfect condition. Your dealer will ensure this on delivery. It is recommended that you permit the dealer to go through the operating instructions with you.

Due to the possible settling in of new components, it is essential that after a short period of use all securing nuts be checked and tightened if necessary.

GUARANTEE

The machine is guaranteed against faulty workmanship and materials for a period of 12 months from the date of purchase. In the case of components not manufactured by Hayters P.L.C., no guarantee is given but the purchaser shall be entitled to the benefit of any guarantee given by the manufacturers of such components. Any claim under guarantee should be referred to the Hayter Agent through whom the machine was originally supplied, quoting the machine Serial Number.

The guarantee becomes void if any parts not made or supplied by Hayters are fitted to the machine. In the case of machines being used for hiring out purposes, no guarantee of any kind is given or is to be implied.

ASSEMBLY INSTRUCTIONS

Unpack the machine from the carton and unfold the handlebars as shown in Fig.1. Securely tighten the four securing handknobs.

ELECTRICAL CONNECTIONS



You are recommended to use a residual current device (RCD) - 30 M/A sensitive. A normal plug & fuse will not provide protection against electrocution.

The mower is double insulated and has an over-load cut-out with automatic reset. The machine operates on 240V 50Hz and the cable supplied is 2 core 10A (or 1 mm²) to HO5RN-F or equivalent. The cable must be fitted with suitable plug and operated from a 13 or 15A electricity supply socket.

It is IMPORTANT that the plug be connected as shown in Fig.2 and is fitted with a 13A fuse.

The outer sheath of the cable must be securely fixed by the cord clamp.

Always use an approved extension lead. Ensure that plug & socket are correctly wired with plug or male half to machine & socket or female half to mains.

Safe working practice should always be followed since, even with an (RCD) in circuit, safety cannot be guaranteed.

Check your RCD every time you use it.

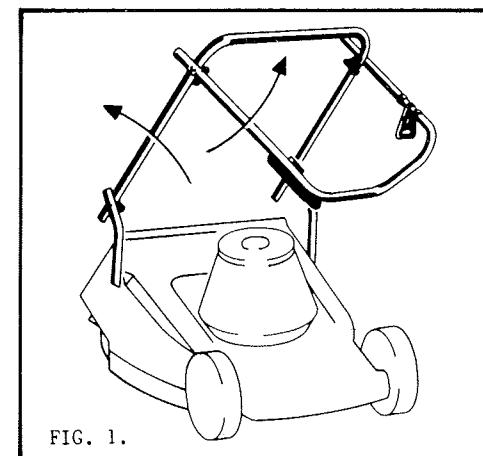


FIG. 1.

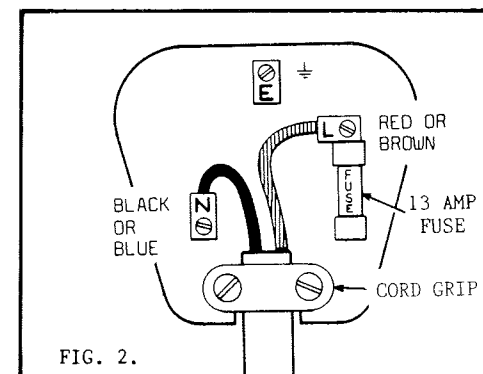


FIG. 2.


Residual Current Operated Circuit Breakers were previously known as Earth Leakage Circuit Breakers (ELCB).

We recommend B & R 'Electricals' Power Breaker-Sensitive or the Schalter Safety Switch Plug DNS2000/2.

OPERATING INSTRUCTIONS:

Starting, stopping and overload protection


Supply cable: Plug in the cable to the motor switch and fit the cable into the cable cleat as shown in Fig.3.

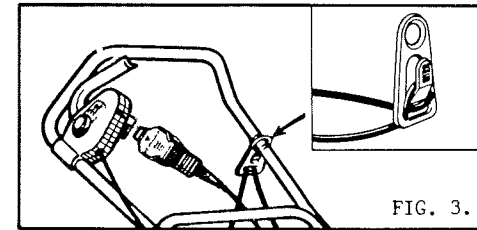

Motor switch: The motor switch is fitted with a safety button which prevents the motor from being accidentally started. To start the motor, press button and pull lever towards the handlebar as shown in Fig.4. The safety button will remain depressed until the lever is released.



RELEASE OF THE LEVER WILL SWITCH OFF THE MOTOR.
THE CUTTERBAR CONTINUES TO ROTATE AFTER THE
MACHINE IS SWITCHED OFF.

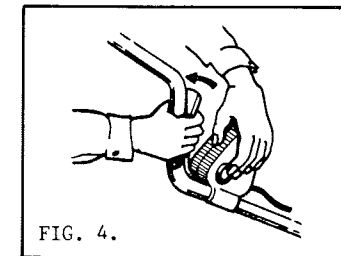

To fit the grassbox: Raise the grass deflector and fit the grassbox over the ridge on the mainframe casting.

The cutting height range: Is from $\frac{1}{2}$ " to $1\frac{5}{8}$ ". Adjustment is obtained by turning the adjuster screw in a clockwise direction to raise the cutting height and anti-clockwise to lower the cutting height.

When starting the motor prior to cutting, raise the front of the machine slightly by bearing down on the handlebars. This will allow the motor to obtain optimum cutting speed and also prevent unnecessary loading of the motor during the starting phase.

Overload protection: Should the motor slow down through being overloaded, raise the front of the machine slightly by bearing down on the handlebars and draw the machine back from the crop until the motor responds. Proceed to cut into the crop at a slower pace.

If the motor continues to be overloaded, the motor protector will automatically switch off the mains supply, in which case, release the switch lever and draw the machine away from the crop. The motor protector will reconnect the supply after about 20 seconds. Restart and commence to cut again. Should, however, the motor fail to pick up speed rapidly, switch off and unplug the supply cable. Turn the machine on its side and clear any obstruction from the cutterbar and ensure that it will rotate freely. Place the machine upright, restart and proceed mowing at a rate that does not overload the motor.

OPERATING INSTRUCTIONS CONTD.

IMPORTANT. Do not cause the motor protector to cut-off more than two times. If this does occur, cool the motor to its normal working temperature by running at full speed without cutting the grass for at least one minute. This will prevent excessive temperature build-up in the motor which would cause permanent serious damage.



SAFE MOWING PRACTICE

When operating the mower, great care must be taken not to cut or damage the supply cable by mowing over it.

Be aware at all times of exactly where the cable is in relation to the mower and the cutting area. Do not allow the cable to become hidden in the uncut grass. Keep the cable over the cut area at all times.

Where possible, work out a 'cutting' plan which works away from the power supply point so that the cable is trailed out over the 'cut' area.

When working up and down the lawn in rows, turn the machine away from the cable at the end of the row, step over the cable so that on the return run the cable is trailed along in the 'cut' area.

When cutting around flower beds a stake driven in at the corner of the bed will prevent the cable being dragged across the cultivated area. Make sure the cable is not pulled round any sharp obstructions.

Remember, a cable which is out-of-sight is out-of-mind and is likely to become hazardous.

After use the cable should be carefully coiled to avoid kinking and stored.



WARNING

SWITCH OFF, REMOVE PLUG FROM MAINS BEFORE ADJUSTING, CLEANING OR IF CABLE IS ENTANGLED IN THE MACHINE.

MAINTENANCE

Machine: Apply a light application of oil to all linkages and hinge points periodically.

Check all securing nuts and bolts periodically and tighten if necessary.



Cleaning: Keep the machine clean paying particular attention to the underside of the casing. Do not use water when cleaning. Ensure the supply cable is unplugged from the mains supply before cleaning or working on the machine.




Cutterbar: Examine the cutterbar regularly for wear or damage, ensure before doing so the supply cable is unplugged from the mains supply. A cutter bar that is little worn can be resharpened in which case both ends must be sharpened equally to preserve the balance. A badly damaged cutterbar must be replaced. Use only a Hayter replacement cutterbar.



To fit a new cutterbar (see Fig.5): Disconnect mains supply. Turn machine on its side and with the spanner provided undo the large headed bolt, turning it anti-clockwise. To prevent the cutterbar from turning with the nut, use a pad or strong glove to protect the hand whilst holding the end of the cutterbar.

If the adaptor slides off the shaft after the bolt and cutterbar are removed, clean and replace the adaptor. Ensure that the flats on the shaft locate with the flats in the adaptor bore.

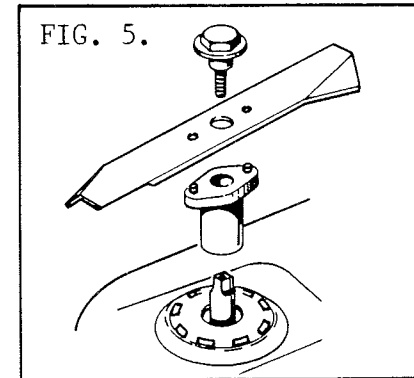

Fit the new cutterbar ensuring that it is the correct way up and that the pins in the adaptor locate with those in the cutterbar. Insert the securing bolt and tighten it securely. Again, protect the hand whilst holding the cutterbar and do not tighten the bolt by pushing or pulling the spanner towards the sharpened cutting edge as a serious injury could result if the spanner slips.

SIMPLE FAULT FINDING

Mower fails to operate: Do not continue to hold the switch lever in the 'ON' position but check the following:-

- 1) Is mains supply socket 'live'? Test by plugging in some other appliance.
- 2) Is the plug connected correctly to mower supply cable? Check with reference to Fig.2.

SIMPLE FAULT FINDING CONTD.

3) Has the fuse in plug 'failed'? Fit new fuse and try again.

Before proceeding further, unplug supply cable from mains and check the following:-

4) Is the supply cable damaged? Check for cuts or kinks in cable.

5) Is the cutterbar jammed by some obstruction? If so, clear and ensure that it can be freely turned by hand.

MOTOR WILL NOT STOP

1) Push switch lever towards switch.

2) Unplug cable from mains supply and contact your Hayter dealer.

FAILURE TO CUT OR COLLECT GRASS PROPERLY

Disconnect supply cable from mains socket and check the following:-

1) Build-up of grass pulp inside mower casing.

2) Discharge chute aperture blocked.

3) Grassbox vents blocked.

4) Cutterbar damaged or badly worn.

If all of the above are O.K., raise cutting height to maximum and try again. Alternatively, the conditions may be too severe to permit grass collection, in which case, proceed to cut with the grassbox removed.

EXCESSIVE VIBRATION

Almost certainly due to damaged cutterbar causing it to run out of balance. Unplug supply cable from mains socket and check cutterbar. Replace if necessary.

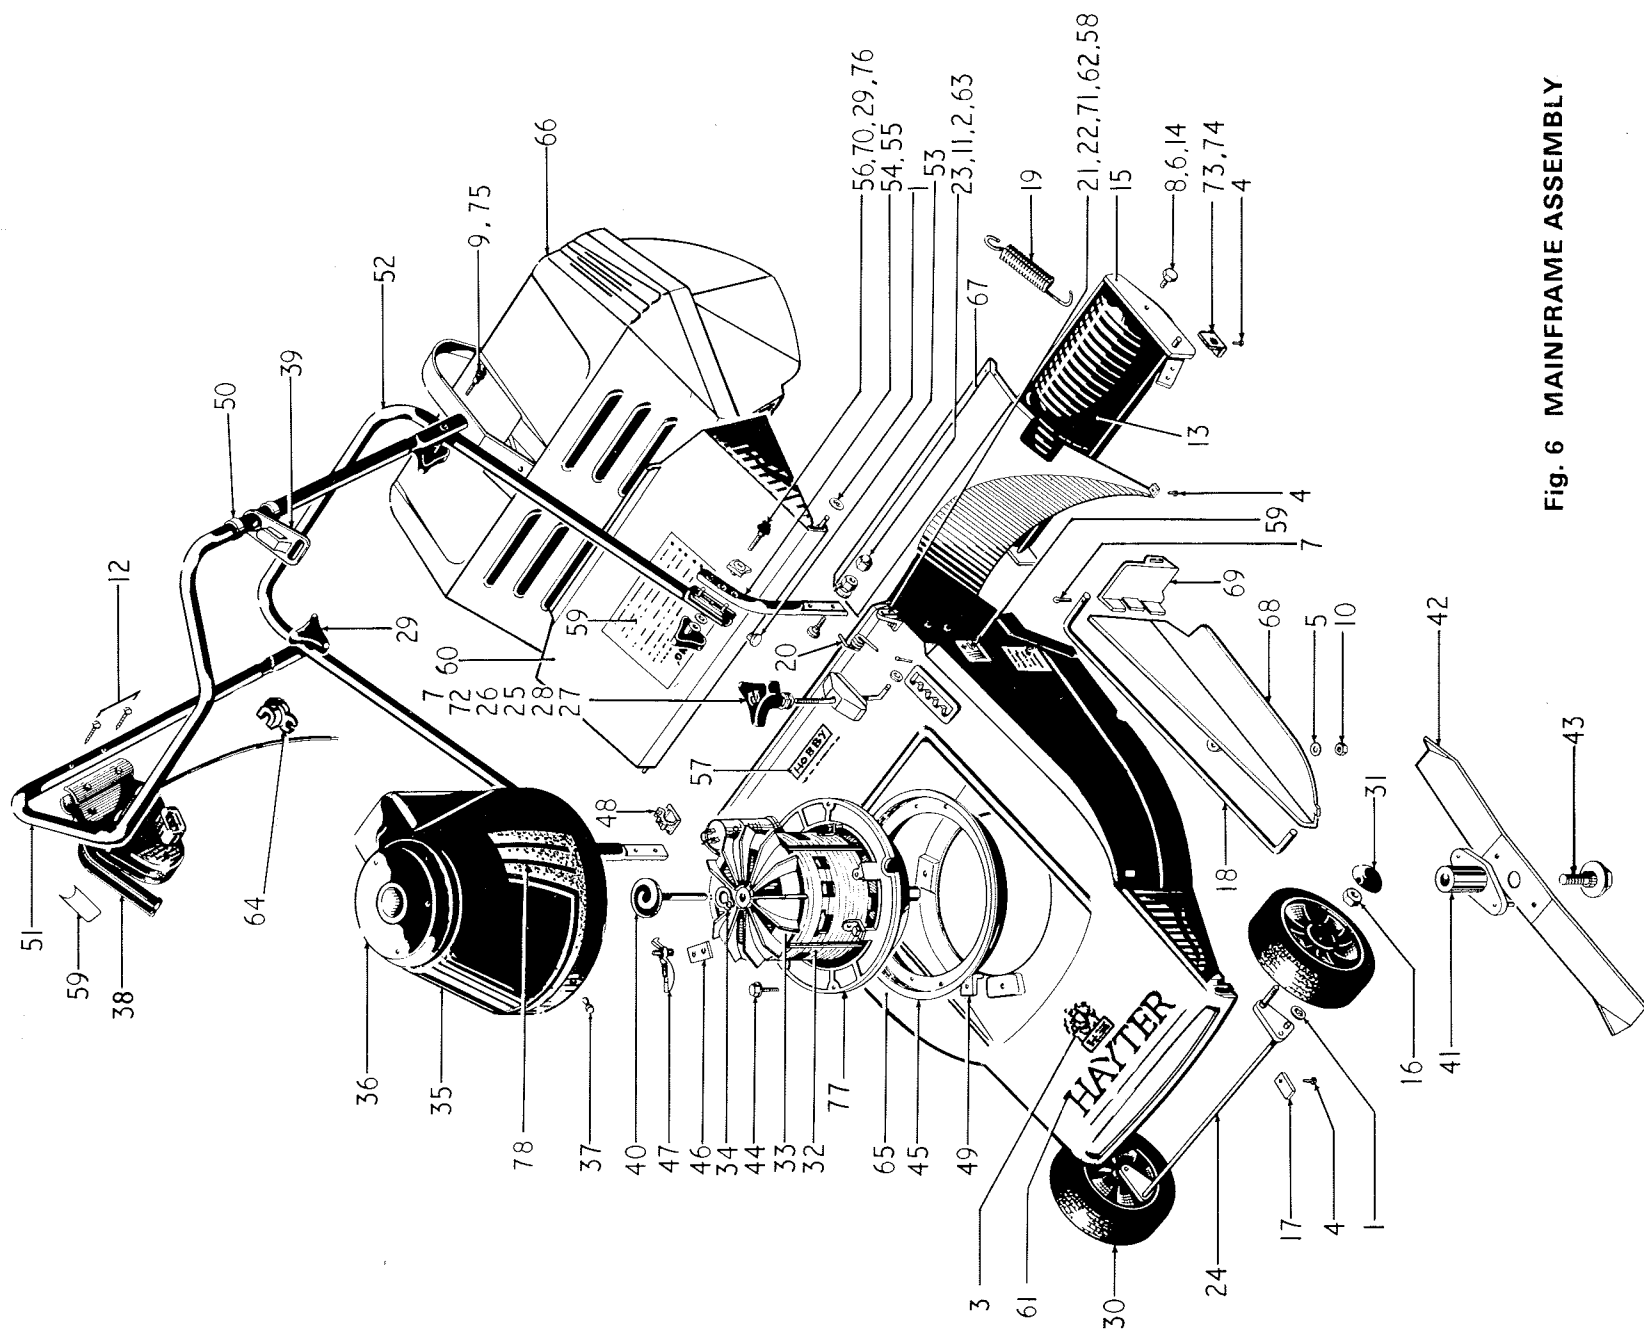


Fig. 6 MAINFRAME ASSEMBLY

SPARE PARTS LIST
(Subject to revision without notice)
FROM MACHINE NUMBER 005 567

All spares must be ordered through an authorised Hayter Agent.
When ordering spares please quote the SERIAL NUMBER of your machine and the PART NUMBER, not the ITEM NUMBER, of the required part.

ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
1	02385	4 1/4" Retaining Ring	40	234015	1 Direction Indicator
2	03469	4 M8 Spring Washer S/C	41	234018	1 Blade Carrier
3	5877	1 Royal Warrant Label	42	234019	1 16" Cutterbar
4	09578	8 No.8 x 1/2" Screw	43	234020	1 Securing Bolt (Moulded Head)
5	09267	3 5/16" Washer Large O/D	44	234022	3 Securing Bolt (Moulded Head)
6	09271	6 1/2" Plain Washer	45	234023	1 Motor Cover Base
7	09303	2 Split Pin	46	234024	1 Strain Relieif Clip Mounting Plate
8	09362	2 M6 x 16 Hex.Hd.Screw	47	234025	1 Strain Relief Clip
9	09367	2 M6 x 40 Coach Bolt	48	234026	2 Cable Clip
10	09442	3 M8 Self Lock Nut	49	234027	3 Spacer
11	09443	5 M8 Plain Nut	50	234029	2 Hose Clip
12	09528	2 M4 x 25 Screw	51	234031	1 Upper Handlebar
13	201007	2 Roller	52	234033	1 Intermediate Handlebar
14	201008	1 Roller Shaft	53	234034	2 Tube Insert
15	234061	1 Rear Roller Frame Assy.	54	234035	1 Lower Handlebar N/S
16	09232	2 1/2" UNF Nylon Nut	55	234036	1 Lower Handlebar O/S
17	201025	2 Axle Retainer	56	234040	1 Insulated Carriage Bolt
18	201041	1 Connecting Rod	57	234078	1 Label
19	201042	1 Spring	58	09470	2 Plain Washer
20	201048	2 Spring	59	234050	1 Label Set (Warning and Instruction)
21	201053	1 Hinge Bracket N/S	60	234046	1 Deflector Plate Assy.
22	201054	1 Hinge Bracket O/S	61	201110	1 Label
23	201060	4 M8 x 18 Serrated Screw	62	09360	2 M5 x 12 Screw
24	201101	1 Front Axle Assy.	63	234051	4 Nut Cap
25	201081	1 Adjuster Screw	64	234073	1 Cable Clamp
26	201082	1 Block	65	234053	1 Mainframe
27	09266	1 5/16" Plain Washer	66	234055	1 Grassbox C/W Handle
28	201087	1 Knob	67	234057	1 Throwplate
29	201089	4 Knob	68	234058	1 Underguard
30	201095	2 6" Wheel	69	234060	1 Underguard Cover
31	201091	2 Wheel Cap	70	09472	4 M6 Washer
32	234002	1 A.E.G. Motor (C/W Base)	71	09430	2 M5 Self Lock Nut T Type
33	234004	1 Fan	72	04415	1 5/16" Spring Washer D/C
34	234005	1 Circlip	73	201105	1 Roller Support Bracket N/S
35	234008	1 Motor Cover Complete (Inc. Top)	74	201106	1 Roller Support Bracket O/S
36	234010	1 Motor Cover Top	75	234070	1 M6 x 40 Nylon Hd.Screw
37	234012	3 Drive Fastener	76	234072	2 M6 x 50 Insulated Screw
38	234080	1 Switch	77	234023	1 Motor Base
39	234014	1 Cable Cleat	78	234079	1 Label

PART NUMBER 234067
HARTHAM PRESS LTD.
MARCH 1987