

TORO®MODEL NO. 22621 - 0000001 THRU
10000001 & UP**OPERATOR'S
MANUAL****21" (0.53 M) COMMERCIAL REAR BAGGER****SAFETY INSTRUCTIONS**

This mower "meets or exceeds the B71.4-1984 specifications of the American National Standards Institute for walk behind rotary mowers. However, improper use or maintenance by the operator or owner can result in injury. To reduce the potential for injury, comply with these safety instructions and always pay attention to the safety alert symbol . Failure to comply with these instructions may result in personal injury. This product does not comply with the Consumer Product Safety Commission's safety requirements for walk behind lawn mowers. This product is intended for commercial use only.

BEFORE OPERATING

1. Read this manual carefully before operating the mower. Become familiar with the controls and proper use of the mower. Never allow children to operate the mower or adults to operate it without proper instructions.
2. Keep everyone, especially children and pets, away from area of operation. Thoroughly inspect area where mower will be used and remove sticks, stones, wire, and debris.
3. Wear long pants and substantial shoes. Do not operate mower while wearing open sandals or when barefoot.
4. Check fuel level before starting engine. Do not fill fuel tank indoors, when the engine is running or until engine cools for several minutes after running. Wipe up spilled gasoline before starting engine.
5. Keep all guards, shields, and safety devices in place. Repair or replace defective or damaged parts, including safety decals.
6. Traction drive is designed to stop when the control bar is released. Assure control bar functions properly before each use of mower.

WHILE OPERATING

7. Do not run engine indoors.
8. Always maintain secure footing. Keep a firm grip on the handle and walk; never run. Never operate mower in wet grass. Mow only in daylight or in good artificial light.
9. Mow across the face of slopes; never up and down. Use extreme caution when changing direction on slopes. Do not mow excessively steep slopes.
10. Always wear safety glasses or eye shields during operation to protect eyes from foreign objects

that may be thrown from the machine. Keep face, hands, and feet away from the mower housing and cutter blade when the engine is running. Stay behind the handle until the engine stops and keep clear of discharge opening at all times.

11. When mulching, remove grass bag and make sure discharge door is closed and locked completely. When bagging grass, stop engine and assure chute door is closed before the bag is removed and emptied.
12. Shut engine off and wait for all moving parts to stop before unclogging chute. Use a stick, not your hand, to unclog chute.
13. Since the blade rotates for a few seconds after the engine is stopped, stay behind the handle until all moving parts stop.
14. After striking a foreign object or if mower vibrates abnormally, stop engine and remove wire from spark plug. Check mower for damage and make all repairs before using mower again.
15. Stop the engine and wait for all moving parts to stop before adjusting the height-of-cut.
16. Stop the engine when crossing a gravel driveway, road or sidewalk.
17. Stop engine before leaving the operator's position—behind the handle. Disconnect wire from spark plug if mower will be unattended or not used.
18. Do not touch engine while it is running or shortly after it is stopped because engine will be hot enough to cause a burn.

MAINTENANCE

19. Perform only those maintenance instructions described in this manual. If major repairs are ever needed or if assistance is desired, contact your local Authorized TORO Service Dealer.

SAFETY INSTRUCTIONS

20. Before mower is cleaned, inspected, serviced, or adjusted, stop engine and disconnect wire from spark plug. Keep wire away from plug to prevent accidental starting.

21. To assure the mower is in safe operating condition, frequently check and keep all nuts, bolts, and screws tight. Assure blade bolt is tightened to 50 ft-lb (68 N-m).

22. To reduce fire hazard, keep engine free of excessive grease, grass, leaves, and accumulation of dirt.

23. Check grass catcher bag frequently for wear or deterioration. Replace with a new bag for your protection.

24. Allow engine to cool before storing mower in any enclosure. Do not store mower near any open flame or where gasoline fumes may be ignited by a spark.

25. Do not overspeed the engine by changing governor settings.

26. At the time of manufacture, the mower conformed to the safety standards in effect for rotary mowers. To assure optimum performance and continued safety certification of the mower, use genuine TORO replacement parts and accessories. Replacement parts and accessories made by other manufacturers may result in non-conformance with the safety standards, and that could be dangerous.

SAFETY DECALS AND INSTRUCTIONS

Safety decals and instructions are easily visible to the operator and are located near any area of potential danger. Replace any decal that is damaged or lost.



ON MOWER HOUSING
(Part No. 71-1280)

This Mower Intended For Commercial Use Only. Does Not Comply With Mandatory Safety Standard For Consumer Mowers.

ON REAR OF MOWER
(Part No. 48-2930)



ON CONTROL BAR
(Part No. 71-1290)



ON MOWER HOUSING
(Part No. 39-5770)



ON STEP PAD
(Part No. 46-7370)

TABLE OF CONTENTS

	Page		Page
Safety Instructions	1	Inspecting/Removing/Sharpening Blade	9
Set-Up Instructions	3	Lubrication	10
Before Operating	4	Lubricating Gear Case	11
Operating Instructions	5	Servicing Wheels	11
Maintenance	7	Cleaning Mower Housing	11
Servicing Air Cleaner	7	Preparing Mower For Storage	12
Replacing Spark Plug	8	Optional Equipment	12
Draining Gasoline	8	Product Identification	13
Adjusting Throttle	8	Toro Service Support	13
Cleaning Cooling System	8	Maintenance Record	14
Changing Crankcase Oil	9	The Toro Promise	
Adjusting Wheel Drive	9		

SET-UP INSTRUCTIONS

INSTALL HANDLE

1. Mount handle to outside of mower housing, using top hole, with (2) 5/16-18 x 1-1/2" lg. capscrews, washers, spacers, and nylon insert locknuts as shown in Figure 1.

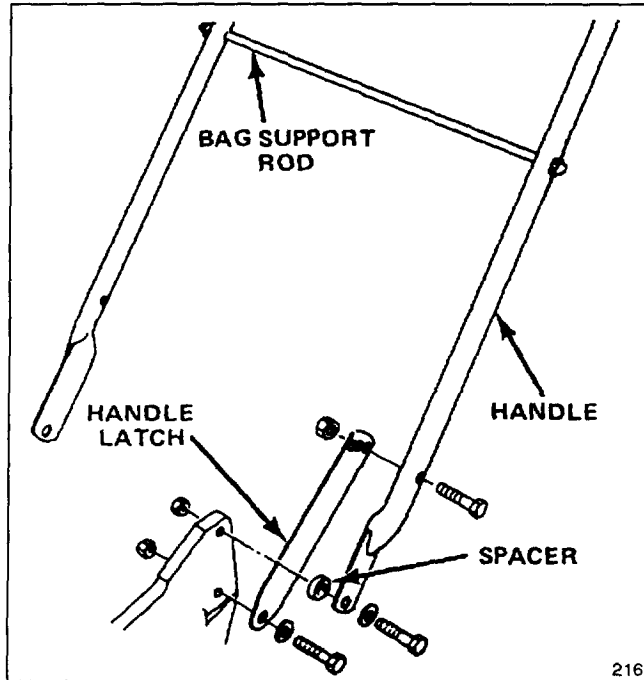


Figure 1

2. Mount handle latches to outside of mower housing, using bottom hole, with (2) 5/16-18 x 1-1/4" lg. capscrews, washers, and locknuts as shown in Figure 1.

3. Secure handle latches to handle with (2) 5/16-18 x 1-1/2" lg. capscrews and nylon insert locknuts (Fig. 1). Position locknuts on inside of handle.

Note: Handle height is adjustable for operator comfort. Stand behind mower handle to gauge height. To adjust handle height, reposition capscrews and locknuts securing handle latches to handle into other mounting holes in latches.

4. Slide bag support rod through **top** mounting holes in handle and secure each end with (2) cap locknuts (Fig. 1).

INSTALL GAS TANK

1. Slide plastic clips on gas tank through holes in gas tank bracket (Fig. 2).

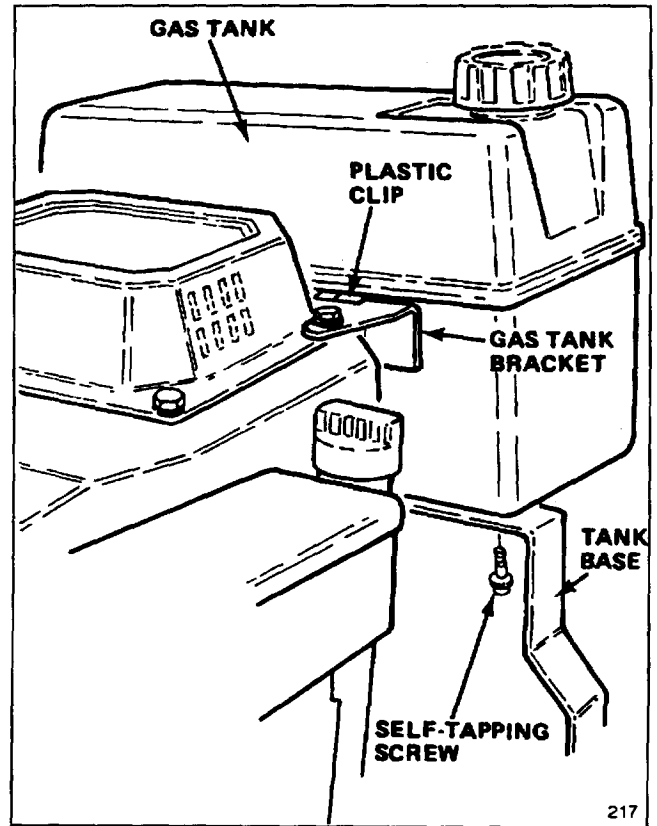


Figure 2

2. Secure gas tank to tank base with (2) self-tapping screws (Fig. 2). Do not overtighten screws.
3. Slide end of fuel line onto fuel shut-off valve fitting. Secure in place with fuel line clamp (Fig. 3).

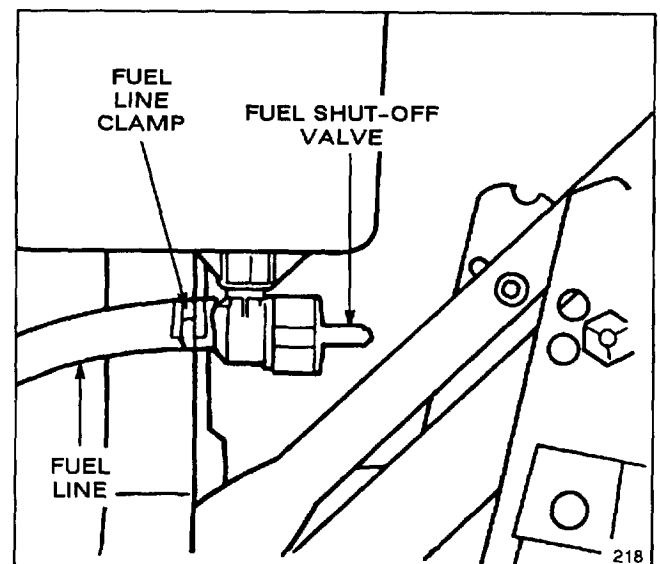


Figure 3

SET-UP INSTRUCTIONS

ASSEMBLE BAG TO MOWER

1. Assure chute door handle is fully forward and locked in place (Fig. 4).
2. Slide guide hole in bag door onto locking stud on mower housing (Fig. 4); then set rear of bag frame onto support rod.

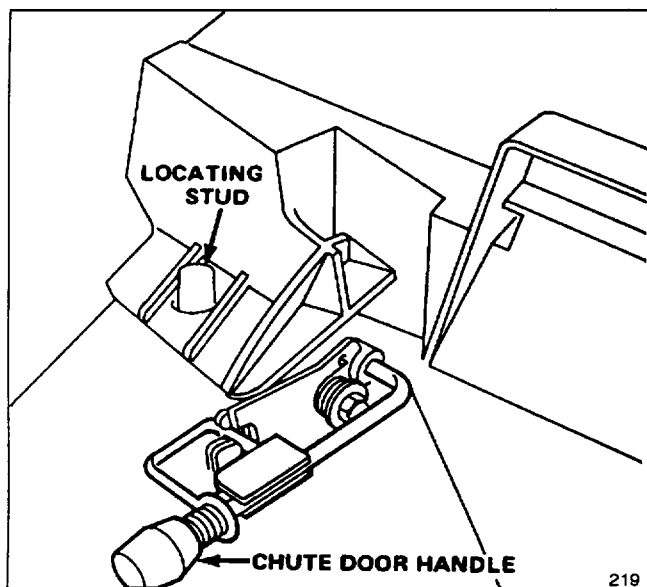


Figure 4

3. Squeeze lockout lever until it clears the housing latch (Fig. 5). Then move handle rearward until lockout lever locks in notch at rear of bag door (Fig. 5). The chute door in mower housing is now open and mower is ready to bag grass clippings.

Note: Bag door may need to be forced downward onto housing latch to release the lockout lever.

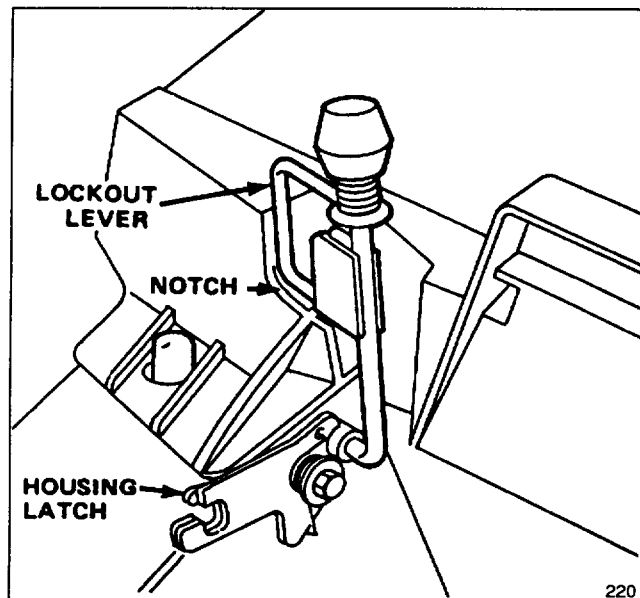


Figure 5

BEFORE OPERATING



WARNING

DANGER: Gasoline is extremely flammable and explosive under certain conditions. Do not smoke when handling fuel and keep fuel far away from open flames and sparks. Never buy more than a 30 day supply of gasoline. Store it in an approved container. Keep gasoline out of reach of children.

Refuel outdoors and only when engine is cold. Fill tank to within 1/4" to 1/2" (6 to 13 mm) from top of tank, not into filler neck. This space is for expansion of fuel. Use funnel or spout to prevent spilling. Wipe up any spilled gas.

FILL CRANKCASE WITH OIL

Initially, crankcase must be filled with 18 ounces (0.532 l) of SAE 30 oil. Use any high quality detergent oil having the American Petroleum Institute (API) "service classification" MS, SC, SD, SE or SF.

Before each use, assure oil level is between ADD and FULL marks on dipstick (Fig. 6). Add oil if level is low.

1. Position mower on a level surface and clean around oil dipstick (Fig. 6).
2. Remove dipstick by rotating cap counter clockwise 1/4 turn.

3. Wipe dipstick and insert it into filler neck. Rotate cap clockwise 1/4 turn. Then remove dipstick and check level of oil (Fig. 6). If level is low, add only enough oil to raise level to FULL mark on dipstick. **DO NOT FILL ABOVE FULL MARK BECAUSE ENGINE COULD BE DAMAGED WHEN STARTED.**

4. Reinsert dipstick into filler neck and rotate cap clockwise 1/4 turn to lock.

Note: Check oil level each time mower is used or after every 5 operating hours. Initially, change oil after the first 2 hours of operation; thereafter, change oil after every 25 hours of operation. More frequent oil changes are required in dusty or dirty conditions.

BEFORE OPERATING

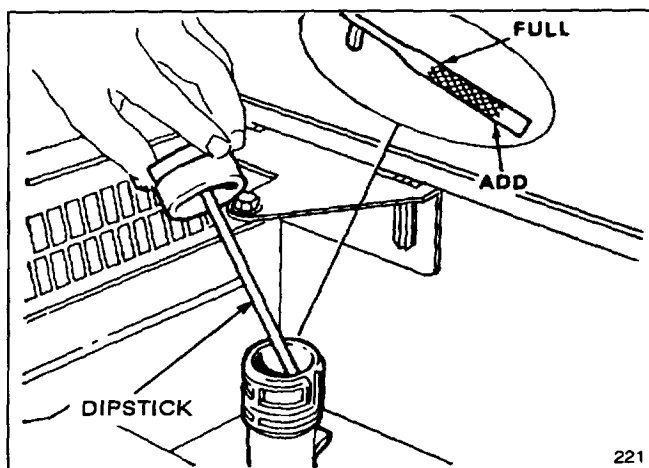


Figure 6

FILL FUEL TANK WITH GASOLINE

Note: The Toro Company strongly recommends the use of fresh, clean UNLEADED regular grade gasoline in Toro gasoline powered products. Unleaded gasoline burns cleaner, extends engine life, and promotes good starting by reducing the build-up of combustion chamber deposits. Leaded gasoline can be used if unleaded is not available.

Toro also recommends that Toro Stabilizer/Conditioner be used regularly in all Toro gasoline powered products during operation and storage seasons. Toro Stabilizer/Conditioner cleans the engine during operation and prevents gum-like varnish deposits from forming in the engine during periods of storage.

1. Clean around fuel tank cap and remove cap from tank. Using unleaded gasoline, fill fuel tank to within 1/4 to 1/2 inch (6 to 13 mm) from top of tank.
2. Reinstall fuel tank cap and wipe up any spilled gasoline.

IMPORTANT: DO NOT MIX OIL WITH GASOLINE. NEVER USE METHANOL, GASOLINE CONTAINING METHANOL, GASOHOL CONTAINING MORE THAN 10% ETHANOL, PREMIUM GASOLINE OR WHITE GAS BECAUSE ENGINE FUEL SYSTEM DAMAGE COULD RESULT.

DO NOT USE FUEL ADDITIVES OTHER THAN THOSE MANUFACTURED FOR FUEL STABILIZATION DURING STORAGE SUCH AS TORO'S STABILIZER/CONDITIONER OR A SIMILAR PRODUCT. TORO'S STABILIZER/CONDITIONER IS A PETROLEUM DISTILLATE BASED STABILIZER/CONDITIONER. TORO DOES NOT RECOMMEND STABILIZERS WITH AN ALCOHOL BASE SUCH AS ETHANOL, METHANOL OR ISOPROPYL. STABILIZERS SHOULD NOT BE USED TO TRY TO ENHANCE THE POWER OR PERFORMANCE OF MACHINE.

3. Turn fuel shut-off valve to ON position (Fig. 7).

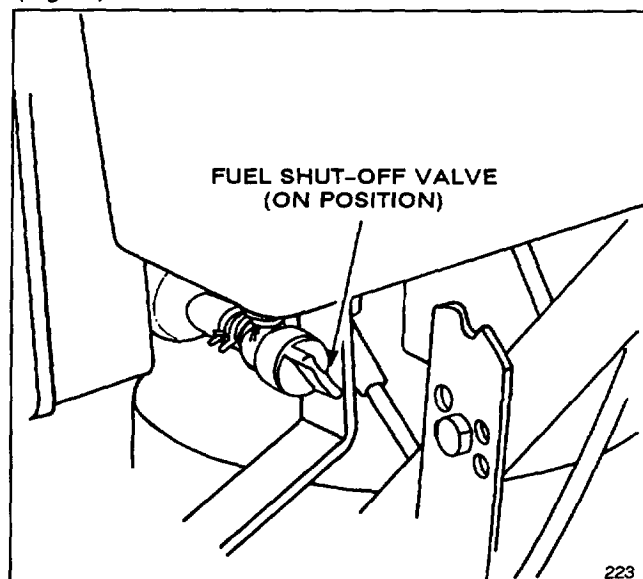


Figure 7

OPERATING INSTRUCTIONS

STARTING, STOPPING, AND SELF-PROPELLING

1. **CONTROLS**—Throttle control and control bar are on upper handle (Fig. 8). Ground speed control is located at rear of belt cover (Fig. 9). Fingertip starter is on engine.
2. Push spark plug wire onto spark plug.
3. **STARTING**—Move ground speed control to desired speed selection (Fig. 9) and throttle (Fig. 8) to CHOKE. Pull fingertip starter and regulate throttle as desired when engine starts. When temperature is near 40° F, a few extra pulls may be required because the engine needs priming.

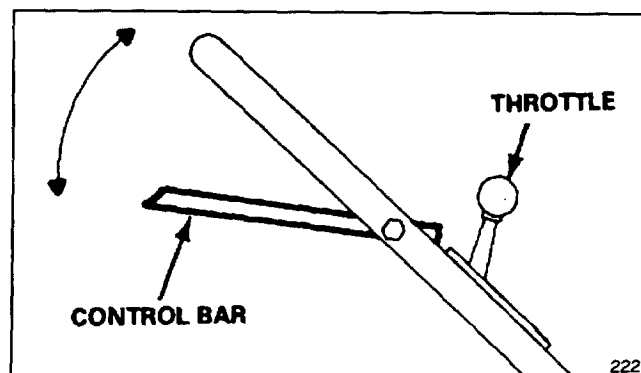


Figure 8

OPERATING INSTRUCTIONS

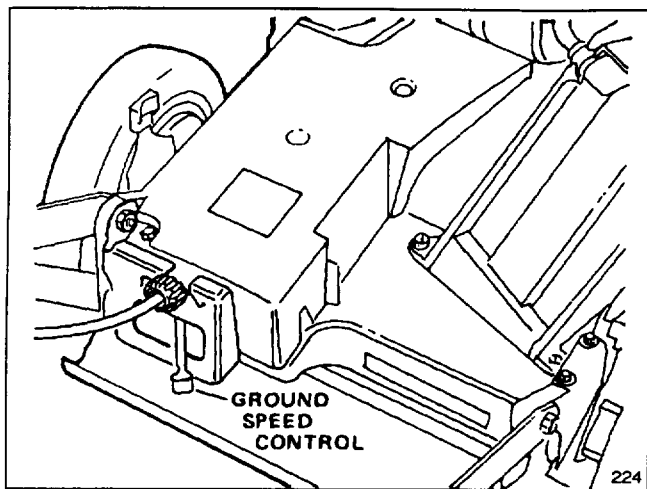


Figure 9

4. **TRACTION OPERATION**—Squeeze control bar against handle to drive. Ground speed varies, depending on space between control bar and handle (Fig. 8).

5. **STOPPING**—To stop engine, move throttle to stop position. Pull wire off spark plug if mower will be unattended or not used.

USING GRASS BAG

Keep bag installed when bagging or mulching.

1. Stop engine and wait for all parts to stop.

2. Assure chute door handle is fully forward and lockout lever is released into latch (Fig. 10).

3. **INSTALLING BAG**—Slide hole in bag frame onto retaining collar on housing (Fig. 10) and set rear of bag frame onto support rod on handle.

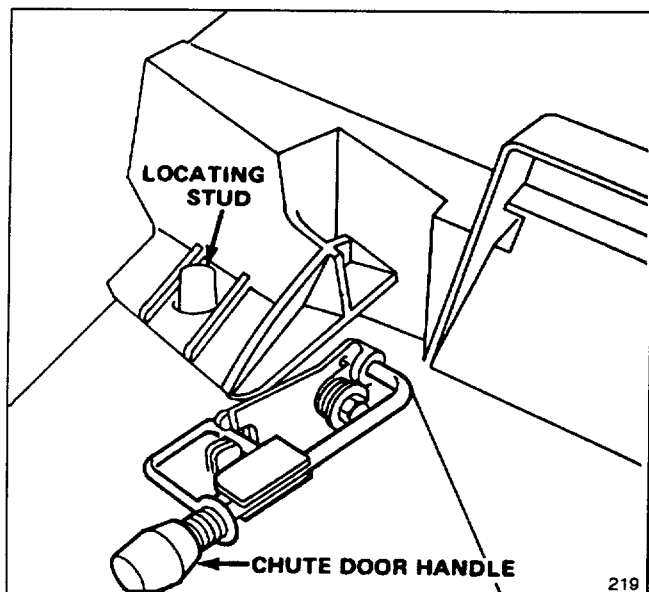


Figure 10

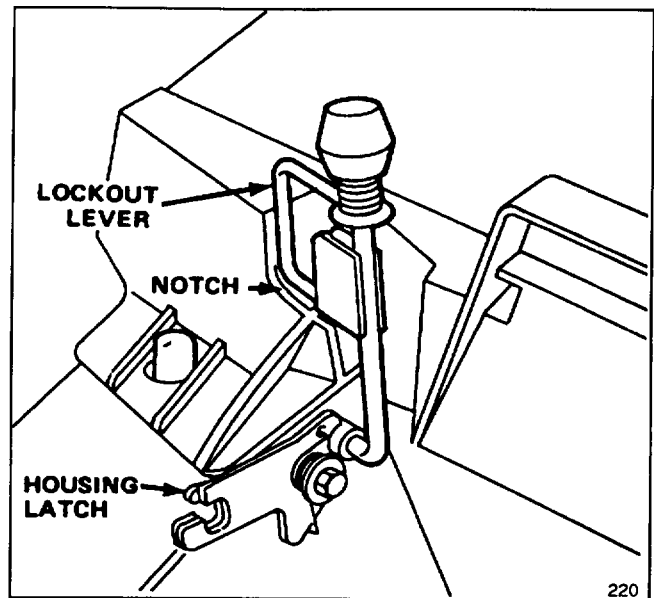


Figure 11

4. Squeeze lockout lever until it clears the housing latch. Then move handle rearward until it locks in notch at rear of bag latch (Fig. 11). The chute door in mower housing is now open and mower is ready to bag grass.

5. **EMPTYING BAG**—Stop engine and wait for blade to stop. Move chute door handle forward until it locks in the latch (Fig. 10). Grasp handle at front and rear of bag and lift bag off mower. Gradually tip bag forward to empty clippings.

6. To reinstall bag, repeat steps 3 and 4.



CAUTION

Except when side discharge attachment is used, never open chute door on mower when engine is running because grass clippings and other debris discharges with enough force to cause injury.

The grass bag material will catch and contain the majority of foreign objects such as small stones and other similar debris. The bag material, however, is subject to normal wear and deterioration. So check the bag frequently, and if it is defective, install a new genuine TORO replacement bag that has this or similar warning.



CAUTION

If chute door cannot be closed because grass clippings clog discharge area, gently move chute door handle back and forth until door can be closed completely. Do not force chute door closed because door or handle may be damaged. If door still cannot be closed, make sure engine is stopped and remove obstruction.

OPERATING INSTRUCTIONS

ADJUSTING HEIGHT-OF-CUT (Fig. 12)

The height-of-cut is adjustable from approximately 3/4 to 3-1/4 inches (19 mm to 83 mm) in 1/2 inch (12.7 mm) increments. Moving height-of-cut adjuster forward raises height-of-cut.

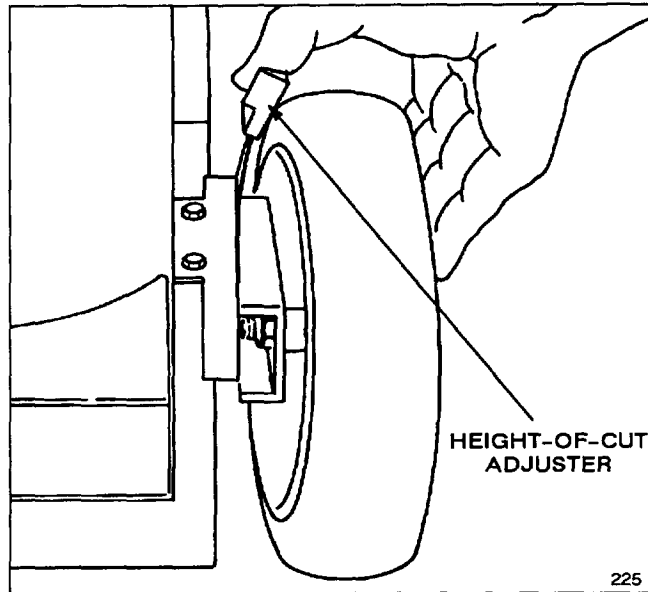


Figure 12

1. Stop the engine.
2. For easier adjustment, lift housing up so wheel is off ground. Do not place hands under deck to lift housing. Squeeze adjusting lever toward wheel and move it to the desired setting. Make sure pin on adjusting lever engages notch in mower housing wear plate. Adjust all wheels to the same setting.

OPERATING TIPS

1. CHECK OIL LEVEL—Maintain oil level between ADD and FULL marks as shown on dipstick (Fig. 6).
2. CUTTING AND BAGGING—To improve quality of cut, discharge clippings toward previously cut area. Best results are achieved when engine is running at maximum speed and only about 1/3 of the grass blade is cut. If long grass must be cut, use highest height-of-cut setting for first mowing. Then recut the grass at a more normal setting. If too long of grass is cut, mower may plug and cause engine to stall.
3. SHARPEN BLADE—Begin each cutting season with a sharp blade. Periodically file down nicks.

MAINTENANCE



CAUTION

Pull wire off spark plug before performing adjustments or maintenance.

SERVICING AIR CLEANER (Fig. 13)

Normally, clean air cleaner after every 25 operating hours. More frequent cleaning is required when mower is operated in dusty or dirty conditions.

1. Stop engine and pull wire off spark plug.
2. Unscrew knobs and remove air cleaner cover. Slide foam element off paper cartridge.
3. FOAM ELEMENT—Wash foam element in a water and mild detergent solution, rinse, and let air dry.

Note: DO NOT add oil to foam element because premature element plugging will occur.

4. PAPER ELEMENT—Replace annually, more frequently under dusty or dirty conditions. Every 50 operating hours, clean paper element using one of the following methods:

A. COMPRESSED AIR—Direct air inside element moving nozzle up and down while rotating element (maximum air pressure—30 PSI).

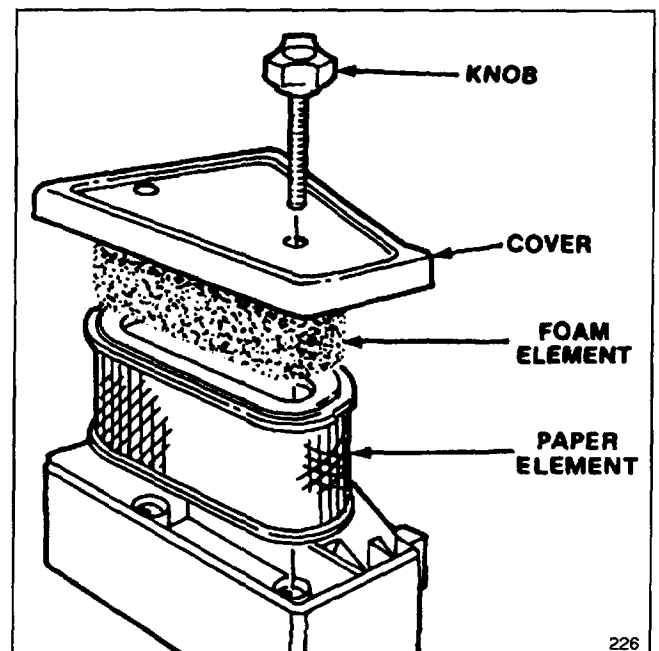


Figure 13

B. WASHING—Soak element 15 minutes in a water and mild detergent solution. Rinse until water is clear (maximum pressure—30 PSI), and air dry. Do not use compressed air.

MAINTENANCE

5. Inspection—Place light inside element. Replace element if ruptures, pin holes or seal damage is present.

IMPORTANT: Do not operate engine without air cleaner element because extreme engine wear and damage will likely result.

REPLACING SPARK PLUG

Use an NGK BPR6ES spark plug or equivalent. Correct air gap is 0.032" (0.81 mm). Remove plug after every 25 operating hours and check its condition.

1. Stop engine and pull wire off spark plug.
2. Clean around spark plug and remove plug from cylinder head.

IMPORTANT: Replace a cracked, fouled or dirty spark plug. Do not sand blast, scrape or clean electrodes because engine damage could result from grit entering cylinder.

3. Set air gap at 0.032" (0.81 mm) (Fig. 14). Install correctly gapped spark plug and gasket seal. Tighten plug firmly to 15 ft-lb (20.4 N-m).

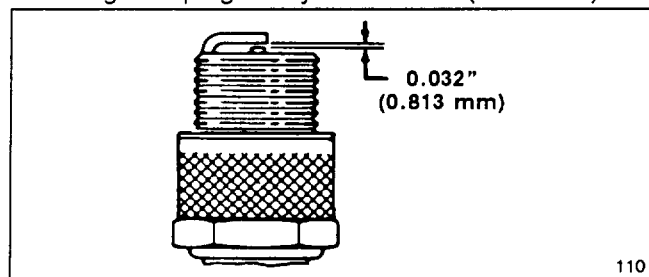


Figure 14

DRAINING GASOLINE

1. Stop engine and pull wire off spark plug.
2. Turn fuel shut-off valve to OFF position (Fig. 15).

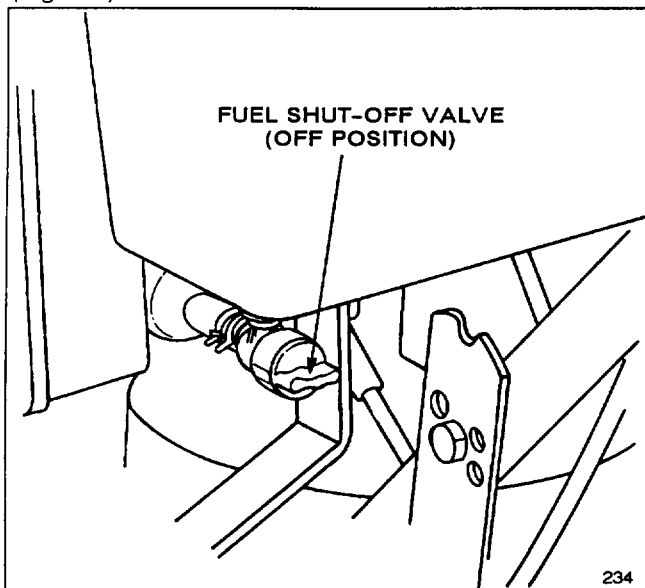


Figure 15

3. Remove cap from fuel tank and use pump-type syphon to drain fuel into clean gas can.

Note: This is the only procedure recommended for draining fuel.

ADJUSTING THROTTLE

Throttle control adjustment may be required if engine does not start or stop. Whenever a new throttle control cable is installed, throttle must be adjusted.

1. Stop engine and pull wire off spark plug.
2. Move throttle control to FAST.
3. Loosen cable clamp screw until throttle cable slides (Fig. 16). Align holes in throttle lever and throttle bracket. Pull throttle cable slightly to remove any slack and tighten cable clamp screw to lock adjustment in place.

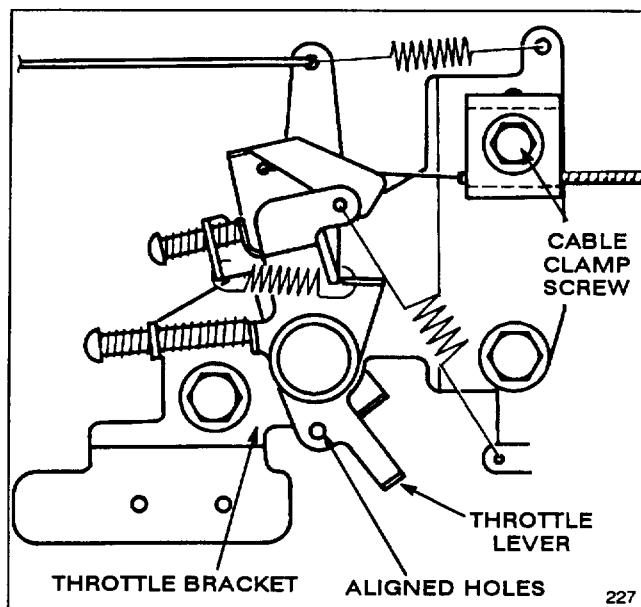


Figure 16

CLEANING COOLING SYSTEM

After every 75 operating hours, clean dirt and chaff from cylinder, cylinder head fins, and from around carburetor and linkage. Also remove debris from air intake slots on recoil housing. This will assure proper cooling and optimum engine performance.

MAINTENANCE

CHANGING CRANKCASE OIL

Change oil after the first two operating hours and every 25 hours thereafter. Since warm oil drains better and carries more contaminants than cold oil, run engine for a minute or so before draining oil.

1. Stop engine and pull wire off spark plug.
2. Remove grass bag. Drain gasoline from fuel tank; refer to Draining Gasoline, page 8.
3. Raise left side of mower at least 12 inches and remove drain plug.
4. Insert oil drain tube over drain opening and lower mower (Fig. 17). Raise right side of mower until all oil has flowed into drain pan.

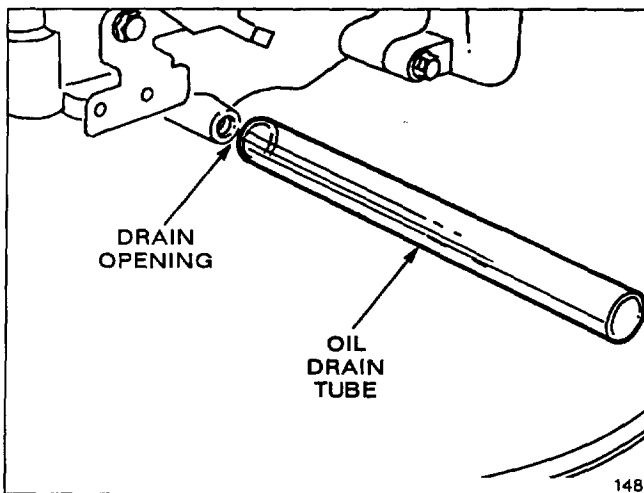


Figure 17

5. After draining, reinstall drain plug and fill engine with fresh oil; refer to Fill Crankcase With Oil, page 4.

ADJUSTING WHEEL DRIVE

If mower does not self-propel or has a tendency to creep forward when drive is not engaged, adjust wheel drive control knob on rear of gear box.

1. Close door in mower housing and remove bag.
2. ADJUSTMENT (Fig. 18)—Rotate control knob clockwise 1/2 turn if mower does not self-propel. If mower creeps forward, rotate knob 1/2 turn counterclockwise to loosen belt.

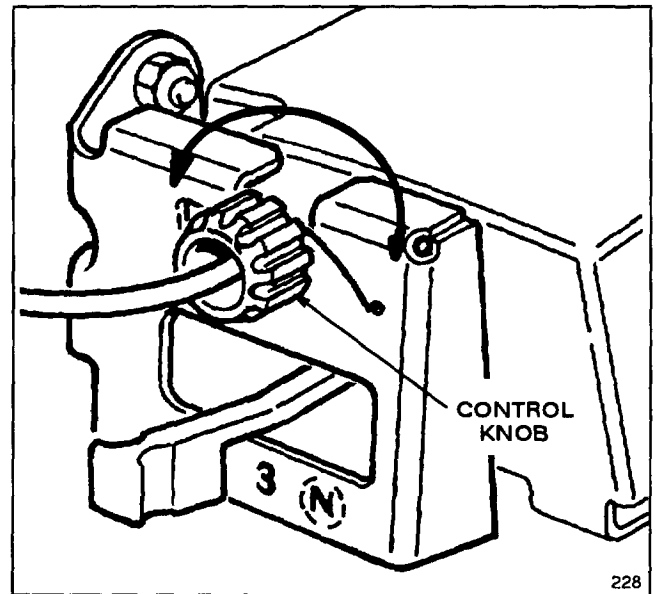


Figure 18

3. CHECK ADJUSTMENT—Slowly pull mower backward while control bar is gradually moved toward handle. Adjustment is correct when rear wheels stop turning and control bar is about 1 inch from handle (Fig. 19).

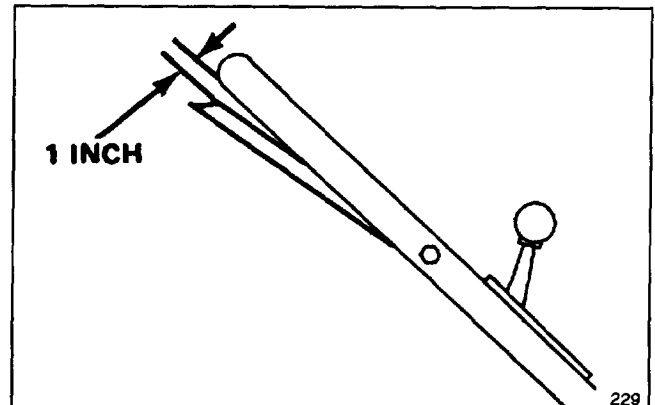


Figure 19

4. Repeat steps 2 and 3 until properly adjusted.

INSPECTING/REMOVING/SHARPENING BLADE

1. Stop engine and pull wire off spark plug.
2. Drain gasoline from fuel tank; refer to Draining Gasoline, page 8.
3. Tip mower on its right side (Fig. 20). Avoid rotating blade as starting problems may result.



CAUTION

Do not attempt to inspect, remove or replace blade without first removing the spark plug wire from spark plug and fastening it away from accidental contact with spark plug.

MAINTENANCE

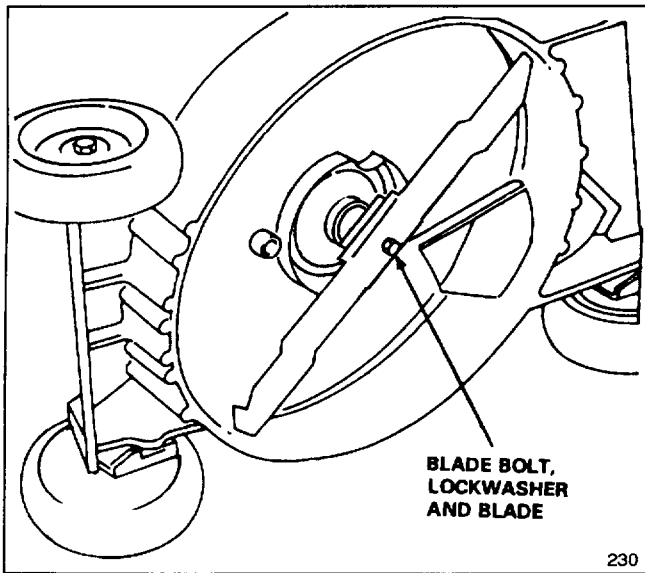


Figure 20

4. INSPECTING BLADE—Carefully examine blade for sharpness and wear, especially where flat and curved parts meet (Fig. 21A). Since sand and abrasive material can wear away the metal that connects the flat and curved parts of the blade, check blade before using the mower. If a slot or wear is noticed, (Fig. 21B & C), replace blade. Refer to step 5.

Note: For best performance, install new blade before cutting season begins. During the year, file down small nicks to maintain the cutting edge.

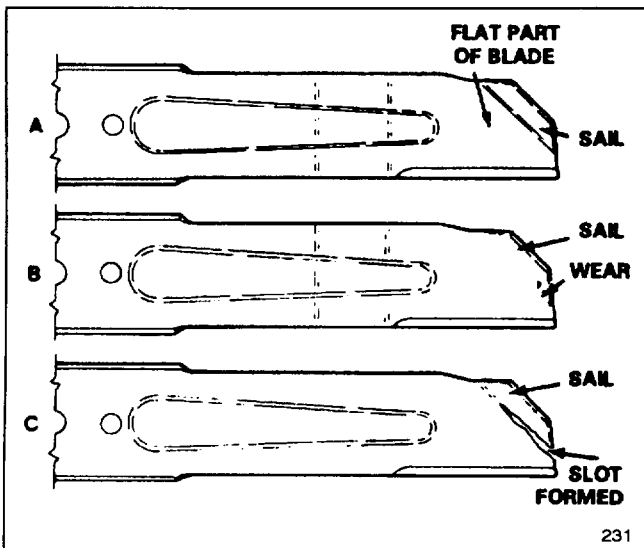


Figure 21



CAUTION

If blade is allowed to wear, a slot may form near the sail. Eventually a piece of blade may break off resulting in serious injury to yourself or a bystander.

5. REMOVING BLADE—Grasp end of blade using a rag or thickly padded glove. Remove blade bolt, lockwasher, and blade (Fig. 20).

6. SHARPENING BLADE—Using a file, sharpen top side of blade and maintain original cutting angle (Fig. 22). The blade will remain balanced if same amount of material is removed from both cutting edges.

IMPORTANT: Check balance of blade by putting it on a blade balancer. An inexpensive balancer can be purchased at a hardware store. A balanced blade stays in a horizontal position and an unbalanced blade settles to the heavy side. If blade is not balanced, file more metal off cutting edge on heavy end of blade.

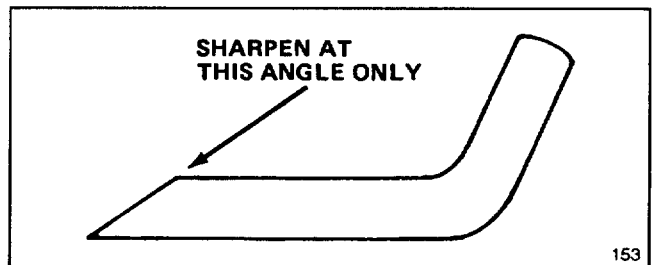


Figure 22

7. Install sharp, balanced blade with lockwasher and blade bolt. Sail part of blade must point toward top of mower housing to assure correct installation. Tighten blade bolt to 50 ft-lb (68 N-m).

LUBRICATION

After every 25 operating hours or when season ends, pivot arms must be lubricated.

1. Move rear wheel height-of-cut levers to center setting. Wipe grease fittings with clean rag (Fig. 23). Install grease gun onto fitting and gently apply 2 or 3 pumps of #2 Multi-Purpose Lithium Base Grease. Excessive grease pressure may damage seals.

MAINTENANCE

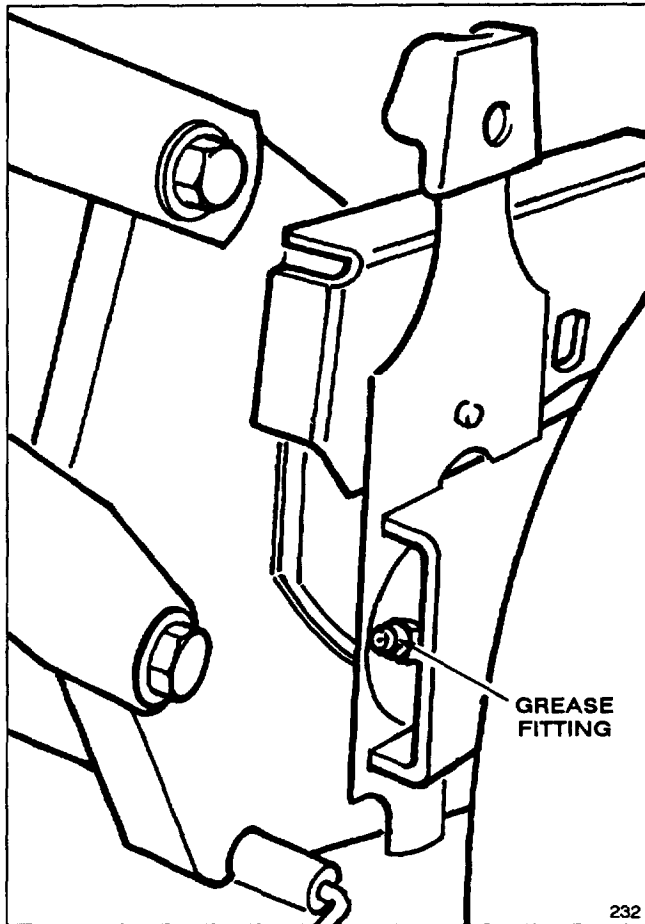


Figure 23

LUBRICATING GEAR CASE

After every 100 operating hours, grease the gear case with #2 Multi-Purpose Lithium Base Grease.

1. Remove bag.
2. Install grease gun onto fitting through belt cover opening (Fig. 24). Gently apply 1-2 pumps of grease.
3. Reinstall bag.

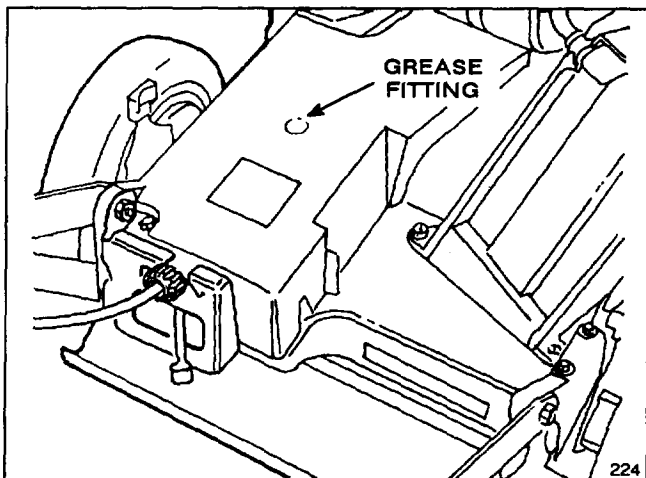


Figure 24

SERVICING WHEELS

Removal

1. Stop engine and remove capscrew, wheel spacer, and locknut mounting wheel to pivot arm (Fig. 25).

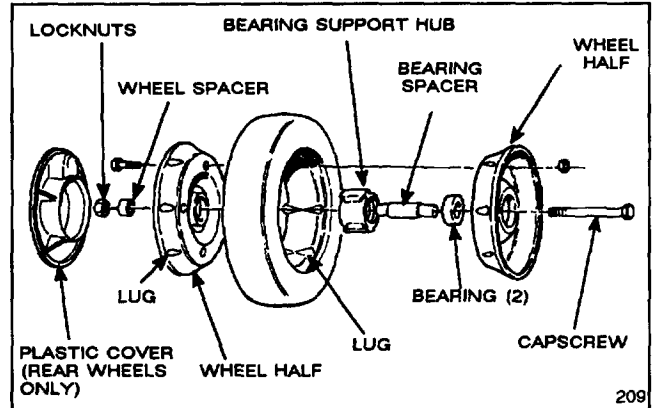


Figure 25

2. Separate wheel halves from tire by removing (4) capscrews and locknuts (Fig. 25).

Note: If bearings are to be removed from bearing support hub, remove by pressing on bearing spacer.

Assembly

1. Position tire onto (1) wheel half aligning lugs on each (Fig. 25).
2. Place bearing support hub into center hole of wheel half. Make sure legs of hub are positioned over flange of hole.
3. Place other wheel half onto bearing support hub aligning wheel and tire lugs and mounting holes.
4. Using (2) 1/4-20 x 1.50" lg. fully threaded screws or bolts and non-locking nuts, loosely secure wheel halves together. Mount screws or bolts in opposing holes.
5. Check alignment of all parts and tighten screws, alternating from side to side for a uniform fit, until wheel halves are drawn together.
6. Install (2) capscrews and locknuts, previously removed, in remaining holes in wheel halves and tighten. Remove (2) long screws or bolts and replace with (2) capscrews and locknuts.
7. Reinstall wheel to pivot arm with capscrews, spacer, and locknut. Make sure spacer is positioned between wheel hub and pivot arm.

CLEANING MOWER HOUSING

To ensure best performance, keep underside of mower housing and inside of discharge area clean.

MAINTENANCE

1. Drain gasoline from fuel tank: refer to Draining Gasoline, page 8.
2. Tip mower on its right side. Avoid rotating blade because starting problems may result.
3. Remove dirt and grass clippings that stick to housing by spraying it with a garden hose. Scrape out remaining debris with hardwood scraper. Avoid burrs and sharp edges.

PREPARING MOWER FOR STORAGE

1. For long term storage, either drain gasoline from fuel tank or use a fuel stabilizer before storing. To drain gasoline, refer to Draining Gasoline, page 8. After fuel is drained, start engine and let it idle until all fuel is consumed and engine stops. Repeat the starting procedure two more times to assure all gas is removed from the engine. If gasoline is not drained and a fuel stabilizer is not added, gum-like varnish deposits will form and cause poor engine operation, even starting problems.

Fuel can be left in gas tank only if a fuel additive, such as Toro's Stabilizer/Conditioner, is added to gasoline and run through engine before storing. Toro's Stabilizer/Conditioner is a petroleum distillate based conditioner/stabilizer. Toro does not recommend stabilizers with an alcohol base, such as ethanol, methanol or isopropyl. Use fuel stabilizer in recommended quantities as specified on container.

Under normal conditions, all fuel stabilizers remain effective in fuel for 6–8 months.

2. Drain oil: refer to Changing Crankcase Oil, page 9. After oil is drained, do not fill crankcase with oil until the following steps (3–10) are completed.
3. Remove spark plug and pour 2 tablespoons of SAE 10W30 oil into hole in cylinder. Pull starter rope slowly to coat inside of cylinder. Install spark plug and tighten to 10 ft-lb (13.6 N·m). **DO NOT INSTALL WIRE ON SPARK PLUG.**
4. Clean underside of housing: refer to Cleaning Mower Housing, page 11.
5. Check condition of blade: refer to Inspecting/Removing/Sharpening Blade, page 9.
6. Tighten all nuts, bolts, and screws.
7. Clean dirt and chaff from cylinder, cylinder head fins, and blower housing. Also remove grass clippings, dirt, and grime from external parts of the engine, shrouding, and top of mower housing.
8. Clean air cleaner: refer to Servicing Air Cleaner, page 7.
9. Lubricate the pivot arms: refer to Lubrication, page 10.
10. Touch up all rusted or chipped paint surfaces. Toro Re-Kote paint is available from an Authorized TORO Service Dealer.
11. Fill crankcase with oil: refer to Fill Crankcase With Oil, page 4.
12. Store mower in a clean, dry place, out of the reach of children. Cover mower to keep it clean and protected.

OPTIONAL EQUIPMENT

1. **Recycler Kit, Model No. 59173**—A Recycler Kit is available for commercial rear bagger mowers with serial numbers beginning with 1000001 and up. These kits must be installed **ONLY** by an Authorized Toro Service Dealer to ensure that the converted mower meets safety requirements.

2. **Spark Arrestor (Part No. 56-6730)**—If a spark arrestor is required because of local, state or federal regulations, it may be purchased at your local Authorized TORO Service Dealer. If mower is operated on any California forest, brush, or grass covered land without a properly operating spark arrestor, the operator is violating state law, Section 4442 Public Resources Code.

PRODUCT IDENTIFICATION

The model and serial number plate is located at rear of mower housing, near the discharge door. Always refer to specific numbers on this plate in correspondence or when replacement parts are needed.

TORO SERVICE SUPPORT

If help – concerning safety, set-up, operation, maintenance or troubleshooting – is ever needed, contact the local Authorized TORO Service Dealer or Distributor. Refer to the “Yellow Pages” for assistance. In addition to skilled service technicians, the dealer and distributor have factory approved accessories and replacement parts. Keep your Toro all TORO. Buy genuine TORO replacement parts and accessories.

MAINTENANCE RECORD

[illegible]



The Toro Promise

A One Year Limited Warranty

The Toro Company promises to repair your TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Commercial 21" Walk Power Mowers 1 Year

The cost of parts and labor are included, but the customer pays the transportation costs.

If you feel your TORO Product is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact your Authorized TORO Distributor or Authorized Dealer (the Yellow Pages of your telephone directory is a good reference source).
2. The TORO Distributor or Authorized Dealer will advise you on the arrangements that can be made to inspect and repair your product.
3. The TORO Distributor or Authorized Dealer will inspect the product and advise you whether the product is defective, and if so, make all repairs necessary to correct the defect without an extra charge to you.

If for any reason you are dissatisfied with the distributor's analysis of the defect or the service performed, you may contact us.

Write: Consumer Products Service Dept.
8111 Lyndale Avenue South
Minneapolis, MN 55420

The above remedy of product defects through repair by an Authorized TORO Distributor or Authorized Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitations on how long implied warranty lasts, so the above limitation may not apply to you.

This Warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper operating condition is the responsibility of the owner.

All warranty repairs reimbursable under The Toro Promise must be performed by an Authorized Toro Dealer or Distributor using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Distributor or Authorized Dealer are not reimbursable under the TORO Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their TORO Distributor (Dealer) to obtain guarantee policies for your country, province, or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.