Form No. 3398-928 Rev B

TORO®

Count on it.

Parts Catalog

GreensPro™ 1240 Greens Roller

Model No. 44912—Serial No. 316000001 and Up

Register at www.Toro.com.
Original Instructions (EN)

CE

3398-928 B

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head


Contents

Steering Roller Assembly 4
Complete Long Steering Roller Assembly No. 127-7958 6
Complete Short Steering Roller Assembly No. 127-7963 7
Hydraulic Tank and Hose Assembly 8
Drive Roller Assembly 10
Engine Assembly 12
Lifting Mechanism Assembly 14
Hitch Assembly 16
Seat and Brake Lever Assembly 18
Steering Wheel Assembly 20
Transmission Control Assembly 22
Transmission Assembly No. 111-6000 24
Cylinder Head Assembly 26
Cylinder Barrel Assembly 28
Crankcase Cover Assembly 30
Crankshaft Assembly 32
Piston and Connecting Rod Assembly 34
Camshaft Assembly 36
Recoil Starter Assembly 38
Fan Cover Assembly 40
Carburetor Assembly 42
Air Cleaner Assembly 44
Muffler Assembly 46
Fuel Tank Assembly 48
Flywheel Assembly 50
Ignition Coil Assembly 52
Control Assembly 54
Label Assembly 56
Wrench 58
Decal Assembly 60
Gasket Kit 62
Attachments and Accessories 64

© 2016—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420


Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

Steering Roller Assembly

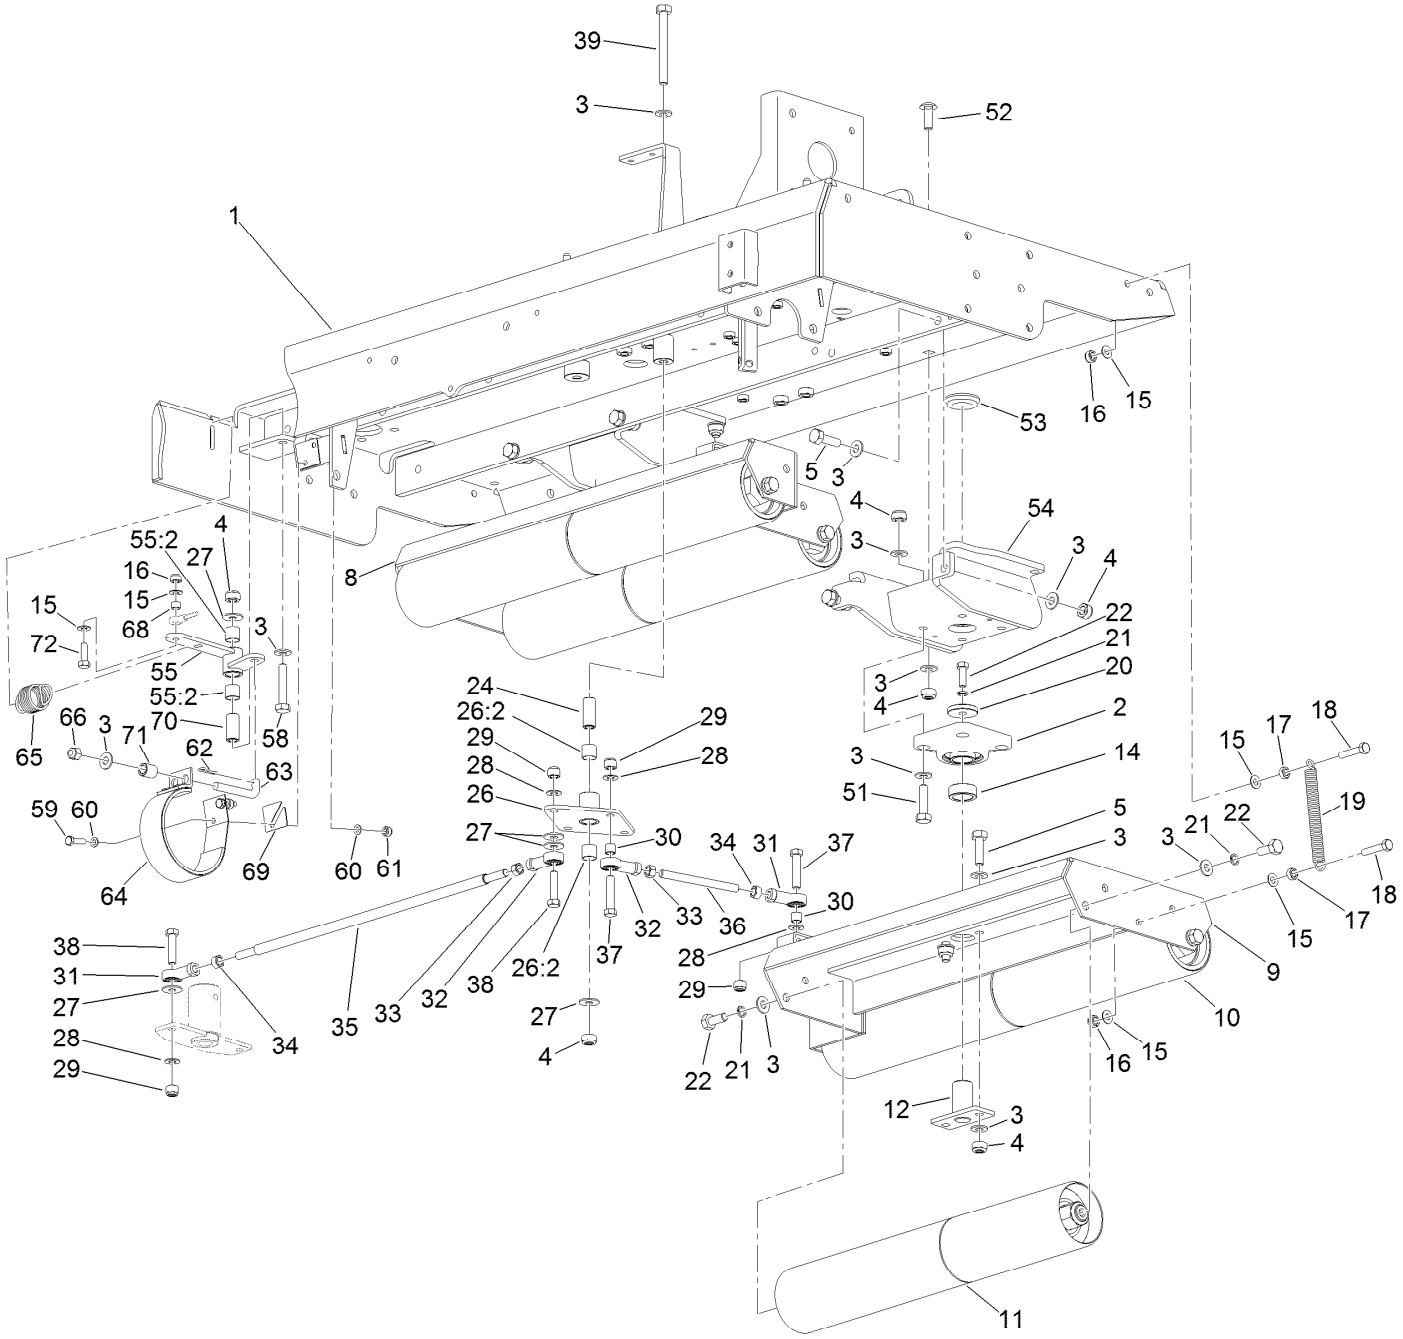


Steering Roller Assembly (continued)

Ref.	Part Number	Qty.	Description
1	131-1624-01	1	Roller Chassis
2	111-5753	2	Bearing Housing ASM
3	ZWQ1J000U	46	Washer-Plain
4	ZNN1J000U	21	Nut-Hex, NI
5	09394	8	Bolt
8	131-6429-01	1	Front Steering Head
9	131-6430-01	1	Rear Steering Head
10	127-7958	2	Complete Long Steering Roller ASM
11	127-7963	2	Complete Short Steering Roller ASM
12	111-5688	2	Shaft-Pivot
14	111-6108	2	Bushing-Axle
15	09475	10	Washer
16	09441	5	Nut-Hex, NI
17	ZNH1H000U	4	Nut-Hex
18	09681	4	Bolt
19	111-5883	2	Spring-Extension
20	111-5674	2	Collar-Fixing
21	09480	10	Washer-Lock
22	09395	10	Screw-HH
24	127-5938	1	Bushing-Pivot
26	127-5949	1	Steering Disc ASM
26:2	256-311	2	Bushing-Split
27	HY03355	5	Washer-Plated
28	09271	6	Washer-Plain
29	09216	6	Nut-Hex, NI
30	111-5684	4	Bushing
31	111-5748	3	Joint-Ball
32	111-5959	3	Joint-Ball
33	111-5855	3	Nut-Hex, LH
34	09213	3	Nut
35	111-5692	1	Rod-Pivot, Steering
36	131-1579	2	Linkage Arm
37	09119	4	Bolt
38	09118	2	Bolt-HH
39	ZBH1J095U	1	Bolt-HH
51	09611	8	Bolt-HH
52	33125-030	3	Screw-CARR
53	107-3532	2	Grommet
54	131-6366-01	2	Support-Roller
55	131-1626	1	Brake Pivot ASM
55:2	256-311	2	Bushing-Split
58	57-6360	1	Screw-Clutch
59	09044	2	Screw-Set
60	09472	4	Washer-Plain
61	09201	2	Nut
62	1-806003	1	Pin-Cotter
63	131-1584	1	Rod-Brake
64	9593	1	Brake Band ASM
65	13-3090	1	Spring-Finger
66	3296-39	1	Nut-Lock, NI
68	108-7983	1	Bushing-Cable
69	131-6353	1	Shim-1 Mm
70	131-6350	1	Bushing-Pivot
71	131-6367	1	Spacer
72	03162	1	Screw-HH

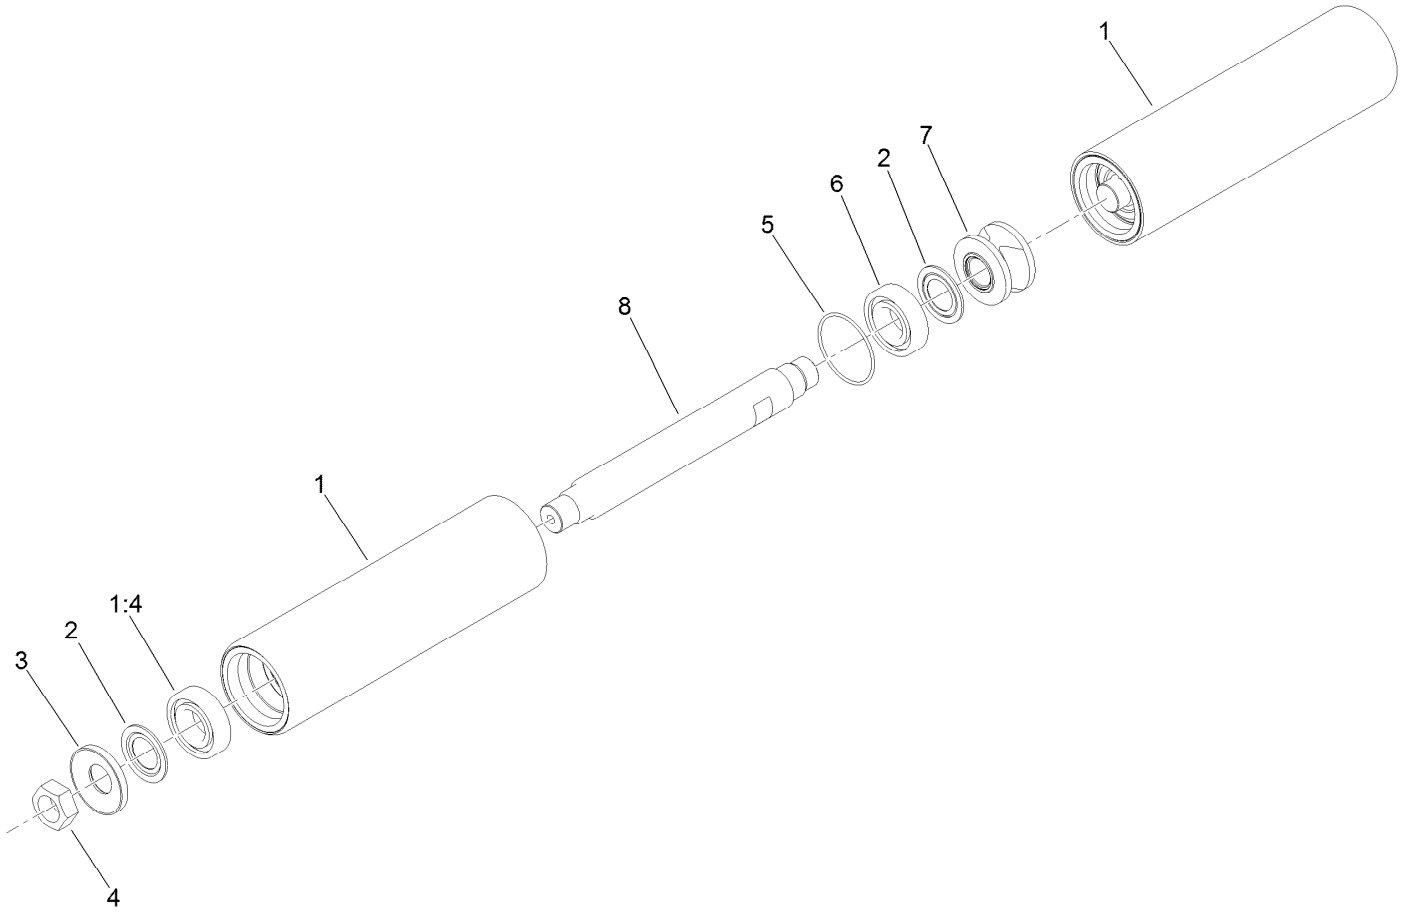

Complete Long Steering Roller Assembly No. 127-7958


Ref.	*Part Number*	*Qty.*	*Description*
1	127-7966	2	Long Steering Roller ASM
1:4	115-3296	1	Bearing-Sealed
2	115-3299	4	Seal-Flocked
3	127-7959	2	Spacer-Bearing
4	3296-49	2	Nut-Lock, NI
5	117-8177	2	O-Ring
6	115-3296	2	Bearing-Sealed
7	127-7960	1	Sleeve-Roller
8	127-8029	2	Shaft-Roller

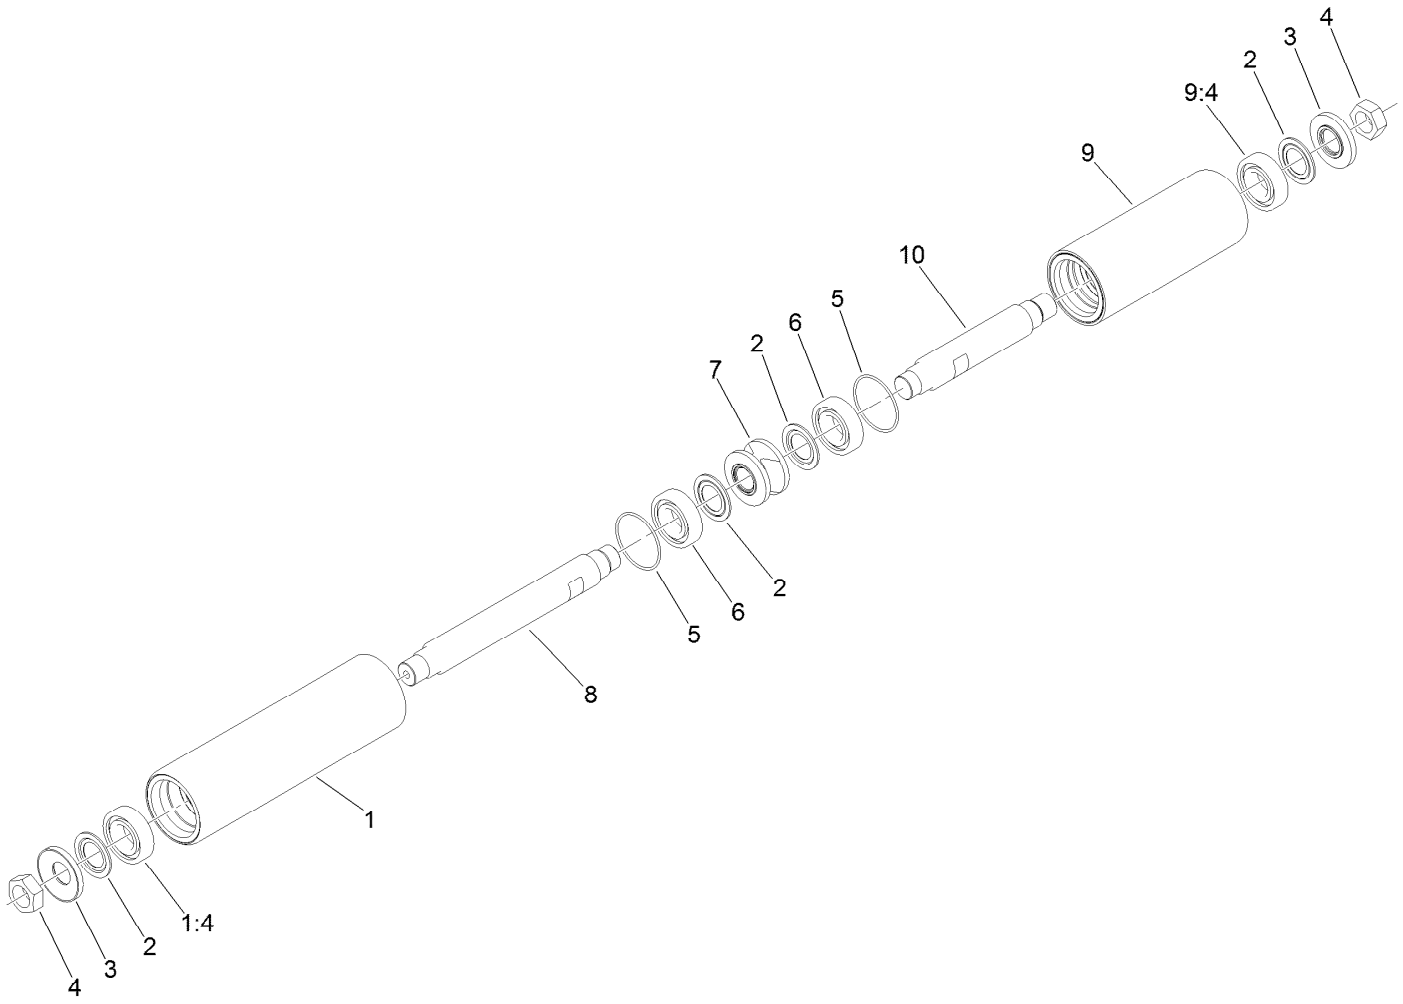

Complete Short Steering Roller Assembly No. 127-7963

Ref.	*Part Number*	*Qty.*	*Description*
1	127-7966	1	Long Steering Roller ASM
1:4	115-3296	1	Bearing-Sealed
2	115-3299	4	Seal-Flocked
3	127-7959	2	Spacer-Bearing
4	3296-49	2	Nut-Lock, NI
5	117-8177	2	O-Ring
6	115-3296	2	Bearing-Sealed
7	127-7960	1	Sleeve-Roller
8	127-8029	1	Shaft-Roller
9	127-7967	1	Short Steering Roller Assy
9:4	115-3296	1	Bearing-Sealed
10	127-8030	1	Shaft-Roller


Hydraulic Tank and Hose Assembly

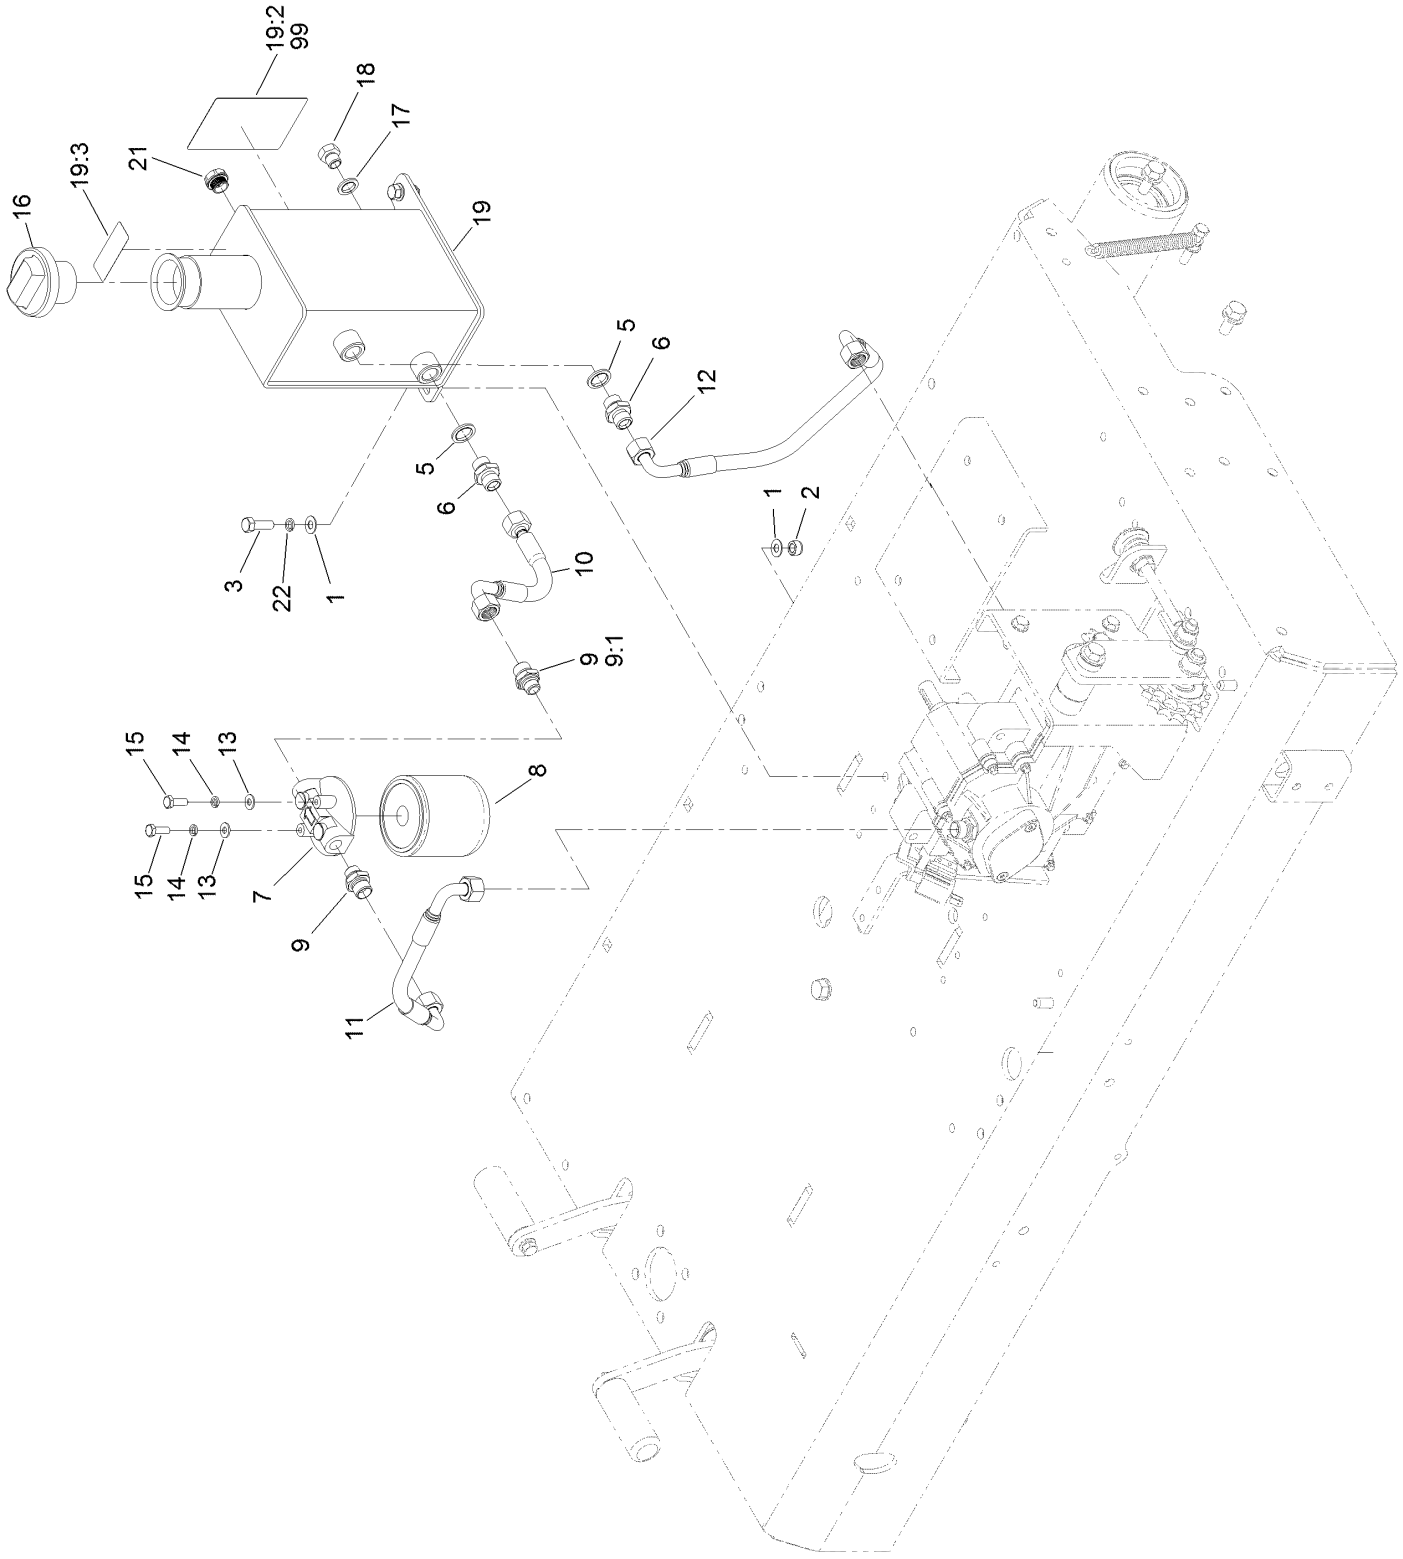

Hydraulic Tank and Hose Assembly (continued)

Ref.	Part Number	Qty.	Description
1	09475	4	Washer
2	09441	2	Nut-Hex, NI
3	03162	2	Screw-HH
5	10-06-031	2	Seal-Dowty
6	10-06-042	2	Adaptor-Bspp
7	104-7836	1	Head-Filter
8	1-633750	1	Filter-Oil, HYD
9	111-4788	2	Fitting-Straight
9:1	70-06-165	1	Seal-O Ring
10	111-5956	1	HYD Hose ASM
11	111-5957	1	HYD Hose ASM
12	111-5958	1	HYD Hose ASM
13	09261	2	Washer-Plain
14	09264	2	Washer-Spring
15	09821	2	Screw-HH
16	111-5749	1	Cap-Tank
17	10-06-030	1	Seal-Dowty
18	30-06-200	1	Plug-HYD
19	131-6375	1	Tank-Oil
19:2	127-5832	1	Decal-Warning
19:3	93-6686	1	Decal-Oil, HYD
21	127-5834	1	Glass-Sight
22	03469	2	Washer-Spring
99	131-6371	1	Decal-Warning, Ce


Drive Roller Assembly

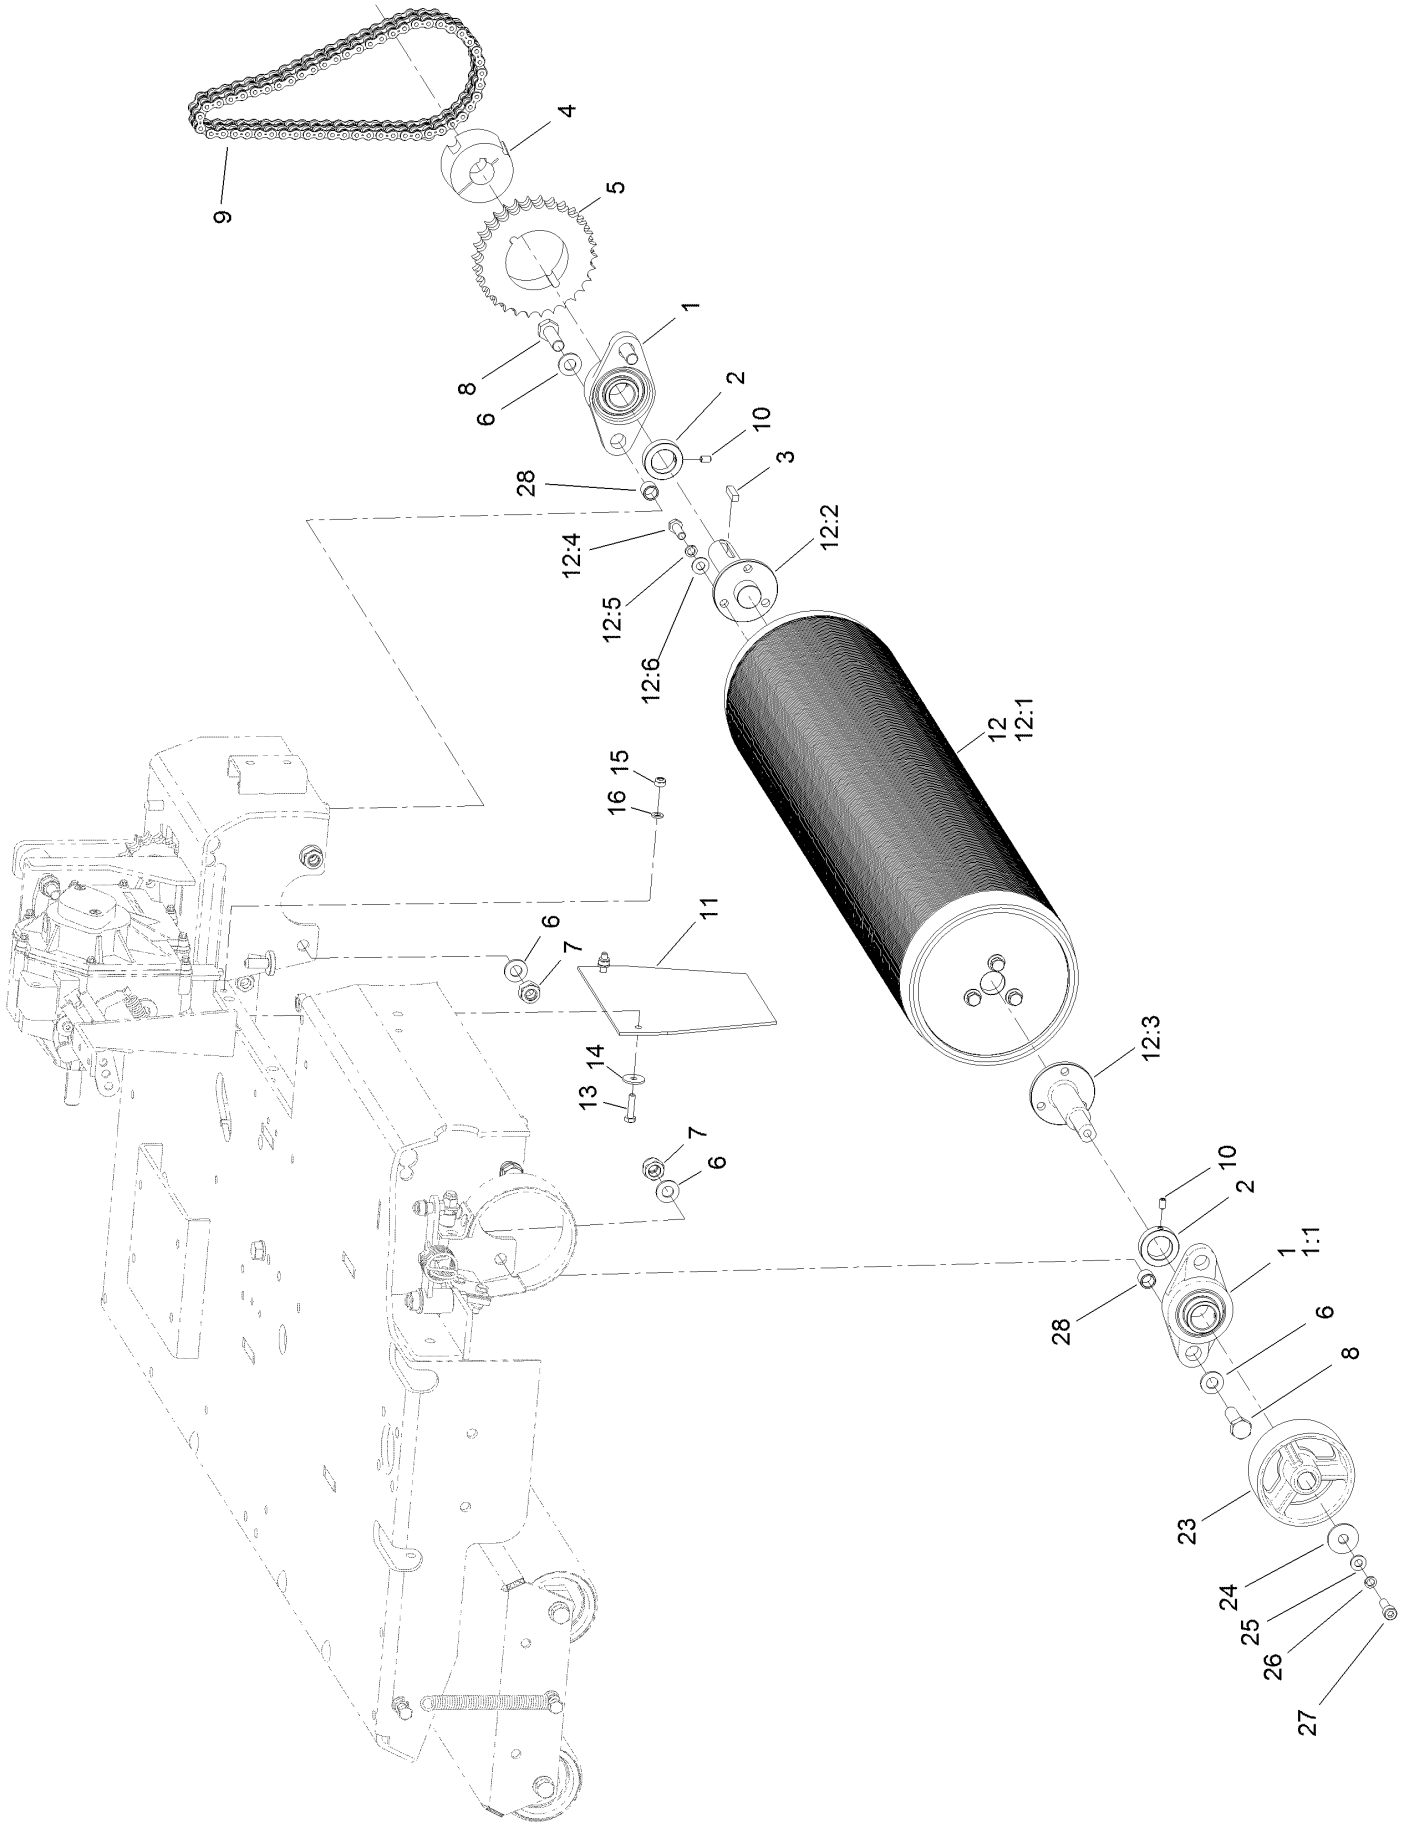

Drive Roller Assembly (continued)

Ref.	Part Number	Qty.	Description
1	111-5744	2	Bearing ASM
1:1	111-5758	1	Bearing
2	111-5785	2	Collar
3	04522	1	Key-Square
4	111-5762	1	Hub-Taperlock
5	111-5763	1	Sprocket-30 Tooth, Duplex
6	HY09485	8	Washer-Plain
7	09650	4	Nut-Hex, Nyloc
8	63-11-010	4	Bolt-HH
9	127-5865	1	Chain-Drive
10	09619	2	Grubscrew
11	111-7089	1	Guard-Chain, Rubber
12	131-1623	1	Drive Roller ASM
12:1	111-6857	1	Drum-Roller, Drive
12:2	111-5733	1	Axle-Roller, Keyed
12:3	131-1581	1	Roller Axle
12:4	09073	6	Setscrew
12:5	03469	6	Washer-Spring
12:6	09266	6	Washer-Plain
13	09364	2	Screw-HH
14	09263	2	Washer
15	09438	2	Nut-Nyloc
16	09472	2	Washer-Plain
23	106719	1	Drum-Brake
24	93-8806	1	Washer-Hardened
25	ZWP1H000U	1	Washer-Plain
26	03469	1	Washer-Spring
27	ZCS1H025U	1	Screw-HSH
28	131-6367	4	Spacer


Engine Assembly

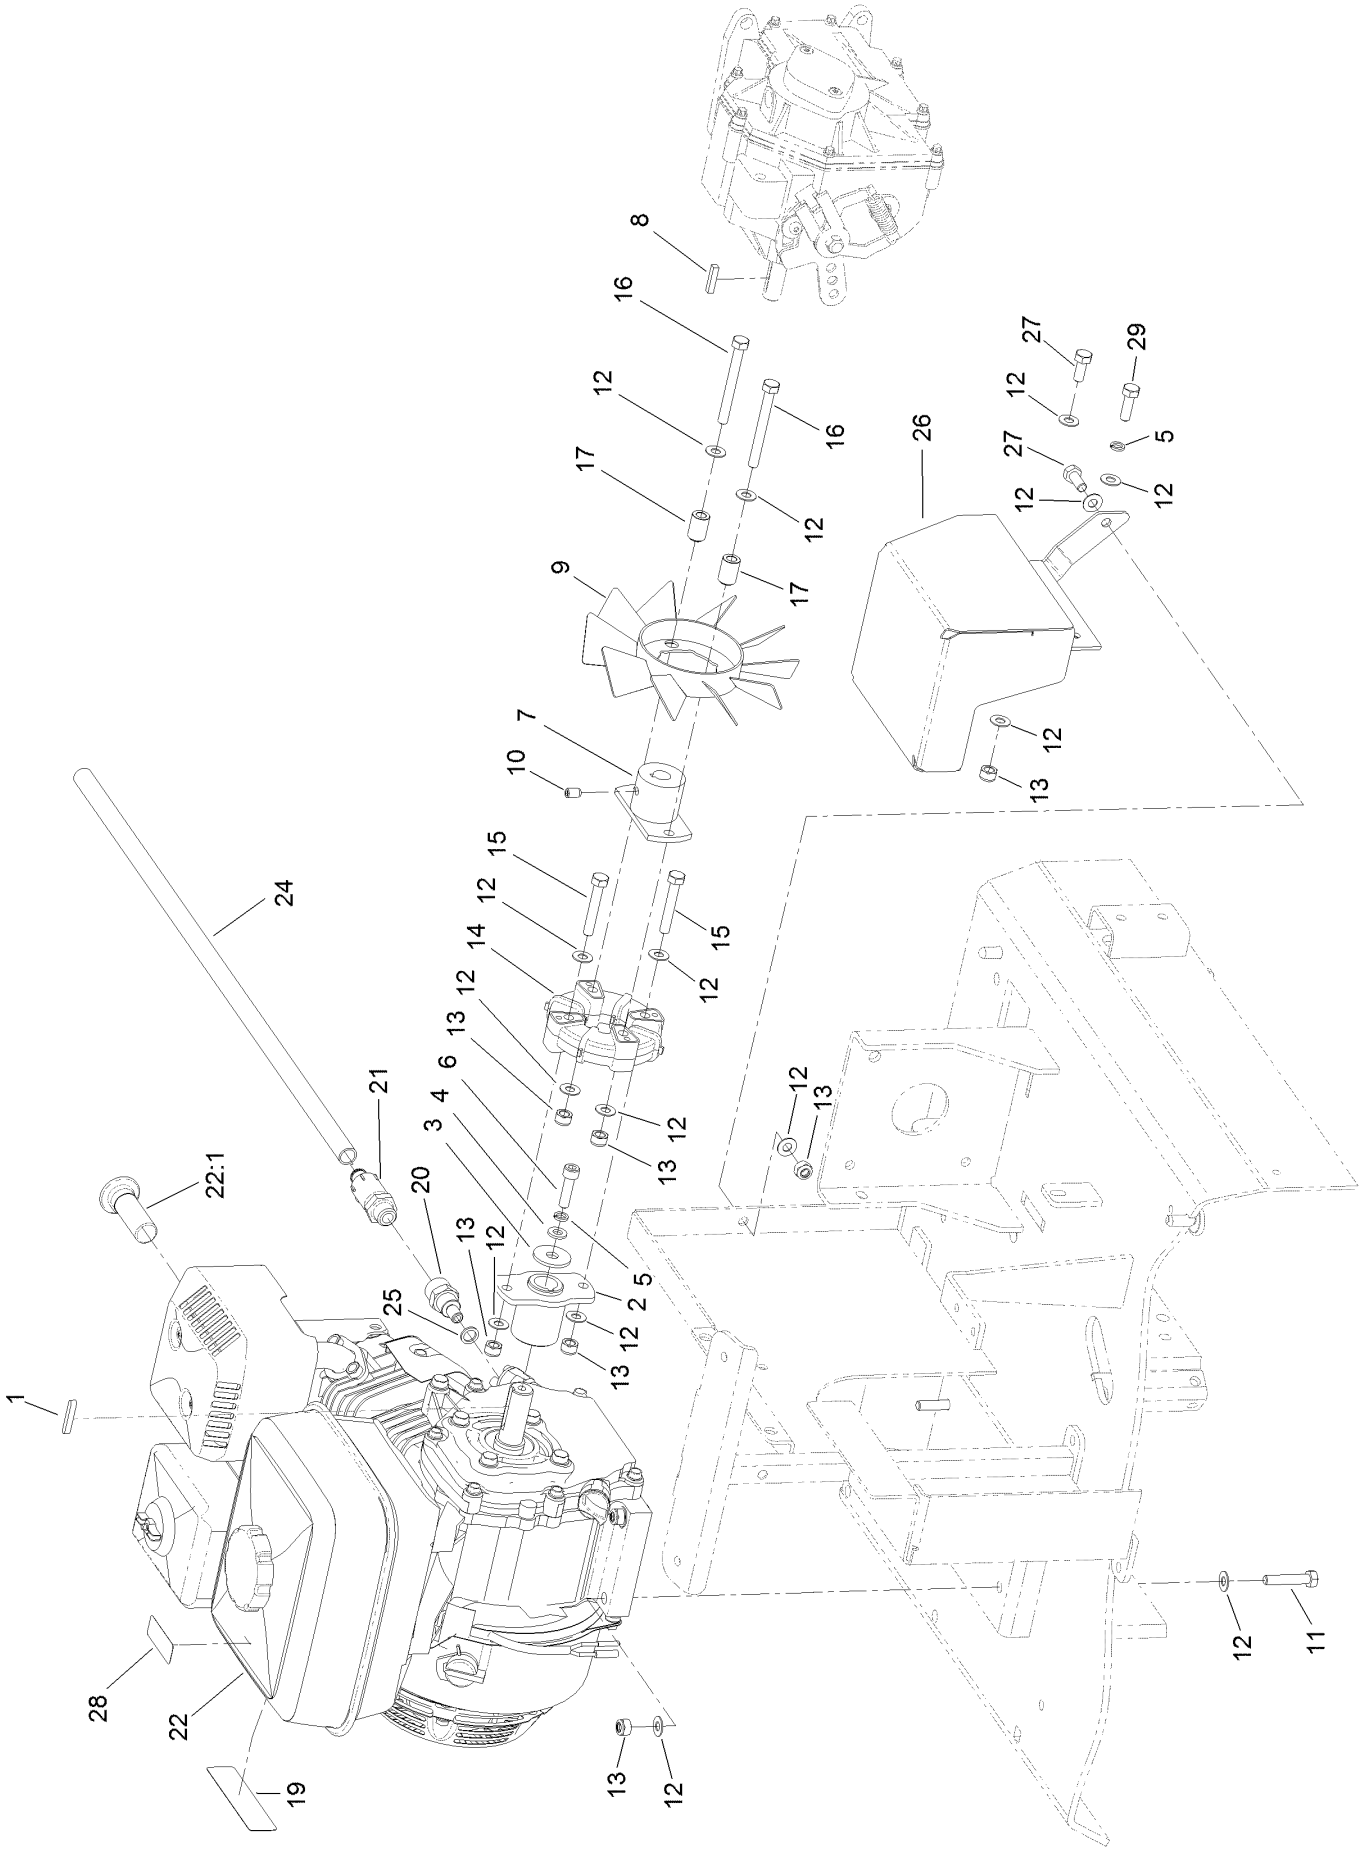

Engine Assembly (continued)

Ref.	Part Number	Qty.	Description
1	103-2739	1	Key
2	127-5799	1	Collar-Engine
3	93-8806	1	Washer-Hardened
4	ZWP1H000U	1	Washer-Plain
5	03469	2	Washer-Spring
6	ZCS1H030U	1	Screw-Cap
7	111-5730	1	Collar-Pump
8	111-5724	1	Key-Square
9	127-5846	1	Fan
10	131-6401	1	Screw-Set
11	09681	4	Bolt
12	09475	21	Washer
13	09441	10	Nut-Hex, NI
14	119-0652	1	Coupler-Rubber
15	ZBH1H050U	2	Bolt
16	ZBH1H075U	2	Bolt
17	127-5847	2	Bushing
19	117-2718	1	Decal-Arrester, Spark
20	111-7088	1	Adaptor-Drain, Oil
21	92-6877	1	Valve-Drain, Oil
22	111-7153	1	Engine-Honda
22:1	111-6526	1	Arrester-Spark
24	103-1964	1	Hose-Drain, Oil
25	111-7401	1	Washer-Plug, Sump
26	131-1610-03	1	Guard-Exhaust
27	09368	2	Screw-HH
28	130-8322	1	Decal-Warning, Ethanol
29	03162	1	Screw-HH

Lifting Mechanism Assembly

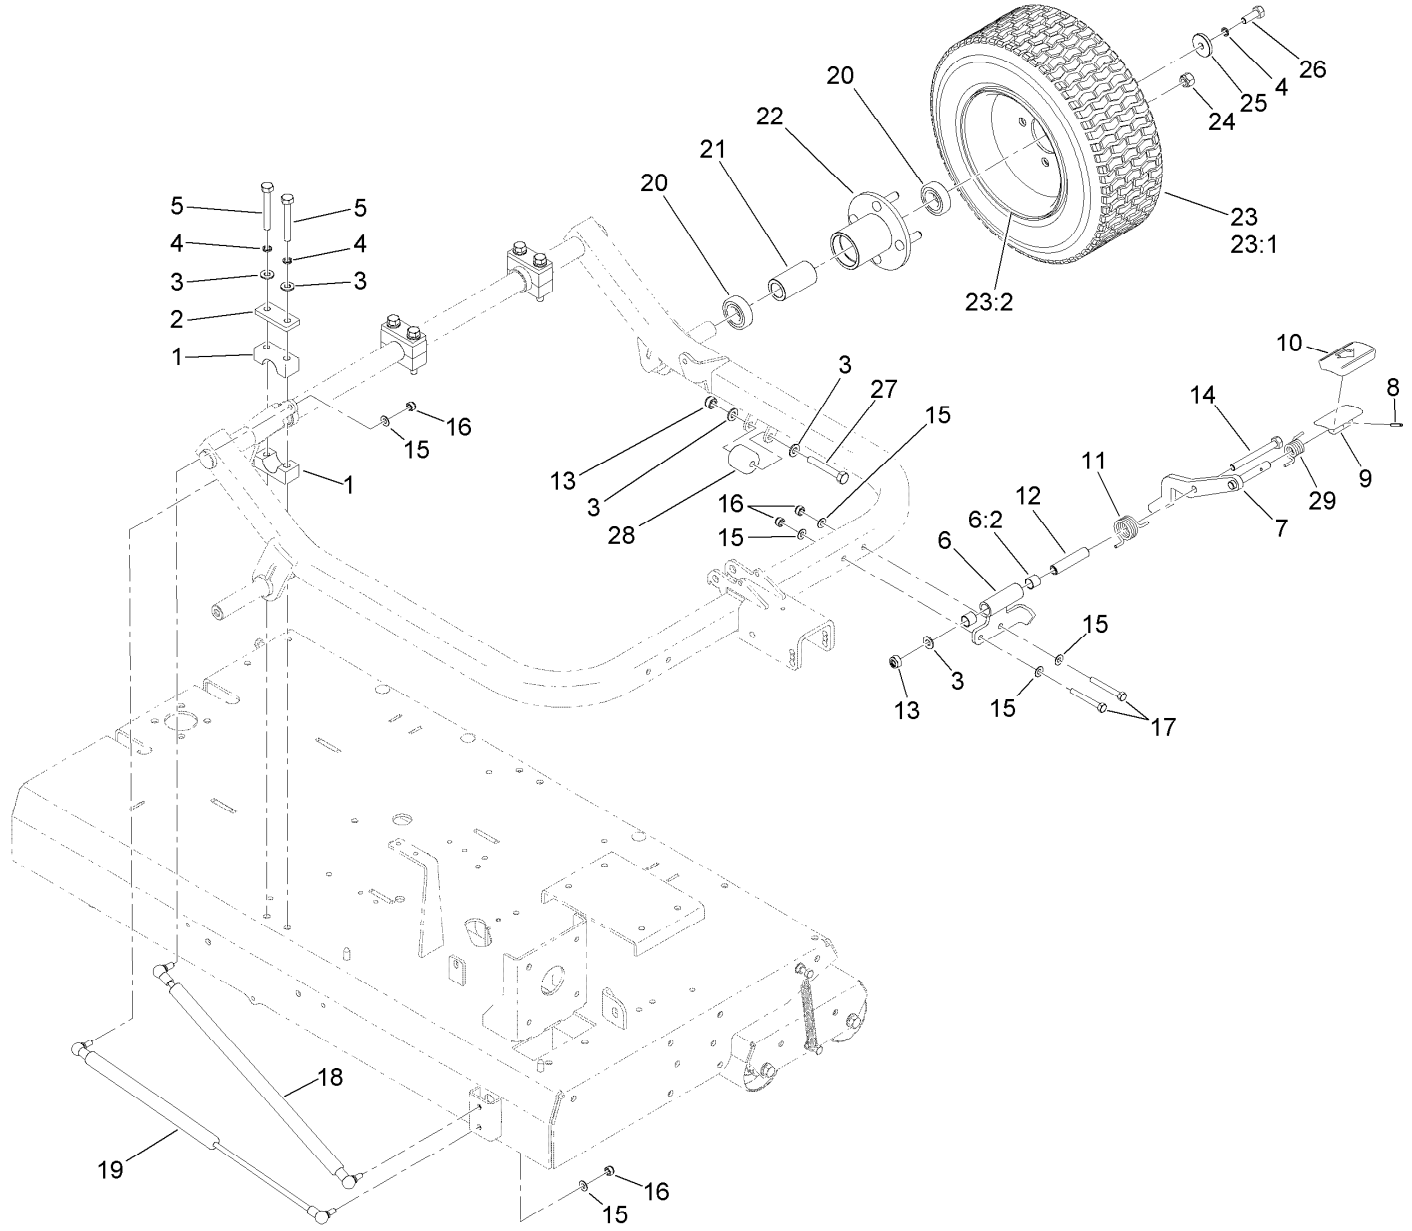


Lifting Mechanism Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-8044	3	Clamp-Drawbar
2	111-5681	3	Plate-Clamp, Axle
3	ZWQ1J000U	9	Washer-Plain
4	09480	8	Washer-Lock
5	ZBH1J075U	6	Bolt-HH
6	127-1351	1	Pedal Pivot ASM
6:2	256-311	2	Bushing-Split
7	127-1349-01	1	Lever-Pedal
8	32121-45	1	Pin-Spring
9	117-9507	1	Pedal-Accelerator
10	74-9100	1	Pad-Pedal, Forward
11	127-1353	1	Spring-Torsion
12	127-1355	1	Spacer
13	ZNN1J000U	2	Nut-Hex, NI
14	ZBH1J095U	1	Bolt-HH
15	09475	8	Washer
16	09441	6	Nut-Hex, NI
17	ZBH1H065U	2	Bolt
18	127-1326	1	Damper
19	125-5696	1	Spring-Gas
20	120-4621	4	Bearing
21	111-5858	2	Spacer-Bearing
22	111-7103-03	2	Wheel Hub ASM
23		2	Wheel And Tire ASM ●
23:1	111-5755	1	Tyre
23:2	111-5756	1	Rim-Wheel
24	93-5268	8	Nut-Lug
25	111-5674	2	Collar-Fixing
26	09392	2	Screw-HH
27	09399	1	Bolt
28	127-1342	1	Roller
29	127-8034	1	Spring-Torsion

● Not serviced separately


Hitch Assembly

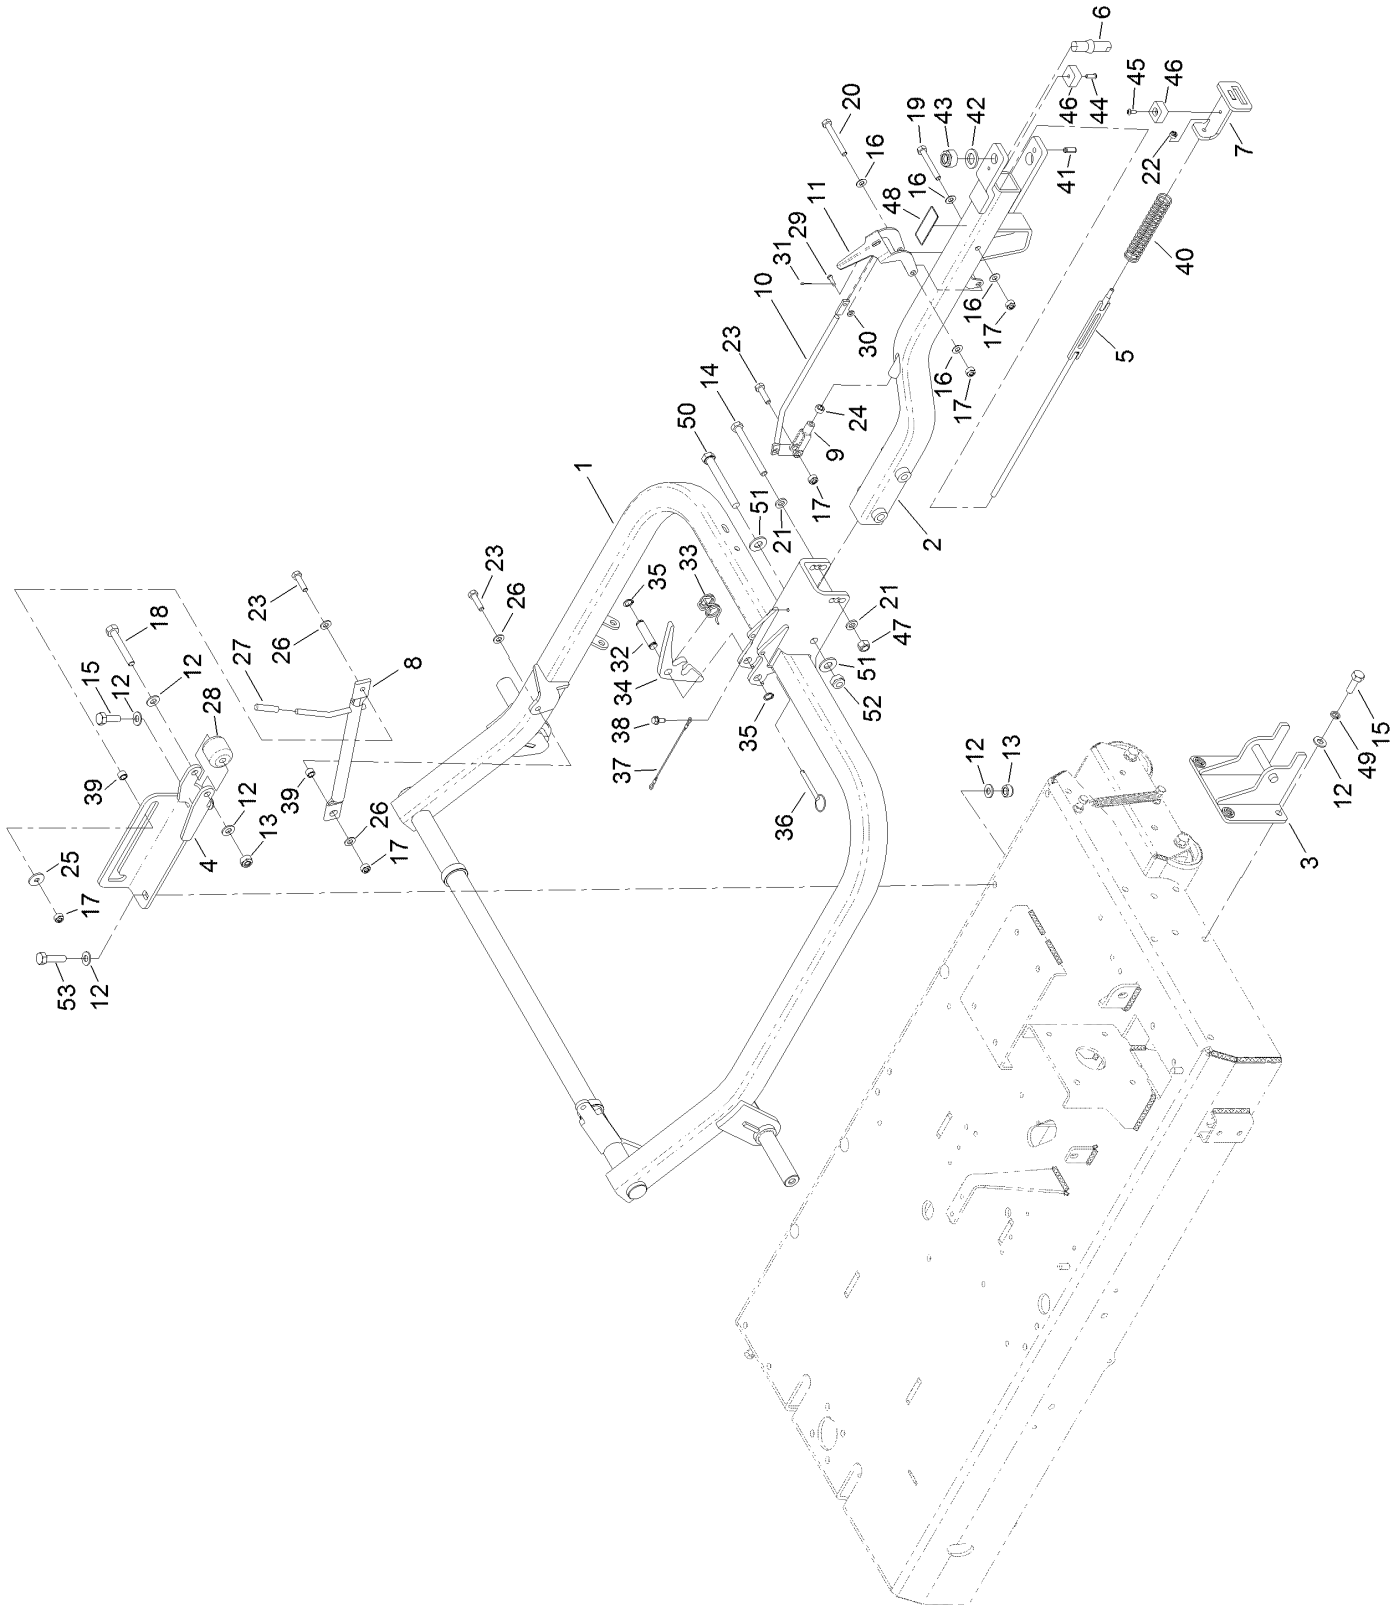

Hitch Assembly (continued)

Ref.	Part Number	Qty.	Description
1	125-5704-01	1	Hitch Pivot ASM
2	125-5725-01	1	Hitch ASM
3	125-5724-01	1	Bracket-Lock
4	125-5717-01	1	Bracket-Slide
5	125-5743	1	Lever ASM
6	127-5861	1	Pin-Tow
7	125-5741-01	1	Slide
8	125-5730-01	1	Lever
9	1-303105	1	Yoke-Adjustable
10	127-1317	1	Wire-Form
11	127-1321	1	Lever
12	ZWQ1J000U	10	Washer-Plain
13	ZNN1J000U	3	Nut-Hex, NI
14	127-5864	1	Screw-HH
15	09392	5	Screw-HH
16	09475	4	Washer
17	09441	5	Nut-Hex, NI
18	09399	1	Bolt
19	09371	1	Bolt
20	ZBH1H065U	1	Bolt
21	107-1413	2	Washer-Hardened
22	09438	1	Nut-Nyloc
23	09369	3	Screw-HH
24	09207	1	Nut
25	1-603716	1	Washer-Friction
26	3256-23	3	Washer-Flat
27	125-5722	1	Cap-Flex
28	127-1342	1	Roller
29	283-29	1	Pin-Clevis
30	3256-51	1	Washer-Flat
31	3272-1	1	Pin-Cotter
32	125-5731	1	Pin-Lock, Lever
33	125-5723	1	Spring-Torsion
34	125-5711-01	1	Latch-Hitch
35	32151-61	2	Ring-Retaining
36	108-0094	1	Pin-Cotterless
37	28-8070	1	Lanyard
38	32144-10	1	Screw-HWH
39	120-9697	2	Spacer
40	125-5737	1	Spring-Compression
41	32121-123	1	Pin-Roll
42	09491	1	Washer-Plain
43	09456	1	Nut
44	119-7568	1	Screw-HSBH
45	127-5866	1	Screw-HSBH
46	94-1392	2	Pad-Rubber
47	131-1558	1	Nut-Lock
48	127-5885	1	Decal-Disconnect, Hitch
49	09480	4	Washer-Lock
50	131-1557	1	Screw-HH
51	87-7270	2	Washer-Thrust
52	94-4307	1	Nut-Hex Lock
53	09611	1	Bolt-HH

Seat and Brake Lever Assembly

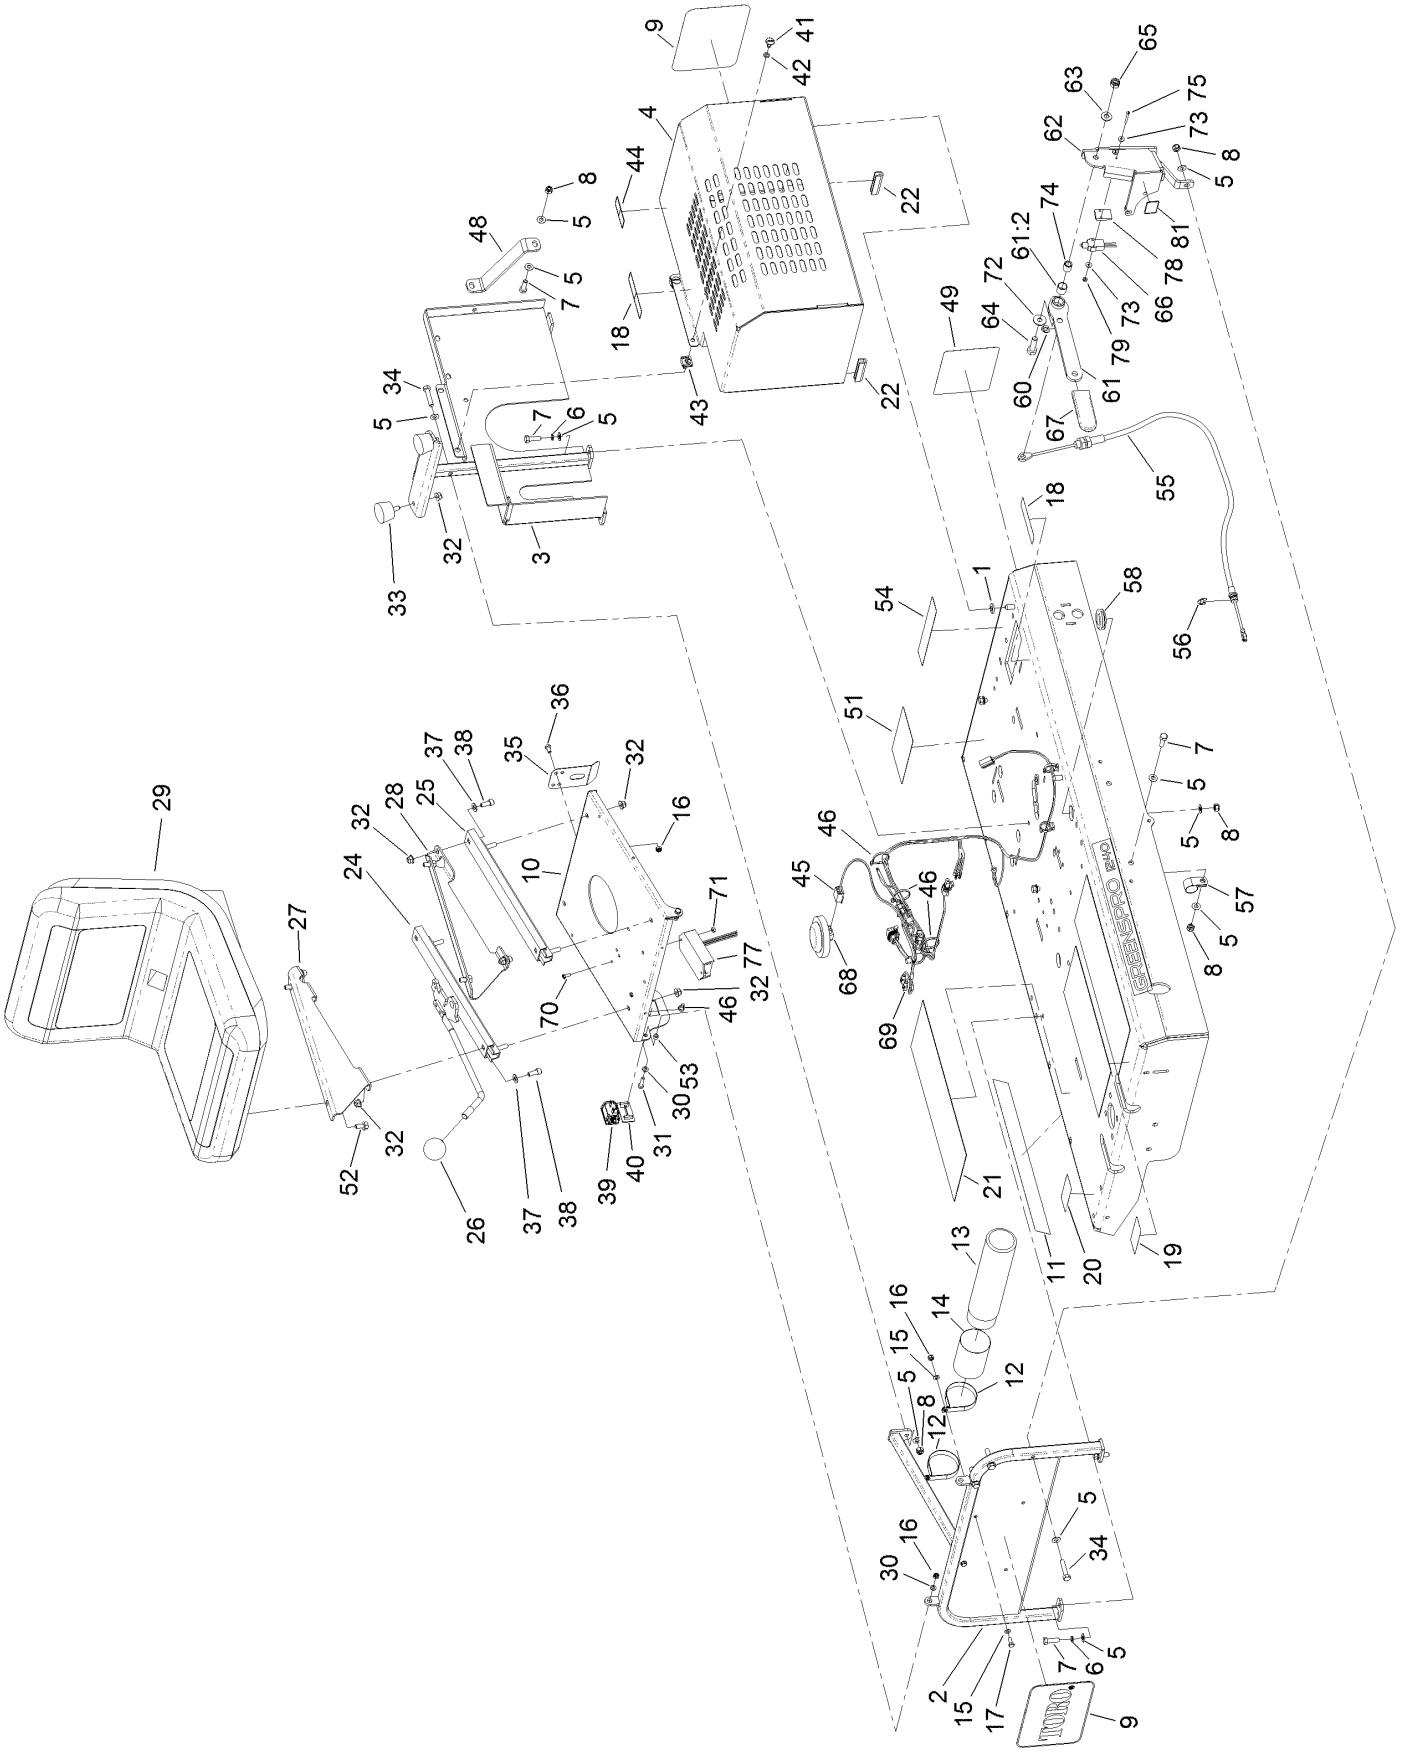


Seat and Brake Lever Assembly (continued)

Ref.	Part Number	Qty.	Description
1	111-5739	2	Washer-Rubber
2	131-6363-01	1	Seat Support
3	131-1629-01	1	Frame-Support, Rear
4	131-1615-01	1	Transmission Cover
5	09475	20	Washer
6	03469	5	Washer-Spring
7	03162	7	Screw-HH
8	09441	9	Nut-Hex, NI
9	111-3728	2	Decal
10	127-5752-01	1	Pan-Seat
11	127-5895	2	Decal
12	107-1865	2	R-Clamp
13	104-7050	1	Tube-Manual
14	104-7048	1	Cap-Housing
15	ZWP1F000U	4	Washer-Plain
16	09438	6	Nut-Nyloc
17	09362	2	Screw-HH
18	111-5646	2	Decal-Warning
19	111-5649	1	Decal-Control, Pedal (Left)
20	111-5650	1	Decal-Control, Pedal (Right)
21	70-07-067	4	Tape-Slip, Anti
22	50-08-001	1	Edging-Rubber
24	119-4483	1	Seat Adjuster Lever ASM
25	92-8990	1	Adjuster-Slave
26	233-48	1	Knob
27	127-5759-01	1	Bracket-Seat, RH
28	127-5754-01	1	Bracket-Seat, LH
29	111-5742	1	Seat ASM
30	09472	4	Washer-Plain
31	ZBH1F025U	2	Bolt-HH
32	104-8300	10	Nut-Flange, NI
33	68-3270	2	Bumper-Rubber
34	09681	4	Bolt
35	66-2630	1	Latch-Seat
36	09361	2	Screw-HH
37	3256-23	4	Washer-Flat
38	3274-10	4	Screw-HSH
39	120-2244	1	Hourmeter
40	111-2337	1	Blank-Switch
41	119-1728	2	Stud-1/4 Turn
42	119-1729	2	Retainer-Stud
43	119-1730	2	Receptacle-Clip, Mini
44	127-0392	1	Decal-Hot Surface
45	122-0421	1	Harness-Wire
46	HY3966	4	Tie-Cable
48	127-5928-01	1	Support Strut
49	127-5867	1	Decal-Service
49	127-5871	1	Decal-Service, Czech
49	127-5872	1	Decal-Reference, Danish
49	127-5873	1	Decal-Reference, German
49	127-5874	1	Decal-Reference, Spanish
49	127-5875	1	Decal-Reference, Finnish
49	127-5876	1	Decal-Reference, French
49	127-5877	1	Decal-Reference, Italian
49	127-5878	1	Decal-Reference, Japanese
49	127-5879	1	Decal-Reference, Dutch
49	127-5880	1	Decal-Reference, Norwiegian
49	127-5881	1	Decal-Reference, Polish
49	127-5882	1	Decal-Reference, Portuguese
49	127-5883	1	Decal-Reference, Swedish
51	127-5884	1	Decal-Operation
52	33104-016	4	Screw-HHF
53	88-7860	2	Spacer
54	127-8010	1	Decal-Adjust, Tension (Chain)
55	131-6361	1	Cable-Brake, Park
56	32120-47	1	Ring-Retaining, External
57	2412-41	1	Clamp
58	1-543286	1	Grommet
60	32151-47	1	Ring-Retaining
61	131-6389	1	Brake Lever ASM
61:2	256-311	1	Bushing-Split
62	131-6388-01	1	Support-Lever, Brake
63	ZWQ1J000U	1	Washer-Plain
64	09394	1	Bolt
65	ZNN1J000U	1	Nut-Hex, NI
66	99-3410	1	Switch
67	21-1880	1	Grip-Handle
68	100-3524	1	Switch-Seat
69	122-0570	1	Harness-Wire
70	32105-8	2	Screw-SHH
71	110-3145	2	Nut-Lock
72	HY03355	1	Washer-Plated
73	3269-6	4	Washer-Flat
74	131-6386	1	Pivot Bush
75	3249-11	2	Screw-Machine
77	122-0423	1	Module-Ground, Magneto
78	131-6383	1	Spacer
79	3296-9	2	Nut-Lock
81	131-0440	1	Decal-Brake, Parking
99	107-0342	1	Sealant-Electrical ●

● Not illustrated


Steering Wheel Assembly

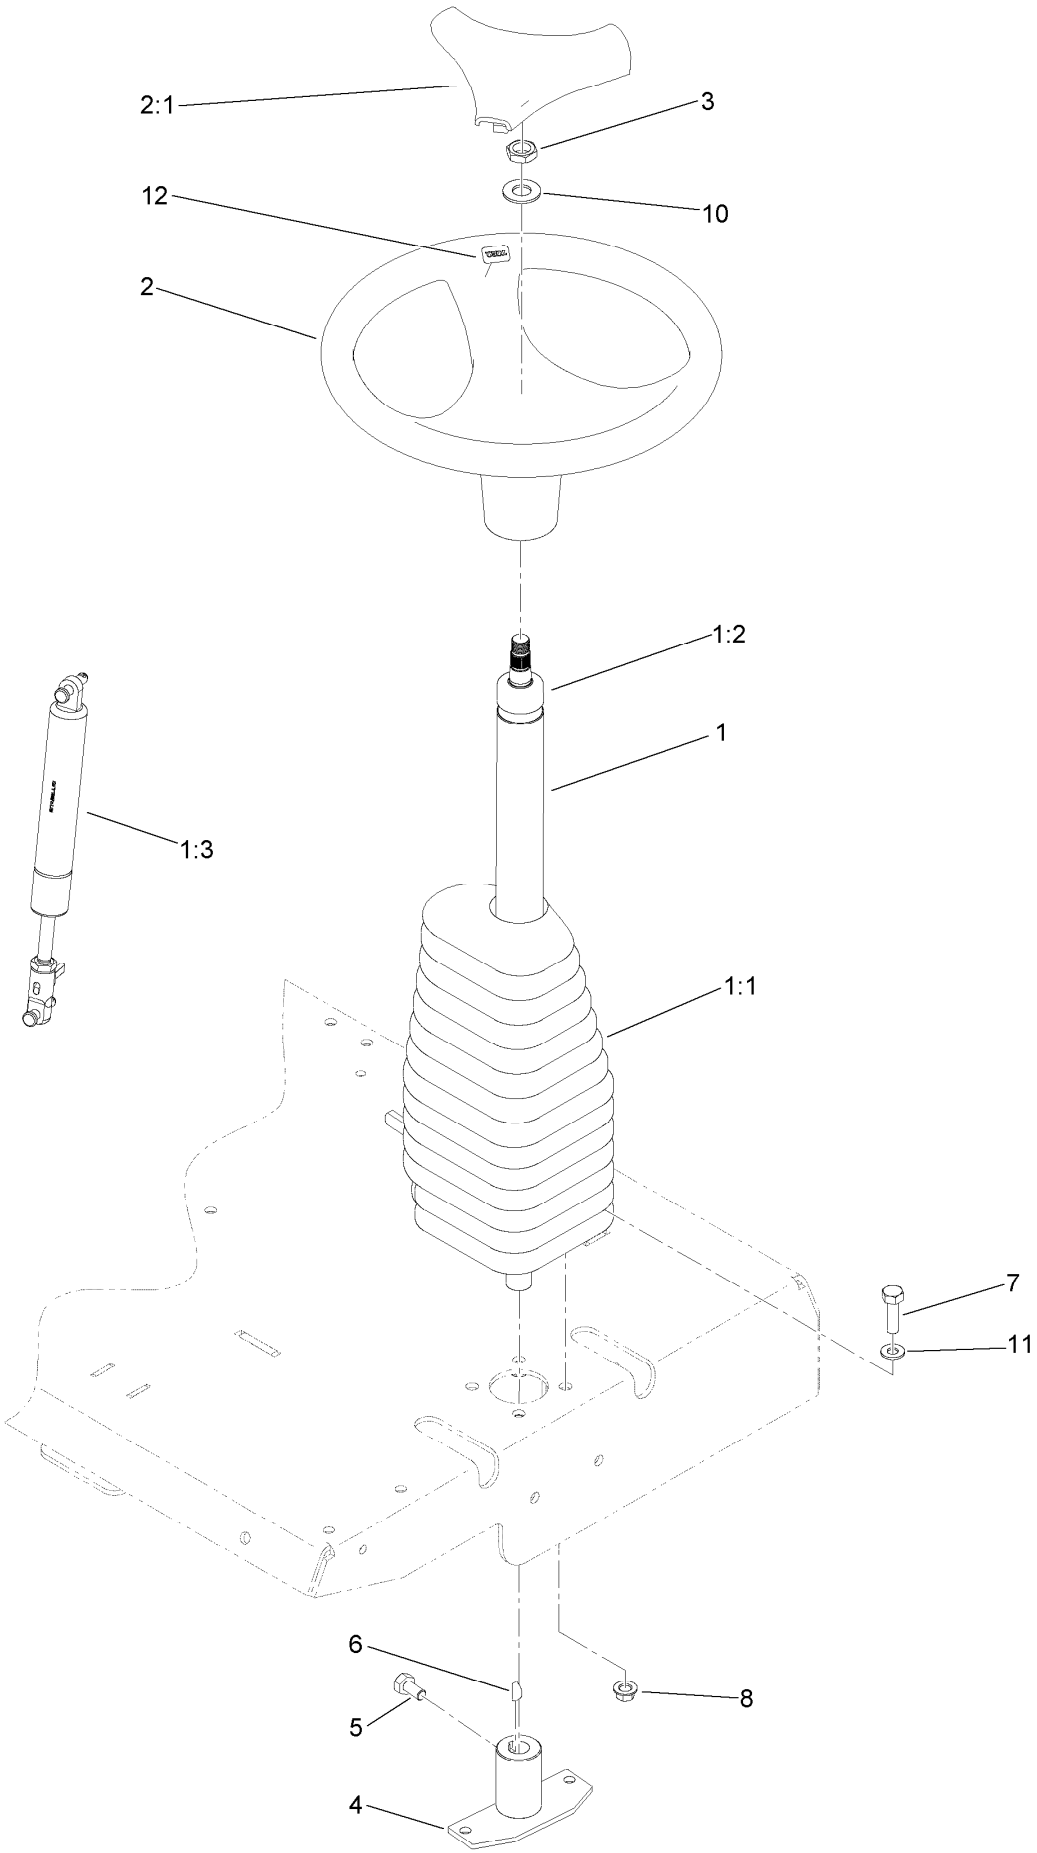

Steering Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-8041	1	Column-Steering
1:1	120-2592	1	Boot-Rubber, Column
1:2	120-2593	1	Boot-Rubber, Bearing
1:3	120-2594	1	Gas Spring ASM
2	98-1471	1	Wheel-Steering
2:1	98-1468	1	Cover-Wheel, Steering
3	110-8816	1	Nut-Hex
4	127-5776-01	1	Pivot-Steering
5	09391	1	Screw-HH
6	3257-7	1	Key-Woodruff
7	09392	4	Screw-HH
8	63-11-015	4	Nut-Flanged
10	3256-27	1	Washer-Flat
11	ZWQ1J000U	4	Washer-Plain
12	98-1459	1	Decal

Transmission Control Assembly

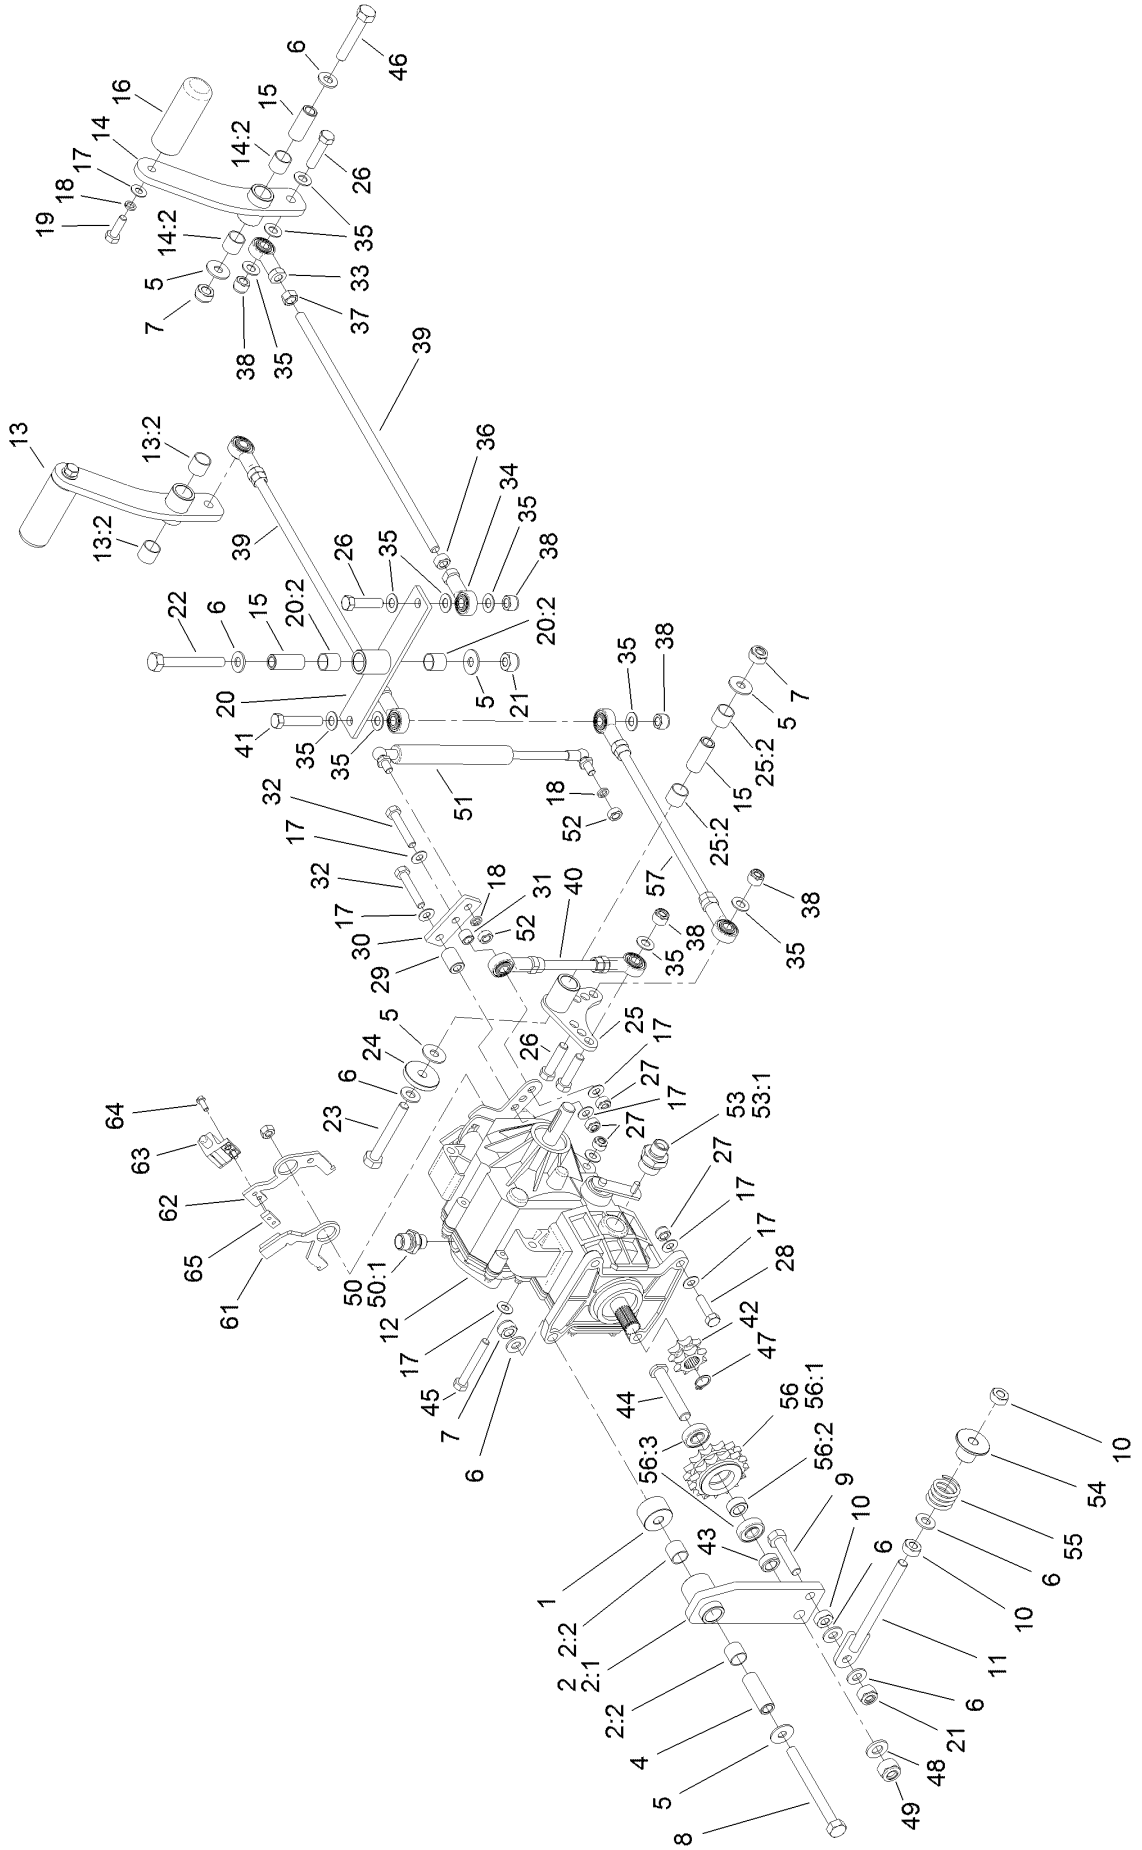


Transmission Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	111-5672	1	Spacer
2	127-7972	1	Idler Arm ASM
2:1	127-7970	1	Arm-Idler
2:2	256-311	2	Bushing-Split
4	127-7969	1	Bushing-Pivot
5	HY03355	6	Washer-Plated
6	ZWQ1J000U	8	Washer-Plain
7	ZNN1J000U	4	Nut-Hex, NI
8	09405	1	Bolt
9	ZDH1J045U	1	Screw-HH
10	09449	3	Nut
11	111-5736	1	Tensioning Rod ASM
12	111-6000	1	Transmission ASM
13	127-5948	1	Left Hand Motion Pedal ASM
13:2	256-311	2	Bushing-Split ●
14	127-5947	1	Right Hand Motion Pedal ASM
14:2	256-311	2	Bushing-Split
15	127-5938	4	Bushing-Pivot
16	111-5727	2	Pedal
17	09475	14	Washer
18	03469	4	Washer-Spring
19	03162	2	Screw-HH
20	127-5946	1	Pedal Rod Pivot ASM
20:2	256-311	2	Bushing-Split
21	09447	2	Nut
22	09404	1	Bolt
23	ZBH1J075U	1	Bolt-HH
24	111-5674	1	Collar-Fixing
25	127-7950	1	Lever Quadrant ASM
25:2	256-311	2	Bushing-Split
26	09118	5	Bolt-HH
27	09441	6	Nut-Hex, NI
28	09369	3	Screw-HH
29	111-5722	1	Spacer-Damper
30	111-5711	1	Plate-Damper
31	111-5792	1	Bushing
32	09654	2	Bolt
33	111-5959	4	Joint-Ball
34	111-5748	4	Joint-Ball
35	09271	14	Washer-Plain
36	09213	4	Nut
37	111-5855	4	Nut-Hex, LH
38	09216	6	Nut-Hex, NI
39	111-5682	2	Rod-Linkage
40	111-5690	1	Arm-Linkage
41	09121	1	Bolt
42	127-5870	1	Sprocket-8 Tooth
43	111-5712	1	Bushing-Idler, Gear
44	111-5723	1	Bolt-Sprocket, Idler
45	09371	1	Bolt
46	09397	2	Bolt
47	111-6009	1	Circlip-EXT
48	HY09485	1	Washer-Plain
49	ZNN1L000U	1	Nut-Nyloc
50	111-4788	1	Fitting-Straight
50:1	70-06-165	1	Seal-O Ring
51	127-5896	1	Damper
52	ZNH1H000U	2	Nut-Hex
53	70-06-053	1	Adaptor-Boss
53:1	63-06-111	1	Seal-O Ring
54	127-5829	1	Spacer
55	127-5849	1	Spring-Compression
56	111-5768	1	Idler Sprocket ASM
56:1	111-6116	1	Sprocket-Idler, 15T
56:2	111-6115	1	Spacer-Sprocket, Idler
56:3	411027	2	Bearing
57	111-5697	1	Rod-Linkage, Long
61	131-1593	1	Arm
62	131-1594	1	Arm
63	1-513051	1	Switch-Open, Normally
64	32105-8	2	Screw-SHH
65	1-633181	1	Plate-Tapped

● Not illustrated

Transmission Assembly No. 111-6000

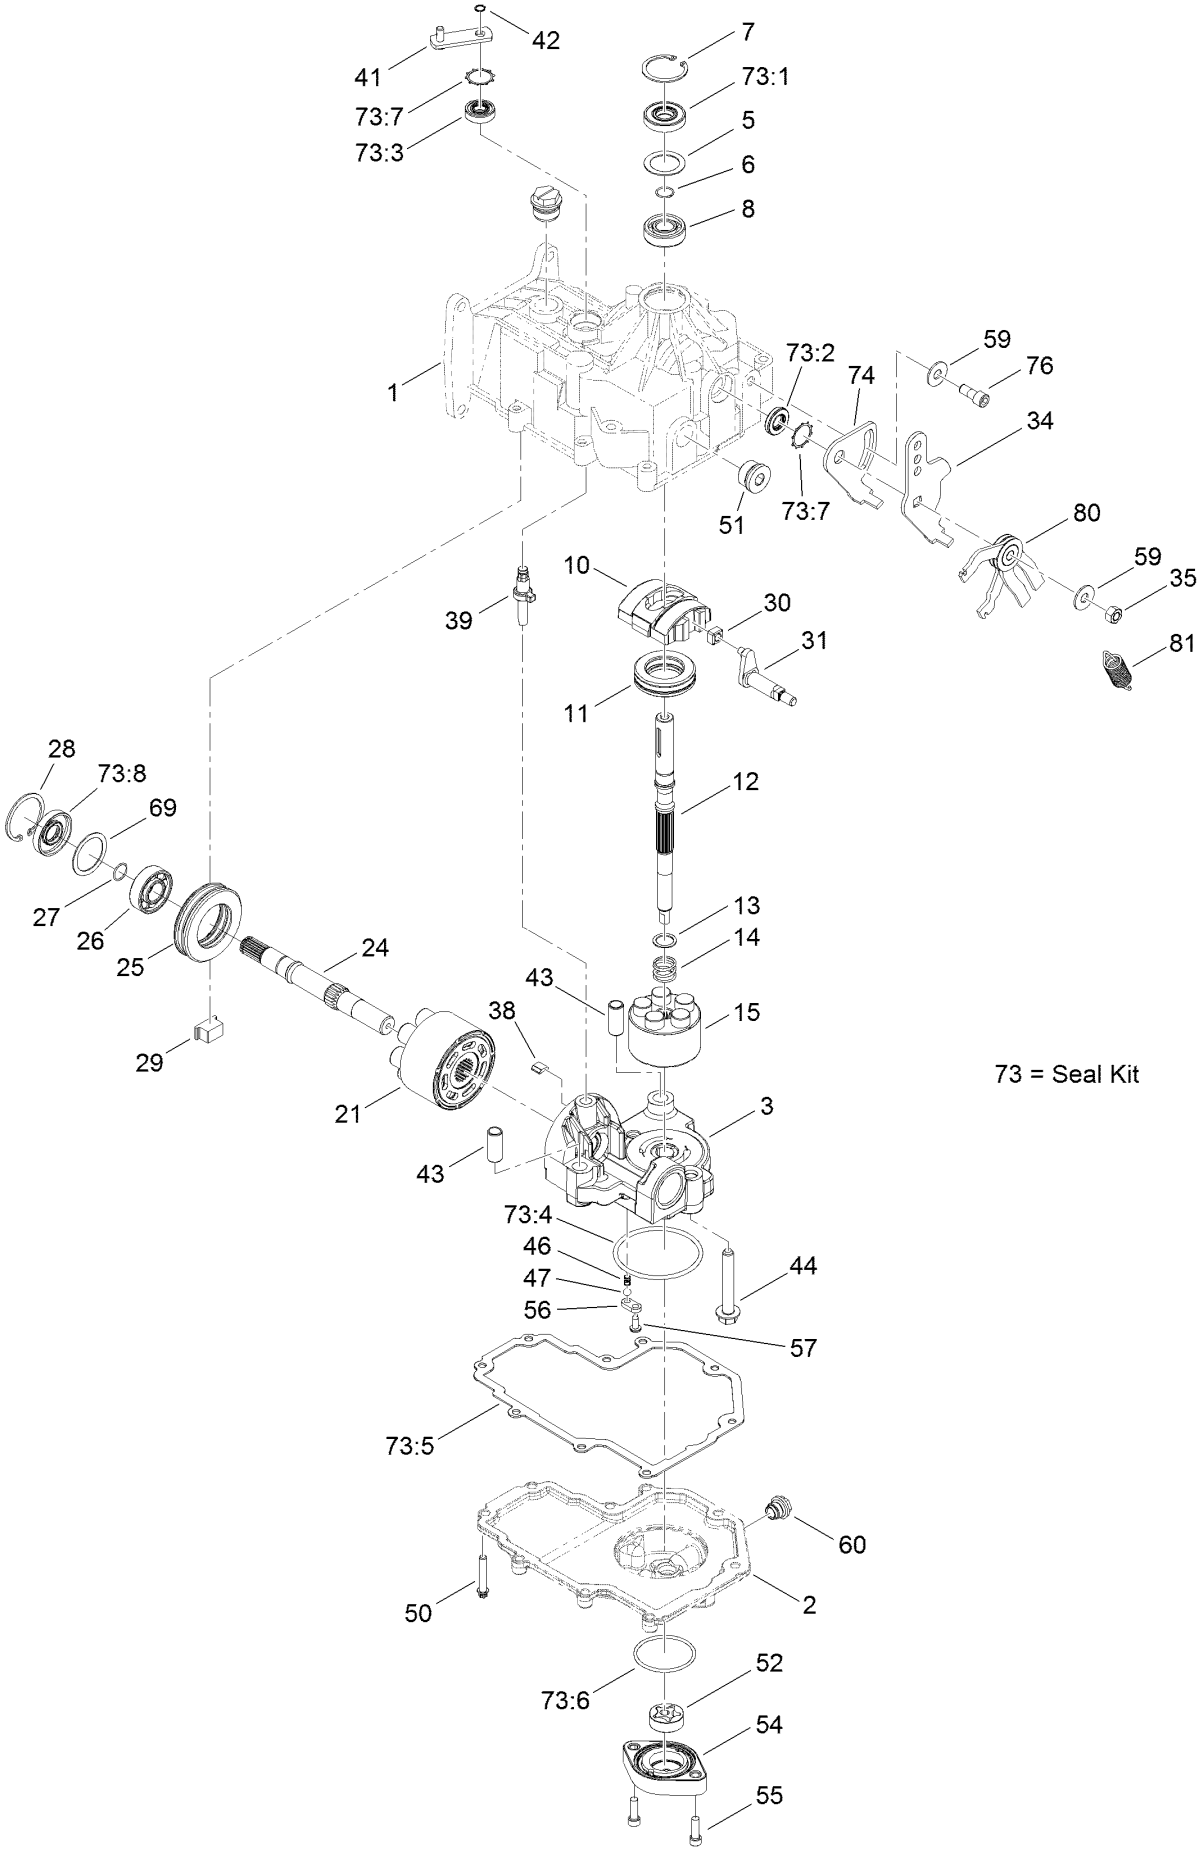


Transmission Assembly No. 111-6000 (continued)

Ref.	Part Number	Qty.	Description
1		1	Housing-Upper ●
2		1	Housing-Lower ●
3	125-9162	1	Center Section Kit
5	104-2104	1	Spacer
6	119-5531	1	Ring-Retaining, Wire
7	119-5533	1	Ring-Retaining
8	119-5530	1	Bearing-Ball
10	94-1907	1	Swashplate-Variable
11	94-6922	1	Bearing-Thrust
12	125-9163	1	Shaft-Input
13	120-5538	1	Washer
14	120-5537	1	Spring-Compression
15	103-2666	1	Cylinder Block Kit
21	94-1913	1	Cylinder Block ASM
24	125-9164	1	Shaft-Output
25	94-6923	1	Bearing-Thrust
26	104-5311	1	Bearing-Ball
27	104-5307	1	Ring-Retaining
28	104-5309	1	Ring-Retaining
29	125-9165	1	Retainier-Bearing, Motor
30	94-1910	1	Guide-Slot
31	104-2112	1	Trunnion ASM
34	125-9167	1	Arm-Control
35	32128-16	1	Nut-HHF
38	112-5892	1	Bypass Plate Kit
39	94-1914	1	Actuator-Bypass
41	104-2117	1	Arm-Bypass
42	936109	1	Ring-Retaining
43	94-1927	2	Pin
44	94-6926	3	Bolt
46	108-8548	1	Spring-Helical
47	108-8549	1	Ball-1/4 Inch
50	94-1926	9	Bolt
51	125-9168	1	Plug
52	104-2122	1	Gerotor ASM
54		1	Housing-Pump, Charge ●
55	106-8758	2	Screw-HSH
56	108-8550	1	Plate-Relief
57	112-5910	1	Bolt-TAP
59	5-4460	2	Washer-Pivot
60		1	Plug ●
69	104-5308	1	Spacer
73	125-9176	1	Seal Kit
73:1	119-5532	1	Seal-Lip
73:2	125-9166	1	Seal-Lip
73:3	92-6545	1	Seal-Lip
73:4	108-8545	1	O-Ring
73:5		1	Gasket ●
73:6	106-8757	1	O-Ring
73:7	125-9175	2	Ring-Retaining, Star
73:8	104-5310	1	Seal-Lip
74	125-9177	1	Arm-Return
76	125-9178	1	Screw
80	125-9179	1	Scissor Arm ASM
81	114-8462	1	Spring-Extension

● Not serviced separately


Cylinder Head Assembly

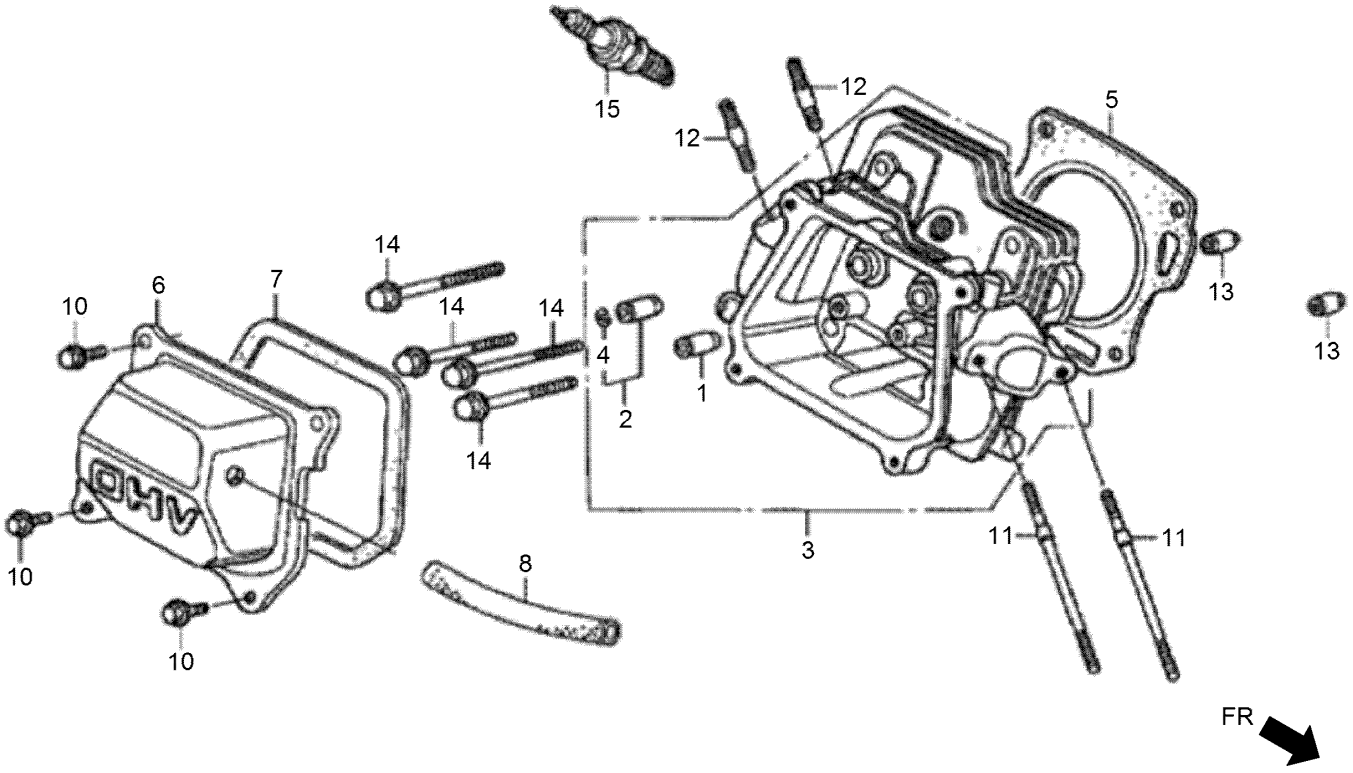

Cylinder Head Assembly (continued)

Ref.	Part Number	Qty.	Description
1	132-0118	1	Guide-Intake Valve
2	132-0119	1	Guide-Exhaust Valve
3	132-0124	1	Cylinder Head ASM
4	132-0125	1	Clip-Valve Guide
5	132-0126	1	Gasket-Cylinder Head
6	132-0127	1	Head Cover ASM
7	132-0133	1	Packing-Head Cover
8	132-0234	1	Tube-Breather
10	132-4880	4	Bolt-Flange-6X12
11	132-0612	2	Bolt-Stud-6X112
12	132-0615	2	Bolt-Stud-8X32
13	132-0697	2	Dowel Pin-10X16
14	131-8226	4	Bolt-Flange-8X60
15	131-8233	1	Sparkplug


Cylinder Barrel Assembly

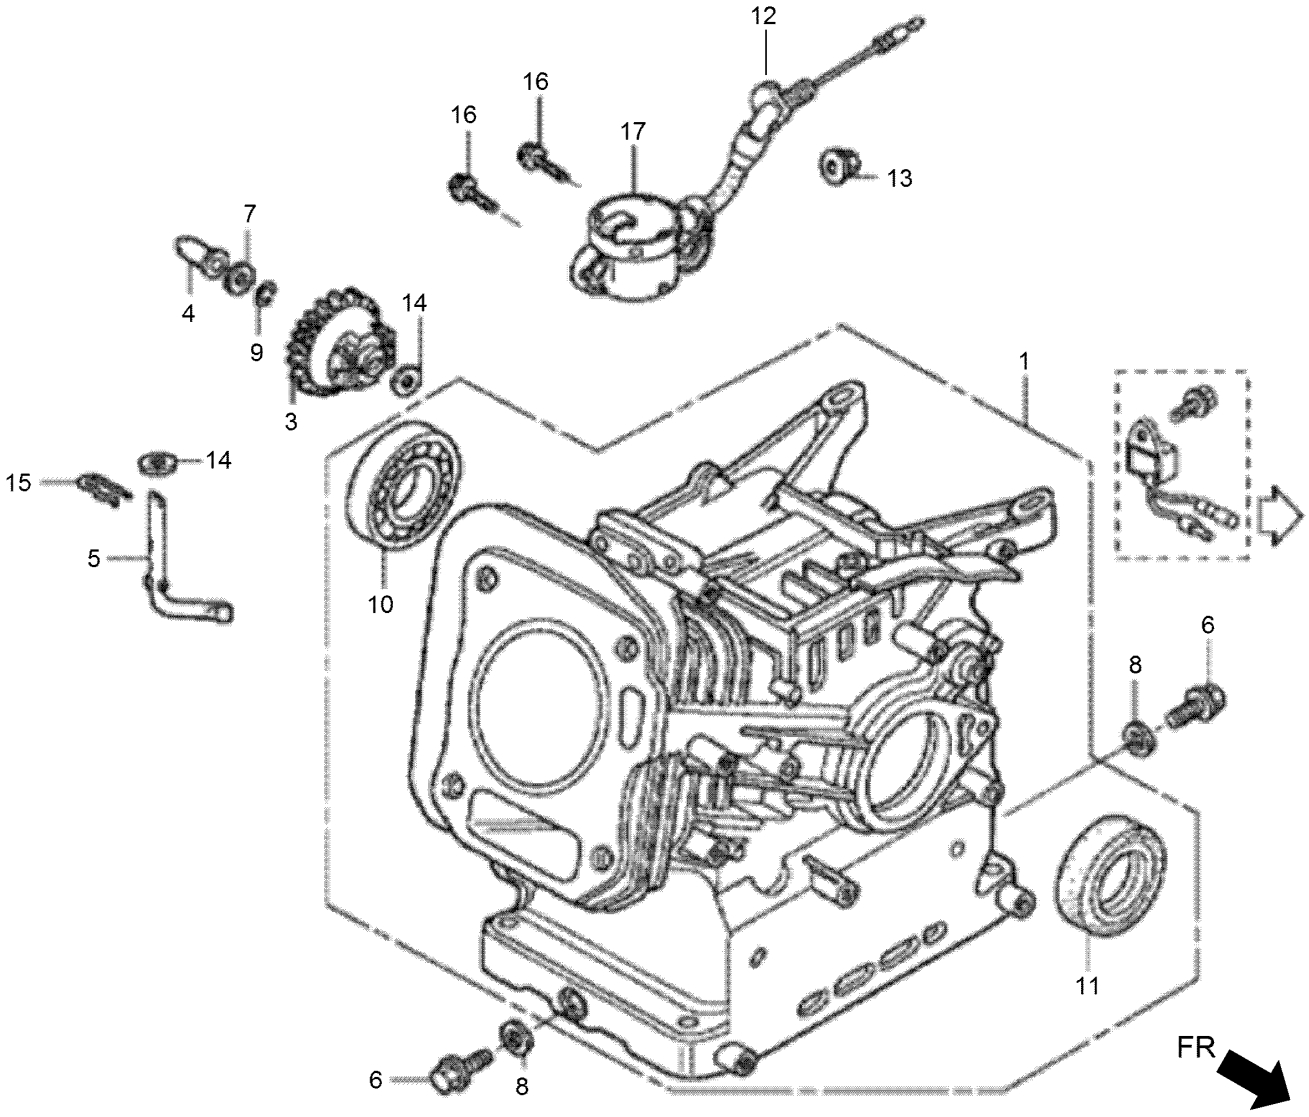

Cylinder Barrel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	132-0114	1	Barrel ASM-Cylinder
3	132-0294	1	Governor ASM
4	132-0304	1	Slider-Governor
5	132-0307	1	Shaft-Governor Arm
6	132-0622	2	Bolt-Drain Plug
7	132-0635	1	Washer-Thrust-6Mm
8	132-0640	2	Washer-Drain Plug-10.2Mm
9	132-0642	1	Clip-Governor Holder
10	132-0651	1	Bearing-Radial Ball
10	132-0650	1	Bearing-Radial Ball
10	132-0649	1	Bearing-Radial Ball
11	132-0654	1	Oil Seal-25X41X6
11	132-0658	1	Oil Seal-25X41.25X6
12	132-0668	1	O-Ring-14Mm
13	132-0686	1	Nut-Flange-10Mm
14	132-0688	2	Washer-Plain-6Mm
15	132-0693	1	Pin-Lock-8Mm
16	131-8221	2	Bolt-Flange-6X12
17	132-0532	1	Switch ASM-Oil Level


Crankcase Cover Assembly

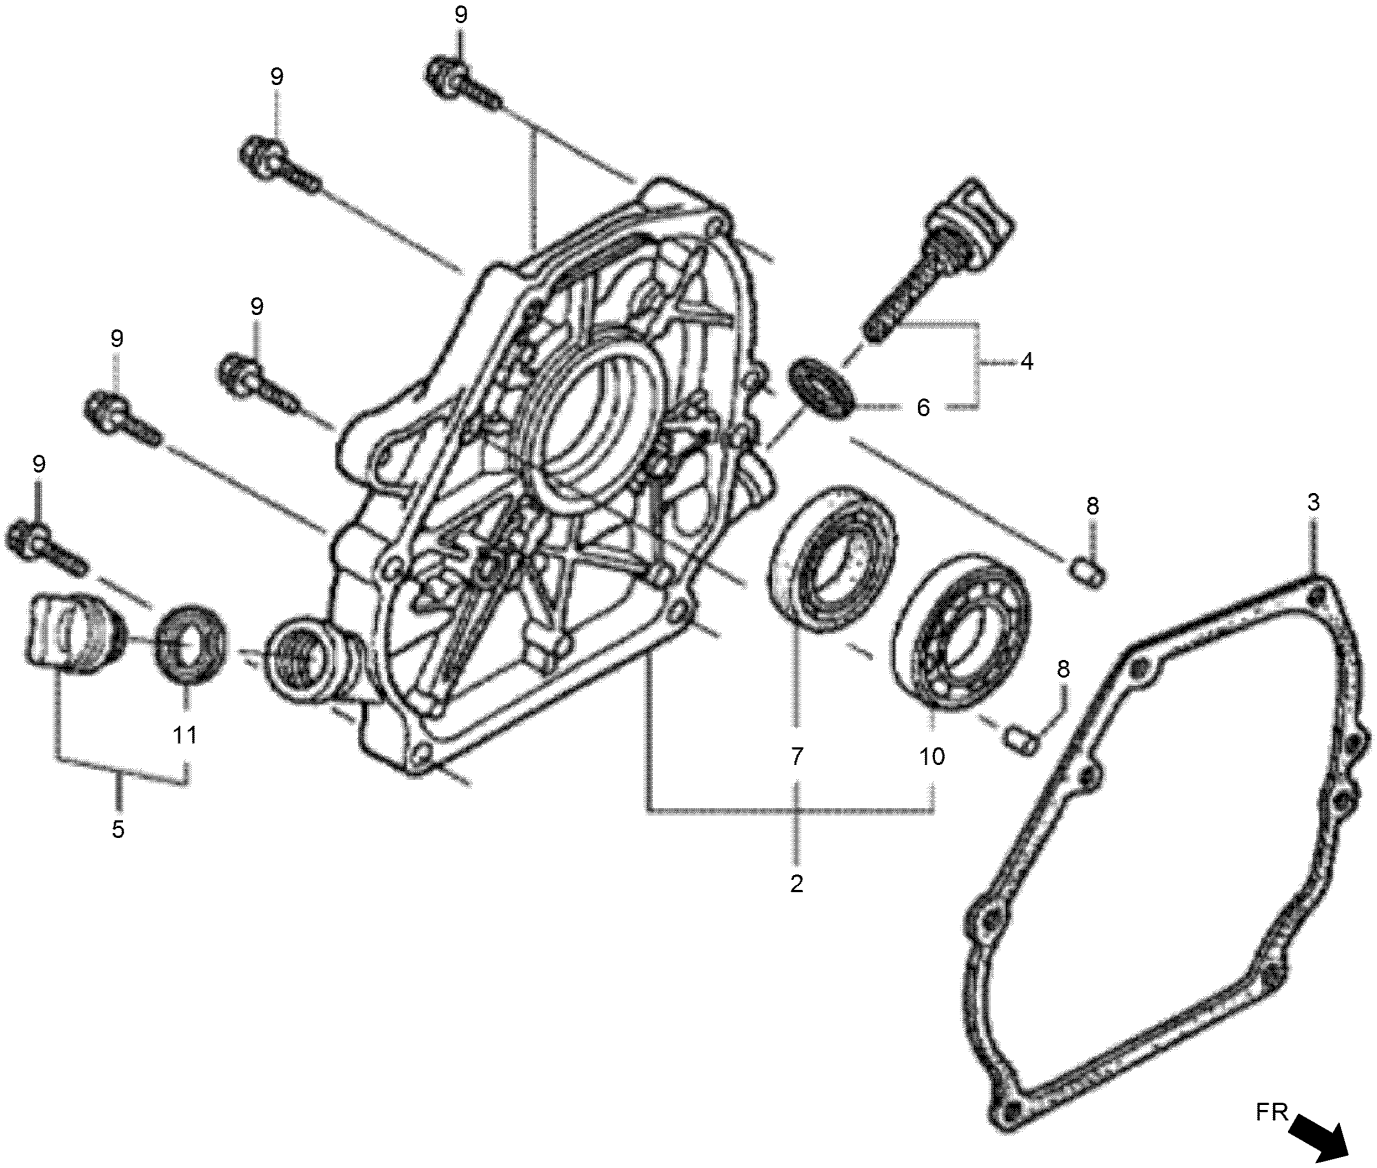

Crankcase Cover Assembly (continued)

Ref.	Part Number	Qty.	Description
2	132-0103	1	Cover ASM-Crankcase
3	132-0108	1	Packing-Case Cover
4	132-0220	1	Cap ASM-Oil Filler
5	132-0221	1	Cap ASM-Oil Filler
6	132-0224	1	Packing-Oil Filler Cap
7	132-0654	1	Oil Seal-25X41X6
7	132-0658	1	Oil Seal-25X41.25X6
8	132-0695	2	Dowel Pin-8X14
9	131-8225	6	Bolt-Flange-8X32
10	131-8227	1	Bearing-Radial Ball-6205
11	132-0224	1	Packing-Oil Filler Cap


Crankshaft Assembly

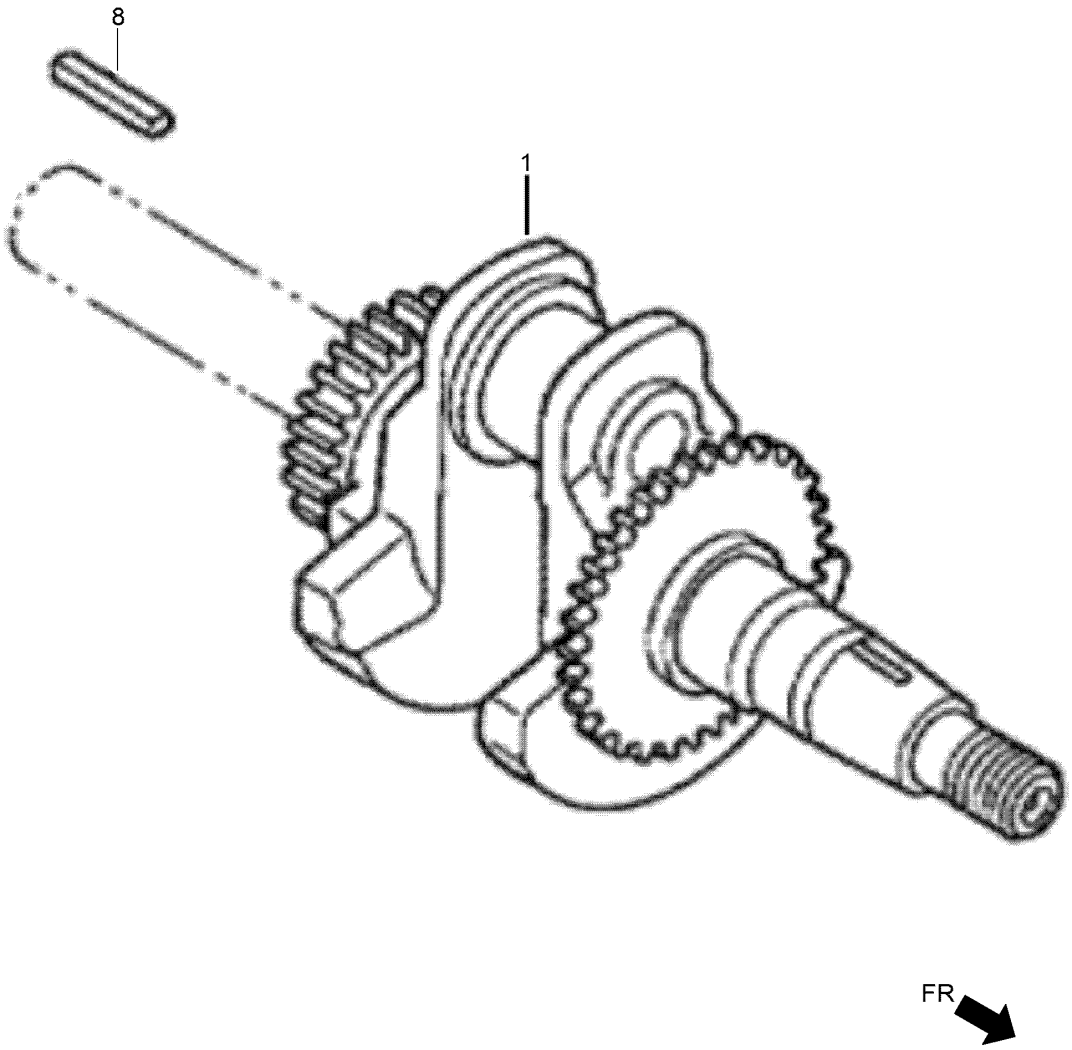

Crankshaft Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	132-0164	1	Crankshaft ASM
8	132-0647	1	Key-5X5X33


Piston and Connecting Rod Assembly

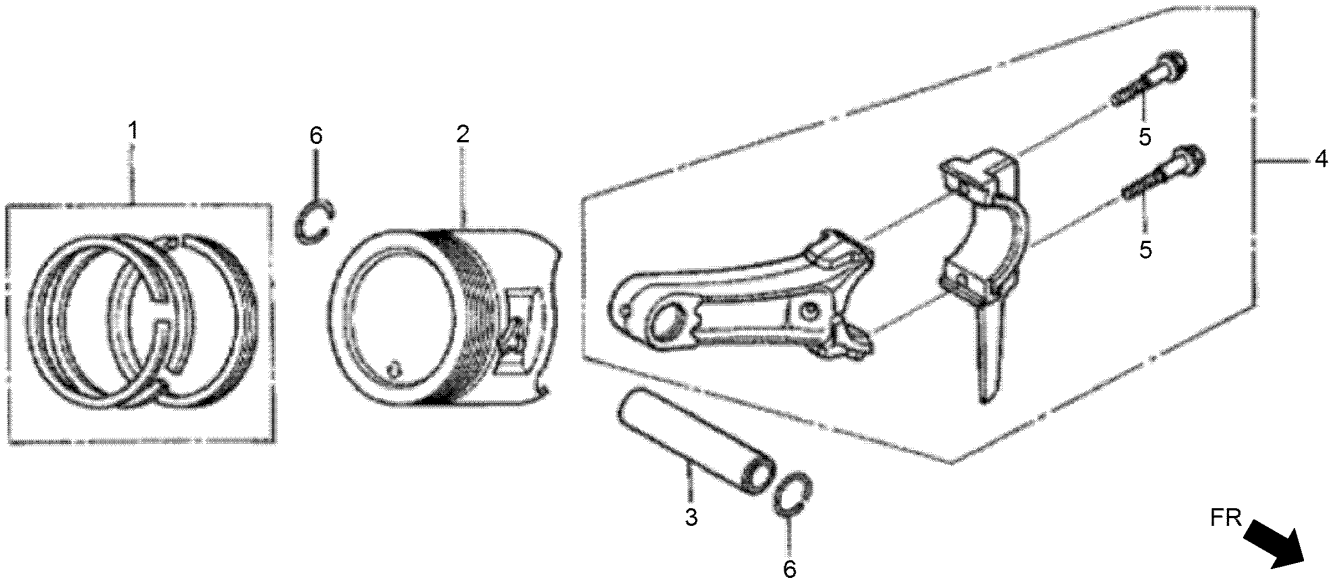

Piston and Connecting Rod Assembly (continued)

Ref.	Part Number	Qty.	Description
1	132-0137	1	Ring Set-Piston (STD)
1	132-0138	1	Ring Set-Piston (STD)
2	132-0144	1	Piston
3	132-0150	1	Pin-Piston
4	132-0155	1	Rod ASM-Connecting
5	132-0573	2	Bolt-Connecting Rod
6	132-0637	2	Clip-Piston Pin-18Mm


Camshaft Assembly

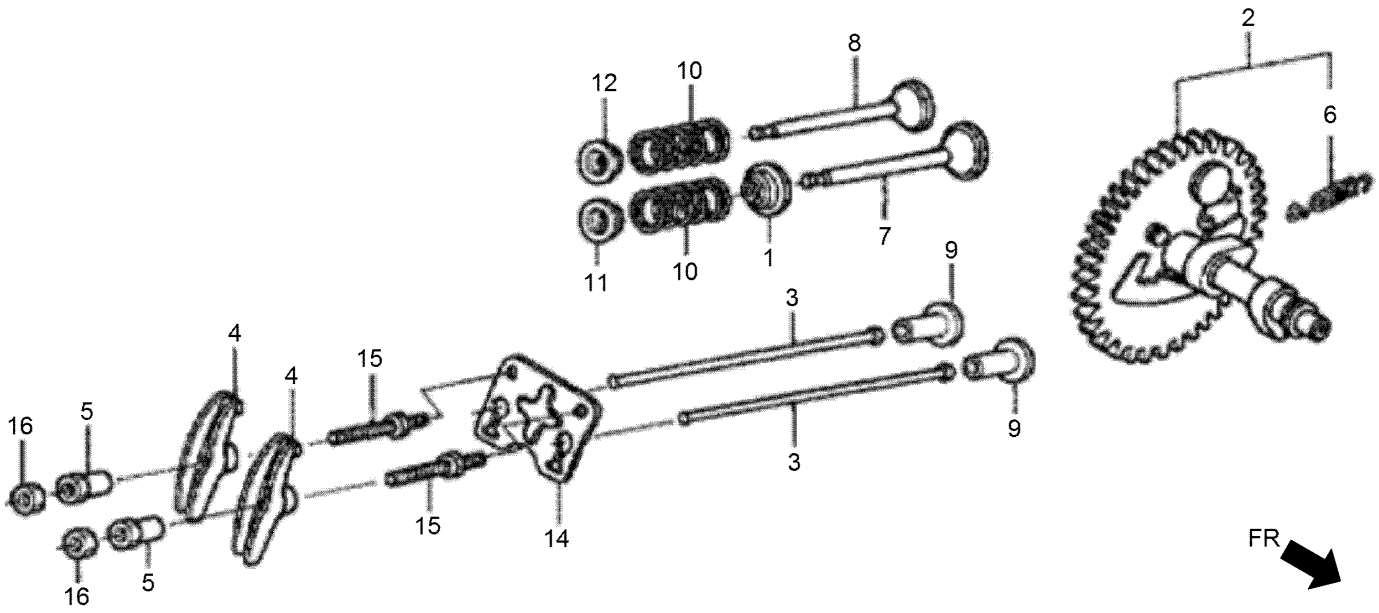

Camshaft Assembly (continued)

Ref.	Part Number	Qty.	Description
1	132-0120	1	Seal-Valve Stem
2	132-0172	1	Camshaft ASM
3	132-0181	2	Rod-Push
4	132-0184	2	Arm-Valve Rocker
5	132-0188	2	Pivot-Rocker Arm
6	132-0191	1	Spring-Weight Return
7	132-0194	1	Valve-Intake
8	132-0198	1	Valve-Exhaust
9	132-0203	2	Lifter-Valve
10	132-0206	2	Spring-Valve
11	132-0211	1	Retainer-Intake Valve Spring
12	132-0211	1	Retainer-Intake Valve Spring
14	132-0215	1	Plate-Push Rod Guide
15	132-0592	2	Bolt-Pivot-8Mm
16	132-0629	2	Nut-Pivot Adjusting


Recoil Starter Assembly

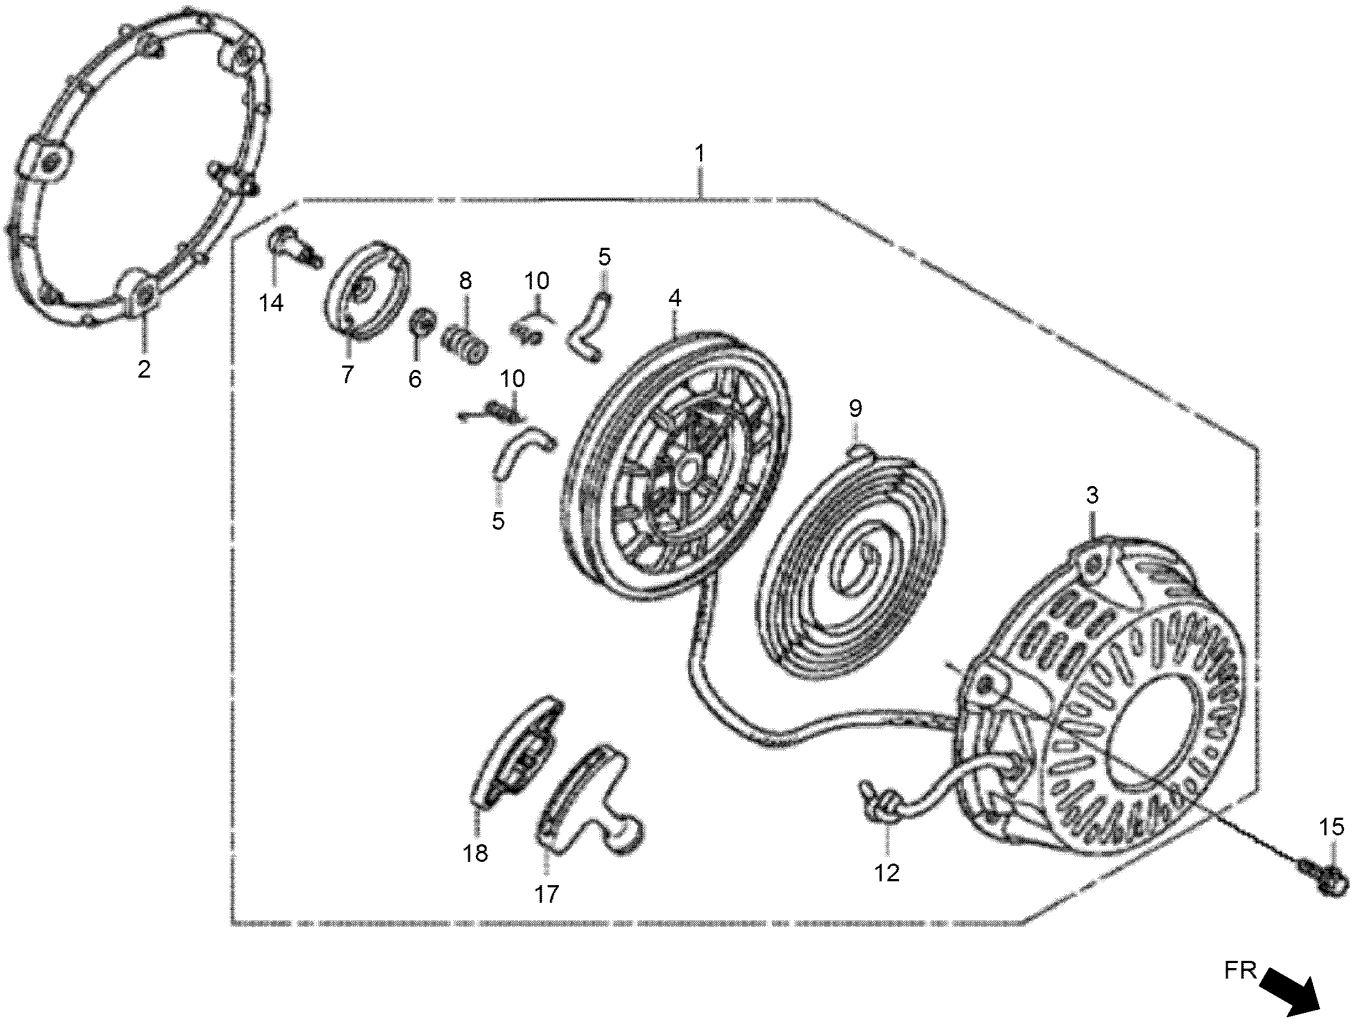

Recoil Starter Assembly (continued)

Ref.	Part Number	Qty.	Description
1	132-0477	1	Starter ASM-Recoil
2	132-0485	1	Spacer-Recoil Starter Mtg (R280R)
3	132-0486	1	Recoil Starter Case ASM (R280)
4	132-0489	1	Reel-Recoil Starter
5	132-0491	2	Ratchet-Starter
6	132-0492	1	Plate-Friction
7	132-0493	1	Guide-Ratchet
8	132-0494	1	Spring-Friction
9	132-0495	1	Spring-Recoil Starter
10	132-0497	2	Spring-Return
12	132-0507	1	Rope-Recoil Starter
14	132-0579	1	Screw-Setting
15	131-8223	3	Bolt-Flange-6X18
17	132-0502	1	Knob-Recoil Starter
18	132-0509	1	Knob-Reinforcement


Fan Cover Assembly

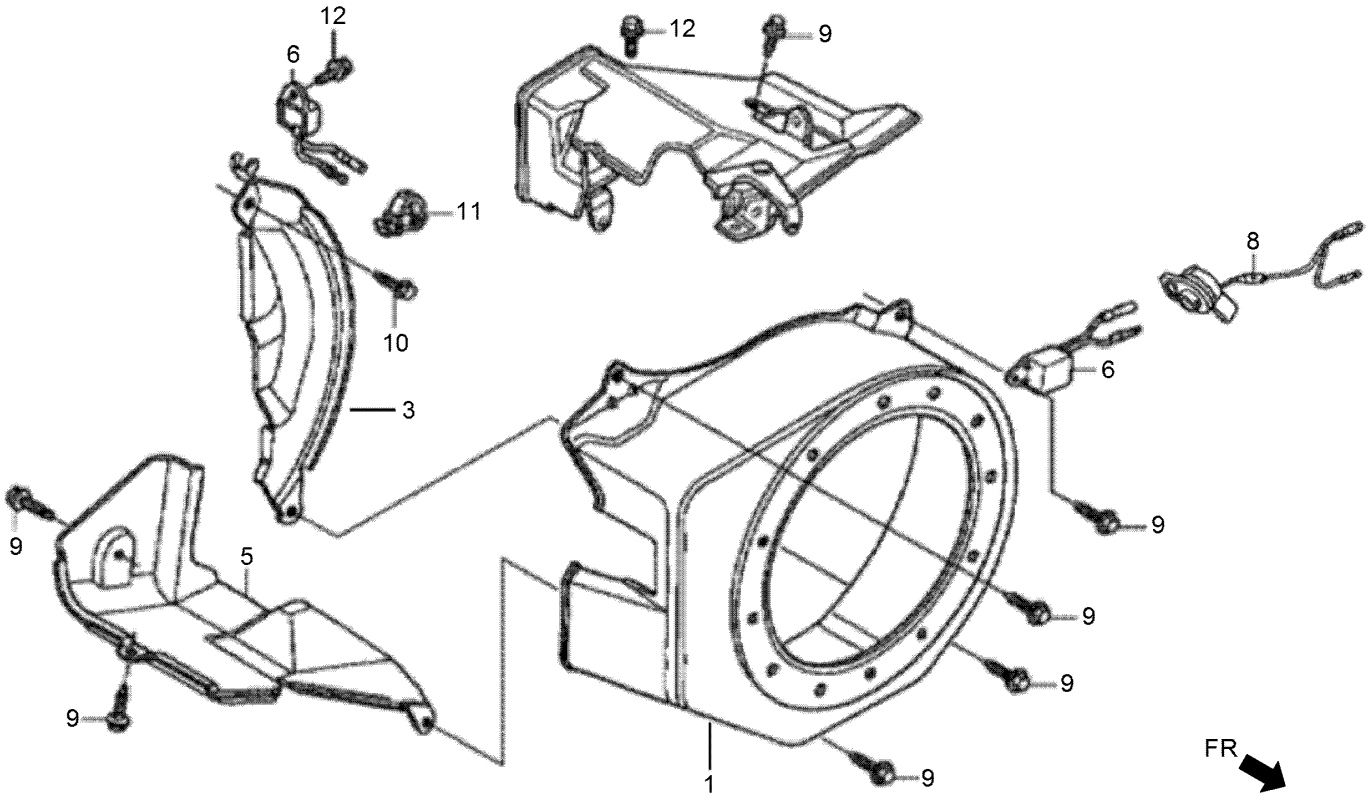

Fan Cover Assembly (continued)

Ref.	Part Number	Qty.	Description
1	132-0464	1	Fan Cover ASM (R280)
3	132-0469	1	Side Plate ASM
5	132-0473	1	Shroud ASM
6	132-0529	1	Alert Unit-Oil
8	132-0530	1	Switch ASM-Engine Stop
9	132-4880	6	Bolt-Flange-6X12
10	132-0605	1	Bolt-Flange-6X20
11	132-0641	1	Clip-Harness
12	131-8220	1	Bolt-Flange-6X8


Carburetor Assembly

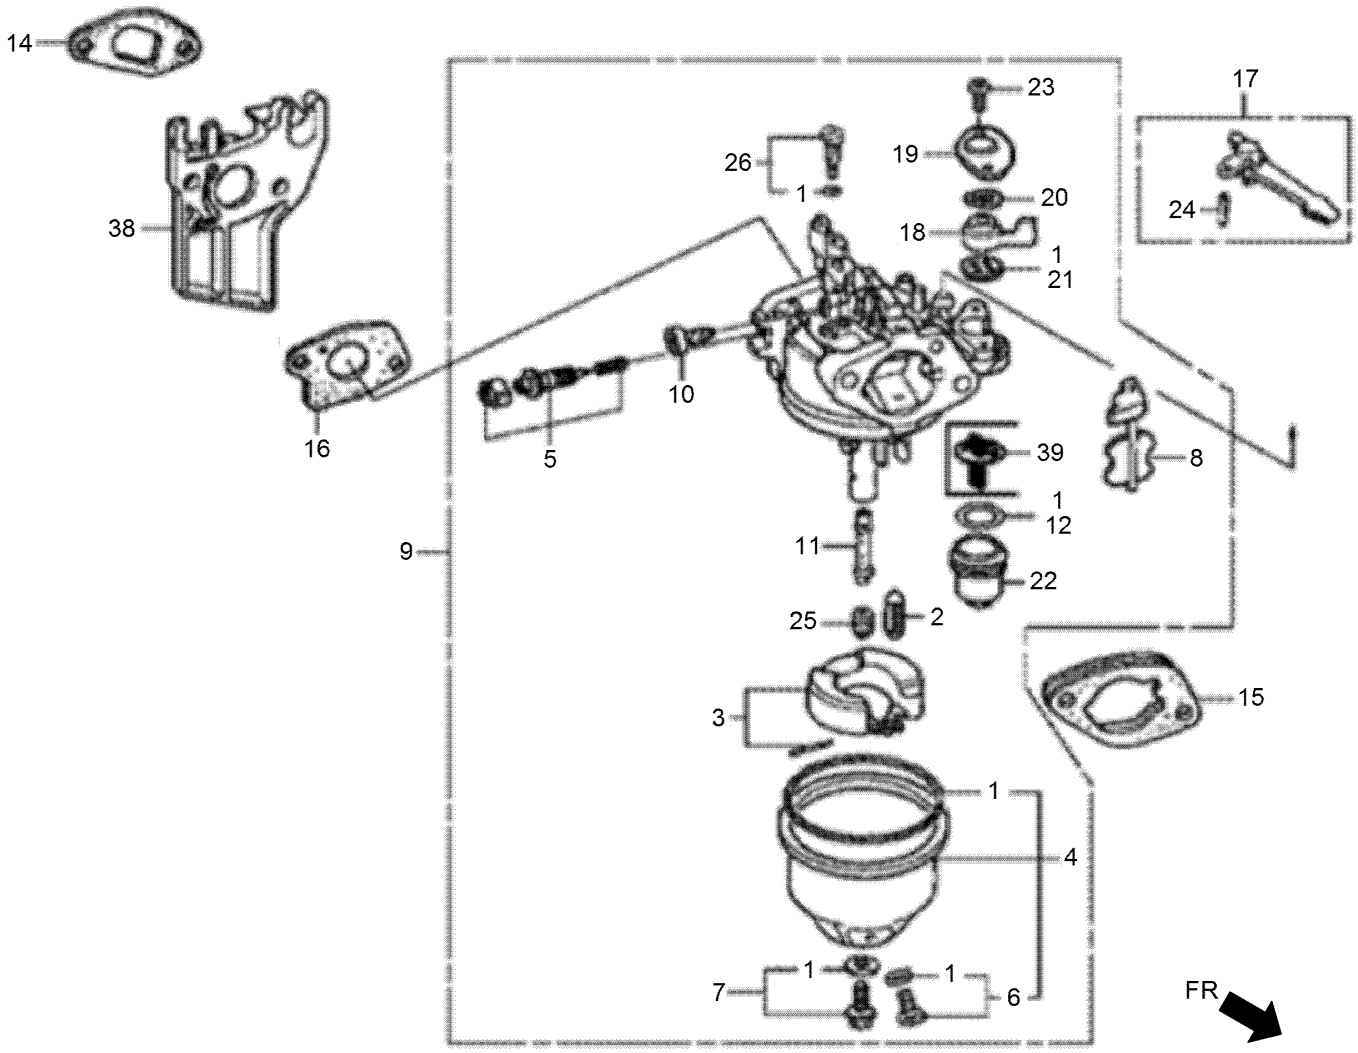

Carburetor Assembly (continued)

Ref.	Part Number	Qty.	Description
1	132-0239	1	Gasket Set
2	132-0241	1	Valve Set-Float
3	132-0242	1	Float Set
4	132-0247	1	Chamber Set-Float
5	132-0250	1	Screw Set-Pilot
6	132-0251	1	Screw Set-Drain
7	132-0253	1	Screw Set
8	132-0257	1	Choke Set
9	132-0265	1	Carburetor ASM
10	132-0268	1	Screw-Throttle Stop
11	132-0272	1	Nozzle-Main
12	132-0276	1	Packing-Fuel Strainer Cup
14	132-0281	1	Packing-Insulator
15	132-0284	1	Carburetor Spacer ASM
16	132-0287	1	Packing-Carburetor
17	132-0343	1	Choke Lever ASM
18	132-0359	1	Lever-Cock
19	132-0360	1	Plate-Lever Setting
20	132-0362	1	Spring-Cock Lever
21	132-0364	1	Packing-Fuel Cock
22	132-0366	1	Cup-Fuel Strainer
23	132-0676	2	Screw-Pan-3X6
24	132-0698	1	Pin-Spring-2X12
25	131-8237	1	Jet-Main, No. 75
26	131-8239	1	Jet Set-Pilot, No. 40
38	132-0278	1	Insulator-Carburetor
39	132-0365	1	Filter-Cup


Air Cleaner Assembly

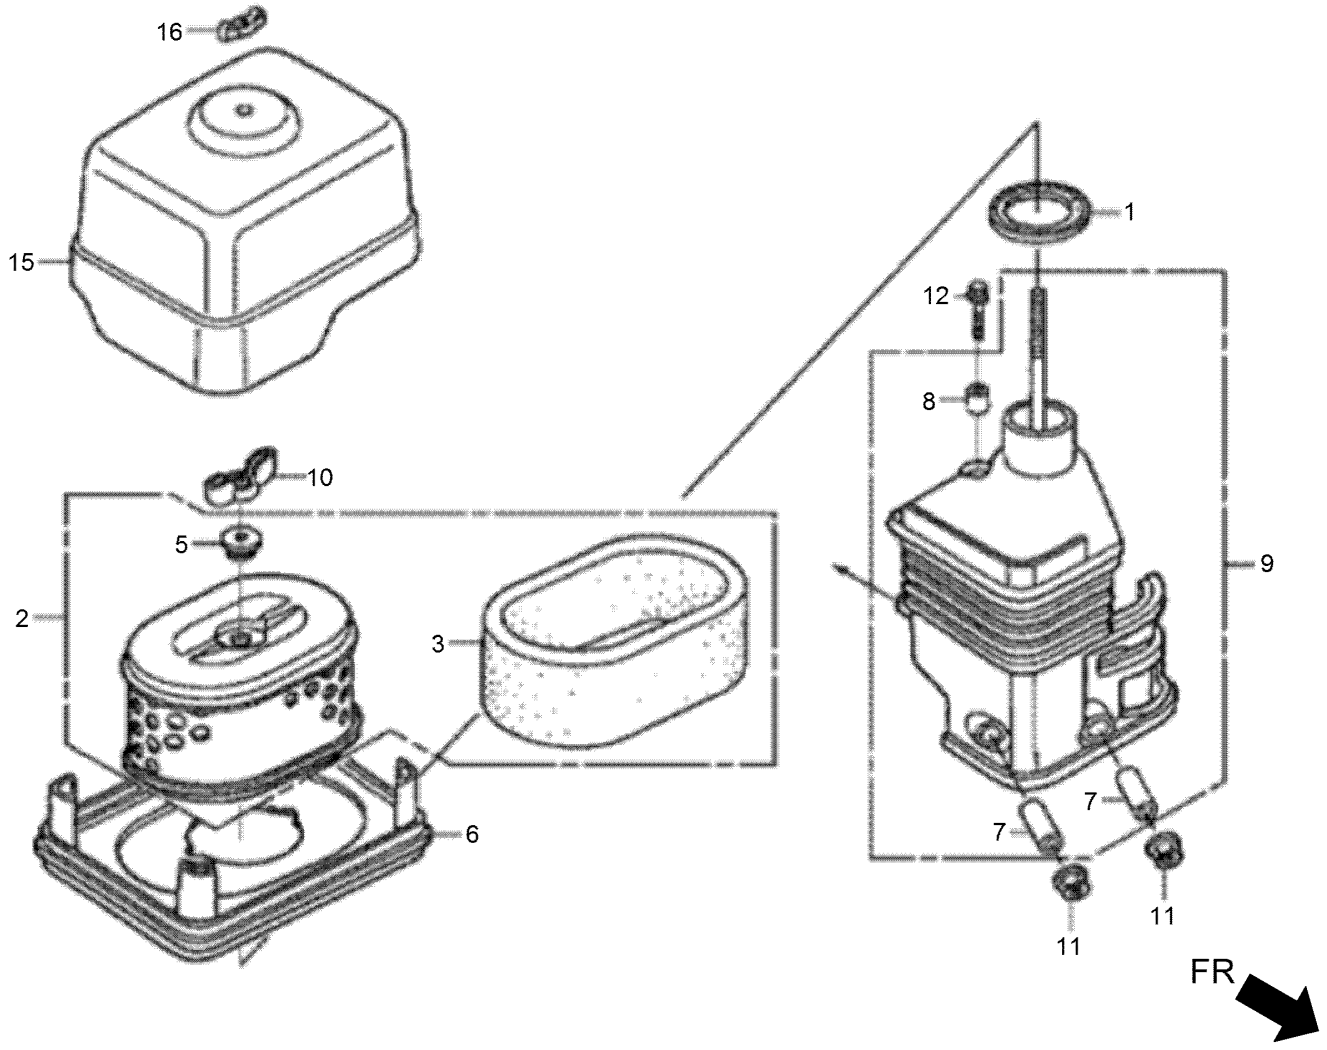

Air Cleaner Assembly (continued)

Ref.	Part Number	Qty.	Description
1	132-0291	1	Packing-Elbow
2	132-0367	1	Element-Air Cleaner
3	132-0372	1	Filter-Outer
5	132-0391	1	Grommet-Air Cleaner
6	132-0392	1	Nose-Silencer
7	132-0393	2	Collar-Air Cleaner
8	132-0394	1	Collar B-Air Cleaner
9	132-0396	1	Elbow Comp-Air Cleaner
10	132-0631	1	Nut-Tool Box Setting
11	132-4881	2	Nut-Flange-6Mm
12	131-8224	1	Bolt-Flange-6X20
15	132-0388	1	Cover-Air Cleaner
16	132-0630	1	Nut-Air Cleaner


Muffler Assembly

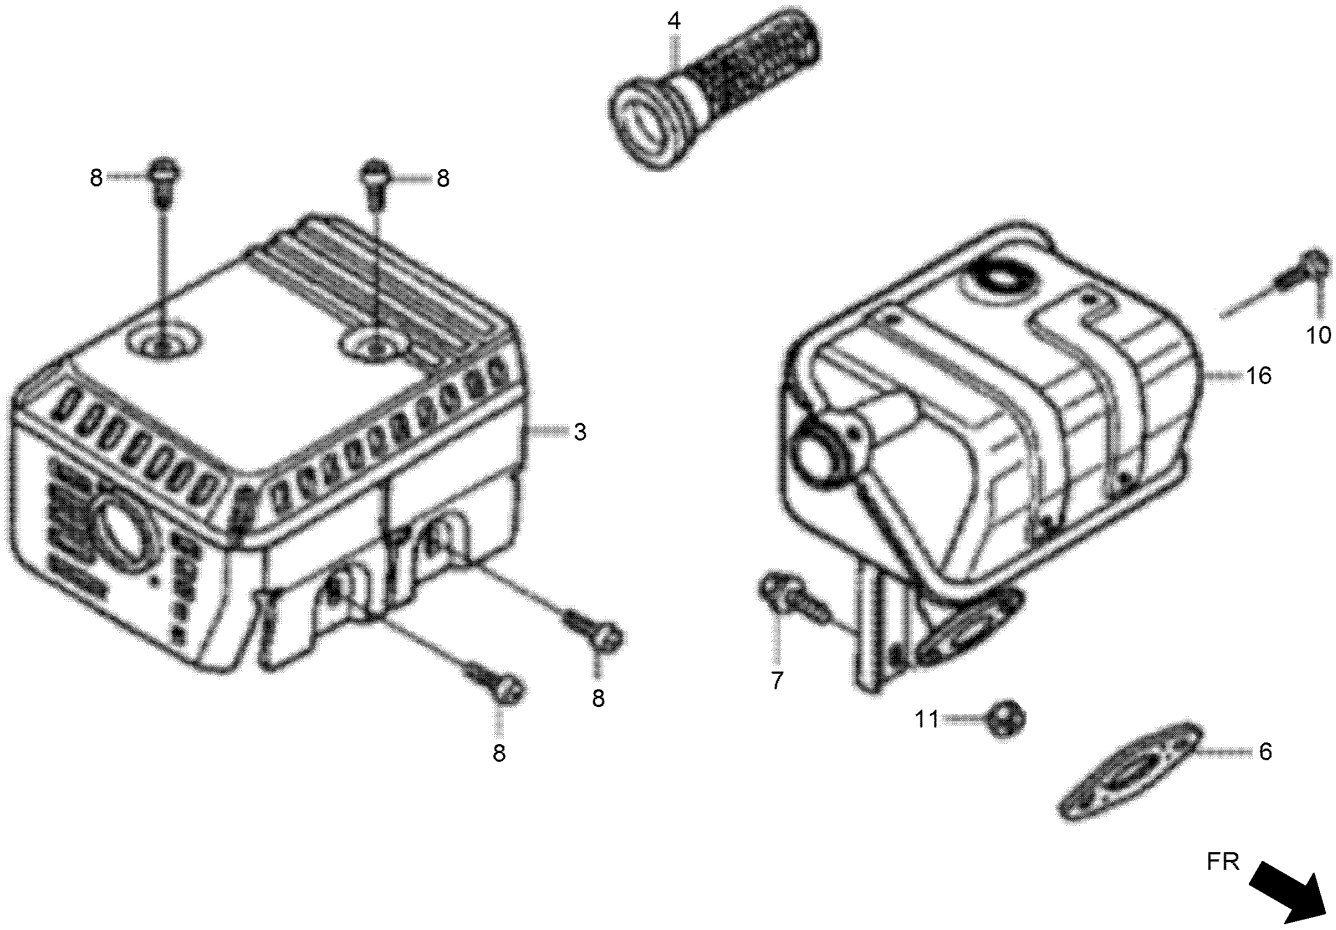

Muffler Assembly (continued)

Ref.	Part Number	Qty.	Description
3	132-0453	1	Muffler Protector ASM
4	132-0456	2	Arrester-Spark
6	132-0457	2	Gasket-Muffler
7	132-0600	1	Bolt-Flange-6X13
8	132-0616	4	Screw-Tapping-5X8
10	132-0617	1	Screw-Tapping-4X6
11	132-0684	2	Nut-Hex-8Mm
16	132-0446	1	Muffler ASM


Fuel Tank Assembly

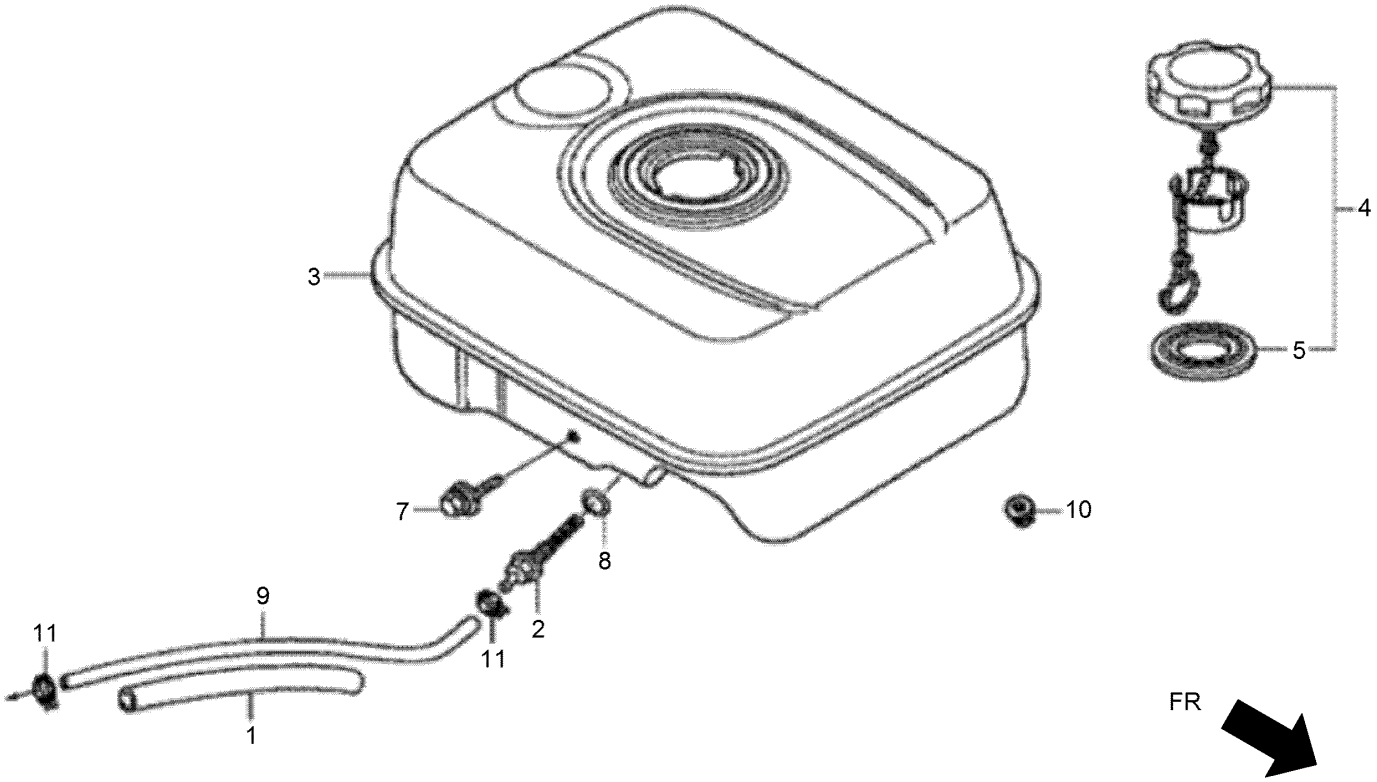

Fuel Tank Assembly (continued)

Ref.	Part Number	Qty.	Description
1	132-0349	1	Rubber-Supporter
2	132-0361	1	Joint-Fuel Tank
3	132-0397	1	Fuel Tank ASM (Nh31)
4	132-0414	1	Fuel Filler Cap ASM
5	132-0431	1	Packing-Fuel Filler Cap
7	132-0583	1	Bolt-Flange-6X34
8	132-0668	1	O-Ring-14Mm
9	132-0669	1	Tube-Fuel-4.5X145
10	132-4881	2	Nut-Flange-6Mm
11	131-8211	2	Clamp-Tube


Flywheel Assembly

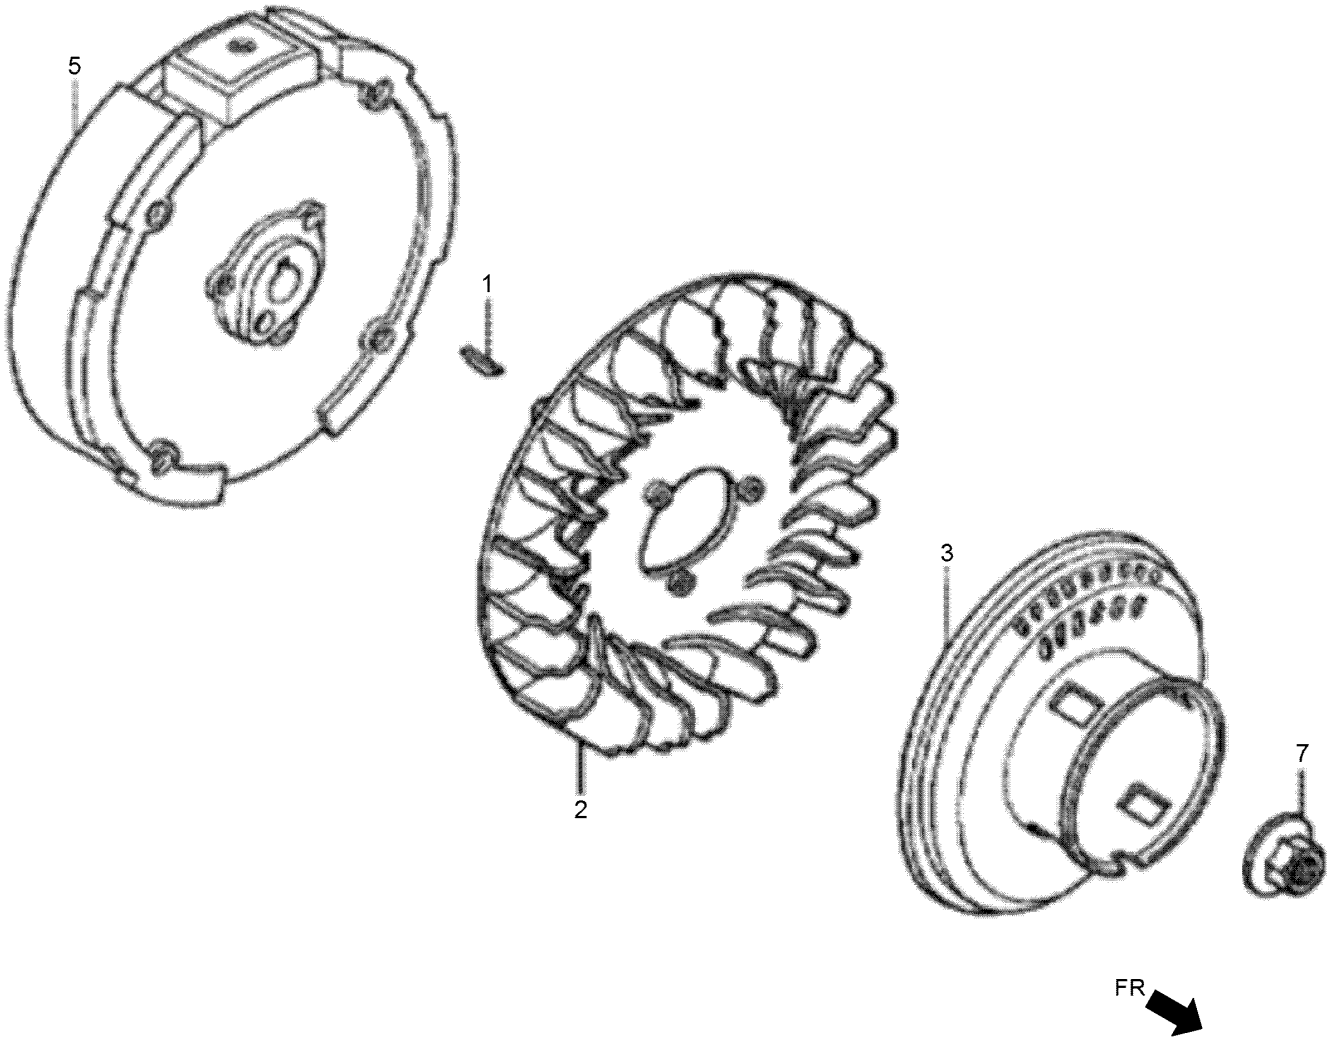

Flywheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	132-0167	1	Key-Special Woodruff-25X18
2	132-0461	1	Fan-Cooling
3	132-0499	1	Starter Pulley ASM
5	132-0519	1	Flywheel ASM
7	132-0625	1	Nut-Special-14Mm


Ignition Coil Assembly

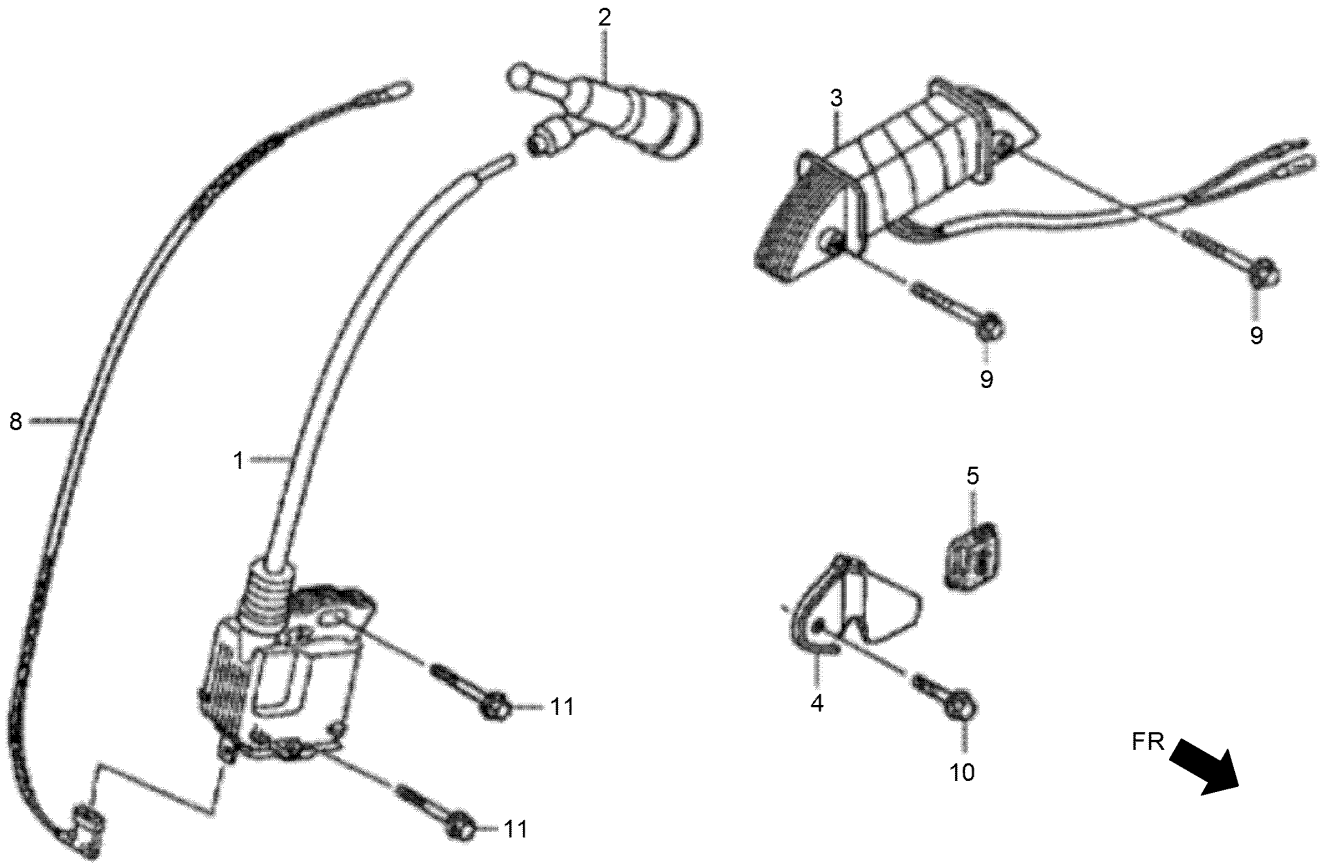

Ignition Coil Assembly (continued)

Ref.	Part Number	Qty.	Description
1	132-0510	1	Coil ASM-Ignition
2	132-0515	1	Cap ASM-Noise Suppressor
3	132-0521	1	Coil ASM-Lamp
4	132-0522	1	Clamper-Cord
5	132-0523	1	Grommet-Cord
8	132-0533	1	Cord-Stop Switch
9	132-0596	2	Bolt-Flange-6X28
10	132-0604	1	Bolt-Flange-5X10
11	132-0620	2	Bolt-Flange-6X25


Control Assembly

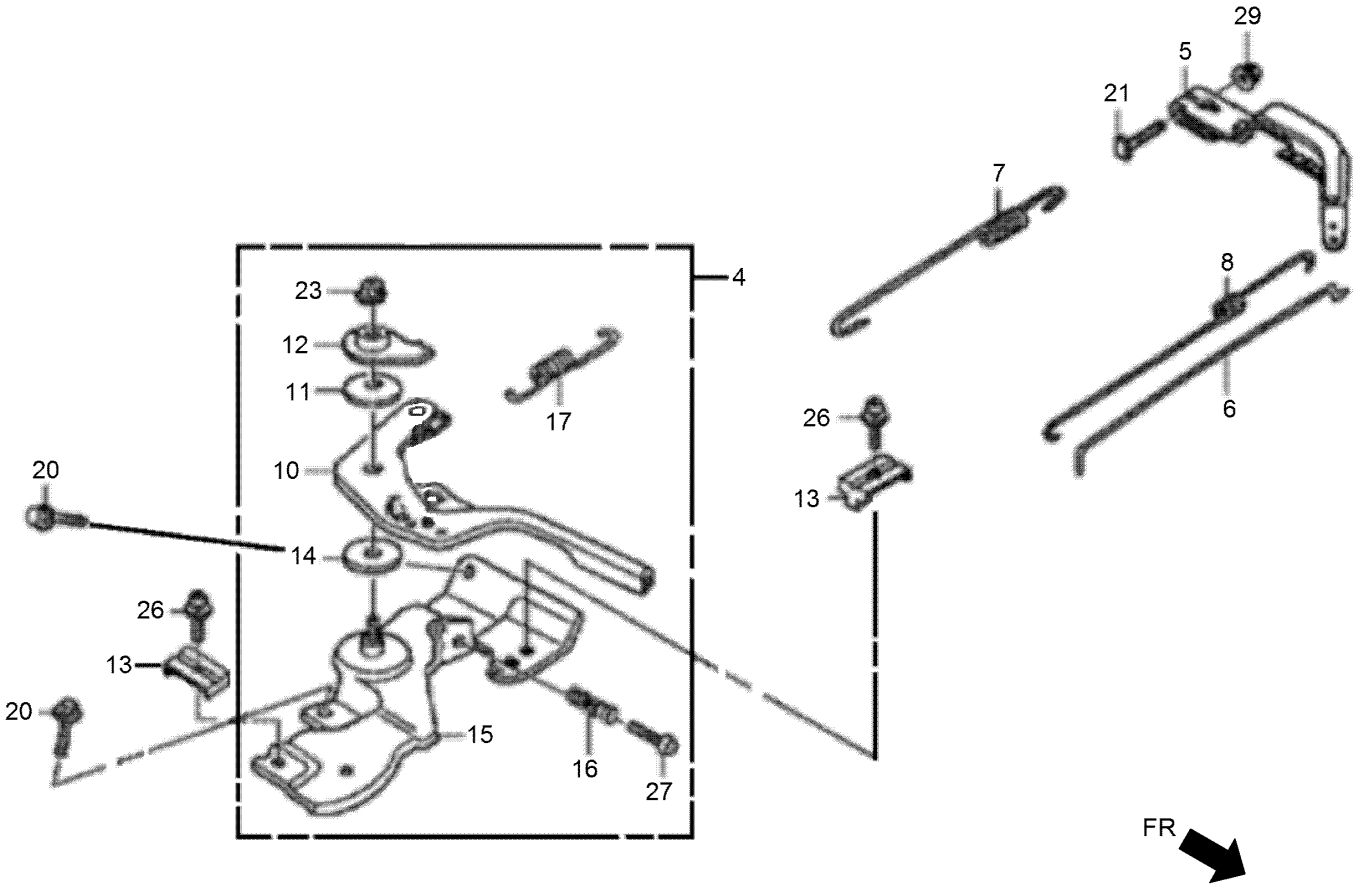

Control Assembly (continued)

Ref.	Part Number	Qty.	Description
4	132-0292	1	Control ASM
5	132-0311	1	Arm-Governor
6	132-0316	1	Rod-Governor
7	132-0320	1	Spring-Governor
8	132-0324	1	Spring-Throttle Return
10	132-0328	1	Lever-Control
11	132-0329	1	Spring-Lever
12	132-0330	1	Washer-Control Lever
13	132-0331	1	Holder-Cable
14	132-0332	1	Spacer-Control Lever
15	132-0337	1	Control Base ASM
16	132-0340	1	Spring-Control Adjusting
17	132-0341	1	Spring-Cable Return
20	132-4880	2	Bolt-Flange-6X12
21	132-0597	1	Bolt-Governor Arm
23	132-0619	1	Nut-Self-Lock-6Mm
26	132-0678	1	Screw-Pan-5X16
27	132-0679	1	Screw-Pan-5X25
29	132-4881	1	Nut-Flange-6Mm


Label Assembly

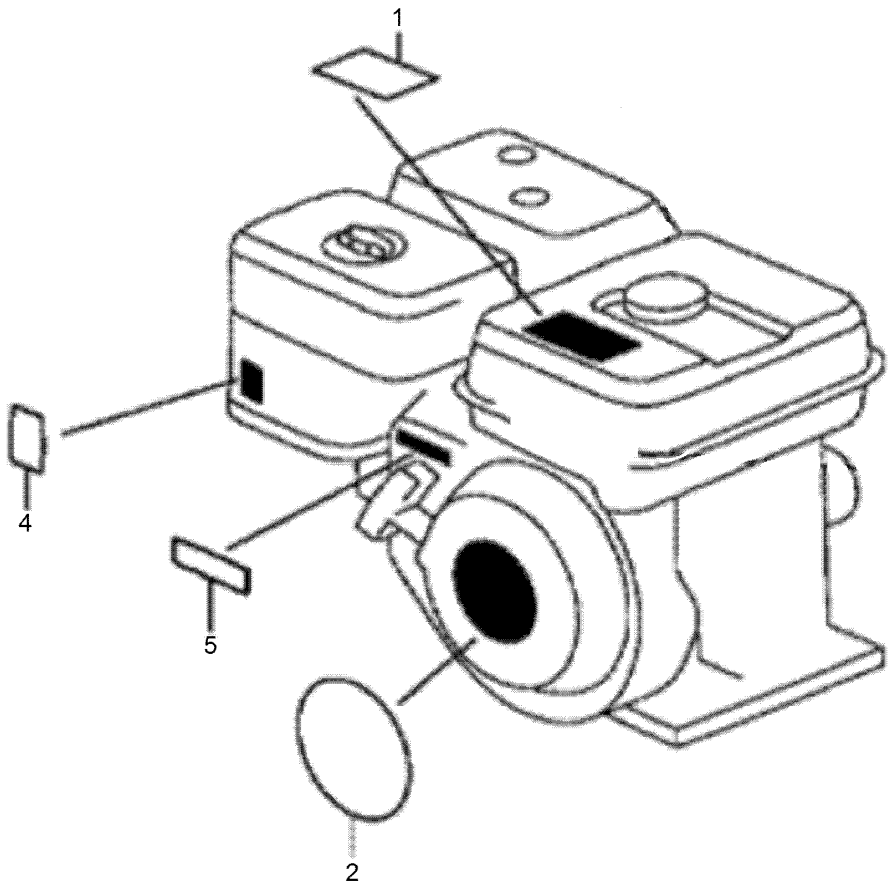

Label Assembly (continued)

Ref.	Part Number	Qty.	Description
1	132-0559	1	Mark-Operator Caution
2	132-0561	1	Emblem
4	132-0566	1	Mark-Choke
5	132-0567	1	Mark-Throttle Indication


Wrench

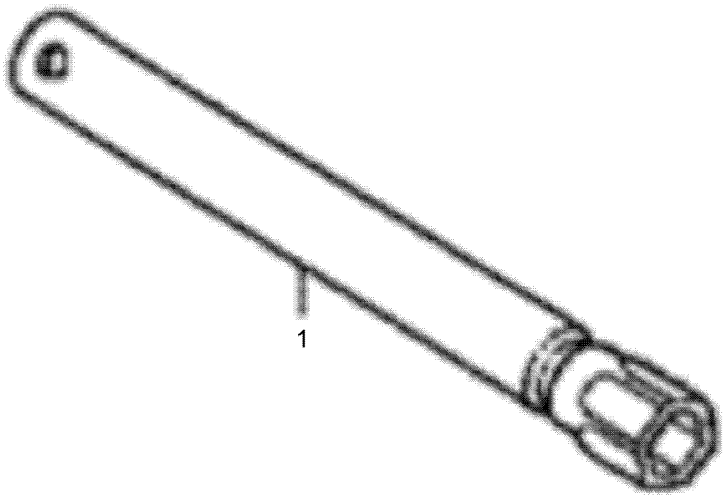



Wrench (continued)

Ref.	Part Number	Qty.	Description
1	132-0572	1	Wrench-Spark Plug

Decal Assembly

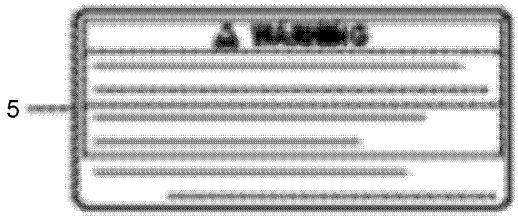

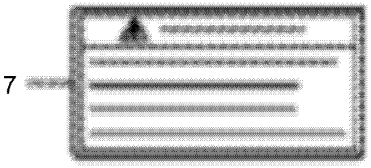


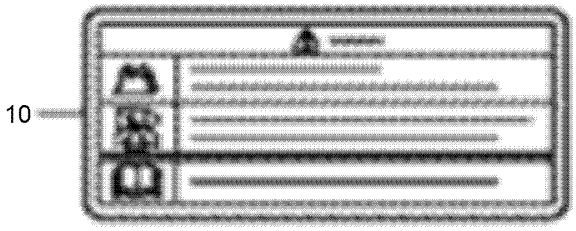

Decal Assembly (continued)

Ref.	Part Number	Qty.	Description
5	132-0552	1	Mark-Operator Caution (English)
5	132-0553	1	Mark-Operator Caution (French)
7	132-0570	1	Mark-Exhaust Caution (English)
7	132-0571	1	Mark-Exhaust Caution (French)
10	132-0557	1	Mark-Operator Caution (Chinese)

Gasket Kit

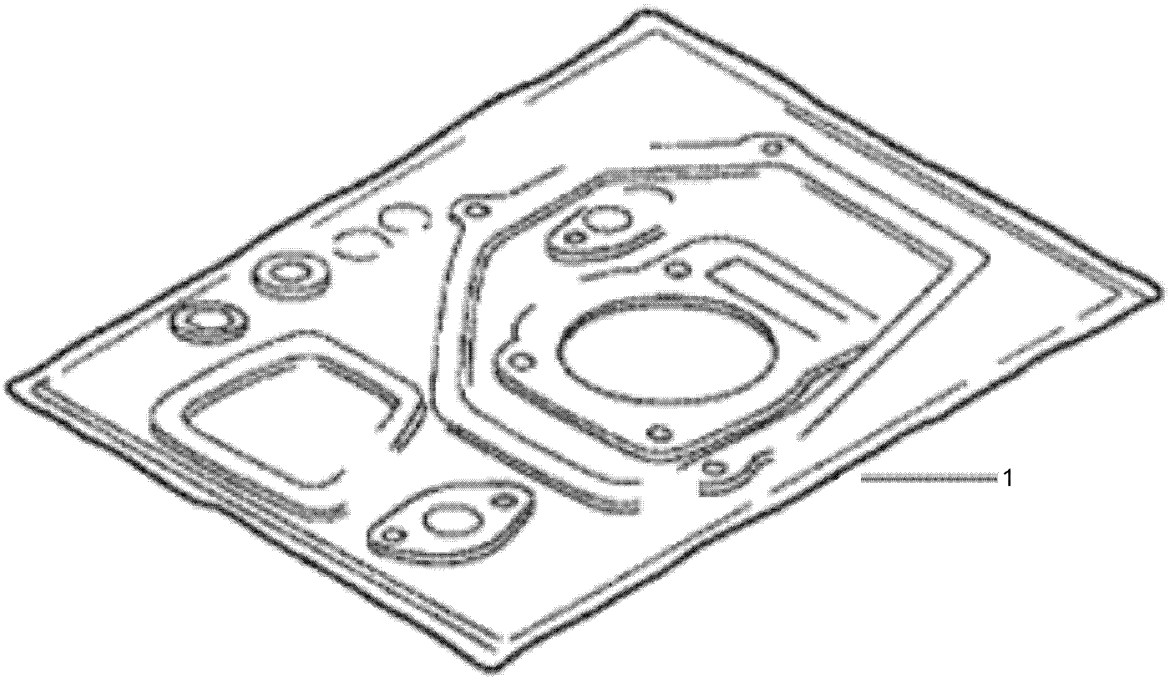

Gasket Kit (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	132-0100	1	Gasket Kit

Attachments and Accessories

For 44912 GreensPro 1240 Greens Roller

Product Name	Model/Part
Filter-oil, Hyd	1-633750
Premium All Season Hydraulic Fluid (5 Gallon Pail)	108-1178
Premium Engine Oil 10w30 (5 Gallon Pail)	121-6393
Armrest Kit	44908
Roller Scraper Kit	44911
LED Light Kit	44923
Wireless Hour Meter Kit	44927

Notes:

Notes:

Notes:



Count on it.