Form No. 3388-685 Rev B

TORO®

Count on it.

Parts Catalog

30in TurfMaster Walk-Behind Lawn Mower

Model No. 22200—Serial No. 315000001 and Up

Register at www.Toro.com.
Original Instructions (EN)

3388-685 B

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head


Contents

Deck, Frame and Chute Assembly 4
Spindle and Blade Assembly 6
Side Discharge Chute Assembly 8
Grass Bag Assembly 10
Engine and Fuel Tank Assembly 12
Front Bumper and Wheel Assemby 14
Traction and Height-of-Cut Assembly 16
Handle Assembly 18
Attachments and Accessories 20

© 2016—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Deck, Frame and Chute Assembly

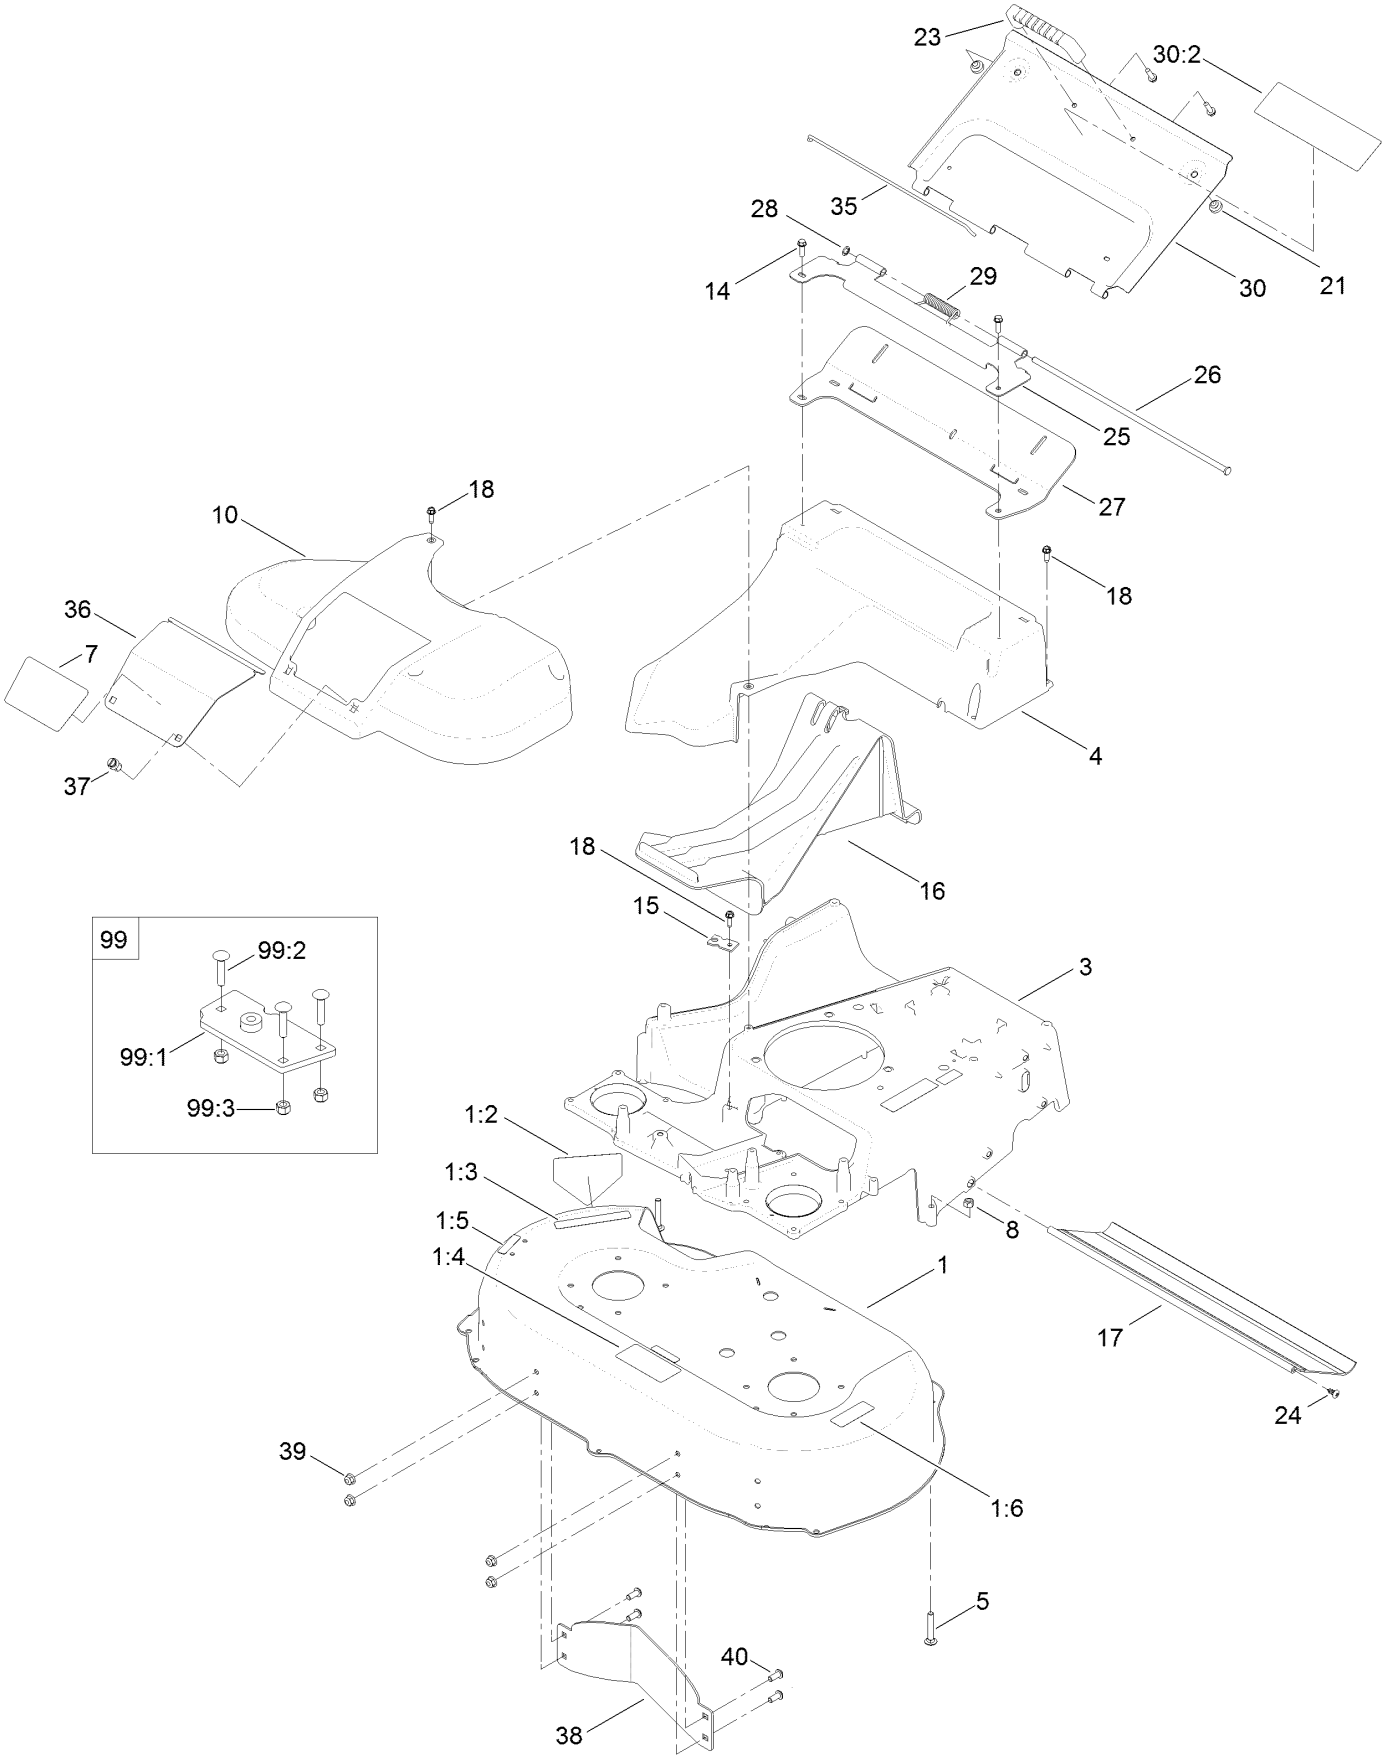

Deck, Frame and Chute Assembly (continued)

Ref.	Part Number	Qty.	Description
1	131-4543	1	Deck-30 Inch
1:2	94-8072	1	Decal-Danger
1:3	93-7009	1	Decal-Danger
1:4	116-8528	1	Decal
1:5	120-9570	2	Decal-Warning
1:6	121-1449	1	Decal-Warning, Block
3	127-6859-01	1	Frame
4	120-3336	1	Chute
5	127-6841	2	Screw-CARR
7	121-9191	1	Decal
8	3296-29	2	Nut-Lock, NI
10	121-5810	1	Cover-Belt
14	46-8091	4	Screw-HWH
15	107-7497	1	Bracket-Cable, Traction
16	120-5225	1	Plug-Mulch
17	121-5841	1	Shield-Trailing
18	49-2040	9	Screw-HWHTF
21	1-513658	2	Bumper
23	65-5100	1	Handle-Door
24	117-1092	2	Screw-PTH
25	116-6351-03	1	Bracket-Hinge
26	116-6933	1	Pin-Hinge
27	116-6229	1	Seal-Door
28	32151-72	1	Ring-Retaining
29	116-7573	1	Spring-Torsion, Cover
30	116-8355	1	Rear Door ASM
30:2	116-7583	1	Decal-Warning
35	116-6966	1	Clip-Seal
36	121-5793-03	1	Door-Access
37	121-5840	2	Fastener
38	130-2352-01	1	Baffle-Control
39	104-8300	4	Nut-Flange, NI
40	3274-55	4	Screw-HSBH
99	125-5072	1	Frame Plate Kit (Service)
99:1	125-2542	1	Plate Frame ASM
99:2	3229-3	3	Screw-CARR
99:3	3296-42	3	Nut-Lock, NI


Spindle and Blade Assembly

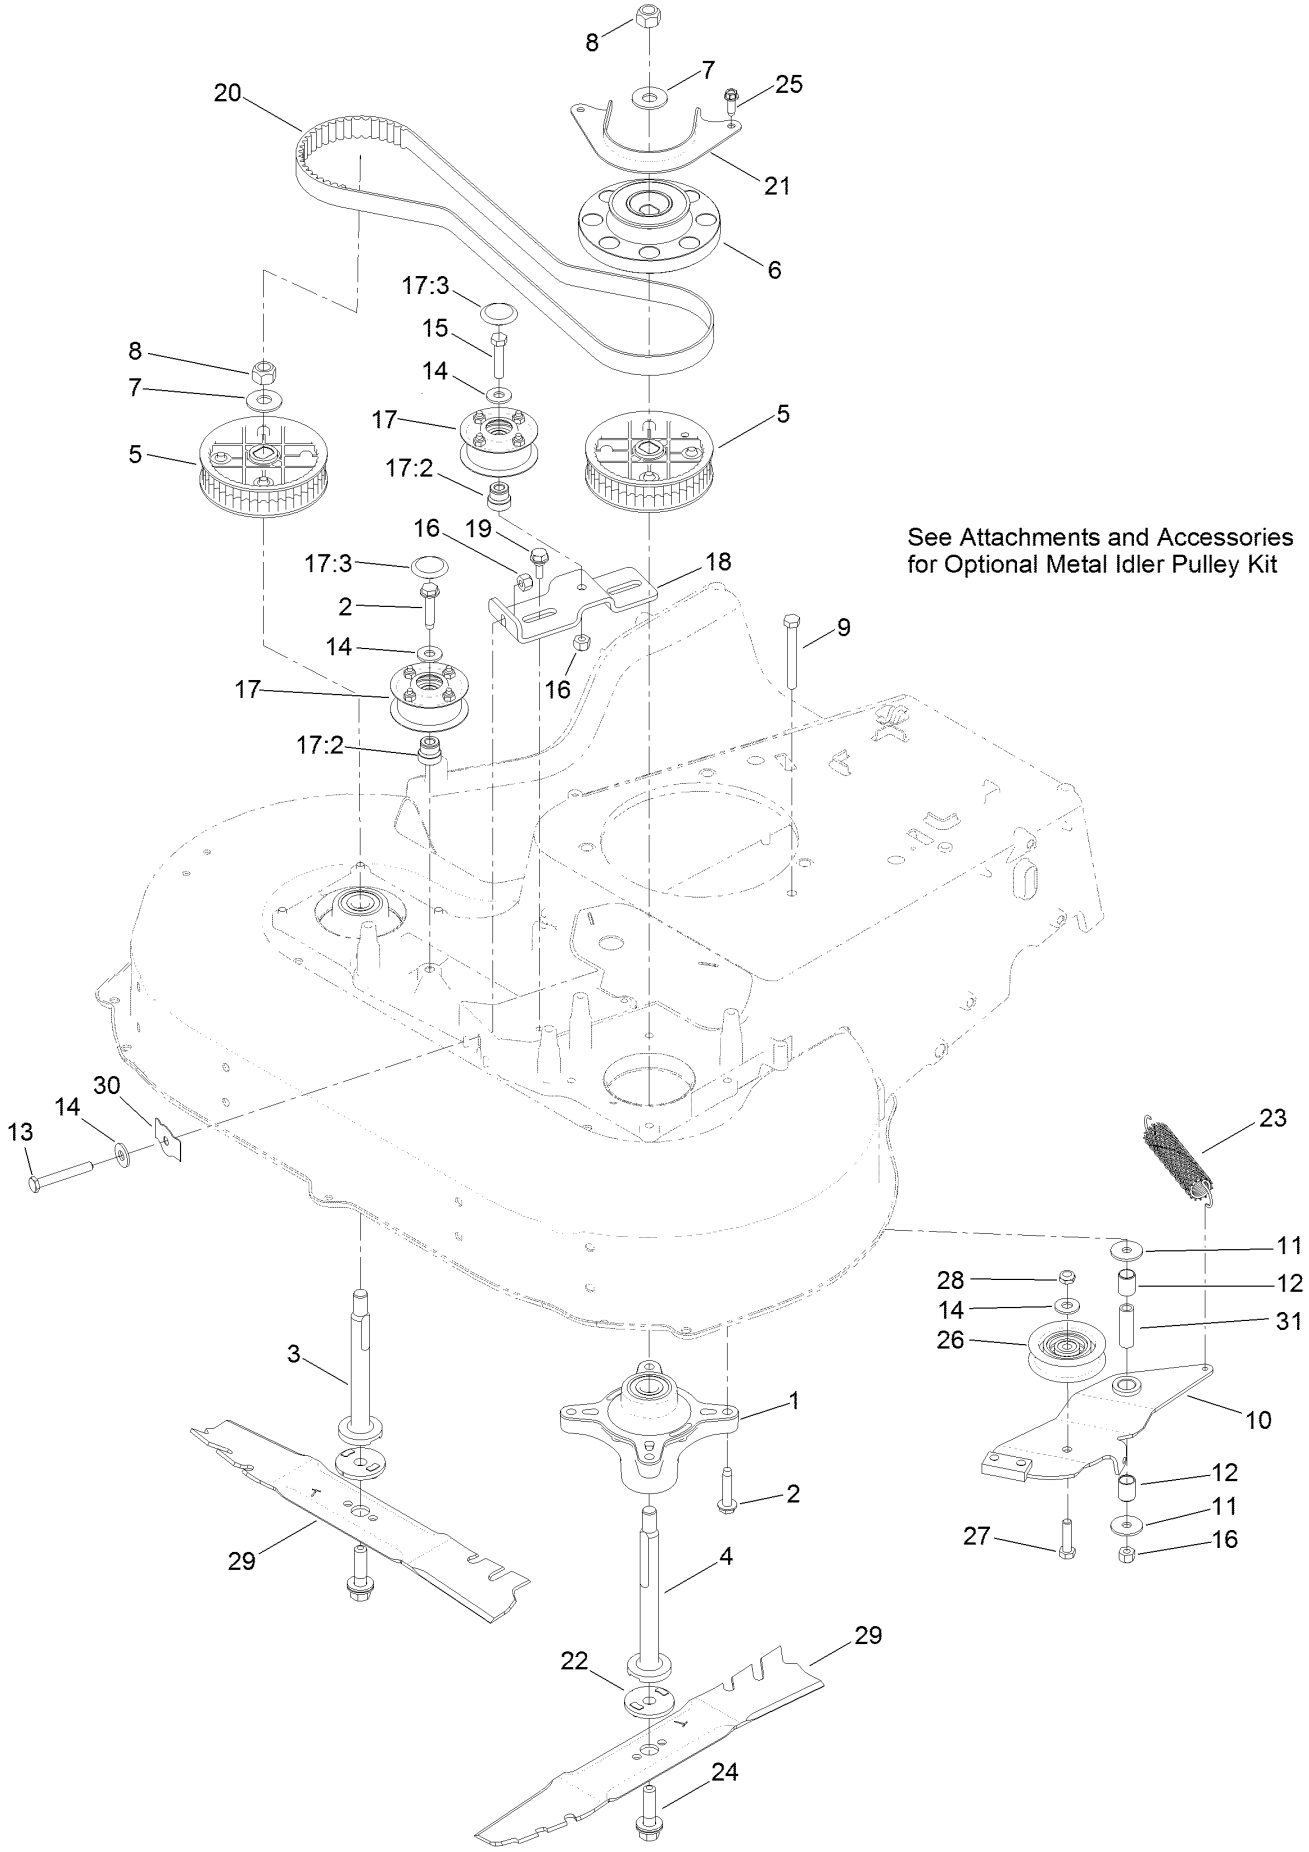

Spindle and Blade Assembly (continued)

Ref.	Part Number	Qty.	Description
1	120-6234	2	Spindle ASM
2	32144-57	9	Screw
3	120-5234	1	Shaft-Spindle
4	120-5235	1	Shaft-Spindle
5	121-9100	2	Sprocket
6	130-6664	1	Pulley-Brake, Spindle
7	109-9505	2	Washer-Spring
8	3296-19	2	Nut-Hex
9	322-13	1	Screw-HH
10	121-5796	1	Brake Arm ASM
11	5-4460	2	Washer-Pivot
12	131-0819	2	Bushing-Sleeve
13	9114524	1	Bolt-TAP, HH
14	3256-3	4	Washer-Flat
15	322-7	1	Screw-HH
16	3296-29	3	Nut-Lock, NI
17	131-4529	2	Pulley Kit
17:2	131-4504	1	Adapter-Bore
17:3	125-2533	1	Plug-Cap
18	120-3348	1	Bracket-Idler
19	120-7024	2	Screw-Shoulder, HHF
20	120-3335	1	Belt-Synchronous
21	120-5245-03	1	Guide-Belt, Spindle
22	120-5236	2	Adapter-Blade
23	121-5808	1	Spring-Extension, Brake
24	125-2466	2	Bolt-Blade
25	49-2040	2	Screw-HWHTF
26	120-7082	1	Pulley-Idler
27	322-6	1	Screw-HH
28	3296-47	1	Nut-Lock, NI
29	116-6358-03	2	Blade-Rotary
30	121-2336	1	Spring-Flat
31	131-0823	1	Spacer-Brake


Side Discharge Chute Assembly

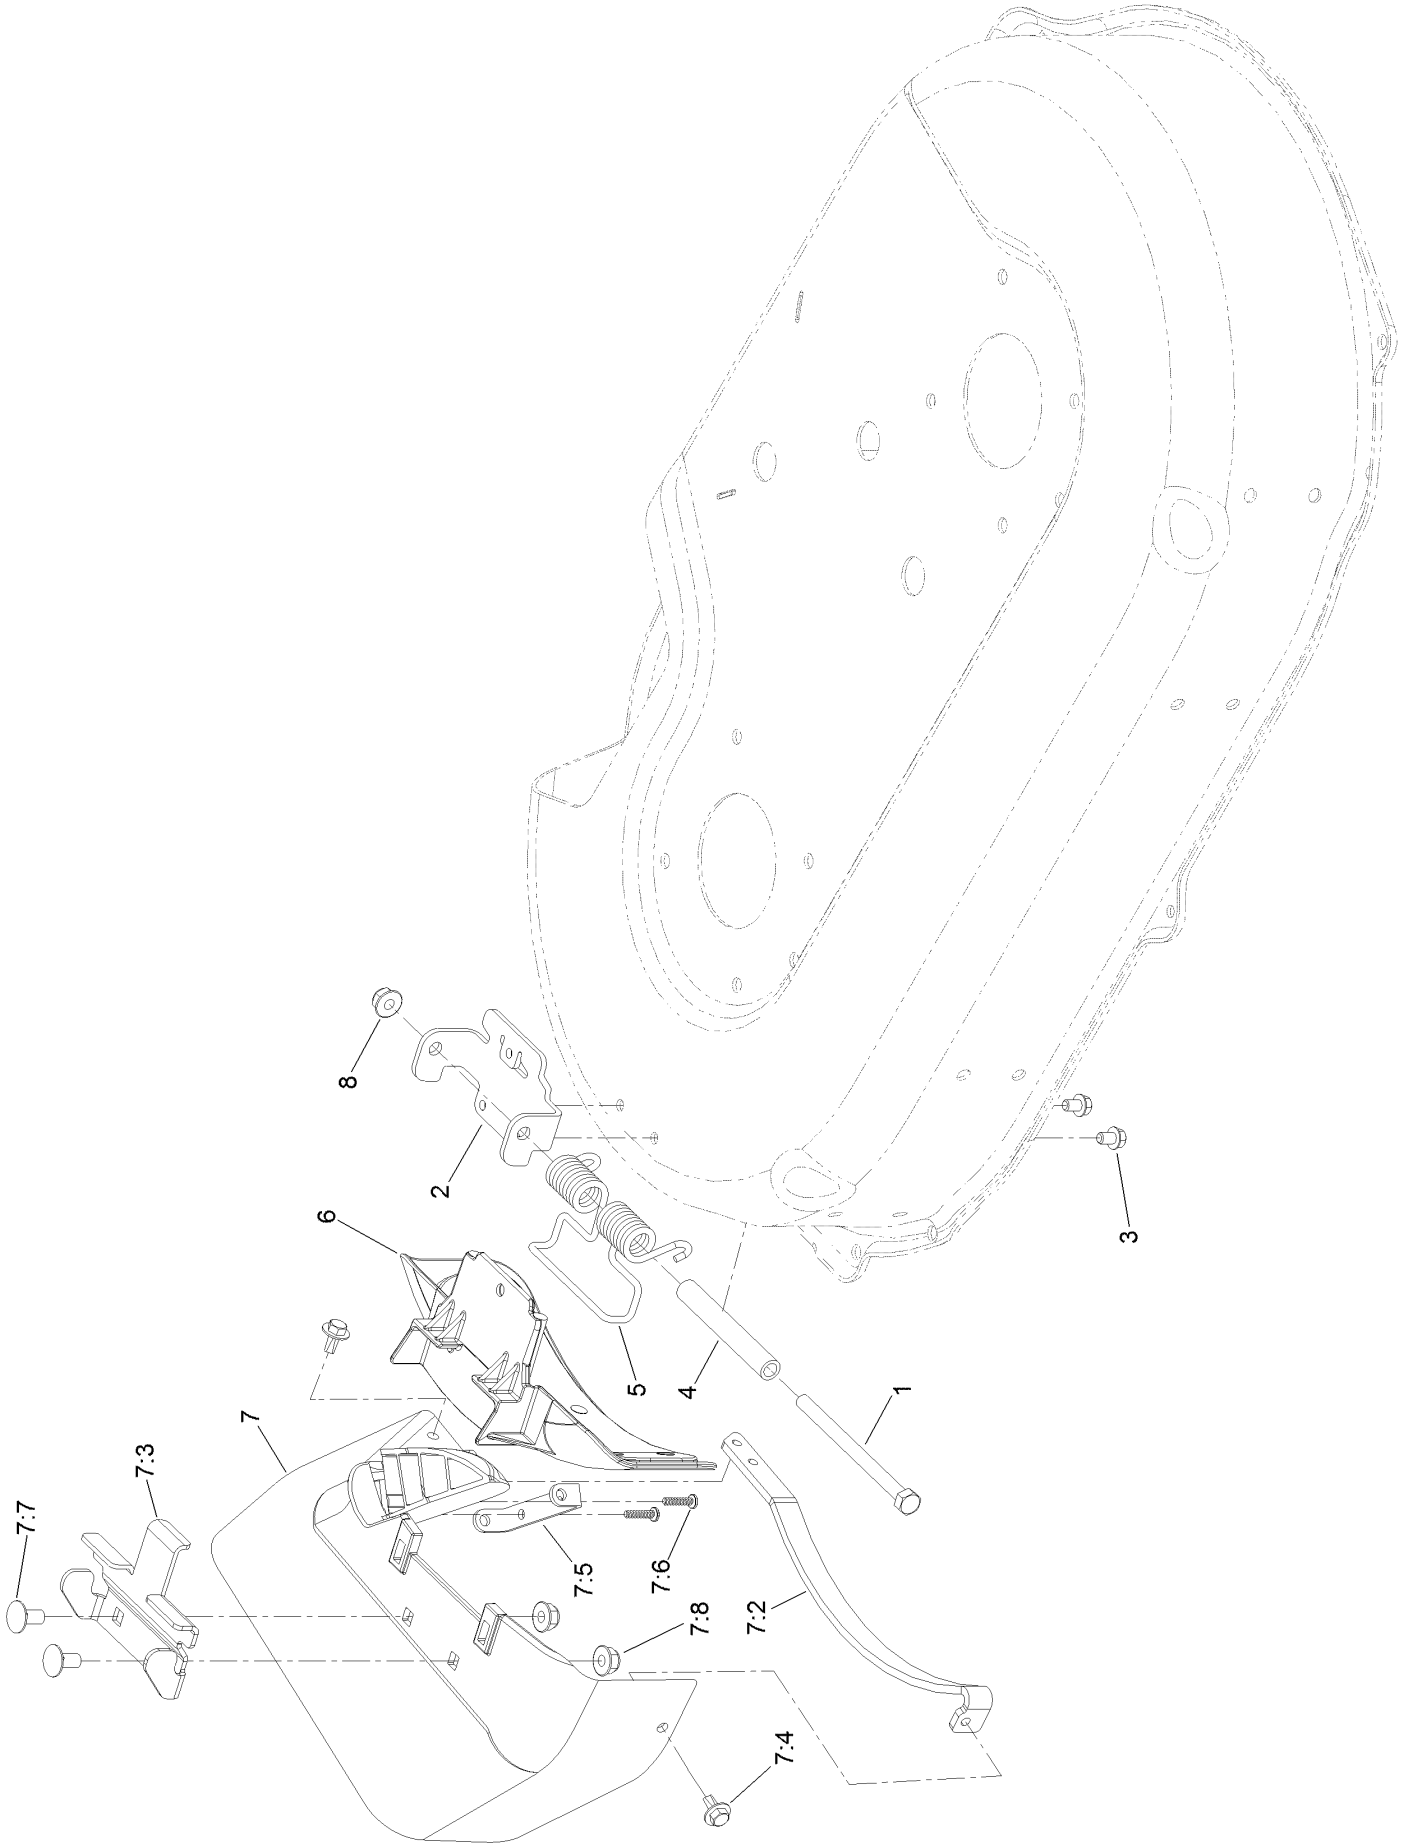

Side Discharge Chute Assembly (continued)

Ref.	Part Number	Qty.	Description
1	322-38	1	Screw-HH
2	121-9195	1	Hinge
3	99-8445	2	Screw-HWH
4	125-2478	1	Spacer
5	121-9193	1	Spring-Torsion
6	125-5093-01	1	Cover-Discharge
7	116-9754	1	Side Discharge Chute ASM
7:2	116-9752-03	1	Guard-Chute
7:3	121-9196	1	Bracket-Chute
7:4	46-8560	2	Screw-HHFTF
7:5	112-6416	1	Bracket-Cover
7:6	94-4496	2	Screw-PPH
7:7	3230-18	2	Screw-CARR
7:8	104-8300	2	Nut-Flange, NI
8	104-8300	1	Nut-Flange, NI


Grass Bag Assembly

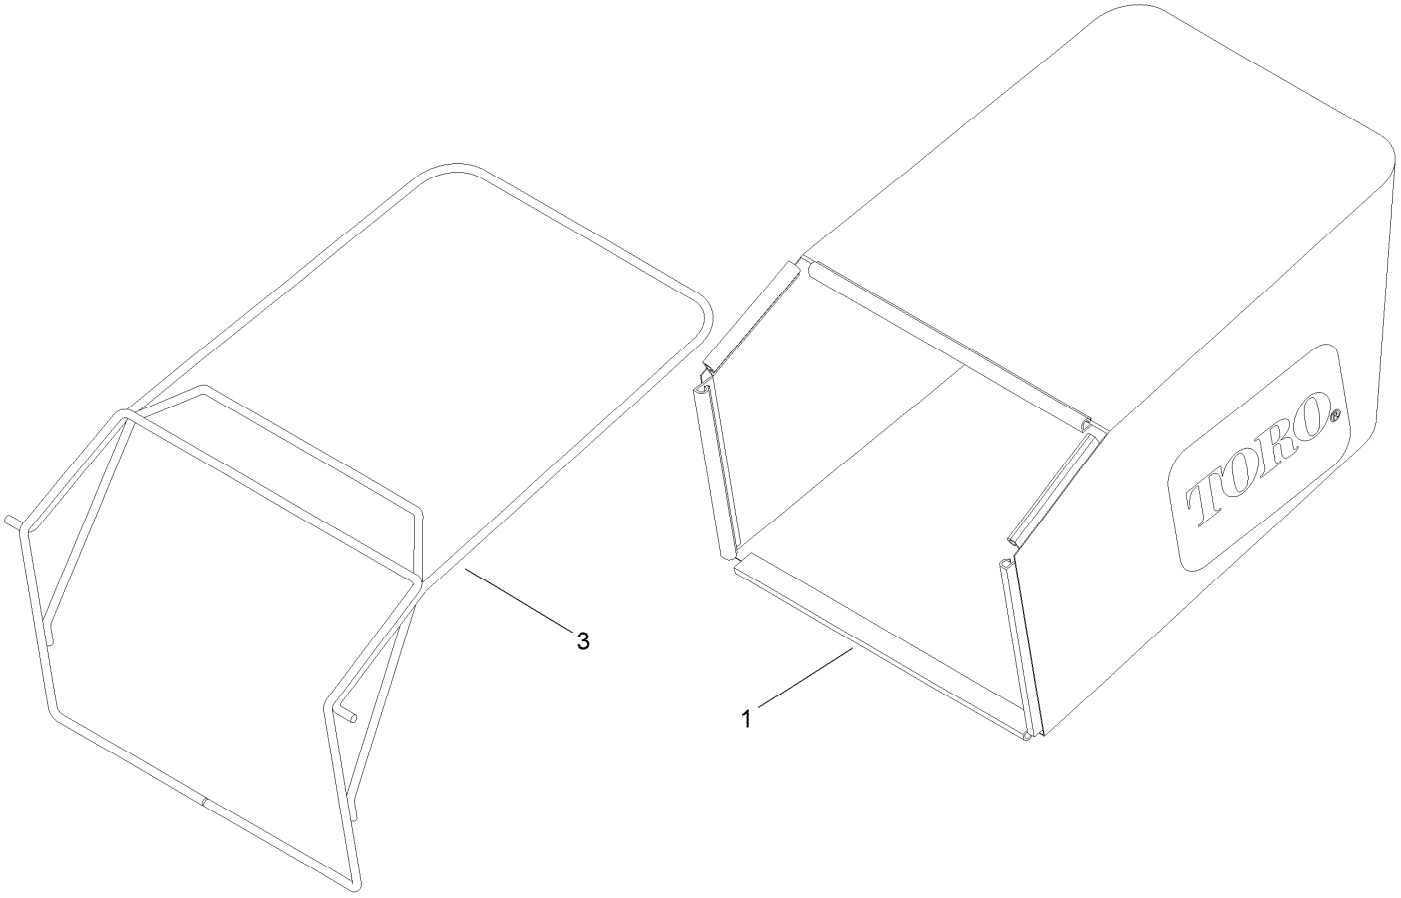

Grass Bag Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	121-5775	1	Grass Bag ASM
3	116-5596-03	1	Frame-Bag

Engine and Fuel Tank Assembly

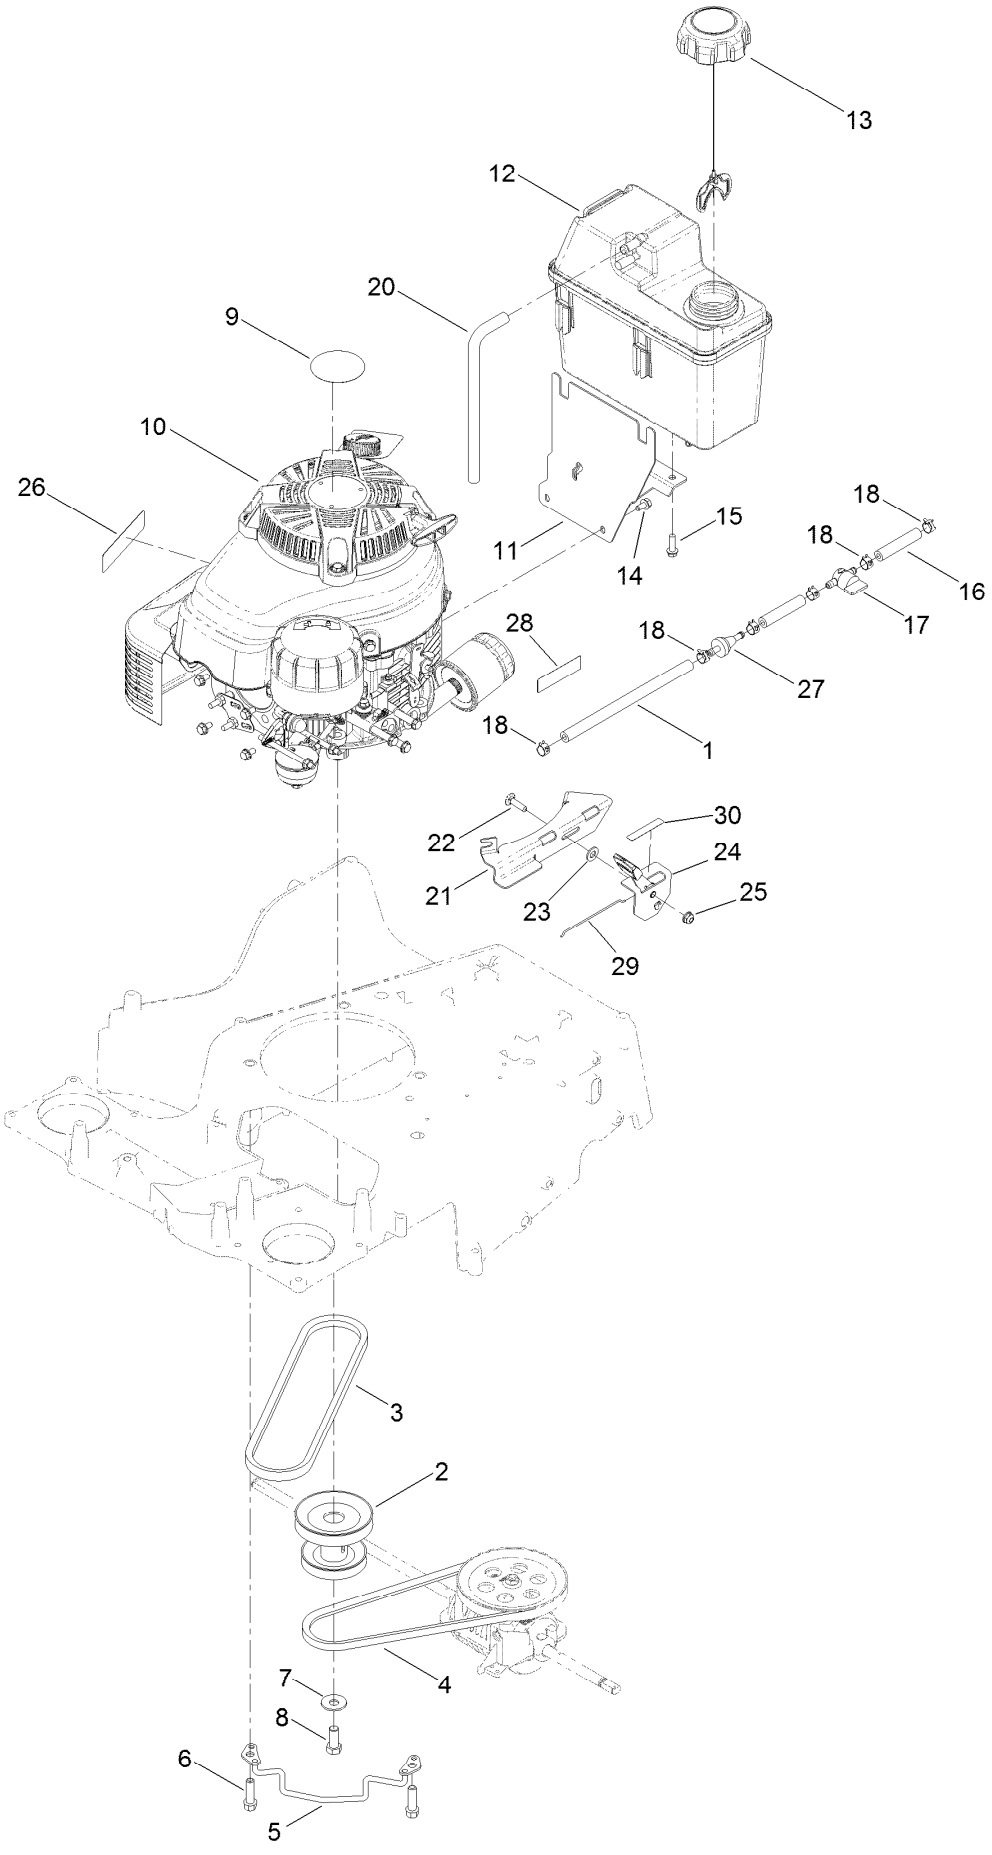


Engine and Fuel Tank Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-1892	1	Hose-Fuel
2	116-7013	1	Pulley-Engine
3	121-5765	1	V-Belt
4	116-7116	1	Belt
5	120-7077	1	Guide-Belt
6	95-1727	3	Screw-Taptite
7	3290-465	1	Washer-Belleville
8	3212-4	1	Screw-HH
9	109-6528	1	Decal-Recoil
10		1	Engine-Kawasaki Fj180V ●■
11	115-0954-03	1	Mount-Tank
12	125-5066	1	Tank-Fuel
13	109-6776	1	Cap-Ratchet, Tethered
14	116-8929	3	Screw-HWH
15	46-8091	2	Screw-HWH
16	109-0304	2	Hose-Fuel
17	1-603770	1	Valve-Fuel
18	2412-98	6	Clamp-Hose
20	115-0962	1	Hose-Vent, Canister
21	130-6440-03	1	Bracket-Mount, Throttle
22	3229-30	1	Screw-CARR
23	3256-23	1	Washer-Flat
24	130-9655	1	Control-Throttle
25	104-7201	1	Nut-Flange, NI
26	117-2718	1	Decal-Arrester, Spark
27	71-9280	1	Filter-Fuel
28	116-9313	1	Decal-Warning, Engine
29	130-9654	1	Wire-Control
30	130-9656	1	Decal-Throttle, Choke

● Not serviced separately

■ Obtain parts from www.kawpowerepc.com


Front Bumper and Wheel Assemby

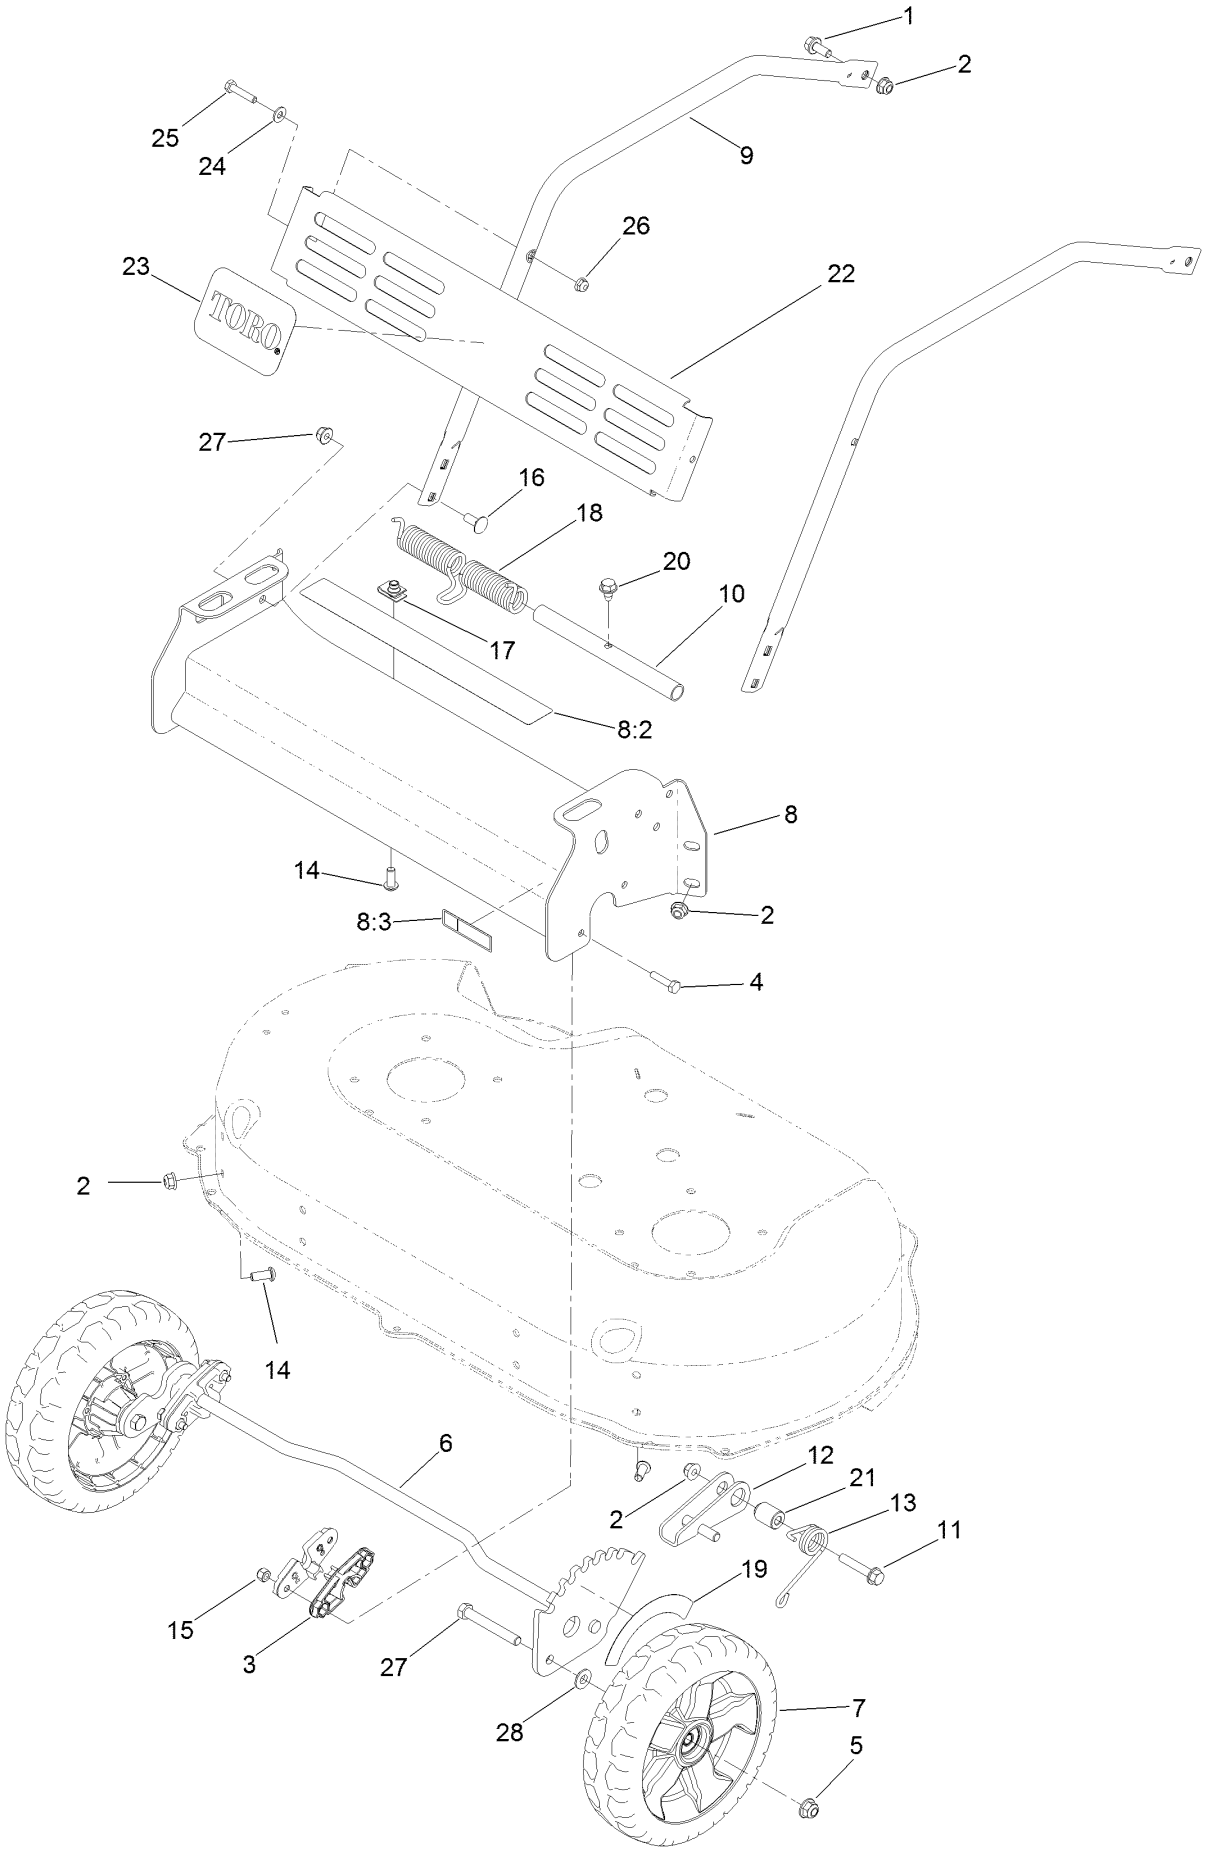

Front Bumper and Wheel Assemby (continued)

Ref.	Part Number	Qty.	Description
1	116-7230	2	Screw-HHF
2	104-8300	11	Nut-Flange, NI
3	121-5781	4	Bushing-Front
4	321-7	4	Screw-HH
5	104-8301	2	Nut-Flange, NI
6	131-0826	1	Axle-Front
7	125-1080	2	Wheel
8	125-2488	1	Front Bumper ASM
8:2	121-5847	1	Decal
8:3	116-7581	1	Decal-Warning
9	121-9168-03	2	Brace
10	121-5809	1	Mandrell-Spring
11	94-5780	1	Screw-HWH
12	125-2483	1	Lock-Height, Adjustment
13	120-9465	1	Spring-Torsion
14	3274-55	5	Screw-HSBH
15	3296-42	4	Nut-Lock, NI
16	3230-23	4	Screw-CARR
17	94-2413	1	Nut-U
18	121-2337	1	Spring-Torsion
19	121-5846	1	Decal-HOC, Front
20	9266934	1	Screw
21	125-2486	1	Spacer
22	121-9187-03	1	Shield
23	117-0871	1	Decal
24	3256-22	2	Washer-Flat
25	321-8	2	Screw-HH
26	104-7201	2	Nut-Flange, NI
27	323-13	2	Screw-HH
28	74-1671	2	Spacer-Cover, Wheel


Traction and Height-of-Cut Assembly

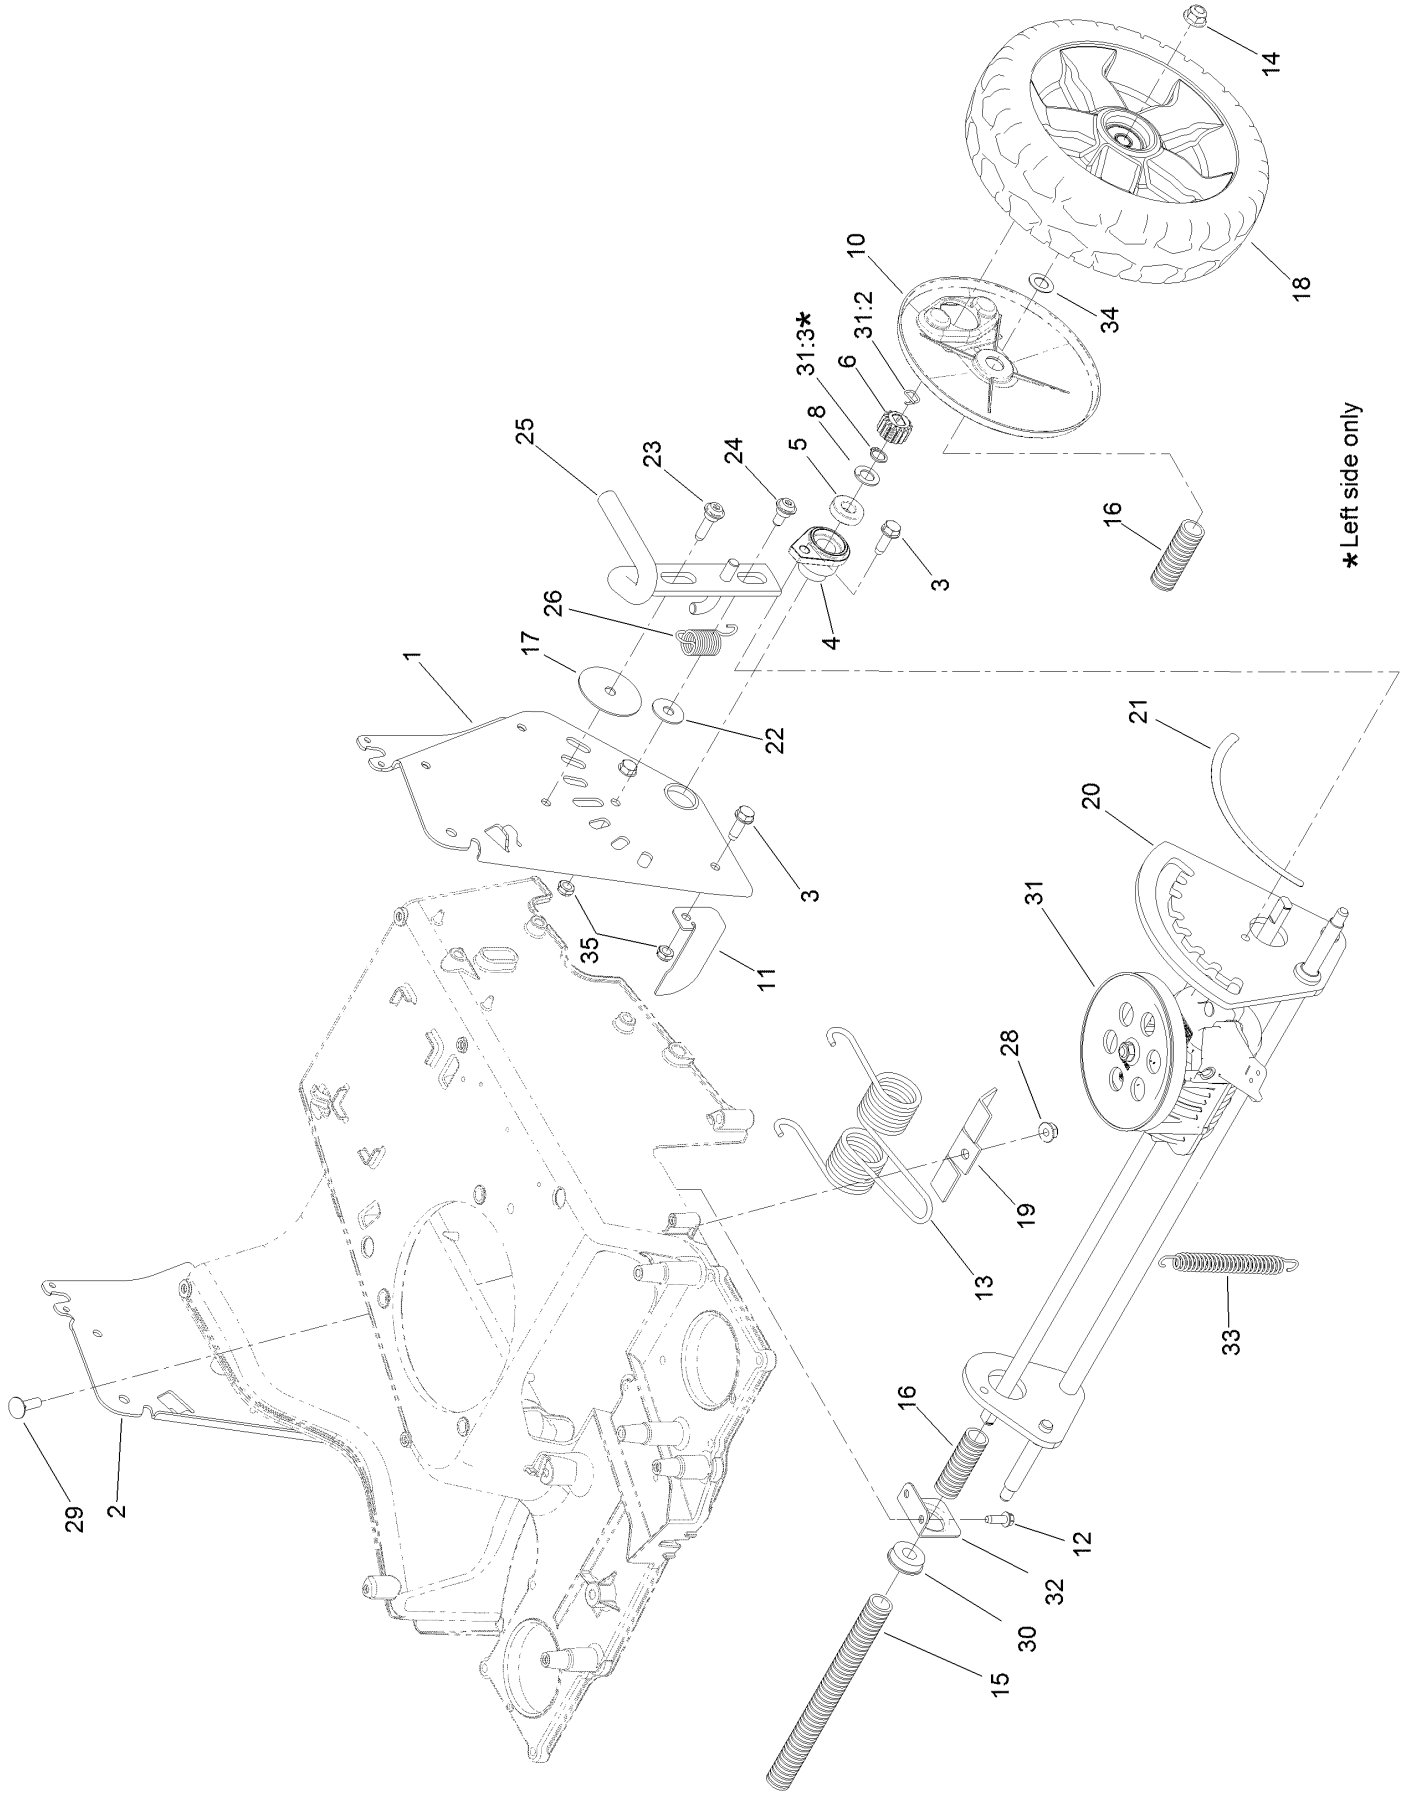

Traction and Height-of-Cut Assembly (continued)

Ref.	Part Number	Qty.	Description
1	121-2394-03	1	LH HOC Plate ASM
2	121-2395-03	1	RH HOC Plate ASM
3	701243	7	Screw-HWHTF
4	120-5210	2	Retainer-Bearing
5	109-8020	2	Bearing-Ball
6	110-9417	2	Gear-Pinion, 15T
8	110-7191	2	Washer-Thrust
10	125-2480	2	Cover-Gear
11	121-5821	1	Bracket-Stop
12	49-2040	2	Screw-HWHTF
13	121-2368	1	Spring-Torsion
14	104-8301	2	Nut-Flange, NI
15	121-5799	1	Conduit-Convoluted
16	121-5800	2	Conduit-Convoluted
17	125-2540	1	Washer-Plain
18	131-4599	2	Wheel ASM (W/Gear)
19	121-2397	1	Bracket
20	131-4516	1	Axle-Rear
21	116-7127	1	Decal-HOC, Rear
22	52-2860	1	Washer
23	119-2267	1	Screw-Shoulder, BHTF
24	120-9471	1	Bolt-Shoulder
25	120-7090	1	Lock-Height, Adjust
26	120-9452	1	Spring-Extension
28	104-8300	1	Nut-Flange, NI
29	3230-2	1	Bolt-CARR
30	104-8699	1	Bearing-Ball
31	131-9667	1	Transmission Kit
31:2	130-2369	2	Pin-Snap
31:3	32151-61	1	Ring-Retaining
32	120-7008	1	Mount-Bearing
33	120-7027	1	Spring-Extension
34	36-4780	2	Washer-Plain
35	3296-47	2	Nut-Lock, NI

Handle Assembly

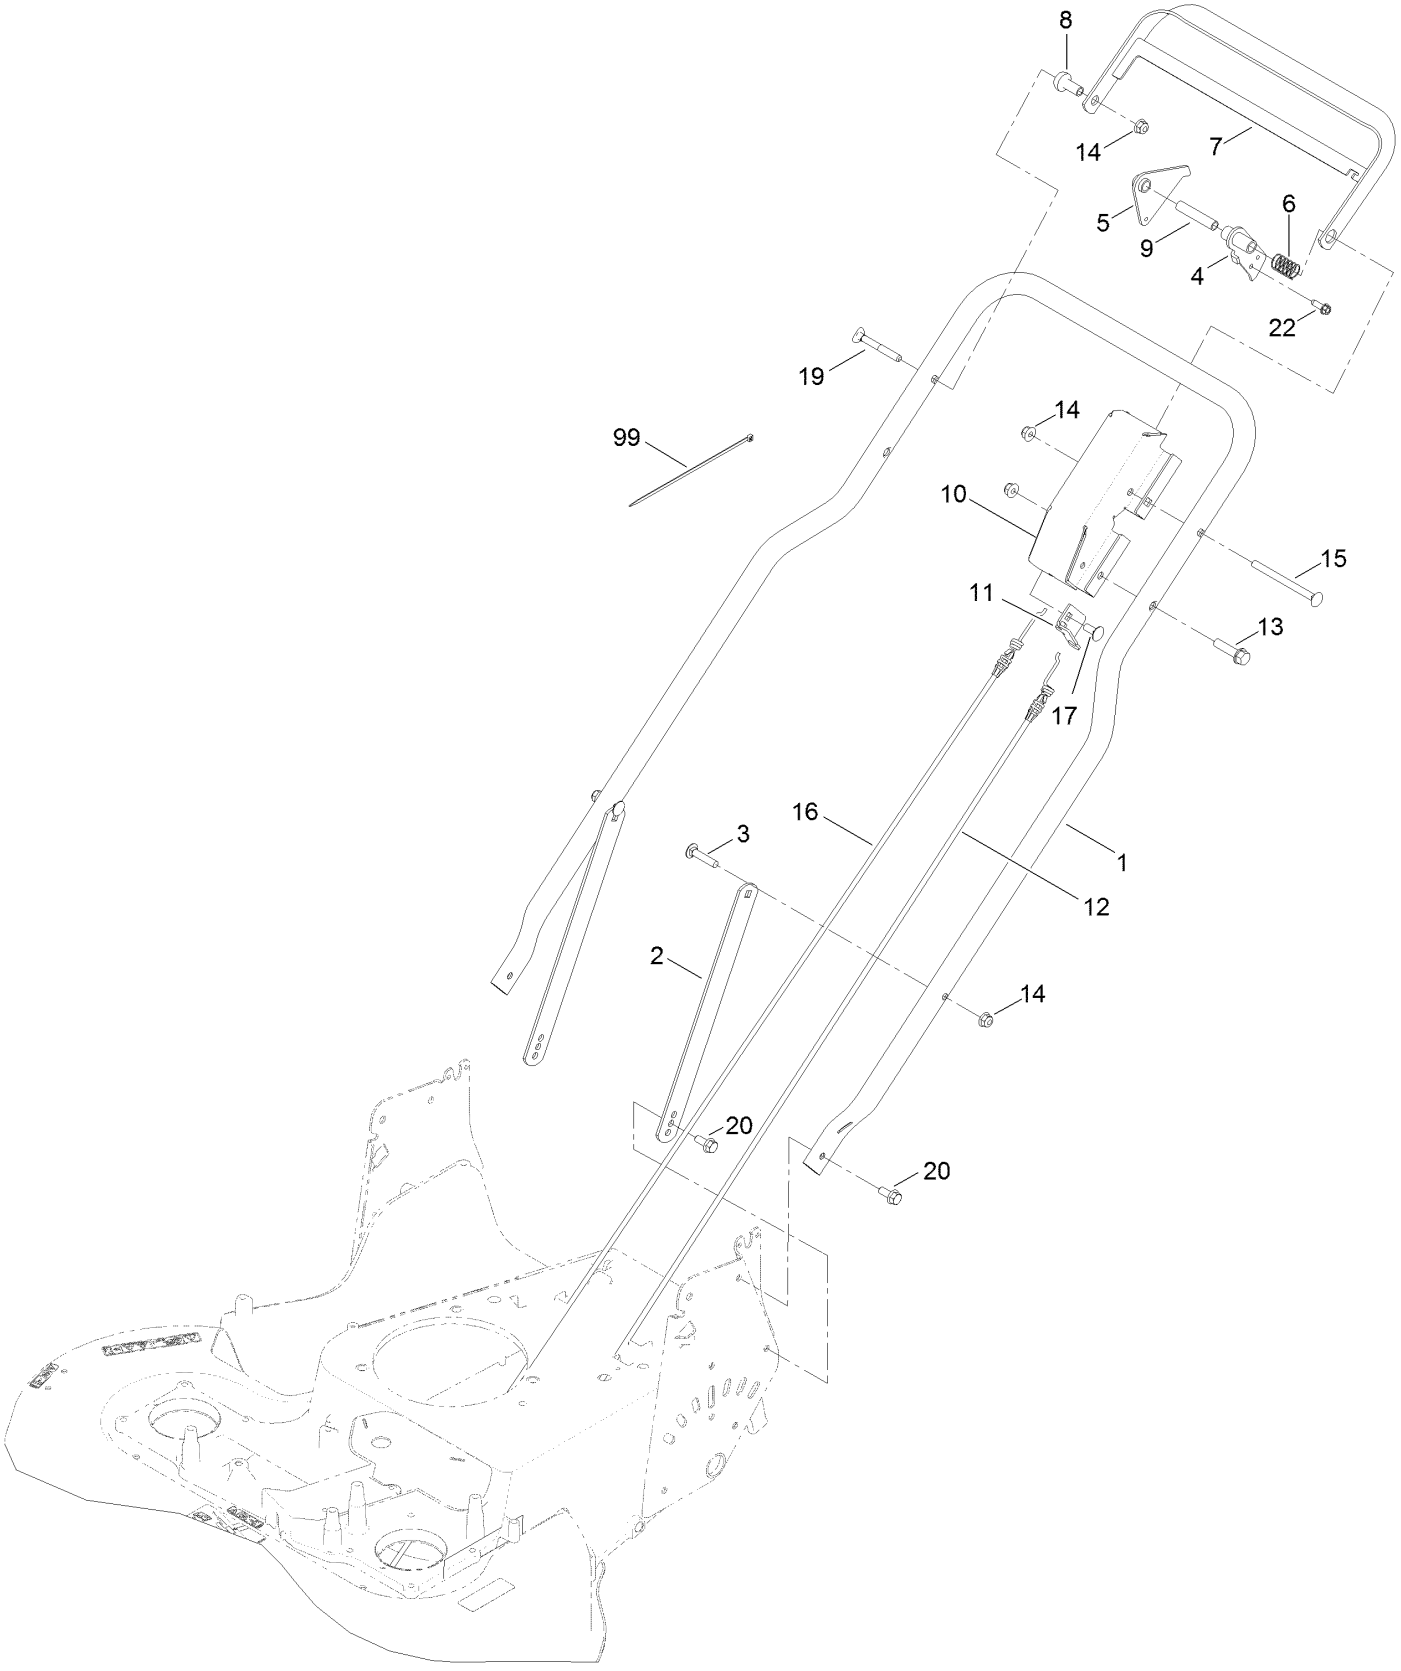

Handle Assembly (continued)

Ref.	Part Number	Qty.	Description
1	121-5827-03	1	Handle
2	116-8208-03	2	Support-Handle
3	3230-4	2	Screw-CARR
4	121-5831	1	BBC Lever ASM
5	121-9136	1	Lever-Traction
6	85-6750	1	Spring-Control
7	121-5829-03	1	Bar-Control
8	49-1631	1	Spacer-Support
9	84-9030	1	Spacer-Bracket, Control
10	121-5789-03	1	Bracket-Control
11	121-9166	1	Bracket
12	127-0741	1	Cable-Brake
13	32144-102	1	Screw-HWH
14	104-8300	5	Nut-Flange, NI
15	106-9758	1	Screw-CARR
16	127-6868	1	Cable-Traction
17	3230-23	1	Screw-CARR
19	17-9427	1	Screw
20	116-7230	4	Screw-HHF
22	49-2040	1	Screw-HWHTF
99	614249	3	Tie-Cable

Attachments and Accessories

For 22200 30in TurfMaster Walk-Behind Lawn Mower

Product Name	Model/Part
Atomic Blade 15.4in	120-9500-03
Mulching Kit	125-5064
Idler Pulley Kit	126-7890

Notes:

Notes:

Notes:



Count on it.