Form No. 3399-257 Rev B

TORO®

Count on it.

Parts Catalog

# Z Master® Professional 6000 Series Riding Mower

## with 60in TURBO FORCE® Side Discharge Mower

**Model No. 74997—Serial No. 316000001 and Up**

Register at www.Toro.com.
Original Instructions (EN)

*3399-257* B

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

**AR:** as required

**ASM:** assembly

**BBC:** blade brake control

**BHTF:** button head thread forming

**CARR:** carriage

**CCW:** counter clockwise

**CW:** clockwise

**DEG:** degrees

**DPA:** Dual Point Adjustment

**ECM:** electronic control module

**EXT:** external

**FH:** flat head

**GA:** gauge

**HD:** heavy-duty

**HF:** hex flange

**HH:** hex head

**HHF:** hex head flange

**HHFTF:** hex head flange thread forming

**HJ:** hex jam

**HLH:** hex lag head

**HOC:** height-of-cut

**HP:** high pressure

**HSBH:** hex socket button head

**HSFH:** hex socket flat head

**HSH:** hex socket head

**HWH:** hex washer head

**HWHTF:** hex washer head thread forming

**HYD:** hydraulic

**LH:** left hand

**LP:** low pressure

**LPG:** Liquefied Petroleum Gas

**NI:** nylon insert

**NPTF:** national pipe thread fine

**PFH:** phillips flat head

**PPH:** phillips pan head

**PPHTF:** phillips pan head thread forming

**PRH:** phillips round head

**PTH:** phillips truss head

**PTO:** power-take-off

**RH:** right hand

**ROPS:** roll-over protection system

**RRB:** rear roller brush

**SFH:** slotted fillister head

**SHH:** slotted hex head

**SHWH:** slotted hex washer head

**SPH:** slotted pan head

**SQH:** square head

**SRH:** slotted round head

**STD:** standard

**TAP:** self tapping

**TTH:** torx truss head

# Contents


Frame, Caster Wheel and Roll-Over Protection System Assembly . . . . . 4
Roll-Over Protection System Assembly No. 116-0231 . . . . . 6
Caster Fork and Wheel Assembly . . . . . 8
Hydraulic Pump, Idler and Belt Assembly . . . . . 10
Pump Idler Assembly No. 116-1255 . . . . . 12
LH Hydro Assembly No. 126-1319 . . . . . 14
RH Hydro Assembly No. 126-1320 . . . . . 16
Parking Brake and Wheel Assembly . . . . . 18
Fuel Tank Mounting Assembly . . . . . 20
Fuel Tank Assembly No. 116-3979 . . . . . 22
Control Assembly . . . . . 24
Console and Control Panel Assembly . . . . . 26
LH Console Assembly No. 115-7401 . . . . . 28
RH Console Assembly No. 115-7400 . . . . . 30
Electrical System Assembly . . . . . 32
Deck Lift Assembly . . . . . 34
Height-of-Cut Assembly No. 109-7438 . . . . . 36
Engine, Clutch and Muffler Assembly . . . . . 38
Deck Assembly . . . . . 40
Deck Decal Assembly No. 112-4180 . . . . . 42
Idler Assembly . . . . . 44
Spindle Assembly No. 119-8560 . . . . . 46
Rubber Deflector Assembly No. 108-2792 . . . . . 48
Seat Mount Assembly . . . . . 50
Suspension Platform Assembly . . . . . 52
Seat Assembly No. 116-0035 . . . . . 54
Suspension Platform Rubber Mat Assembly . . . . . 56
Attachments and Accessories . . . . . 58

**© 2016—The Toro® Company**
**8111 Lyndale Avenue South**
**Bloomington, MN 55420**



**Contact us at www.Toro.com.**
**Printed in the USA.**
**All Rights Reserved**

# Frame, Caster Wheel and Roll-Over Protection System Assembly

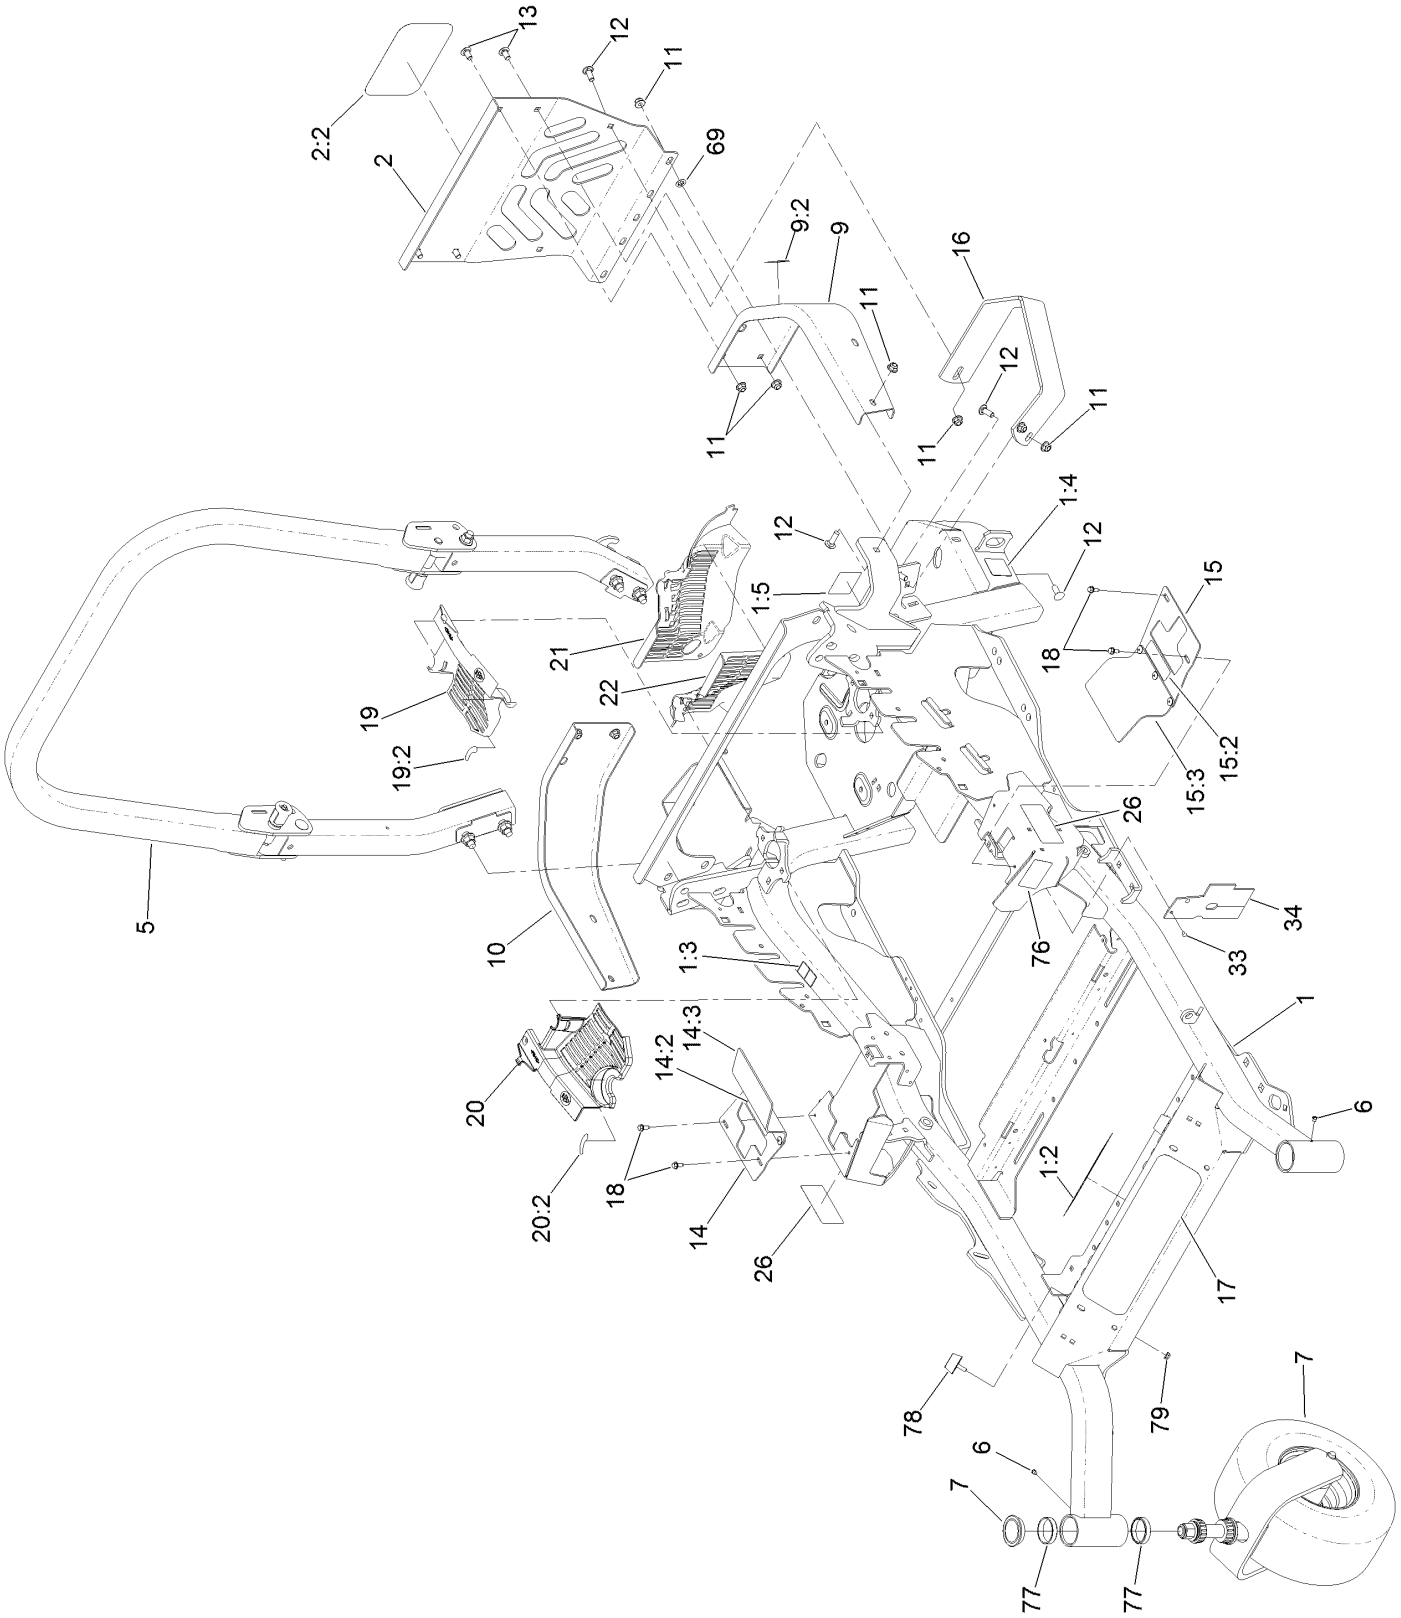


# Frame, Caster Wheel and Roll-Over Protection System Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 126-6619 | 1 | Mainframe ASM |
| 1:2 | 132-0871 | 1 | Decal-Danger |
| 1:3 | 106-5517 | 2 | Decal-Warning, Hot Surface |
| 1:4 | 106-2655 | 2 | Decal-Hazard, Pinched Finger |
| 1:5 | 116-4858 | 1 | Decal-Spark Arrester |
| 2 | 115-7410 | 1 | Rear Guard ASM |
| 2:2 | 67-7320 | 1 | Decal |
| 5 | 116-0231 | 1 | ROPS ASM |
| 6 | 1-811010 | 2 | Plug |
| 7 | | 2 | Caster Wheel ASM ● |
| 9 | 116-0180 | 1 | LH Bumper ASM |
| 9:2 | 106-5517 | 1 | Decal-Warning, Hot Surface |
| 10 | 116-0057-03 | 1 | Bumper-RH |
| 11 | 104-8301 | 11 | Nut-Flange, NI |
| 12 | 3231-22 | 7 | Screw-CARR |
| 13 | 3231-21 | 3 | Screw-CARR |
| 14 | 131-4615 | 1 | RH Motion Control Cover ASM |
| 14:2 | 99-8936 | 1 | Decal-Control, Motion |
| 14:3 | 131-4605 | 1 | Flap-Rubber |
| 15 | 131-4610 | 1 | LH Motion Control Cover ASM |
| 15:2 | 99-8936 | 1 | Decal-Control, Motion |
| 15:3 | 131-4605 | 1 | Flap-Rubber |
| 16 | 126-2067-03 | 1 | Guard-Muffler |
| 17 | 132-5066 | 1 | Decal-Z Master, Professional |
| 18 | 32144-10 | 4 | Screw-HWH |
| 19 | 116-0170 | 1 | LH Hydro Guard ASM |
| 19:2 | 116-8726 | 1 | Decal-Oil, Hydro |
| 20 | 116-0171 | 1 | RH Hydro Guard ASM |
| 20:2 | 116-8726 | 1 | Decal-Oil, Hydro |
| 21 | 109-9709 | 1 | Guard-Hydro Rear, LH Trim |
| 22 | 109-9058 | 1 | Guard-Hydro, Rear (RH) |
| 26 | 120-5895 | 2 | Decal |
| 33 | 1-803035 | 2 | Rivet-Pop |
| 34 | 116-2362 | 1 | Deflector-Air Flow |
| 69 | 107-3154 | 2 | Nut-Push |
| 76 | 117-3864 | 1 | Decal-Fuel Fill, Ce |
| 77 | 1-543508 | 4 | Cup-Bearing |
| 78 | 131-8834 | 2 | Bumper |
| 79 | 104-7201 | 2 | Nut-Flange, NI |

● Not serviced separately

# Roll-Over Protection System Assembly No. 116-0231

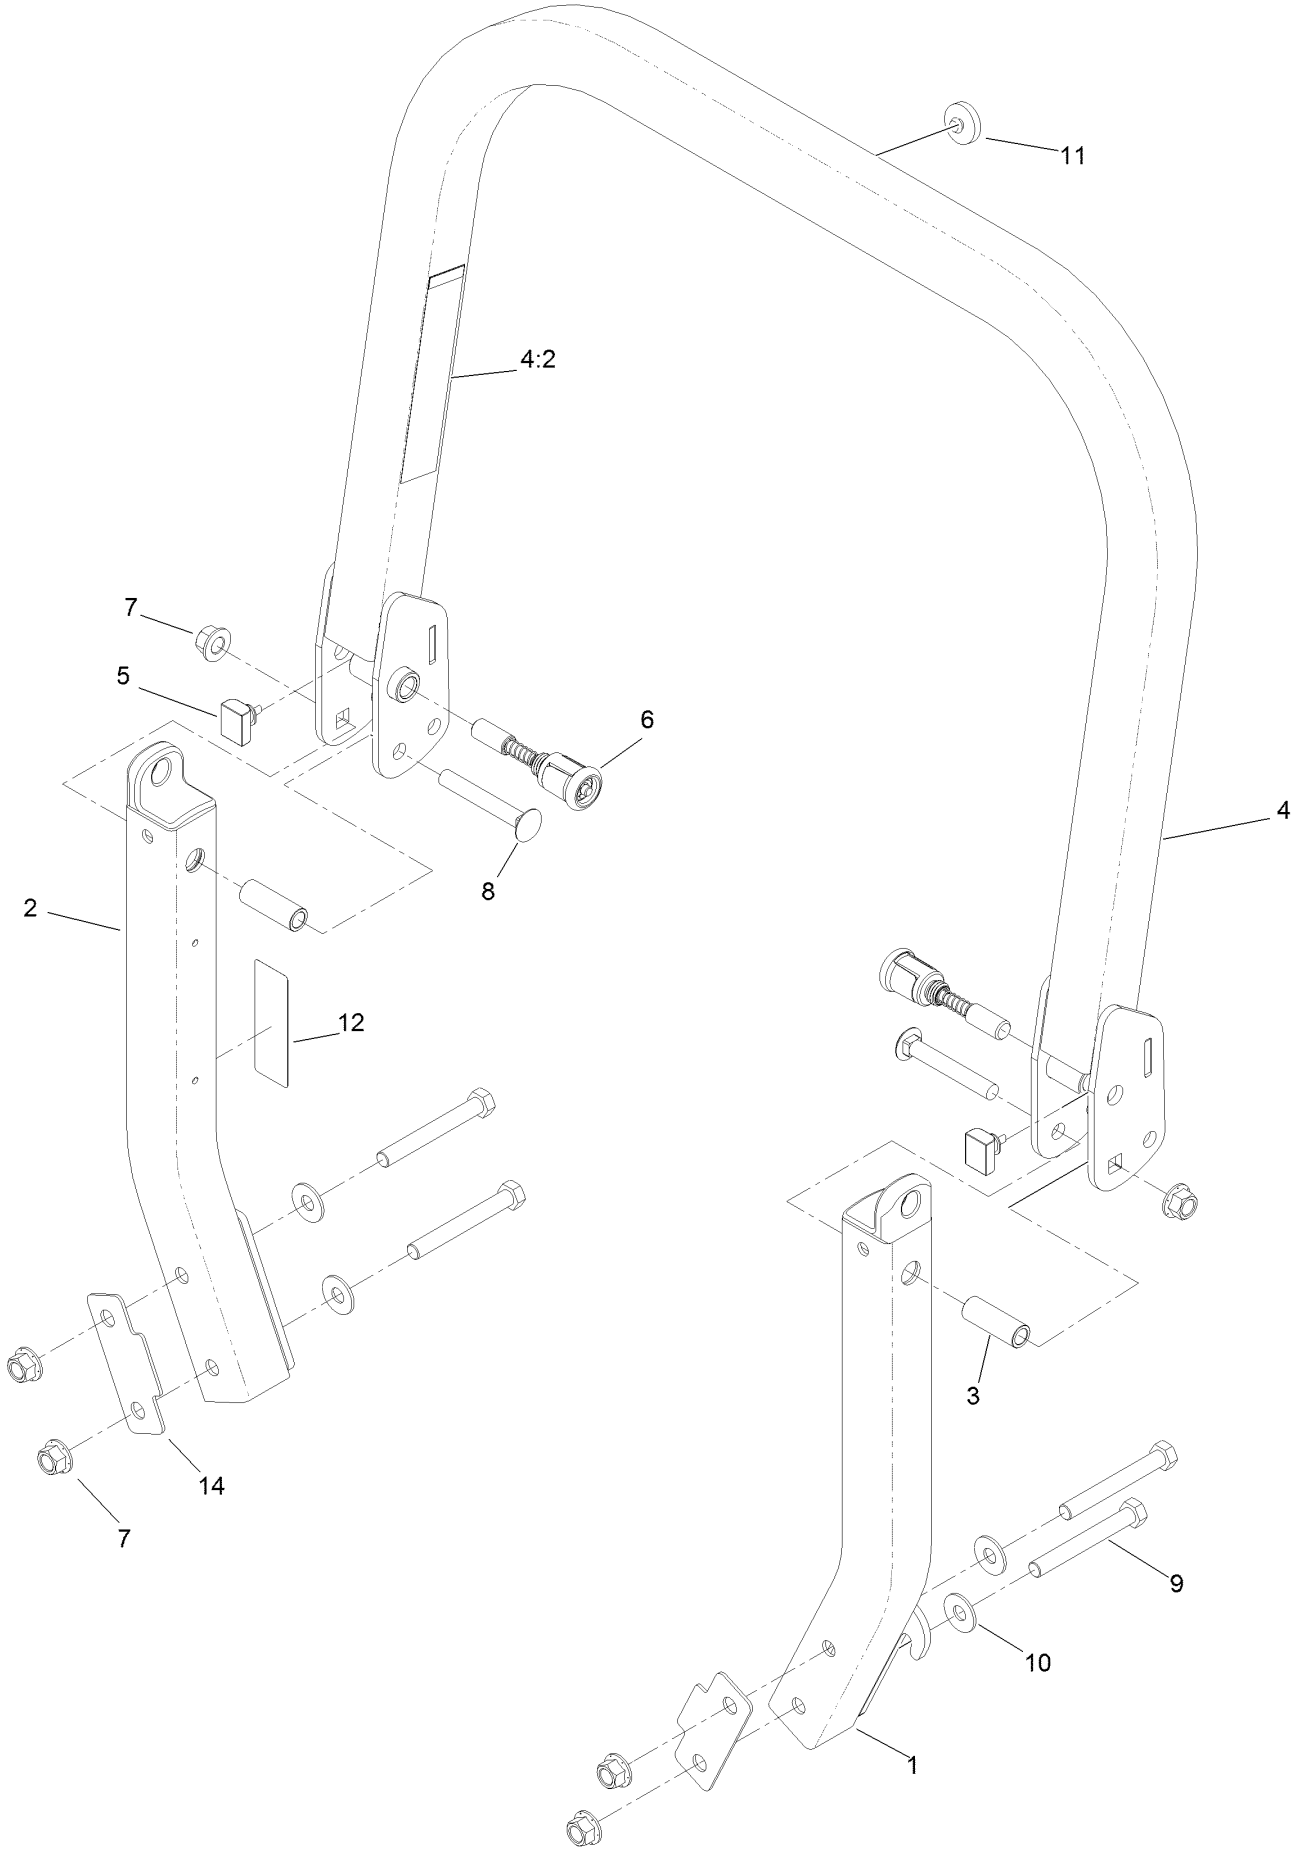


# Roll-Over Protection System Assembly No. 116-0231 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | | 1 | Leg-ROPS, LH ● |
| 2 | | 1 | Leg-ROPS, RH ● |
| 3 | 109-6653 | 2 | Spacer |
| 4 | | 1 | Upper ROPS ASM ● |
| 4:2 | 107-3069 | 1 | Decal-Warning, Folding ROPS |
| 5 | 109-5337 | 2 | Bumper-ROPS |
| 6 | 116-0104 | 2 | Pin-Spring |
| 7 | 99-5107 | 6 | Nut-Lock |
| 8 | 3233-10 | 2 | Screw-CARR |
| 9 | 325-35 | 4 | Screw-HH |
| 10 | 109-9505 | 4 | Washer-Spring |
| 11 | 109-9233 | 1 | Bumper-Push-In, Rubber |
| 12 | 117-0346 | 1 | Decal-Caution, Fuel Vent |
| 14 | 116-0960 | 2 | Spacer |

● Not serviced separately

# Caster Fork and Wheel Assembly

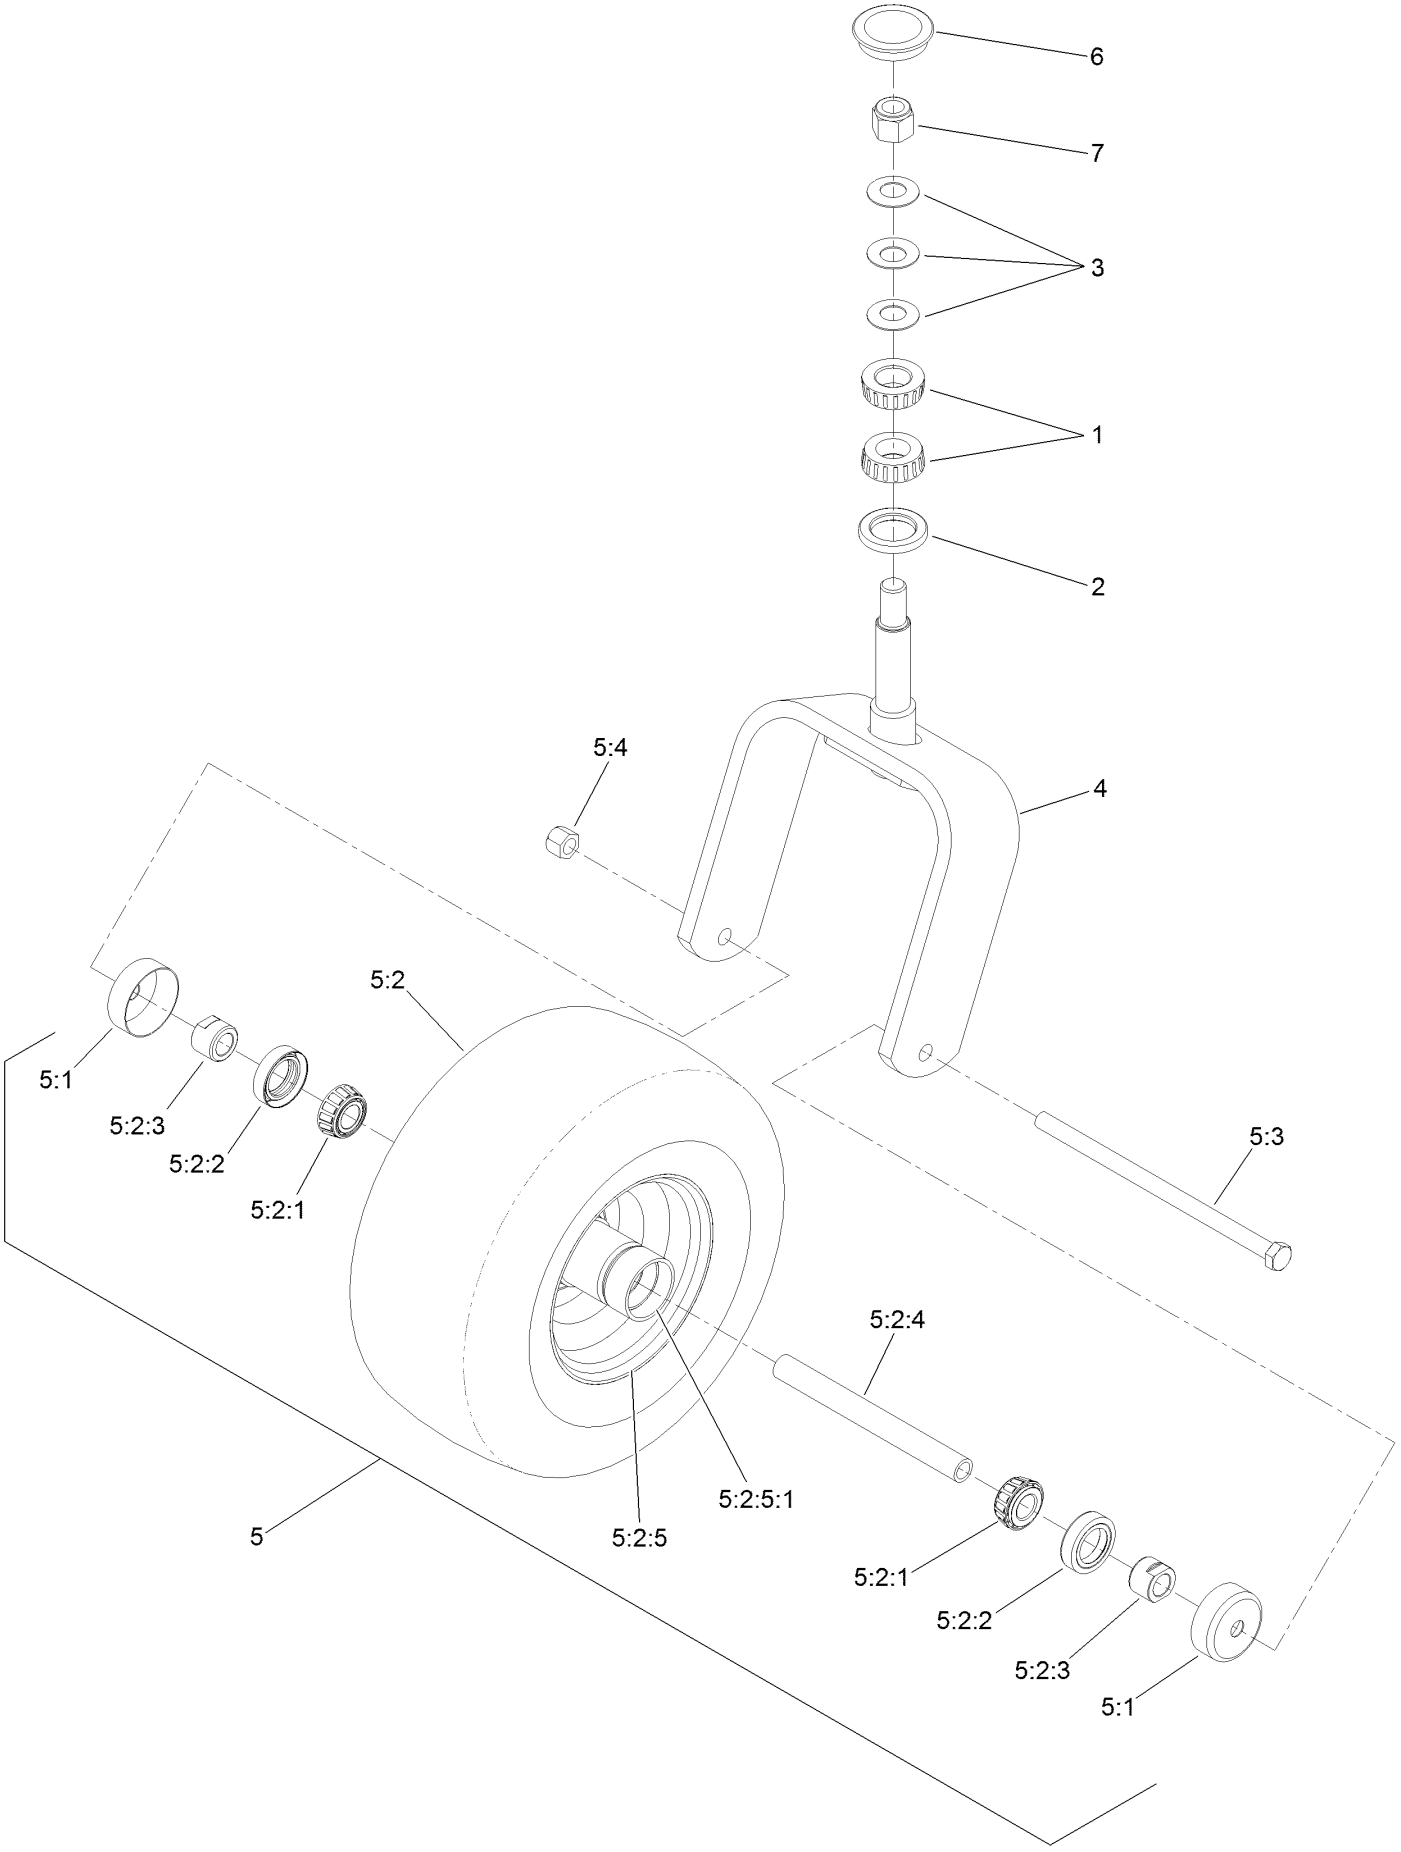


# Caster Fork and Wheel Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 1-543509 | 2 | Bearing-Roller, Tapered |
| 2 | 116-5647 | 1 | Seal-Grease |
| 3 | 1-633508 | 3 | Washer-Bellville |
| 4 | 116-6707-01 | 1 | Caster |
| 5 | 127-9528 | 1 | Wheel And Axle ASM |
| 5:1 | 103-2768 | 2 | Guard-Seal |
| 5:2 | | 1 | Wheel And Bearing ASM ● |
| 5:2:1 | 1-633585 | 2 | Bearing-Cone, Taper |
| 5:2:2 | 103-0063 | 2 | Seal-Caster |
| 5:2:3 | 103-3051 | 2 | Spacer-Nut ■ |
| 5:2:4 | 103-5156 | 1 | Axle-Caster |
| 5:2:5 | | 1 | Wheel And Tire ASM ● |
| 5:2:5:1 | 1-633584 | 1 | Bearing-Cup |
| 5:3 | 325-39 | 1 | Screw-HH |
| 5:4 | 3296-23 | 1 | Nut-Lock, NI |
| 6 | 103-4882 | 1 | Cap-Grease |
| 7 | 3296-51 | 1 | Nut-Lock, NI |

● Not serviced separately
■ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

# Hydraulic Pump, Idler and Belt Assembly

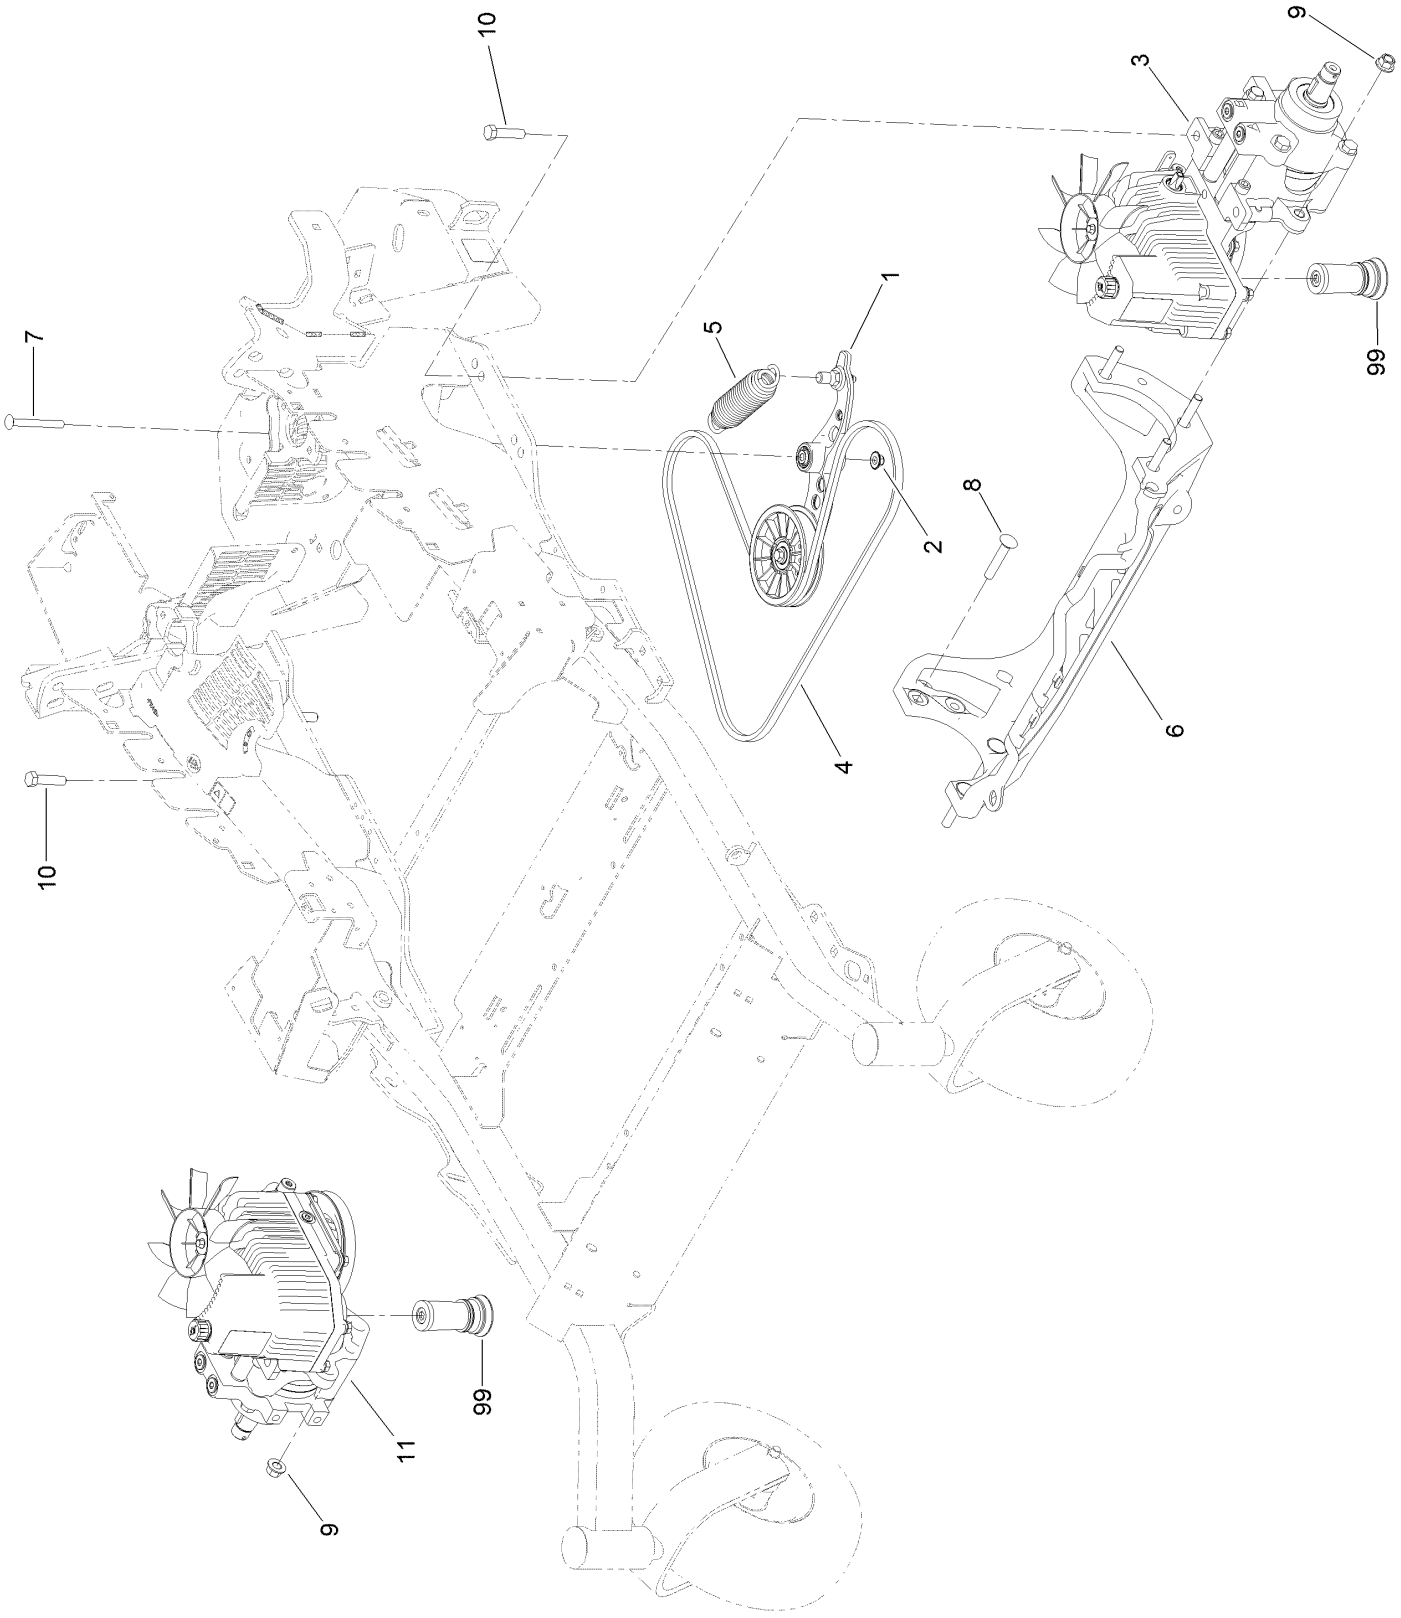


# Hydraulic Pump, Idler and Belt Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 116-1255 | 1 | Pump Idler ASM |
| 2 | 109-6658 | 1 | Nut-Flange, NI |
| 3 | 126-1319 | 1 | LH Hydro ASM (16Cc W/ Shock) |
| 4 | 109-3388 | 1 | Belt |
| 5 | 116-6317 | 1 | Spring-Extension |
| 6 | 116-7558 | 1 | Cradle-Hydro |
| 7 | 116-1502 | 1 | Bolt-Shoulder, Carriage |
| 8 | 126-0095 | 6 | Screw-CARR |
| 9 | 99-5107 | 6 | Nut-Lock |
| 10 | 325-8 | 4 | Screw-HH |
| 11 | 126-1320 | 1 | RH Hydro ASM (16Cc W/ Shock) |
| 99 | 114-4713 | 1 | Hypr-Oil 500 (Quart) ● |
| 99 | 114-4714 | 1 | Hypr-Oil 500 (Gallon) ● |
| 99 | 114-4715 | 1 | Hypr-Oil 500-5 (5 Gallon) ● |
| 99 | 117-0390 | 1 | Filter-Hydro |

● Not illustrated


# Pump Idler Assembly No. 116-1255

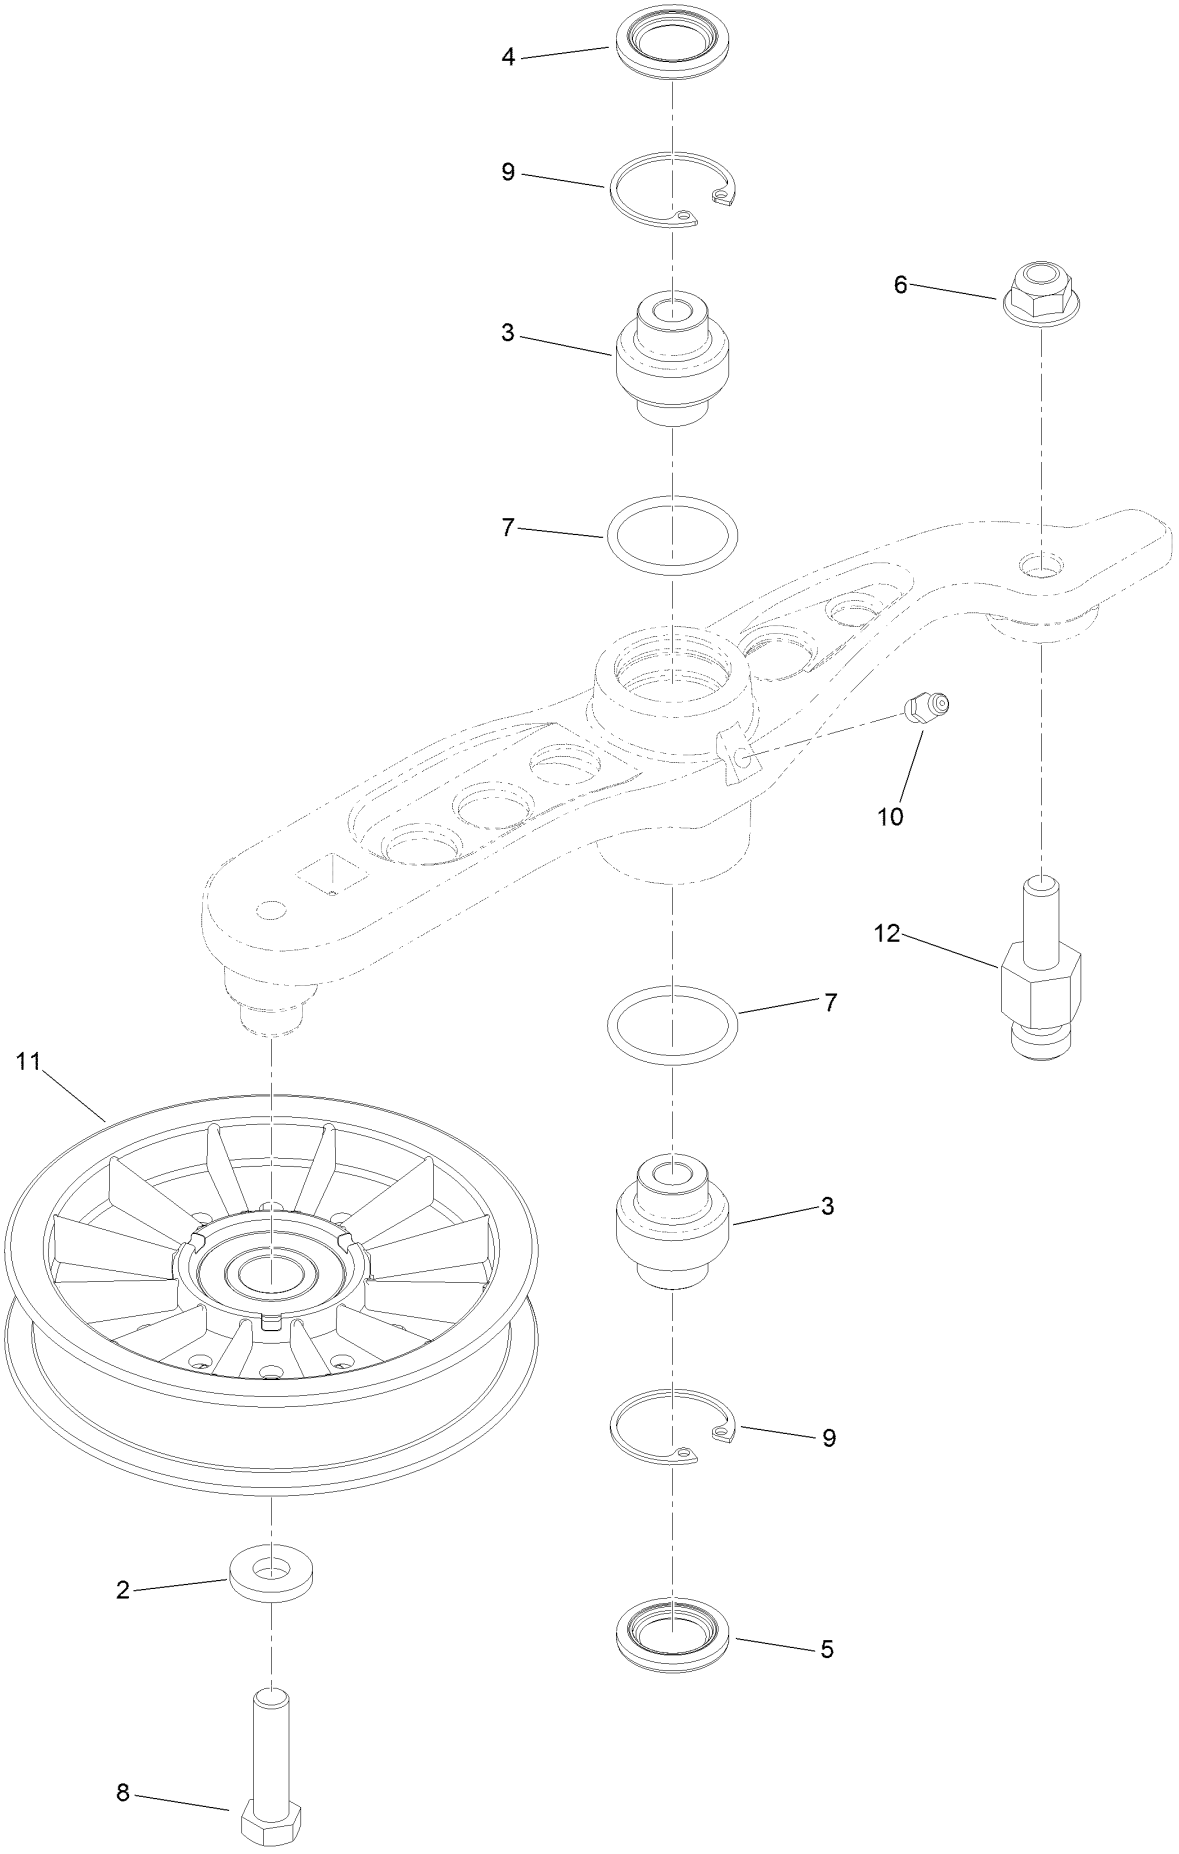

# Pump Idler Assembly No. 116-1255 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 2 | 43-0940 | 1 | Spacer |
| 3 | 103-3504 | 2 | Bearing-Spherical |
| 4 | 103-3505 | 1 | Seal-Double Lip |
| 5 | 103-3506 | 1 | Seal-Lip, Single |
| 6 | 109-6658 | 1 | Nut-Flange, NI |
| 7 | 106-7159 | 2 | O-Ring |
| 8 | 323-8 | 1 | Screw-HH |
| 9 | 32120-10 | 2 | Ring-Snap |
| 10 | 302-19 | 1 | Fitting-Grease |
| 11 | 109-8076 | 1 | Pulley-Idler |
| 12 | 116-3467 | 1 | Pin-Spring, Anchor |

# LH Hydro Assembly No. 126-1319

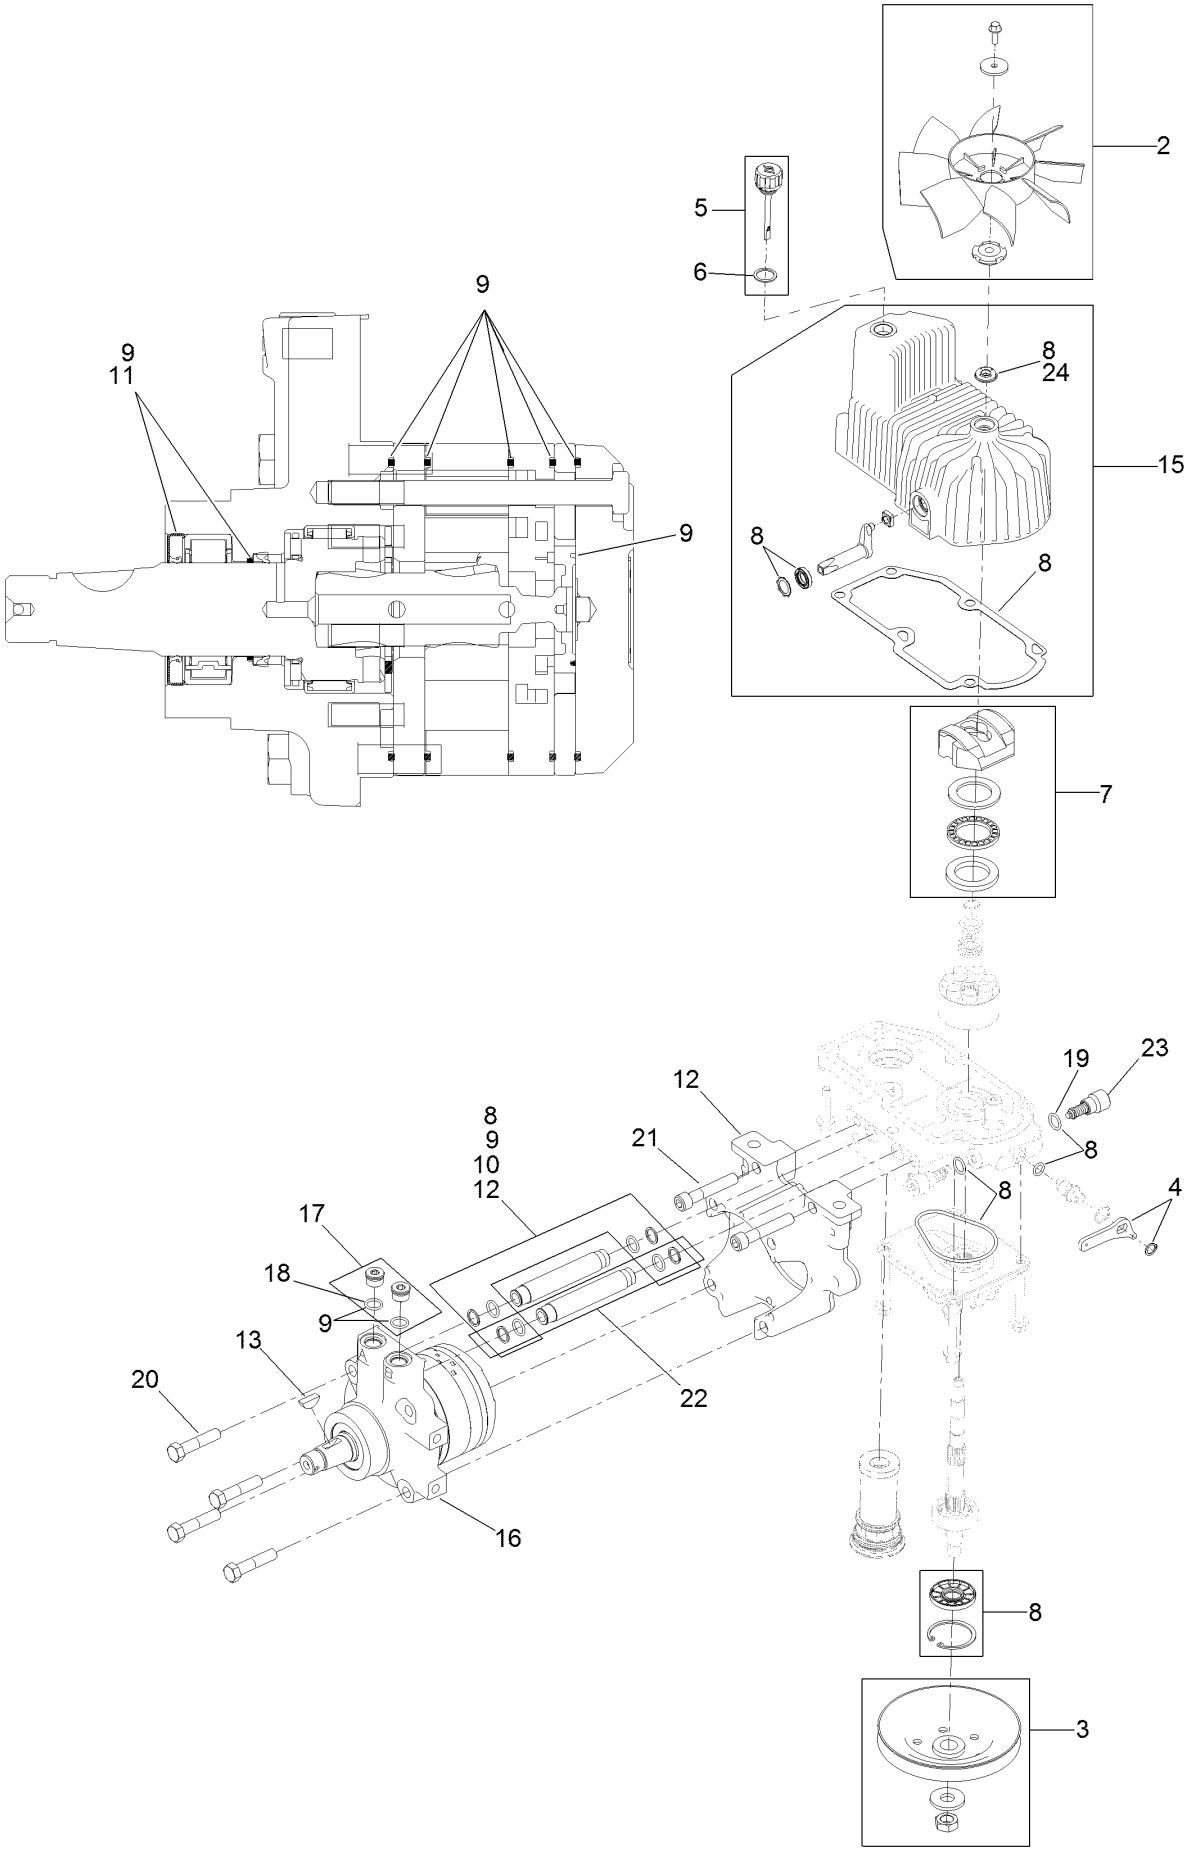


# LH Hydro Assembly No. 126-1319 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 2 | 116-0233 | 1 | Fan Kit |
| 3 | 116-0234 | 1 | Pulley Kit |
| 4 | 116-0235 | 1 | Handle-Bypass Valve, Hydro |
| 5 | 116-0236 | 1 | Dipstick-Hydro W/Gasket |
| 6 | 116-0237 | 1 | Gasket-Dipstick, Hydro |
| 7 | 116-1367 | 1 | Swash Block Kit |
| 8 | 116-1368 | 1 | Pump Seal Kit |
| 9 | 116-1369 | 1 | Motor Seal Kit |
| 10 | 116-1370 | 1 | Tube Seal Kit |
| 11 | 116-1371 | 1 | Output Shaft Seal Kit |
| 12 | 116-5469 | 1 | Nose Cup-Uht |
| 13 | 3257-42 | 1 | Key-Woodruff |
| 15 | 116-3287 | 1 | Housing-LH |
| 16 | 116-8917 | 1 | Motor-Hydraulic, LH 280Cc |
| 17 | 116-7901 | 1 | Magnetic Plugs Service Kit |
| 18 | 76-1900 | 2 | O-Ring |
| 19 | 116-8662 | 2 | O-Ring-Check Valve |
| 20 | 116-8974 | 4 | Screw HH |
| 21 | 116-8975 | 2 | Screw-HSH |
| 22 | 116-9922 | 2 | Hydraulic Tube Kit |
| 23 | 126-7467 | 2 | Shock Valve, 16Cc Hydro |
| 24 | 126-7711 | 1 | Seal-Fan Drive |
| 99 | 116-1373 | 1 | Flow Test Kit ● |

● Not illustrated

# RH Hydro Assembly No. 126-1320

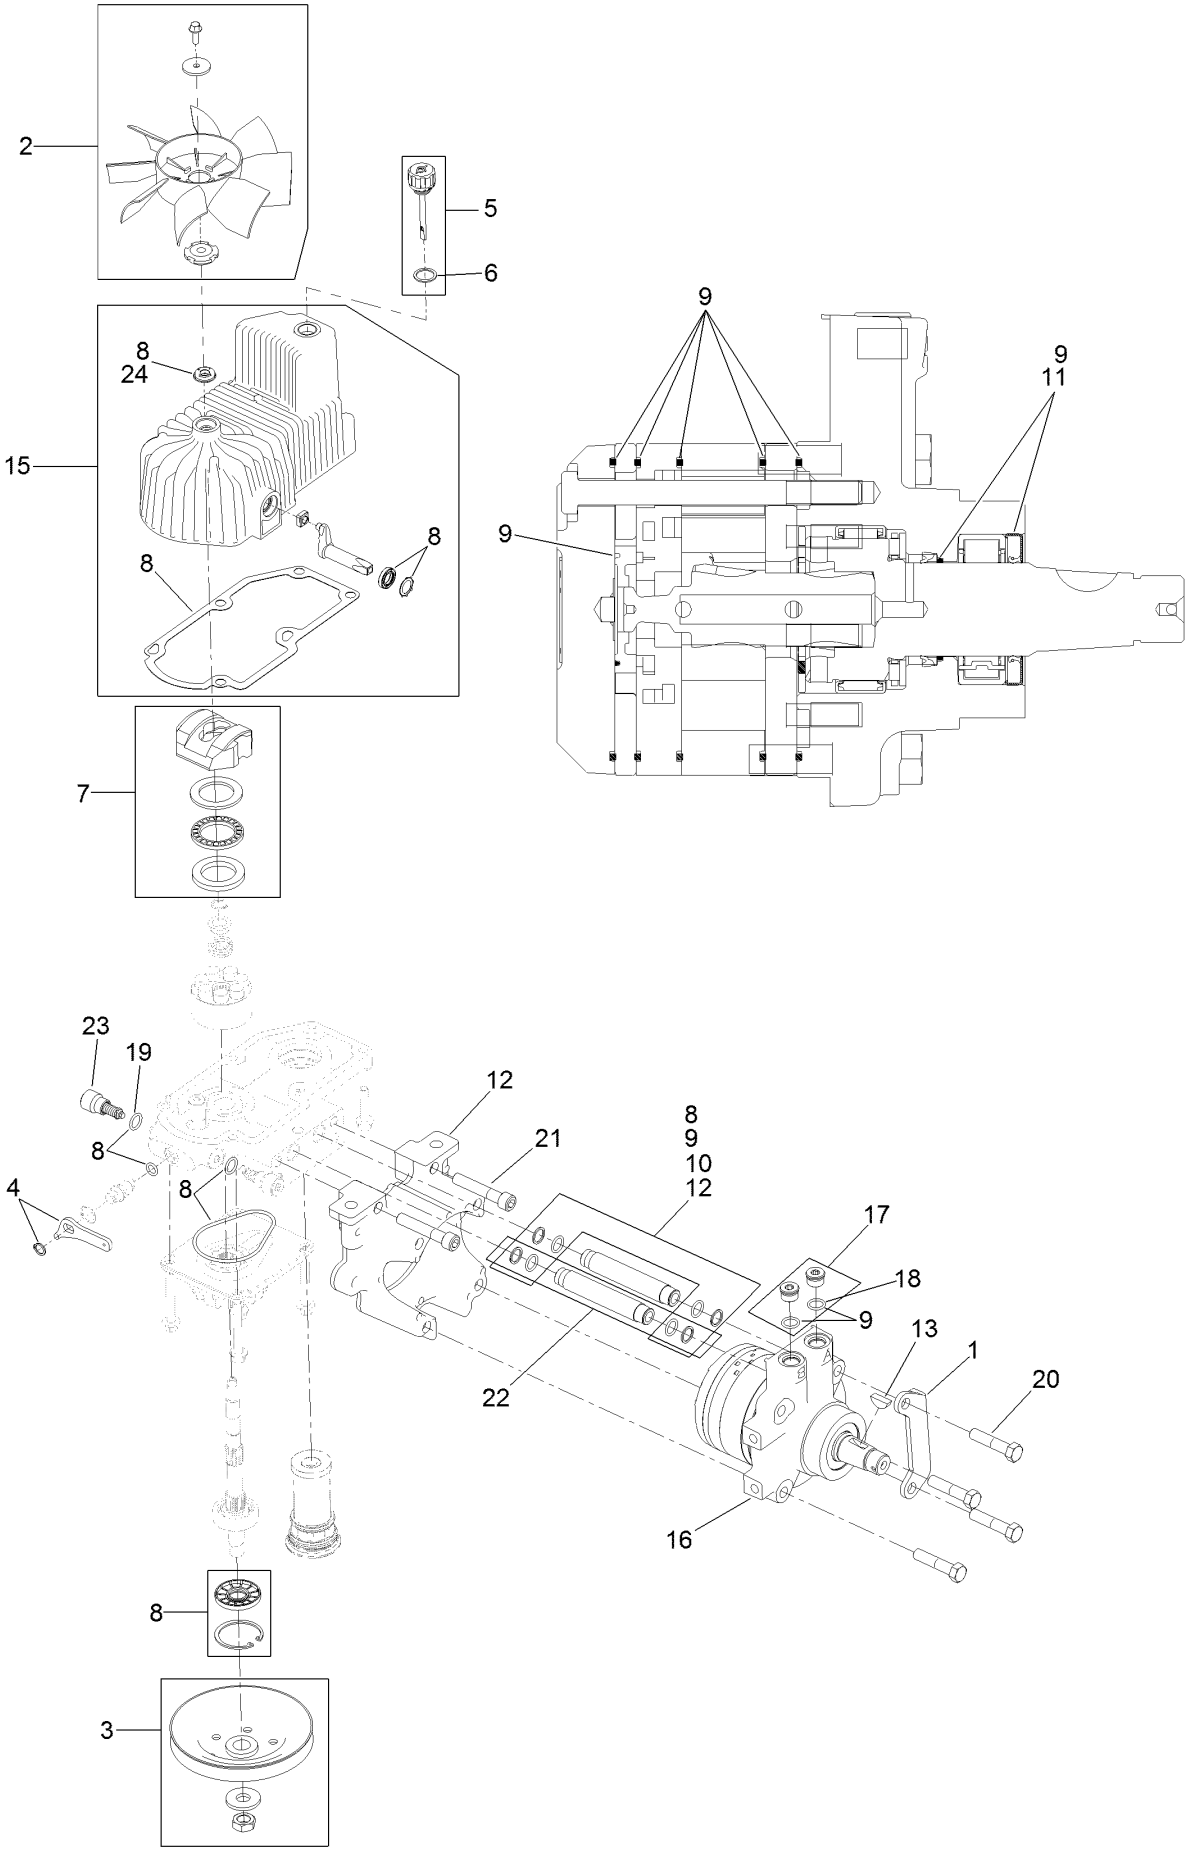


# RH Hydro Assembly No. 126-1320 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 116-9063 | 1 | Mount-Shoe, Horse |
| 2 | 116-0233 | 1 | Fan Kit |
| 3 | 116-0234 | 1 | Pulley Kit |
| 4 | 116-0235 | 1 | Handle-Bypass Valve, Hydro |
| 5 | 116-0236 | 1 | Dipstick-Hydro W/Gasket |
| 6 | 116-0237 | 1 | Gasket-Dipstick, Hydro |
| 7 | 116-1367 | 1 | Swash Block Kit |
| 8 | 116-1368 | 1 | Pump Seal Kit |
| 9 | 116-1369 | 1 | Motor Seal Kit |
| 10 | 116-1370 | 1 | Tube Seal Kit |
| 11 | 116-1371 | 1 | Output Shaft Seal Kit |
| 12 | 116-5469 | 1 | Nose Cup-Uht |
| 13 | 3257-42 | 1 | Key-Woodruff |
| 15 | 116-3288 | 1 | Housing-RH |
| 16 | 116-8918 | 1 | Motor-Hydraulic, RH 280Cc |
| 17 | 116-7901 | 1 | Magnetic Plugs Service Kit |
| 18 | 76-1900 | 2 | O-Ring |
| 19 | 116-8662 | 2 | O-Ring-Check Valve |
| 20 | 116-8974 | 4 | Screw HH |
| 21 | 116-8975 | 2 | Screw-HSH |
| 22 | 116-9922 | 2 | Hydraulic Tube Kit |
| 23 | 126-7467 | 2 | Shock Valve, 16Cc Hydro |
| 24 | 126-7711 | 1 | Seal-Fan Drive |
| 99 | 116-1373 | 1 | Flow Test Kit ● |
| 99 | 116-4245 | 1 | Puller-Pulley ● |

● Not illustrated


# Parking Brake and Wheel Assembly

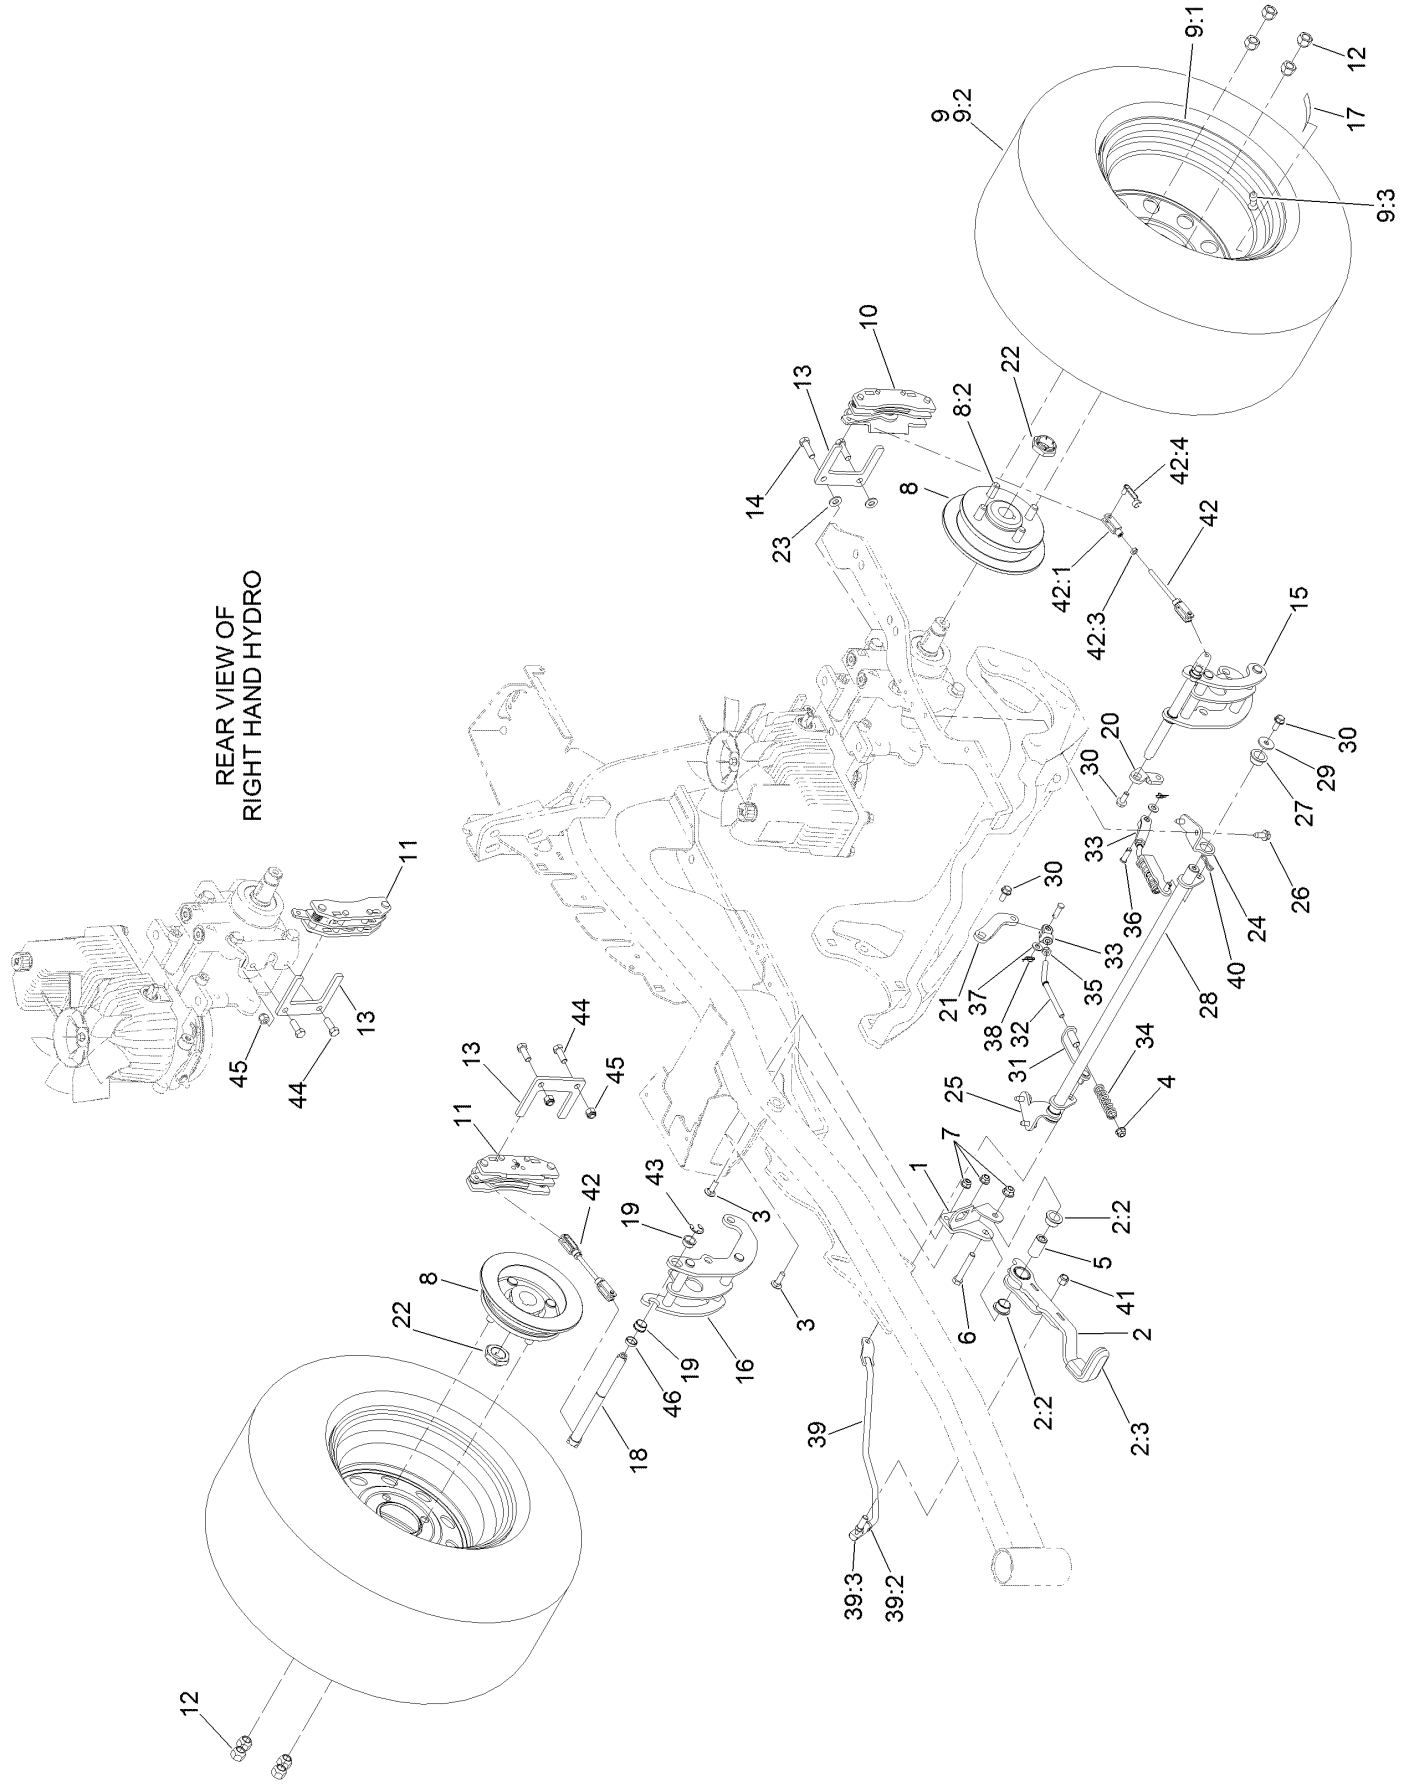

# Parking Brake and Wheel Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 116-9096-01 | 1 | Bracket-Mount |
| 2 | 131-4623 | 1 | Brake Lever ASM W/ Grip |
| 2:2 | 109-8054 | 2 | Bushing-Flange |
| 2:3 | 1-633268 | 1 | Grip-Lever |
| 3 | 3230-2 | 2 | Bolt-CARR |
| 4 | 104-8300 | 4 | Nut-Flange, NI |
| 5 | 116-9117 | 1 | Handle-Pivot, Brake |
| 6 | 323-11 | 1 | Screw-HH |
| 7 | 104-8301 | 1 | Nut-Flange, NI |
| 8 | 116-1746 | 2 | Wheel Hub ASM |
| 8:2 | 116-1696 | 4 | Stud-Wheel |
| 9 | 127-9520 | 2 | Wheel And Tire ASM |
| 9:1 | 127-9517 | 1 | Wheel |
| 9:2 | 1-633993 | 1 | Tire |
| 9:3 | 232-27 | 1 | Stem-Valve |
| 10 | 109-2889 | 1 | Caliper-Brake |
| 11 | 116-9103 | 1 | Caliper-Brake, RH |
| 12 | 242-50 | 8 | Nut-Lug |
| 13 | 109-0958 | 2 | Plate-Mount, Brake |
| 14 | 92-5727 | 2 | Screw-Lock, Patch |
| 15 | 126-4248 | 1 | Mount-Bellcrank, LH |
| 16 | 126-4249 | 1 | Mount-Bellcrank, RH |
| 17 | 126-2055 | 2 | Decal-Torque, Wheel Hub Lug |
| 18 | 126-4251 | 2 | Bellcrank |
| 19 | 126-6199 | 4 | Bushing-Igus |
| 20 | 126-3715 | 1 | Arm-Inner, LH |
| 21 | 126-3716 | 1 | Arm-Inner, RH |
| 22 | 116-1399 | 2 | Locknut |
| 23 | 3256-24 | 2 | Washer-Flat |
| 24 | 116-9681 | 1 | Mount-Pivot, LH |
| 25 | 116-9682 | 1 | Mount-Pivot, RH |
| 26 | 32144-70 | 4 | Screw-HWHTF |
| 27 | 109-8054 | 2 | Bushing-Flange |
| 28 | 116-9080 | 1 | Shaft-Cross |
| 29 | 115-7109 | 2 | Washer-Flat |
| 30 | 98-9940 | 4 | Screw |
| 31 | 116-9609 | 2 | Bracket-L |
| 32 | 116-9086 | 2 | Linkage-Mid |
| 33 | 126-3693 | 2 | Yoke-Offset |
| 34 | 116-9085 | 2 | Spring-Compression |
| 35 | 3220-2 | 2 | Nut-Jam |
| 36 | 1-808280 | 2 | Pin-Clevis |
| 37 | 3256-23 | 4 | Washer-Flat |
| 38 | 116-6639 | 2 | Pin-Cotter, Locking |
| 39 | 116-9102 | 1 | Front Linkage ASM |
| 39:2 | 94-7572 | 1 | End-Tie Rod, RH |
| 39:3 | 3220-3 | 1 | Nut-HJ |
| 40 | 119-1415 | 2 | Pin-Cotter, Locking |
| 41 | 3296-6 | 1 | Nut-Lock |
| 42 | 116-9071 | 2 | Rear Linkage ASM |
| 42:1 | 116-9070 | 2 | Yoke |
| 42:3 | 3220-1 | 1 | Nut-Jam |
| 42:4 | 126-6395 | 2 | Pin-Clevis, Spring |
| 43 | 32120-19 | 2 | E-Ring |
| 44 | 323-6 | 2 | Screw-HH |
| 45 | 3296-39 | 2 | Nut-Lock, NI |
| 46 | 126-6200 | 2 | Spacer |


# Fuel Tank Mounting Assembly

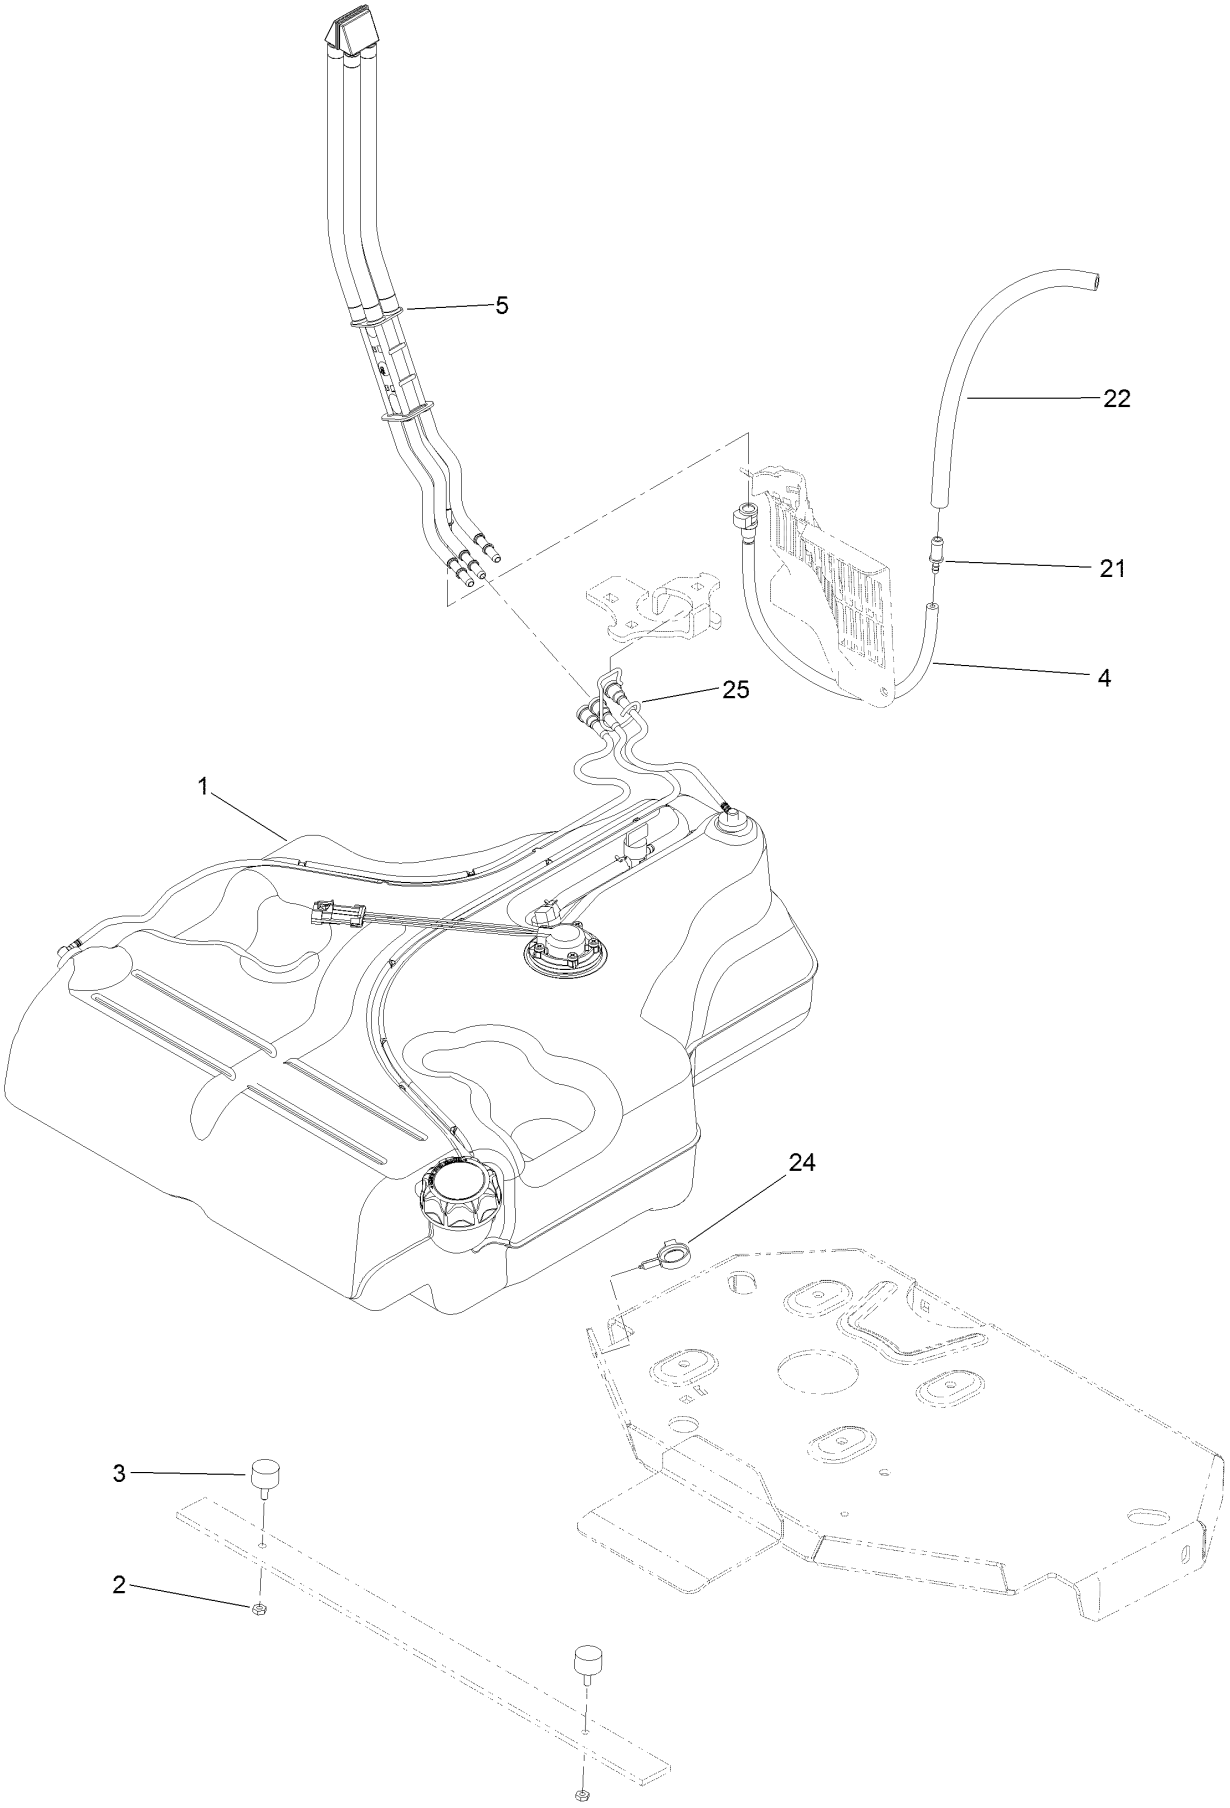

# Fuel Tank Mounting Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 116-3979 | 1 | Fuel Tank ASM |
| 2 | 3218-1 | 2 | Nut-Jam |
| 3 | 116-6380 | 2 | Bumper-Rubber (W/ Stud) |
| 4 | 116-3977 | 1 | Hose ASM |
| 5 | 109-9491 | 1 | Fuel Manifold Vent ASM |
| 21 | 98-2952 | 1 | Fitting-Straight |
| 22 | 116-5087 | 1 | Hose-Fuel |
| 24 | 105-1853 | 1 | Clamp-Hose |
| 25 | 116-6005 | 1 | Retainer-Line, Vapor |


# Fuel Tank Assembly No. 116-3979

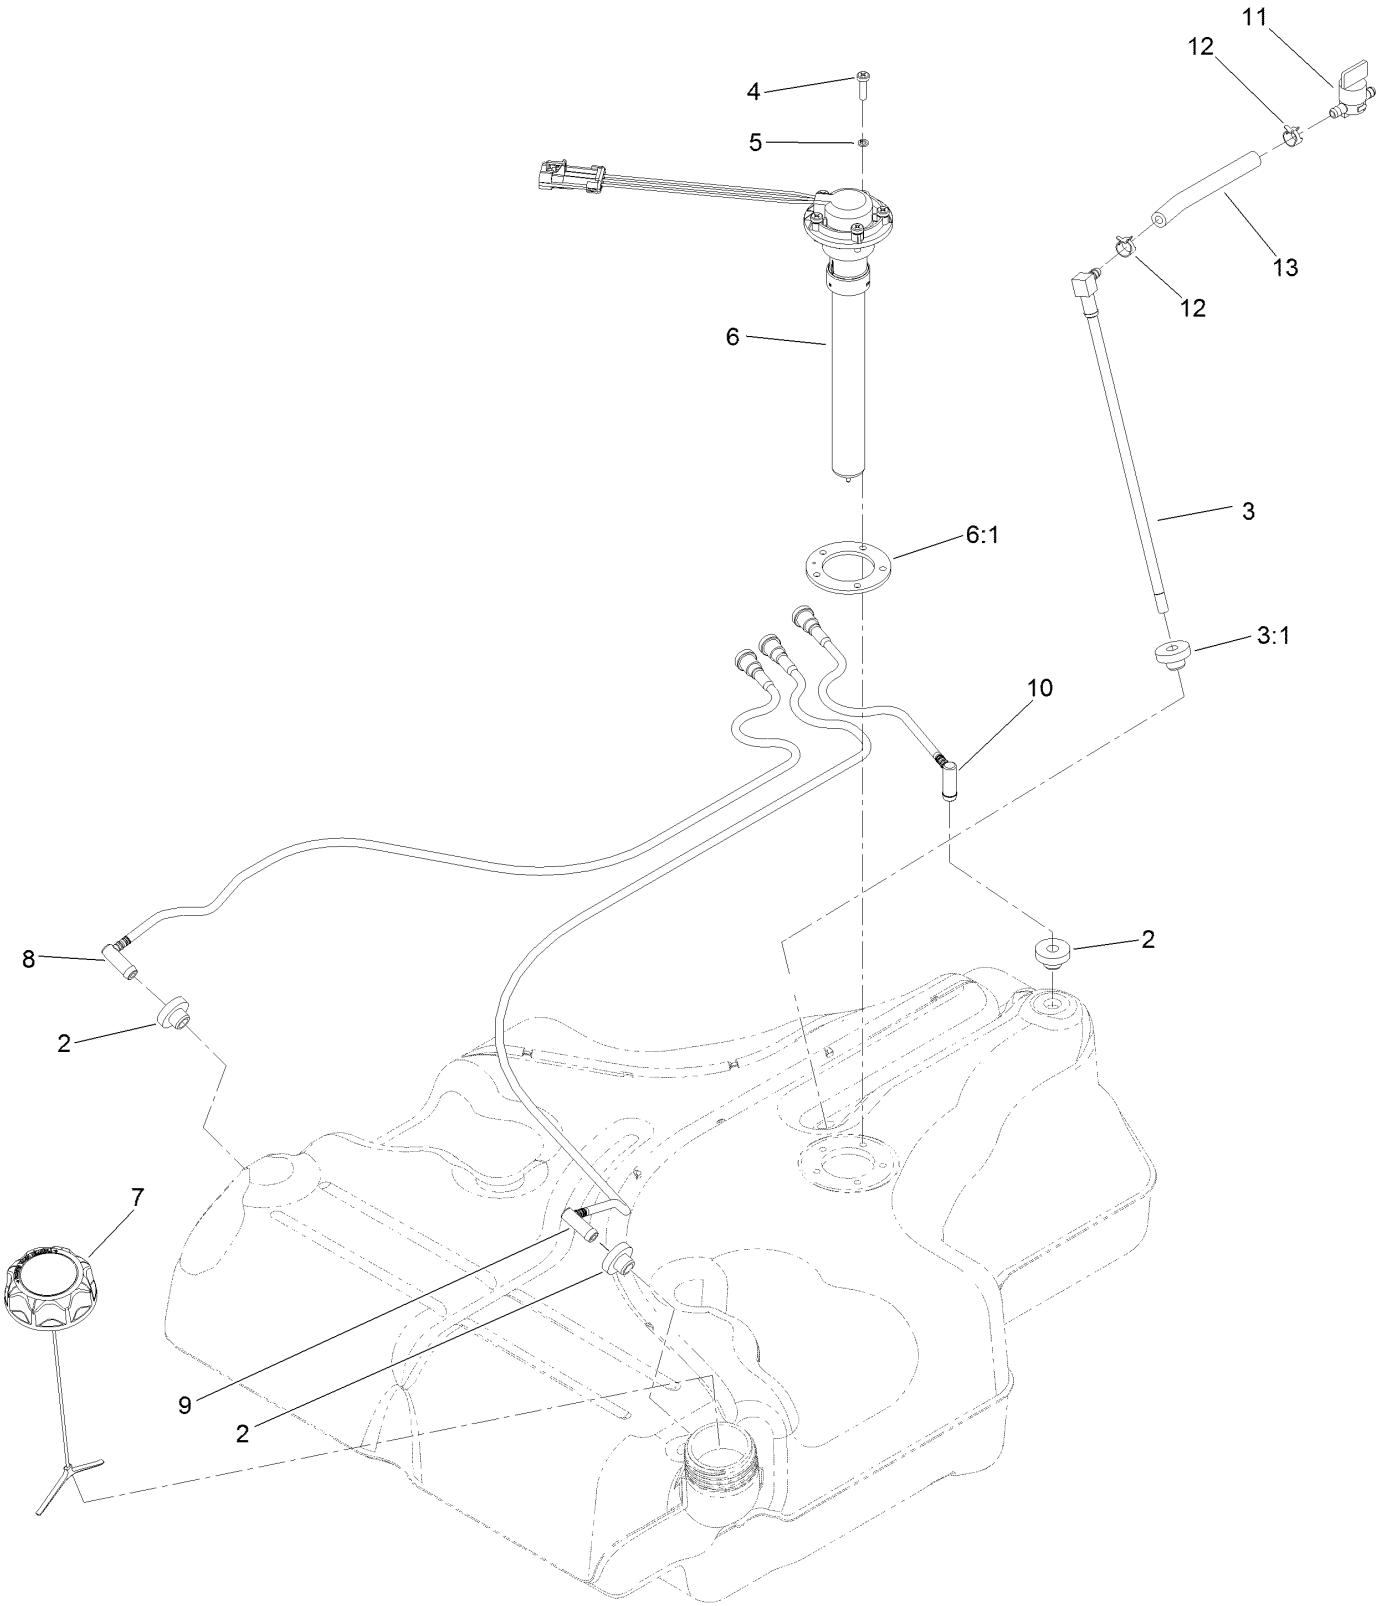

# Fuel Tank Assembly No. 116-3979 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 2 | 46-6560 | 4 | Bushing |
| 3 | 116-2459 | 1 | Fuel Line Kit (With Grommet) |
| 3:1 | 46-6560 | 1 | Bushing |
| 4 | 9107944 | 5 | Screw-Pan |
| 5 | 3253-17 | 5 | Washer-Lock |
| 6 | 116-0003 | 1 | Sender-Level, Fuel |
| 6:1 | 109-9620 | 1 | Gasket-Sender, Fuel |
| 7 | 126-1789 | 1 | Cap-Fuel, Ratcheting |
| 8 | 116-2460 | 1 | RH Vent Line Kit (With Grommet) |
| 9 | 116-2461 | 1 | LH Vent Line Kit (With Grommet) |
| 10 | 116-2462 | 1 | Rear Vent Line Kit (With Grommet) |
| 11 | 1-603770 | 1 | Valve-Fuel |
| 12 | 2412-98 | 2 | Clamp-Hose |
| 13 | 109-0650 | 1 | Hose-Fuel |

# Control Assembly

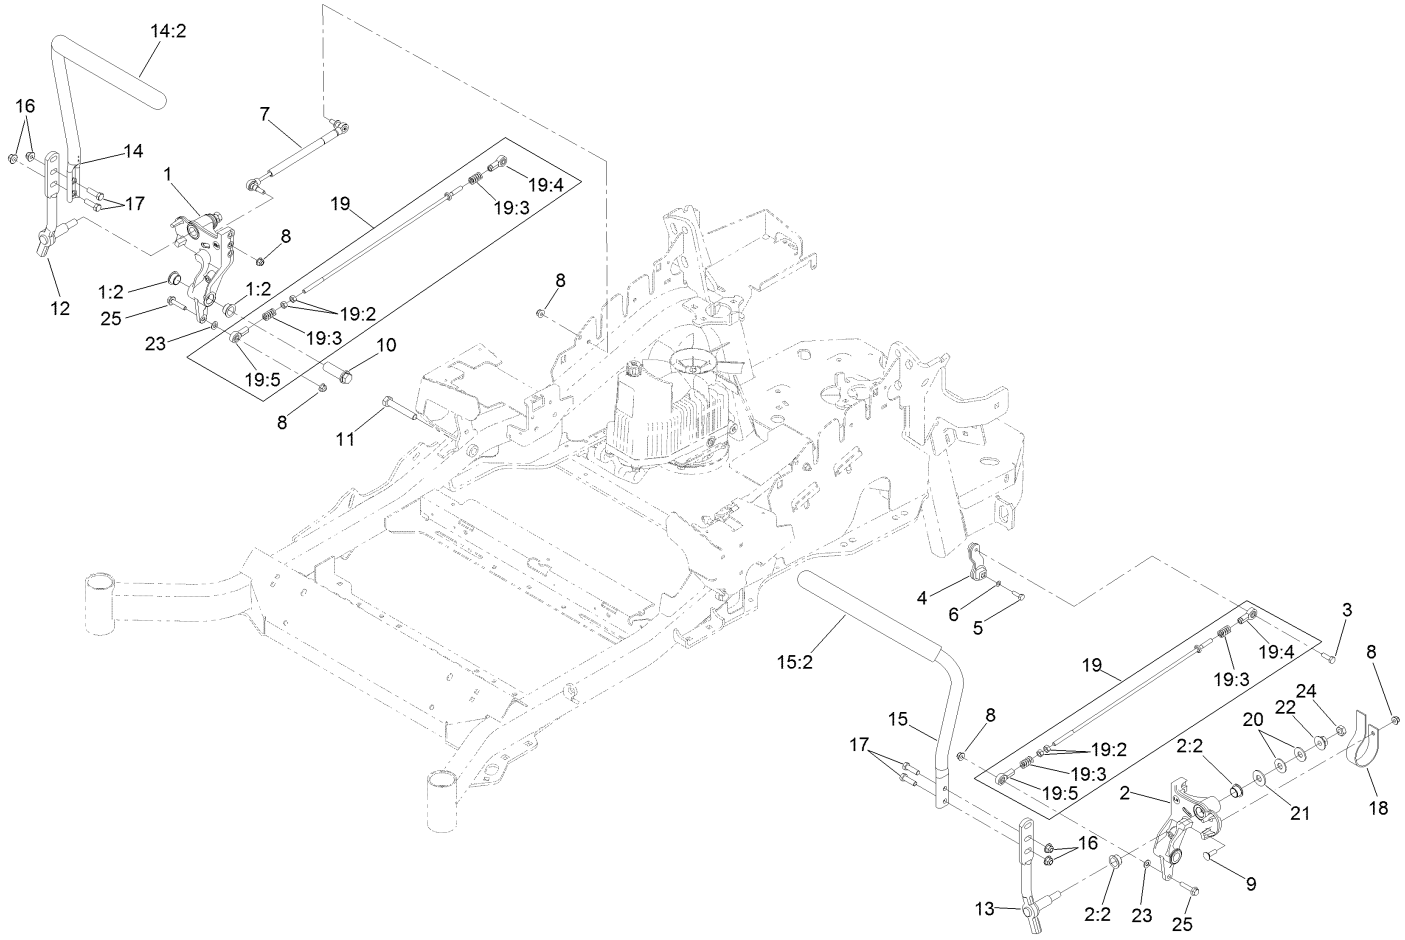


# Control Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 116-0880 | 1 | RH Motion Control And Bushing ASM |
| 1:2 | 109-8054 | 4 | Bushing-Flange |
| 2 | 116-0881 | 1 | LH Motion Control And Bushing ASM |
| 2:2 | 109-8054 | 4 | Bushing-Flange |
| 3 | 116-0648 | 2 | Screw-HH, Thread Locking ● |
| 4 | 109-4581 | 2 | Arm-Control, Pump |
| 5 | 9080046 | 2 | Screw-HH ● |
| 6 | 1-303435 | 2 | Washer-Spring |
| 7 | 116-0027 | 2 | Damper-Control, Motion |
| 8 | 104-8300 | 8 | Nut-Flange, NI |
| 9 | 3230-2 | 2 | Bolt-CARR |
| 10 | 109-5891 | 2 | Hub-Threaded |
| 11 | 325-12 | 2 | Screw-HH |
| 12 | 116-0039 | 1 | Lever-Control Motion, RH |
| 13 | 116-0040 | 1 | Lever-Control Motion, LH |
| 14 | 131-8831 | 1 | RH Steering Handle ASM |
| 14:2 | 109-5668 | 1 | Grip-Control, Lever |
| 15 | 131-8832 | 1 | LH Steering Handle ASM |
| 15:2 | 109-5668 | 1 | Grip-Control, Lever |
| 16 | 104-8301 | 4 | Nut-Flange, NI |
| 17 | 323-7 | 4 | Screw-HH |
| 18 | 109-5575 | 2 | Spring-Leaf |
| 19 | 109-8106 | 2 | Front Pump Linkage ASM |
| 19:2 | 3219-2 | 2 | Nut-Hex |
| 19:3 | 1-323245 | 2 | Spring-Compression |
| 19:4 | 1-633152 | 1 | Balljoint-LH |
| 19:5 | 1-543017 | 1 | Balljoint-RH |
| 20 | 109-9505 | 4 | Washer-Spring |
| 21 | 3256-6 | 2 | Washer-Flat |
| 22 | 32128-56 | 2 | Nut-HF |
| 23 | 3256-23 | 2 | Washer-Flat |
| 24 | 3218-5 | 2 | Nut-Jam |
| 25 | 115-1794 | 2 | Screw-HHF |

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.


# Console and Control Panel Assembly

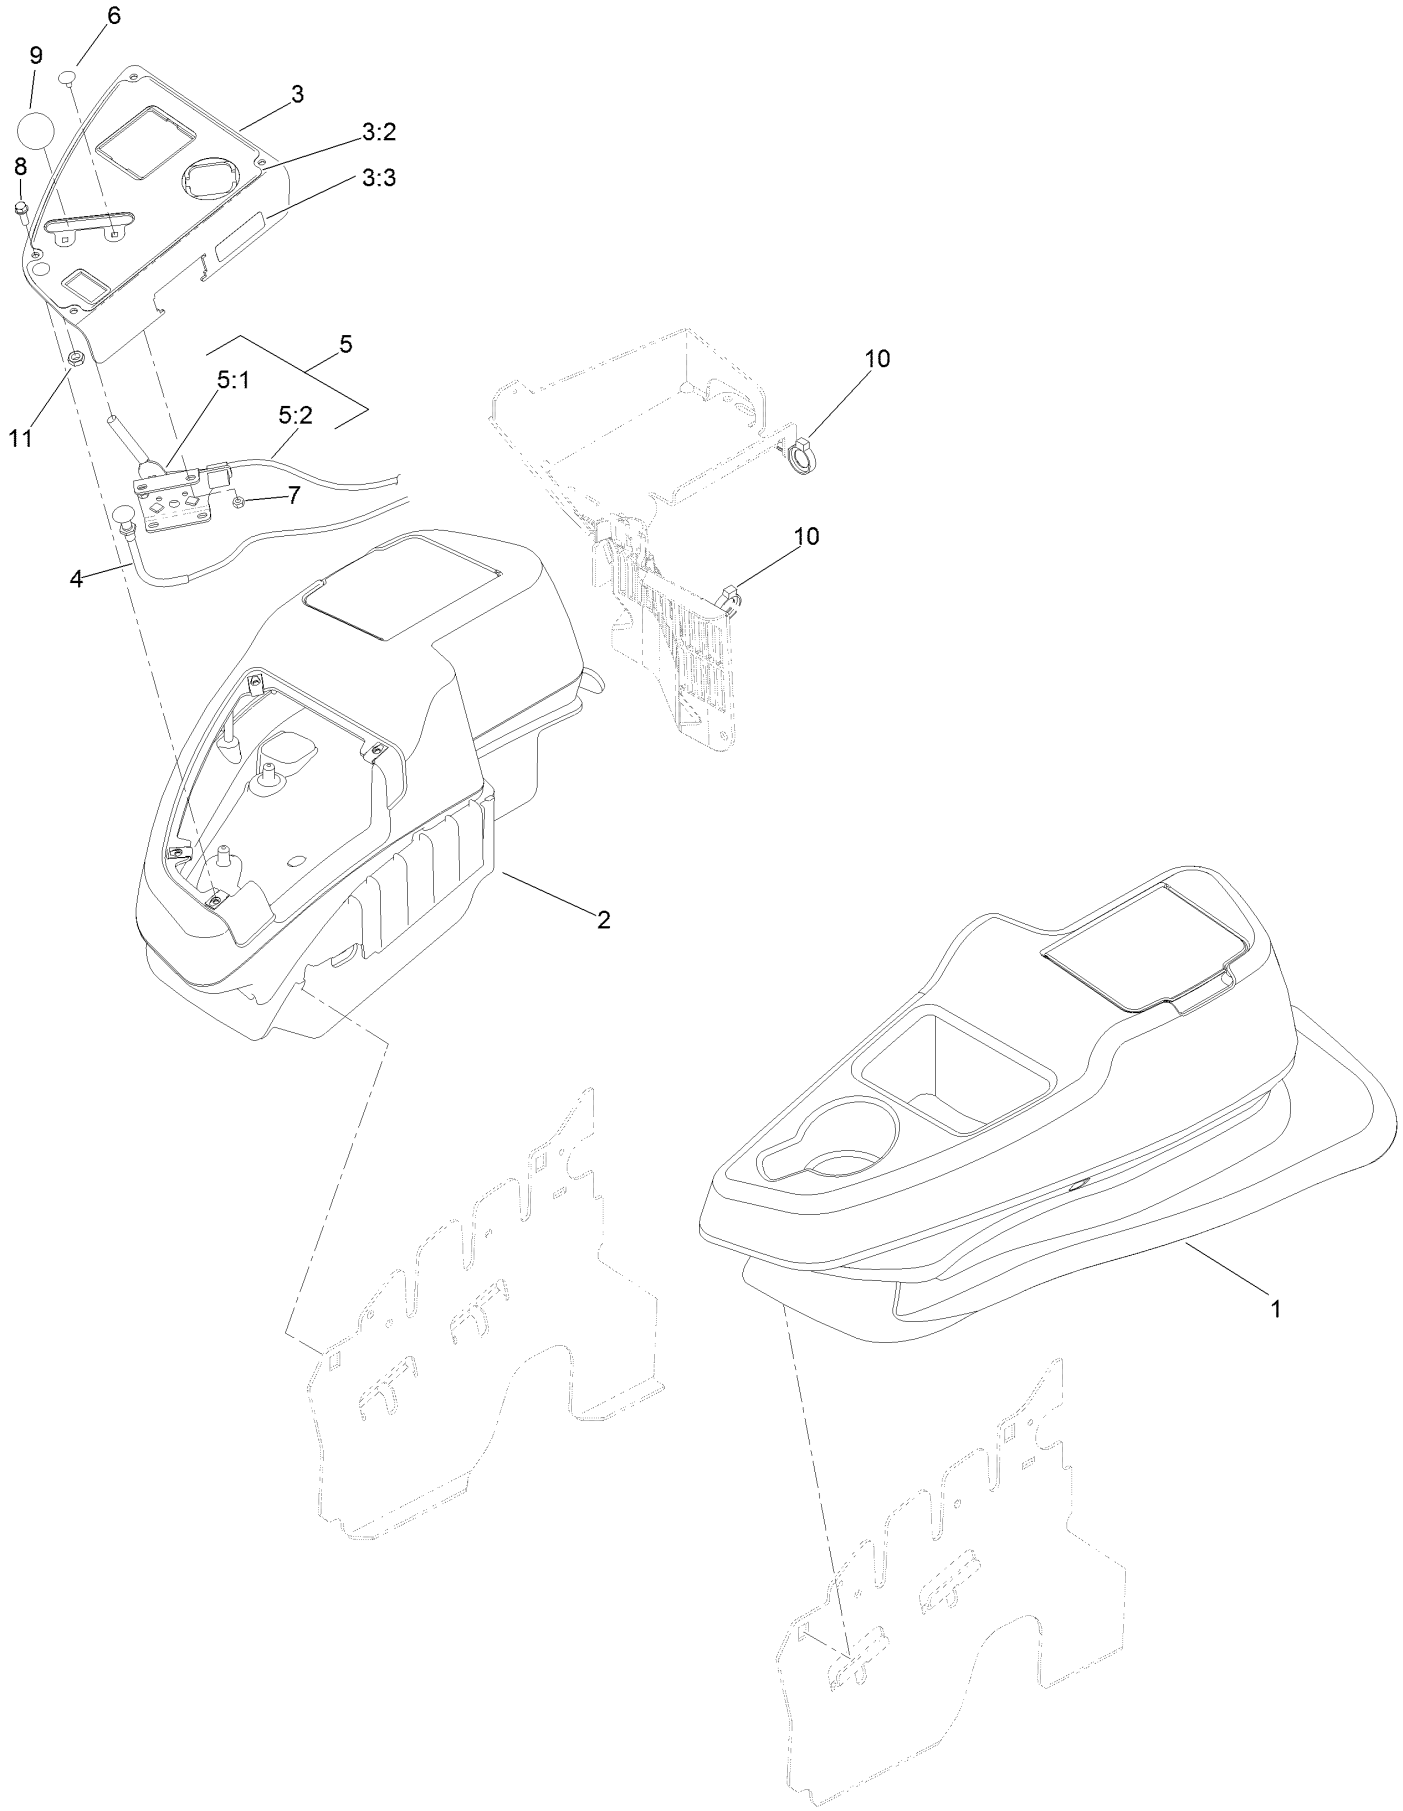

# Console and Control Panel Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 115-7401 | 1 | LH Console ASM |
| 2 | 115-7400 | 1 | RH Console ASM |
| 3 | 114-9836 | 1 | Control Panel ASM |
| 3:2 | 120-5897 | 1 | Decal-Panel, Control |
| 3:3 | 114-4466 | 1 | Decal-Fuses |
| 4 | 115-2753 | 1 | Control-Choke |
| 5 | 115-2752 | 1 | Throttle Control ASM |
| 5:1 | 112-2334 | 1 | Lever-Throttle |
| 5:2 | 115-3868 | 1 | Cable-Throttle |
| 6 | 1-807513 | 2 | Bolt-CARR |
| 7 | 3296-2 | 2 | Nut-Lock, NI |
| 8 | 32105-15 | 4 | Screw-HWH |
| 9 | 1-603175 | 1 | Knob-Ball |
| 10 | 105-1853 | 3 | Clamp-Hose |
| 11 | 3220-3 | 1 | Nut-HJ |


# LH Console Assembly No. 115-7401

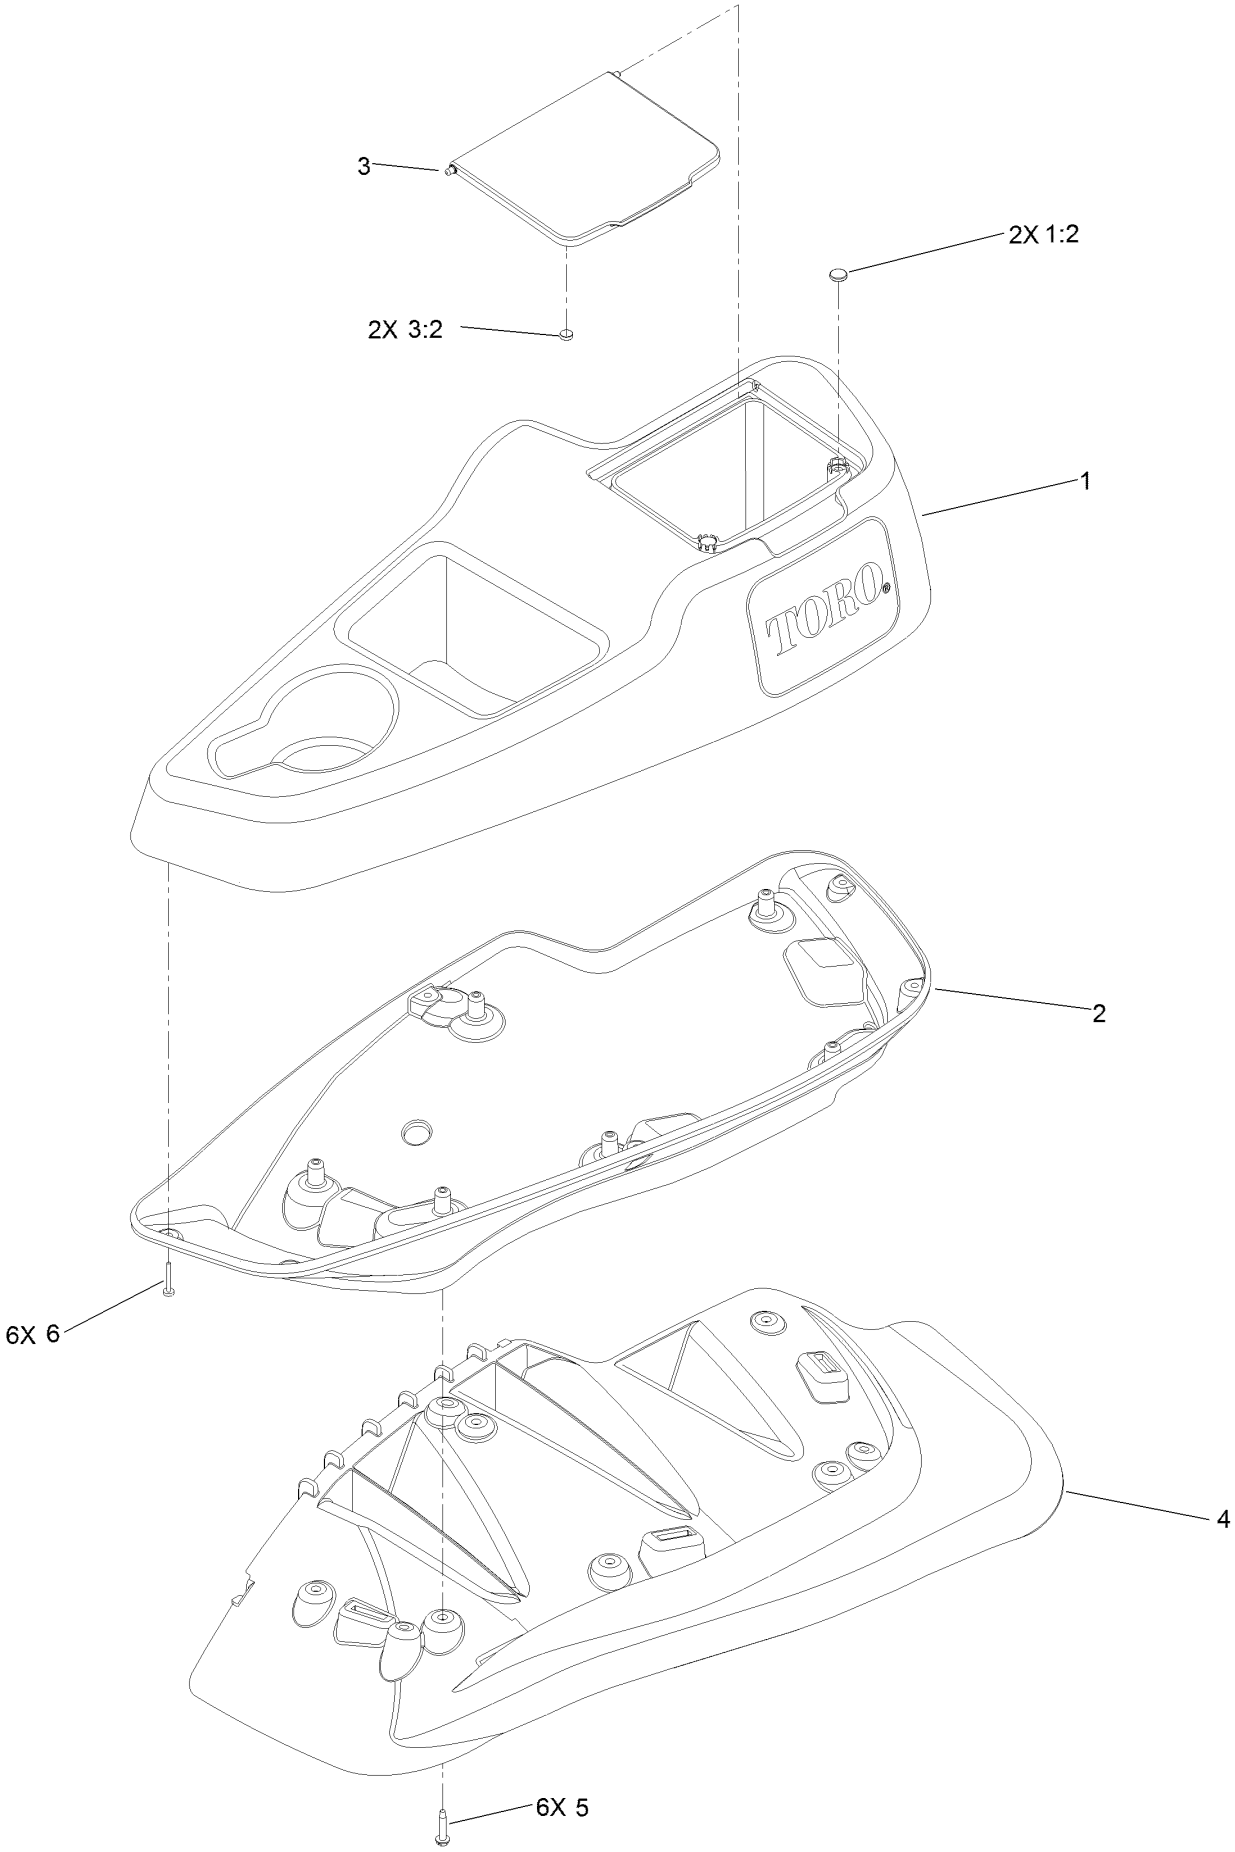

# LH Console Assembly No. 115-7401 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 114-1539 | 1 | LH Wide Console Top ASM |
| 1:2 | 117-0883 | 2 | Puck |
| 2 | 115-3641 | 1 | Console-Lower, LH Wide |
| 3 | 114-1537 | 1 | Wide Lid ASM |
| 3:2 | 114-5896 | 2 | Magnet |
| 4 | 109-9085 | 1 | Fender-Wide, LH |
| 5 | 32144-89 | 6 | Screw-Thread Forming |
| 6 | 117-0347 | 6 | Screw-PPH |


# RH Console Assembly No. 115-7400

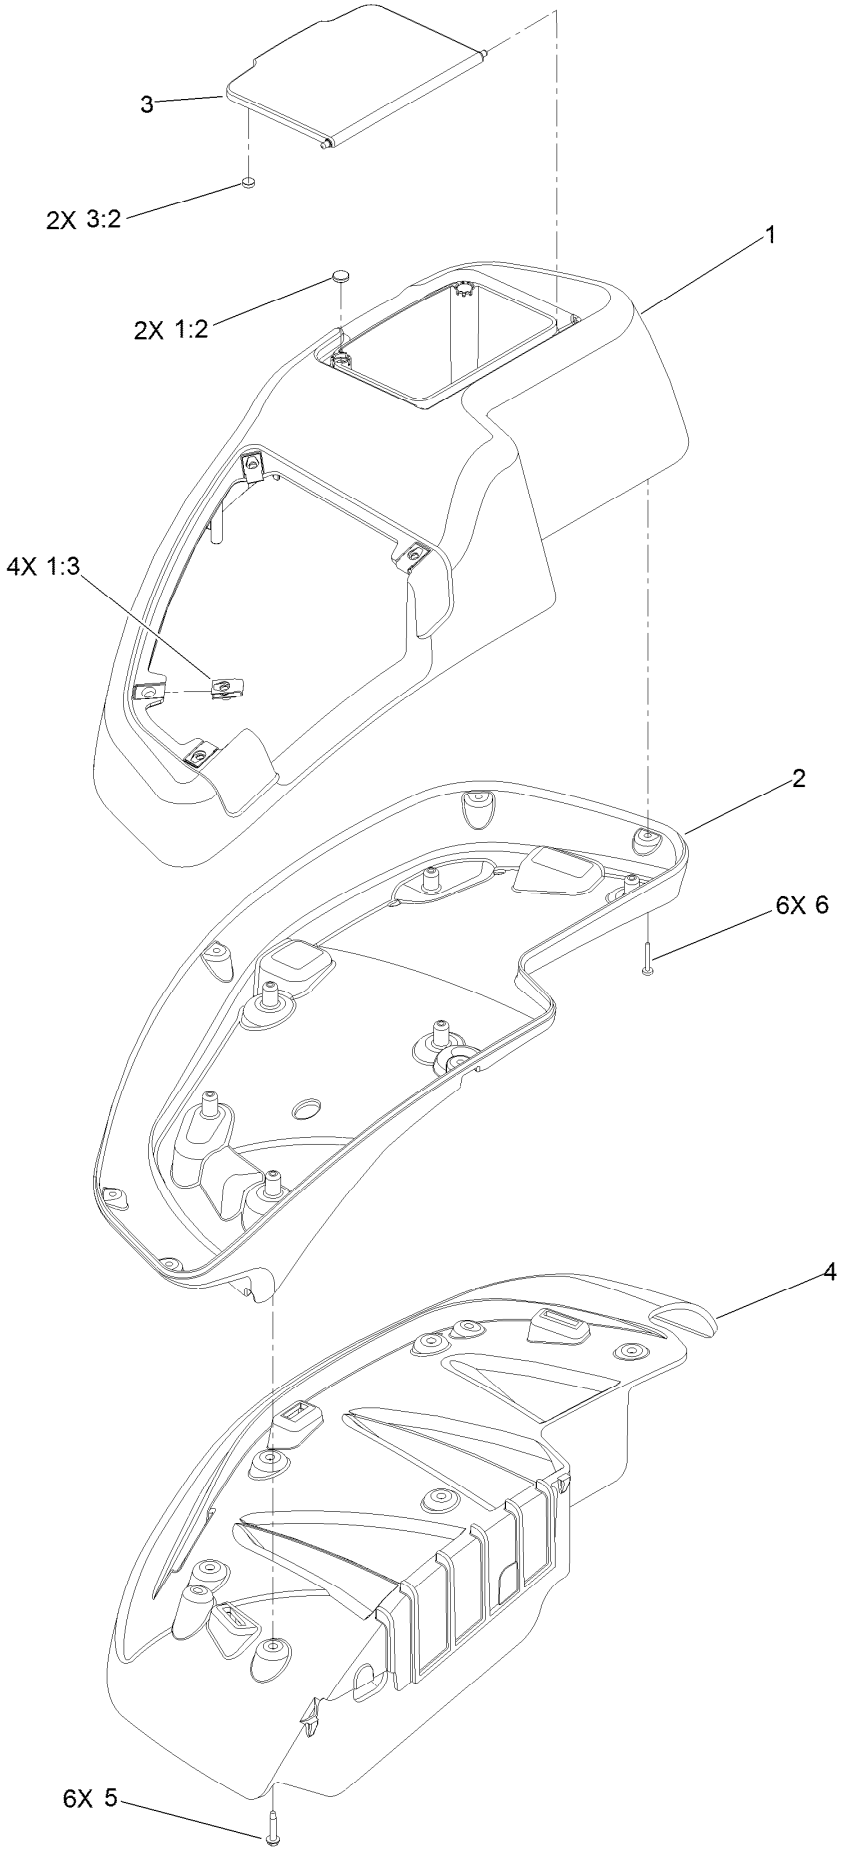

# RH Console Assembly No. 115-7400 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 114-1538 | 1 | RH Wide Top Console ASM |
| 1:2 | 117-0883 | 2 | Puck |
| 1:3 | 107069 | 4 | Clip |
| 2 | 115-3643 | 1 | Console-Lower, RH Wide |
| 3 | 114-1537 | 1 | Wide Lid ASM |
| 3:2 | 114-5896 | 2 | Magnet |
| 4 | 109-9083 | 1 | Fender-Wide, RH |
| 5 | 32144-89 | 6 | Screw-Thread Forming |
| 6 | 117-0347 | 6 | Screw-PPH |

# Electrical System Assembly

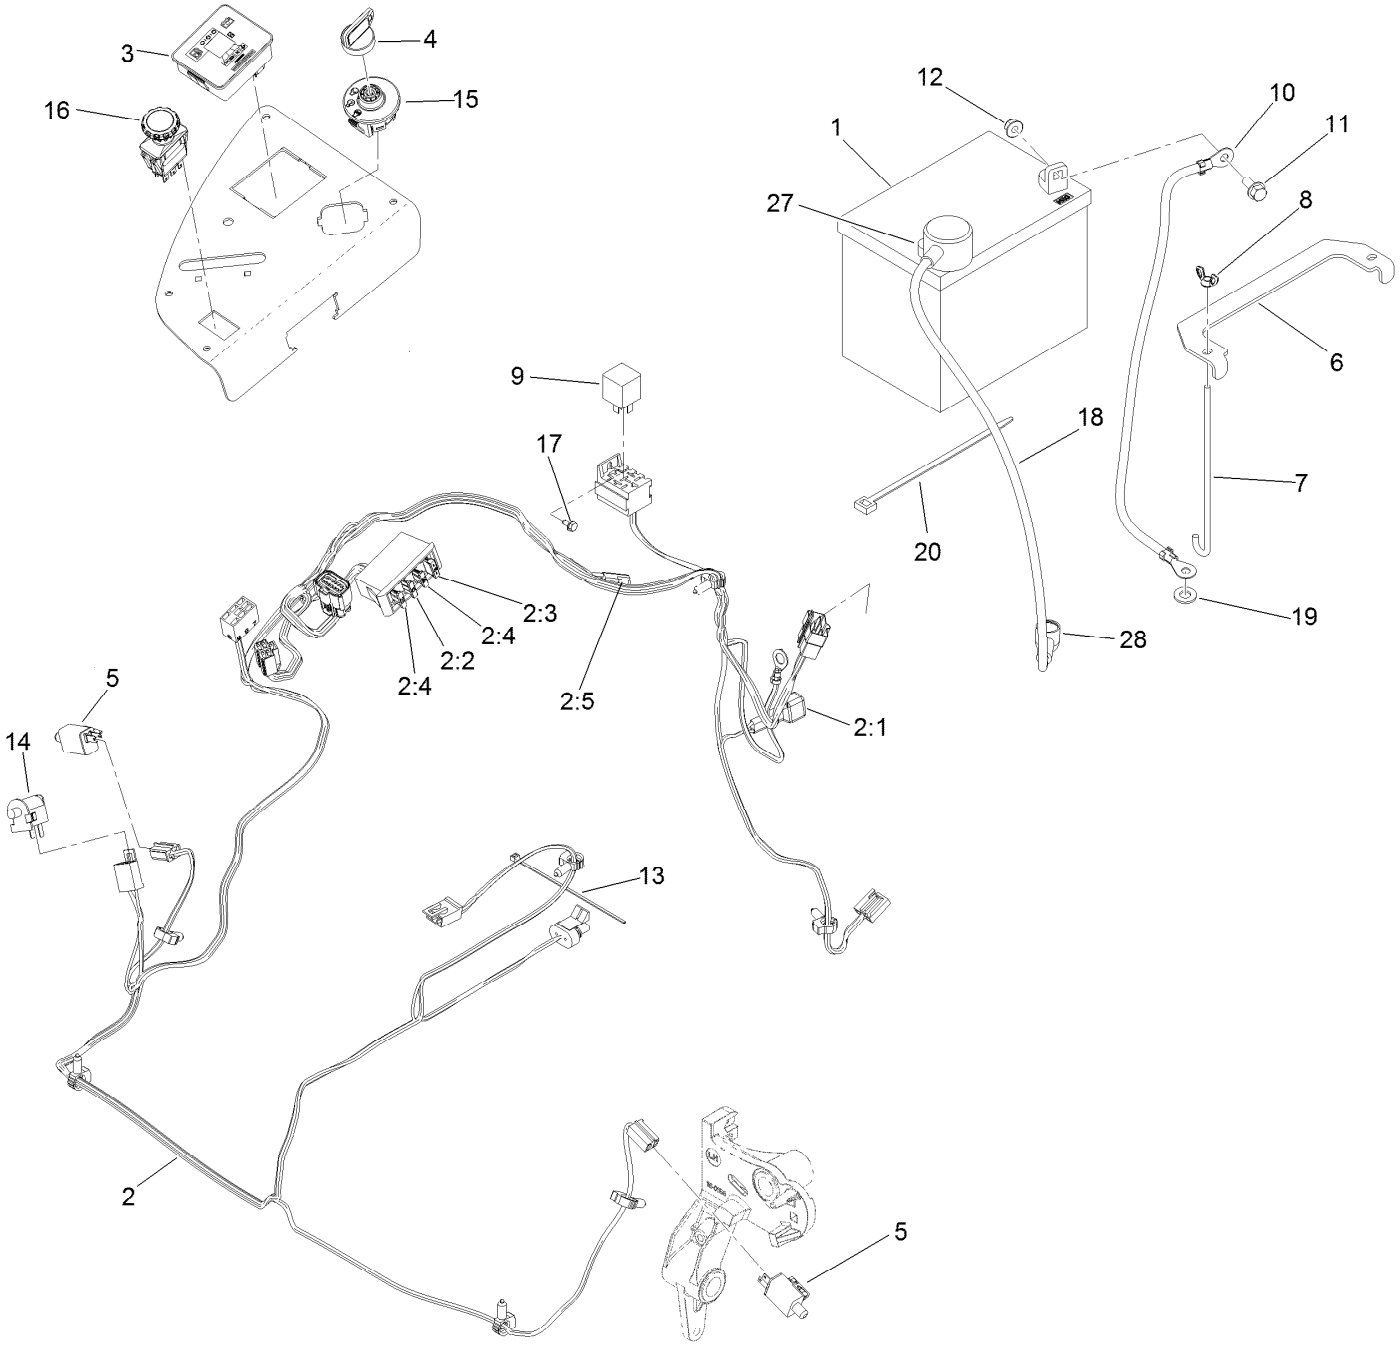


# Electrical System Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 104-8162 | 1 | Battery-Dry |
| 2 | 116-6009 | 1 | Harness-Wire, Main ● |
| 2:1 | 103-3895 | 1 | Diode |
| 2:2 | 218-578 | 1 | Fuse-Blade, 10 Amp |
| 2:3 | 109355 | 1 | Fuse-Blade, 15 Amp |
| 2:4 | 109102 | 2 | Fuse-Blade, 25 Amp |
| 2:5 | 116-0053 | 1 | Cap-Plug |
| 3 | 117-3882 | 1 | Fuel/Hour Meter ASM |
| 4 | 63-8360 | 1 | Key-Ignition |
| 5 | 110-6765 | 2 | Switch |
| 6 | 116-0042-03 | 1 | Strap-Tie Down, Battery |
| 7 | 1-633651 | 2 | Bolt-Holddown |
| 8 | 1-543792 | 2 | Wingnut |
| 9 | 1-643275 | 1 | Relay |
| 10 | 114-1218 | 1 | Cable-Battery, Negative |
| 11 | 3234-5 | 2 | Screw-HHF |
| 12 | 104-8300 | 2 | Nut-Flange, NI |
| 13 | 1-303287 | 3 | Tie-Cable |
| 14 | 82-2190 | 1 | Switch-Bail |
| 15 | 117-2221 | 1 | Switch-Ignition |
| 16 | 116-0124 | 1 | Switch-PTO, 10 Amp |
| 17 | 104-2065 | 1 | Screw-HWH |
| 18 | 115-3864 | 1 | Cable-Battery, Positive |
| 19 | 3256-24 | 1 | Washer-Flat |
| 20 | 1-303335 | 1 | Tie-Plastic |
| 27 | 109-2407 | 1 | Insulator-Battery |
| 28 | 1-543393 | 1 | Insulator-Solenoid |

● Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.


# Deck Lift Assembly

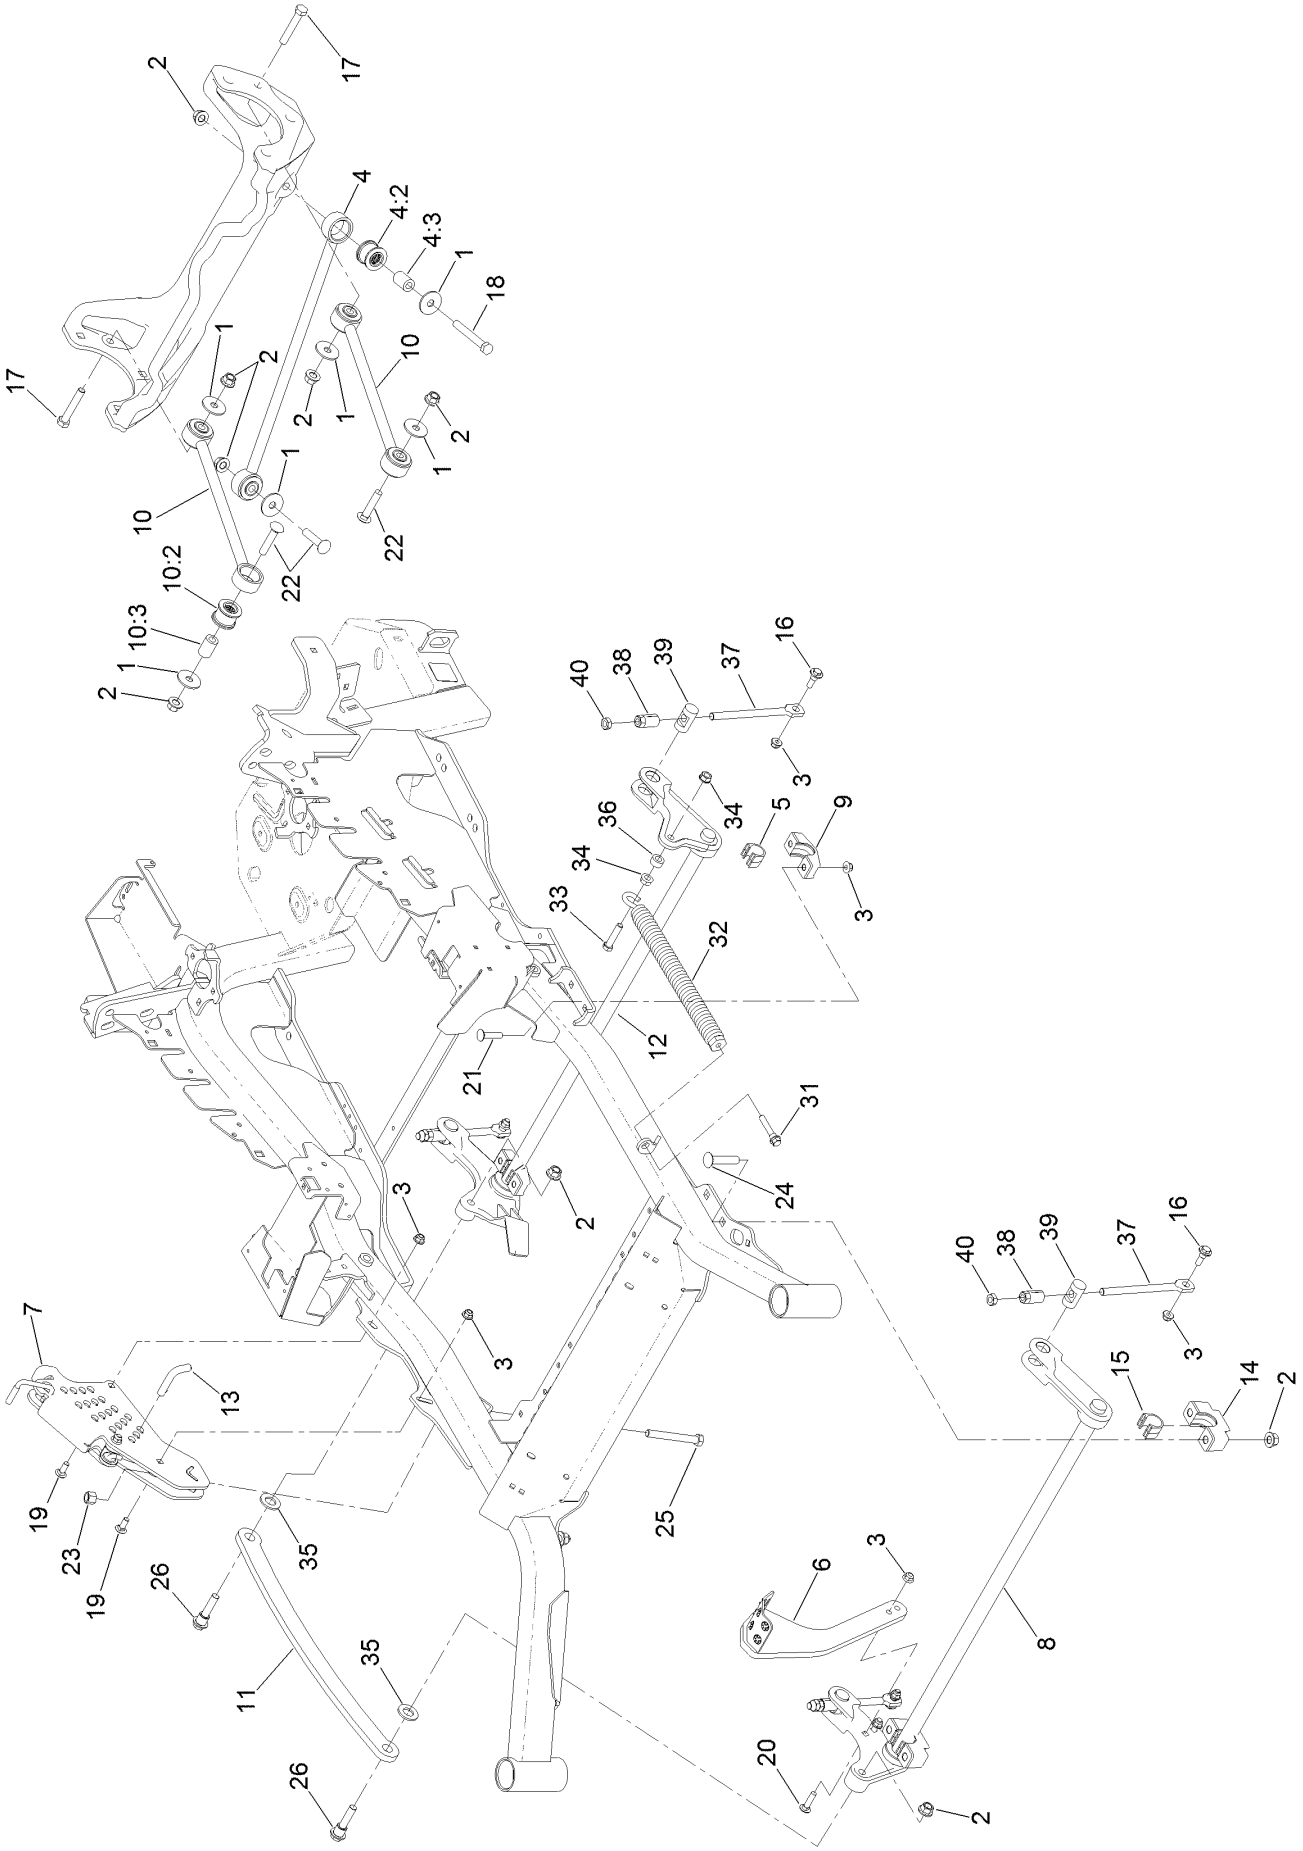

# Deck Lift Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 86-1990 | 6 | Washer-Thrust |
| 2 | 99-5107 | 12 | Nut-Lock |
| 3 | 104-8301 | 12 | Nut-Flange, NI |
| 4 | 109-5013 | 1 | Panhard Rod ASM |
| 4:2 | 109-5009 | 2 | Bushing-Suspension, Rubber |
| 4:3 | 109-5010 | 2 | Spacer |
| 5 | 109-7173 | 2 | Bearing-Cross Shaft, Rear |
| 6 | 131-8812-01 | 1 | Lever-Foot |
| 7 | 109-7438 | 1 | HOC ASM |
| 8 | 126-2477-03 | 1 | Decklift-Front |
| 9 | 116-0818-03 | 2 | Support-Cross Shaft, Rear Bearing |
| 10 | 109-7952 | 2 | Deck Strut ASM |
| 10:2 | 109-5009 | 2 | Bushing-Suspension, Rubber |
| 10:3 | 109-5010 | 2 | Spacer |
| 11 | 116-0797-03 | 1 | Link-Lift, Deck |
| 12 | 116-2645-03 | 1 | Lift-Deck, Rear |
| 13 | 116-5584 | 1 | Pin-HOC |
| 14 | 109-9409 | 2 | Support-Cross Shaft, Bearing |
| 15 | 109-9410 | 2 | Bearing-Cross Shaft, Front |
| 16 | 109-9840 | 4 | Screw-Shoulder, HHF |
| 17 | 325-12 | 2 | Screw-HH |
| 18 | 325-17 | 1 | Screw-HH |
| 19 | 3231-2 | 2 | Bolt-CARR |
| 20 | 3231-4 | 2 | Screw-CARR |
| 21 | 3231-5 | 4 | Screw-CARR |
| 22 | 3233-34 | 3 | Screw-CARR |
| 23 | 3296-23 | 1 | Nut-Lock, NI |
| 24 | 116-1700 | 4 | Bolt-CARR |
| 25 | 116-0559 | 1 | Bolt-TAP |
| 26 | 116-2022 | 2 | Screw-HHF, Shoulder |
| 31 | 92-7674 | 1 | Bolt-Shoulder |
| 32 | 116-0000 | 1 | Spring-Extension |
| 33 | 109-9065 | 1 | Screw-HH |
| 34 | 32128-37 | 2 | Nut-HF |
| 35 | 3256-28 | 2 | Washer-Flat |
| 36 | 116-2695 | 1 | Spacer |
| 37 | 109-8007 | 4 | Link-Adjuster, Deck Lift |
| 38 | 109-7840 | 4 | Adjuster-Lift, Deck |
| 39 | 109-8353 | 4 | Trunnion |
| 40 | 3218-5 | 4 | Nut-Jam |


# Height-of-Cut Assembly No. 109-7438

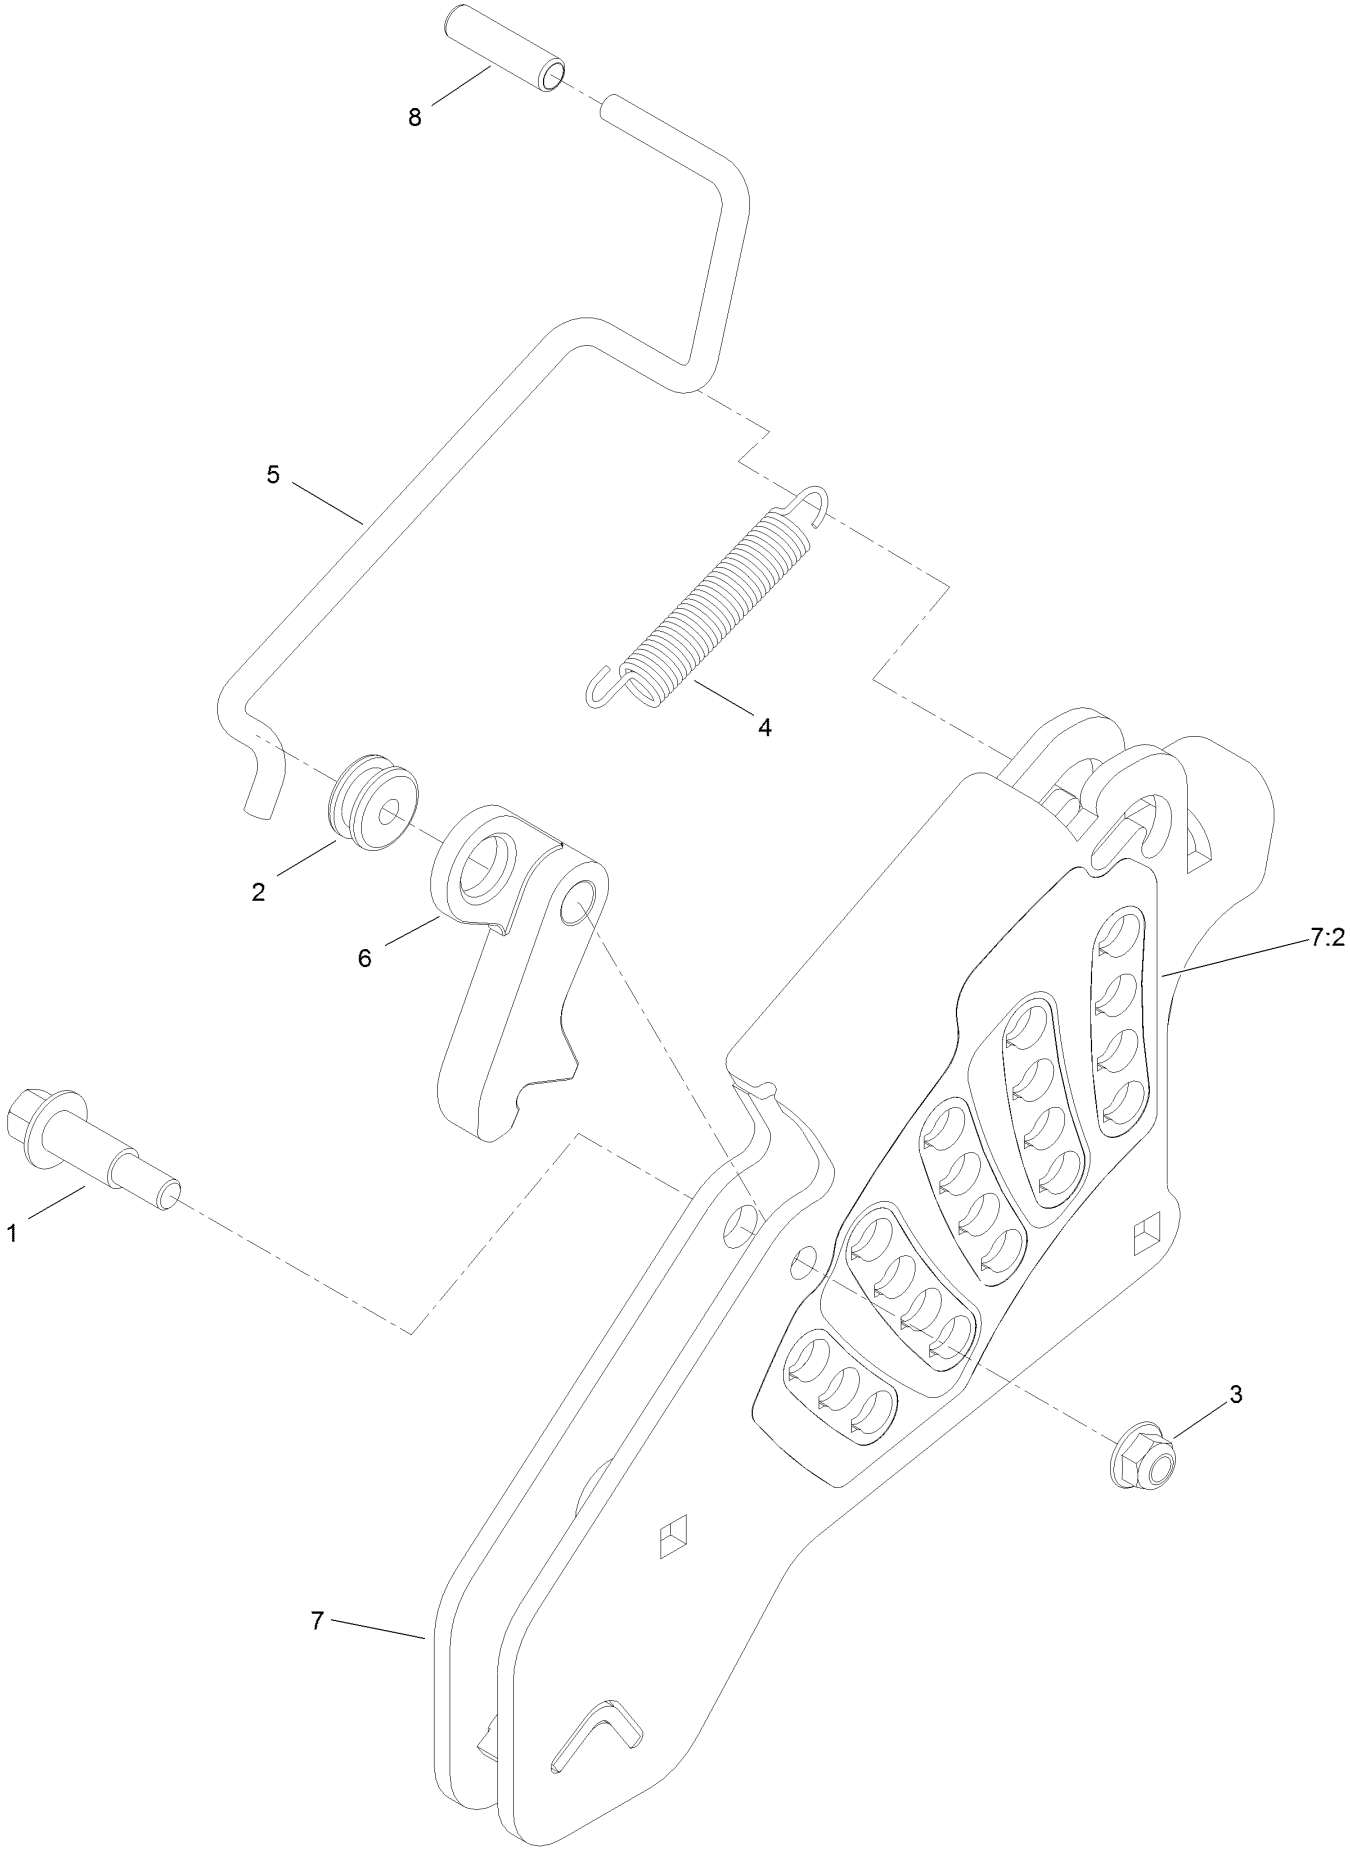

# Height-of-Cut Assembly No. 109-7438 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 62-1330 | 1 | Bolt-Shoulder |
| 2 | 109-7130 | 1 | Grommet |
| 3 | 104-8301 | 1 | Nut-Flange, NI |
| 4 | 109-7124 | 1 | Spring-Extension |
| 5 | 109-7128 | 1 | Rod-Lock, Transport |
| 6 | 116-0118 | 1 | Pawl-Transport, HOC |
| 7 | 109-7335 | 1 | HOC Plate ASM |
| 7:2 | 126-4398 | 1 | Decal-HOC |
| 8 | 109-8250 | 1 | Grip-Lever |

# Engine, Clutch and Muffler Assembly

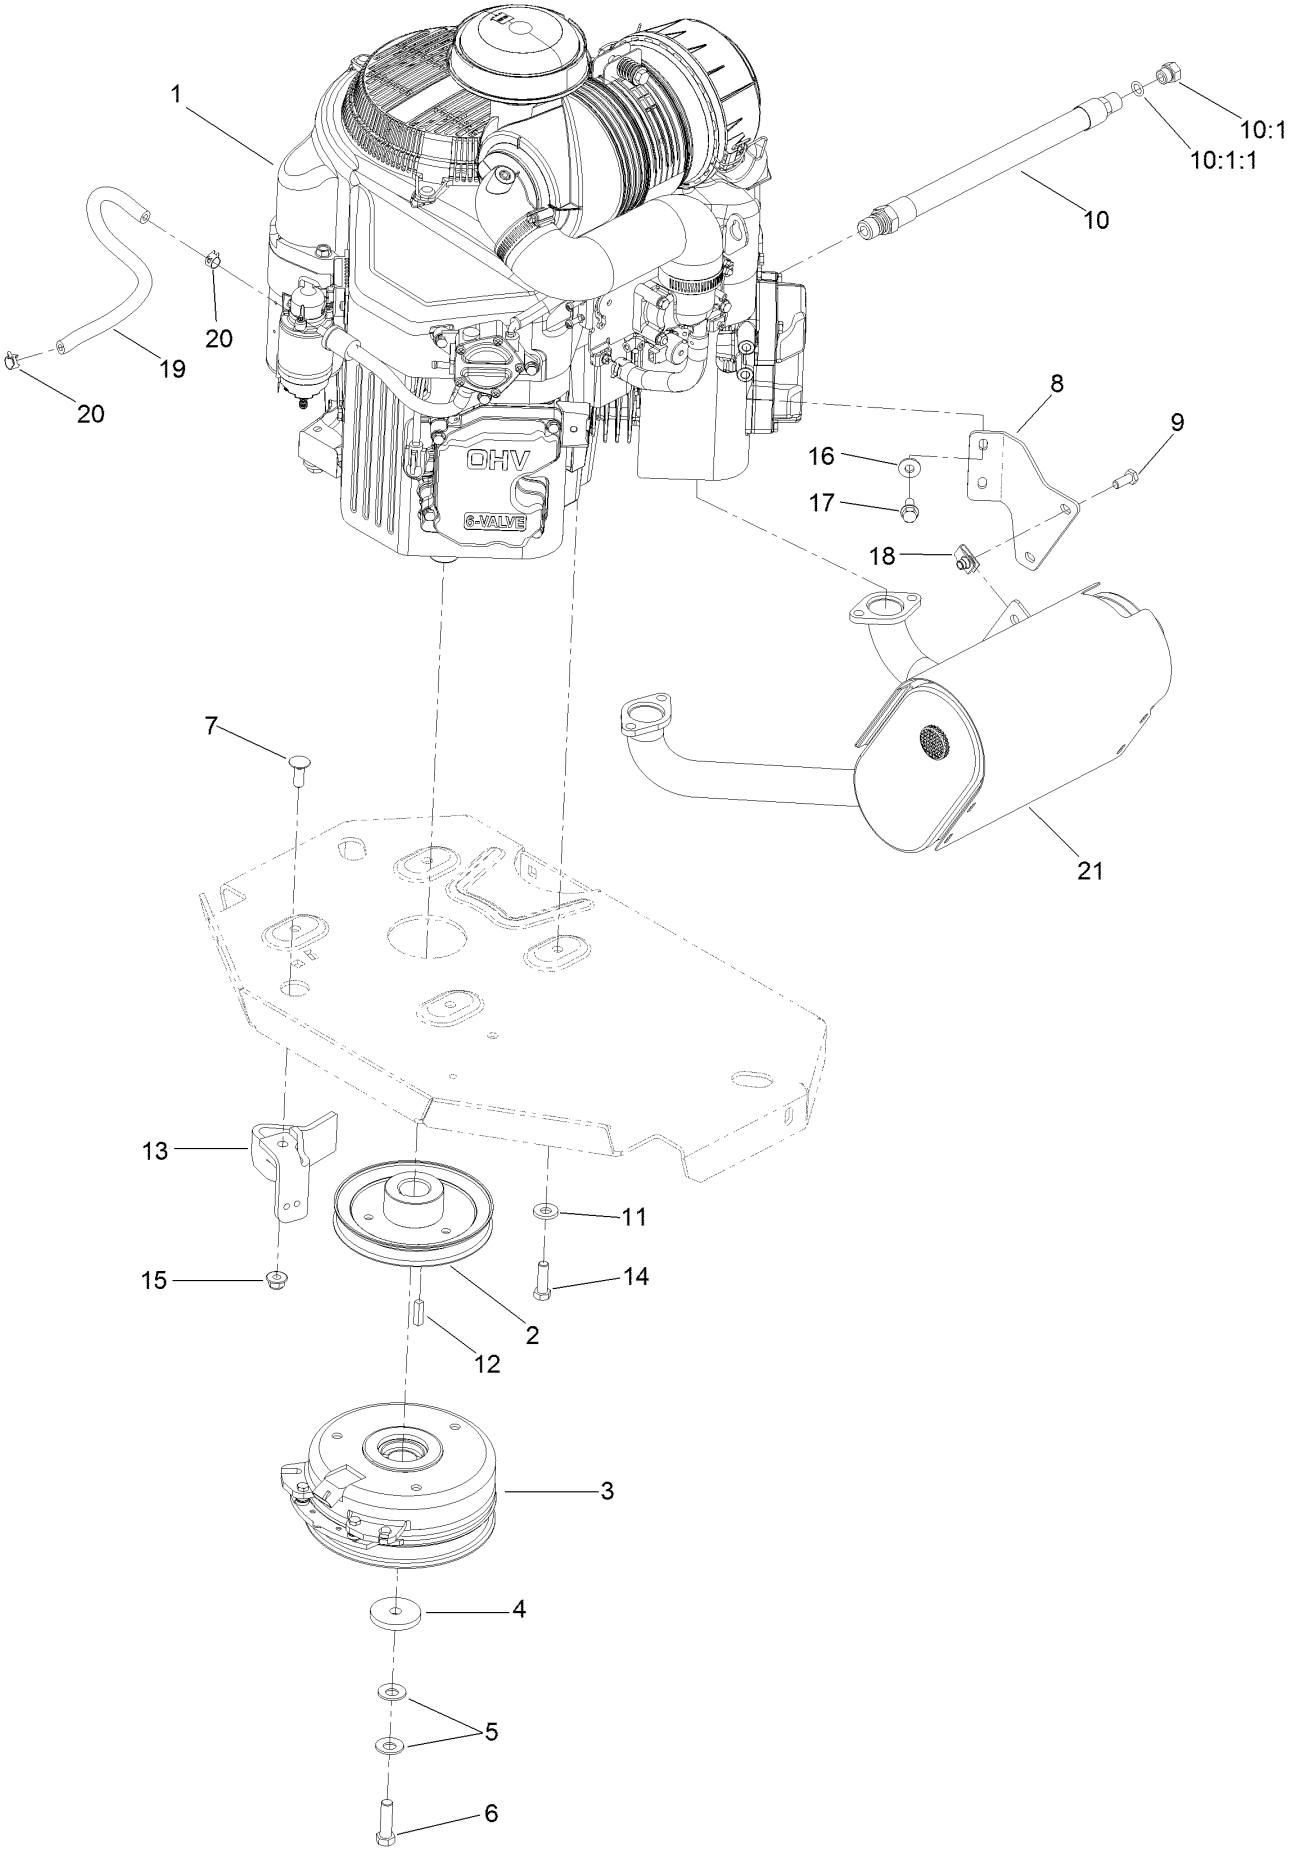


# Engine, Clutch and Muffler Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | | 1 | Engine-Kawasaki, Fx921 ●■ |
| 2 | 109-9905 | 1 | Sheave |
| 3 | 126-4185 | 1 | Clutch Kit |
| 4 | 109-6919 | 1 | Washer-Clutch |
| 5 | 1-603610 | 2 | Washer-Spring |
| 6 | 109-9761 | 1 | Screw-HH |
| 7 | 3231-22 | 1 | Screw-CARR |
| 8 | 116-1587 | 1 | Bracket-Muffler |
| 9 | 33114-020 | 2 | Screw-HH |
| 10 | 116-4924 | 1 | Engine Oil Drain Hose ASM |
| 10:1 | 353-508 | 1 | Plug-HH |
| 10:1:1 | 237-42 | 1 | O-Ring |
| 11 | 98-5975 | 4 | Washer-Belleville |
| 12 | 1-807259 | 1 | Key |
| 13 | 116-2612-01 | 1 | Clutch-Anchor |
| 14 | 323-7 | 4 | Screw-HH |
| 15 | 104-8301 | 1 | Nut-Flange, NI |
| 16 | 1-303334 | 2 | Washer-Spring |
| 17 | 3234-5 | 2 | Screw-HHF |
| 18 | 94-2413 | 2 | Nut-U |
| 19 | 109-0296 | 1 | Hose-Fuel |
| 20 | 2412-98 | 2 | Clamp-Hose |
| 21 | 116-1707 | 1 | Muffler |

● Not serviced separately

■ Obtain parts from www.kawpowerepc.com

# Deck Assembly

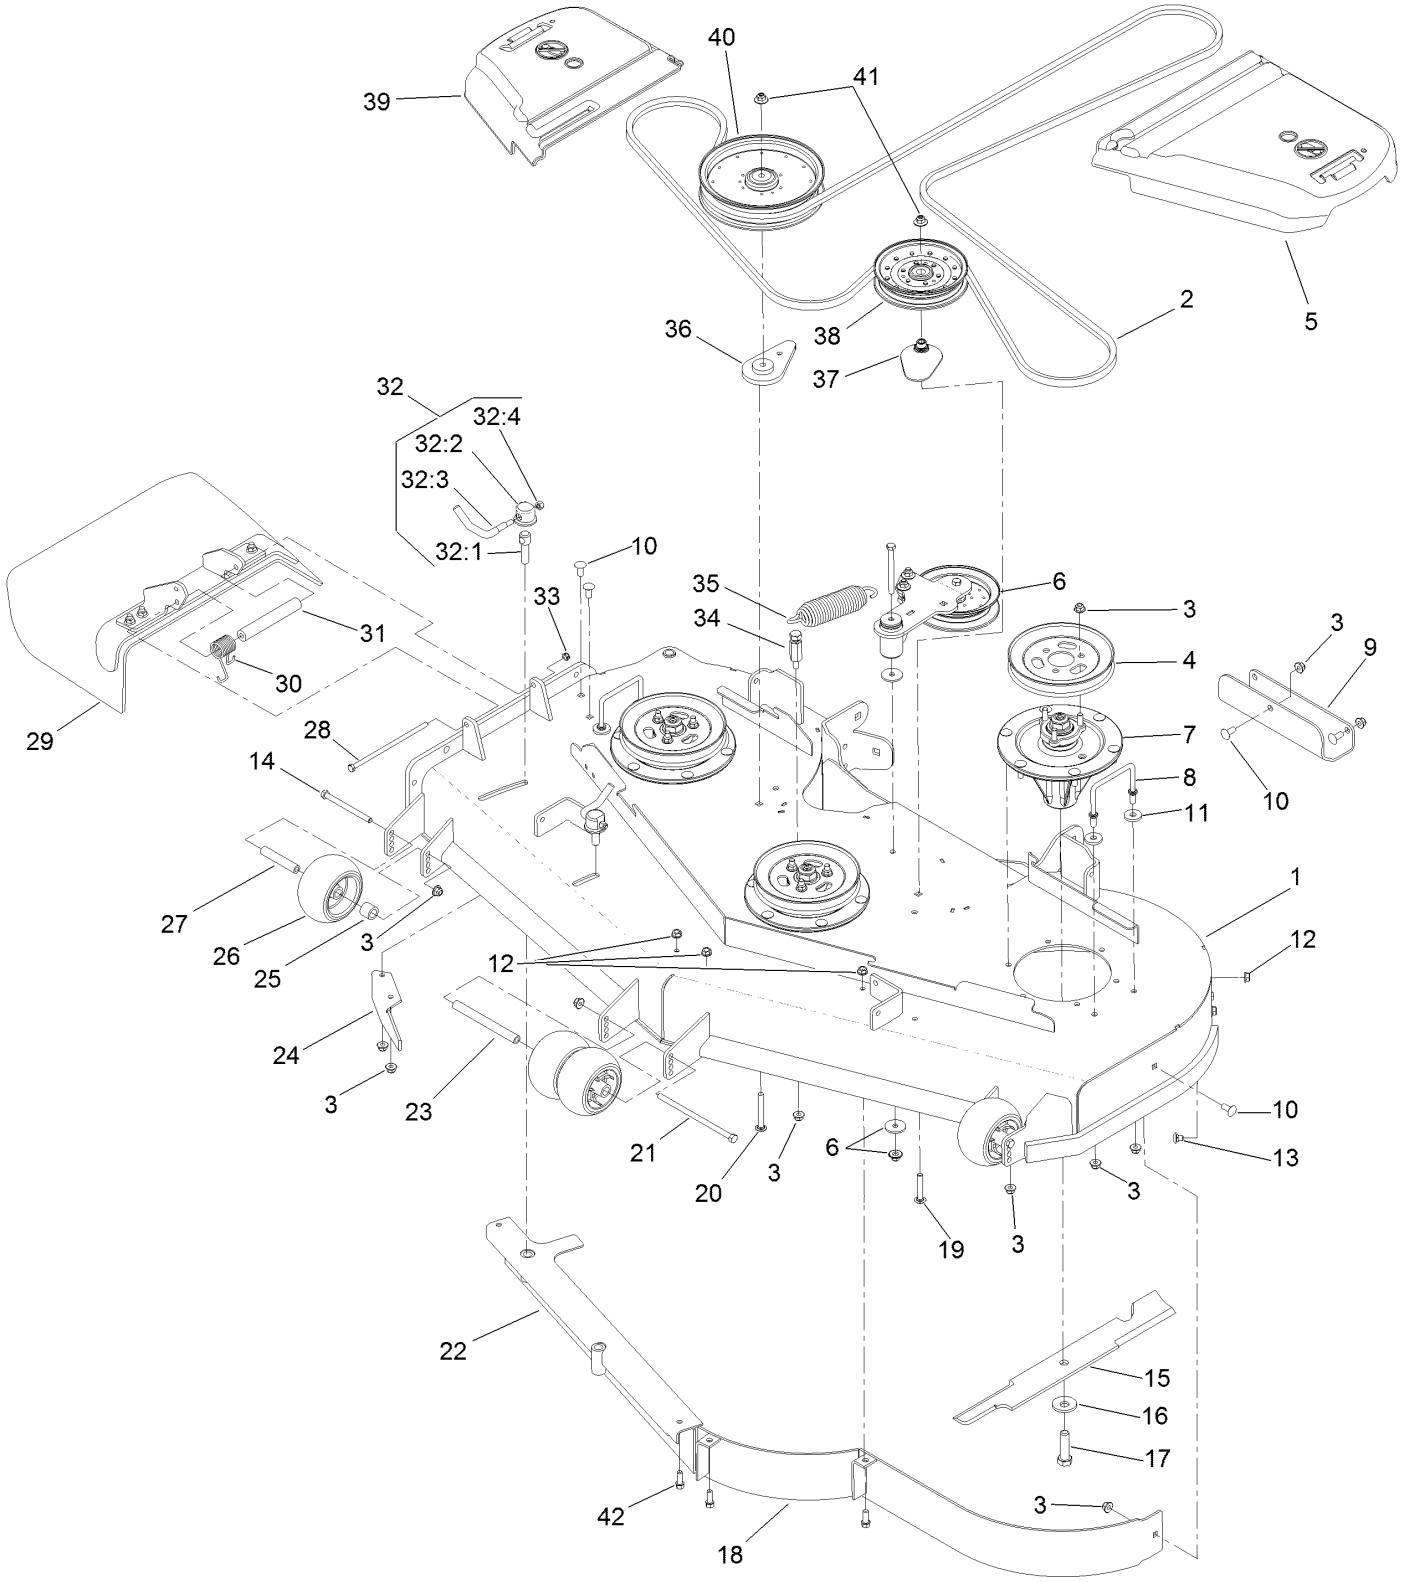


# Deck Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 112-4180 | 1 | Deck Decal ASM |
| 2 | 114-5858 | 1 | Belt-V |
| 3 | 104-8301 | 42 | Nut-Flange, NI |
| 4 | 105-7734 | 3 | Pulley |
| 5 | 109-6938 | 1 | Cover-Belt, LH |
| 6 | | 1 | Idler Arm ASM ● |
| 7 | 119-8560 | 3 | Spindle ASM |
| 8 | 109-6982 | 2 | Wireform-Cover |
| 9 | 121-8031-01 | 1 | Plate-Skid |
| 10 | 3231-27 | 7 | Screw-CARR |
| 11 | 1-373034 | 4 | Washer |
| 12 | 3290-357 | 6 | Nut-HHF, Whiz |
| 13 | 108-5387 | 3 | Screw-CARR |
| 14 | 323-23 | 2 | Screw-HH |
| 15 | 105-7718-03 | 3 | Blade-Hi Flow |
| 16 | 103-0865 | 3 | Washer-Blade Bolt, Heavy |
| 17 | 51-4060 | 3 | Screw-Blade |
| 18 | 114-5842-01 | 1 | Baffle |
| 19 | 3231-40 | 1 | Bolt-CARR, Short Neck |
| 20 | 3231-42 | 1 | Screw-CARR |
| 21 | 108-5388 | 1 | Screw-HH |
| 22 | 127-4858-01 | 1 | Baffle ASM |
| 23 | 98-5967 | 1 | Spacer-Wheel |
| 24 | 106-3216-01 | 1 | Baffle-Discharge |
| 25 | 98-7913 | 2 | Tube-Spacer |
| 26 | 1-603299 | 4 | Roller-Scalp, Anti |
| 27 | 98-7912 | 2 | Tube-Spanner |
| 28 | 322-50 | 1 | Screw-HH |
| 29 | 108-2792 | 1 | Rubber Deflector ASM |
| 30 | 108-4052 | 1 | Spring-Torsion |
| 31 | 105-4622 | 1 | Spacer |
| 32 | 107-1664 | 2 | Lever ASM |
| 32:1 | 106-3239 | 1 | Screw-Lock |
| 32:2 | 107-1644 | 1 | Cap-Lock |
| 32:3 | 106-3241 | 1 | Lever-Lock |
| 32:4 | 3296-29 | 1 | Nut-Lock, NI |
| 33 | 3296-47 | 1 | Nut-Lock, NI |
| 34 | 114-5867 | 1 | Anchor-Spring, Tall |
| 35 | 116-6317 | 1 | Spring-Extension |
| 36 | 109-9416 | 1 | Spacer-Idler |
| 37 | 109-2872 | 1 | Spacer-Pulley |
| 38 | 116-4670 | 1 | Pulley-Idler, Flat |
| 39 | 116-0094 | 1 | Cover-Belt, RH |
| 40 | 109-8590 | 1 | Pulley-Idler |
| 41 | 109-6658 | 2 | Nut-Flange, NI |
| 42 | 92-1624 | 3 | Screw-HWH |

● Not serviced separately


# Deck Decal Assembly No. 112-4180

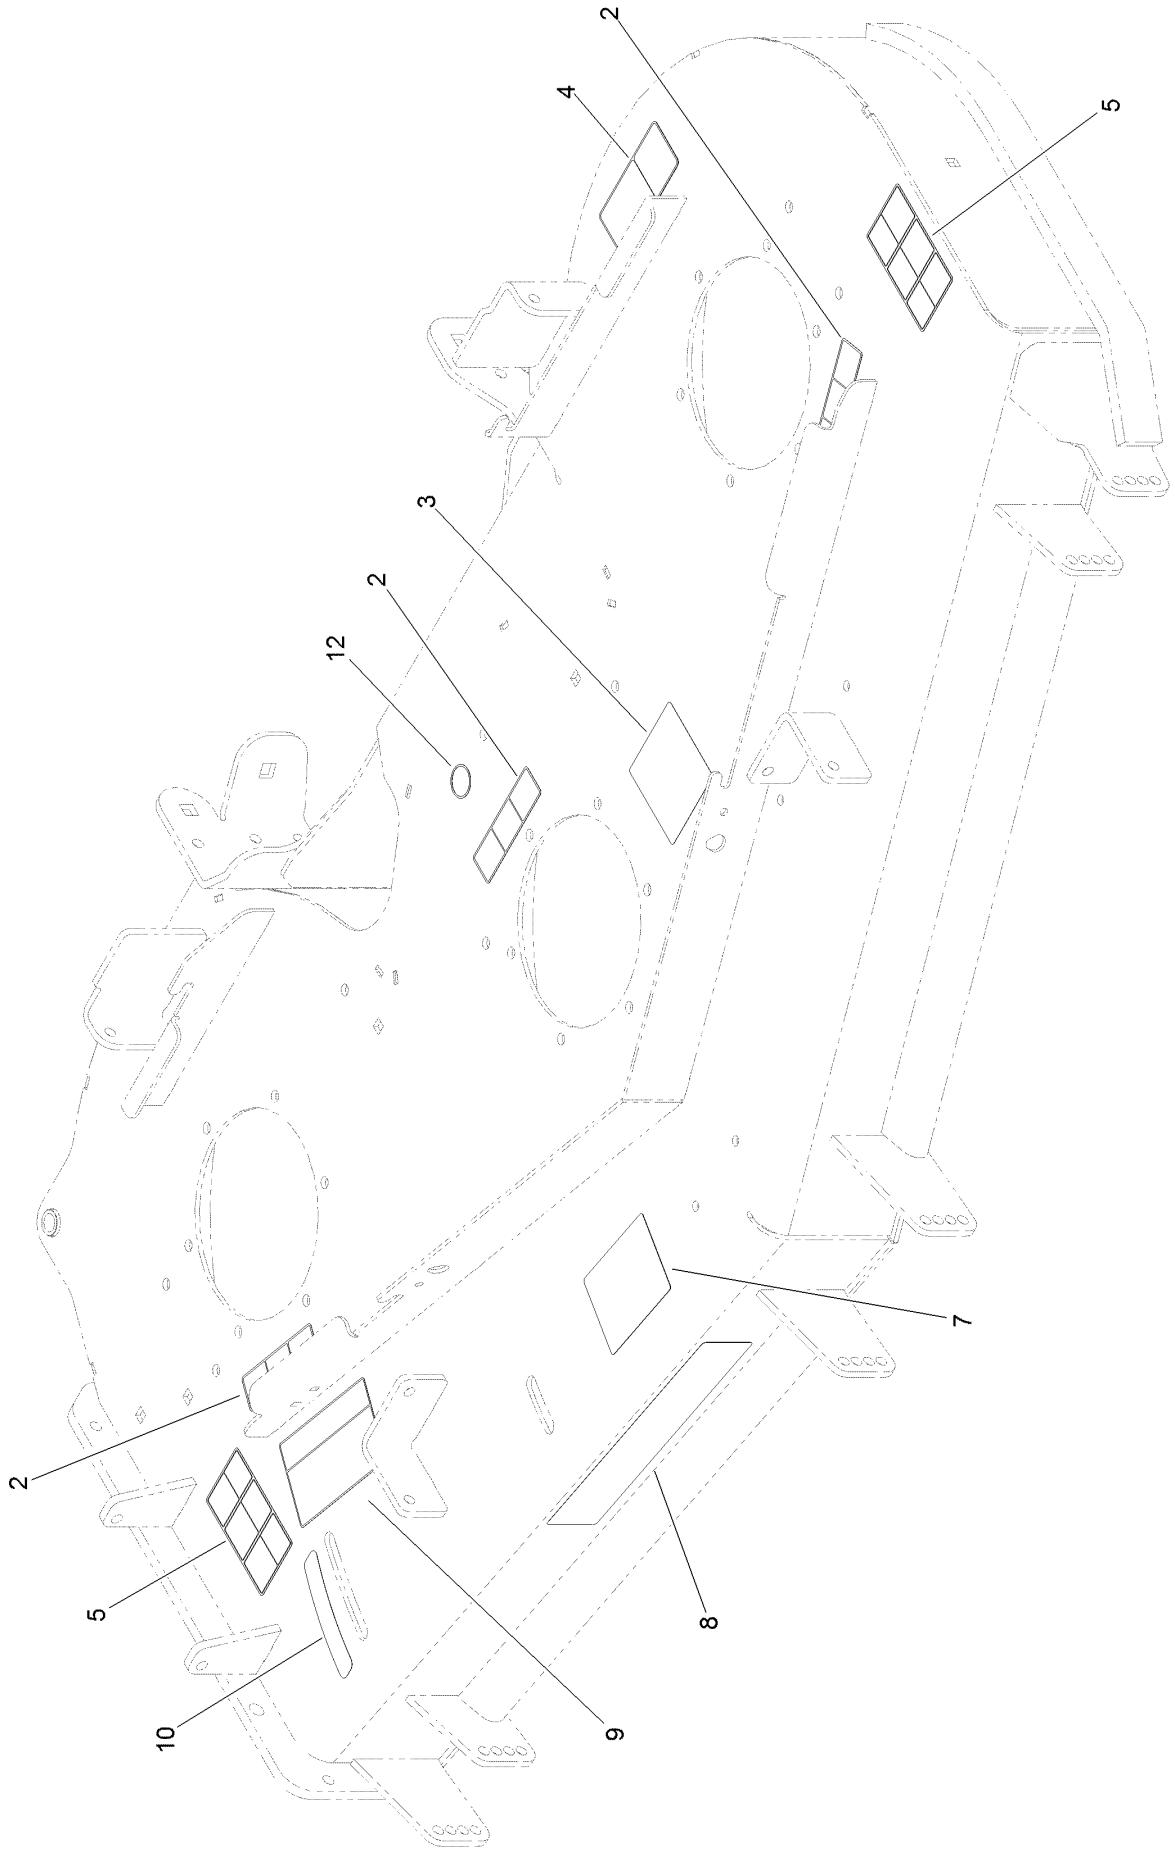

# Deck Decal Assembly No. 112-4180 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 2 | 112-9028 | 3 | Decal-Missing, Cover |
| 3 | 115-7445 | 1 | Decal-Routing, Deck Belt |
| 4 | 93-7818 | 1 | Decal-Torque, Blade Bolt |
| 5 | 117-3848 | 2 | Decal-Danger |
| 7 | 127-0326 | 1 | Decal-Anti Scalp |
| 8 | 107-1619 | 1 | Decal |
| 9 | 110-2068 | 1 | Decal-Adjustment, Baffle |
| 10 | 110-2067 | 1 | Decal-Setting, Baffle |
| 12 | 58-6520 | 1 | Decal-Grease |


# Idler Assembly

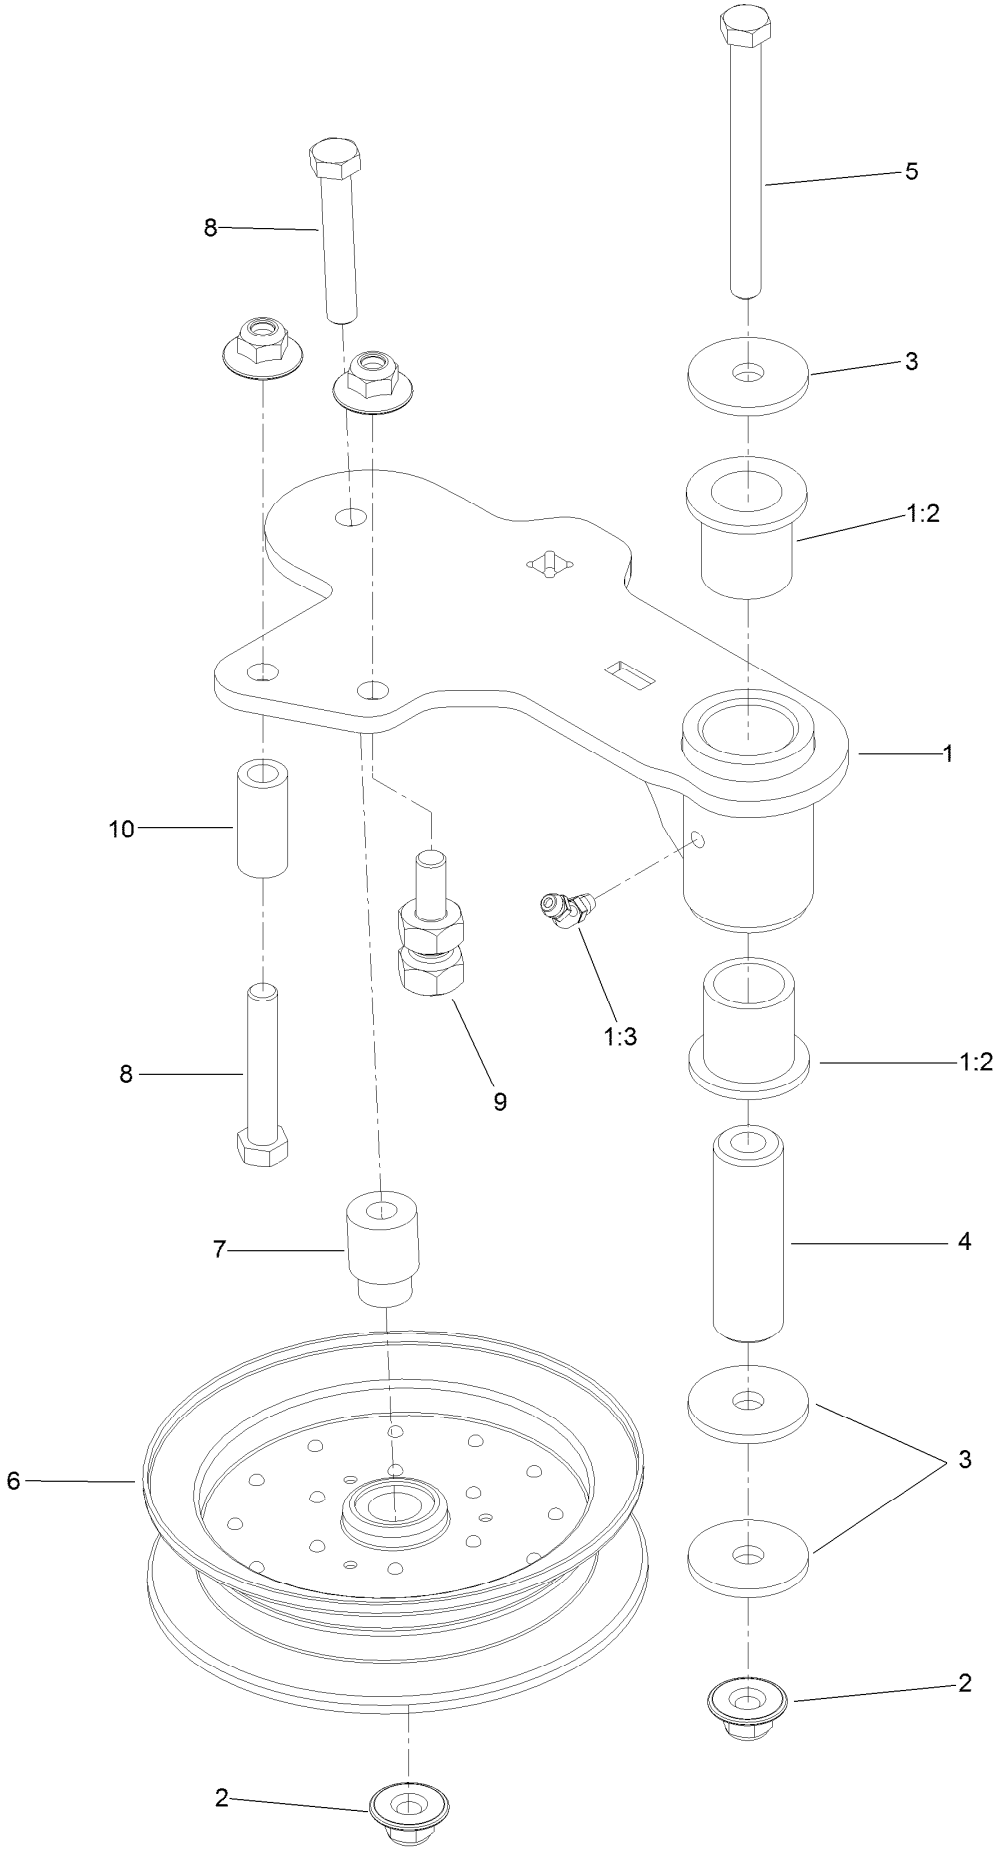

# Idler Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 114-5870 | 1 | Idler Arm ASM |
| 1:2 | 1-303514 | 2 | Bearing-Flanged |
| 1:3 | 1481 | 1 | Fitting-Grease |
| 2 | 109-6658 | 4 | Nut-Flange, NI |
| 3 | 1-213069 | 3 | Washer |
| 4 | 114-5848 | 1 | Spacer-Plain |
| 5 | 98-5961 | 1 | Screw-HH |
| 6 | 116-4668 | 1 | Idler-Pulley, Flanged |
| 7 | 112-4212 | 1 | Mount-Pulley |
| 8 | 323-11 | 2 | Screw-HH |
| 9 | 114-5866 | 1 | Anchor-Spring, Short |
| 10 | 104-0151 | 1 | Spacer |

# Spindle Assembly No. 119-8560

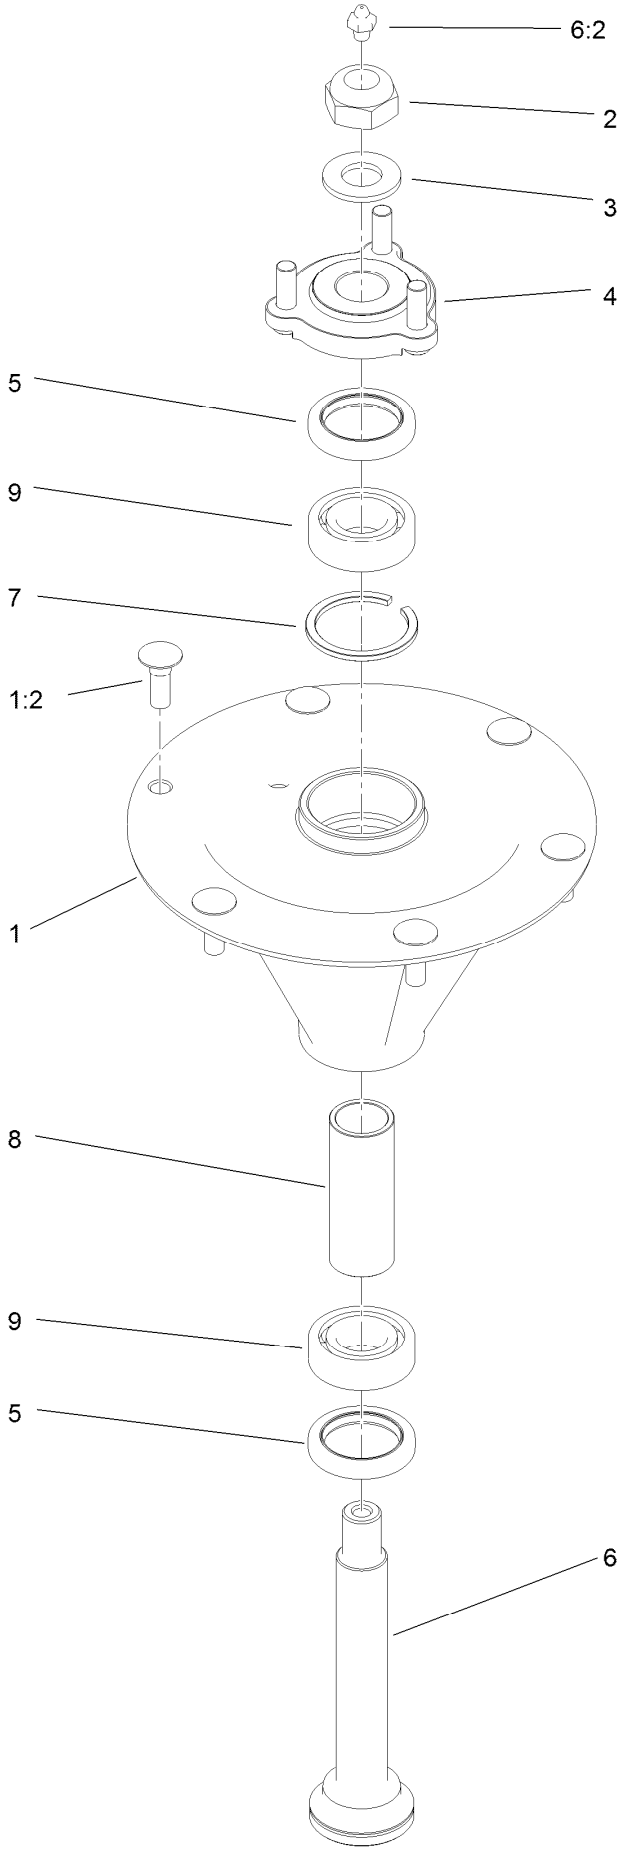


# Spindle Assembly No. 119-8560 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | | 1 | Spindle Housing And Studs ASM ● |
| 1:2 | 114-8195 | 6 | Bolt-Ribbed Neck |
| 2 | 3296-67 | 1 | Nut-Lock, NI |
| 3 | 92-5836 | 1 | Washer |
| 4 | 117-6172 | 1 | Spindle Hub ASM |
| 5 | 253-133 | 2 | Seal-Oil |
| 6 | 119-8527 | 1 | Shaft-Spindle |
| 6:2 | 302-2 | 1 | Fitting-Grease |
| 7 | 119-8532 | 1 | Snap Ring |
| 8 | 117-6184 | 1 | Spacer |
| 9 | 119-8558 | 2 | Bearing-Noseal |

● Not serviced separately


# Rubber Deflector Assembly No. 108-2792

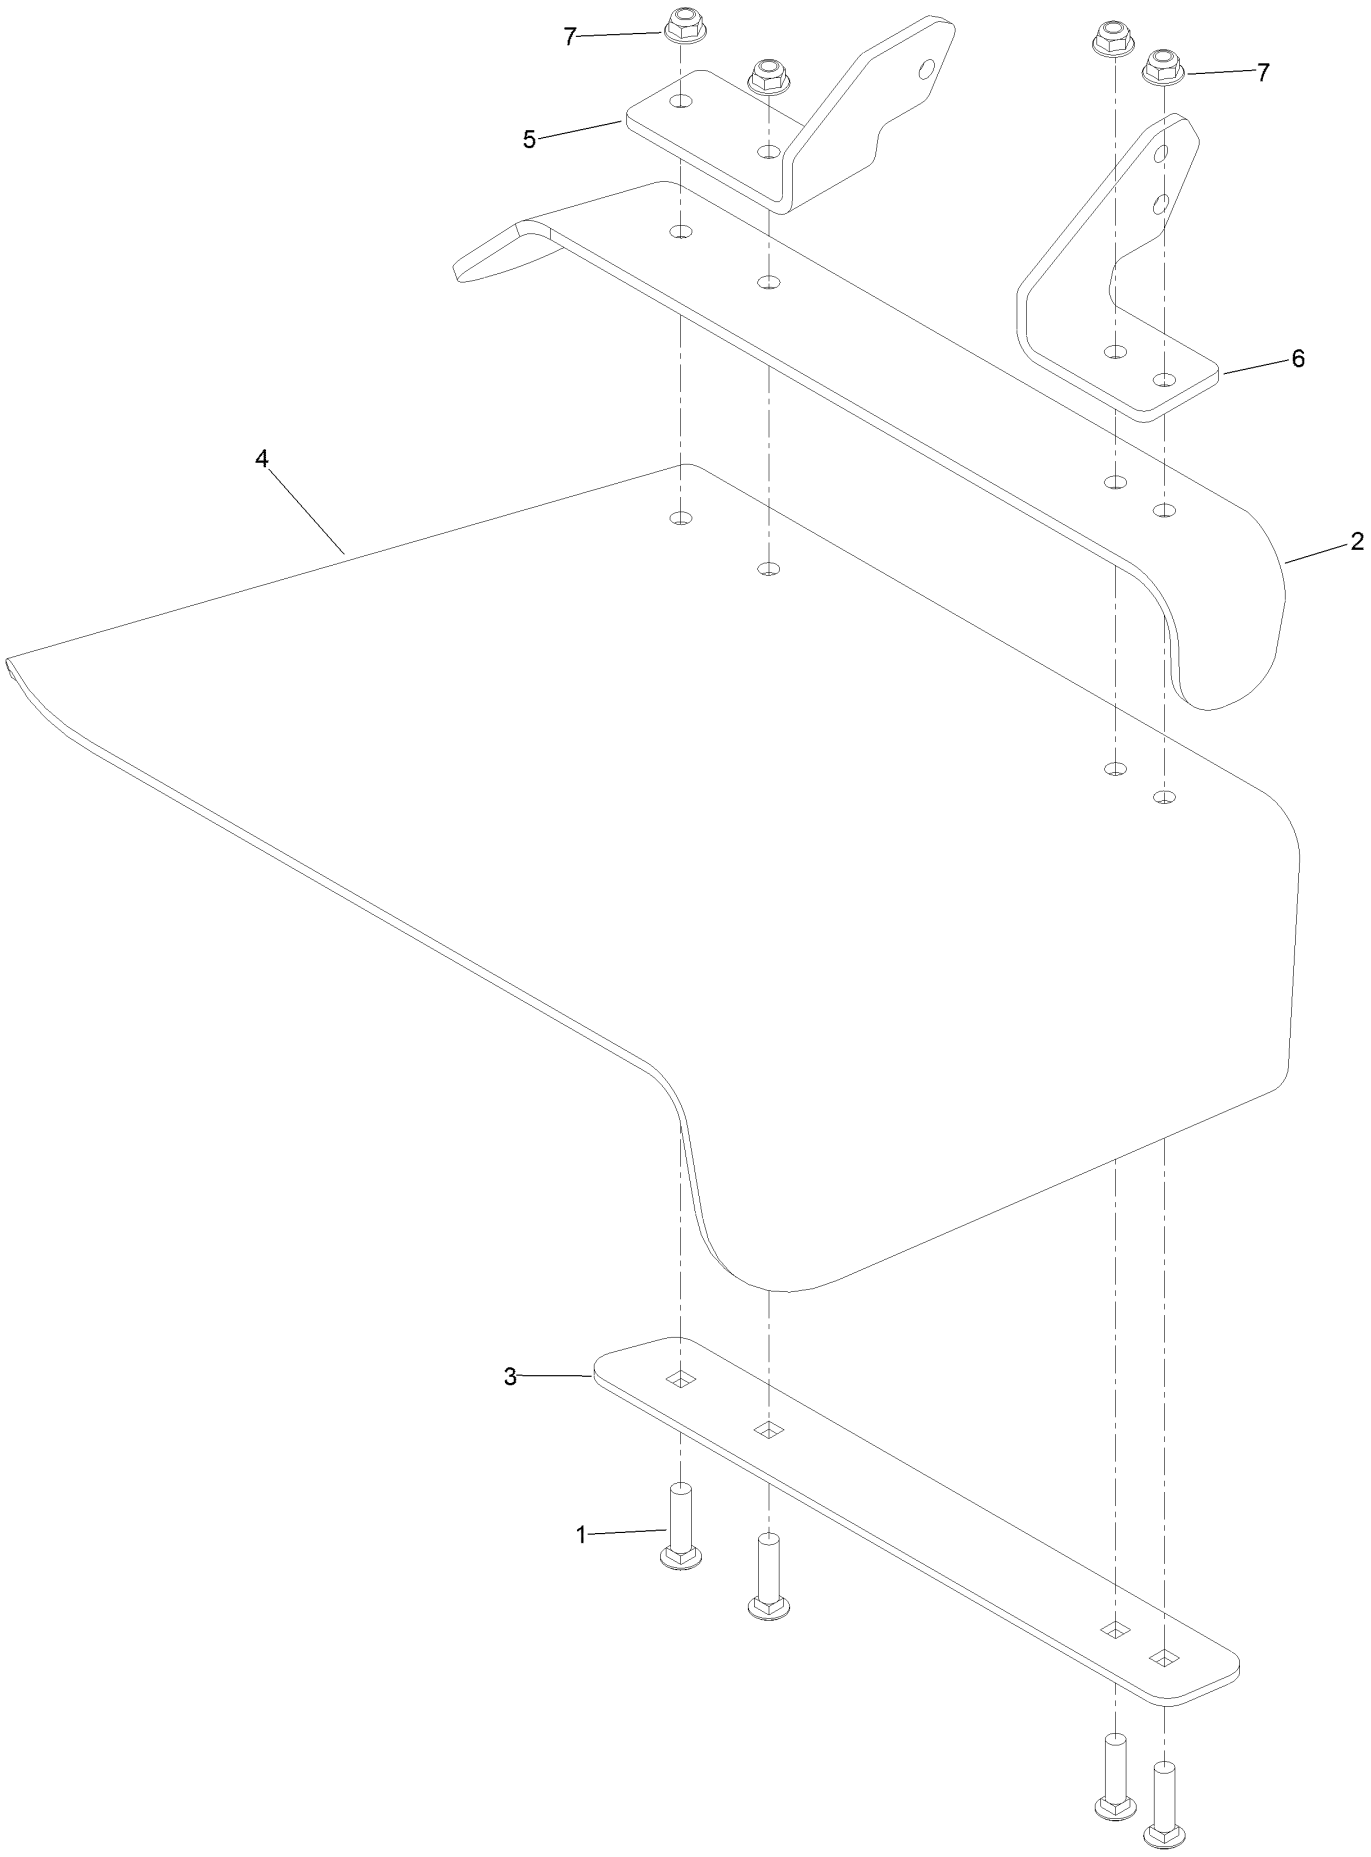

# Rubber Deflector Assembly No. 108-2792 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 3231-4 | 4 | Screw-CARR |
| 2 | 106-3246-01 | 1 | Deflector |
| 3 | 106-3248-03 | 1 | Strap-Discharge |
| 4 | 108-5029 | 1 | Deflector-Rubber |
| 5 | 108-4059-01 | 1 | Plate-Hinge, Rear |
| 6 | 106-3253-01 | 1 | Plate-Hinge, Front |
| 7 | 104-8301 | 4 | Nut-Flange, NI |


# Seat Mount Assembly

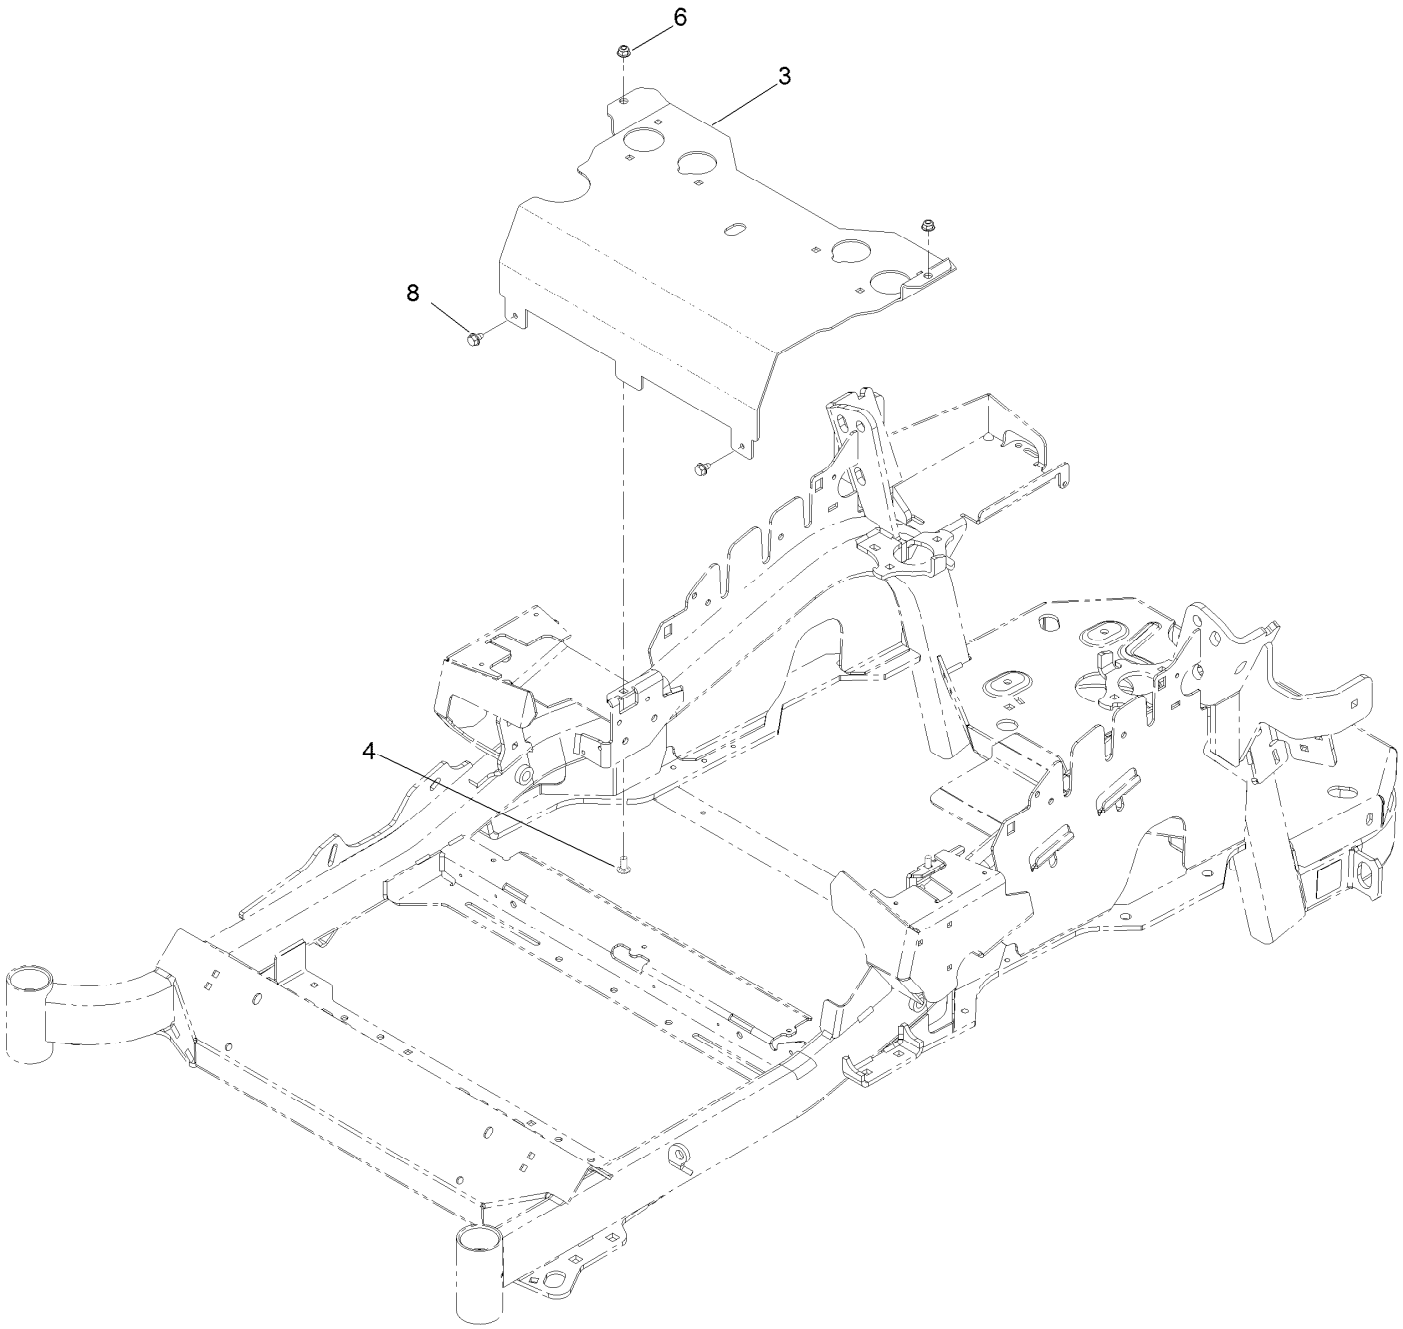

# Seat Mount Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 3 | 116-2130-03 | 1 | Panel-Front, Seat Mount |
| 4 | 3230-23 | 2 | Screw-CARR |
| 6 | 104-8300 | 2 | Nut-Flange, NI |
| 8 | 9266934 | 2 | Screw |


# Suspension Platform Assembly

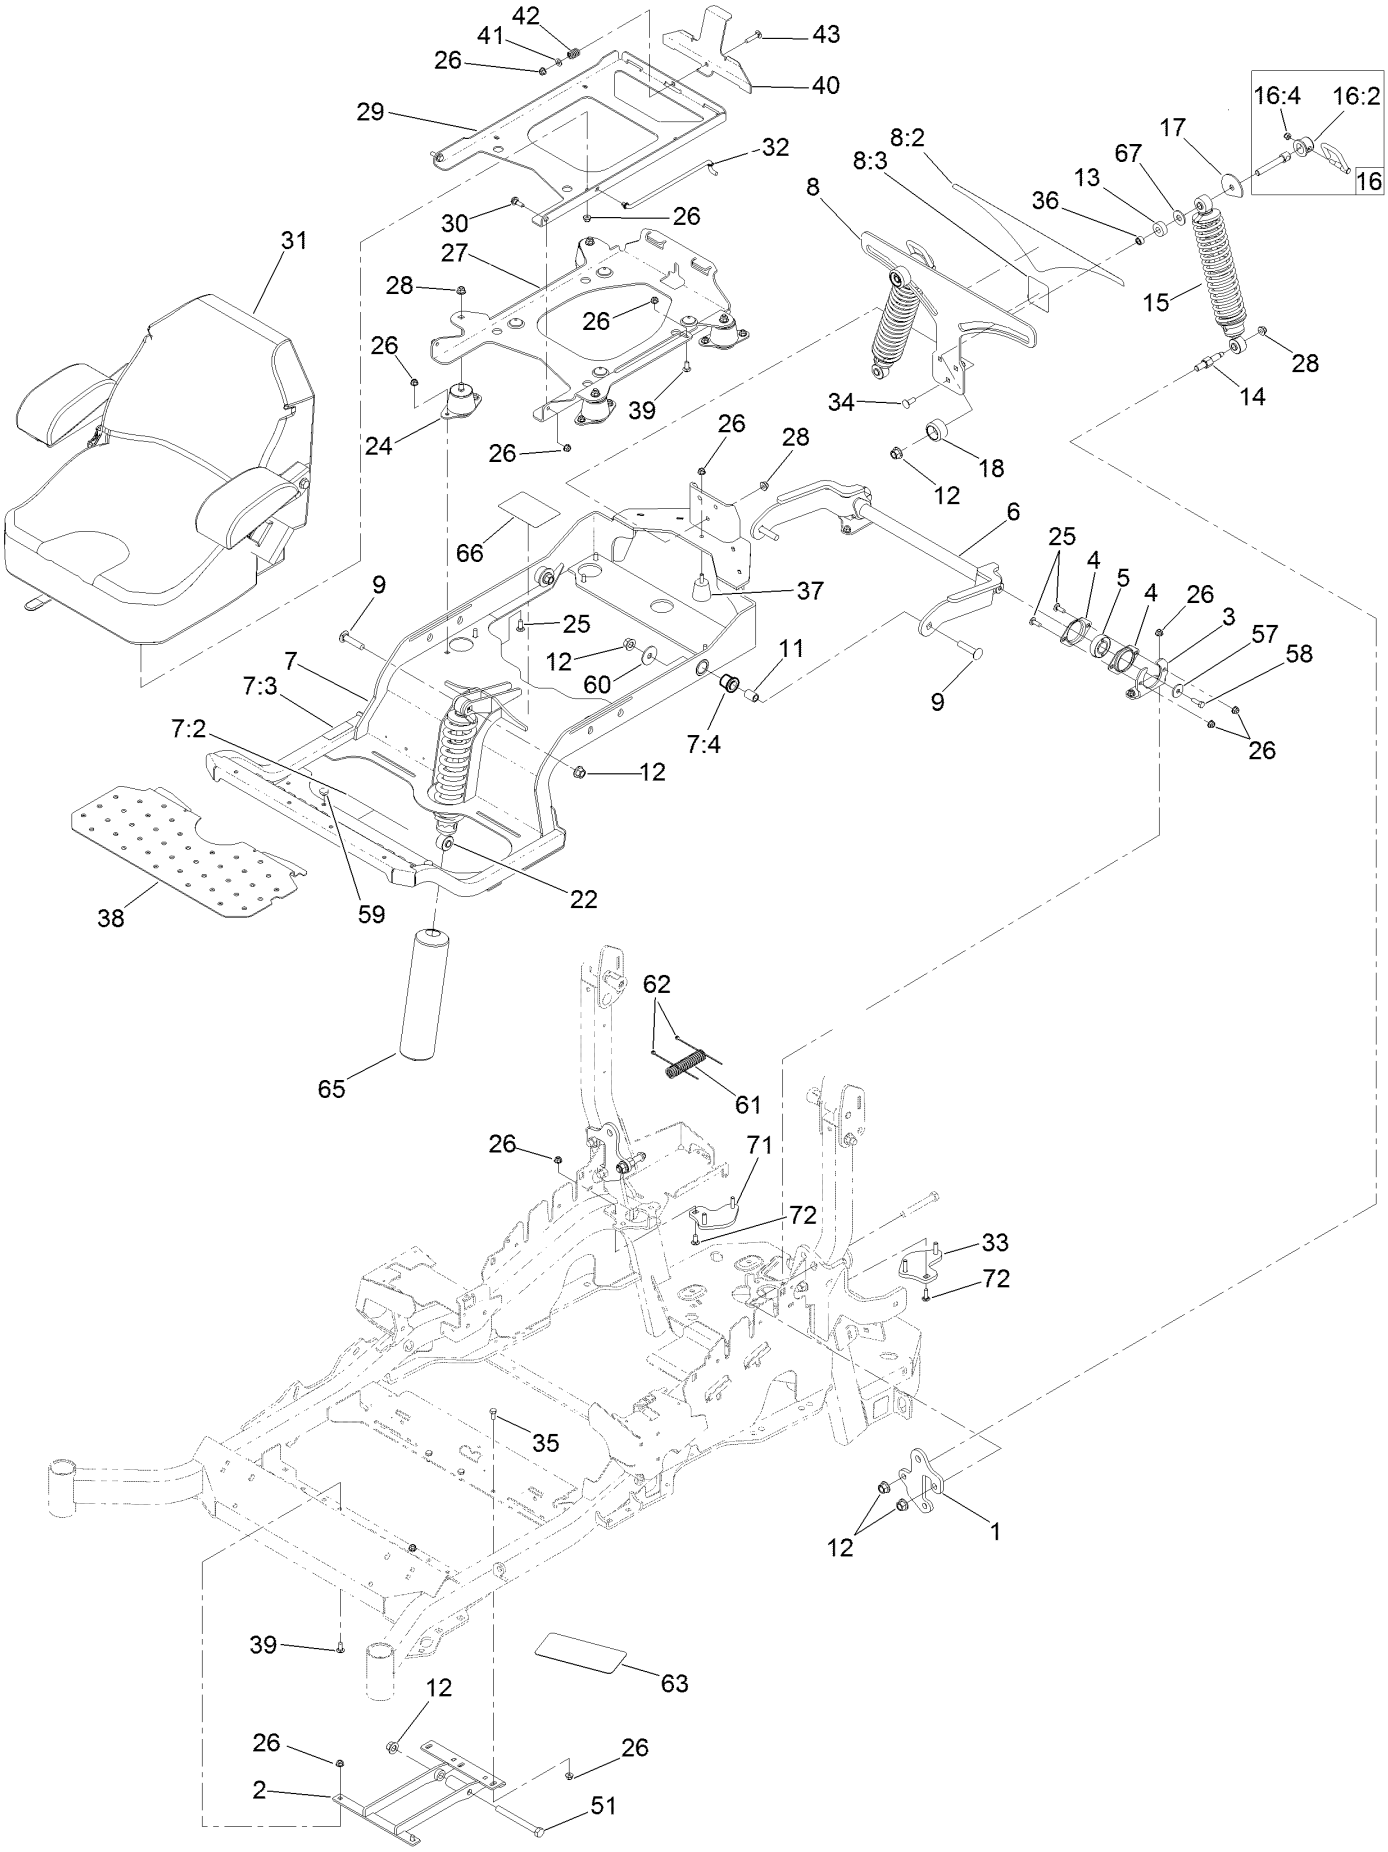

# Suspension Platform Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 131-6333-01 | 2 | Plate-Mount, Shock |
| 2 | 131-6327-01 | 1 | Mount-Lower |
| 3 | 127-6759-03 | 2 | Bracket-Bearing |
| 4 | 127-6743 | 4 | Housing-Bearing, Flange |
| 5 | 1-653346 | 2 | Bearing |
| 6 | 127-6754-03 | 1 | Arm-Trailing |
| 7 | 132-5057 | 1 | Subframe ASM |
| 7:2 | 132-0871 | 1 | Decal-Danger |
| 7:3 | 115-9625 | 1 | Decal-Brake, Parking |
| 7:4 | 127-6745 | 2 | Bushing-Flange |
| 8 | 133-1808 | 1 | Bracket-Mounting |
| 8:2 | 132-5067 | 1 | Decal-Adjustment, Ride |
| 8:3 | 132-5063 | 1 | Decal-Lock, Cam |
| 9 | 127-6768 | 3 | Screw-CARR |
| 11 | 127-6751 | 2 | Spacer-Aluminum |
| 12 | 99-5107 | 8 | Nut-Lock |
| 13 | 131-8801 | 2 | Spacer |
| 14 | 131-6348 | 2 | Bolt-Shoulder |
| 15 | 131-8827 | 2 | Shock-Spring |
| 16 | 131-8843 | 2 | Cam Lock ASM |
| 16:2 | 107-1644 | 1 | Cap-Lock |
| 16:4 | 119-4038 | 1 | Nut-Hex, NI |
| 17 | 131-4646 | 2 | Plate-Stop |
| 18 | 131-4647 | 2 | Knob-Front |
| 22 | 131-8829 | 1 | Shock-Spring |
| 24 | 109-9034 | 4 | Isolator-Seat |
| 25 | 3230-10 | 12 | Screw-CARR |
| 26 | 104-8300 | 32 | Nut-Flange, NI |
| 27 | 131-6324-03 | 1 | Plate-Support, Iso Seat |
| 28 | 104-8301 | 9 | Nut-Flange, NI |
| 29 | 116-3859-03 | 1 | Plate-Frame, Seat |
| 30 | 116-1297 | 2 | Screw-Shoulder |
| 31 | 116-0035 | 1 | Seat-Standard |
| 32 | 116-0070 | 1 | Rod-Prop |
| 33 | 127-6766 | 1 | LH Plate ASM (W/Studs) |
| 34 | 3231-22 | 3 | Screw-CARR |
| 35 | 322-3 | 3 | Screw-HH |
| 36 | 47-7270 | 2 | Bearing-Needle |
| 37 | 132-5058 | 1 | Bumper-Rubber |
| 38 | 132-5089-01 | 1 | Floorpan |
| 39 | 3230-23 | 3 | Screw-CARR |
| 40 | 132-5088-03 | 1 | Plate-Latch,Seat |
| 41 | 3256-23 | 1 | Washer-Flat |
| 42 | 107-3017 | 1 | Spring-Compression |
| 43 | 3230-4 | 1 | Screw-CARR |
| 51 | 325-19 | 1 | Screw-HH |
| 57 | 105-3048 | 2 | Washer-Flat |
| 58 | 116-0648 | 2 | Screw-HH, Thread Locking |
| 59 | 1-513658 | 2 | Bumper |
| 60 | 86-1990 | 2 | Washer-Thrust |
| 61 | 131-8846 | 1 | Cover-Hose |
| 62 | 1-303287 | 2 | Tie-Cable |
| 63 | 131-8835 | 1 | Tread-Grip |
| 65 | 132-5068 | 1 | Cover-Shock |
| 66 | 125-9383 | 1 | Decal-Service Aid |
| 67 | 3256-6 | 2 | Washer-Flat |
| 71 | 127-6765 | 1 | RH Plate ASM (W/Studs) |
| 72 | 3230-22 | 2 | Screw-CARR |


# Seat Assembly No. 116-0035

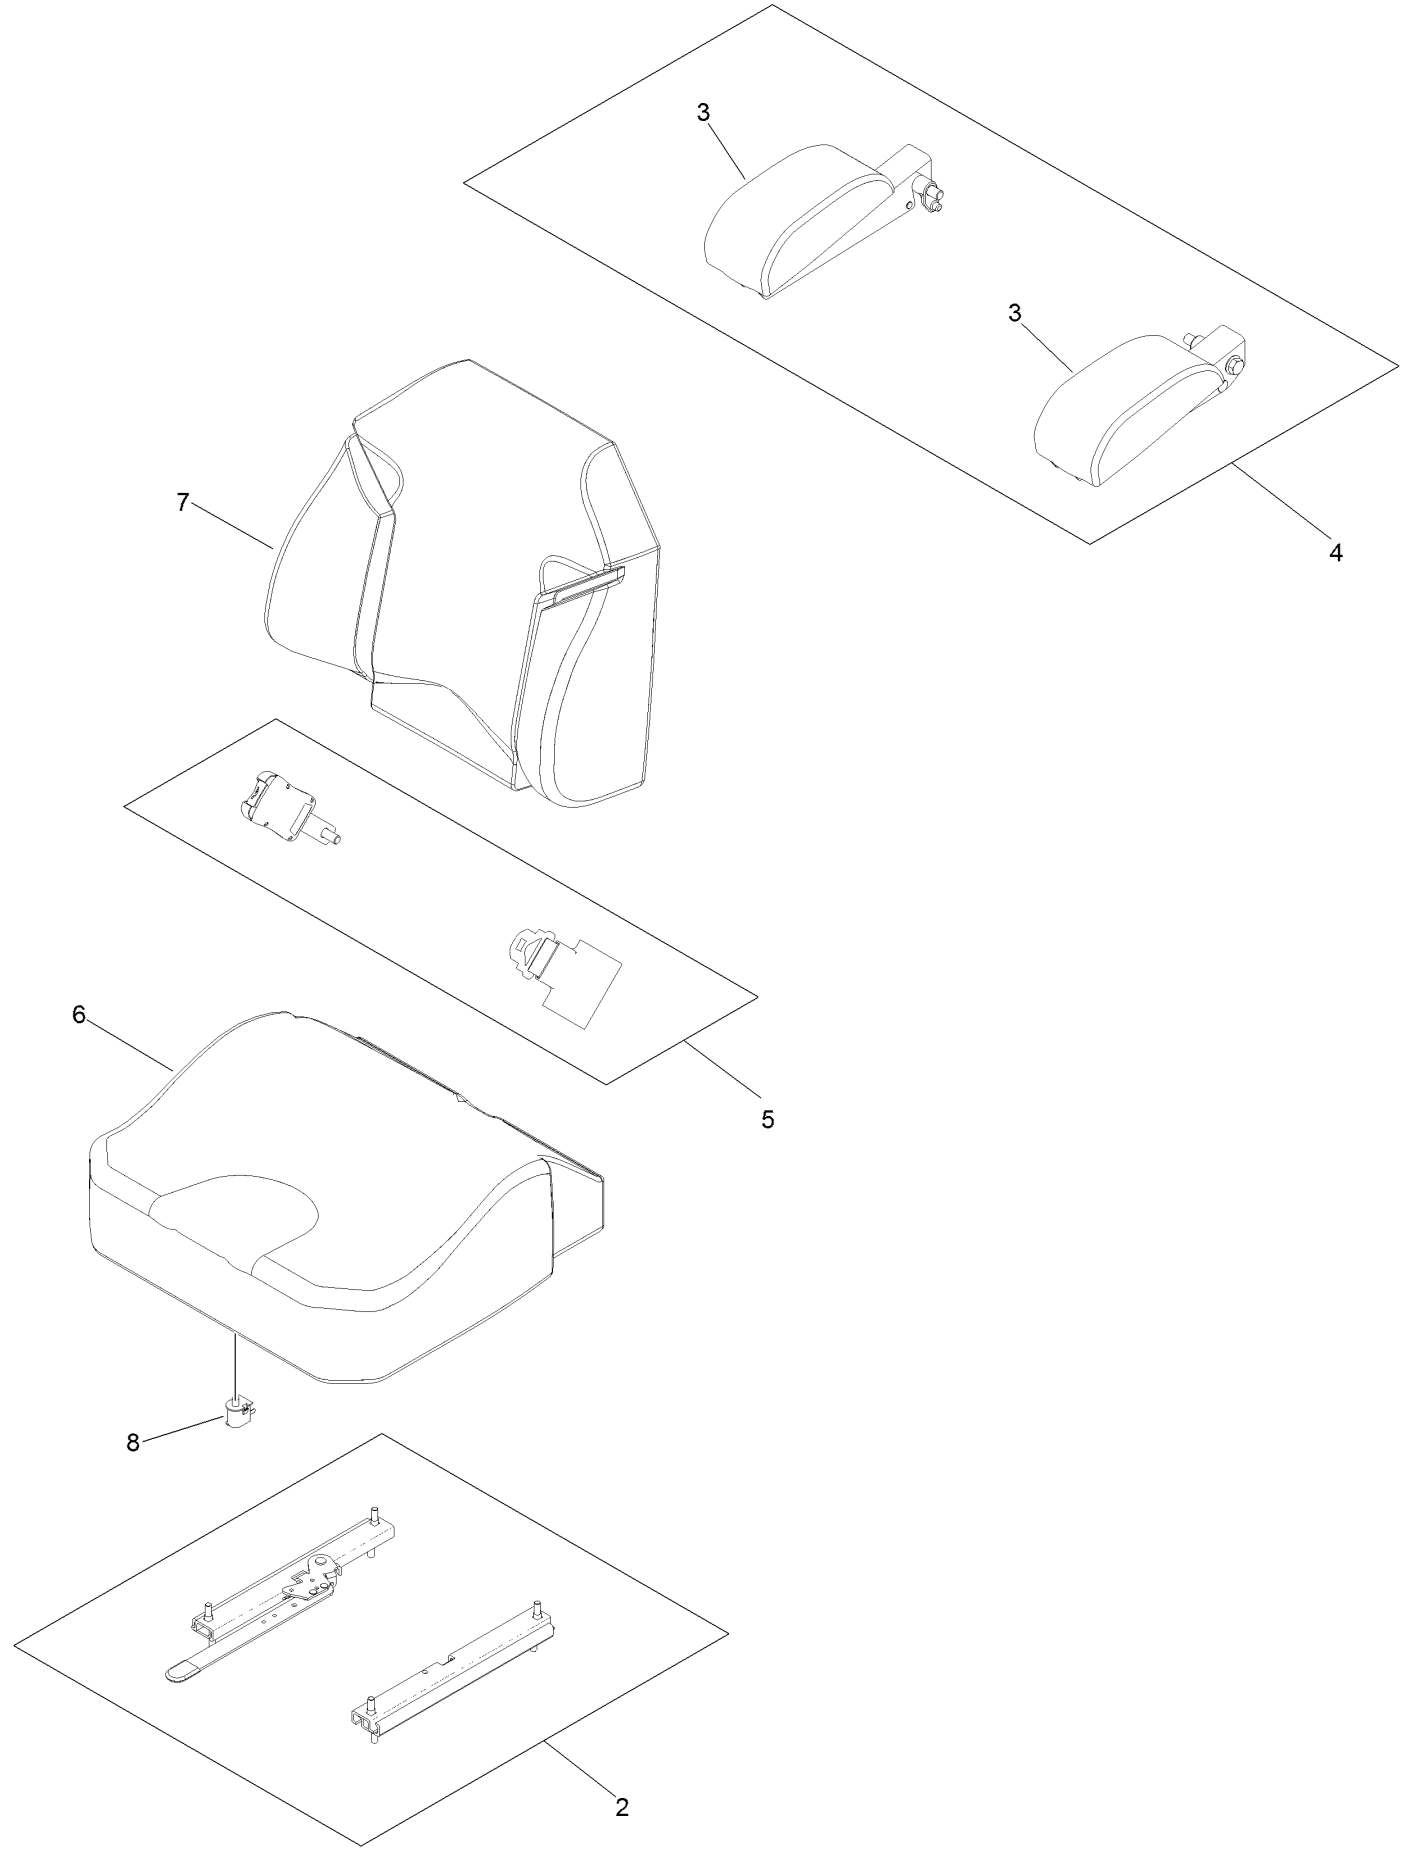

# Seat Assembly No. 116-0035 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 2 | 109-9801 | 1 | Seat Track Set |
| 3 | 109-9802 | 1 | Arm Rest Pad Set |
| 4 | 109-9803 | 1 | Arm Rest Set |
| 5 | 109-9805 | 1 | Seat Belt Kit |
| 6 | 109-9806 | 1 | Cover-Cushion |
| 7 | 109-9808 | 1 | Cover-Back |
| 8 | 82-2190 | 1 | Switch-Bail |

# Suspension Platform Rubber Mat Assembly

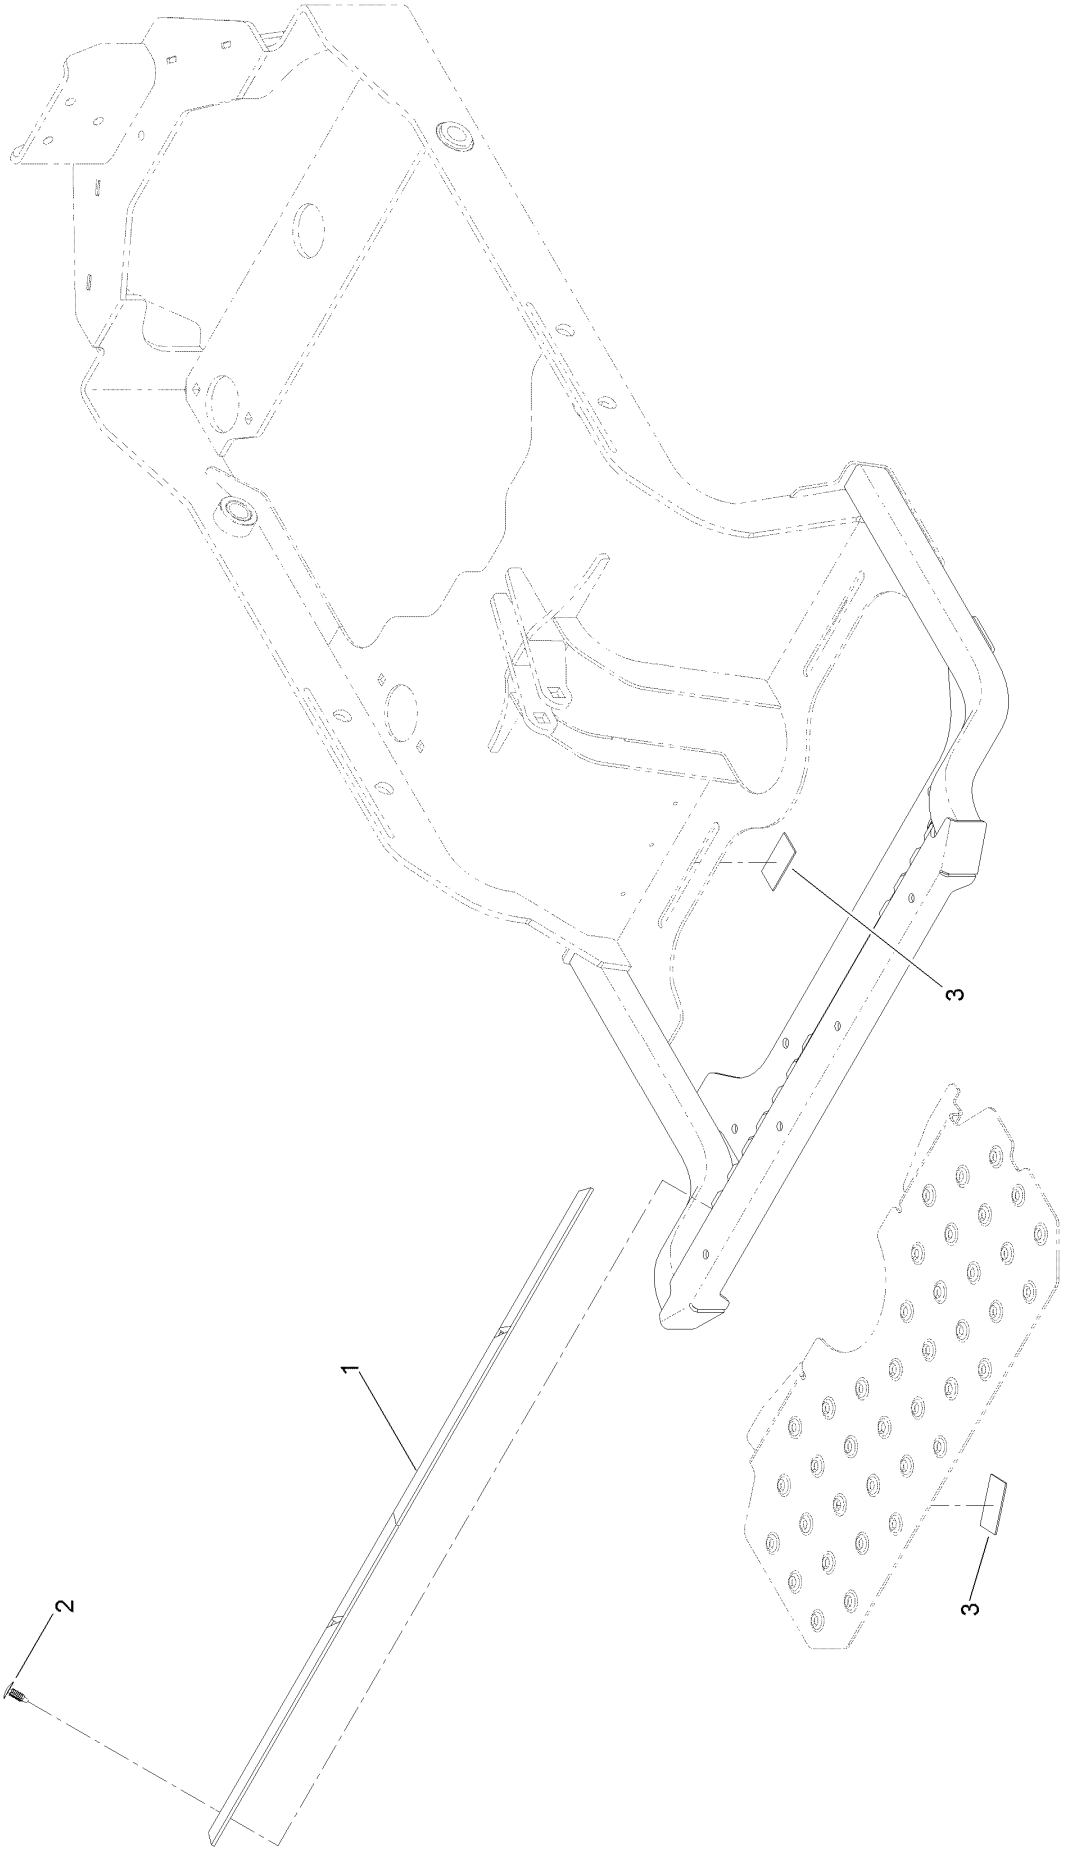

# Suspension Platform Rubber Mat Assembly (continued)

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 133-1810 | 1 | Mat-Floor |
| 2 | 117-2382 | 2 | Plug-Plastic |
| 3 | 130-0733 | 4 | Pad-Rubber |

# Attachments and Accessories

## For 74997 Z Master Professional 6000 Series Riding Mower with 60in TURBO FORCE Side Discharge Mower

| Product Name | Model/Part |
|---|---|
| Blade-Mid Flow, 20.5in | 105-7715-03 |
| Blade-Lo Flow, 20.5in | 105-7716-03 |
| Blade-Hi Flow, 20.5in | 105-7718-03 |
| Blade-Recycler, 20.5in | 105-7777-03 |
| Blade-Atomic, 20.5in | 105-8777-03 |
| Turbo Baffle Kit | 107-1634 |
| 6 Pack Blade, 20.5in Hi-Flow | 108-1114 |
| 6 Pack-Blade, 20.5in Atomic | 108-1115 |
| 6 Pack Blade, 20.5in Mid-Flow | 108-1123 |
| 6 Pack-Blade, 20.5in Lo Flow | 108-1128 |
| Anti-Scalp Kit (Trim Side) | 108-4140 |
| Hitch Kit | 109-9487 |
| 6 Pack-Blade, 20.5in Recycler | 110-0405 |
| Hypr-Oil 500 (quart) | 114-4713 |
| Hypr-Oil 500 (gallon) | 114-4714 |
| Hypr-Oil 500-5 (5 gallon) | 114-4715 |
| Bimini Folding Shade Assembly | 115-4510 |
| Recycler Kit | 115-7468 |
| Roller Striper Kit | 115-7470 |
| Light Kit | 116-1154 |
| Operator Controlled Discharge Chute Kit | 117-3600 |
| MVP Belt and Blade Kit | 127-1639 |
| Spanner Wrench | 132-5069 |
| Toro Rider Over Seat Bag | 490-7317 |
| Toro Deluxe Rider Cover | 490-7319 |
| Toro Rider Arm Rest Bag | 490-7320 |
| Spark Arrestor Screen | 75-6880 |
| Blower and Drive Kit | 78553 |
| E-Z Vac Triple Bagging System | 78563 |
| E-Z Vac DFS Collection System | 78567 |
| Filter Minder Gauge | 99-4664 |
| Trash Holder Kit | TC26 |

## Notes:




**Count on it.**