Form No. 3398-402 Rev B

TORO®

Count on it.

Parts Catalog

Z Master® Commercial 2000 Series Riding Mower

with 48 TURBO FORCE® Side Discharge Mower

Model No. 74142TE—Serial No. 316000001 and Up

Register at www.Toro.com.
Original Instructions (EN)

CE

3398-402 B

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head


Contents

Frame and Caster Wheel Assembly 4
Roll-Over Protection System Assembly No. 116-0231 6
Caster Fork and Wheel Assembly 8
Z Stand and Weight Assembly 10
Z Stand Assembly 12
Hydro Drive System Assembly 14
Hydro Idler Arm Assembly 16
LH Transaxle Assembly No. 130-2851 18
RH Transaxle Assembly No. 130-2850 20
Fuel Tank and Hose Assembly 22
Seat Mounting Assembly 24
Seat Assembly No. 127-9538 26
Motion Control Assembly 28
Parking Brake Assembly 30
Engine, Muffler and Control Panel Assembly 32
Deck Lift Assembly 34
Height-of-Cut Assembly No. 121-4779 36
Deck Assembly 38
Deck Decal Assembly No. 131-7664 40
Deflector Assembly No. 120-2451 42
Idler Assembly 44
Electrical Assembly 46
Attachments and Accessories 48

© 2016—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

Frame and Caster Wheel Assembly

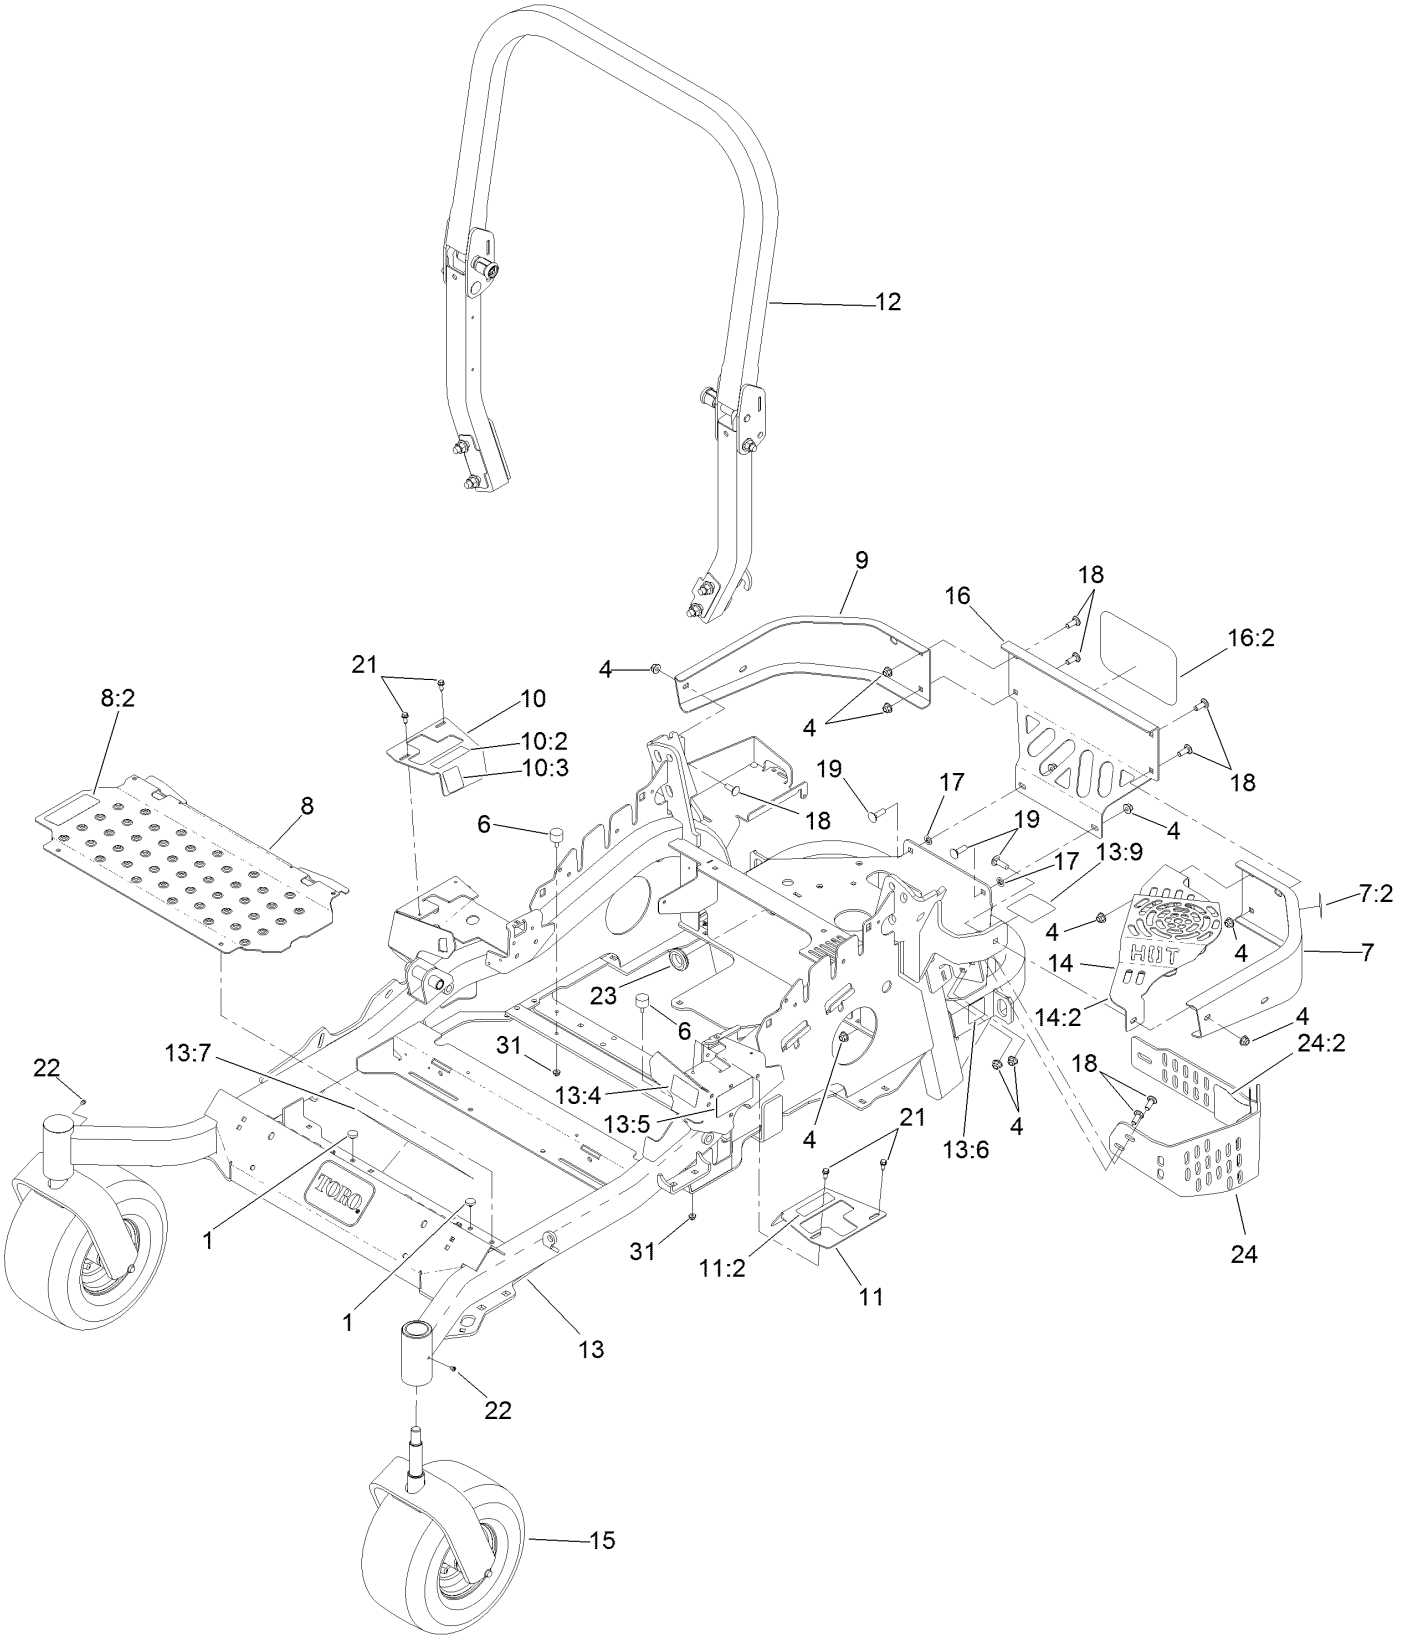


Frame and Caster Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	1-513658	2	Bumper
4	104-8301	12	Nut-Flange, NI
6	116-6380	2	Bumper-Rubber (W/ Stud)
7	109-9869	1	Bumper-Rear, LH
7:2	106-5517	1	Decal-Warning, Hot Surface
8	117-0915	1	Floorpan ASM
8:2	112-9028	1	Decal-Missing, Cover
9	116-0508-03	1	Bumper-Rear, RH
10	121-4780	1	RH Motion Control Cover ASM
10:2	99-8936	1	Decal-Control, Motion
10:3	116-5988	1	Decal-Park Brake, Ce
11	121-4789	1	Motion Control Cover ASM
11:2	99-8936	1	Decal-Control, Motion
12	116-0231	1	ROPS ASM
13	131-7660	1	Frame ASM
13:4	117-3864	1	Decal-Fuel Fill, Ce
13:5	120-5891	2	Decal
13:6	106-2655	2	Decal-Hazard, Pinched Finger
13:7	132-0871	1	Decal-Danger
13:9	117-1158	2	Decal-Bypass
14	121-4800	1	Muffler Guard ASM W/Foil
14:2	121-4792	1	Foil-Tape
15		2	Front Caster ASM ●
16	119-2691	1	Rear Guard ASM
16:2	67-7320	1	Decal
17	107-3154	2	Nut-Push
18	3231-22	7	Screw-CARR
19	3231-25	3	Bolt-CARR
21	32144-10	4	Screw-HWH
22	1-811010	2	Plug
23	120-3265	1	Grommet
24	121-4781	1	LH Lower Muffler Guard ASM
24:2	106-5517	1	Decal-Warning, Hot Surface
31	104-7201	2	Nut-Flange, NI

● Not serviced separately

Roll-Over Protection System Assembly No. 116-0231

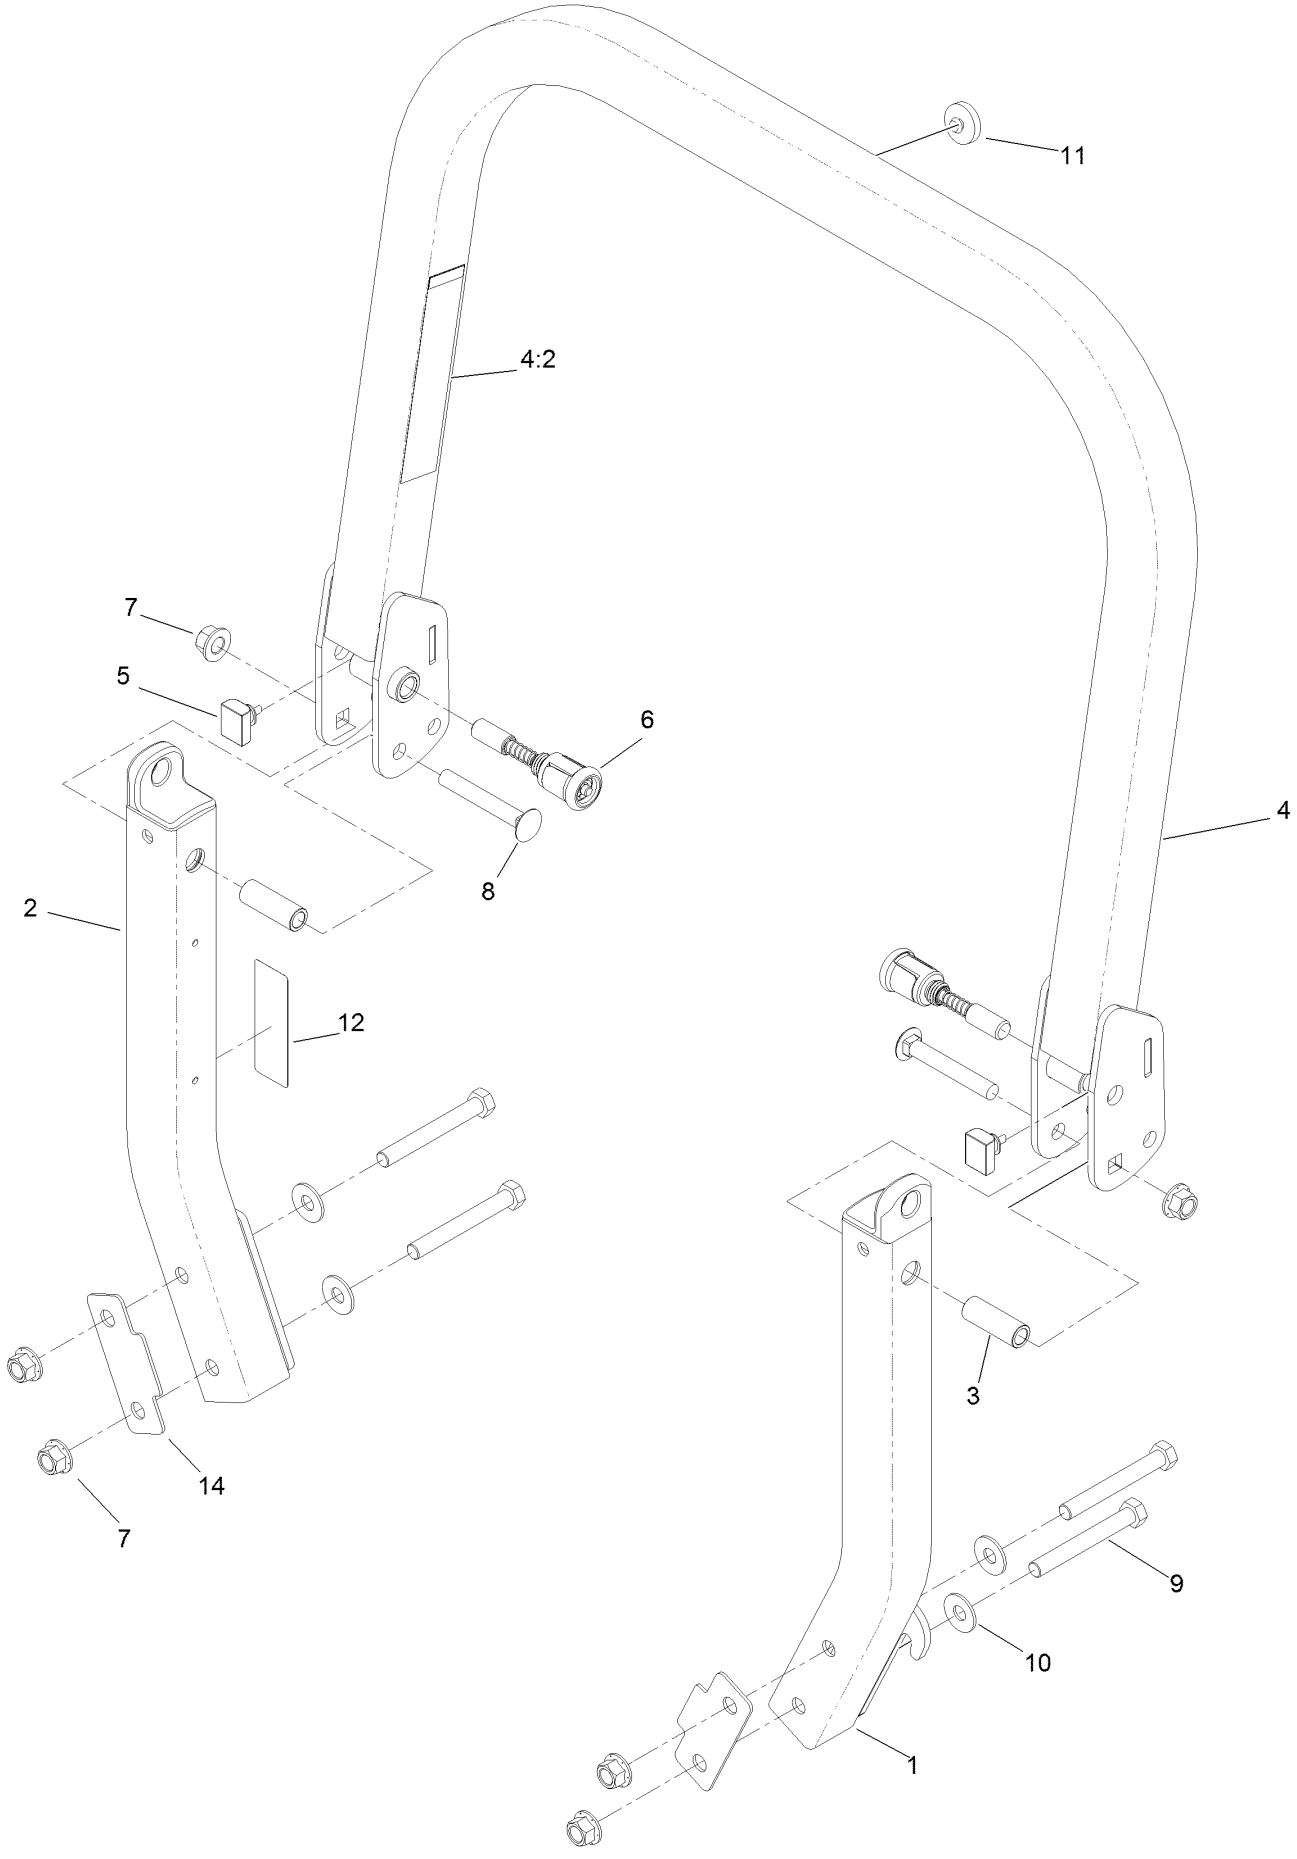


Roll-Over Protection System Assembly No. 116-0231 (continued)

Ref.	Part Number	Qty.	Description
1		1	Leg-ROPS, LH ●
2		1	Leg-ROPS, RH ●
3	109-6653	2	Spacer
4		1	Upper ROPS ASM ●
4:2	107-3069	1	Decal-Warning, Folding ROPS
5	109-5337	2	Bumper-ROPS
6	116-0104	2	Pin-Spring
7	99-5107	6	Nut-Lock
8	3233-10	2	Screw-CARR
9	325-35	4	Screw-HH
10	109-9505	4	Washer-Spring
11	109-9233	1	Bumper-Push-In, Rubber
12	117-0346	1	Decal-Caution, Fuel Vent
14	116-0960	2	Spacer

● Not serviced separately

Caster Fork and Wheel Assembly

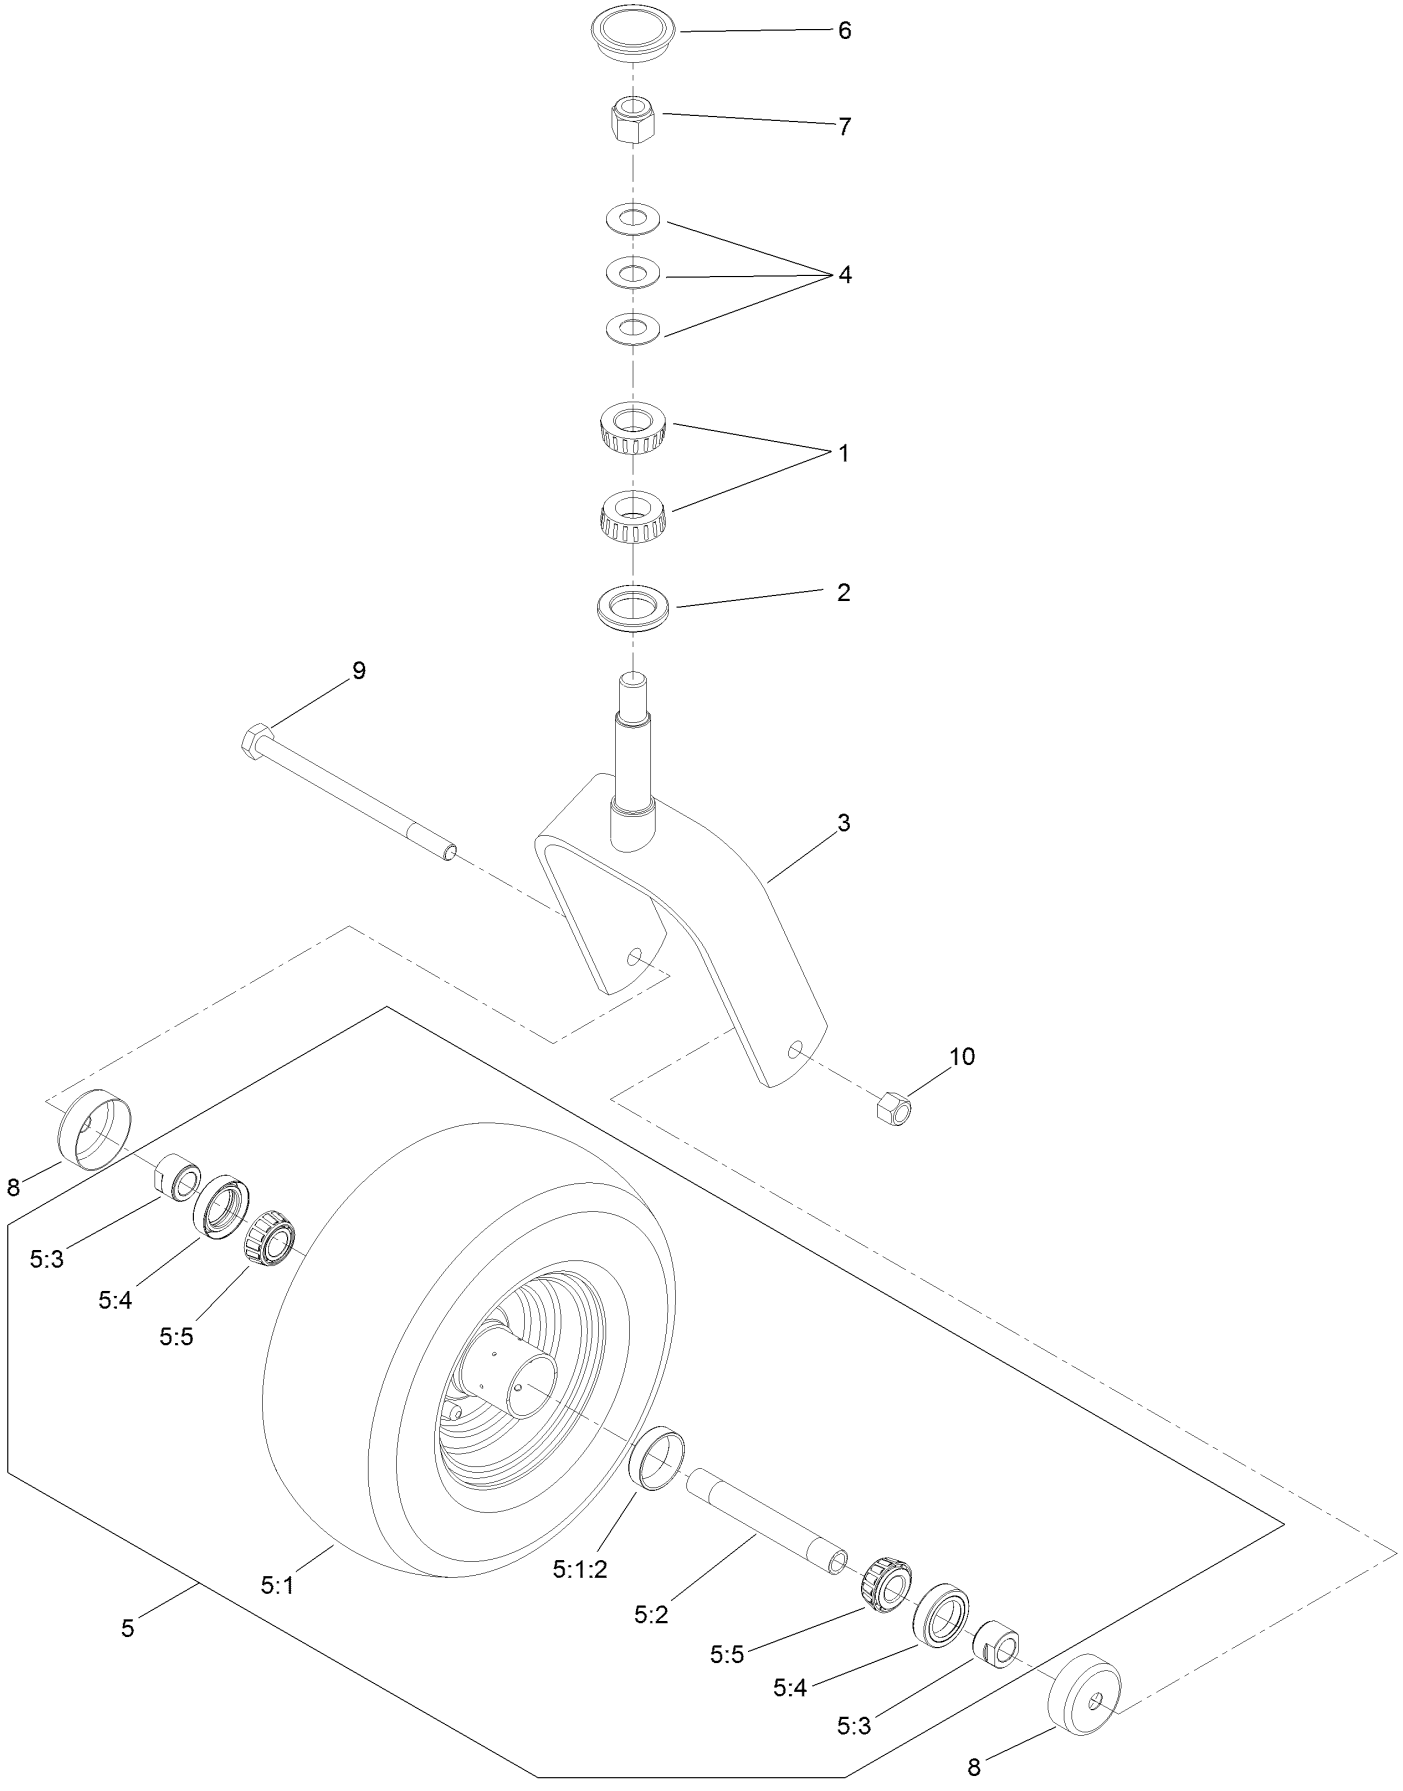


Caster Fork and Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	1-543509	2	Bearing-Roller, Tapered
2	116-5647	1	Seal-Grease
3	116-6701-01	1	Fork-Caster
4	1-633508	3	Washer-Bellville
5	103-5362	1	Wheel And Bearing ASM
5:1		1	Wheel And Tire ASM ●
5:1:2	1-633584	2	Bearing-Cup
5:2	103-3155	1	Axle-Caster
5:3	103-3051	2	Spacer-Nut
5:4	103-0063	2	Seal-Caster
5:5	1-633585	2	Bearing-Cone, Taper
6	103-4882	1	Cap-Grease
7	3296-51	1	Nut-Lock, NI
8	103-2768	2	Guard-Seal
9	325-36	1	Screw-HH
10	3296-23	1	Nut-Lock, NI

● Not serviced separately

Z Stand and Weight Assembly

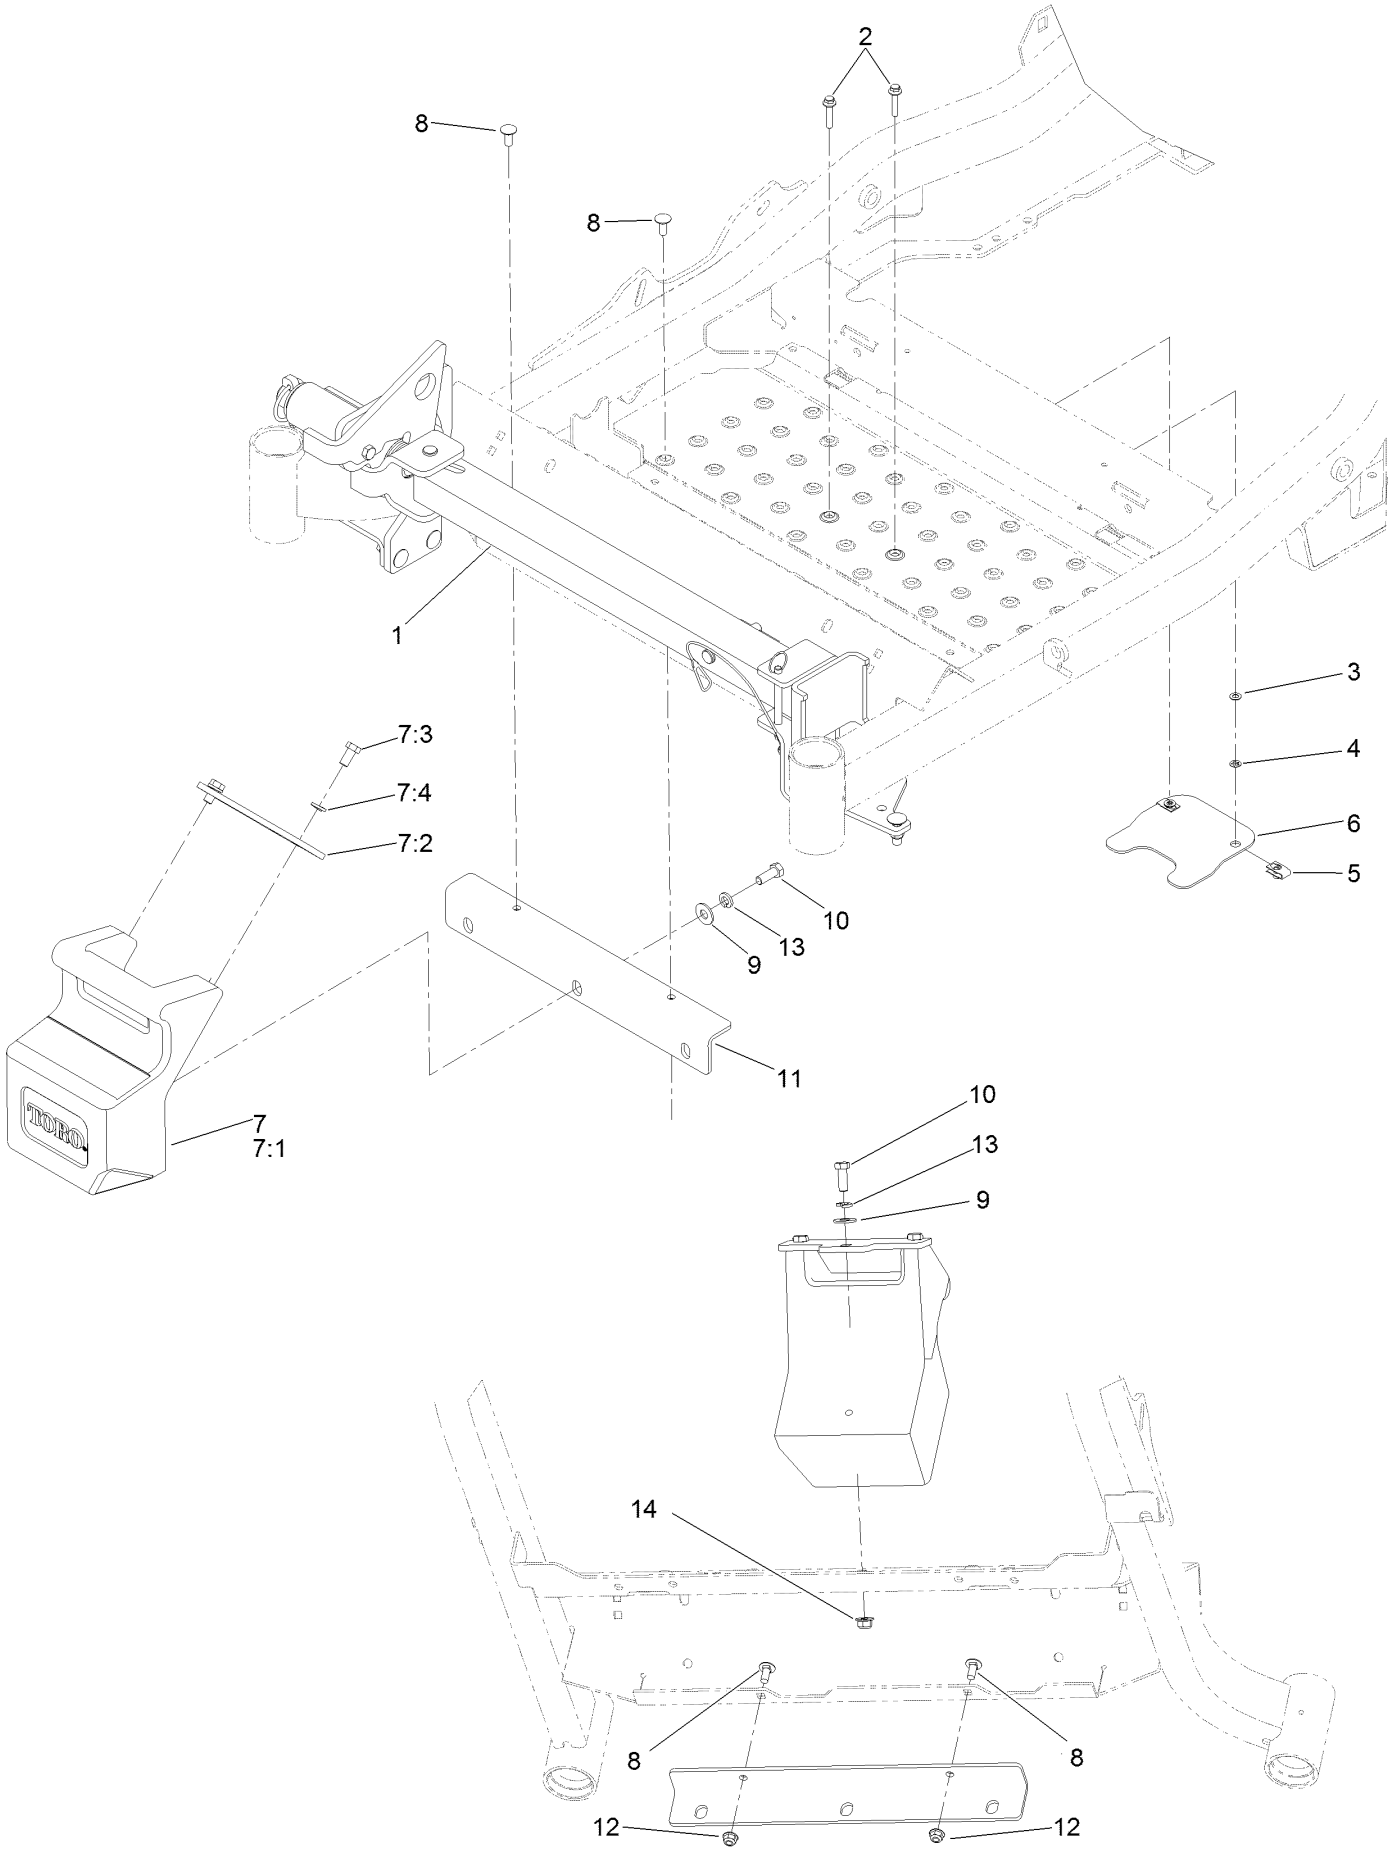


Z Stand and Weight Assembly (continued)

Ref.	Part Number	Qty.	Description
1		1	Z Stand ASM ●
2	3234-21	2	Screw-HHF
3	3256-60	2	Washer-Flat
4	106-8737	2	Nut-Retainer
5	107069	2	Clip
6	119-0395-03	1	Adapter-Captive
7	120-7885	1	Weight ASM
7:1	120-7881	1	Weight-43 Lb
7:2	115-3616-01	1	Tab-Support, Weight
7:3	323-4	2	Screw-HH
7:4	3253-5	2	Washer-Lock
8	3230-23	2	Screw-CARR
9	3256-4	2	Washer-Flat
10	323-6	2	Screw-HH
11	115-3615-01	1	Bracket-Mount, Weight
12	104-8300	2	Nut-Flange, NI
13	3253-5	2	Washer-Lock
14	104-8301	1	Nut-Flange, NI

● Not serviced separately


Z Stand Assembly

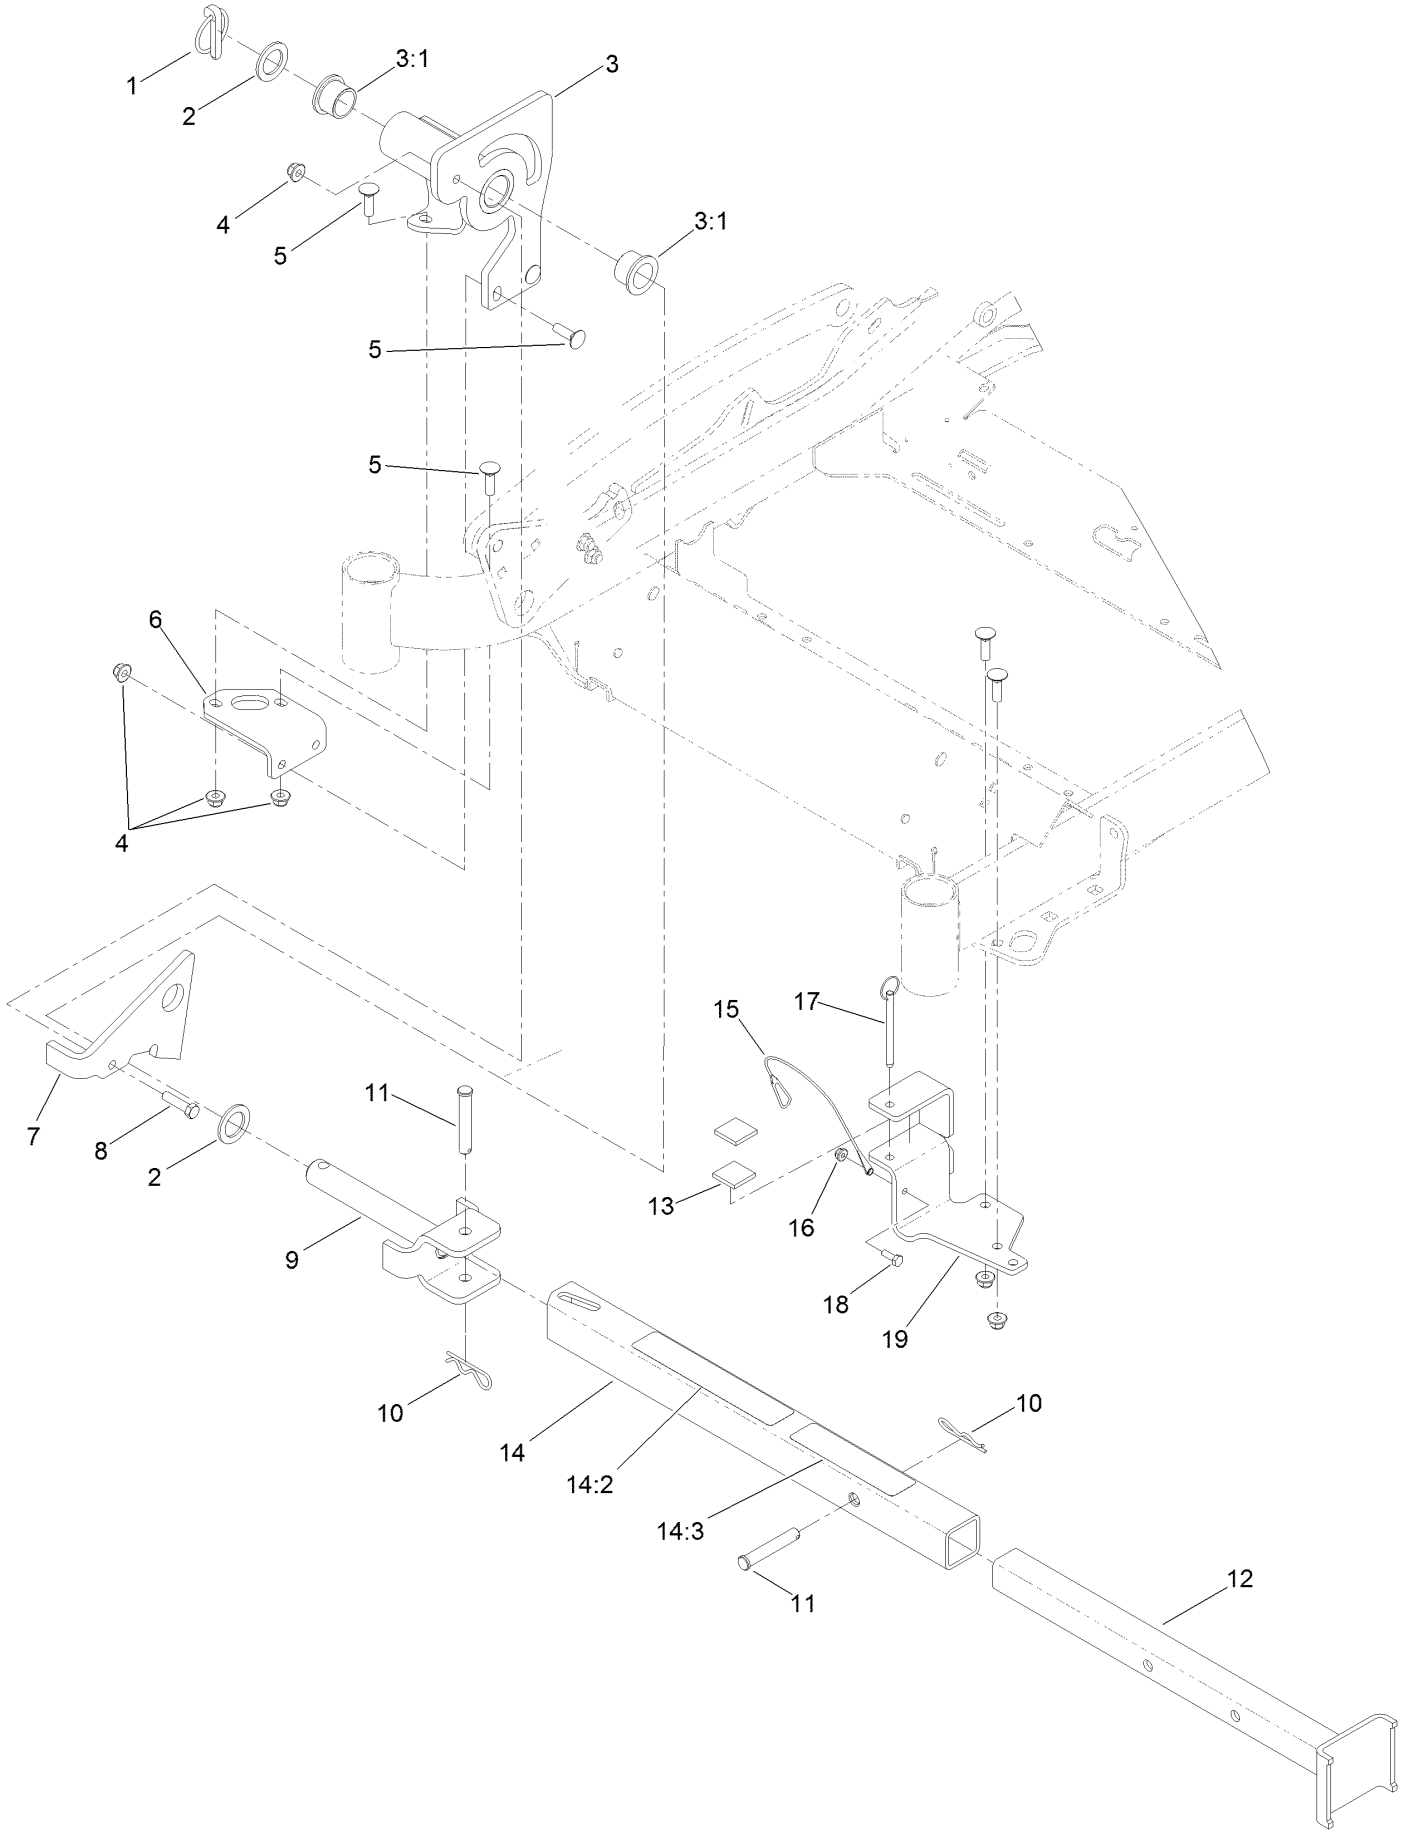

Z Stand Assembly (continued)

Ref.	Part Number	Qty.	Description
1	283-71	1	Pin-Lynch
2	3-6781	2	Washer-Thrust
3	115-3635	1	Z Stand Pivot ASM
3:1	94-1291	2	Bushing
4	104-8301	8	Nut-Flange, NI
5	3231-25	7	Bolt-CARR
6	115-3619-01	1	Bracket-Mount, Pivot
7	100-9686-01	1	Bracket-Latch
8	323-8	1	Screw-HH
9	100-9692-01	1	Pin-Pivot
10	3290-355	2	Pin-Hair
11	283-55	2	Pin-Clevis
12	115-3631-01	1	Tube-Inner
13	115-3613	2	Cushion-Rubber
14	115-3634	1	Outer Tube ASM
14:2	106-7464	1	Decal-Z Stand
14:3	107-3969	1	Decal-Warning
15	100-9385	1	Lanyard-Nylon
16	104-7201	1	Nut-Flange, NI
17	105-1647	1	Pin-Hitch, Cotterless
18	321-4	1	Screw-HH
19	115-3625-01	1	Cradle-Z Stand

Hydro Drive System Assembly

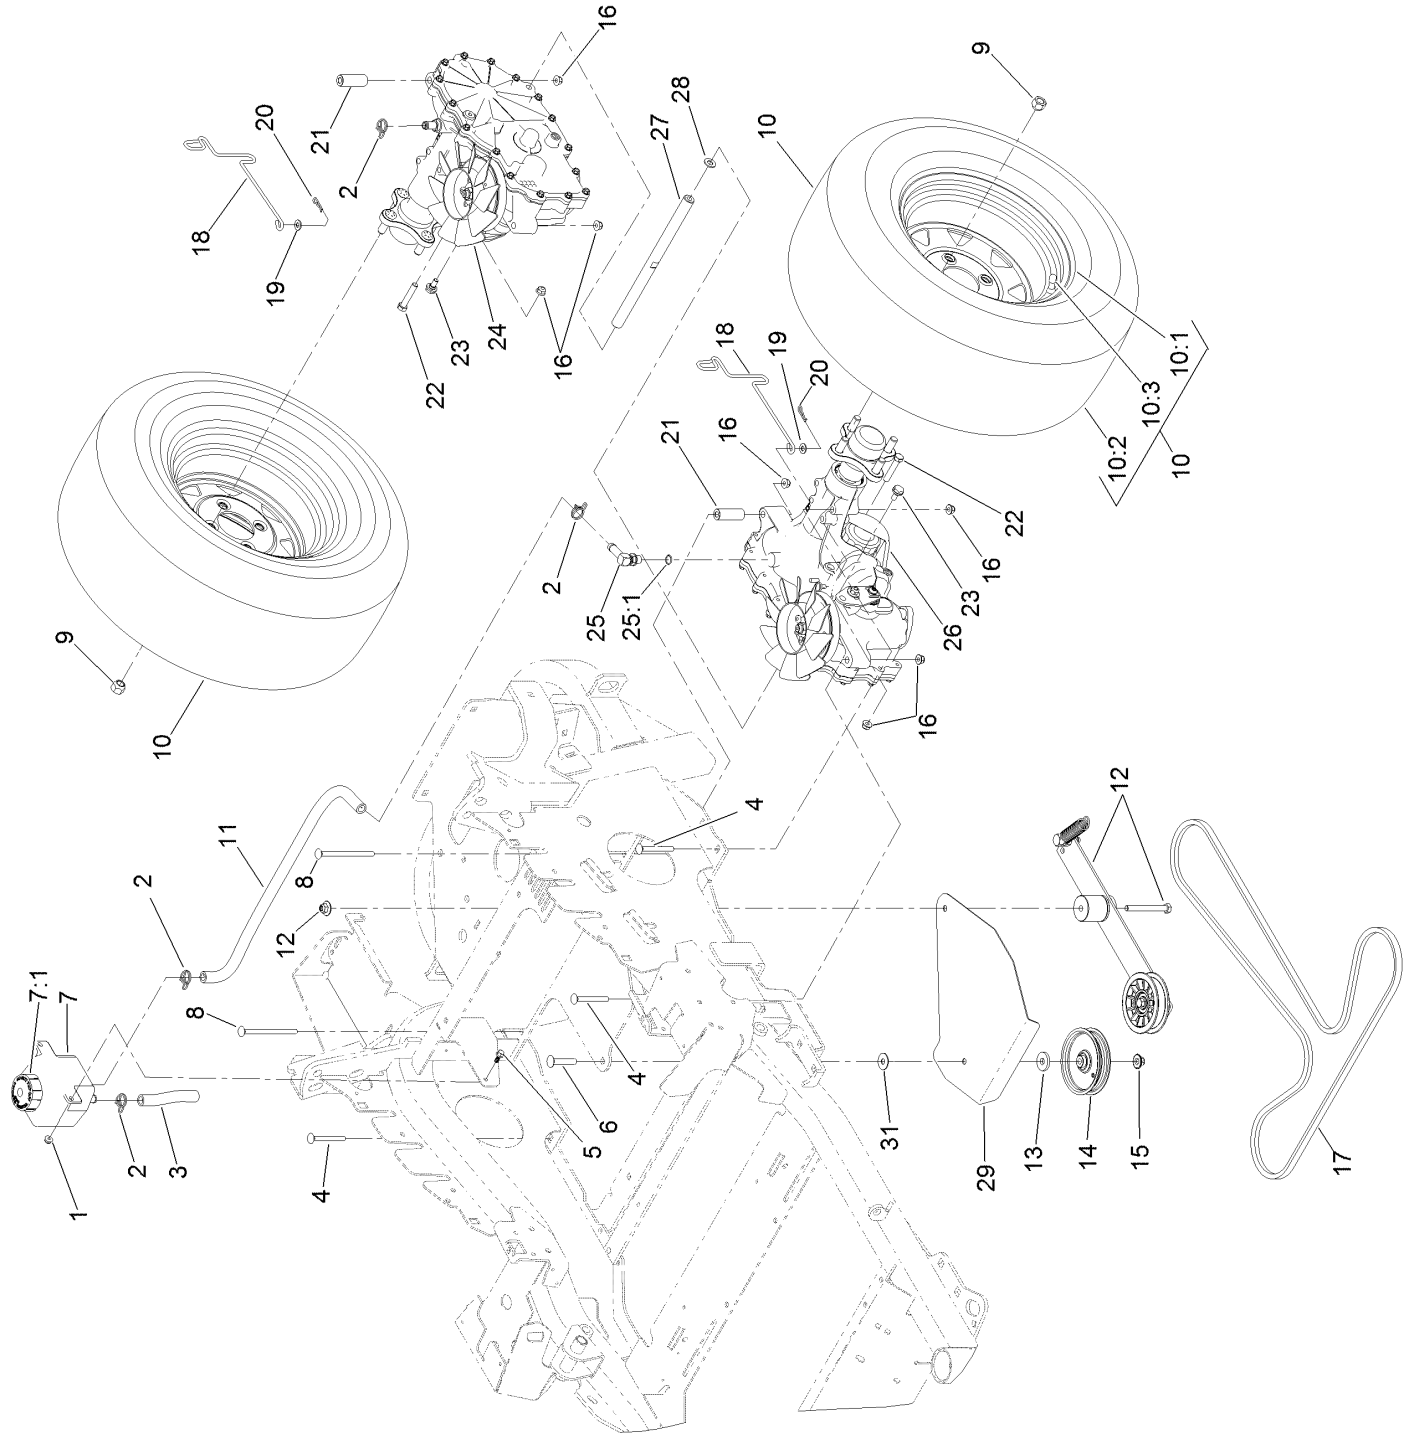


Hydro Drive System Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-7201	2	Nut-Flange, NI
2	117-1193	4	Clamp-Hose
3	119-2642	1	Hose-HYD
4	3230-9	6	Screw-CARR
5	99-6810	2	Screw-HHF
6	117-9971	1	Bolt-Carriage
7	109-2250	1	Vent-Tank, HYD
7:1	109-3320	1	Cap-Reservoir, HYD
8	3230-30	2	Screw-CARR
9	242-50	8	Nut-Lug
10	119-2692	2	Wheel And Tire ASM
10:1	120-3274	1	Wheel
10:2	120-3271	1	Tire
10:3	232-27	1	Stem-Valve
11	119-2689	1	Hose-HYD
12		1	Hydro Idler Arm ASM ●
13	1-373034	1	Washer
14	93-1622	1	Pulley-Idler
15	109-6658	1	Nut-Flange, NI
16	104-8300	10	Nut-Flange, NI
17	114860	1	Belt-V
18	125-8950	2	Rod-Bypass
19	3256-23	2	Washer-Flat
20	1-806003	2	Pin-Cotter
21	109-3652	2	Spacer-Hydro
22	94-7972	2	Screw-HH W/Loctite
23	37-8771	2	Bolt-Shoulder
24	130-2850	1	RH Transaxle ASM
25	109-6449	1	Fitting-Elbow, 90
25:1	237-42	1	O-Ring
26	130-2851	1	LH Transaxle ASM
27	117-8585	1	Shaft-Cross, Hydro
28	3256-24	1	Washer-Flat
29	125-4777-01	1	Plate-Guard
31	52-2860	1	Washer

● Not serviced separately


Hydro Idler Arm Assembly

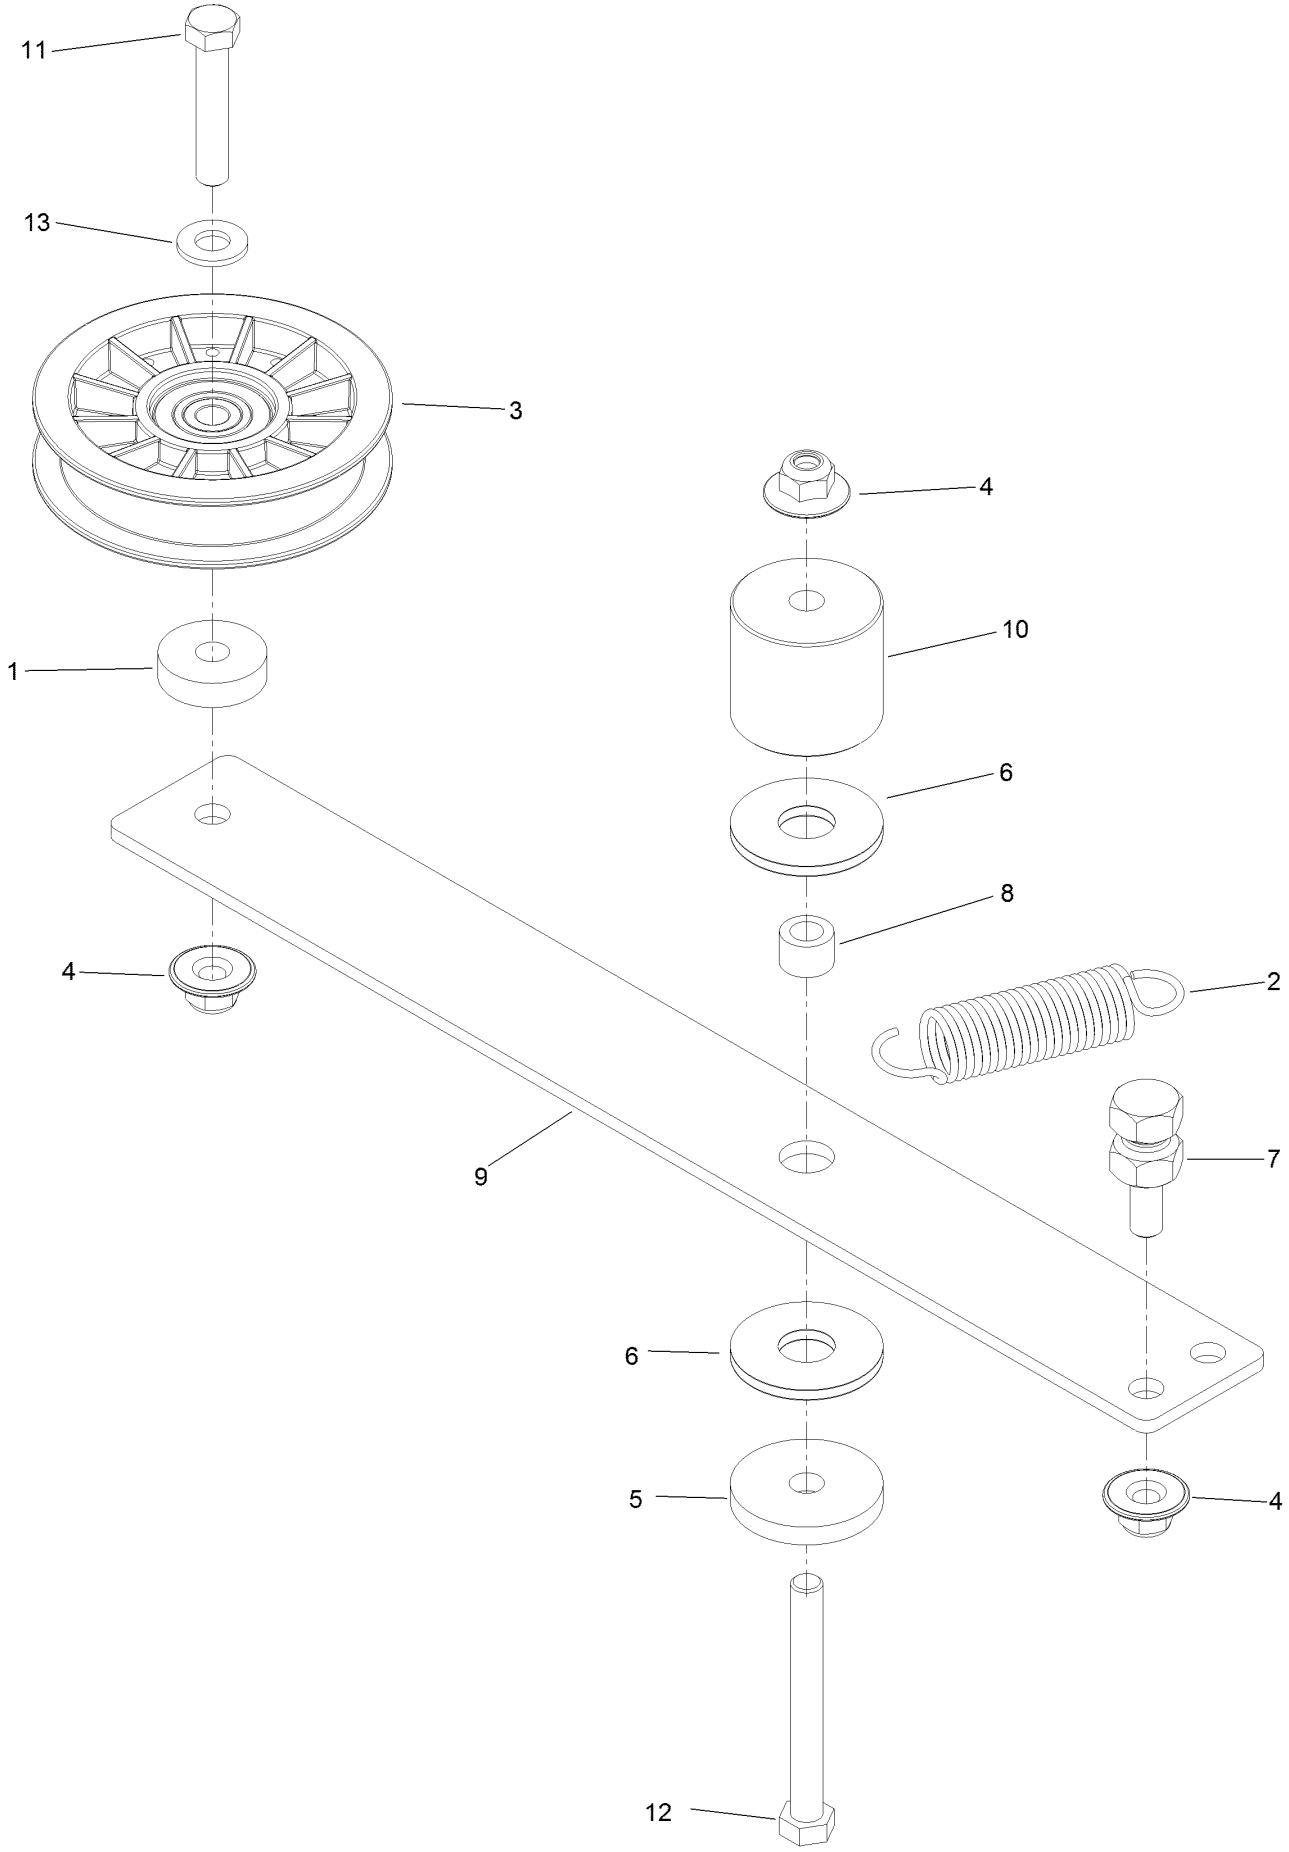

Hydro Idler Arm Assembly (continued)

Ref.	Part Number	Qty.	Description
1	105-7788	1	Spacer
2	108-4056	1	Spring-Extension
3	109-3397	1	Pulley-Idler, Flat
4	109-6658	3	Nut-Flange, NI
5	110-9981	1	Washer-Plain
6	114-0463	2	Washer-Friction, Composite
7	114-5866	1	Anchor-Spring, Short
8	115-4986	1	Spacer
9	119-9914	1	Arm-Idler, Hydro
10	119-2657	1	Spacer-Plain
11	323-10	1	Screw-HH
12	323-20	1	Screw-HH
13	3256-24	1	Washer-Flat

LH Transaxle Assembly No. 130-2851

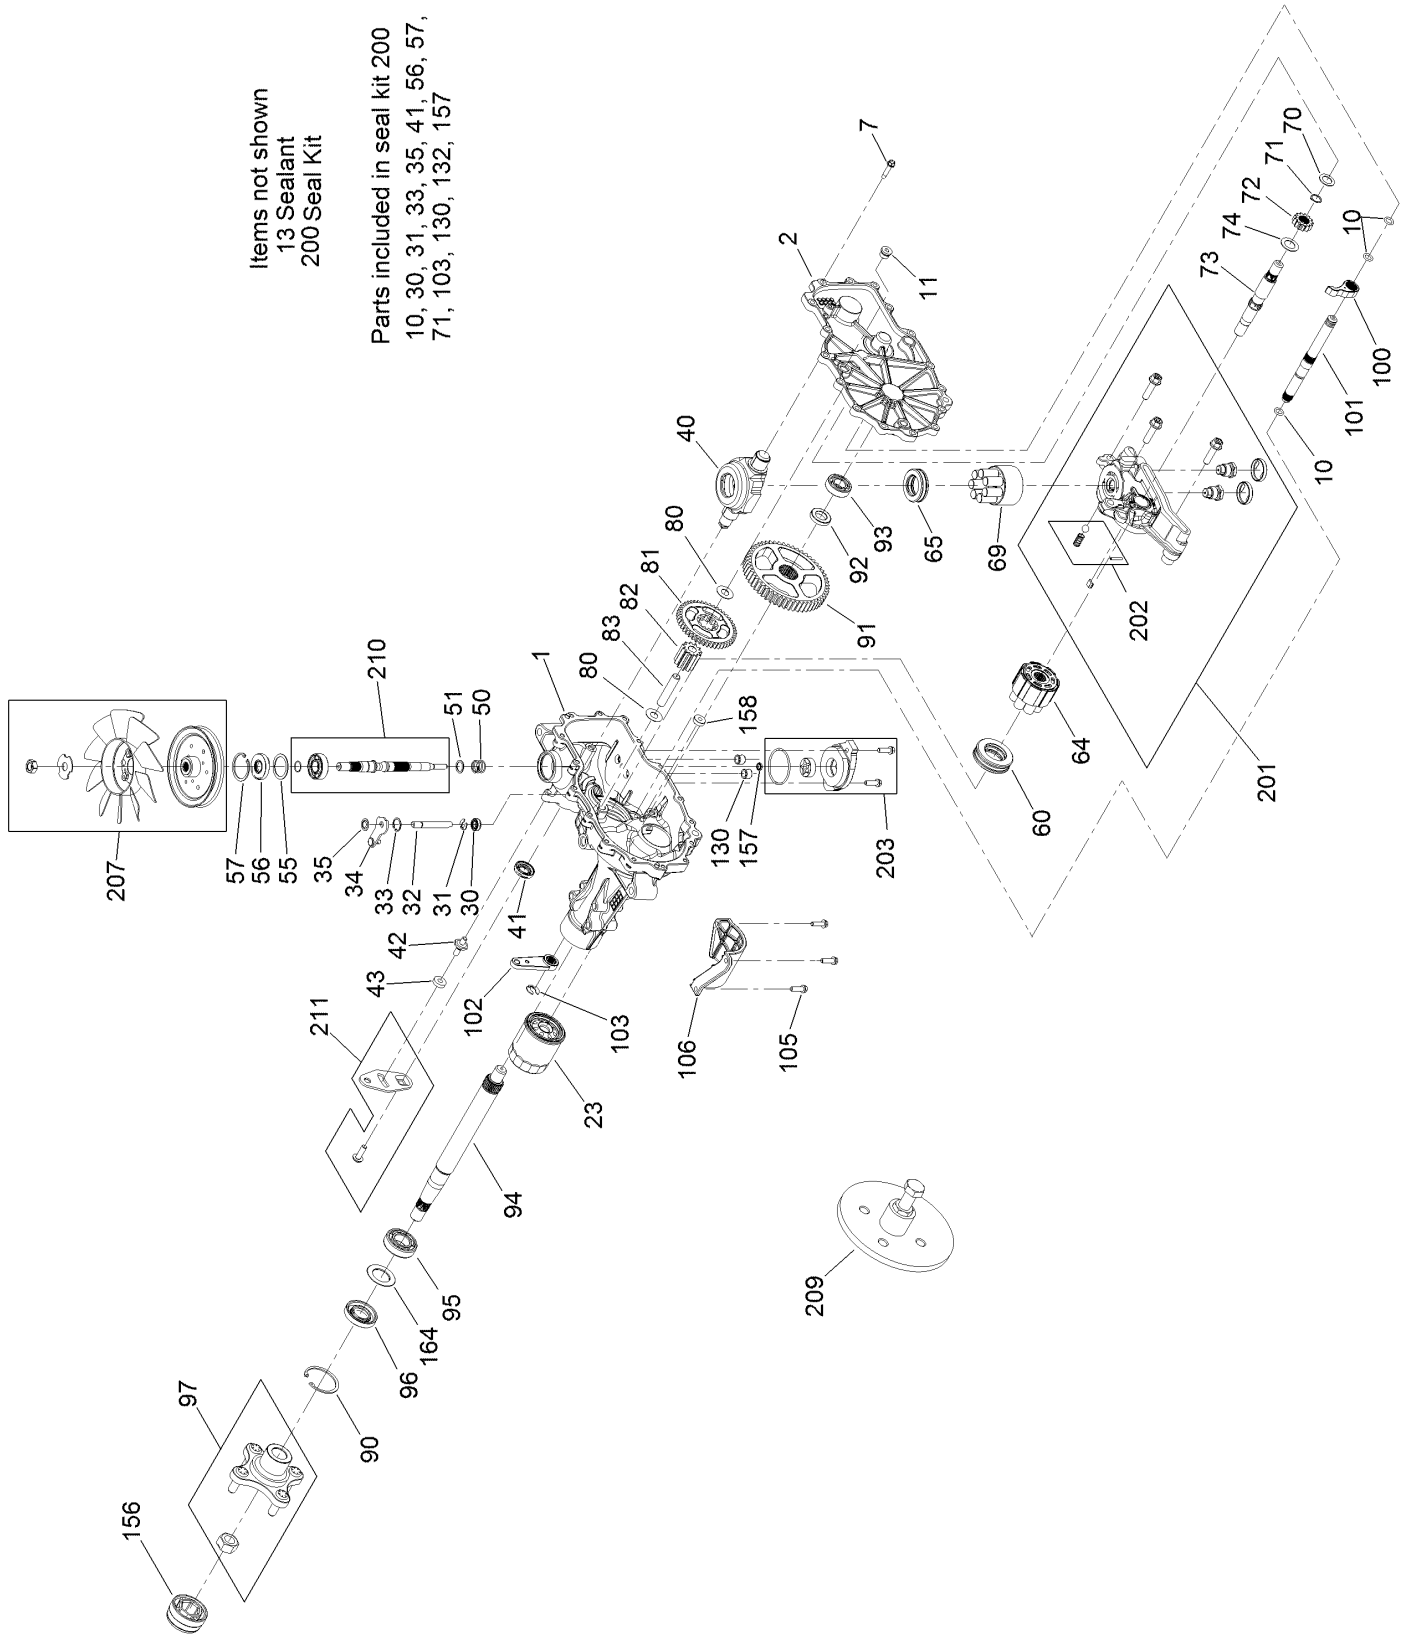


LH Transaxle Assembly No. 130-2851 (continued)

Ref.	Part Number	Qty.	Description
1	121-3233	1	LH Main Housing Kit
2	121-3234	1	LH Side Cover Kit
7	117-5359	16	Screw-HHF
10	130-8483	4	O-Ring
11	104-2189	1	Plug-Thread, Straight
13	104-2147	1	Sealant ●
23	109-3321	1	Element-Oil Filter, HYD
30	106-8676	1	Seal-Lip
31	106-8677	1	Ring-Retaining, EXT
32	114-1685	1	Rod-Bypass
33	106-8679	1	Ring-Retaining, Int
34	107-2490	1	Arm-Bypass
35	106-8681	1	Ring-Retaining, EXT
40	104-5304	1	Swashplate-Trunnion
41	104-5313	1	Seal-Lip
42	104-2116	1	Stud
43	112-9853	1	Puck-Friction
50	120-5537	1	Spring-Compression
51	120-5538	1	Washer
55	104-5308	1	Spacer
56	104-5310	1	Seal-Lip
57	104-5309	1	Ring-Retaining
60	109-2865	1	Bearing-Thrust
64	114-1689	1	Motor Cylinder Block Kit
65	121-3235	1	Bearing-Thrust, Plastic Cage
69	121-3236	1	7 Piston Block ASM
70	104-5339	1	Washer-Flat
71	104-5340	1	Ring-Retaining
72	120-7972	1	Gear-13T
73	114-1691	1	Shaft-Motor
74	104-5360	1	Washer
80	94-1933	2	Washer
81	120-7973	1	Gear-46T
82	120-7974	1	Gear-11T
83	104-5329	1	Pin-Jackshaft
90	104-2169	1	Ring-Retaining
91	121-3237	1	Gear-54T
92	120-7975	1	Spacer
93	130-8476	1	Bearing-Ball
94	121-3238	1	Shaft-Axle
95	130-8477	1	Bearing-Ball
96	130-8478	1	Seal-Lip
97	109-5939	1	Hub Kit
100	114-1697	1	Pawl-Brake
101	114-1698	1	Shaft-Brake, Inboard
102	125-0021	1	Handle-Brake
103	130-8484	1	Ring-Retaining, EXT
105	104-2120	3	Screw
106	120-7979	1	Guard-Filter, LH
130	130-8485	2	Tube-Push, O-Ring
156	115-5057	1	Cover-Nut, Axle
157	130-8486	1	Seal-Gerotor
158	104-5330	1	Magnet-Ring
164	130-8480	1	Spacer
200	121-3243	1	Seal Kit
201	130-8487	1	Kit-Center Section (LH Charge)
202	114-8464	1	Charge Relief Kit
203	121-3246	1	Charge Pump Kit
207	121-3247	1	Fan And Pulley Kit
209	130-8482	1	Hub Puller Kit
210	121-3248	1	Input Shaft Kit
211	117-5362	1	Arm Control Kit

● Not illustrated

RH Transaxle Assembly No. 130-2850

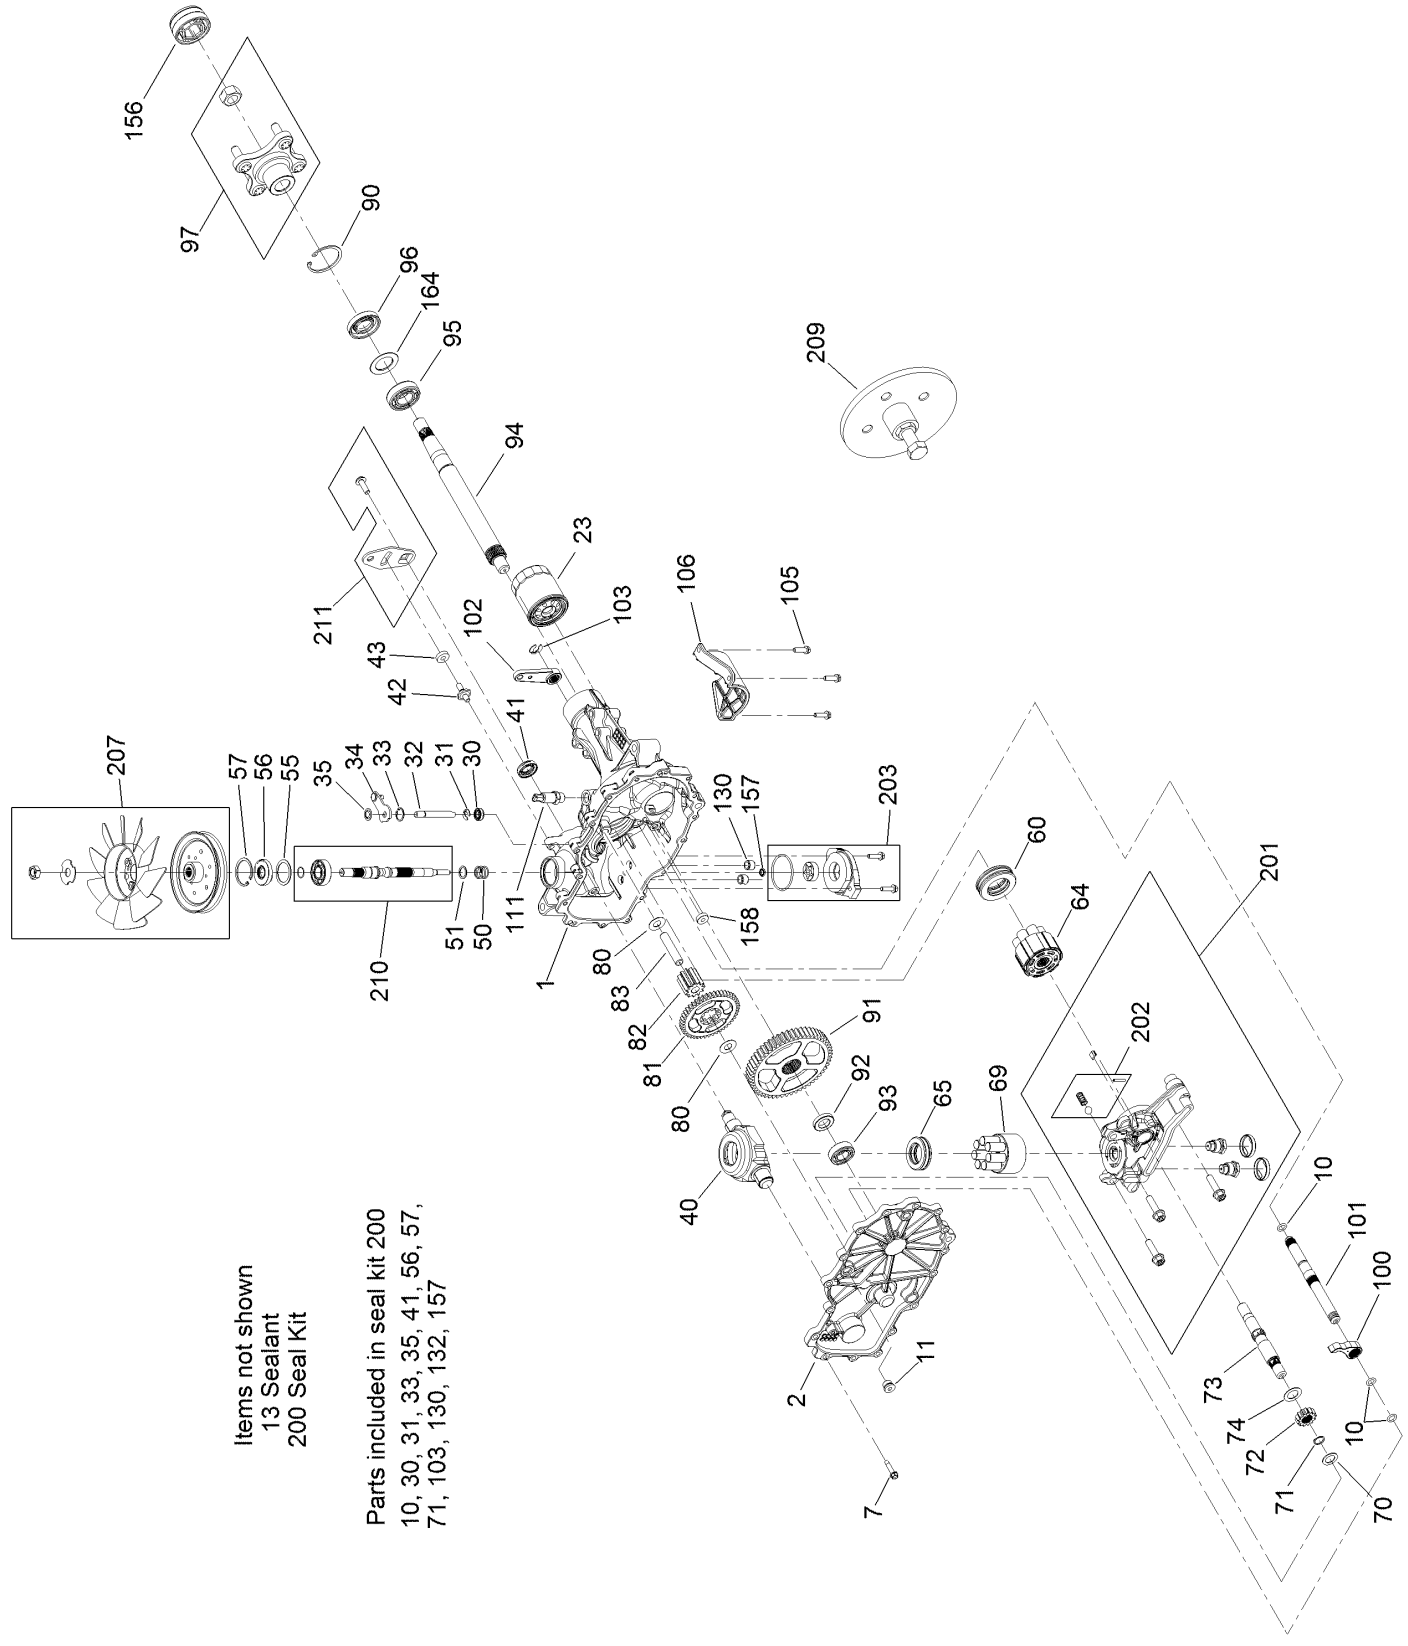

Items not shown
13 Sealant
200 Seal Kit


Parts included in seal kit 200
10, 30, 31, 33, 35, 41, 56, 57,
71, 103, 130, 132, 157

RH Transaxle Assembly No. 130-2850 (continued)

Ref.	Part Number	Qty.	Description
1	121-3231	1	RH Main Housing Kit
2	121-3232	1	RH Side Cover Kit
7	117-5359	16	Screw-HHF
10	130-8483	4	O-Ring
11	104-2189	1	Plug-Thread, Straight
13	104-2147	1	Sealant ●
23	109-3321	1	Element-Oil Filter, HYD
30	106-8676	1	Seal-Lip
31	106-8677	1	Ring-Retaining, EXT
32	114-1685	1	Rod-Bypass
33	106-8679	1	Ring-Retaining, Int
34	107-2490	1	Arm-Bypass
35	106-8681	1	Ring-Retaining, EXT
40	104-5304	1	Swashplate-Trunnion
41	104-5313	1	Seal-Lip
42	104-2116	1	Stud
43	112-9853	1	Puck-Friction
50	120-5537	1	Spring-Compression
51	120-5538	1	Washer
55	104-5308	1	Spacer
56	104-5310	1	Seal-Lip
57	104-5309	1	Ring-Retaining
60	109-2865	1	Bearing-Thrust
64	114-1689	1	Motor Cylinder Block Kit
65	121-3235	1	Bearing-Thrust, Plastic Cage
69	121-3236	1	7 Piston Block ASM
70	104-5339	1	Washer-Flat
71	104-5340	1	Ring-Retaining
72	120-7972	1	Gear-13T
73	114-1691	1	Shaft-Motor
74	104-5360	1	Washer
80	94-1933	2	Washer
81	120-7973	1	Gear-46T
82	120-7974	1	Gear-11T
83	104-5329	1	Pin-Jackshaft
90	104-2169	1	Ring-Retaining
91	121-3237	1	Gear-54T
92	120-7975	1	Spacer
93	130-8476	1	Bearing-Ball
94	121-3238	1	Shaft-Axle
95	130-8477	1	Bearing-Ball
96	130-8478	1	Seal-Lip
97	109-5939	1	Hub Kit
100	114-1697	1	Pawl-Brake
101	130-8479	1	Shaft-Brake
102	125-0021	1	Handle-Brake
103	130-8484	1	Ring-Retaining, EXT
105	104-2120	3	Screw
106	120-7981	1	Guard-Filter, RH
111	109-3278	1	Adapter-Straight
130	130-8485	2	Tube-Push, O-Ring
156	115-5057	1	Cover-Nut, Axle
157	130-8486	1	Seal-Gerotor
158	104-5330	1	Magnet-Ring
164	130-8480	1	Spacer
200	121-3243	1	Seal Kit
201	130-8481	1	Center Section Kit
202	114-8464	1	Charge Relief Kit
203	121-3246	1	Charge Pump Kit
207	121-3247	1	Fan And Pulley Kit
209	130-8482	1	Hub Puller Kit
210	121-3248	1	Input Shaft Kit
211	117-5362	1	Arm Control Kit

● Not illustrated


Fuel Tank and Hose Assembly

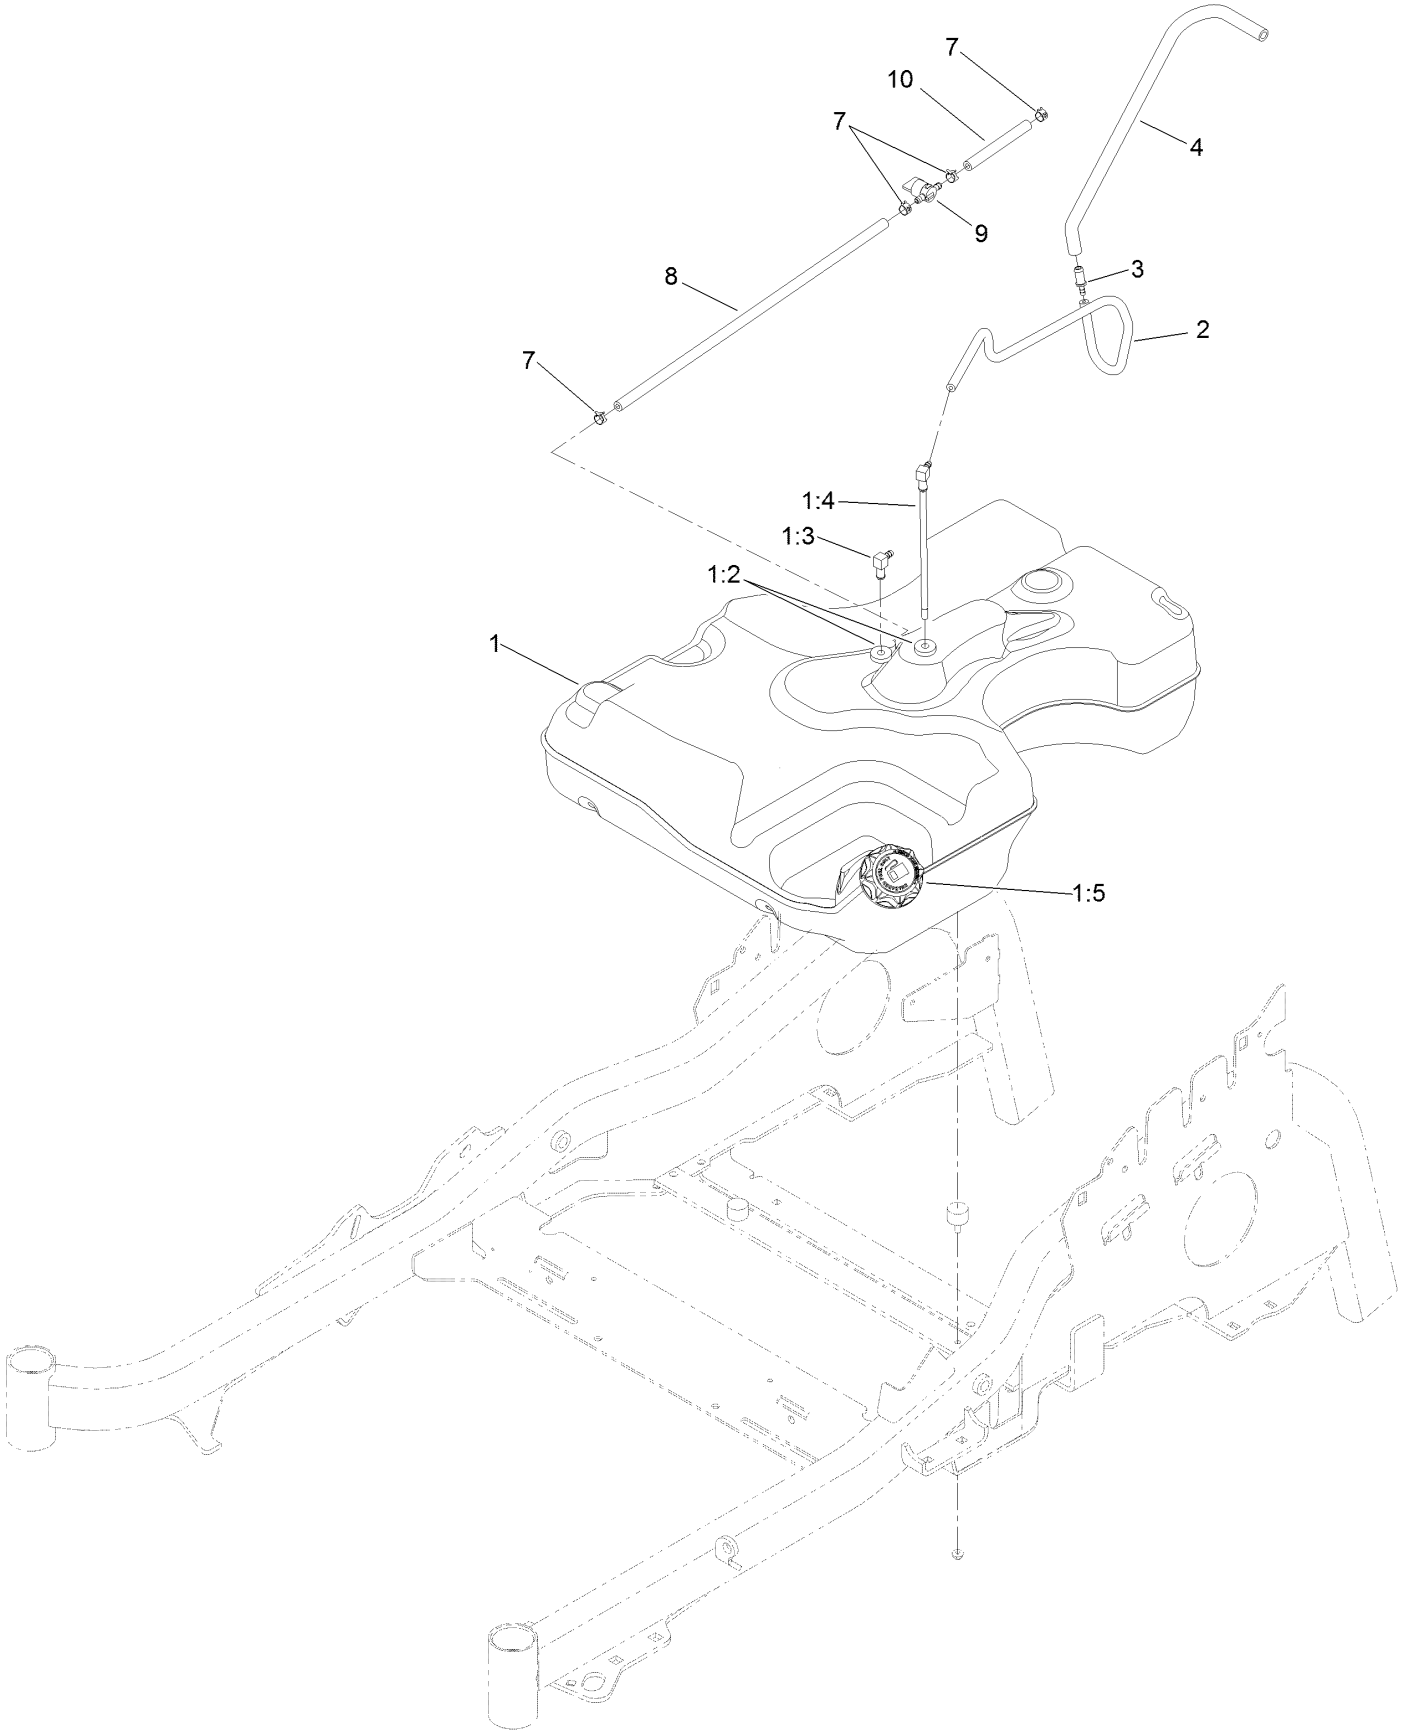

Fuel Tank and Hose Assembly (continued)

Ref.	Part Number	Qty.	Description
1	125-4765	1	Fuel Tank ASM
1:2	46-6560	2	Bushing
1:3	116-2288	1	Fitting-90 Elbow
1:4	125-4767	1	Fuel Line ASM
1:5	126-1789	1	Cap-Fuel, Ratcheting
2	119-6074	1	Hose-Fuel
3	98-2952	1	Fitting-Straight
4	119-8562	1	Hose-Fuel
7	2412-98	4	Clamp-Hose
8	110-5701	1	Hose-Fuel
9	1-603770	1	Valve-Fuel
10	109-0650	1	Hose-Fuel


Seat Mounting Assembly

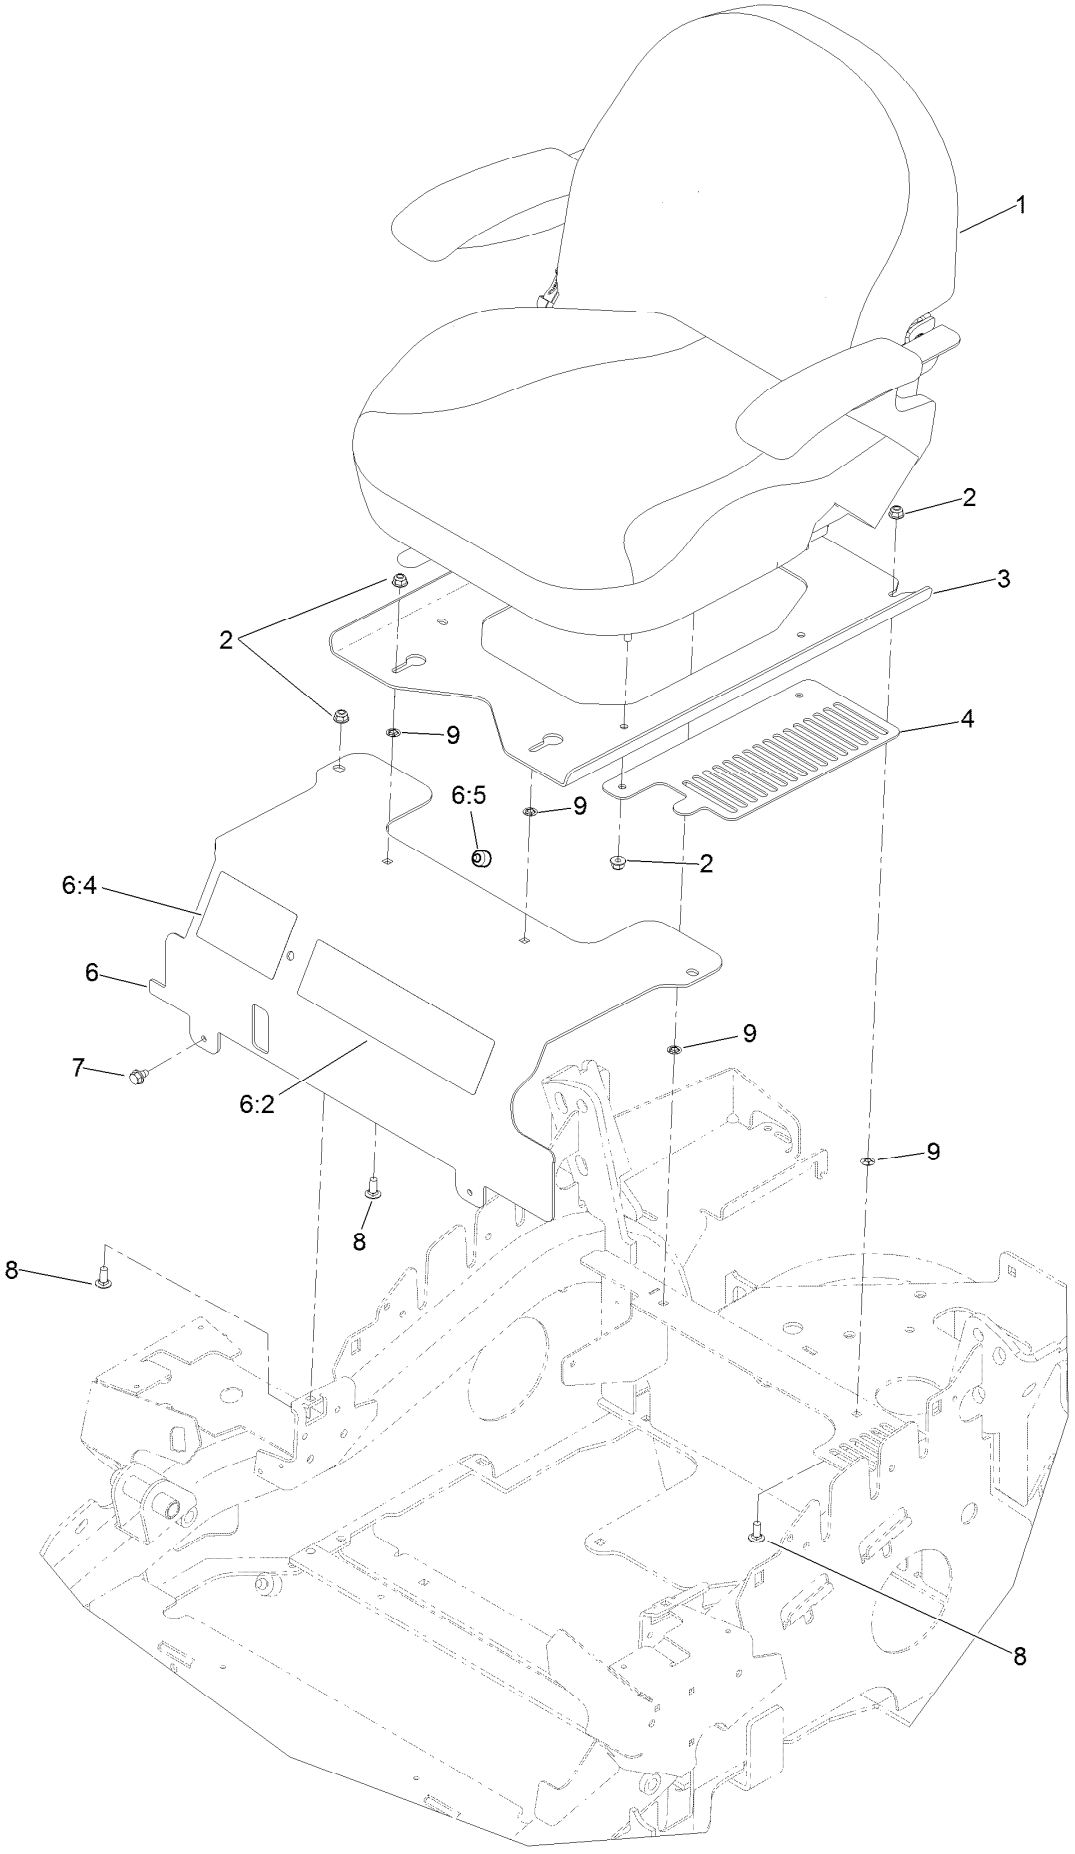

Seat Mounting Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-9538	1	Seat ASM
2	104-8300	10	Nut-Flange, NI
3	117-8615-03	1	Plate-Mount, Seat
4	117-8618-03	2	Plate-Cover, Fan
6	119-2597	1	Seat Mount Panel ASM
6:2	114-5878	1	Decal
6:4	127-0325	1	Decal-Service Aid
6:5	120-7893	1	Bumper-Grommet
7	9266934	2	Screw
8	3230-23	6	Screw-CARR
9	117-2749	4	Nut-Push


Seat Assembly No. 127-9538

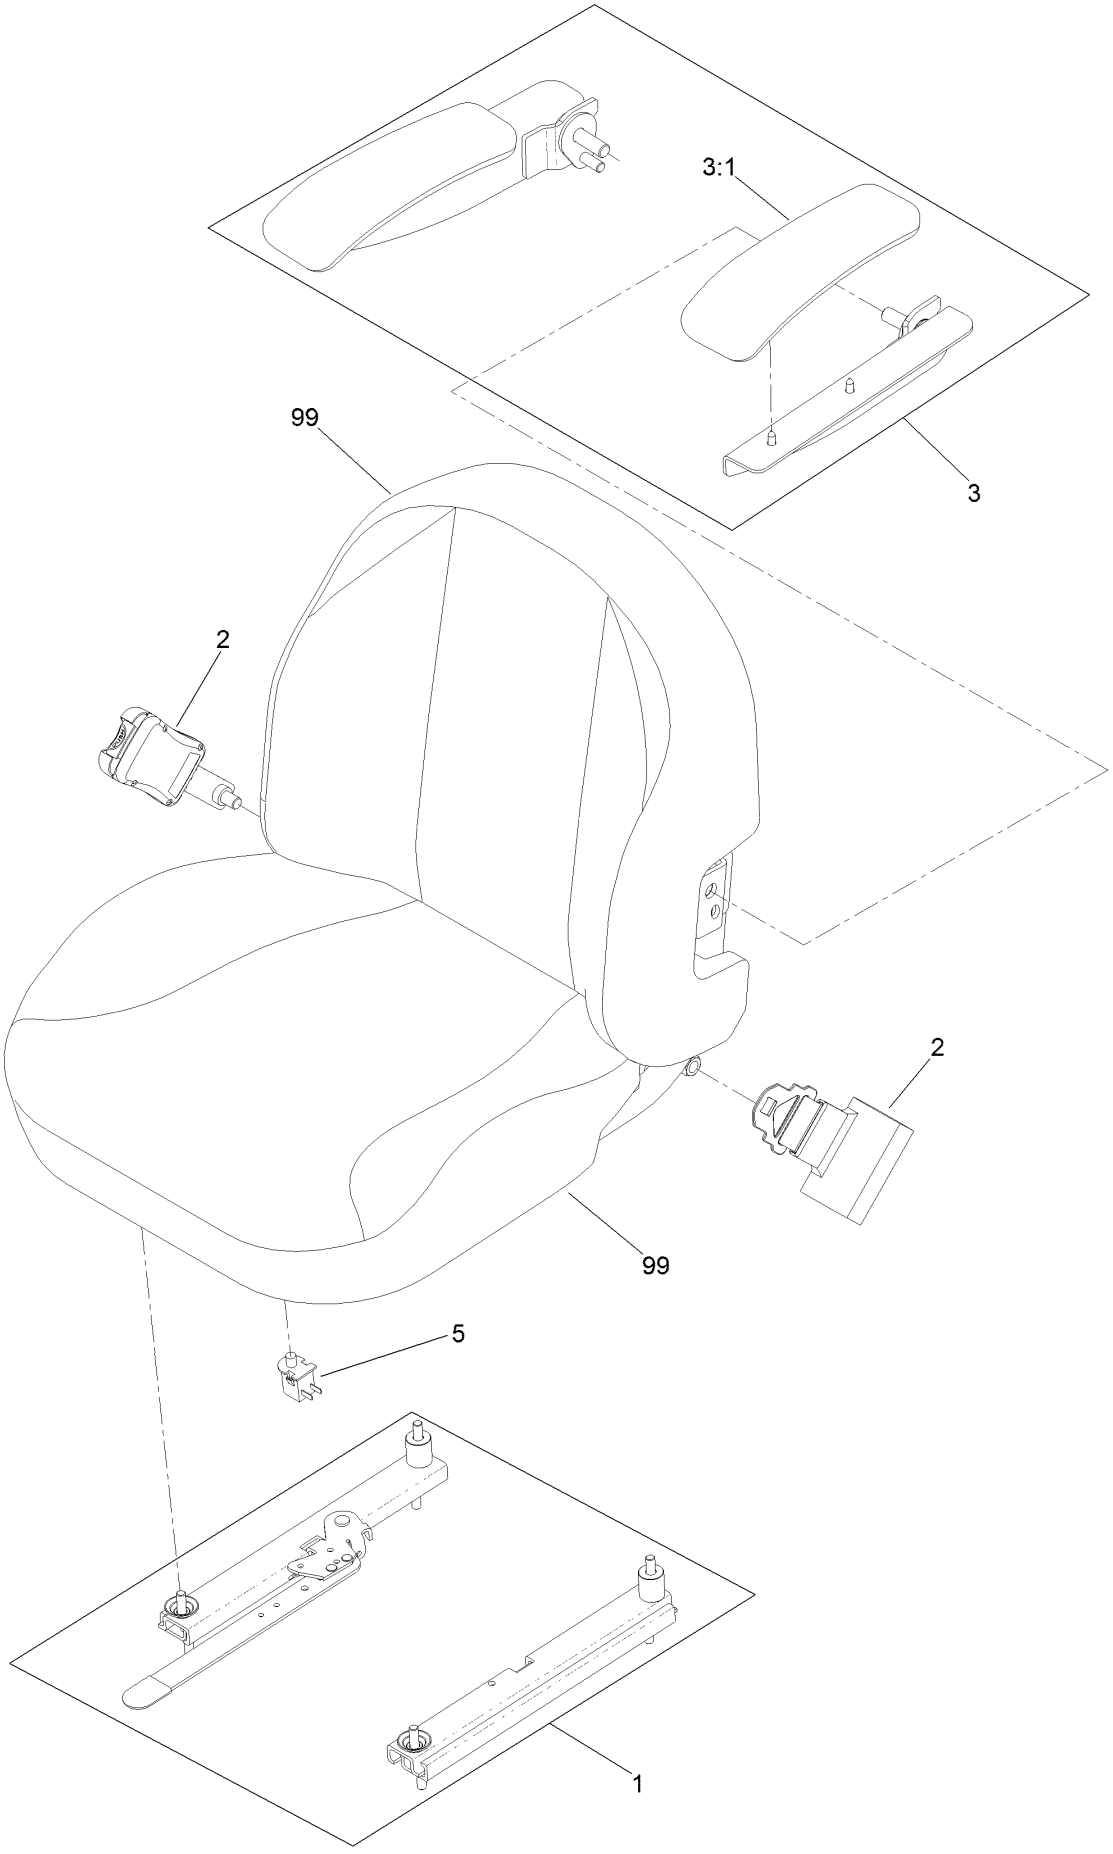

Seat Assembly No. 127-9538 (continued)

Ref.	Part Number	Qty.	Description
1	130-2853	1	Seat Track Kit
2	130-2854	1	Seat Belt Kit
3	126-2058	1	Armrest Kit
3:1	110-4163	2	Cushion-Rest, Arm
5	82-2190	1	Switch-Bail
99	130-2856	1	Cover-Seat, Bottom
99	130-2855	1	Cover-Seat, Back


Motion Control Assembly

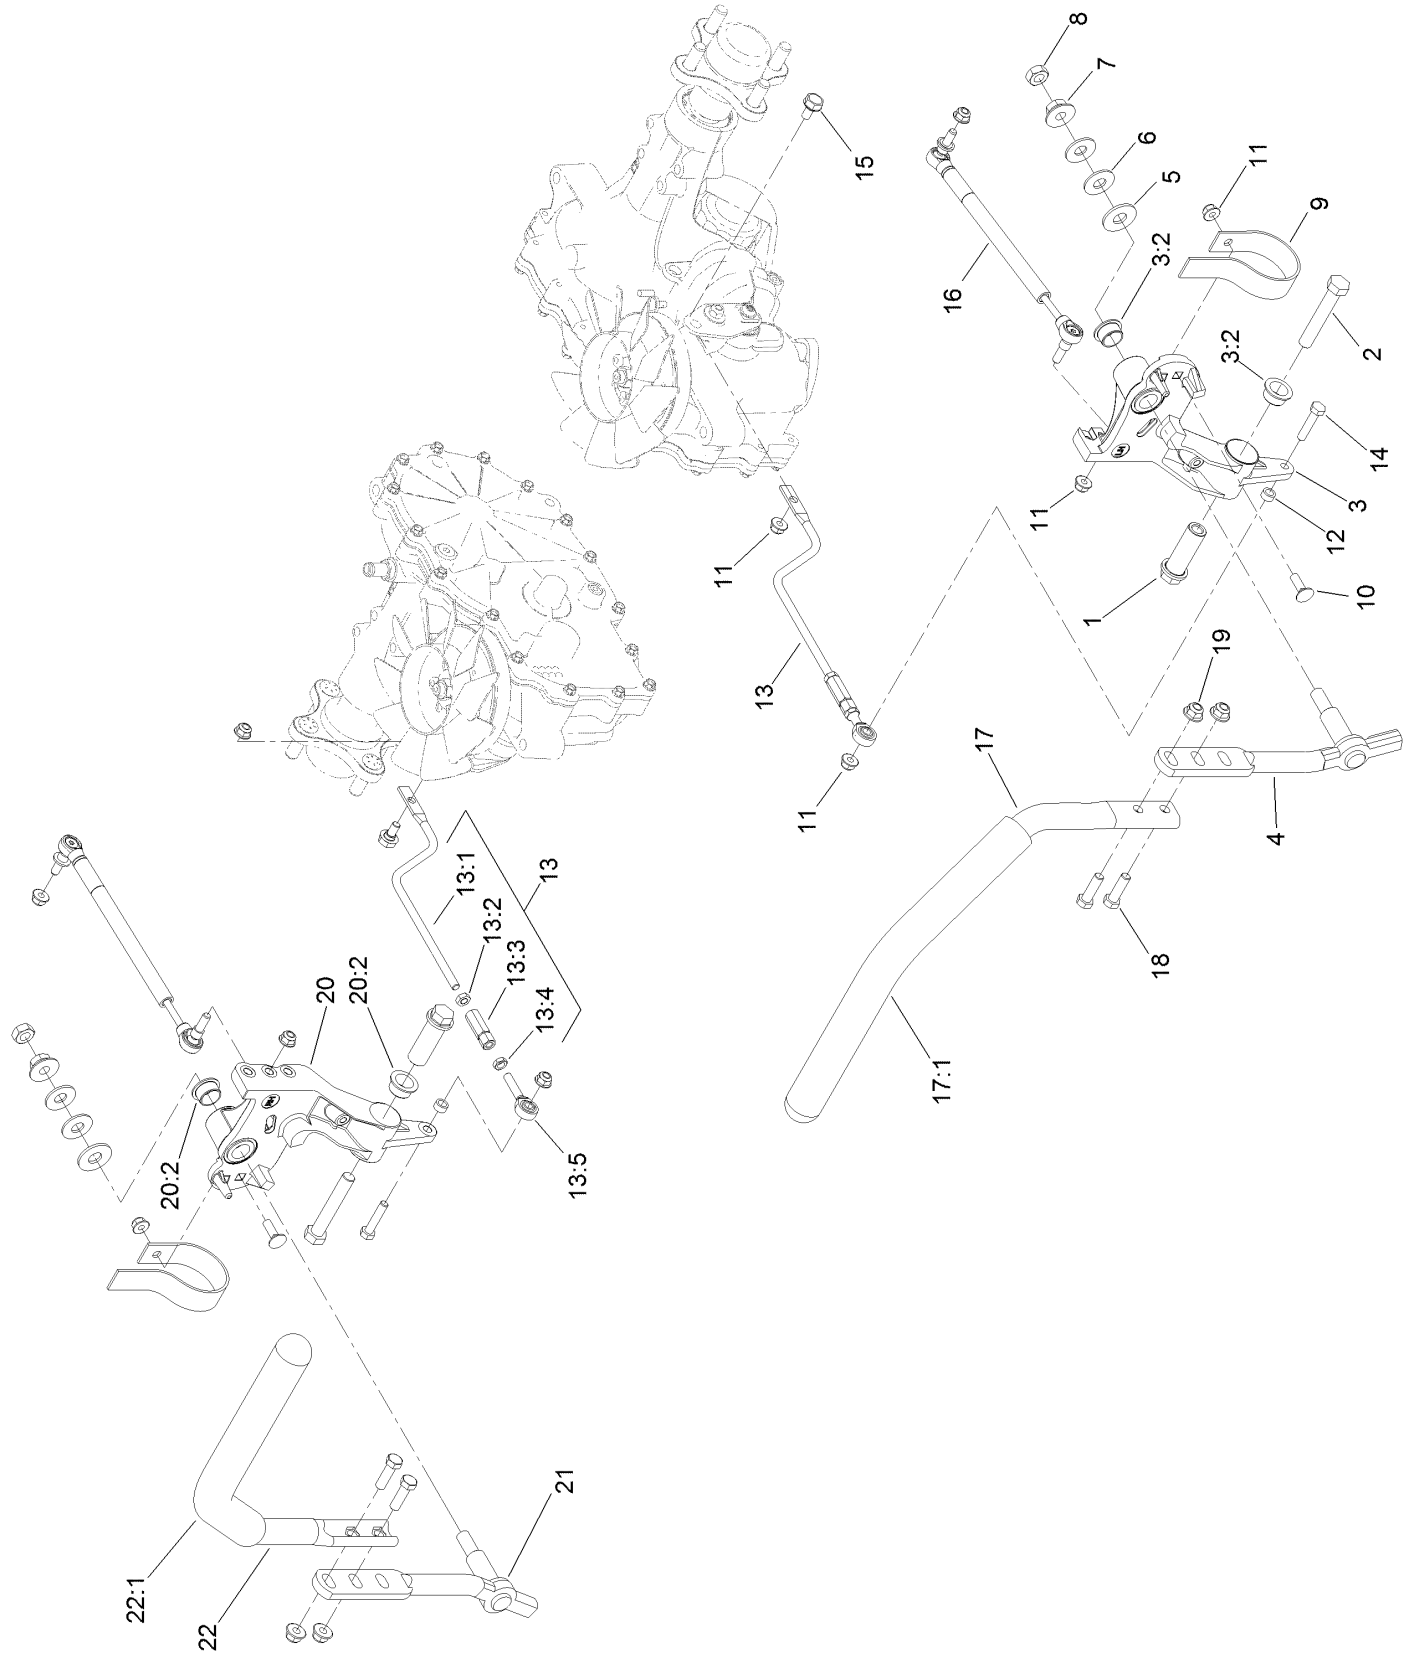

Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	109-5891	2	Hub-Threaded
2	325-12	2	Screw-HH
3	116-0881	1	LH Motion Control And Bushing ASM
3:2	109-8054	4	Bushing-Flange
4	116-0040	1	Lever-Control Motion, LH
5	3256-6	2	Washer-Flat
6	109-9505	4	Washer-Spring
7	32128-56	2	Nut-HF
8	3218-5	2	Nut-Jam
9	109-5575	2	Spring-Leaf
10	3230-2	2	Bolt-CARR
11	104-8300	10	Nut-Flange, NI
12	92-6998	2	Spacer-Yoke, Right
13	119-2605	2	Hydro Control Rod ASM
13:1	119-2606	1	Rod-Control, Hydro
13:2	3220-2	1	Nut-Jam
13:3	109-3728	1	Nut-Rod Adjustment
13:4	3220-20	1	Nut-Jam
13:5	2411-53	1	Bearing-Rod End, LH
14	322-7	2	Screw-HH
15	37-8771	2	Bolt-Shoulder
16	116-0027	2	Damper-Control, Motion
17	109-6590	1	LH Steering Handle ASM
17:1	109-5668	1	Grip-Control, Lever
18	323-7	4	Screw-HH
19	104-8301	4	Nut-Flange, NI
20	116-0880	1	RH Motion Control And Bushing ASM
20:2	109-8054	4	Bushing-Flange
21	116-0039	1	Lever-Control Motion, RH
22	109-6589	1	RH Steering Handle ASM
22:1	109-5668	1	Grip-Control, Lever


Parking Brake Assembly

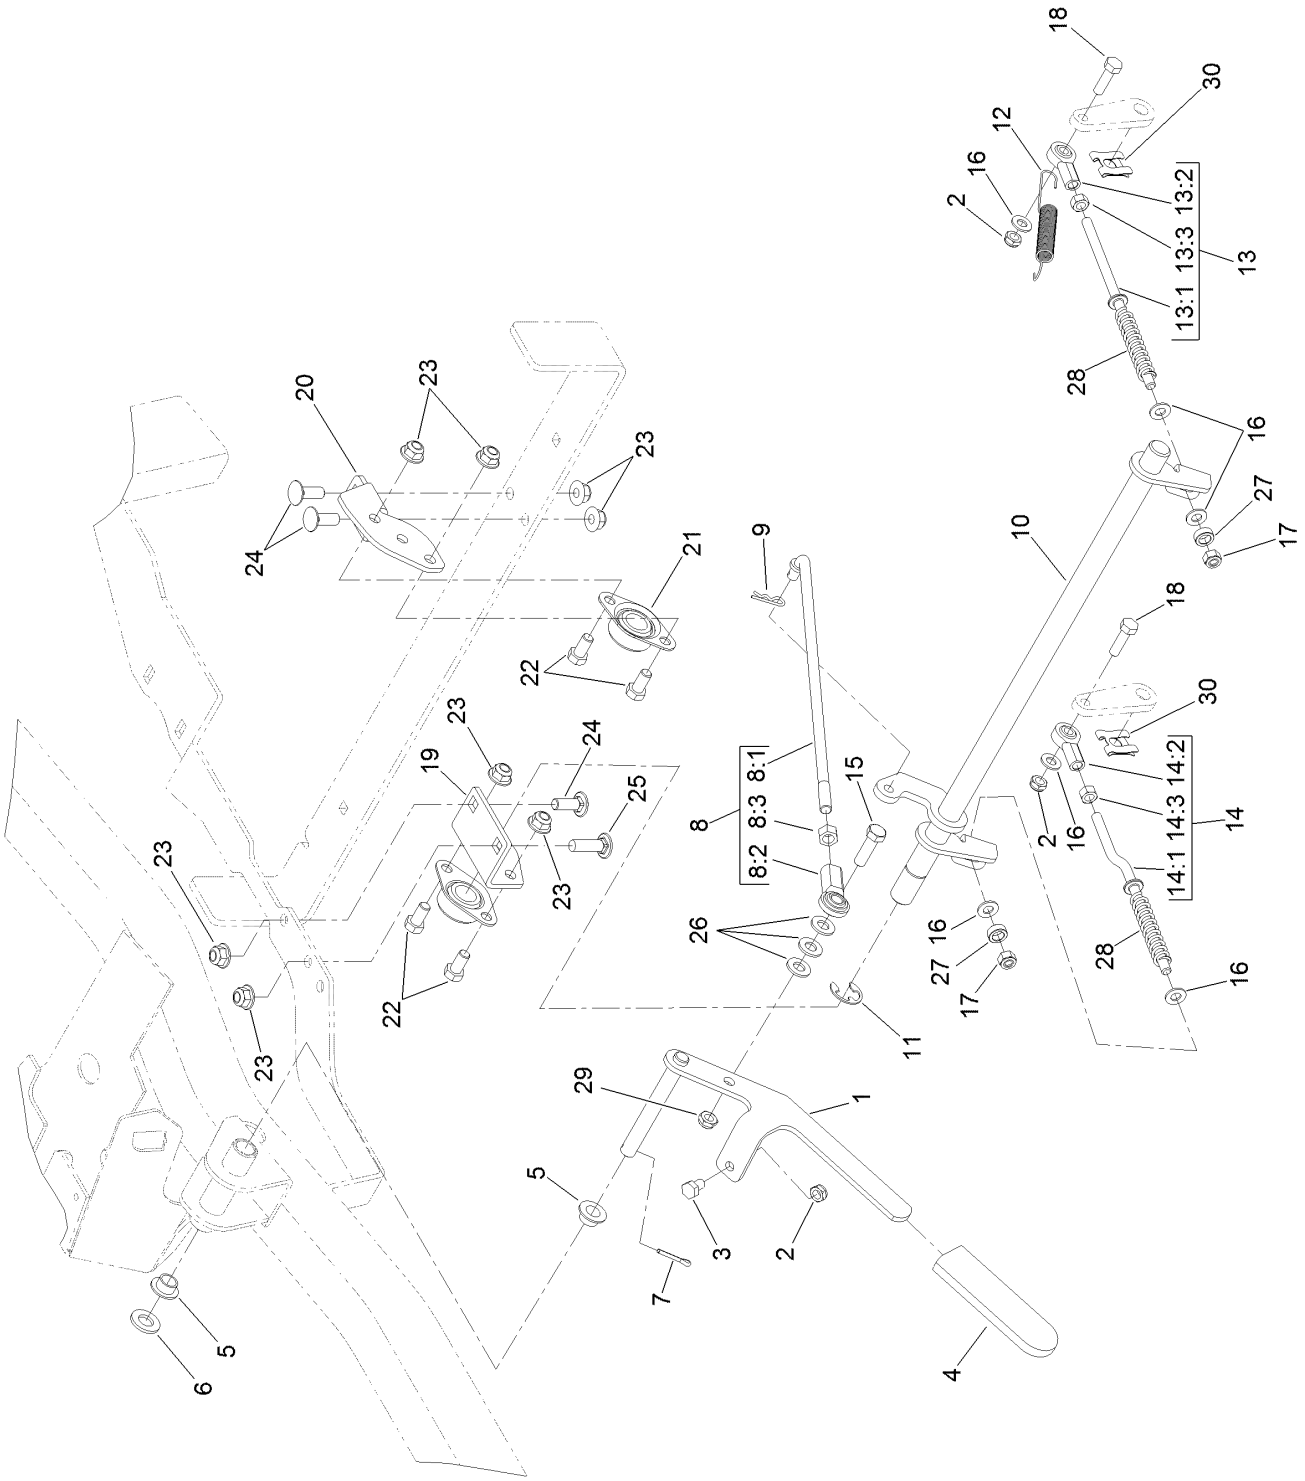

Parking Brake Assembly (continued)

Ref.	Part Number	Qty.	Description
1	121-4766-03	1	Handle-Brake
2	3296-47	3	Nut-Lock, NI
3	322-1	1	Screw-HH
4	1-633268	1	Grip-Lever
5	1-513140	2	Bearing-Control
6	106-9888	1	Washer-Flat
7	3272-10	1	Pin-Cotter
8	121-4807	1	Brake Link ASM
8:1	121-4795	1	Rod-Link, Brake
8:2	103-0608	1	Joint-Ball, End
8:3	3219-3	1	Nut-Hex
9	3290-307	1	Pin-Cotter
10	121-4804-03	1	Shaft-Brake
11	32151-48	1	E-Ring
12	110769	1	Spring-Extension
13	121-4805	1	LH Brake Rod ASM
13:1	121-4755	1	Rod-Brake
13:2	1-543017	1	Balljoint-RH
13:3	3219-2	1	Nut-Hex
14	121-4806	1	RH Brake Rod ASM
14:1	121-4770	1	Rod-Brake
14:2	1-543017	1	Balljoint-RH
14:3	3219-2	1	Nut-Hex
15	323-7	1	Screw-HH
16	3256-23	6	Washer-Flat
17	3296-4	2	Nut-Lock
18	322-16	2	Screw-HH
19	121-4761-01	1	Bracket-Shaft Mount, RH
20	121-4793-01	1	Bracket-Shaft Mount, LH
21	1-633102	2	Bearing-Flange, Side
22	323-4	4	Screw-HH
23	104-8301	8	Nut-Flange, NI
24	3231-22	3	Screw-CARR
25	3231-28	1	Screw-CARR
26	3256-24	3	Washer-Flat
27	103-5677	2	Spacer
28	1-603807	2	Spring-Return, Neutral
29	3296-59	1	Nut-Lock, NI
30	114-8450	2	Clip-Retaining

Engine, Muffler and Control Panel Assembly

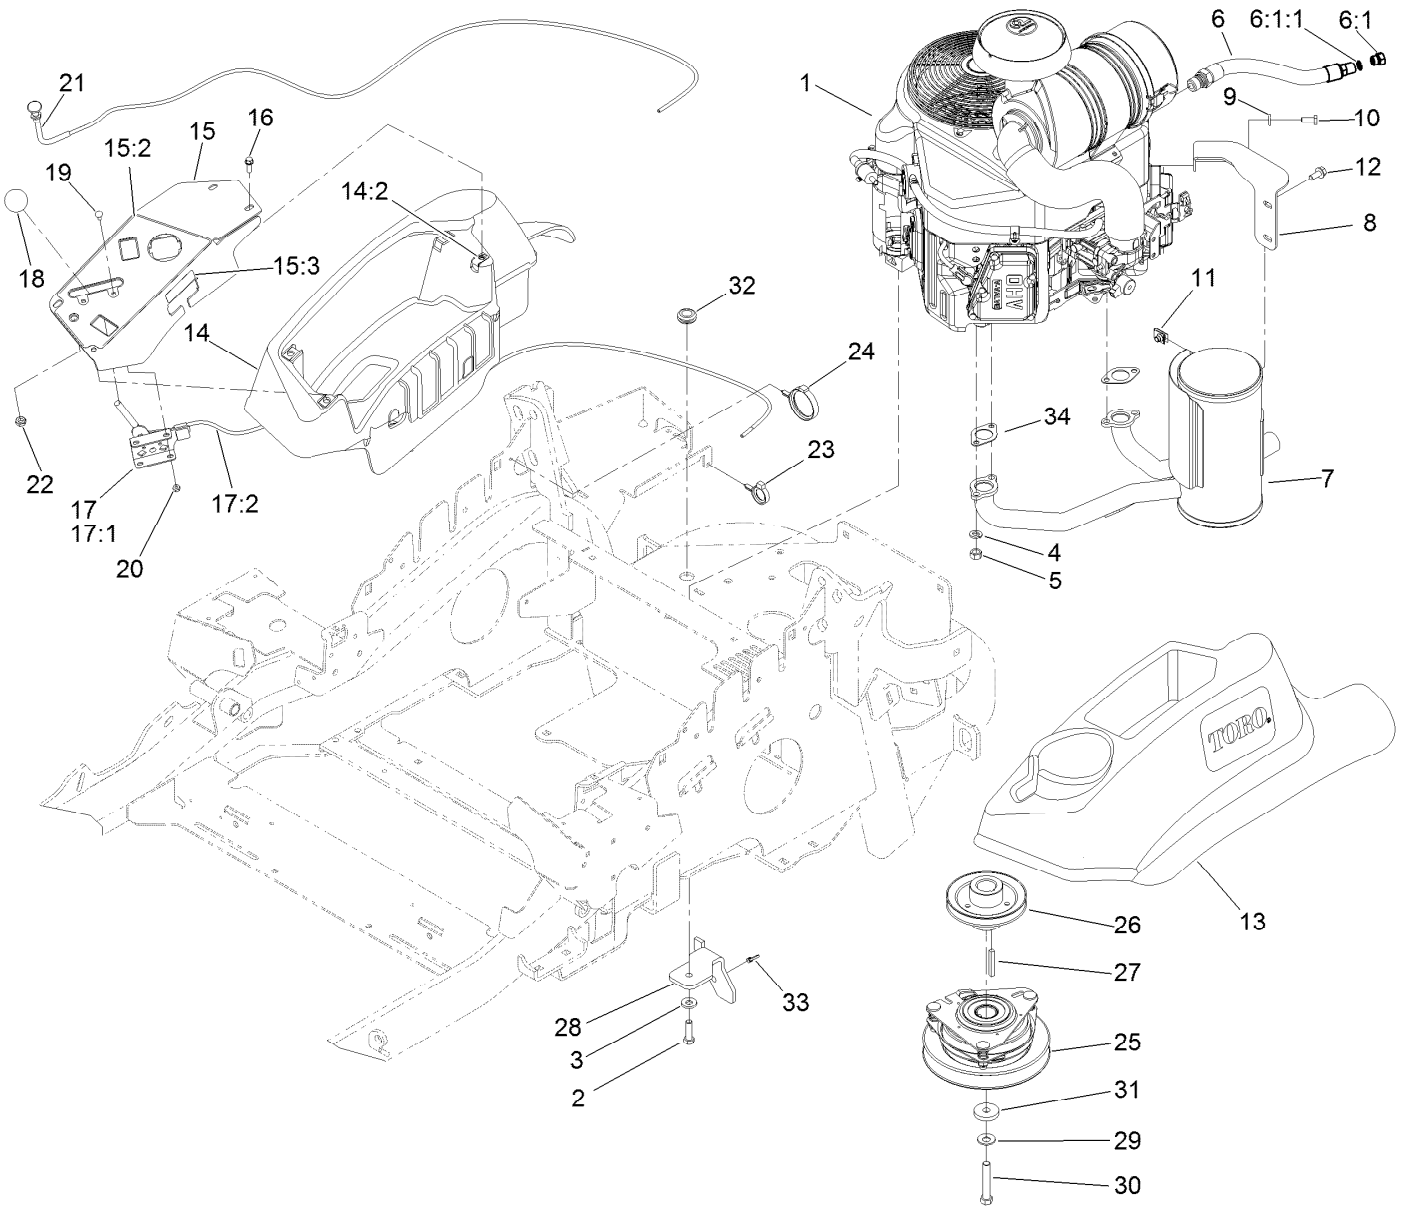


Engine, Muffler and Control Panel Assembly (continued)

Ref.	Part Number	Qty.	Description
1		1	Engine-Kawasaki, Fx651V-S10-R ●■
2	323-7	4	Screw-HH
3	98-5975	4	Washer-Belleville
4	114-3550	4	Washer-Lock
5	114-3549	4	Nut
6	116-4924	1	Engine Oil Drain Hose ASM
6:1	353-508	1	Plug-HH
6:1:1	237-42	1	O-Ring
7	119-2645	1	Muffler
8	119-2659	1	Bracket-Muffler
9	1-303334	1	Washer-Spring
10	33114-020	1	Screw-HH
11	94-2413	2	Nut-U
12	3234-5	2	Screw-HHF
13	119-2602	1	Console-LH
14	119-2603	1	RH Console ASM
14:2	107069	4	Clip
15	119-2694	1	Control Panel ASM
15:2	119-2501	1	Decal-Panel, Control
15:3	114-4466	1	Decal-Fuses
16	32105-15	4	Screw-HWH
17	110-5727	1	Throttle Control ASM
17:1	112-2334	1	Lever-Throttle
17:2	110-5728	1	Cable-Throttle
18	1-603175	1	Knob-Ball
19	1-807513	2	Bolt-CARR
20	3296-2	2	Nut-Lock, NI
21	115-2753	1	Control-Choke
22	3220-3	1	Nut-HJ
23	105-1853	1	Clamp-Hose
24	117-7817	1	Clamp-Harness
25	119-2595	1	Clutch
26	119-9915	1	Pulley-Engine
27	608006	1	Key-Square
28	119-2658-01	1	Bracket-Stop, Clutch
29	1-603610	1	Washer-Spring
30	3212-10	1	Screw-HH
31	107-4136	1	Washer
32	112-7069	1	Grommet
33	1-303287	1	Tie-Cable
34	1-653313	2	Gasket-Exhaust

● Not serviced separately

■ Obtain parts from www.kawpowerepc.com


Deck Lift Assembly

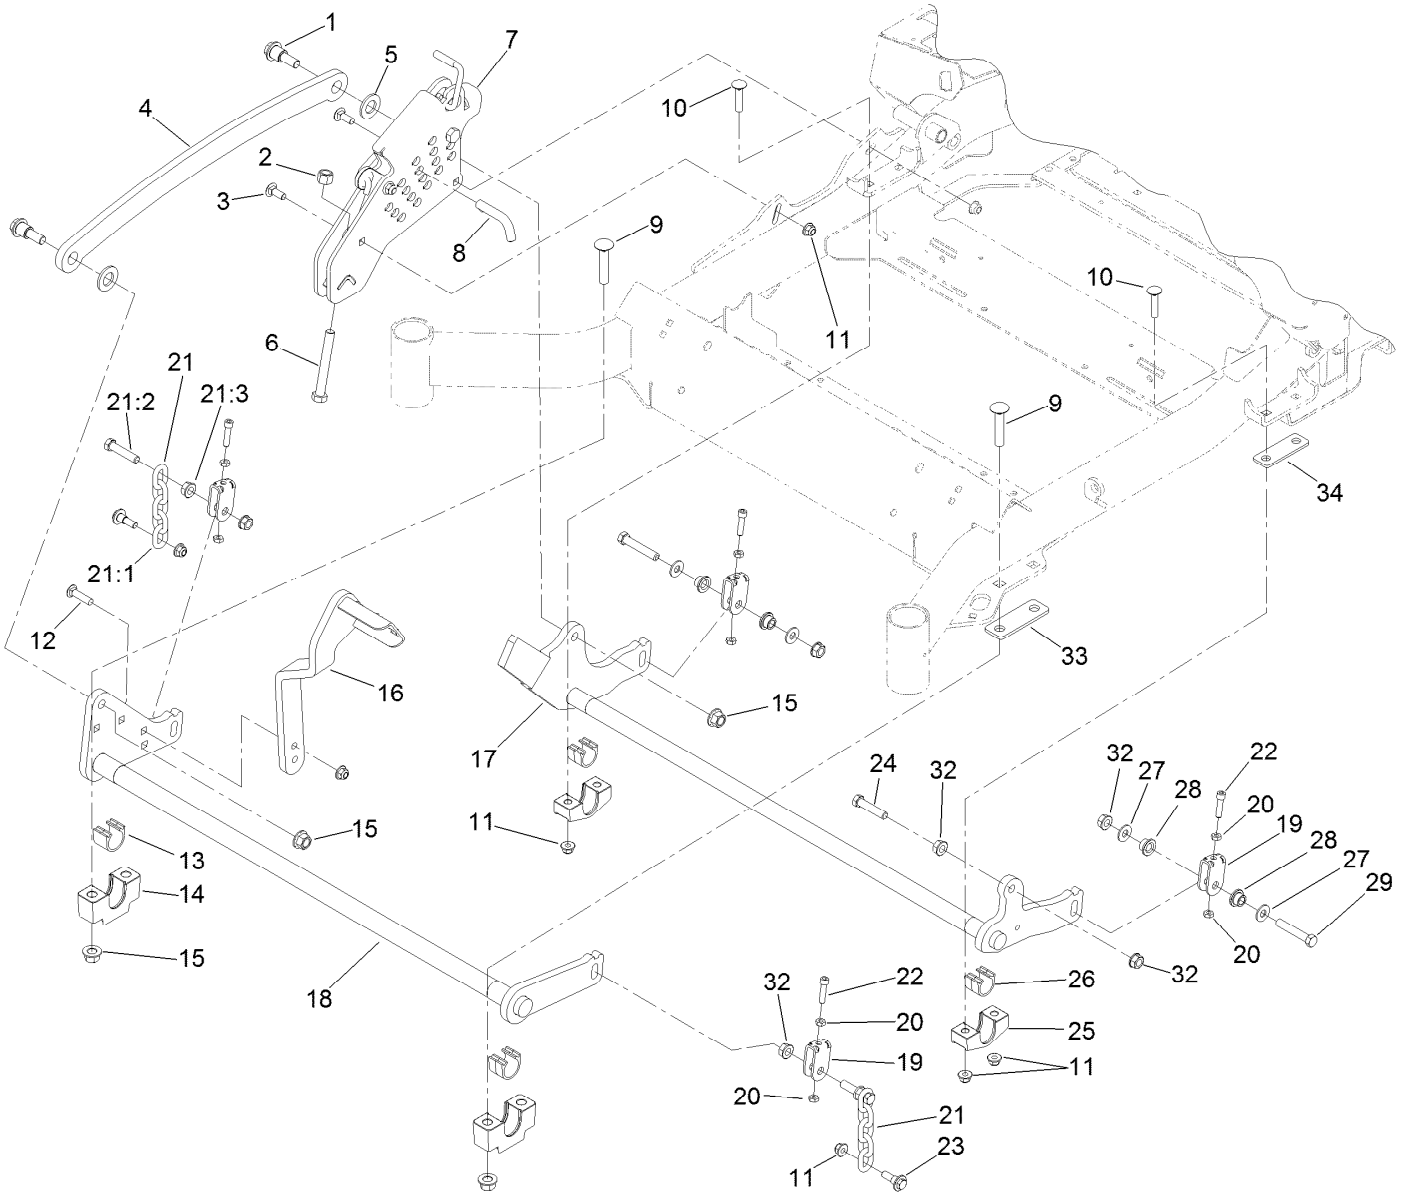

Deck Lift Assembly (continued)

Ref.	Part Number	Qty.	Description
1	116-0780	2	Screw-Shoulder, HHF
2	3296-23	1	Nut-Lock, NI
3	3231-2	2	Bolt-CARR
4	116-0797-03	1	Link-Lift, Deck
5	3256-28	2	Washer-Flat
6	116-0559	1	Bolt-TAP
7	121-4779	1	Height Of Cut ASM
8	116-5584	1	Pin-HOC
9	116-1700	4	Bolt-CARR
10	3231-7	4	Screw-CARR
11	104-8301	10	Nut-Flange, NI
12	3231-4	2	Screw-CARR
13	109-9410	2	Bearing-Cross Shaft, Front
14	109-9409	2	Support-Cross Shaft, Bearing
15	99-5107	6	Nut-Lock
16	120-7877-01	1	Lever-Foot
17	116-0459-03	1	Lift-Deck, Rear
18	126-2475-03	1	Decklift-Front
19	109-9066	4	Yoke-Adjust, Deck
20	3218-2	8	Nut-Jam
21	116-0756	2	Deck Lift Chain ASM
21:1	1-633447	1	Chain-Lift, Deck
21:2	109-9065	1	Screw-HH
21:3	32128-37	1	Nut-HF
22	322-47	4	Screw-HH
23	109-9840	2	Screw-Shoulder, HHF
24	109-9065	1	Screw-HH
25	127-0553	2	Support-Cross Shaft, Bearing Rear
26	109-7173	2	Bearing-Cross Shaft, Rear
27	3256-4	4	Washer-Flat
28	116-2428	4	Bushing-Flanged
29	324-10	2	Screw-HH
32	32128-37	6	Nut-HF
33	121-7593-01	2	Spacer-Decklift, Front
34	121-7594-01	2	Spacer-Decklift, Back


Height-of-Cut Assembly No. 121-4779

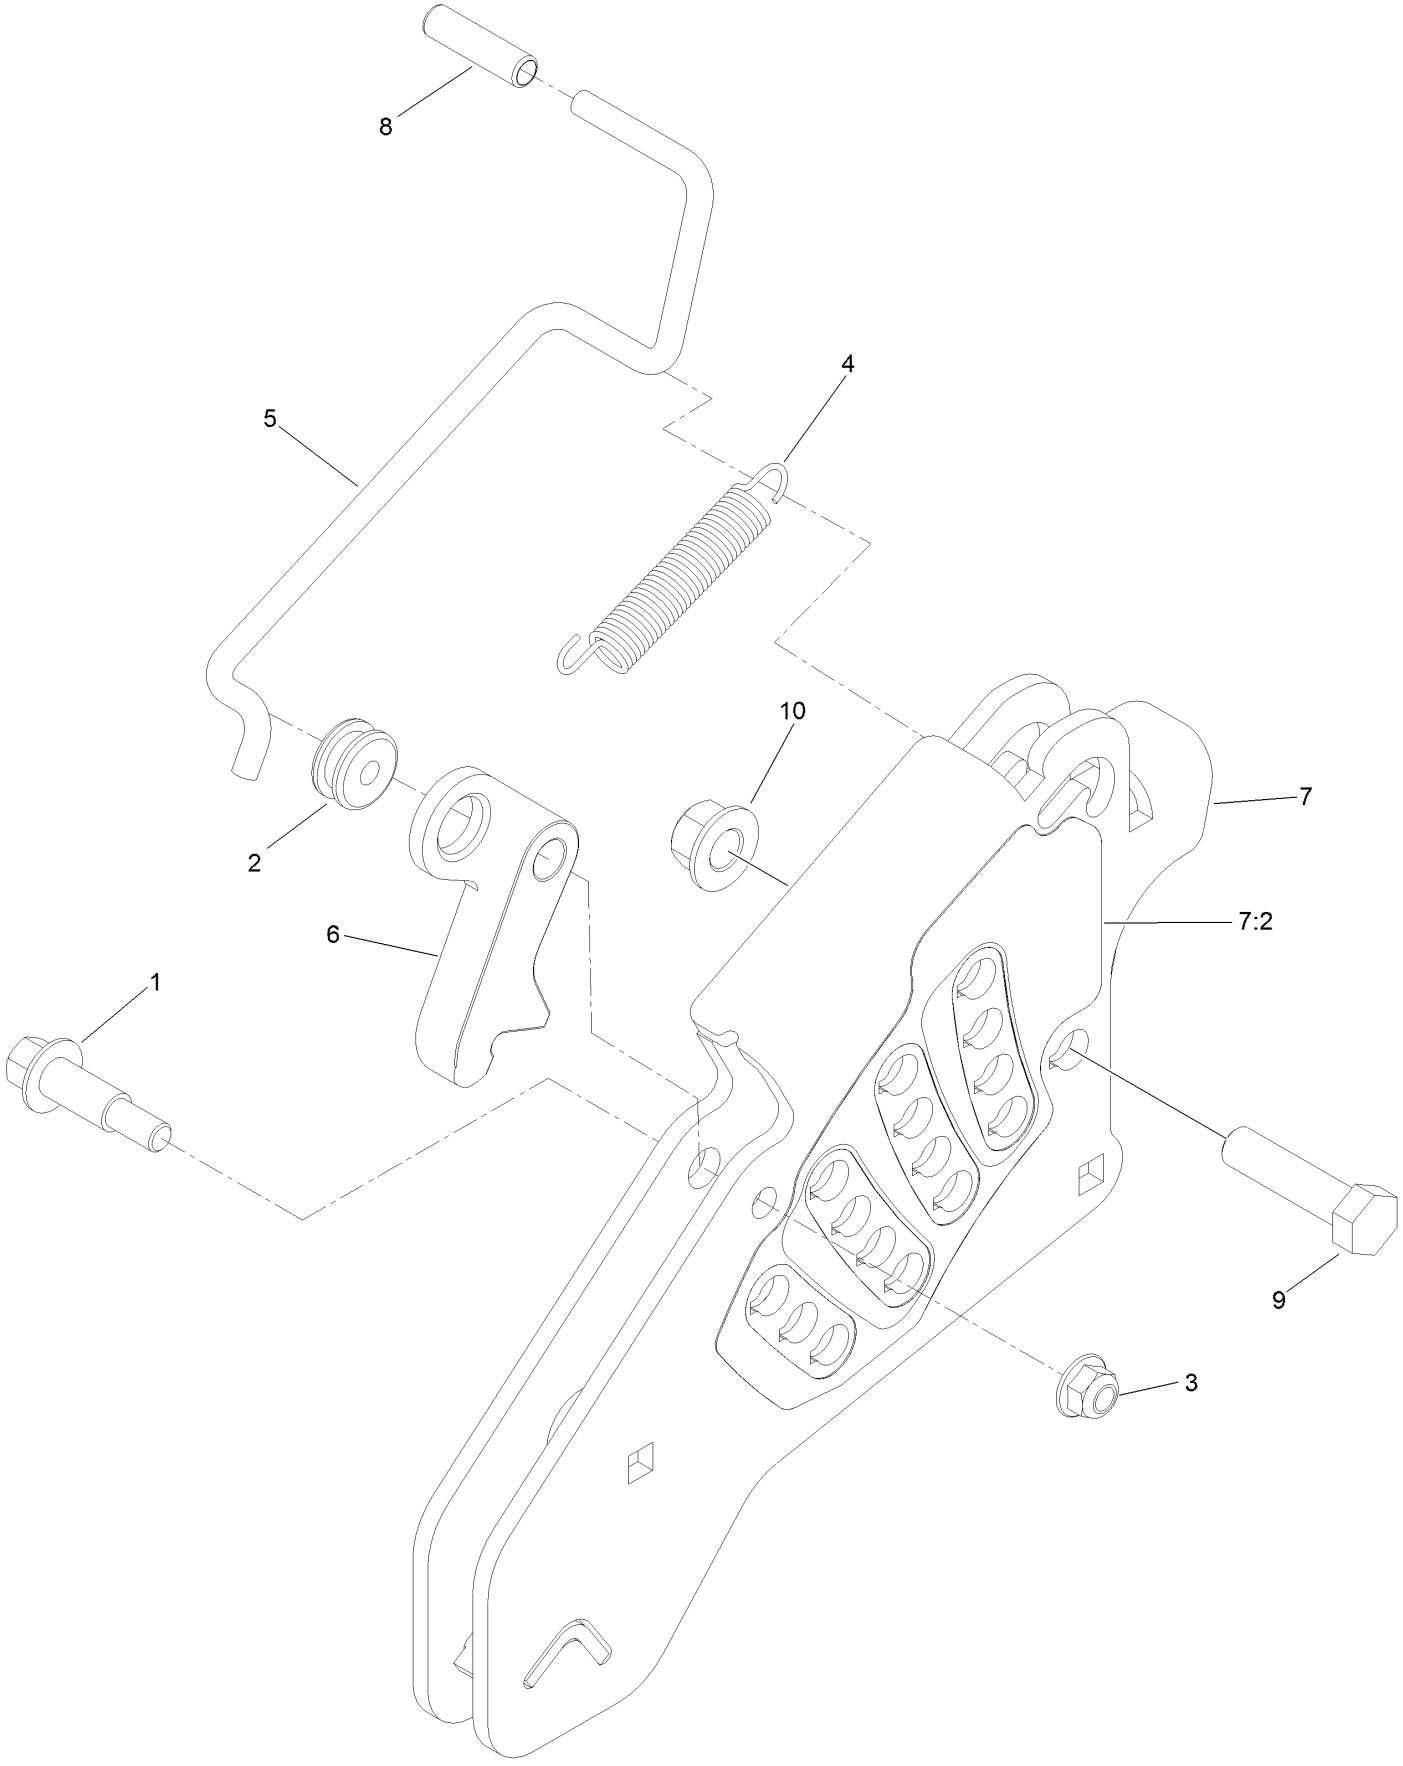

Height-of-Cut Assembly No. 121-4779 (continued)

Ref.	Part Number	Qty.	Description
1	62-1330	1	Bolt-Shoulder
2	109-7130	1	Grommet
3	104-8301	1	Nut-Flange, NI
4	109-7124	1	Spring-Extension
5	109-7128	1	Rod-Lock, Transport
6	116-0118	1	Pawl-Transport, HOC
7	121-4778	1	HOC Plate ASM
7:2	121-4777	1	Decal-HOC Ce
8	109-8250	1	Grip-Lever
9	325-8	1	Screw-HH
10	99-5107	1	Nut-Lock

Deck Assembly

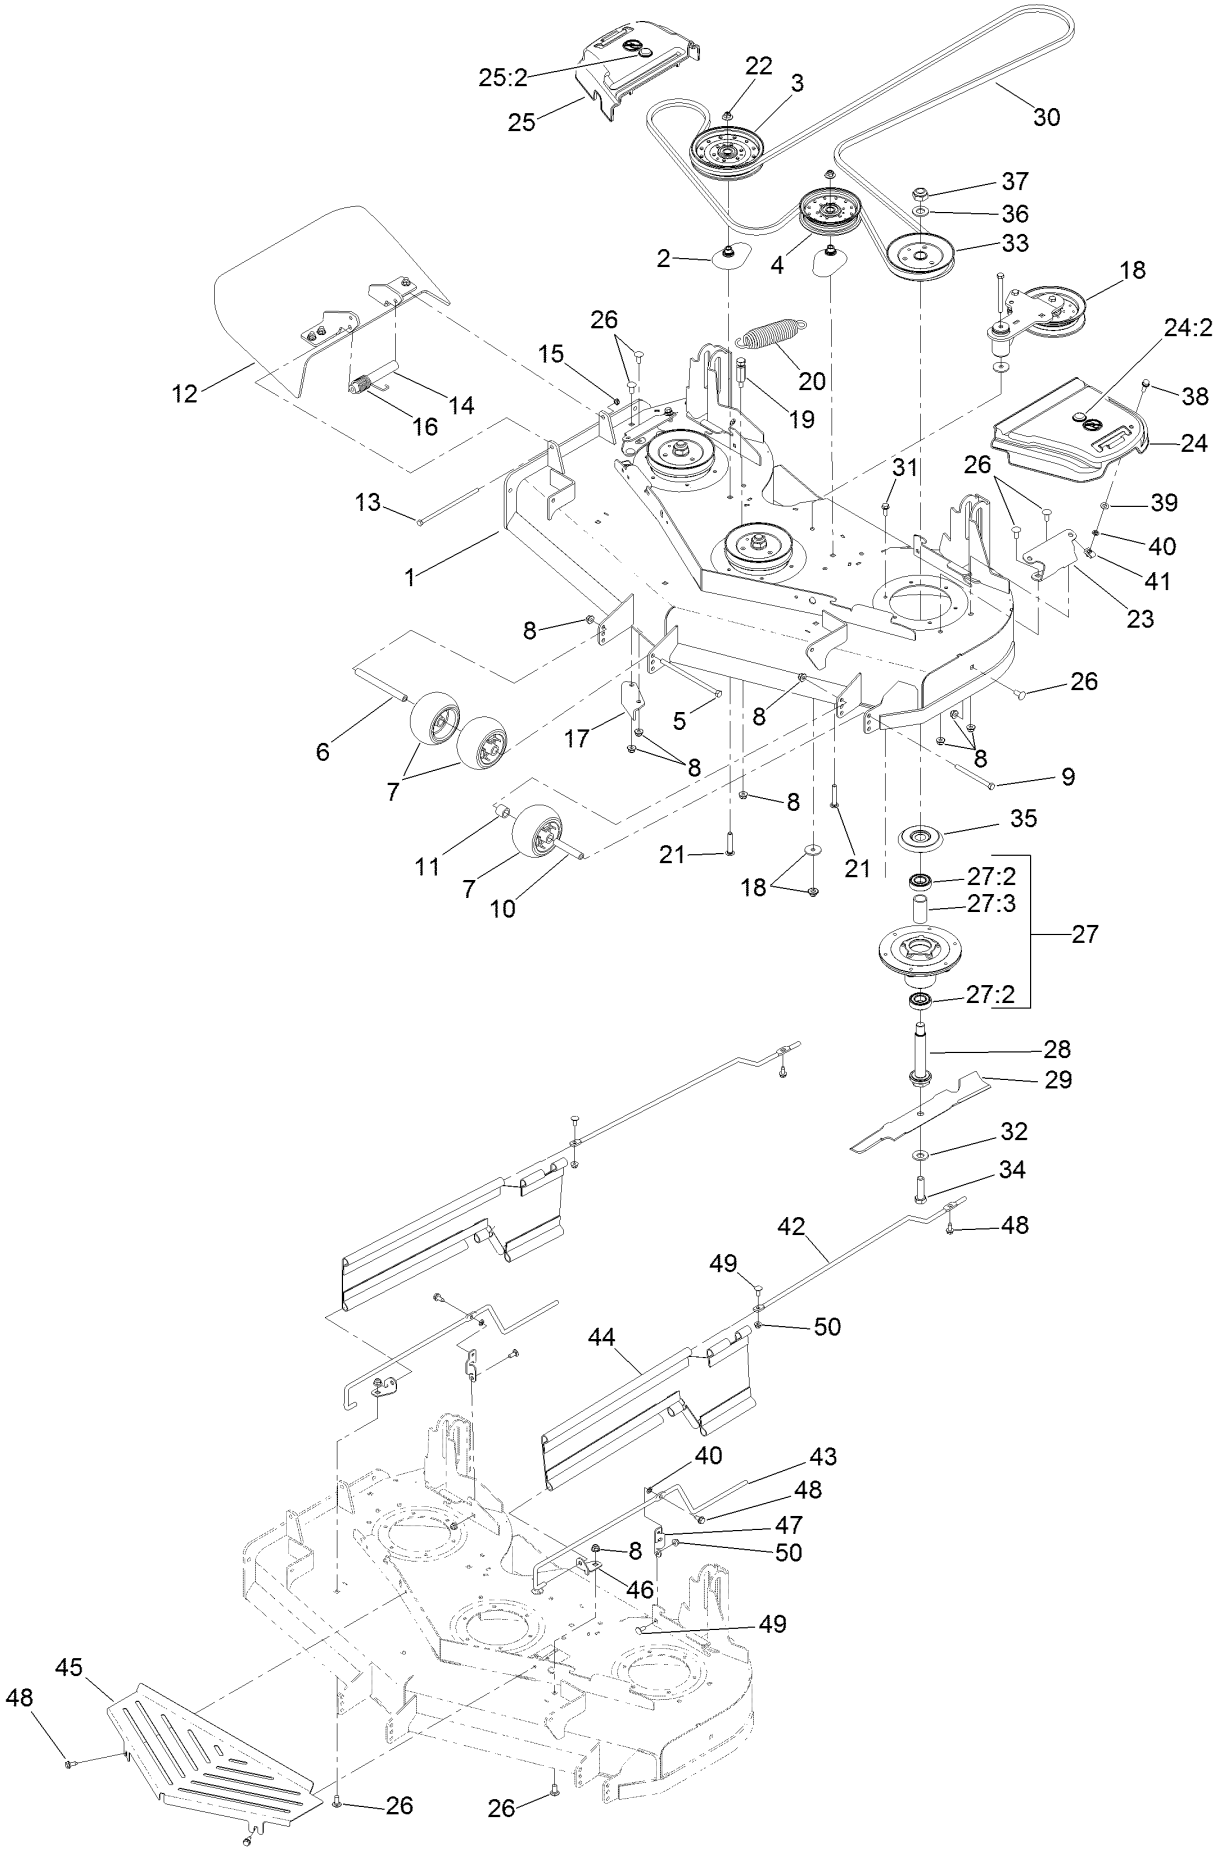


Deck Assembly (continued)

Ref.	Part Number	Qty.	Description
1	131-7664	1	Deck ASM
2	109-2872	2	Spacer-Pulley
3	116-4670	1	Pulley-Idler, Flat
4	116-4665	1	Idler-Pulley, Flat
5	108-5388	1	Screw-HH
6	98-5967	1	Spacer-Wheel
7	1-603299	3	Roller-Scalp, Anti
8	104-8301	13	Nut-Flange, NI
9	323-23	1	Screw-HH
10	98-7912	1	Tube-Spanner
11	98-7913	1	Tube-Spacer
12	120-2451	1	Deflector ASM
13	322-50	1	Screw-HH
14	105-4622	1	Spacer
15	3296-47	1	Nut-Lock, NI
16	108-4052	1	Spring-Torsion
17	107-8541-01	1	Baffle-Discharge
18		1	Idler Arm ASM●
19	114-5867	1	Anchor-Spring, Tall
20	116-6317	1	Spring-Extension
21	3231-40	2	Bolt-CARR, Short Neck
22	109-6658	2	Nut-Flange, NI
23	114-5881-01	2	Bracket-Cover, Belt
24	117-7814	1	LH Belt Cover ASM
24:2	117-3824	1	Plug-Plastic
25	117-7813	1	RH Belt Cover ASM
25:2	117-3824	1	Plug-Plastic
26	3231-27	10	Screw-CARR
27	120-5477	3	Spindle ASM
27:2	116-0720	2	Bearing-Ball
27:3	115-2641	1	Spacer-Bearing
28	120-2505	3	Spindle-Shaft
29	117-7277-03	3	Blade-Hi Flo, 16.50 Inch
30	119-9926	1	Belt-V
31	32144-41	18	Screw-Taptite
32	125-1736	3	Washer-Belleville
33	120-7854	3	Pulley-B Section
34	51-4060	3	Screw-Blade
35	117-7210	3	Shield-Bearing
36	92-5836	3	Washer
37	3296-67	3	Nut-Lock, NI
38	3234-29	2	Screw-HHF
39	73-0041	2	Washer-Thrust
40	117-2749	4	Nut-Push
41	94-2413	2	Nut-U
42	131-3999	2	Rod-Support, Upper
43	131-4000	2	Rod-Support, Lower
44	131-4023	2	Guard-Side
45	131-3979-03	1	Shield-Front
46	131-4001-03	2	Bracket-Support, Front Rod
47	131-4193-03	2	Bracket-Mounting, Rear
48	32144-70	6	Screw-HWHTF
49	3230-23	4	Screw-CARR
50	104-8300	4	Nut-Flange, NI

● Not serviced separately


Deck Decal Assembly No. 131-7664

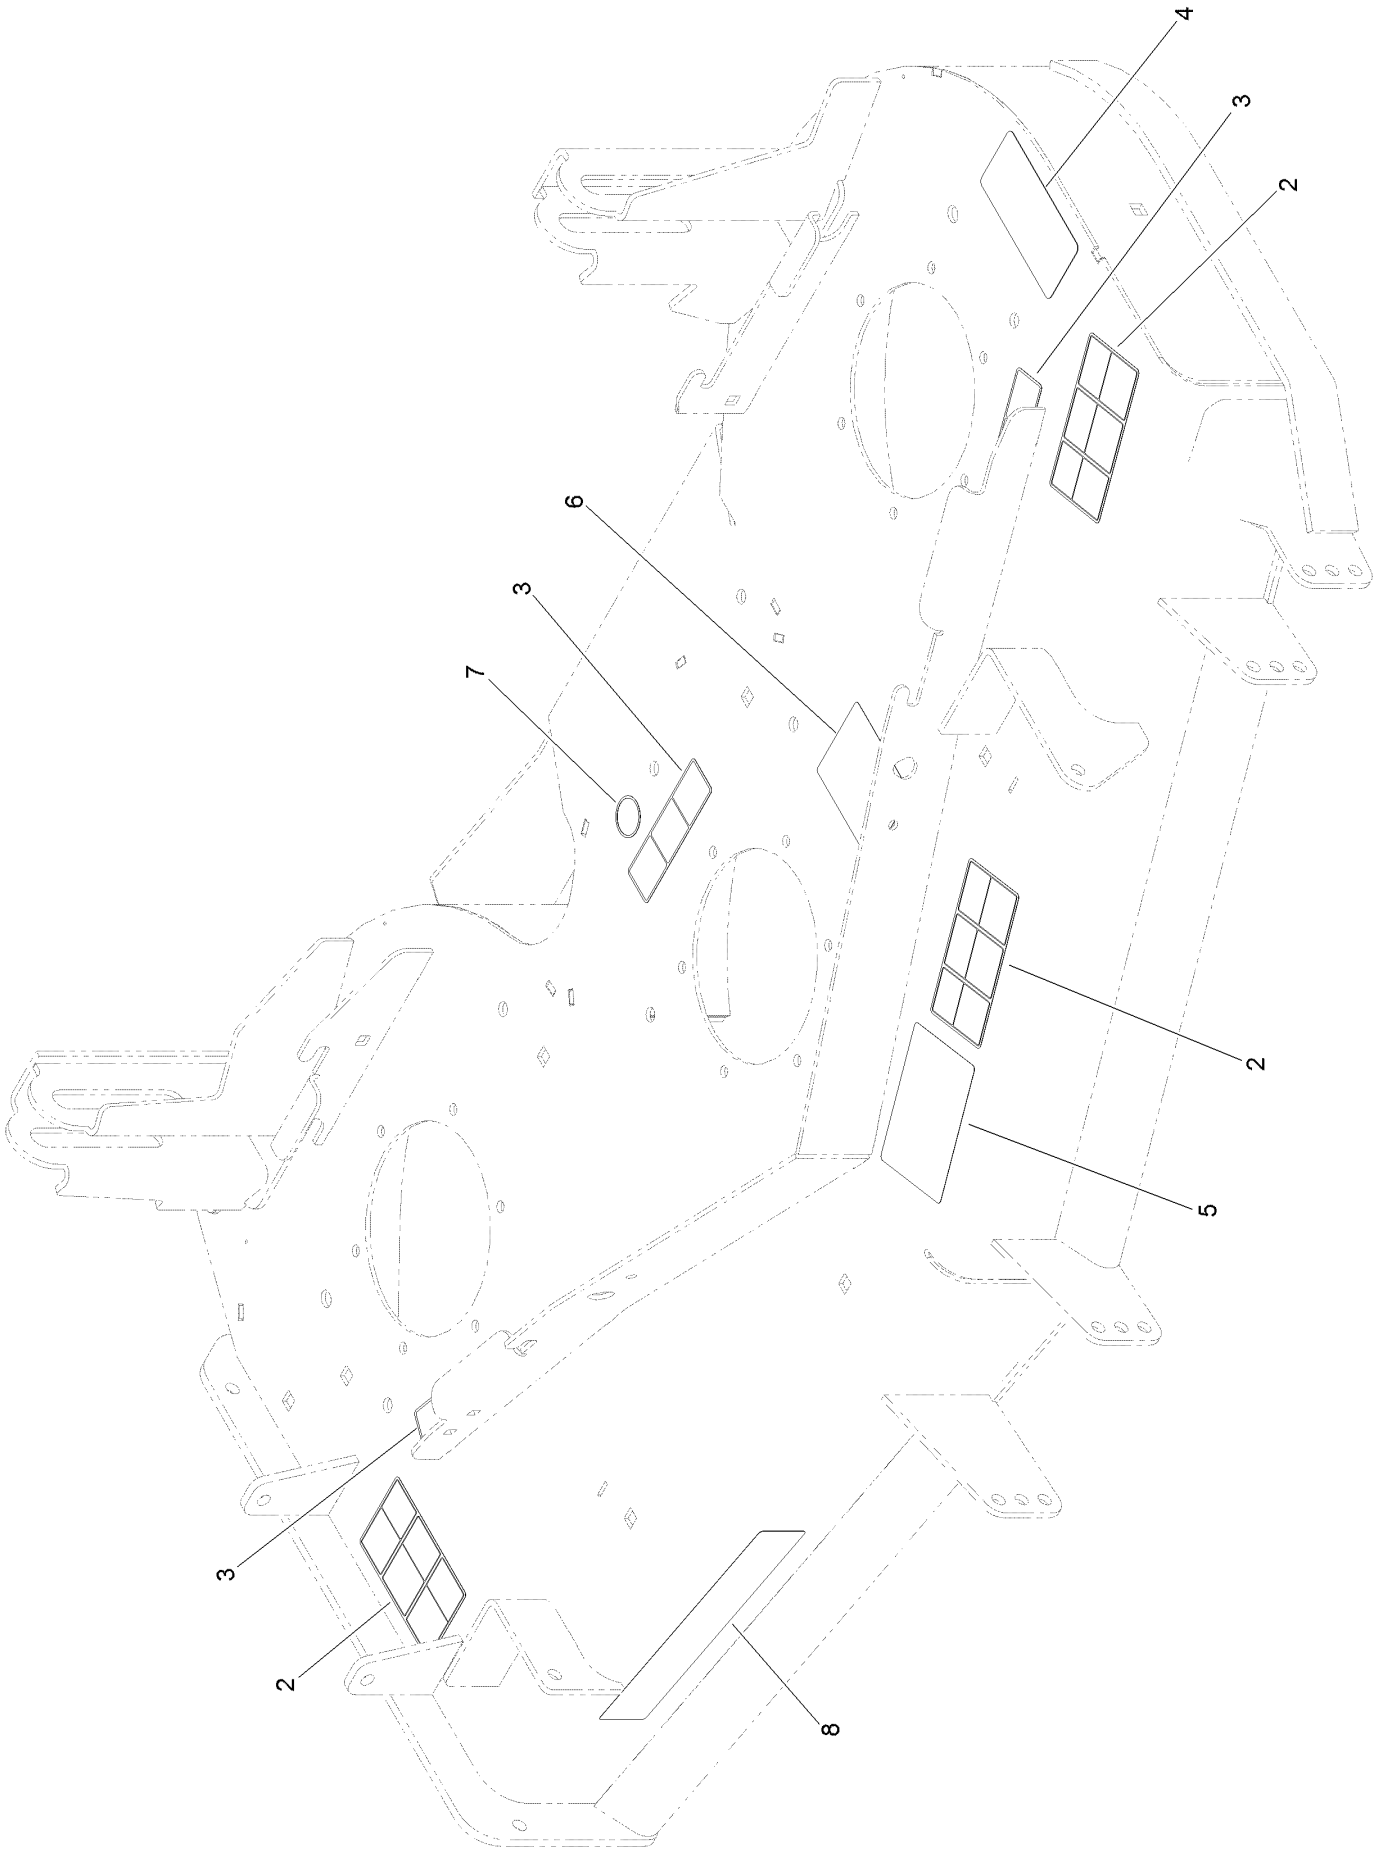

Deck Decal Assembly No. 131-7664 (continued)

Ref.	Part Number	Qty.	Description
2	117-3848	3	Decal-Danger
3	112-9028	3	Decal-Missing, Cover
4	93-7818	1	Decal-Torque, Blade Bolt
5	112-3858	1	Decal-Anti Scalp
6	117-8639	1	Decal-Routing, Deck Belt
7	58-6520	1	Decal-Grease
8	121-3204	1	Decal


Deflector Assembly No. 120-2451

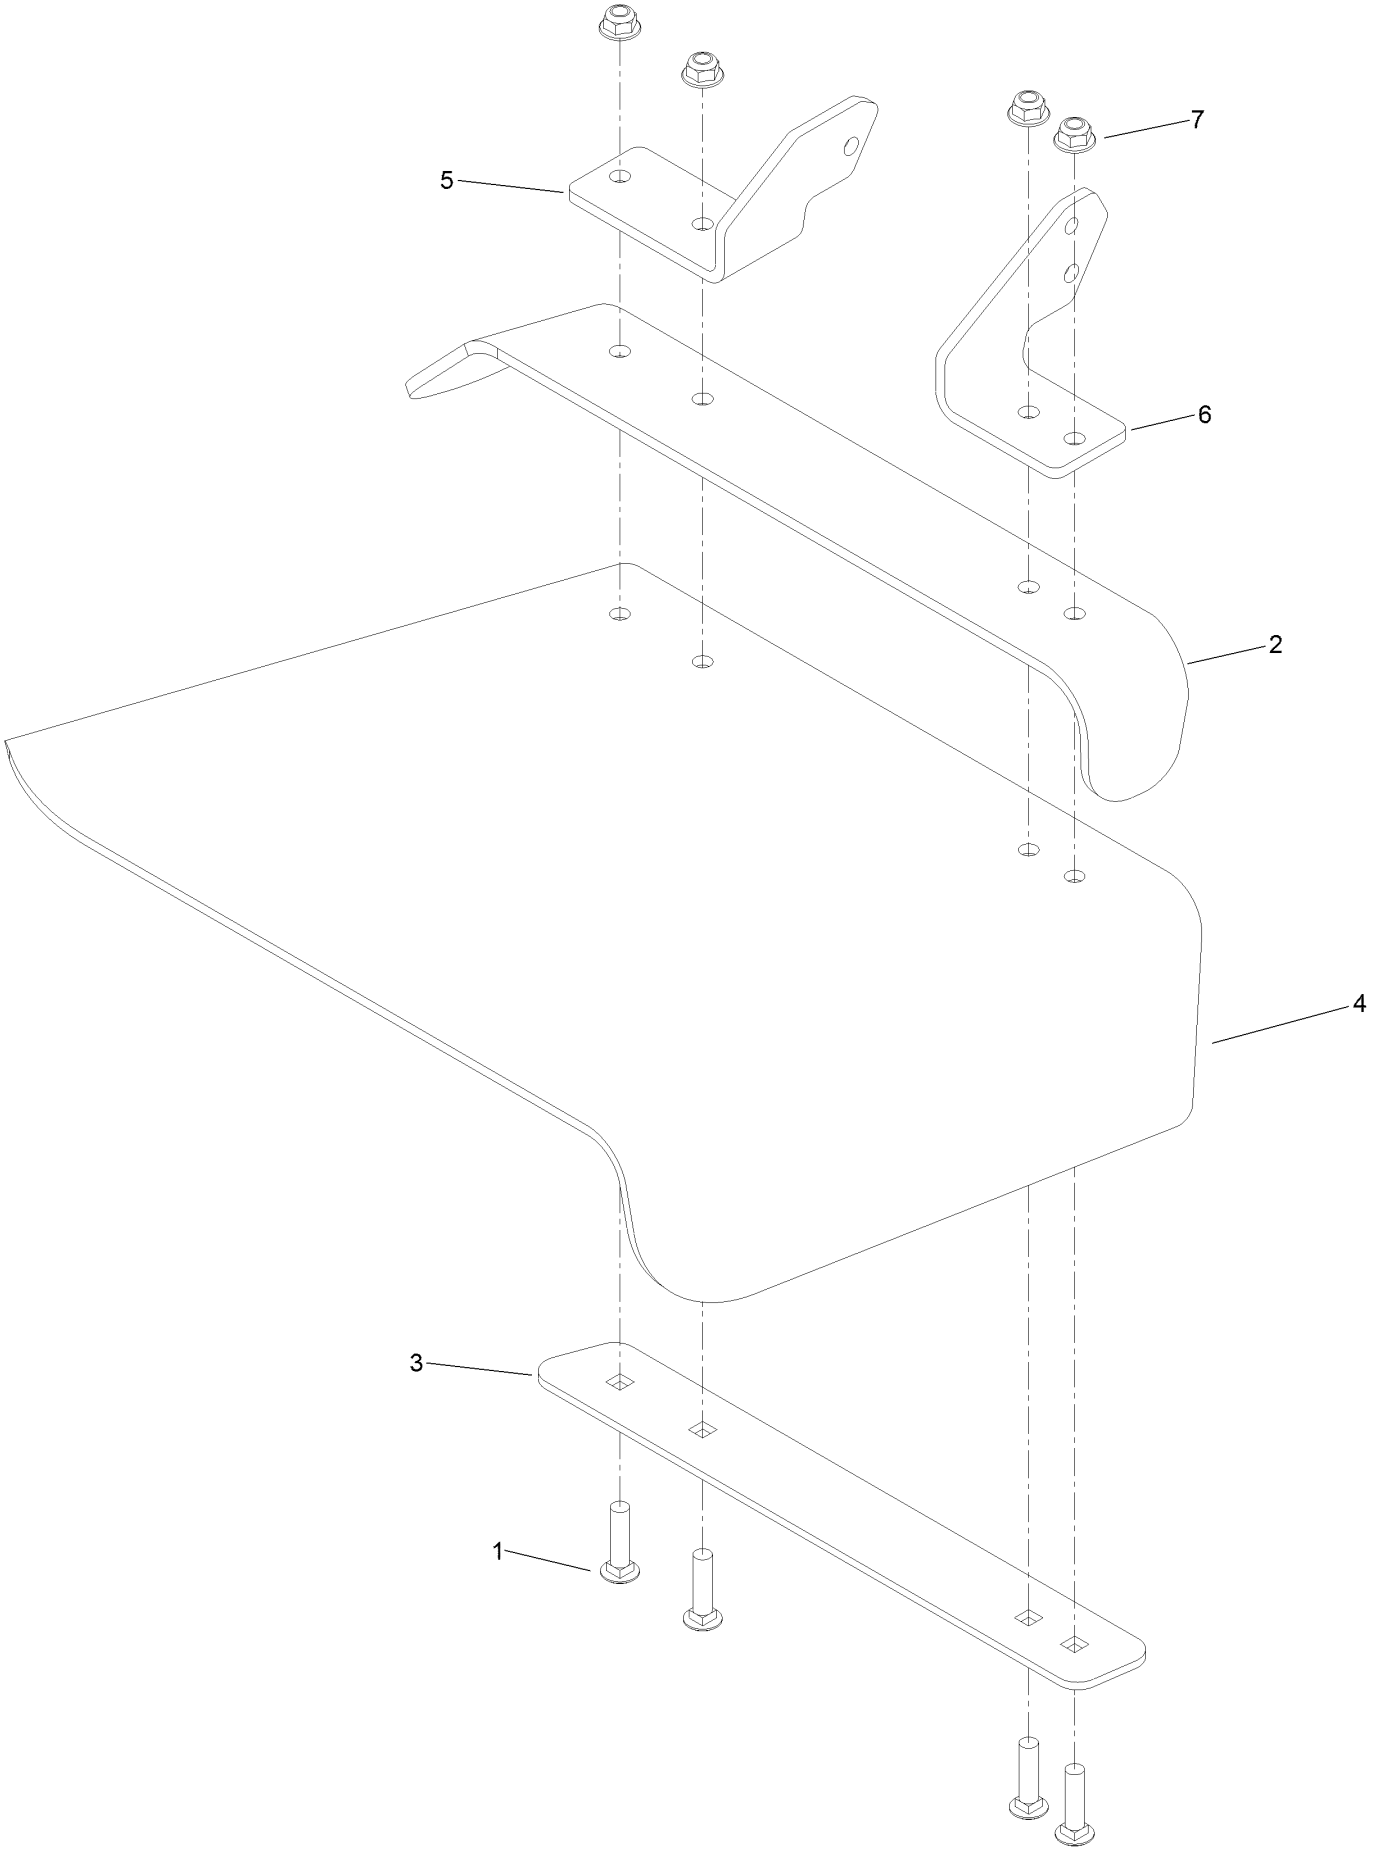

Deflector Assembly No. 120-2451 (continued)

Ref.	Part Number	Qty.	Description
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	110-0759	1	Deflector-Rubber
5	108-4059-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	104-8301	4	Nut-Flange, NI


Idler Assembly

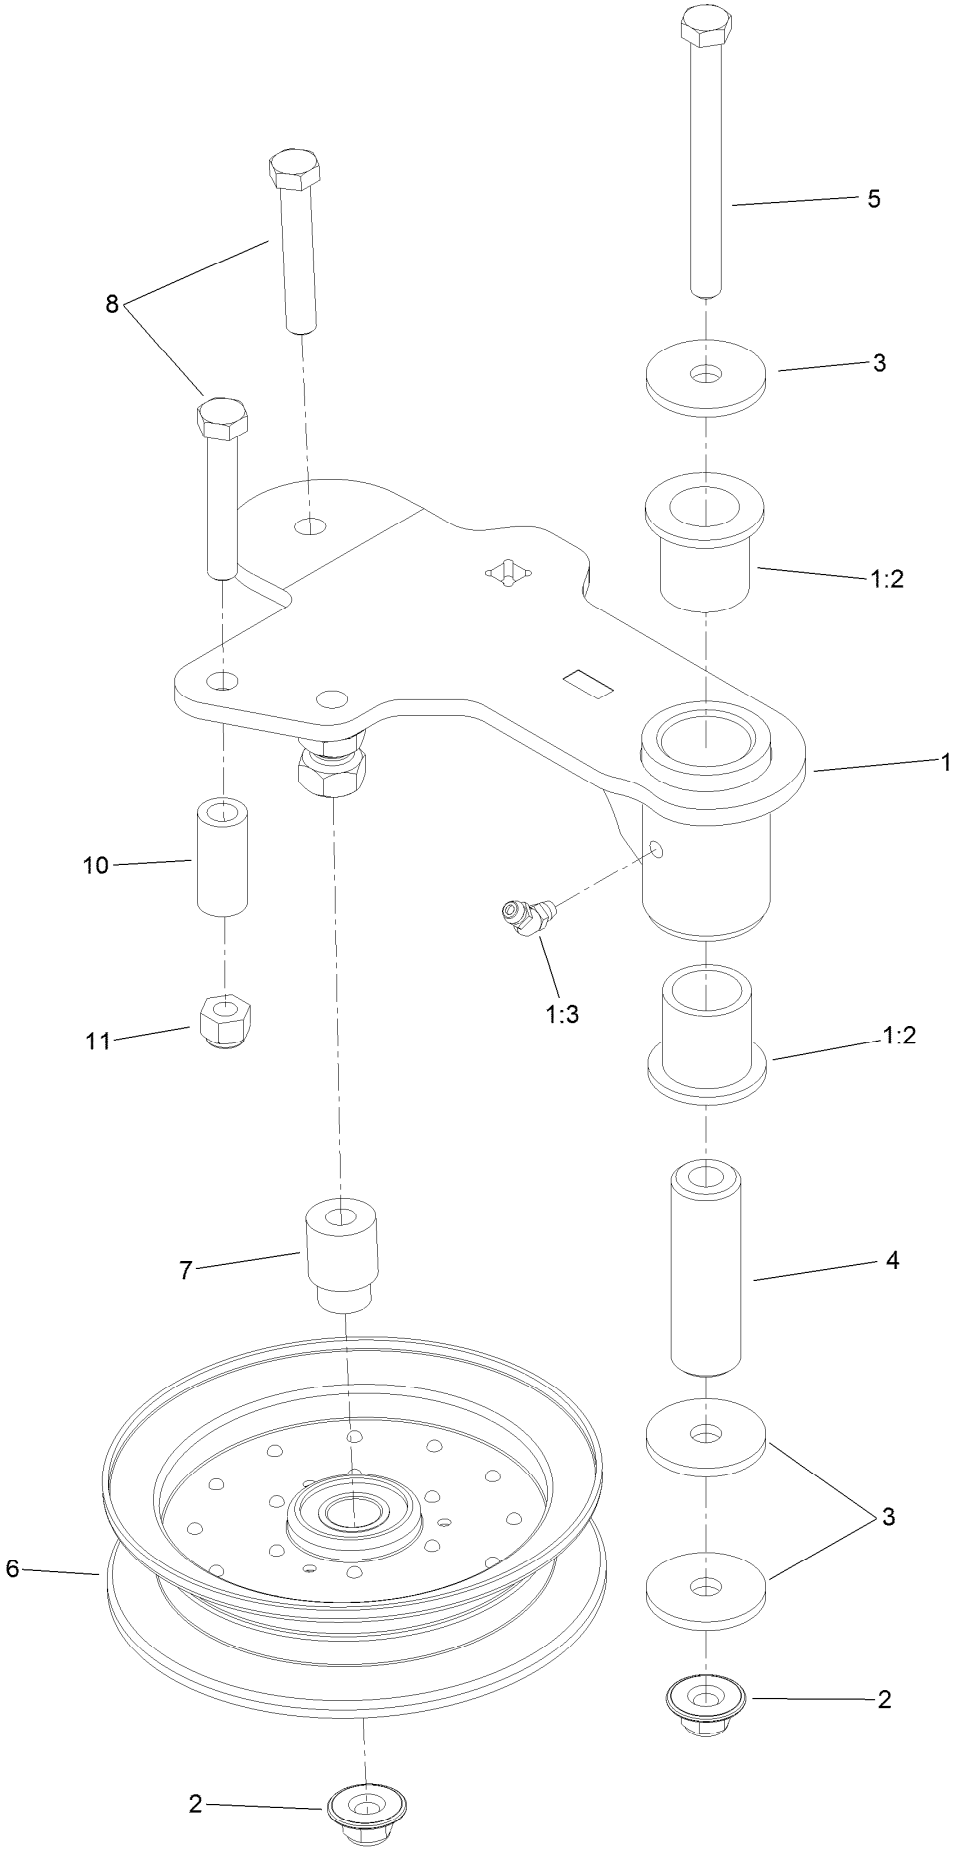

Idler Assembly (continued)

Ref.	Part Number	Qty.	Description
1	120-2501	1	Idler Arm ASM
1:2	1-303514	2	Bearing-Flanged
1:3	1481	1	Fitting-Grease
2	109-6658	2	Nut-Flange, NI
3	1-213069	3	Washer
4	114-5848	1	Spacer-Plain
5	98-5961	1	Screw-HH
6	116-4668	1	Idler-Pulley, Flanged
7	112-4212	1	Mount-Pulley
8	323-11	2	Screw-HH
10	104-0151	1	Spacer
11	3296-39	1	Nut-Lock, NI

Electrical Assembly

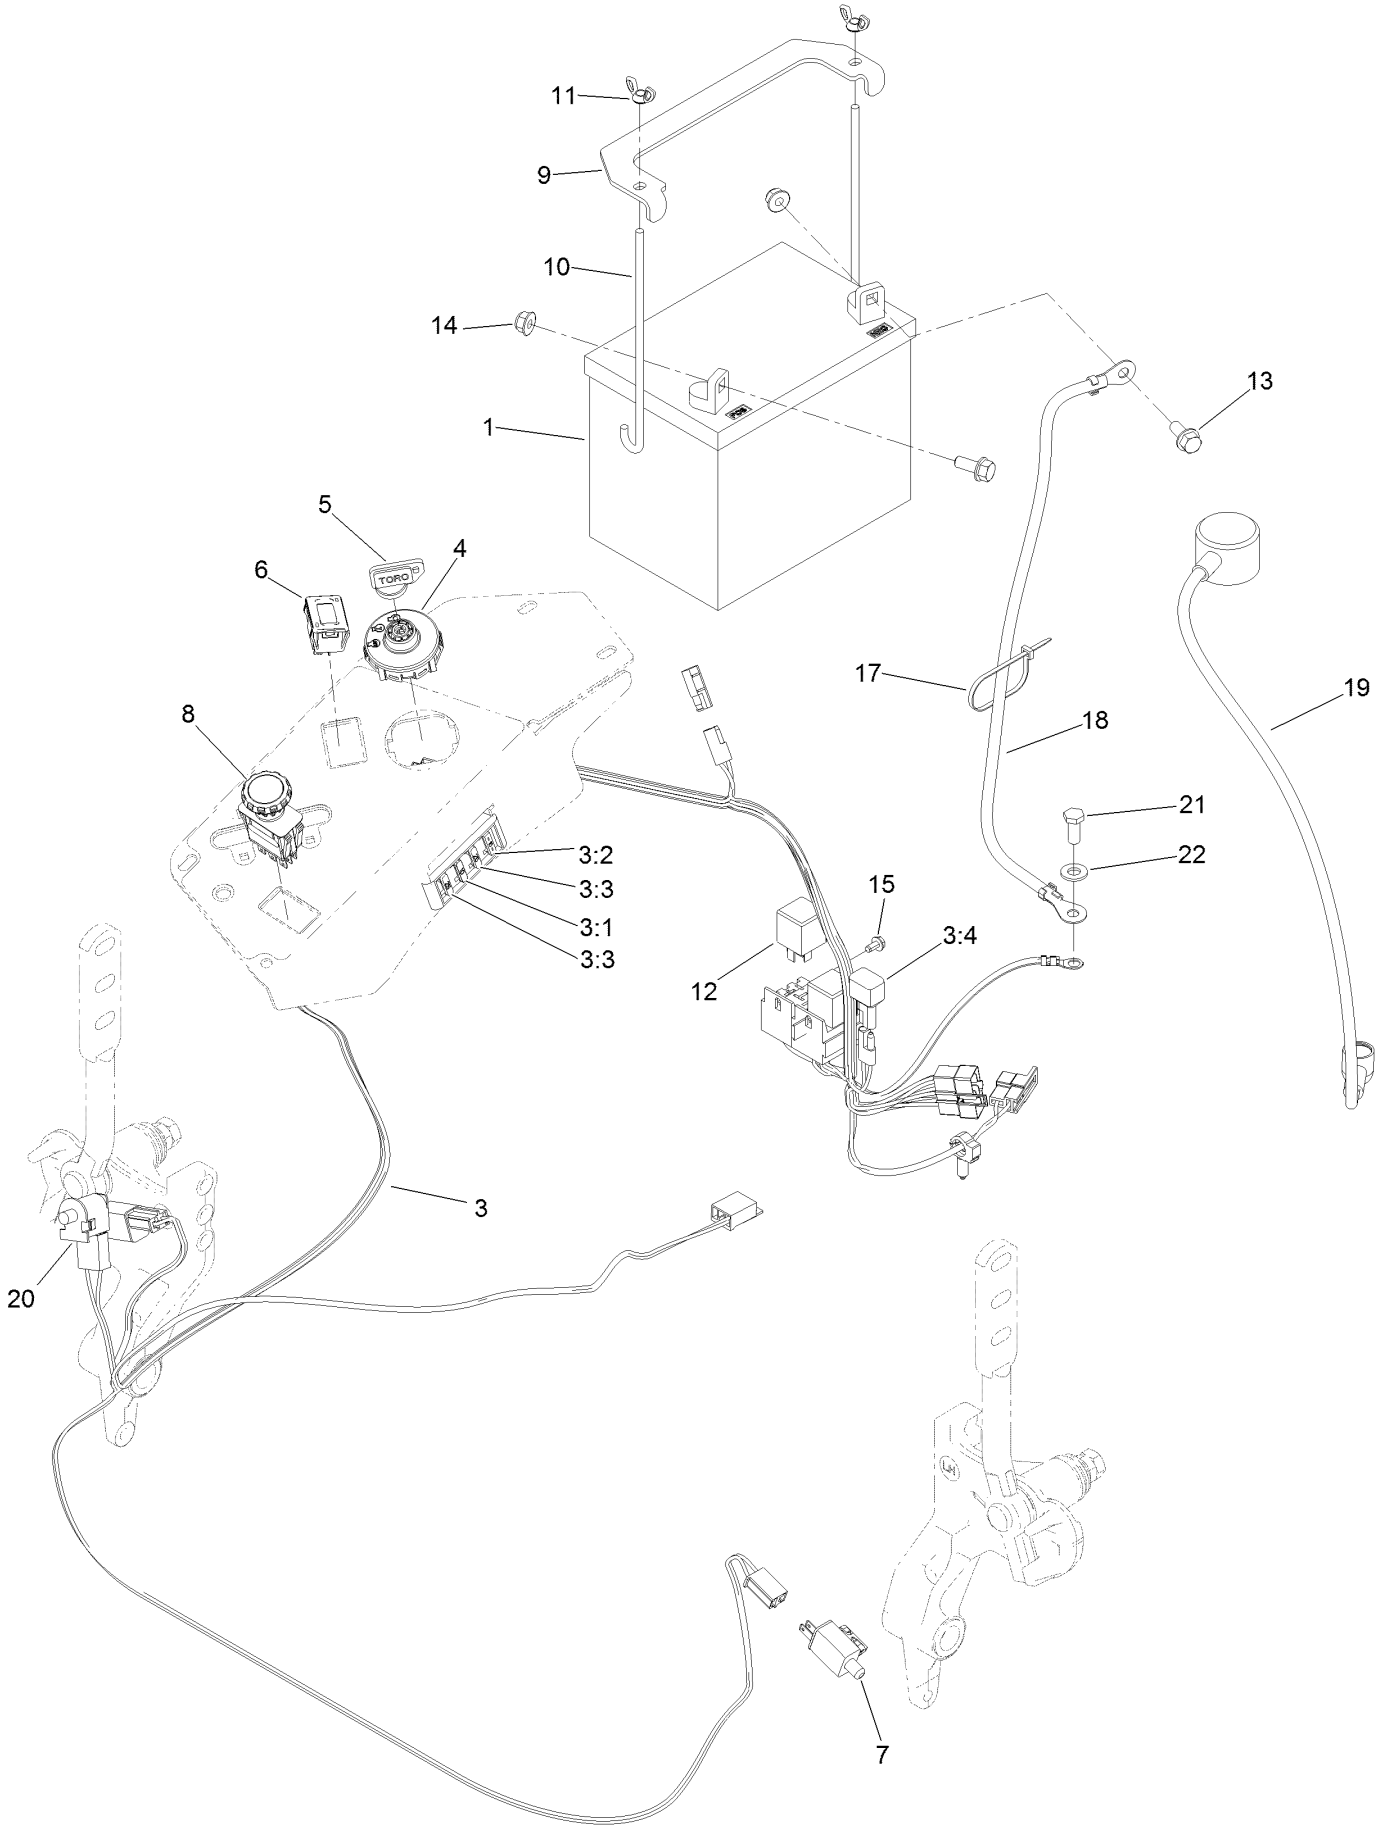

Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-8162	1	Battery-Dry
3	117-2582	1	Harness-Wire
3:1	218-578	1	Fuse-Blade, 10 Amp
3:2	109355	1	Fuse-Blade, 15 Amp
3:3	109102	2	Fuse-Blade, 25 Amp
3:4	116-0053	1	Cap-Plug
4	117-2221	1	Switch-Ignition
5	63-8360	1	Key-Ignition
6	120-2244	1	Hourmeter
7	110-6765	2	Switch
8	116-0124	1	Switch-PTO, 10 Amp
9	116-0042-03	1	Strap-Tie Down, Battery
10	1-633651	2	Bolt-Holddown
11	1-543792	2	Wingnut
12	1-643275	2	Relay
13	3234-5	2	Screw-HHF
14	104-8300	2	Nut-Flange, NI
15	104-2065	1	Screw-HWH
17	1-303287	3	Tie-Cable
18	114-1218	1	Cable-Battery, Negative
19	115-3864	1	Cable-Battery, Positive
20	82-2190	1	Switch-Bail
21	33114-020	1	Screw-HH
22	33094-00	1	Washer-Plain

Attachments and Accessories

For 74142TE Z Master Commercial 2000 Series Riding Mower with 48 TURBO FORCE Side Discharge Mower

Product Name	Model/Part
Hypr-Oil 500 (quart)	114-4713
Hypr-Oil 500 (gallon)	114-4714
Hypr-Oil 500-5 (5 gallon)	114-4715
Bimini Folding Shade Assembly	115-4510
Light Kit	116-1154
Z Stand Kit	121-4811
Trash Holder Kit	TC26
Recycler Kit	120-2401
Toro Deluxe Rider Cover	490-7319
Spark Arrestor Screen	75-6880
Filter Minder Gauge	99-4664
E-Z VAC Twin Soft Bagger	78569
Operator Controlled Discharge Chute Kit	117-3600
Seat Cover W/arm rest	117-0095
E-Z Vac Blower and Drive Kit	78571
Blade-Hi Flo, 16.50in	117-7277-03
Blade-Mulch, 16.50in	117-7278-03
Suspension Seat Kit	132-5972
MVP Filter, Belt and Blade Kit	127-1631
CE Bagger Compliance Kit, 48in Z Master 2000 Series Mower	127-0339
Wheel And Tire Asm	109-9126
Wheel And Axle Asm	127-9531
Toro Rops Lock Kit	126-4064

Notes:

Notes:

Notes:



Count on it.