
FORM NO. 3321–147

TORO®

MODEL NO. 03803–80001 & UP
MODEL NO. 03804–80001 & UP

PARTS CATALOG

# REELMASTER® 6500D – 2WD/4WD
## TRACTION UNIT

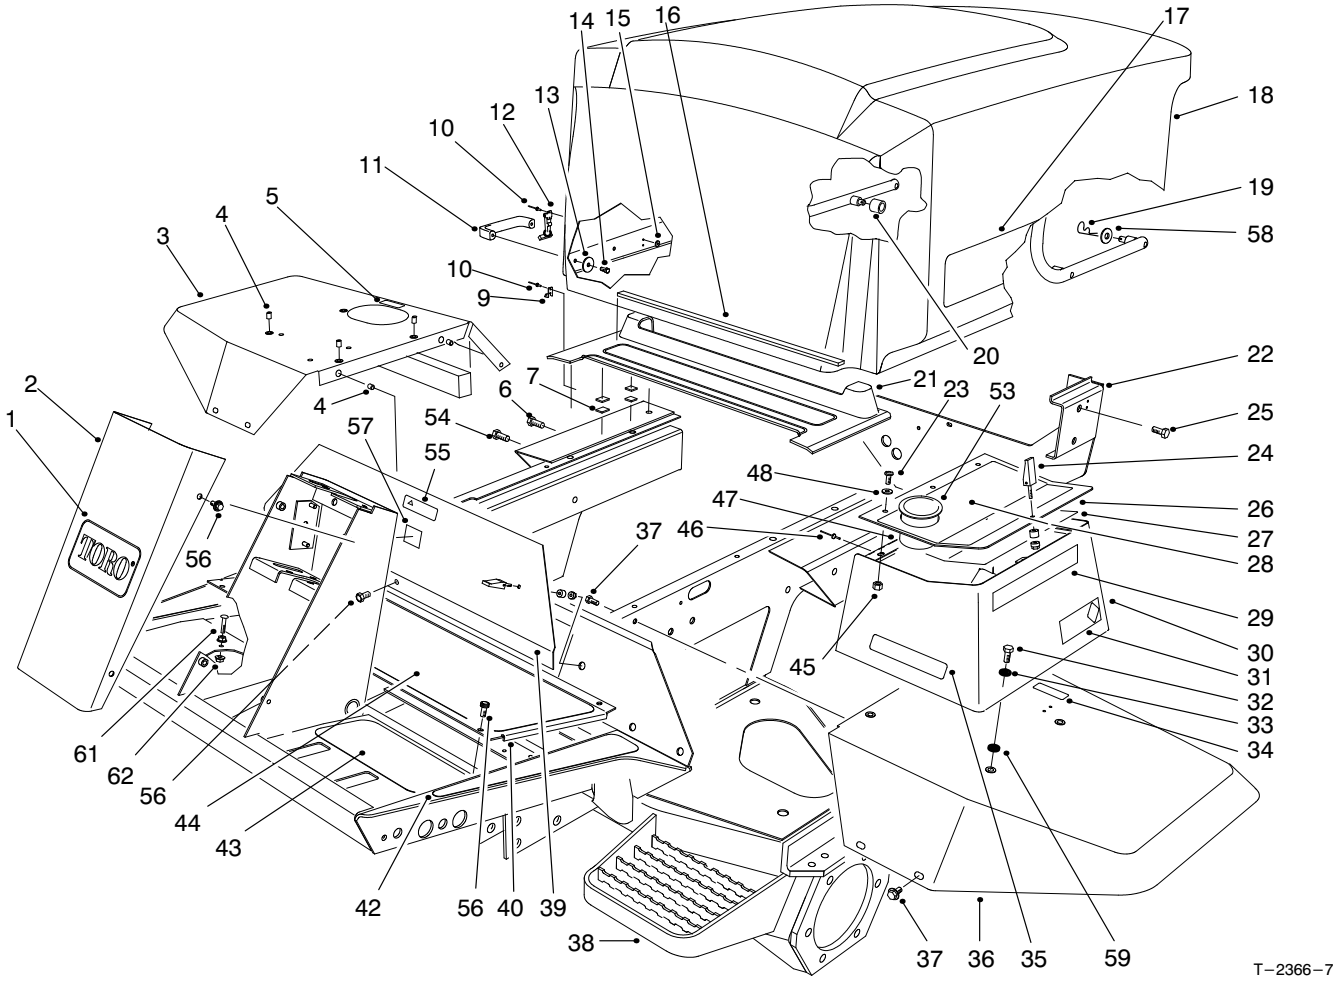



T–2366–7

## FRAME & BODY ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 62–5550 | Decal–Toro | 1 |
| 2 | 93–7996 | Cover–Tower | 1 |
| 3 | 93–7579 | Fender–RH | 1 |
| 4 | 32148–7 | Nut–Clinch | 5 |
| 5 | 93–6686 | Decal–Hydraulic Oil | 1 |
| 5 | 88–1980 | Decal– Hydraulic Oil (Japan) | 1 |
| 6 | 33106–035 | Screw–HHF | 8 |
| 7 | 93–9155 | Velcro | 2 |
| 9 | 249–40 | Keeper | 1 |
| 10 | 3269–13 | Rivet–Pop | 4 |
| 11 | 65–5100 | Handle–Hood | 1 |
| 12 | 59–9740 | Latch–Draw | 1 |
| 13 | 3256–78 | Washer–Flat | 2 |
| 14 | 46–8091 | Screw–Tapping | 2 |
| 15 | 3269–10 | Washer–Flat | 2 |
| 16 | 92–7633 | Strip–Bumper, Hood | 1 |
| 17 | 92–7532 | Decal–RM6500D | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 18 | 92–7511 | Hood | 1 |
| 19 | 3290–467 | Pin–Cotter, Hair | 2 |
| 20 | 93–7582 | Hose | 1 |
| 21 | 94–2617 | Cover–Pump | 1 |
| 22 | 98–8814 | Frame–Rear (Incl. Ref. #1, Page 51) | 1 |
| 23 | 3258–166 | Screw | 3 |
| 24 | 74–5950 | Latch–Swell | 3 |
| 25 | 33108–035 | Screw | 6 |
| 26 | 93–9180 | Cover–Box, Tool | 1 |
| 27 | 98–3728 | Decal–Service | 1 |
| 27 | 98–8135 | Decal–Service (Danish) | 1 |
| 27 | 98–8136 | Decal–Service (Dutch) | 1 |
| 27 | 98–8137 | Decal–Service (Finnish) | 1 |
| 27 | 98–8138 | Decal–Service (French) | 1 |
| 27 | 98–8139 | Decal–Service (German) | 1 |
| 27 | 98–8140 | Decal–Service (Italian) | 1 |
| 27 | 98–8141 | Decal–Service (Norwegian) | 1 |

© The TORO Company – 1998
*All Rights Reserved*

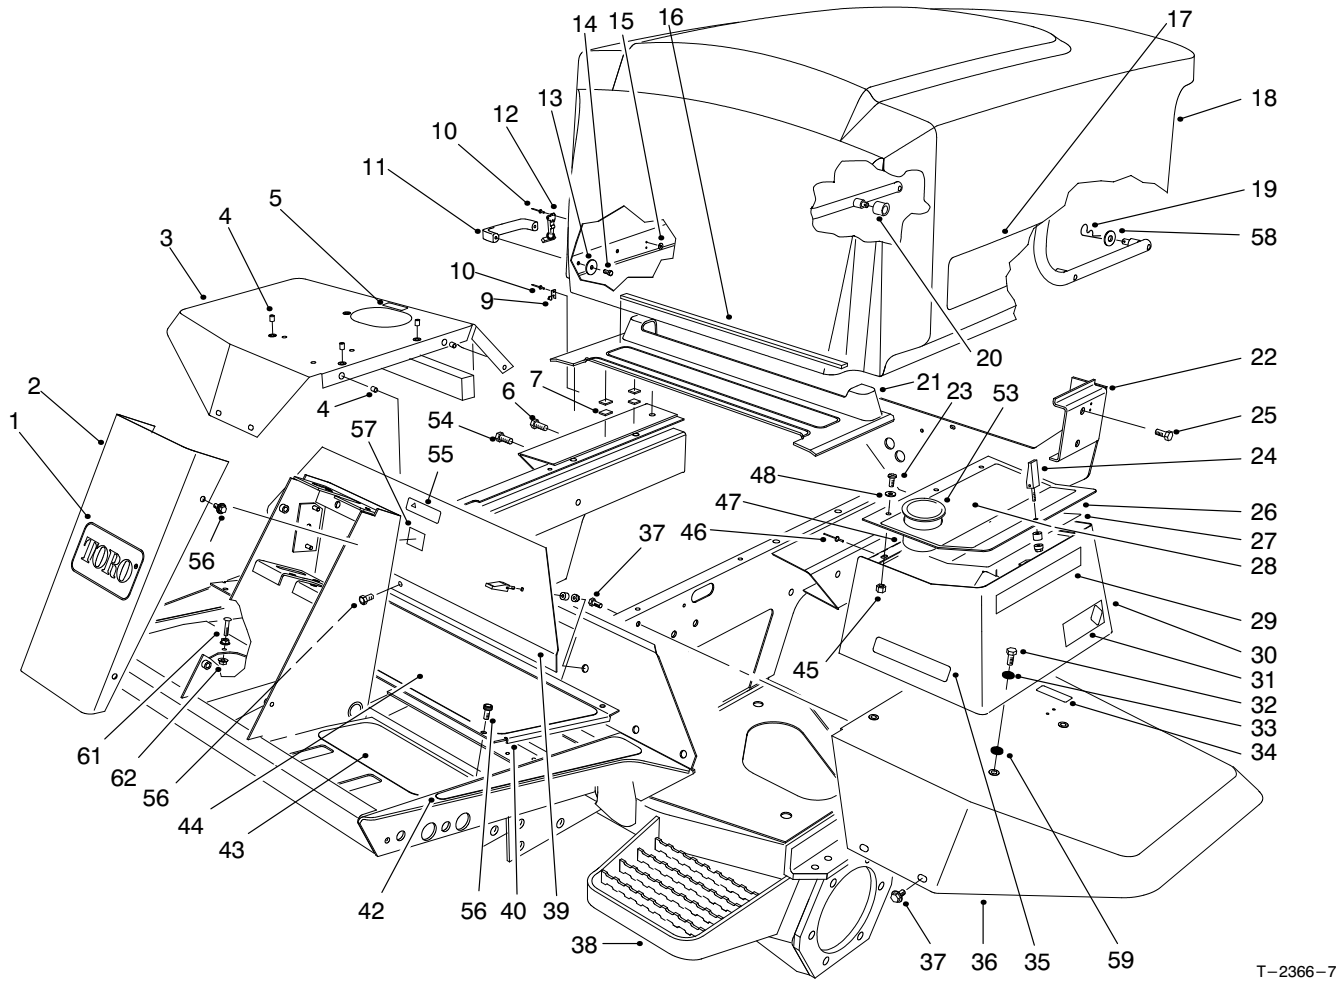



# FRAME & BODY ASSEMBLY (Continued)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 27 | 94−2943 | Decal−Service (Portuguese) | 1 |
| 27 | 94−2944 | Decal−Service (Spanish) | 1 |
| 27 | 94−2945 | Decal−Service (Swedish) | 1 |
| 27 | 94−2941 | Decal−Service (Japan) | 1 |
| 28 | 93−1262 | Decal−Hillside | 1 |
| 28 | 94−4572 | Decal−Hillside (Japan) | 1 |
| 29 | 72−3560 | Decal−4WD (Model 03804) | 1 |
| 30 | 75−5810 | Box−Tool | 1 |
| 31 | 93−0096 | Decal−ACE | 2 |
| 32 | 322−3 | Screw−HH | 4 |
| 33 | 3256−3 | Washer−Flat | 4 |
| 34 | 93−6680 | Decal−Fuel, Diesel | 1 |
| 34 | 84−2860 | Decal−Fuel, Diesel (Japan) | 1 |
| 35 | 93−6689 | Decal−No Riders | 1 |
| 35 | 84−3420 | Decal−No Riders (Japan) | 1 |
| 36 | 75−3860 | Fender−LH | 1 |
| 37 | 3234−14 | Screw−Flange | 10 |
| 38 | 94−9953 | Frame−Front (Incl. Ref. #42, 43 & on Page 67, #21) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 39 | 75−1390 | Cover−Access, Front | 1 |
| 40 | 75−1410 | Plate−Access, Floor | 1 |
| 42 | 93−7592 | Tread−Footrest | 2 |
| 43 | 75−0620 | Tread−Foot, LH | 1 |
| * | 75−0610 | Tread−Foot, RH | 1 |
| 44 | 75−0630 | Tread−Foot, Center | 1 |
| 45 | 32128−33 | Nut−Flange | 3 |
| 46 | 93−8744 | Rivet−Pop | 3 |
| 47 | 75−5780 | Hinge−Cover | 1 |
| 48 | 3256−1 | Washer−Flat | 3 |
| 53 | 94−1410 | Holder−Can, Beverage | 1 |
| 54 | 3234−18 | Screw−Flange | 2 |
| 55 | 93−9425 | Decal−Danger | 1 |
| 55 | 94−4579 | Decal−Danger (Japan) | 1 |
| 56 | 3234−7 | Screw | 9 |
| 57 | 93−7252 | Decal−CE (Europe) | 1 |
| 58 | 66−6480 | Washer | 2 |
| 59 | 66−2920 | Washer | 4 |
| 61 | 17−9420 | Screw−Handle | 1 |
| 62 | 32128−20 | Nut−Lock | 2 |

*Not Illustrated

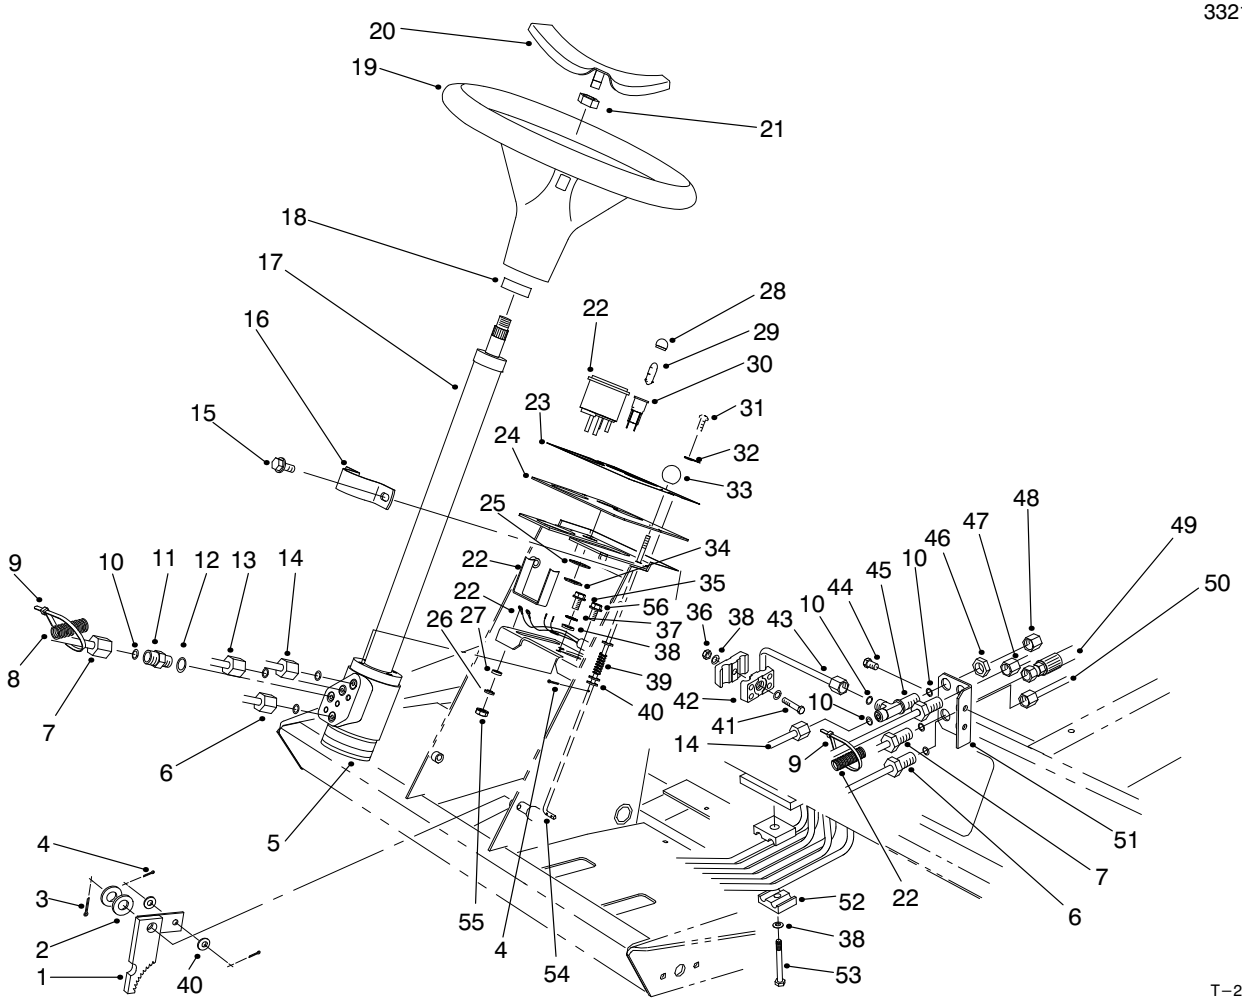



# STEERING TOWER ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 63−7900 | Rack | 1 |
| 2 | 3256−26 | Washer−Flat | 2 |
| 3 | 3272−10 | Pin−Cotter | 1 |
| 4 | 3272−5 | Pin−Cotter | 3 |
| 5 | 94−9950 | Asm−Valve, Steering | 1 |
| 6 | 94−3059 | Tube−Steering, RH | 1 |
| 7 | 94−3061 | Tube−Steering, Front, In | 1 |
| 8 | 94−3090 | Harness−Wire, Main | 1 |
| 9 | 3290−378 | Tie−Cable | 7 |
| 10 | 237−22 | O−Ring | 10 |
| 11 | 340−2 | Adapter (Incl. Ref. #10 & 12) | 4 |
| 12 | 237−42 | O−Ring | 4 |
| 13 | 94−3060 | Tube−Steering, Front LH | 1 |
| 14 | 94−3062 | Tube−Steering, Front, Out | 1 |
| 15 | 3234−7 | Screw | 2 |
| 16 | 75−2810 | Bracket−Column, Steering | 1 |
| 17 | 94−9951 | Asm−Column, Steering | 1 |
| 18 | 21−9260 | Cover−Dust | 1 |
| 19 | 94−3500 | Wheel−Steering (Incl. Ref. #20) | 1 |
| 20 | 88−3870 | Cover | 1 |
| 21 | 94−9952 | Nut−Jam | 1 |
| 22 | 93−4213 | Asm−Speedometer (Incl. Ref. #26, 27 & 53) | 1 |
| 23 | 93−1263 | Decal−Tower | 1 |
| 23 | 94−4573 | Decal−Tower (Japan) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 24 | 93−7998 | Plate−Instrument | 1 |
| 25 | 218−536 | Washer−Lock, Int. Tooth | 1 |
| 26 | 3219−14 | Washer−Lock | 3 |
| 27 | 3256−14 | Washer−Flat | 2 |
| 28 | 218−533 | Lens−Red | 1 |
| 29 | 93−7480 | Bulb−LED | 1 |
| 30 | 44−2210 | Asm−Light, Warning (Incl. Ref. #25, 28, 29, & 34) | 1 |
| 31 | 87−6620 | Screw−Torx Pan Hd. | 2 |
| 32 | 3256−1 | Washer−Flat | 2 |
| 33 | 233−17 | Knob | 1 |
| 34 | 218−535 | Nut−Lock | 1 |
| 35 | 33103−025 | Screw−HHF | 1 |
| 36 | 3296−47 | Nut−Lock | 1 |
| 37 | 3255−8 | Washer−Lock | 1 |
| 38 | 3256−23 | Washer−Flat | 6 |
| 39 | 95−1821 | Spring−Brake, Park | 1 |
| 40 | 3256−22 | Washer−Flat | 5 |
| 41 | 322−7 | Screw−HH | 1 |
| 42 | 56−7972 | Clamp | 2 |
| 43 | 94−1447 | Tube−Steering, Return | 1 |
| 44 | 32144−11 | Screw−Thread Forming | 2 |
| 45 | 340−68 | Fitting−Tee, Bulkhead (Incl. Ref. #10) | 1 |
| 46 | 340−70 | Nut−Lock, Bulkhead | 4 |
| 47 | 92−7495 | Asm−Tube, Steering Rear | 1 |
| 48 | 340−117 | Cap−Fitting | 1 |


3321−147

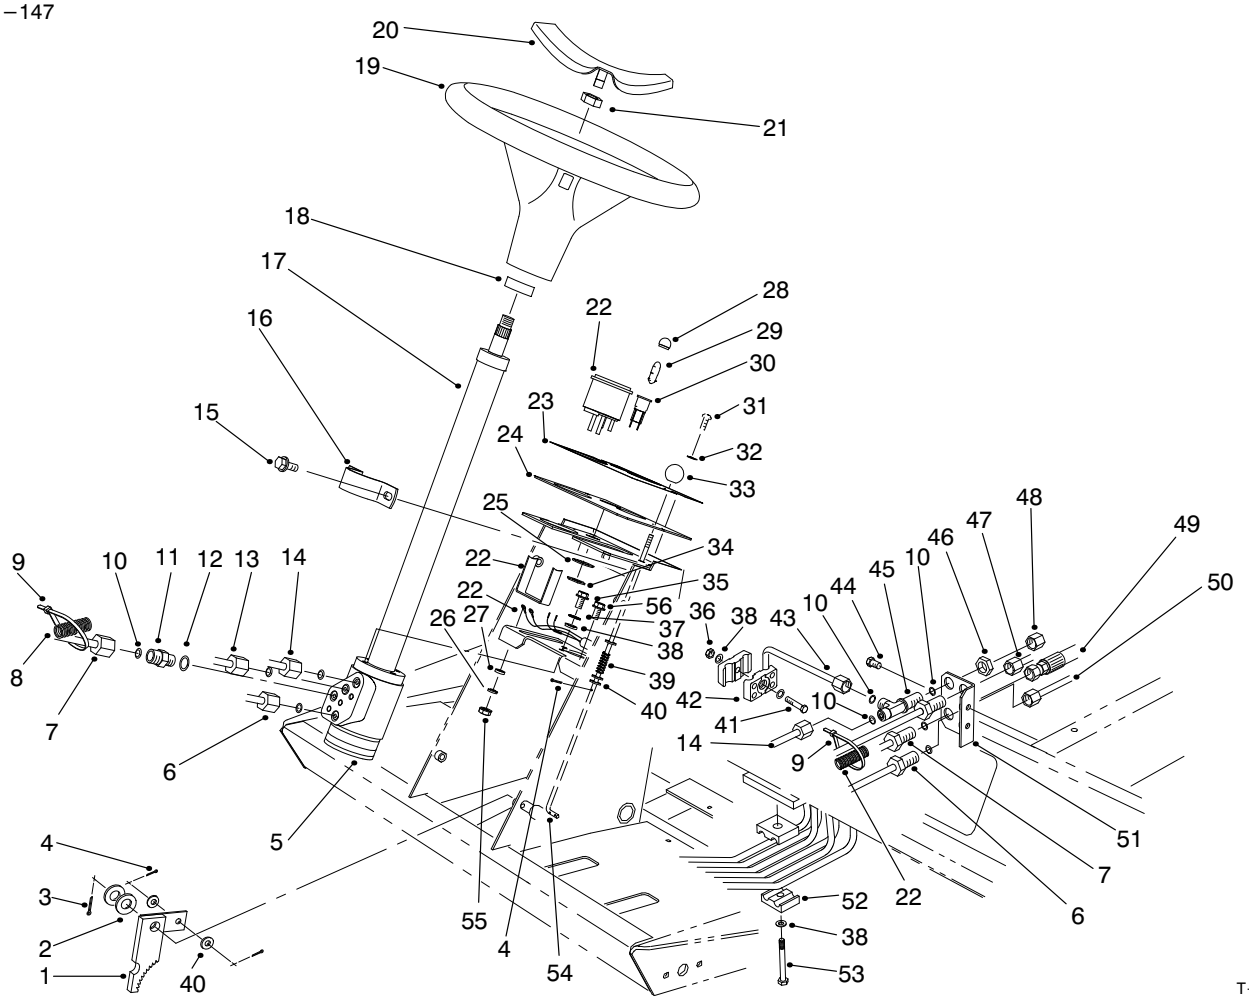


# STEERING TOWER ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 49 | 92−7622 | Hose−Steering | 1 |
| 50 | 92−7494 | Asm−Tube Steering Rear | 1 |
| 51 | 92−7606 | Bracket−Bulkhead | 1 |
| 52 | 56−7973 | Clamp | 6 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 53 | 322−6 | Screw−HH | 3 |
| 54 | 75−1490 | Rod−Brake, Park | 1 |
| 55 | 3253−2 | Nut−Hex. | 9 |
| 56 | 33103−020 | Screw−HHF | 2 |

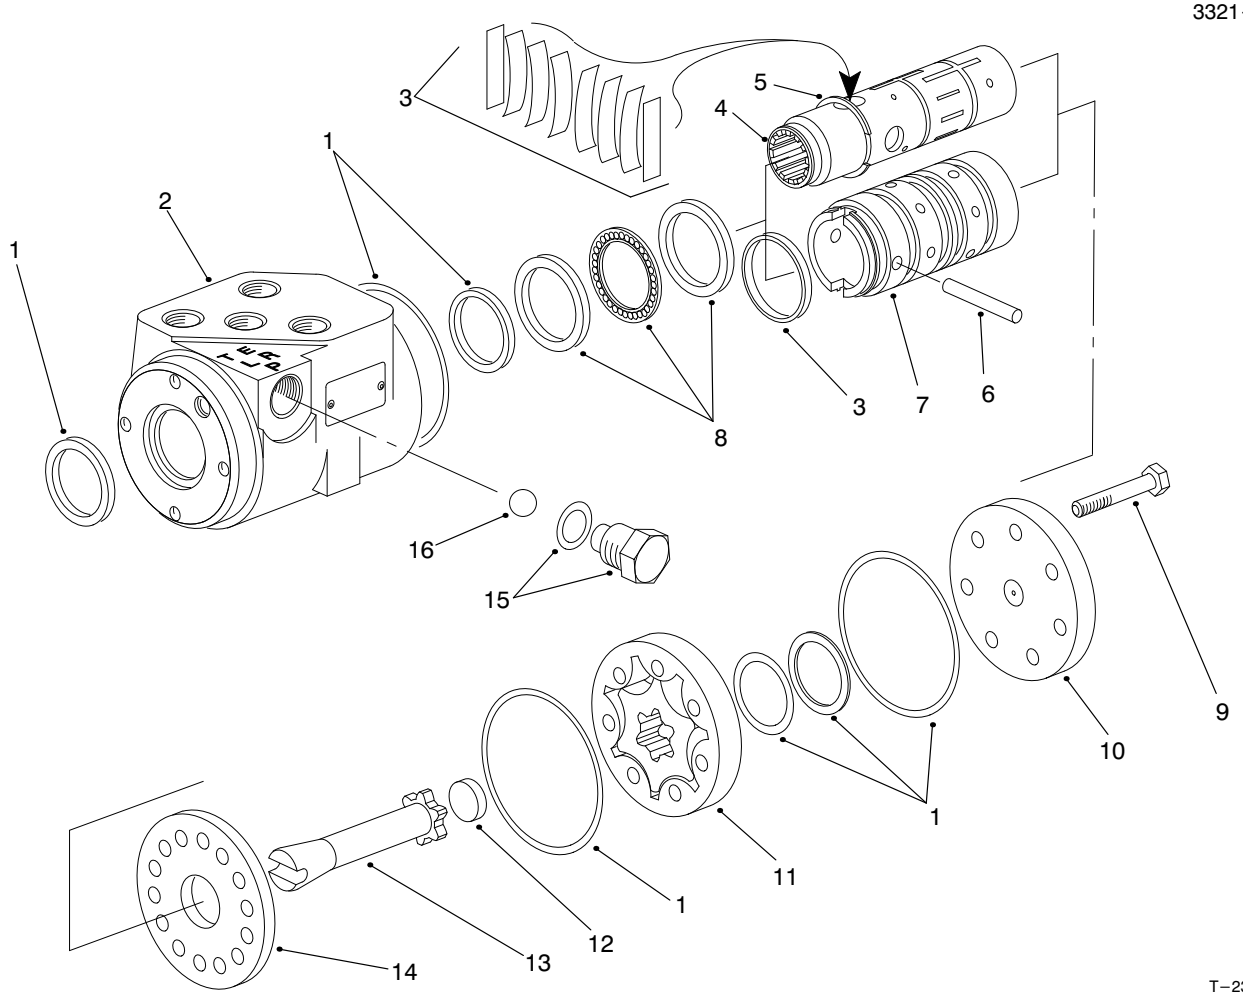



T–2312–3

# STEERING VALVE ASSEMBLY NO. 94–9950

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 94–4099 | Kit–Seal | 1 |
| †2 | | Housing | 1 |
| 3 | 94–4095 | Kit–Spring, Centering | 1 |
| †4 | | Spool | 1 |
| 5 | 94–4098 | Ring–Retaining | 1 |
| 6 | 94–4094 | Pin | 1 |
| †7 | | Sleeve | 1 |
| 8 | 94–4096 | Kit–Bearing | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 9 | 94–4088 | Screw | 7 |
| 10 | 94–4089 | Cap–End | 1 |
| 11 | 94–4090 | Gerotor | 1 |
| 12 | 94–4091 | Spacer | 1 |
| 13 | 94–4093 | Drive | 1 |
| 14 | 94–4092 | Plate–Wear | 1 |
| 15 | 94–4097 | Asm–Plug | 1 |
| 16 | 94–4100 | Ball | 1 |

† Not Serviced Separately.

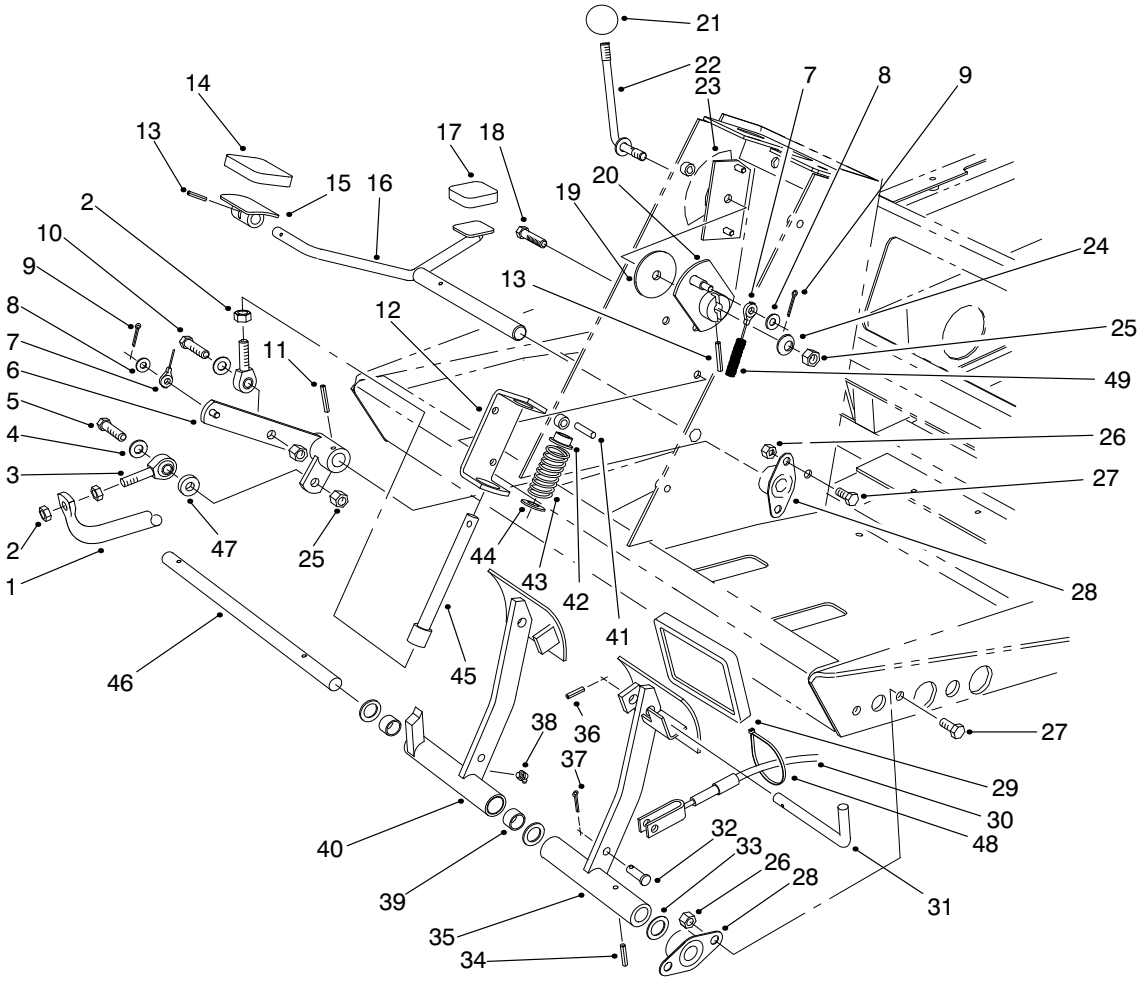



T−2063−4

# TRACTION & BRAKE PEDAL ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 92−7531 | Tube−Control, Pump | 1 |
| 2 | 3220−3 | Nut−Jam | 3 |
| 3 | 2411−36 | Bearing−Rod End | 2 |
| 4 | 3256−24 | Washer−Flat | 2 |
| 5 | 323−9 | Screw−HH | 1 |
| 6 | 75−3270 | Hub−Pivot, Traction | 1 |
| 7 | 75−6580 | Cable−Pedal | 1 |
| 8 | 3256−22 | Washer−Flat | 2 |
| 9 | 3272−2 | Pin−Cotter | 2 |
| 10 | 323−7 | Screw−HH | 1 |
| 11 | 32121−6 | Pin−Roll | 1 |
| 12 | 92−7608 | Bracket−Spring | 1 |
| 13 | 32121−45 | Pin−Roll | 2 |
| 14 | 74−9100 | Pad−Pedal, Forward | 1 |
| 15 | 49−6440 | Pedal−Accelerator | 1 |
| 16 | 75−2970 | Pedal−Traction | 1 |
| 17 | 74−9110 | Pad−Pedal, Reverse | 1 |
| 18 | 32144−14 | Screw−HH | 2 |
| 19 | 75−6550 | Disc−Friction | 1 |
| 20 | 75−6510 | Bracket−Lever | 1 |
| 21 | 233−42 | Knob | 1 |
| 22 | 75−6490 | Lever | 1 |
| 23 | 93−6699 | Decal−Fast/Slow | 1 |
| 23 | 84−3500 | Decal −Fast/Slow (Japan) | 1 |
| 24 | 3290−461 | Washer−Belleville | 1 |
| 25 | 3296−39 | Nut−Lock | 3 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 26 | 32128−20 | Nut−Lock | 8 |
| 27 | 322−3 | Screw−HH | 8 |
| 28 | 256−236 | Bearing−Flange | 4 |
| 29 | 93−8742 | Pad−Brake | 2 |
| 30 | 92−7530 | Asm−Cable, Brake LH | 1 |
| * | 92−7529 | Asm−Cable, Brake RH | 1 |
| 31 | 63−7880 | Pin−Latch, Brake | 1 |
| 32 | 283−58 | Pin−Clevis | 2 |
| 33 | 3256−69 | Washer−Flat | 3 |
| 34 | 32121−16 | Pin−Roll | 1 |
| 35 | 75−1440 | Pedal−Brake, LH | 1 |
| 36 | 32121−50 | Pin−Roll | 1 |
| 37 | 3272−10 | Pin−Cotter | 2 |
| 38 | 302−60 | Fitting−Grease | 1 |
| 39 | 256−42 | Bushing | 2 |
| 40 | 75−1430 | Pedal−Brake, RH (Incl. Ref. #38 & 39) | 1 |
| 41 | 32121−11 | Pin−Roll | 1 |
| 42 | 92−7610 | Retainer−Spring | 1 |
| 43 | 60−5700 | Spring−Compression | 1 |
| 44 | 3256−5 | Washer−Flat | 1 |
| 45 | 92−7609 | Shaft−Spring | 1 |
| 46 | 75−1470 | Pin−Pivot, Brake | 1 |
| 47 | 5−0652 | Spacer | 1 |
| 48 | 3290−378 | Tie−Cable | 1 |
| 49 | 95−7151 | Tube−Convoluted | 1 |

*Not Illustrated

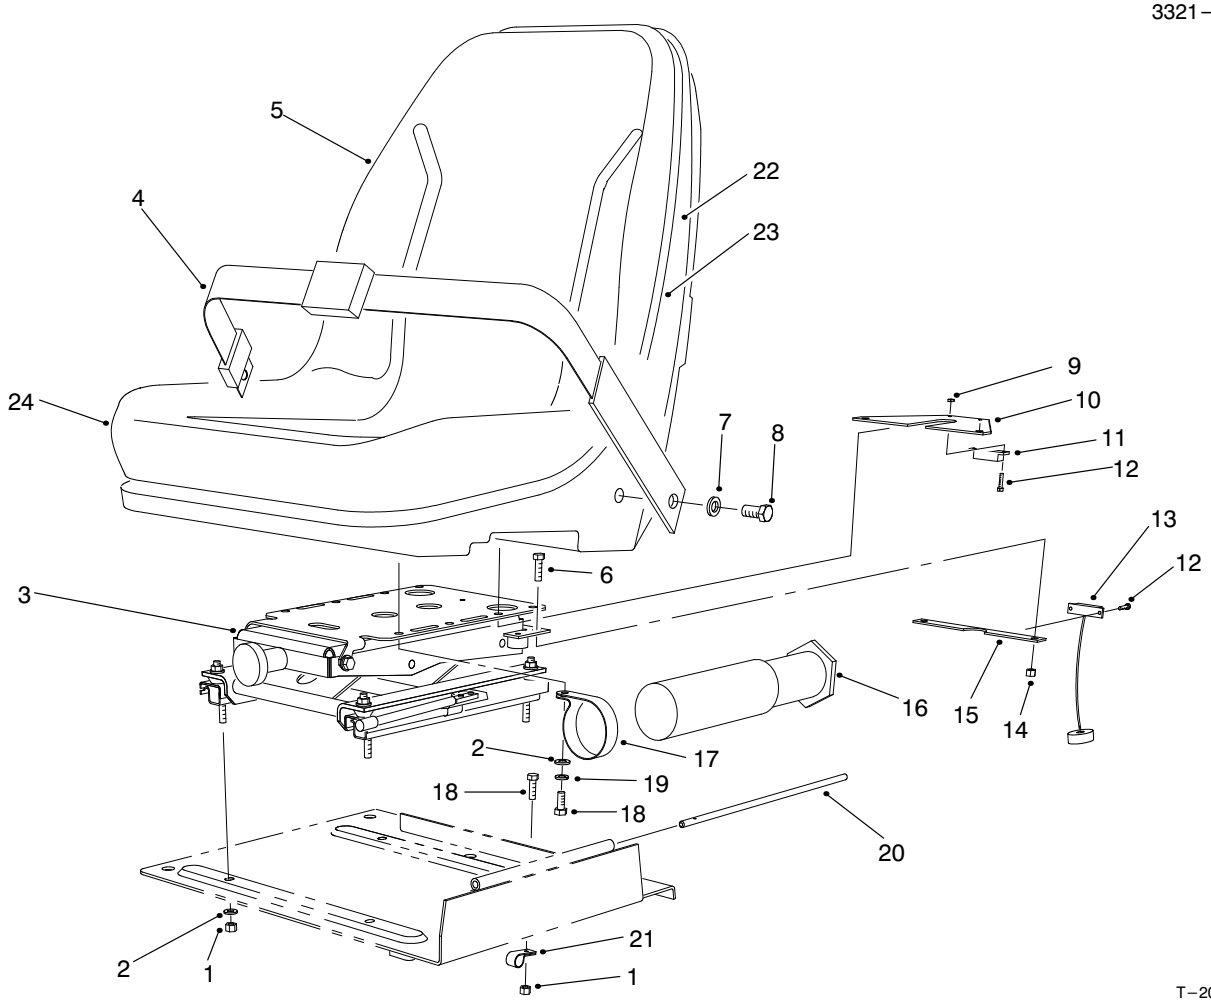



T−2064−2

# SEAT FRAME & THROTTLE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 3296−29 | Nut−Lock | 5 |
| 2 | 3256−23 | Washer−Flat | 8 |
| 3 | | Suspension−Seat | 1 |
| 4 | 21−4191 | Asm−Seat Belt (Model 03804 Only) | 1 |
| 5 | 92−1180 | Asm−Seat (Incl. Ref. #22−24) | 1 |
| 6 | 323−4 | Screw−HH | 2 |
| 7 | 3253−6 | Washer−Lock (Model 03804 Only) | 2 |
| 8 | 3212−4 | Screw (Model 03804 Only) | 2 |
| 9 | 3296−54 | Nut−Lock | 4 |
| 10 | 75−4370 | Bracket−Seat | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 11 | 92−8753 | Magnet−Switch, Reed | 1 |
| 12 | 3250−29 | Screw | 4 |
| 13 | 92−8001 | Sensor−Switch, Reed | 1 |
| 14 | 3296−39 | Nut−Lock | 2 |
| 15 | 75−4360 | Bracket−Suspension, Seat | 1 |
| 16 | 74−0720 | Tube−Manual | 1 |
| 17 | 2412−133 | Clamp−R | 2 |
| 18 | 322−3 | Screw−HH | 2 |
| 19 | 3253−4 | Washer−Lock | 4 |
| 20 | 75−3400 | Shaft−Pivot, Seat | 1 |
| 21 | 2412−93 | Clamp−R | 1 |
| 22 | 92−6534 | Shell | 1 |
| 23 | 351−78 | Edging | 1 |
| 24 | 92−6533 | Kit−Cushion | 1 |

3321−147

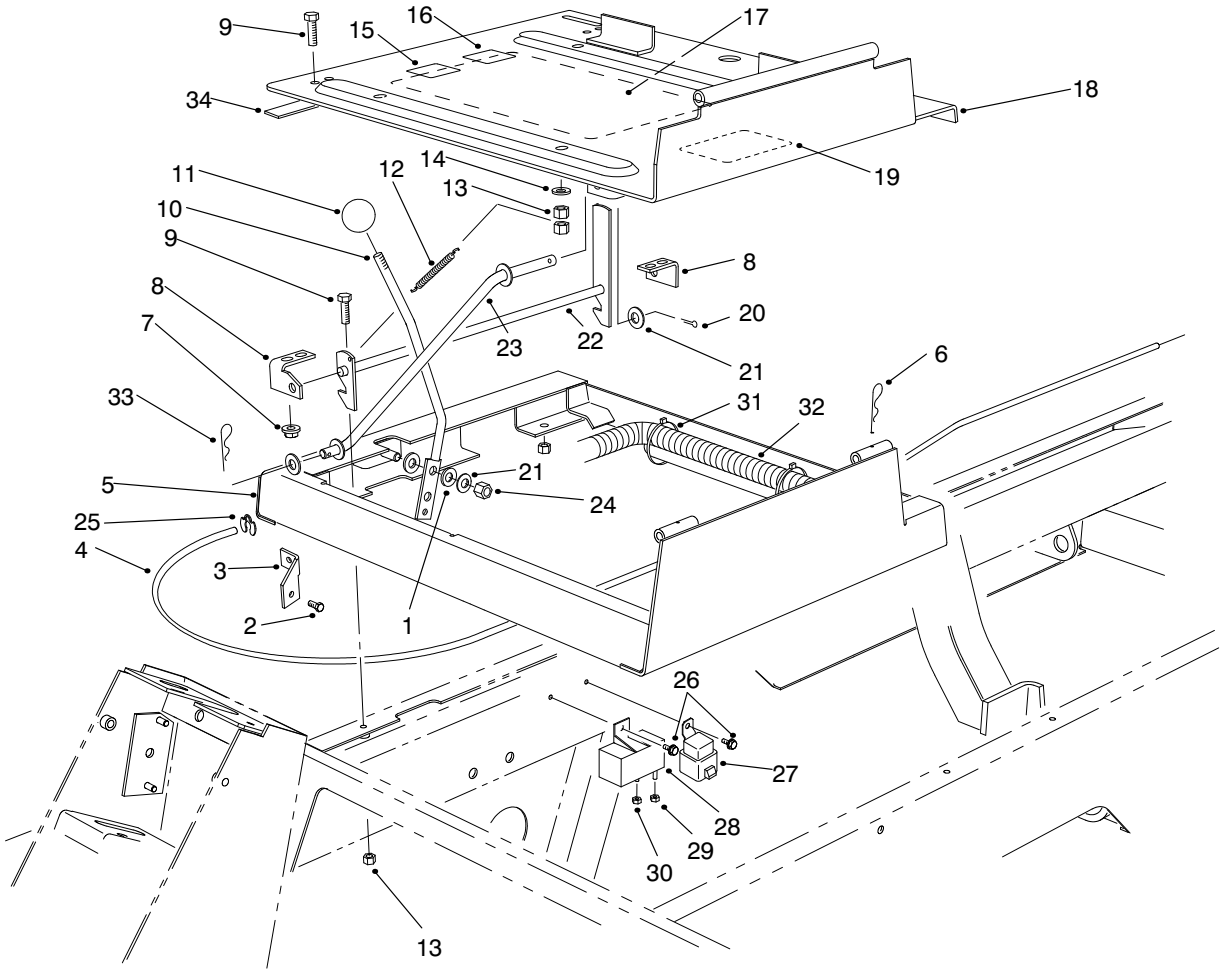



T−2065−2

# SEAT FRAME & THROTTLE ASSEMBLY (Continued)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 66−2920 | Washer−Nylon | 2 |
| 2 | 49−2040 | Screw−HH | 1 |
| 3 | 92−7396 | Mount−Cable | 1 |
| 4 | 92−7520 | Cable−Throttle | 1 |
| 5 | 98−2352 | Frame−Seat | 1 |
| 6 | 3290−467 | Pin−Cotter, Hair | 1 |
| 7 | 32128−25 | Nut−Lock | 4 |
| 8 | 98−2353 | Bracket−Latch, Seat | 2 |
| 9 | 322−3 | Screw−HH | 8 |
| 10 | 93−7598 | Lever−Throttle | 1 |
| 11 | 233−42 | Knob | 1 |
| 12 | 66−4190 | Spring | 1 |
| 13 | 3296−29 | Nut−Lock | 9 |
| 14 | 3256−23 | Washer−Flat | 4 |
| 15 | 63−9920 | Decal−EEC 105 DBA | 1 |
| 16 | 85−6910 | Decal−EEC 86 DBA | 1 |
| 17 | 98−8110 | Decal−Instructions, Clip | 1 |
| 17 | 95−3477 | Decal−Clip (Japan) | |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 18 | 98−2350 | Plate−Seat | 1 |
| 19 | 98−8108 | Decal−Rear Manifold Block | 1 |
| 19 | 94−2919 | Decal−Rear Manifold (Japan) | 1 |
| 20 | 3272−10 | Pin−Cotter | 1 |
| 21 | 3256−24 | Washer−Flat | 3 |
| 22 | 98−2354 | Latch−Seat | 1 |
| 23 | 75−3680 | Rod−Seat | 1 |
| 24 | 3296−39 | Nut−Lock | 1 |
| 25 | 52−5910 | Ring−Retaining | 1 |
| 26 | 32144−10 | Screw | 2 |
| 27 | 70−1480 | Relay | 1 |
| 28 | 76−5260 | Relay−Glow Plug | 1 |
| 29 | 48−7880 | Nut | 1 |
| 30 | 48−7890 | Nut | 1 |
| 31 | 3290−378 | Tie−Cable | 2 |
| 32 | 94−3090 | Harness−Wire, Main | 1 |
| 33 | 3290−307 | Pin−Cotter, Hair | 1 |
| 34 | 94−8146 | Strip−Foam, Seat | 1 |

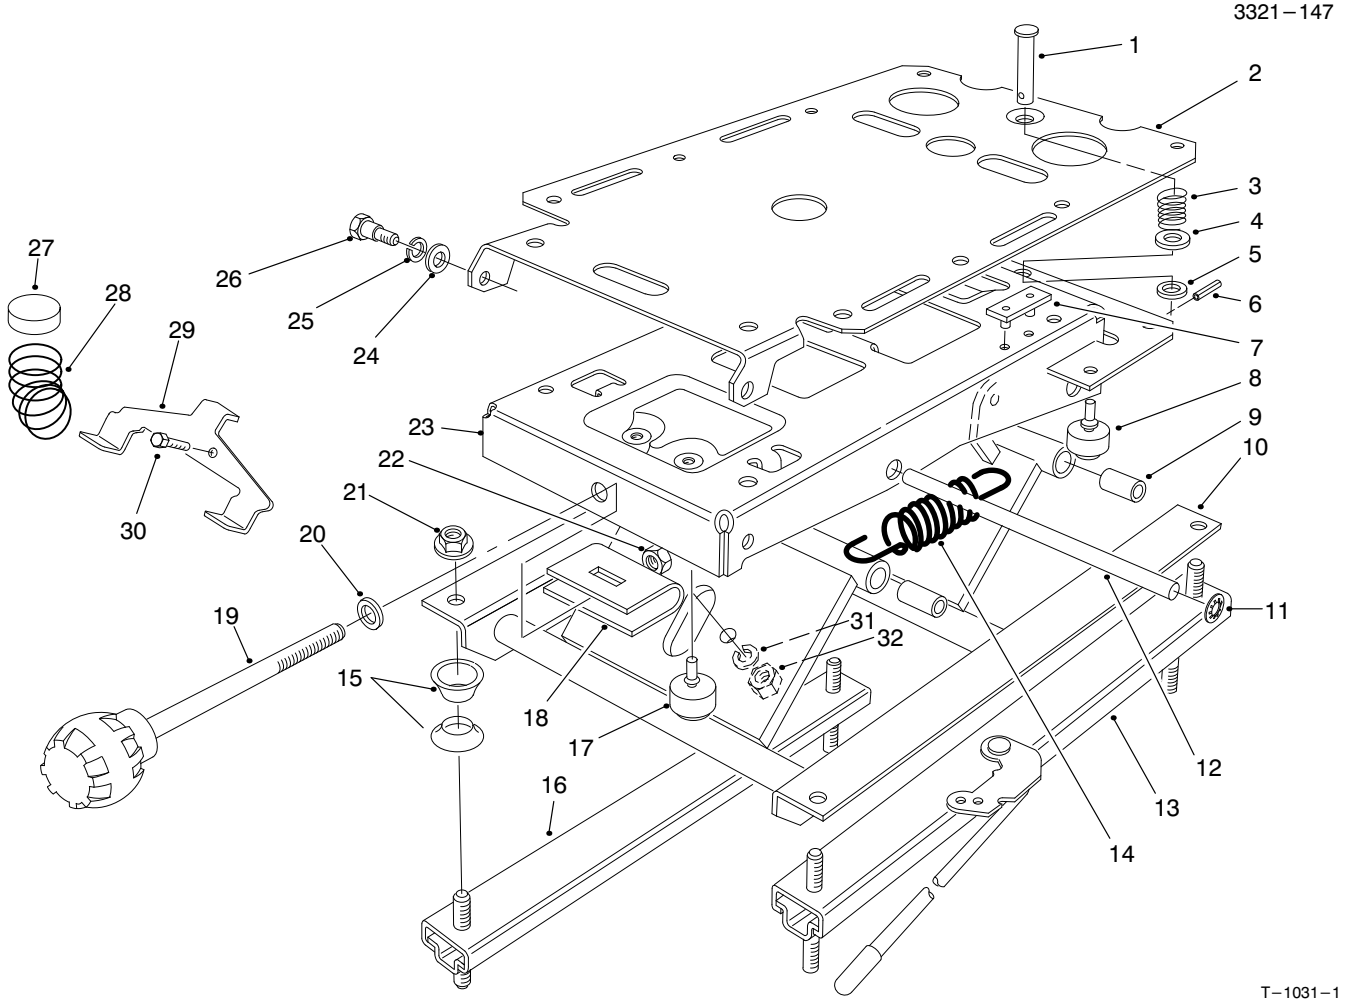



# SEAT SUSPENSION ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 80–4860 | Pin–Clevis | 1 |
| 2 | 75–3580 | Plate–Mounting, Seat | 1 |
| 3 | 75–3530 | Spring–Compression | 1 |
| 4 | 3256–5 | Washer–Flat | 1 |
| 5 | 3256–24 | Washer | 1 |
| 6 | 75–3540 | Pin–Roll | 1 |
| 7 | 75–3550 | Bumper–Seat | 2 |
| 8 | 76–2940 | Bumper–Rubber | 2 |
| 9 | 76–1920 | Bushing–Sleeve | 4 |
| 10 | 66–8610 | Weldment–Lower | 1 |
| 11 | 66–8560 | Nut–Push | 4 |
| 12 | 76–1910 | Shaft–Pivot | 2 |
| 13 | 82–9060 | Adjuster W/Handle | 1 |
| 14 | 76–1940 | Spring–Extension | 2 |
| 15 | 66–9290 | Spacer | 6 |
| 16 | 66–8530 | Adjuster | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 17 | 66–8520 | Bumper–Down Stop | 2 |
| 18 | 77–2870 | Weldment–Hanger | 1 |
| 19 | 76–1930 | Knob–Tension Adjustment | 1 |
| 20 | 3256–46 | Washer–Flat | 1 |
| 21 | 32128–26 | Nut–Flange | 4 |
| 22 | 3296–44 | Nut–Lock | 1 |
| 23 | 75–3480 | Weldment–Upper | 1 |
| 24 | 3256–26 | Washer–Flat | 2 |
| 25 | 3253–6 | Washer–Lock | 2 |
| 26 | 75–3510 | Bolt–Shoulder | 2 |
| 27 | 93–3164 | Cap | 2 |
| 28 | 93–3163 | Spring | 1 |
| 29 | 93–3165 | Bracket | 1 |
| 30 | 322–6 | Screw–HH | 1 |
| 31 | 3253–33 | Washer–Lock | 1 |
| 32 | 3217–6 | Nut–Jam | 1 |

3321–147

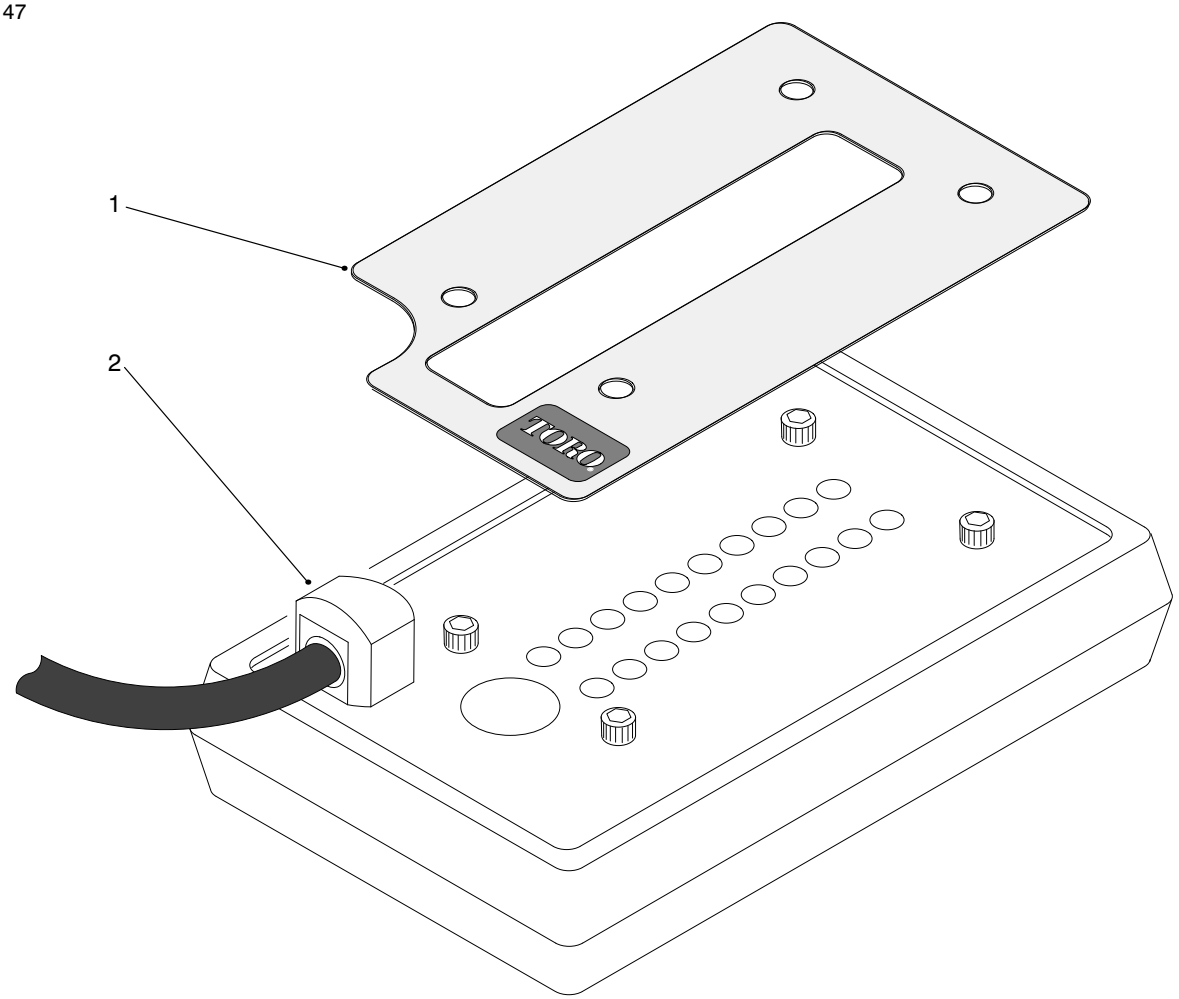


T–1458–1


# DIAGNOSTIC – ACE DISPLAY ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 94–2837 | Decal–Diagnostic ACE V 1.0 | 1 |
| 1 | 94–3354 | Decal–Diagnostic ACE V 1.0 (Danish) | 1 |
| 1 | 94–3355 | Decal–Diagnostic ACE V 1.0 (Dutch) | 1 |
| 1 | 94–3356 | Decal–Diagnostic ACE V 1.0 (Finnish) | 1 |
| 1 | 94–3357 | Decal–Diagnostic ACE V 1.0 (French) | 1 |
| 1 | 94–3358 | Decal–Diagnostic ACE V 1.0 (German) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 94–3359 | Decal–Diagnostic ACE V 1.0 (Italian) | 1 |
| 1 | 94–3361 | Decal–Diagnostic ACE V 1.0 (Norwegian) | 1 |
| 1 | 94–3362 | Decal–Diagnostic ACE V 1.0 (Portuguese) | 1 |
| 1 | 94–3363 | Decal–Diagnostic ACE V 1.0 (Spanish) | 1 |
| 1 | 94–3364 | Decal–Diagnostic ACE V 1.0 (Swedish) | 1 |
| 1 | 94–3360 | Decal–Diagnostic ACE V 1.0 (Japan) | 1 |
| 2 | 85–4750 | Display–Diagnostic ACE | 1 |


*Not Illustrated

# ELECTRICAL SCHEMATIC

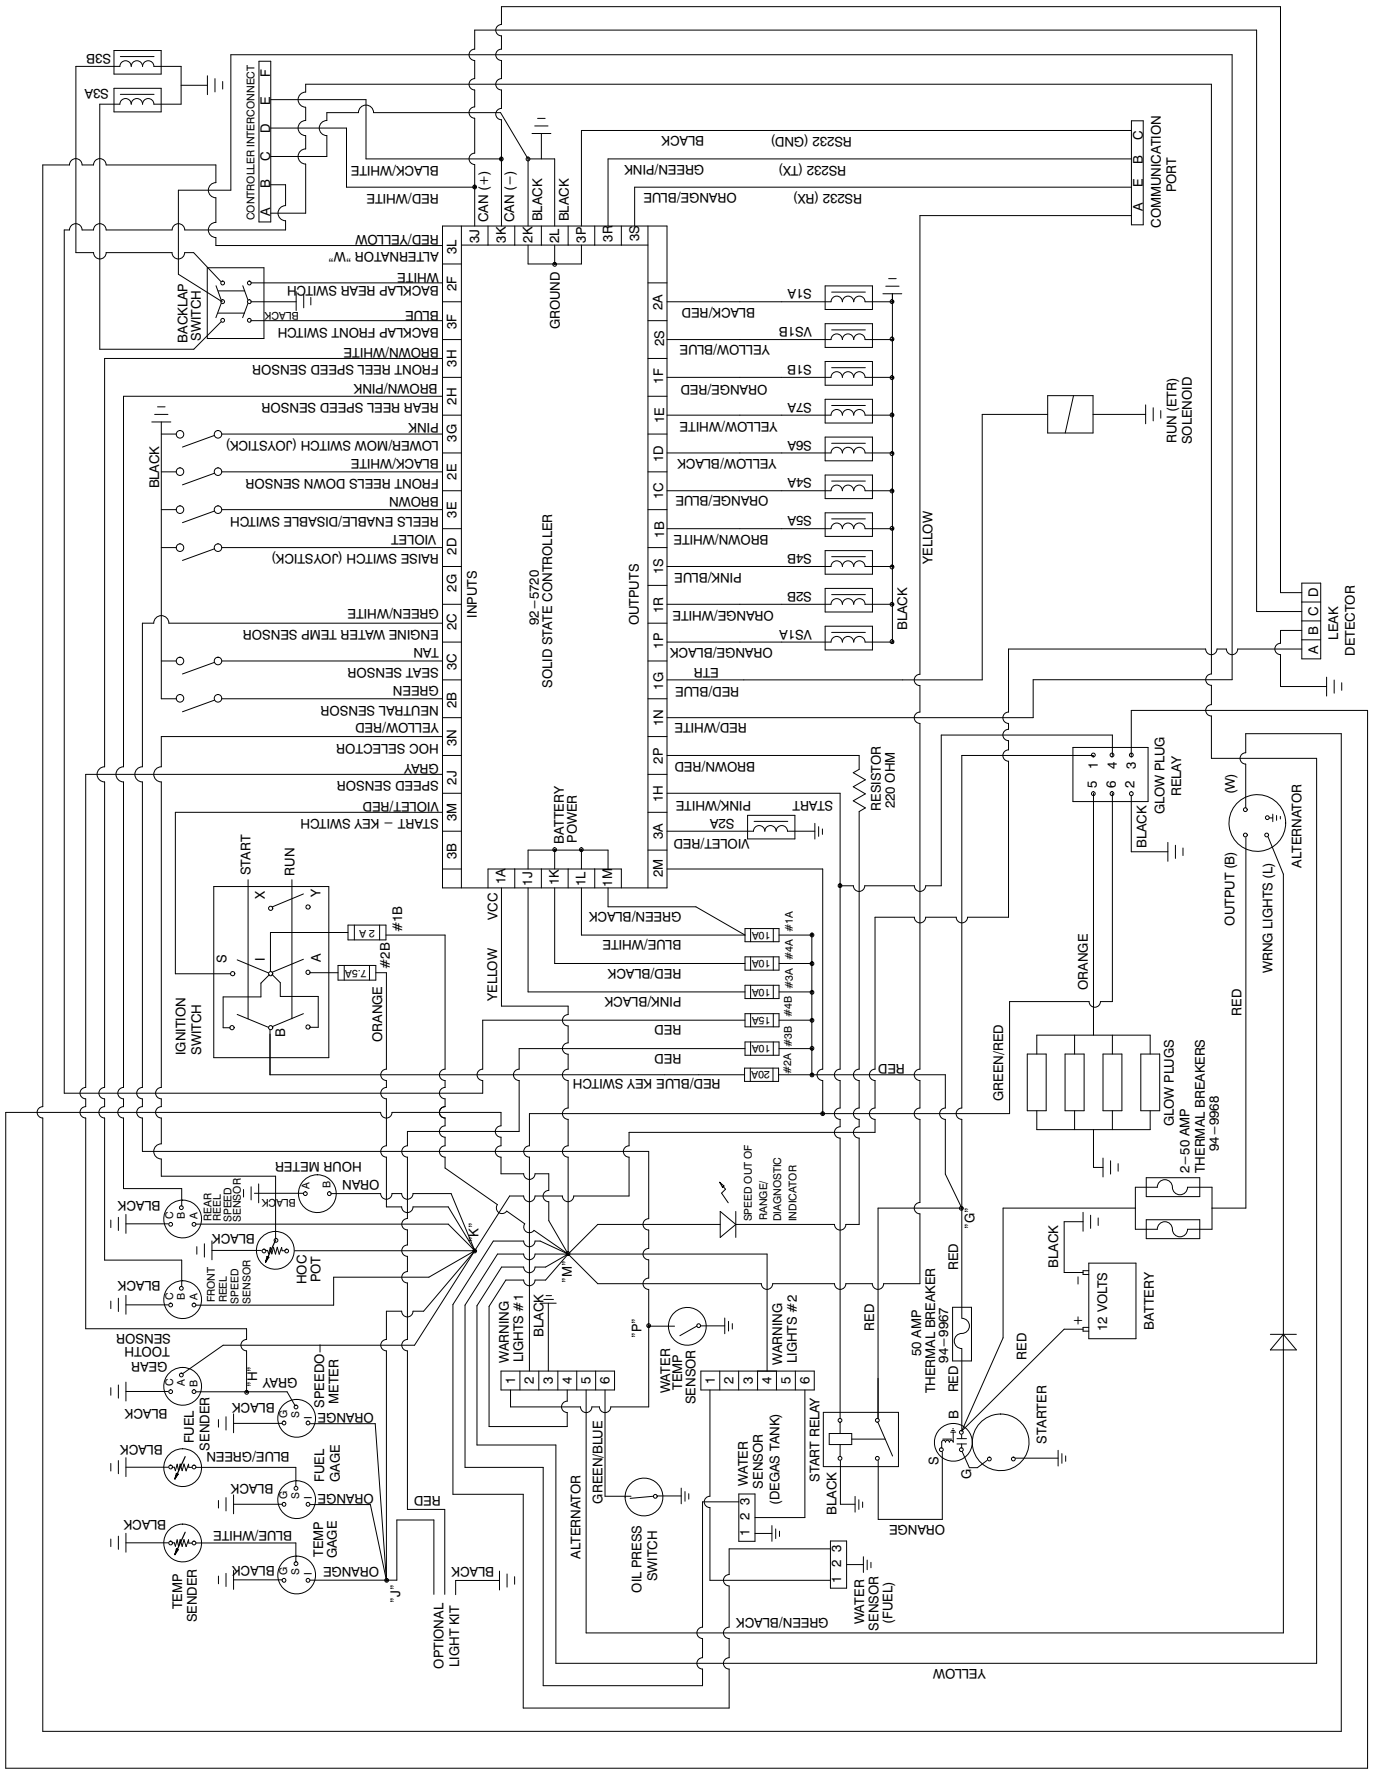


T–2379–1

3321−147

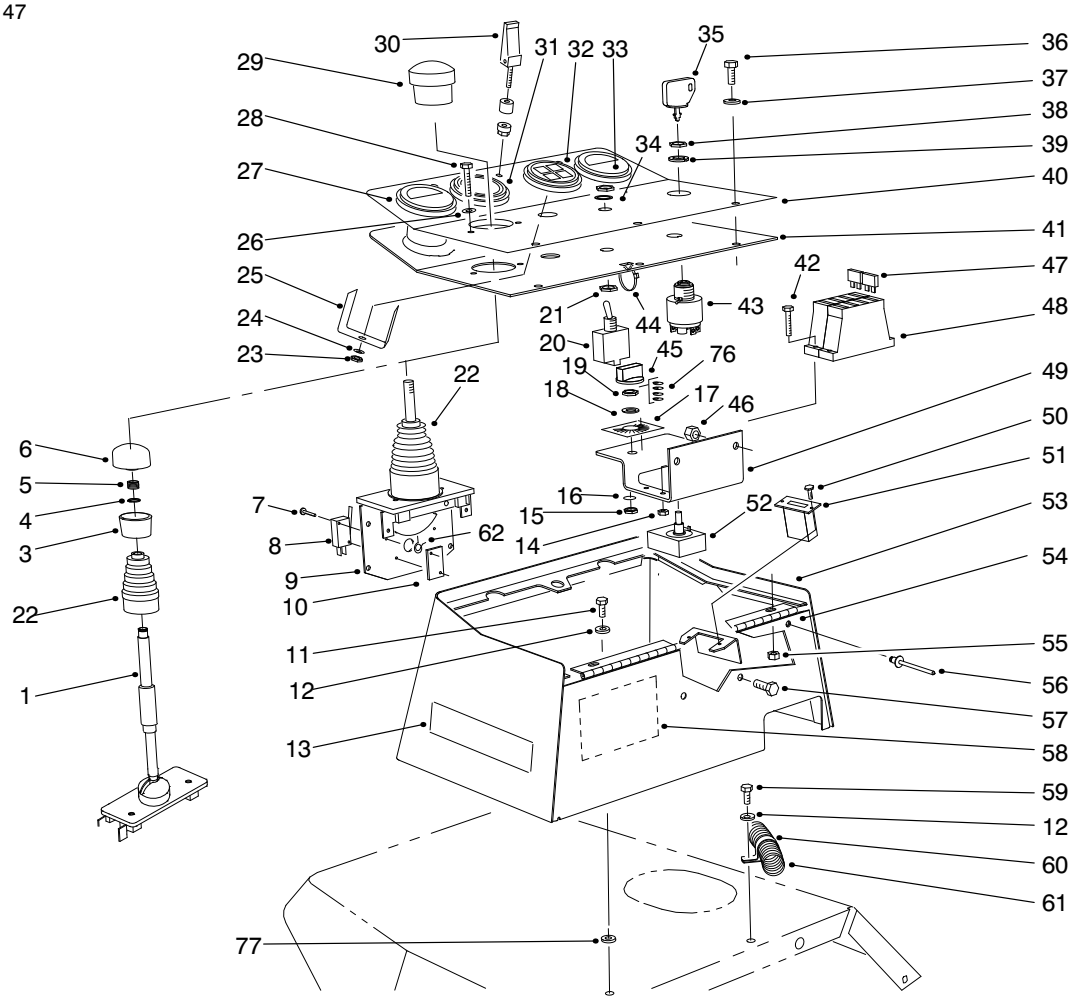



T−2066−6

# CONTROL CONSOLE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 94−8102 | Tube−Interlock (Europe) | 1 |
| 3 | 94−3055 | Cap−Lower, Joystick (Europe) | 1 |
| 4 | 94−3056 | Snap Ring−Joystick (Europe) | 1 |
| 5 | 94−3057 | Spring−Compression (Europe) | 1 |
| 6 | 94−3058 | Cap−Upper, Joystick (Europe) | 1 |
| 7 | 3290−93 | Screw−HH | 4 |
| 8 | 94−8104 | Switch−Micro | 2 |
| 9 | 98−2195 | Lever−Control (Incl. Ref. #7−8, 10, 22 & 29) | 1 |
| 9 | 93−7183 | Lift Control Kit (Europe) (Incl. Ref. #1−6, 7−8, 10 & 22) | 1 |
| 10 | 3290−354 | Plate−Nut | 2 |
| 11 | 322−3 | Screw−HH | 2 |
| 12 | 3256−23 | Washer−Flat | 3 |
| 13 | 93−6689 | Decal−No Riders | 1 |
| 13 | 84−3420 | Decal−No Riders (Japan) | 1 |
| 14 | 3296−2 | Nut−Lock | 1 |
| 15 | | Nu−Lock | 1 |
| 16 | | Washer−Lock | 1 |
| 17 | 93−1268 | Decal−HOC Selector | 1 |
| 17 | 94−4575 | Decal−HOC Selector (Japan) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 18 | 3254−6 | Washer−Lock | 1 |
| 19 | 3220−24 | Nut−Lock | 1 |
| 20 | 75−1010 | Switch (Incl. Ref. #21, 34 & 74−75) | 1 |
| 21 | 218−498 | Nut−Hex. | 2 |
| 22 | 94−8103 | Boot−Control, Lift | 1 |
| 23 | 3217−26 | Nut | 1 |
| 24 | 3254−1 | Washer−Lock | 1 |
| 25 | | Clamp | 1 |
| 26 | 3256−14 | Washer−Flat | 2 |
| 27 | 93−8497 | Gauge−Fuel | 1 |
| 28 | 3250−31 | Screw−PH | 2 |
| 29 | 3290−489 | Knob−Control, Lift | 1 |
| 30 | 74−5950 | Latch−Swell | 1 |
| 31 | 93−7484 | Light−Warning Bank (Incl. Ref. #23−25 & 62−63) | 1 |
| 32 | 93−7483 | Light−Warning Bank (Incl. Ref. #23−25 & 62−63) | 1 |
| 33 | 76−9060 | Gauge−Temperature (Incl. Ref. #64−65) | 1 |
| 34 | 218−589 | Washer−Lock | 1 |
| 35 | 63−8360 | Key−Ignition | 1 |
| 36 | 3258−166 | Screw | 3 |
| 37 | 3256−1 | Washer | 3 |
| 38 | 218−447 | Nut−Hex. | 1 |
| 39 | 218−446 | Washer−Lock | 1 |
| 40 | 93−1261 | Decal−Console | 1 |
| 40 | 94−4574 | Decal−Console (Japan) | 1 |

†Included in Main Wiring Harness

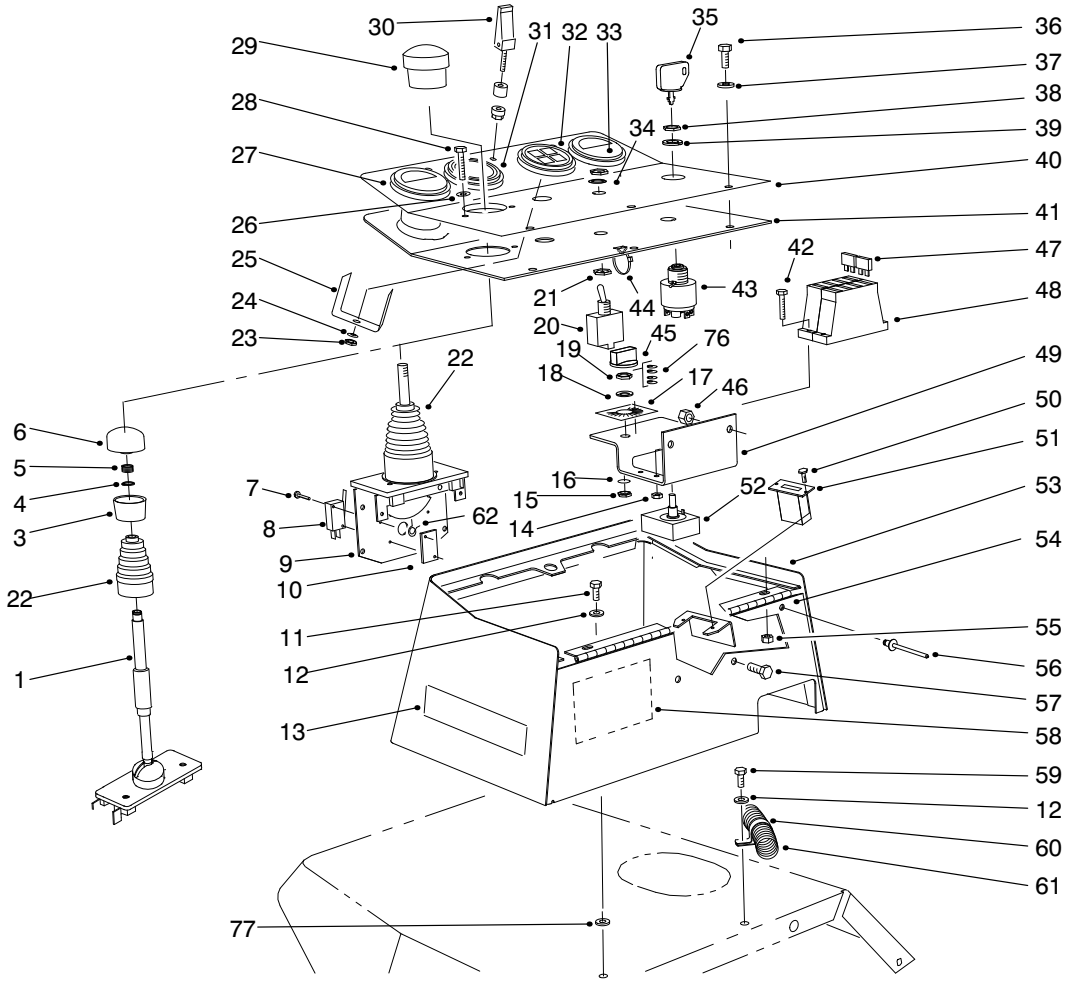


T−2066−6

# CONTROL CONSOLE ASSEMBLY (Continued)


| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| †41 | 94−1417 | Cover−Box, Control | 1 |
| 42 | 32105−13 | Screw−HH | 4 |
| 43 | 27−2360 | Switch−Ignition (Incl. Ref. #38 & 39) | 1 |
| 44 | 3290−378 | Tie−Cable | 2 |
| 45 | 85−4480 | Knob | 1 |
| 46 | 3296−42 | Nut−Lock | 2 |
| †47 | 218−594 | Fuse−20A | 1 |
| †47 | 218−578 | Fuse−10A | 4 |
| †47 | 218−581 | Fuse−15A | 1 |
| †47 | 218−574 | Fuse−7.5A | 1 |
| †47 | 94−6710 | Fuse−2A | 1 |
| 48 | 67−7160 | Block−Fuse | 2 |
| 49 | 93−7587 | Bracket−Fuse Block | 1 |
| 50 | 32144−18 | Screw−HWH | 2 |
| 51 | 75−6820 | Hour Meter | 1 |
| 52 | 85−4470 | Potentiometer (Incl. Ref. #18 & 19) Note: Replacement of this part requires recalibration of electronic controller by distributor after installation. | 1 |
| 53 | 75−5740 | Box−Control | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 54 | 75−5780 | Hinge−Cover | 1 |
| 55 | 32128−33 | Nut−Lock | 3 |
| 56 | 93−8744 | Rivet−Pop | 3 |
| 57 | 321−39 | Screw−HH | 2 |
| 58 | 94−6349 | Decal−Fuses | 1 |
| 58 | 94−3091 | Decal−Fuses (Japan) | 1 |
| 59 | 322−5 | Screw−HH | 1 |
| 60 | 2412−126 | Clamp−R | 1 |
| 61 | 94−3090 | Harness−Wire, Main | 1 |
| 62 | 93−3625 | Spring−Return, Joystick | 1 |
| *63 | 87−6270 | Socket−Light | 4 |
| *64 | 219−17 | Bulb | 4 |
| *65 | 3217−25 | Nut−Hex. | 2 |
| *66 | 3253−15 | Washer−Lock | 2 |
| *67 | 3217−29 | Nut−Hex. | 6 |
| *68 | 3255−24 | Washer−Lock, Ext. Tooth | 3 |
| *69 | 3219−14 | Nut−Hex. | 8 |
| *70 | 3253−2 | Washer−Lock | 5 |
| *74 | 218−588 | Screw | 2 |
| *75 | 3255−19 | Washer−Lock | 2 |
| * | 94−6343 | Decal−Wire Identification #1 | 1 |
| 76 | 237−7 | O−Ring | 4 |
| 77 | 66−2920 | Washer | 3 |

*Not Illustrated

†Included in Main Wiring Harness

# HYDRAULIC SCHEMATIC (Model 03803)

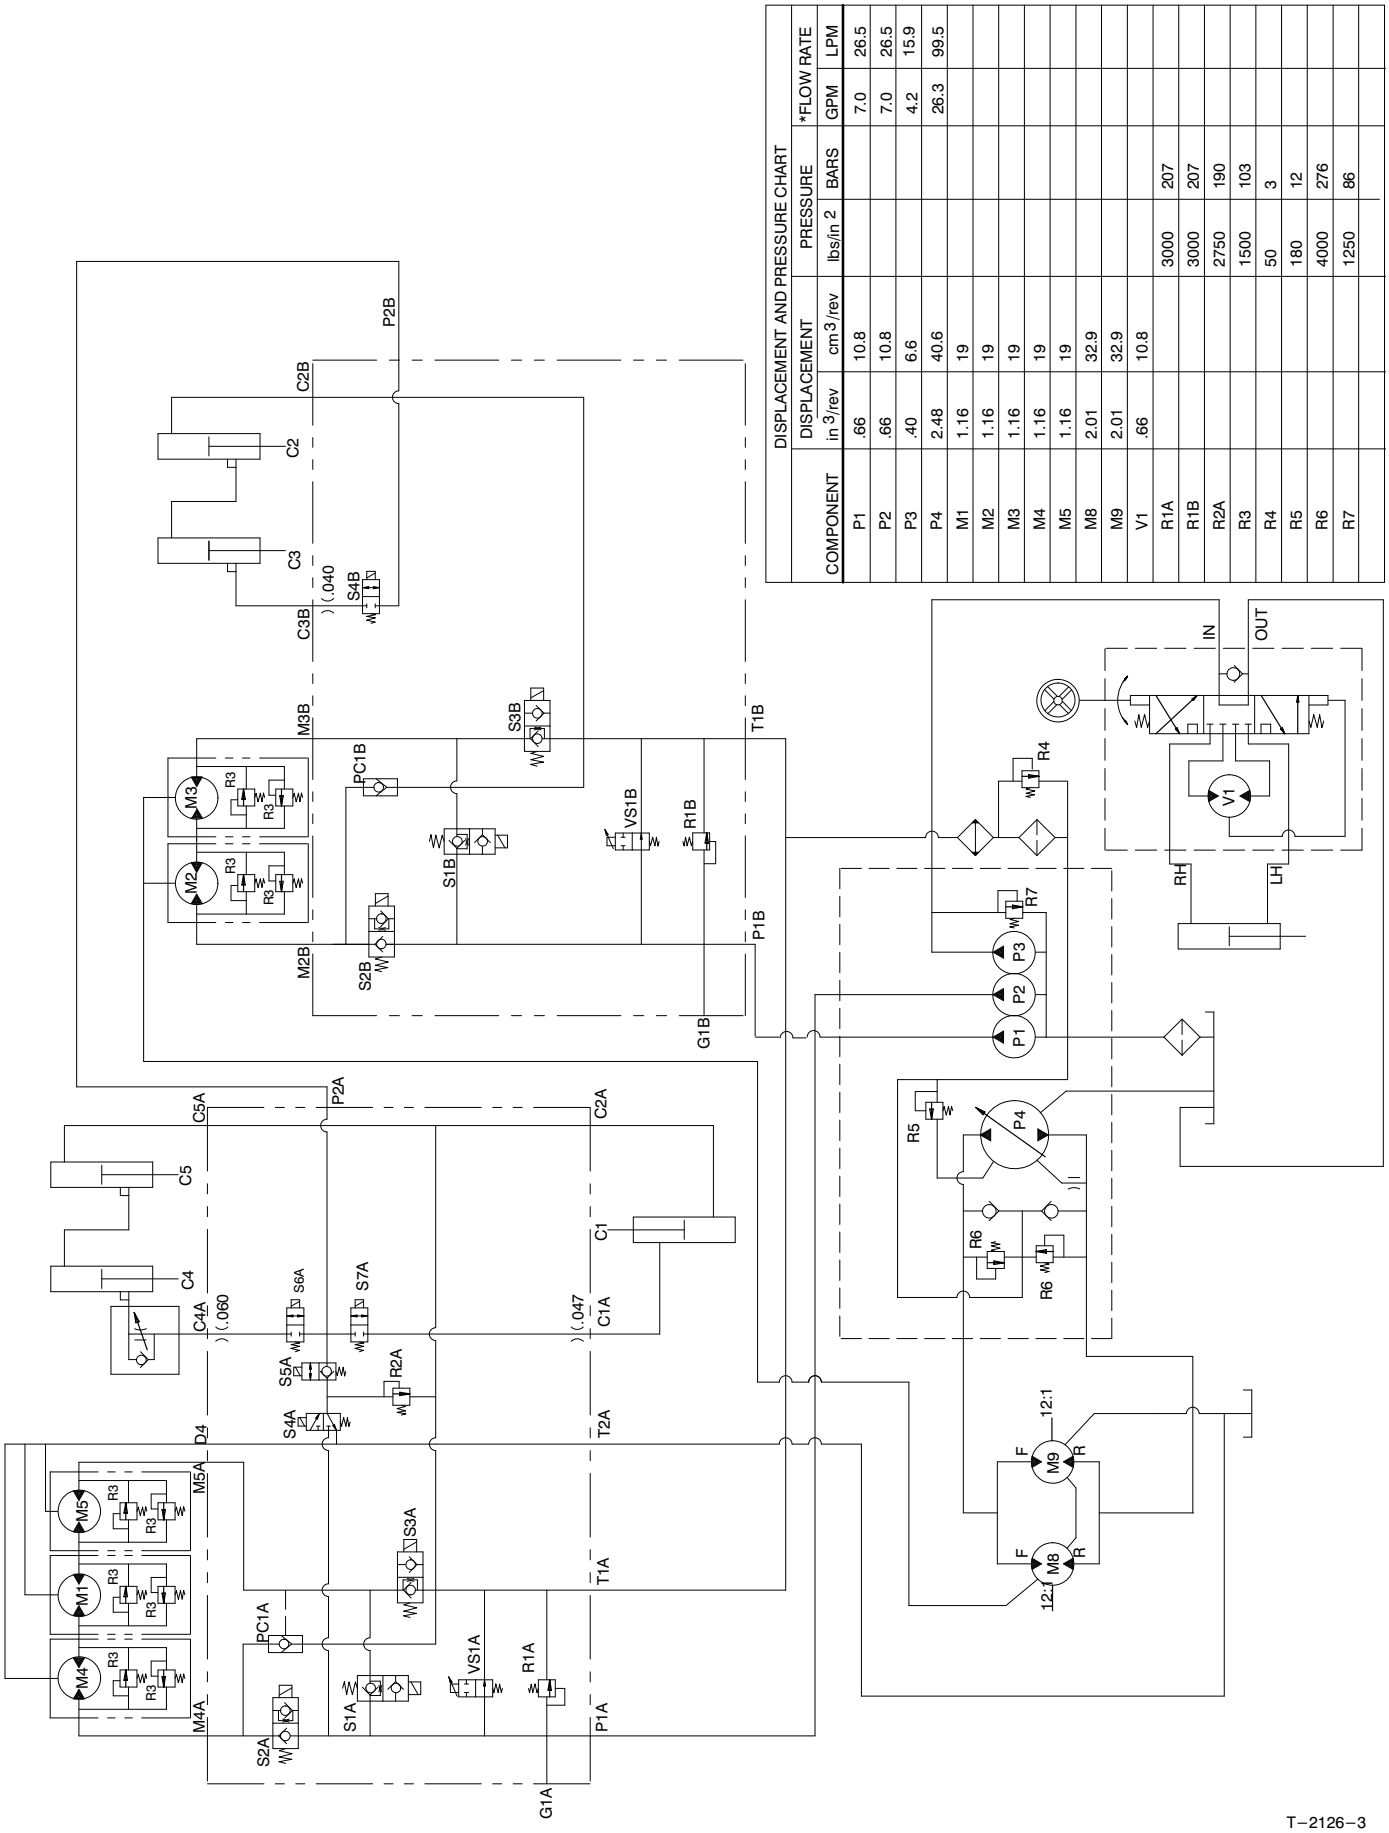


| DISPLACEMENT AND PRESSURE CHART | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | DISPLACEMENT | | PRESSURE | | *FLOW RATE | | |
| | COMPONENT | $in^3$/rev | $cm^3$/rev | lbs/$in^2$ | BARS | GPM | LPM |
| | P1 | .66 | 10.8 | | | 7.0 | 26.5 |
| | P2 | .66 | 10.8 | | | 7.0 | 26.5 |
| | P3 | .40 | 6.6 | | | 4.2 | 15.9 |
| | P4 | 2.48 | 40.6 | | | 26.3 | 99.5 |
| | M1 | 1.16 | 19 | | | | |
| | M2 | 1.16 | 19 | | | | |
| | M3 | 1.16 | 19 | | | | |
| | M4 | 1.16 | 19 | | | | |
| | M5 | 1.16 | 19 | | | | |
| | M8 | 2.01 | 32.9 | | | | |
| | M9 | 2.01 | 32.9 | | | | |
| | V1 | .66 | 10.8 | | | | |
| | R1A | | | 3000 | 207 | | |
| | R1B | | | 3000 | 207 | | |
| | R2A | | | 2750 | 190 | | |
| | R3 | | | 1500 | 103 | | |
| | R4 | | | 50 | 3 | | |
| | R5 | | | 180 | 12 | | |
| | R6 | | | 4000 | 276 | | |
| | R7 | | | 1250 | 86 | | |

T–2126–3


# HYDRAULIC SCHEMATIC (Model 03804)

| DISPLACEMENT AND PRESSURE CHART | | | | | | |
|---|---|---|---|---|---|---|
| COMPONENT | DISPLACEMENT | | PRESSURE | | *FLOW RATE | |
| | $in^3$/rev | $cm^3$/rev | lbs/$in^2$ | BARS | GPM | LPM |
| P1 | .66 | 10.8 | | | 7.0 | 26.5 |
| P2 | .66 | 10.8 | | | 7.0 | 26.5 |
| P3 | .40 | 6.6 | | | 4.2 | 15.9 |
| P4 | 2.48 | 40.6 | | | 26.3 | 99.5 |
| M1 | 1.16 | 19 | | | | |
| M2 | 1.16 | 19 | | | | |
| M3 | 1.16 | 19 | | | | |
| M4 | 1.16 | 19 | | | | |
| M5 | 1.16 | 19 | | | | |
| M8 | 2.01 | 32.9 | | | | |
| M9 | 2.01 | 32.9 | | | | |
| M10 | 2.48 | 40.6 | | | | |
| V1 | .66 | 10.8 | | | | |
| R1A | | | 3000 | 207 | | |
| R1B | | | 3000 | 207 | | |
| R2A | | | 2750 | 190 | | |
| R3 | | | 1500 | 103 | | |
| R4 | | | 50 | 3 | | |
| R5 | | | 180 | 12 | | |
| R6 | | | 4000 | 276 | | |
| R7 | | | 1250 | 86 | | |

*FLOW RATE CALCULATED AT 2500 RPM AND 98% EFFICIENCY.

T–2125–3

3321−147

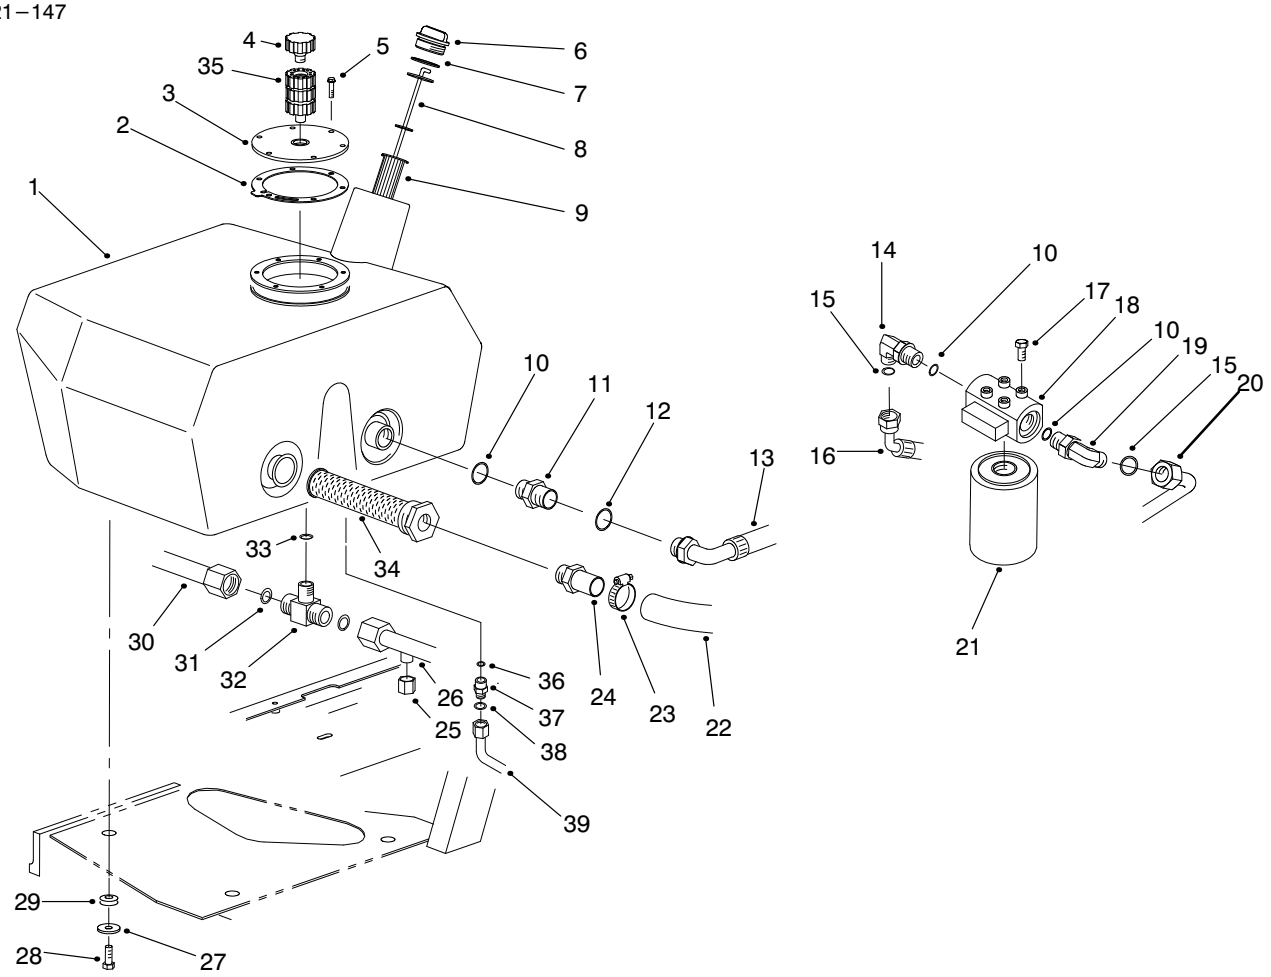



T−2067−1

# HYDRAULIC FILTER & RESERVOIR ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 93−7488 | Tank−Hydraulic | 1 |
| 2 | 93−7499 | Gasket−Flange | 1 |
| 3 | 93−7588 | Cover−Tank | 1 |
| 4 | 68−6150 | Breather−Air | 1 |
| 5 | 33104−020 | Screw−HHF | 6 |
| 6 | 93−7498 | Plug−Plastic | 1 |
| 7 | 94−8166 | O−Ring | 1 |
| 8 | 75−3710 | Dipstick | 1 |
| 9 | 61−2790 | Filter−Screen | 1 |
| 10 | 237−81 | O−Ring | 3 |
| 11 | 340−9 | Fitting−Hydraulic (Incl. Ref. #10 & 12) | 1 |
| 12 | 237−58 | O−Ring | 1 |
| 13 | 92−7489 | Hose−Return | 1 |
| 14 | 340−139 | Fitting−Elbow 90˚ (Incl. Ref. #10 & 15) | 1 |
| 15 | 237−65 | O−Ring | 2 |
| 16 | 92−7490 | Hose−Filter | 1 |
| 17 | 3234−1 | Screw | 2 |
| 18 | 94−2620 | Head−Filter (Incl. Ref. #21) | 1 |
| 19 | 340−142 | Fitting−Hydraulic 90˚ (Incl. Ref. #10 & 15) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 20 | 92−7493 | Hose−Filter | 1 |
| 21 | 94−2621 | Element | 1 |
| 22 | 92−7465 | Hose−Suction | 1 |
| 23 | 2412−111 | Clamp | 1 |
| 24 | 92−7525 | Fitting−Hose | 1 |
| 25 | 92−7551 | Cap−Fitting | 1 |
| 26 | 94−1446 | Tube−Drain | 1 |
| 27 | 63−8410 | Washer−Flat | 3 |
| 28 | 33105−025 | Screw−HHF | 3 |
| 29 | 240−11 | Grommet | 3 |
| 30 | 92−7478 | Tube−Motor, RH | 1 |
| 31 | 237−30 | O−Ring | 2 |
| 32 | 340−157 | Fitting−Tee (Incl. Ref. #31 & 33) | 1 |
| 33 | 237−79 | O−Ring | 1 |
| 34 | 92−7527 | Strainer−Suction | 1 |
| 35 | 92−8020 | Adapter−Breather | 3 |
| 36 | 237−42 | O−Ring | 1 |
| 37 | 340−2 | Adapter (Incl. Ref. #36 & 38) | 1 |
| 38 | 237−22 | O−Ring | 1 |
| 39 | 94−1447 | Tube−Steering, Return | 1 |

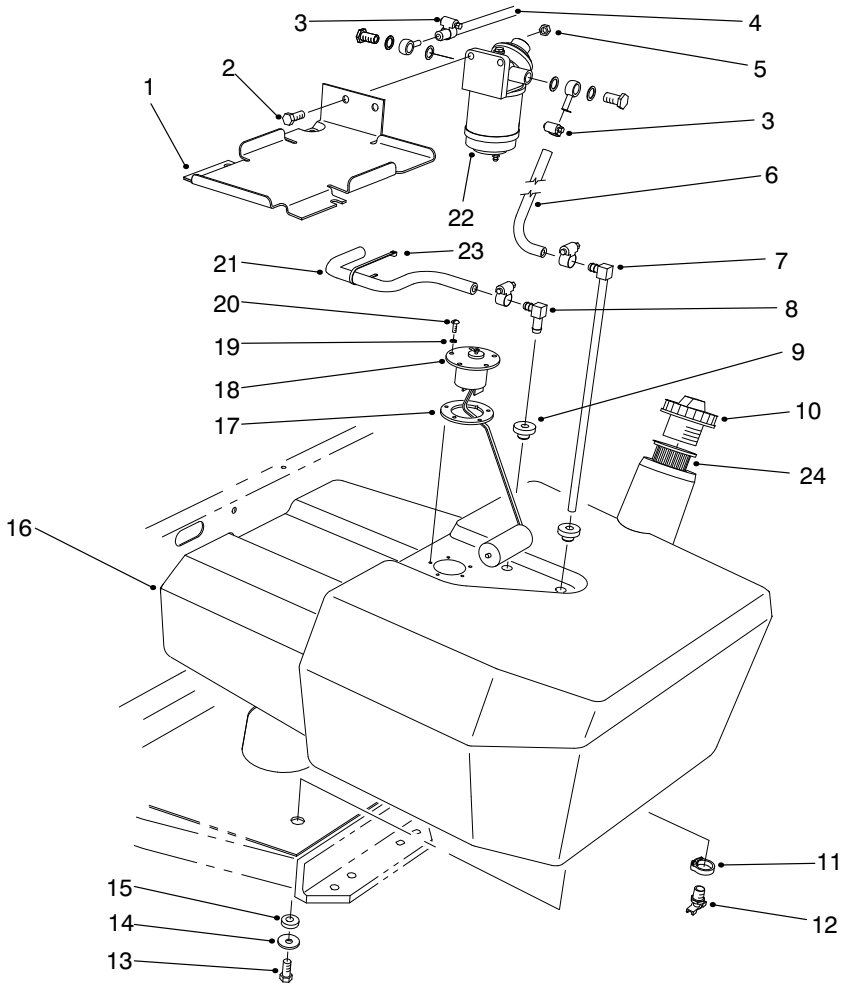



T−2068−1

# FUEL TANK & FILTER ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 93−7974 | Plate−Box, Battery | 1 |
| 2 | 33105−030 | Screw−HHF | 2 |
| 3 | 2412−108 | Clamp−Hose | 4 |
| 4 | 63−7627 | Hose−Fuel | 1 |
| 5 | 33005−00 | Nut−HF | 2 |
| 6 | 92−7522 | Hose−Fuel | 1 |
| 7 | 66−8121 | Standpipe | 1 |
| 8 | 46−6550 | Fitting−Connector | 1 |
| 9 | 46−6560 | Bushing | 2 |
| 10 | 93−3102 | Cap−Fuel, Diesel | 1 |
| 11 | 2412−36 | Clamp−Drain | 1 |
| 12 | 304−46 | Fitting−Drain | 1 |
| 13 | 33105−025 | Screw−HHF | 3 |
| 14 | 63−8410 | Washer−Flat | 3 |
| 15 | 240−11 | Grommet | 3 |
| 16 | 92−7422 | Tank−Fuel (Incl. Ref. #11 & 12) | 1 |
| 17 | 62−7650 | Gasket | 1 |
| 18 | 63−7640 | Sender−Fuel | 1 |
| 19 | 3253−15 | Washer−Lock | 5 |
| 20 | 32122−24 | Screw | 5 |
| 21 | 92−7521 | Hose−Fuel | 1 |
| †22 | 76−5300 | Asm−Filter, Fuel | 1 |
| 23 | 3290−378 | Tie−Cable | 3 |
| 24 | 61−2790 | Filler−Screen | 1 |

†Furnished with engine.

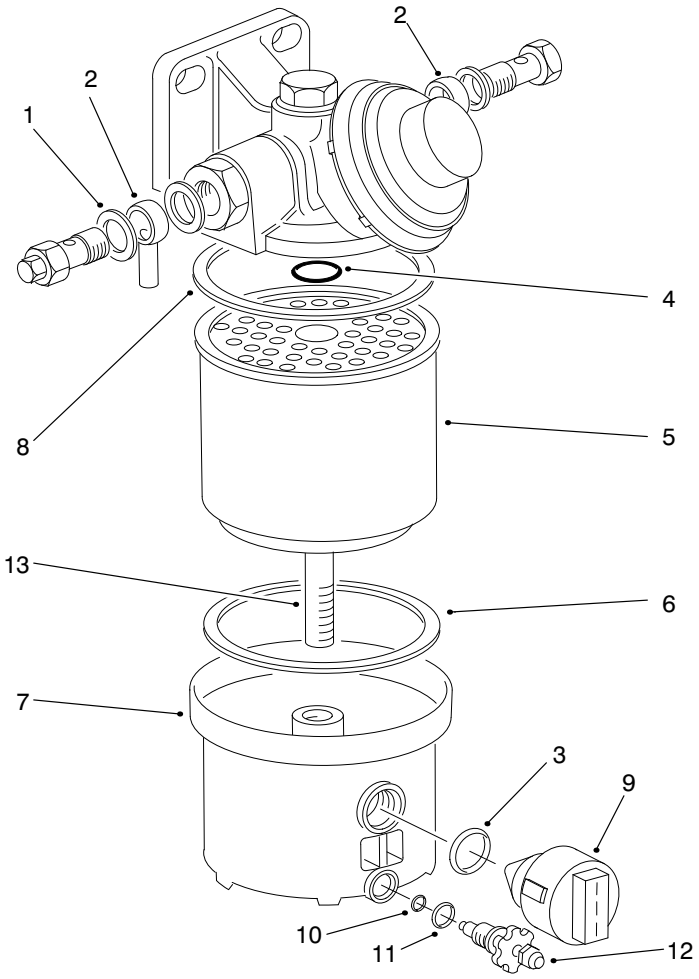



T−0966−2

# FUEL FILTER ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 76−5180 | Washer−Copper | 4 |
| 2 | 76−5190 | Fitting−Adjustable | 2 |
| 3 | 94−8025 | O−Ring | 1 |
| 4 | | O−Ring | 1 |
| 5 | 76−5220 | Element−Filter (Incl. Ref. #4, 6 & 8) | 1 |
| 6 | | Seal−Gasket | 1 |
| 7 | | Cap−Filter, Fuel | 1 |
| 8 | | Seal−Gasket | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 9 | 76−5320 | Sensor−Water (Incl. Ref. #3) | 1 |
| 10 | 94−8027 | O−Ring | 1 |
| 11 | 94−8028 | O−Ring | 1 |
| 12 | 94−8026 | Asm−Vent (Incl. Ref. #10 & 11) | 1 |
| 13 | | Bolt | 1 |

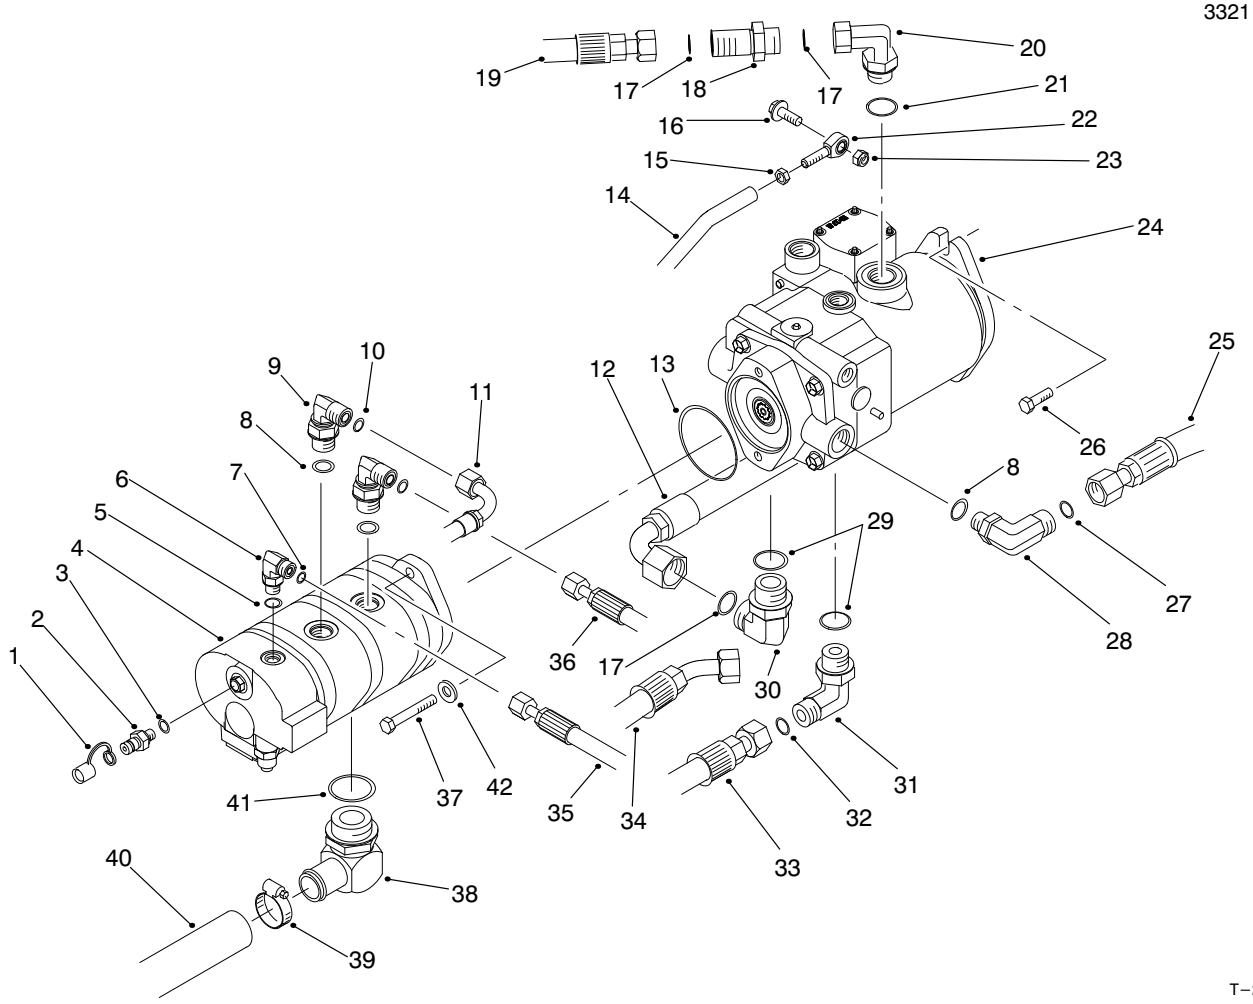



T−2072−1

# PUMP INSTALLATION ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 354−79 | Cap−Dust | 4 |
| 2 | 354−77 | Fitting−Quick Connect (Incl. Ref. #3) | 4 |
| 3 | 237−78 | O−Ring | 4 |
| 4 | 93−2175 | Asm−Pump, Gear | 1 |
| 5 | 237−42 | O−Ring | 1 |
| 6 | 340−77 | Fitting−Hydraulic 90˚ (Incl. Ref. #5 & 7) | 1 |
| 7 | 237−22 | O−Ring | 1 |
| 8 | 237−80 | O−Ring | 3 |
| 9 | 340−105 | Fitting−Hydraulic 90˚ (Incl. Ref. #8 & 10) | 2 |
| 10 | 237−30 | O−Ring | 2 |
| 11 | 92−7491 | Asm−Hose | 1 |
| 12 | 92−7484 | Asm−Hose (Model No. 03804) | 1 |
| 13 | 237−99 | O−Ring | 1 |
| 14 | 92−7531 | Tube−Rod, Control | 1 |
| 15 | 3220−3 | Nut−Jam | 1 |
| 16 | 3234−11 | Screw−HF | 1 |
| 17 | 237−58 | O−Ring | 3 |
| 18 | 94−2637 | Fitting−Hydraulic, Straight (Incl. Ref. #17) | 1 |
| 19 | 92−7489 | Hose−Return | 1 |
| 20 | 94−2636 | Fitting−Hydraulic 90˚ | 1 |
| 21 | 237−81 | O−Ring | 1 |
| 22 | 2411−36 | Bearing−Rod End | 1 |
| 23 | 3296−59 | Nut−Lock | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 24 | 98−3730 | Pump−Piston | 1 |
| 25 | 92−7490 | Asm−Hose, Filter | 1 |
| 26 | 82−5050 | Screw−HH | 2 |
| 27 | 237−65 | O−Ring | 1 |
| 28 | 340−17 | Fitting−Hydraulic 90˚ (Incl. Ref. #8 & 27) | 1 |
| 29 | 237−146 | O−Ring | 2 |
| 30 | 340−15 | Fitting−Hydraulic 90˚ (Incl. Ref. #17 & 29) (Model No. 03804) | 1 |
| 30 | 340−129 | Fitting−Hydraulic 90˚ (Incl. Ref. #29 & 32) (Model #03803) | 1 |
| 31 | 340−129 | Fitting−Hydraulic 90˚ (Incl. Ref. #29 & 32) | 1 |
| 32 | 340−65 | O−Ring | 2 |
| 33 | 92−7485 | Asm−Hose | 1 |
| 34 | 92−7634 | Asm−Hose, Traction (Model No. 03803) | 1 |
| 35 | 92−7622 | Asm−Hose, Steering | 1 |
| 36 | 92−7492 | Asm−Hose | 1 |
| 37 | 323−7 | Screw−HH | 2 |
| 38 | 92−7526 | Fitting−Hydraulic, Suction | 1 |
| 39 | 2412−111 | Clamp−Hose | 2 |
| 40 | 92−7465 | Hose−Suction | 1 |
| 41 | 237−101 | O−Ring | 1 |
| 42 | 3256−46 | Washer−Flat | 2 |

# GEAR PUMP ASSEMBLY NO. 93–2175

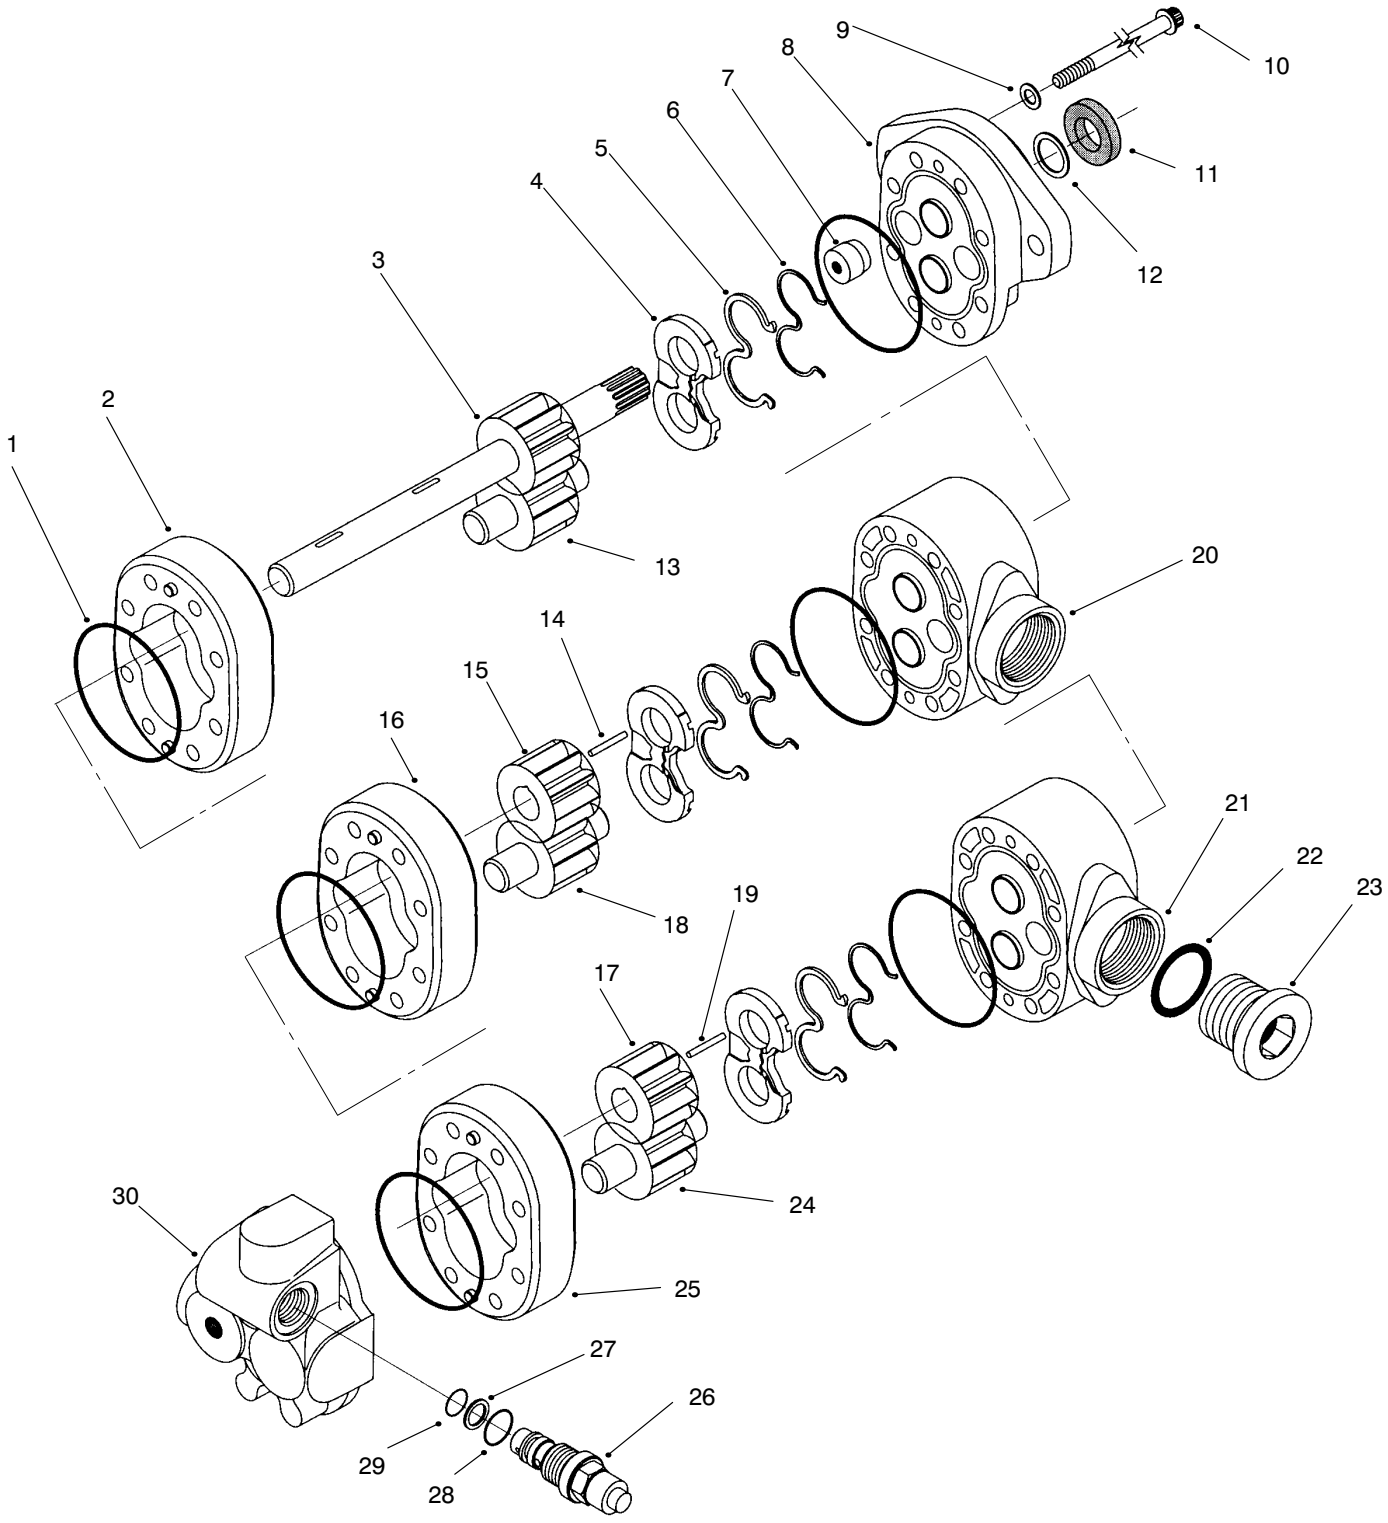



T–2138–1

# GEAR PUMP ASSEMBLY NO. 93–2175

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 56–6710 | O–Ring | 6 |
| †2 | | Body | 1 |
| †3 | | Asm–Gear, Drive | 1 |
| 4 | | Plate–Wear | 3 |
| 5 | | Seal–Pressure, Balance | 3 |
| 6 | | Gasket–Backup | 3 |
| 7 | 94–3011 | Plug | 1 |
| †8 | | Asm–Plate, Front | 1 |
| 9 | 74–8920 | Washer–Copper | 4 |
| 10 | 94–3012 | Screw | 8 |
| 11 | 49–2640 | Seal–Shaft | 1 |
| 12 | 60–5890 | Washer | 1 |
| †13 | | Gear–Idler | 1 |
| †14 | | Key | 1 |
| †15 | | Gear | 1 |
| †16 | | Body | 1 |
| †17 | | Gear | 1 |
| †18 | | Gear–Idler | 1 |
| †19 | | Key | 1 |
| †20 | | Plate–Adaptor | 1 |
| †21 | | Plate–Adaptor | 1 |
| †22 | | O–Ring | 1 |
| 23 | 94–3013 | Plug (Incl. Ref. #22) | 1 |
| †24 | | Gear–Idler | 1 |
| †25 | | Body | 1 |
| 26 | 94–3014 | Valve–Relief (Incl. Ref. #27–29) | 1 |
| †27 | | Washer–Backup | 1 |
| †28 | | O–Ring | 1 |
| †29 | | O–Ring | 1 |
| †30 | | Asm–Backplate | 1 |
| * | 94–3015 | Kit–Seal (Incl. Ref. #1, & 4–6) | 1 |

*Not Illustrated
† Not Serviced Separately

# SERVO CONTROLLED PISTON PUMP ASM. NO. 98−3730

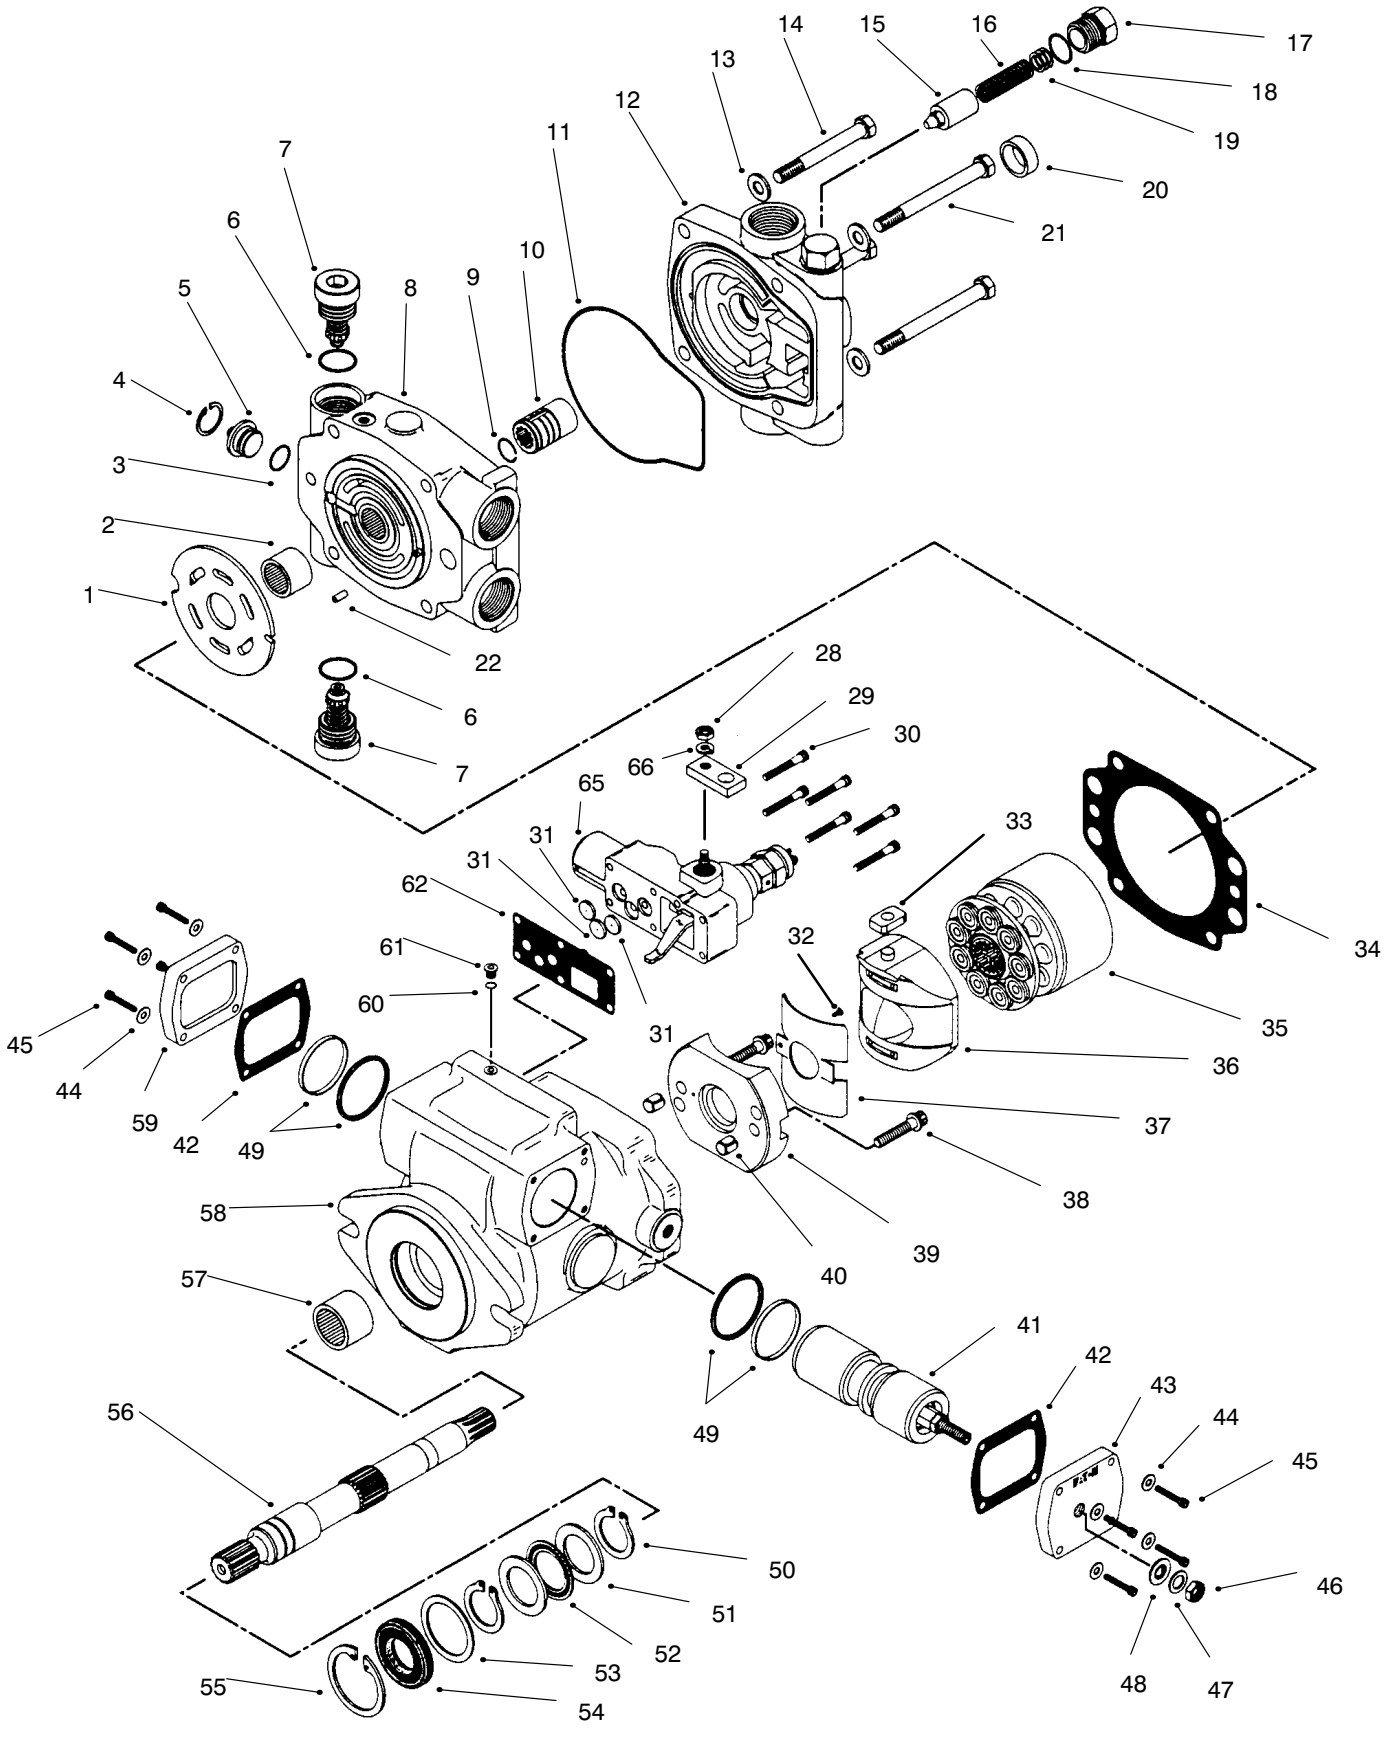


# SERVO CONTROLLED PISTON PUMP ASM. NO. 98–3730

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 94–3022 | Plate–Valve | 1 |
| †2 | | Bearing | 1 |
| 3 | 94–3036 | Ring–Quad | 1 |
| 4 | 94–3037 | Ring–Retaining | 1 |
| 5 | 94–3038 | Plug–Dump Valve | 1 |
| †6 | | O–Ring | 2 |
| 7 | 94–9999 | Valve–Relief | 2 |
| 8 | 94–3016 | Asm–Backplate (Incl. Ref. #2 & 22) | 1 |
| 9 | 94–3035 | Ring–Lock | 1 |
| 10 | 94–3023 | Coupler | 1 |
| †11 | | O–Ring–Molded | 1 |
| 12 | 94–3017 | Adaptor–Charge Relief (Incl. Ref. #15–20) | 1 |
| 13 | 3256–24 | Washer–Flat | 4 |
| 14 | 94–3028 | Screw | 2 |
| †15 | | Poppet | 2 |
| †16 | | Spring | 2 |
| †17 | | Plug | 1 |
| †18 | | O–Ring | 1 |
| †19 | | Washer | 3 |
| †20 | | Bushing | 1 |
| 21 | 94–3029 | Screw | 2 |
| †22 | | Pin–Roll | 1 |
| 28 | 3217–5 | Nut | 1 |
| 29 | 94–3031 | Arm–Control | 1 |
| 30 | 3274–59 | Screw–HH | 6 |
| 31 | 94–3040 | Orifice–Valve, Control | 3 |
| †32 | | Screw | 1 |
| 33 | 94–3032 | Follower–Piston | 1 |
| †34 | | Gasket–Housing | 1 |
| 35 | 94–3021 | Asm–Kit, Rotating | 1 |
| 36 | 94–3026 | Asm–Camplate | 1 |
| †37 | | Bushing | 1 |
| †38 | | Screw | 1 |
| †39 | | Asm–Cradle | 1 |
| †40 | | Dowel–Bushing | 2 |
| 41 | 94–3025 | Asm–Piston, Servo | 1 |
| †42 | | Gasket–Plate, Cover | 2 |
| 43 | 94–3034 | Plate–Cover | 1 |
| 44 | 3256–77 | Washer–Flat | 8 |
| 45 | 3274–81 | Screw | 8 |
| 46 | 3220–3 | Nut–Jam | 1 |
| 47 | 94–3030 | Washer | 1 |
| 48 | 94–3027 | Washer–Seal | 1 |
| †49 | | Seal | 2 |
| 50 | 76–7000 | Ring–Retaining | 2 |
| 51 | 76–6950 | Race–Thrust | 1 |
| 52 | 76–6960 | Bearing–Thrust | 1 |
| 53 | 94–3007 | Washer | 1 |
| 54 | 94–3008 | Seal–Shaft | 1 |
| 55 | 76–7010 | Ring–Retaining | 1 |
| 56 | 94–3020 | Shaft–Drive | 1 |
| †57 | | Bearing | 1 |
| 58 | 94–3018 | Asm– Housing (Incl. Ref. #32, 37–40, 49, 57, & 60–61) | 1 |
| 59 | 94–3033 | Plate–Cover | 1 |
| †60 | | O–Ring | 1 |
| †61 | | Plug | 1 |
| †62 | | Gasket | 1 |
| 65 | 94–3019 | Control–Servo, Manual | 1 |
| 66 | 3253–3 | Washer–Lock | 1 |
| * | 94–3039 | Kit–Seal (Incl. Ref. #11, 34, 42 & 62) | 1 |

*Not Illustrated

† Not Serviced Separately.

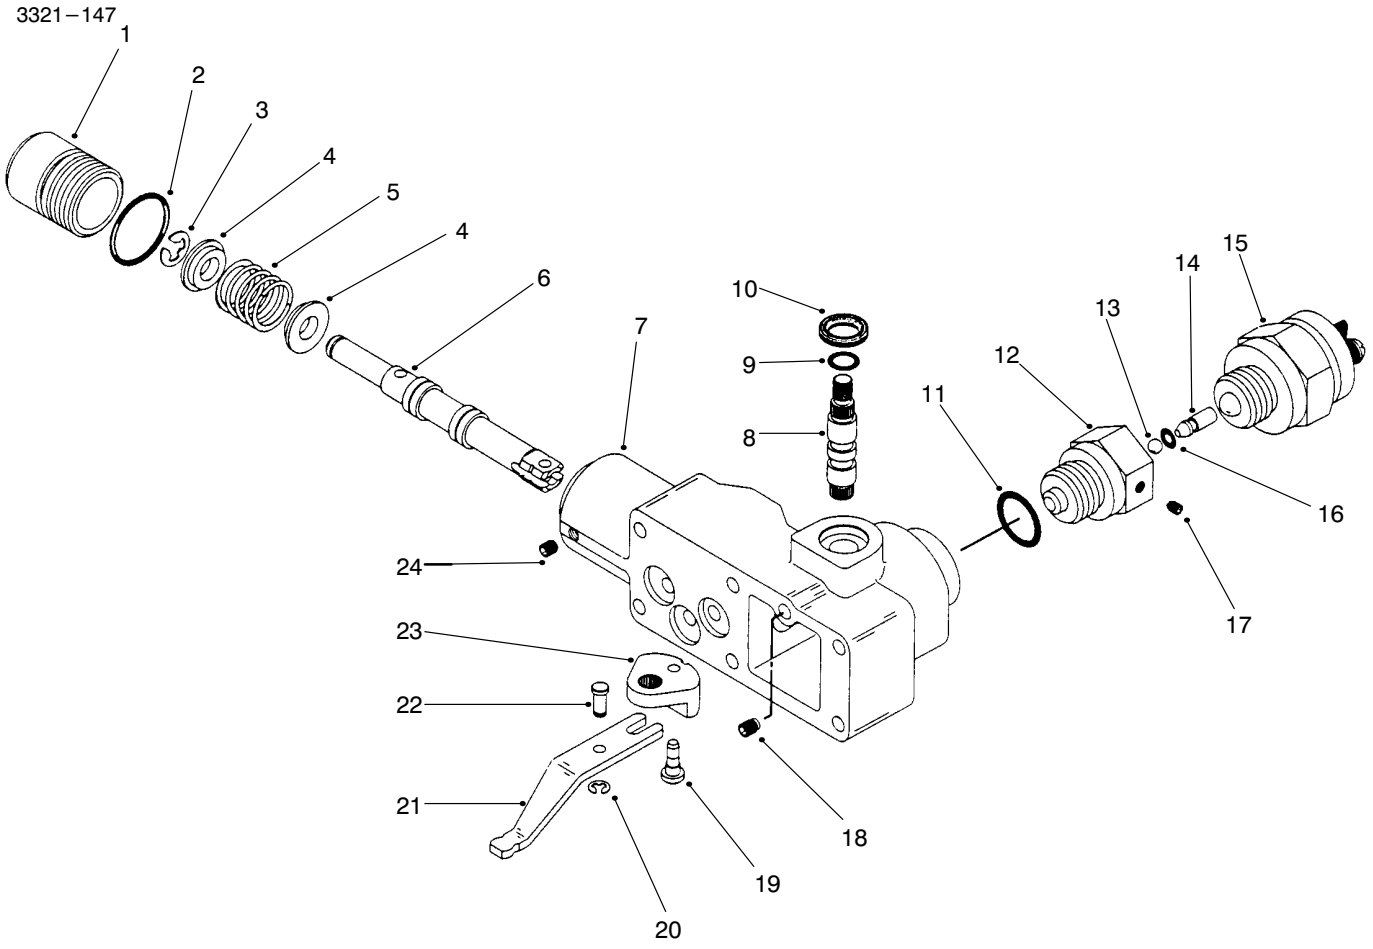



T–2119–1

# MANUAL SERVO CONTROL NO. 94–3019

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | | Plug | 1 |
| 2 | | O–Ring | 1 |
| 3 | | Ring–Retaining | 1 |
| 4 | | Retainer–Spring | 2 |
| 5 | | Spring | 1 |
| 6 | | Valve–Spool | 1 |
| 7 | | Housing–Control | 1 |
| 8 | | Shaft–Input | 1 |
| 9 | | O–Ring | 1 |
| 10 | | Seal–Wiper | 1 |
| 11 | | O–Ring | 1 |
| 12 | | Adaptor | 1 |
| 13 | | Ball | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 14 | | Pin | 1 |
| 15 | 94–3043 | Switch | 1 |
| 16 | | O–Ring | 1 |
| 17 | | Screw–Set | 1 |
| 18 | | Screw–Set | 1 |
| 19 | | Pin | 1 |
| 20 | | Ring–Retaining | 1 |
| 21 | | Link | 1 |
| 22 | | Pin–Dowel | 1 |
| 23 | | Crank–Bell | 1 |
| 24 | | Screw–Set | 1 |
| * | 94–3044 | Kit–Seal (Incl. Ref. #2, 9–11 & 16) | 1 |

*Not Illustrated

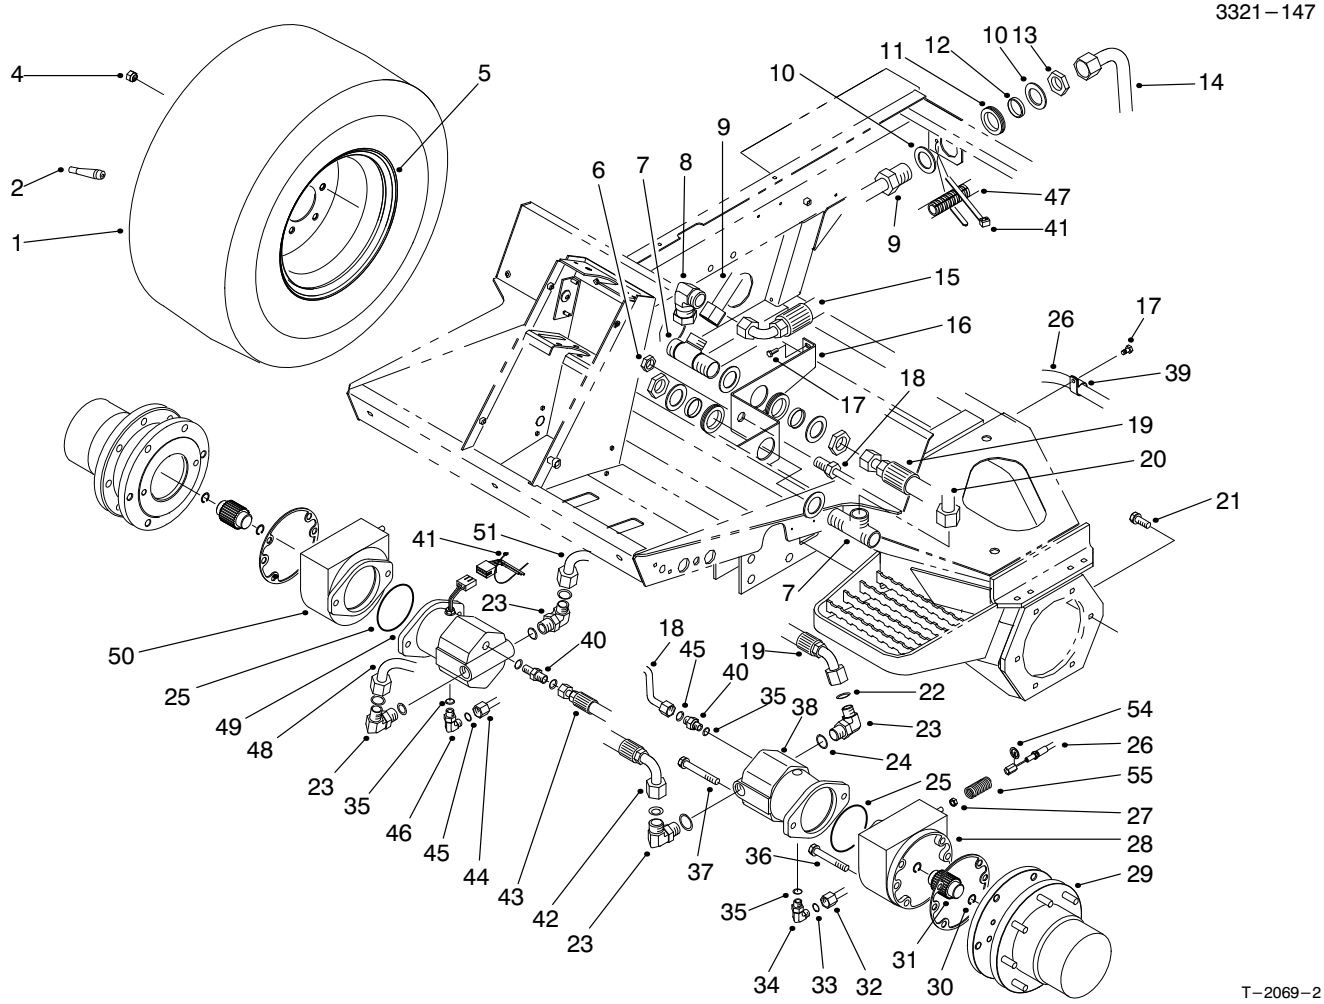



# FRONT HYDRAULIC DRIVE & BRAKE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 95−3465 | Tire | 2 |
| 2 | 232−24 | Stem−Valve | 2 |
| 4 | 92−7483 | Nut−Lug | 16 |
| 5 | 95−3464 | Rim | 2 |
| 6 | 340−127 | Nut−Bulkhead | 1 |
| 7 | 92−7550 | Fitting−Tee, Bulkhead (Incl. Ref. #53) | 2 |
| 8 | 92−7645 | Fitting−Hydraulic 90° (Model 03803) | 1 |
| 9 | 92−7474 | Assembly−Tube, Front (Model 03804) | 1 |
| 10 | 69−8920 | Washer (Model 03803) | 4 |
| 10 | 69−8920 | Washer (Model 03804) | 6 |
| 11 | 240−2 | Grommet (Model 03803) | 2 |
| 11 | 240−2 | Grommet (Model 03804) | 3 |
| 12 | 69−8950 | Spacer (Model 03803) | 2 |
| 12 | 69−8950 | Spacer (Model 03804) | 3 |
| 13 | 340−128 | Nut−Bulkhead (Model 03803) | 2 |
| 13 | 340−128 | Nut−Bulkhead (Model 03804) | 3 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 14 | 92−7473 | Asm−Tube, Rear (Model 03804) | 1 |
| 15 | 92−7634 | Asm−Hose, Traction (Model 03803) | 1 |
| 16 | 92−7455 | Plate−Bulkhead | 1 |
| 17 | 32144−11 | Screw−Thread Forming | 5 |
| 18 | 92−7477 | Asm−Tube, Motor Drain | 1 |
| 19 | 92−7486 | Asm−Hose | 1 |
| 20 | 92−7485 | Asm−Hose | 1 |
| 21 | 33106−030 | Screw−HHF | 12 |
| 22 | 237−58 | O−Ring | 4 |
| 23 | 340−142 | Fitting−Hydraulic 90° (Incl. Ref. #22 & 24) | 4 |
| 24 | 237−81 | O−Ring | 4 |
| 25 | 237−166 | O−Ring | 2 |
| 26 | 92−7530 | Cable−Brake, LH | 1 |
| 27 | 3218−4 | Nut−Jam | 2 |
| 28 | 92−7417 | Asm−Brake, LH | 1 |
| 29 | 92−7415 | Asm−Drive, Planetary | 2 |
| 30 | 93−7972 | Ring−Retaining | 4 |
| 31 | 93−7966 | Shaft−Splined, Brake | 2 |
| 32 | 92−7598 | Asm−Tube, Frt. Drain | 1 |
| 33 | 237−22 | O−Ring | 1 |
| 34 | 340−18 | Fitting−Hydraulic 90° (Incl. Ref. #33 & 35) | 1 |
| 35 | 237−79 | O−Ring | 4 |
| 36 | 33106−090 | Screw−HHF | 8 |

3321−147

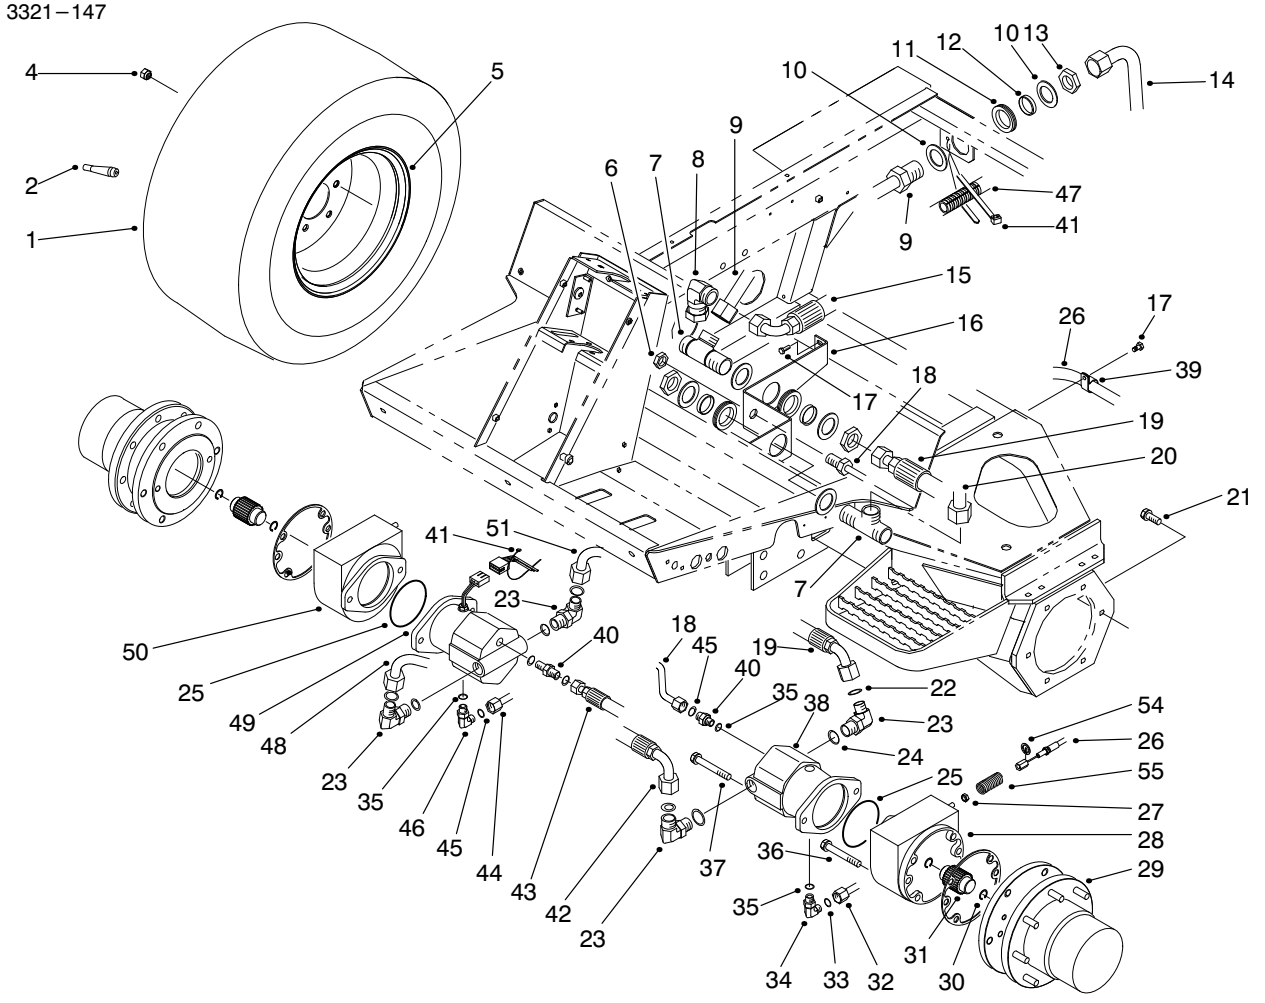



# FRONT HYDRAULIC DRIVE & BRAKE ASM. (Continued)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 37 | 33116−120 | Screw−HH | 4 |
| 38 | 92−7385 | Motor−Planetary | 1 |
| 39 | 2412−93 | R−Clamp | 2 |
| 40 | 340−5 | Fitting−Hydraulic (Incl. Ref. #22 & 24) | 2 |
| 41 | 3290−378 | Tie−Cable | 3 |
| 42 | 92−7487 | Asm−Tube | 1 |
| 43 | 92−7488 | Asm−Hose | 1 |
| 44 | 92−7478 | Asm−Tube, Motor RH | 1 |
| 45 | 237−30 | O−Ring | 3 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 46 | 340−98 | Fitting−Hydraulic 90° (Incl. Ref. #35 & 45) | 1 |
| 47 | 94−3090 | Harness−Wire, Main | 1 |
| 48 | 92−7476 | Assembly−Tube, Traction | 1 |
| 49 | 93−7476 | Motor−Hydraulic W/Sensor | 1 |
| 50 | 92−7414 | Assembly−Brake, RH | 1 |
| 51 | 92−7475 | Assembly−Tube, Traction | 1 |
| *53 | 340−65 | O−Ring | 6 |
| 54 | 94−3050 | Plate−Spring | 2 |
| 55 | 94−3088 | Spring−Brake | 2 |

*Not Illustrated

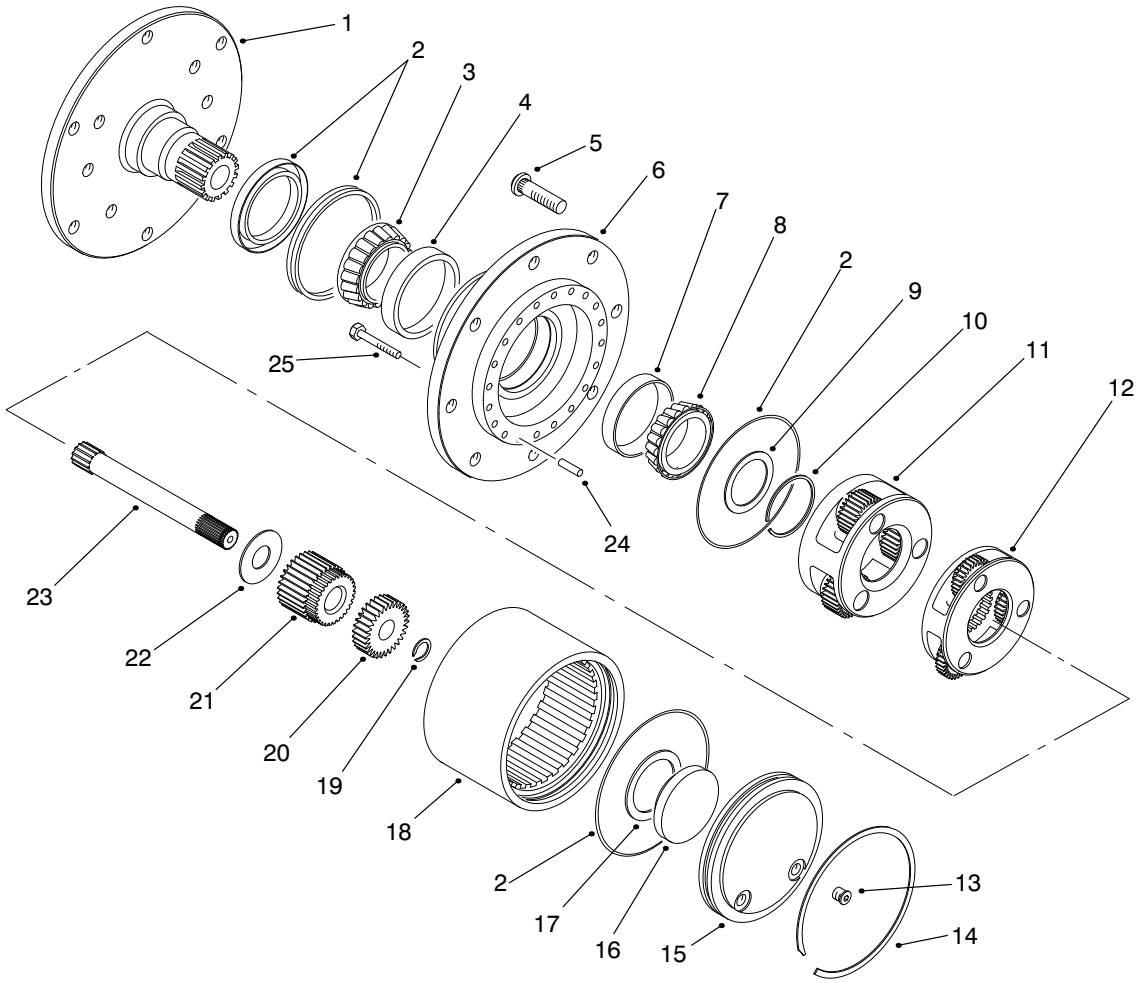



T–2070–1

# PLANETARY DRIVE ASSEMBLY NO. 92–7415

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 93–7450 | Spindle | 1 |
| 2 | 93–7474 | Kit–Seal | 1 |
| 3 | 93–7451 | Cone–Bearing | 1 |
| 4 | 93–7452 | Cup–Bearing | 1 |
| 5 | 93–7455 | Stud–Wheel | 8 |
| 6 | 93–7453 | Housing | 1 |
| 7 | 93–7470 | Cup–Bearing | 1 |
| 8 | 93–7469 | Cone–Bearing | 1 |
| 9 | 93–7468 | Washer–Thrust | 1 |
| 10 | 93–7467 | Ring–Retaining, External | 1 |
| 11 | 93–7472 | Asm–Carrier, Secondary | 1 |
| 12 | 93–7473 | Asm–Carrier, Primary | 1 |
| 13 | 93–7461 | Plug–Pipe | 2 |
| 14 | 93–7462 | Ring–Retaining, Internal | 1 |
| 15 | 93–7458 | Plate–Cover | 1 |
| 16 | 93–7457 | Spacer–Input | 1 |
| 17 | 93–7460 | Washer–Thrust | 1 |
| 18 | 93–7456 | Gear–Ring | 1 |
| 19 | 93–7459 | Ring–Retaining, External | 1 |
| 20 | 93–7463 | Gear–Sun | 1 |
| 21 | 93–7464 | Gear–Sun | 1 |
| 22 | 93–7465 | Washer–Thrust | 1 |
| 23 | 93–7471 | Shaft–Input | 1 |
| 24 | 93–7466 | Pin–Dowel | 2 |
| 25 | 93–7454 | Screw–HH | 18 |
| * | 92–7415 | Asm–Complete (Incl. Ref. #1–25) | 1 |

*Not Illustrated

3321–147

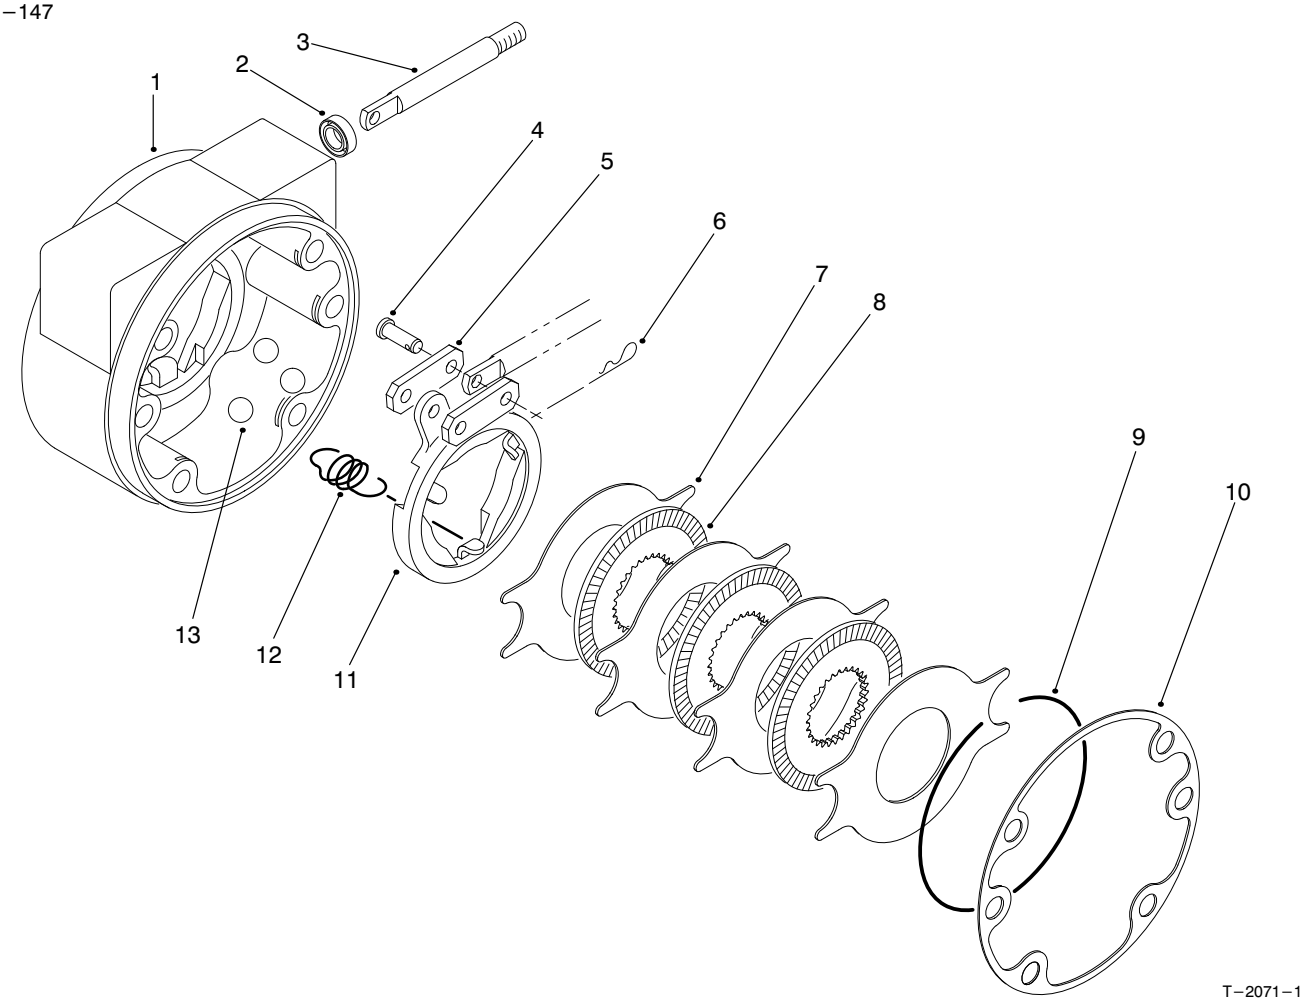



T–2071–1

# BRAKE ASM NO. 92–7414 RH & 92–7417 LH (Shown)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| †1 | | Housing–Brake, LH | 1 |
| †* | | Housing–Brake, RH | 1 |
| 2 | 93–7977 | Seal | 1 |
| 3 | 93–7978 | Rod–Pull | 1 |
| 4 | 93–7983 | Pin–Clevis | 2 |
| 5 | 93–7980 | Link | 2 |
| 6 | 93–7979 | Pin–Cotter, Hair | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 7 | 93–7986 | Disc–Stationary | 4 |
| 8 | 93–7981 | Disc–Rotating | 3 |
| 9 | 93–7976 | Ring–Retaining | 1 |
| 10 | 93–7984 | Gasket | 1 |
| 11 | 93–7982 | Actuator | 1 |
| 12 | 93–7987 | Spring–Extension | 3 |
| 13 | 93–7985 | Ball | 3 |

*Not Illustrated
†Not Serviced Separately

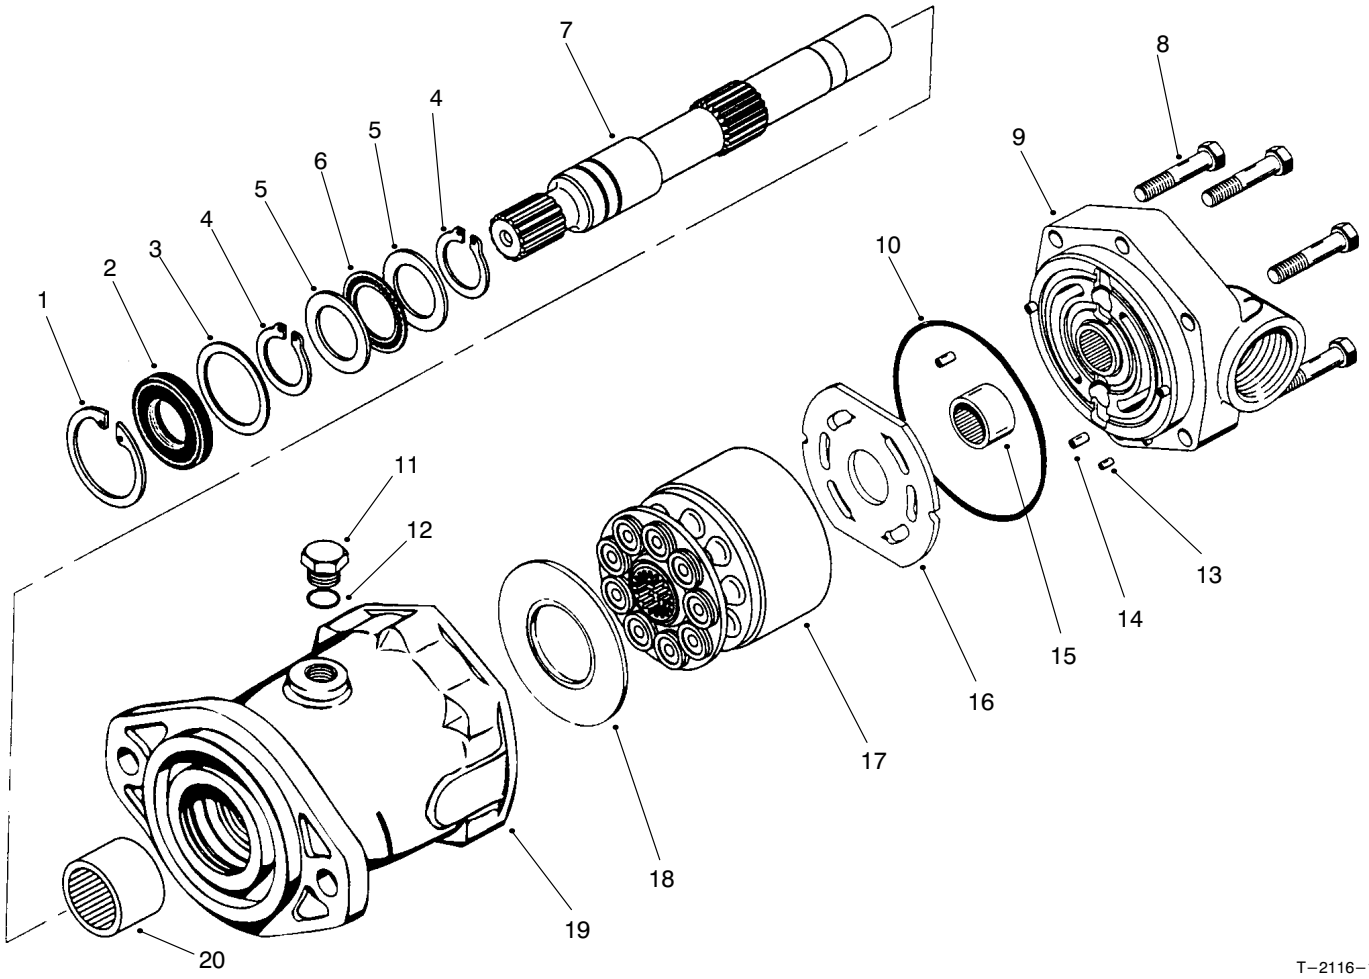



T–2116–1

# HYDRAULIC MOTOR ASSEMBLY NO. 92–7385

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 76–7010 | Ring–Retaining | 1 |
| 2 | 94–3008 | Seal–Shaft | 1 |
| 3 | 94–3007 | Washer | 1 |
| 4 | 76–7000 | Ring–Retaining | 2 |
| 5 | 76–6950 | Race–Thrust | 2 |
| 6 | 76–6960 | Bearing–Thrust | 1 |
| 7 | 94–3004 | Shaft–Drive, Splined | 1 |
| 8 | 94–3002 | Screw–HH | 6 |
| 9 | 94–3005 | Asm– Backplate (Incl. Ref. #13–15) | 1 |
| 10 | 76–6980 | O–Ring | 1 |
| 11 | 94–3009 | Asm–Plug (Incl. Ref. #12) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 12 | | O–Ring | 1 |
| 13 | | Pin–Dowel | 1 |
| 14 | | Pin–Dowel | 3 |
| 15 | | Bearing–Needle | 1 |
| 16 | 94–3003 | Plate–Valve | 1 |
| 17 | 76–6910 | Kit–Rotating | 1 |
| 18 | 76–6970 | Insert–Camplate | 1 |
| 19 | 94–3006 | Housing (Incl. Ref. #20) | 1 |
| 20 | | Bearing–Needle | 1 |

3321−147

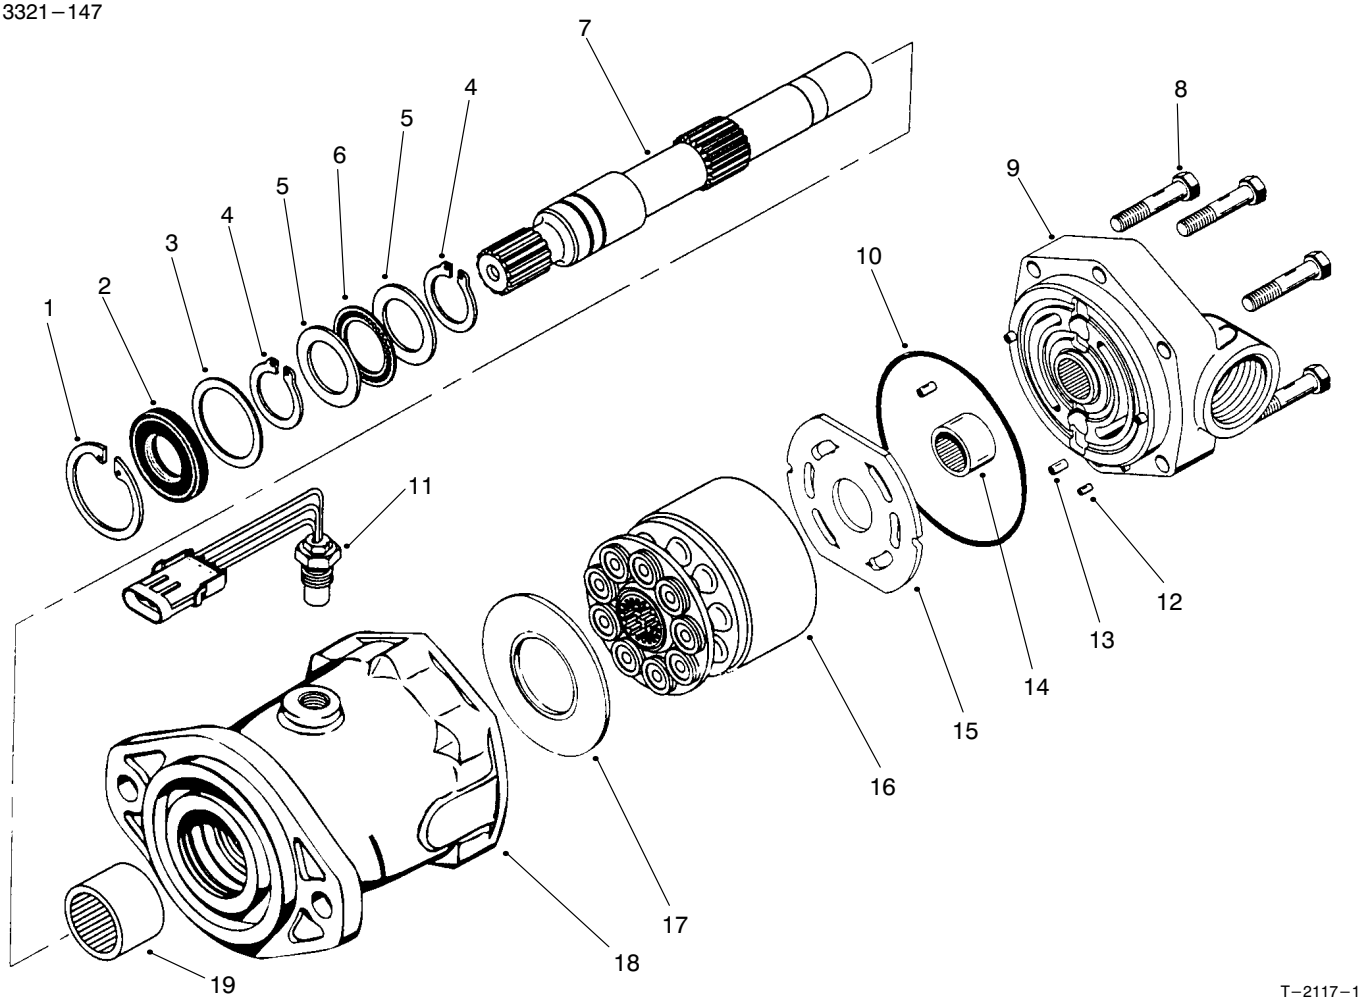



T−2117−1

# HYDRAULIC MOTOR ASM. NO. 93−7476 W/SENSOR

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 76−7010 | Ring−Retaining | 1 |
| 2 | 94−3008 | Seal−Shaft | 1 |
| 3 | 94−3007 | Washer | 1 |
| 4 | 76−7000 | Ring−Retaining | 2 |
| 5 | 76−6950 | Race−Thrust | 2 |
| 6 | 76−6960 | Bearing−Thrust | 1 |
| 7 | 94−3004 | Shaft−Drive, Splined | 1 |
| 8 | 94−3002 | Screw−HH | 6 |
| 9 | 94−3005 | Asm−Backplate (Incl. Ref. #12−14) | 1 |
| 10 | 76−6980 | O−Ring | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 11 | 94−3010 | Sensor−Speed Pickup | 1 |
| 12 | | Pin−Dowel | 1 |
| 13 | | Pin−Dowel | 3 |
| 14 | | Bearing−Needle | 1 |
| 15 | 94−3003 | Plate−Valve | 1 |
| 16 | 76−6910 | Kit−Rotating | 1 |
| 17 | 76−6970 | Insert−Camplate | 1 |
| 18 | 94−3006 | Housing (Incl. Ref. #19) | 1 |
| 19 | | Bearing−Needle | 1 |

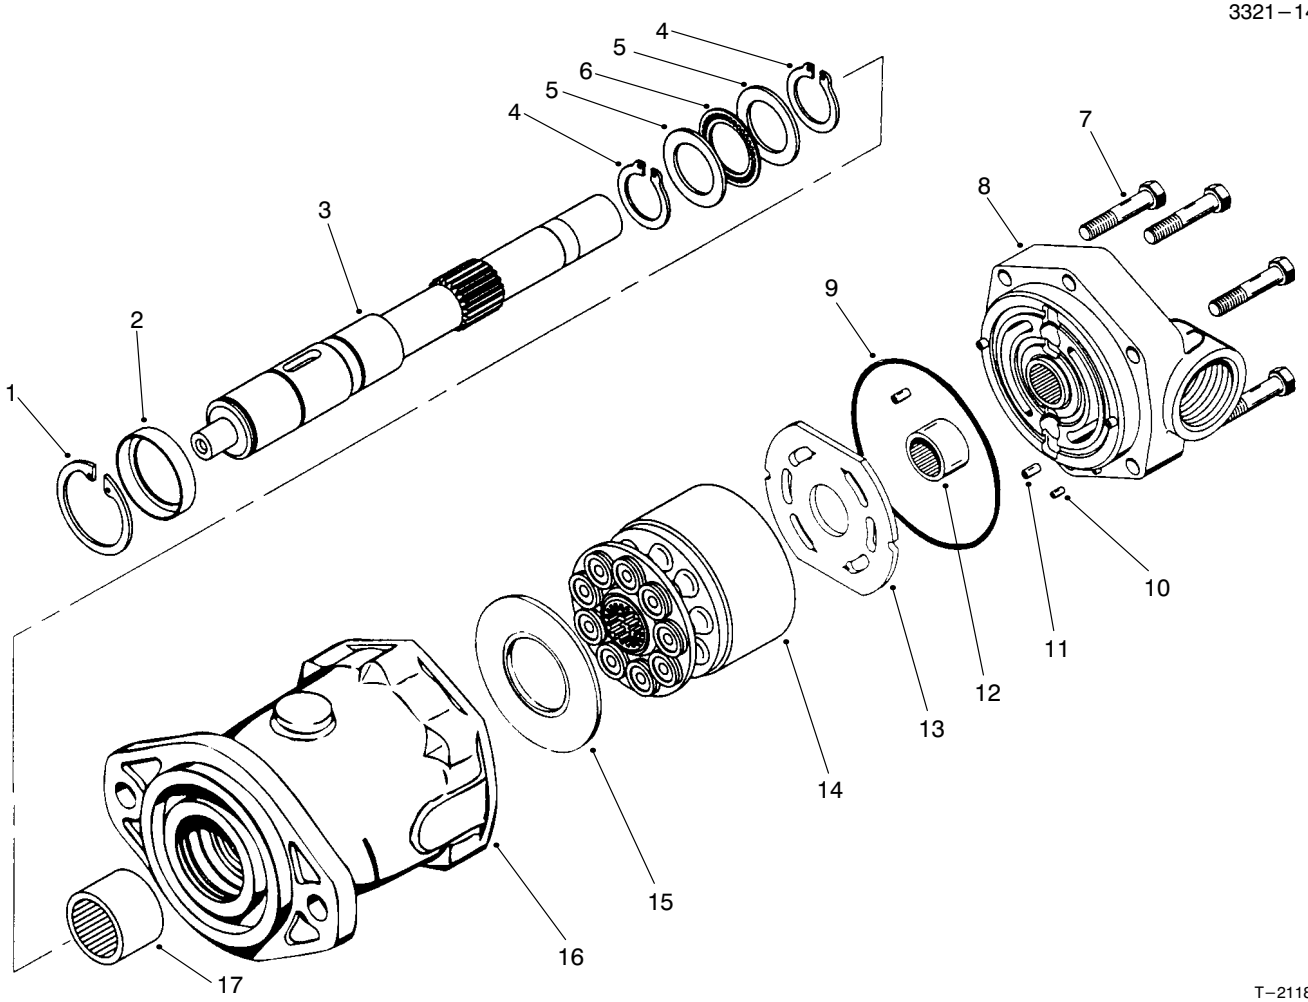



T–2118–1

# 4 WD HYDRAULIC MOTOR ASM. NO. 92–7386

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 76–7010 | Ring–Retaining | 1 |
| 2 | 76–7020 | Spacer | 1 |
| 3 | 76–6930 | Shaft–Drive, Straight | 1 |
| 4 | 76–7000 | Ring–Retaining | 2 |
| 5 | 76–6950 | Race–Thrust | 2 |
| 6 | 76–6960 | Bearing–Thrust | 1 |
| 7 | 94–3002 | Screw–HH | 6 |
| 8 | 94–3000 | Asm.–Backplate (Incl. Ref. #10–12) | 1 |
| 9 | 76–6980 | O–Ring | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 10 | | Pin–Dowel | 3 |
| 11 | | Pin–Dowel | 1 |
| 12 | | Bearing–Needle | 1 |
| 13 | 94–3003 | Plate–Valve | 1 |
| 14 | 76–6910 | Kit–Rotating | 1 |
| 15 | 76–6970 | Insert–Camplate | 1 |
| 16 | 94–3001 | Housing (Incl. Ref. #17) | 1 |
| 17 | | Bearing–Needle | 1 |

3321−147

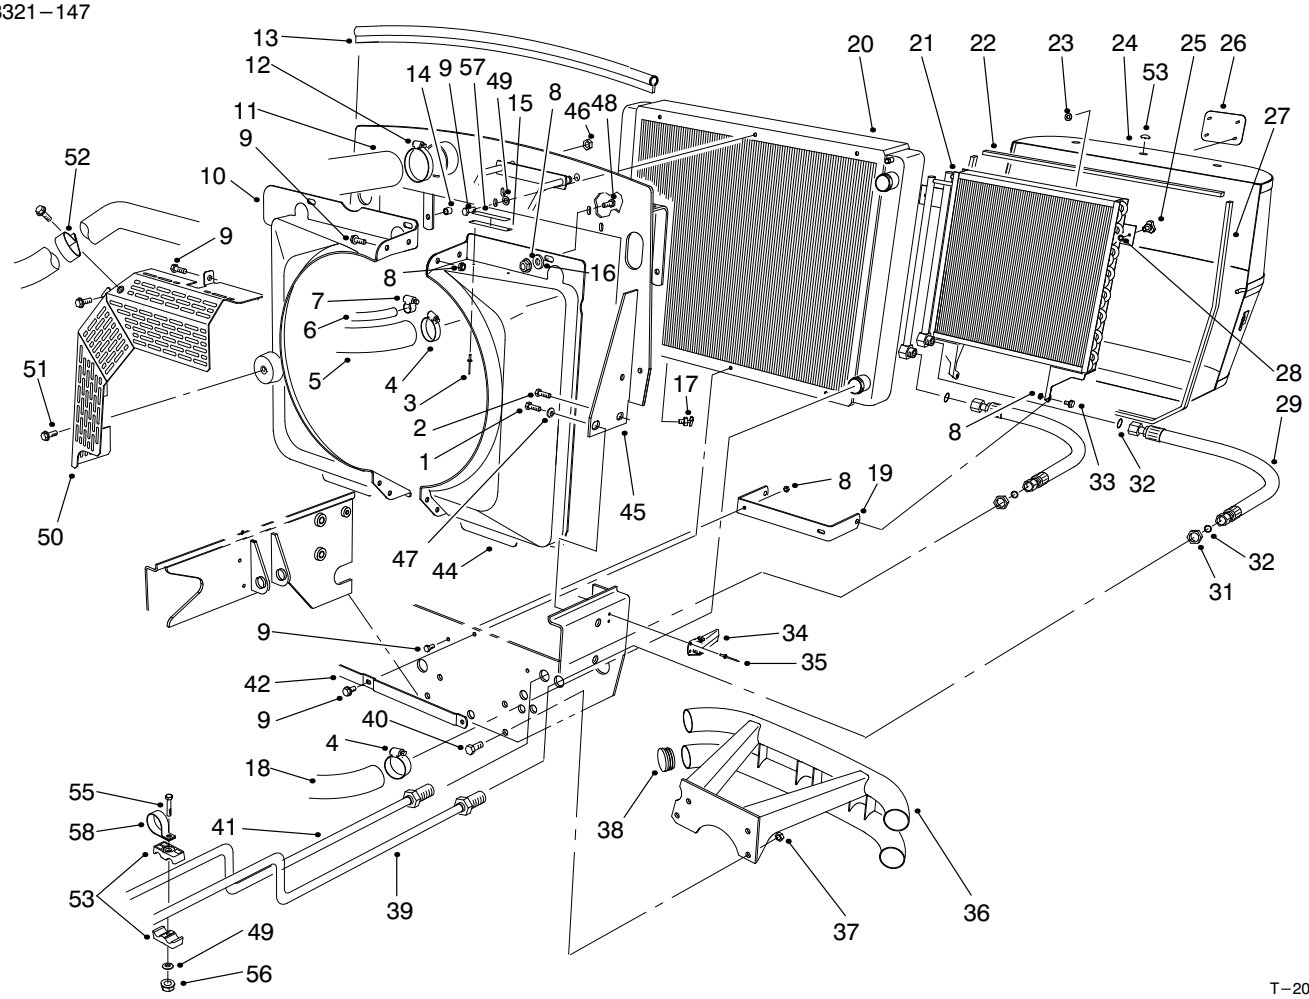



T−2073−5

# RADIATOR & SHROUD ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 33108−025 | Screw−HHF | 2 |
| 2 | 3234−18 | Screw−HHF | 2 |
| 3 | 3290−271 | Rivet−Pop | 2 |
| 4 | 2412−3 | Clamp−Hose | 2 |
| 5 | 93−4215 | Hose−Radiator, Upper Rear | 1 |
| 6 | 92−7424 | Hose−Radiator, Overflow | 1 |
| 7 | 2412−36 | Clamp−Hose | 1 |
| 8 | 32128−20 | Nut−Flange | 4 |
| 9 | 3234−5 | Screw−HF | 10 |
| 10 | 92−7374 | Shroud−Fan RH | 1 |
| 11 | 93−7584 | Hose−Intake | 1 |
| 12 | 2412−125 | Clamp−Hose | 1 |
| 13 | 93−7553 | Seal−Hood | 1 |
| 14 | 32148−10 | Nut−Clinch | 2 |
| 15 | 76−8750 | Plate − Warning, Fan | 1 |
| 16 | 3256−56 | Washer−Flat | 3 |
| 17 | 304−46 | Nut−Drain Cock | 1 |
| 18 | 92−7463 | Hose−Radiator, Lower | 1 |
| 19 | 92−7516 | Bracket−Support, Cooler | 1 |
| 20 | 74−3410 | Asm−Radiator | 1 |
| 21 | 82−3740 | Cooler−Oil | 1 |
| 22 | 92−7631 | Sealstrip−Screen | 1 |
| 23 | 94−2638 | Nut−Push On | 4 |
| 24 | 92−7505 | Screen | 1 |
| 25 | 77−3620 | Retainer−Cover | 2 |
| 26 | 93−6028 | Plate−Logo, Toro | 1 |
| 27 | 93−4208 | Strip−Seal, Screen | 1 |
| 28 | 32151−72 | Retainer−Push On | 2 |


| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 29 | 92−7535 | Asm−Hose, Oil Cooler | 2 |
| 31 | 340−74 | Nut−Bulkhead | 2 |
| 32 | 237−65 | O−Ring | 4 |
| 33 | 37−8771 | Bolt−Shoulder | 2 |
| 34 | 69−3020 | Latch−Draw | 2 |
| 35 | 3269−4 | Rivet−Pop | 4 |
| 36 | 94−3084 | Bumper (Model 03803) | 1 |
| 36 | 92−7623 | Bumper (Model 03804) | 1 |
| 37 | 3296−23 | Nut−Lock | 4 |
| 38 | 2410−42 | Cap−Bumper (Model 03803) | 2 |
| 38 | 2410−42 | Cap−Bumper (Model 03804) | 4 |
| 39 | 92−7493 | Asm−Tube, Filter | 1 |
| 40 | 325−5 | Screw−HH | 2 |
| 41 | 92−7558 | Asm−Tube, Cooler | 1 |
| 42 | 92−7416 | Strap−Radiator | 1 |
| 44 | 92−7375 | Shroud−Fan LH | 1 |
| 45 | 92−7388 | Support−Radiator | 1 |
| 46 | 3296−23 | Nut−Lock | 2 |
| 47 | 3256−27 | Washer−Flat | 2 |
| 48 | 3230−2 | Screw−Carriage | 3 |
| 49 | 3256−23 | Washer−Flat | 4 |
| 50 | 94−2646 | Guard−Fan (Europe) | 1 |
| 51 | 33104−020 | Screw−HHF (Europe) | 3 |
| 52 | 2412−96 | Clamp−R (Europe) | 1 |
| 53 | 2410−64 | Button−Plug | 3 |
| 54 | 94−8105 | Clamp−Tube | 2 |

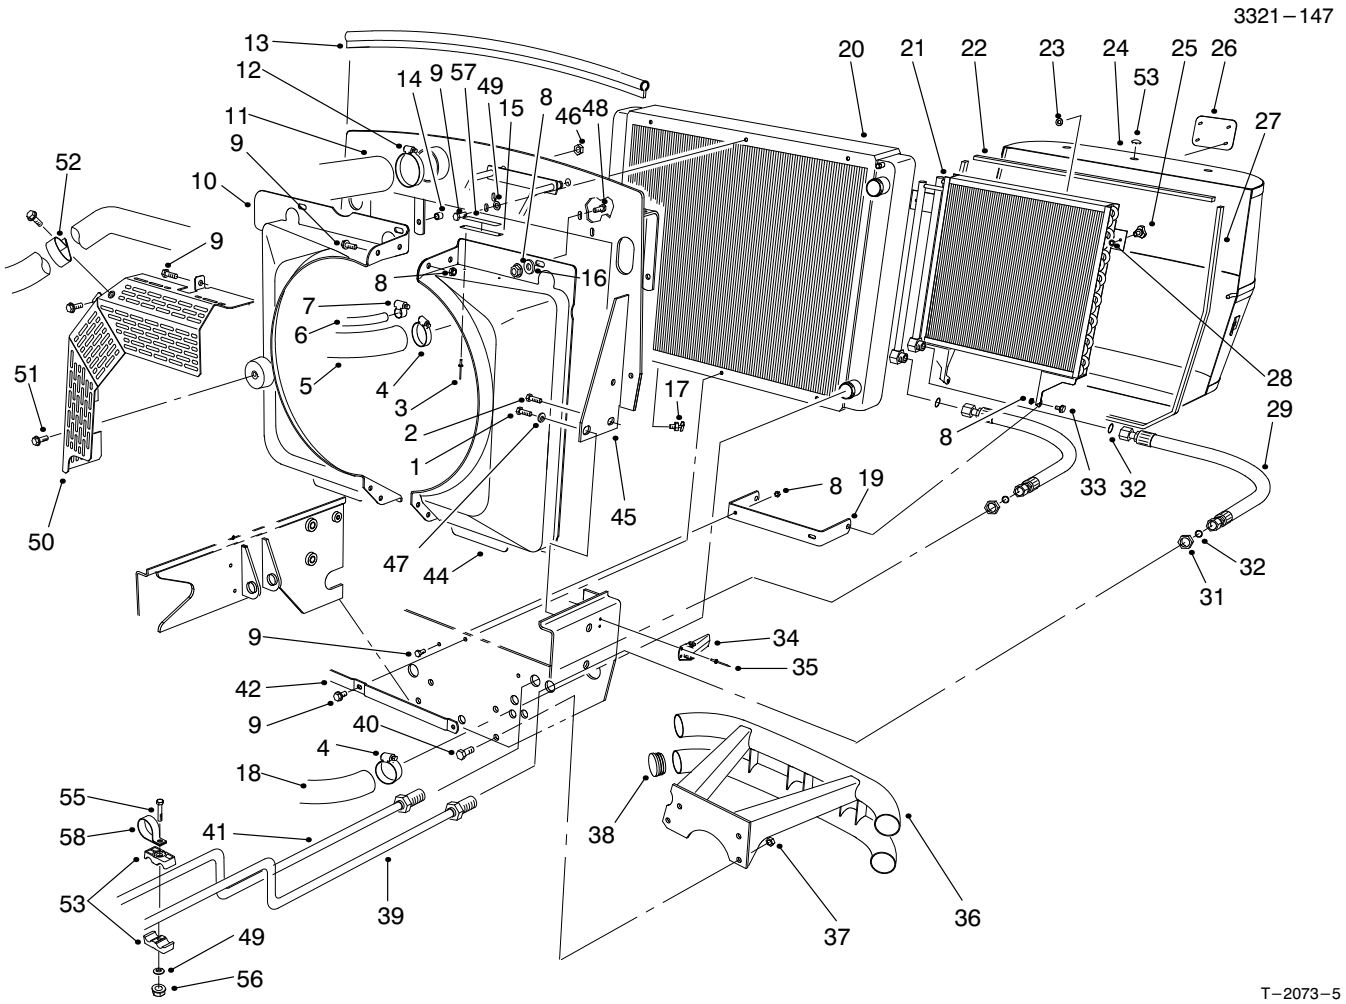


# RADIATOR & SHROUD ASSEMBLY (Continued)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 55 | 322−9 | Screw−HH | 1 |
| 56 | 3296−47 | Nut−Lock | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 57 | 93−6681 | Decal−Warning, Fan (Europe) | 1 |
| 58 | 2412−147 | Clamp − R | 1 |

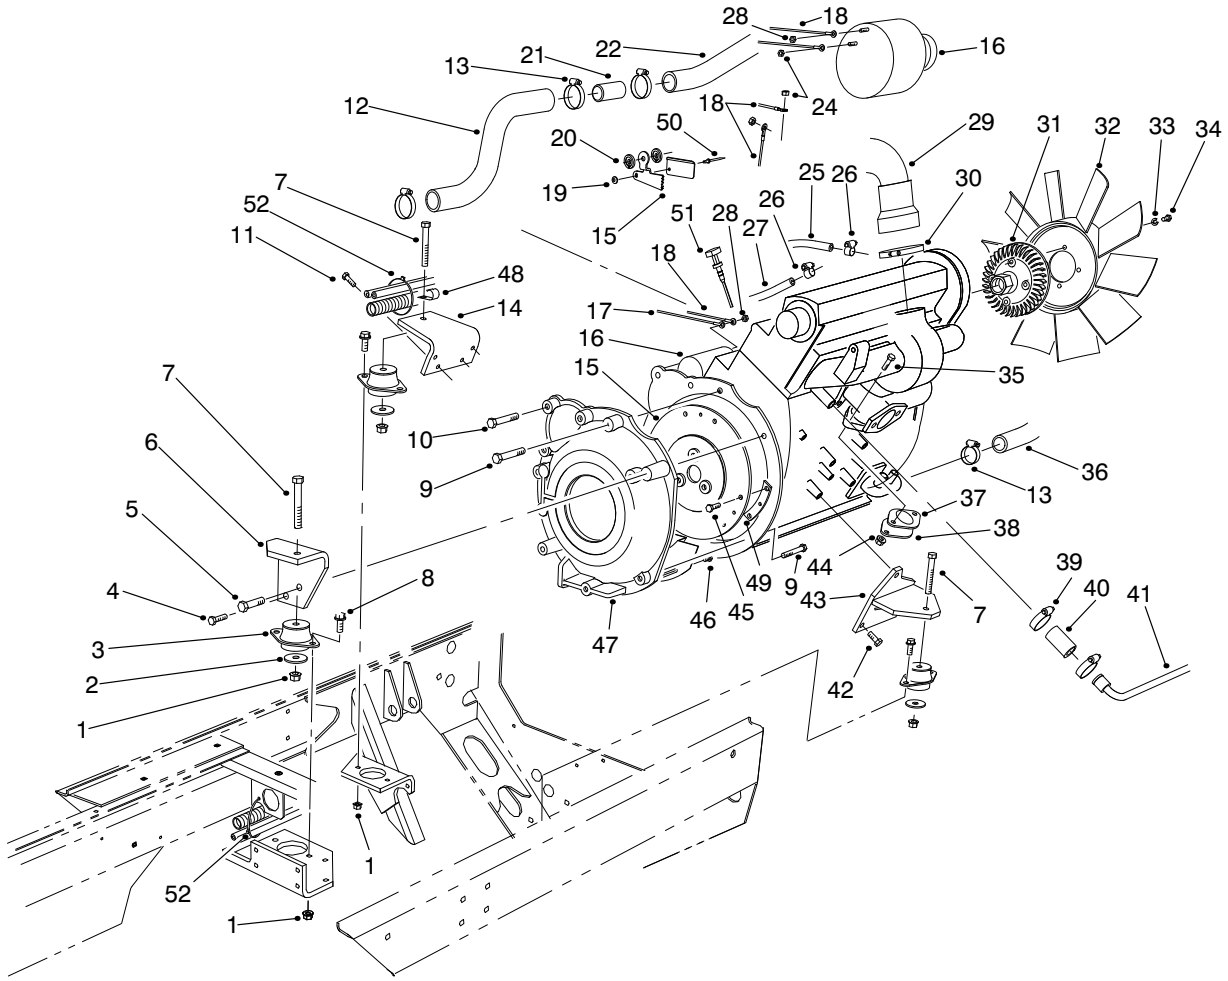



T–2074–1

# ENGINE INSTALLATION ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 33005–00 | Nut–HF | 9 |
| 2 | 87–5100 | Washer–Snubbing | 3 |
| 3 | 53–9681 | Mount–Rubber | 3 |
| 4 | 48–9470 | Screw | 1 |
| 5 | 48–7840 | Screw–HH | 1 |
| 6 | 92–7425 | Support–Mount, Engine | 1 |
| 7 | 33105–070 | Screw–HHF | 3 |
| 8 | 33105–030 | Screw–HHF | 6 |
| 9 | 48–7570 | Screw–HH | 3 |
| 10 | 48–7810 | Screw–HH | 3 |
| 11 | 66–3160 | Screw | 4 |
| 12 | 94–1418 | Hose–Radiator, Upper | 1 |
| 13 | 2412–3 | Clamp–Hose | 4 |
| 14 | 92–7429 | Mount–Motor, RH | 1 |
| 15 | 94–1421 | Coupling–Center, Spring | 1 |
| 16 | 93–4233 | Asm–Engine | 1 |
| 17 | 75–1370 | Cable–Battery, Positive | 1 |
| 18 | 94–3090 | Harness–Wire, Main | 1 |
| * | 94–9967 | Circuit Breaker–50 Amp | 1 |
| * | 94–9968 | Circuit Braker–100 Amp | 1 |
| 19 | 3256–49 | Washer–Flat | 1 |
| 20 | 86–2990 | Mount–Cable, Throttle | 2 |
| 21 | 93–7594 | Spacer–Tubular | 1 |
| 22 | 93–4215 | Hose–Radiator, Upper Rear | 1 |
| 24 | 48–7880 | Nut | 3 |
| 25 | 92–7521 | Hose–Fuel | 1 |
| 26 | 2412–108 | Clamp–Hose | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 27 | 63–7627 | Hose–Fuel | 1 |
| 28 | 48–7930 | Nut–Hex. | 2 |
| 29 | 94–2624 | Hose–Manifold | 1 |
| 30 | 2412–125 | Clamp–Hose | 1 |
| 31 | 92–7466 | Clutch–Fan | 1 |
| 32 | 74–3650 | Fan–Engine | 1 |
| 33 | 3253–4 | Washer–Lock | 4 |
| 34 | 322–3 | Screw–HH | 4 |
| 35 | 33104–020 | Screw–HHF | 2 |
| 36 | 92–7463 | Hose–Radiator, Lower | 1 |
| 37 | 77–3700 | Gasket–Exhaust, Manifold | 1 |
| 38 | 92–7382 | Cover–Manifold | 1 |
| 39 | 2412–129 | Clamp–Hose | 4 |
| 40 | 74–6490 | Hose–Water Line | 2 |
| 41 | 92–7381 | Tube–Water, Return | 1 |
| 42 | 48–7780 | Screw–HH | 3 |
| 43 | 92–7426 | Mount–Motor | 1 |
| 44 | 33004–00 | Nut–HF | 2 |
| 45 | 48–7700 | Screw–HH | 6 |
| 46 | 48–7610 | Screw–HH | 3 |
| 47 | 82–5120 | Adapter–Pump To Engine | 1 |
| 48 | 2412–150 | J–Clip | 1 |
| 49 | 92–1422 | Spacer–Coupler | 3 |
| 50 | 3290–282 | Rivet–Pop | 1 |
| 51 | 93–9176 | Dipstick–Peugeot | 1 |
| 52 | 3290–378 | Tie–Cable | 2 |

*Not Illustrated

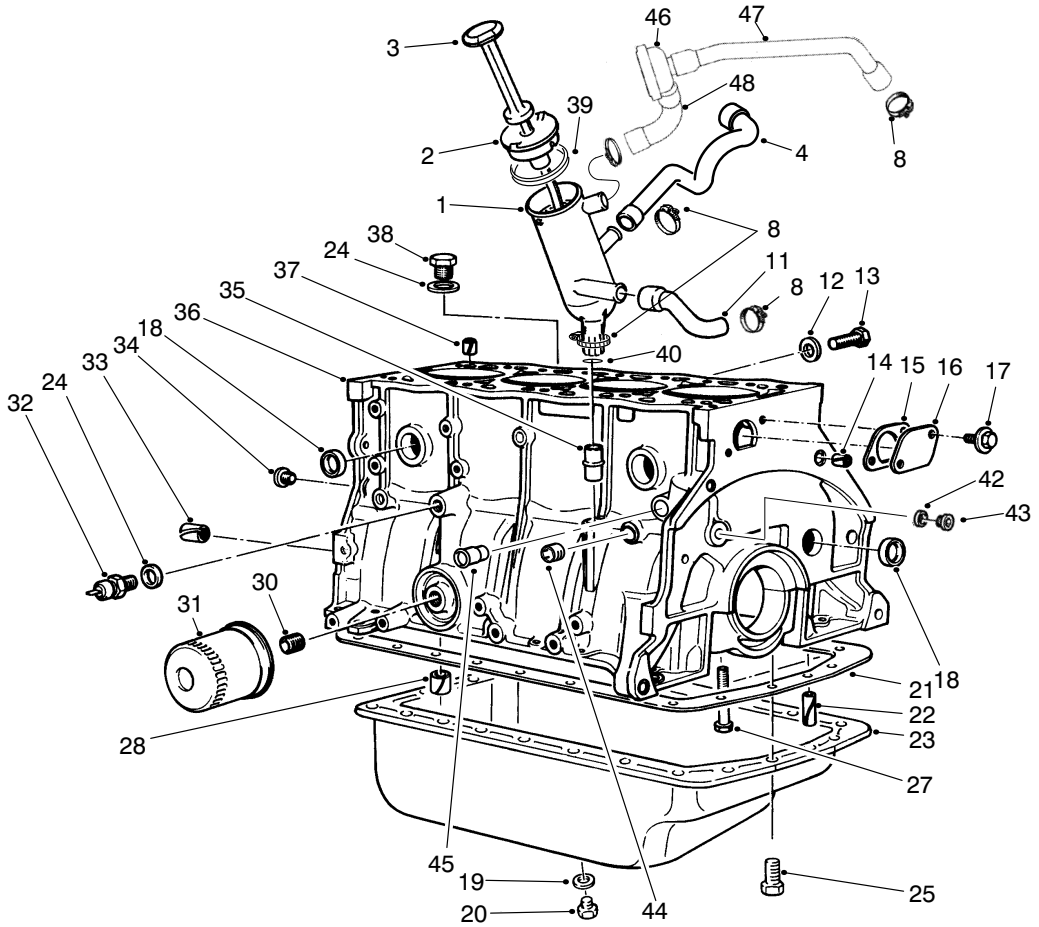



T−2142−3

# CRANKCASE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 94−3181 | Oil Filler (Incl. Ref. 39) | 1 |
| 2 | 94−3182 | Plug | 1 |
| 3 | 93−9176 | Dipstick−Oil | 1 |
| 4 | 94−3184 | Union | 1 |
| 8 | 2412−129 | Clamp−Hose | 8 |
| 11 | 74−7770 | Hose−Crankcase | 1 |
| 12 | 74−7780 | Gasket | 1 |
| 13 | 74−7790 | Screw | 1 |
| 14 | 94−3102 | Pin | 2 |
| 15 | 74−7810 | Gasket−Plate | 1 |
| 16 | 74−7820 | Plate | 1 |
| 17 | 94−3112 | Screw−Washer Hd. | 2 |
| 18 | 74−7840 | Plug−27 mm Dia. | 8 |
| * | 94−3108 | Plug−27.5 mm Dia. | 8 |
| * | 94−3109 | Plug−28.5 mm Dia. | 9 |
| 19 | 74−7320 | Gasket | 1 |
| 20 | 74−7310 | Plug−Threaded | 1 |
| 21 | 74−7380 | Gasket−Oil Pan | 1 |
| 22 | 94−3111 | Pin−Groove | 2 |
| 23 | 74−7300 | Pan−Oil | 1 |
| 24 | 94−3107 | Gasket | 2 |
| 25 | 74−7330 | Screw−HH | 23 |
| 26 | 77−3790 | Plug−Drain | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 27 | 74−7930 | Screw−Bearing Cap | 10 |
| 28 | 74−7940 | Bushing−Spring | 1 |
| 29 | 74−7950 | Screw−Plate | 6 |
| 30 | 74−7960 | Stud−Filter | 1 |
| 31 | 74−7970 | Filter−Oil | 1 |
| 32 | 94−3180 | Switch−Pressure | 1 |
| 33 | 74−7990 | Pin−Spring | 4 |
| 34 | 74−8000 | Plug | 2 |
| 35 | 74−8010 | Guide−Dipstick | 1 |
| 36 | 94−3100 | Asm−Short Block (Incl. Pistons next page) | 1 |
| 37 | 74−8030 | Pin−Spring | 1 |
| 38 | 94−3105 | Plug−Drain | 1 |
| 39 | 94−3183 | Gasket | 1 |
| 40 | 94−3186 | O−Ring | 1 |
| 42 | 94−3106 | Gasket | 2 |
| 43 | 94−3104 | Plug−Threaded | 2 |
| 44 | 94−3103 | Plug−Threaded | 1 |
| 45 | 94−3110 | Stud | 1 |
| 46 | 94−3190 | PCV Valve | 1 |
| 47 | 94−3192 | Union | 1 |
| 48 | 94−3191 | Union | 1 |
| * | 94−3101 | Gasket Set (Without Head Gasket) | 1 |

*Not Illustrated

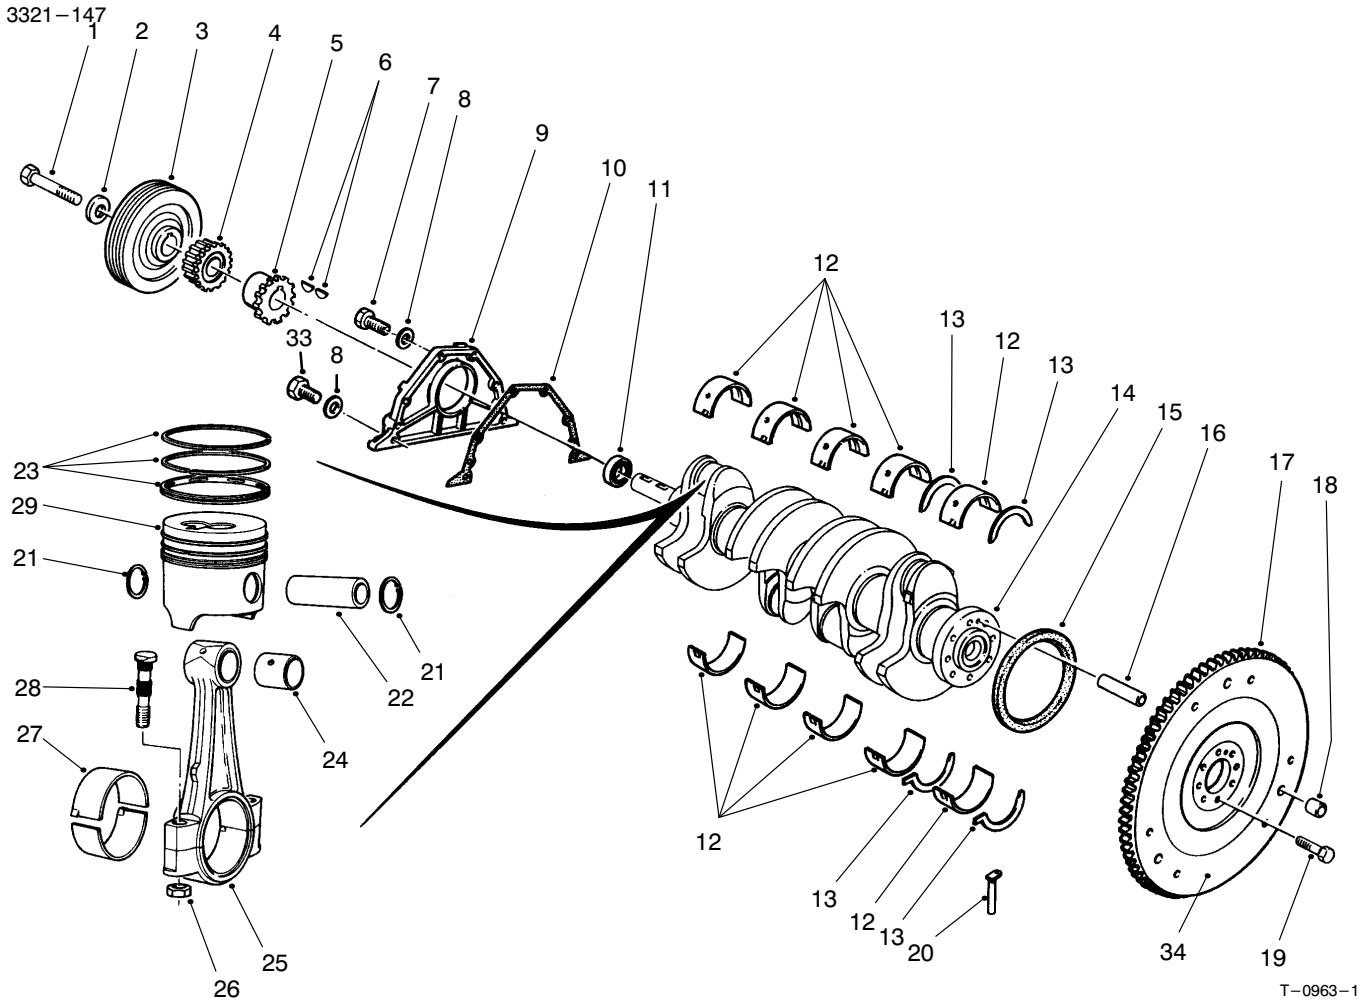



# CRANKSHAFT ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 94–3145 | Screw–HH | 1 |
| 2 | 94–3146 | Washer | 1 |
| 3 | 94–3144 | Pulley | 1 |
| 4 | 74–8100 | Gear–Pinion | 1 |
| 5 | 95–3485 | Sprocket–Oil Pump | 1 |
| 6 | 74–8120 | Key–Woodruff | 2 |
| 7 | 94–3150 | Screw–HH | 4 |
| 8 | 94–3151 | Washer | 6 |
| 9 | 74–8140 | Cover | 1 |
| 10 | 74–8150 | Gasket–Cover | 1 |
| 11 | 94–3148 | Seal–Shaft | 1 |
| 12 | 74–8170 | Bearing Set (Std.) | 2 |
| * | 94–3140 | Bearing Set (.30mm OS) | 2 |
| 13 | 94–3141 | Thrust Bearing Set (Std.) | 2 |
| * | 94–3142 | Thrust Bearing Set (.10mm OS) | 2 |
| * | 74–8210 | Thrust Bearing Set (.15mm OS) | 2 |
| * | 94–3143 | Thrust Bearing Set (.20mm OS) | 2 |
| 14 | 74–8230 | Crankshaft | 1 |
| 15 | 94–3147 | Seal | 1 |
| 16 | 74–7990 | Pin | 1 |
| 17 | 94–3149 | Gear–Flywheel | 1 |
| 18 | 74–8270 | Pin | 3 |
| 19 | 95–3484 | Screw–HH | 8 |
| 20 | 74–8290 | Seal–#1 Bearing Cap | 2 |
| 21 | 74–8300 | Clip–Piston Pin | 8 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 22 | 74–8310 | Pin–Piston | 4 |
| 23 | 94–3158 | Piston Ring Set Std. | 4 |
| * | 74–8320 | Piston Ring Set–0.20 mm | 4 |
| * | 74–8330 | Piston Ring Set–0.50 mm | 4 |
| * | 74–8340 | Piston Ring Set–0.80 mm | 4 |
| 24 | 98–9965 | Bushing–Sleeve | 4 |
| 25 | 74–8360 | Rod–Connecting (Set of 4) | 4 |
| 26 | | Nut–Hex. | 8 |
| 27 | 74–8380 | Bearing–Connecting Rod (Std.) | 4 |
| * | 94–3155 | Bearing–Connecting Rod (49.7mm ID) | 4 |
| 28 | 94–3156 | Bolt–Connecting Rod (Incl. Ref. #26) | 8 |
| 29 | 94–3157 | Piston Set–Std. (Incl. Ref. #21–23) | 1 |
| 29 | 74–8420 | Piston Set–Stage #1 (83.13mm OD) (Incl. Ref. #21–23) | 1 |
| * | 74–8430 | Piston Set–Stage #2 (83.43mm OD) (Incl. Ref. #21–23) | 1 |
| * | 74–8440 | Piston Set–Stage #3 (83.73mm OD) (Incl. Ref. #21–23) | 1 |
| 33 | 94–3152 | Screw–HH | 2 |
| 34 | 74–8260 | Flywheel | 1 |

*Not Illustrated

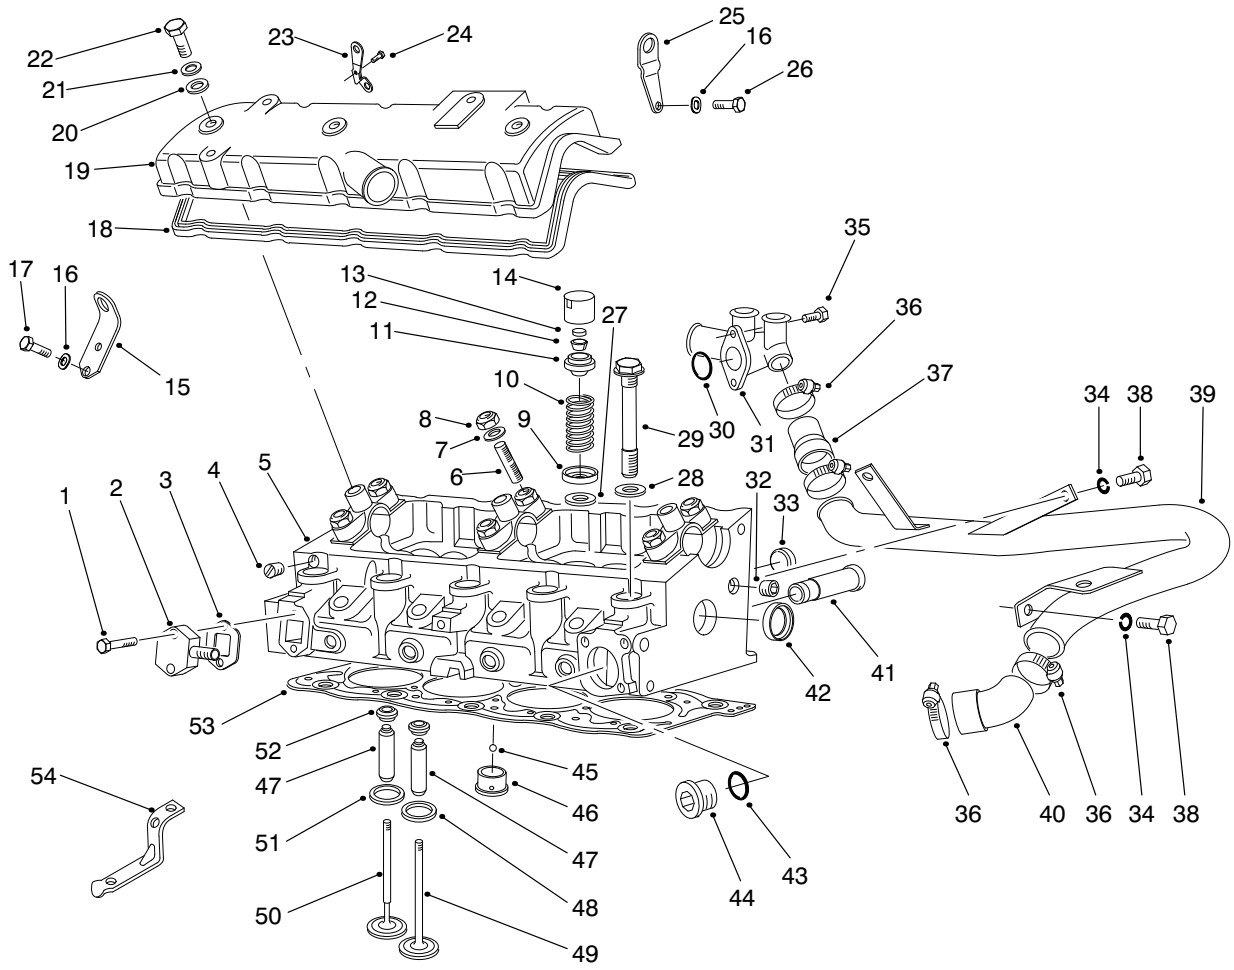


T−2148−4


# CYLINDER HEAD ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 94−3123 | Screw−HH | 2 |
| 2 | 94−3117 | Plate | 1 |
| 3 | 94−3116 | Gasket | 1 |
| 4 | 74−7600 | Plug | 4 |
| 5 | 94−3113 | Asm−Cylinder Head | 1 |
| 6 | 76−5130 | Stud | 6 |
| 7 | 74−8900 | Washer−Flat | 6 |
| 8 | 94−3115 | Nut−Lock | 6 |
| 9 | 74−6570 | Cup−Lower Valve Spring | 8 |
| 10 | 74−6560 | Spring−Valve | 8 |
| 11 | 74−6550 | Cup−Upper Valve Spring | 8 |
| 12 | 74−7240 | Collar−Split | 16 |
| 13 | 74−6580 | Insert−Valve (1.650mm) | 8 |
| * | 74−6590 | Insert−Valve (1.725mm) | 8 |
| * | 74−6600 | Insert−Valve (1.800mm) | 8 |
| * | 74−6610 | Insert−Valve (1.900mm) | 8 |
| * | 74−6620 | Insert−Valve (1.975mm) | 8 |
| * | 74−6630 | Insert−Valve (2.050mm) | 8 |
| * | 74−6640 | Insert−Valve (2.125mm) | 8 |
| * | 74−6650 | Insert−Valve (2.225mm) | 8 |
| * | 74−6660 | Insert−Valve (2.250mm) | 8 |
| * | 74−6670 | Insert−Valve (2.275mm) | 8 |
| * | 74−6680 | Insert−Valve (2.300mm) | 8 |
| * | 74−6690 | Insert−Valve (2.325mm) | 8 |
| * | 74−6700 | Insert−Valve (2.350mm) | 8 |
| * | 74−6710 | Insert−Valve (2.375mm) | 8 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 13 | 74−6720 | Insert−Valve (2.400mm) | 8 |
| * | 74−6730 | Insert−Valve (2.425mm) | 8 |
| * | 74−6740 | Insert−Valve (2.450mm) | 8 |
| * | 74−6750 | Insert−Valve (2.475mm) | 8 |
| * | 74−6760 | Insert−Valve (2.500mm) | 8 |
| * | 74−6770 | Insert−Valve (2.525mm) | 8 |
| * | 74−6780 | Insert−Valve (2.550mm) | 8 |
| * | 74−6790 | Insert−Valve (2.575mm) | 8 |
| * | 74−6800 | Insert−Valve (2.600mm) | 8 |
| * | 74−6810 | Insert−Valve (2.625mm) | 8 |
| * | 74−6820 | Insert−Valve (2.650mm) | 8 |
| * | 74−6830 | Insert−Valve (2.675mm) | 8 |
| * | 74−6840 | Insert−Valve (2.700mm) | 8 |
| * | 74−6850 | Insert−Valve (2.725mm) | 8 |
| * | 74−6860 | Insert−Valve (2.750mm) | 8 |
| * | 74−6870 | Insert−Valve (2.775mm) | 8 |
| * | 74−6880 | Insert−Valve (2.800mm) | 8 |
| * | 74−6890 | Insert−Valve (2.825mm) | 8 |
| * | 74−6900 | Insert−Valve (2.850mm) | 8 |
| * | 74−6910 | Insert−Valve (2.875mm) | 8 |
| * | 74−6920 | Insert−Valve (2.900mm) | 8 |
| * | 74−6930 | Insert−Valve (2.925mm) | 8 |
| * | 74−6940 | Insert−Valve (2.950mm) | 8 |
| * | 74−6950 | Insert−Valve (2.975mm) | 8 |
| * | 74−6960 | Insert−Valve (3.000mm) | 8 |
| * | 74−6970 | Insert−Valve (3.025mm) | 8 |

*Not Illustrated

3321−147

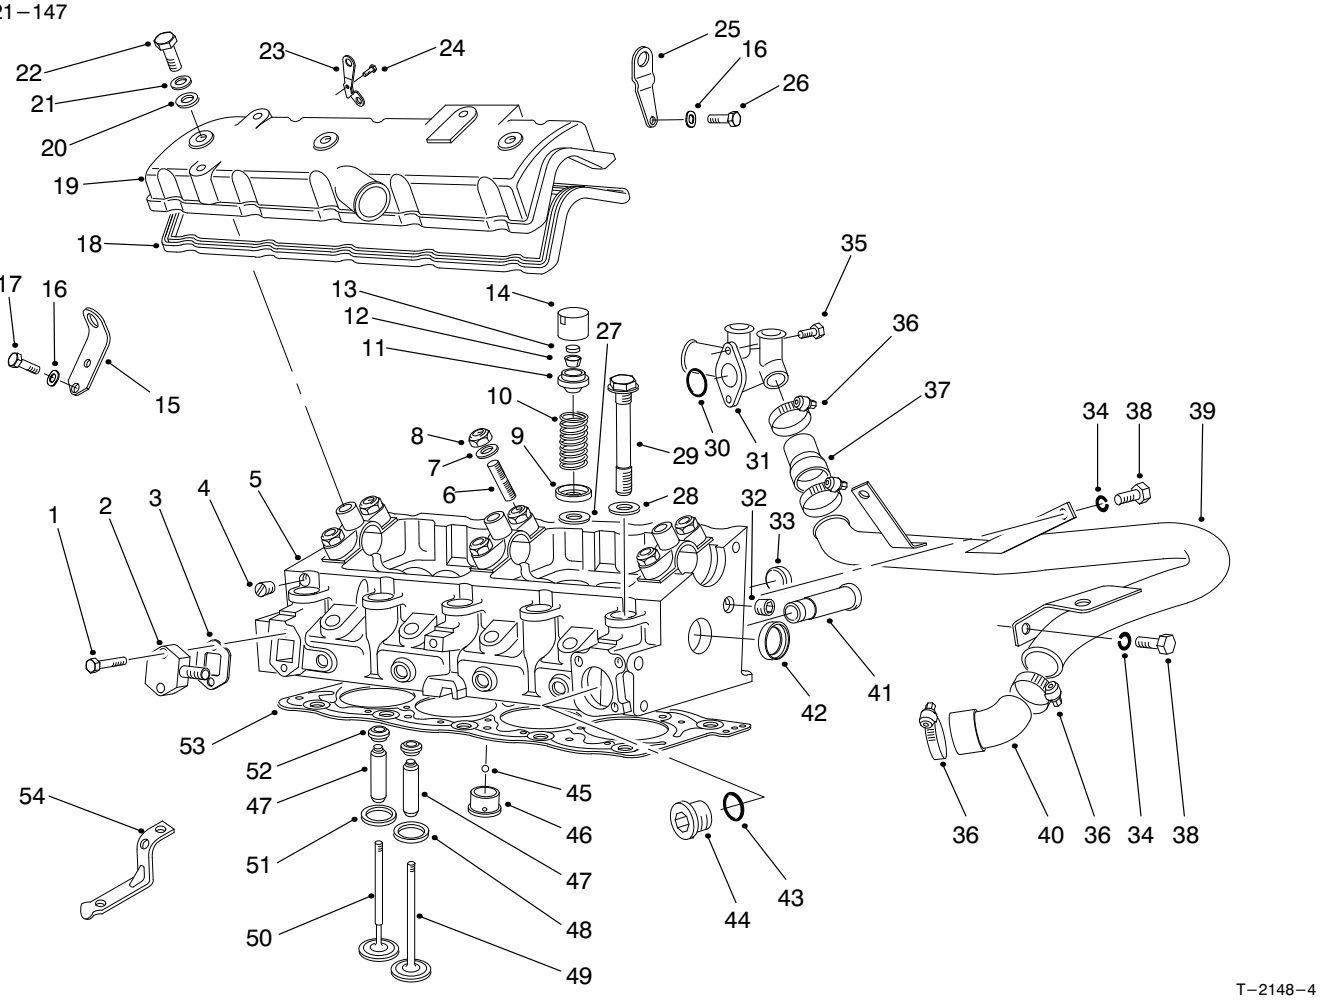



T−2148−4

# CYLINDER HEAD ASSEMBLY (Continued)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 13 | 74−6980 | Insert−Valve (3.050mm) | 8 |
| * | 74−6990 | Insert−Valve (3.075mm) | 8 |
| * | 74−7000 | Insert−Valve (3.100mm) | 8 |
| * | 74−7010 | Insert−Valve (3.125mm) | 8 |
| * | 74−7020 | Insert−Valve (3.150mm) | 8 |
| * | 74−7030 | Insert−Valve (3.175mm) | 8 |
| * | 74−7040 | Insert−Valve (3.200mm) | 8 |
| * | 74−7050 | Insert−Valve (3.225mm) | 8 |
| * | 74−7060 | Insert−Valve (3.250mm) | 8 |
| * | 74−7070 | Insert−Valve (3.275mm) | 8 |
| * | 74−7080 | Insert−Valve (3.300mm) | 8 |
| * | 74−7090 | Insert−Valve (3.325mm) | 8 |
| * | 74−7100 | Insert−Valve (3.350mm) | 8 |
| * | 74−7110 | Insert−Valve (3.375mm) | 8 |
| * | 74−7120 | Insert−Valve (3.400mm) | 8 |
| * | 74−7130 | Insert−Valve (3.425mm) | 8 |
| * | 74−7140 | Insert−Valve (3.450mm) | 8 |
| * | 74−7150 | Insert−Valve (3.475mm) | 8 |
| * | 74−7160 | Insert−Valve (3.500mm) | 8 |
| * | 74−7170 | Insert−Valve (3.550mm) | 8 |
| * | 74−7180 | Insert−Valve (3.625mm) | 8 |
| * | 74−7190 | Insert−Valve (3.700mm) | 8 |
| * | 74−7200 | Insert−Valve (3.775mm) | 8 |
| * | 74−7210 | Insert−Valve (3.850mm) | 8 |
| * | 74−7220 | Insert−Valve (3.925mm) | 8 |
| * | 74−7230 | Insert−Valve (4.000mm) | 8 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 14 | 74−6540 | Tappet−Valve | 8 |
| 15 | 94−3135 | Bracket−Lifting | 1 |
| 16 | 74−7560 | Washer−Spring | 3 |
| 17 | 76−5440 | Screw | 2 |
| 18 | 74−7630 | Gasket−Valve Cover | 1 |
| 19 | 74−7640 | Cover−Valve | 1 |
| 20 | 74−7650 | Washer−Flat | 3 |
| 21 | 94−3125 | Washer | 3 |
| 22 | 94−3124 | Bolt−Valve Cover | 3 |
| 23 | 94−3136 | Bracket−Lifting | 1 |
| 24 | 94−3138 | Screw | 1 |
| 25 | 94−3137 | Bracket−Lifting | 1 |
| 26 | 94−3139 | Screw | 1 |
| 27 | 94−3174 | Washer | 8 |
| 28 | 74−7270 | Washer−Flat | 10 |
| 29 | 74−7260 | Bolt−Head | 10 |
| 30 | 94−3197 | O−Ring | 1 |
| 31 | 94−3196 | Inlet−Water | 1 |
| 32 | 94−3118 | Plug | 1 |
| 33 | 74−7840 | Plug−27 mm Dia. | 2 |
| * | 94−3108 | Plug−27.5 mm Dia. | 2 |
| * | 94−3109 | Plug−28.5 mm Dia. | 2 |
| 34 | 68−9420 | Washer−Lock | 3 |
| 35 | 94−3198 | Screw | 2 |
| 36 | 2412−129 | Clamp−Hose | 4 |
| 37 | 94−3200 | Hose−By−Pass | 1 |

*Not Illustrated

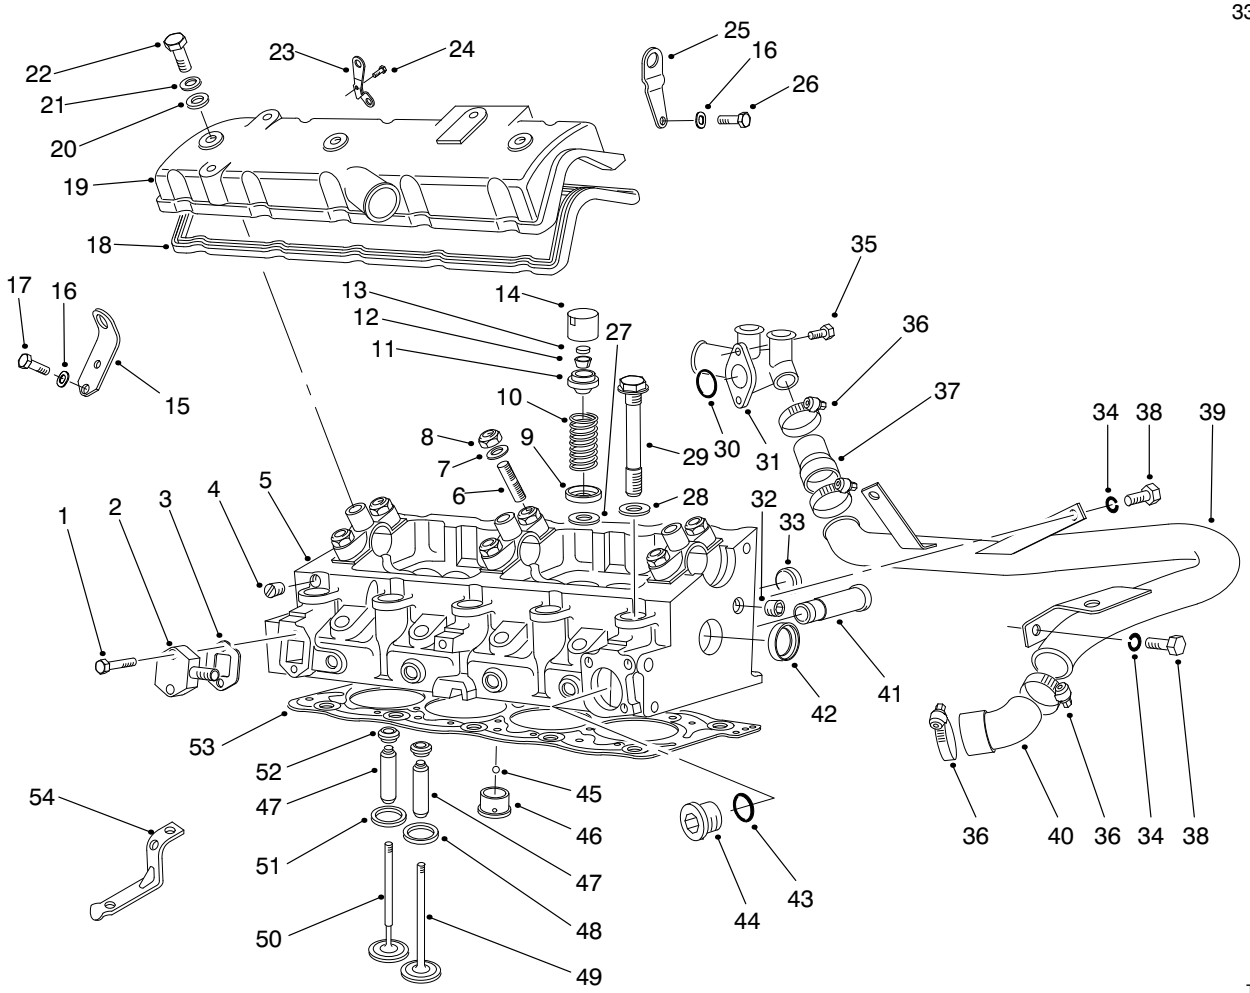



T–2148–4

# CYLINDER HEAD ASSEMBLY (Continued)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 38 | 48–7700 | Screw–HH | 3 |
| 39 | 94–3199 | Pipe–By–Pass | 1 |
| 40 | 98–9971 | Hose–By–Pass | 1 |
| 41 | 74–7400 | Tube | 1 |
| 42 | 74–7840 | Plug | 2 |
| 43 | 94–3122 | Gasket | 1 |
| 44 | 94–3121 | Plug | 1 |
| 45 | 74–7420 | Ball | 4 |
| 46 | 74–7430 | Chamber–Turbulence (32.45mm) | 4 |
| * | 74–7440 | Chamber–Turbulence (32.65mm) | 4 |
| 47 | 92–7792 | Guide–Valve (14.29mm) | 8 |
| * | 92–7793 | Guide–Valve (14.59mm) | 8 |
| 48 | 74–7450 | Seat–Intake Valve (39.3mm) | 4 |
| * | 74–7460 | Seal–Intake Valve (39.5mm) | 4 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 49 | 74–7480 | Valve–Intake | 4 |
| 50 | 92–7794 | Valve–Exhaust | 4 |
| 51 | 92–7795 | Seat–Exhaust Valve (34.5mm) | 4 |
| 52 | 92–7791 | Seal–Valve | 8 |
| 53 | 94–8132 | Gasket–Head (1.48 mm) | 1 |
| * | 94–8133 | Gasket–Head (1.52 mm) | 1 |
| * | 94–8134 | Gasket–Head (1.58 mm) | 1 |
| * | 94–8135 | Gasket–Head (1.62 mm) | 1 |
| 54 | 94–3120 | Bracket | 1 |
| * | 74–7670 | Head Bolt & Washer Set (Incl. Ref. #28 & 29) | 1 |
| * | 94–3119 | Kit–Gasket | 1 |
| * | 94–9965 | Asm–Head, Cylinder | 1 |

*Not Illustrated

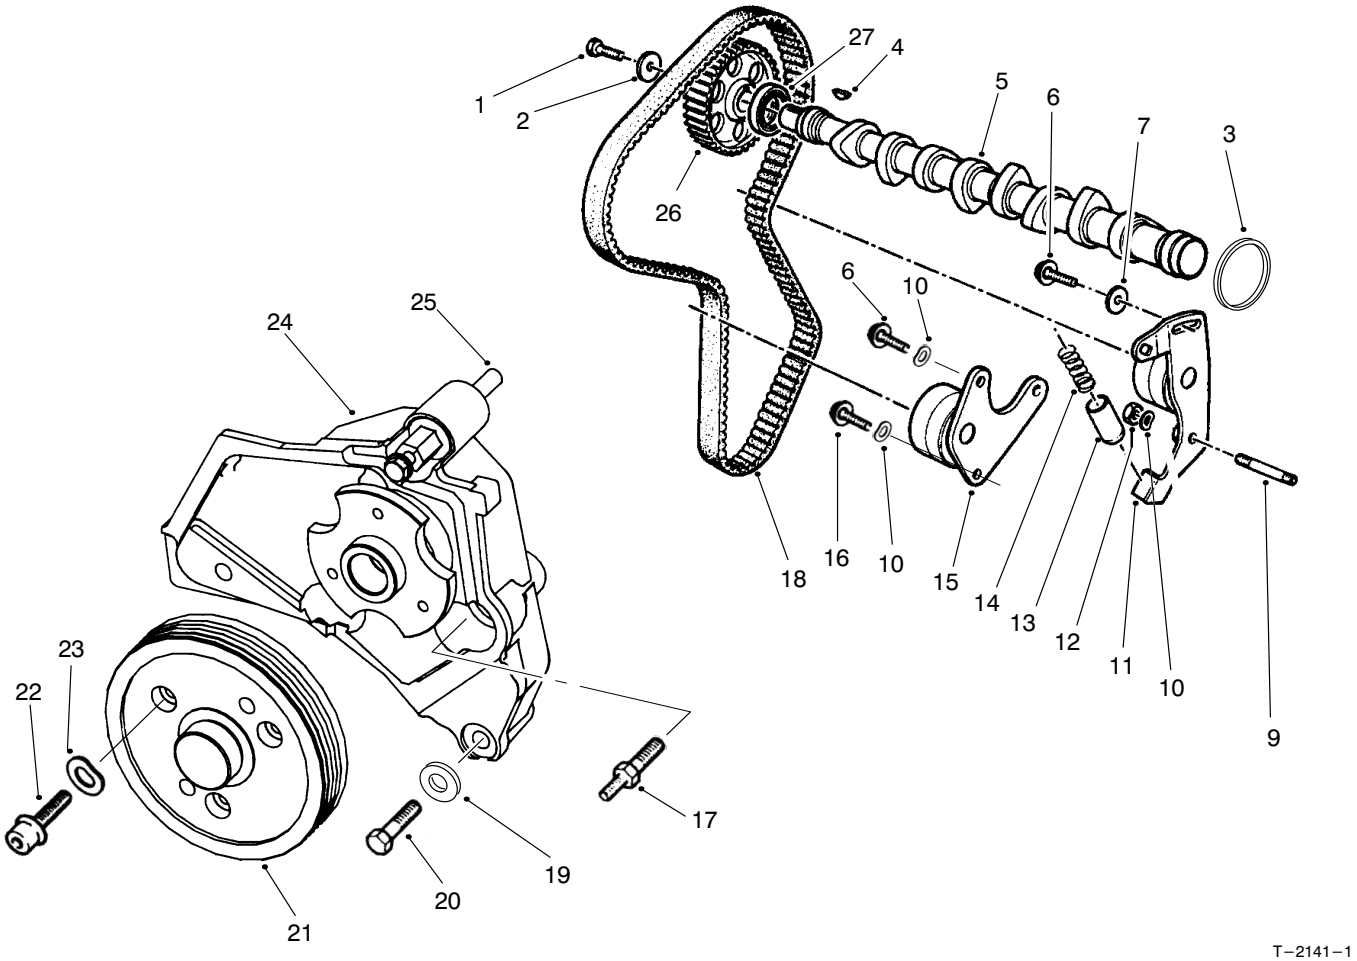



T−2141−1

# CAMSHAFT & FAN SUPPORT ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 77−3440 | Screw | 2 |
| 2 | 77−3450 | Washer | 2 |
| 3 | 77−3420 | Gasket | 1 |
| 4 | 77−3410 | Key | 1 |
| 5 | 77−3400 | Camshaft | 1 |
| 6 | 94−3163 | Screw | 1 |
| 7 | 94−3166 | Washer−Flat | 1 |
| 9 | 94−3162 | Stud | 1 |
| 10 | 94−3164 | Washer−Spring | 4 |
| 11 | 94−3159 | Asm−Roller | 1 |
| 12 | 94−3165 | Nut−Lock | 1 |
| 13 | 77−3520 | Cup | 1 |
| 14 | 77−3510 | Spring | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 15 | 94−3160 | Asm−Roller | 1 |
| 16 | 94−3161 | Screw | 2 |
| 17 | 94−3170 | Screw | 1 |
| 18 | 74−8830 | Belt | 1 |
| 19 | 94−3172 | Washer | 3 |
| 20 | 94−3171 | Screw | 2 |
| 21 | 94−3168 | Pulley−Fan | 1 |
| 22 | 94−3173 | Screw | 3 |
| 23 | 76−5010 | Washer | 3 |
| 24 | 94−3167 | Bracket−Fan | 1 |
| 25 | 94−3169 | Screw | 1 |
| 26 | 92−7787 | Pulley−Camshaft | 1 |
| 27 | 94−9994 | Gasket−Camshaft | 1 |

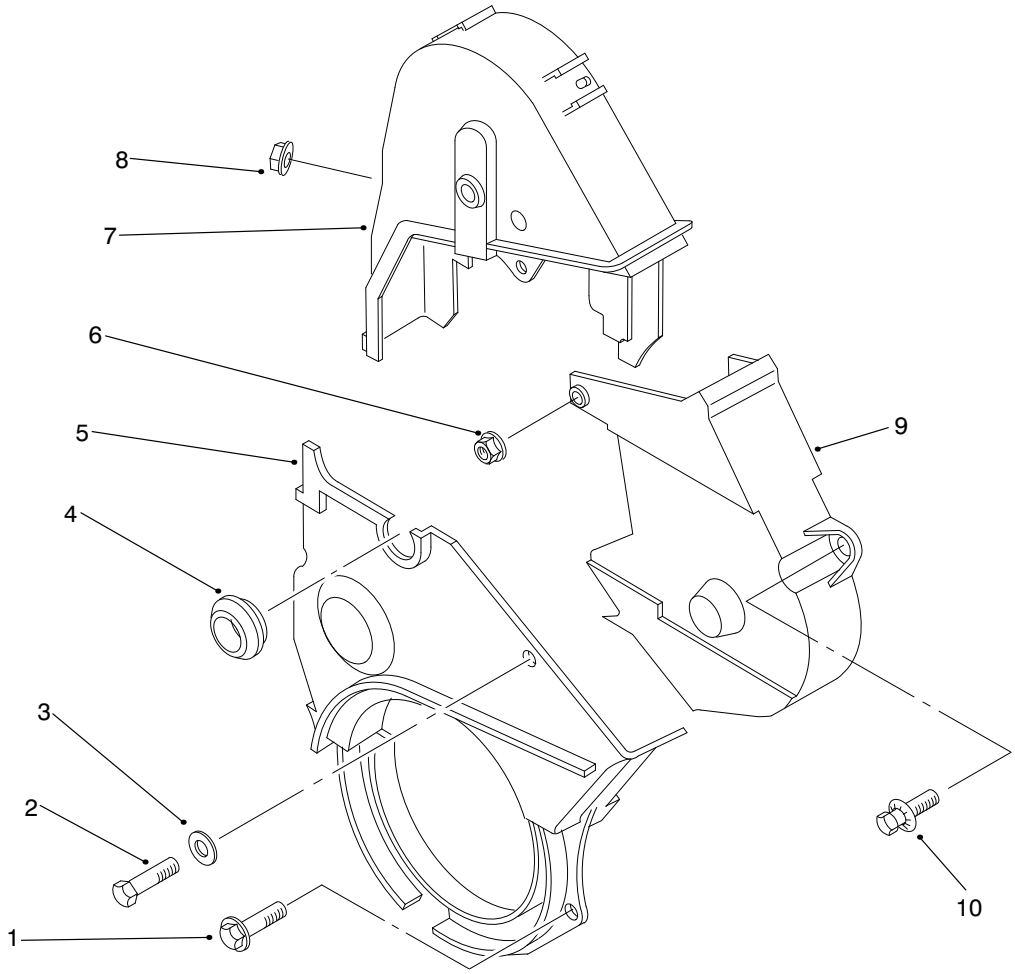



T−2140−2

# TIMING COVER

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 94−3132 | Screw | 2 |
| 2 | 94−3130 | Screw | 1 |
| 3 | 94−3125 | Washer−Flat | 1 |
| 4 | 94−3129 | Plug | 1 |
| 5 | 94−3126 | Protector−Lower | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 6 | 94−3133 | Nut W/Washer | 1 |
| 7 | 94−3127 | Case−Timing, Left | 1 |
| 8 | 94−3134 | Nut | 1 |
| 9 | 94−3128 | Case−Timing, Right | 1 |
| 10 | 94−3131 | Screw | 1 |

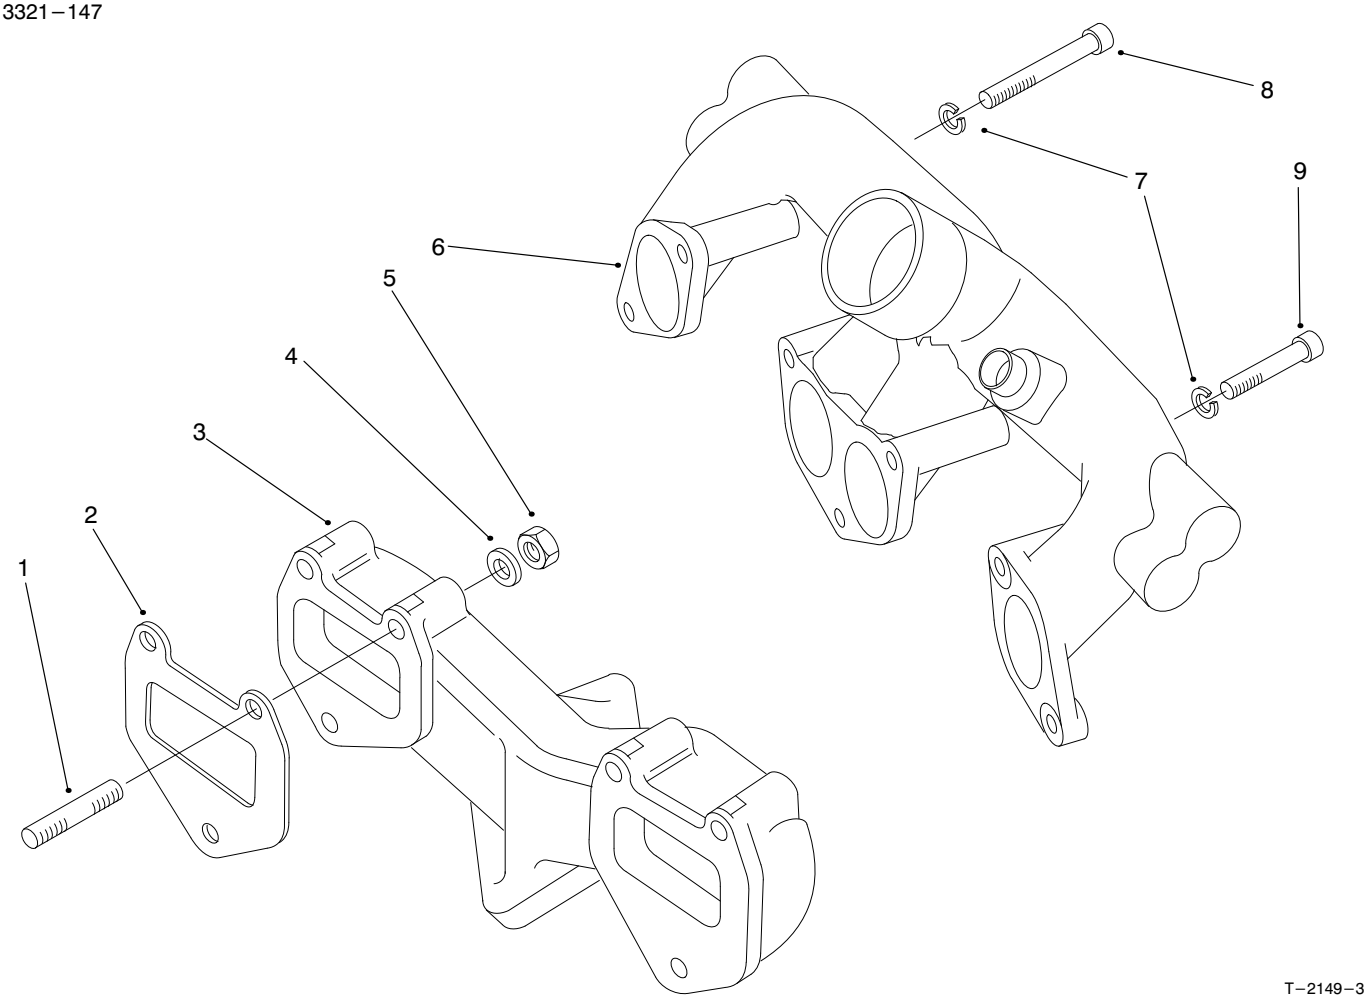



T−2149−3

# INTAKE & EXHAUST MANIFOLD ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 77−3300 | Stud | 6 |
| 2 | 77−3310 | Gasket | 2 |
| 3 | 77−3340 | Manifold−Exhaust | 1 |
| 4 | 68−9420 | Washer−Lock | 6 |
| 5 | 77−3320 | Nut−Hex | 6 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 6 | 94−3215 | Manifold−Intake | 1 |
| 7 | 94−3164 | Washer−Spring | 7 |
| 8 | 94−3216 | Screw | 5 |
| 9 | 94−3217 | Screw | 4 |
| * | 94−3218 | Screw | 1 |

*Not Illustrated

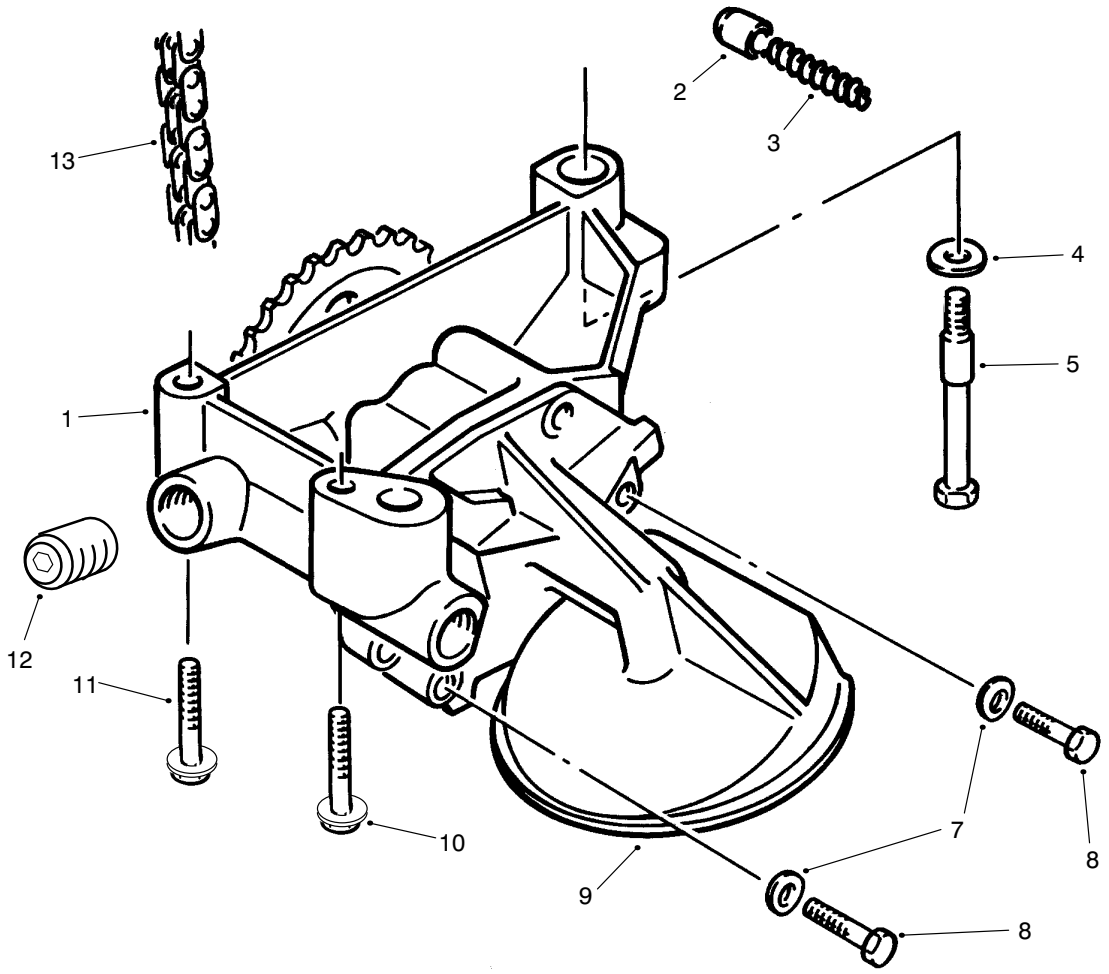



T–0964–2

# OIL PUMP ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 76–5070 | Asm–Oil Pump | 1 |
| 2 | 94–3176 | Gear–Oil Pump | 1 |
| 3 | 76–5090 | Spring–Piston | 1 |
| 4 | 94–3179 | Washer–Spring | 3 |
| 5 | 76–5100 | Bolt–Shoulder | 1 |
| 7 | 76–5010 | Washer–Spring | 5 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 8 | 94–3124 | Screw–HH | 2 |
| 9 | 94–3178 | Strainer | 1 |
| 10 | 77–3470 | Screw | 1 |
| 11 | 77–3490 | Screw | 1 |
| 12 | 94–3177 | Plug | 2 |
| 13 | 76–5170 | Chain–Pump Drive | 1 |

3321−147

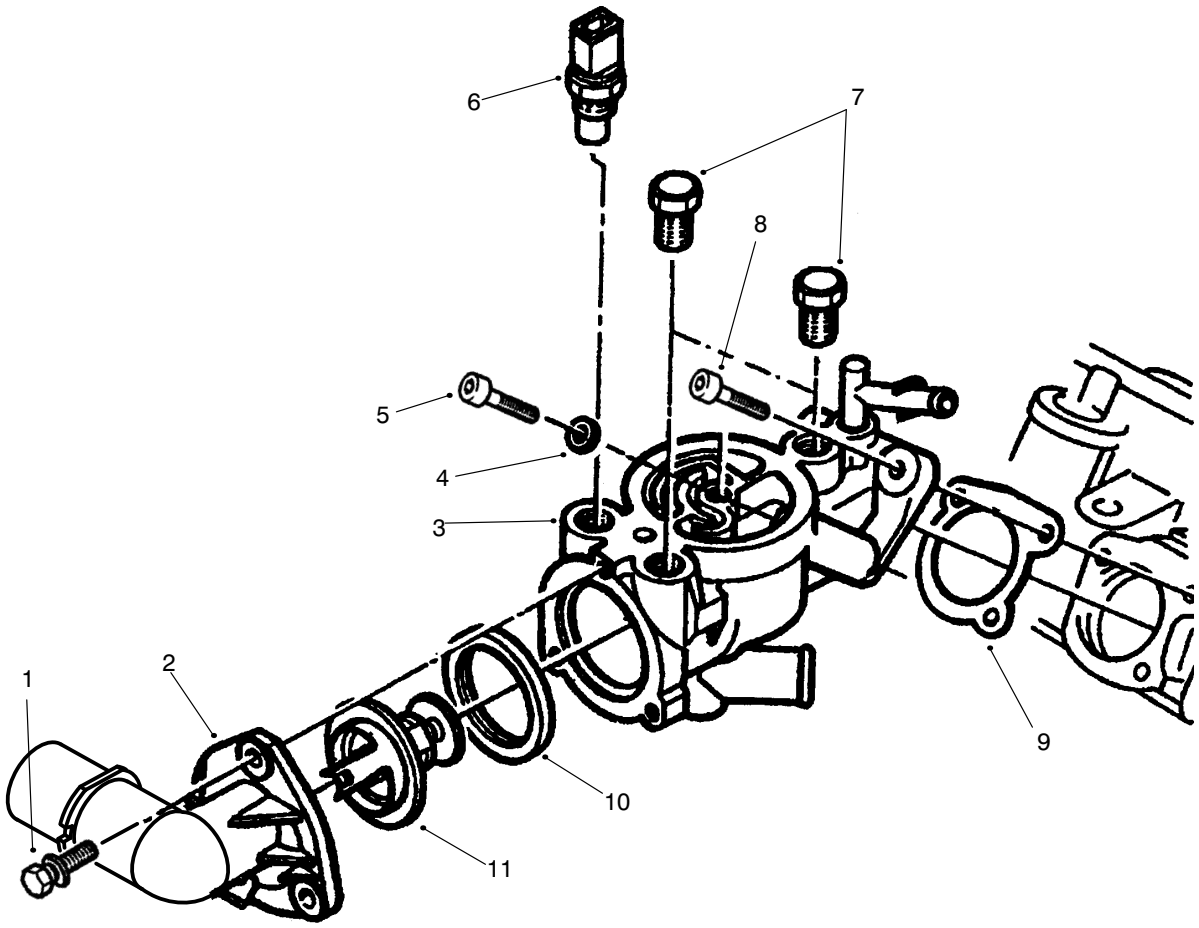



T−2143−3

# COLLECTOR ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 94−3131 | Screw | 3 |
| 2 | 94−3208 | Stub−Outlet | 1 |
| 3 | 98−9970 | Box−Outlet | 1 |
| 4 | 94−3207 | Ring | 1 |
| 5 | 94−3214 | Screw | 1 |
| 6 | 94−3211 | Temp Sending Unit | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 7 | 94−3212 | Plug | 2 |
| 8 | 94−3213 | Screw | 1 |
| 9 | 94−3206 | Gasket | 1 |
| 10 | 94−3210 | Gasket | 1 |
| 11 | 94−3209 | Thermostat | 1 |

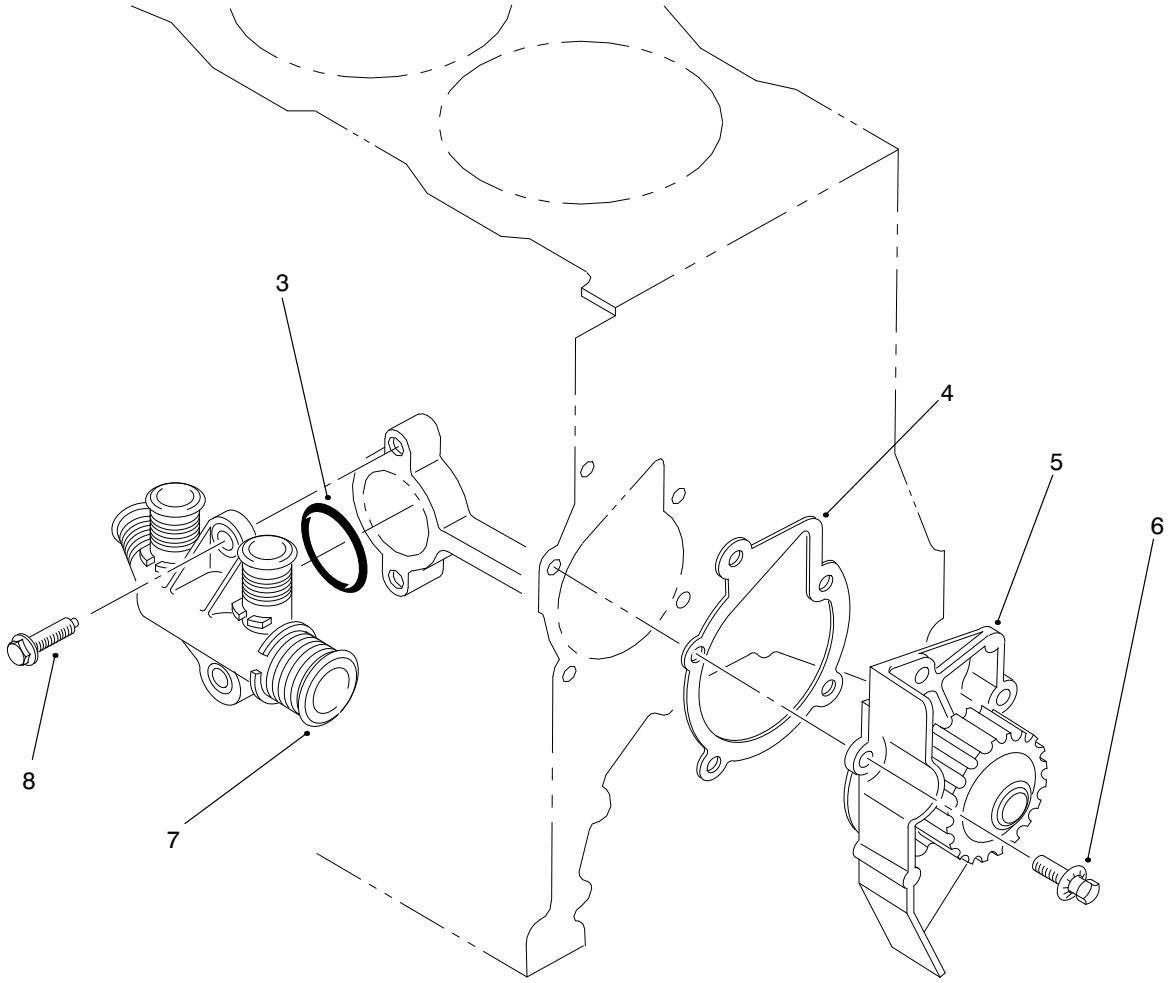



T−2144−1

# WATER PUMP ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 3 | 94−3197 | O−Ring | 1 |
| 4 | 94−3195 | Gasket−Pump, Water | 1 |
| 5 | 98−9972 | Cover−Pump, Water (Incl. Ref. #4) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 6 | 76−5500 | Screw | 5 |
| 7 | 94−3196 | Inlet−Water | 1 |
| 8 | 94−3198 | Screw | 2 |

3321−147

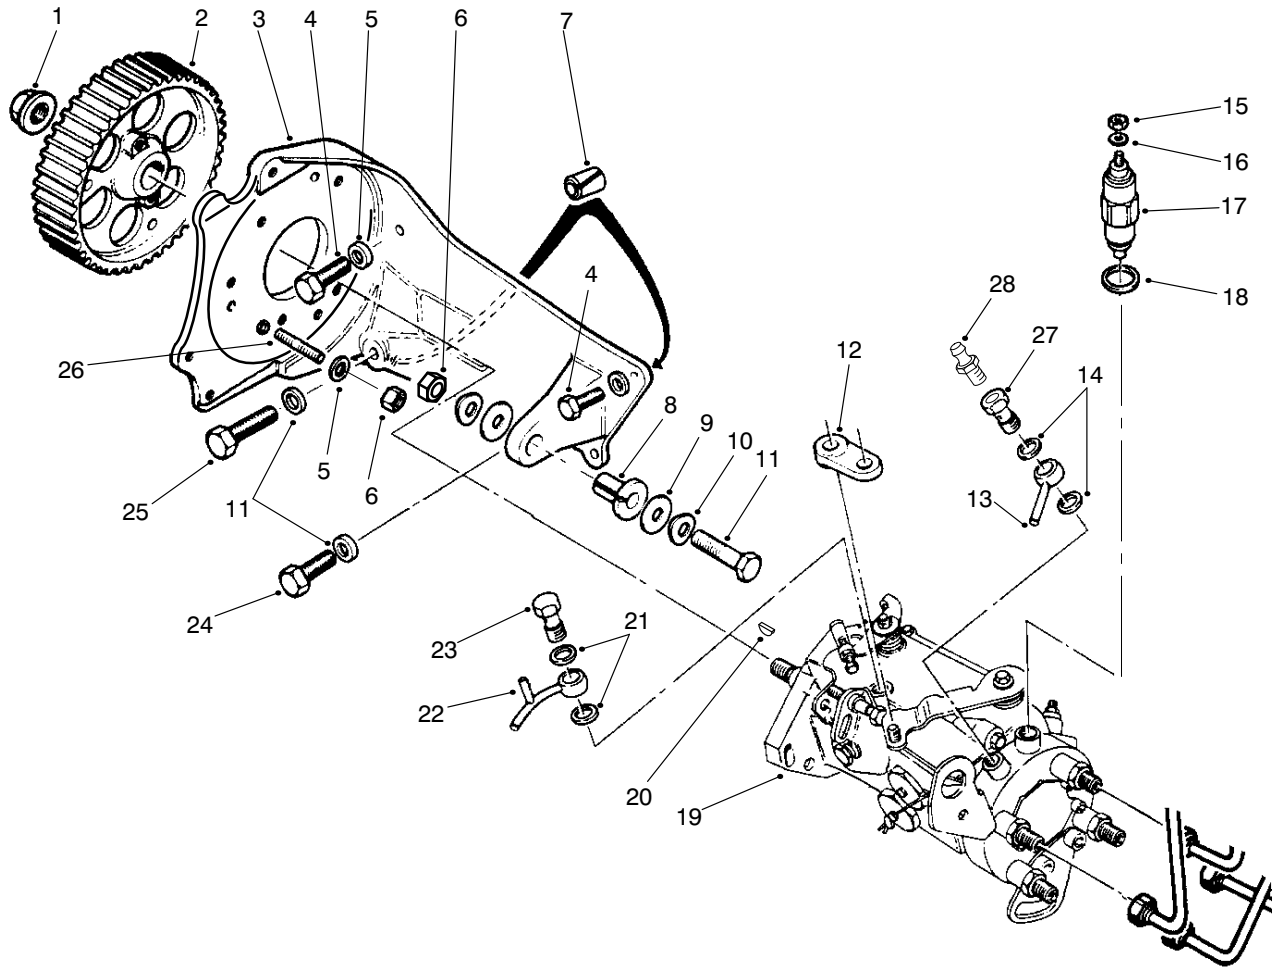



T−2146−1

# FUEL INJECTION PUMP ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 76−4950 | Nut | 1 |
| 2 | 76−4940 | Gear−Pump, Injection | 1 |
| 3 | 94−3220 | Bracket | 1 |
| 4 | 94−3225 | Screw | 2 |
| 5 | 76−4930 | Washer | 3 |
| 6 | 94−3165 | Nut | 4 |
| 7 | 74−8610 | Pin | 2 |
| 8 | 74−8630 | Bushing−Flange | 1 |
| 9 | 94−3224 | Washer−Flat | 2 |
| 10 | 94−3164 | Washer−Spring | 6 |
| 11 | 94−3221 | Screw | 1 |
| 12 | 74−8650 | Journal | 1 |
| 13 | 74−8670 | Union−Inlet | 1 |
| 14 | 74−8680 | Gasket | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 15 | 94−3251 | Nut | 1 |
| 16 | 74−8710 | Washer | 1 |
| 17 | 98−8806 | Valve−Solenoid | 1 |
| 18 | 94−3274 | O−Ring | 1 |
| 19 | 94−3219 | Pump−Injection | 1 |
| 20 | 94−3222 | Key | 1 |
| 21 | 74−8870 | Gasket | 2 |
| 22 | 94−3249 | Tube−Outlet | 1 |
| 23 | 94−3250 | Screw−Connection | 1 |
| 24 | 94−3161 | Screw | 1 |
| 25 | 94−3223 | Screw | 1 |
| 26 | 76−4910 | Stud | 3 |
| 27 | 94−9969 | Screw−Connection | 1 |
| 28 | 93−5835 | Screw−Purge | 1 |

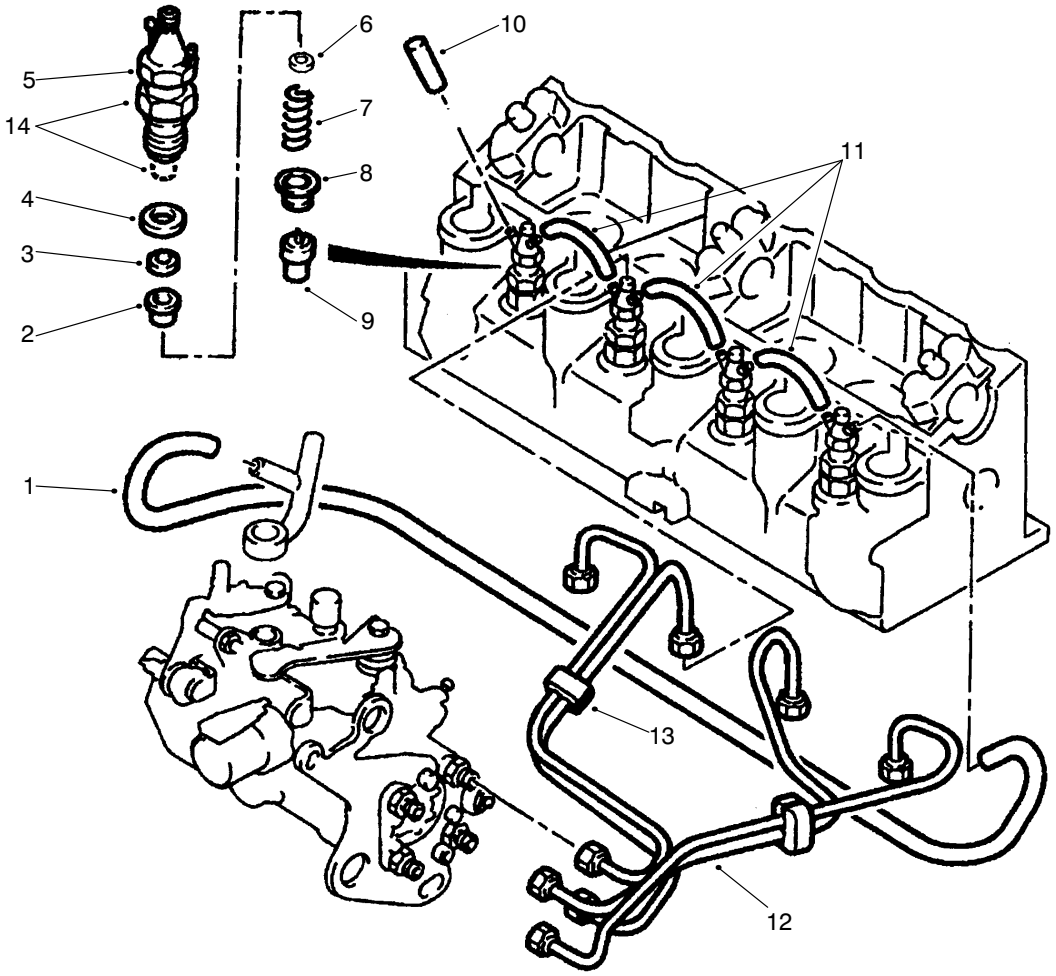



T−2145−2

# FUEL INJECTOR ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 94−3230 | Hose | 1 |
| 2 | 76−5540 | Plug | 4 |
| 3 | 76−5530 | Gasket−Injector | 4 |
| 4 | 94−3226 | Gasket−Injector | 4 |
| 5 | 76−5520 | Holder−Injector | 4 |
| 6 | 94−3232 | Washer−0.79 mm | 4 |
| * | 94−3233 | Washer−0.82 mm | 4 |
| * | 94−3234 | Washer−0.85 mm | 4 |
| * | 94−3235 | Washer−0.88 mm | 4 |
| * | 94−3236 | Washer−0.91 mm | 4 |
| * | 94−3237 | Washer−0.94 mm | 4 |
| * | 94−3238 | Washer−0.97 mm | 4 |
| * | 94−3239 | Washer−1.00 mm | 4 |
| * | 94−3240 | Washer−1.03 mm | 4 |
| * | 94−3241 | Washer−1.06 mm | 4 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 6 | 94−3242 | Washer−1.30 mm | 4 |
| * | 94−3243 | Washer−1.33 mm | 4 |
| * | 94−3244 | Washer−1.36 mm | 4 |
| * | 94−3245 | Washer−1.39 mm | 4 |
| * | 94−3246 | Washer−1.42 mm | 4 |
| * | 94−3247 | Washer−1.45 mm | 4 |
| * | 94−3248 | Washer−1.48 mm | 4 |
| 7 | 94−3228 | Spring | 4 |
| 8 | 94−3227 | Spacer | 4 |
| 9 | 94−8147 | Nozzle−Injector | 4 |
| 10 | 74−8770 | Plug | 1 |
| 11 | 94−3229 | Union | 3 |
| 12 | 74−8750 | Pipe | 1 |
| 13 | 94−3231 | Bracket | 2 |
| 14 | 76−5600 | Asm−Holder, Injector | 4 |


*Not Illustrated

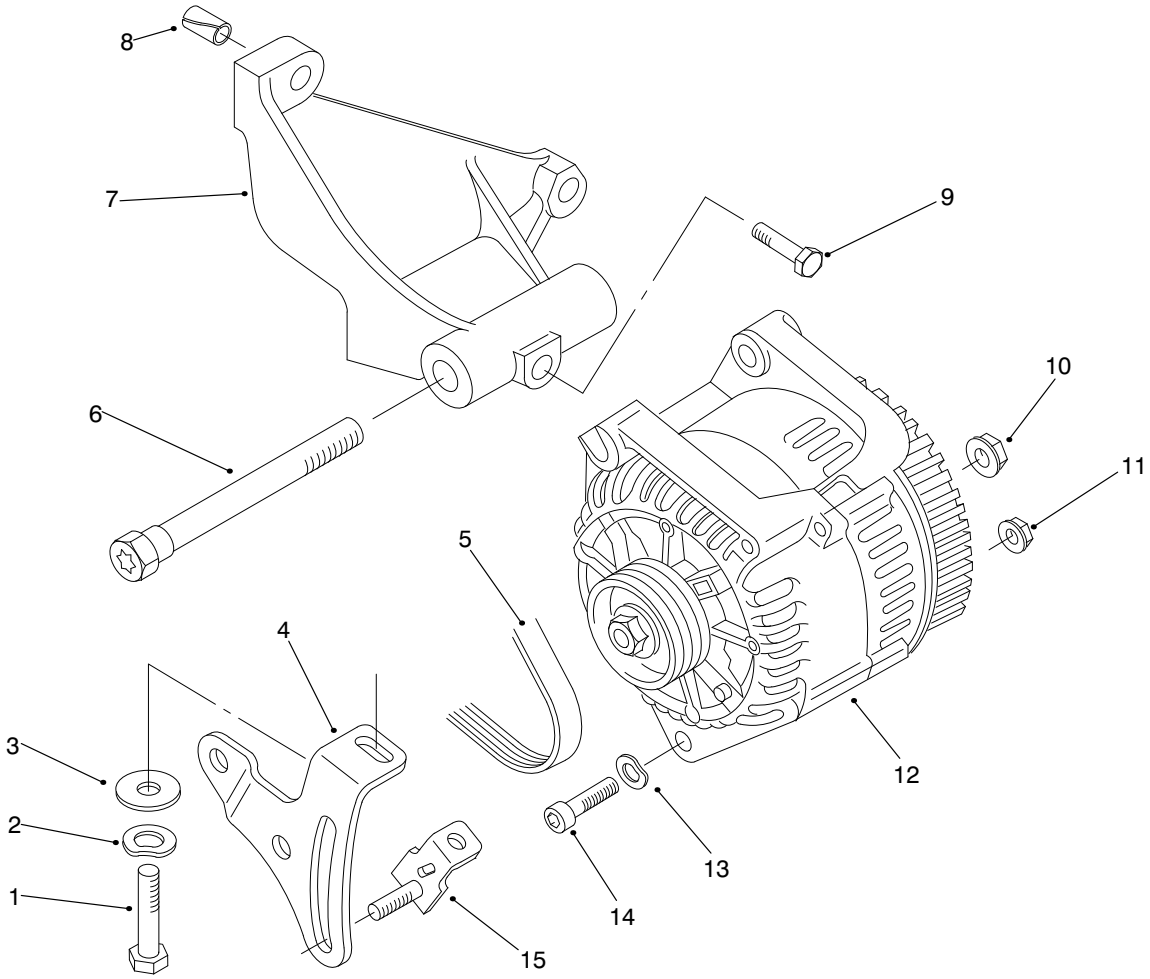


# ALTERNATOR ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 76−5060 | Screw | 1 |
| 2 | 76−5010 | Washer−Spring | 1 |
| 3 | 94−3260 | Washer−Flat | 1 |
| 4 | 94−3255 | Slide | 1 |
| 5 | 94−3256 | Belt | 1 |
| 6 | 94−3254 | Screw | 1 |
| 7 | 94−3253 | Bracket | 1 |
| 8 | 74−8610 | Pin | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 9 | 94−3259 | Screw | 1 |
| 10 | 94−3262 | Nut | 1 |
| 11 | 94−3261 | Nut | 1 |
| 12 | 94−3252 | Alternator | 1 |
| 13 | 94−3257 | Washer−Spring | 1 |
| 14 | 94−3258 | Screw | 1 |
| 15 | 76−4990 | Bracket | 1 |

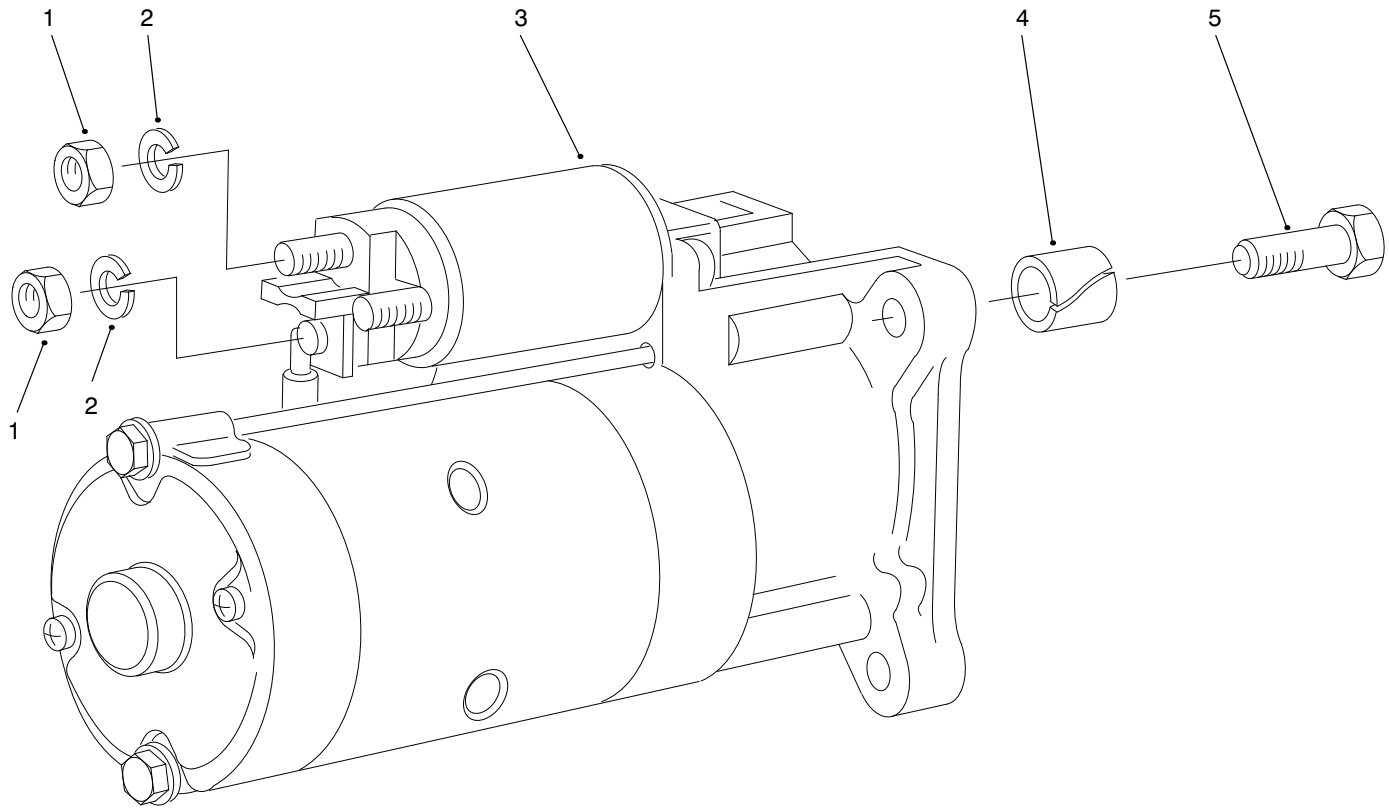



T–0968–1

# STARTER ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 46–0330 | Nut–Hex | 2 |
| 2 | 76–5570 | Washer–Lock | 2 |
| 3 | 94–3263 | Starter | 1 |
| 4 | 76–5590 | Sleeve–Spring | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 5 | 48–7810 | Screw–Mounting | 3 |
| * | 94–3275 | Solenoid–Starter | 1 |


*Not Illustrated

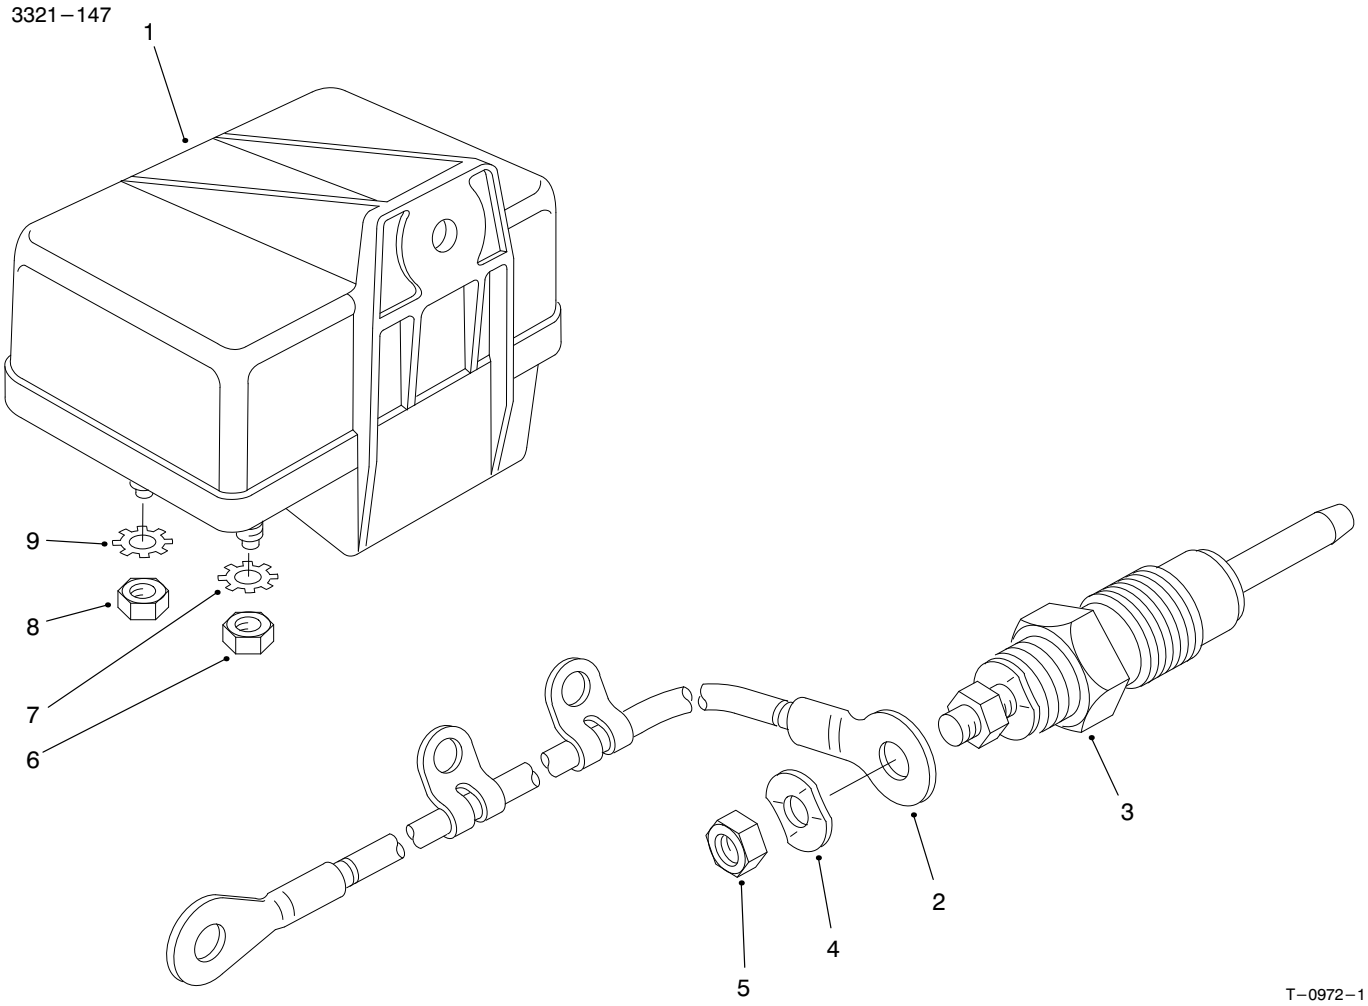


# GLOW PLUG & GLOW RELAY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 76–5260 | Relay–Glow Plug | 1 |
| 2 | 94–3265 | Cable–Glow Plug | 4 |
| 3 | 94–3264 | Plug–Glow | 4 |
| 4 | 76–5290 | Washer–Spring | 4 |
| 5 | 94–3266 | Nut–Hex. | 4 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 6 | 94–3267 | Nut–Lock | 1 |
| 7 | 76–5310 | Washer–E.T.L.W. | 1 |
| 8 | 94–3251 | Nut–Lock | 1 |
| 9 | 74–8710 | Washer–E.T.L.W. | 1 |

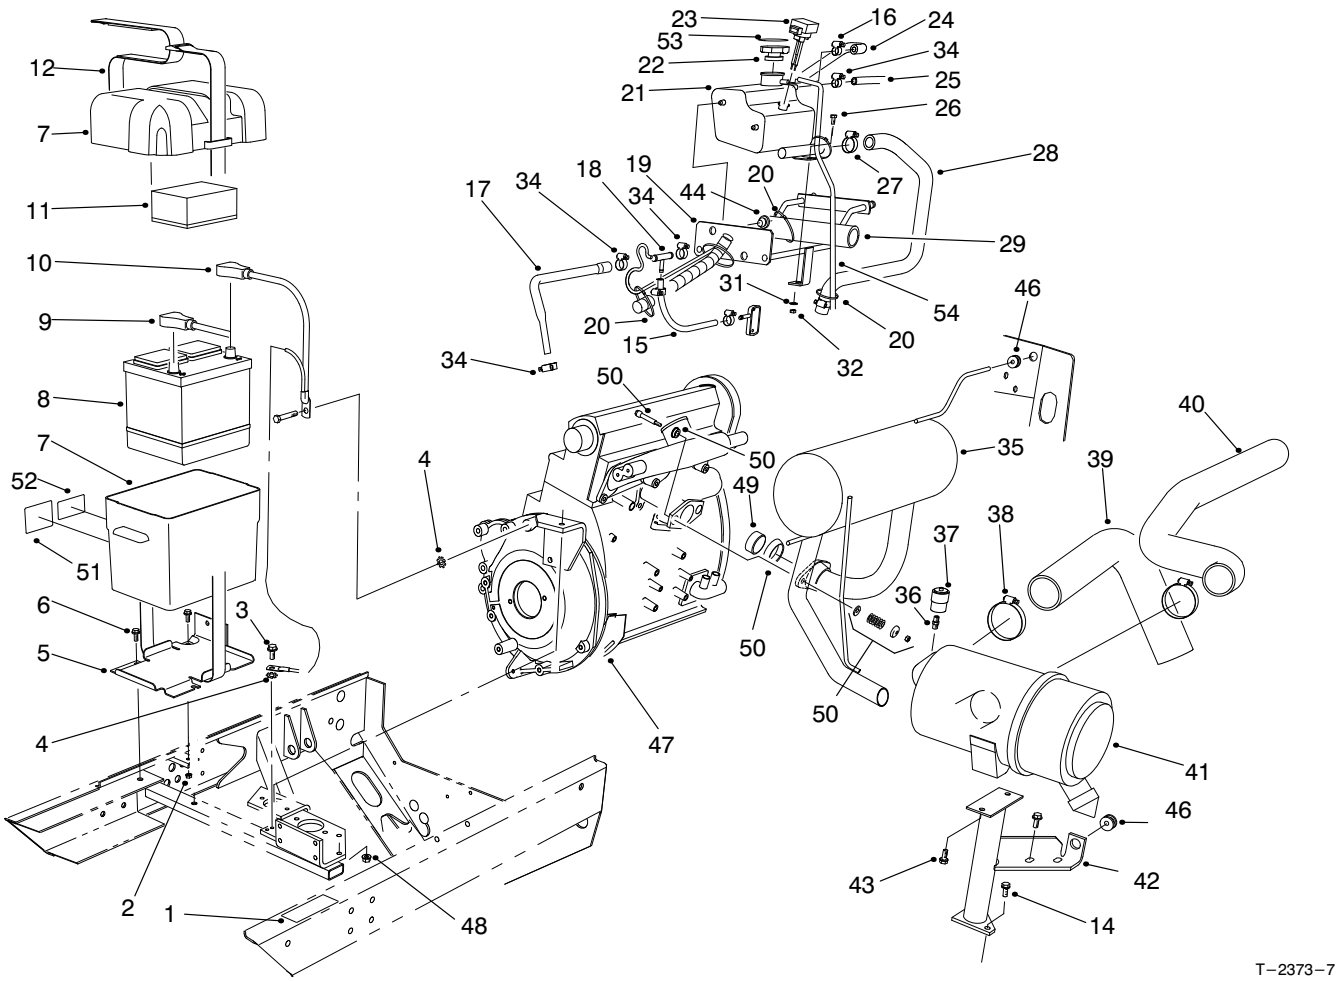


T−2373−7


# ENGINE COMPONENTS ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 93−1265 | Decal−Hot Surface | 1 |
| 1 | 94−4578 | Decal−Hot Surface (Japan) | 1 |
| 2 | 3296−29 | Nut−Lock | 1 |
| 4 | 3255−9 | Washer−Lock, Ext. Tooth | 2 |
| 5 | 93−7974 | Plate−Battery, Box | 1 |
| 6 | 3234−5 | Screw−FH | 3 |
| 7 | 93−7595 | Asm−Box, Battery | 1 |
| ‡8 | | Battery | 1 |
| 9 | 75−1370 | Cable−Battery, Positive | 1 |
| 10 | 94−1411 | Cable−Battery, Negative | 1 |
| 11 | 93−7968 | Pad−Foam, Battery | 1 |
| 12 | 94−1445 | Strap−Battery | 1 |
| 14 | 33105−030 | Screw−HHF | 2 |
| 15 | 63−7622 | Hose−Fuel | 1 |
| 16 | 2412−108 | Clamp−Hose | 3 |
| 17 | 94−2630 | Hose−Return | 1 |
| 18 | 93−4207 | Fitting−Tee | 1 |
| 19 | 94−1408 | Wireform−Overflow | 1 |
| 20 | 3290−378 | Tie−Cable | 5 |
| †21 | 98−1805 | Box−Degassing | 1 |
| †22 | 94−2800 | Cap−Radiator | 1 |
| 22 | 66−3240 | Cap−Radiator (Europe) | 1 |
| †23 | 94−9984 | Sensor−Water Level | 1 |
| 24 | 93−7591 | Hose−Return | 1 |
| 25 | 92−7424 | Hose−Overflow, Radiator | 1 |
| 26 | 33103−020 | Screw−HHF | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 27 | 2412−129 | Clamp−Hose | 2 |
| 28 | 93−7589 | Hose−Overflow | 1 |
| 29 | 93−4215 | Hose−Radiator, Upper Rear | 1 |
| 31 | 33093−00 | Washer | 1 |
| 32 | 33023−00 | Nut−Lock | 1 |
| 34 | 2412−36 | Clamp−Hose | 4 |
| 35 | 93−9178 | Muffler | 1 |
| * | 94−2849 | Muffler−Spark Arrestor | 1 |
| 36 | 94−1416 | Adapter−Indicator | 1 |
| 37 | 93−9164 | Indicator−Service | 1 |
| 38 | 2412−125 | Clamp−Hose | 2 |
| 39 | 94−2624 | Hose−Manifold | 1 |
| 40 | 93−7584 | Hose−Intake | 1 |
| 41 | 93−7485 | Asm−Filter, Air | 1 |
| 42 | 94−8108 | Support−Filter, Air | 1 |
| 43 | 33104−016 | Screw−HHF | 2 |
| †44 | 94−2801 | Grommet−Rubber | 2 |
| 46 | 94−2812 | Grommet | 2 |
| †47 | 77−3600 | Plate−Closing | 1 |
| 48 | 33005−00 | Nut−Hex. Flange | 2 |
| †49 | 94−2815 | Sleeve−Exhaust Flange | 1 |
| †50 | 94−2814 | Kit−Exhaust Coupler | 1 |
| 51 | 93−6668 | Decal−Charging (Europe) | 1 |
| 52 | 93−7276 | Decal−Danger (Europe) | 1 |
| 53 | 93−7840 | Decal−Cap (Europe) | 1 |
| 54 | 55−4130 | Hose − Fuel | 1 |

† Furnished with engine.
‡Obtain locally.

3321–147

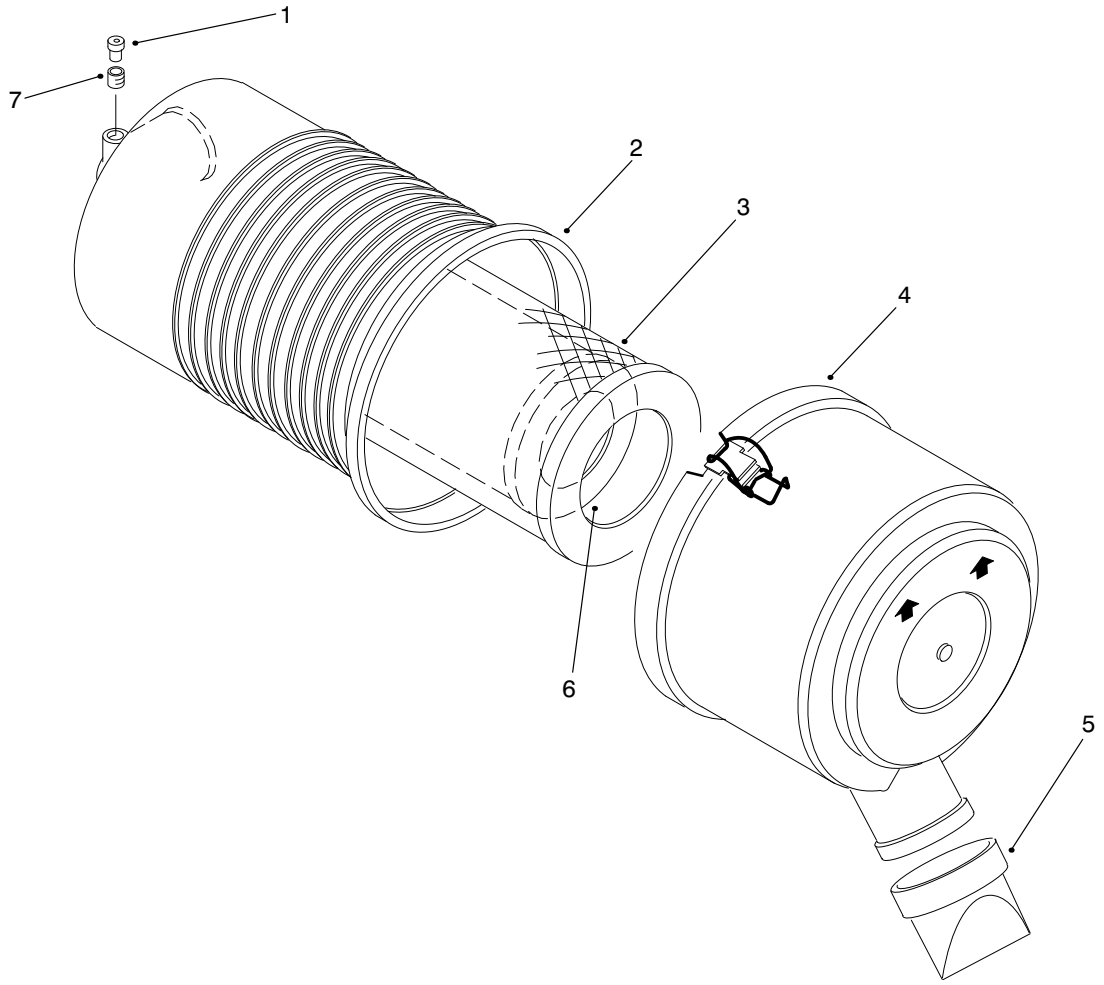



T–2076–1

# AIR CLEANER ASSEMBLY NO. 93–7485


| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 93–9164 | Indicator | 1 |
| 2 | | Asm–Body | 1 |
| 3 | 93–9162 | Filter–Primary | 1 |
| 4 | 93–5986 | Asm–Cover | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 5 | 94–1414 | Valve–Vacuator | 1 |
| 6 | 93–9163 | Filter–Safety | 1 |
| 7 | 94–1416 | Asm–Adaptor | 1 |

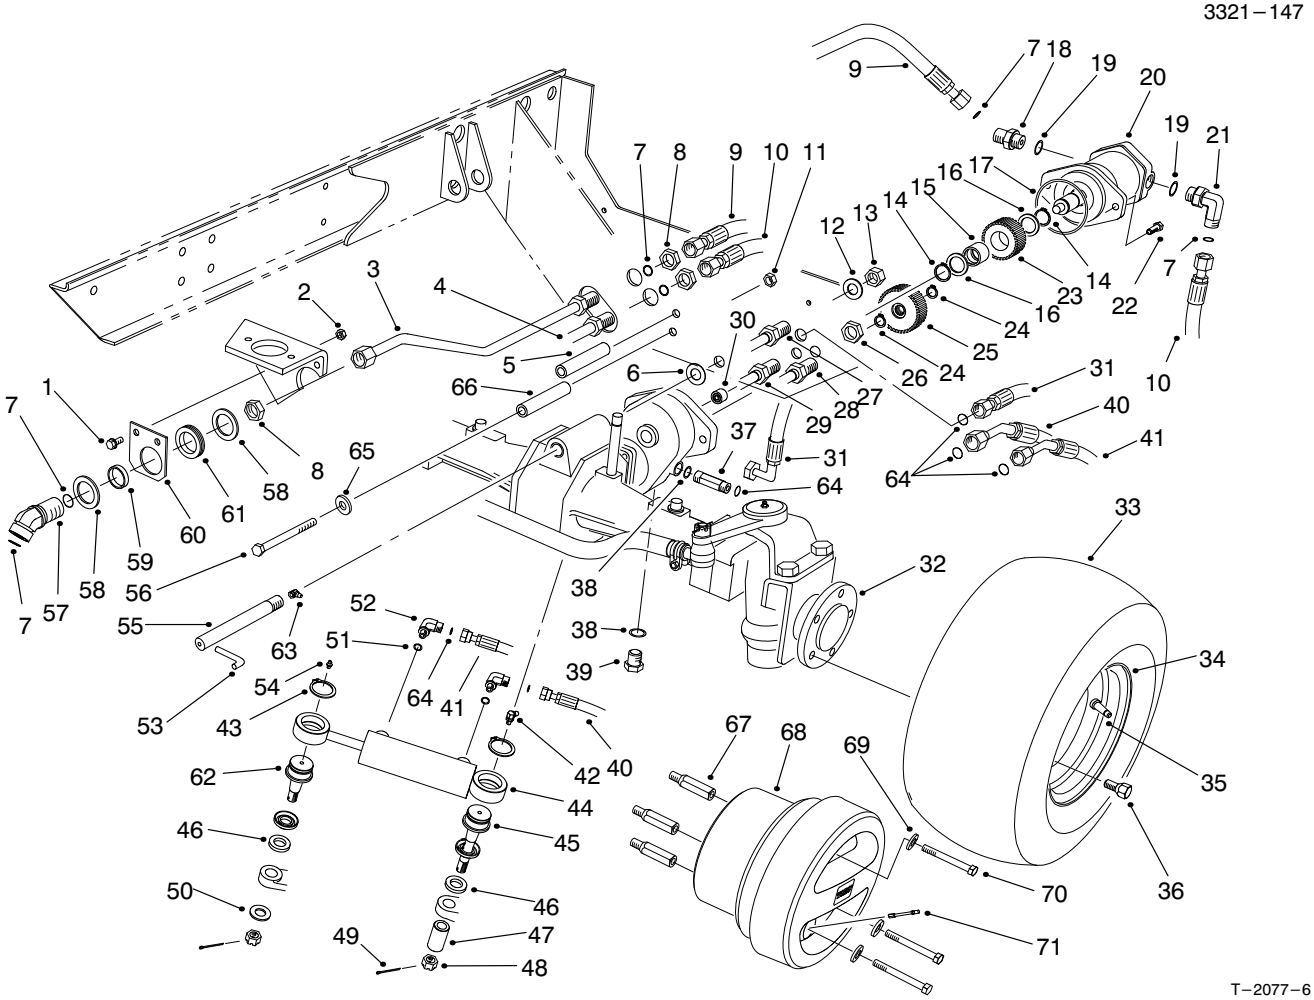


# 4−WD AXLE ASSEMBLY (Model No. 03804)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 323−6 | Screw−HH | 2 |
| 2 | 32128−21 | Nut−HHF | 2 |
| 3 | 92−7472 | Asm−Tube, Rear (Incl. Ref. #7) | 1 |
| 4 | 92−7473 | Asm−Tube, Rear (Incl. Ref. #7) | 1 |
| 5 | 76−8350 | Stop−Axle, 4WD | 2 |
| 6 | 93−7247 | Washer−Thrust | 1 |
| 7 | 237−58 | O−Ring | 6 |
| 8 | 340−126 | Nut−Bulkhead | 3 |
| 9 | 92−7536 | Asm−Hose, Rear Motor | 1 |
| 10 | 92−7537 | Asm−Hose, Rear Motor | 1 |
| 11 | 3296−23 | Nut−Lock | 4 |
| 12 | 3256−29 | Washer−Flat | 1 |
| 13 | 94−8000 | Nut−Lock | 1 |
| 14 | 32151−96 | Ring−Retaining | 1 |
| 15 | 71−4580 | Clutch−Roller | 1 |
| 16 | 71−4590 | Washer−Thrust | 2 |
| 17 | 237−166 | O−Ring | 1 |
| 18 | 340−9 | Fitting−Hydraulic (Incl. Ref. #7 & 19) | 1 |
| 19 | 237−81 | O−Ring | 2 |
| 20 | 92−7386 | Motor−Hydraulic | 1 |
| 21 | 340−142 | Fitting−Hydraulic 90° (Incl. Ref. #7 & 19) | 1 |
| 22 | 325−4 | Screw−HH | 2 |
| 23 | 94−3099 | Gear−Driver | 1 |
| 24 | 32120−15 | Ring−Retaining | 2 |
| 25 | 94−3098 | Gear−Driven | 1 |
| 26 | 340−70 | Nut−Lock | 3 |
| 27 | 92−7553 | Asm−Tube, Rear Drain (Incl. Ref. #64) | 1 |
| 28 | 92−7495 | Asm−Tube, Steering (Incl. Ref. #64) | 1 |
| 29 | 92−7494 | Asm−Tube, Steering (Incl. Ref. #64) | 1 |
| 30 | 74−5700 | Bearing−Needle | 1 |
| 31 | 92−7534 | Assembly−Hose | 1 |
| 32 | 98−2447 | Axle−4WD | 1 |
| 33 | 86−5910 | Tire | 2 |
| 34 | 217−125 | Wheel | 2 |
| 35 | 232−27 | Stem−Valve | 2 |
| 36 | 74−5500 | Bolt−Wheel | 10 |
| 37 | 340−2 | Adapter (Incl. Ref. #38 & 64) | 1 |
| 38 | 237−42 | O−Ring | 2 |
| 39 | 353−508 | Plug (Incl. Ref. #38) | 1 |
| 40 | 92−7539 | Asm−Hose | 1 |
| 41 | 92−7538 | Asm−Hose | 1 |
| 42 | 302−60 | Fitting−Grease 90° | 1 |
| 43 | 98−9973 | Ring−Retaining | 2 |
| 44 | 94−8141 | Cylinder−Hydraulic | 1 |
| 45 | 92−5839 | Ball Joint | 1 |
| 46 | 92−5833 | Spacer−Ball Joint | 2 |
| 47 | 92−5844 | Spacer−Ball Joint | 1 |

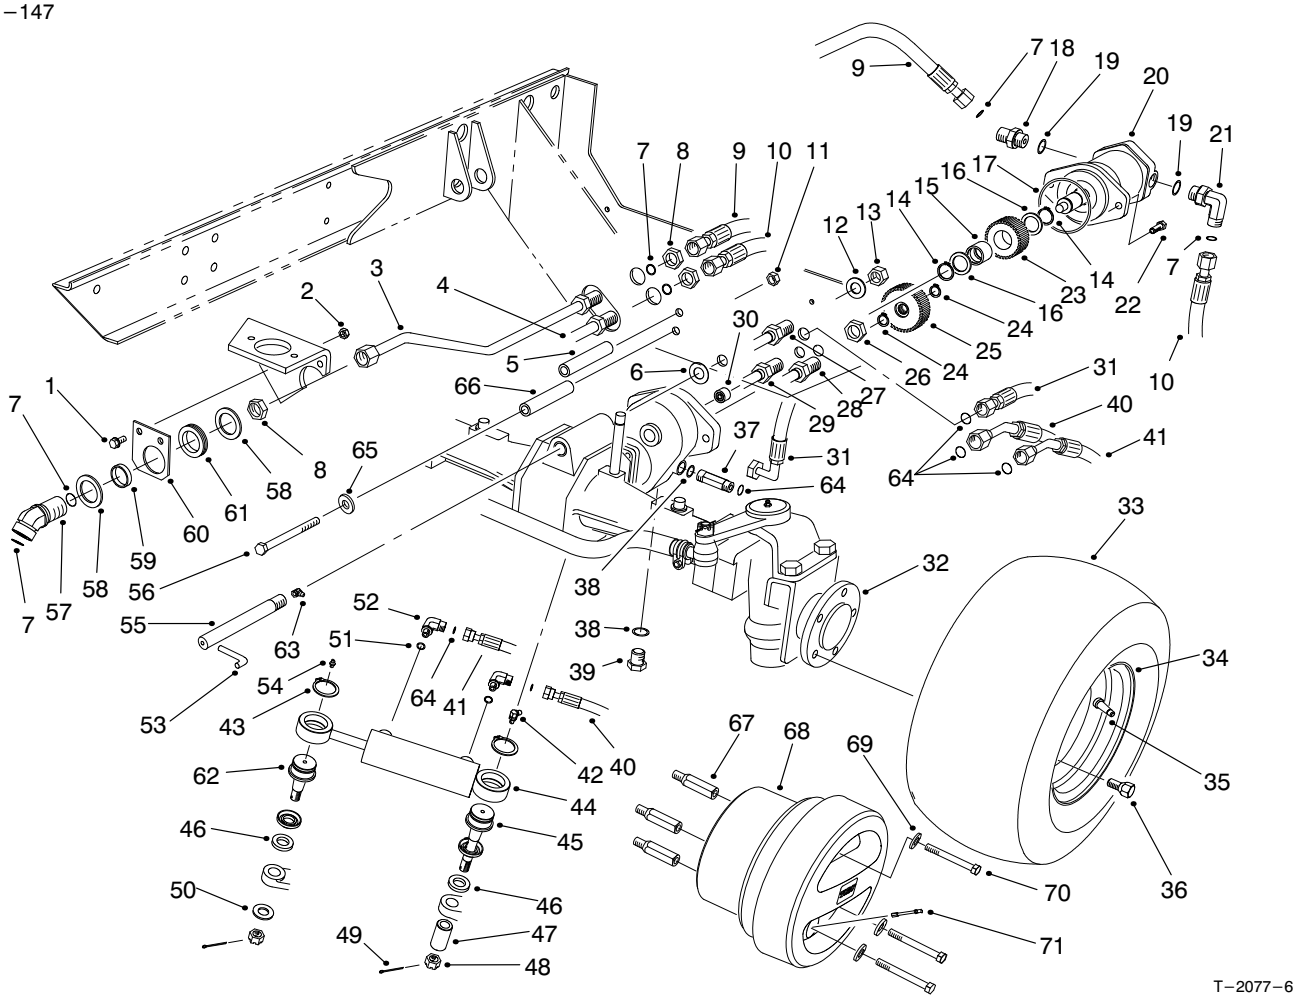



# 4–WD AXLE ASSEMBLY (Model No. 03804)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 48 | 32136–14 | Nut–Hex. Slotted | 2 |
| 49 | 3272–12 | Pin–Cotter | 4 |
| 50 | 92–5836 | Washer–Axle | 1 |
| 51 | 237–78 | O–Ring | 2 |
| 52 | 340–97 | Fitting–Hydraulic 90˚ (Incl. Ref. #51 & 64) | 2 |
| 53 | 92–7604 | Pin–Stop | 1 |
| 54 | 302–5 | Fitting–Grease | 1 |
| 55 | 94–8115 | Pin–Axle, Pivot | 1 |
| 56 | 325–33 | Screw–HH | 4 |
| 57 | 92–7646 | Fitting–Hydraulic 45˚ (Incl. Ref. #7) | 1 |
| 58 | 69–8910 | Washer | 2 |
| 59 | 69–8900 | Spacer | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 60 | 92–7552 | Bracket–Bulkhead | 1 |
| 61 | 240–7 | Grommet | 1 |
| 62 | 92–5838 | Ball Joint | 1 |
| 63 | 302–33 | Fitting–Grease | 1 |
| 64 | 237–22 | O–Ring | 6 |
| 65 | 3256–26 | Washer | 1 |
| 66 | 88–1550 | Stop–Axle | 2 |
| 67 | 94–2806 | Adapter–Nut (Europe) | 6 |
| 68 | 94–3052 | Weight–Wheel (Europe) | 2 |
| 69 | 3256–26 | Washer–Flat (Europe) | 6 |
| 70 | 3213–14 | Screw–HH | 6 |
| 71 | 94–3063 | Extension–Stem, Valve (Europe) | 2 |

*Not Illustrated

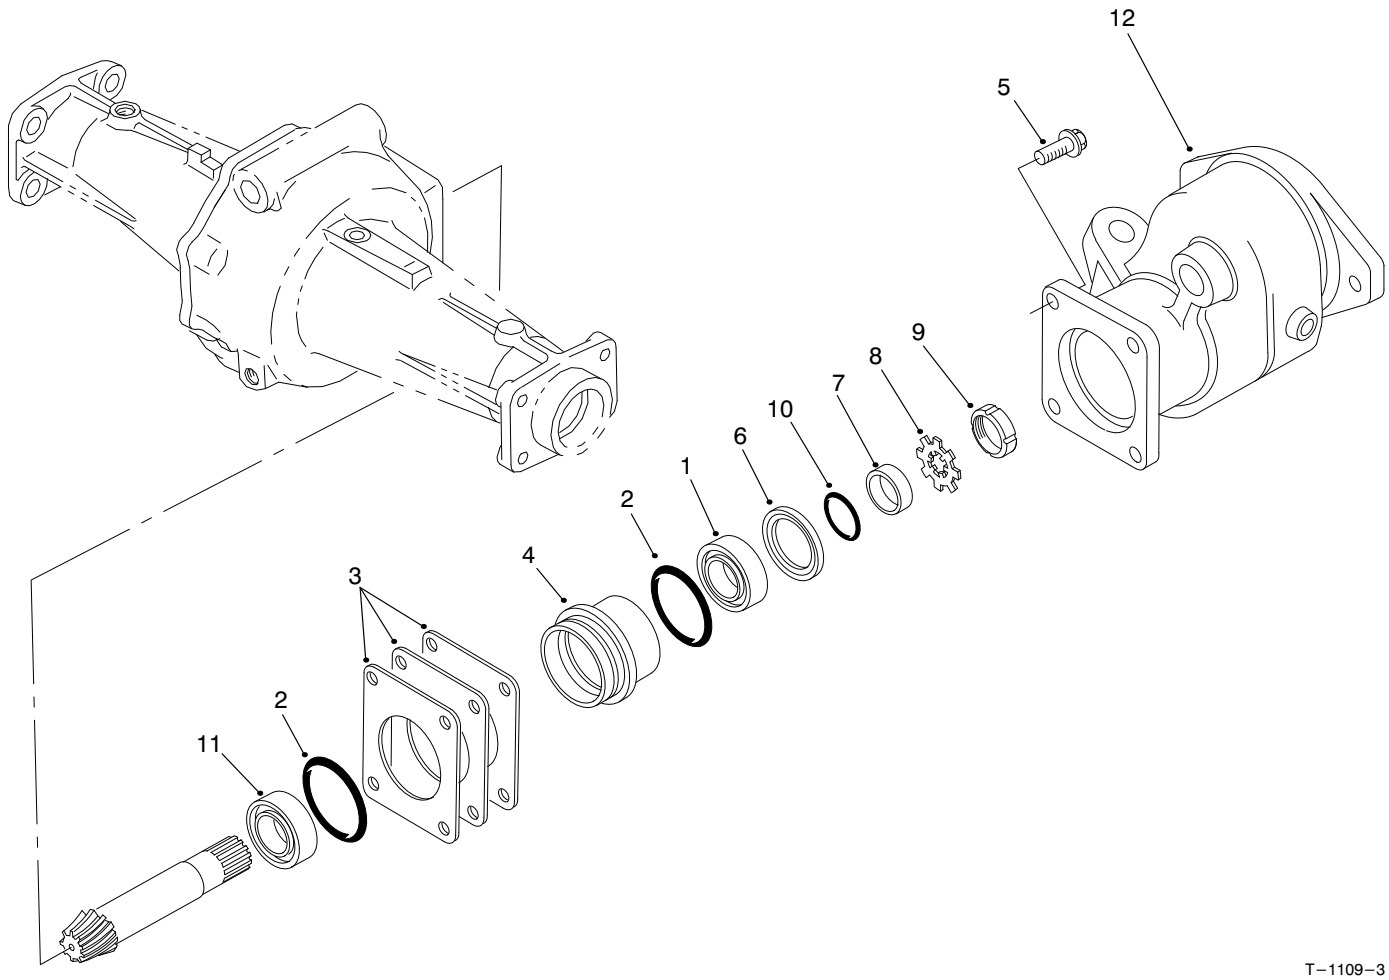


T−1109−3


# SLEEVE ASSEMBLY
# AXLE NO. 98−2447 (Model No. 03804 Only)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 76−7330 | Bearing | 1 |
| 2 | 76−7400 | O−Ring | 2 |
| 3 | 76−7410 | Shim−0.1 mm | A/R |
| * | 76−7420 | Shim−0.2 mm | A/R |
| * | 76−7430 | Shim−0.4 mm | A/R |
| 4 | 76−7320 | Sleeve | 1 |
| 5 | 93−7773 | Bolt | 4 |
| 6 | 76−7340 | Seal−Oil | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 7 | 76−7350 | Bushing | 1 |
| 8 | 76−7380 | Washer | 1 |
| 9 | 76−7390 | Nut−Lock | 1 |
| 10 | 76−7360 | O−Ring | 1 |
| 11 | 76−7370 | Bearing | 1 |
| 12 | 76−8070 | Adapter | 1 |
| * | 77−4010 | Shim Set (Incl. Ref. #3) | 1 |

*Not Illustrated

3321−147

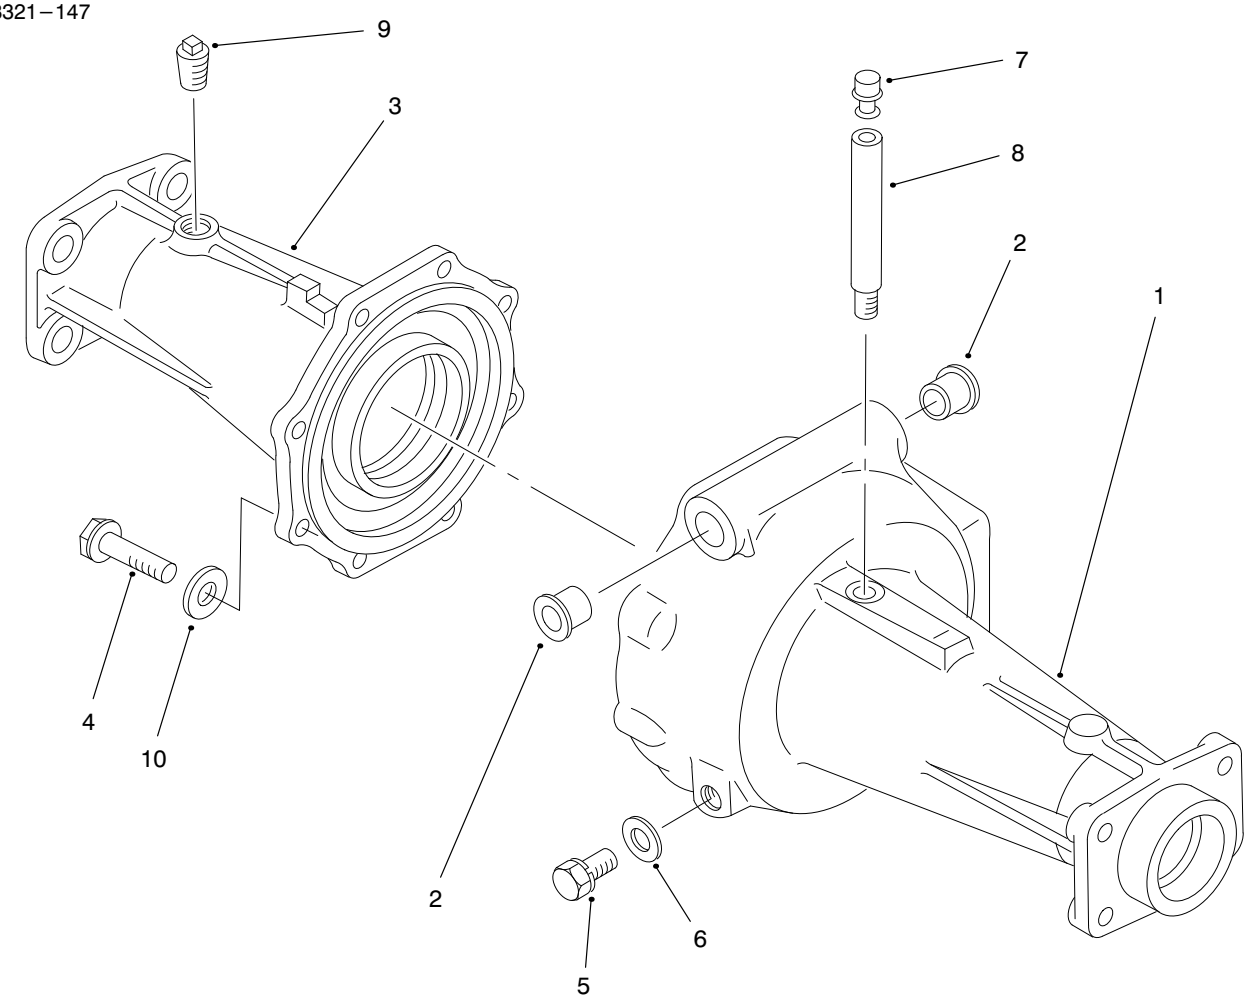



T−1112−2

# AXLE HOUSING ASSEMBLY
# AXLE NO. 98−2447 (Model No. 03804 Only)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 93−7778 | Housing−Axle A | 1 |
| 2 | 93−7787 | Bushing−Flange | 2 |
| 3 | 93−7779 | Housing−Axle B | 1 |
| 4 | 93−7782 | Screw−HHF | 8 |
| 5 | 76−7110 | Plug | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 6 | 76−7120 | Seal−Washer | 1 |
| 7 | 76−7480 | Plug−Vent | 1 |
| 8 | 76−7470 | Pipe | 1 |
| 9 | 76−7140 | Plug | 1 |
| 10 | 93−7781 | Washer | 8 |

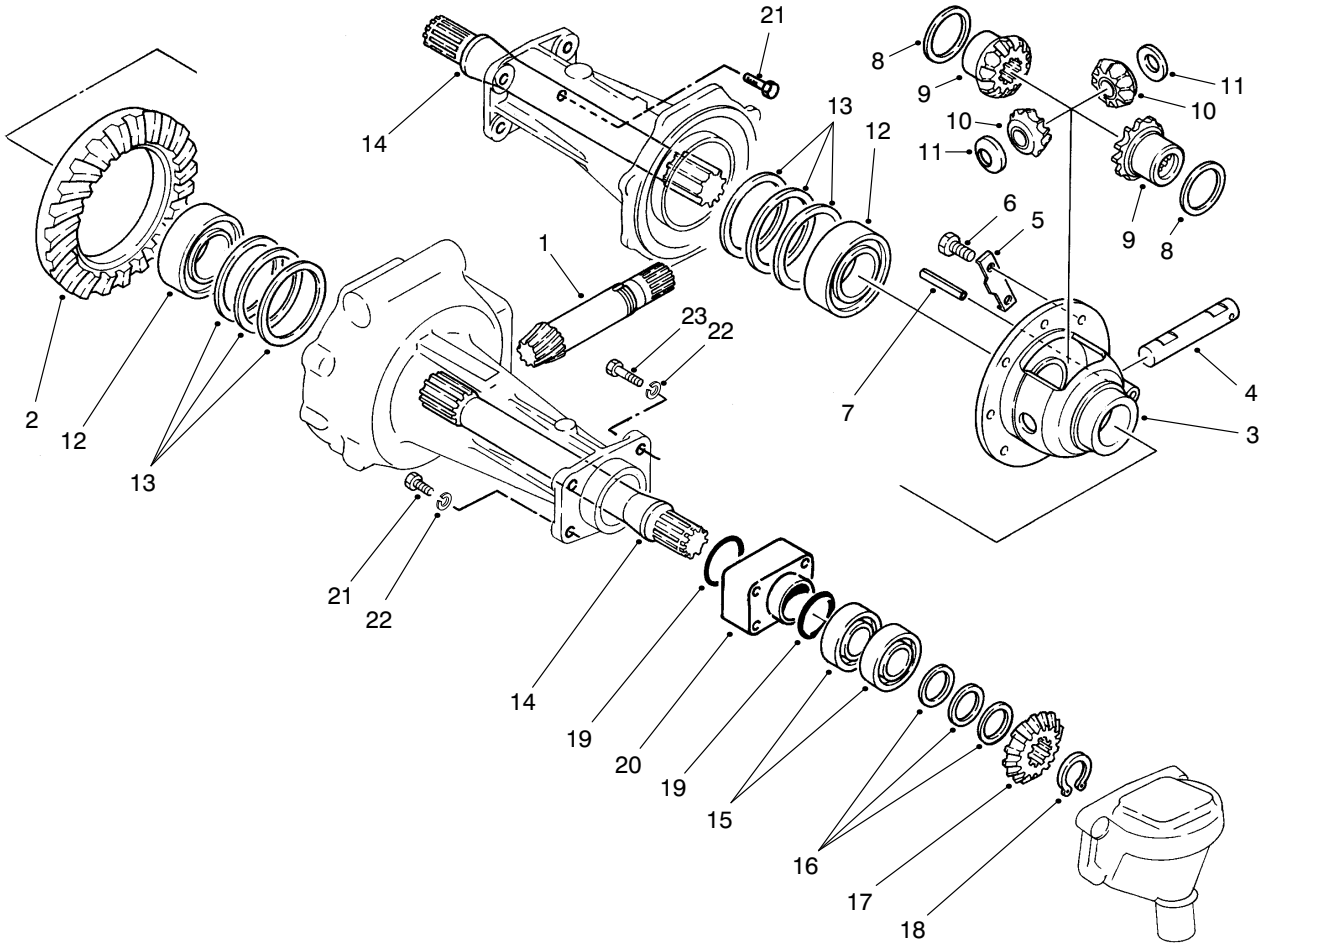



T−1111−2

# DIFFERENTIAL & SHAFT ASSEMBLY
# AXLE NO. 98−2447 (Model No. 03804 Only)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 76−7250 | Shaft−Drive | 1 |
| 2 | 76−7240 | Ring−Gear | 1 |
| 3 | 76−7170 | Case−Differential | 1 |
| 4 | 76−7200 | Shaft−Pinion | 1 |
| 5 | 76−7230 | Washer−Lock | 4 |
| 6 | 76−7260 | Bolt | 8 |
| 7 | 76−7270 | Pin−Spring | 1 |
| 8 | 76−7220 | Washer−Thrust | 2 |
| 9 | 76−7190 | Gear−Side | 2 |
| 10 | 76−7180 | Pinion−Mate | 2 |
| 11 | 76−7210 | Washer−Thrust | 2 |
| 12 | 76−7280 | Bearing | 2 |
| 13 | 76−7290 | Shim−0.1 mm | A/R |
| * | 76−7300 | Shim−0.2 mm | A/R |
| * | 76−7310 | Shim−0.3 mm | A/R |
| 14 | 76−7490 | Shaft−Differential | 2 |
| 15 | 76−7500 | Bearing | 4 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 16 | 76−7520 | Shim−0.1 mm | A/R |
| * | 76−7530 | Shim−0.2 mm | A/R |
| * | 76−7540 | Shim−0.4 mm | A/R |
| 17 | 76−7510 | Pinion−14T | 2 |
| 18 | 76−7550 | Ring−Retaining | 2 |
| 19 | 76−7580 | O−Ring | 4 |
| 20 | 76−7590 | Spacer | 2 |
| 21 | 76−7600 | Bolt−Reamer | 2 |
| 22 | 76−7620 | Washer−Lock | 8 |
| 23 | 76−7610 | Bolt | 6 |
| * | 76−7160 | Asm−Gear Case (Incl. Ref. #2−11) | 1 |
| * | 77−4000 | Shim Set (Incl. Ref. #13) | 1 |
| * | 77−4020 | Shim Set (Incl. Ref. #16) | 1 |

*Not Illustrated

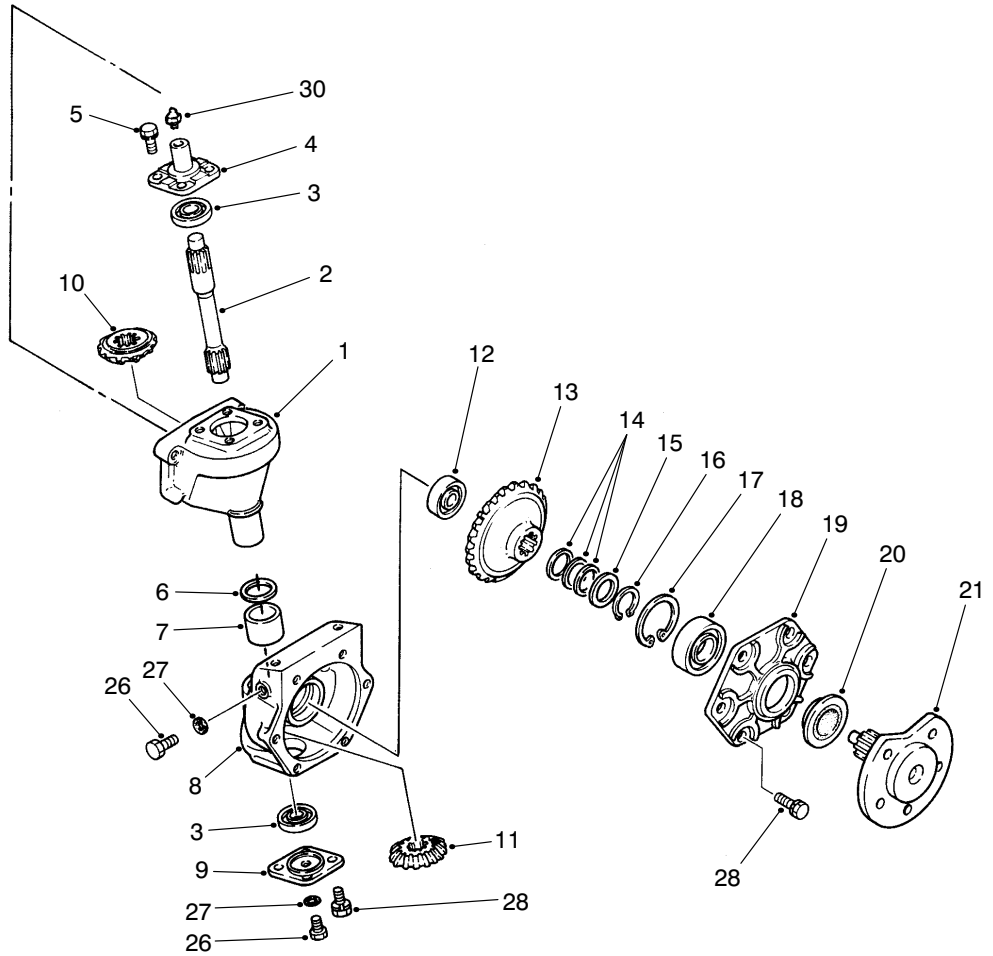



T−1110−1

# STEERING GEAR CASE ASSEMBLY
# AXLE NO. 98−2447 (Model No. 03804 Only)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 76−7560 | Case−Gear | 2 |
| 2 | 76−7650 | Shaft−Final Drive | 2 |
| 3 | 76−7670 | Bearing | 4 |
| 4 | 76−7660 | Holder−20 mm L.H. | 1 |
| * | 76−7630 | Holder−25 mm R.H. | 1 |
| 5 | 76−7640 | Bolt | 8 |
| 6 | 76−7740 | Seal−Oil | 2 |
| 7 | 76−7730 | Bushing | 2 |
| 8 | 76−7680 | Case−Final Drive | 2 |
| 9 | 76−7770 | Cover | 2 |
| 10 | 76−7510 | Pinion−14T | 2 |
| 11 | 76−7750 | Pinion−15T | 2 |
| 12 | 94−2803 | Bearing | 2 |
| 13 | 76−7840 | Gear−Bevel | 2 |
| 14 | 76−7890 | Shim−0.15 mm | A/R |
| * | 76−7900 | Shim−0.2 mm | A/R |
| * | 76−7910 | Shim−0.4 mm | A/R |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 15 | 76−7880 | Spacer | 2 |
| 16 | 76−7920 | Ring−Retaining | 2 |
| 17 | 76−7930 | Ring−Retaining | 2 |
| 18 | 93−7775 | Bearing | 2 |
| 19 | 76−7810 | Holder−Bearing | 2 |
| 20 | 76−7870 | Seal−Oil | 2 |
| 21 | 76−7830 | Shaft−Wheel | 2 |
| 26 | 76−7110 | Plug | 4 |
| 27 | 76−7120 | Seal−Washer | 4 |
| 28 | 76−7640 | Bolt | 20 |
| 30 | 76−7960 | Fitting−Grease | 2 |
| * | 77−4030 | Shim Set (Incl. Ref. #14) | 1 |

*Not Illustrated

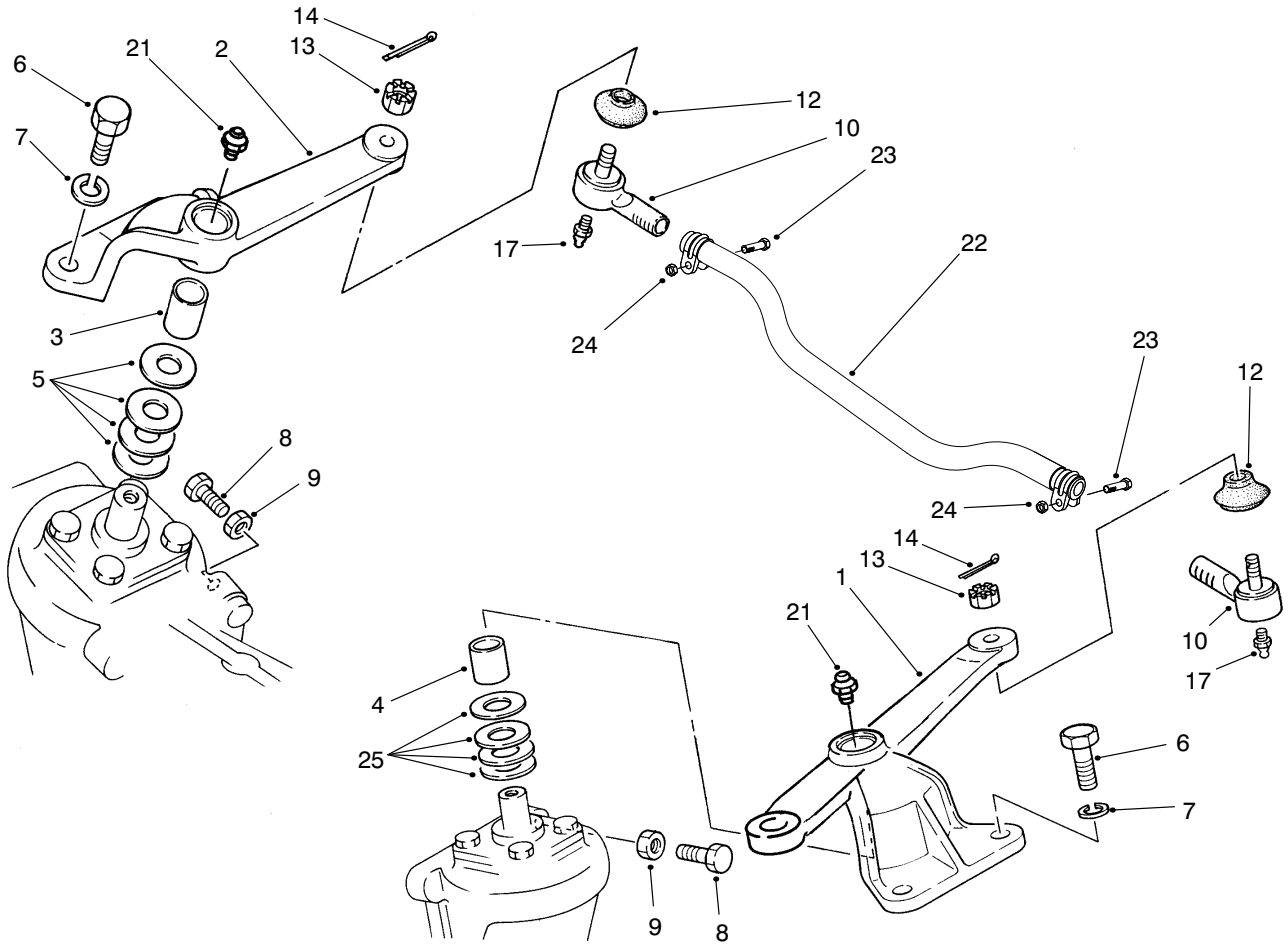



T−2937−1

# STEERING ARM LINKAGE
# AXLE NO. 98−2447 (Model No. 03804 Only)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 98−2444 | Arm−Drag Link | 1 |
| 2 | 98−2446 | Arm−Tie Rod | 1 |
| 3 | 76−4260 | Bushing | 1 |
| 4 | 76−7950 | Bushing | 1 |
| 5 | 76−7820 | Shim−1.0 mm | A/R |
| * | 76−7970 | Shim−1.4 mm | A/R |
| * | 76−7980 | Shim−1.2 mm | A/R |
| * | 76−7990 | Shim−.08 mm | A/R |
| 6 | 76−8000 | Bolt | 4 |
| 7 | 76−8010 | Washer | 2 |
| 8 | 76−7710 | Bolt | 2 |
| 9 | 76−7720 | Nut | 4 |
| 10 | 2411−45 | Tie Rod End | 2 |
| 12 | 71−4760 | Seal | 2 |
| 13 | 32136−13 | Nut−Hex. Slotted | 2 |
| 14 | 3272−7 | Pin−Cotter | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 17 | 302−55 | Fitting−Grease | 2 |
| 21 | 76−7960 | Fitting−Grease | 2 |
| 22 | 98−8841 | Bar & Clamp Assembly | 1 |
| 23 | 323−9 | Screw−HH | 2 |
| 24 | 3296−39 | Nut−Hex. Lock | 2 |
| 25 | 76−7700 | Shim−0.8 mm | A/R |
| * | 76−7760 | Shim−1.0 mm | A/R |
| * | 76−7780 | Shim−1.2 mm | A/R |
| * | 76−7790 | Shim−1.4 mm | A/R |
| * | 77−4050 | Shim Set (Incl. Ref. #5) | 1 |
| * | 77−4040 | Shim Set (Incl. Ref. #25) | 1 |
| * | 98−8838 | Tie Rod−4WD (Incl. Ref. #10−13, 17 & 22−24) | 1 |

*Not Illustrated

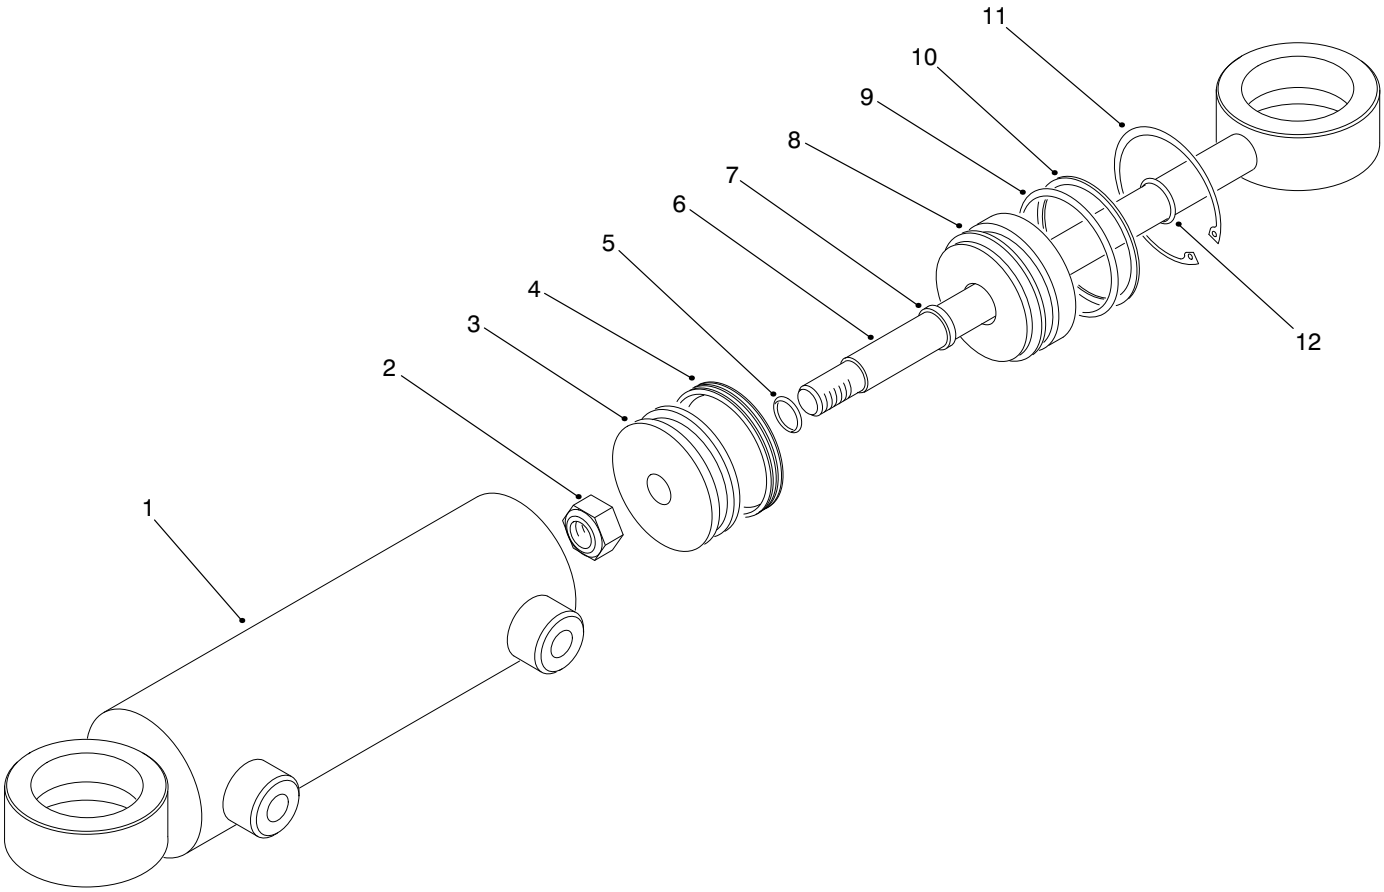



T−2452−1

# HYDRAULIC CYLINDER NO. 94−8141 (Model No. 03804)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 94−9955 | Asm−Barrel | 1 |
| 2 | 32152−10 | Nut−Lock | 1 |
| 3 | 94−9957 | Piston | 1 |
| 4 | | Uniring | 1 |
| 5 | | O−Ring | 1 |
| 6 | 94−9956 | Asm−Piston Rod | 1 |
| 7 | | Seal−Rod | 1 |
| 8 | 94−9958 | Gland−Cylinder | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 9 | | O−Ring | 1 |
| 10 | | Backup | 1 |
| 11 | 32120−8 | Ring−Retaining | 1 |
| 12 | | O−Ring | 1 |
| * | 86−5390 | Kit−Seal (Incl. Ref. #4, 5, 7, 9, 10 & 12) | 1 |


*Not Illustrated

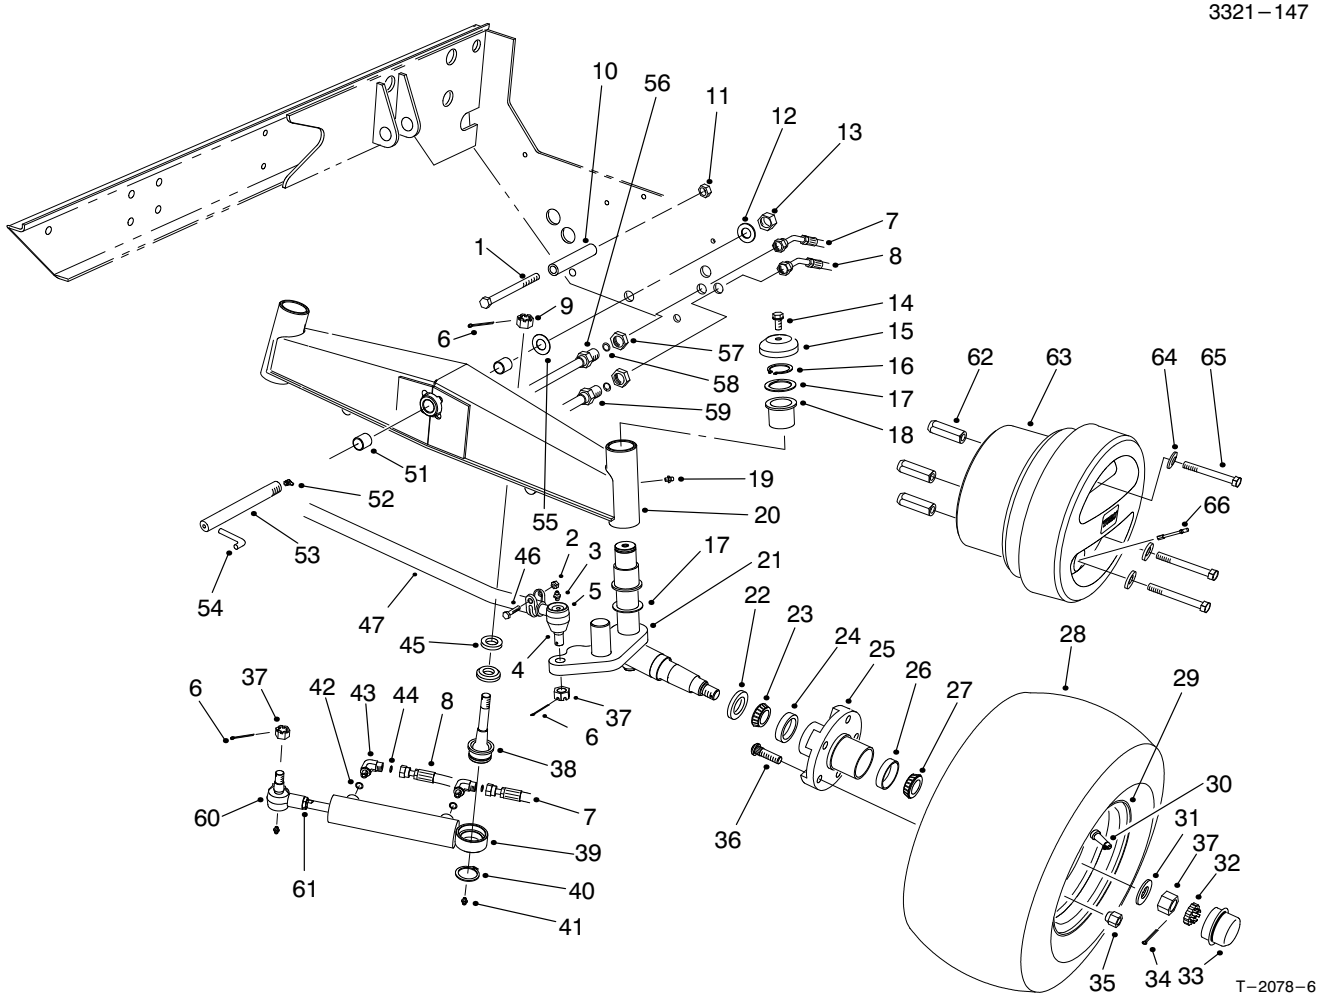


# 2−WD REAR AXLE ASSEMBLY (Model No. 03803)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 325−20 | Screw−HH | 2 |
| 2 | 3296−39 | Nut−Hex. Lock | 2 |
| 3 | 302−55 | Fitting−Grease | 2 |
| 4 | 71−4760 | Seal | 2 |
| 5 | 2411−45 | Tie Rod End (Incl. Ref. #3−4 & 37) | 2 |
| 6 | 3272−12 | Pin−Cotter | 2 |
| 7 | 92−7594 | Asm−Hose | 1 |
| 8 | 92−7595 | Asm−Hose | 1 |
| 9 | 32136−14 | Nut−Hex. Slotted | 4 |
| 10 | 76−8350 | Stop−Axle | 2 |
| 11 | 3296−45 | Nut−Lock | 2 |
| 12 | 3256−29 | Washer−Flat | 1 |
| 13 | 94−8000 | Nut−Lock | 1 |
| 14 | 3234−12 | Screw−HHF | 2 |
| 15 | 69−8890 | Cap−Spindle | 2 |
| 16 | 32151−10 | Ring−Retaining | 2 |
| 17 | 62−2170 | Washer−Thrust | 4 |
| 18 | 69−6470 | Bushing−Flange | 4 |
| 19 | 302−11 | Fitting−Grease | 2 |
| 20 | 94−5607 | Asm−Axle, Rear (Incl. Ref. #18, 19 & 51) | 1 |
| 21 | 92−9725 | Spindle−LH | 1 |
| * | 92−9724 | Spindle−RH | 1 |
| 22 | 69−2980 | Seal−Inner | 2 |
| 23 | 254−106 | Cone−Bearing | 2 |
| 24 | 254−107 | Cup−Bearing | 2 |


| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 25 | 92−9651 | Asm−Hub (Incl. Ref. #24, 26, & 36) | 2 |
| 26 | 254−72 | Cup−Bearing | 2 |
| 27 | 254−92 | Cone−Bearing | 2 |
| 28 | 86−5910 | Tire | 2 |
| 29 | 217−125 | Wheel | 2 |
| 30 | 232−27 | Stem−Valve | 2 |
| 31 | 93−0309 | Washer−Tab | 2 |
| 32 | 93−0307 | Nut−Retainer | 2 |
| 33 | 95−7152 | Protector − Bearing | 2 |
| 34 | 3272−13 | Pin−Cotter | 2 |
| 35 | 242−50 | Nut−Lug | 10 |
| 36 | 92−9652 | Stud−Drive | 10 |
| 37 | 32136−13 | Nut−Hex. Slotted | 2 |
| 38 | 92−5839 | Ball Joint | 1 |
| 39 | 94−8142 | Asm−Cylinder | 1 |
| 40 | 94−9973 | Ring−Retaining | 1 |
| 41 | 302−5 | Fitting−Grease | 1 |
| 42 | 237−78 | O−Ring | 2 |
| 43 | 340−97 | Fitting−Hydraulic 90° (Incl. Ref. #42 & 44) | 2 |
| 43 | 340−97 | Fitting−Hydraulic 90° (Incl. Ref. #42 & 44) | 2 |
| 44 | 237−22 | O−Ring | 2 |
| 45 | 92−5833 | Spacer−Ball Joint | 1 |
| 46 | 323−9 | Screw−HH | 2 |
| 47 | 98−8840 | Tube & Clamp Assembly | 1 |

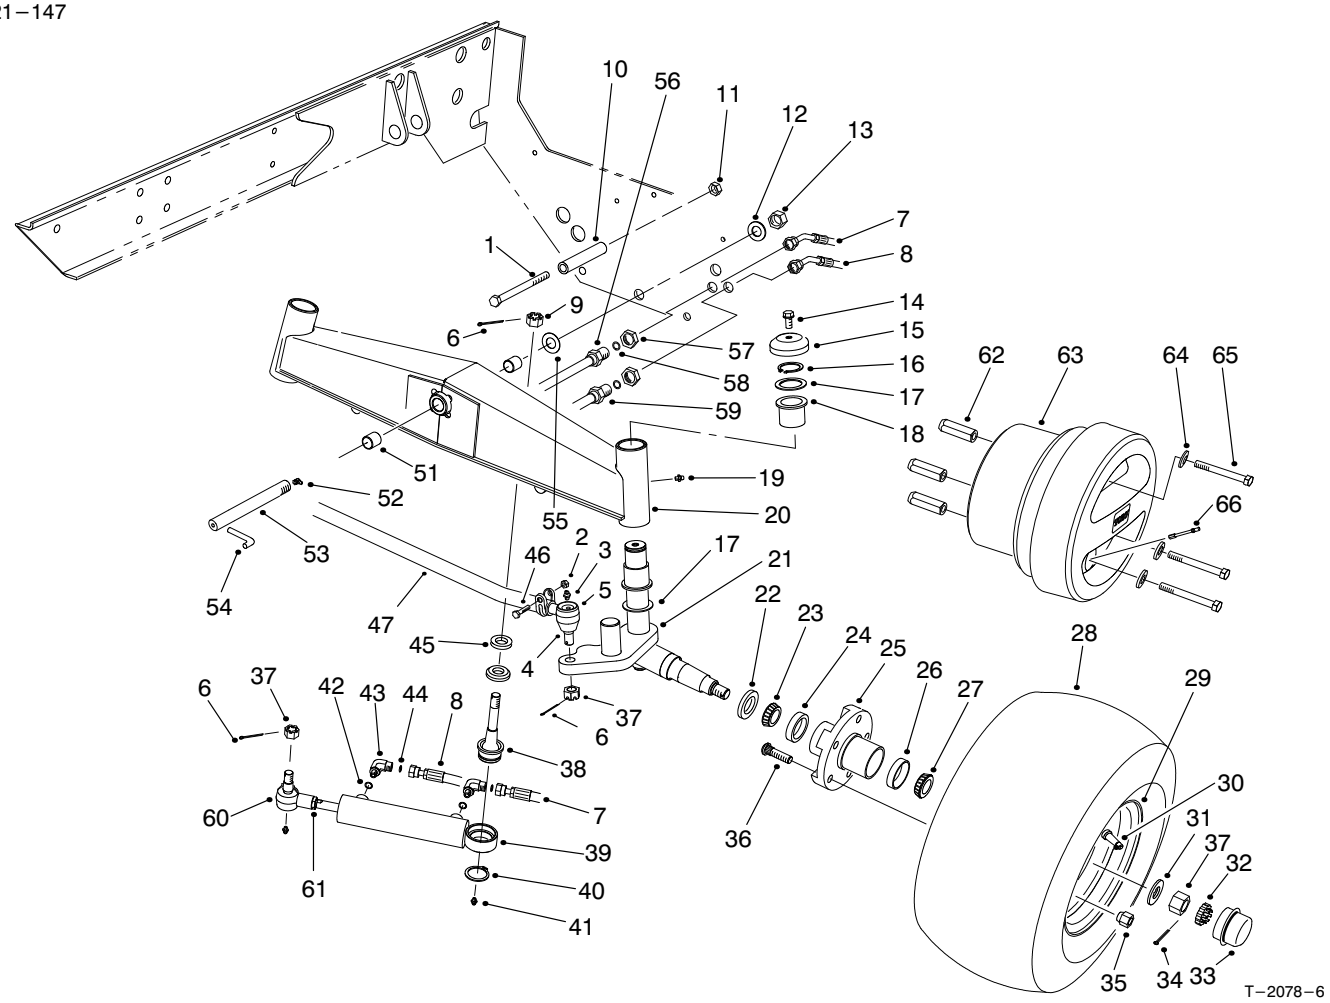


# 2−WD REAR AXLE ASSEMBLY (Model No. 03803) (Cont.)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 51 | 94−5603 | Bushing−Sleeve | 2 |
| 52 | 302−33 | Fitting−Grease 90° | 1 |
| 53 | 94−8115 | Pin−Axle, Pivot | 1 |
| 54 | 92−7604 | Pin−Stop | 1 |
| 55 | 93−7247 | Washer−Thrust | 1 |
| 56 | 92−7495 | Asm−Tube, Steering Rear | 1 |
| 57 | 340−70 | Nut−Lock, Bulkhead | 2 |
| 58 | 237−22 | O−Ring | 2 |
| 59 | 92−7494 | Asm−Tube, Steering Rear | 1 |
| 60 | 92−5837 | Asm−Rod End | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 61 | 3220−11 | Nut−Jam | 1 |
| 62 | 94−2807 | Adapter−Nut (Europe) | 6 |
| 63 | 94−3052 | Weight−Wheel (Europe) | 2 |
| 64 | 3256−26 | Washer−Flat (Europe) | 6 |
| 65 | 3213−14 | Screw−HH (Europe) | 6 |
| 66 | 94−3063 | Extension−Stem, Valve (Europe) | 2 |
| * | 98−8839 | Tie Rod Assembly (Incl. Ref. #2−5, 37, 46 & 47) | 1 |

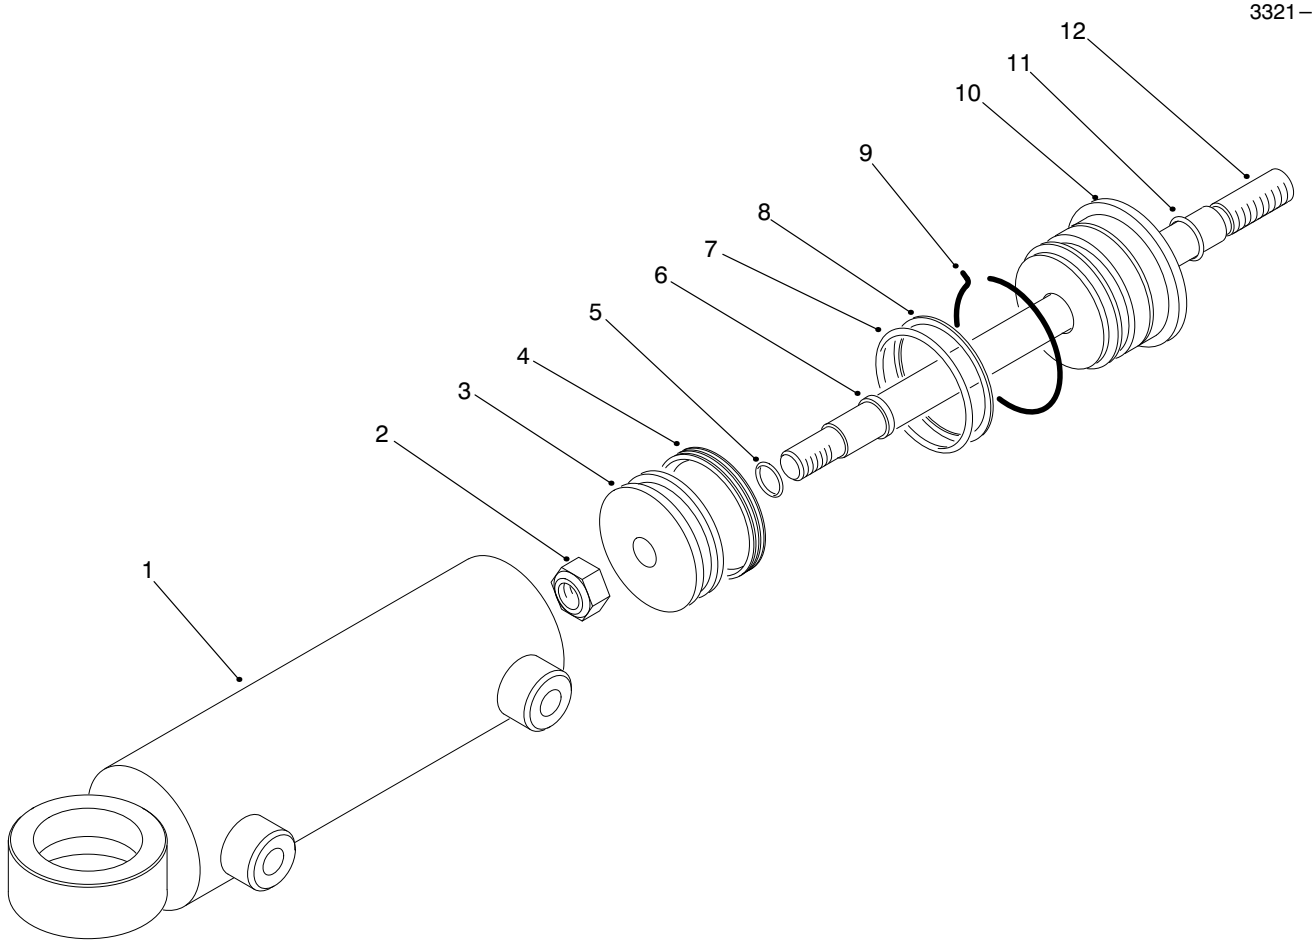



T−2453−1

# HYDRAULIC CYLINDER NO. 94−8142 (Model No. 03803)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 94−9959 | Asm−Barrel | 1 |
| 2 | 32152−10 | Nut−Lock | 1 |
| 3 | 94−9961 | Piston | 1 |
| 4 | | Uniring | 1 |
| 5 | | O−Ring | 1 |
| 6 | | Seal−Rod | 1 |
| 7 | | O−Ring | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 8 | | Backup | 1 |
| 9 | 94−9963 | Ring−Retaining | 1 |
| 10 | 94−9962 | Gland−Cylinder | 1 |
| 11 | | O−Ring | 1 |
| 12 | 94−9960 | Asm−Rod, Piston | 1 |
| * | 94−9964 | Kit−Seal (Incl. Ref. #4−8, & 11) | 1 |


*Not Illustrated

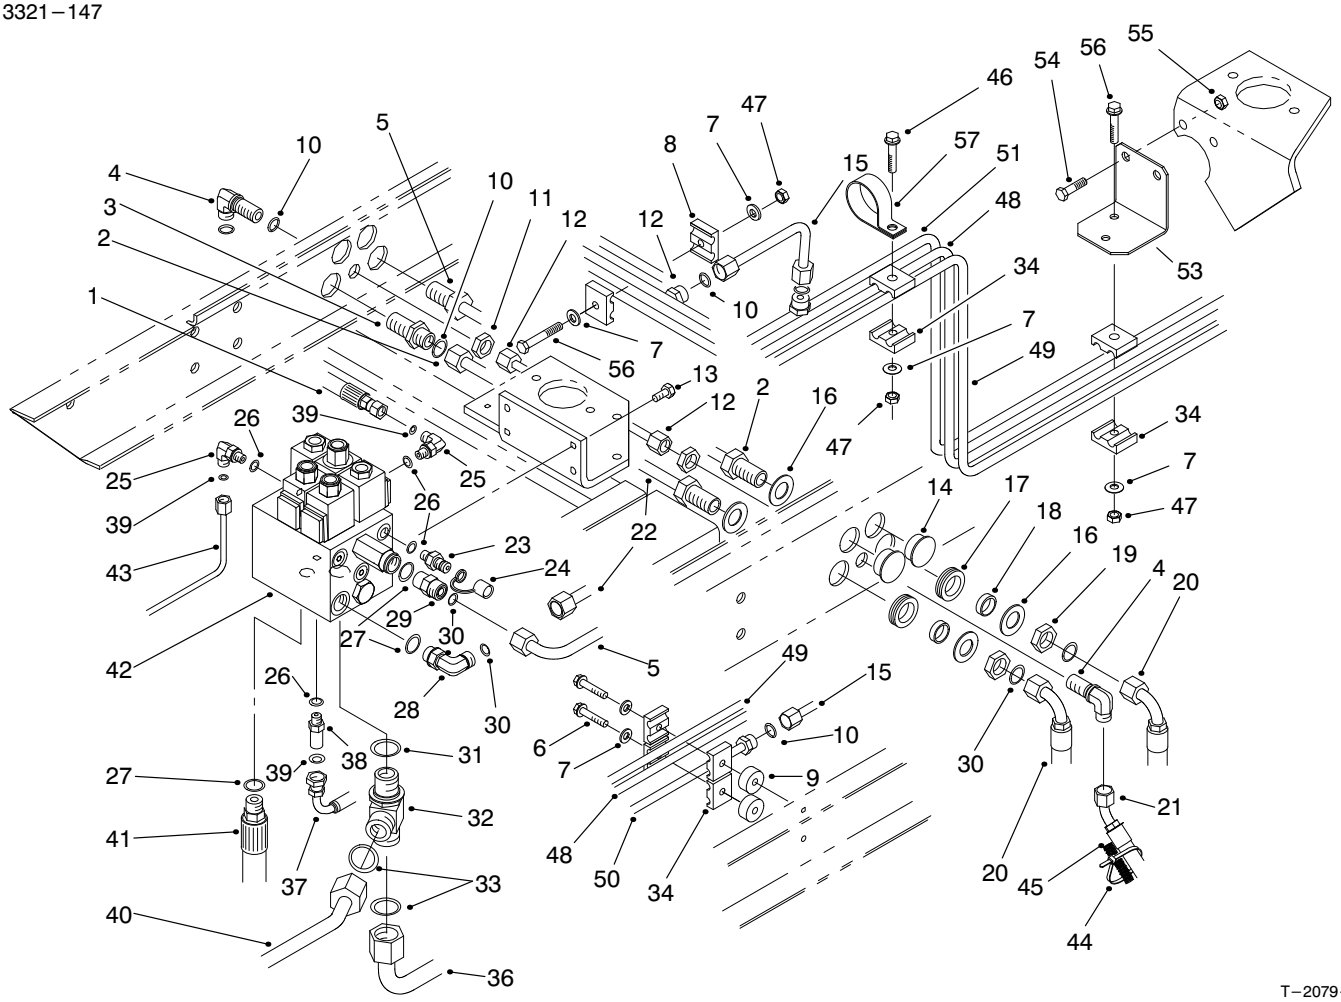


# REAR HYDRAULIC CONTROL BLOCK & TUBES

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 92−7638 | Asm−Hose | 1 |
| 2 | 92−7648 | Asm−Hose | 1 |
| 3 | 340−161 | Fitting−Adapter (Incl. Ref. #30) | 1 |
| 4 | 340−154 | Fitting−Hydraulic 90° (Incl. Ref. #10) | 2 |
| 5 | 92−7584 | Asm−Tube | 1 |
| 6 | 32104−37 | Screw−HH | 2 |
| 7 | 3256−23 | Washer−Flat (Model 03803) | 8 |
| 7 | 3256−23 | Washer−Flat (Model 03804) | 9 |
| 8 | 56−7972 | Clamp−Tube | 2 |
| 9 | 80−8660 | Spacer | 2 |
| 10 | 237−22 | O−Ring | 2 |
| 11 | 340−70 | Nut−Bulkhead | 7 |
| 12 | 92−7647 | Asm−Tube, Drain | 1 |
| 13 | 33104−025 | Screw−HHF | 4 |
| 14 | 94−1402 | Plug | 4 |
| 15 | 93−4205 | Asm−Tube, Drain (Model 03803) | 1 |
| 15 | 93−4206 | Asm−Tube, Drain (Model 03804) | 1 |
| 16 | 69−8930 | Washer | 8 |
| 17 | 240−5 | Grommet | 4 |
| 18 | 69−8960 | Spacer | 4 |
| 19 | 340−127 | Nut−Bulkhead | 4 |
| 20 | 92−7649 | Asm−Hose | 4 |
| 21 | 93−4201 | Asm−Hose | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 22 | 92−7585 | Asm−Tube | 1 |
| 23 | 354−77 | Fitting−Quick Connect (Incl. Ref. #26) | 1 |
| 24 | 354−79 | Cap−Fitting | 1 |
| 25 | 340−132 | Fitting−Hydraulic 90° (Incl. Ref. #26 & 39) | 2 |
| 26 | 237−78 | O−Ring | 4 |
| 27 | 237−79 | O−Ring | 3 |
| 28 | 340−98 | Fitting−Hydraulic 90° (Incl. Ref. #27 & 30) | 1 |
| 29 | 340−4 | Fitting−Hydraulic (Incl. Ref. #27 & 30) | 1 |
| 30 | 237−30 | O−Ring | 6 |
| 31 | 237−81 | O−Ring | 1 |
| 32 | 340−148 | Fitting−Tee (Incl. Ref. #31, 33) | 1 |
| 33 | 237−58 | O−Ring | 2 |
| 34 | 56−7973 | Clamp−Tube (Model 03803) | 8 |
| 34 | 56−7973 | Clamp−Tube (Model 03804) | 10 |
| 36 | 92−7558 | Asm−Tube, Cooler Rear | 1 |
| 37 | 92−7639 | Asm−Hose | 1 |
| 38 | 94−1403 | Fitting−Hydraulic (Incl. Ref #26 & 39) | 1 |
| 39 | 237−21 | O−Ring | 2 |
| 40 | 92−7557 | Asm−Tube, Cooler Front | 1 |
| 41 | 92−7492 | Asm−Hose | 1 |
| 42 | 92−7419 | Asm−Block, Manifold | 1 |

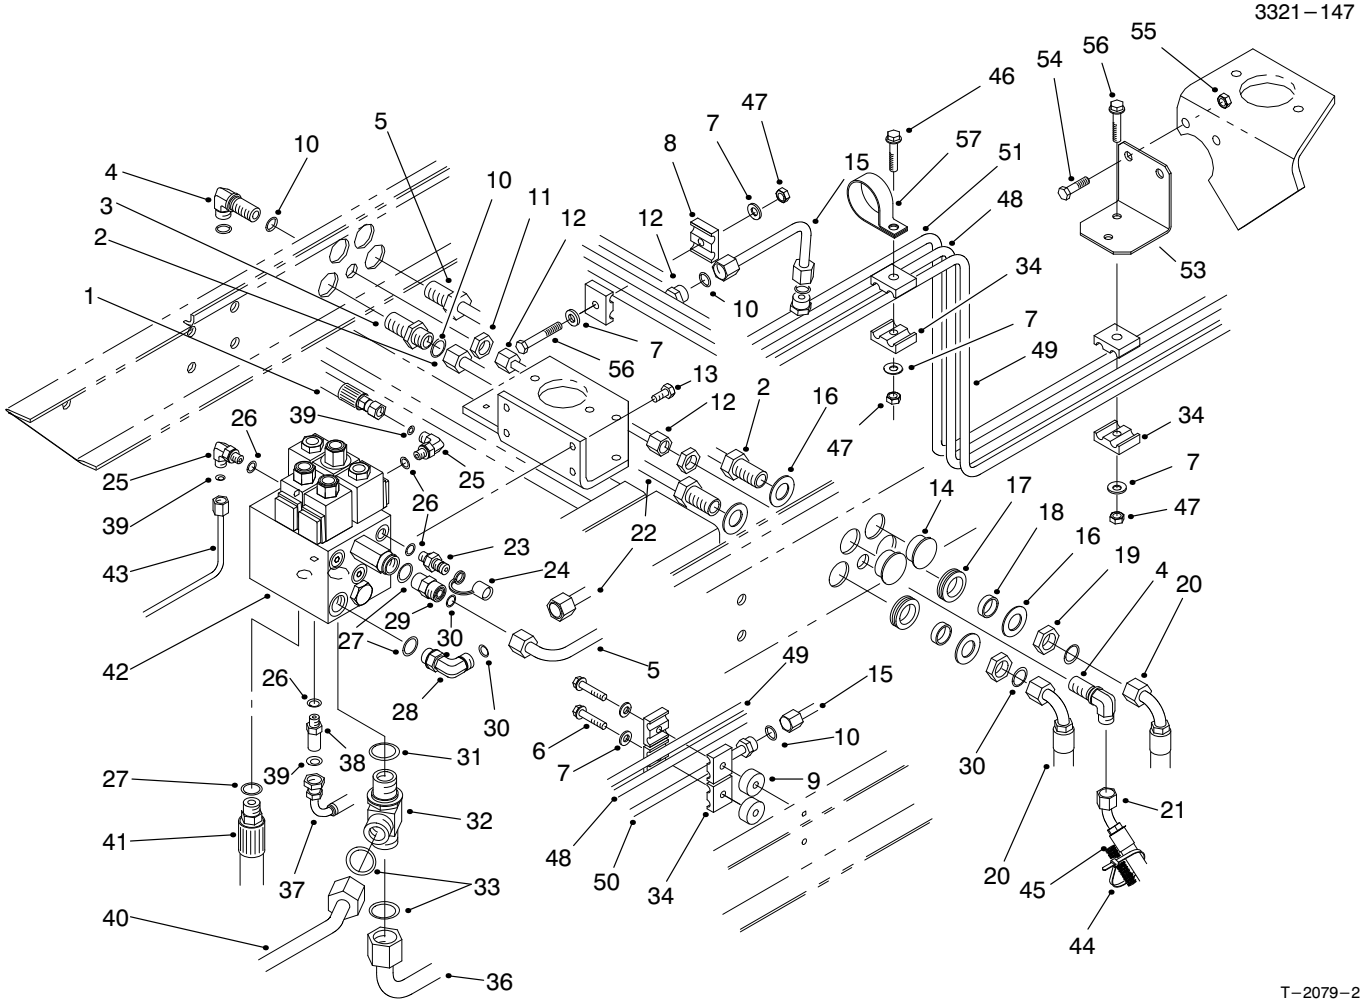



T−2079−2

# REAR HYDRAULIC CONTROL BLOCK & TUBES (Cont.)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 43 | 92−7591 | Asm−Tube, P2A | 1 |
| 44 | 3290−378 | Tie−Cable | 6 |
| 45 | 94−3090 | Harness−Wire, Main | 1 |
| 46 | 322−6 | Screw−HH | 1 |
| 47 | 3296−47 | Nut−Lock (Model 03803) | 4 |
| 47 | 3296−47 | Nut−Lock (Model 03804) | 5 |
| 48 | 92−7494 | Asm−Tube, Steering, Rear | 1 |
| 49 | 92−7495 | Asm−Tube, Steering, Rear | 1 |
| 50 | 92−7598 | Asm−Tube, Front Drain | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 51 | 92−7553 | Asm−Tube, Rear Drain (Model 03804) | 1 |
| 52 | 237−42 | O−Ring | 2 |
| 53 | 94−2834 | Bracket−Clamp | 1 |
| 54 | 323−6 | Screw−HH | 2 |
| 55 | 32128−21 | Nut−Lock | 2 |
| 56 | 322−7 | Screw−HH (Model 03803) | 4 |
| 56 | 322−7 | Screw−HH (Model 03804) | 5 |
| 57 | 2412−147 | Clamp − R | 1 |

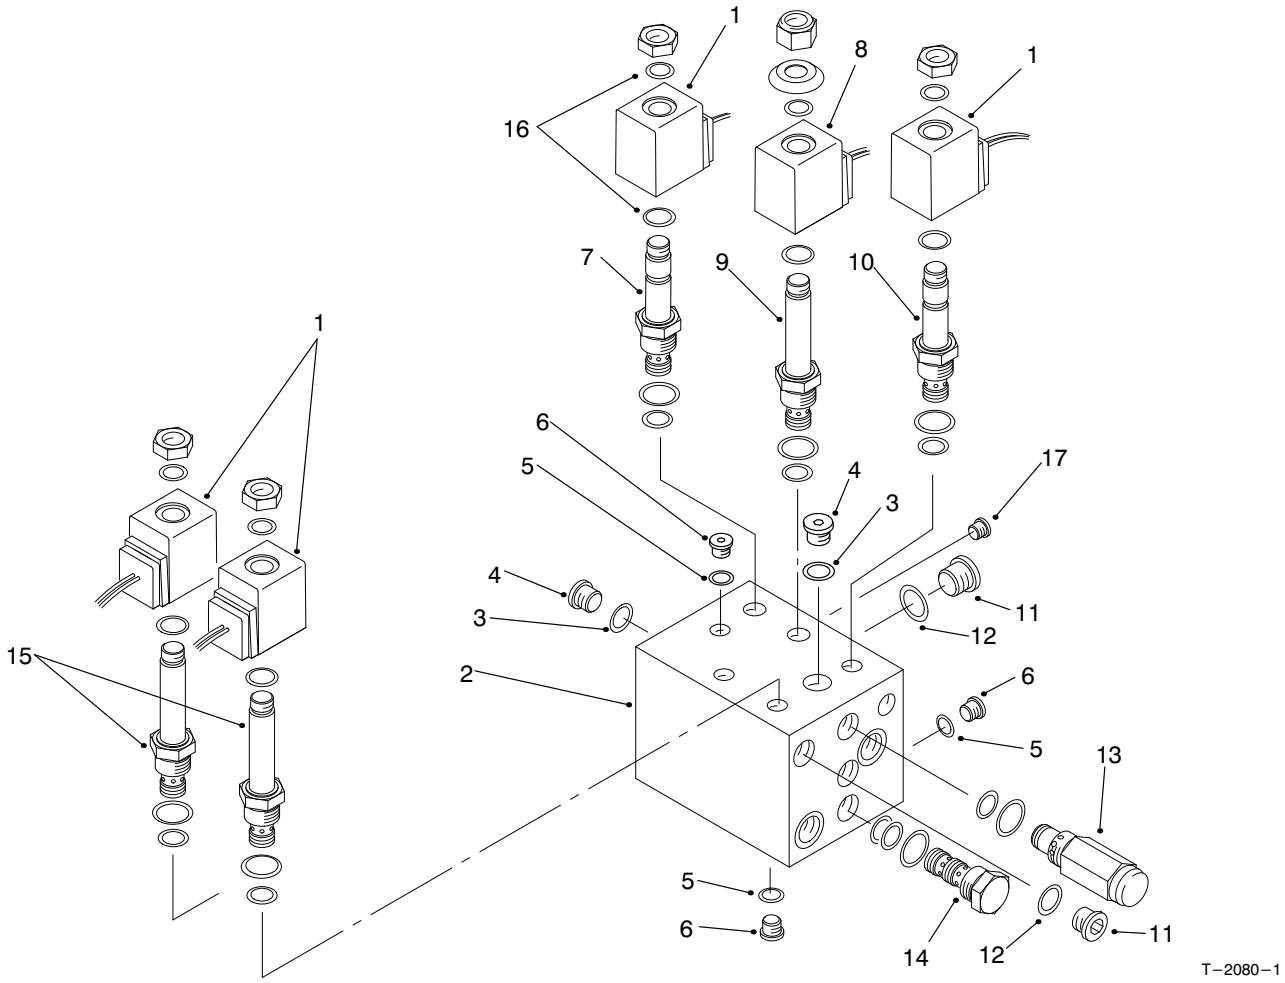



# MANIFOLD ASSEMBLY NO. 92−7419

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 88−9190 | Solenoid−20 Watt | 4 |
| †2 | | Block−Manifold, Rear | 1 |
| 3 | 237−78 | O−Ring | 4 |
| 4 | 353−990 | Plug (Incl. Ref. #30 | 4 |
| 5 | 237−56 | O−Ring | 4 |
| 6 | 353−991 | Plug (Incl. Ref. #5) | 4 |
| 7 | 88−6990 | Cartridge−N.C. Spool (Use Seal Kit 75−2080) | 1 |
| 8 | 88−9200 | Solenoid−28 Watt | 1 |
| 9 | 95−3459 | Cartridge−No Flow (Use Seal Kit 75−2080) | 1 |
| 10 | 88−6980 | Cartridge−N.C. Poppet (Use Seal Kit 75−2080) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 11 | 353−989 | Plug (Incl. Ref. #12) | 5 |
| 12 | 237−42 | O−Ring | 5 |
| 13 | 75−0920 | Cartridge−Relief 3000 psi (Use Seal Kit 75−2080) | 1 |
| 14 | 93−7491 | Cartridge−Pilot Check (Use Seal Kit 69−4260) | 1 |
| 15 | 93−7494 | Cartridge−N.O. Poppet (Use Seal Kit 75−2080) | 2 |
| 16 | 94−5438 | Seal−Solenoid | 10 |
| 17 | 94−2626 | Plug−Orifice | 1 |
| * | 75−2080 | Kit−Seal | 5 |
| * | 69−4260 | Kit−Seal | 1 |

*Not Illustrated
†Not Serviced Separately

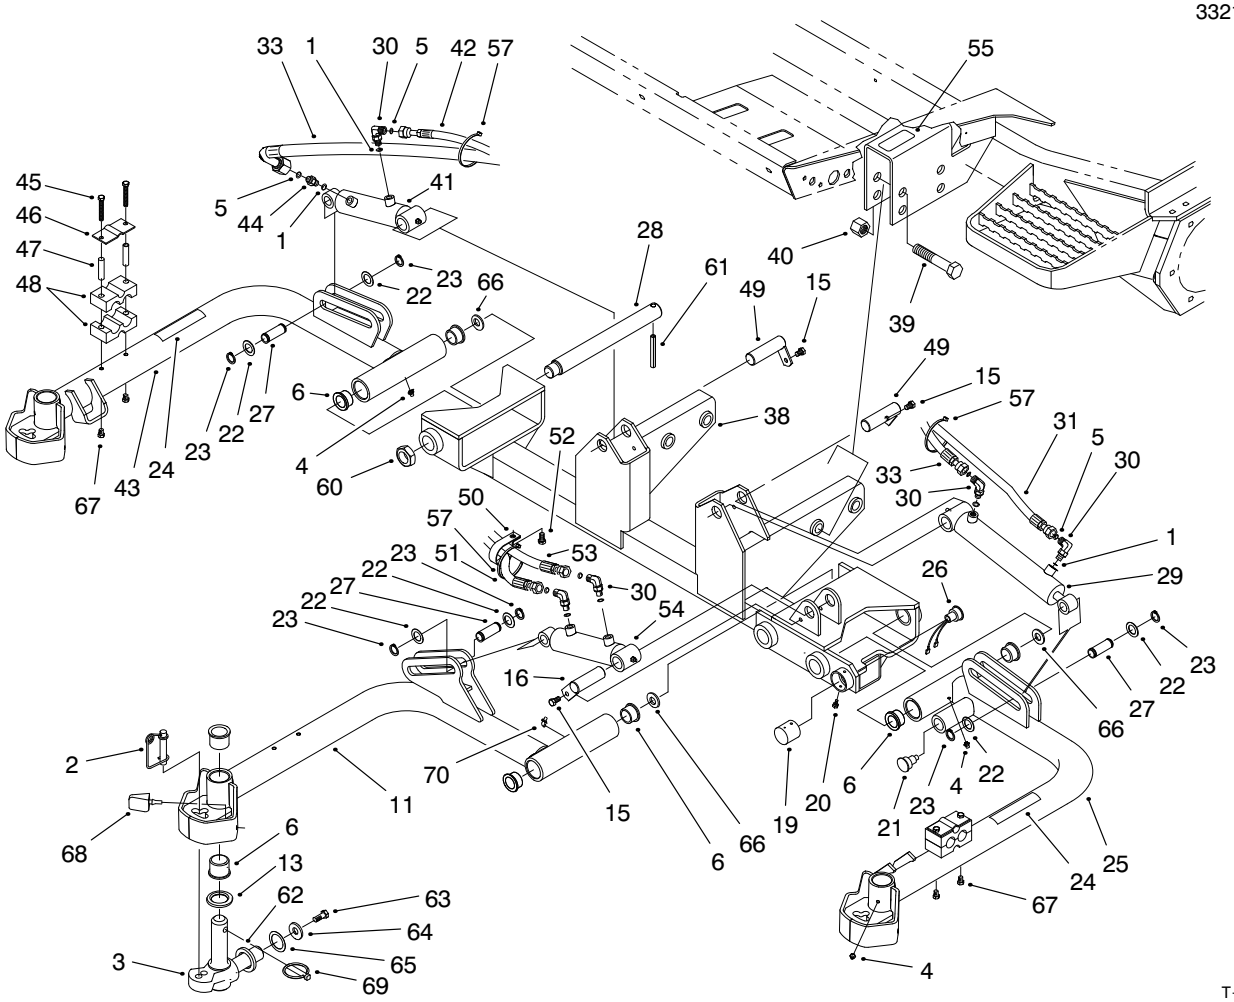



T−2934−1

# FRONT LIFT ARMS ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 237−78 | O−Ring | 6 |
| 2 | 93−9161 | Pin | 3 |
| 3 | 98−1880 | Knuckle−Pivot | 3 |
| 4 | 302−5 | Fitting−Grease, Straight | 6 |
| 5 | 237−21 | O−Ring | 6 |
| 6 | 94−8947 | Bushing−Flange | 12 |
| 11 | 98−2400 | Lift Arm Assembly #1 | 1 |
| 13 | 94−8946 | Washer | 3 |
| 15 | 32144−14 | Screw−HWH Thread Form | 3 |
| 16 | 83−6790 | Cylinder Pin Assembly | 1 |
| 19 | 75−6370 | Cap−Sensor | 1 |
| 20 | 32104−76 | Screw−Self Tap | 2 |
| 21 | 92−8754 | Magnet−Reed Switch | 1 |
| 22 | 94−9998 | Washer−Thrust | 6 |
| 23 | 94−9974 | Ring−Retaining | 6 |
| 24 | 93−6687 | Decal−No Step | 2 |
| 25 | 98−2406 | Lift Arm #4 | 1 |
| 26 | 92−8002 | Sensor−Reed Switch | 1 |
| 27 | 75−5350 | Pin−Cylinder | 3 |
| 28 | 95−7158 | Pin−Pivot | 3 |
| 29 | 98−8811 | Cylinder−Hydraulic | 1 |
| 30 | 340−132 | Fitting−Hydraulic (Incl. Ref. #1 & 5) | 5 |
| 31 | 82−6490 | Hose | 1 |
| 33 | 75−5890 | Hose | 1 |
| 38 | 95−7184 | Carrier Frame Assembly | 1 |
| 39 | 328−7 | Screw−HH | 4 |
| 40 | 3296−51 | Nut−Lock | 4 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 41 | 98−8069 | Cylinder−Hydraulic | 1 |
| 42 | 92−7564 | Hose Assembly | 1 |
| 43 | 98−2408 | Lift Arm #5 | 1 |
| 44 | 340−92 | Fitting−Hydraulic (Incl. Ref. #1 & 5) | 1 |
| 45 | 60−6700 | Screw−HH | 6 |
| 46 | 93−7961 | Clamp−Case Drain | 3 |
| 47 | 93−7960 | Spacer | 6 |
| 48 | 82−8170 | Clamp | 6 |
| 49 | 83−6780 | Cylinder Pin Assembly | 2 |
| 50 | 2412−96 | Clamp−R | 1 |
| 51 | 92−7565 | Hose Assembly | 1 |
| 52 | 322−4 | Screw−HH | 1 |
| 53 | 92−7562 | Hose Assembly | 1 |
| 54 | 93−2650 | Cylinder−Hydraulic | 1 |
| 55 | 93−6693 | Decal−Floor Plate | 1 |
| 57 | 3290−378 | Tie−Cable | 3 |
| 60 | 3296−49 | Nut−Lock NI | 3 |
| 61 | 32121−110 | Pin−Spring | 3 |
| 62 | 98−7974 | Washer−Thrust | 3 |
| 63 | 98−7993 | Screw−Flange | 3 |
| 64 | 3256−6 | Washer−Flat | 3 |
| 65 | 3−6781 | Washer−Thrust | 3 |
| 66 | 76−2980 | Washer−Thrust | 3 |
| 67 | 33114−010 | Screw−HH | 4 |
| 68 | 98−9976 | Bumper | 6 |
| 69 | 283−71 | Pin−Lynch | 3 |
| 70 | 302−60 | Fitting−Grease | 1 |

3321−147

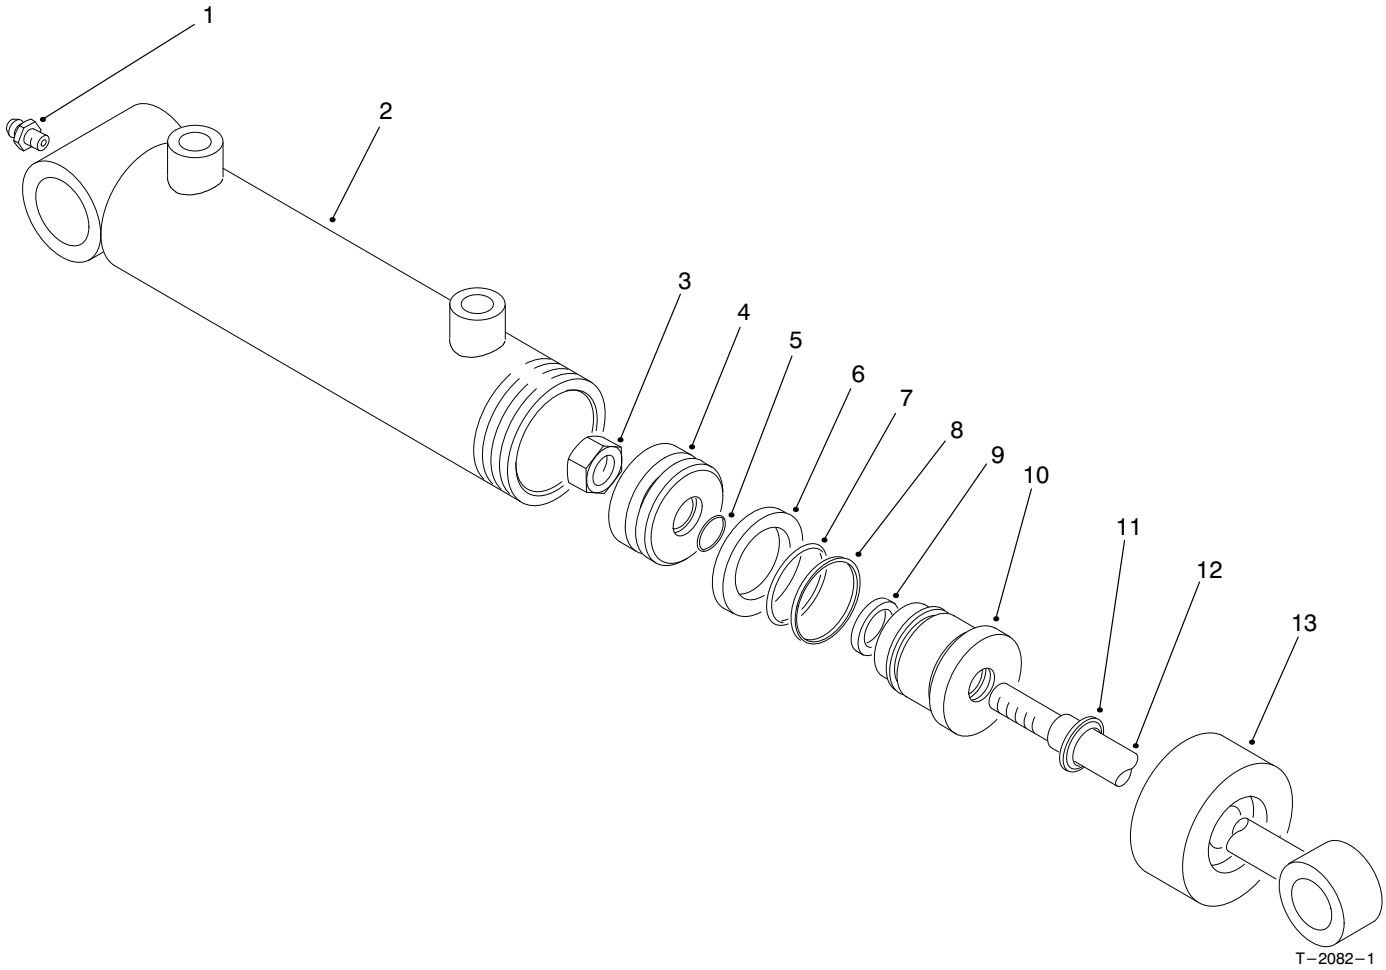



# HYDRAULIC CYLINDER NO. 98−8811

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 302−5 | Fitting−Grease | 1 |
| †2 | | Assembly−Barrel | 1 |
| 3 | 32152−10 | Nut−Lock | 1 |
| 4 | 70−2780 | Piston | 1 |
| †5 | | O−Ring | 1 |
| †6 | | Seal−Special | 1 |
| †7 | | O−Ring | 1 |
| †8 | | Backup | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| †9 | | Seal−Rod | 1 |
| 10 | 98−7353 | Head | 1 |
| †11 | | Seal−Dust | 1 |
| 12 | 75−2120 | Shaft With Clevis | 1 |
| 13 | 93−7991 | Collar | 1 |
| * | 86−7330 | Kit−Seal Repair (Incl. Ref. #5−9, & 11) | 1 |

†Not Serviced Separately.
*Not Illustrated

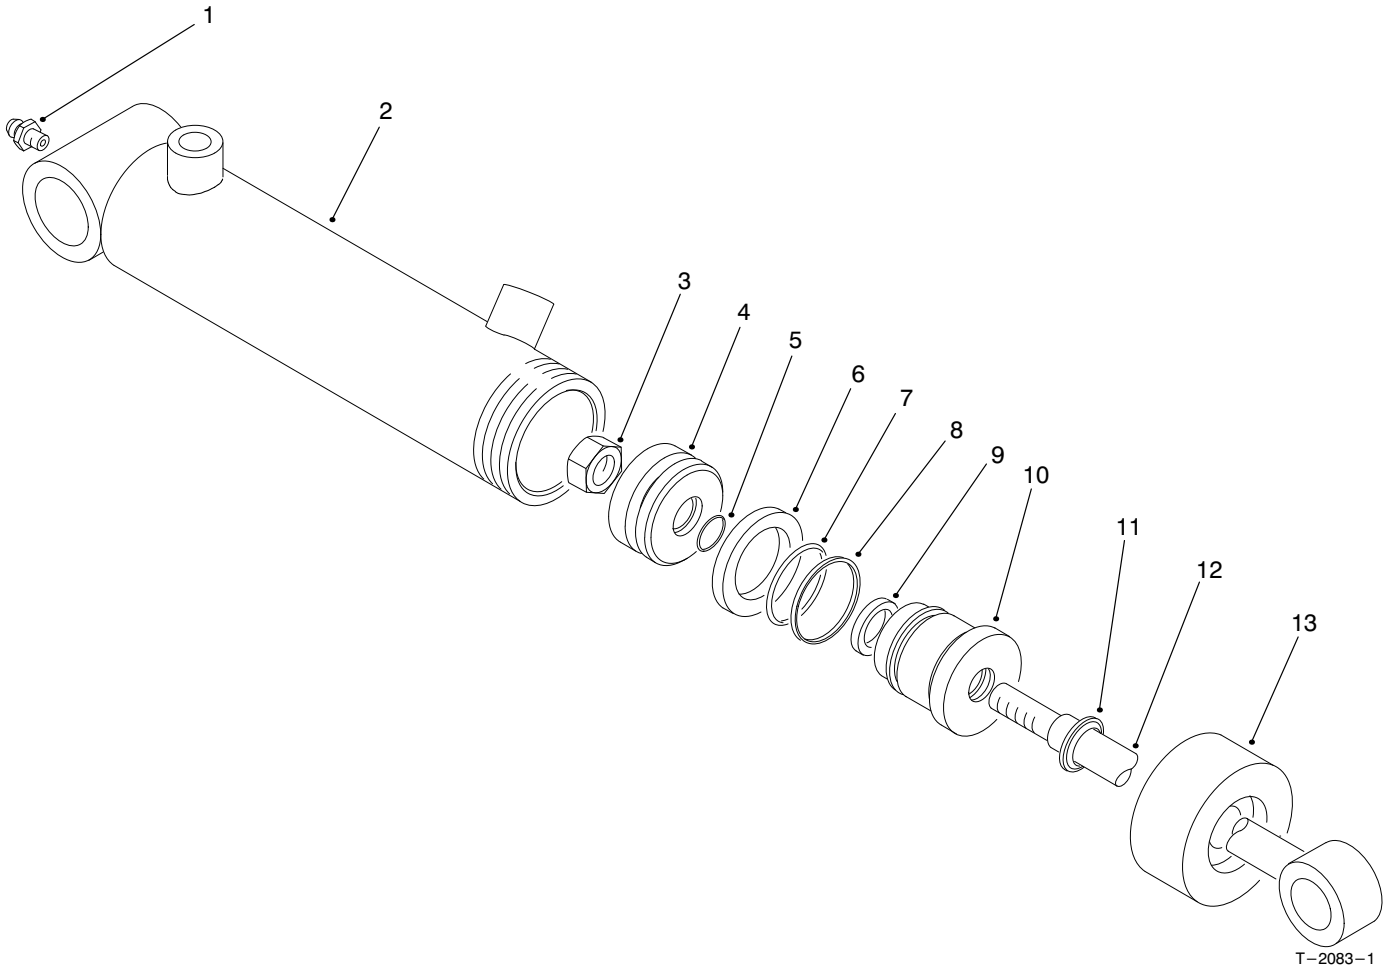



# HYDRAULIC CYLINDER NO. 98–8069

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 302–5 | Fitting–Grease | 1 |
| 2 | 93–7558 | Asm–Barrel | 1 |
| 3 | 32152–10 | Nut–Lock | 1 |
| 4 | 84–1710 | Piston | 1 |
| †5 | | O–Ring | 1 |
| †6 | | Seal–Special | 1 |
| †7 | | O–Ring | 1 |
| †8 | | Backup | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| †9 | | Seal–Rod | 1 |
| 10 | 98–7354 | Head | 1 |
| †11 | | Seal–Dust | 1 |
| 12 | 84–1740 | Shaft With Clevis | 1 |
| 13 | 93–7994 | Collar | 1 |
| * | 84–1760 | Kit–Seal Repair (Incl. Ref. #5–9, & 11) | 1 |

† Not Serviced Separately.
*Not Illustrated

3321−147

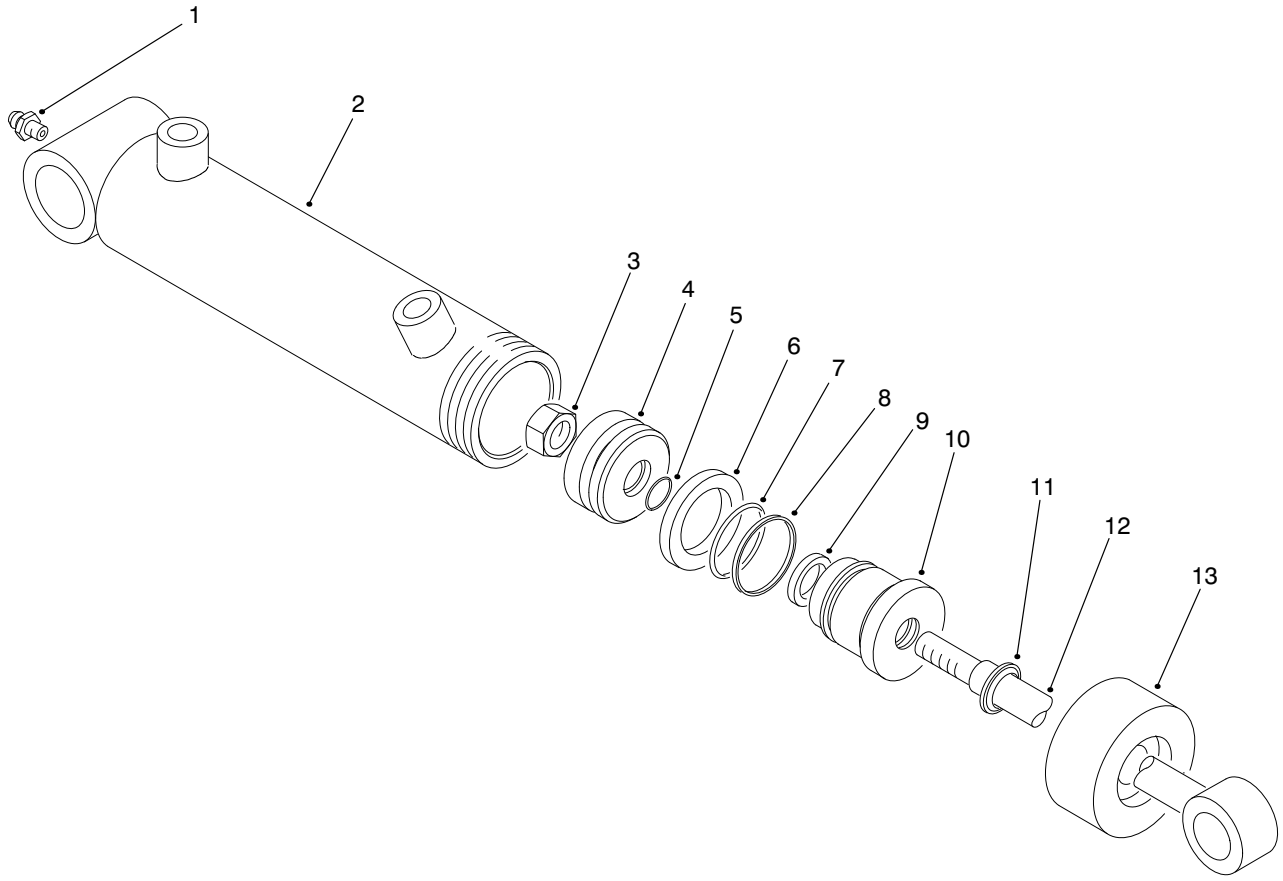



T−2084−1

# HYDRAULIC CYLINDER NO. 93−2650

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 302−5 | Fitting−Grease | 1 |
| †2 | | Assembly−Barrel | 1 |
| 3 | 32152−10 | Nut−Lock | 1 |
| 4 | 70−2780 | Piston | 1 |
| †5 | | O−Ring | 1 |
| †6 | | Seal−Special | 1 |
| †7 | | O−Ring | 1 |
| †8 | | Backup | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| †9 | | Seal−Rod | 1 |
| 10 | 93−7990 | Head | 1 |
| †11 | | Seal−Dust | 1 |
| 12 | 94−2644 | Shaft With Clevis | 1 |
| 13 | 93−7991 | Collar | 1 |
| * | 86−7330 | Kit−Seal Repair (Incl. Ref. #5−9, & 11) | 1 |


†Not Serviced Separately.
*Not Illustrated

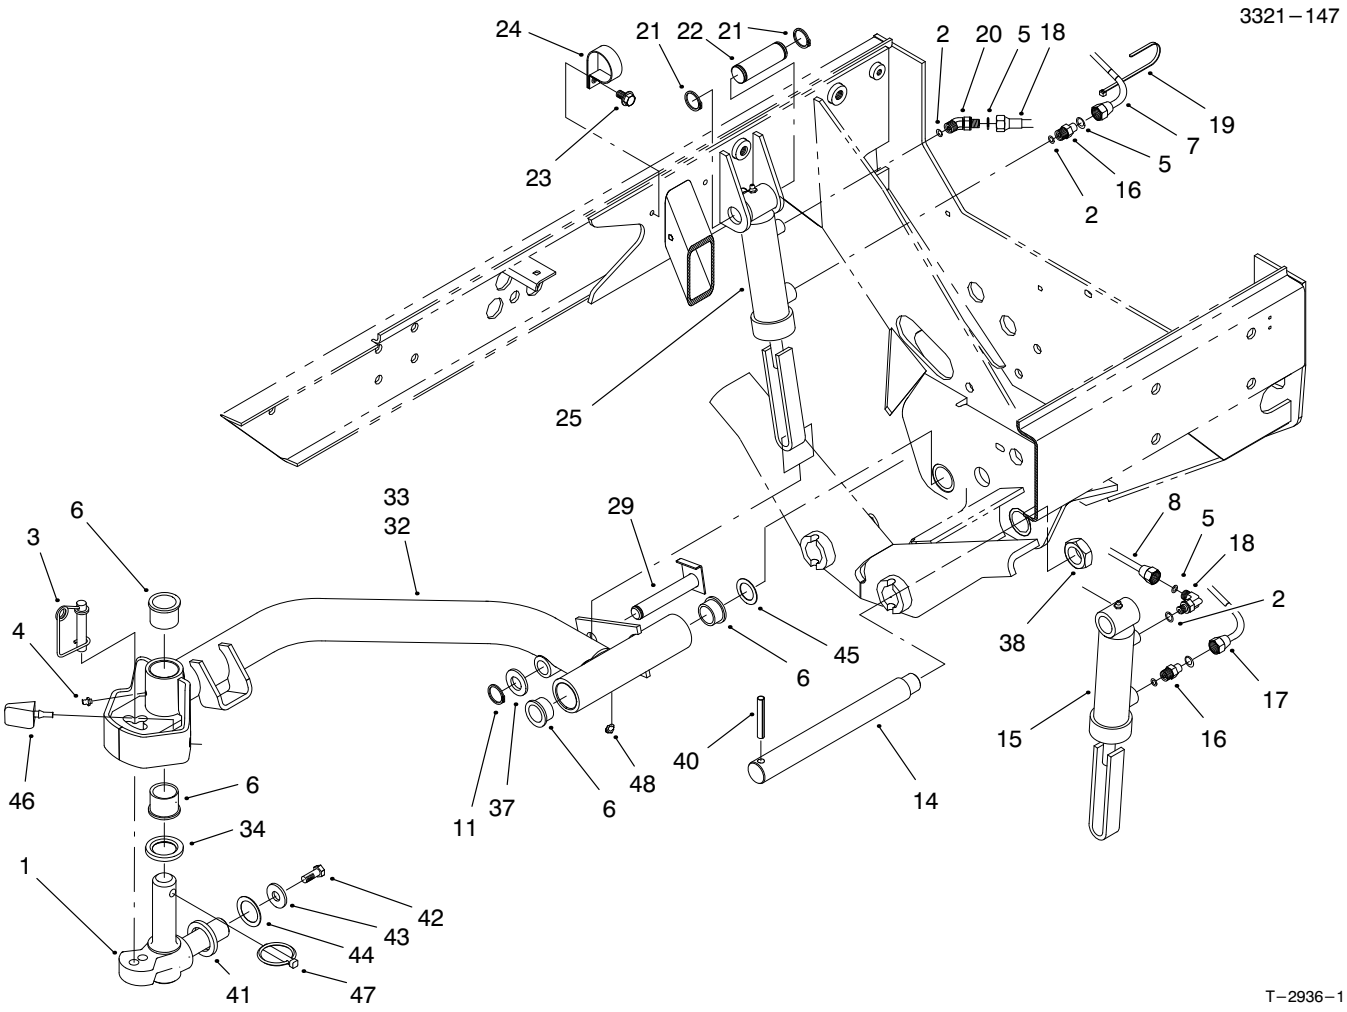


# REAR LIFT ARM ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 98–1880 | Knuckle–Pivot | 2 |
| 2 | 237–78 | O–Ring | 4 |
| 3 | 93–9161 | Pin | 2 |
| 4 | 302–5 | Fitting–Grease, Straight | 2 |
| 5 | 237–21 | O–Ring | 4 |
| 6 | 94–8947 | Bushing–Flange | 8 |
| 7 | 92–7638 | Hose Assembly | 1 |
| 8 | 92–7639 | Hose Assembly | 1 |
| 11 | 94–9974 | Ring–Retaining | 2 |
| 14 | 95–7158 | Pin–Pivot | 2 |
| 15 | 98–8813 | Cylinder–Hydraulic | 1 |
| 16 | 340–92 | Fitting–Straight (Incl. Ref. #2 & 5) | 2 |
| 17 | 92–7636 | Hose Assembly | 1 |
| 18 | 340–132 | Fitting–Hydraulic (Incl. Ref. #2 & 5) | 1 |
| 19 | 3290–378 | Tie–Cable | 2 |
| 20 | 340–103 | Fitting–Hydraulic (Incl. Ref. #2 & 5) | 1 |
| 21 | 32151–36 | Ring–Retaining | 4 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 22 | 92–7548 | Pin–Cylinder | 2 |
| 23 | 32144–11 | Screw–Thread Form | 1 |
| 24 | 2412–96 | Clamp–R | 1 |
| 25 | 98–8812 | Cylinder–Hydraulic | 1 |
| 29 | 92–7456 | Pin Assembly | 2 |
| 32 | 98–2404 | Lift Arm #3 | 1 |
| 33 | 98–2402 | Lift Arm #2 | 1 |
| 34 | 94–8946 | Washer | 2 |
| 37 | 67–6570 | Spacer–Wheel | 2 |
| 38 | 3296–49 | Nut–Lock NI | 2 |
| 40 | 32121–110 | Pin–Spring | 2 |
| 41 | 98–7974 | Screw–Flange | 2 |
| 42 | 98–7993 | Screw–Flange | 2 |
| 43 | 3256–6 | Washer–Flat | 2 |
| 44 | 3–6781 | Washer–Thrust | 2 |
| 45 | 76–2980 | Washer–Thrust | 2 |
| 46 | 98–9976 | Bumper | 4 |
| 47 | 283–71 | Pin–Lynch | 2 |
| 48 | 302–11 | Fitting–Grease 45˚ | 2 |

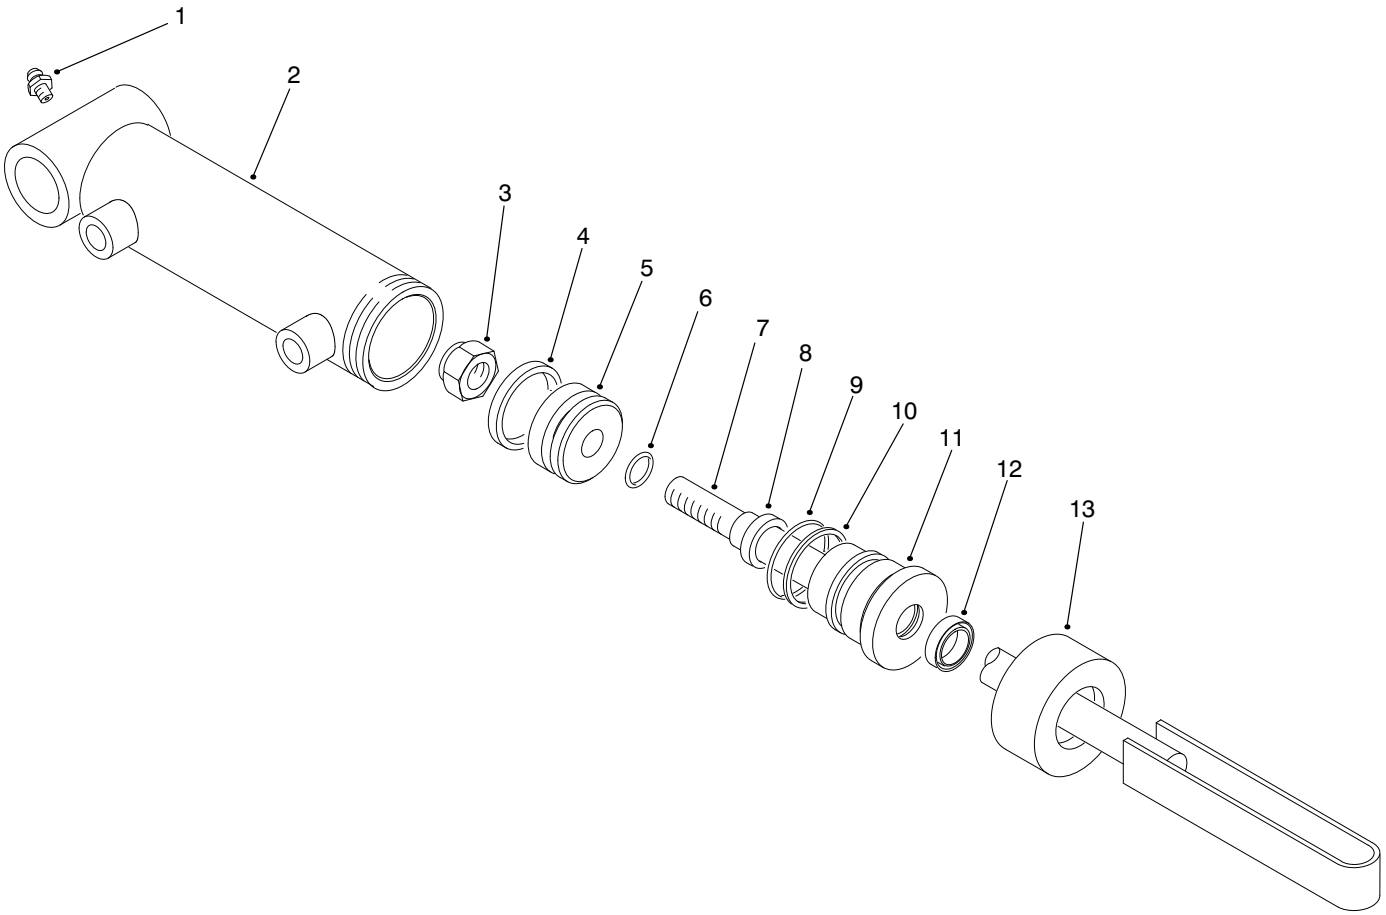



T−2087−1

# HYDRAULIC CYLINDER NO. 98−8813

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 302−5 | Fitting−Grease | 1 |
| †2 | | Asm−Barrel | 1 |
| 3 | 32152−10 | Nut | 1 |
| †4 | | Uni−ring | 1 |
| 5 | 84−1710 | Piston | 1 |
| †6 | | O−Ring | 1 |
| 7 | 93−7989 | Shaft W/Clevis | 1 |
| †8 | | Seal−Rod | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| †9 | | O−Ring | 1 |
| †10 | | Backup | 1 |
| 11 | 98−7354 | Head | 1 |
| †12 | | Seal−Dust | 1 |
| 13 | 93−7994 | Collar | 1 |
| * | 84−1760 | Kit−Seal repair (Incl. Ref. #4, 6, 8−10 & 12) | 1 |

*Not Illustrated
†Not Serviced Separately.

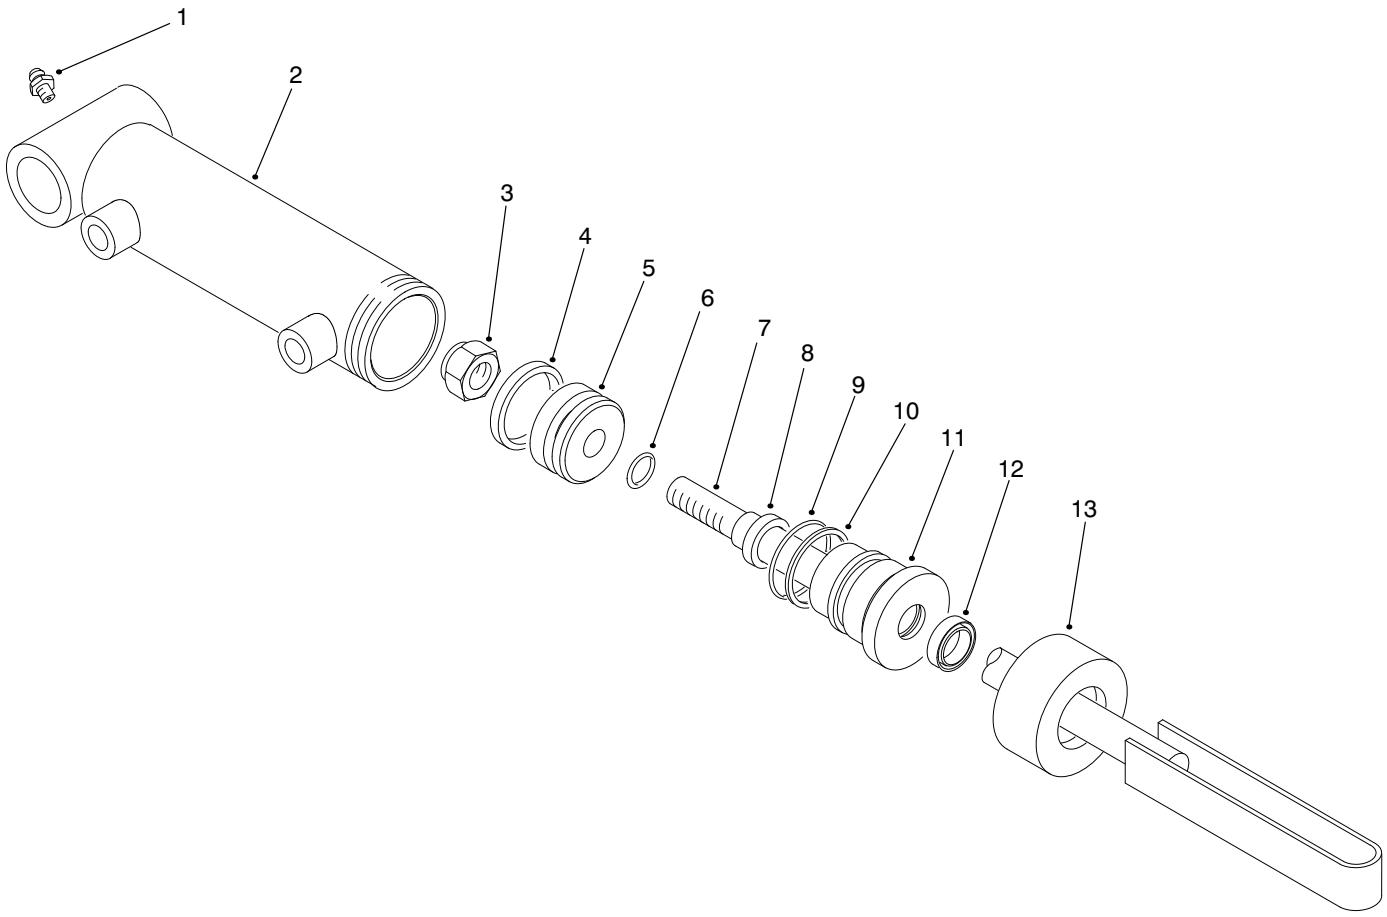


T–2087–1


# HYDRAULIC CYLINDER NO. 98–8812

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 302–5 | Fitting–Grease | 1 |
| †2 | | Asm.–Barrel | 1 |
| 3 | 32152–10 | Nut | 1 |
| †4 | | Uni–ring | 1 |
| 5 | 70–2780 | Piston | 1 |
| †6 | | O–Ring | 1 |
| 7 | 93–7989 | Shaft W/Clevis | 1 |
| †8 | | Seal–Rod | 1 |
| 9 | | O–Ring | 1 |
| †10 | | Backup | 1 |
| 11 | 98–7353 | Head | 1 |
| †12 | | Seal–Dust | 1 |
| 13 | 93–7991 | Collar | 1 |
| * | 86–7330 | Kit–Seal repair (Incl. Ref. #4, 6, 8–10 & 12) | 1 |

*Not Illustrated

† Not Serviced Separately.


3321−147

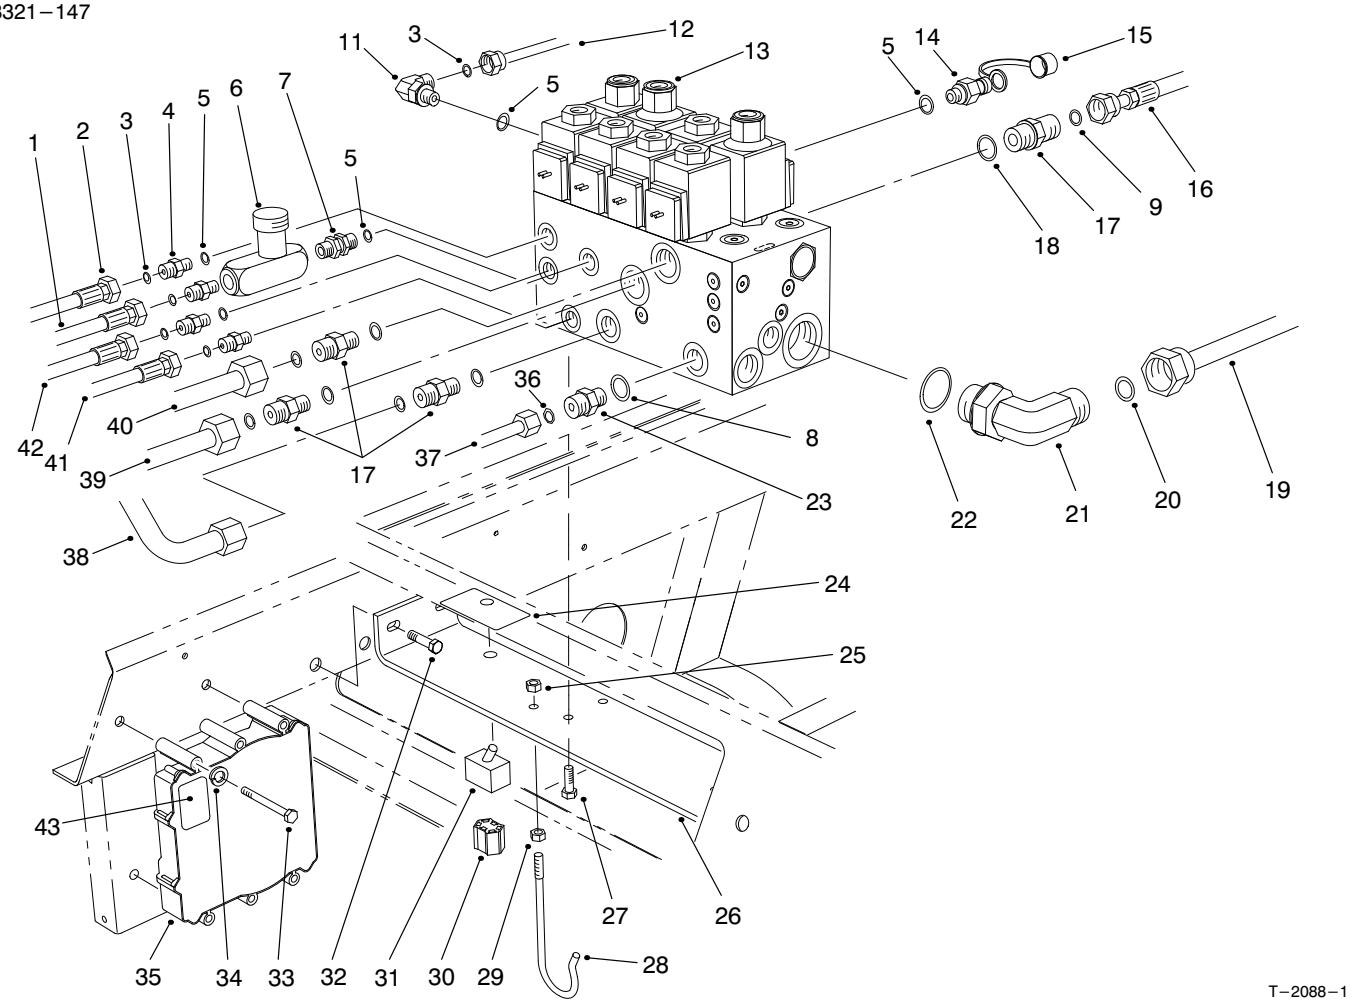


T−2088−1

# FRONT HYDRAULIC CONTROL BLOCK & HOSES

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 82−6490 | Asm−Hose | 1 |
| 2 | 92−7562 | Asm−Hose | 1 |
| 3 | 237−21 | O−Ring | 5 |
| 4 | 340−92 | Fitting−Hydraulic (Incl. Ref. #3 & 5) | 4 |
| 5 | 237−78 | O−Ring | 8 |
| 6 | 93−7489 | Valve−Control, Flow | 1 |
| 7 | 93−7597 | Fitting−SAE (Incl. Ref. #5) | 1 |
| 8 | 237−42 | O−Ring | 1 |
| 9 | 237−30 | O−Ring | 4 |
| 10 | 92−7479 | Asm−Tube | 1 |
| 11 | 340−132 | Fitting−Hydraulic 90° (Incl. Ref. #3 & 5) | 1 |
| 12 | 92−7591 | Asm−Tube | 1 |
| 13 | 92−7418 | Asm−Block, Control | 1 |
| 14 | 354−77 | Fitting−Quick Connect (Incl. Ref. #5) | 1 |
| 15 | 354−79 | Cap−Fitting | 1 |
| 16 | 92−7491 | Asm−Hose | 1 |
| 17 | 340−4 | Fitting−Hydraulic (Incl. Ref. #9 & 18) | 4 |
| 18 | 237−79 | O−Ring | 4 |
| 19 | 92−7557 | Asm−Tube | 1 |
| 20 | 237−65 | O−Ring | 1 |
| 21 | 340−139 | Fitting−Hydraulic 90° (Incl. Ref. #20 & 22) | 1 |
| 22 | 237−81 | O−Ring | 1 |
| 23 | 340−2 | Adapter−Hydraulic (Incl. Ref. #8 & 36) | 1 |
| 24 | 93−1264 | Decal−Switch, Backlap | 1 |
| 24 | 94−4580 | Decal−Backlap (Japan) | 1 |
| 25 | 3296−29 | Nut−Lock | 1 |
| 26 | 92−7519 | Bracket−Block, Manifold | 1 |
| 27 | 33104−016 | Screw−HHF | 4 |
| 28 | 93−7970 | Form−Wire, Hose Mount | 1 |
| 29 | 3217−6 | Nut−Jam | 1 |
| 30 | 94−3090 | Harness−Wire, Main | 1 |
| 31 | 93−7487 | Switch−Toggle | 1 |
| 32 | 3234−17 | Screw−HF | 4 |
| 33 | 321−15 | Screw−HH | 3 |
| 34 | 3253−3 | Washer−Lock | 3 |
| 35 | 92−5720 | Controller−Solid State | 1 |
| 36 | 237−22 | O−Ring | 1 |
| 37 | 93−4222 | Asm−Tube, Drain Return | 1 |
| 38 | 94−1447 | Asm−Tube, Steering Ret. | 1 |
| 39 | 93−4217 | Asm−Tube | 1 |
| 40 | 93−4216 | Asm−Tube | 1 |
| 41 | 92−7565 | Asm−Hose | 1 |
| 42 | 92−7564 | Asm−Hose | 1 |
| 43 | 93−8053 | Decal−ECU Label (Europe) | 1 |

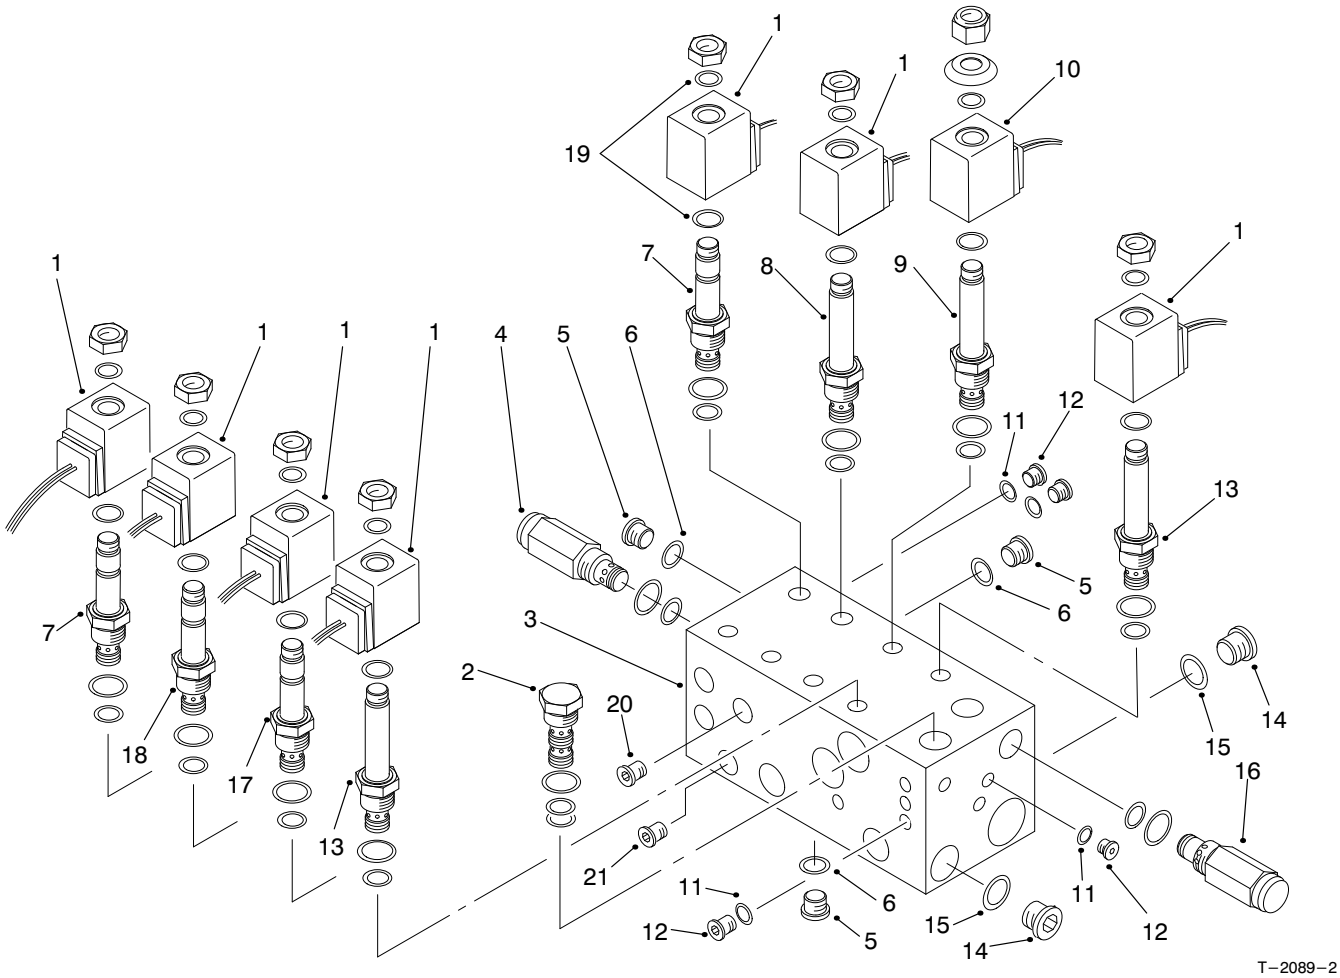



T−2089−2

# CONTROL BLOCK ASSEMBLY NO. 92−7418

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 88−9190 | Solenoid−20 Watt | 7 |
| 2 | 93−7491 | Cartridge−Pilot Check (Use Seal Kit 69−4260) | 1 |
| †3 | | Block−Manifold, Front | 1 |
| 4 | 93−7492 | Cartridge−Relief 2300 psi (Use Seal Kit 75−2080) | 1 |
| 5 | 353−990 | Plug (Incl. Ref. #6) | 10 |
| 6 | 237−78 | O−Ring | 10 |
| 7 | 88−6990 | Cartridge−N.C. (Use Seal Kit 75−2080) | 2 |
| 8 | 92−3071 | Solenoid (Use Seal Kit 69−4260) | 1 |
| 9 | 95−3459 | Cartridge−N.O. (Use Seal Kit 75−2080) | 1 |
| 10 | 88−9200 | Solenoid−28 Watt | 1 |
| 11 | 237−156 | O−Ring | 10 |
| 12 | 353−991 | Plug (Incl. Ref. #11) | 10 |
| 13 | 93−7494 | Cartridge−N.O. Poppet (Use Seal Kit 75−2080) | 2 |
| 14 | 353−989 | Plug (Incl. Ref. #15) | 5 |
| 15 | 237−42 | O−Ring | 5 |
| 16 | 75−0920 | Cartridge−Relief 3000 psi (Use Seal Kit 75−2080) | 1 |
| 17 | 88−6980 | Cartridge−N.O. Poppet (Use Seal Kit 75−2080) | 1 |
| 18 | 92−6315 | Cartridge−N.C. Poppet (Use Seal Kit 75−2080) | 1 |
| 19 | 94−5438 | Seal−Solenoid | 16 |
| 20 | 94−3077 | Plug−Orifice | 1 |
| 21 | 94−8140 | Plug−Orifice | 1 |
| * | 75−2080 | Kit−Seal | 7 |
| * | 69−4260 | Kit−Seal | 2 |


*Not Illustrated
†Not Serviced Separately

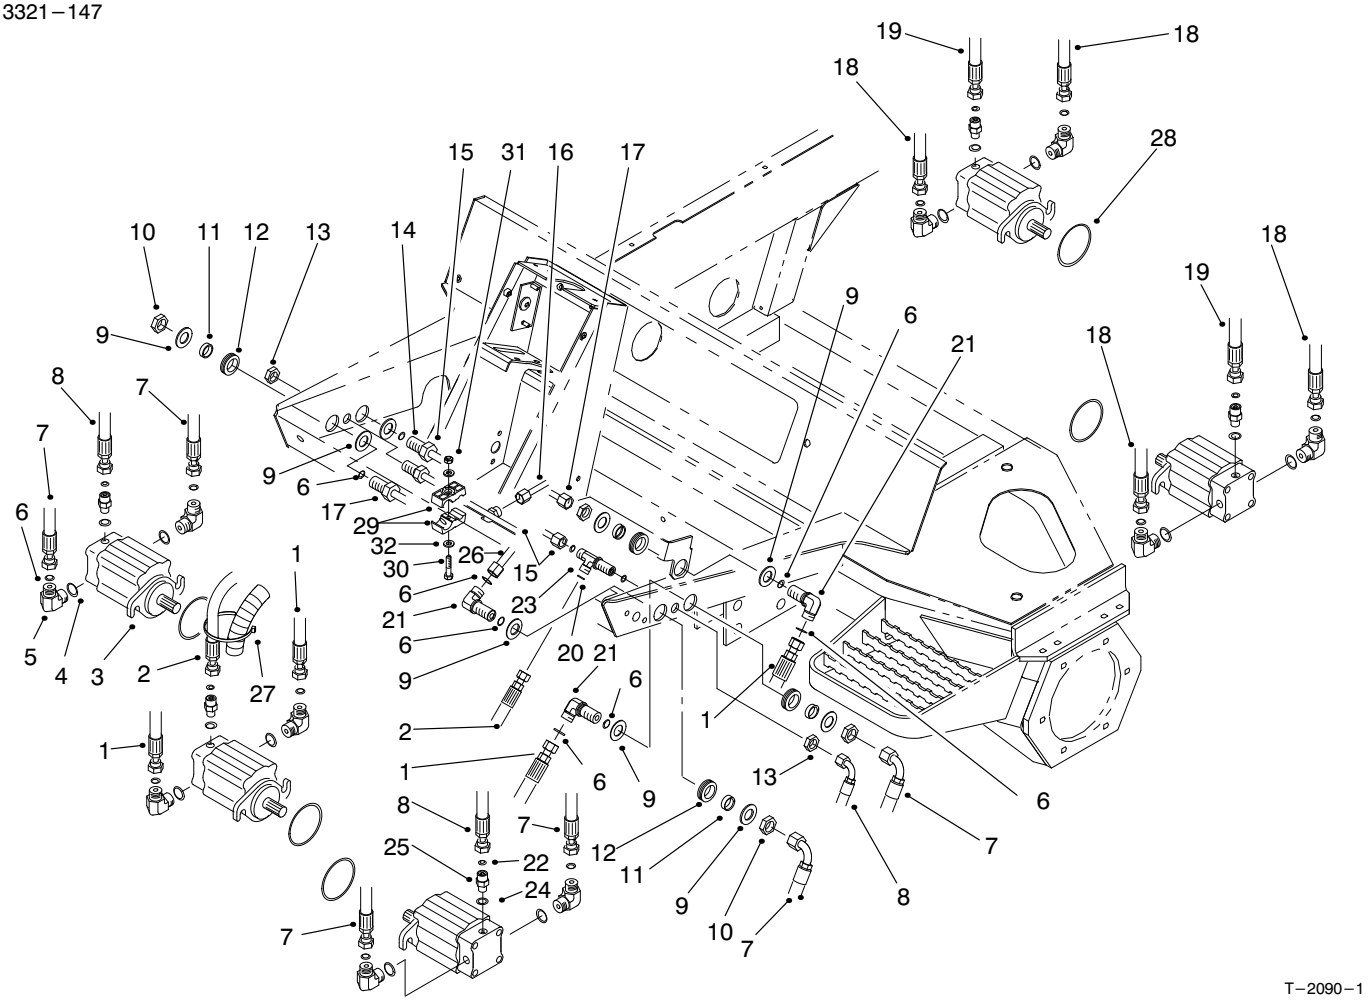


# REEL MOTORS & HOSES

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 92−7556 | Asm−Hose | 1 |
| 2 | 92−7560 | Asm−Hose | 1 |
| 3 | 92−7387 | Motor−Hydraulic | 5 |
| 4 | 237−79 | O−Ring | 10 |
| 5 | 340−98 | Fitting−Hydraulic 90˚ (Incl. Ref. #4 & 6) | 10 |
| 6 | 237−30 | O−Ring | 18 |
| 7 | 92−7555 | Asm−Hose | 4 |
| 8 | 92−7559 | Asm−Hose | 2 |
| 9 | 69−8930 | Washer | 10 |
| 10 | 340−127 | Nut−Bulkhead | 5 |
| 11 | 69−8960 | Spacer | 5 |
| 12 | 240−5 | Grommet | 5 |
| 13 | 340−70 | Nut−Bulkhead | 2 |
| 14 | 93−4216 | Asm−Tube (Incl. Ref. #6) | 1 |
| 15 | 93−4223 | Asm−Tube, Front Drain (Incl. Ref. #20) | 1 |
| 16 | 93−4222 | Asm−Tube, Drain Return | 1 |
| 17 | 93−4219 | Asm−Tube, #1 Bulkhead (Incl. Ref. #6) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 18 | 92−7649 | Asm−Hose | 4 |
| 19 | 93−4201 | Asm−Hose | 2 |
| 20 | 237−22 | O−Ring | 3 |
| 21 | 93−9151 | Fitting−Hydraulic 90˚ (Incl. Ref. #6) | 3 |
| 22 | 237−21 | O−Ring | 5 |
| 23 | 340−68 | Fitting−Hydraulic, Tee (Incl. Ref. #20) | 1 |
| 24 | 237−78 | O−Ring | 5 |
| 25 | 340−92 | Fitting−Hydraulic (Incl. Ref. #22 & 24) | 5 |
| 26 | 93−4217 | Asm−Tube | 1 |
| 27 | 3290−378 | Tie−Cable | 1 |
| 28 | 93−9783 | O−Ring | 10 |
| 29 | 56−7972 | Clamp−Tube | 4 |
| 30 | 322−7 | Screw−HH | 2 |
| 31 | 3296−47 | Nut−Lock | 2 |
| 32 | 3256−23 | Washer−Flat | 4 |

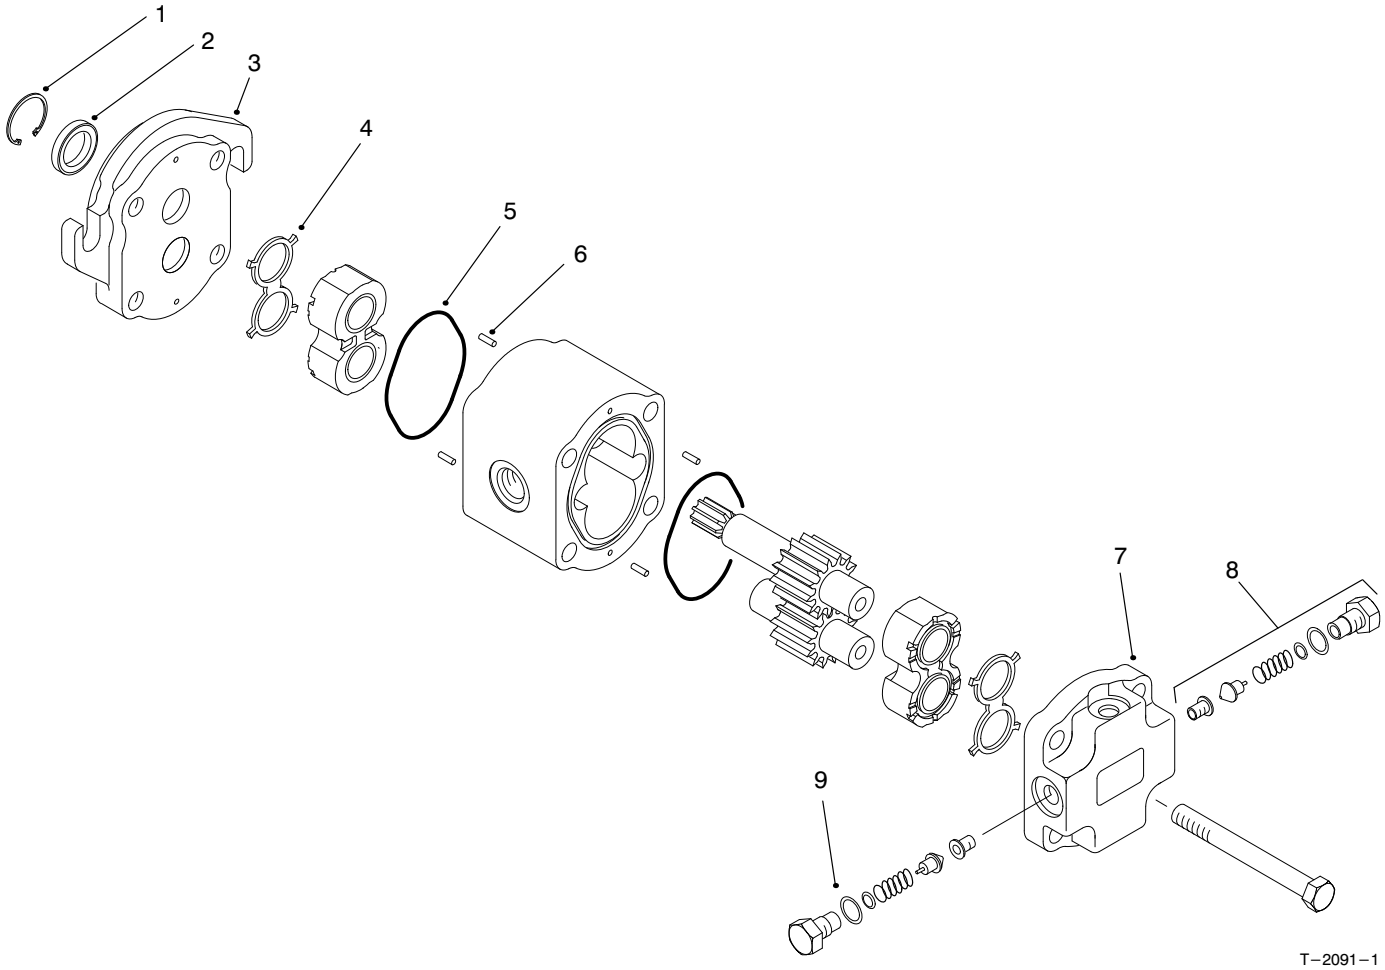



T–2091–1

# REEL MOTOR ASSEMBLY NO. 92–7387

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | | Ring–Retaining | 1 |
| 2 | | Seal–Shaft | 1 |
| 3 | | Flange | 1 |
| 4 | | E–Seal | 2 |
| 5 | | O–Ring | 2 |
| 6 | | Pin–Dowel | 4 |
| 7 | | Block–Valve (Incl. Ref. #8) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 8 | | Valve–Adjusting | 2 |
| 9 | | O–Ring | 2 |
| * | 93–9152 | Kit–Flange (Incl. Ref. #1–3 & 6) | 1 |
| * | 93–9153 | Kit–Seal (Incl. Ref. #1, 2, 4, 5 & 9) | 1 |
| * | 93–9154 | Kit–Valve Block (Incl. Ref. #6 & 7) | 1 |

*Not Illustrated

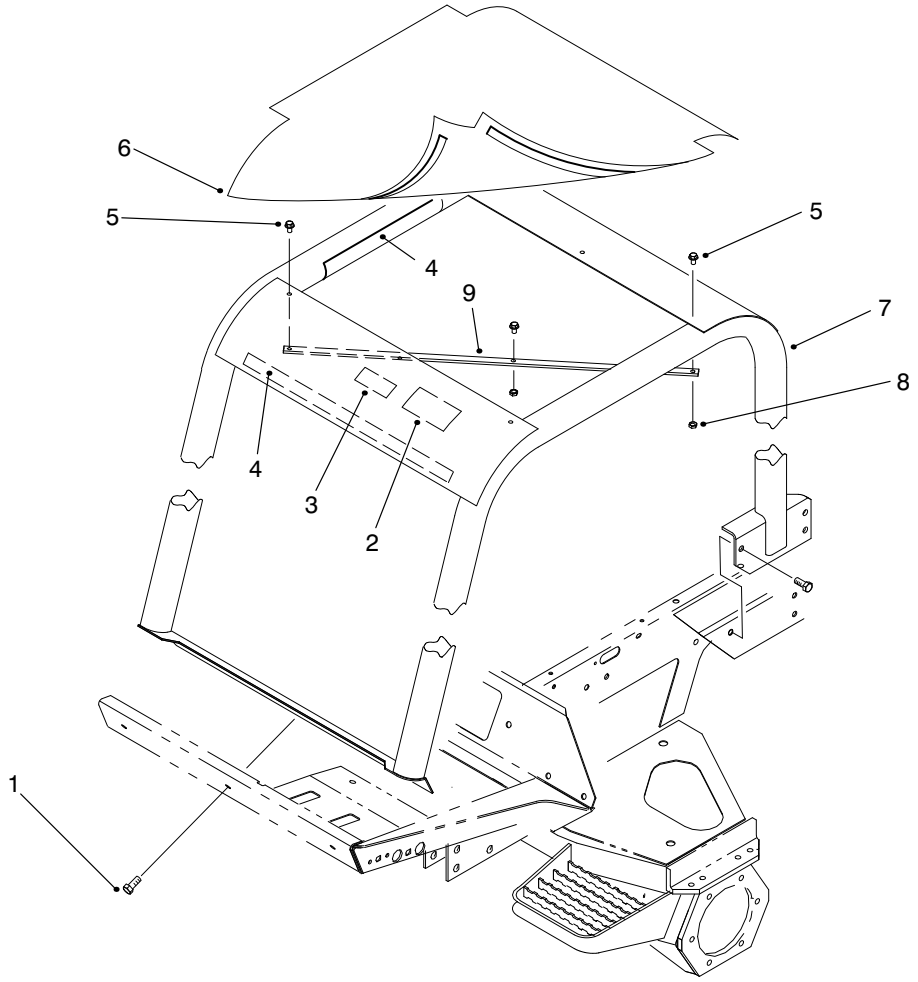



T−2092−1

# ROLL OVER PROTECTION SYSTEM (ROPS)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 33106−035 | Screw−HHF | 3 |
| 2 | 93−8050 | Decal−Warning | 1 |
| 2 | 84−4300 | Decal−Warning (Japan) | 1 |
| 3 | 92−7540 | Decal−ROPS | 1 |
| 4 | 93−9157 | Velcro | 4 |
| 5 | 33104−030 | Screw−HHF | 5 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 6 | 93−9160 | Cover−ROPS | 1 |
| 7 | 94−2643 | Frame−ROPS (Incl. Ref. #2−4) | 1 |
| 8 | 33024−00 | Nut−Lock | 5 |
| 9 | 93−9159 | Strap−Cover | 2 |

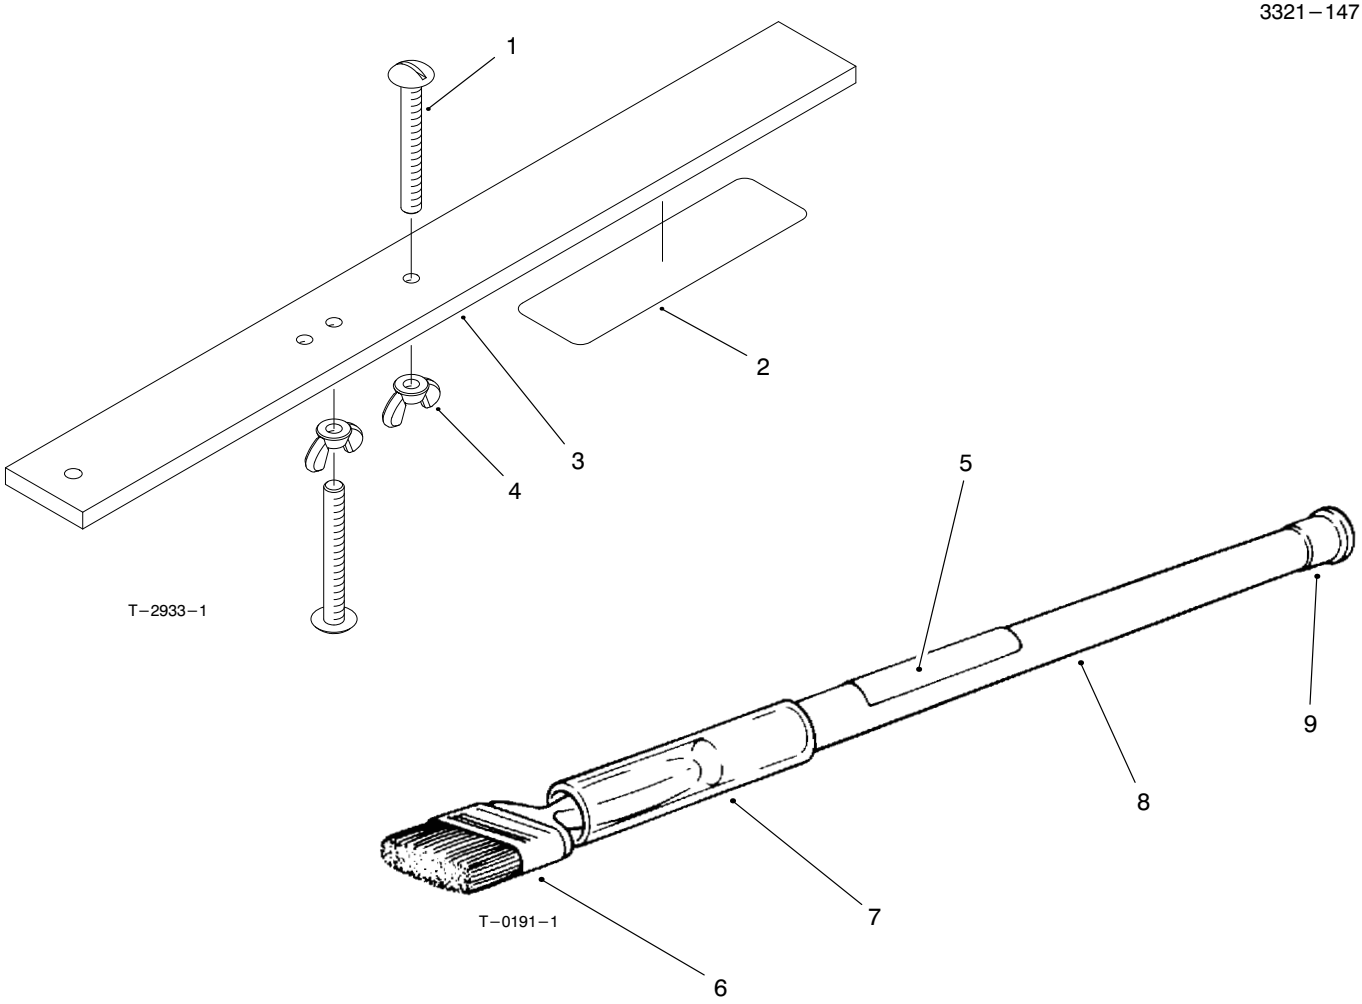


# GAUGE BAR & BACKLAPPING BRUSH ASSEMBLIES

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 32122–54 | Screw–Machine Slot Hd. | 2 |
| 2 | 98–7976 | Decal | 1 |
| 3 | 98–1852 | Asm–Gauge Bar (Incl. Ref. #1–2 & 4) | 1 |
| 4 | 32103–3 | Nut–Wing | 2 |
| 5 | 12–9140 | Decal | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 6 | 36–4310 | Brush | 1 |
| 7 | 29–9090 | Hose–Handle | 1 |
| 8 | 29–9080 | Handle | 1 |
| 9 | 2410–18 | Plug | 1 |
| * | 29–9100 | Asm–Backlapping Brush (Incl. Ref. #5–9) | 1 |

*Not Illustrated

# TORO PART NUMBER INDEX

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 3–6781 | Washer–Thrust | 71 | 44 | 2 |
| 3–6781 | Washer–Thrust | 67 | 65 | 3 |
| 5–0652 | Spacer | 6 | 47 | 1 |
| 12–9140 | Decal | 79 | 5 | 1 |
| 17–9420 | Screw–Handle | 2 | 61 | 1 |
| 21–4191 | Asm–Seat Belt | 7 | 4 | 1 |
| 21–9260 | Cover–Dust | 3 | 18 | 1 |
| 27–2360 | Switch–Ignition | 13 | 43 | 1 |
| 29–9080 | Handle | 79 | 8 | 1 |
| 29–9090 | Hose–Handle | 79 | 7 | 1 |
| 29–9100 | Asm–Backlapping Brush | 79 | * | 1 |
| 36–4310 | Brush | 79 | 6 | 1 |
| 37–8771 | Bolt–Shoulder | 32 | 33 | 2 |
| 44–2210 | Asm–Light, Warning | 3 | 30 | 1 |
| 46–0330 | Nut–Hex | 49 | 1 | 2 |
| 46–6550 | Fitting–Connector | 17 | 8 | 1 |
| 46–6560 | Bushing | 17 | 9 | 2 |
| 46–8091 | Screw–Tapping | 1 | 14 | 2 |
| 48–7570 | Screw–HH | 34 | 9 | 3 |
| 48–7610 | Screw–HH | 34 | 46 | 3 |
| 48–7700 | Screw–HH | 39 | 38 | 3 |
| 48–7700 | Screw–HH | 34 | 45 | 6 |
| 48–7780 | Screw–HH | 34 | 42 | 3 |
| 48–7810 | Screw–HH | 34 | 10 | 3 |
| 48–7810 | Screw–Mounting | 49 | 5 | 3 |
| 48–7840 | Screw–HH | 34 | 5 | 1 |
| 48–7880 | Nut | 34 | 24 | 3 |
| 48–7880 | Nut | 8 | 29 | 1 |
| 48–7890 | Nut | 8 | 30 | 1 |
| 48–7930 | Nut–Hex. | 34 | 28 | 2 |
| 48–9470 | Screw | 34 | 4 | 1 |
| 49–2040 | Screw–HH | 8 | 2 | 1 |
| 49–2640 | Seal–Shaft | 21 | 11 | 1 |
| 49–6440 | Pedal–Accelerator | 6 | 15 | 1 |
| 52–5910 | Ring–Retaining | 8 | 25 | 1 |
| 53–9681 | Mount–Rubber | 34 | 3 | 3 |
| 55–4130 | Hose – Fuel | 51 | 54 | 1 |
| 56–6710 | O–Ring | 21 | 1 | 6 |
| 56–7972 | Clamp | 3 | 42 | 2 |
| 56–7972 | Clamp–Tube | 64 | 8 | 2 |
| 56–7972 | Clamp–Tube | 76 | 29 | 4 |
| 56–7973 | Clamp | 4 | 52 | 6 |
| 56–7973 | Clamp–Tube (Model 03803) | 64 | 34 | 8 |
| 56–7973 | Clamp–Tube (Model 03804) | 64 | 34 | 10 |
| 59–9740 | Latch–Draw | 1 | 12 | 1 |
| 60–5700 | Spring–Compression | 6 | 43 | 1 |
| 60–5890 | Washer | 21 | 12 | 1 |
| 60–6700 | Screw–HH | 67 | 45 | 6 |
| 61–2790 | Filler–Screen | 17 | 24 | 1 |
| 61–2790 | Filter–Screen | 16 | 9 | 1 |
| 62–2170 | Washer–Thrust | 61 | 17 | 4 |
| 62–5550 | Decal–Toro | 1 | 1 | 1 |
| 62–7650 | Gasket | 17 | 17 | 1 |
| 63–7622 | Hose–Fuel | 51 | 15 | 1 |
| 63–7627 | Hose–Fuel | 17 | 4 | 1 |
| 63–7627 | Hose–Fuel | 34 | 27 | 1 |
| 63–7640 | Sender–Fuel | 17 | 18 | 1 |
| 63–7880 | Pin–Latch, Brake | 6 | 31 | 1 |
| 63–7900 | Rack | 3 | 1 | 1 |
| 63–8360 | Key–Ignition | 12 | 35 | 1 |
| 63–8410 | Washer–Flat | 17 | 14 | 3 |
| 63–8410 | Washer–Flat | 16 | 27 | 3 |
| 63–9920 | Decal–EEC 105 DBA | 8 | 15 | 1 |
| 65–5100 | Handle–Hood | 1 | 11 | 1 |
| 66–2920 | Washer | 2 | 59 | 4 |
| 66–2920 | Washer | 13 | 77 | 3 |
| 66–2920 | Washer–Nylon | 8 | 1 | 2 |
| 66–3160 | Screw | 34 | 11 | 4 |
| 66–3240 | Cap–Radiator (Europe) | 51 | 22 | 1 |
| 66–4190 | Spring | 8 | 12 | 1 |
| 66–6480 | Washer | 2 | 58 | 2 |
| 66–8121 | Standpipe | 17 | 7 | 1 |
| 66–8520 | Bumper–Down Stop | 9 | 17 | 2 |
| 66–8530 | Adjuster | 9 | 16 | 1 |
| 66–8560 | Nut–Push | 9 | 11 | 4 |
| 66–8610 | Weldment–Lower | 9 | 10 | 1 |
| 66–9290 | Spacer | 9 | 15 | 6 |
| 67–6570 | Spacer–Wheel | 71 | 37 | 2 |
| 67–7160 | Block–Fuse | 13 | 48 | 2 |
| 68–6150 | Breather–Air | 16 | 4 | 1 |
| 68–9420 | Washer–Lock | 42 | 4 | 6 |
| 68–9420 | Washer–Lock | 38 | 34 | 3 |
| 69–2980 | Seal–Inner | 61 | 22 | 2 |
| 69–3020 | Latch–Draw | 32 | 34 | 2 |
| 69–4260 | Kit–Seal | 66 | * | 1 |
| 69–4260 | Kit–Seal | 75 | * | 2 |
| 69–6470 | Bushing–Flange | 61 | 18 | 4 |
| 69–8890 | Cap–Spindle | 61 | 15 | 2 |
| 69–8900 | Spacer | 54 | 59 | 1 |
| 69–8910 | Washer | 54 | 58 | 2 |
| 69–8920 | Washer | 25 | 10 | 4 |
| 69–8920 | Washer | 25 | 10 | 6 |
| 69–8930 | Washer | 76 | 9 | 10 |
| 69–8930 | Washer | 64 | 16 | 8 |
| 69–8950 | Spacer | 25 | 12 | 2 |
| 69–8950 | Spacer | 25 | 12 | 3 |
| 69–8960 | Spacer | 76 | 11 | 5 |
| 69–8960 | Spacer | 64 | 18 | 4 |
| 70–1480 | Relay | 8 | 27 | 1 |
| 70–2780 | Piston | 68 | 4 | 1 |
| 70–2780 | Piston | 70 | 4 | 1 |
| 70–2780 | Piston | 73 | 5 | 1 |
| 71–4580 | Clutch–Roller | 53 | 15 | 1 |
| 71–4590 | Washer–Thrust | 53 | 16 | 2 |
| 71–4760 | Seal | 61 | 4 | 2 |
| 71–4760 | Seal | 59 | 12 | 2 |
| 72–3560 | Decal–4WD (Model 03804) | 2 | 29 | 1 |
| 74–0720 | Tube–Manual | 7 | 16 | 1 |
| 74–3410 | Asm–Radiator | 32 | 20 | 1 |
| 74–3650 | Fan–Engine | 34 | 32 | 1 |
| 74–5500 | Bolt–Wheel | 53 | 36 | 10 |
| 74–5700 | Bearing–Needle | 53 | 30 | 1 |
| 74–5950 | Latch–Swell | 1 | 24 | 3 |
| 74–5950 | Latch–Swell | 12 | 30 | 1 |
| 74–6490 | Hose–Water Line | 34 | 40 | 2 |
| 74–6540 | Tappet–Valve | 38 | 14 | 8 |
| 74–6550 | Cup–Upper Valve Spring | 37 | 11 | 8 |
| 74–6560 | Spring–Valve | 37 | 10 | 8 |
| 74–6570 | Cup–Lower Valve Spring | 37 | 9 | 8 |
| 74–6580 | Insert–Valve (1.650mm) | 37 | 13 | 8 |
| 74–6590 | Insert–Valve (1.725mm) | 37 | * | 8 |
| 74–6600 | Insert–Valve (1.800mm) | 37 | * | 8 |
| 74–6610 | Insert–Valve (1.900mm) | 37 | * | 8 |
| 74–6620 | Insert–Valve (1.975mm) | 37 | * | 8 |
| 74–6630 | Insert–Valve (2.050mm) | 37 | * | 8 |
| 74–6640 | Insert–Valve (2.125mm) | 37 | * | 8 |
| 74–6650 | Insert–Valve (2.225mm) | 37 | * | 8 |
| 74–6660 | Insert–Valve (2.250mm) | 37 | * | 8 |
| 74–6670 | Insert–Valve (2.275mm) | 37 | * | 8 |
| 74–6680 | Insert–Valve (2.300mm) | 37 | * | 8 |
| 74–6690 | Insert–Valve (2.325mm) | 37 | * | 8 |
| 74–6700 | Insert–Valve (2.350mm) | 37 | * | 8 |
| 74–6710 | Insert–Valve (2.375mm) | 37 | * | 8 |
| 74–6720 | Insert–Valve (2.400mm) | 37 | 13 | 8 |
| 74–6730 | Insert–Valve (2.425mm) | 37 | * | 8 |
| 74–6740 | Insert–Valve (2.450mm) | 37 | * | 8 |
| 74–6750 | Insert–Valve (2.475mm) | 37 | * | 8 |
| 74–6760 | Insert–Valve (2.500mm) | 37 | * | 8 |
| 74–6770 | Insert–Valve (2.525mm) | 37 | * | 8 |
| 74–6780 | Insert–Valve (2.550mm) | 37 | * | 8 |
| 74–6790 | Insert–Valve (2.575mm) | 37 | * | 8 |
| 74–6800 | Insert–Valve (2.600mm) | 37 | * | 8 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 74−6810 | Insert−Valve (2.625mm) | 37 | * | 8 |
| 74−6820 | Insert−Valve (2.650mm) | 37 | * | 8 |
| 74−6830 | Insert−Valve (2.675mm) | 37 | * | 8 |
| 74−6840 | Insert−Valve (2.700mm) | 37 | * | 8 |
| 74−6850 | Insert−Valve (2.725mm) | 37 | * | 8 |
| 74−6860 | Insert−Valve (2.750mm) | 37 | * | 8 |
| 74−6870 | Insert−Valve (2.775mm) | 37 | * | 8 |
| 74−6880 | Insert−Valve (2.800mm) | 37 | * | 8 |
| 74−6890 | Insert−Valve (2.825mm) | 37 | * | 8 |
| 74−6900 | Insert−Valve (2.850mm) | 37 | * | 8 |
| 74−6910 | Insert−Valve (2.875mm) | 37 | * | 8 |
| 74−6920 | Insert−Valve (2.900mm) | 37 | * | 8 |
| 74−6930 | Insert−Valve (2.925mm) | 37 | * | 8 |
| 74−6940 | Insert−Valve (2.950mm) | 37 | * | 8 |
| 74−6950 | Insert−Valve (2.975mm) | 37 | * | 8 |
| 74−6960 | Insert−Valve (3.000mm) | 37 | * | 8 |
| 74−6970 | Insert−Valve (3.025mm) | 37 | * | 8 |
| 74−6980 | Insert−Valve (3.050mm) | 38 | 13 | 8 |
| 74−6990 | Insert−Valve (3.075mm) | 38 | * | 8 |
| 74−7000 | Insert−Valve (3.100mm) | 38 | * | 8 |
| 74−7010 | Insert−Valve (3.125mm) | 38 | * | 8 |
| 74−7020 | Insert−Valve (3.150mm) | 38 | * | 8 |
| 74−7030 | Insert−Valve (3.175mm) | 38 | * | 8 |
| 74−7040 | Insert−Valve (3.200mm) | 38 | * | 8 |
| 74−7050 | Insert−Valve (3.225mm) | 38 | * | 8 |
| 74−7060 | Insert−Valve (3.250mm) | 38 | * | 8 |
| 74−7070 | Insert−Valve (3.275mm) | 38 | * | 8 |
| 74−7080 | Insert−Valve (3.300mm) | 38 | * | 8 |
| 74−7090 | Insert−Valve (3.325mm) | 38 | * | 8 |
| 74−7100 | Insert−Valve (3.350mm) | 38 | * | 8 |
| 74−7110 | Insert−Valve (3.375mm) | 38 | * | 8 |
| 74−7120 | Insert−Valve (3.400mm) | 38 | * | 8 |
| 74−7130 | Insert−Valve (3.425mm) | 38 | * | 8 |
| 74−7140 | Insert−Valve (3.450mm) | 38 | * | 8 |
| 74−7150 | Insert−Valve (3.475mm) | 38 | * | 8 |
| 74−7160 | Insert−Valve (3.500mm) | 38 | * | 8 |
| 74−7170 | Insert−Valve (3.550mm) | 38 | * | 8 |
| 74−7180 | Insert−Valve (3.625mm) | 38 | * | 8 |
| 74−7190 | Insert−Valve (3.700mm) | 38 | * | 8 |
| 74−7200 | Insert−Valve (3.775mm) | 38 | * | 8 |
| 74−7210 | Insert−Valve (3.850mm) | 38 | * | 8 |
| 74−7220 | Insert−Valve (3.925mm) | 38 | * | 8 |
| 74−7230 | Insert−Valve (4.000mm) | 38 | * | 8 |
| 74−7240 | Collar−Split | 37 | 12 | 16 |
| 74−7260 | Bolt−Head | 38 | 29 | 10 |
| 74−7270 | Washer−Flat | 38 | 28 | 10 |
| 74−7300 | Pan−Oil | 35 | 23 | 1 |
| 74−7310 | Plug−Threaded | 35 | 20 | 1 |
| 74−7320 | Gasket | 35 | 19 | 1 |
| 74−7330 | Screw−HH | 35 | 25 | 23 |
| 74−7380 | Gasket−Oil Pan | 35 | 21 | 1 |
| 74−7400 | Tube | 39 | 41 | 1 |
| 74−7420 | Ball | 39 | 45 | 4 |
| 74−7430 | Chamber−Turbulence | 39 | 46 | 4 |
| 74−7440 | Chamber−Turbulence | 39 | * | 4 |
| 74−7450 | Seat−Intake Valve | 39 | 48 | 4 |
| 74−7460 | Seal−Intake Valve | 39 | * | 4 |
| 74−7480 | Valve−Intake | 39 | 49 | 4 |
| 74−7560 | Washer−Spring | 38 | 16 | 3 |
| 74−7600 | Plug | 37 | 4 | 4 |
| 74−7630 | Gasket−Valve Cover | 38 | 18 | 1 |
| 74−7640 | Cover−Valve | 38 | 19 | 1 |
| 74−7650 | Washer−Flat | 38 | 20 | 3 |
| 74−7670 | Head Bolt & Washer Set | 39 | * | 1 |
| 74−7770 | Hose−Crankcase | 35 | 11 | 1 |
| 74−7780 | Gasket | 35 | 12 | 1 |
| 74−7790 | Screw | 35 | 13 | 1 |
| 74−7810 | Gasket−Plate | 35 | 15 | 1 |
| 74−7820 | Plate | 35 | 16 | 1 |
| 74−7840 | Plug | 39 | 42 | 2 |
| 74−7840 | Plug−27 mm Dia. | 35 | 18 | 8 |
| 74−7840 | Plug−27 mm Dia. | 38 | 33 | 2 |
| 74−7930 | Screw−Bearing Cap | 35 | 27 | 10 |
| 74−7940 | Bushing−Spring | 35 | 28 | 1 |
| 74−7950 | Screw−Plate | 35 | 29 | 6 |
| 74−7960 | Stud−Filter | 35 | 30 | 1 |
| 74−7970 | Filter−Oil | 35 | 31 | 1 |
| 74−7990 | Pin | 36 | 16 | 1 |
| 74−7990 | Pin−Spring | 35 | 33 | 4 |
| 74−8000 | Plug | 35 | 34 | 2 |
| 74−8010 | Guide−Dipstick | 35 | 35 | 1 |
| 74−8030 | Pin−Spring | 35 | 37 | 1 |
| 74−8100 | Gear−Pinion | 36 | 4 | 1 |
| 74−8120 | Key−Woodruff | 36 | 6 | 2 |
| 74−8140 | Cover | 36 | 9 | 1 |
| 74−8150 | Gasket−Cover | 36 | 10 | 1 |
| 74−8170 | Bearing Set (Std.) | 36 | 12 | 2 |
| 74−8210 | Thrust Bearing Set | 36 | * | 2 |
| 74−8230 | Crankshaft | 36 | 14 | 1 |
| 74−8260 | Flywheel | 36 | 34 | 1 |
| 74−8270 | Pin | 36 | 18 | 3 |
| 74−8290 | Seal−#1 Bearing Cap | 36 | 20 | 2 |
| 74−8300 | Clip−Piston Pin | 36 | 21 | 8 |
| 74−8310 | Pin−Piston | 36 | 22 | 4 |
| 74−8320 | Piston Ring Set−0.20 mm | 36 | * | 4 |
| 74−8330 | Piston Ring Set−0.50 mm | 36 | * | 4 |
| 74−8340 | Piston Ring Set−0.80 mm | 36 | * | 4 |
| 74−8360 | Rod−Connecting | 36 | 25 | 4 |
| 74−8380 | Bearing−Connecting Rod | 36 | 27 | 4 |
| 74−8420 | Piston Set−Stage #1 | 36 | 29 | 1 |
| 74−8430 | Piston Set−Stage #2 | 36 | * | 1 |
| 74−8440 | Piston Set−Stage #3 | 36 | * | 1 |
| 74−8610 | Pin | 46 | 7 | 2 |
| 74−8610 | Pin | 48 | 8 | 2 |
| 74−8630 | Bushing−Flange | 46 | 8 | 1 |
| 74−8650 | Journal | 46 | 12 | 1 |
| 74−8670 | Union−Inlet | 46 | 13 | 1 |
| 74−8680 | Gasket | 46 | 14 | 2 |
| 74−8710 | Washer | 46 | 16 | 1 |
| 74−8710 | Washer−E.T.L.W. | 50 | 9 | 1 |
| 74−8750 | Pipe | 47 | 12 | 1 |
| 74−8770 | Plug | 47 | 10 | 1 |
| 74−8830 | Belt | 40 | 18 | 1 |
| 74−8870 | Gasket | 46 | 21 | 2 |
| 74−8900 | Washer−Flat | 37 | 7 | 6 |
| 74−8920 | Washer−Copper | 21 | 9 | 4 |
| 74−9100 | Pad−Pedal, Forward | 6 | 14 | 1 |
| 74−9110 | Pad−Pedal, Reverse | 6 | 17 | 1 |
| 75−0610 | Tread−Foot, RH | 2 | * | 1 |
| 75−0620 | Tread−Foot, LH | 2 | 43 | 1 |
| 75−0630 | Tread−Foot, Center | 2 | 44 | 1 |
| 75−0920 | Cartridge−Relief 3000 psi | 66 | 13 | 1 |
| 75−0920 | Cartridge−Relief 3000 psi | 75 | 16 | 1 |
| 75−1010 | Switch | 12 | 20 | 1 |
| 75−1370 | Cable−Battery, Positive | 51 | 9 | 1 |
| 75−1370 | Cable−Battery, Positive | 34 | 17 | 1 |
| 75−1390 | Cover−Access, Front | 2 | 39 | 1 |
| 75−1410 | Plate−Access, Floor | 2 | 40 | 1 |
| 75−1430 | Pedal−Brake, RH | 6 | 40 | 1 |
| 75−1440 | Pedal−Brake, LH | 6 | 35 | 1 |
| 75−1470 | Pin−Pivot, Brake | 6 | 46 | 1 |
| 75−1490 | Rod−Brake, Park | 4 | 54 | 1 |
| 75−2080 | Kit−Seal | 66 | * | 5 |
| 75−2080 | Kit−Seal | 75 | * | 7 |
| 75−2120 | Shaft With Clevis | 68 | 12 | 1 |
| 75−2810 | Bracket−Column, Steering | 3 | 16 | 1 |
| 75−2970 | Pedal−Traction | 6 | 16 | 1 |
| 75−3270 | Hub−Pivot, Traction | 6 | 6 | 1 |
| 75−3400 | Shaft−Pivot, Seat | 7 | 20 | 1 |
| 75−3480 | Weldment−Upper | 9 | 23 | 1 |
| 75−3510 | Bolt−Shoulder | 9 | 26 | 2 |
| 75−3530 | Spring−Compression | 9 | 3 | 1 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 75−3540 | Pin−Roll | 9 | 6 | 1 |
| 75−3550 | Bumper−Seat | 9 | 7 | 2 |
| 75−3580 | Plate−Mounting, Seat | 9 | 2 | 1 |
| 75−3680 | Rod−Seat | 8 | 23 | 1 |
| 75−3710 | Dipstick | 16 | 8 | 1 |
| 75−3860 | Fender−LH | 2 | 36 | 1 |
| 75−4360 | Bracket−Suspension, Seat | 7 | 15 | 1 |
| 75−4370 | Bracket−Seat | 7 | 10 | 1 |
| 75−5350 | Pin−Cylinder | 67 | 27 | 3 |
| 75−5740 | Box−Control | 13 | 53 | 1 |
| 75−5780 | Hinge−Cover | 2 | 47 | 1 |
| 75−5780 | Hinge−Cover | 13 | 54 | 1 |
| 75−5810 | Box−Tool | 2 | 30 | 1 |
| 75−5890 | Hose | 67 | 33 | 1 |
| 75−6370 | Cap−Sensor | 67 | 19 | 1 |
| 75−6490 | Lever | 6 | 22 | 1 |
| 75−6510 | Bracket−Lever | 6 | 20 | 1 |
| 75−6550 | Disc−Friction | 6 | 19 | 1 |
| 75−6580 | Cable−Pedal | 6 | 7 | 1 |
| 75−6820 | Hour Meter | 13 | 51 | 1 |
| 76−1910 | Shaft−Pivot | 9 | 12 | 2 |
| 76−1920 | Bushing−Sleeve | 9 | 9 | 4 |
| 76−1930 | Knob−Tension Adjustment | 9 | 19 | 1 |
| 76−1940 | Spring−Extension | 9 | 14 | 2 |
| 76−2940 | Bumper−Rubber | 9 | 8 | 2 |
| 76−2980 | Washer−Thrust | 71 | 45 | 2 |
| 76−2980 | Washer−Thrust | 67 | 66 | 3 |
| 76−4260 | Bushing | 59 | 3 | 1 |
| 76−4910 | Stud | 46 | 26 | 3 |
| 76−4930 | Washer | 46 | 5 | 3 |
| 76−4940 | Gear−Pump, Injection | 46 | 2 | 1 |
| 76−4950 | Nut | 46 | 1 | 1 |
| 76−4990 | Bracket | 48 | 15 | 1 |
| 76−5010 | Washer | 40 | 23 | 3 |
| 76−5010 | Washer−Spring | 48 | 2 | 1 |
| 76−5010 | Washer−Spring | 43 | 7 | 5 |
| 76−5060 | Screw | 48 | 1 | 1 |
| 76−5070 | Asm−Oil Pump | 43 | 1 | 1 |
| 76−5090 | Spring−Piston | 43 | 3 | 1 |
| 76−5100 | Bolt−Shoulder | 43 | 5 | 1 |
| 76−5130 | Stud | 37 | 6 | 6 |
| 76−5170 | Chain−Pump Drive | 43 | 13 | 1 |
| 76−5180 | Washer−Copper | 18 | 1 | 4 |
| 76−5190 | Fitting−Adjustable | 18 | 2 | 2 |
| 76−5220 | Element−Filter | 18 | 5 | 1 |
| 76−5260 | Relay−Glow Plug | 50 | 1 | 1 |
| 76−5260 | Relay−Glow Plug | 8 | 28 | 1 |
| 76−5290 | Washer−Spring | 50 | 4 | 4 |
| 76−5300 | Asm−Filter, Fuel | 17 | 22 | 1 |
| 76−5310 | Washer−E.T.L.W. | 50 | 7 | 1 |
| 76−5320 | Sensor−Water | 18 | 9 | 1 |
| 76−5440 | Screw | 38 | 17 | 2 |
| 76−5500 | Screw | 45 | 6 | 5 |
| 76−5520 | Holder−Injector | 47 | 5 | 4 |
| 76−5530 | Gasket−Injector | 47 | 3 | 4 |
| 76−5540 | Plug | 47 | 2 | 4 |
| 76−5570 | Washer−Lock | 49 | 2 | 2 |
| 76−5590 | Sleeve−Spring | 49 | 4 | 1 |
| 76−5600 | Asm−Holder, Injector | 47 | 14 | 4 |
| 76−6910 | Kit−Rotating | 31 | 14 | 1 |
| 76−6910 | Kit−Rotating | 30 | 16 | 1 |
| 76−6910 | Kit−Rotating | 29 | 17 | 1 |
| 76−6930 | Shaft−Drive, Straight | 31 | 3 | 1 |
| 76−6950 | Race−Thrust | 29 | 5 | 2 |
| 76−6950 | Race−Thrust | 30 | 5 | 2 |
| 76−6950 | Race−Thrust | 31 | 5 | 2 |
| 76−6950 | Race−Thrust | 23 | 51 | 1 |
| 76−6960 | Bearing−Thrust | 29 | 6 | 1 |
| 76−6960 | Bearing−Thrust | 30 | 6 | 1 |
| 76−6960 | Bearing−Thrust | 31 | 6 | 1 |
| 76−6960 | Bearing−Thrust | 23 | 52 | 1 |
| 76−6970 | Insert−Camplate | 31 | 15 | 1 |
| 76−6970 | Insert−Camplate | 30 | 17 | 1 |
| 76−6970 | Insert−Camplate | 29 | 18 | 1 |
| 76−6980 | O−Ring | 31 | 9 | 1 |
| 76−6980 | O−Ring | 29 | 10 | 1 |
| 76−6980 | O−Ring | 30 | 10 | 1 |
| 76−7000 | Ring−Retaining | 29 | 4 | 2 |
| 76−7000 | Ring−Retaining | 30 | 4 | 2 |
| 76−7000 | Ring−Retaining | 31 | 4 | 2 |
| 76−7000 | Ring−Retaining | 23 | 50 | 2 |
| 76−7010 | Ring−Retaining | 29 | 1 | 1 |
| 76−7010 | Ring−Retaining | 30 | 1 | 1 |
| 76−7010 | Ring−Retaining | 31 | 1 | 1 |
| 76−7010 | Ring−Retaining | 23 | 55 | 1 |
| 76−7020 | Spacer | 31 | 2 | 1 |
| 76−7110 | Plug | 56 | 5 | 1 |
| 76−7110 | Plug | 58 | 26 | 4 |
| 76−7120 | Seal−Washer | 56 | 6 | 1 |
| 76−7120 | Seal−Washer | 58 | 27 | 4 |
| 76−7140 | Plug | 56 | 9 | 1 |
| 76−7160 | Asm−Gear Case | 57 | * | 1 |
| 76−7170 | Case−Differential | 57 | 3 | 1 |
| 76−7180 | Pinion−Mate | 57 | 10 | 2 |
| 76−7190 | Gear−Side | 57 | 9 | 2 |
| 76−7200 | Shaft−Pinion | 57 | 4 | 1 |
| 76−7210 | Washer−Thrust | 57 | 11 | 2 |
| 76−7220 | Washer−Thrust | 57 | 8 | 2 |
| 76−7230 | Washer−Lock | 57 | 5 | 4 |
| 76−7240 | Ring−Gear | 57 | 2 | 1 |
| 76−7250 | Shaft−Drive | 57 | 1 | 1 |
| 76−7260 | Bolt | 57 | 6 | 8 |
| 76−7270 | Pin−Spring | 57 | 7 | 1 |
| 76−7280 | Bearing | 57 | 12 | 2 |
| 76−7290 | Shim−0.1 mm | 57 | 13 | A/R |
| 76−7300 | Shim−0.2 mm | 57 | * | A/R |
| 76−7310 | Shim−0.3 mm | 57 | * | A/R |
| 76−7320 | Sleeve | 55 | 4 | 1 |
| 76−7330 | Bearing | 55 | 1 | 1 |
| 76−7340 | Seal−Oil | 55 | 6 | 1 |
| 76−7350 | Bushing | 55 | 7 | 1 |
| 76−7360 | O−Ring | 55 | 10 | 1 |
| 76−7370 | Bearing | 55 | 11 | 1 |
| 76−7380 | Washer | 55 | 8 | 1 |
| 76−7390 | Nut−Lock | 55 | 9 | 1 |
| 76−7400 | O−Ring | 55 | 2 | 2 |
| 76−7410 | Shim−0.1 mm | 55 | 3 | A/R |
| 76−7420 | Shim−0.2 mm | 55 | * | A/R |
| 76−7430 | Shim−0.4 mm | 55 | * | A/R |
| 76−7470 | Pipe | 56 | 8 | 1 |
| 76−7480 | Plug−Vent | 56 | 7 | 1 |
| 76−7490 | Shaft−Differential | 57 | 14 | 2 |
| 76−7500 | Bearing | 57 | 15 | 4 |
| 76−7510 | Pinion−14T | 58 | 10 | 2 |
| 76−7510 | Pinion−14T | 57 | 17 | 2 |
| 76−7520 | Shim−0.1 mm | 57 | 16 | A/R |
| 76−7530 | Shim−0.2 mm | 57 | * | A/R |
| 76−7540 | Shim−0.4 mm | 57 | * | A/R |
| 76−7550 | Ring−Retaining | 57 | 18 | 2 |
| 76−7560 | Case−Gear | 58 | 1 | 2 |
| 76−7580 | O−Ring | 57 | 19 | 4 |
| 76−7590 | Spacer | 57 | 20 | 2 |
| 76−7600 | Bolt−Reamer | 57 | 21 | 2 |
| 76−7610 | Bolt | 57 | 23 | 6 |
| 76−7620 | Washer−Lock | 57 | 22 | 8 |
| 76−7630 | Holder−25 mm R.H. | 58 | * | 1 |
| 76−7640 | Bolt | 58 | 5 | 8 |
| 76−7640 | Bolt | 58 | 28 | 20 |
| 76−7650 | Shaft−Final Drive | 58 | 2 | 2 |
| 76−7660 | Holder−20 mm L.H. | 58 | 4 | 1 |
| 76−7670 | Bearing | 58 | 3 | 4 |
| 76−7680 | Case−Final Drive | 58 | 8 | 2 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 76−7700 | Shim−0.8 mm | 59 | 25 | A/R |
| 76−7710 | Bolt | 59 | 8 | 2 |
| 76−7720 | Nut | 59 | 9 | 4 |
| 76−7730 | Bushing | 58 | 7 | 2 |
| 76−7740 | Seal−Oil | 58 | 6 | 2 |
| 76−7750 | Pinion−15T | 58 | 11 | 2 |
| 76−7760 | Shim−1.0 mm | 59 | * | A/R |
| 76−7770 | Cover | 58 | 9 | 2 |
| 76−7780 | Shim−1.2 mm | 59 | * | A/R |
| 76−7790 | Shim−1.4 mm | 59 | * | A/R |
| 76−7810 | Holder−Bearing | 58 | 19 | 2 |
| 76−7820 | Shim−1.0 mm | 59 | 5 | A/R |
| 76−7830 | Shaft−Wheel | 58 | 21 | 2 |
| 76−7840 | Gear−Bevel | 58 | 13 | 2 |
| 76−7870 | Seal−Oil | 58 | 20 | 2 |
| 76−7880 | Spacer | 58 | 15 | 2 |
| 76−7890 | Shim−0.15 mm | 58 | 14 | A/R |
| 76−7900 | Shim−0.2 mm | 58 | * | A/R |
| 76−7910 | Shim−0.4 mm | 58 | * | A/R |
| 76−7920 | Ring−Retaining | 58 | 16 | 2 |
| 76−7930 | Ring−Retaining | 58 | 17 | 2 |
| 76−7950 | Bushing | 59 | 4 | 1 |
| 76−7960 | Fitting−Grease | 59 | 21 | 2 |
| 76−7960 | Fitting−Grease | 58 | 30 | 2 |
| 76−7970 | Shim−1.4 mm | 59 | * | A/R |
| 76−7980 | Shim−1.2 mm | 59 | * | A/R |
| 76−7990 | Shim−.08 mm | 59 | * | A/R |
| 76−8000 | Bolt | 59 | 6 | 4 |
| 76−8010 | Washer | 59 | 7 | 2 |
| 76−8070 | Adapter | 55 | 12 | 1 |
| 76−8350 | Stop−Axle | 61 | 10 | 2 |
| 76−8350 | Stop−Axle, 4WD | 53 | 5 | 2 |
| 76−8750 | Plate − Warning, Fan | 32 | 15 | 1 |
| 76−9060 | Gauge−Temperature | 12 | 33 | 1 |
| 77−2870 | Weldment−Hanger | 9 | 18 | 1 |
| 77−3300 | Stud | 42 | 1 | 6 |
| 77−3310 | Gasket | 42 | 2 | 2 |
| 77−3320 | Nut−Hex | 42 | 5 | 6 |
| 77−3340 | Manifold−Exhaust | 42 | 3 | 1 |
| 77−3400 | Camshaft | 40 | 5 | 1 |
| 77−3410 | Key | 40 | 4 | 1 |
| 77−3420 | Gasket | 40 | 3 | 1 |
| 77−3440 | Screw | 40 | 1 | 2 |
| 77−3450 | Washer | 40 | 2 | 2 |
| 77−3470 | Screw | 43 | 10 | 1 |
| 77−3490 | Screw | 43 | 11 | 1 |
| 77−3510 | Spring | 40 | 14 | 1 |
| 77−3520 | Cup | 40 | 13 | 1 |
| 77−3600 | Plate−Closing | 51 | 47 | 1 |
| 77−3620 | Retainer−Cover | 32 | 25 | 2 |
| 77−3700 | Gasket−Exhaust, Manifold | 34 | 37 | 1 |
| 77−3790 | Plug−Drain | 35 | 26 | 1 |
| 77−4000 | Shim Set | 57 | * | 1 |
| 77−4010 | Shim Set | 55 | * | 1 |
| 77−4020 | Shim Set | 57 | * | 1 |
| 77−4030 | Shim Set | 58 | * | 1 |
| 77−4040 | Shim Set | 59 | * | 1 |
| 77−4050 | Shim Set | 59 | * | 1 |
| 80−4860 | Pin−Clevis | 9 | 1 | 1 |
| 80−8660 | Spacer | 64 | 9 | 2 |
| 82−3740 | Cooler−Oil | 32 | 21 | 1 |
| 82−5050 | Screw−HH | 19 | 26 | 2 |
| 82−5120 | Adapter−Pump To Engine | 34 | 47 | 1 |
| 82−6490 | Asm−Hose | 74 | 1 | 1 |
| 82−6490 | Hose | 67 | 31 | 1 |
| 82−8170 | Clamp | 67 | 48 | 6 |
| 82−9060 | Adjuster W/Handle | 9 | 13 | 1 |
| 83−6780 | Cylinder Pin Assembly | 67 | 49 | 2 |
| 83−6790 | Cylinder Pin Assembly | 67 | 16 | 1 |
| 84−1710 | Piston | 69 | 4 | 1 |
| 84−1710 | Piston | 72 | 5 | 1 |
| 84−1740 | Shaft With Clevis | 69 | 12 | 1 |
| 84−1760 | Kit−Seal Repair | 69 | * | 1 |
| 84−1760 | Kit−Seal repair | 72 | * | 1 |
| 84−2860 | Decal−Fuel, Diesel (Japan) | 2 | 34 | 1 |
| 84−3420 | Decal−No Riders (Japan) | 12 | 13 | 1 |
| 84−3420 | Decal−No Riders (Japan) | 2 | 35 | 1 |
| 84−3500 | Decal −Fast/Slow (Japan) | 6 | 23 | 1 |
| 84−4300 | Decal−Warning (Japan) | 78 | 2 | 1 |
| 85−4470 | Potentiometer | 13 | 52 | 1 |
| 85−4480 | Knob | 13 | 45 | 1 |
| 85−4750 | Display−Diagnostic ACE | 10 | 2 | 1 |
| 85−6910 | Decal−EEC 86 DBA | 8 | 16 | 1 |
| 86−2990 | Mount−Cable, Throttle | 34 | 20 | 2 |
| 86−5390 | Kit−Seal | 60 | * | 1 |
| 86−5910 | Tire | 61 | 28 | 2 |
| 86−5910 | Tire | 53 | 33 | 2 |
| 86−7330 | Kit−Seal Repair | 68 | * | 1 |
| 86−7330 | Kit−Seal Repair | 70 | * | 1 |
| 86−7330 | Kit−Seal repair | 73 | * | 1 |
| 87−5100 | Washer−Snubbing | 34 | 2 | 3 |
| 87−6270 | Socket−Light | 13 | *63 | 4 |
| 87−6620 | Screw−Torx Pan Hd. | 3 | 31 | 2 |
| 88−1550 | Stop−Axle | 54 | 66 | 2 |
| 88−1980 | Decal− Hydraulic Oil | 1 | 5 | 1 |
| 88−3870 | Cover | 3 | 20 | 1 |
| 88−6980 | Cartridge−N.C. Poppet | 66 | 10 | 1 |
| 88−6980 | Cartridge−N.O. Poppet | 75 | 17 | 1 |
| 88−6990 | Cartridge−N.C. | 75 | 7 | 2 |
| 88−6990 | Cartridge−N.C. Spool | 66 | 7 | 1 |
| 88−9190 | Solenoid−20 Watt | 66 | 1 | 4 |
| 88−9190 | Solenoid−20 Watt | 75 | 1 | 7 |
| 88−9200 | Solenoid−28 Watt | 66 | 8 | 1 |
| 88−9200 | Solenoid−28 Watt | 75 | 10 | 1 |
| 92−1180 | Asm−Seat | 7 | 5 | 1 |
| 92−1422 | Spacer−Coupler | 34 | 49 | 3 |
| 92−3071 | Solenoid | 75 | 8 | 1 |
| 92−5720 | Controller−Solid State | 74 | 35 | 1 |
| 92−5833 | Spacer−Ball Joint | 61 | 45 | 1 |
| 92−5833 | Spacer−Ball Joint | 53 | 46 | 2 |
| 92−5836 | Washer−Axle | 54 | 50 | 1 |
| 92−5837 | Asm−Rod End | 62 | 60 | 1 |
| 92−5838 | Ball Joint | 54 | 62 | 1 |
| 92−5839 | Ball Joint | 61 | 38 | 1 |
| 92−5839 | Ball Joint | 53 | 45 | 1 |
| 92−5844 | Spacer−Ball Joint | 53 | 47 | 1 |
| 92−6315 | Cartridge−N.C. Poppet | 75 | 18 | 1 |
| 92−6533 | Kit−Cushion | 7 | 24 | 1 |
| 92−6534 | Shell | 7 | 22 | 1 |
| 92−7374 | Shroud−Fan RH | 32 | 10 | 1 |
| 92−7375 | Shroud−Fan LH | 32 | 44 | 1 |
| 92−7381 | Tube−Water, Return | 34 | 41 | 1 |
| 92−7382 | Cover−Manifold | 34 | 38 | 1 |
| 92−7385 | Motor−Planetary | 26 | 38 | 1 |
| 92−7386 | Motor−Hydraulic | 53 | 20 | 1 |
| 92−7387 | Motor−Hydraulic | 76 | 3 | 5 |
| 92−7388 | Support−Radiator | 32 | 45 | 1 |
| 92−7396 | Mount−Cable | 8 | 3 | 1 |
| 92−7414 | Assembly−Brake, RH | 26 | 50 | 1 |
| 92−7415 | Asm−Complete | 27 | * | 1 |
| 92−7415 | Asm−Drive, Planetary | 25 | 29 | 2 |
| 92−7416 | Strap−Radiator | 32 | 42 | 1 |
| 92−7417 | Asm−Brake, LH | 25 | 28 | 1 |
| 92−7418 | Asm−Block, Control | 74 | 13 | 1 |
| 92−7419 | Asm−Block, Manifold | 64 | 42 | 1 |
| 92−7422 | Tank−Fuel | 17 | 16 | 1 |
| 92−7424 | Hose−Overflow, Radiator | 51 | 25 | 1 |
| 92−7424 | Hose−Radiator, Overflow | 32 | 6 | 1 |
| 92−7425 | Support−Mount, Engine | 34 | 6 | 1 |
| 92−7426 | Mount−Motor | 34 | 43 | 1 |
| 92−7429 | Mount−Motor, RH | 34 | 14 | 1 |
| 92−7455 | Plate−Bulkhead | 25 | 16 | 1 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 92−7456 | Pin Assembly | 71 | 29 | 2 |
| 92−7463 | Hose−Radiator, Lower | 32 | 18 | 1 |
| 92−7463 | Hose−Radiator, Lower | 34 | 36 | 1 |
| 92−7465 | Hose−Suction | 16 | 22 | 1 |
| 92−7465 | Hose−Suction | 19 | 40 | 1 |
| 92−7466 | Clutch−Fan | 34 | 31 | 1 |
| 92−7472 | Asm−Tube, Rear | 53 | 3 | 1 |
| 92−7473 | Asm−Tube, Rear | 53 | 4 | 1 |
| 92−7473 | Asm−Tube, Rear | 25 | 14 | 1 |
| 92−7474 | Assembly−Tube, Front | 25 | 9 | 1 |
| 92−7475 | Assembly−Tube, Traction | 26 | 51 | 1 |
| 92−7476 | Assembly−Tube, Traction | 26 | 48 | 1 |
| 92−7477 | Asm−Tube, Motor Drain | 25 | 18 | 1 |
| 92−7478 | Asm−Tube, Motor RH | 26 | 44 | 1 |
| 92−7478 | Tube−Motor, RH | 16 | 30 | 1 |
| 92−7479 | Asm−Tube | 74 | 10 | 1 |
| 92−7483 | Nut−Lug | 25 | 4 | 16 |
| 92−7484 | Asm−Hose | 19 | 12 | 1 |
| 92−7485 | Asm−Hose | 25 | 20 | 1 |
| 92−7485 | Asm−Hose | 19 | 33 | 1 |
| 92−7486 | Asm−Hose | 25 | 19 | 1 |
| 92−7487 | Asm−Tube | 26 | 42 | 1 |
| 92−7488 | Asm−Hose | 26 | 43 | 1 |
| 92−7489 | Hose−Return | 16 | 13 | 1 |
| 92−7489 | Hose−Return | 19 | 19 | 1 |
| 92−7490 | Asm−Hose, Filter | 19 | 25 | 1 |
| 92−7490 | Hose−Filter | 16 | 16 | 1 |
| 92−7491 | Asm−Hose | 19 | 11 | 1 |
| 92−7491 | Asm−Hose | 74 | 16 | 1 |
| 92−7492 | Asm−Hose | 19 | 36 | 1 |
| 92−7492 | Asm−Hose | 64 | 41 | 1 |
| 92−7493 | Asm−Tube, Filter | 32 | 39 | 1 |
| 92−7493 | Hose−Filter | 16 | 20 | 1 |
| 92−7494 | Asm−Tube Steering Rear | 4 | 50 | 1 |
| 92−7494 | Asm−Tube, Steering | 53 | 29 | 1 |
| 92−7494 | Asm−Tube, Steering Rear | 62 | 59 | 1 |
| 92−7494 | Asm−Tube, Steering, Rear | 65 | 48 | 1 |
| 92−7495 | Asm−Tube, Steering | 53 | 28 | 1 |
| 92−7495 | Asm−Tube, Steering Rear | 3 | 47 | 1 |
| 92−7495 | Asm−Tube, Steering Rear | 62 | 56 | 1 |
| 92−7495 | Asm−Tube, Steering, Rear | 65 | 49 | 1 |
| 92−7505 | Screen | 32 | 24 | 1 |
| 92−7511 | Hood | 1 | 18 | 1 |
| 92−7516 | Bracket−Support, Cooler | 32 | 19 | 1 |
| 92−7519 | Bracket−Block, Manifold | 74 | 26 | 1 |
| 92−7520 | Cable−Throttle | 8 | 4 | 1 |
| 92−7521 | Hose−Fuel | 17 | 21 | 1 |
| 92−7521 | Hose−Fuel | 34 | 25 | 1 |
| 92−7522 | Hose−Fuel | 17 | 6 | 1 |
| 92−7525 | Fitting−Hose | 16 | 24 | 1 |
| 92−7526 | Fitting−Hydraulic, Suction | 19 | 38 | 1 |
| 92−7527 | Strainer−Suction | 16 | 34 | 1 |
| 92−7529 | Asm−Cable, Brake RH | 6 | * | 1 |
| 92−7530 | Asm−Cable, Brake LH | 6 | 30 | 1 |
| 92−7530 | Cable−Brake, LH | 25 | 26 | 1 |
| 92−7531 | Tube−Control, Pump | 6 | 1 | 1 |
| 92−7531 | Tube−Rod, Control | 19 | 14 | 1 |
| 92−7532 | Decal−RM6500D | 1 | 17 | 2 |
| 92−7534 | Assembly−Hose | 53 | 31 | 1 |
| 92−7535 | Asm−Hose, Oil Cooler | 32 | 29 | 2 |
| 92−7536 | Asm−Hose, Rear Motor | 53 | 9 | 1 |
| 92−7537 | Asm−Hose, Rear Motor | 53 | 10 | 1 |
| 92−7538 | Asm−Hose | 53 | 41 | 1 |
| 92−7539 | Asm−Hose | 53 | 40 | 1 |
| 92−7540 | Decal−ROPS | 78 | 3 | 1 |
| 92−7548 | Pin−Cylinder | 71 | 22 | 2 |
| 92−7550 | Fitting−Tee, Bulkhead | 25 | 7 | 2 |
| 92−7551 | Cap−Fitting | 16 | 25 | 1 |
| 92−7552 | Bracket−Bulkhead | 54 | 60 | 1 |
| 92−7553 | Asm−Tube, Rear Drain | 53 | 27 | 1 |
| 92−7553 | Asm−Tube, Rear Drain | 65 | 51 | 1 |
| 92−7555 | Asm−Hose | 76 | 7 | 4 |
| 92−7556 | Asm−Hose | 76 | 1 | 1 |
| 92−7557 | Asm−Tube | 74 | 19 | 1 |
| 92−7557 | Asm−Tube, Cooler Front | 64 | 40 | 1 |
| 92−7558 | Asm−Tube, Cooler | 32 | 41 | 1 |
| 92−7558 | Asm−Tube, Cooler Rear | 64 | 36 | 1 |
| 92−7559 | Asm−Hose | 76 | 8 | 2 |
| 92−7560 | Asm−Hose | 76 | 2 | 1 |
| 92−7562 | Asm−Hose | 74 | 2 | 1 |
| 92−7562 | Hose Assembly | 67 | 53 | 1 |
| 92−7564 | Asm−Hose | 74 | 42 | 1 |
| 92−7564 | Hose Assembly | 67 | 42 | 1 |
| 92−7565 | Asm−Hose | 74 | 41 | 1 |
| 92−7565 | Hose Assembly | 67 | 51 | 1 |
| 92−7584 | Asm−Tube | 64 | 5 | 1 |
| 92−7585 | Asm−Tube | 64 | 22 | 1 |
| 92−7591 | Asm−Tube | 74 | 12 | 1 |
| 92−7591 | Asm−Tube, P2A | 65 | 43 | 1 |
| 92−7594 | Asm−Hose | 61 | 7 | 1 |
| 92−7595 | Asm−Hose | 61 | 8 | 1 |
| 92−7598 | Asm−Tube, Front Drain | 65 | 50 | 1 |
| 92−7598 | Asm−Tube, Frt. Drain | 25 | 32 | 1 |
| 92−7604 | Pin−Stop | 54 | 53 | 1 |
| 92−7604 | Pin−Stop | 62 | 54 | 1 |
| 92−7606 | Bracket−Bulkhead | 4 | 51 | 1 |
| 92−7608 | Bracket−Spring | 6 | 12 | 1 |
| 92−7609 | Shaft−Spring | 6 | 45 | 1 |
| 92−7610 | Retainer−Spring | 6 | 42 | 1 |
| 92−7622 | Asm−Hose, Steering | 19 | 35 | 1 |
| 92−7622 | Hose−Steering | 4 | 49 | 1 |
| 92−7623 | Bumper (Model 03804) | 32 | 36 | 1 |
| 92−7631 | Sealstrip−Screen | 32 | 22 | 1 |
| 92−7633 | Strip−Bumper, Hood | 1 | 16 | 1 |
| 92−7634 | Asm−Hose, Traction | 25 | 15 | 1 |
| 92−7634 | Asm−Hose, Traction | 19 | 34 | 1 |
| 92−7636 | Hose Assembly | 71 | 17 | 1 |
| 92−7638 | Asm−Hose | 64 | 1 | 1 |
| 92−7638 | Hose Assembly | 71 | 7 | 1 |
| 92−7639 | Asm−Hose | 64 | 37 | 1 |
| 92−7639 | Hose Assembly | 71 | 8 | 1 |
| 92−7645 | Fitting−Hydraulic 90˚ | 25 | 8 | 1 |
| 92−7646 | Fitting−Hydraulic 45˚ | 54 | 57 | 1 |
| 92−7647 | Asm−Tube, Drain | 64 | 12 | 1 |
| 92−7648 | Asm−Hose | 64 | 2 | 1 |
| 92−7649 | Asm−Hose | 76 | 18 | 4 |
| 92−7649 | Asm−Hose | 64 | 20 | 4 |
| 92−7787 | Pulley−Camshaft | 40 | 26 | 1 |
| 92−7791 | Seal−Valve | 39 | 52 | 8 |
| 92−7792 | Guide−Valve (14.29mm) | 39 | 47 | 8 |
| 92−7793 | Guide−Valve (14.59mm) | 39 | * | 8 |
| 92−7794 | Valve−Exhaust | 39 | 50 | 4 |
| 92−7795 | Seat−Exhaust Valve | 39 | 51 | 4 |
| 92−8001 | Sensor−Switch, Reed | 7 | 13 | 1 |
| 92−8002 | Sensor−Reed Switch | 67 | 26 | 1 |
| 92−8020 | Adapter−Breather | 16 | 35 | 3 |
| 92−8753 | Magnet−Switch, Reed | 7 | 11 | 1 |
| 92−8754 | Magnet−Reed Switch | 67 | 21 | 1 |
| 92−9651 | Asm−Hub | 61 | 25 | 2 |
| 92−9652 | Stud−Drive | 61 | 36 | 10 |
| 92−9724 | Spindle−RH | 61 | * | 1 |
| 92−9725 | Spindle−LH | 61 | 21 | 1 |
| 93−0096 | Decal−ACE | 2 | 31 | 2 |
| 93−0307 | Nut−Retainer | 61 | 32 | 2 |
| 93−0309 | Washer−Tab | 61 | 31 | 2 |
| 93−1261 | Decal−Console | 12 | 40 | 1 |
| 93−1262 | Decal−Hillside | 2 | 28 | 1 |
| 93−1263 | Decal−Tower | 3 | 23 | 1 |
| 93−1264 | Decal−Switch, Backlap | 74 | 24 | 1 |
| 93−1265 | Decal−Hot Surface | 51 | 1 | 1 |
| 93−1268 | Decal−HOC Selector | 12 | 17 | 1 |
| 93−2175 | Asm−Pump, Gear | 19 | 4 | 1 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 93−2650 | Cylinder−Hydraulic | 67 | 54 | 1 |
| 93−3102 | Cap−Fuel, Diesel | 17 | 10 | 1 |
| 93−3163 | Spring | 9 | 28 | 1 |
| 93−3164 | Cap | 9 | 27 | 2 |
| 93−3165 | Bracket | 9 | 29 | 1 |
| 93−3625 | Spring−Return, Joystick | 13 | 62 | 1 |
| 93−4201 | Asm−Hose | 76 | 19 | 2 |
| 93−4201 | Asm−Hose | 64 | 21 | 2 |
| 93−4205 | Asm−Tube, Drain | 64 | 15 | 1 |
| 93−4206 | Asm−Tube, Drain | 64 | 15 | 1 |
| 93−4207 | Fitting−Tee | 51 | 18 | 1 |
| 93−4208 | Strip−Seal, Screen | 32 | 27 | 1 |
| 93−4213 | Asm−Speedometer | 3 | 22 | 1 |
| 93−4215 | Hose−Radiator, Upper Rear | 32 | 5 | 1 |
| 93−4215 | Hose−Radiator, Upper Rear | 34 | 22 | 1 |
| 93−4215 | Hose−Radiator, Upper Rear | 51 | 29 | 1 |
| 93−4216 | Asm−Tube | 76 | 14 | 1 |
| 93−4216 | Asm−Tube | 74 | 40 | 1 |
| 93−4217 | Asm−Tube | 76 | 26 | 1 |
| 93−4217 | Asm−Tube | 74 | 39 | 1 |
| 93−4219 | Asm−Tube, #1 Bulkhead | 76 | 17 | 1 |
| 93−4222 | Asm−Tube, Drain Return | 76 | 16 | 1 |
| 93−4222 | Asm−Tube, Drain Return | 74 | 37 | 1 |
| 93−4223 | Asm−Tube, Front Drain | 76 | 15 | 1 |
| 93−4233 | Asm−Engine | 34 | 16 | 1 |
| 93−5835 | Screw−Purge | 46 | 28 | 1 |
| 93−5986 | Asm−Cover | 52 | 4 | 1 |
| 93−6028 | Plate−Logo, Toro | 32 | 26 | 1 |
| 93−6668 | Decal−Charging (Europe) | 51 | 51 | 1 |
| 93−6680 | Decal−Fuel, Diesel | 2 | 34 | 1 |
| 93−6681 | Decal−Warning, Fan | 33 | 57 | 1 |
| 93−6686 | Decal−Hydraulic Oil | 1 | 5 | 1 |
| 93−6687 | Decal−No Step | 67 | 24 | 2 |
| 93−6689 | Decal−No Riders | 12 | 13 | 1 |
| 93−6689 | Decal−No Riders | 2 | 35 | 1 |
| 93−6693 | Decal−Floor Plate | 67 | 55 | 1 |
| 93−6699 | Decal−Fast/Slow | 6 | 23 | 1 |
| 93−7183 | Lift Control Kit (Europe) | 12 | 9 | 1 |
| 93−7247 | Washer−Thrust | 53 | 6 | 1 |
| 93−7247 | Washer−Thrust | 62 | 55 | 1 |
| 93−7252 | Decal−CE (Europe) | 2 | 57 | 1 |
| 93−7276 | Decal−Danger (Europe) | 51 | 52 | 1 |
| 93−7450 | Spindle | 27 | 1 | 1 |
| 93−7451 | Cone−Bearing | 27 | 3 | 1 |
| 93−7452 | Cup−Bearing | 27 | 4 | 1 |
| 93−7453 | Housing | 27 | 6 | 1 |
| 93−7454 | Screw−HH | 27 | 25 | 18 |
| 93−7455 | Stud−Wheel | 27 | 5 | 8 |
| 93−7456 | Gear−Ring | 27 | 18 | 1 |
| 93−7457 | Spacer−Input | 27 | 16 | 1 |
| 93−7458 | Plate−Cover | 27 | 15 | 1 |
| 93−7459 | Ring−Retaining, External | 27 | 19 | 1 |
| 93−7460 | Washer−Thrust | 27 | 17 | 1 |
| 93−7461 | Plug−Pipe | 27 | 13 | 2 |
| 93−7462 | Ring−Retaining, Internal | 27 | 14 | 1 |
| 93−7463 | Gear−Sun | 27 | 20 | 1 |
| 93−7464 | Gear−Sun | 27 | 21 | 1 |
| 93−7465 | Washer−Thrust | 27 | 22 | 1 |
| 93−7466 | Pin−Dowel | 27 | 24 | 2 |
| 93−7467 | Ring−Retaining, External | 27 | 10 | 1 |
| 93−7468 | Washer−Thrust | 27 | 9 | 1 |
| 93−7469 | Cone−Bearing | 27 | 8 | 1 |
| 93−7470 | Cup−Bearing | 27 | 7 | 1 |
| 93−7471 | Shaft−Input | 27 | 23 | 1 |
| 93−7472 | Asm−Carrier, Secondary | 27 | 11 | 1 |
| 93−7473 | Asm−Carrier, Primary | 27 | 12 | 1 |
| 93−7474 | Kit−Seal | 27 | 2 | 1 |
| 93−7476 | Motor−Hydraulic W/Sensor | 26 | 49 | 1 |
| 93−7480 | Bulb−LED | 3 | 29 | 1 |
| 93−7483 | Light−Warning Bank | 12 | 32 | 1 |
| 93−7484 | Light−Warning Bank | 12 | 31 | 1 |
| 93−7485 | Asm−Filter, Air | 51 | 41 | 1 |
| 93−7487 | Switch−Toggle | 74 | 31 | 1 |
| 93−7488 | Tank−Hydraulic | 16 | 1 | 1 |
| 93−7489 | Valve−Control, Flow | 74 | 6 | 1 |
| 93−7491 | Cartridge−Pilot Check | 75 | 2 | 1 |
| 93−7491 | Cartridge−Pilot Check | 66 | 14 | 1 |
| 93−7492 | Cartridge−Relief 2300 psi | 75 | 4 | 1 |
| 93−7494 | Cartridge−N.O. Poppet | 75 | 13 | 2 |
| 93−7494 | Cartridge−N.O. Poppet | 66 | 15 | 2 |
| 93−7498 | Plug−Plastic | 16 | 6 | 1 |
| 93−7499 | Gasket−Flange | 16 | 2 | 1 |
| 93−7553 | Seal−Hood | 32 | 13 | 1 |
| 93−7558 | Asm−Barrel | 69 | 2 | 1 |
| 93−7579 | Fender−RH | 1 | 3 | 1 |
| 93−7582 | Hose | 1 | 20 | 1 |
| 93−7584 | Hose−Intake | 32 | 11 | 1 |
| 93−7584 | Hose−Intake | 51 | 40 | 1 |
| 93−7587 | Bracket−Fuse Block | 13 | 49 | 1 |
| 93−7588 | Cover−Tank | 16 | 3 | 1 |
| 93−7589 | Hose−Overflow | 51 | 28 | 1 |
| 93−7591 | Hose−Return | 51 | 24 | 1 |
| 93−7592 | Tread−Footrest | 2 | 42 | 2 |
| 93−7594 | Spacer−Tubular | 34 | 21 | 1 |
| 93−7595 | Asm−Box, Battery | 51 | 7 | 1 |
| 93−7597 | Fitting−SAE | 74 | 7 | 1 |
| 93−7598 | Lever−Throttle | 8 | 10 | 1 |
| 93−7773 | Bolt | 55 | 5 | 4 |
| 93−7775 | Bearing | 58 | 18 | 2 |
| 93−7778 | Housing−Axle A | 56 | 1 | 1 |
| 93−7779 | Housing−Axle B | 56 | 3 | 1 |
| 93−7781 | Washer | 56 | 10 | 8 |
| 93−7782 | Screw−HHF | 56 | 4 | 8 |
| 93−7787 | Bushing−Flange | 56 | 2 | 2 |
| 93−7840 | Decal−Cap (Europe) | 51 | 53 | 1 |
| 93−7960 | Spacer | 67 | 47 | 6 |
| 93−7961 | Clamp−Case Drain | 67 | 46 | 3 |
| 93−7966 | Shaft−Splined, Brake | 25 | 31 | 2 |
| 93−7968 | Pad−Foam, Battery | 51 | 11 | 1 |
| 93−7970 | Form−Wire, Hose Mount | 74 | 28 | 1 |
| 93−7972 | Ring−Retaining | 25 | 30 | 4 |
| 93−7974 | Plate−Battery, Box | 51 | 5 | 1 |
| 93−7974 | Plate−Box, Battery | 17 | 1 | 1 |
| 93−7976 | Ring−Retaining | 28 | 9 | 1 |
| 93−7977 | Seal | 28 | 2 | 1 |
| 93−7978 | Rod−Pull | 28 | 3 | 1 |
| 93−7979 | Pin−Cotter, Hair | 28 | 6 | 2 |
| 93−7980 | Link | 28 | 5 | 2 |
| 93−7981 | Disc−Rotating | 28 | 8 | 3 |
| 93−7982 | Actuator | 28 | 11 | 1 |
| 93−7983 | Pin−Clevis | 28 | 4 | 2 |
| 93−7984 | Gasket | 28 | 10 | 1 |
| 93−7985 | Ball | 28 | 13 | 3 |
| 93−7986 | Disc−Stationary | 28 | 7 | 4 |
| 93−7987 | Spring−Extension | 28 | 12 | 3 |
| 93−7989 | Shaft W/Clevis | 72 | 7 | 1 |
| 93−7989 | Shaft W/Clevis | 73 | 7 | 1 |
| 93−7990 | Head | 70 | 10 | 1 |
| 93−7991 | Collar | 68 | 13 | 1 |
| 93−7991 | Collar | 70 | 13 | 1 |
| 93−7991 | Collar | 73 | 13 | 1 |
| 93−7994 | Collar | 69 | 13 | 1 |
| 93−7994 | Collar | 72 | 13 | 1 |
| 93−7996 | Cover−Tower | 1 | 2 | 1 |
| 93−7998 | Plate−Instrument | 3 | 24 | 1 |
| 93−8050 | Decal−Warning | 78 | 2 | 1 |
| 93−8053 | Decal−ECU Label (Europe) | 74 | 43 | 1 |
| 93−8497 | Gauge−Fuel | 12 | 27 | 1 |
| 93−8742 | Pad−Brake | 6 | 29 | 2 |
| 93−8744 | Rivet−Pop | 2 | 46 | 3 |
| 93−8744 | Rivet−Pop | 13 | 56 | 3 |
| 93−9151 | Fitting−Hydraulic 90˚ | 76 | 21 | 3 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 93–9152 | Kit–Flange | 77 | * | 1 |
| 93–9153 | Kit–Seal | 77 | * | 1 |
| 93–9154 | Kit–Valve Block | 77 | * | 1 |
| 93–9155 | Velcro | 1 | 7 | 2 |
| 93–9157 | Velcro | 78 | 4 | 4 |
| 93–9159 | Strap–Cover | 78 | 9 | 2 |
| 93–9160 | Cover–ROPS | 78 | 6 | 1 |
| 93–9161 | Pin | 67 | 2 | 3 |
| 93–9161 | Pin | 71 | 3 | 2 |
| 93–9162 | Filter–Primary | 52 | 3 | 1 |
| 93–9163 | Filter–Safety | 52 | 6 | 1 |
| 93–9164 | Indicator | 52 | 1 | 1 |
| 93–9164 | Indicator–Service | 51 | 37 | 1 |
| 93–9176 | Dipstick–Oil | 35 | 3 | 1 |
| 93–9176 | Dipstick–Peugeot | 34 | 51 | 1 |
| 93–9178 | Muffler | 51 | 35 | 1 |
| 93–9180 | Cover–Box, Tool | 1 | 26 | 1 |
| 93–9425 | Decal–Danger | 2 | 55 | 1 |
| 93–9783 | O–Ring | 76 | 28 | 10 |
| 94–1402 | Plug | 64 | 14 | 4 |
| 94–1403 | Fitting–Hydraulic | 64 | 38 | 1 |
| 94–1408 | Wireform–Overflow | 51 | 19 | 1 |
| 94–1410 | Holder–Can, Beverage | 2 | 53 | 1 |
| 94–1411 | Cable–Battery, Negative | 51 | 10 | 1 |
| 94–1414 | Valve–Vacuator | 52 | 5 | 1 |
| 94–1416 | Adapter–Indicator | 51 | 36 | 1 |
| 94–1416 | Asm–Adaptor | 52 | 7 | 1 |
| 94–1417 | Cover–Box, Control | 13 | 41 | 1 |
| 94–1418 | Hose–Radiator, Upper | 34 | 12 | 1 |
| 94–1421 | Coupling–Center, Spring | 34 | 15 | 1 |
| 94–1445 | Strap–Battery | 51 | 12 | 1 |
| 94–1446 | Tube–Drain | 16 | 26 | 1 |
| 94–1447 | Asm–Tube, Steering Ret. | 74 | 38 | 1 |
| 94–1447 | Tube–Steering, Return | 16 | 39 | 1 |
| 94–1447 | Tube–Steering, Return | 3 | 43 | 1 |
| 94–2617 | Cover–Pump | 1 | 21 | 1 |
| 94–2620 | Head–Filter | 16 | 18 | 1 |
| 94–2621 | Element | 16 | 21 | 1 |
| 94–2624 | Hose–Manifold | 34 | 29 | 1 |
| 94–2624 | Hose–Manifold | 51 | 39 | 1 |
| 94–2626 | Plug–Orifice | 66 | 17 | 1 |
| 94–2630 | Hose–Return | 51 | 17 | 1 |
| 94–2636 | Fitting–Hydraulic 90˚ | 19 | 20 | 1 |
| 94–2637 | Fitting–Hydraulic, Straight | 19 | 18 | 1 |
| 94–2638 | Nut–Push On | 32 | 23 | 4 |
| 94–2643 | Frame–ROPS | 78 | 7 | 1 |
| 94–2644 | Shaft With Clevis | 70 | 12 | 1 |
| 94–2646 | Guard–Fan (Europe) | 32 | 50 | 1 |
| 94–2800 | Cap–Radiator | 51 | 22 | 1 |
| 94–2801 | Grommet–Rubber | 51 | 44 | 2 |
| 94–2803 | Bearing | 58 | 12 | 2 |
| 94–2806 | Adapter–Nut (Europe) | 54 | 67 | 6 |
| 94–2807 | Adapter–Nut (Europe) | 62 | 62 | 6 |
| 94–2812 | Grommet | 51 | 46 | 2 |
| 94–2814 | Kit–Exhaust Coupler | 51 | 50 | 1 |
| 94–2815 | Sleeve–Exhaust Flange | 51 | 49 | 1 |
| 94–2834 | Bracket–Clamp | 65 | 53 | 1 |
| 94–2837 | Decal–Diagnostic ACE | 10 | 1 | 1 |
| 94–2849 | Muffler–Spark Arrestor | 51 | * | 1 |
| 94–2919 | Decal–Rear Manifold (Japan) | 8 | 19 | 1 |
| 94–2941 | Decal–Service (Japan) | 2 | 27 | 1 |
| 94–2943 | Decal–Service (Portuguese) | 2 | 27 | 1 |
| 94–2944 | Decal–Service (Spanish) | 2 | 27 | 1 |
| 94–2945 | Decal–Service (Swedish) | 2 | 27 | 1 |
| 94–3000 | Asm.–Backplate | 31 | 8 | 1 |
| 94–3001 | Housing | 31 | 16 | 1 |
| 94–3002 | Screw–HH | 31 | 7 | 6 |
| 94–3002 | Screw–HH | 29 | 8 | 6 |
| 94–3002 | Screw–HH | 30 | 8 | 6 |
| 94–3003 | Plate–Valve | 31 | 13 | 1 |
| 94–3003 | Plate–Valve | 30 | 15 | 1 |
| 94–3003 | Plate–Valve | 29 | 16 | 1 |
| 94–3004 | Shaft–Drive, Splined | 29 | 7 | 1 |
| 94–3004 | Shaft–Drive, Splined | 30 | 7 | 1 |
| 94–3005 | Asm– Backplate | 29 | 9 | 1 |
| 94–3005 | Asm–Backplate | 30 | 9 | 1 |
| 94–3006 | Housing | 30 | 18 | 1 |
| 94–3006 | Housing | 29 | 19 | 1 |
| 94–3007 | Washer | 29 | 3 | 1 |
| 94–3007 | Washer | 30 | 3 | 1 |
| 94–3007 | Washer | 23 | 53 | 1 |
| 94–3008 | Seal–Shaft | 29 | 2 | 1 |
| 94–3008 | Seal–Shaft | 30 | 2 | 1 |
| 94–3008 | Seal–Shaft | 23 | 54 | 1 |
| 94–3009 | Asm–Plug | 29 | 11 | 1 |
| 94–3010 | Sensor–Speed Pickup | 30 | 11 | 1 |
| 94–3011 | Plug | 21 | 7 | 1 |
| 94–3012 | Screw | 21 | 10 | 8 |
| 94–3013 | Plug | 21 | 23 | 1 |
| 94–3014 | Valve–Relief | 21 | 26 | 1 |
| 94–3015 | Kit–Seal | 21 | * | 1 |
| 94–3016 | Asm–Backplate | 23 | 8 | 1 |
| 94–3017 | Adaptor–Charge Relief | 23 | 12 | 1 |
| 94–3018 | Asm– Housing | 23 | 58 | 1 |
| 94–3019 | Control–Servo, Manual | 23 | 65 | 1 |
| 94–3020 | Shaft–Drive | 23 | 56 | 1 |
| 94–3021 | Asm–Kit, Rotating | 23 | 35 | 1 |
| 94–3022 | Plate–Valve | 23 | 1 | 1 |
| 94–3023 | Coupler | 23 | 10 | 1 |
| 94–3025 | Asm–Piston, Servo | 23 | 41 | 1 |
| 94–3026 | Asm–Camplate | 23 | 36 | 1 |
| 94–3027 | Washer–Seal | 23 | 48 | 1 |
| 94–3028 | Screw | 23 | 14 | 2 |
| 94–3029 | Screw | 23 | 21 | 2 |
| 94–3030 | Washer | 23 | 47 | 1 |
| 94–3031 | Arm–Control | 23 | 29 | 1 |
| 94–3032 | Follower–Piston | 23 | 33 | 1 |
| 94–3033 | Plate–Cover | 23 | 59 | 1 |
| 94–3034 | Plate–Cover | 23 | 43 | 1 |
| 94–3035 | Ring–Lock | 23 | 9 | 1 |
| 94–3036 | Ring–Quad | 23 | 3 | 1 |
| 94–3037 | Ring–Retaining | 23 | 4 | 1 |
| 94–3038 | Plug–Dump Valve | 23 | 5 | 1 |
| 94–3039 | Kit–Seal | 23 | * | 1 |
| 94–3040 | Orifice–Valve, Control | 23 | 31 | 3 |
| 94–3043 | Switch | 24 | 15 | 1 |
| 94–3044 | Kit–Seal | 24 | * | 1 |
| 94–3050 | Plate–Spring | 26 | 54 | 2 |
| 94–3052 | Weight–Wheel (Europe) | 62 | 63 | 2 |
| 94–3052 | Weight–Wheel (Europe) | 54 | 68 | 2 |
| 94–3055 | Cap–Lower, Joystick | 12 | 3 | 1 |
| 94–3056 | Snap Ring–Joystick | 12 | 4 | 1 |
| 94–3057 | Spring–Compression | 12 | 5 | 1 |
| 94–3058 | Cap–Upper, Joystick | 12 | 6 | 1 |
| 94–3059 | Tube–Steering, RH | 3 | 6 | 1 |
| 94–3060 | Tube–Steering, Front LH | 3 | 13 | 1 |
| 94–3061 | Tube–Steering, Front, In | 3 | 7 | 1 |
| 94–3062 | Tube–Steering, Front, Out | 3 | 14 | 1 |
| 94–3063 | Extension–Stem, Valve | 62 | 66 | 2 |
| 94–3063 | Extension–Stem, Valve | 54 | 71 | 2 |
| 94–3077 | Plug–Orifice | 75 | 20 | 1 |
| 94–3084 | Bumper (Model 03803) | 32 | 36 | 1 |
| 94–3088 | Spring–Brake | 26 | 55 | 2 |
| 94–3090 | Harness–Wire, Main | 3 | 8 | 1 |
| 94–3090 | Harness–Wire, Main | 34 | 18 | 1 |
| 94–3090 | Harness–Wire, Main | 74 | 30 | 1 |
| 94–3090 | Harness–Wire, Main | 8 | 32 | 1 |
| 94–3090 | Harness–Wire, Main | 65 | 45 | 1 |
| 94–3090 | Harness–Wire, Main | 26 | 47 | 1 |
| 94–3090 | Harness–Wire, Main | 13 | 61 | 1 |
| 94–3091 | Decal–Fuses (Japan) | 13 | 58 | 1 |
| 94–3098 | Gear–Driven | 53 | 25 | 1 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 94−3099 | Gear−Driver | 53 | 23 | 1 |
| 94−3100 | Asm−Short Block | 35 | 36 | 1 |
| 94−3101 | Gasket Set | 35 | * | 1 |
| 94−3102 | Pin | 35 | 14 | 2 |
| 94−3103 | Plug−Threaded | 35 | 44 | 1 |
| 94−3104 | Plug−Threaded | 35 | 43 | 2 |
| 94−3105 | Plug−Drain | 35 | 38 | 1 |
| 94−3106 | Gasket | 35 | 42 | 2 |
| 94−3107 | Gasket | 35 | 24 | 2 |
| 94−3108 | Plug−27.5 mm Dia. | 35 | * | 8 |
| 94−3108 | Plug−27.5 mm Dia. | 38 | * | 2 |
| 94−3109 | Plug−28.5 mm Dia. | 35 | * | 9 |
| 94−3109 | Plug−28.5 mm Dia. | 38 | * | 2 |
| 94−3110 | Stud | 35 | 45 | 1 |
| 94−3111 | Pin−Groove | 35 | 22 | 2 |
| 94−3112 | Screw−Washer Hd. | 35 | 17 | 2 |
| 94−3113 | Asm−Cylinder Head | 37 | 5 | 1 |
| 94−3115 | Nut−Lock | 37 | 8 | 6 |
| 94−3116 | Gasket | 37 | 3 | 1 |
| 94−3117 | Plate | 37 | 2 | 1 |
| 94−3118 | Plug | 38 | 32 | 1 |
| 94−3119 | Kit−Gasket | 39 | * | 1 |
| 94−3120 | Bracket | 39 | 54 | 1 |
| 94−3121 | Plug | 39 | 44 | 1 |
| 94−3122 | Gasket | 39 | 43 | 1 |
| 94−3123 | Screw−HH | 37 | 1 | 2 |
| 94−3124 | Bolt−Valve Cover | 38 | 22 | 3 |
| 94−3124 | Screw−HH | 43 | 8 | 2 |
| 94−3125 | Washer | 38 | 21 | 3 |
| 94−3125 | Washer−Flat | 41 | 3 | 1 |
| 94−3126 | Protector−Lower | 41 | 5 | 1 |
| 94−3127 | Case−Timing, Left | 41 | 7 | 1 |
| 94−3128 | Case−Timing, Right | 41 | 9 | 1 |
| 94−3129 | Plug | 41 | 4 | 1 |
| 94−3130 | Screw | 41 | 2 | 1 |
| 94−3131 | Screw | 44 | 1 | 3 |
| 94−3131 | Screw | 41 | 10 | 1 |
| 94−3132 | Screw | 41 | 1 | 2 |
| 94−3133 | Nut W/Washer | 41 | 6 | 1 |
| 94−3134 | Nut | 41 | 8 | 1 |
| 94−3135 | Bracket−Lifting | 38 | 15 | 1 |
| 94−3136 | Bracket−Lifting | 38 | 23 | 1 |
| 94−3137 | Bracket−Lifting | 38 | 25 | 1 |
| 94−3138 | Screw | 38 | 24 | 1 |
| 94−3139 | Screw | 38 | 26 | 1 |
| 94−3140 | Bearing Set (.30mm OS) | 36 | * | 2 |
| 94−3141 | Thrust Bearing Set (Std.) | 36 | 13 | 2 |
| 94−3142 | Thrust Bearing Set | 36 | * | 2 |
| 94−3143 | Thrust Bearing Set | 36 | * | 2 |
| 94−3144 | Pulley | 36 | 3 | 1 |
| 94−3145 | Screw−HH | 36 | 1 | 1 |
| 94−3146 | Washer | 36 | 2 | 1 |
| 94−3147 | Seal | 36 | 15 | 1 |
| 94−3148 | Seal−Shaft | 36 | 11 | 1 |
| 94−3149 | Gear−Flywheel | 36 | 17 | 1 |
| 94−3150 | Screw−HH | 36 | 7 | 4 |
| 94−3151 | Washer | 36 | 8 | 6 |
| 94−3152 | Screw−HH | 36 | 33 | 2 |
| 94−3155 | Bearing−Connecting Rod | 36 | * | 4 |
| 94−3156 | Bolt−Connecting Rod | 36 | 28 | 8 |
| 94−3157 | Piston Set−Std. | 36 | 29 | 1 |
| 94−3158 | Piston Ring Set Std. | 36 | 23 | 4 |
| 94−3159 | Asm−Roller | 40 | 11 | 1 |
| 94−3160 | Asm−Roller | 40 | 15 | 1 |
| 94−3161 | Screw | 40 | 16 | 2 |
| 94−3161 | Screw | 46 | 24 | 1 |
| 94−3162 | Stud | 40 | 9 | 1 |
| 94−3163 | Screw | 40 | 6 | 1 |
| 94−3164 | Washer−Spring | 42 | 7 | 7 |
| 94−3164 | Washer−Spring | 40 | 10 | 4 |
| 94−3164 | Washer−Spring | 46 | 10 | 6 |
| 94−3165 | Nut | 46 | 6 | 4 |
| 94−3165 | Nut−Lock | 40 | 12 | 1 |
| 94−3166 | Washer−Flat | 40 | 7 | 1 |
| 94−3167 | Bracket−Fan | 40 | 24 | 1 |
| 94−3168 | Pulley−Fan | 40 | 21 | 1 |
| 94−3169 | Screw | 40 | 25 | 1 |
| 94−3170 | Screw | 40 | 17 | 1 |
| 94−3171 | Screw | 40 | 20 | 2 |
| 94−3172 | Washer | 40 | 19 | 3 |
| 94−3173 | Screw | 40 | 22 | 3 |
| 94−3174 | Washer | 38 | 27 | 8 |
| 94−3176 | Gear−Oil Pump | 43 | 2 | 1 |
| 94−3177 | Plug | 43 | 12 | 2 |
| 94−3178 | Strainer | 43 | 9 | 1 |
| 94−3179 | Washer−Spring | 43 | 4 | 3 |
| 94−3180 | Switch−Pressure | 35 | 32 | 1 |
| 94−3181 | Oil Filler | 35 | 1 | 1 |
| 94−3182 | Plug | 35 | 2 | 1 |
| 94−3183 | Gasket | 35 | 39 | 1 |
| 94−3184 | Union | 35 | 4 | 1 |
| 94−3186 | O−Ring | 35 | 40 | 1 |
| 94−3190 | PCV Valve | 35 | 46 | 1 |
| 94−3191 | Union | 35 | 48 | 1 |
| 94−3192 | Union | 35 | 47 | 1 |
| 94−3195 | Gasket−Pump, Water | 45 | 4 | 1 |
| 94−3196 | Inlet−Water | 45 | 7 | 1 |
| 94−3196 | Inlet−Water | 38 | 31 | 1 |
| 94−3197 | O−Ring | 45 | 3 | 1 |
| 94−3197 | O−Ring | 38 | 30 | 1 |
| 94−3198 | Screw | 45 | 8 | 2 |
| 94−3198 | Screw | 38 | 35 | 2 |
| 94−3199 | Pipe−By−Pass | 39 | 39 | 1 |
| 94−3200 | Hose−By−Pass | 38 | 37 | 1 |
| 94−3206 | Gasket | 44 | 9 | 1 |
| 94−3207 | Ring | 44 | 4 | 1 |
| 94−3208 | Stub−Outlet | 44 | 2 | 1 |
| 94−3209 | Thermostat | 44 | 11 | 1 |
| 94−3210 | Gasket | 44 | 10 | 1 |
| 94−3211 | Temp Sending Unit | 44 | 6 | 1 |
| 94−3212 | Plug | 44 | 7 | 2 |
| 94−3213 | Screw | 44 | 8 | 1 |
| 94−3214 | Screw | 44 | 5 | 1 |
| 94−3215 | Manifold−Intake | 42 | 6 | 1 |
| 94−3216 | Screw | 42 | 8 | 5 |
| 94−3217 | Screw | 42 | 9 | 4 |
| 94−3218 | Screw | 42 | * | 1 |
| 94−3219 | Pump−Injection | 46 | 19 | 1 |
| 94−3220 | Bracket | 46 | 3 | 1 |
| 94−3221 | Screw | 46 | 11 | 1 |
| 94−3222 | Key | 46 | 20 | 1 |
| 94−3223 | Screw | 46 | 25 | 1 |
| 94−3224 | Washer−Flat | 46 | 9 | 2 |
| 94−3225 | Screw | 46 | 4 | 2 |
| 94−3226 | Gasket−Injector | 47 | 4 | 4 |
| 94−3227 | Spacer | 47 | 8 | 4 |
| 94−3228 | Spring | 47 | 7 | 4 |
| 94−3229 | Union | 47 | 11 | 3 |
| 94−3230 | Hose | 47 | 1 | 1 |
| 94−3231 | Bracket | 47 | 13 | 2 |
| 94−3232 | Washer−0.79 mm | 47 | 6 | 4 |
| 94−3233 | Washer−0.82 mm | 47 | * | 4 |
| 94−3234 | Washer−0.85 mm | 47 | * | 4 |
| 94−3235 | Washer−0.88 mm | 47 | * | 4 |
| 94−3236 | Washer−0.91 mm | 47 | * | 4 |
| 94−3237 | Washer−0.94 mm | 47 | * | 4 |
| 94−3238 | Washer−0.97 mm | 47 | * | 4 |
| 94−3239 | Washer−1.00 mm | 47 | * | 4 |
| 94−3240 | Washer−1.03 mm | 47 | * | 4 |
| 94−3241 | Washer−1.06 mm | 47 | * | 4 |
| 94−3242 | Washer−1.30 mm | 47 | 6 | 4 |
| 94−3243 | Washer−1.33 mm | 47 | * | 4 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 94–3244 | Washer–1.36 mm | 47 | * | 4 |
| 94–3245 | Washer–1.39 mm | 47 | * | 4 |
| 94–3246 | Washer–1.42 mm | 47 | * | 4 |
| 94–3247 | Washer–1.45 mm | 47 | * | 4 |
| 94–3248 | Washer–1.48 mm | 47 | * | 4 |
| 94–3249 | Tube–Outlet | 46 | 22 | 1 |
| 94–3250 | Screw–Connection | 46 | 23 | 1 |
| 94–3251 | Nut | 46 | 15 | 1 |
| 94–3251 | Nut–Lock | 50 | 8 | 1 |
| 94–3252 | Alternator | 48 | 12 | 1 |
| 94–3253 | Bracket | 48 | 7 | 1 |
| 94–3254 | Screw | 48 | 6 | 1 |
| 94–3255 | Slide | 48 | 4 | 1 |
| 94–3256 | Belt | 48 | 5 | 1 |
| 94–3257 | Washer–Spring | 48 | 13 | 1 |
| 94–3258 | Screw | 48 | 14 | 1 |
| 94–3259 | Screw | 48 | 9 | 1 |
| 94–3260 | Washer–Flat | 48 | 3 | 1 |
| 94–3261 | Nut | 48 | 11 | 1 |
| 94–3262 | Nut | 48 | 10 | 1 |
| 94–3263 | Starter | 49 | 3 | 1 |
| 94–3264 | Plug–Glow | 50 | 3 | 4 |
| 94–3265 | Cable–Glow Plug | 50 | 2 | 4 |
| 94–3266 | Nut–Hex. | 50 | 5 | 4 |
| 94–3267 | Nut–Lock | 50 | 6 | 1 |
| 94–3274 | O–Ring | 46 | 18 | 1 |
| 94–3275 | Solenoid–Starter | 49 | * | 1 |
| 94–3354 | Decal–Diagnostic ACE | 10 | 1 | 1 |
| 94–3355 | Decal–Diagnostic ACE | 10 | 1 | 1 |
| 94–3356 | Decal–Diagnostic ACE | 10 | 1 | 1 |
| 94–3357 | Decal–Diagnostic ACE | 10 | 1 | 1 |
| 94–3358 | Decal–Diagnostic ACE | 10 | 1 | 1 |
| 94–3359 | Decal–Diagnostic ACE | 10 | 1 | 1 |
| 94–3360 | Decal–Diagnostic ACE | 10 | 1 | 1 |
| 94–3361 | Decal–Diagnostic ACE | 10 | 1 | 1 |
| 94–3362 | Decal–Diagnostic ACE | 10 | 1 | 1 |
| 94–3363 | Decal–Diagnostic ACE | 10 | 1 | 1 |
| 94–3364 | Decal–Diagnostic ACE | 10 | 1 | 1 |
| 94–3500 | Wheel–Steering | 3 | 19 | 1 |
| 94–4088 | Screw | 5 | 9 | 7 |
| 94–4089 | Cap–End | 5 | 10 | 1 |
| 94–4090 | Gerotor | 5 | 11 | 1 |
| 94–4091 | Spacer | 5 | 12 | 1 |
| 94–4092 | Plate–Wear | 5 | 14 | 1 |
| 94–4093 | Drive | 5 | 13 | 1 |
| 94–4094 | Pin | 5 | 6 | 1 |
| 94–4095 | Kit–Spring, Centering | 5 | 3 | 1 |
| 94–4096 | Kit–Bearing | 5 | 8 | 1 |
| 94–4097 | Asm–Plug | 5 | 15 | 1 |
| 94–4098 | Ring–Retaining | 5 | 5 | 1 |
| 94–4099 | Kit–Seal | 5 | 1 | 1 |
| 94–4100 | Ball | 5 | 16 | 1 |
| 94–4572 | Decal–Hillside (Japan) | 2 | 28 | 1 |
| 94–4573 | Decal–Tower (Japan) | 3 | 23 | 1 |
| 94–4574 | Decal–Console (Japan) | 12 | 40 | 1 |
| 94–4575 | Decal–HOC Selector | 12 | 17 | 1 |
| 94–4578 | Decal–Hot Surface (Japan) | 51 | 1 | 1 |
| 94–4579 | Decal–Danger (Japan) | 2 | 55 | 1 |
| 94–4580 | Decal–Backlap (Japan) | 74 | 24 | 1 |
| 94–5438 | Seal–Solenoid | 66 | 16 | 10 |
| 94–5438 | Seal–Solenoid | 75 | 19 | 16 |
| 94–5603 | Bushing–Sleeve | 62 | 51 | 2 |
| 94–5607 | Asm–Axle, Rear | 61 | 20 | 1 |
| 94–6343 | Decal–**Wire Identification #1** | 13 | * | 1 |
| 94–6349 | Decal–Fuses | 13 | 58 | 1 |
| 94–6710 | Fuse–2A | 13 | 47 | 1 |
| 94–8000 | Nut–Lock | 53 | 13 | 1 |
| 94–8000 | Nut–Lock | 61 | 13 | 1 |
| 94–8025 | O–Ring | 18 | 3 | 1 |
| 94–8026 | Asm–Vent | 18 | 12 | 1 |
| 94–8027 | O–Ring | 18 | 10 | 1 |
| 94–8028 | O–Ring | 18 | 11 | 1 |
| 94–8102 | Tube–Interlock (Europe) | 12 | 1 | 1 |
| 94–8103 | Boot–Control, Lift | 12 | 22 | 1 |
| 94–8104 | Switch–Micro | 12 | 8 | 2 |
| 94–8105 | Clamp–Tube | 32 | 54 | 2 |
| 94–8108 | Support–Filter, Air | 51 | 42 | 1 |
| 94–8115 | Pin–Axle, Pivot | 62 | 53 | 1 |
| 94–8115 | Pin–Axle, Pivot | 54 | 55 | 1 |
| 94–8132 | Gasket–Head (1.48 mm) | 39 | 53 | 1 |
| 94–8133 | Gasket–Head (1.52 mm) | 39 | * | 1 |
| 94–8134 | Gasket–Head (1.58 mm) | 39 | * | 1 |
| 94–8135 | Gasket–Head (1.62 mm) | 39 | * | 1 |
| 94–8140 | Plug–Orifice | 75 | 21 | 1 |
| 94–8141 | Cylinder–Hydraulic | 53 | 44 | 1 |
| 94–8142 | Asm–Cylinder | 61 | 39 | 1 |
| 94–8146 | Strip–Foam, Seat | 8 | 34 | 1 |
| 94–8147 | Nozzle–Injector | 47 | 9 | 4 |
| 94–8166 | O–Ring | 16 | 7 | 1 |
| 94–8946 | Washer | 67 | 13 | 3 |
| 94–8946 | Washer | 71 | 34 | 2 |
| 94–8947 | Bushing–Flange | 67 | 6 | 12 |
| 94–8947 | Bushing–Flange | 71 | 6 | 8 |
| 94–9950 | Asm–Valve, Steering | 3 | 5 | 1 |
| 94–9951 | Asm–Column, Steering | 3 | 17 | 1 |
| 94–9952 | Nut–Jam | 3 | 21 | 1 |
| 94–9953 | Frame–Front | 2 | 38 | 1 |
| 94–9955 | Asm–Barrel | 60 | 1 | 1 |
| 94–9956 | Asm–Piston Rod | 60 | 6 | 1 |
| 94–9957 | Piston | 60 | 3 | 1 |
| 94–9958 | Gland–Cylinder | 60 | 8 | 1 |
| 94–9959 | Asm–Barrel | 63 | 1 | 1 |
| 94–9960 | Asm–Rod, Piston | 63 | 12 | 1 |
| 94–9961 | Piston | 63 | 3 | 1 |
| 94–9962 | Gland–Cylinder | 63 | 10 | 1 |
| 94–9963 | Ring–Retaining | 63 | 9 | 1 |
| 94–9964 | Kit–Seal | 63 | * | 1 |
| 94–9965 | Asm–Head, Cylinder | 39 | * | 1 |
| 94–9967 | Circuit Breaker–50 Amp | 34 | * | 1 |
| 94–9968 | Circuit Braker–100 Amp | 34 | * | 1 |
| 94–9969 | Screw–Connection | 46 | 27 | 1 |
| 94–9973 | Ring–Retaining | 61 | 40 | 1 |
| 94–9974 | Ring–Retaining | 71 | 11 | 2 |
| 94–9974 | Ring–Retaining | 67 | 23 | 6 |
| 94–9984 | Sensor–Water Level | 51 | 23 | 1 |
| 94–9994 | Gasket–Camshaft | 40 | 27 | 1 |
| 94–9998 | Washer–Thrust | 67 | 22 | 6 |
| 94–9999 | Valve–Relief | 23 | 7 | 2 |
| 95–1821 | Spring–Brake, Park | 3 | 39 | 1 |
| 95–3459 | Cartridge–N.O. | 75 | 9 | 1 |
| 95–3459 | Cartridge–No Flow | 66 | 9 | 1 |
| 95–3464 | Rim | 25 | 5 | 2 |
| 95–3465 | Tire | 25 | 1 | 2 |
| 95–3477 | Decal–Clip (Japan) | 8 | 17 | |
| 95–3484 | Screw–HH | 36 | 19 | 8 |
| 95–3485 | Sprocket–Oil Pump | 36 | 5 | 1 |
| 95–7151 | Tube–Convoluted | 6 | 49 | 1 |
| 95–7152 | Protector – Bearing | 61 | 33 | 2 |
| 95–7158 | Pin–Pivot | 71 | 14 | 2 |
| 95–7158 | Pin–Pivot | 67 | 28 | 3 |
| 95–7184 | Carrier Frame Assembly | 67 | 38 | 1 |
| 98–1805 | Box–Degassing | 51 | 21 | 1 |
| 98–1852 | Asm–Gauge Bar | 79 | 3 | 1 |
| 98–1880 | Knuckle–Pivot | 71 | 1 | 2 |
| 98–1880 | Knuckle–Pivot | 67 | 3 | 3 |
| 98–2195 | Lever–Control | 12 | 9 | 1 |
| 98–2350 | Plate–Seat | 8 | 18 | 1 |
| 98–2352 | Frame–Seat | 8 | 5 | 1 |
| 98–2353 | Bracket–Latch, Seat | 8 | 8 | 2 |
| 98–2354 | Latch–Seat | 8 | 22 | 1 |
| 98–2400 | Lift Arm Assembly #1 | 67 | 11 | 1 |
| 98–2402 | Lift Arm #2 | 71 | 33 | 1 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 98−2404 | Lift Arm #3 | 71 | 32 | 1 |
| 98−2406 | Lift Arm #4 | 67 | 25 | 1 |
| 98−2408 | Lift Arm #5 | 67 | 43 | 1 |
| 98−2444 | Arm−Drag Link | 59 | 1 | 1 |
| 98−2446 | Arm−Tie Rod | 59 | 2 | 1 |
| 98−2447 | Axle−4WD | 53 | 32 | 1 |
| 98−3728 | Decal−Service | 1 | 27 | 1 |
| 98−3730 | Pump−Piston | 19 | 24 | 1 |
| 98−7353 | Head | 68 | 10 | 1 |
| 98−7353 | Head | 73 | 11 | 1 |
| 98−7354 | Head | 69 | 10 | 1 |
| 98−7354 | Head | 72 | 11 | 1 |
| 98−7974 | Screw−Flange | 71 | 41 | 2 |
| 98−7974 | Washer−Thrust | 67 | 62 | 3 |
| 98−7976 | Decal | 79 | 2 | 1 |
| 98−7993 | Screw−Flange | 67 | 63 | 3 |
| 98−7993 | Screw−Flange | 71 | 42 | 2 |
| 98−8069 | Cylinder−Hydraulic | 67 | 41 | 1 |
| 98−8108 | Decal−Rear Manifold Block | 8 | 19 | 1 |
| 98−8110 | Decal−Instructions, Clip | 8 | 17 | 1 |
| 98−8135 | Decal−Service (Danish) | 1 | 27 | 1 |
| 98−8136 | Decal−Service (Dutch) | 1 | 27 | 1 |
| 98−8137 | Decal−Service (Finnish) | 1 | 27 | 1 |
| 98−8138 | Decal−Service (French) | 1 | 27 | 1 |
| 98−8139 | Decal−Service (German) | 1 | 27 | 1 |
| 98−8140 | Decal−Service (Italian) | 1 | 27 | 1 |
| 98−8141 | Decal−Service (Norwegian) | 1 | 27 | 1 |
| 98−8806 | Valve−Solenoid | 46 | 17 | 1 |
| 98−8811 | Cylinder−Hydraulic | 67 | 29 | 1 |
| 98−8812 | Cylinder−Hydraulic | 71 | 25 | 1 |
| 98−8813 | Cylinder−Hydraulic | 71 | 15 | 1 |
| 98−8814 | Frame−Rear | 1 | 22 | 1 |
| 98−8838 | Tie Rod−4WD | 59 | * | 1 |
| 98−8839 | Tie Rod Assembly | 62 | * | 1 |
| 98−8840 | Tube & Clamp Assembly | 61 | 47 | 1 |
| 98−8841 | Bar & Clamp Assembly | 59 | 22 | 1 |
| 98−9965 | Bushing−Sleeve | 36 | 24 | 4 |
| 98−9970 | Box−Outlet | 44 | 3 | 1 |
| 98−9971 | Hose−By−Pass | 39 | 40 | 1 |
| 98−9972 | Cover−Pump, Water | 45 | 5 | 1 |
| 98−9973 | Ring−Retaining | 53 | 43 | 2 |
| 98−9976 | Bumper | 71 | 46 | 4 |
| 98−9976 | Bumper | 67 | 68 | 6 |
| 217−125 | Wheel | 61 | 29 | 2 |
| 217−125 | Wheel | 53 | 34 | 2 |
| 218−446 | Washer−Lock | 12 | 39 | 1 |
| 218−447 | Nut−Hex. | 12 | 38 | 1 |
| 218−498 | Nut−Hex. | 12 | 21 | 2 |
| 218−533 | Lens−Red | 3 | 28 | 1 |
| 218−535 | Nut−Lock | 3 | 34 | 1 |
| 218−536 | Washer−Lock, Int. Tooth | 3 | 25 | 1 |
| 218−574 | Fuse−7.5A | 13 | 47 | 1 |
| 218−578 | Fuse−10A | 13 | 47 | 4 |
| 218−581 | Fuse−15A | 13 | 47 | 1 |
| 218−588 | Screw | 13 | *74 | 2 |
| 218−589 | Washer−Lock | 12 | 34 | 1 |
| 218−594 | Fuse−20A | 13 | 47 | 1 |
| 219−17 | Bulb | 13 | *64 | 4 |
| 232−24 | Stem−Valve | 25 | 2 | 2 |
| 232−27 | Stem−Valve | 61 | 30 | 2 |
| 232−27 | Stem−Valve | 53 | 35 | 2 |
| 233−17 | Knob | 3 | 33 | 1 |
| 233−42 | Knob | 8 | 11 | 1 |
| 233−42 | Knob | 6 | 21 | 1 |
| 237−7 | O−Ring | 13 | 76 | 4 |
| 237−21 | O−Ring | 74 | 3 | 5 |
| 237−21 | O−Ring | 67 | 5 | 6 |
| 237−21 | O−Ring | 71 | 5 | 4 |
| 237−21 | O−Ring | 76 | 22 | 5 |
| 237−21 | O−Ring | 64 | 39 | 2 |
| 237−22 | O−Ring | 19 | 7 | 1 |
| 237−22 | O−Ring | 3 | 10 | 10 |
| 237−22 | O−Ring | 64 | 10 | 2 |
| 237−22 | O−Ring | 76 | 20 | 3 |
| 237−22 | O−Ring | 25 | 33 | 1 |
| 237−22 | O−Ring | 74 | 36 | 1 |
| 237−22 | O−Ring | 16 | 38 | 1 |
| 237−22 | O−Ring | 61 | 44 | 2 |
| 237−22 | O−Ring | 62 | 58 | 2 |
| 237−22 | O−Ring | 54 | 64 | 6 |
| 237−30 | O−Ring | 76 | 6 | 18 |
| 237−30 | O−Ring | 74 | 9 | 4 |
| 237−30 | O−Ring | 19 | 10 | 2 |
| 237−30 | O−Ring | 64 | 30 | 6 |
| 237−30 | O−Ring | 16 | 31 | 2 |
| 237−30 | O−Ring | 26 | 45 | 3 |
| 237−42 | O−Ring | 19 | 5 | 1 |
| 237−42 | O−Ring | 74 | 8 | 1 |
| 237−42 | O−Ring | 3 | 12 | 4 |
| 237−42 | O−Ring | 66 | 12 | 5 |
| 237−42 | O−Ring | 75 | 15 | 5 |
| 237−42 | O−Ring | 16 | 36 | 1 |
| 237−42 | O−Ring | 53 | 38 | 2 |
| 237−42 | O−Ring | 65 | 52 | 2 |
| 237−56 | O−Ring | 66 | 5 | 4 |
| 237−58 | O−Ring | 53 | 7 | 6 |
| 237−58 | O−Ring | 16 | 12 | 1 |
| 237−58 | O−Ring | 19 | 17 | 3 |
| 237−58 | O−Ring | 25 | 22 | 4 |
| 237−58 | O−Ring | 64 | 33 | 2 |
| 237−65 | O−Ring | 16 | 15 | 2 |
| 237−65 | O−Ring | 74 | 20 | 1 |
| 237−65 | O−Ring | 19 | 27 | 1 |
| 237−65 | O−Ring | 32 | 32 | 4 |
| 237−78 | O−Ring | 67 | 1 | 6 |
| 237−78 | O−Ring | 71 | 2 | 4 |
| 237−78 | O−Ring | 19 | 3 | 4 |
| 237−78 | O−Ring | 66 | 3 | 4 |
| 237−78 | O−Ring | 74 | 5 | 8 |
| 237−78 | O−Ring | 75 | 6 | 10 |
| 237−78 | O−Ring | 76 | 24 | 5 |
| 237−78 | O−Ring | 64 | 26 | 4 |
| 237−78 | O−Ring | 61 | 42 | 2 |
| 237−78 | O−Ring | 54 | 51 | 2 |
| 237−79 | O−Ring | 76 | 4 | 10 |
| 237−79 | O−Ring | 74 | 18 | 4 |
| 237−79 | O−Ring | 64 | 27 | 3 |
| 237−79 | O−Ring | 16 | 33 | 1 |
| 237−79 | O−Ring | 25 | 35 | 4 |
| 237−80 | O−Ring | 19 | 8 | 3 |
| 237−81 | O−Ring | 16 | 10 | 3 |
| 237−81 | O−Ring | 53 | 19 | 2 |
| 237−81 | O−Ring | 19 | 21 | 1 |
| 237−81 | O−Ring | 74 | 22 | 1 |
| 237−81 | O−Ring | 25 | 24 | 4 |
| 237−81 | O−Ring | 64 | 31 | 1 |
| 237−99 | O−Ring | 19 | 13 | 1 |
| 237−101 | O−Ring | 19 | 41 | 1 |
| 237−146 | O−Ring | 19 | 29 | 2 |
| 237−156 | O−Ring | 75 | 11 | 10 |
| 237−166 | O−Ring | 53 | 17 | 1 |
| 237−166 | O−Ring | 25 | 25 | 2 |
| 240−2 | Grommet | 25 | 11 | 2 |
| 240−2 | Grommet | 25 | 11 | 3 |
| 240−5 | Grommet | 76 | 12 | 5 |
| 240−5 | Grommet | 64 | 17 | 4 |
| 240−7 | Grommet | 54 | 61 | 1 |
| 240−11 | Grommet | 17 | 15 | 3 |
| 240−11 | Grommet | 16 | 29 | 3 |
| 242−50 | Nut−Lug | 61 | 35 | 10 |
| 249−40 | Keeper | 1 | 9 | 1 |
| 2410−18 | Plug | 79 | 9 | 1 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 2410−42 | Cap−Bumper | 32 | 38 | 2 |
| 2410−42 | Cap−Bumper | 32 | 38 | 4 |
| 2410−64 | Button−Plug | 32 | 53 | 3 |
| 2411−36 | Bearing−Rod End | 6 | 3 | 2 |
| 2411−36 | Bearing−Rod End | 19 | 22 | 1 |
| 2411−45 | Tie Rod End | 61 | 5 | 2 |
| 2411−45 | Tie Rod End | 59 | 10 | 2 |
| 2412−3 | Clamp−Hose | 32 | 4 | 2 |
| 2412−3 | Clamp−Hose | 34 | 13 | 4 |
| 2412−36 | Clamp−Drain | 17 | 11 | 1 |
| 2412−36 | Clamp−Hose | 32 | 7 | 1 |
| 2412−36 | Clamp−Hose | 51 | 34 | 4 |
| 2412−93 | Clamp−R | 7 | 21 | 1 |
| 2412−93 | R−Clamp | 26 | 39 | 2 |
| 2412−96 | Clamp−R | 71 | 24 | 1 |
| 2412−96 | Clamp−R | 67 | 50 | 1 |
| 2412−96 | Clamp−R (Europe) | 32 | 52 | 1 |
| 2412−108 | Clamp−Hose | 17 | 3 | 4 |
| 2412−108 | Clamp−Hose | 51 | 16 | 3 |
| 2412−108 | Clamp−Hose | 34 | 26 | 2 |
| 2412−111 | Clamp | 16 | 23 | 1 |
| 2412−111 | Clamp−Hose | 19 | 39 | 2 |
| 2412−125 | Clamp−Hose | 32 | 12 | 1 |
| 2412−125 | Clamp−Hose | 34 | 30 | 1 |
| 2412−125 | Clamp−Hose | 51 | 38 | 2 |
| 2412−126 | Clamp−R | 13 | 60 | 1 |
| 2412−129 | Clamp−Hose | 35 | 8 | 8 |
| 2412−129 | Clamp−Hose | 51 | 27 | 2 |
| 2412−129 | Clamp−Hose | 38 | 36 | 4 |
| 2412−129 | Clamp−Hose | 34 | 39 | 4 |
| 2412−133 | Clamp−R | 7 | 17 | 2 |
| 2412−147 | Clamp − R | 65 | 57 | 1 |
| 2412−147 | Clamp − R | 33 | 58 | 1 |
| 2412−150 | J−Clip | 34 | 48 | 1 |
| 254−72 | Cup−Bearing | 61 | 26 | 2 |
| 254−92 | Cone−Bearing | 61 | 27 | 2 |
| 254−106 | Cone−Bearing | 61 | 23 | 2 |
| 254−107 | Cup−Bearing | 61 | 24 | 2 |
| 256−42 | Bushing | 6 | 39 | 2 |
| 256−236 | Bearing−Flange | 6 | 28 | 4 |
| 283−58 | Pin−Clevis | 6 | 32 | 2 |
| 283−71 | Pin−Lynch | 71 | 47 | 2 |
| 283−71 | Pin−Lynch | 67 | 69 | 3 |
| 302−5 | Fitting−Grease | 68 | 1 | 1 |
| 302−5 | Fitting−Grease | 69 | 1 | 1 |
| 302−5 | Fitting−Grease | 70 | 1 | 1 |
| 302−5 | Fitting−Grease | 72 | 1 | 1 |
| 302−5 | Fitting−Grease | 73 | 1 | 1 |
| 302−5 | Fitting−Grease | 61 | 41 | 1 |
| 302−5 | Fitting−Grease | 54 | 54 | 1 |
| 302−5 | Fitting−Grease, Straight | 67 | 4 | 6 |
| 302−5 | Fitting−Grease, Straight | 71 | 4 | 2 |
| 302−11 | Fitting−Grease | 61 | 19 | 2 |
| 302−11 | Fitting−Grease 45˚ | 71 | 48 | 2 |
| 302−33 | Fitting−Grease | 54 | 63 | 1 |
| 302−33 | Fitting−Grease 90˚ | 62 | 52 | 1 |
| 302−55 | Fitting−Grease | 61 | 3 | 2 |
| 302−55 | Fitting−Grease | 59 | 17 | 2 |
| 302−60 | Fitting−Grease | 6 | 38 | 1 |
| 302−60 | Fitting−Grease | 67 | 70 | 1 |
| 302−60 | Fitting−Grease 90˚ | 53 | 42 | 1 |
| 304−46 | Fitting−Drain | 17 | 12 | 1 |
| 304−46 | Nut−Drain Cock | 32 | 17 | 1 |
| 321−15 | Screw−HH | 74 | 33 | 3 |
| 321−39 | Screw−HH | 13 | 57 | 2 |
| 322−3 | Screw−HH | 8 | 9 | 8 |
| 322−3 | Screw−HH | 12 | 11 | 2 |
| 322−3 | Screw−HH | 7 | 18 | 2 |
| 322−3 | Screw−HH | 6 | 27 | 8 |
| 322−3 | Screw−HH | 2 | 32 | 4 |
| 322−3 | Screw−HH | 34 | 34 | 4 |
| 322−4 | Screw−HH | 67 | 52 | 1 |
| 322−5 | Screw−HH | 13 | 59 | 1 |
| 322−6 | Screw−HH | 9 | 30 | 1 |
| 322−6 | Screw−HH | 65 | 46 | 1 |
| 322−6 | Screw−HH | 4 | 53 | 3 |
| 322−7 | Screw−HH | 76 | 30 | 2 |
| 322−7 | Screw−HH | 3 | 41 | 1 |
| 322−7 | Screw−HH (Model 03803) | 65 | 56 | 4 |
| 322−7 | Screw−HH (Model 03804) | 65 | 56 | 5 |
| 322−9 | Screw−HH | 33 | 55 | 1 |
| 323−4 | Screw−HH | 7 | 6 | 2 |
| 323−6 | Screw−HH | 53 | 1 | 2 |
| 323−6 | Screw−HH | 65 | 54 | 2 |
| 323−7 | Screw−HH | 6 | 10 | 1 |
| 323−7 | Screw−HH | 19 | 37 | 2 |
| 323−9 | Screw−HH | 6 | 5 | 1 |
| 323−9 | Screw−HH | 59 | 23 | 2 |
| 323−9 | Screw−HH | 61 | 46 | 2 |
| 325−4 | Screw−HH | 53 | 22 | 2 |
| 325−5 | Screw−HH | 32 | 40 | 2 |
| 325−20 | Screw−HH | 61 | 1 | 2 |
| 325−33 | Screw−HH | 54 | 56 | 4 |
| 328−7 | Screw−HH | 67 | 39 | 4 |
| 3212−4 | Screw | 7 | 8 | 2 |
| 3213−14 | Screw−HH | 54 | 70 | 6 |
| 3213−14 | Screw−HH (Europe) | 62 | 65 | 6 |
| 3217−5 | Nut | 23 | 28 | 1 |
| 3217−6 | Nut−Jam | 74 | 29 | 1 |
| 3217−6 | Nut−Jam | 9 | 32 | 1 |
| 3217−25 | Nut−Hex. | 13 | *65 | 2 |
| 3217−26 | Nut | 12 | 23 | 1 |
| 3217−29 | Nut−Hex. | 13 | *67 | 6 |
| 3218−4 | Nut−Jam | 25 | 27 | 2 |
| 3219−14 | Nut−Hex. | 13 | *69 | 8 |
| 3219−14 | Washer−Lock | 3 | 26 | 3 |
| 3220−3 | Nut−Jam | 6 | 2 | 3 |
| 3220−3 | Nut−Jam | 19 | 15 | 1 |
| 3220−3 | Nut−Jam | 23 | 46 | 1 |
| 3220−11 | Nut−Jam | 62 | 61 | 1 |
| 3220−24 | Nut−Lock | 12 | 19 | 1 |
| 3230−2 | Screw−Carriage | 32 | 48 | 3 |
| 3234−1 | Screw | 16 | 17 | 2 |
| 3234−5 | Screw−FH | 51 | 6 | 3 |
| 3234−5 | Screw−HF | 32 | 9 | 10 |
| 3234−7 | Screw | 3 | 15 | 2 |
| 3234−7 | Screw | 2 | 56 | 9 |
| 3234−11 | Screw−HF | 19 | 16 | 1 |
| 3234−12 | Screw−HHF | 61 | 14 | 2 |
| 3234−14 | Screw−Flange | 2 | 37 | 10 |
| 3234−17 | Screw−HF | 74 | 32 | 4 |
| 3234−18 | Screw−Flange | 2 | 54 | 2 |
| 3234−18 | Screw−HHF | 32 | 2 | 2 |
| 3250−29 | Screw | 7 | 12 | 4 |
| 3250−31 | Screw−PH | 12 | 28 | 2 |
| 3253−2 | Nut−Hex. | 4 | 55 | 9 |
| 3253−2 | Washer−Lock | 13 | *70 | 5 |
| 3253−3 | Washer−Lock | 74 | 34 | 3 |
| 3253−3 | Washer−Lock | 23 | 66 | 1 |
| 3253−4 | Washer−Lock | 7 | 19 | 4 |
| 3253−4 | Washer−Lock | 34 | 33 | 4 |
| 3253−6 | Washer−Lock | 7 | 7 | 2 |
| 3253−6 | Washer−Lock | 9 | 25 | 2 |
| 3253−15 | Washer−Lock | 13 | *66 | 2 |
| 3253−15 | Washer−Lock | 17 | 19 | 5 |
| 3253−33 | Washer−Lock | 9 | 31 | 1 |
| 3254−1 | Washer−Lock | 12 | 24 | 1 |
| 3254−6 | Washer−Lock | 12 | 18 | 1 |
| 3255−8 | Washer−Lock | 3 | 37 | 1 |
| 3255−9 | Washer−Lock, Ext. Tooth | 51 | 4 | 2 |
| 3255−19 | Washer−Lock | 13 | *75 | 2 |
| 3255−24 | Washer−Lock, Ext. Tooth | 13 | *68 | 3 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 3256−1 | Washer | 12 | 37 | 3 |
| 3256−1 | Washer−Flat | 3 | 32 | 2 |
| 3256−1 | Washer−Flat | 2 | 48 | 3 |
| 3256−3 | Washer−Flat | 2 | 33 | 4 |
| 3256−5 | Washer−Flat | 9 | 4 | 1 |
| 3256−5 | Washer−Flat | 6 | 44 | 1 |
| 3256−6 | Washer−Flat | 71 | 43 | 2 |
| 3256−6 | Washer−Flat | 67 | 64 | 3 |
| 3256−14 | Washer−Flat | 12 | 26 | 2 |
| 3256−14 | Washer−Flat | 3 | 27 | 2 |
| 3256−22 | Washer−Flat | 6 | 8 | 2 |
| 3256−22 | Washer−Flat | 3 | 40 | 5 |
| 3256−23 | Washer−Flat | 7 | 2 | 8 |
| 3256−23 | Washer−Flat | 12 | 12 | 3 |
| 3256−23 | Washer−Flat | 8 | 14 | 4 |
| 3256−23 | Washer−Flat | 76 | 32 | 4 |
| 3256−23 | Washer−Flat | 3 | 38 | 6 |
| 3256−23 | Washer−Flat | 32 | 49 | 4 |
| 3256−23 | Washer−Flat (Model 03803) | 64 | 7 | 8 |
| 3256−23 | Washer−Flat (Model 03804) | 64 | 7 | 9 |
| 3256−24 | Washer | 9 | 5 | 1 |
| 3256−24 | Washer−Flat | 6 | 4 | 2 |
| 3256−24 | Washer−Flat | 23 | 13 | 4 |
| 3256−24 | Washer−Flat | 8 | 21 | 3 |
| 3256−26 | Washer−Flat (Europe) | 62 | 64 | 6 |
| 3256−26 | Washer | 54 | 65 | 1 |
| 3256−26 | Washer−Flat | 3 | 2 | 2 |
| 3256−26 | Washer−Flat | 9 | 24 | 2 |
| 3256−26 | Washer−Flat (Europe) | 54 | 69 | 6 |
| 3256−27 | Washer−Flat | 32 | 47 | 2 |
| 3256−29 | Washer−Flat | 53 | 12 | 1 |
| 3256−29 | Washer−Flat | 61 | 12 | 1 |
| 3256−46 | Washer−Flat | 9 | 20 | 1 |
| 3256−46 | Washer−Flat | 19 | 42 | 2 |
| 3256−49 | Washer−Flat | 34 | 19 | 1 |
| 3256−56 | Washer−Flat | 32 | 16 | 3 |
| 3256−69 | Washer−Flat | 6 | 33 | 3 |
| 3256−77 | Washer−Flat | 23 | 44 | 8 |
| 3256−78 | Washer−Flat | 1 | 13 | 2 |
| 3258−166 | Screw | 1 | 23 | 3 |
| 3258−166 | Screw | 12 | 36 | 3 |
| 3269−4 | Rivet−Pop | 32 | 35 | 4 |
| 3269−10 | Washer−Flat | 1 | 15 | 2 |
| 3269−13 | Rivet−Pop | 1 | 10 | 4 |
| 3272−2 | Pin−Cotter | 6 | 9 | 2 |
| 3272−5 | Pin−Cotter | 3 | 4 | 3 |
| 3272−7 | Pin−Cotter | 59 | 14 | 2 |
| 3272−10 | Pin−Cotter | 3 | 3 | 1 |
| 3272−10 | Pin−Cotter | 8 | 20 | 1 |
| 3272−10 | Pin−Cotter | 6 | 37 | 2 |
| 3272−12 | Pin−Cotter | 61 | 6 | 2 |
| 3272−12 | Pin−Cotter | 54 | 49 | 4 |
| 3272−13 | Pin−Cotter | 61 | 34 | 2 |
| 3274−59 | Screw−HH | 23 | 30 | 6 |
| 3274−81 | Screw | 23 | 45 | 8 |
| 3290−93 | Screw−HH | 12 | 7 | 4 |
| 3290−271 | Rivet−Pop | 32 | 3 | 2 |
| 3290−282 | Rivet−Pop | 34 | 50 | 1 |
| 3290−307 | Pin−Cotter, Hair | 8 | 33 | 1 |
| 3290−354 | Plate−Nut | 12 | 10 | 2 |
| 3290−378 | Tie−Cable | 3 | 9 | 7 |
| 3290−378 | Tie−Cable | 71 | 19 | 2 |
| 3290−378 | Tie−Cable | 51 | 20 | 5 |
| 3290−378 | Tie−Cable | 17 | 23 | 3 |
| 3290−378 | Tie−Cable | 76 | 27 | 1 |
| 3290−378 | Tie−Cable | 8 | 31 | 2 |
| 3290−378 | Tie−Cable | 26 | 41 | 3 |
| 3290−378 | Tie−Cable | 13 | 44 | 2 |
| 3290−378 | Tie−Cable | 65 | 44 | 6 |
| 3290−378 | Tie−Cable | 6 | 48 | 1 |
| 3290−378 | Tie−Cable | 34 | 52 | 2 |
| 3290−378 | Tie−Cable | 67 | 57 | 3 |
| 3290−461 | Washer−Belleville | 6 | 24 | 1 |
| 3290−467 | Pin−Cotter, Hair | 8 | 6 | 1 |
| 3290−467 | Pin−Cotter, Hair | 1 | 19 | 2 |
| 3290−489 | Knob−Control, Lift | 12 | 29 | 1 |
| 3296−2 | Nut−Lock | 12 | 14 | 1 |
| 3296−23 | Nut−Lock | 53 | 11 | 4 |
| 3296−23 | Nut−Lock | 32 | 37 | 4 |
| 3296−23 | Nut−Lock | 32 | 46 | 2 |
| 3296−29 | Nut−Lock | 7 | 1 | 5 |
| 3296−29 | Nut−Lock | 51 | 2 | 1 |
| 3296−29 | Nut−Lock | 8 | 13 | 9 |
| 3296−29 | Nut−Lock | 74 | 25 | 1 |
| 3296−39 | Nut−Hex. Lock | 61 | 2 | 2 |
| 3296−39 | Nut−Hex. Lock | 59 | 24 | 2 |
| 3296−39 | Nut−Lock | 7 | 14 | 2 |
| 3296−39 | Nut−Lock | 8 | 24 | 1 |
| 3296−39 | Nut−Lock | 6 | 25 | 3 |
| 3296−42 | Nut−Lock | 13 | 46 | 2 |
| 3296−44 | Nut−Lock | 9 | 22 | 1 |
| 3296−45 | Nut−Lock | 61 | 11 | 2 |
| 3296−47 | Nut−Lock | 76 | 31 | 2 |
| 3296−47 | Nut−Lock | 3 | 36 | 1 |
| 3296−47 | Nut−Lock | 33 | 56 | 1 |
| 3296−47 | Nut−Lock (Model 03803) | 65 | 47 | 4 |
| 3296−47 | Nut−Lock (Model 03804) | 65 | 47 | 5 |
| 3296−49 | Nut−Lock NI | 71 | 38 | 2 |
| 3296−49 | Nut−Lock NI | 67 | 60 | 3 |
| 3296−51 | Nut−Lock | 67 | 40 | 4 |
| 3296−54 | Nut−Lock | 7 | 9 | 4 |
| 3296−59 | Nut−Lock | 19 | 23 | 1 |
| 32103−3 | Nut−Wing | 79 | 4 | 2 |
| 32104−37 | Screw−HH | 64 | 6 | 2 |
| 32104−76 | Screw−Self Tap | 67 | 20 | 2 |
| 32105−13 | Screw−HH | 13 | 42 | 4 |
| 32120−8 | Ring−Retaining | 60 | 11 | 1 |
| 32120−15 | Ring−Retaining | 53 | 24 | 2 |
| 32121−6 | Pin−Roll | 6 | 11 | 1 |
| 32121−11 | Pin−Roll | 6 | 41 | 1 |
| 32121−16 | Pin−Roll | 6 | 34 | 1 |
| 32121−45 | Pin−Roll | 6 | 13 | 2 |
| 32121−50 | Pin−Roll | 6 | 36 | 1 |
| 32121−110 | Pin−Spring | 71 | 40 | 2 |
| 32121−110 | Pin−Spring | 67 | 61 | 3 |
| 32122−24 | Screw | 17 | 20 | 5 |
| 32122−54 | Screw−Machine Slot Hd. | 79 | 1 | 2 |
| 32128−20 | Nut−Flange | 32 | 8 | 4 |
| 32128−20 | Nut−Lock | 6 | 26 | 8 |
| 32128−20 | Nut−Lock | 2 | 62 | 2 |
| 32128−21 | Nut−HHF | 53 | 2 | 2 |
| 32128−21 | Nut−Lock | 65 | 55 | 2 |
| 32128−25 | Nut−Lock | 8 | 7 | 4 |
| 32128−26 | Nut−Flange | 9 | 21 | 4 |
| 32128−33 | Nut−Flange | 2 | 45 | 3 |
| 32128−33 | Nut−Lock | 13 | 55 | 3 |
| 32136−13 | Nut−Hex. Slotted | 59 | 13 | 2 |
| 32136−13 | Nut−Hex. Slotted | 61 | 37 | 2 |
| 32136−14 | Nut−Hex. Slotted | 61 | 9 | 4 |
| 32136−14 | Nut−Hex. Slotted | 54 | 48 | 2 |
| 32144−10 | Screw | 8 | 26 | 2 |
| 32144−11 | Screw−Thread Form | 71 | 23 | 1 |
| 32144−11 | Screw−Thread Forming | 25 | 17 | 5 |
| 32144−11 | Screw−Thread Forming | 3 | 44 | 2 |
| 32144−14 | Screw−HH | 6 | 18 | 2 |
| 32144−14 | Screw−HWH Thread Form | 67 | 15 | 3 |
| 32144−18 | Screw−HWH | 13 | 50 | 2 |
| 32148−7 | Nut−Clinch | 1 | 4 | 5 |
| 32148−10 | Nut−Clinch | 32 | 14 | 2 |
| 32151−10 | Ring−Retaining | 61 | 16 | 2 |
| 32151−36 | Ring−Retaining | 71 | 21 | 4 |
| 32151−72 | Retainer−Push On | 32 | 28 | 2 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 32151−96 | Ring−Retaining | 53 | 14 | 1 |
| 32152−10 | Nut | 72 | 3 | 1 |
| 32152−10 | Nut | 73 | 3 | 1 |
| 32152−10 | Nut−Lock | 60 | 2 | 1 |
| 32152−10 | Nut−Lock | 63 | 2 | 1 |
| 32152−10 | Nut−Lock | 68 | 3 | 1 |
| 32152−10 | Nut−Lock | 69 | 3 | 1 |
| 32152−10 | Nut−Lock | 70 | 3 | 1 |
| 33004−00 | Nut−HF | 34 | 44 | 2 |
| 33005−00 | Nut−HF | 34 | 1 | 9 |
| 33005−00 | Nut−HF | 17 | 5 | 2 |
| 33005−00 | Nut−Hex. Flange | 51 | 48 | 2 |
| 33023−00 | Nut−Lock | 51 | 32 | 1 |
| 33024−00 | Nut−Lock | 78 | 8 | 5 |
| 33093−00 | Washer | 51 | 31 | 1 |
| 33103−020 | Screw−HHF | 51 | 26 | 1 |
| 33103−020 | Screw−HHF | 4 | 56 | 2 |
| 33103−025 | Screw−HHF | 3 | 35 | 1 |
| 33104−016 | Screw−HHF | 74 | 27 | 4 |
| 33104−016 | Screw−HHF | 51 | 43 | 2 |
| 33104−020 | Screw−HHF | 16 | 5 | 6 |
| 33104−020 | Screw−HHF | 34 | 35 | 2 |
| 33104−020 | Screw−HHF (Europe) | 32 | 51 | 3 |
| 33104−025 | Screw−HHF | 64 | 13 | 4 |
| 33104−030 | Screw−HHF | 78 | 5 | 5 |
| 33105−025 | Screw−HHF | 17 | 13 | 3 |
| 33105−025 | Screw−HHF | 16 | 28 | 3 |
| 33105−030 | Screw−HHF | 17 | 2 | 2 |
| 33105−030 | Screw−HHF | 34 | 8 | 6 |
| 33105−030 | Screw−HHF | 51 | 14 | 2 |
| 33105−070 | Screw−HHF | 34 | 7 | 3 |
| 33106−030 | Screw−HHF | 25 | 21 | 12 |
| 33106−035 | Screw−HHF | 78 | 1 | 3 |
| 33106−035 | Screw−HHF | 1 | 6 | 8 |
| 33106−090 | Screw−HHF | 25 | 36 | 8 |
| 33108−025 | Screw−HHF | 32 | 1 | 2 |
| 33108−035 | Screw | 1 | 25 | 6 |
| 33114−010 | Screw−HH | 67 | 67 | 4 |
| 33116−120 | Screw−HH | 26 | 37 | 4 |
| 340−2 | Adapter | 3 | 11 | 4 |
| 340−2 | Adapter | 16 | 37 | 1 |
| 340−2 | Adapter | 53 | 37 | 1 |
| 340−2 | Adapter−Hydraulic | 74 | 23 | 1 |
| 340−4 | Fitting−Hydraulic | 74 | 17 | 4 |
| 340−4 | Fitting−Hydraulic | 64 | 29 | 1 |
| 340−5 | Fitting−Hydraulic | 26 | 40 | 2 |
| 340−9 | Fitting−Hydraulic | 16 | 11 | 1 |
| 340−9 | Fitting−Hydraulic | 53 | 18 | 1 |
| 340−15 | Fitting−Hydraulic 90˚ | 19 | 30 | 1 |
| 340−17 | Fitting−Hydraulic 90˚ | 19 | 28 | 1 |
| 340−18 | Fitting−Hydraulic 90˚ | 25 | 34 | 1 |
| 340−65 | O−Ring | 26 | *53 | 6 |
| 340−65 | O−Ring | 19 | 32 | 2 |
| 340−68 | Fitting−Hydraulic, Tee | 76 | 23 | 1 |
| 340−68 | Fitting−Tee, Bulkhead | 3 | 45 | 1 |
| 340−70 | Nut−Bulkhead | 64 | 11 | 7 |
| 340−70 | Nut−Bulkhead | 76 | 13 | 2 |
| 340−70 | Nut−Lock | 53 | 26 | 3 |
| 340−70 | Nut−Lock, Bulkhead | 3 | 46 | 4 |
| 340−70 | Nut−Lock, Bulkhead | 62 | 57 | 2 |
| 340−74 | Nut−Bulkhead | 32 | 31 | 2 |
| 340−77 | Fitting−Hydraulic 90˚ | 19 | 6 | 1 |
| 340−92 | Fitting−Hydraulic | 74 | 4 | 4 |
| 340−92 | Fitting−Hydraulic | 76 | 25 | 5 |
| 340−92 | Fitting−Hydraulic | 67 | 44 | 1 |
| 340−92 | Fitting−Straight | 71 | 16 | 2 |
| 340−97 | Fitting−Hydraulic 90˚ | 61 | 43 | 2 |
| 340−97 | Fitting−Hydraulic 90˚ | 61 | 43 | 2 |
| 340−97 | Fitting−Hydraulic 90˚ | 54 | 52 | 2 |
| 340−98 | Fitting−Hydraulic 90˚ | 76 | 5 | 10 |
| 340−98 | Fitting−Hydraulic 90˚ | 64 | 28 | 1 |
| 340−98 | Fitting−Hydraulic 90˚ | 26 | 46 | 1 |
| 340−103 | Fitting−Hydraulic | 71 | 20 | 1 |
| 340−105 | Fitting−Hydraulic 90˚ | 19 | 9 | 2 |
| 340−117 | Cap−Fitting | 3 | 48 | 1 |
| 340−126 | Nut−Bulkhead | 53 | 8 | 3 |
| 340−127 | Nut−Bulkhead | 25 | 6 | 1 |
| 340−127 | Nut−Bulkhead | 76 | 10 | 5 |
| 340−127 | Nut−Bulkhead | 64 | 19 | 4 |
| 340−128 | Nut−Bulkhead | 25 | 13 | 2 |
| 340−128 | Nut−Bulkhead | 25 | 13 | 3 |
| 340−129 | Fitting−Hydraulic 90˚ | 19 | 30 | 1 |
| 340−129 | Fitting−Hydraulic 90˚ | 19 | 31 | 1 |
| 340−132 | Fitting−Hydraulic | 71 | 18 | 1 |
| 340−132 | Fitting−Hydraulic | 67 | 30 | 5 |
| 340−132 | Fitting−Hydraulic 90˚ | 74 | 11 | 1 |
| 340−132 | Fitting−Hydraulic 90˚ | 64 | 25 | 2 |
| 340−139 | Fitting−Elbow 90˚ | 16 | 14 | 1 |
| 340−139 | Fitting−Hydraulic 90˚ | 74 | 21 | 1 |
| 340−142 | Fitting−Hydraulic 90˚ | 53 | 21 | 1 |
| 340−142 | Fitting−Hydraulic 90˚ | 25 | 23 | 4 |
| 340−142 | Fitting−Hydraulic 90˚ | 16 | 19 | 1 |
| 340−148 | Fitting−Tee | 64 | 32 | 1 |
| 340−154 | Fitting−Hydraulic 90˚ | 64 | 4 | 2 |
| 340−157 | Fitting−Tee | 16 | 32 | 1 |
| 340−161 | Fitting−Adapter | 64 | 3 | 1 |
| 351−78 | Edging | 7 | 23 | 1 |
| 353−508 | Plug | 53 | 39 | 1 |
| 353−989 | Plug | 66 | 11 | 5 |
| 353−989 | Plug | 75 | 14 | 5 |
| 353−990 | Plug | 66 | 4 | 4 |
| 353−990 | Plug | 75 | 5 | 10 |
| 353−991 | Plug | 66 | 6 | 4 |
| 353−991 | Plug | 75 | 12 | 10 |
| 354−77 | Fitting−Quick Connect | 19 | 2 | 4 |
| 354−77 | Fitting−Quick Connect | 74 | 14 | 1 |
| 354−77 | Fitting−Quick Connect | 64 | 23 | 1 |
| 354−79 | Cap−Dust | 19 | 1 | 4 |
| 354−79 | Cap−Fitting | 74 | 15 | 1 |
| 354−79 | Cap−Fitting | 64 | 24 | 1 |

*Not Illustrated

## PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

## IDENTIFICATION AND ORDERING

**MODEL AND SERIAL NUMBERS**

The Reelmaster 6500D has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame under the operator's platform. In any correspondence concerning the Reelmaster 6500D, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:
1. Model and serial number of the Reelmaster 6500D.
2. Part number, description, and the quantity of part(s) desired.

**NOTE**: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

# TABLE OF CONTENTS


| Description | Page |
|---|---|
| Frame & Body Assembly | 1−2 |
| Steering Tower Assembly | 3−4 |
| Steering Control Valve Asm. 94−9950 | 5 |
| Traction & Brake Pedal Assembly | 6 |
| Seat Frame & Throttle Assembly | 7−8 |
| Seat Suspension Assembly | 9 |
| Diagnostic − ACE Display Assembly | 10 |
| Electrical Schematic | 11 |
| Control Console Assembly | 12−13 |
| Hydraulic Schematic Model 03803 | 14 |
| Hydraulic Schematic Model 03804 | 15 |
| Hydraulic Filter & Reservoir Assembly | 16 |
| Fuel Tank & Filter Assembly | 17 |
| Fuel Filter Assembly | 18 |
| Pump Installation Assembly | 19 |
| Gear Pump Assembly No. 93−2175 | 20−21 |
| Servo Controlled Piston Pump Asm. No. 98−3730 | 22−23 |
| Manual Servo Control No. 94−3019 | 24 |
| Front Hydraulic Drive & Brake Assembly | 25−26 |
| Planetary Drive Assembly No. 92−7415 | 27 |
| Brake Asm. No. 92−7414 RH & 92−7417 LH | 28 |
| Hydraulic Motor Assembly No. 92−7385 | 29 |
| Hydraulic Motor Asm. No. 93−7476 W/Sensor | 30 |
| 4−WD Hydraulic Motor Asm. No. 92−7386 | 31 |
| Radiator & Shroud Assembly | 32−33 |
| Engine Installation Assembly | 34 |
| Crankcase Assembly | 35 |
| Crankshaft Assembly | 36 |
| Cylinder Head Assembly | 37−39 |
| Camshaft & Fan Support Assembly | 40 |
| Timing Cover | 41 |
| Intake & Exhaust Manifold Assembly | 42 |
| Oil Pump Assembly | 43 |
| Collector Assembly | 44 |
| Water Pump Assembly | 44 |
| Fuel Injection Pump Assembly | 46 |
| Fuel Injector Assembly | 47 |
| Alternator Assembly | 48 |
| Starter Assembly | 49 |
| Glow Plug & Glow Relay | 50 |
| Engine Components Assembly | 51 |
| Air Cleaner Assembly No. 93−7485 | 52 |
| 4−WD Axle Assembly (Model No. 03804) | 53−54 |
| Sleeve Assembly (Model No. 03804) | 55 |
| Axle Housing Assembly (Model No. 03804) | 56 |
| Differential & Shaft Assembly (Model No. 03804) | 57 |
| Steering Gear Case Asm. (Model No. 03804) | 58 |
| Steering Arm Linkage (Model No. 03804) | 59 |
| Hydraulic Cylinder No. 94−8141 | 60 |
| 2−WD Rear Axle Assembly (Model No.03803) | 61−62 |
| Hydraulic Cylinder No. 94−8142 | 63 |
| Rear Hydraulic Control Block & Tubes | 64−65 |
| Manifold Assembly No. 92−7419 | 66 |
| Front Lift Arms Assembly | 67 |
| Hydraulic Cylinder No. 98−8811 | 68 |
| Hydraulic Cylinder No. 98−8069 | 69 |
| Hydraulic Cylinder No. 93−2650 | 70 |
| Rear Lift Arm Assembly | 71 |
| Hydraulic Cylinder No. 98−8813 | 72 |
| Hydraulic Cylinder No. 98−8812 | 73 |
| Front Hydraulic Control Block & Hoses | 74 |
| Control Block Assembly No. 92−7418 | 75 |
| Reel Motor & Hoses | 76 |
| Reel Motor Assembly No. 92−7387 | 77 |
| Roll Over Protection System (ROPS) | 7 |
| Guage Bar & Backlapping Brush Assemblies | 79 |
| Numerical Parts Index | 80−92 |

# MAINTENANCE RECORD

| Date | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |

# MAINTENANCE RECORD

| Date | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |

# MAINTENANCE RECORD

| Date | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |