FORM NO. 3321–201

TORO®

Z–Master OFZ

48” Rear Discharge Recycler Deck

Model No. 78477 – 890245 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page
Carrier Frame	1
Gear Box And Covers	2
Deck Asm And Blades	3
Gear Box	4

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
. .			

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HFW	hex flange washer
HH	hex head
HHF	hex head flange
HHST	hex head self tapping
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
INC	incorporated
LH	left hand
PH	pan head
PPH	Phillips pan head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
STD	standard
TAP	self tapping
TH	truss head
TTH	Torx truss head
WH	wing head

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form *X:Y. X* is the reference number of the service assembly and *Y* is a sequential number unique to each part within the service assembly.

© The TORO Company — 1998
All Rights Reserved


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form *X (Y). X* is the reference number. *Y* in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

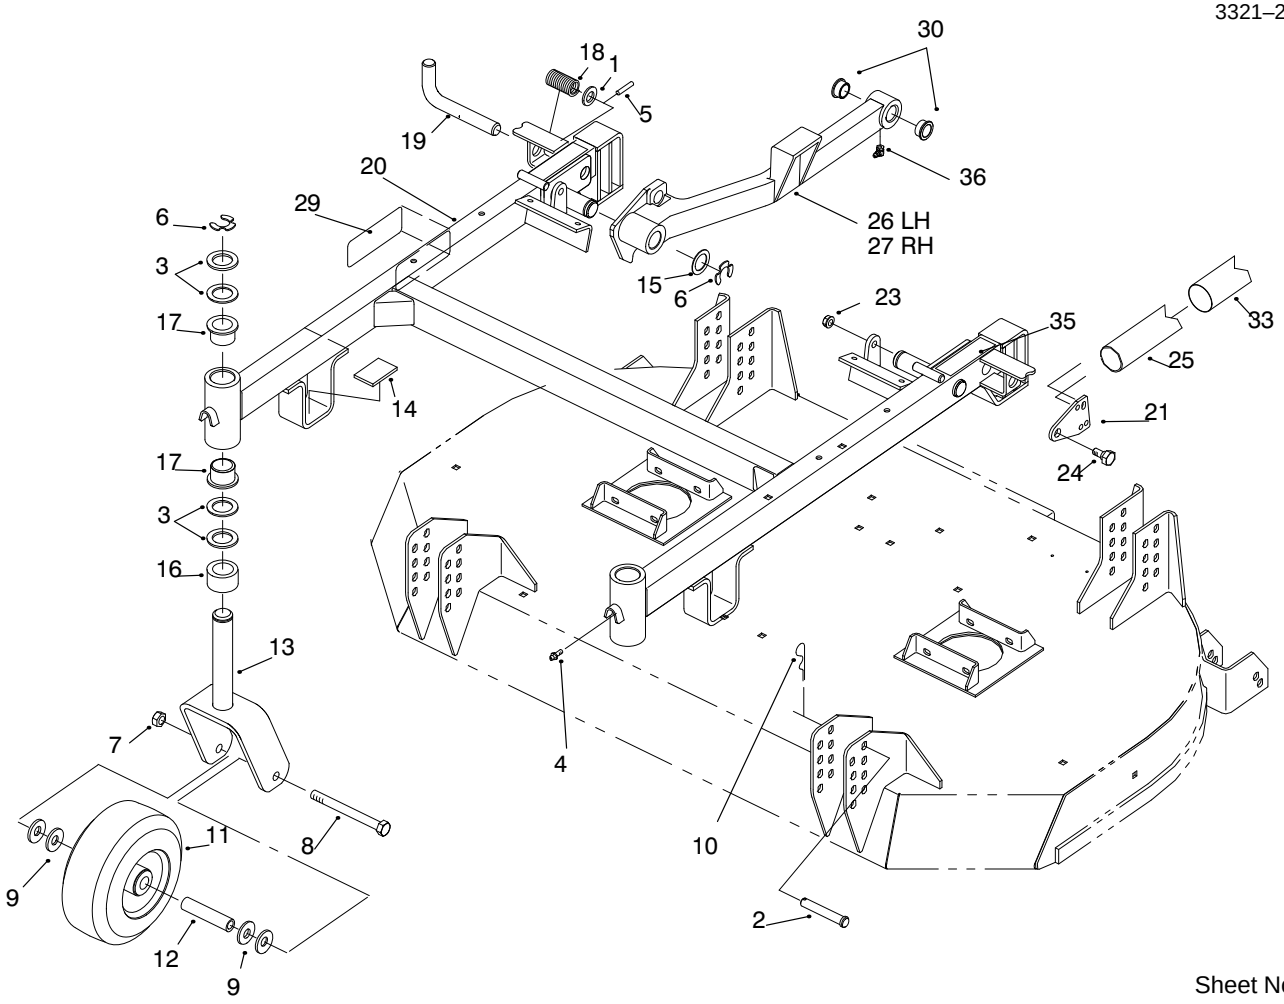


Sheet No.: 2

Carrier Frame

Ref. No.	Part No.	Qty.	Description
1	9202254	2	Washer–Flat
2	283–55	4	Pin–Clevis
3	3–6781	8	Washer–Thrust
4	302–5	2	Fitting–Grease
5	32121–79	2	Roll Pin
6	32151–91	4	Ring–Retaining
7	32153–5	2	Nut–Lock
8	325–19	2	Screw–HH
9	3256–6	8	Washer–Flat
10	3290–355	4	Pin–Hair
11	98–2859	2	Wheel & Tire ASM
12	68–8980	2	Bushing–Spanner
13	98–2857	2	Castor Fork ASM
14	95–4303	2	Cushion–Rubber
15	9202514	2	Washer–Flat
16	93–1167	2	Spacer–Castor
17	94–1291	4	Bushing–Special
18	98–1339	2	Spring–Compression
19	98–1337	2	Pin–Pivot
20	95–4304	1	Frame–Carrier
21	94–4750	4	Plate–End
23	3296–39	8	Nut–Lock
24	46–3380	4	Bolt–Shoulder
25	94–4664	2	Spring–Extension
26	98–0817	1	Push Arm ASM LH
27	98–0818	1	Push Arm ASM RH

Ref. No.	Part No.	Qty.	Description
29	98–0816	1	Decal–H.o.c.
30	27–9080	4	Bushing
33	94–9550	2	Cover–Spring
35	55–4300	2	Decal–Warning
36	302–60	2	Fitting–Lube 90°

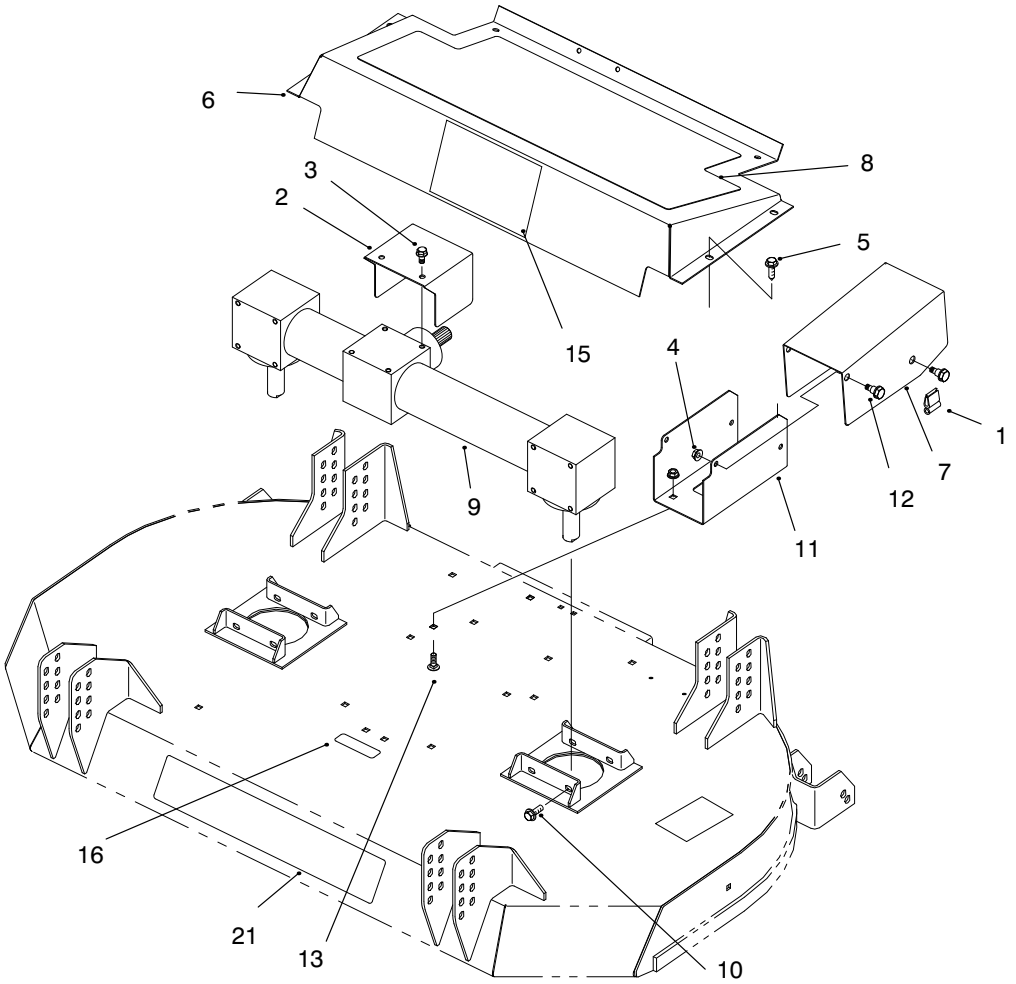


Sheet No.: 3

Gear Box And Covers

Ref. No.	Part No.	Qty.	Description
1	98–0815	2	Strip–Seal
2	98–7314	2	Cover–Gearbox
3	3234–28	2	Screw–HFH
4	32128–13	5	Nut–Lock Flange
5	32144–14	6	Screw–HWH
6	95–4322	1	Footrest
7	98–7305	1	Cover–Driveshaft
8	95–4342	1	Footrest–Abrasive
9	93–4448	1	Gearbox ASM
10	3234–5	8	Screw–HHF
11	98–7306	1	Support–Cover
12	92–6986	3	Bolt–Shoulder
13	3230–23	2	Bolt–CARR
14	98–4385	1	Decal–Danger
15	62–5550	1	Decal–Toro
16	70–2560	1	Decal–Lube
21	94–6407	1	Decal–Guardian 48”

Ref. No.	Part No.	Qty.	Description

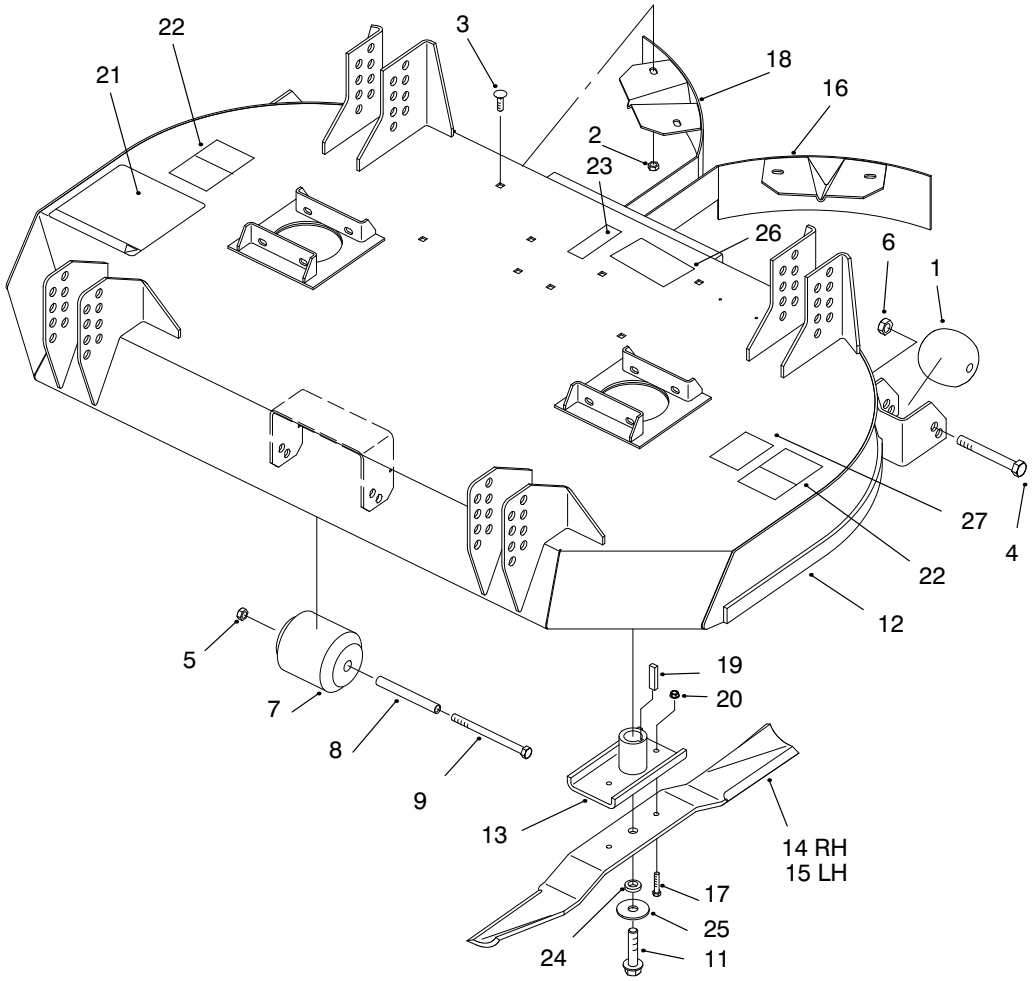


Sheet No.: 4

Deck Asm And Blades

Ref. No.	Part No.	Qty.	Description
1	29–4820	2	Roller
2	32128–13	6	Nut–Lock Flange
3	3230–23	6	Bolt–CARR
4	325–17	2	Screw–HH
5	3296–39	1	Nut–Lock
6	3296–25	2	Nut–Hex
7	93–4803	1	Roller–Deck
8	93–4685	1	Spacer
9	323–39	1	Screw–HH
11	92–5816	2	Screw – Blade
12	95–4308	1	48” Deck ASM
13	98–0810	2	Blade Retainer ASM
14	98–3028	1	Blade–25” LH
15	98–3029	1	Blade–25” RH
16	98–3017	1	Kicker–LH
17	321–5	4	Screw–HH
18	98–3018	1	Kicker–RH
19	67–7490	2	Key
20	3296–16	4	Nut–Lock
21	98–1304	1	Decal–Danger
22	54–9220	2	Decal–Danger
23	98–7324	1	Decal–Danger
24	98–3030	2	Spacer
25	86–1990	2	Washer
26	93–7010	1	Decal–Danger
27	68–8340	1	Decal–Torque

Ref. No.	Part No.	Qty.	Description

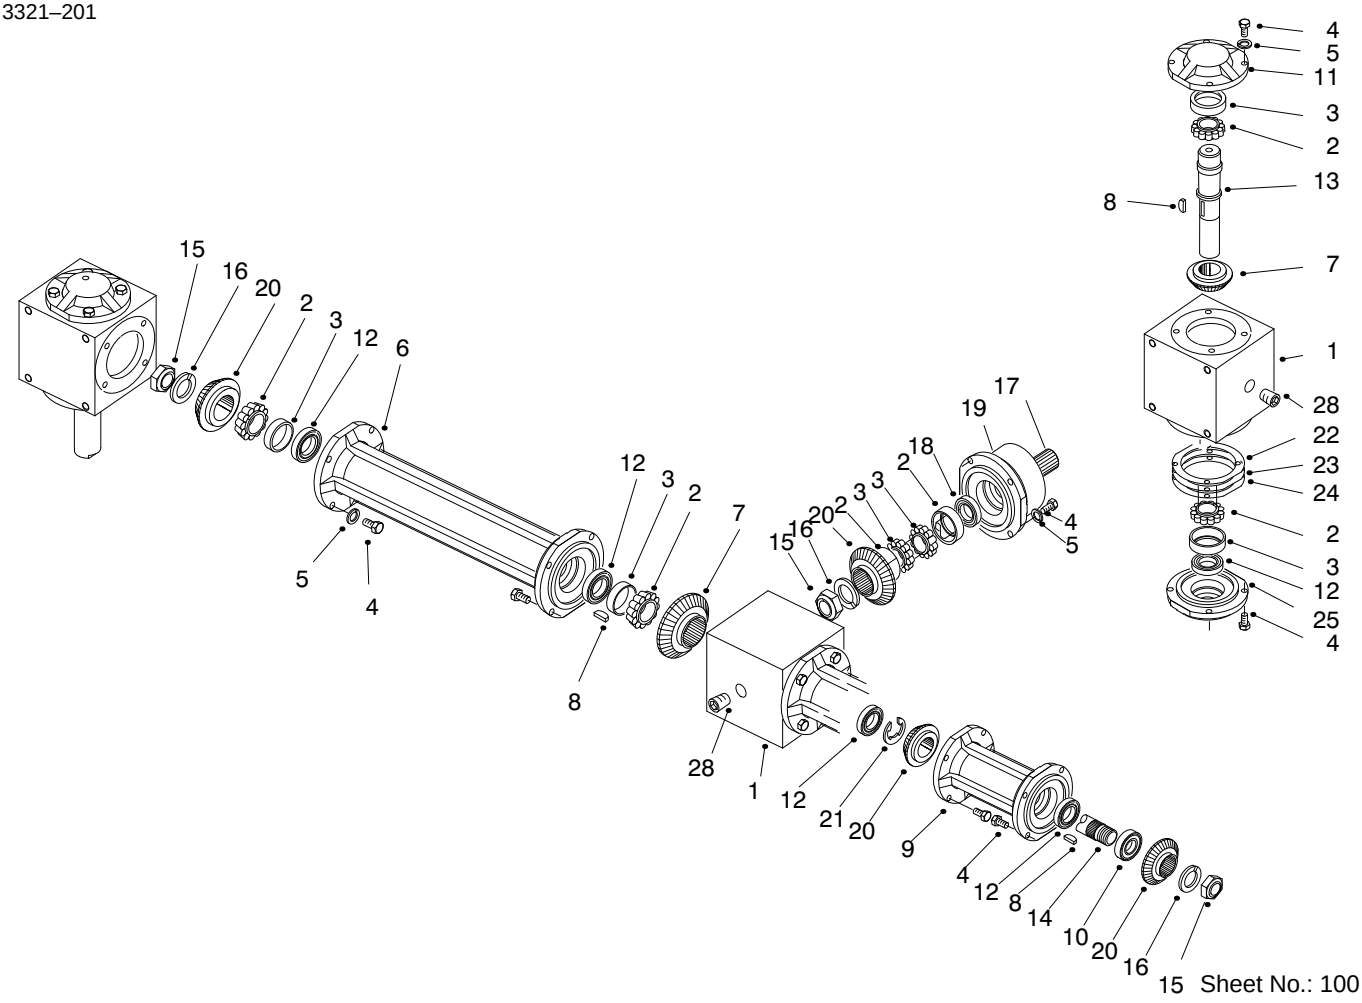

Sheet No.: 100

Gear Box

Ref. No.	Part No.	Qty.	Description
1	98–3321	3	Housing
2	98–1343	8	Bearing–Cone
3	62–3340	8	Bearing Cup
4	98–3324	54	Screw–HH
5	98–3325	54	Washer–Lock
6	98–3326	1	Connector–Hub
7	98–3327	3	Gear–RH
8	98–3328	3	Key
9	98–3329	1	Connector–Hub
10	98–3330	1	Bearing–Ball
11	98–3331	2	Cap–Blank
12	62–3400	6	Seal
13	98–3333	2	Shaft–Thru
14	98–3334	1	Shaft–Thru
15	98–3335	3	Nut–Lock
16	98–3336	3	Washer–Lock
17	98–3337	1	Hub–Shaft
18	98–3338	1	Seal
19	98–3339	1	Hub
20	98–3340	3	Pinion–LH
21	98–3341	1	Ring–Retaining
22	98–3342	1	Gasket–.015
23	98–3343	1	Gasket–.005
24	98–3344	1	Gasket–.003
25	98–3345	2	Cap–Thru
26	98–3346	1	I.d. Tag

Ref. No.	Part No.	Qty.	Description
27	98–3347	1	I.d. Tag Cover
28	62–3490	9	Pipe Plug (Solid)