Form No. 3375-566 Rev C

TORO®

Count on it.

Parts Catalog

Z Master® Commercial 2000 Series Riding Mower

with 48in TURBO FORCE® Side Discharge Mower

Model No. 74141TE—Serial No. 313000001 and Up

Register at www.Toro.com.
Original Instructions (EN)

CE

3375-566 C

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Frame and Caster Wheel Assembly 4
Roll-Over Protection System Assembly No. 116-0232 6
Caster Fork and Wheel Assembly 7
Z Stand and Weight Assembly 8
Z Stand Assembly No. 121-4811 9
Hydro Drive System Assembly 10
Hydro Idler Arm Assembly 11
RH Transaxle Assembly No. 120-7861 12
LH Transaxle Assembly No. 120-7860 14
Fuel Tank and Hose Assembly 16
Seat Mounting Assembly 17
Seat Assembly No. 120-7886 18
Motion Control Assembly 19
Parking Brake Assembly 20
Engine, Muffler and Control Panel Assembly 21
Deck Lift Assembly 23
Height-of-Cut Assembly No. 121-4779 24
Deck Assembly 25
Deck Decal Assembly No. 121-3241 27
Deflector Assembly No. 120-2451 28
Idler Assembly 29
Electrical Assembly 30
Attachments and Accessories 31

© 2017—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Frame and Caster Wheel Assembly

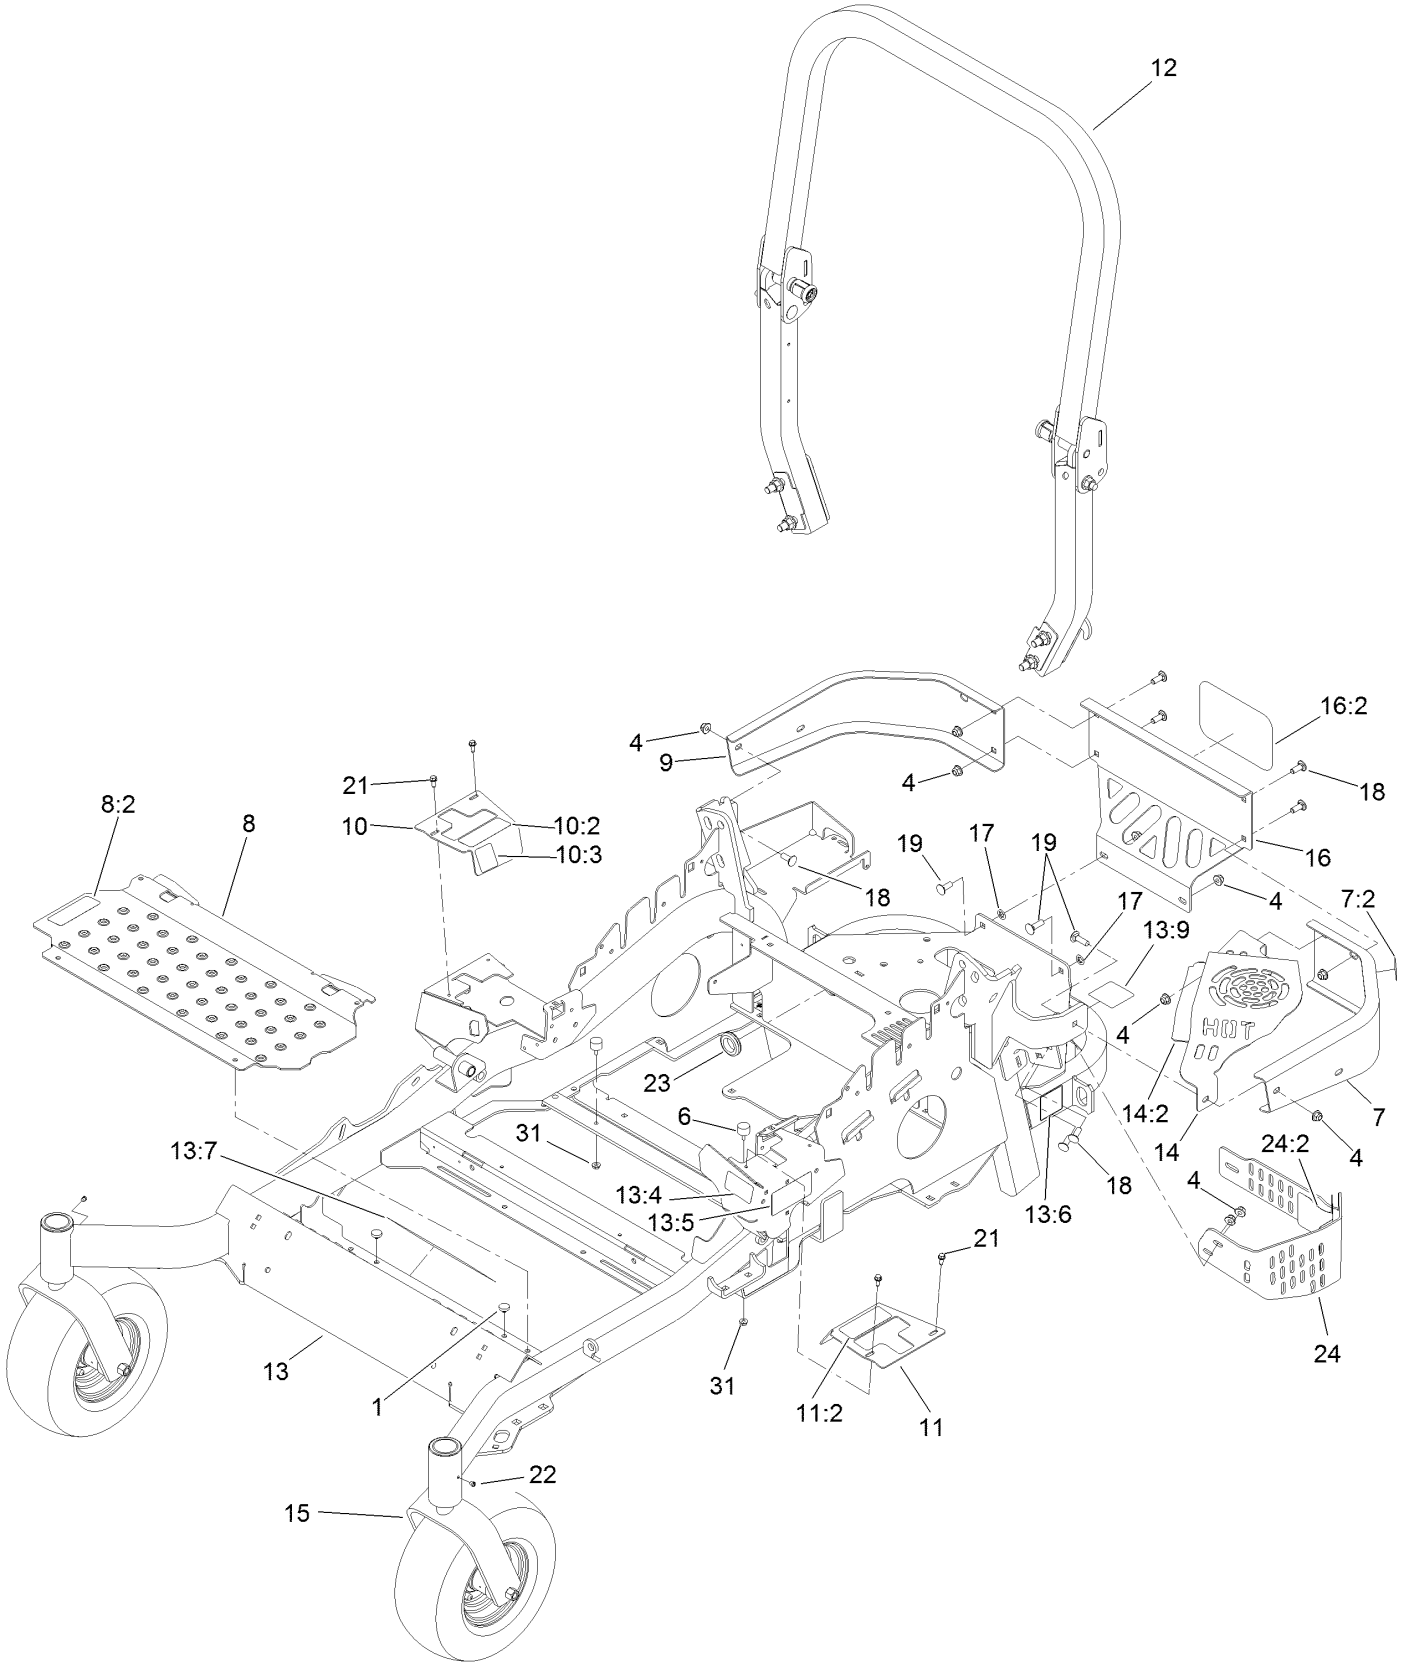

Frame and Caster Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	1-513658	2	Bumper
4	104-8301	10	Nut-HF, NI
6	116-6380	2	Bumper-Rubber (W/ Stud)
7	117-3829	1	LH Rear Bumper ASM
7:2	106-5517	1	Decal-Warning
8	117-0915	1	Floorpan ASM
8:2	112-9028	1	Decal-Missing, Cover
9	116-0508-03	1	Bumper-Rear, RH
10	121-4780	1	RH Motion Control Cover ASM
10:2	99-8936	1	Decal-Control, Motion
10:3	116-5988	1	Decal-Park Brake, CE
11	121-4789	1	Motion Control Cover ASM
11:2	99-8936	1	Decal-Control, Motion
12	116-0232	1	ROPS ASM
13	121-4775	1	Main Frame ASM
13:4	117-3864	1	Decal-Fuel Fill, CE
13:5	120-5891	2	Decal
13:6	106-2655	2	Decal-Hazard, Pinched Finger
13:7	117-3888	1	Decal-Danger Slope W/ROPS
13:9	117-1158	2	Decal-Bypass
14	121-4800	1	Muffler Guard ASM W/Foil
14:2	121-4792	1	Foil-Tape
15		2	Front Caster ASM ●
16	119-2691	1	Rear Guard ASM
16:2	67-7320	1	Decal
17	107-3154	2	Nut-Push
18	3231-22	7	Screw-CARR
19	3231-25	3	Bolt-CARR
21	32144-10	4	Screw-HWH
22	1-811010	2	Plug
23	120-3265	1	Grommet
24	121-4781	1	LH Lower Muffler Guard ASM
24:2	106-5517	1	Decal-Warning
31	104-7201	2	Nut-HF


● Not serviced separately

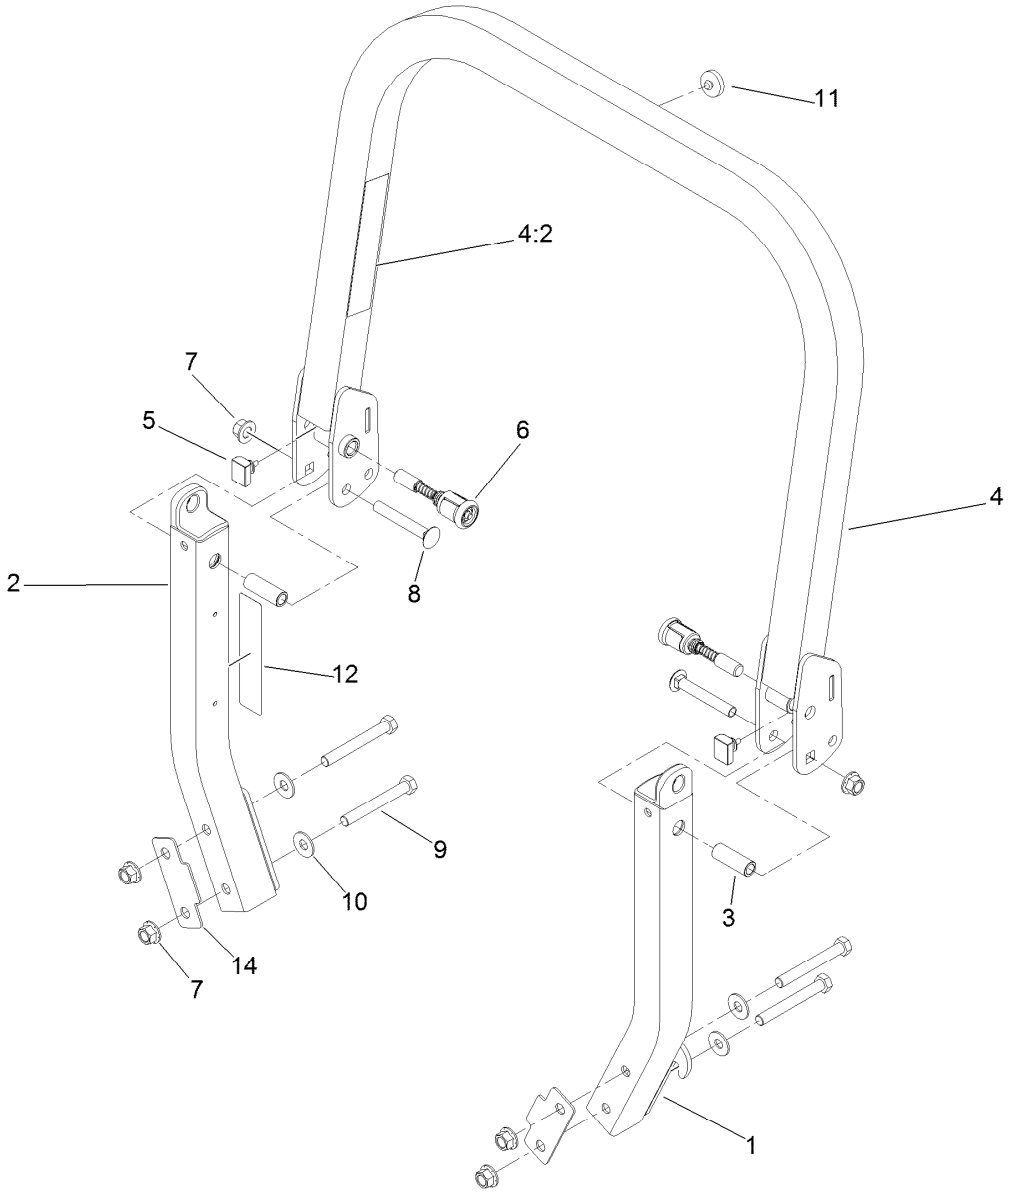

Roll-Over Protection System Assembly No. 116-0232

Ref.	*Part Number*	*Qty.*	*Description*
1		1	Leg-ROPS, LH ●
2		1	Leg-ROPS, RH ●
3	109-6653	2	Spacer
4		1	Upper ROPS ASM ●
4:2	107-3069	1	Decal-Warning
5	109-5337	2	Bumper-ROPS
6	116-0104	2	Pin-Spring
7	99-5107	6	Nut-Lock
8	3233-10	2	Screw-CARR
9	325-17	4	Screw-HH
10	109-9505	4	Washer-Spring
11	109-9233	1	Bumper-Push-In, Rubber
12	117-0346	1	Decal-Caution, Fuel Vent
14	116-0960	2	Spacer


● Not serviced separately

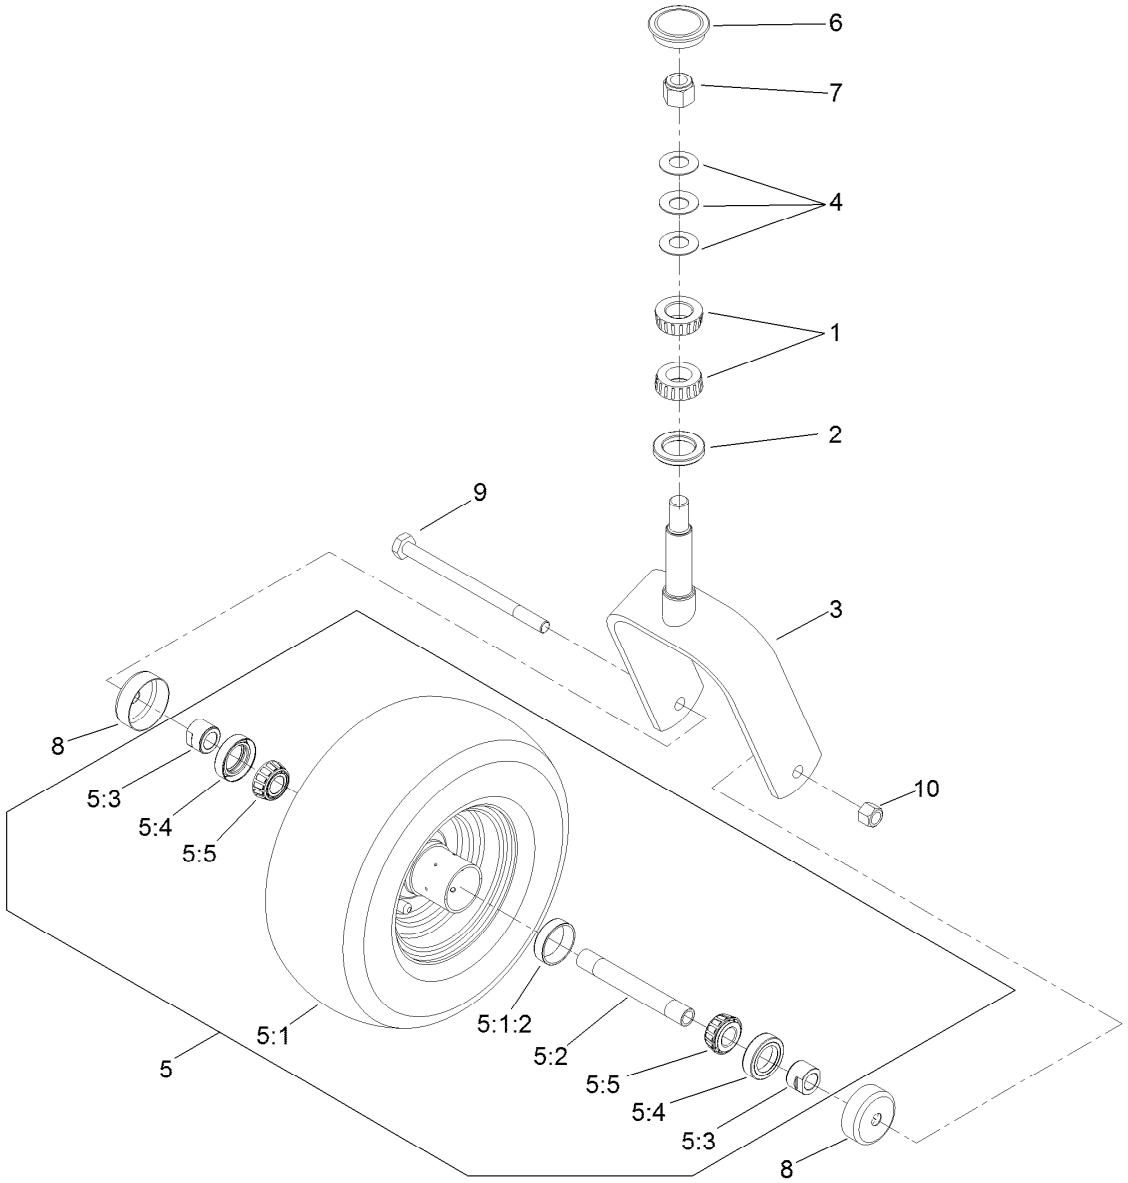

Caster Fork and Wheel Assembly


Ref.	Part Number	Qty.	Description
1	1-543509	2	Bearing-Roller, Tapered
2	116-5647	1	Seal-Grease
3	116-6701-01	1	Fork-Caster
4	1-633508	3	Washer-Bellville
5	103-5362	1	Wheel And Bearing ASM
5:1		1	Wheel And Tire ASM ●
5:1:2	1-633584	2	Bearing-Cup
5:2	103-3155	1	Axle-Caster
5:3	103-3051	2	Spacer-Nut
5:4	103-0063	2	Seal-Caster
5:5	1-633585	2	Bearing-Cone, Taper
6	103-4882	1	Cap-Grease
7	3296-51	1	Nut-Lock, NI
8	103-2768	2	Guard-Seal
9	325-36	1	Screw-HH
10	3296-23	1	Nut-Lock, NI

● Not serviced separately

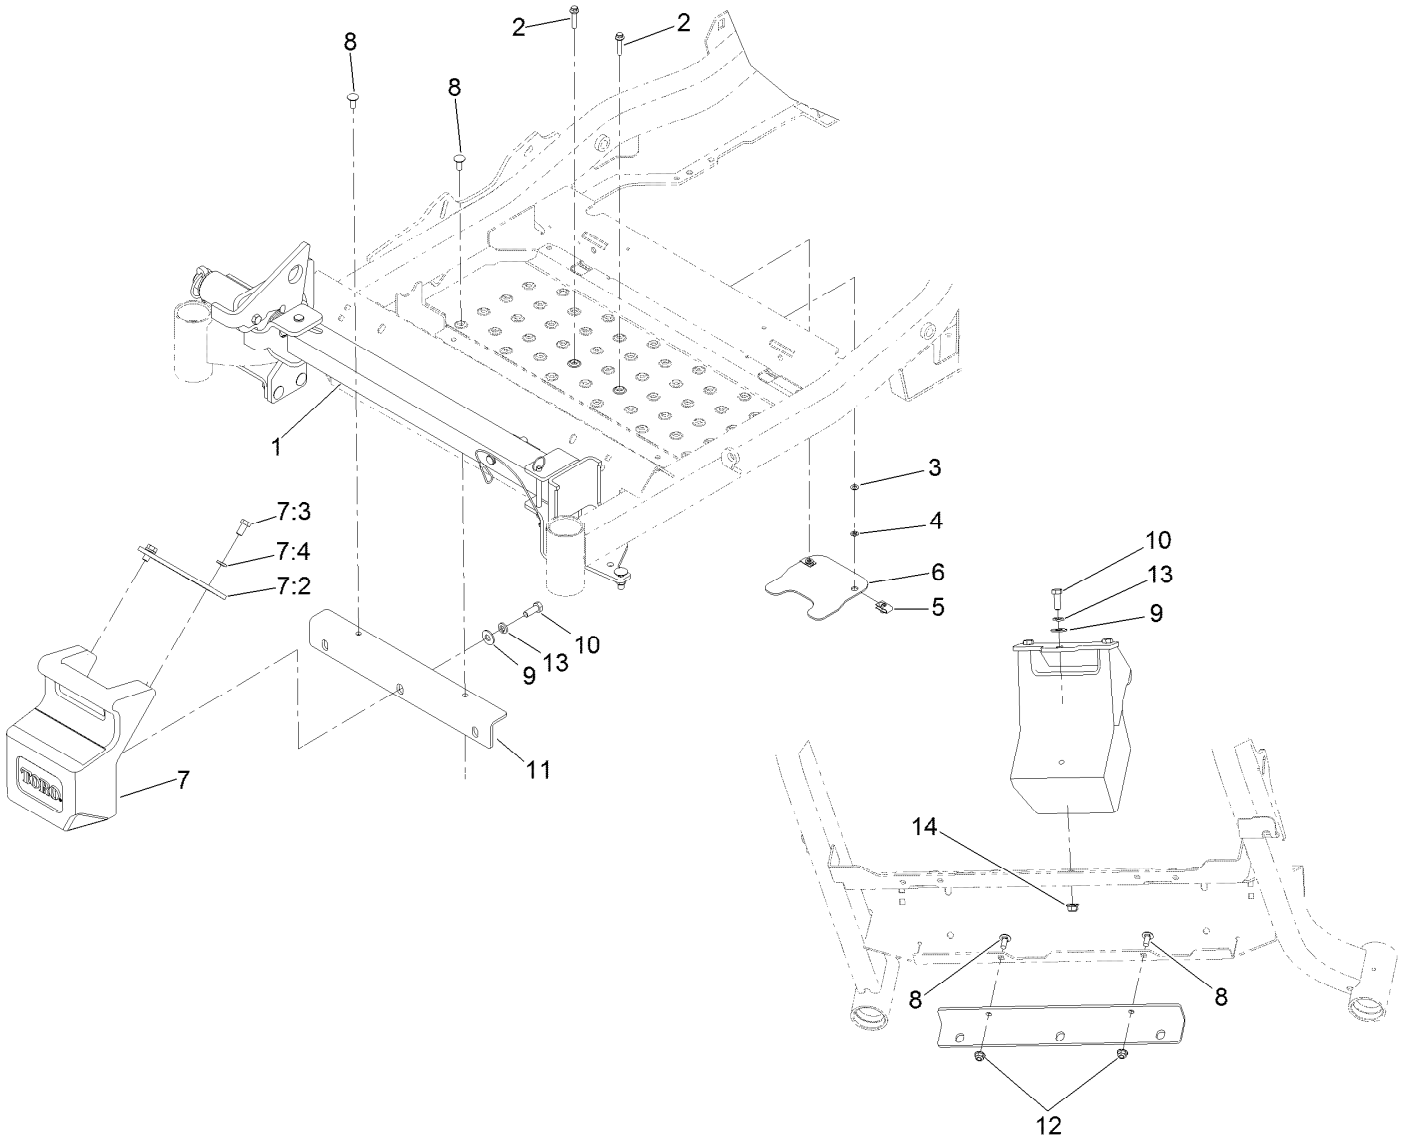

Z Stand and Weight Assembly


Ref.	Part Number	Qty.	Description
1	121-4811	1	Z Stand ASM
2	3234-21	2	Screw-HHF
3	3256-60	2	Washer-Flat
4	106-8737	2	Nut-Retainer
5	107069	2	Clip
6	119-0395-03	1	Adapter-Captive
7	120-7885	1	Weight ASM
7:2	115-3616-01	1	Tab-Support, Weight
7:3	323-4	2	Screw-HH
7:4	3253-5	2	Washer-Lock
8	3230-23	2	Screw-CARR
9	3256-4	2	Washer-Flat
10	323-6	2	Screw-HH
11	115-3615-01	1	Bracket-Mount, Weight
12	104-8300	2	Nut-HF, NI
13	3253-5	2	Washer-Lock
14	104-8301	1	Nut-HF, NI

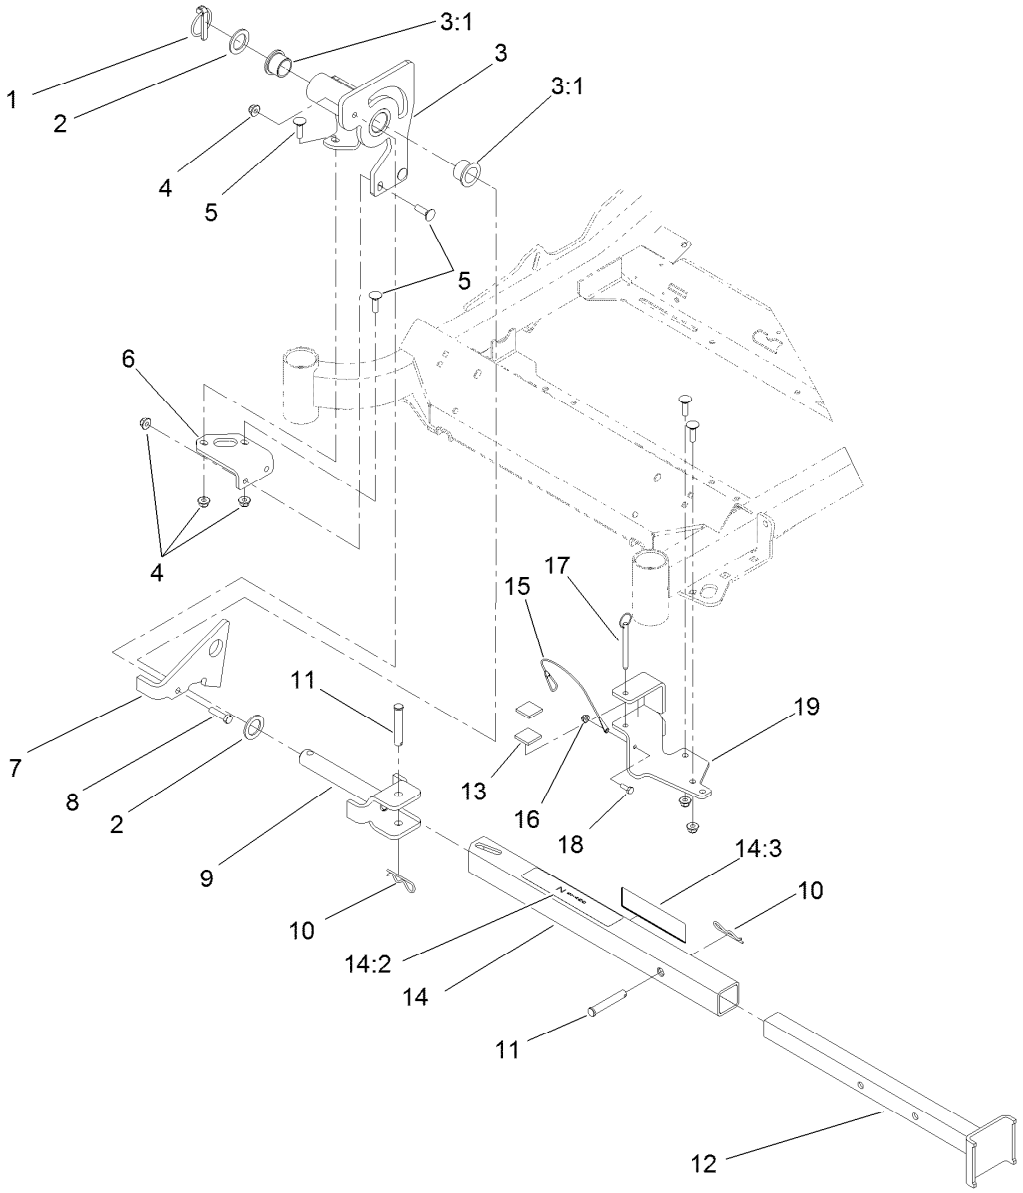

Z Stand Assembly No. 121-4811

Ref.	*Part Number*	*Qty.*	*Description*
1	283-71	1	Pin-Lynch
2	3-6781	2	Washer-Thrust
3	115-3635	1	Z Stand Pivot ASM
3:1	94-1291	2	Bushing
4	104-8301	8	Nut-HF, NI
5	3231-25	7	Bolt-CARR
6	115-3619-01	1	Bracket-Mount, Pivot
7	100-9686-01	1	Bracket-Latch
8	323-8	1	Screw-HH
9	100-9692-01	1	Pin-Pivot
10	3290-355	2	Pin-Hair

Ref.	*Part Number*	*Qty.*	*Description*
11	283-55	2	Pin-Clevis
12	115-3631-01	1	Tube-Inner
13	115-3613	2	Cushion-Rubber
14	115-3634	1	Outer Tube ASM
14:2	106-7464	1	Decal-Z Stand
14:3	107-3969	1	Decal-Warning
15	100-9385	1	Lanyard-Nylon
16	104-7201	1	Nut-HF
17	105-1647	1	Pin-Hitch, Cotterless
18	321-4	1	Screw-HH
19	115-3625-01	1	Cradle-Z Stand

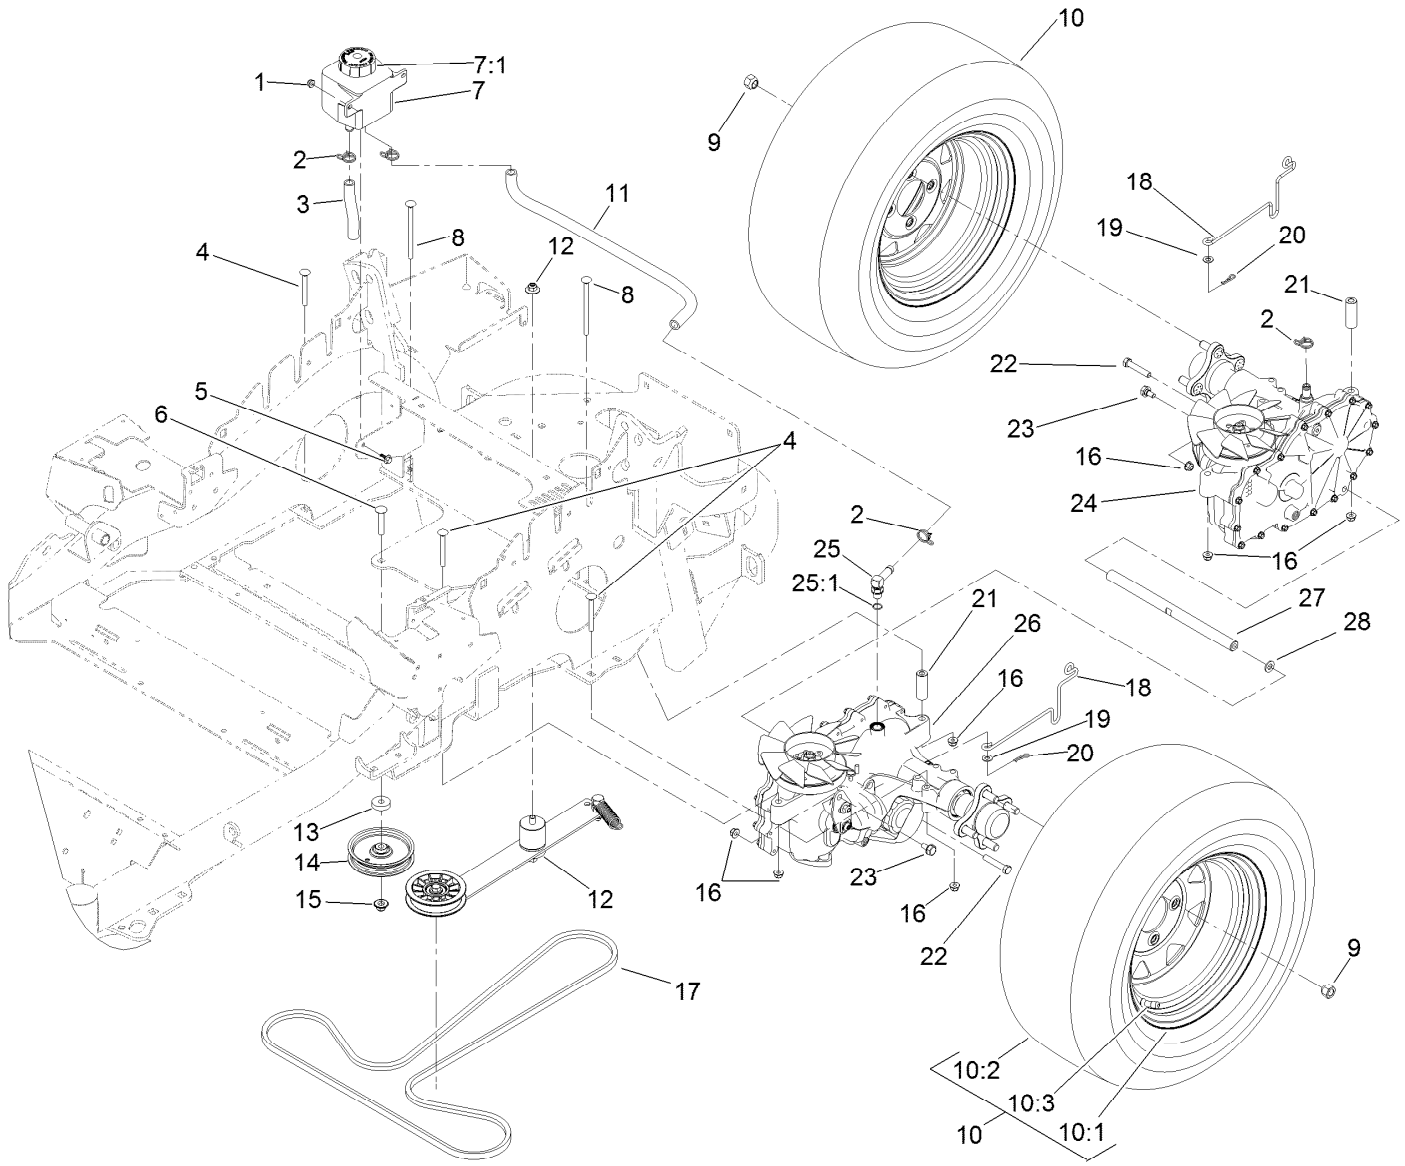


Hydro Drive System Assembly

Ref.	Part Number	Qty.	Description
1	104-7201	2	Nut-HF
2	117-1193	4	Clamp-Hose
3	119-2642	1	Hose-HYD
4	3230-9	6	Screw-CARR
5	99-6810	2	Screw-HHF
6	117-9971	1	Bolt-Carriage
7	109-2250	1	Vent-Tank, HYD
7:1	109-3320	1	Cap-Reservoir, HYD
8	3230-30	2	Screw-CARR
9	242-50	8	Nut-Lug
10	119-2692	2	Wheel And Tire ASM
10:1	120-3274	1	Wheel
10:2	120-3271	1	Tire
10:3	232-27	1	Stem-Valve
11	119-2689	1	Hose-HYD
12		1	Hydro Idler Arm ASM ●
13	105-7788	1	Spacer

Ref.	Part Number	Qty.	Description
14	93-1622	1	Pulley-Idler
15	109-6658	1	Nut-Flange, NI
16	104-8300	10	Nut-HF, NI
17	114860	1	Belt-V
18	115-4990	2	Rod-Bypass
19	3256-23	2	Washer-Plain
20	1-806003	2	Pin-Cotter
21	109-3652	2	Spacer-Hydro
22	94-7972	2	Screw-HH W/Loctite
23	37-8771	2	Bolt-Shoulder
24	120-7861	1	RH Transaxle ASM
25	109-6449	1	Fitting-Elbow, 90
25:1	237-42	1	O-Ring
26	120-7860	1	LH Transaxle ASM
27	117-8585	1	Shaft-Cross, Hydro
28	3256-24	1	Washer-Flat


● Not serviced separately

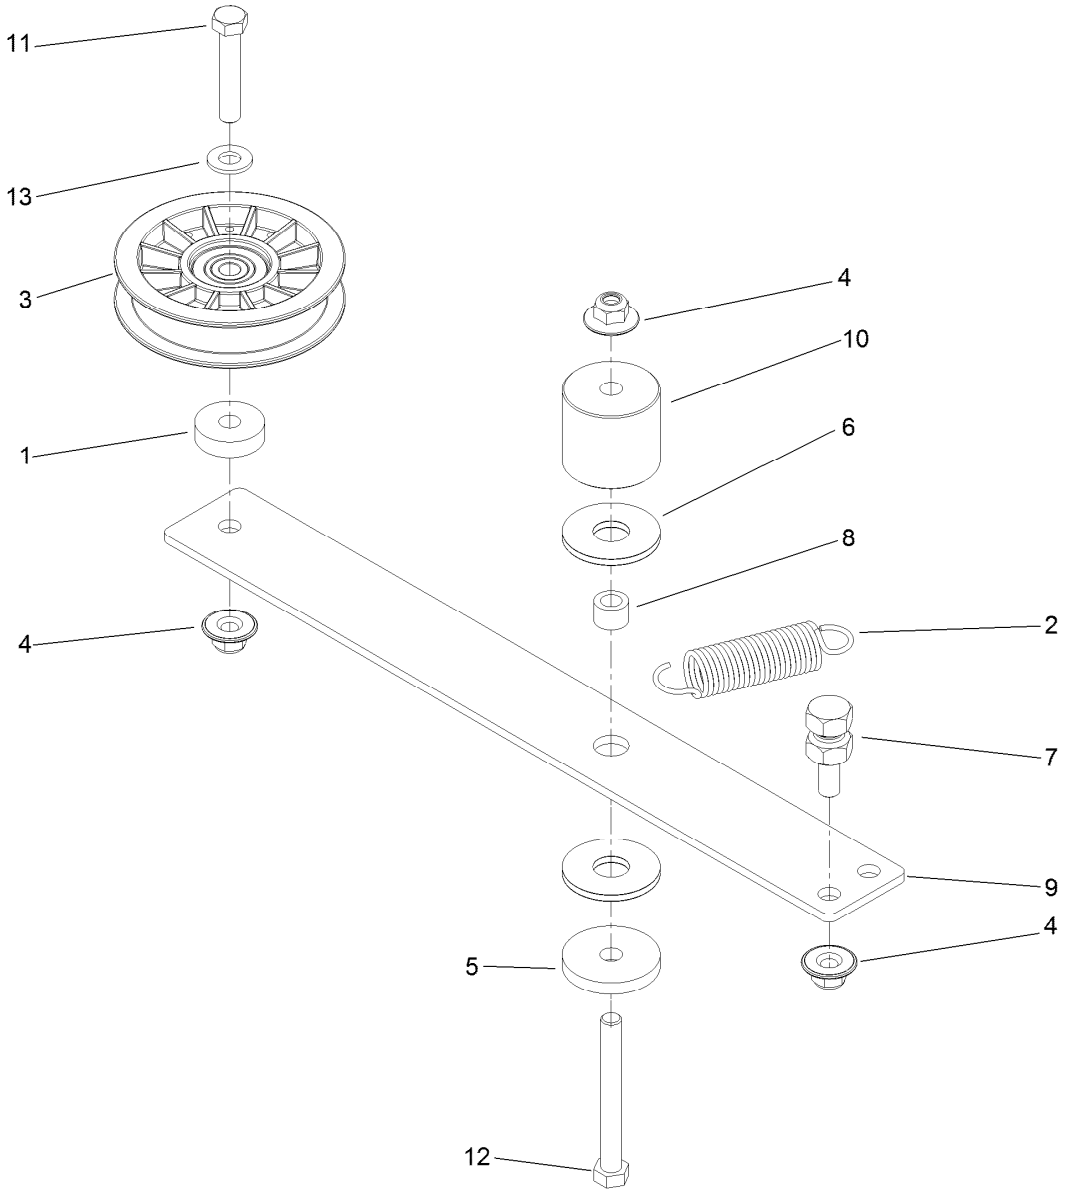

Hydro Idler Arm Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	105-7788	1	Spacer
2	108-4056	1	Spring-Extension
3	109-3397	1	Pulley-Idler, Flat
4	109-6658	3	Nut-Flange, NI
5	110-9981	1	Washer-Plain
6	114-0463	2	Washer-Friction, Composite
7	114-5866	1	Anchor-Spring, Short
8	115-4986	1	Spacer
9	119-9914	1	Arm-Idler, Hydro
10	119-2657	1	Spacer-Plain
11	323-10	1	Screw-HH
12	323-20	1	Screw-HH
13	3256-24	1	Washer-Flat

RH Transaxle Assembly No. 120-7861

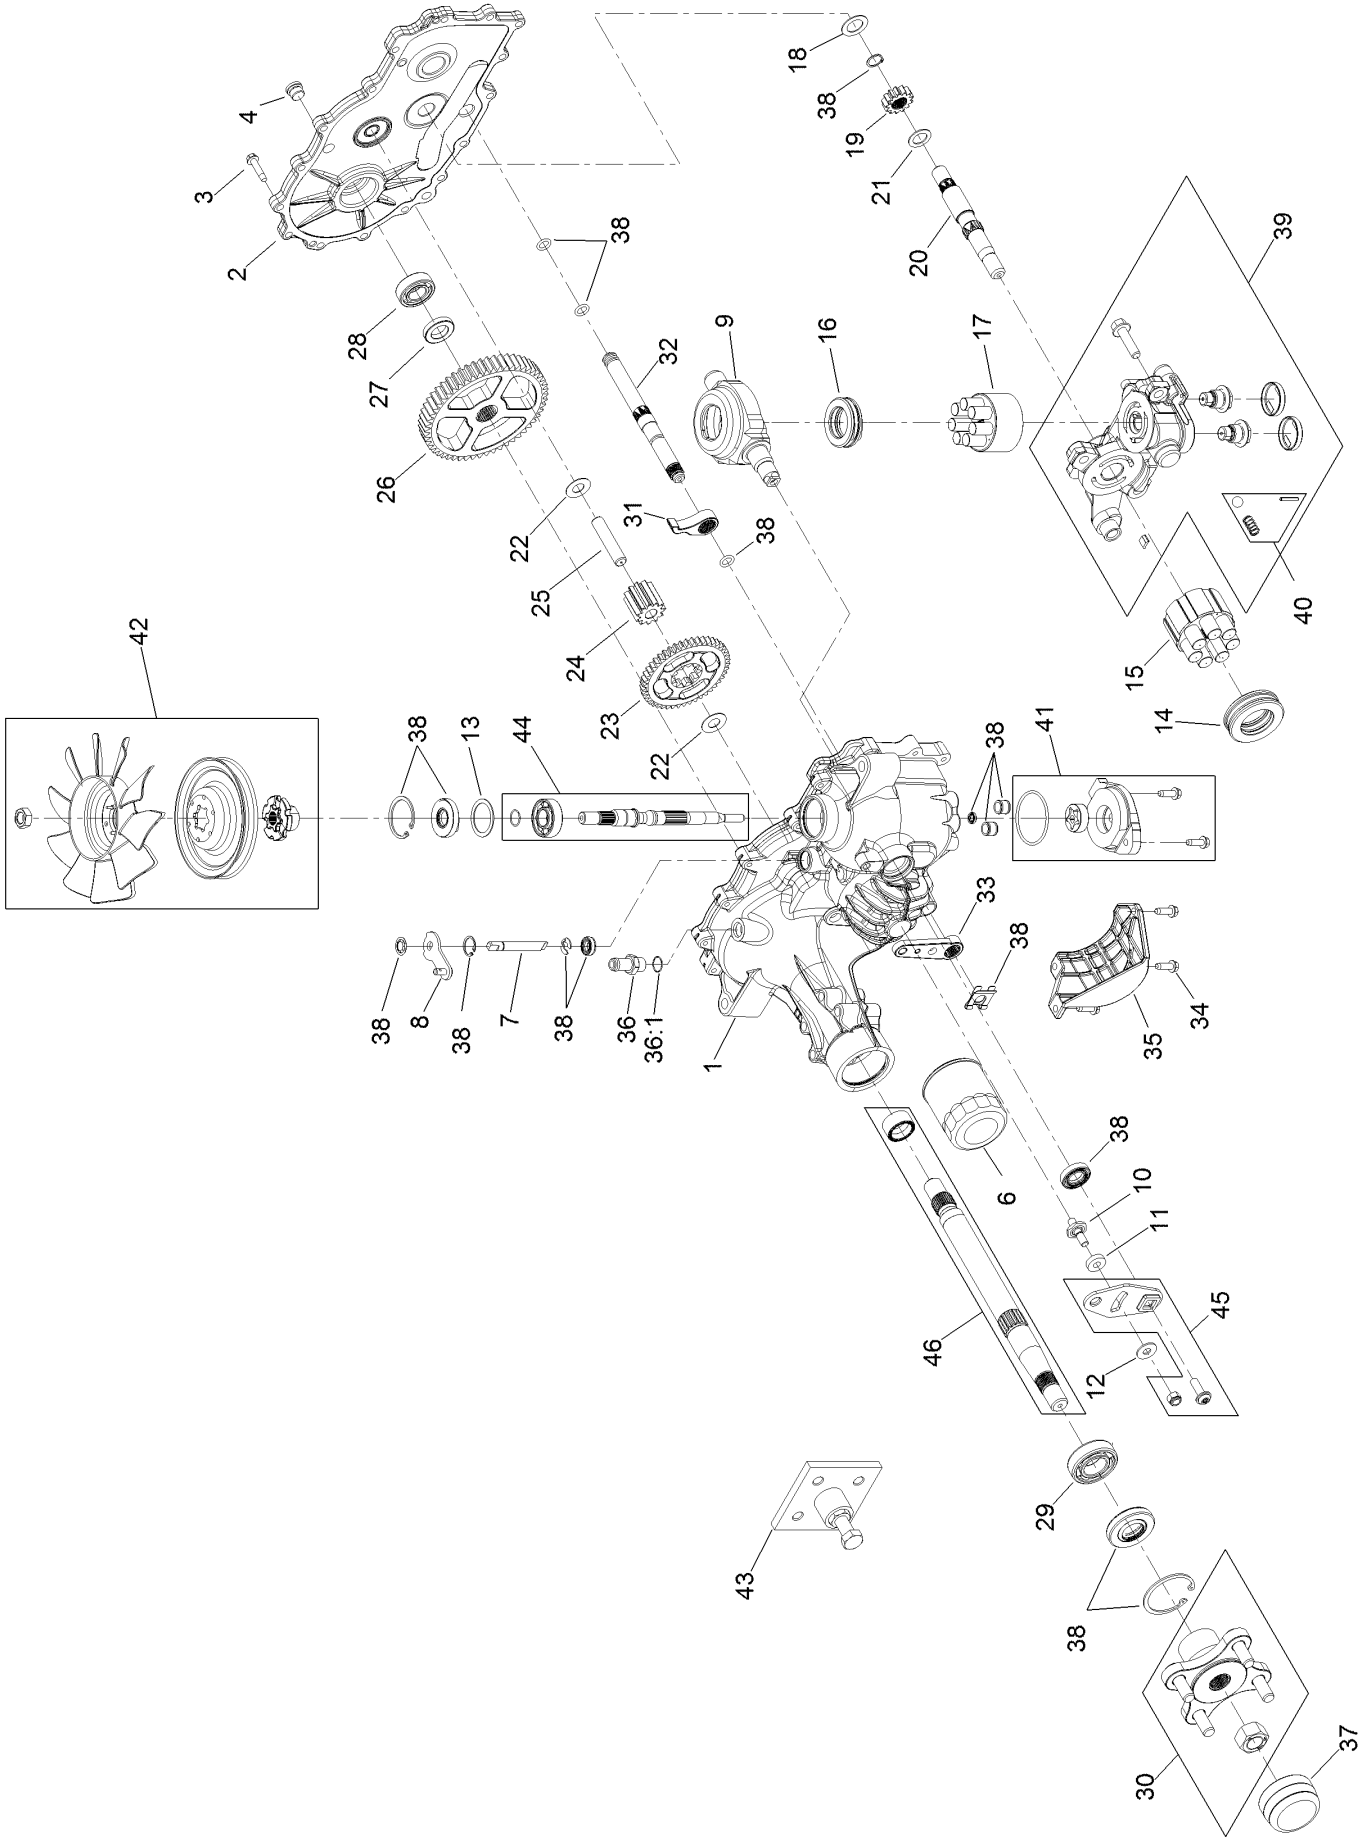


RH Transaxle Assembly No. 120-7861 (continued)

Ref.	Part Number	Qty.	Description
1	114-1676	1	Main Housing Kit
2	117-5358	1	RH Housing Side Kit
3	117-5359	16	Screw-HHF
4	104-2189	1	Plug-Thread, Straight
5	104-2147	1	Sealant ●
6	109-3321	1	Element-Oil Filter, HYD
7	114-1685	1	Rod-Bypass
8	107-2490	1	Arm-Bypass
9	104-5304	1	Swashplate-Trunnion
10	104-2116	1	Stud
11	112-9853	1	Puck-Friction
12	114-8491	1	Washer
13	104-5308	1	Spacer
14	109-2865	1	Bearing-Thrust
15	114-1689	1	Motor Cylinder Block Kit
16	94-6922	1	Bearing-Thrust
17	110-8561	1	Pump Block ASM
18	104-5339	1	Washer-Flat
19	120-7972	1	Gear-13T
20	114-1691	1	Shaft-Motor
21	104-5360	1	Washer
22	94-1933	2	Washer
23	120-7973	1	Gear-46T
24	120-7974	1	Gear-11T
25	104-5329	1	Pin-Jackshaft
26	114-1694	1	Gear-54T
27	120-7975	1	Spacer
28	114-1696	1	Bearing-Ball
29	120-7976	1	Bearing-Ball
30	109-5939	1	Hub Kit
31	114-1697	1	Pawl-Brake
32	120-7977	1	Brake Shaft Kit
33	125-0021	1	Handle-Brake
34	104-2120	3	Screw
35	120-7981	1	Guard-Filter, RH
36	109-3278	1	Adapter-Straight
36:1	1-603921	1	O-Ring
37	115-5057	1	Cover-Nut, Axle
38	109-3537	1	Seal Kit
39	120-7982	1	RH Center Section Charge Kit
40	114-8464	1	Charge Relief Kit
41	114-8465	1	Charge Kit
42	121-2988	1	Fan And Pulley Kit
43	114-8467	1	Puller-Hub, 4 Bolt
44	117-5361	1	Input Shaft Kit
45	117-5362	1	Control Arm Kit
46	114-8470	1	Axle Shaft Kit

● Not illustrated


LH Transaxle Assembly No. 120-7860

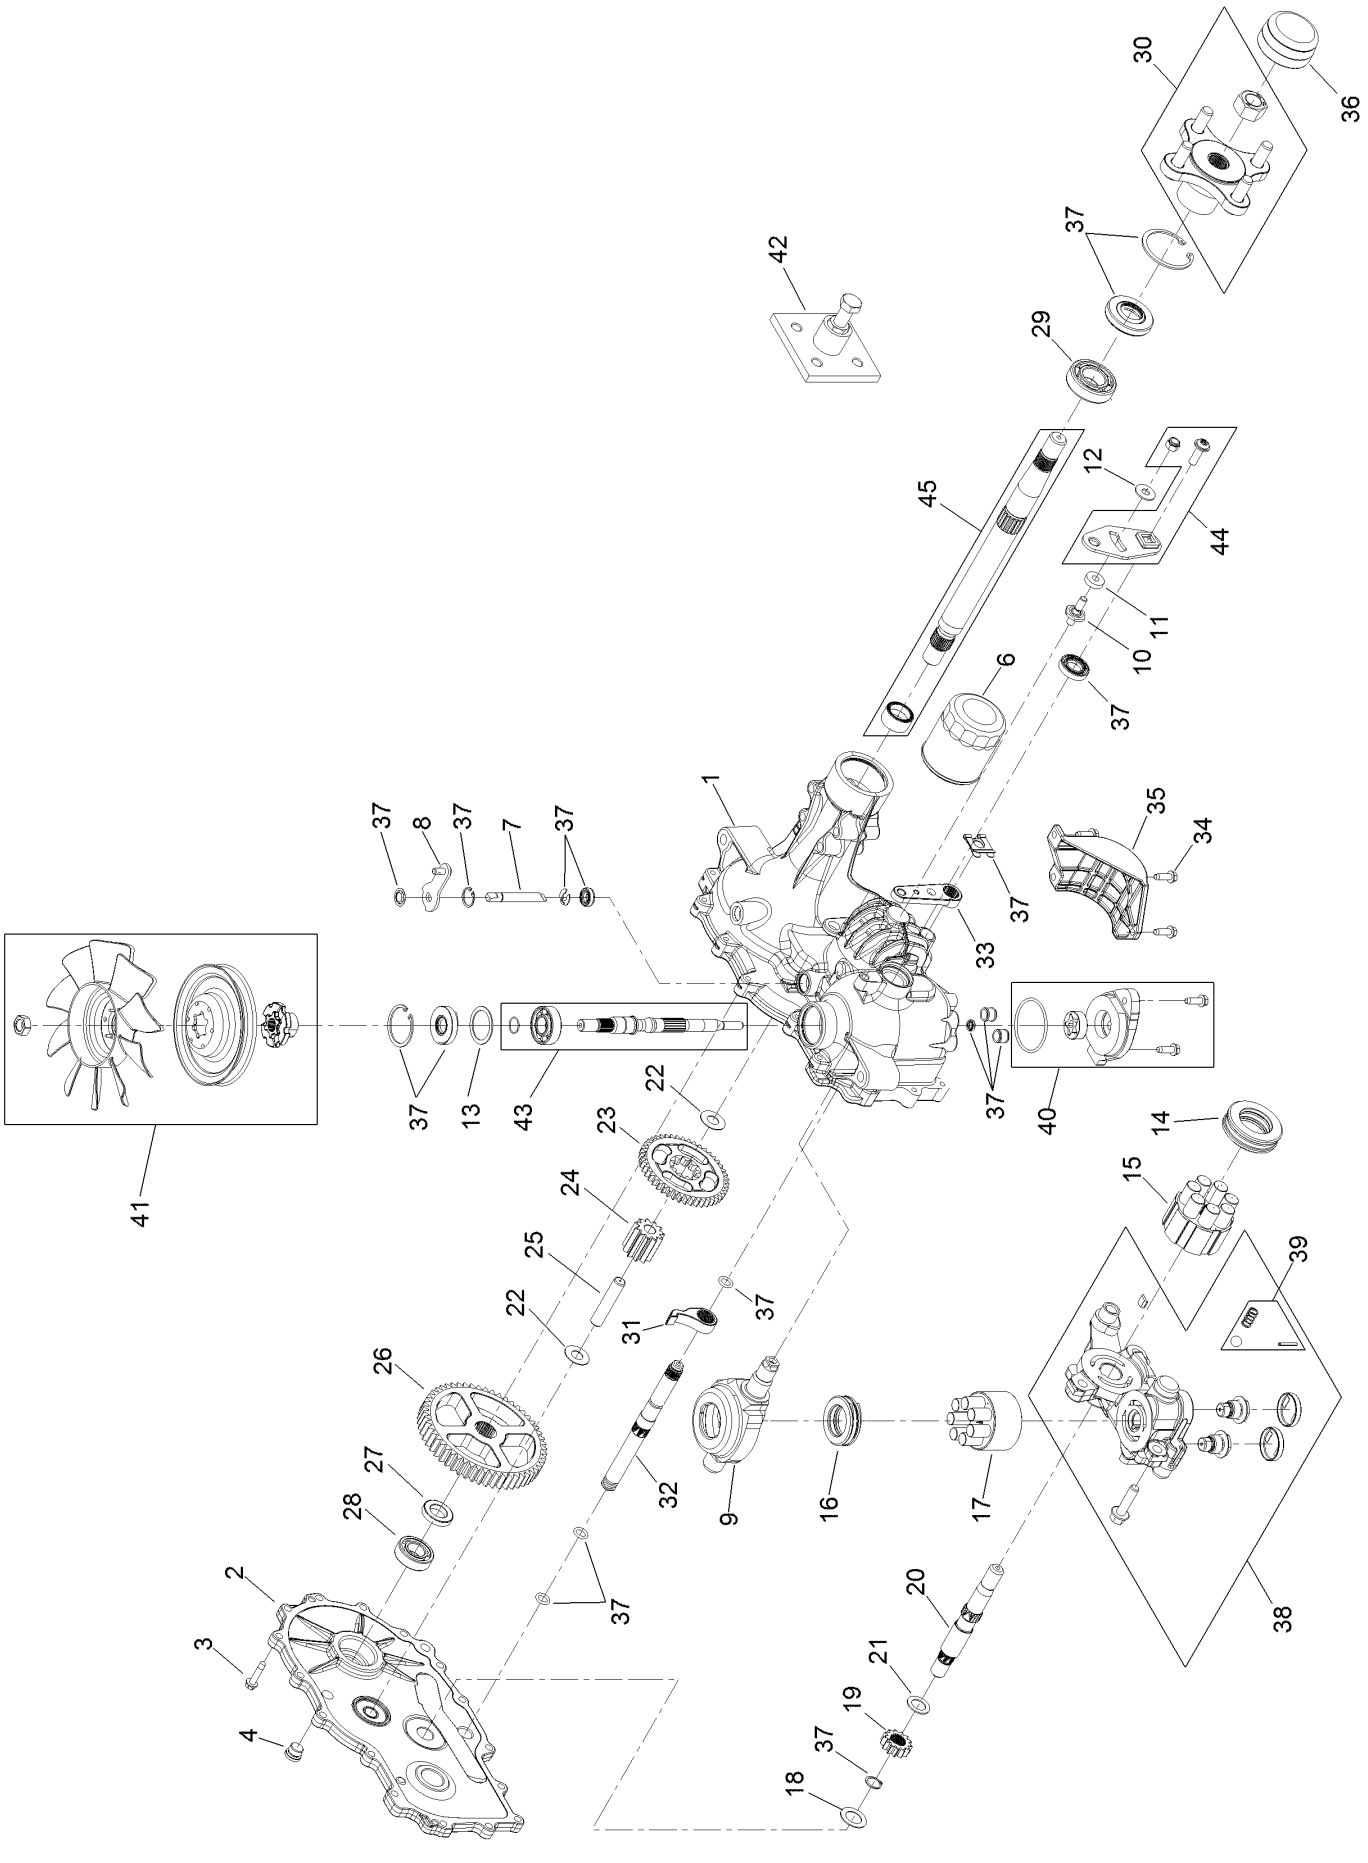

LH Transaxle Assembly No. 120-7860 (continued)


Ref.	Part Number	Qty.	Description
1	114-8471	1	LH Main Housing Kit
2	114-8472	1	LH Side Cover Kit
3	117-5359	16	Screw-HHF
4	104-2189	1	Plug-Thread, Straight
5	104-2147	1	Sealant ●
6	109-3321	1	Element-Oil Filter, HYD
7	114-1685	1	Rod-Bypass
8	107-2490	1	Arm-Bypass
9	104-5304	1	Swashplate-Trunnion
10	104-2116	1	Stud
11	112-9853	1	Puck-Friction
12	114-8491	1	Washer
13	104-5308	1	Spacer
14	109-2865	1	Bearing-Thrust
15	114-1689	1	Motor Cylinder Block Kit
16	94-6922	1	Bearing-Thrust
17	110-8561	1	Pump Block ASM
18	104-5339	1	Washer-Flat
19	120-7972	1	Gear-13T
20	114-1691	1	Shaft-Motor
21	104-5360	1	Washer
22	94-1933	2	Washer
23	120-7973	1	Gear-46T
24	120-7974	1	Gear-11T
25	104-5329	1	Pin-Jackshaft
26	114-1694	1	Gear-54T
27	120-7975	1	Spacer
28	114-1696	1	Bearing-Ball
29	120-7976	1	Bearing-Ball
30	109-5939	1	Hub Kit
31	114-1697	1	Pawl-Brake
32	114-1698	1	Shaft-Brake, Inboard
33	125-0021	1	Handle-Brake
34	104-2120	3	Screw
35	120-7979	1	Guard-Filter, LH
36	115-5057	1	Cover-Nut, Axle
37	109-3537	1	Seal Kit
38	120-7980	1	LH Center Section Charge Kit
39	114-8464	1	Charge Relief Kit
40	114-8465	1	Charge Kit
41	121-2988	1	Fan And Pulley Kit
42	114-8467	1	Puller-Hub, 4 Bolt
43	117-5361	1	Input Shaft Kit
44	117-5362	1	Control Arm Kit
45	114-8470	1	Axle Shaft Kit

● Not illustrated

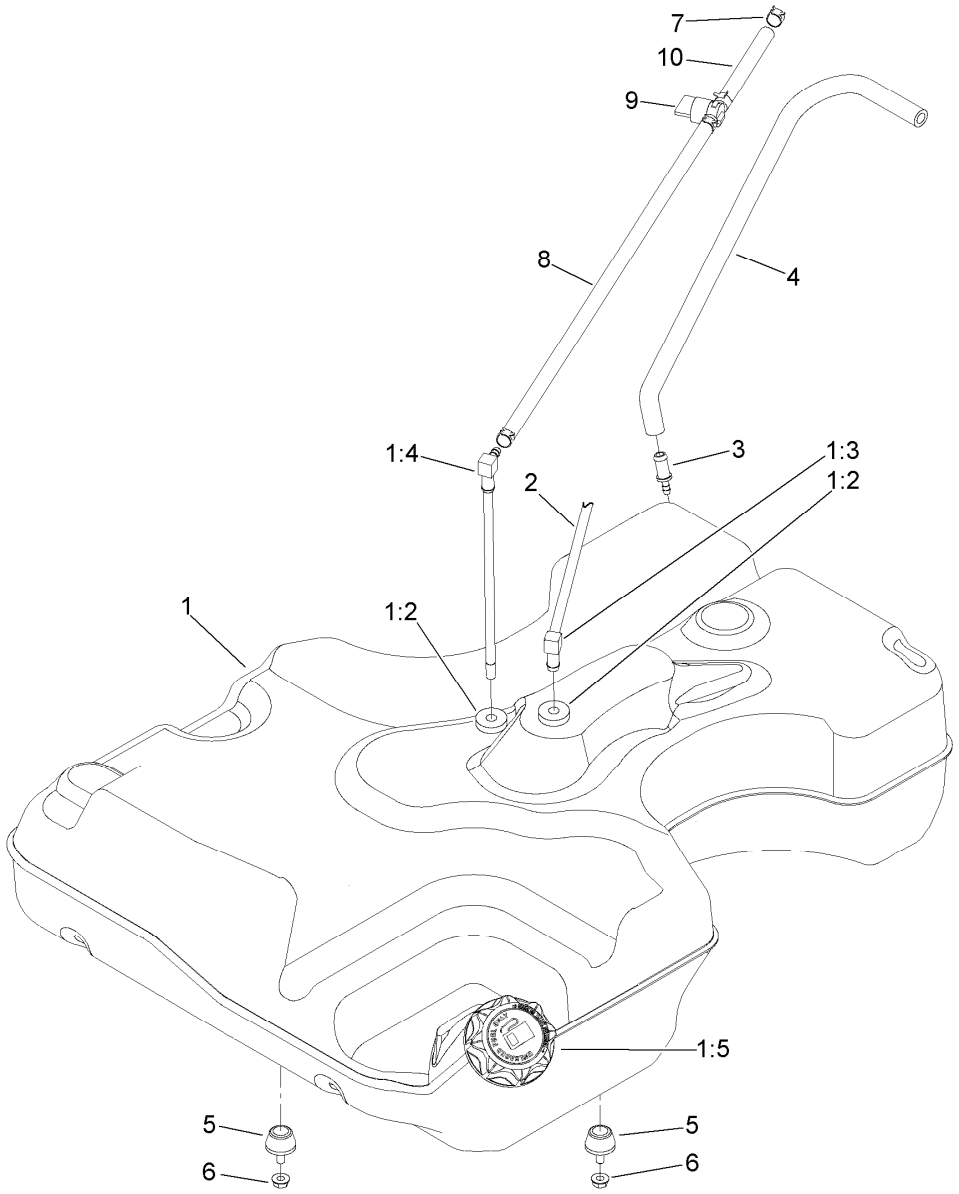


Fuel Tank and Hose Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	125-4765	1	Fuel Tank ASM
1:2	46-6560	2	Bushing
1:3	116-2288	1	Fitting-90 Elbow
1:4	125-4767	1	Fuel Line ASM
1:5	116-1704	1	Cap-Fuel, Ratcheting
2	119-6074	1	Hose-Fuel
3	98-2952	1	Fitting-Straight
4	119-8562	1	Hose-Fuel
5	109-2365	2	Bumper-Rubber
6	32128-33	2	Nut-HF
7	2412-98	4	Clamp-Hose
8	110-5701	1	Hose-Fuel
9	1-603770	1	Valve-Fuel
10	109-0650	1	Hose-Fuel

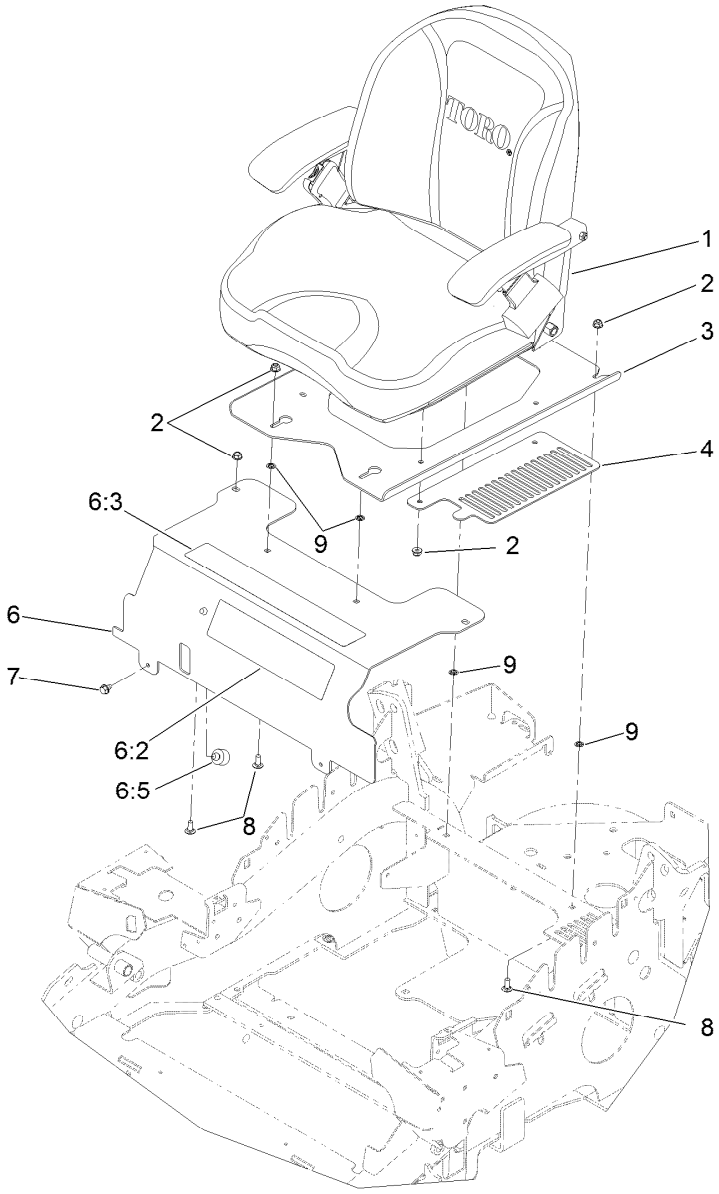


Seat Mounting Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	120-7886	1	Seat
2	104-8300	10	Nut-HF, NI
3	117-8615-03	1	Plate-Mount, Seat
4	117-8618-03	2	Plate-Cover, Fan
6	121-4776	1	Seat Mount Panel ASM
6:2	114-5878	1	Decal
6:3	114-4468	1	Decal-Console
6:5	120-7893	1	Bumper-Grommet
7	9266934	2	Screw
8	3230-23	6	Screw-CARR
9	117-2749	4	Nut-Push

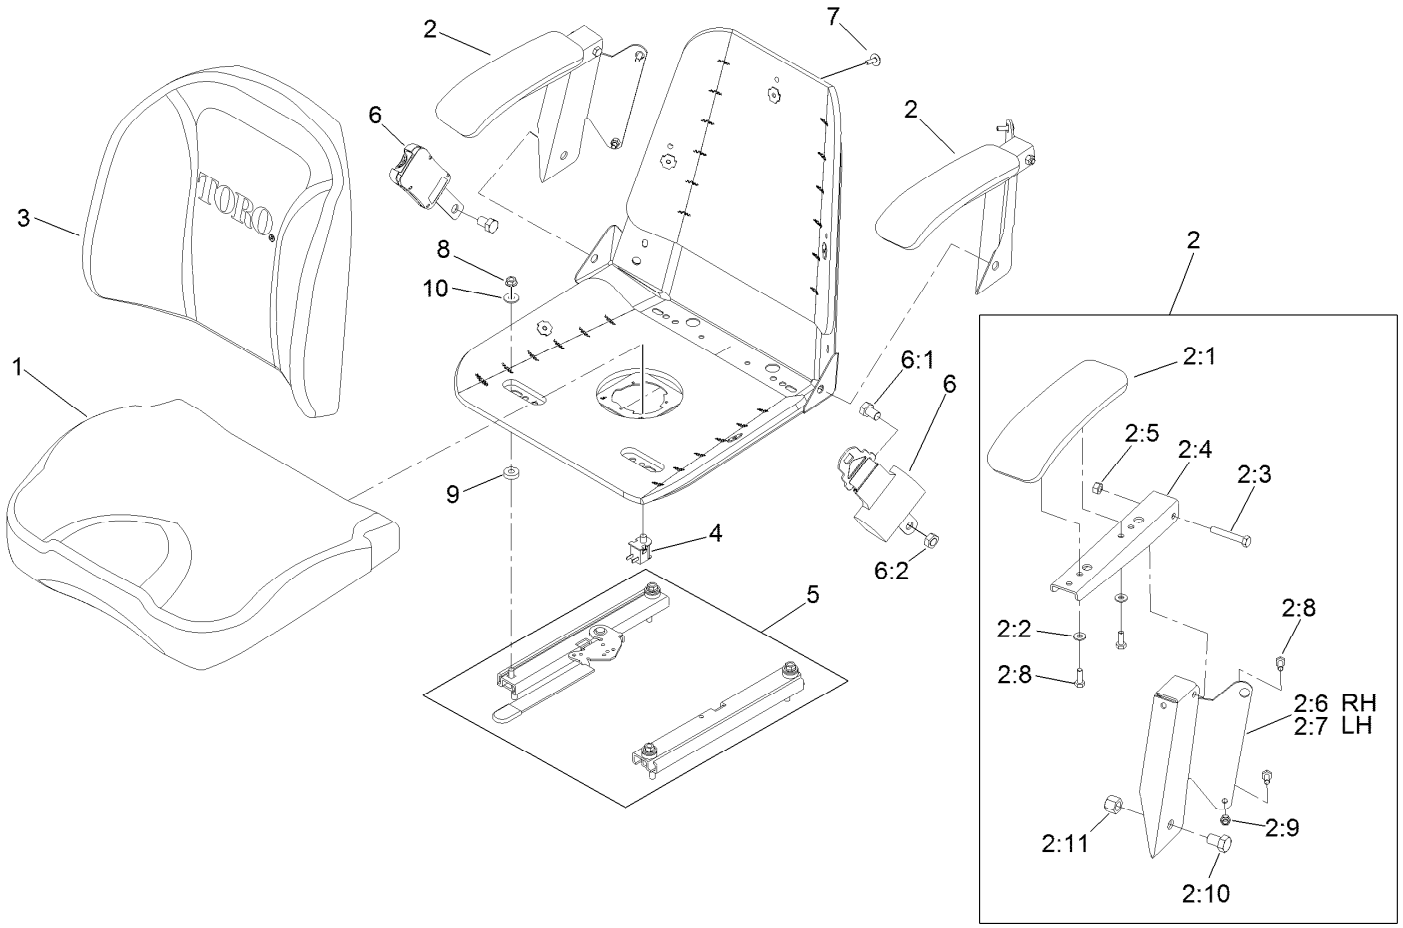


Seat Assembly No. 120-7886

Ref.	Part Number	Qty.	Description
1	121-4751	1	Cushion-Seat, Bottom
2	110-5719	1	Armrest Kit
2:1	110-4163	2	Cushion-Rest, Arm
2:2	3256-22	4	Washer-Flat
2:3	322-10	2	Screw-HH
2:4	105-3623	2	Channel-Armrest
2:5	32153-3	2	Nut-Hex, Side Deform
2:6	105-3621	1	Bracket-Armrest, RH
2:7	105-3622	1	Bracket-Armrest, LH
2:8	321-30	8	Screw-HH
2:9	3296-42	4	Nut-Lock, NI
2:10	325-2	2	Screw-HH
2:11	3296-23	2	Nut-Lock, NI
3	121-4752	1	Cushion-Seat, Back
4	82-2190	1	Switch-Bail
5	121-4754	1	Track-Seat
6	116-2981	1	Seat Belt Kit
6:1	325-2	2	Screw-HH
6:2	3296-23	2	Nut-Lock, NI
7	103-8383	7	Bolt-Seat
8	32128-20	4	Nut-HF
9	26-4840	8	Spacer-Pin, Mounting
10	3256-3	6	Washer-Flat

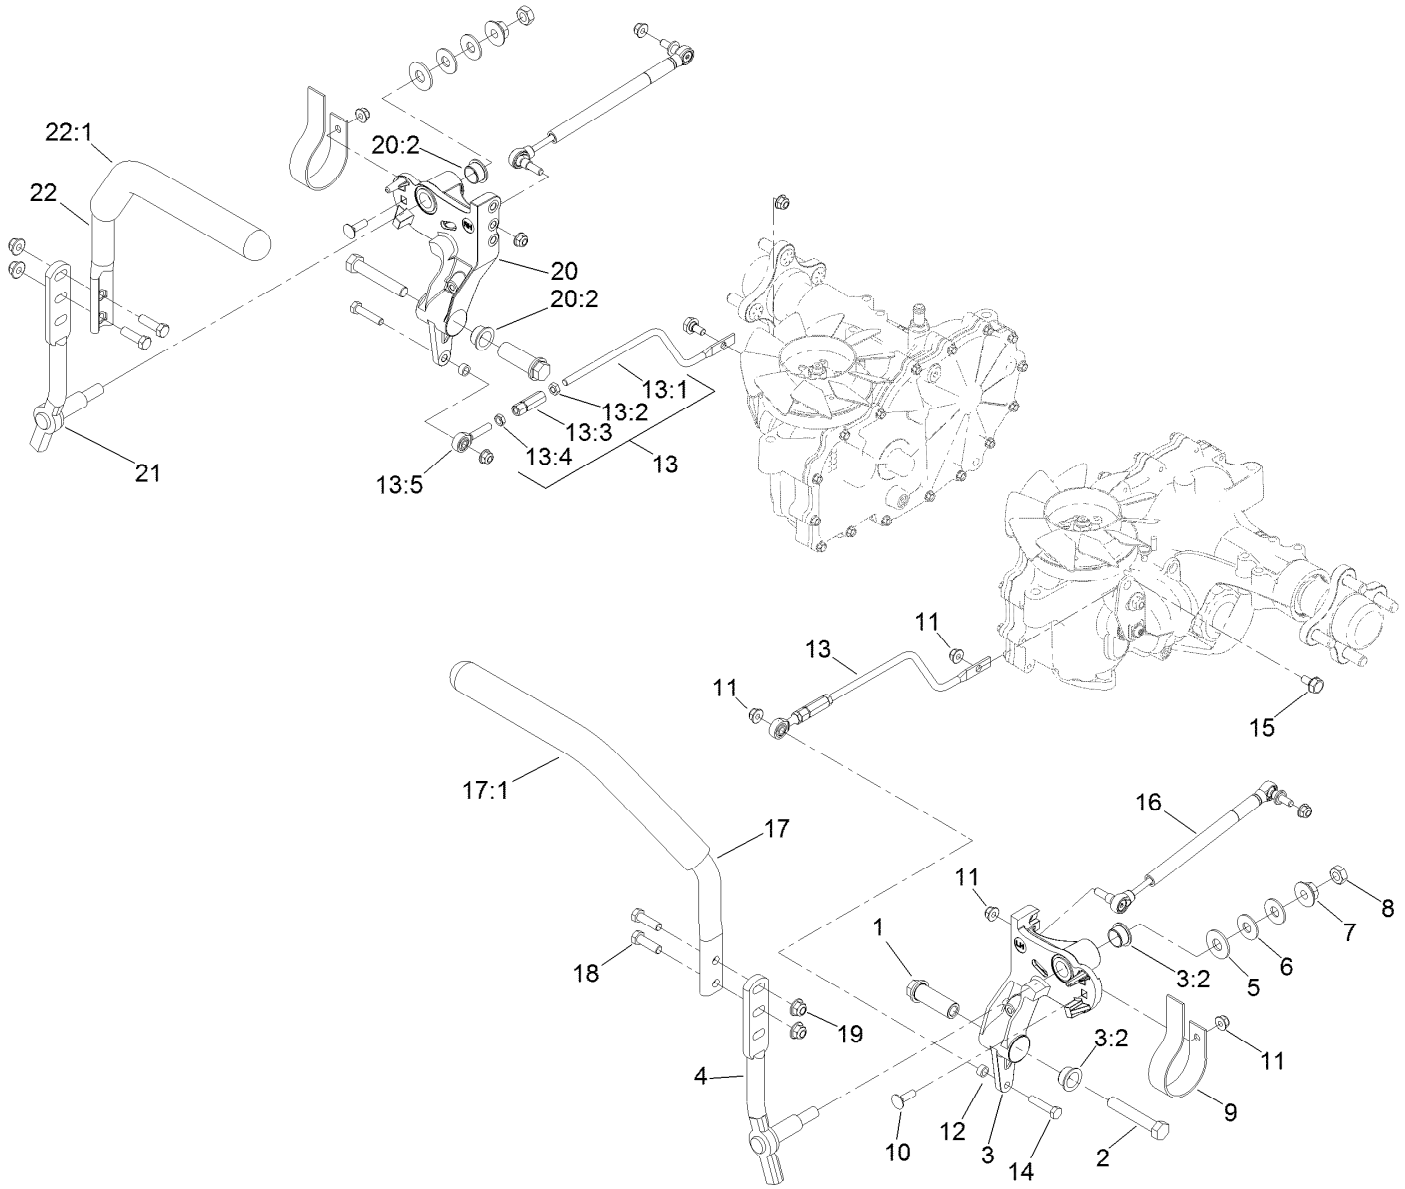

Motion Control Assembly


Ref.	Part Number	Qty.	Description
1	109-5891	2	Hub-Threaded
2	325-12	2	Screw-HH
3	116-0881	1	LH Motion Control And Bushing ASM
3:2	109-8054	4	Bushing-Flange
4	116-0040	1	Lever-Control Motion, LH
5	3256-6	2	Washer-Flat
6	109-9505	4	Washer-Spring
7	32128-56	2	Nut-HF
8	3218-5	2	Nut-Jam
9	109-5575	2	Spring-Leaf
10	3230-2	2	Bolt-CARR
11	104-8300	10	Nut-HF, NI
12	92-6998	2	Spacer-Yoke, Right
13	119-2605	2	Hydro Control Rod ASM
13:1	119-2606	1	Rod-Control, Hydro
13:2	3220-2	1	Nut-Jam
13:3	109-3728	1	Nut-Rod Adjustment
13:4	3220-20	1	Nut-Jam
13:5	2411-53	1	Bearing-Rod End, LH
14	322-7	2	Screw-HH
15	37-8771	2	Bolt-Shoulder
16	116-0027	2	Damper-Control, Motion
17	109-6590	1	LH Steering Handle ASM
17:1	109-5668	1	Grip-Control, Lever
18	323-7	4	Screw-HH
19	104-8301	4	Nut-HF, NI
20	116-0880	1	RH Motion Control And Bushing ASM
20:2	109-8054	4	Bushing-Flange
21	116-0039	1	Lever-Control Motion, RH
22	109-6589	1	RH Steering Handle ASM
22:1	109-5668	1	Grip-Control, Lever

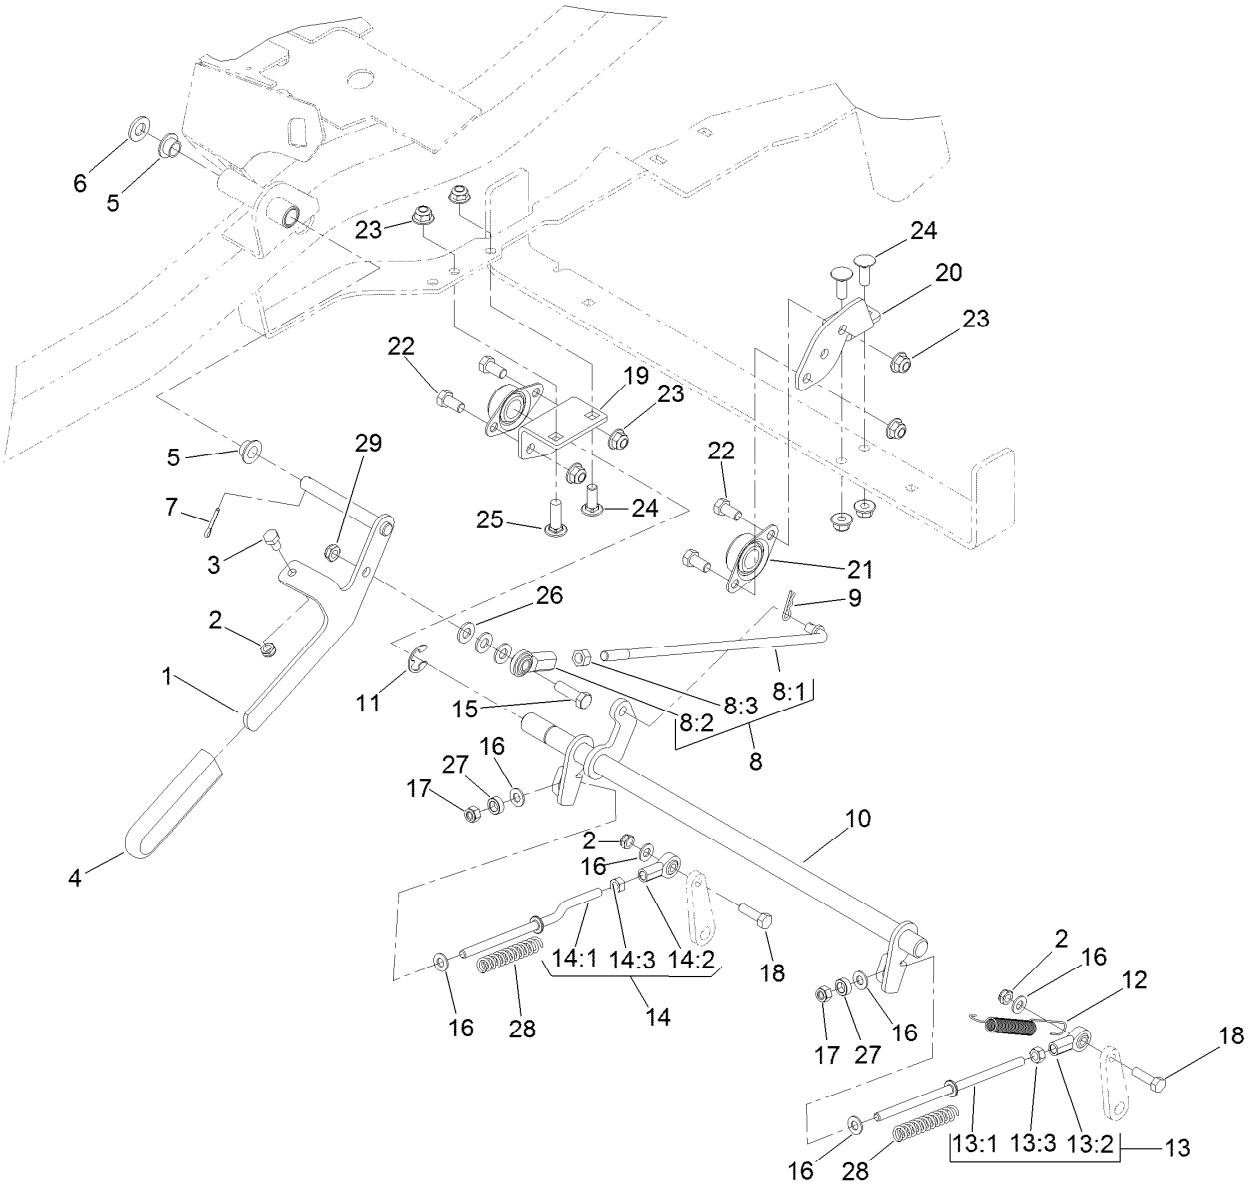

Parking Brake Assembly

Ref.	Part Number	Qty.	Description
1	121-4766-03	1	Handle-Brake
2	3296-47	3	Nut-Lock, NI
3	322-1	1	Screw-HH
4	1-633268	1	Grip-Lever
5	1-513140	2	Bearing-Control
6	106-9888	1	Washer-Flat
7	3272-10	1	Pin-Cotter
8	121-4807	1	Brake Link ASM
8:1	121-4795	1	Rod-Link, Brake
8:2	103-0608	1	Joint-Ball, End
8:3	3219-3	1	Nut-Hex
9	3290-307	3	Pin-Cotter
10	121-4804-03	1	Shaft-Brake
11	32151-48	1	E-Ring
12	110769	1	Spring-Extension
13	121-4805	1	LH Brake Rod ASM
13:1	121-4755	1	Rod-Brake
13:2	1-543017	1	Balljoint-RH
13:3	3219-2	1	Nut-Hex

Ref.	Part Number	Qty.	Description
14	121-4806	1	RH Brake Rod ASM
14:1	121-4770	1	Rod-Brake
14:2	1-543017	1	Balljoint-RH
14:3	3219-2	1	Nut-Hex
15	323-7	1	Screw-HH
16	3256-23	6	Washer-Plain
17	3296-4	2	Nut-Lock
18	322-16	2	Screw-HH
19	121-4761-01	1	Bracket-Shaft Mount, RH
20	121-4793-01	1	Bracket-Shaft Mount, LH
21	1-633102	2	Bearing-Flange, Side
22	323-4	4	Screw-HH
23	104-8301	8	Nut-HF, NI
24	3231-22	3	Screw-CARR
25	3231-28	1	Screw-CARR
26	3256-24	3	Washer-Flat
27	103-5677	2	Spacer
28	1-603807	2	Spring-Return, Neutral
29	3296-59	1	Nut-Lock, NI

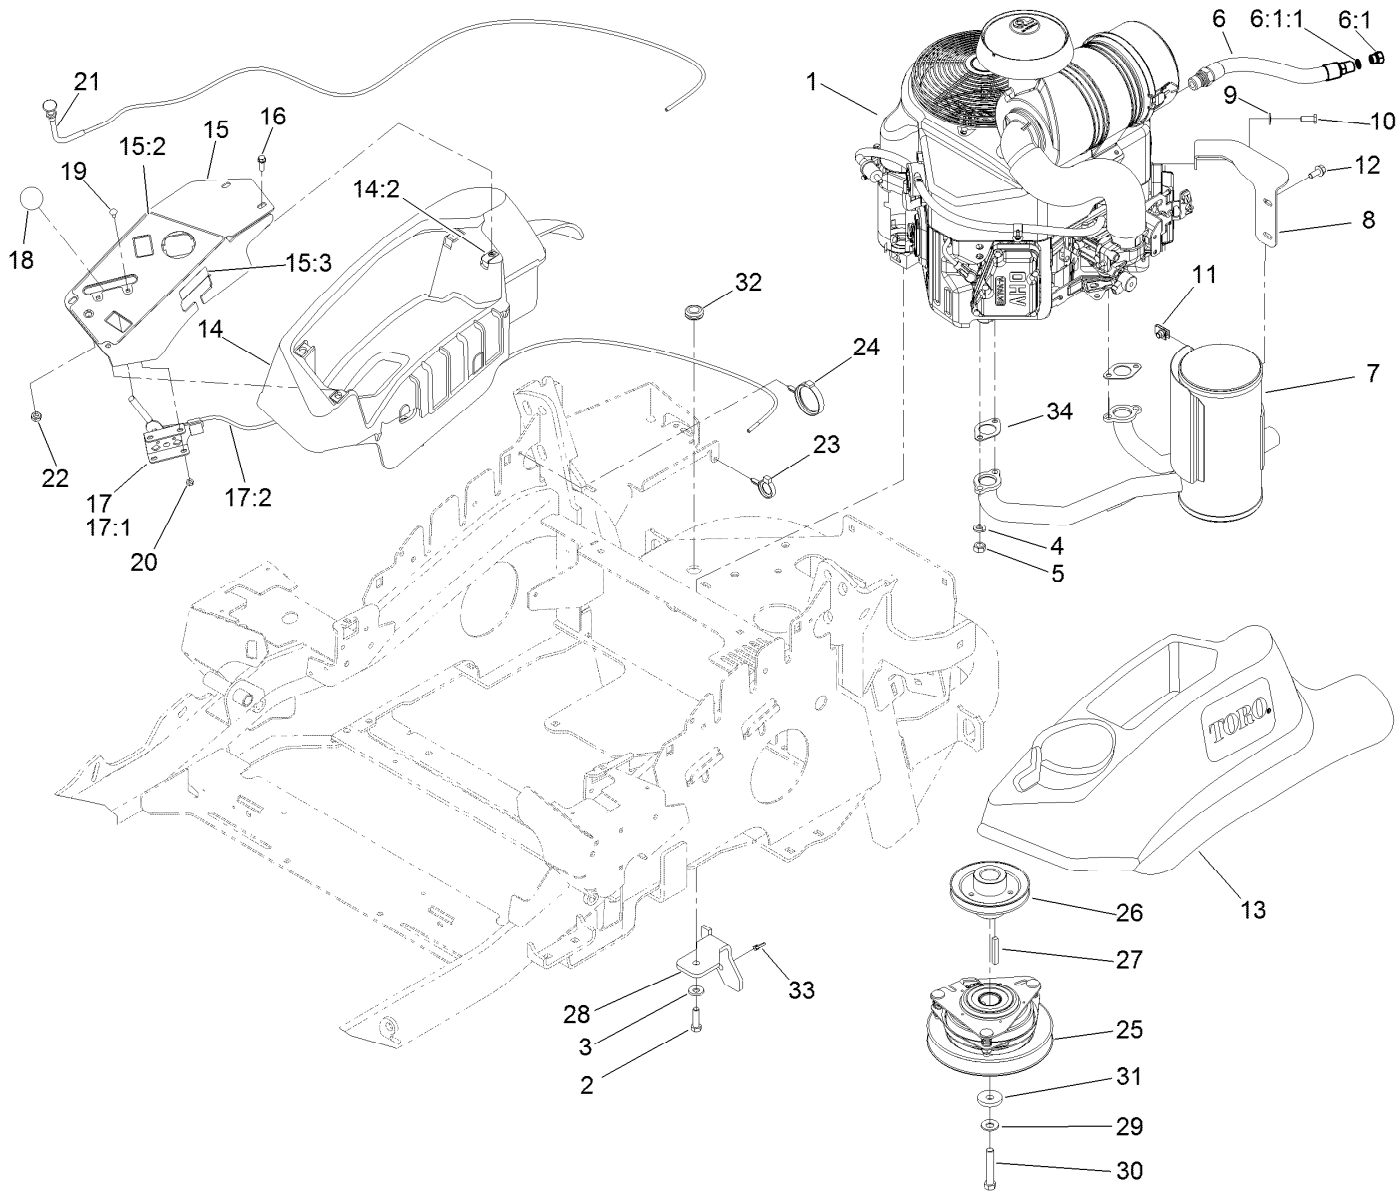


Engine, Muffler and Control Panel Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine-Kawasaki, Fx651V-S10-R ●■
2	323-7	4	Screw-HH
3	98-5975	4	Washer-Belleville
4	114-3550	4	Washer-Lock
5	114-3549	4	Nut
6	116-4924	1	Engine Oil Drain Hose ASM
6:1	353-508	1	Plug-HH
6:1:1	237-42	1	O-Ring
7	119-2645	1	Muffler
8	119-2659	1	Bracket-Muffler
9	1-303334	1	Washer-Spring
10	33114-020	1	Screw-HH
11	94-2413	2	Nut-U
12	3234-5	2	Screw-HHF
13	119-2602	1	Console-LH
14	119-2603	1	RH Console ASM
14:2	107069	4	Clip

Ref.	Part Number	Qty.	Description
15	119-2694	1	Control Panel ASM
15:2	119-2501	1	Decal-Panel, Control
15:3	114-4466	1	Decal-Fuses
16	32105-15	4	Screw-HWH
17	110-5727	1	Throttle Control ASM
17:1	112-2334	1	Lever-Throttle
17:2	110-5728	1	Cable-Throttle
18	1-603175	1	Knob-Ball
19	1-807513	2	Bolt-CARR
20	3296-2	2	Nut-Lock, NI
21	115-2753	1	Control-Choke
22	3220-3	1	Nut-HJ
23	105-1853	1	Clamp-Hose
24	117-7817	1	Clamp-Harness
25	119-2595	1	Clutch
26	119-9915	1	Pulley-Engine
27	608006	1	Key-Square
28	119-2658-01	1	Bracket-Stop, Clutch

● Not serviced separately

■ Obtain parts from www.kawpowerepc.com

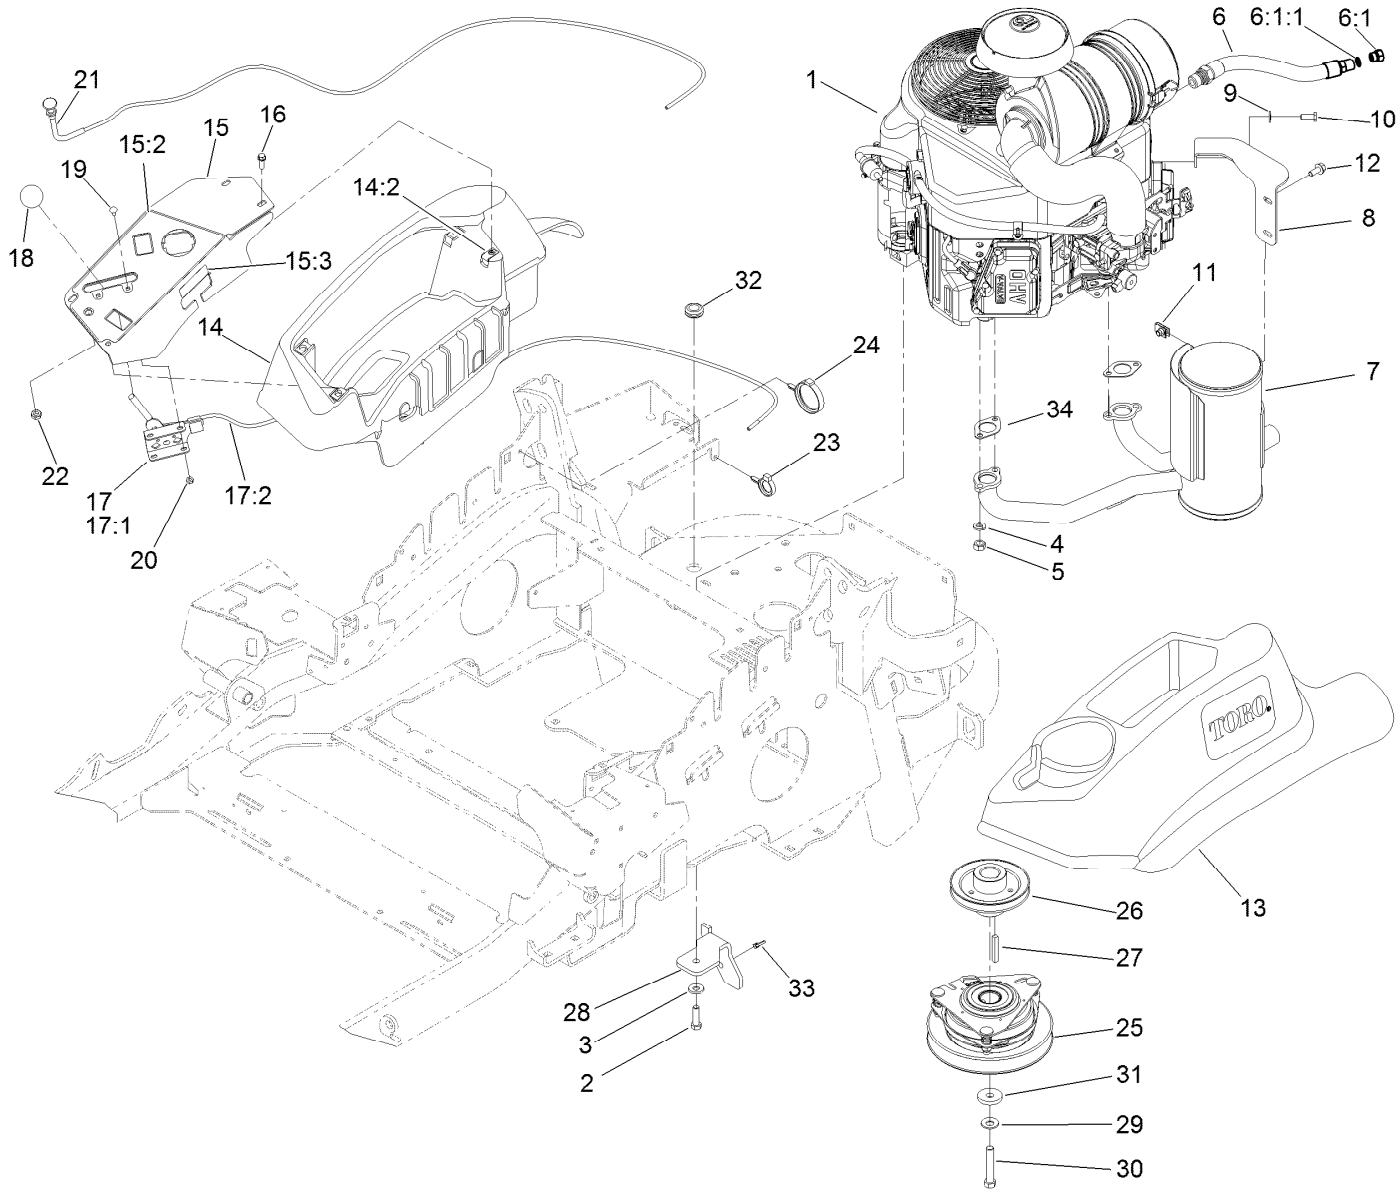


Engine, Muffler and Control Panel Assembly (continued)

Ref.	Part Number	Qty.	Description
29	1-603610	1	Washer-Spring
30	3212-10	1	Screw-HH
31	107-4136	1	Washer
32	112-7069	1	Grommet
33	1-303287	1	Tie-Cable
34	1-653313	2	Gasket-Exhaust

● Not serviced separately


■ Obtain parts from www.kawpowerepc.com

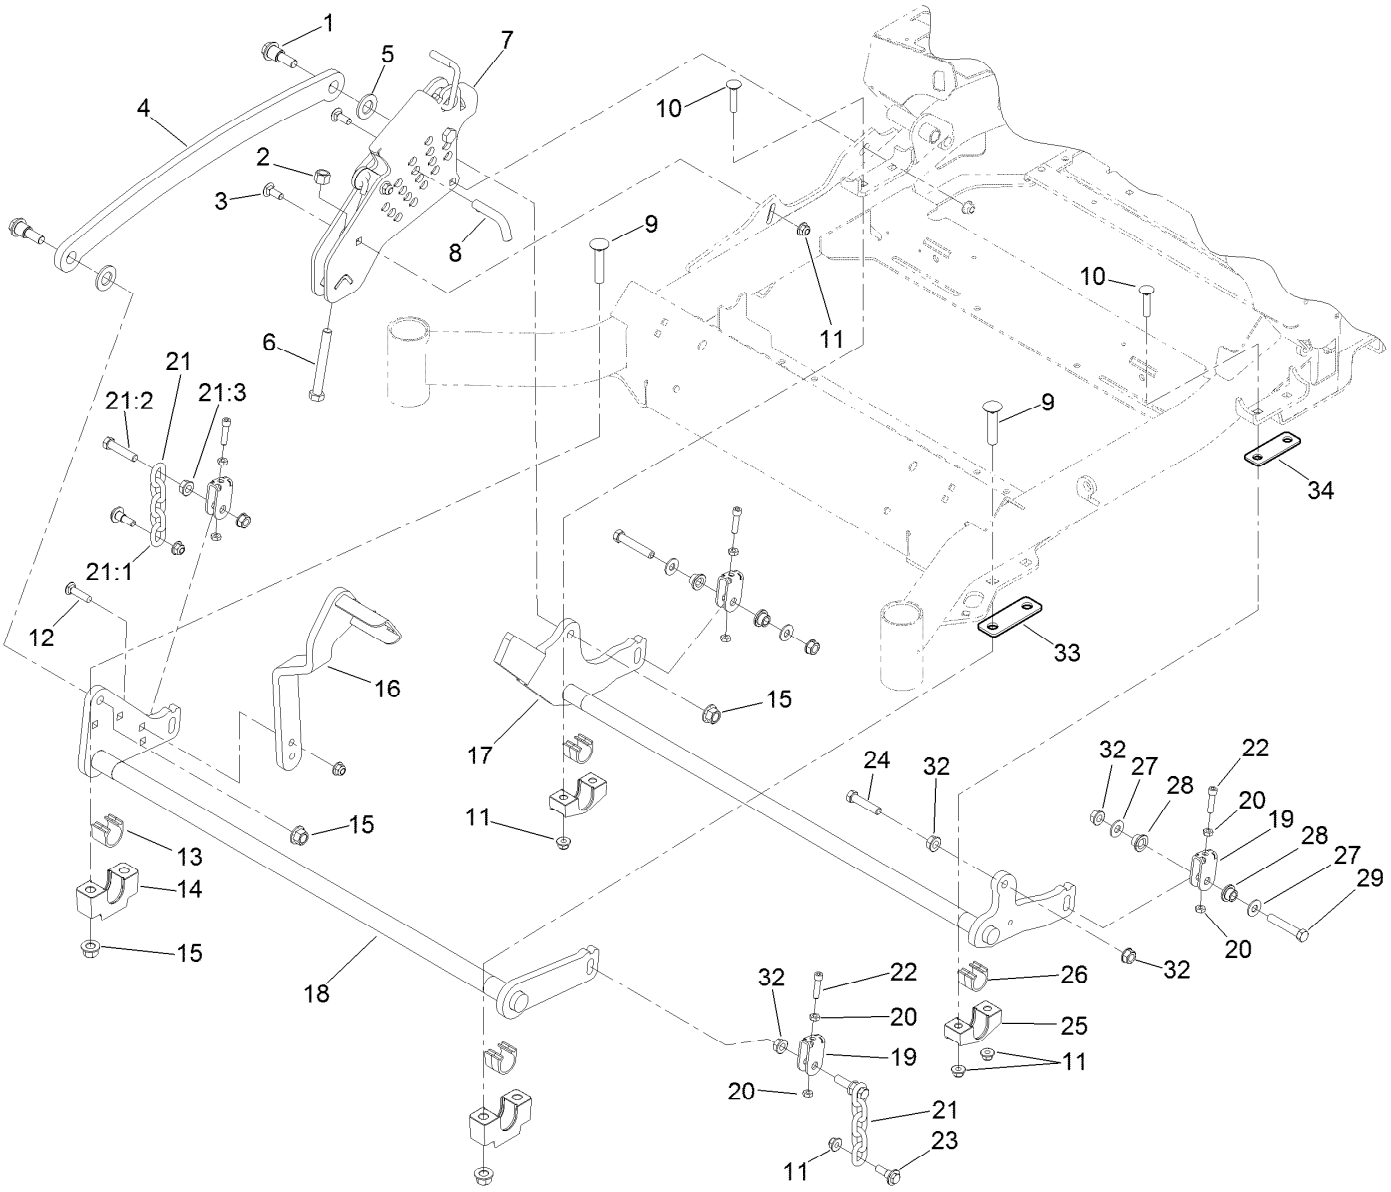

Deck Lift Assembly


Ref.	Part Number	Qty.	Description
1	116-0780	2	Screw-Shoulder, HHF
2	3296-23	1	Nut-Lock, NI
3	3231-2	2	Bolt-CARR
4	116-0797-03	1	Link-Lift, Deck
5	3256-28	2	Washer-Flat
6	116-0559	1	Bolt-TAP
7	121-4779	1	Height Of Cut ASM
8	116-5584	1	Pin-HOC
9	116-1700	4	Bolt-CARR
10	3231-5	4	Screw-CARR
11	104-8301	10	Nut-HF, NI
12	3231-4	2	Screw-CARR
13	109-9410	2	Bearing-Cross Shaft, Front
14	109-9409	2	Support-Cross Shaft, Bearing
15	99-5107	6	Nut-Lock
16	120-7877-01	1	Lever-Foot
17	116-0459-03	1	Lift-Deck, Rear
18	116-2217-03	1	Cross Shaft-Front

Ref.	Part Number	Qty.	Description
19	109-9066	4	Yoke-Adjust, Deck
20	3218-2	8	Nut-Jam
21	116-0756	2	Deck Lift Chain ASM
21:1	1-633447	1	Chain-Lift, Deck
21:2	109-9065	1	Screw-HH
21:3	32128-37	1	Nut-HF
22	322-47	4	Screw-HH
23	109-9840	2	Screw-Shoulder, HHF
24	109-9065	1	Screw-HH
25	116-0818-03	2	Support-Cross Shaft, Rear Bearing
26	109-7173	2	Bearing-Cross Shaft, Rear
27	3256-4	4	Washer-Flat
28	116-2428	4	Bushing-Flanged
29	324-10	2	Screw-HH
32	32128-37	6	Nut-HF
33	121-7593-01	2	Spacer-Decklift, Front
34	121-7594-01	2	Spacer-Decklift, Back

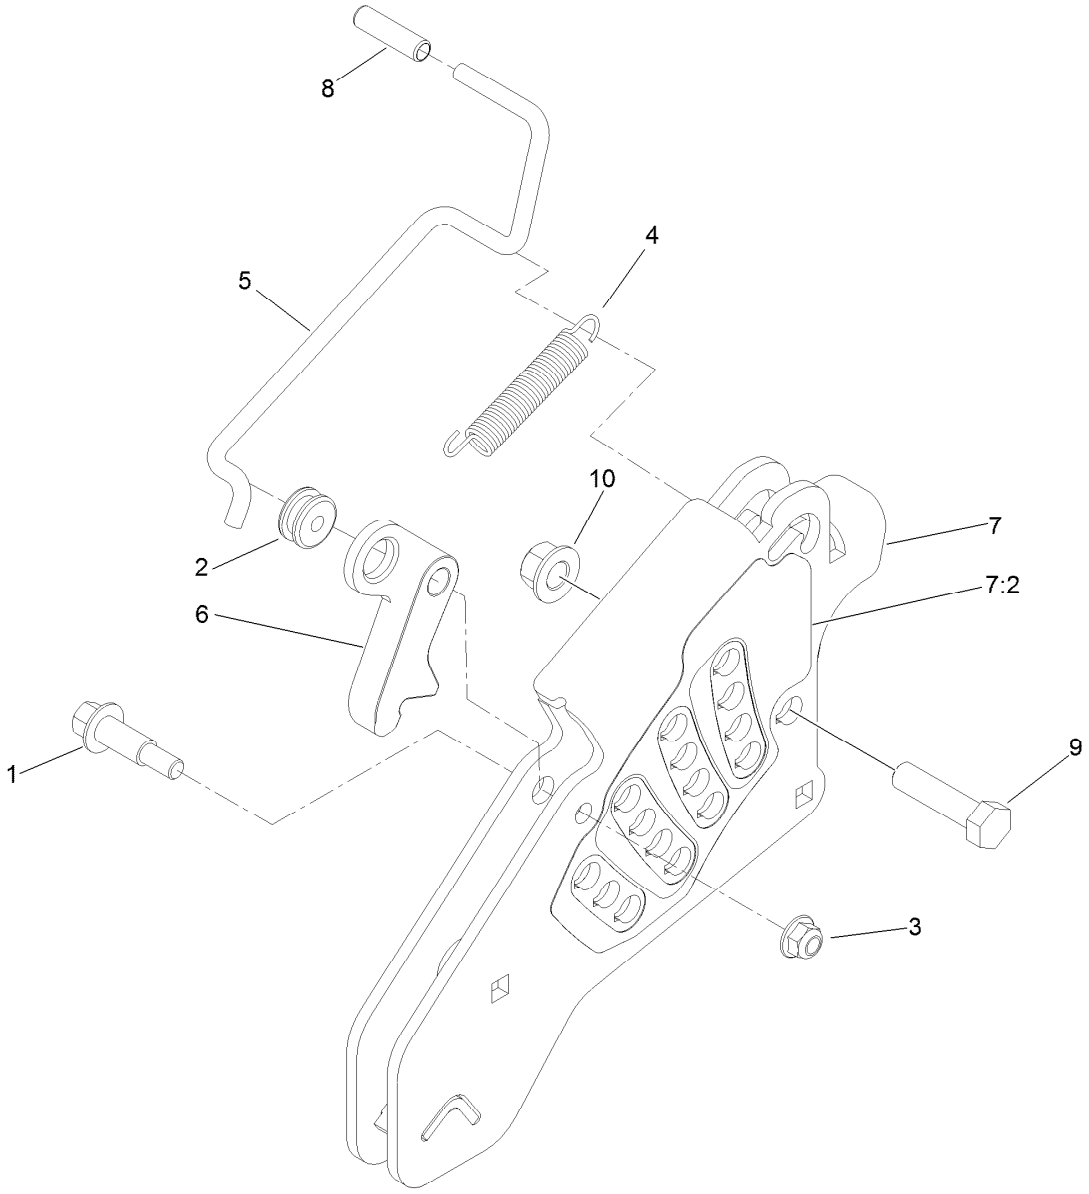

Height-of-Cut Assembly No. 121-4779

Ref.	*Part Number*	*Qty.*	*Description*
1	62-1330	1	Bolt-Shoulder
2	109-7130	1	Grommet
3	104-8301	1	Nut-HF, NI
4	109-7124	1	Spring-Extension
5	109-7128	1	Rod-Lock, Transport
6	116-0118	1	Pawl-Transport, HOC
7	121-4778	1	HOC Plate ASM
7:2	121-4777	1	Decal-HOC CE
8	109-8250	1	Grip-Lever
9	325-8	1	Screw-HH
10	99-5107	1	Nut-Lock

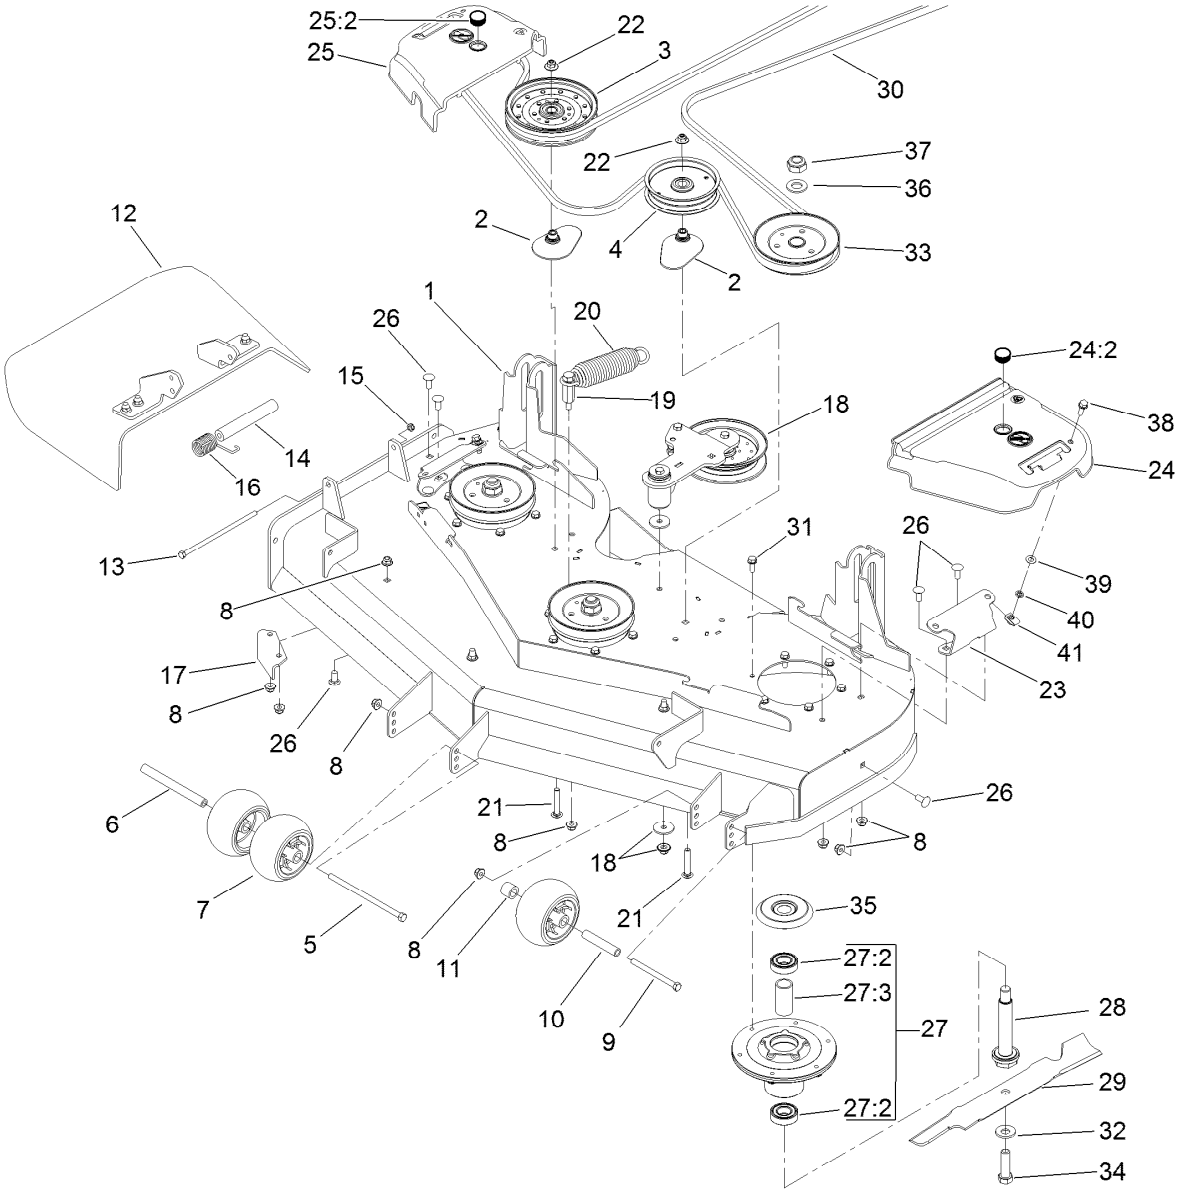


Deck Assembly

Ref.	Part Number	Qty.	Description
1	121-3241	1	Deck Decal ASM
2	109-2872	2	Spacer-Pulley
3	116-4670	1	Pulley-Idler, Flat
4	116-4665	1	Pulley-Idler, Flat
5	108-5388	1	Screw-HH
6	98-5967	1	Spacer-Wheel
7	1-603299	3	Roller-Scalp, Anti
8	104-8301	13	Nut-HF, NI
9	323-23	1	Screw-HH
10	98-7912	1	Tube-Spanner
11	98-7913	1	Tube-Spacer
12	120-2451	1	Deflector ASM
13	322-50	1	Screw-HH
14	105-4622	1	Spacer
15	3296-47	1	Nut-Lock, NI
16	108-4052	1	Spring-Torsion
17	107-8541-01	1	Baffle-Discharge
18		1	Idler Arm ASM ●

Ref.	Part Number	Qty.	Description
19	114-5867	1	Anchor-Spring, Tall
20	116-6317	1	Spring-Extension
21	3231-40	2	Bolt-CARR, Short Neck
22	109-6658	2	Nut-Flange, NI
23	114-5881-01	2	Bracket-Cover, Belt
24	117-7814	1	LH Belt Cover ASM
24:2	117-3824	1	Plug-Plastic
25	117-7813	1	RH Belt Cover ASM
25:2	117-3824	1	Plug-Plastic
26	3231-27	10	Screw-CARR
27	120-5477	3	Spindle ASM
27:2	116-0720	2	Bearing-Ball
27:3	115-2641	1	Spacer-Bearing
28	120-2505	3	Spindle-Shaft
29	117-7277-03	3	Blade-Hi Flo, 16.50 Inch
30	119-9926	1	Belt-V
31	32144-41	18	Screw-Taptite
32	125-1736	3	Washer-Belleville


● Not serviced separately

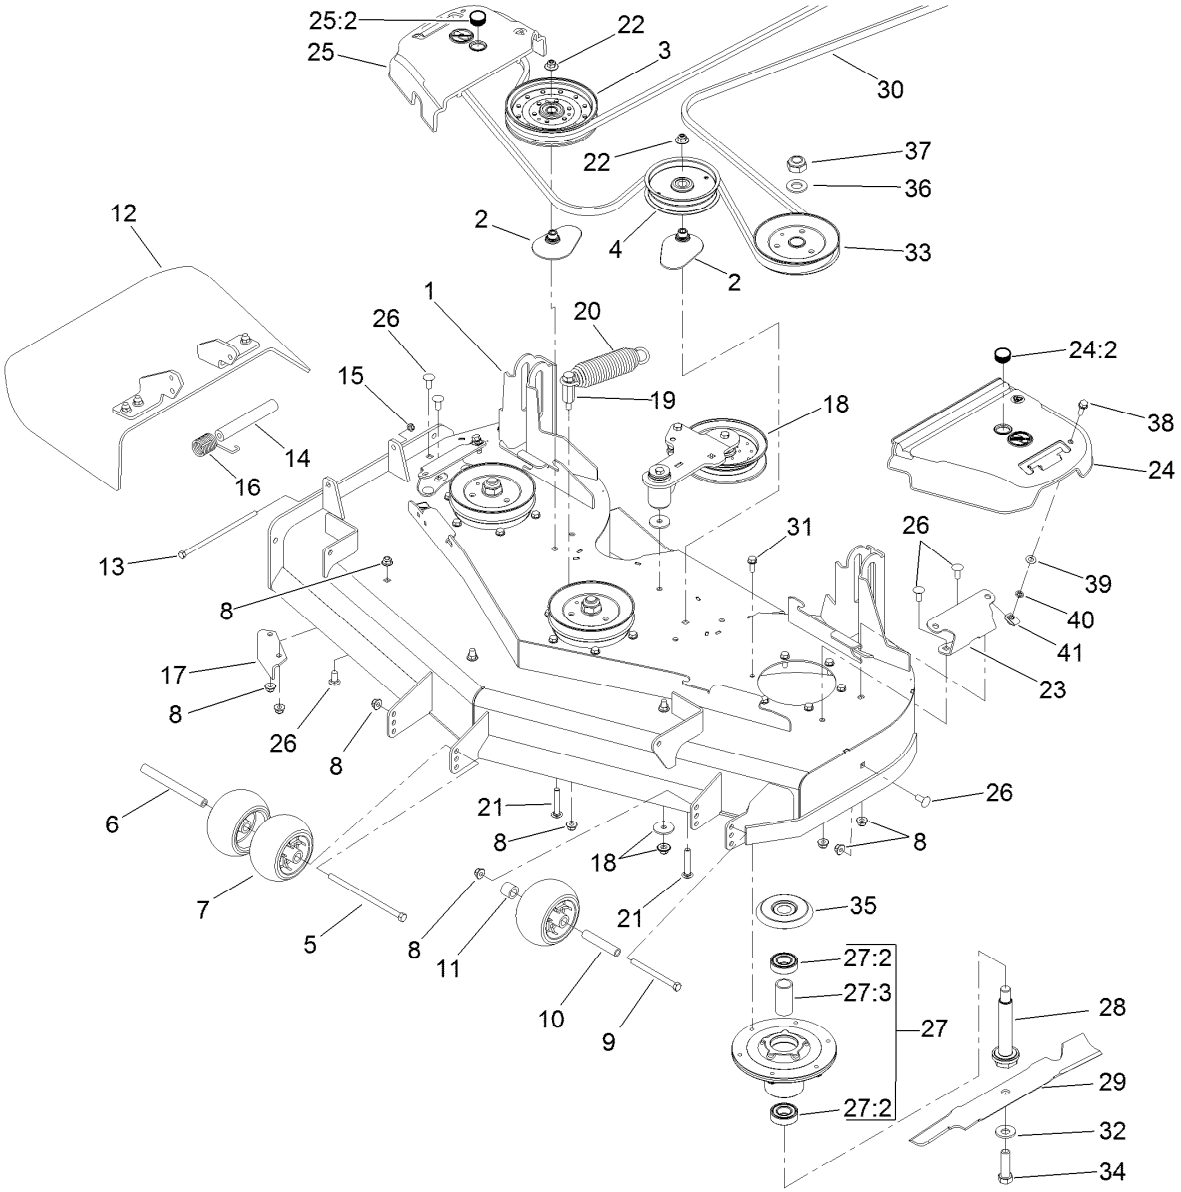

Deck Assembly (continued)


Ref.	Part Number	Qty.	Description
33	120-7854	3	Pulley-B Section
34	51-4060	3	Screw-Blade
35	117-7210	3	Shield-Bearing
36	92-5836	3	Washer
37	3296-67	3	Nut-Lock, NI
38	3234-29	2	Screw-HHF
39	73-0041	2	Washer-Thrust
40	117-2749	2	Nut-Push
41	94-2413	2	Nut-U

● Not serviced separately

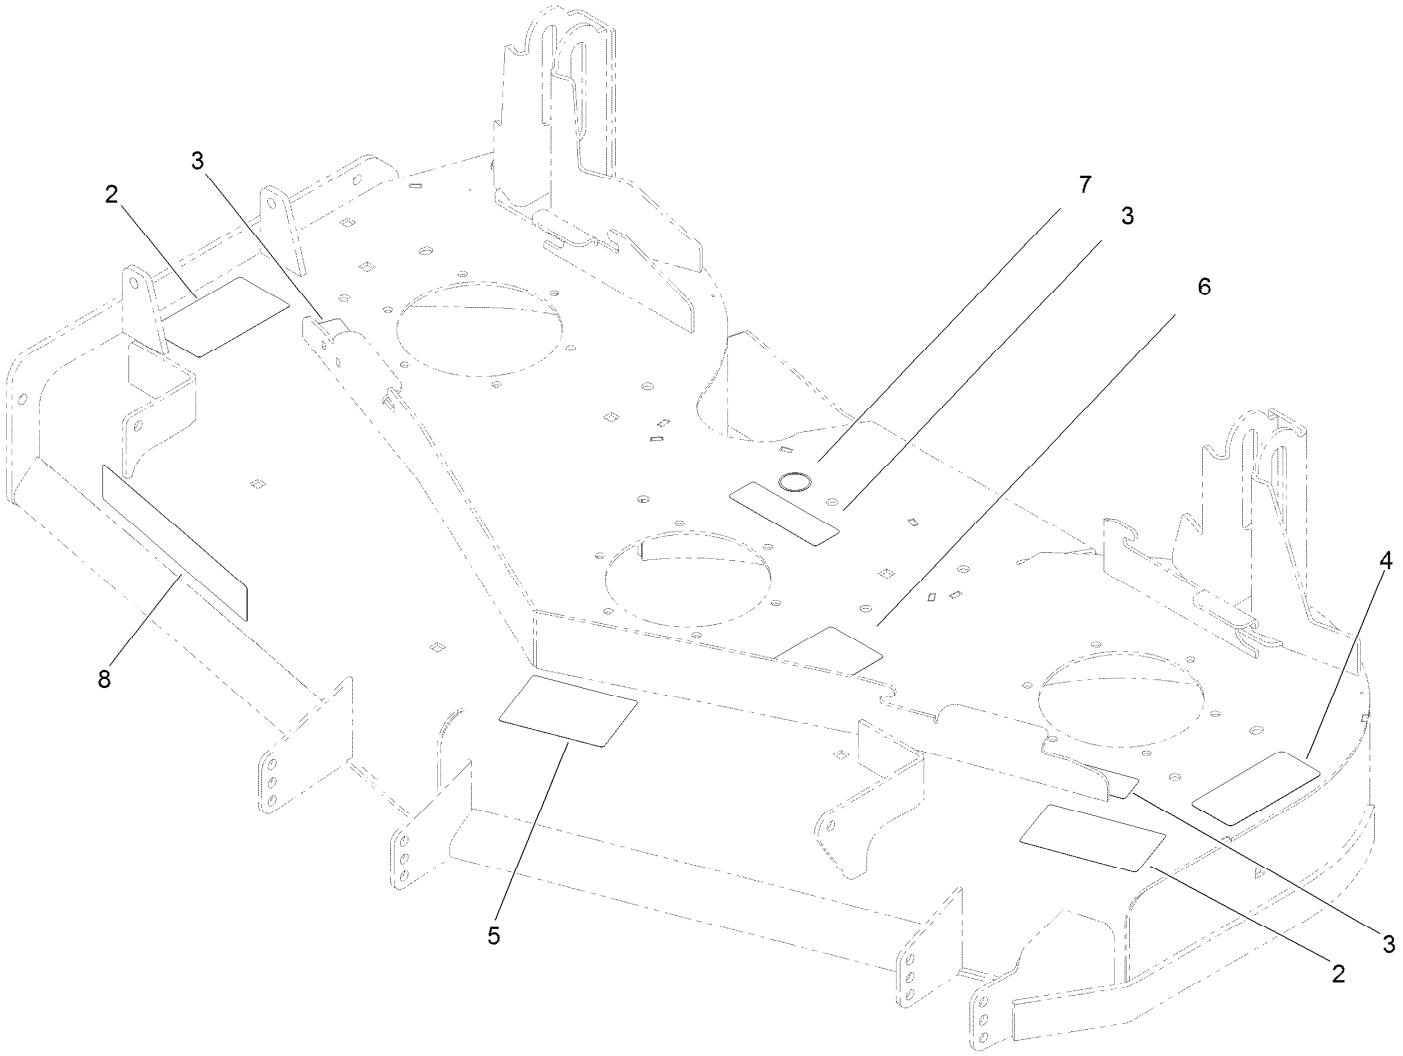


Deck Decal Assembly No. 121-3241

Ref.	*Part Number*	*Qty.*	*Description*
2	117-3848	2	Decal-Danger
3	112-9028	3	Decal-Missing, Cover
4	93-7818	1	Decal-Torque, Blade Bolt
5	112-3858	1	Decal-Scalp, Anti
6	117-8639	1	Decal-Routing, Deck Belt
7	58-6520	1	Decal-Grease
8	121-3204	1	Decal

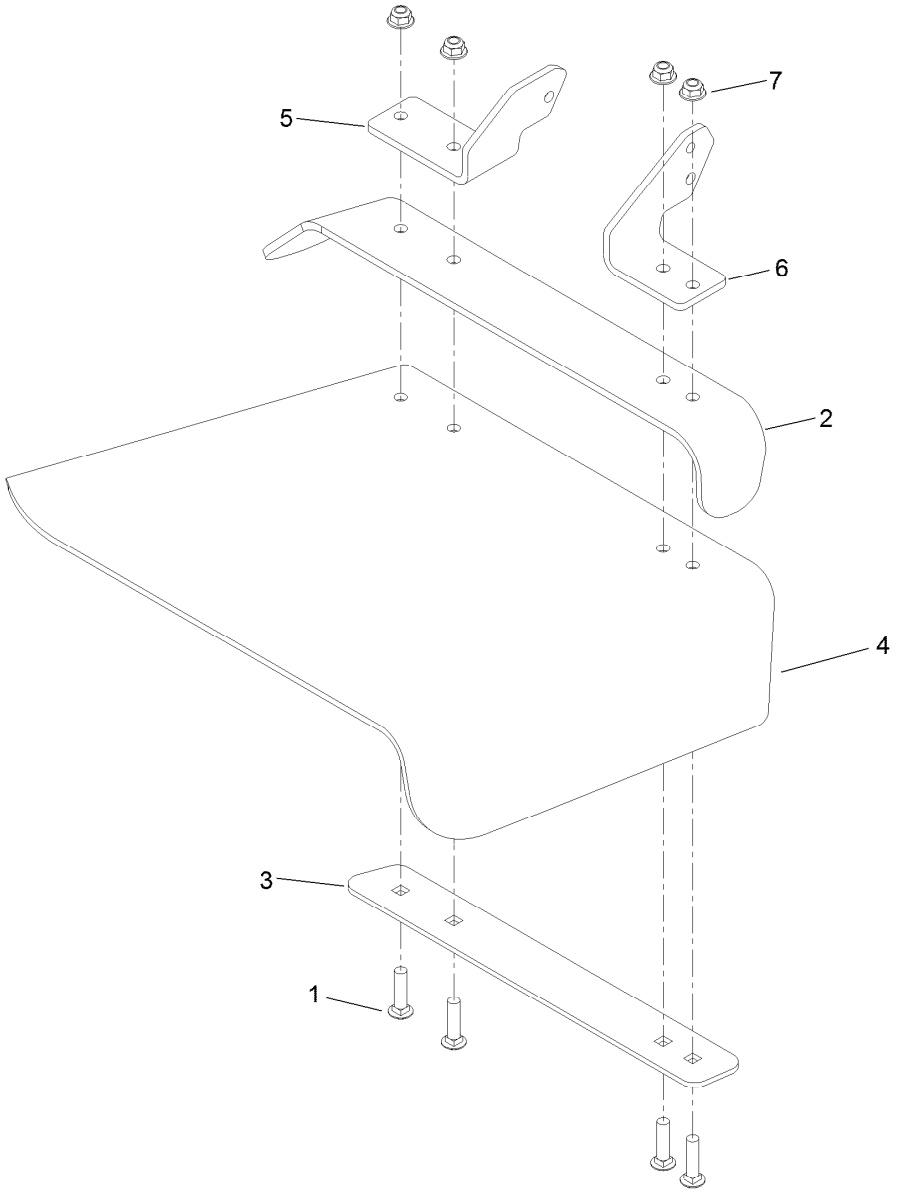


Deflector Assembly No. 120-2451

Ref.	*Part Number*	*Qty.*	*Description*
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	110-0759	1	Deflector-Rubber
5	108-4059-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	104-8301	4	Nut-HF, NI

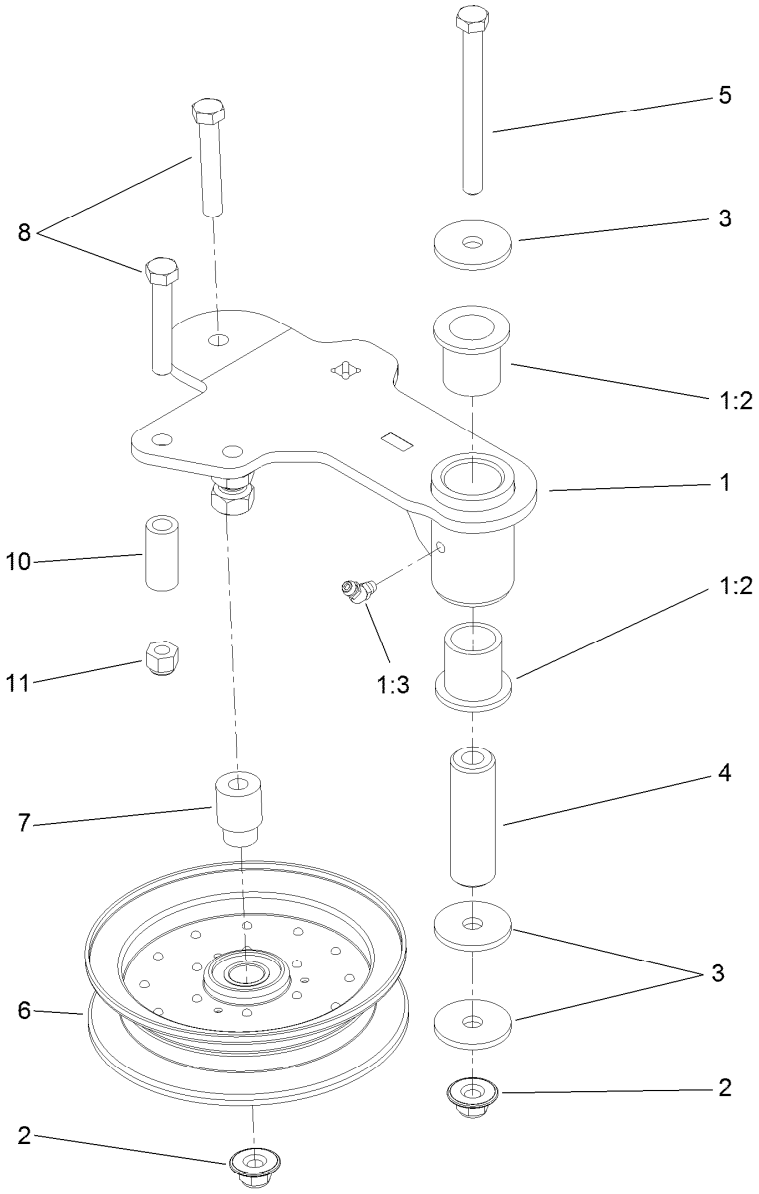

Idler Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	120-2501	1	Idler Arm ASM
1:2	1-303514	2	Bearing-Flanged
1:3	1481	1	Fitting-Grease
2	109-6658	2	Nut-Flange, NI
3	1-213069	3	Washer
4	114-5848	1	Spacer-Plain
5	98-5961	1	Screw-HH
6	116-4668	1	Idler-Pulley, Flanged
7	112-4212	1	Mount-Pulley
8	323-11	2	Screw-HH
10	104-0151	1	Spacer
11	3296-39	1	Nut-Lock, NI

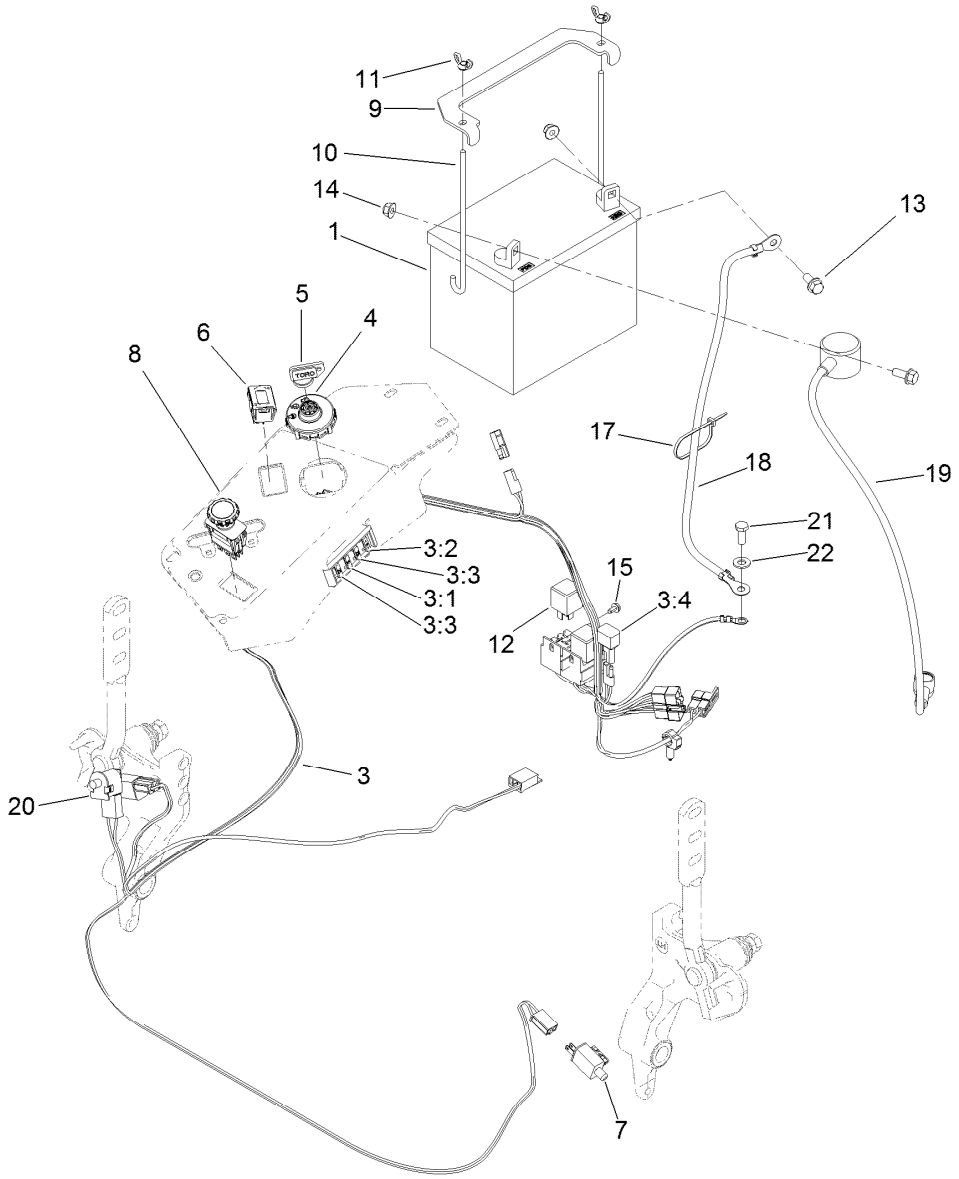

Electrical Assembly

Ref.	Part Number	Qty.	Description
1	104-8162	1	Battery-Dry
3	117-2582	1	Harness-Wire
3:1	218-578	1	Fuse-Blade, 10 Amp
3:2	109355	1	Fuse-Blade, 15 Amp
3:3	109102	2	Fuse-Blade, 25 Amp
3:4	116-0053	1	Cap-Plug
4	117-2221	1	Switch-Ignition
5	63-8360	1	Key-Ignition
6	120-2244	1	Hourmeter
7	110-6765	2	Switch
8	116-0124	1	Switch-PTO, 10 Amp
9	116-0042-03	1	Strap-Tie Down, Battery

Ref.	Part Number	Qty.	Description
10	1-633651	2	Bolt-Holddown
11	1-543792	2	Wingnut
12	1-643275	2	Relay
13	3234-5	2	Screw-HHF
14	104-8300	2	Nut-HF, NI
15	104-2065	1	Screw-HWH
17	1-303287	3	Tie-Cable
18	114-1218	1	Cable-Battery, Negative
19	115-3864	1	Cable-Battery, Positive
20	82-2190	1	Switch-Bail
21	33114-020	1	Screw-HH
22	33094-00	1	Washer-Plain

Attachments and Accessories

For 74141TE Z Master Commercial 2000 Series Riding Mower with 48in TURBO FORCE Side Discharge Mower

Product Name	Model/Part
Wheel And Tire Asm	109-9126
Hypr-Oil 500 (quart)	114-4713
Hypr-Oil 500 (gallon)	114-4714
Hypr-Oil 500-5 (5 gallon)	114-4715
Bimini Folding Shade Assembly	115-4510
Light Kit	116-1154
Seat Cover W/arm rest	117-0095
Operator Controlled Discharge Chute Kit	117-3600
Blade-Hi Flo, 16.50in	117-7277-03
Blade-Mulch, 16.50in	117-7278-03
Recycler Kit	120-2401
Z Stand Kit	121-4811
Toro Rops Lock Kit	126-4064
CE Bagger Compliance Kit, 48in Z Master 2000 Series Mower	127-0339
MVP Filter, Belt and Blade Kit	127-1631
Wheel And Axle Asm	127-9531
Suspension Seat Kit	132-5972
Toro Deluxe Rider Cover	490-7319
Spark Arrestor Screen	75-6880
E-Z VAC Twin Soft Bagger	78569
E-Z Vac Blower and Drive Kit	78571
Filter Minder Gauge	99-4664
Trash Holder Kit	TC26



Count on it.