Form No. 3417-769 Rev A

TORO®

Count on it.

Parts Catalog

Z Master® Commercial 3000 Series Riding Mower

with 52in TURBO FORCE® Side Discharge Mower

Model No. 75932—Serial No. 400000000 and Up

Register at www.Toro.com.
Original Instructions (EN)

3417-769 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Frame Assembly 4
Subframe Assembly 6
Roll-Over Protection System Assembly 8
Roll-Over Protection System Assembly No. 116-0231 10
Front Caster and Fork Assembly 12
Caster Wheel and Fork Assembly 14
Hydraulic Drive Assembly 16
Pump Idler Assembly No. 116-1255 18
LH Hydro Assembly No. 126-1327 20
RH Hydro Assembly No. 126-1328 22
Rear Wheel Assembly 24
Park Brake Assembly 26
Fuel System Assembly 28
Fuel Tank Assembly No. 135-0645 30
Seat Mounting Assembly 32
Seat Assembly No. 116-0035 34
Motion Control Assembly 36
Console and Control Assembly 38
Electrical Assembly 40
Deck Lift Assembly 42
Height-of-Cut Assembly No. 109-7438 44
Engine Assembly 46
Deck Assembly 48
Deck Decal Assembly No. 114-5810 50
Idler Arm Assembly 52
Spindle Assembly No. 127-0560 54
Rubber Deflector Assembly No. 108-2792 56
Frame Decal Assembly 58
Attachments and Accessories 60

© 2017—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Frame Assembly

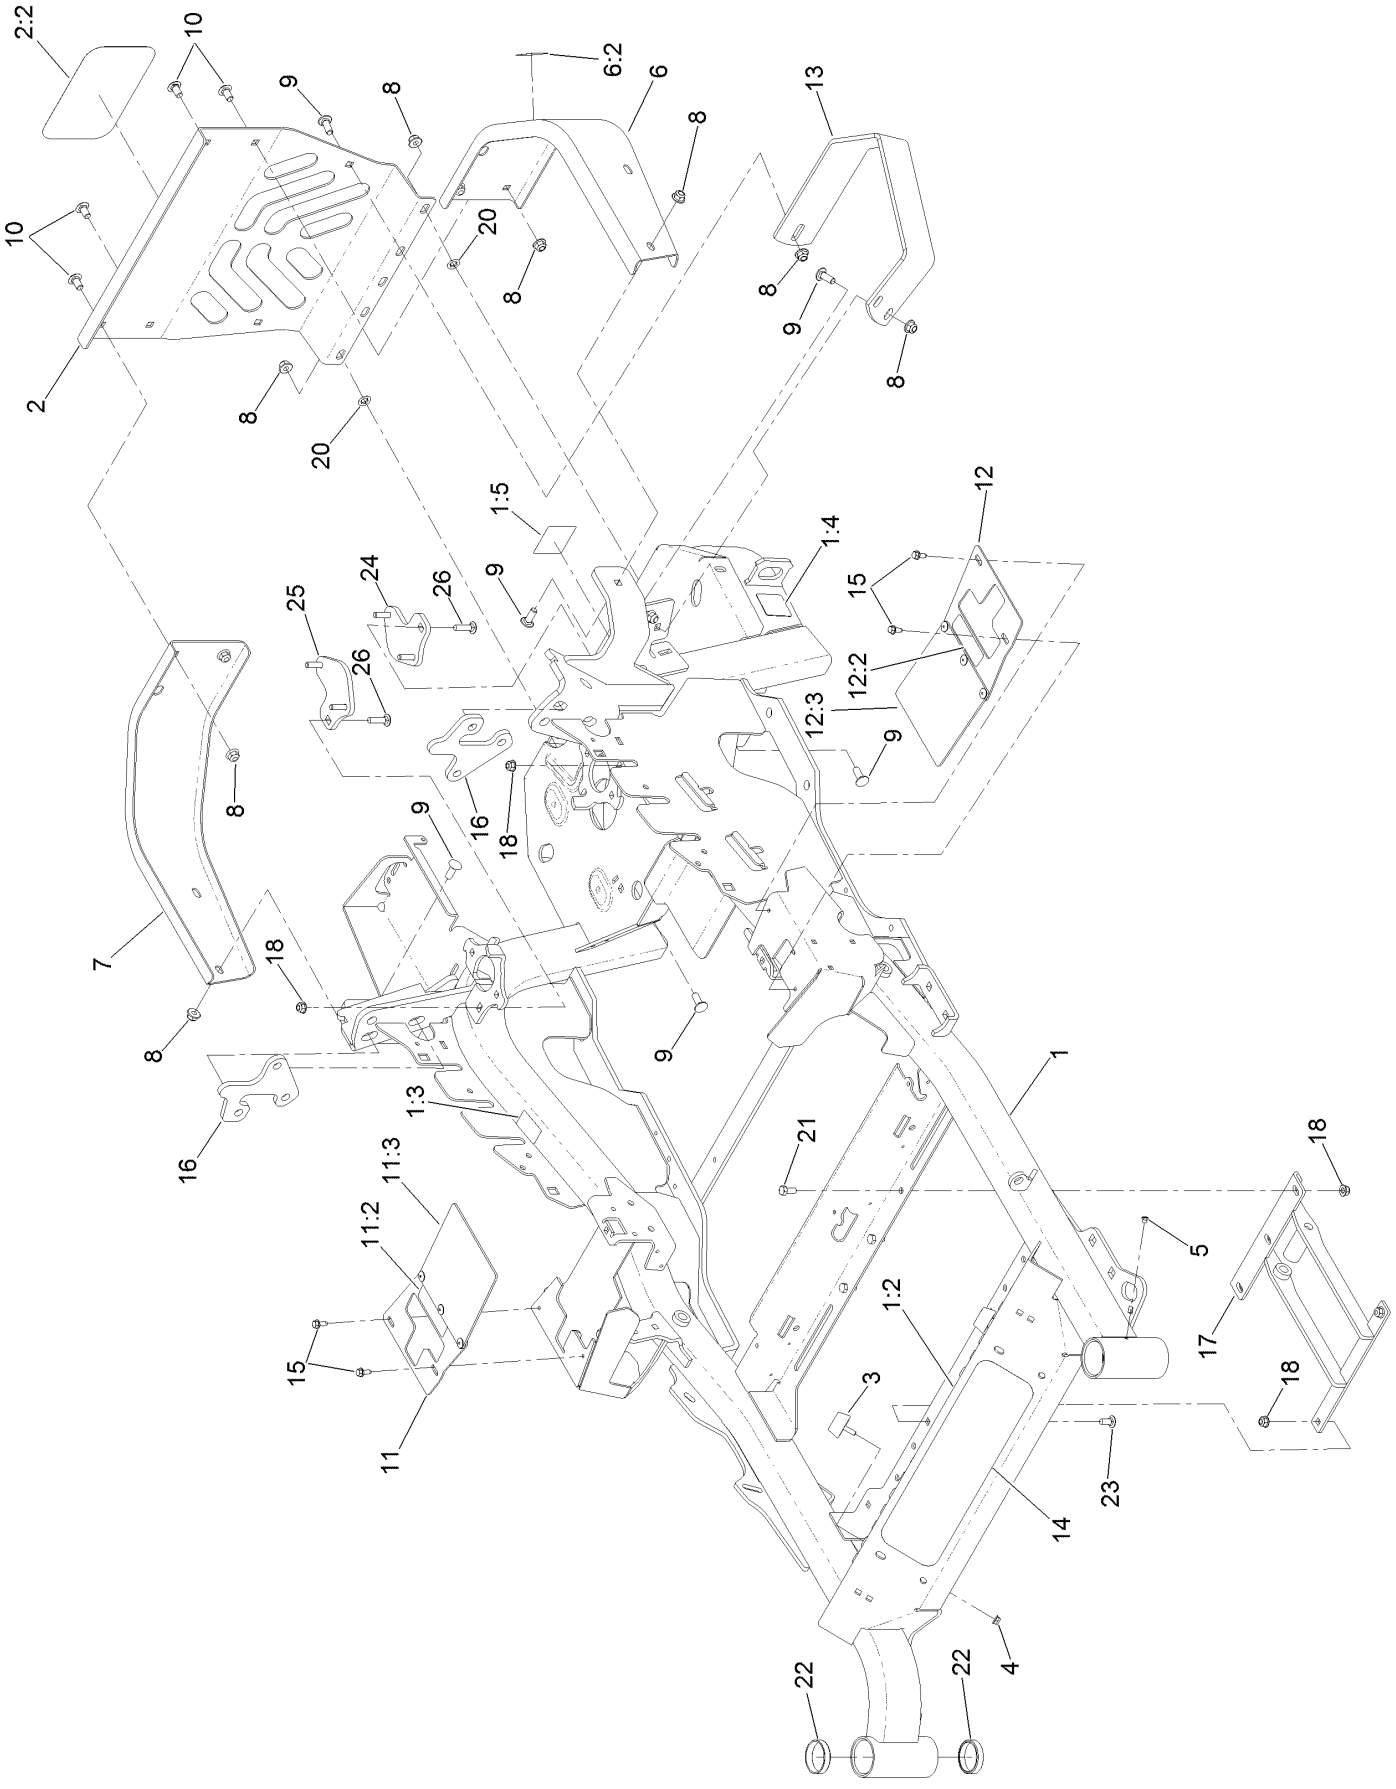

Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	116-5900	1	Mainframe ASM
1:2	132-0871	1	Decal-Danger
1:3	106-5517	2	Decal-Warning
1:4	106-2655	2	Decal-Hazard, Pinched Finger
1:5	116-4858	1	Decal-Spark Arrester
2	115-7410	1	Rear Guard ASM
2:2	67-7320	1	Decal
3	131-8834	2	Bumper
4	104-7201	2	Nut-HF
5	1-811010	2	Plug
6	116-0180	1	LH Bumper ASM
6:2	106-5517	1	Decal-Warning
7	116-0057-03	1	Bumper-RH
8	104-8301	11	Nut-HF, NI
9	3231-22	7	Screw-CARR
10	3231-21	4	Screw-CARR
11	131-4615	1	RH Motion Control Cover ASM
11:2	99-8936	1	Decal-Control, Motion
11:3	136-8967	1	Flap-Rubber
12	131-4610	1	LH Motion Control Cover ASM
12:2	99-8936	1	Decal-Control, Motion
12:3	136-8967	1	Flap-Rubber
13	126-2067-03	1	Guard-Muffler
14	136-5520	1	Decal
15	32144-10	4	Screw-HWH
16	136-1674-01	2	Plate-Mount, Shock
17	131-6327-01	1	Mount-Lower
18	104-8300	7	Nut-HF, NI
20	107-3154	2	Nut-Push
21	322-3	3	Screw-HH
22	1-543508	4	Cup-Bearing
23	3230-23	2	Screw-CARR
24	127-6766	1	LH Plate ASM (W/Studs)
25	127-6765	1	RH Plate ASM (W/Studs)
26	3230-3	2	Screw-CARR


Subframe Assembly

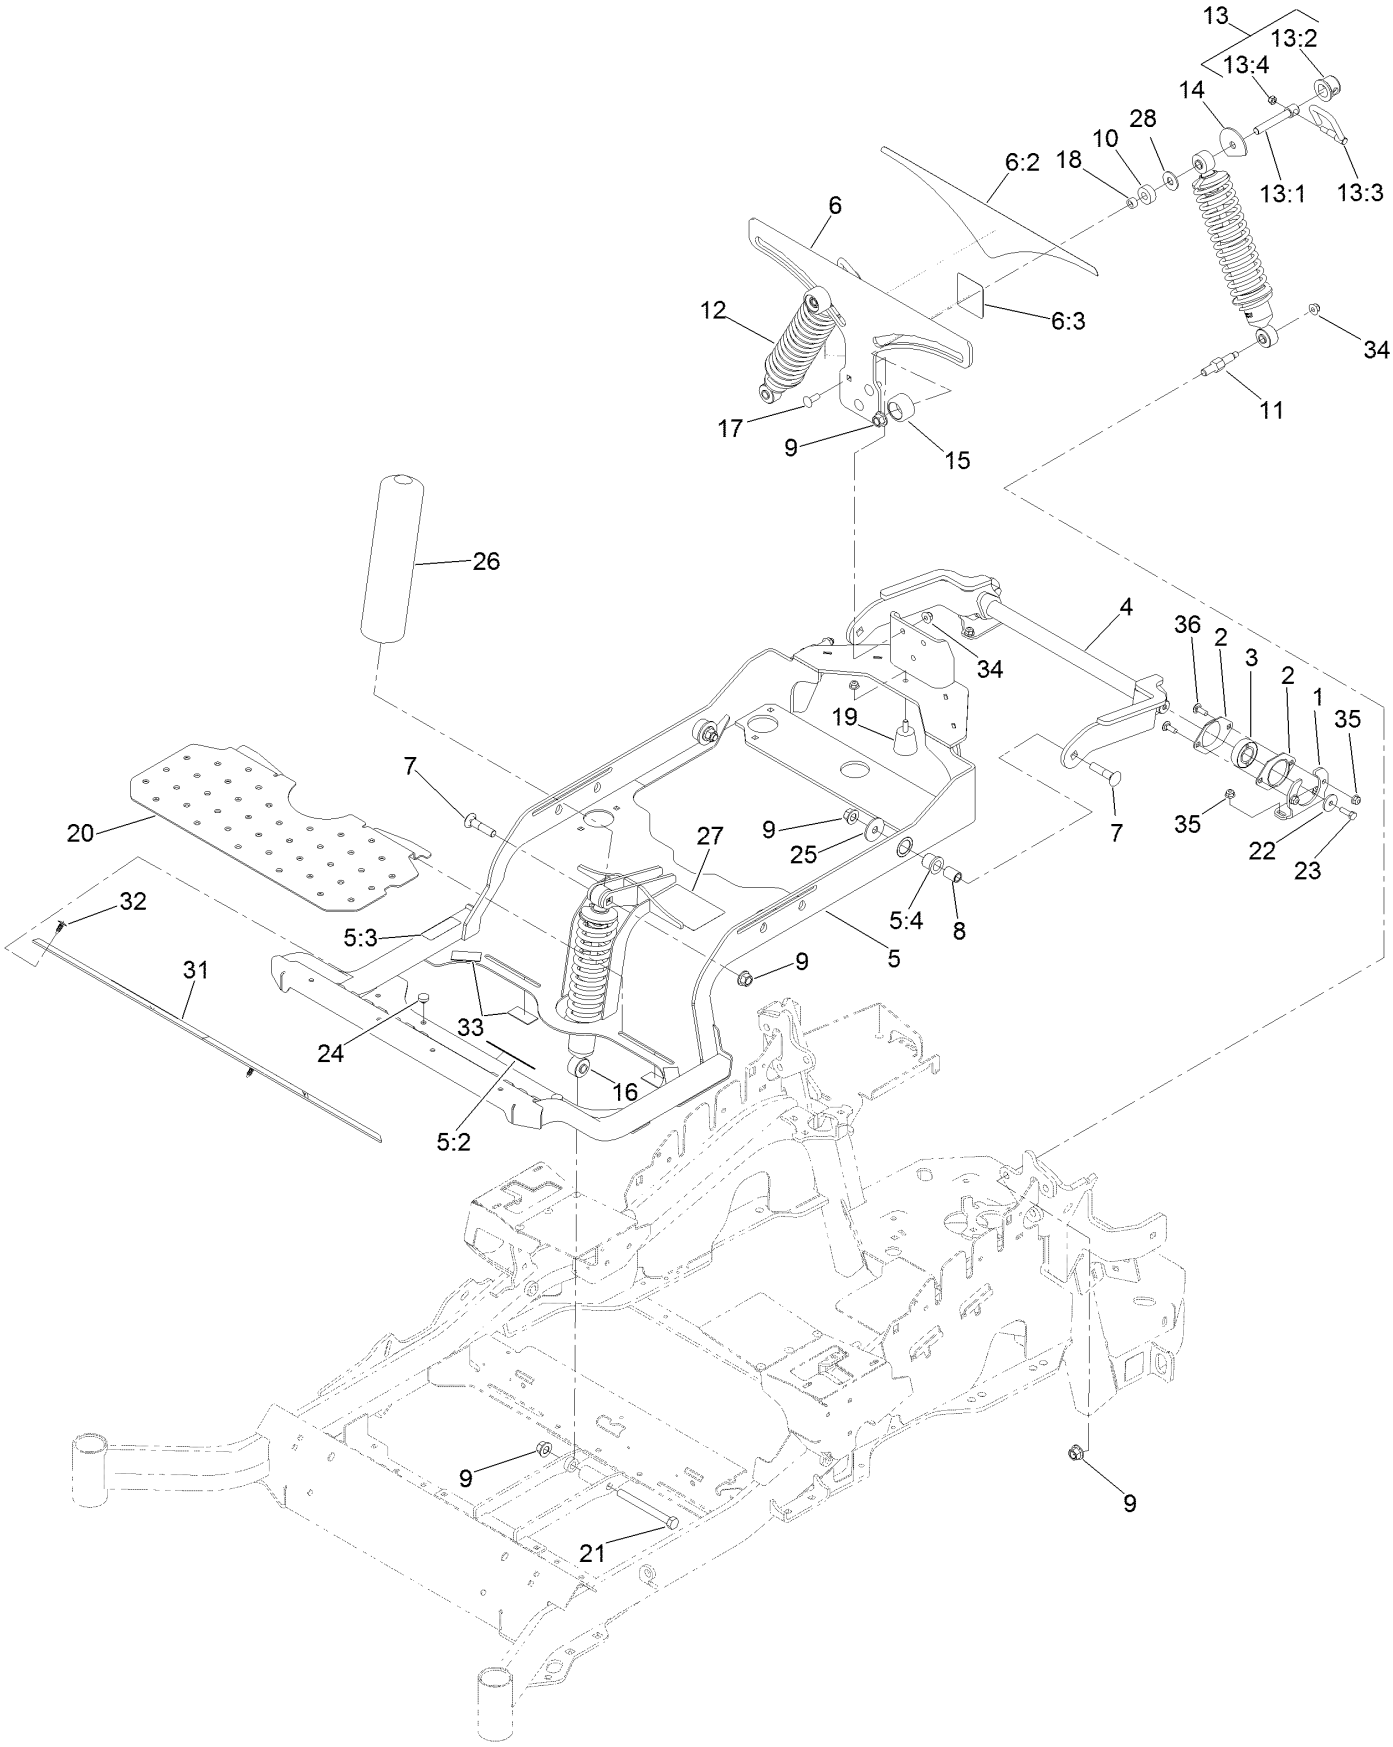

Subframe Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-6759-03	2	Bracket-Bearing
2	127-6743	4	Housing-Bearing, Flange
3	1-653346	2	Bearing
4	127-6754-03	1	Arm-Trailing
5	132-5057	1	Subframe ASM
5:2	132-0871	1	Decal-Danger
5:3	115-9625	1	Decal-Brake, Parking
5:4	127-6745	2	Bushing-Flange
6	133-1808	1	Bracket-Mounting
6:2	132-5067	1	Decal-Adjustment, Ride
6:3	132-5063	1	Decal-Lock, Cam
7	127-6768	3	Screw-CARR
8	127-6751	2	Spacer-Aluminum
9	99-5107	8	Nut-Lock
10	131-8801	2	Spacer
11	131-6348	2	Bolt-Shoulder
12	133-1815	2	Shock/Spring ASM
13	131-8843	2	Cam Lock ASM
13:1	131-8841	1	Shaft-Lock
13:2	107-1644	1	Cap-Lock
13:3	131-8840	1	Cam Lock Lever ASM
13:4	119-4038	1	Nut-Hex
14	131-4646	2	Plate-Stop
15	131-4647	2	Knob-Front
16	136-1719	1	Shock ASM-Front
16	136-8993	1	Shock/Spring ASM
17	3231-22	3	Screw-CARR
18	47-7270	2	Bearing-Needle
19	132-5058	1	Bumper-Rubber
20	132-5089-01	1	Floorpan
21	325-19	1	Screw-HH
22	105-3048	2	Washer-Flat
23	116-0648	2	Screw-HH, Thread Locking
24	1-513658	2	Bumper
25	86-1990	2	Washer-Thrust
26	132-5068	1	Cover-Shock
27	125-9383	1	Decal-Service Aid
28	3256-6	2	Washer-Flat
31	133-1810	1	Mat-Floor
32	117-2382	2	Plug-Plastic
33	130-0733	4	Pad-Rubber
34	104-8301	5	Nut-HF, NI
35	104-8300	9	Nut-HF, NI
36	3230-10	4	Bolt-CARR


Roll-Over Protection System Assembly

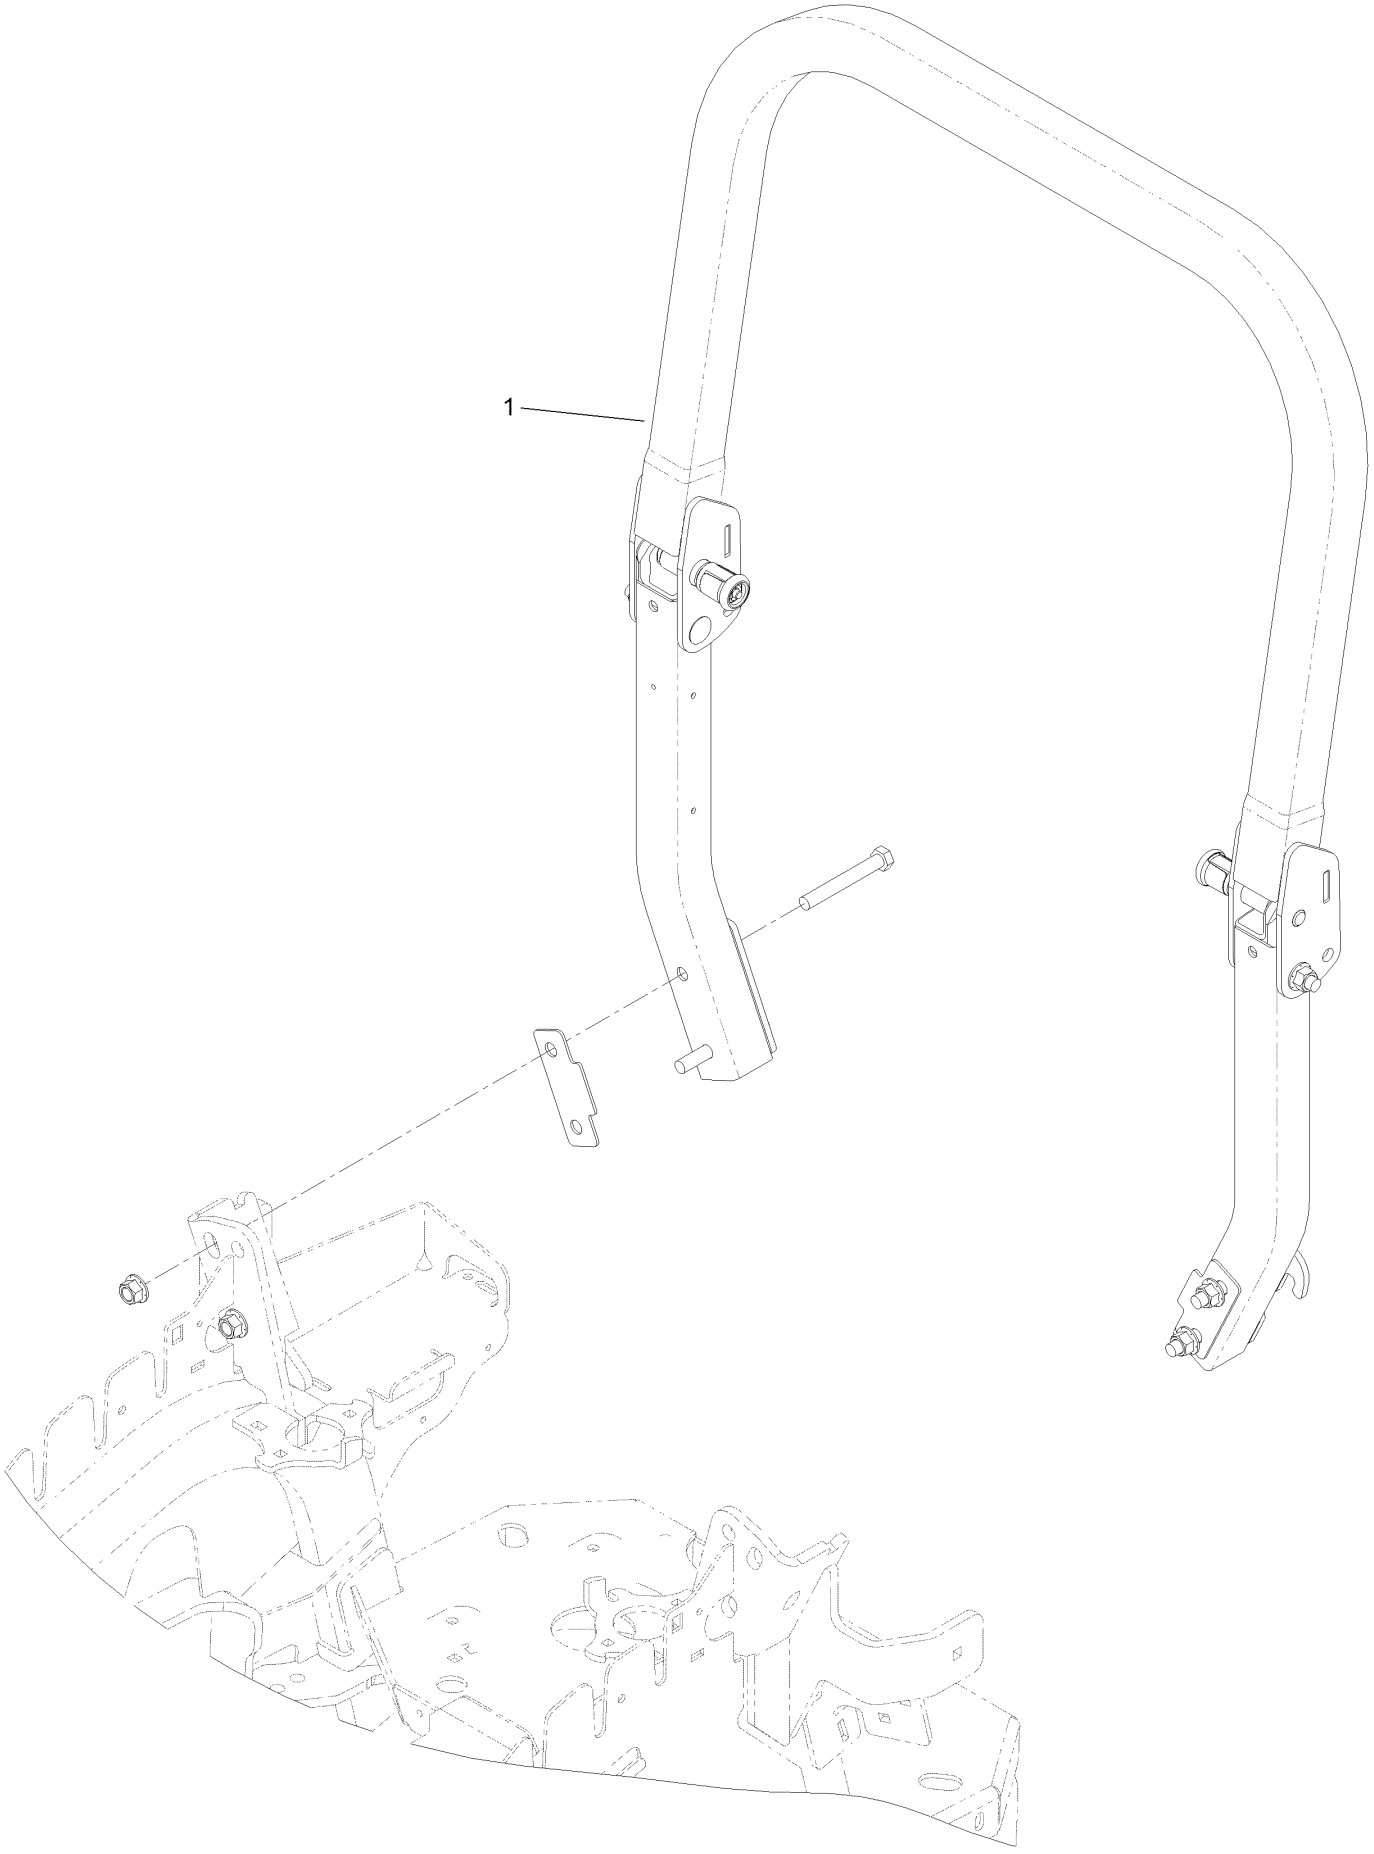

Roll-Over Protection System Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	116-0231	1	ROPS ASM

Roll-Over Protection System Assembly No. 116-0231

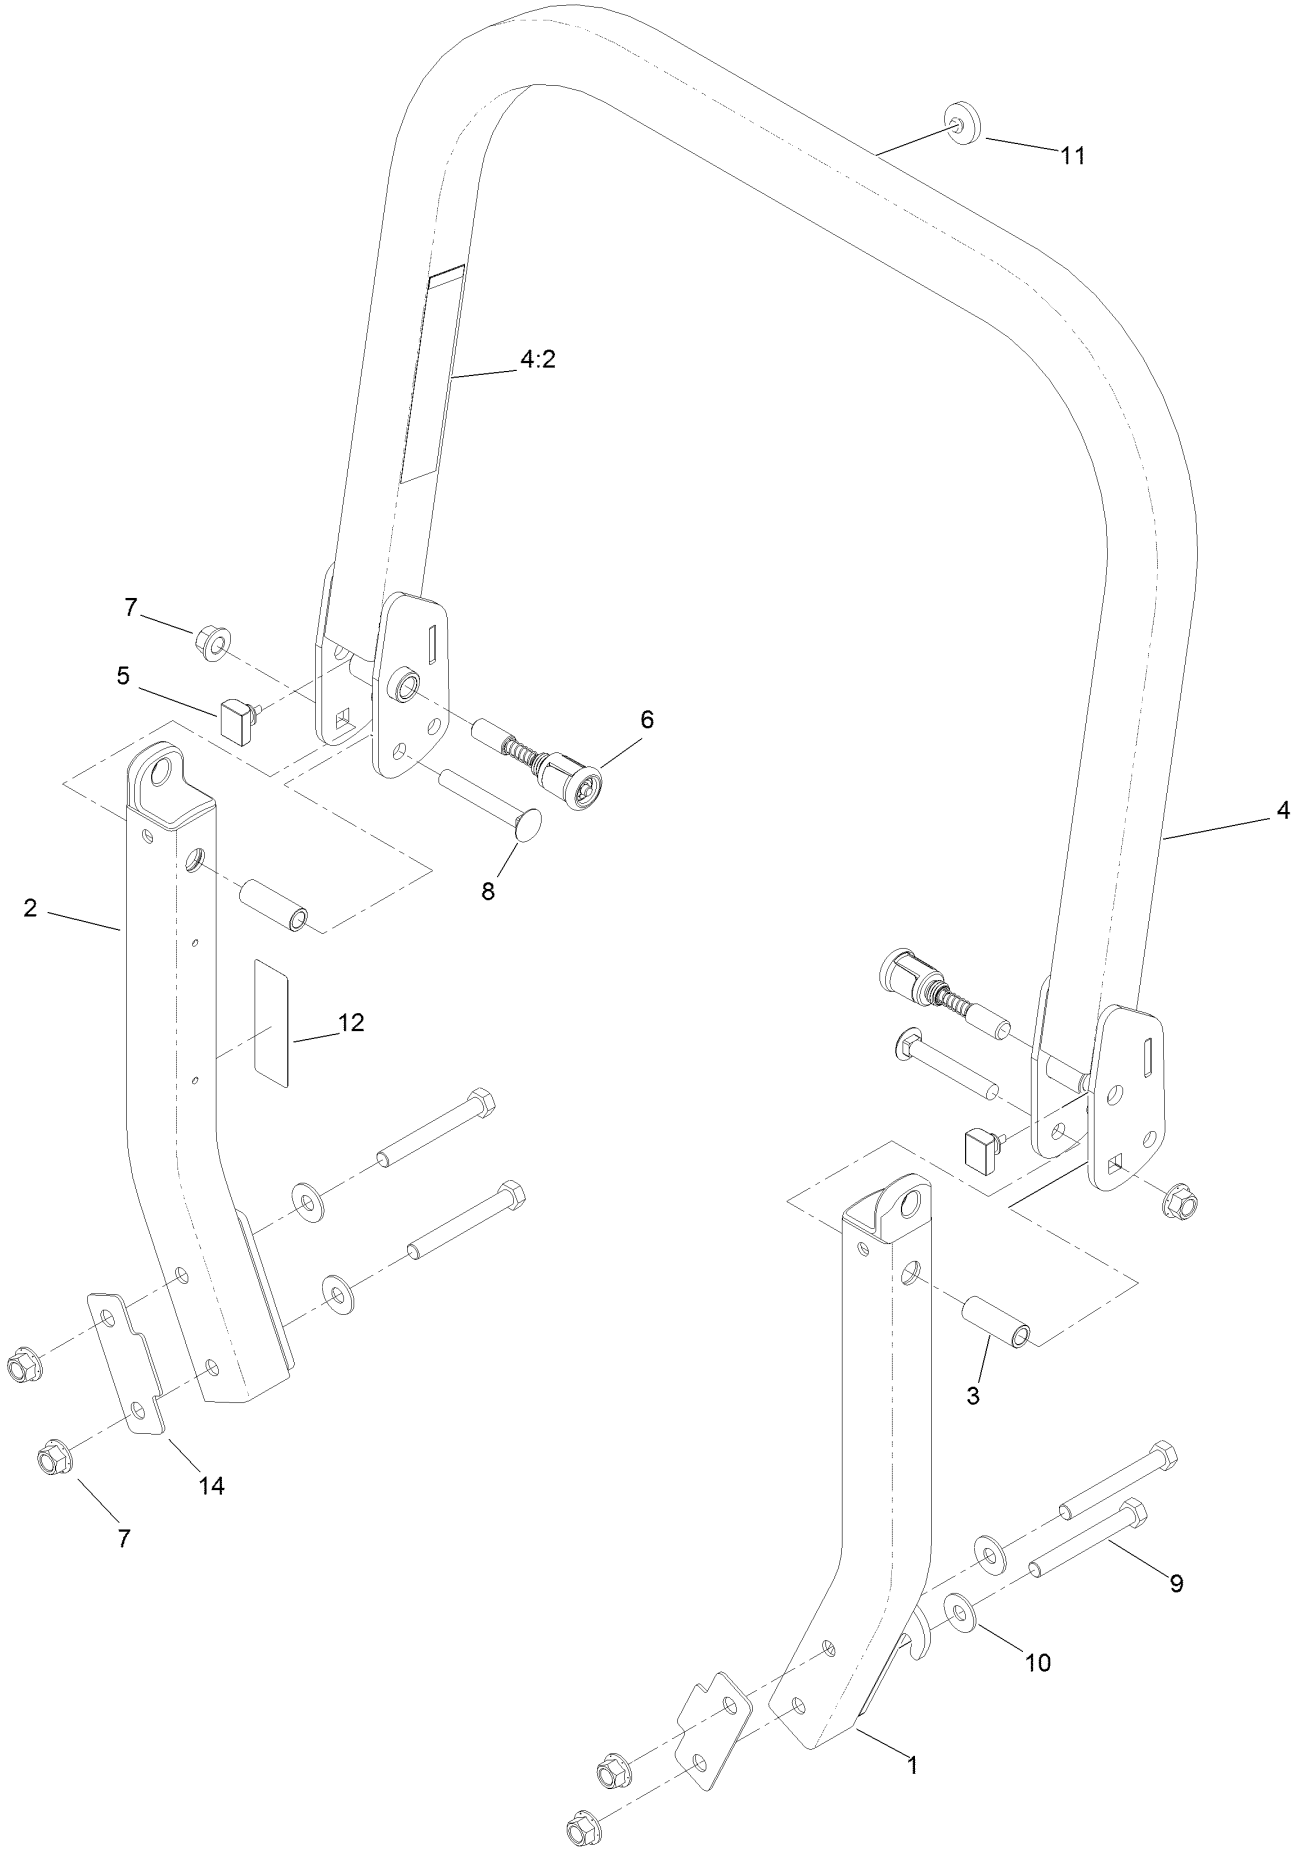


Roll-Over Protection System Assembly No. 116-0231 (continued)

Ref.	Part Number	Qty.	Description
1		1	Leg-ROPS, LH ●
2		1	Leg-ROPS, RH ●
3	109-6653	2	Spacer
4		1	Upper ROPS ASM ●
4:2	107-3069	1	Decal-Warning
5	109-5337	2	Bumper-ROPS
6	116-0104	2	Pin-Spring
7	99-5107	6	Nut-Lock
8	3233-10	2	Screw-CARR
9	325-35	4	Screw-HH
10	109-9505	4	Washer-Spring
11	109-9233	1	Bumper-Push-In, Rubber
12	117-0346	1	Decal-Caution, Fuel Vent
14	116-0960	2	Spacer

● Not serviced separately

Front Caster and Fork Assembly

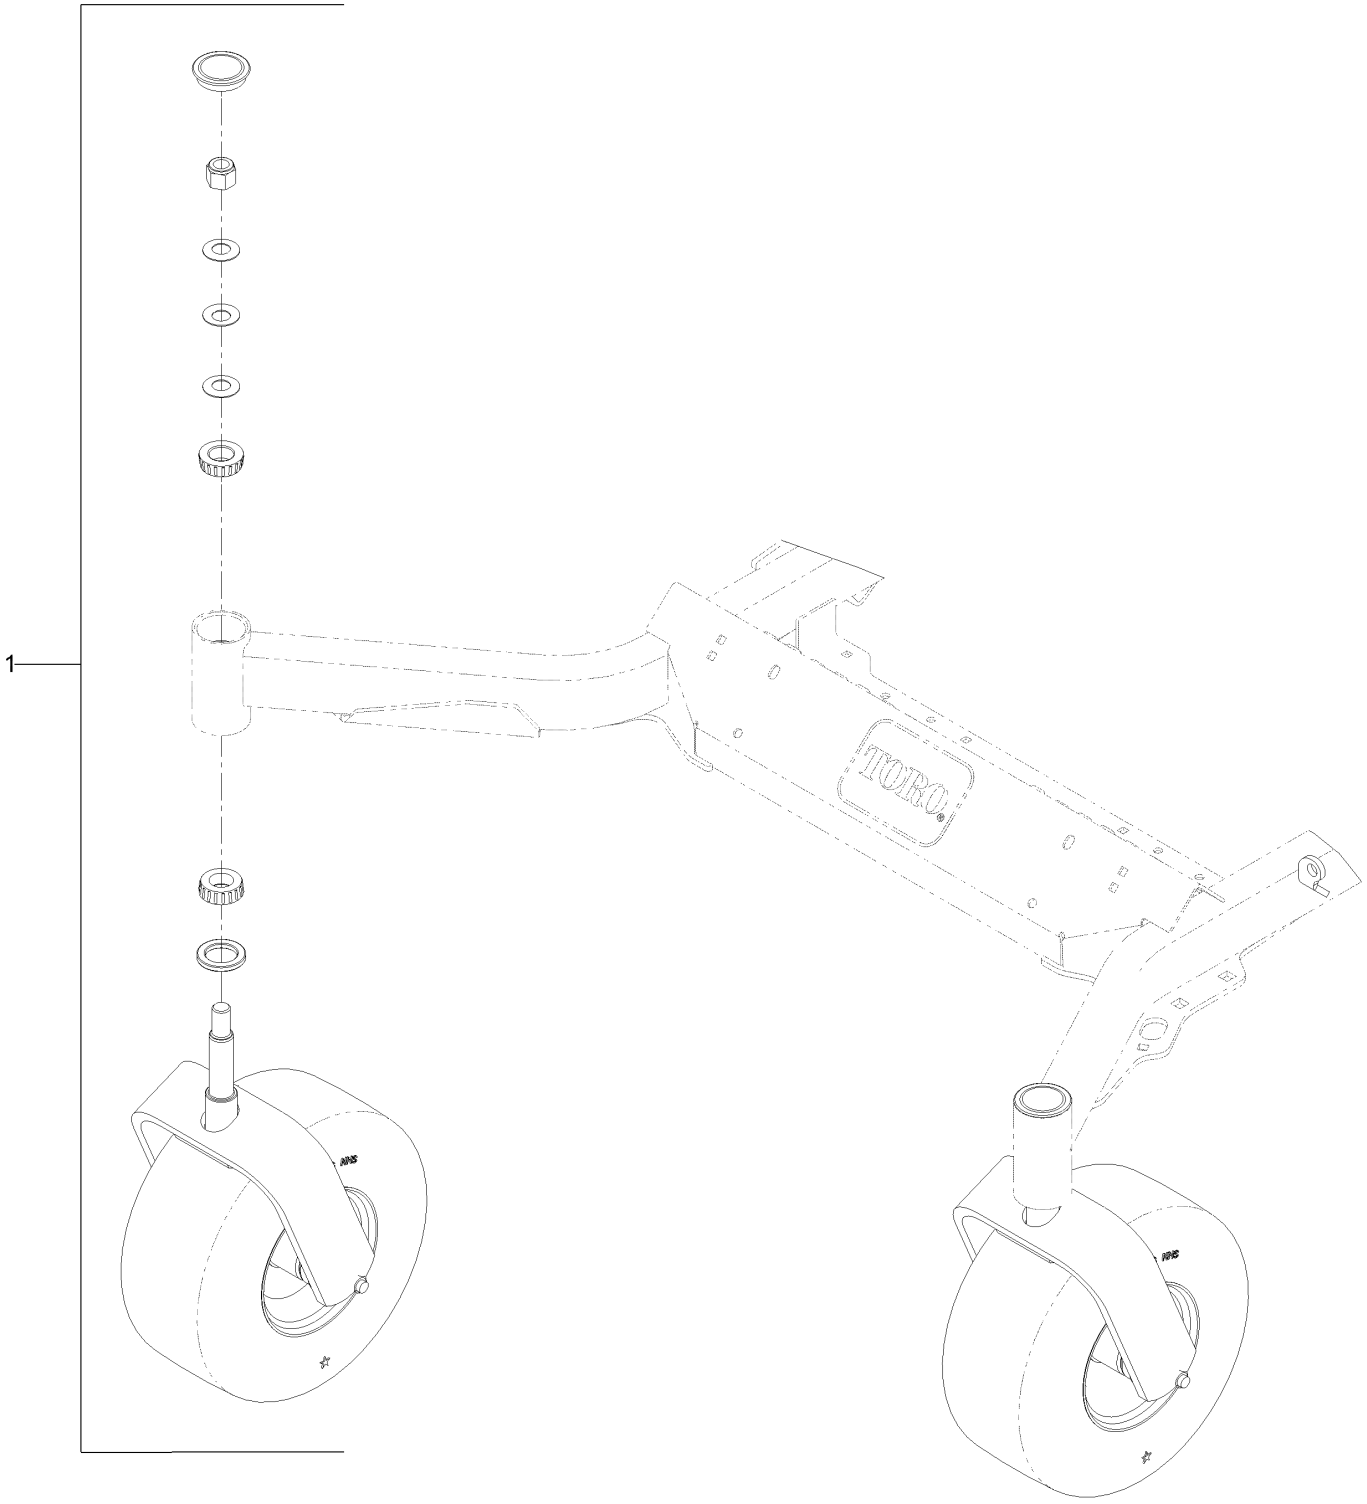


Front Caster and Fork Assembly (continued)

Ref.	Part Number	Qty.	Description
1		2	Caster Wheel ASM ●

● Not serviced separately

Caster Wheel and Fork Assembly

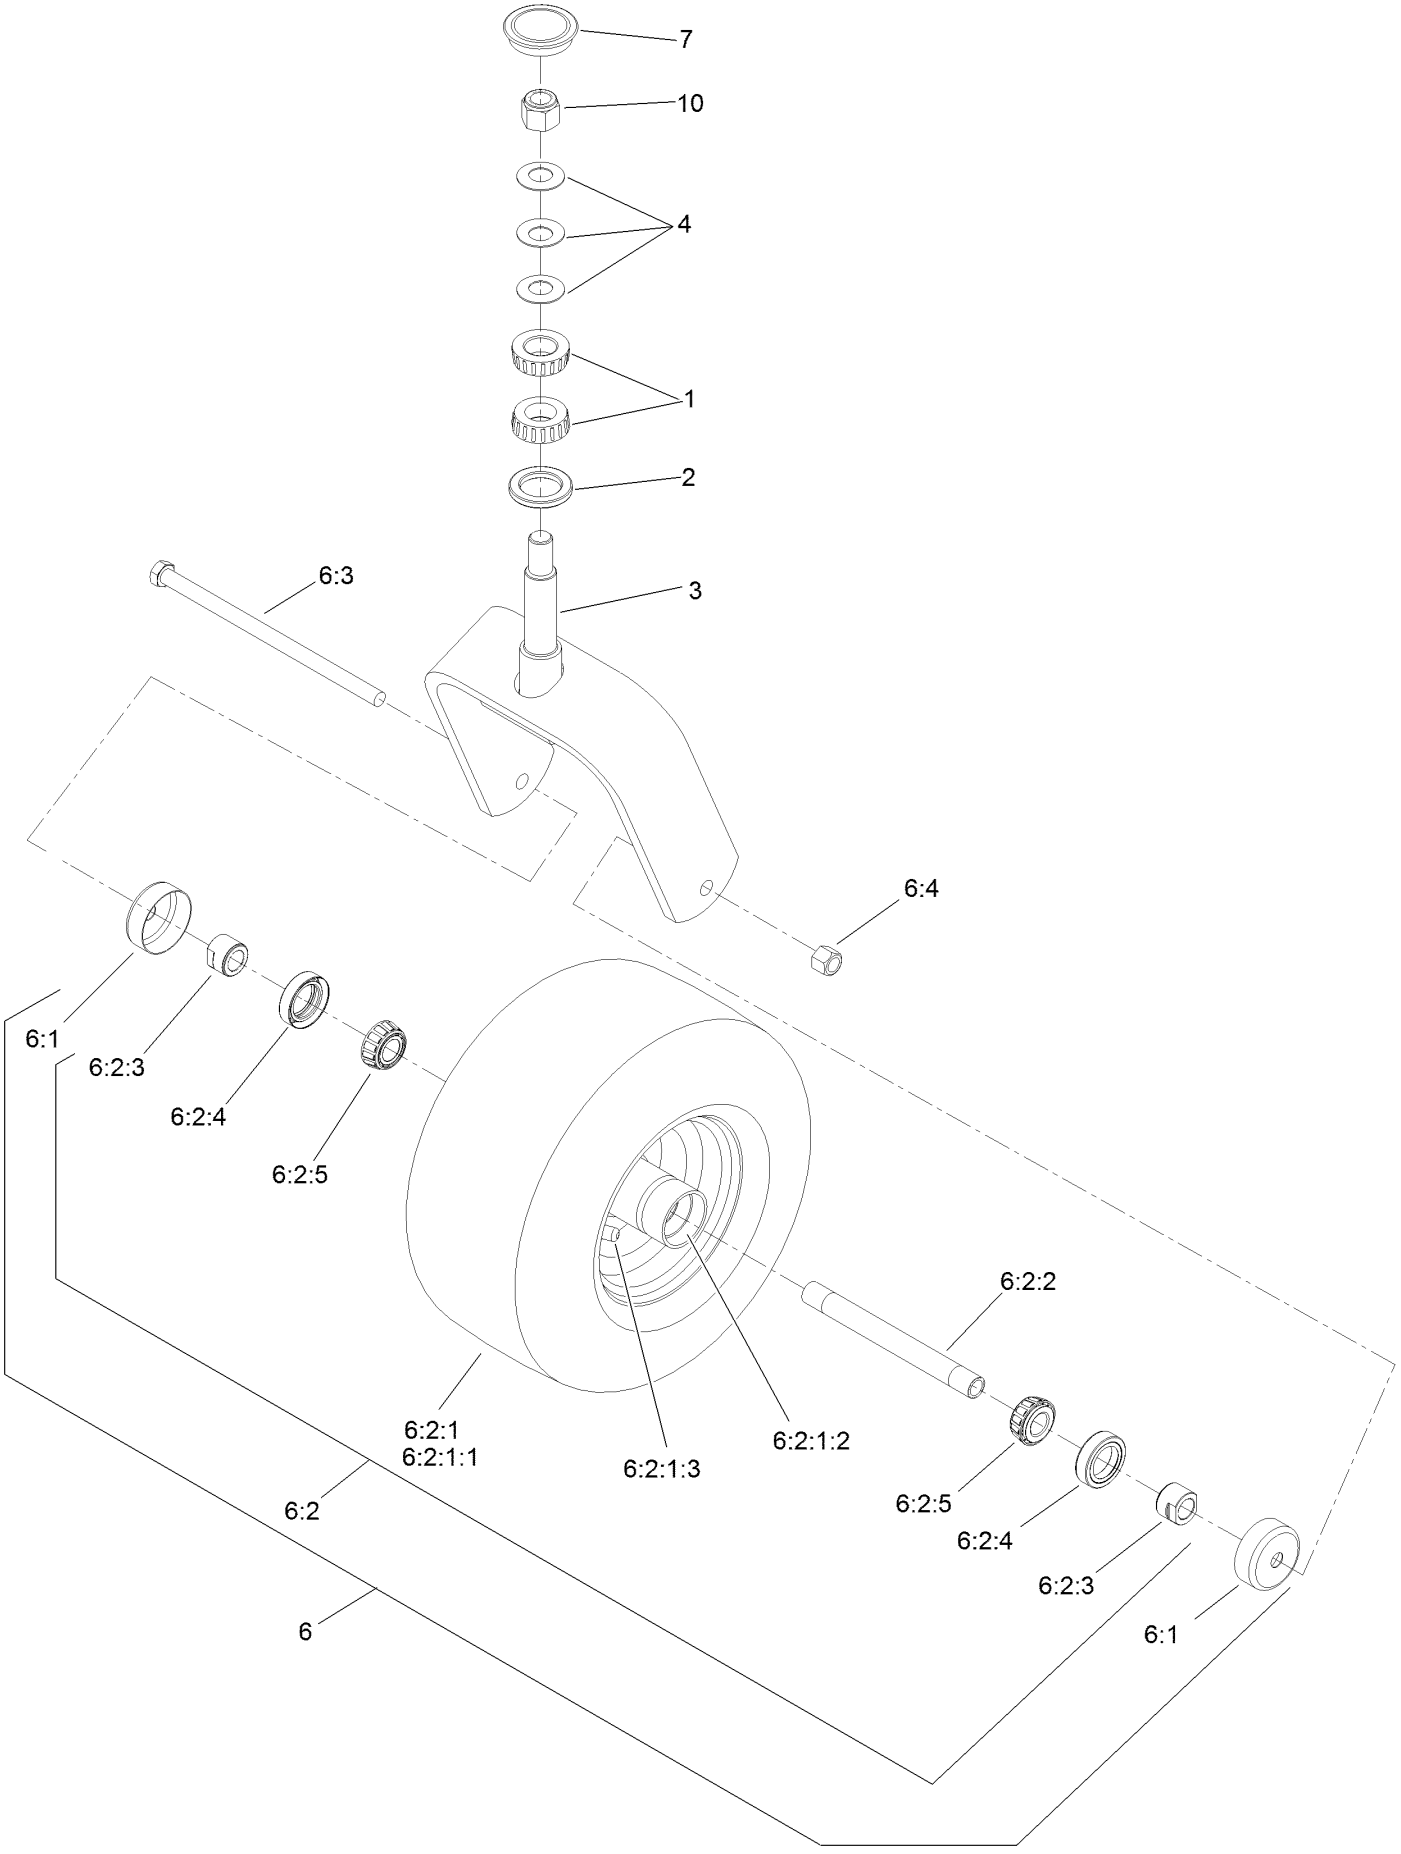

Caster Wheel and Fork Assembly (continued)

Ref.	Part Number	Qty.	Description
1	1-543509	2	Bearing-Roller, Tapered
2	116-5647	1	Seal-Grease
3	116-6707-01	1	Caster
4	1-633508	3	Washer-Bellville
6	127-9540	1	Wheel And Axle ASM
6:1	103-2768	2	Guard-Seal
6:2		1	Wheel And Bearing ASM ●
6:2:1		1	Wheel And Tire ASM ●
6:2:1:1	1-523009	1	Tire
6:2:1:2	1-633584	2	Bearing-Cup
6:2:1:3	5108	1	Valve
6:2:2	126-5361	1	Axle Caster ASM
6:2:3	103-3051	1	Spacer-Nut
6:2:4	103-0063	2	Seal-Caster
6:2:5	1-633585	2	Bearing-Cone, Taper
6:3	325-39	1	Screw-HH
6:4	3296-23	1	Nut-Lock, NI
7	103-4882	1	Cap-Grease
10	3296-51	1	Nut-Lock, NI

● Not serviced separately

Hydraulic Drive Assembly




Hydraulic Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
1	116-1255	1	Pump Idler ASM
2	109-6658	1	Nut-Flange, NI
3	126-1327	1	LH Hydro ASM (12Cc No Fan)
4	116-1953	1	Belt-V
5	116-6317	1	Spring-Extension
6	116-7558	1	Cradle-Hydro
7	116-1502	1	Bolt-Shoulder, Carriage
8	126-0095	6	Screw-CARR
9	99-5107	6	Nut-Lock
10	325-8	4	Screw-HH
11	126-1328	1	RH Hydro ASM (12Cc No Fan)
12	116-2999-01	1	Guard-Belt
13	116-1946	1	Sheave-Pump, Drive
14	1-807259	1	Key
99	114-4713	1	Hypr-Oil 500 (Quart) ●
99	114-4714	1	Hypr-Oil 500 (Gallon) ●
99	114-4715	1	Hypr-Oil 500-5 (5 Gallon) ●
99	117-0390	1	Filter-Hydro ●

● Not illustrated


Pump Idler Assembly No. 116-1255

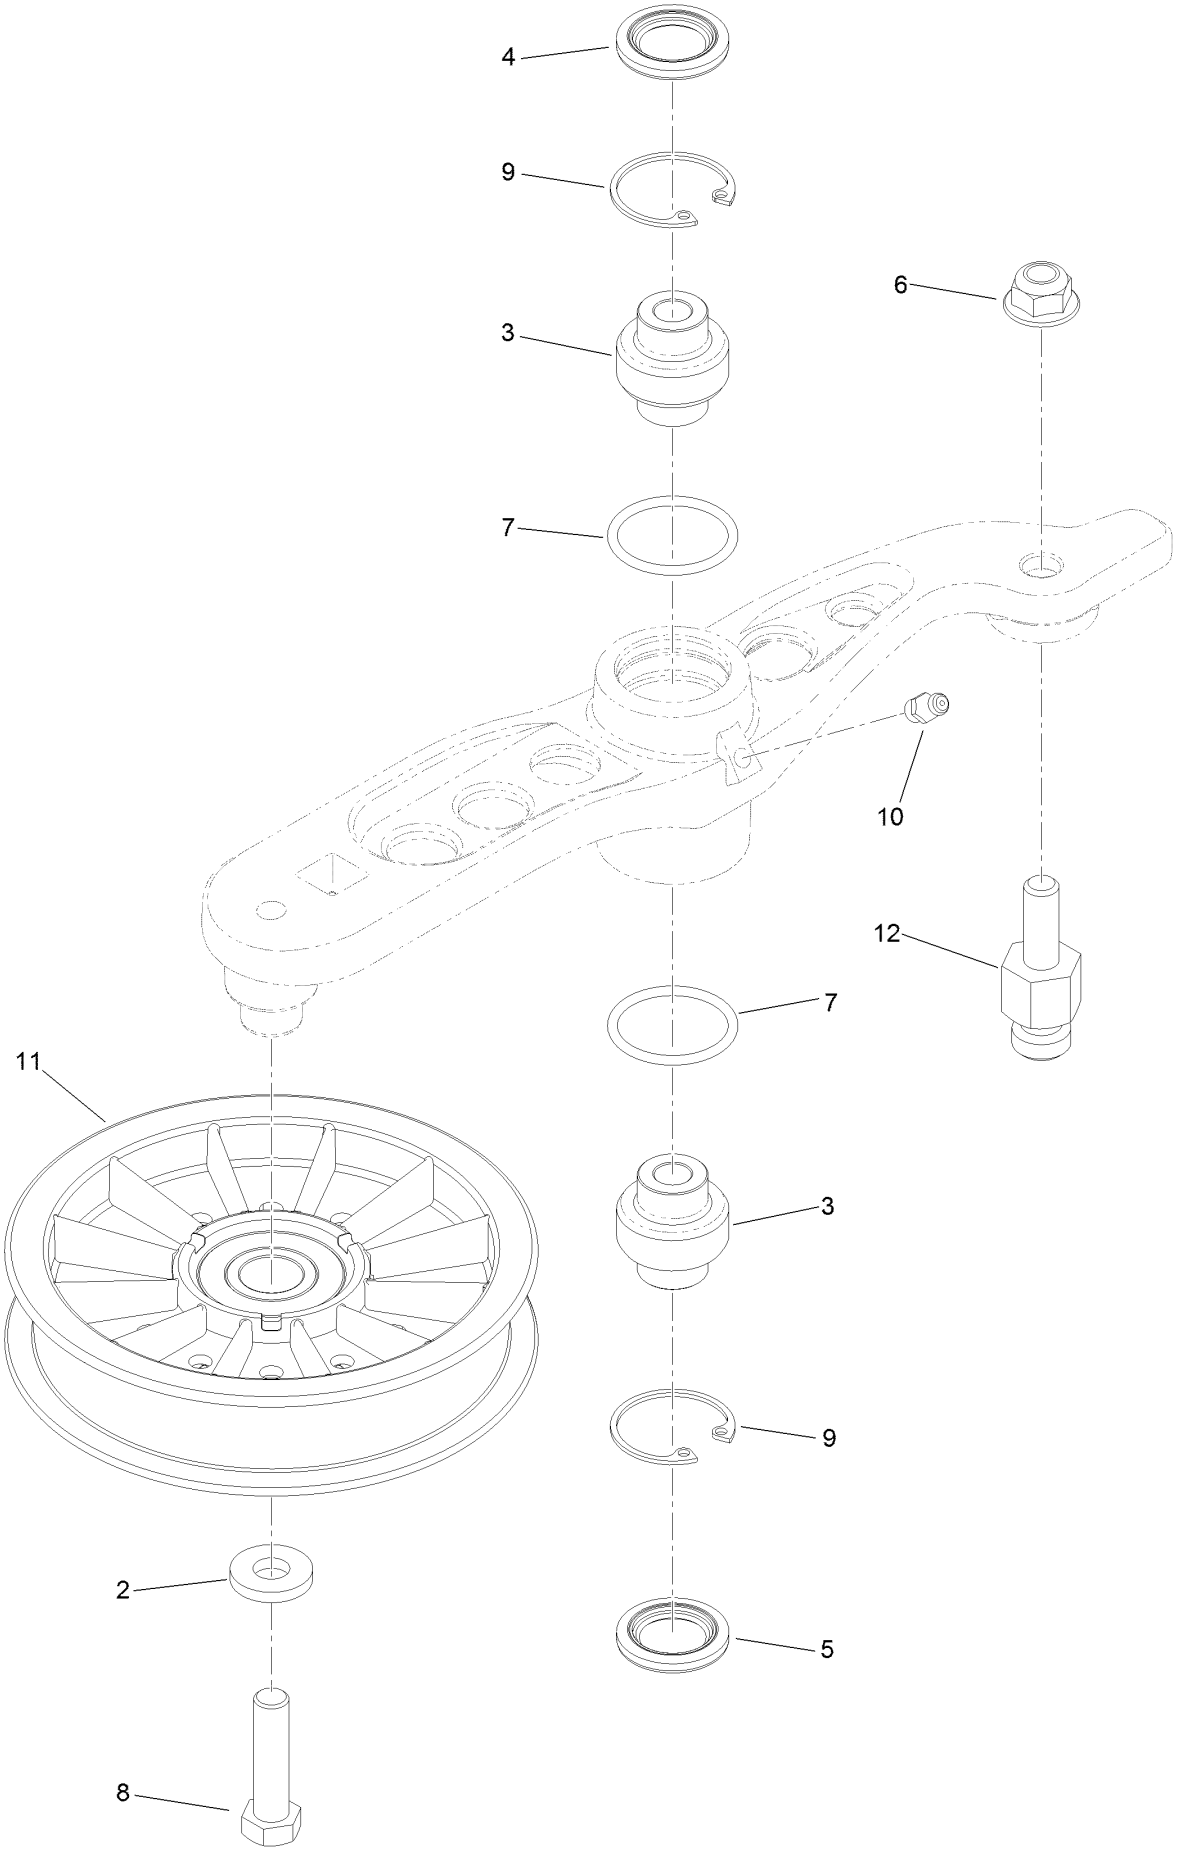

Pump Idler Assembly No. 116-1255 (continued)

Ref.	Part Number	Qty.	Description
2	43-0940	1	Spacer
3	103-3504	2	Bearing-Spherical
4	103-3505	1	Seal-Lip, Double
5	103-3506	1	Seal-Lip, Single
6	109-6658	1	Nut-Flange, NI
7	106-7159	2	O-Ring
8	323-8	1	Screw-HH
9	32120-10	2	Ring-Snap
10	302-19	1	Fitting-Grease
11	109-8076	1	Pulley-Idler
12	132-4724	1	Pin-Anchor, Spring

LH Hydro Assembly No. 126-1327

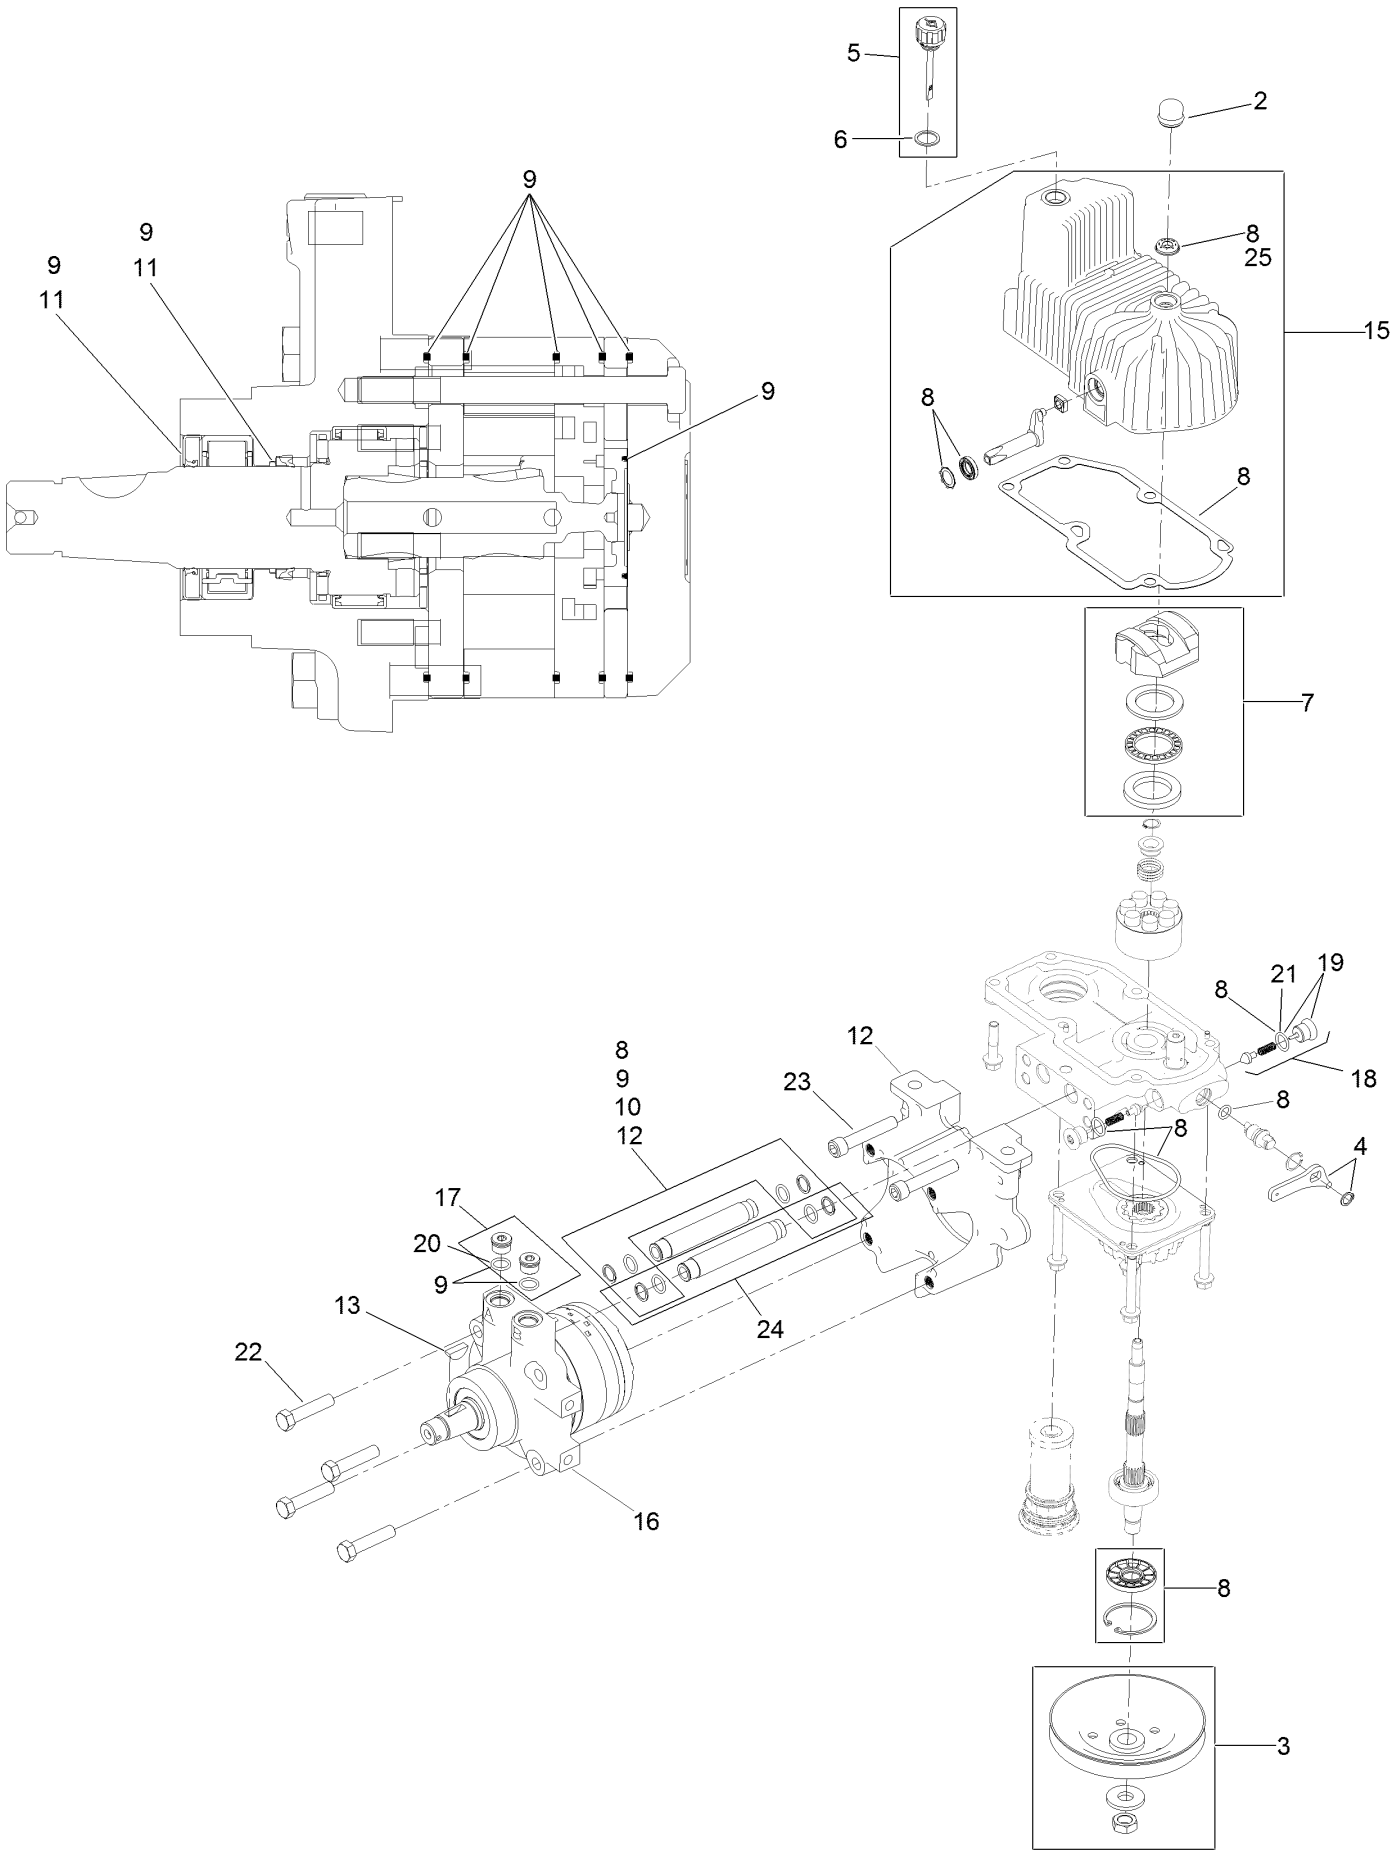


LH Hydro Assembly No. 126-1327 (continued)

Ref.	Part Number	Qty.	Description
2	116-3052	1	Cover-Shaft, Hydro
3	116-0234	1	Pulley Kit
4	116-0235	1	Handle-Bypass Valve, Hydro
5	116-0236	1	Dipstick-Hydro W/Gasket
6	116-0237	1	Gasket-Dipstick, Hydro
7	116-1367	1	Swash Block Kit
8	116-1368	1	Pump Seal Kit
9	116-1369	1	Motor Seal Kit
10	116-1370	1	Tube Seal Kit
11	116-1371	1	Output Shaft Seal Kit
12	116-5469	1	Nose Cup-Uht
13	3257-42	1	Key-Woodruff
15	116-3287	1	Housing-LH
16	116-8915	1	Motor-Hydraulic LH 240Cc
17	116-7901	1	Magnetic Plugs Service Kit
18	116-1630	2	Check Valve ASM
19	116-1631	2	Plug-Check (W/O-Ring)
20	76-1900	2	O-Ring
21	116-8662	2	O-Ring-Check Valve
22	116-8974	4	Screw HH
23	116-8975	2	Screw-HSH
24	116-9922	2	Hydraulic Tube Kit
25	126-7711	1	Seal-Fan Drive
99	116-4245	1	Puller-Pulley ●
99	116-1373	1	Flow Test Kit ●

● Not illustrated

RH Hydro Assembly No. 126-1328

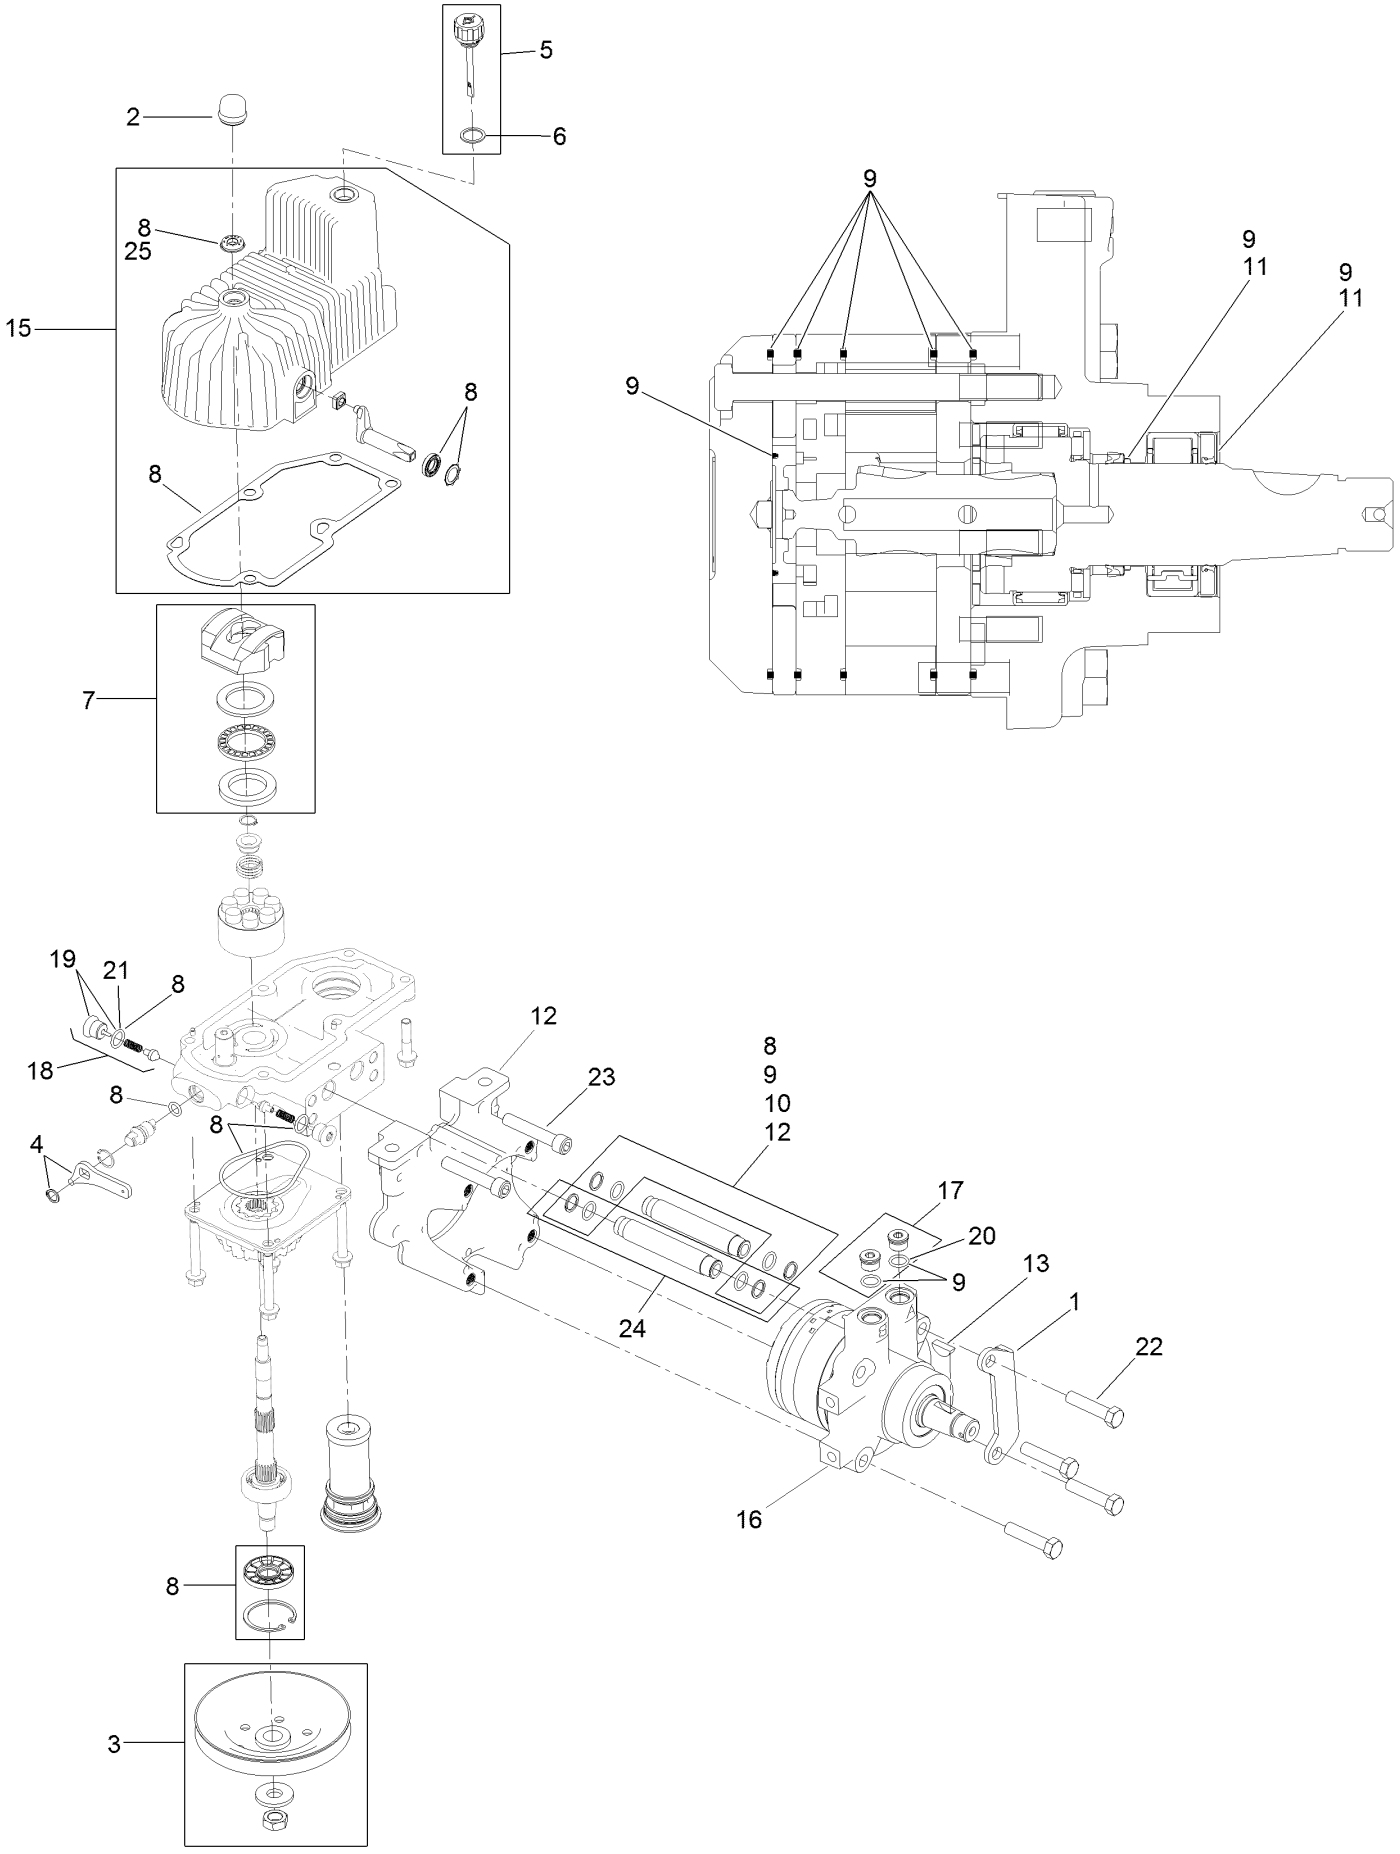


RH Hydro Assembly No. 126-1328 (continued)

Ref.	Part Number	Qty.	Description
1	116-9063	1	Mount-Shoe, Horse
2	116-3052	1	Cover-Shaft, Hydro
3	116-0234	1	Pulley Kit
4	116-0235	1	Handle-Bypass Valve, Hydro
5	116-0236	1	Dipstick-Hydro W/Gasket
6	116-0237	1	Gasket-Dipstick, Hydro
7	116-1367	1	Swash Block Kit
8	116-1368	1	Pump Seal Kit
9	116-1369	1	Motor Seal Kit
10	116-1370	1	Tube Seal Kit
11	116-1371	1	Output Shaft Seal Kit
12	116-5469	1	Nose Cup-Uht
13	3257-42	1	Key-Woodruff
15	116-3288	1	Housing-RH
16	116-8916	1	Motor-Hydraulic RH 240Cc
17	116-7901	1	Magnetic Plugs Service Kit
18	116-1630	2	Check Valve ASM
19	116-1631	2	Plug-Check (W/O-Ring)
20	76-1900	2	O-Ring
21	116-8662	2	O-Ring-Check Valve
22	116-8974	4	Screw HH
23	116-8975	2	Screw-HSH
24	116-9922	2	Hydraulic Tube Kit
25	126-7711	1	Seal-Fan Drive
99	116-4245	1	Puller-Pulley ●
99	116-1373	1	Flow Test Kit ●

● Not illustrated


Rear Wheel Assembly

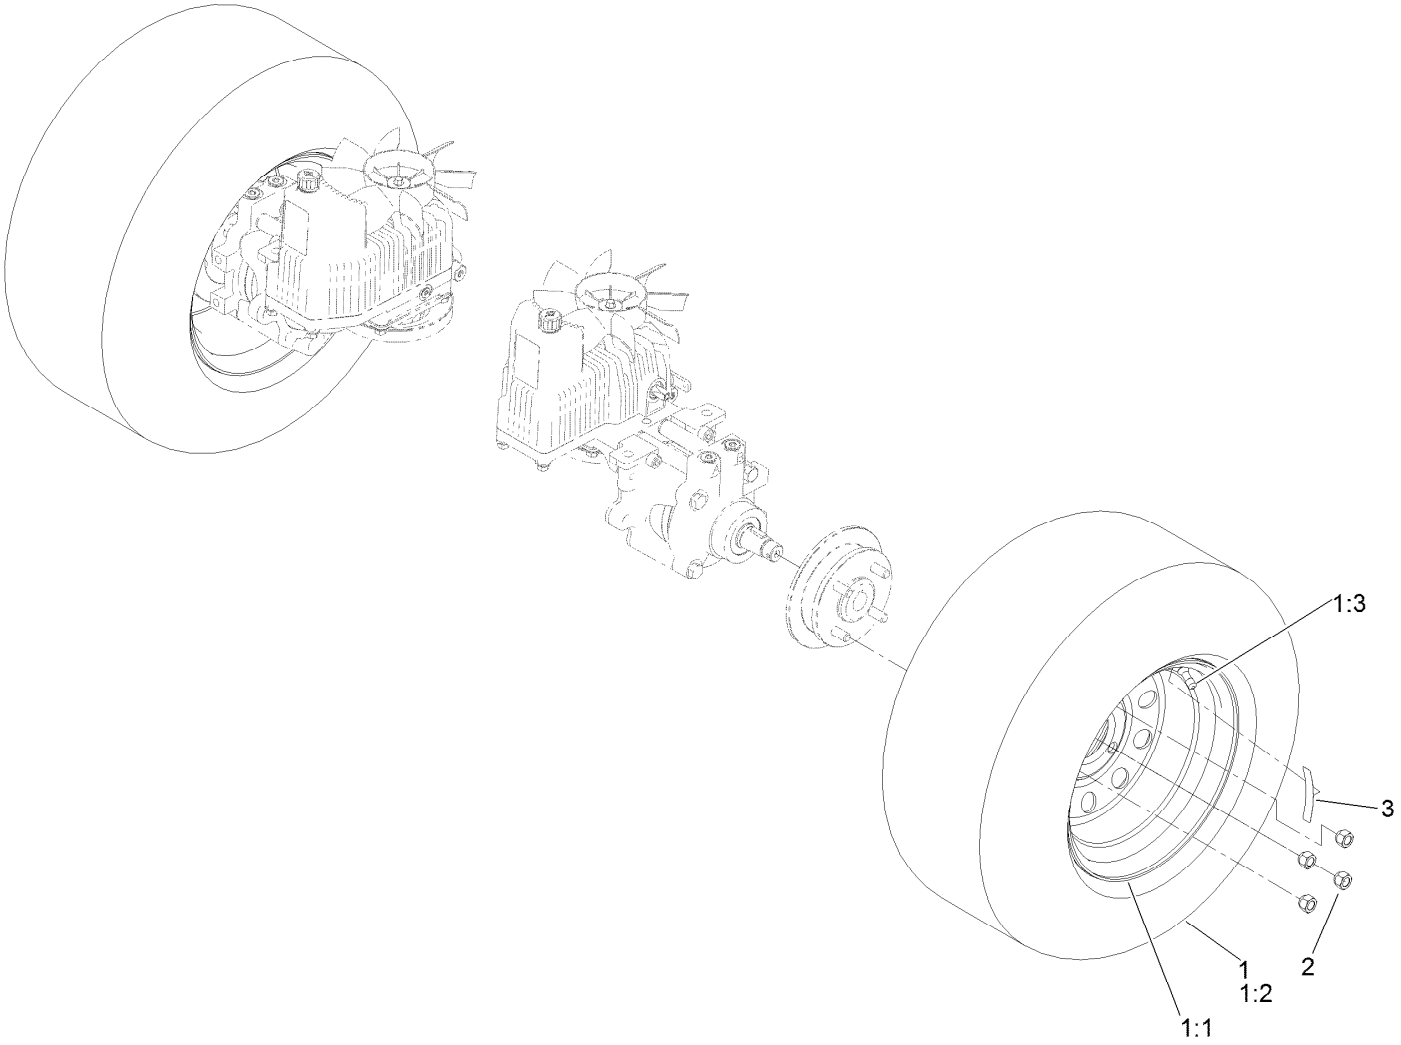

Rear Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-9514	2	Wheel And Tire ASM
1:1	127-9515	1	Wheel
1:2	1-653160	1	Tire
1:3	232-27	1	Stem-Valve
2	242-50	8	Nut-Lug
3	126-2055	2	Decal-Torque, Wheel Hub Lug


Park Brake Assembly

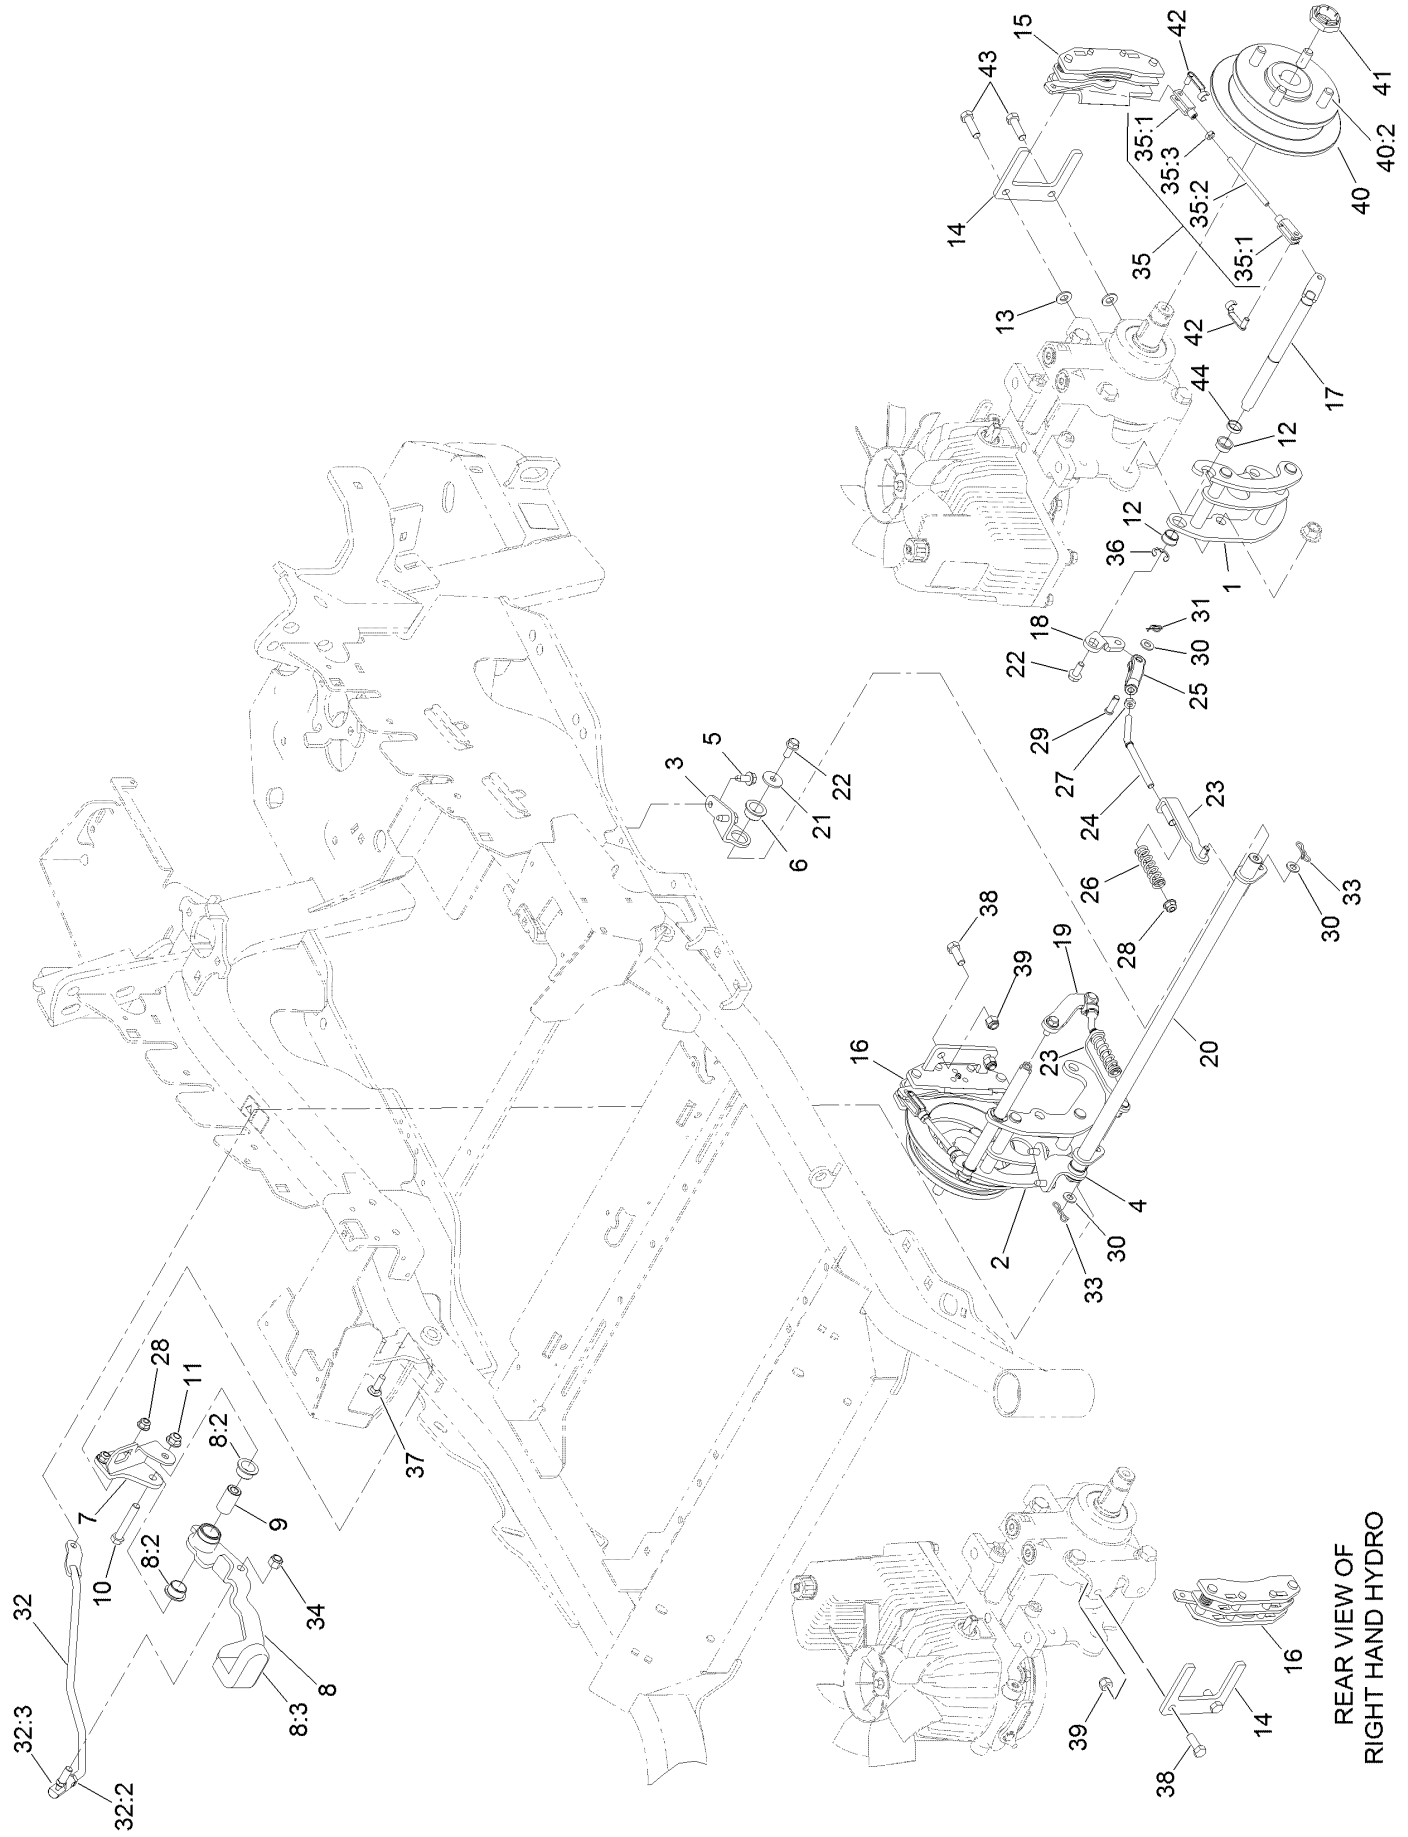

Park Brake Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-4248	1	Mount-Bellcrank, LH
2	126-4249	1	Mount-Bellcrank, RH
3	116-9681	1	Mount-Pivot, LH
4	116-9682	1	Mount-Pivot, RH
5	32144-70	4	Screw-HWHTF
6	109-8054	2	Bushing-Flange
7	116-9096-01	1	Bracket-Mount
8	131-4623	1	Brake Lever ASM W/ Grip
8:2	109-8054	2	Bushing-Flange
8:3	132-4749	1	Grip-Lever
9	116-9117	1	Handle-Pivot, Brake
10	323-11	1	Screw-HH
11	104-8301	1	Nut-HF, NI
12	126-6199	4	Bushing
13	3256-24	2	Washer-Flat
14	109-0958	2	Plate-Mount, Brake
15	109-2889	1	Caliper-Brake
16	116-9103	1	Caliper-Brake, RH
17	126-4251	2	Bellcrank
18	126-3715	1	Arm-Inner, LH
19	126-3716	1	Arm-Inner, RH
20	116-9080	1	Shaft-Cross
21	115-7109	2	Washer-Flat
22	98-9940	4	Screw
23	116-9608	2	Bracket-L
24	116-9086	2	Linkage-Mid
25	126-3693	2	Yoke-Offset
26	116-9085	2	Spring-Compression
27	3220-2	2	Nut-Jam
28	104-8300	4	Nut-HF, NI
29	1-808280	2	Pin-Clevis
30	3256-23	4	Washer-Plain
31	116-6639	2	Pin-Cotter, Locking
32	116-9102	1	Front Linkage ASM
32:2	94-7572	1	End-Tie Rod, RH
32:3	3220-3	1	Nut-HJ
33	119-1415	2	Pin-Cotter, Locking
34	3296-6	1	Nut-Lock
35	126-7587	2	Rear Linkage ASM
35:1	126-7588	2	Yoke
35:2	116-9069	1	Linkage, Rear
35:3	3220-1	1	Nut-Jam
36	32120-19	2	E-Ring
37	3230-2	2	Bolt-CARR
38	323-6	2	Screw-HH
39	3296-39	2	Nut-Lock, NI
40	116-1746	2	Wheel Hub ASM
40:2	116-1696	4	Stud-Wheel
41	116-1399	2	Locknut
42	126-6395	4	Pin-Clevis, Spring
43	92-5727	2	Screw-Lock, Patch
44	126-6200	2	Spacer


Fuel System Assembly

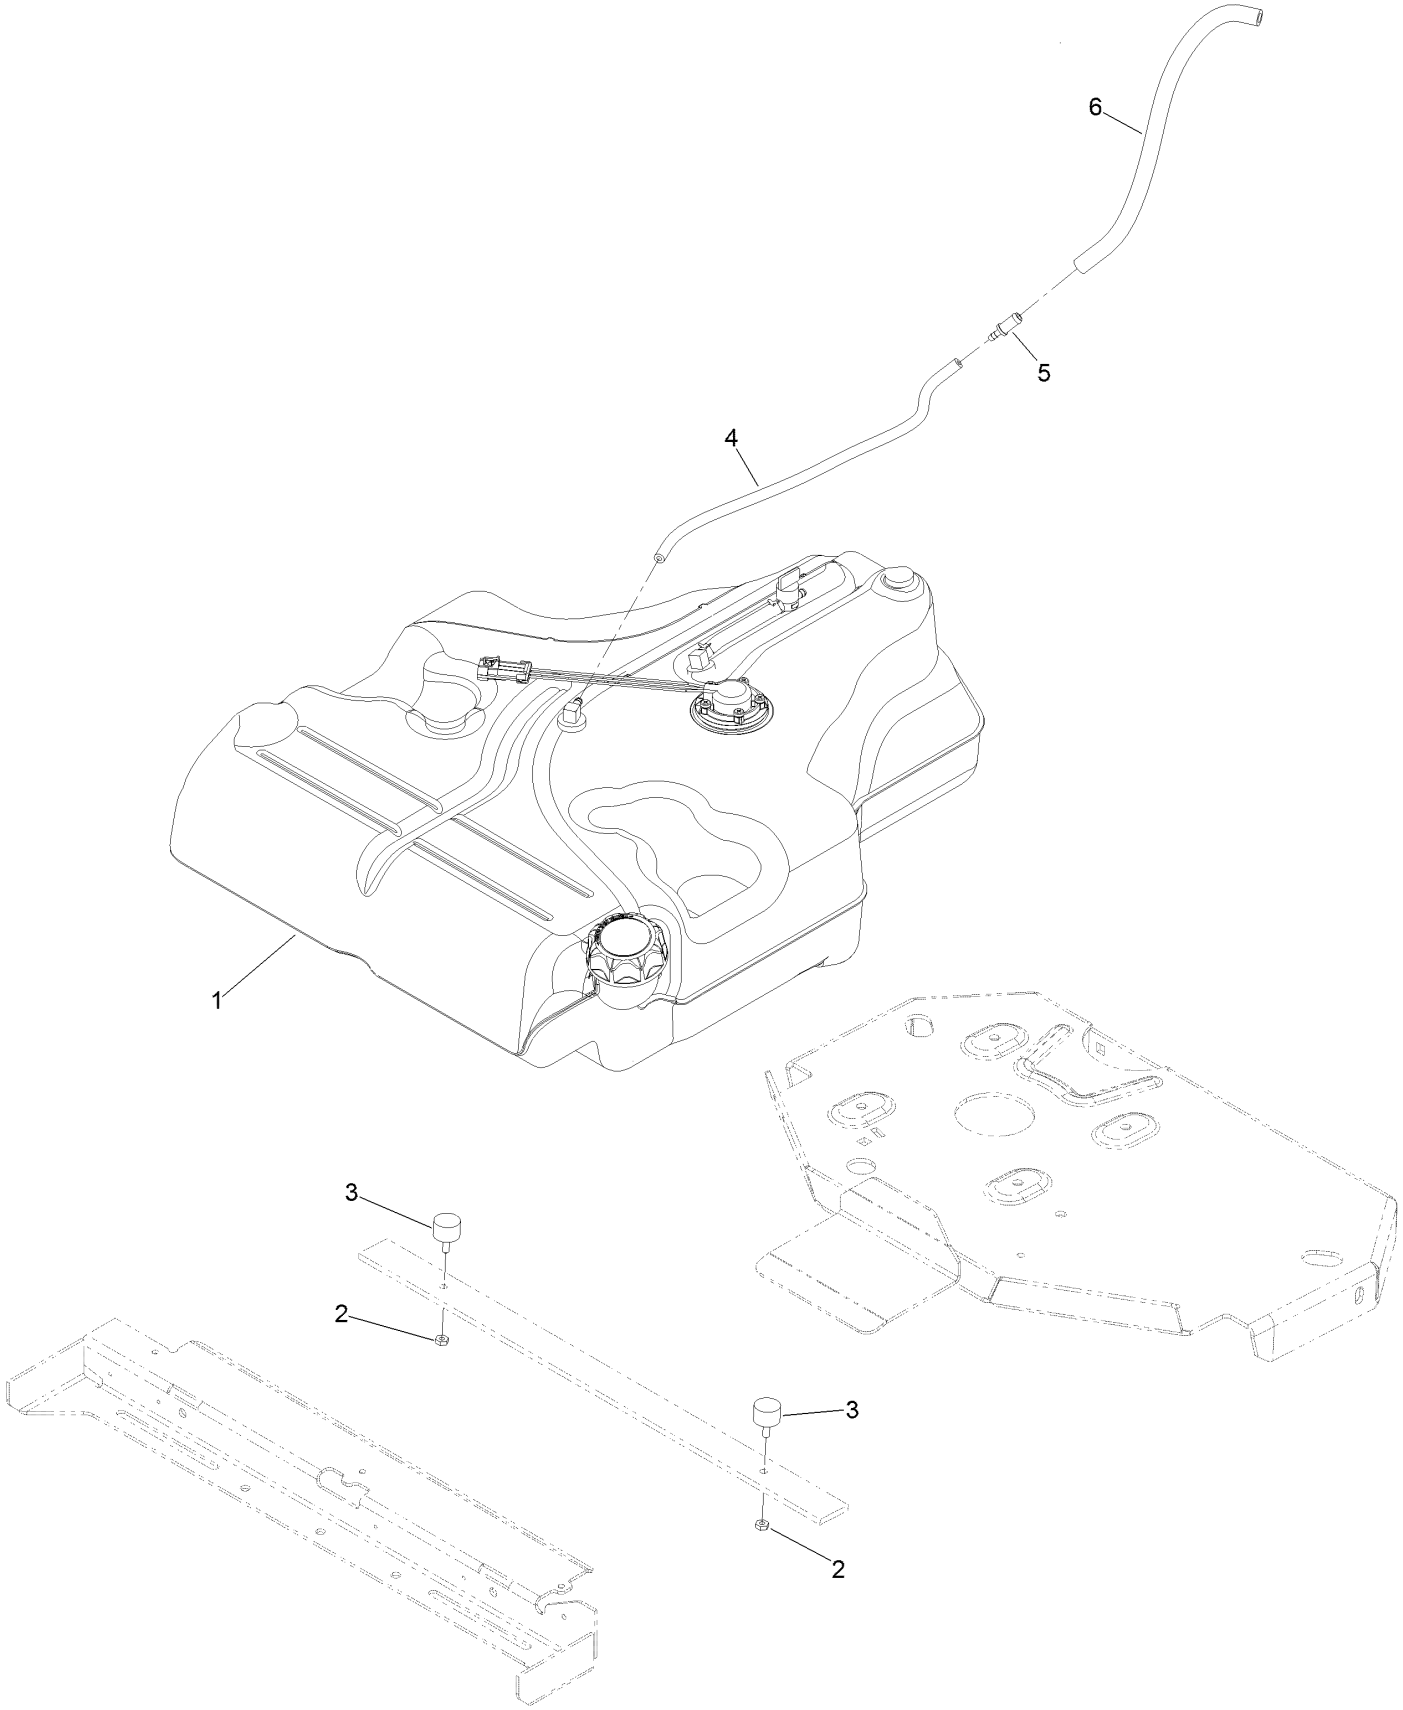

Fuel System Assembly (continued)

Ref.	Part Number	Qty.	Description
1	135-0645	1	Fuel Tank ASM
2	3218-1	2	Nut-Jam
3	1-523420	2	Bumper
4	110-8751	1	Hose-Fuel
5	98-2952	1	Fitting-Straight
6	116-4344	1	Hose-Fuel


Fuel Tank Assembly No. 135-0645

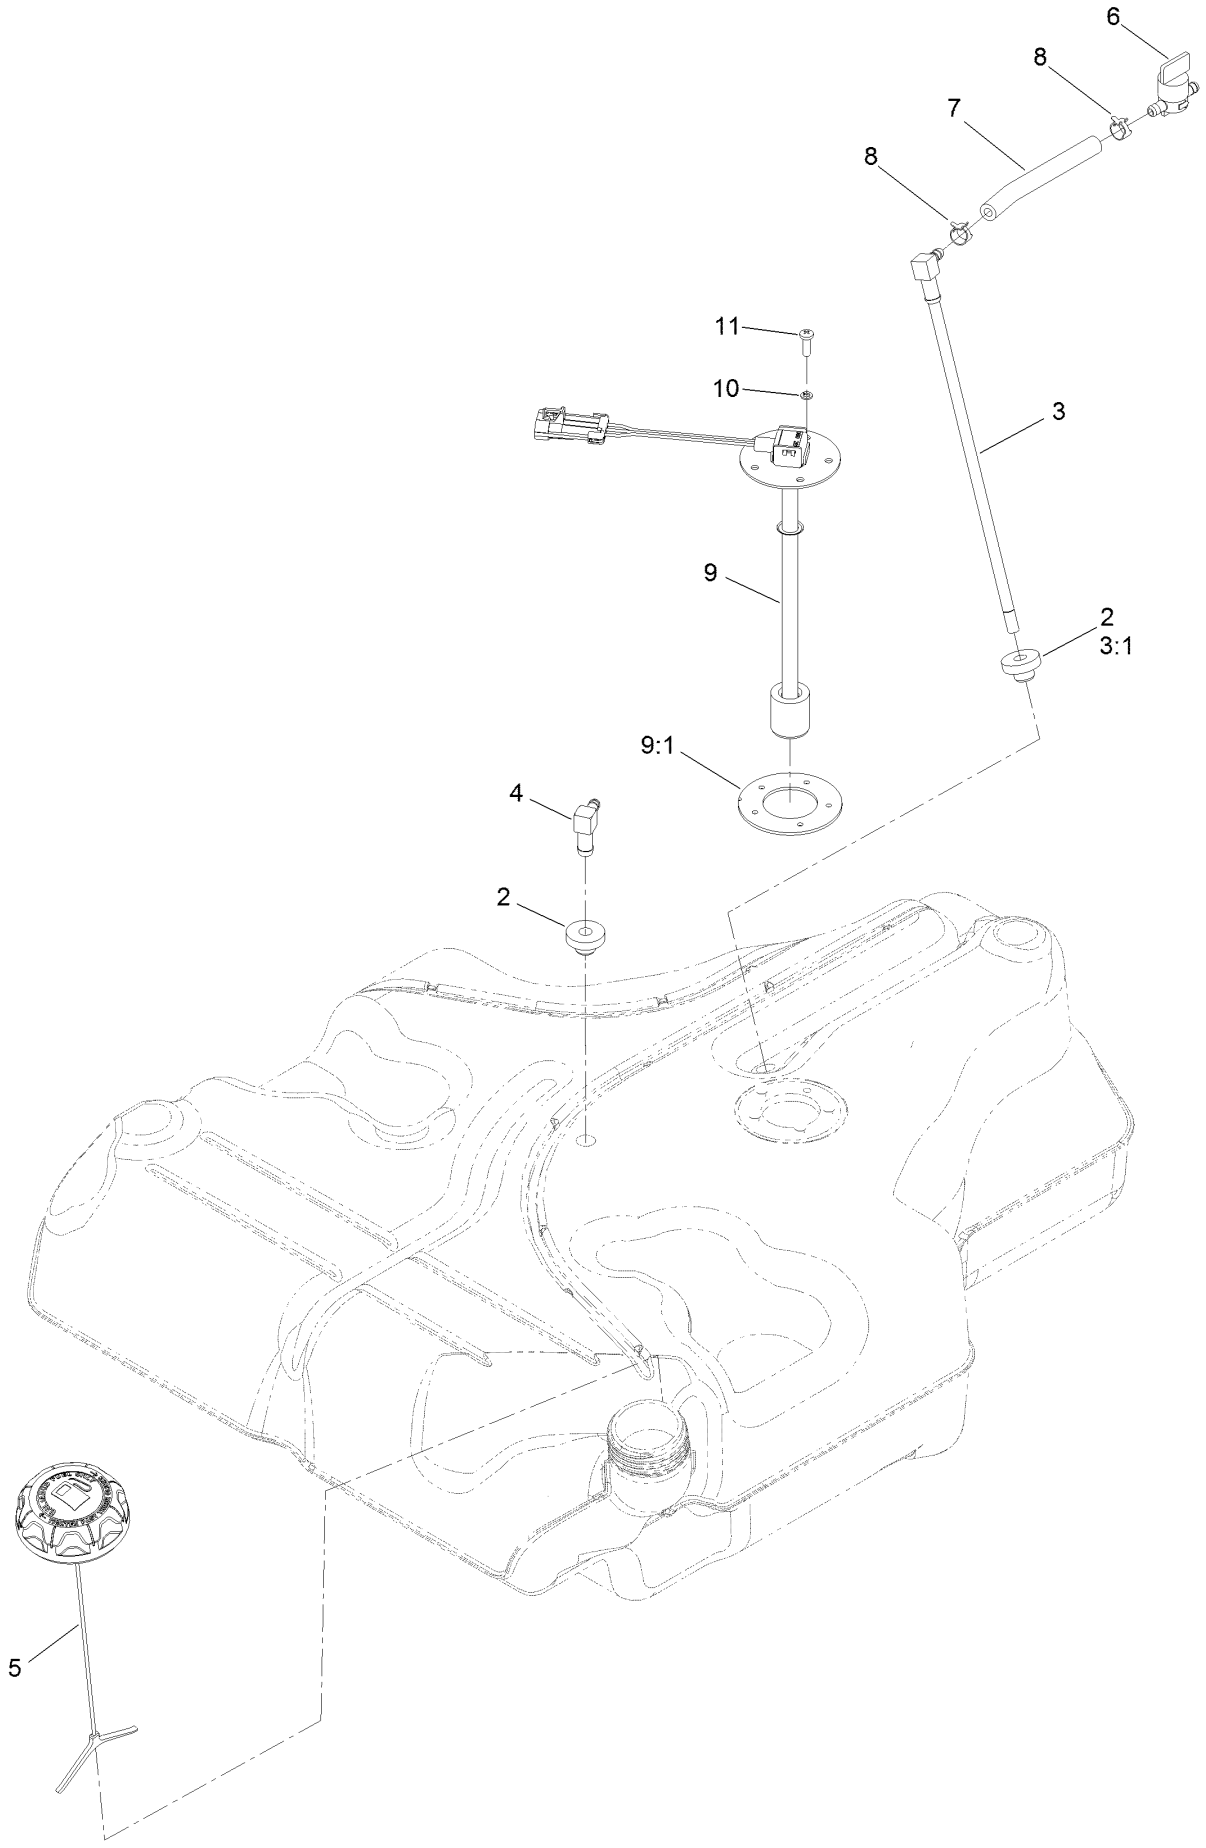

Fuel Tank Assembly No. 135-0645 (continued)

Ref.	Part Number	Qty.	Description
2	46-6560	2	Bushing
3	116-2459	1	Fuel Line Kit (With Grommet)
3:1	46-6560	1	Bushing
4	116-2288	1	Fitting-90 Elbow
5	126-1789	1	Cap-Fuel, Ratcheting
6	1-603770	1	Valve-Fuel
7	109-0650	1	Hose-Fuel
8	2412-98	2	Clamp-Hose
9	126-3949	1	Sender-Level, Fuel (W/Gasket)
9:1	126-3950	1	Gasket-Sender
10	3253-17	5	Washer-Lock
11	3290-500	5	Screw-PPH


Seat Mounting Assembly

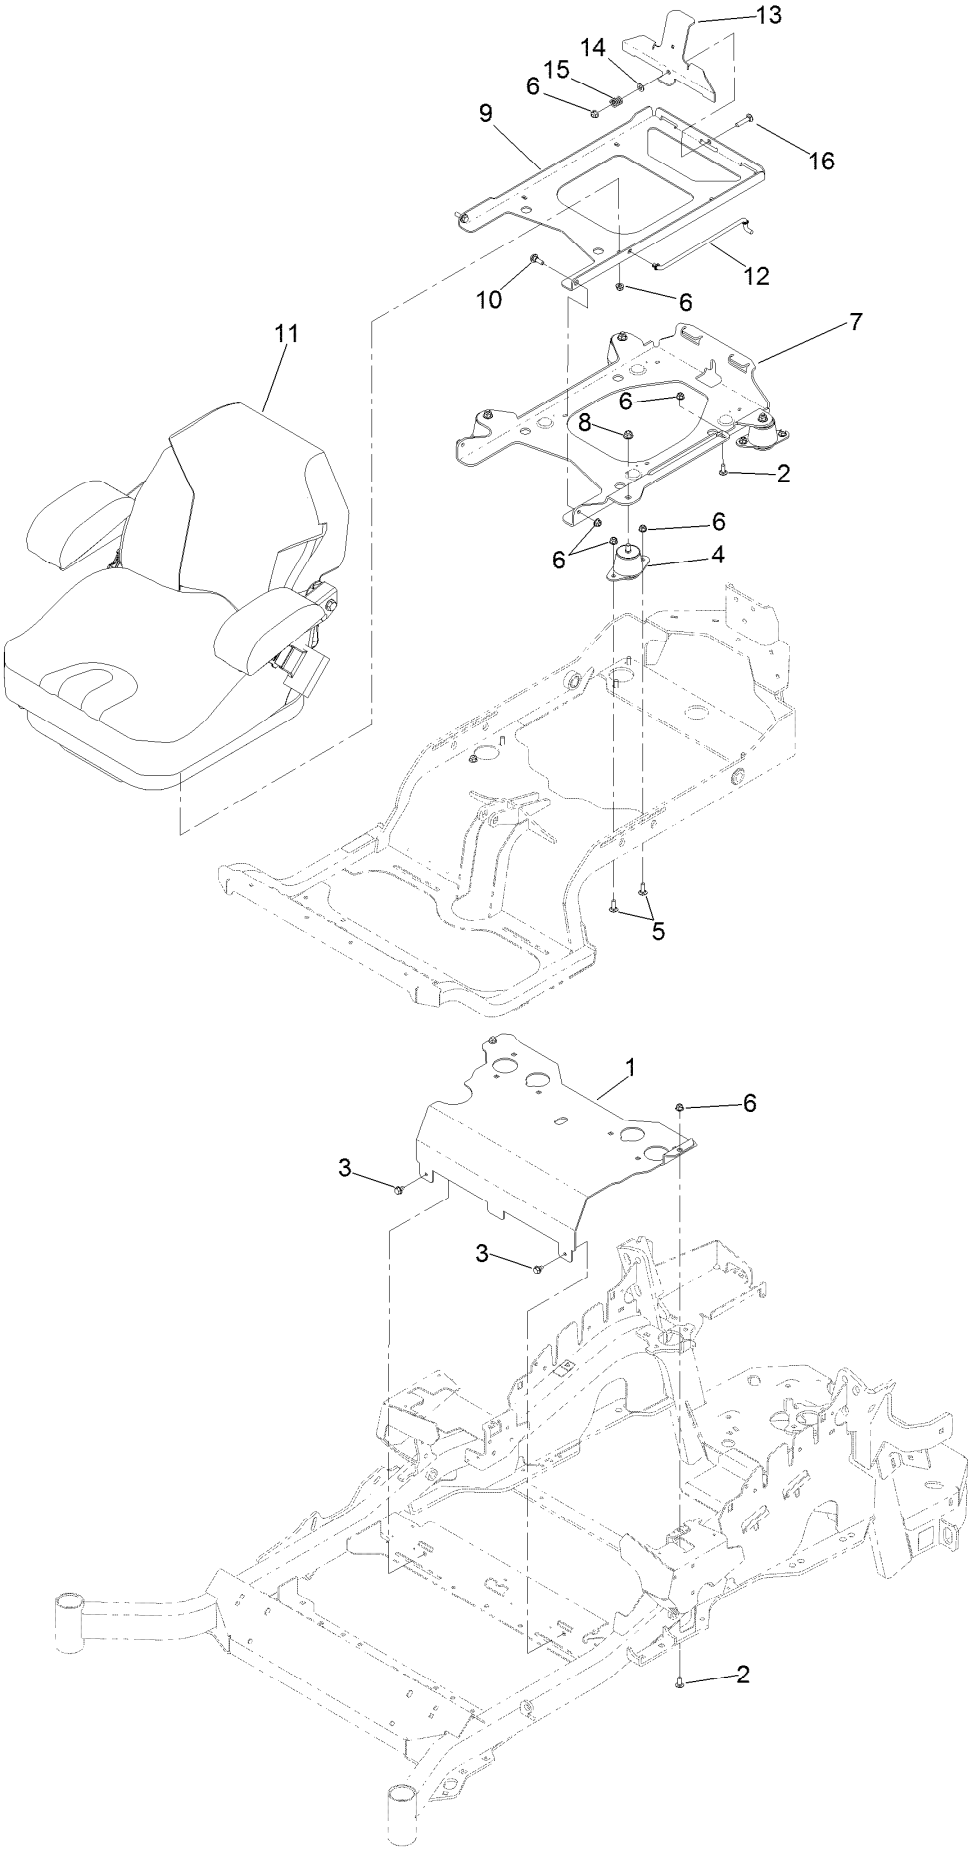

Seat Mounting Assembly (continued)

Ref.	Part Number	Qty.	Description
1	116-2130-03	1	Panel-Front, Seat Mount
2	3230-23	3	Screw-CARR
3	9266934	2	Screw
4	109-9034	4	Isolator-Seat
5	3230-10	8	Bolt-CARR
6	104-8300	18	Nut-HF, NI
7	131-6324-03	1	Plate-Support, ISO Seat
8	104-8301	4	Nut-HF, NI
9	116-3859-03	1	Plate-Frame, Seat
10	116-1297	2	Screw-Shoulder
11	116-0035	1	Seat-Standard
12	116-0070	1	Rod-Prop
13	132-5088-03	1	Plate-Latch,Seat
14	3256-23	1	Washer-Plain
15	107-3017	1	Spring-Compression
16	3230-4	1	Bolt-CARR


Seat Assembly No. 116-0035

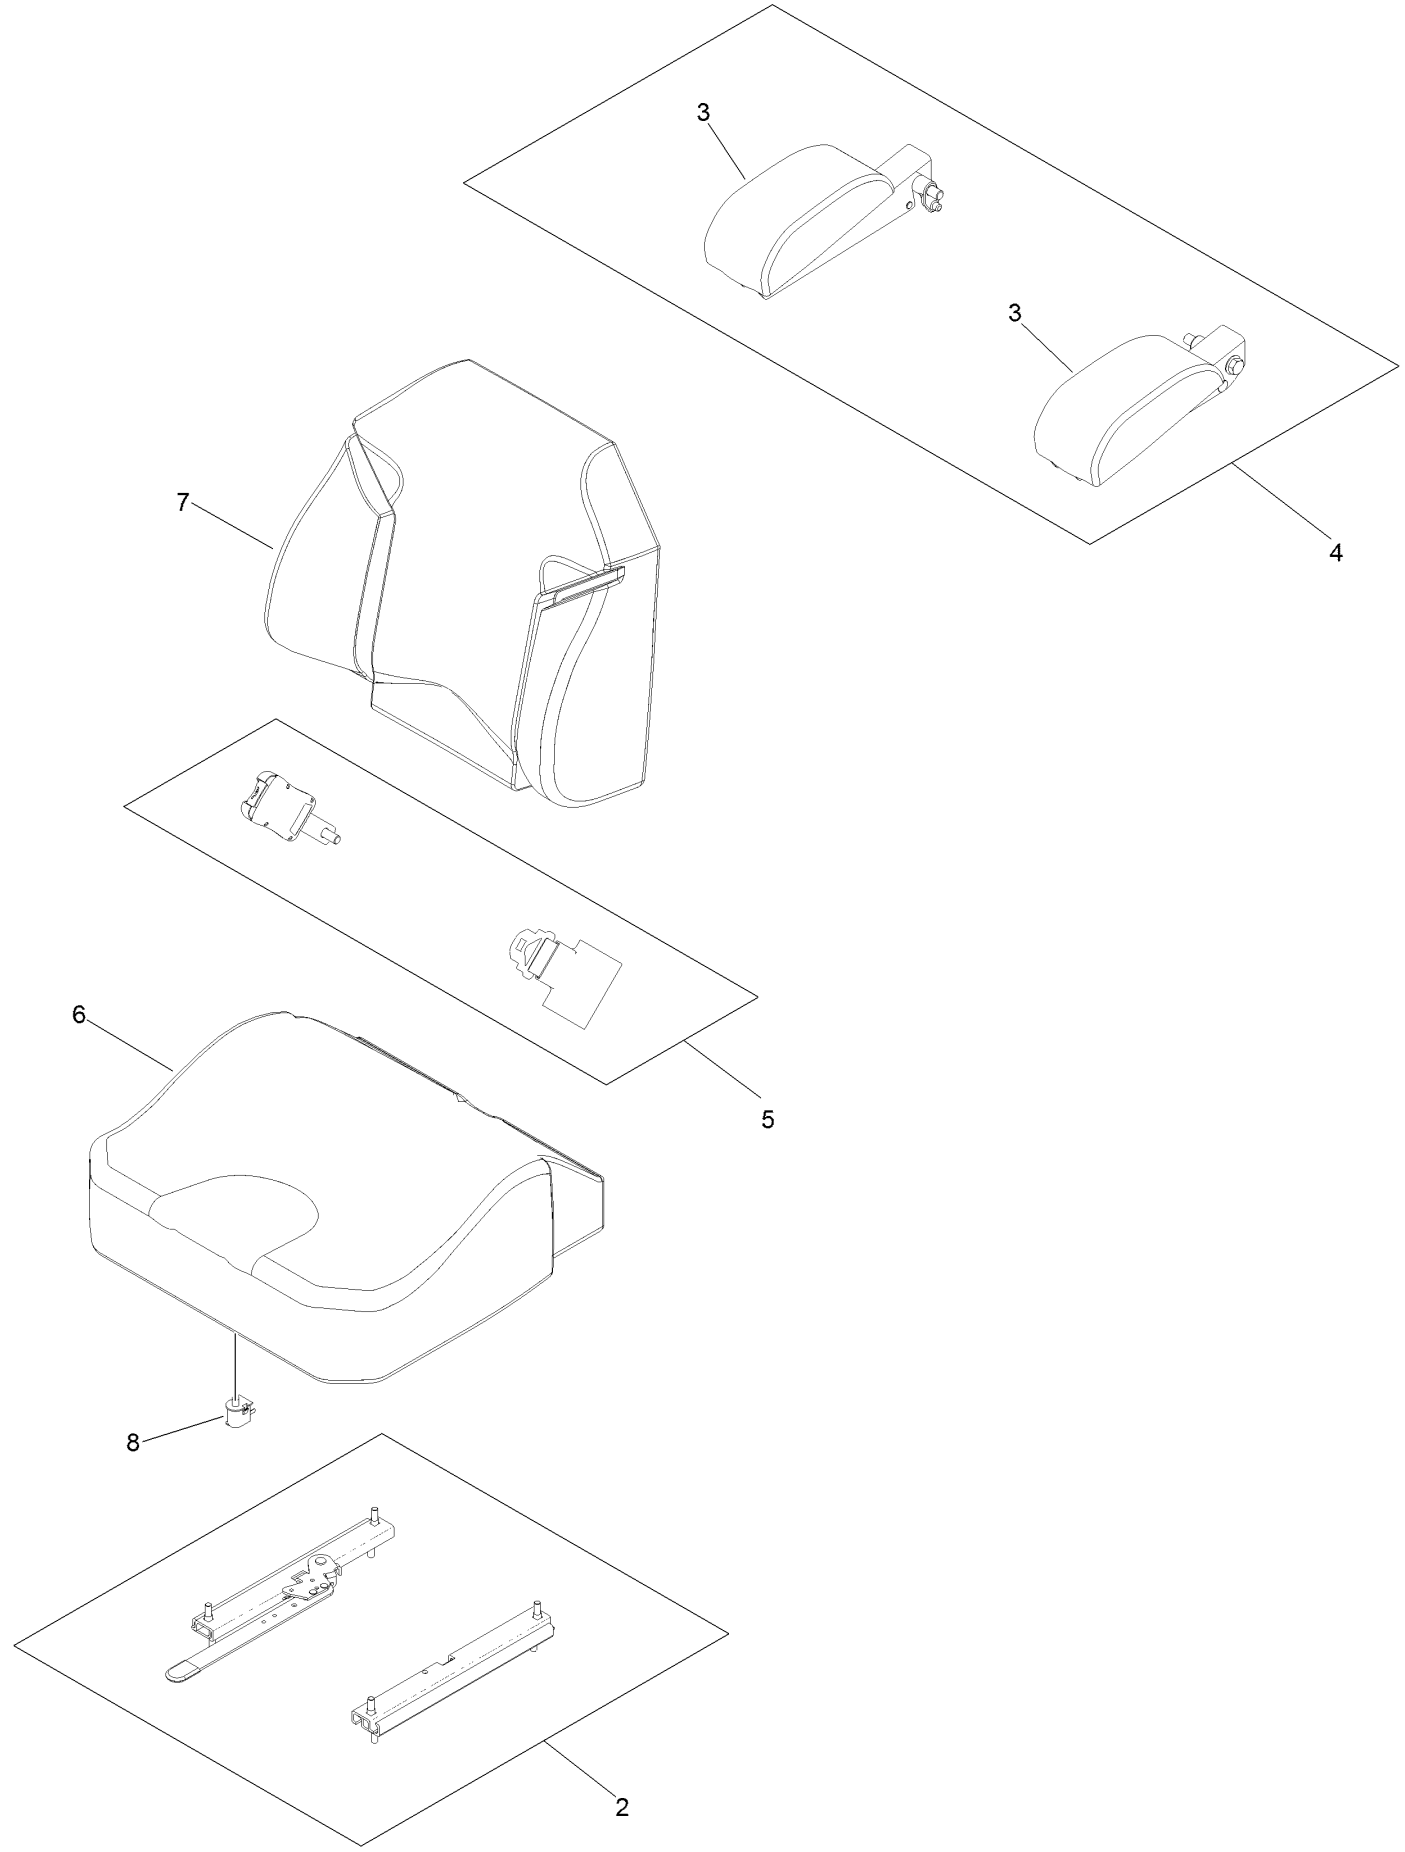

Seat Assembly No. 116-0035 (continued)

Ref.	Part Number	Qty.	Description
2	109-9801	1	Seat Track Set
3	109-9802	1	Arm Rest Pad Set
4	109-9803	1	Arm Rest Set
5	109-9805	1	Seat Belt Kit
6	109-9806	1	Cover-Cushion
7	109-9808	1	Cover-Back
8	82-2190	1	Switch-Bail

Motion Control Assembly

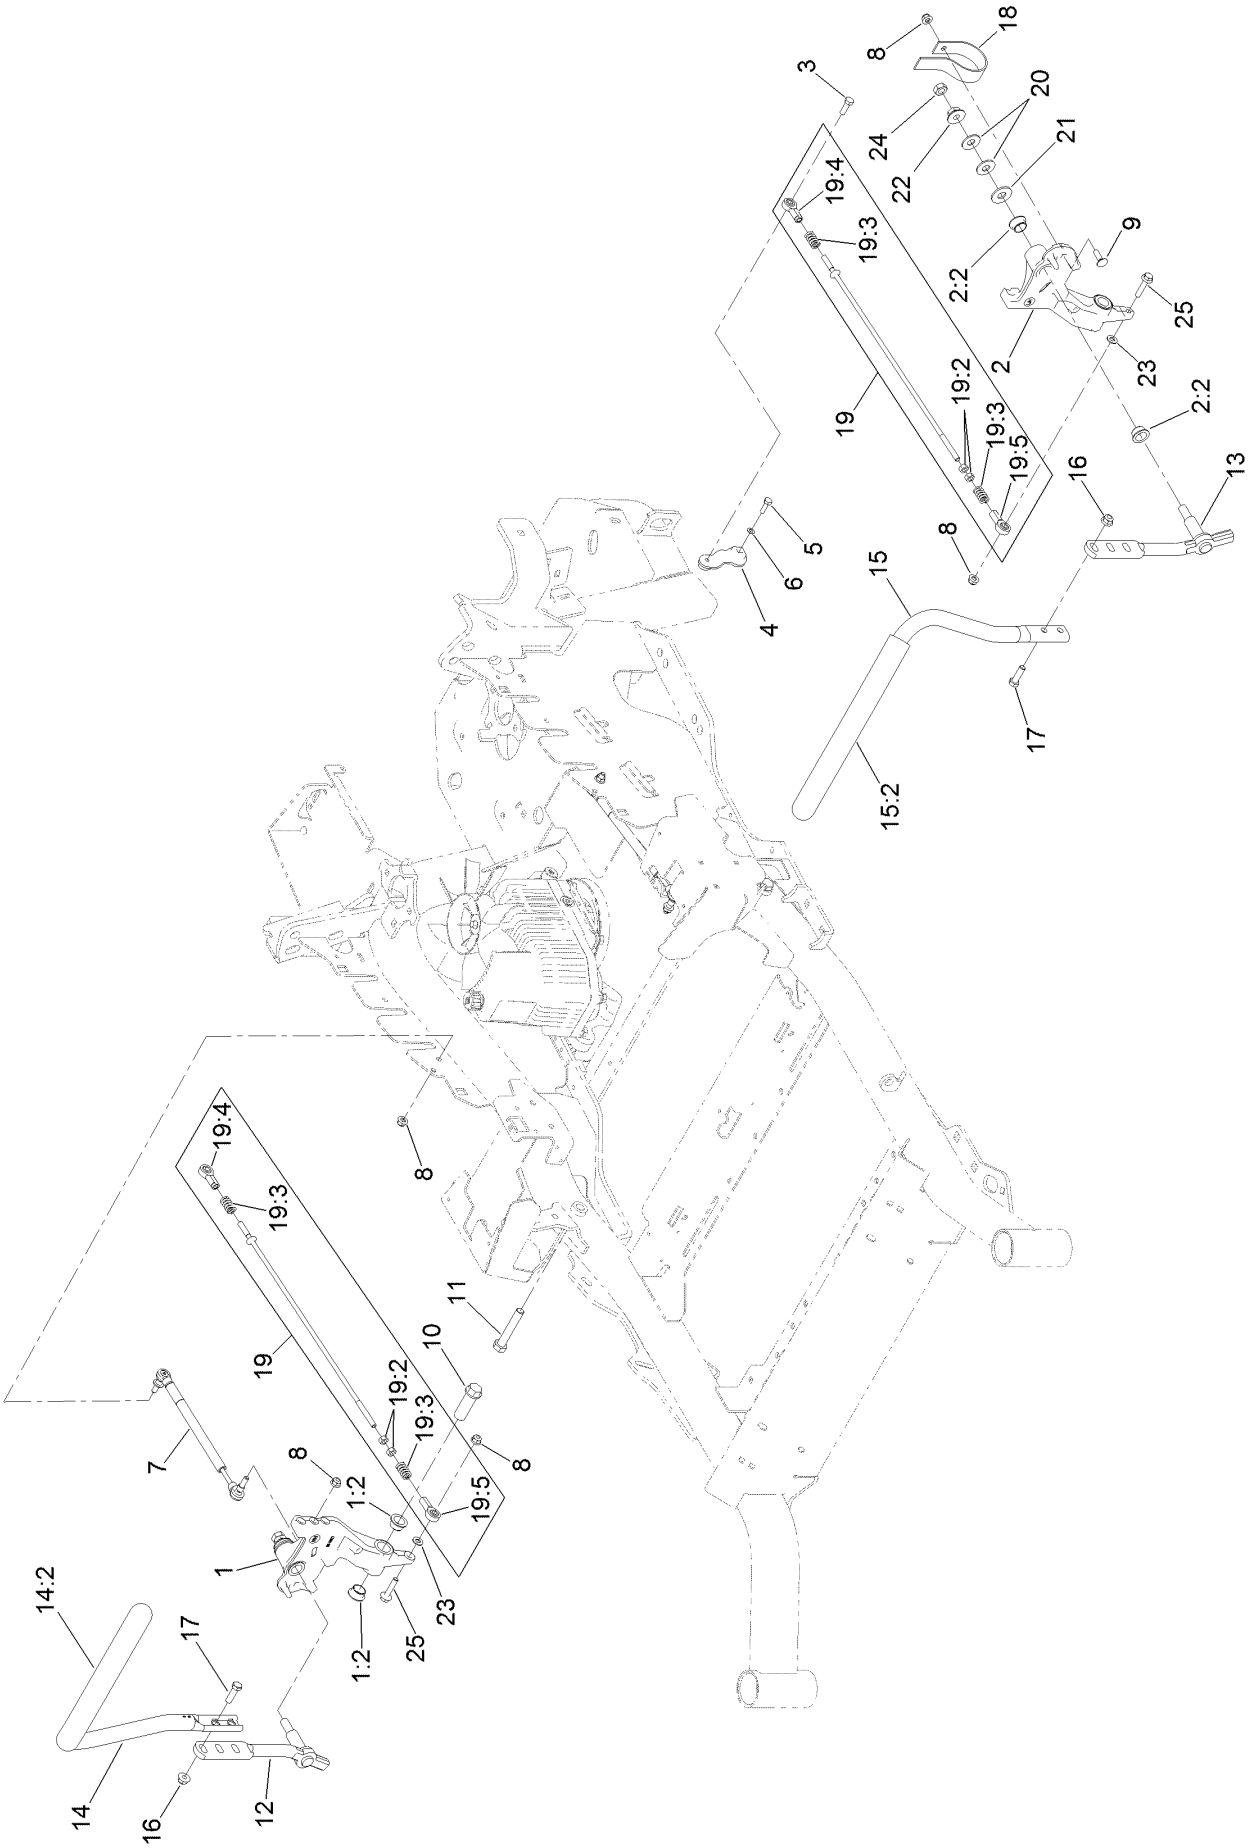


Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	116-0880	1	RH Motion Control And Bushing ASM
1:2	109-8054	4	Bushing-Flange
2	116-0881	1	LH Motion Control And Bushing ASM
2:2	109-8054	4	Bushing-Flange
3	116-0648	2	Screw-HH, Thread Locking ●
4	109-4581	2	Arm-Control, Pump
5	9080046	2	Screw-HH ●
6	1-303435	2	Washer-Spring
7	116-0027	2	Damper-Control, Motion
8	104-8300	8	Nut-HF, NI
9	3230-2	2	Bolt-CARR
10	109-5891	2	Hub-Threaded
11	325-12	2	Screw-HH
12	116-0039	1	Lever-Control Motion, RH
13	116-0040	1	Lever-Control Motion, LH
14	133-1839	1	RH Steering Handle ASM
14:2	109-5668	1	Grip-Control, Lever
15	133-1841	1	LH Steering Handle ASM
15:2	109-5668	1	Grip-Control, Lever
16	104-8301	4	Nut-HF, NI
17	323-7	4	Screw-HH
18	109-5575	2	Spring-Leaf
19	109-8107	2	Pump Linkage Rear ASM
19:2	3219-2	2	Nut-Hex
19:3	1-323245	2	Spring-Compression
19:4	1-633152	1	Balljoint-LH
19:5	1-543017	1	Balljoint-RH
20	109-9505	4	Washer-Spring
21	3256-6	2	Washer-Flat
22	32128-56	2	Nut-HF
23	3256-23	2	Washer-Plain
24	3218-5	2	Nut-Jam
25	115-1794	2	Screw-HHF

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.


Console and Control Assembly

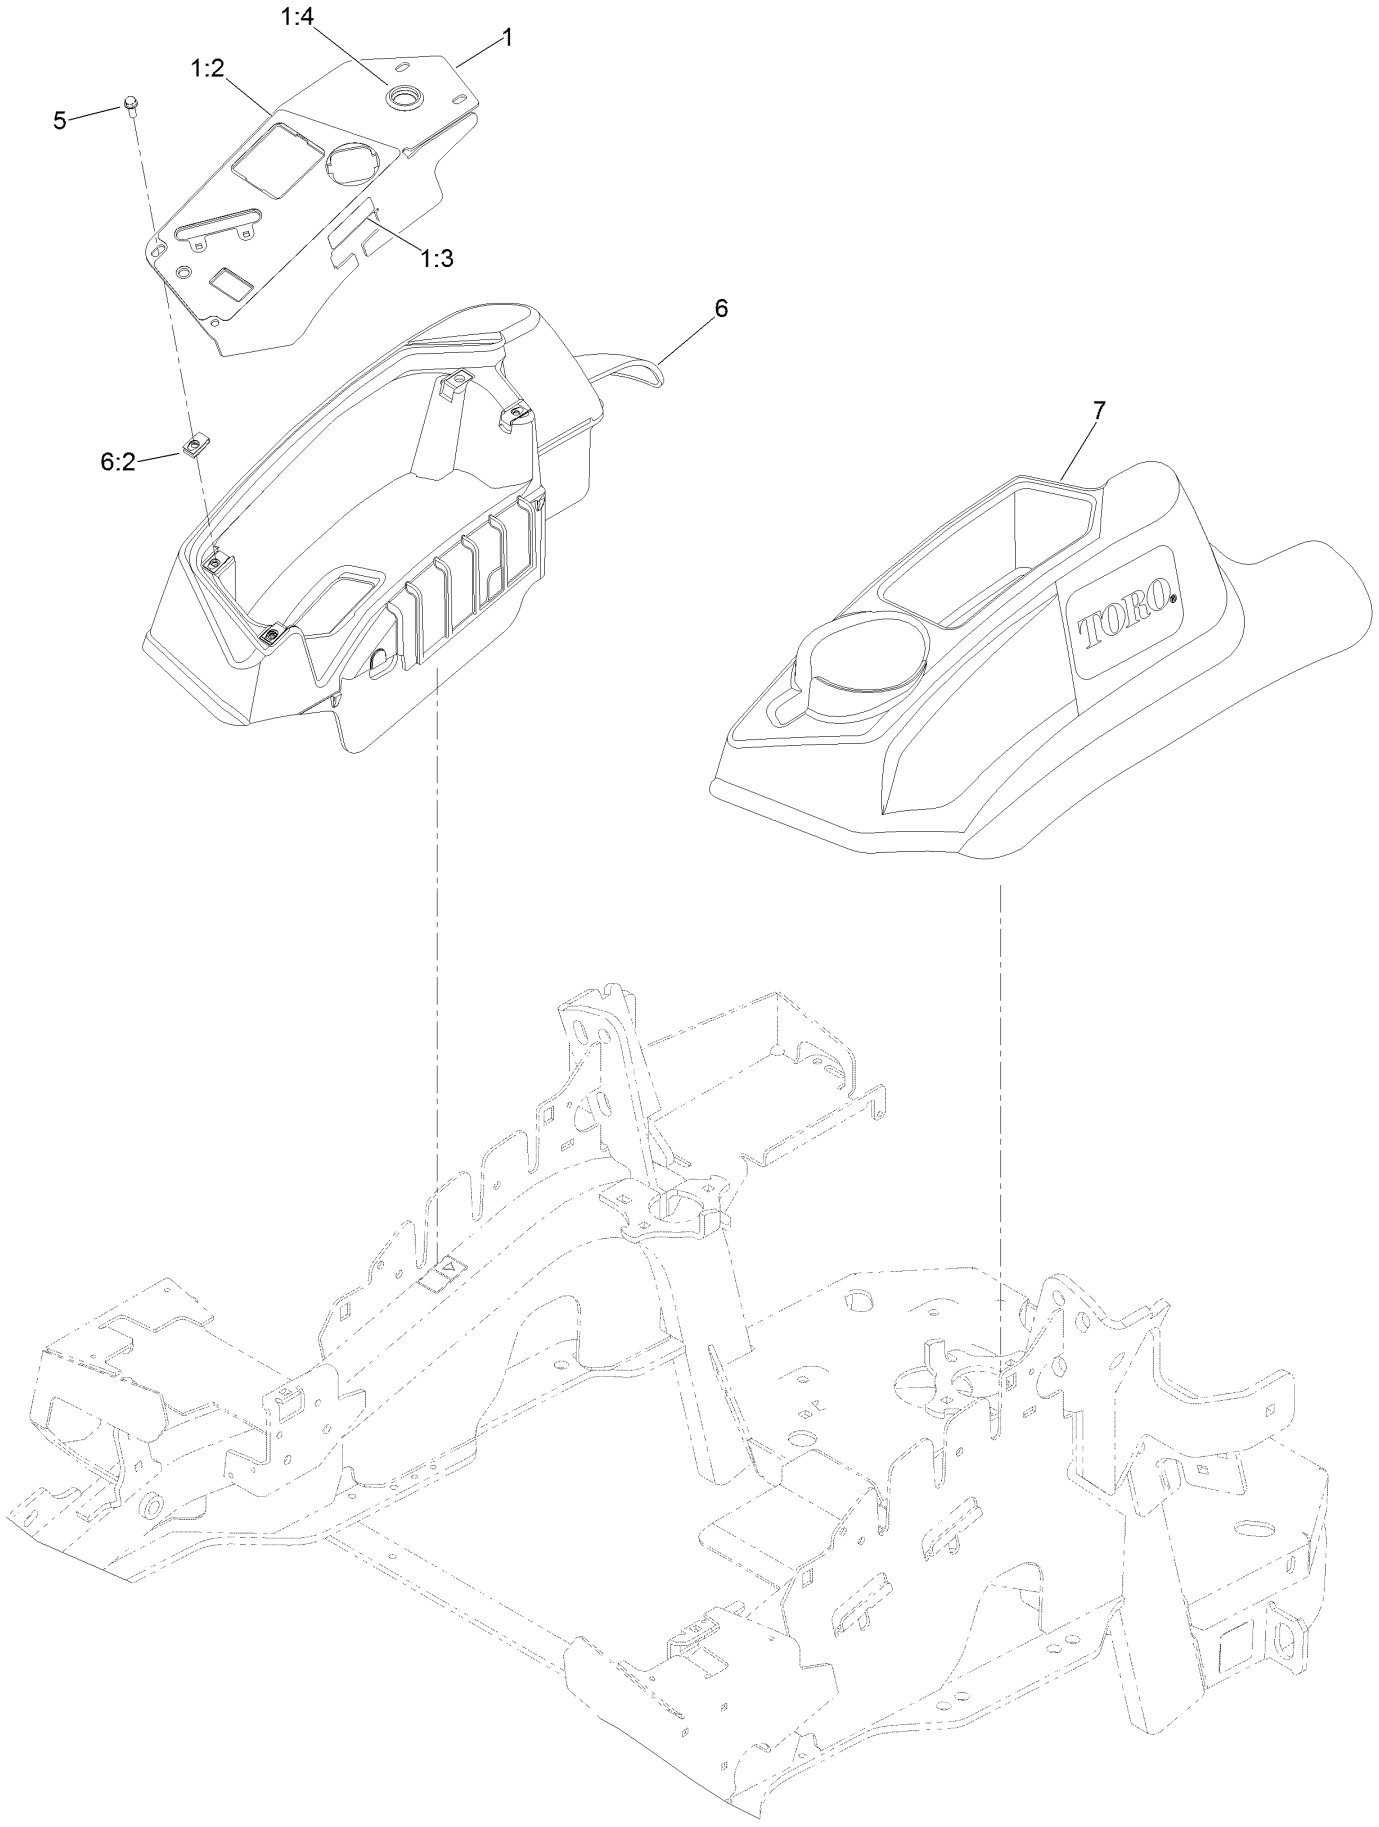

Console and Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-6663	1	Control Panel ASM
1:2	121-7551	1	Decal-Panel, Control
1:3	114-4466	1	Decal-Fuses
1:4	116-1875	1	Plug-Plastic
5	32105-15	4	Screw-HWH
6	119-2603	1	RH Console ASM
6:2	107069	4	Clip
7	119-2602	1	Console-LH

Electrical Assembly

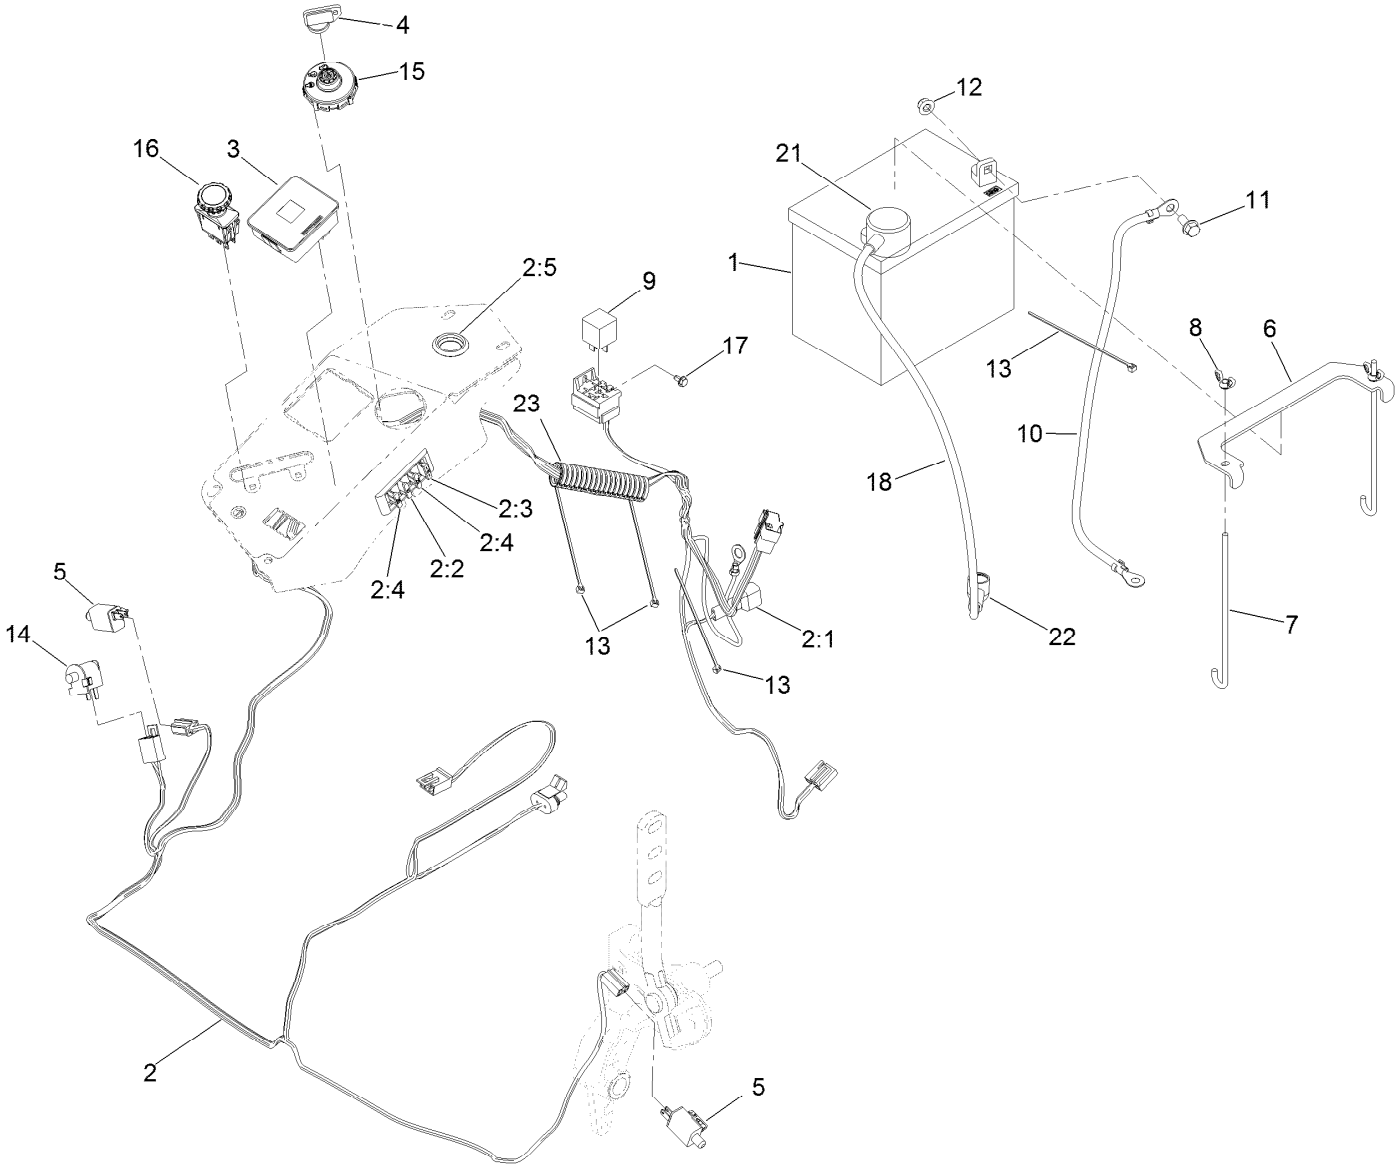


Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-8162	1	Battery-Dry
2	116-6009	1	Harness-Wire, Main ●
2:1	103-3895	1	Diode
2:2	218-578	1	Fuse-Blade, 10 Amp
2:3	109355	1	Fuse-Blade, 15 Amp
2:4	109102	2	Fuse-Blade, 25 Amp
2:5	116-0053	1	Cap-Plug
3	117-3882	1	Fuel/Hour Meter ASM
4	1-603511	1	Keys-Ignition (Spare Pair)
4	63-8360	1	Key-Ignition
5	110-6765	2	Switch
6	116-0042-03	1	Strap-Tie Down, Battery
7	1-633651	2	Bolt-Holddown
8	1-543792	2	Wingnut
9	1-643275	1	Relay
10	114-1218	1	Cable-Battery, Negative
11	3234-5	2	Screw-HHF
12	104-8300	2	Nut-HF, NI
13	1-303287	4	Tie-Cable
14	82-2190	1	Switch-Bail
15	137-4100	1	Switch-Ignition
16	116-0124	1	Switch-PTO, 10 Amp
17	104-2065	1	Screw-HWH
18	115-3864	1	Cable-Battery, Positive
21	109-2407	1	Insulator-Battery
22	1-543393	1	Insulator-Solenoid
23	131-8846	1	Cover-Hose

● Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.


Deck Lift Assembly

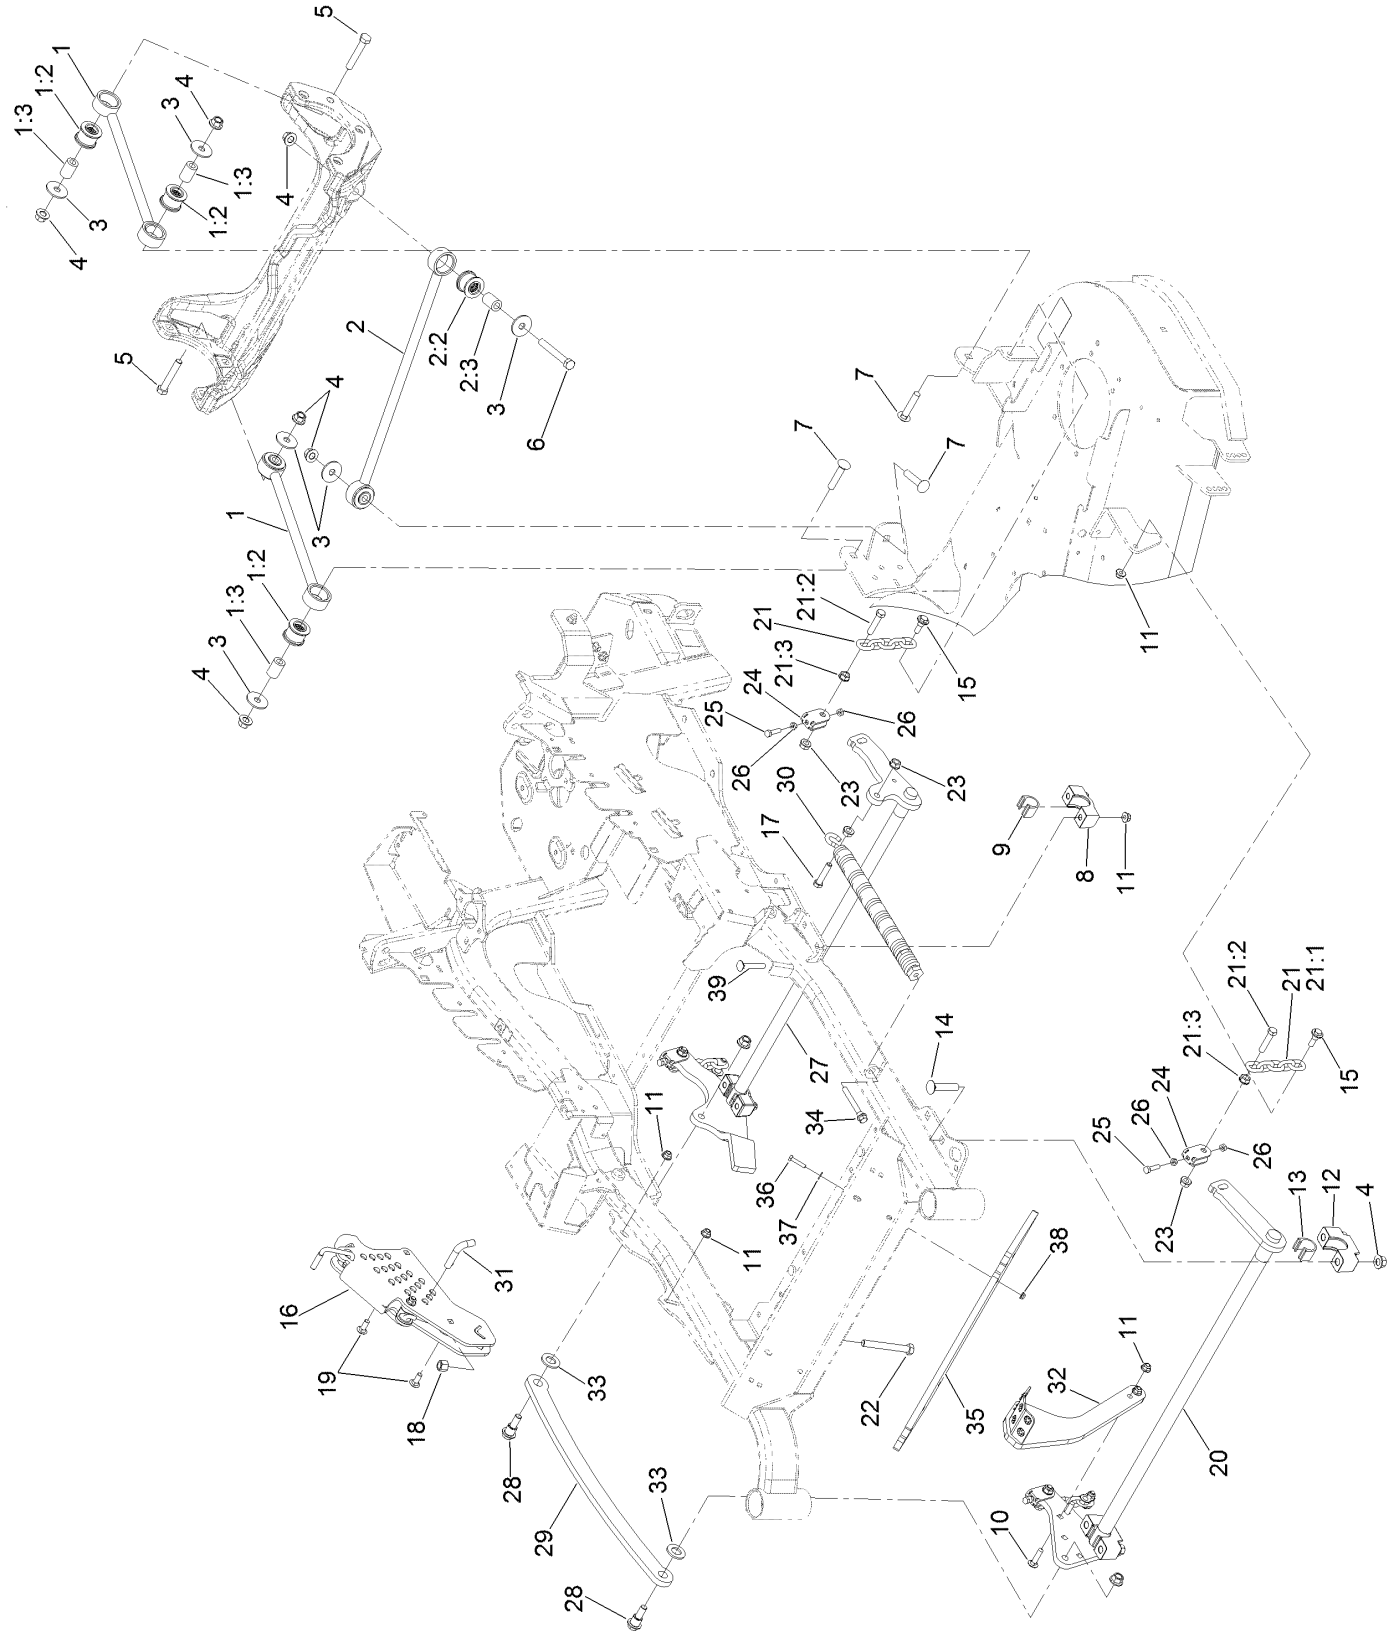

Deck Lift Assembly (continued)

Ref.	Part Number	Qty.	Description
1	109-7952	2	Deck Strut ASM
1:2	109-5009	2	Bushing-Suspension, Rubber
1:3	109-5010	2	Spacer
2	109-5013	1	Panhard Rod ASM
2:2	109-5009	2	Bushing-Suspension, Rubber
2:3	109-5010	2	Spacer
3	86-1990	6	Washer-Thrust
4	99-5107	12	Nut-Lock
5	325-12	2	Screw-HH
6	325-17	1	Screw-HH
7	3233-34	3	Screw-CARR
8	127-0553	2	Support-Cross Shaft, Bearing Rear
9	109-7173	2	Bearing-Cross Shaft, Rear
10	3231-4	2	Screw-CARR
11	104-8301	12	Nut-HF, NI
12	109-9409	2	Support-Cross Shaft, Bearing
13	109-9410	2	Bearing-Cross Shaft, Front
14	116-1700	4	Bolt-CARR
15	109-9840	4	Screw-Shoulder, HHF
16	109-7438	1	HOC ASM
17	109-9065	1	Screw-HH
18	3296-23	1	Nut-Lock, NI
19	3231-2	2	Bolt-CARR
20	126-2475-03	1	Decklift-Front
21	116-0756	4	Deck Lift Chain ASM
21:1	1-633447	1	Chain-Lift, Deck
21:2	109-9065	1	Screw-HH
21:3	32128-37	1	Nut-HF
22	116-0559	1	Bolt-TAP
23	32128-37	6	Nut-HF
24	109-9066	4	Yoke-Adjust, Deck
25	322-47	4	Screw-HH
26	3218-2	8	Nut-Jam
27	116-0459-03	1	Lift-Deck, Rear
28	116-0780	2	Screw-Shoulder, HHF
29	116-0797-03	1	Link-Lift, Deck
30	116-0886	1	Spring-Extension
31	116-5584	1	Pin-HOC
32	131-8812-01	1	Lever-Foot
33	3256-28	2	Washer-Flat
34	92-7674	1	Bolt-Shoulder
35	132-5075-01	1	Weight-Toe Board
36	321-8	4	Screw-HH
37	3256-22	4	Washer-Flat
38	104-7201	4	Nut-HF
39	3231-7	4	Screw-CARR


Height-of-Cut Assembly No. 109-7438

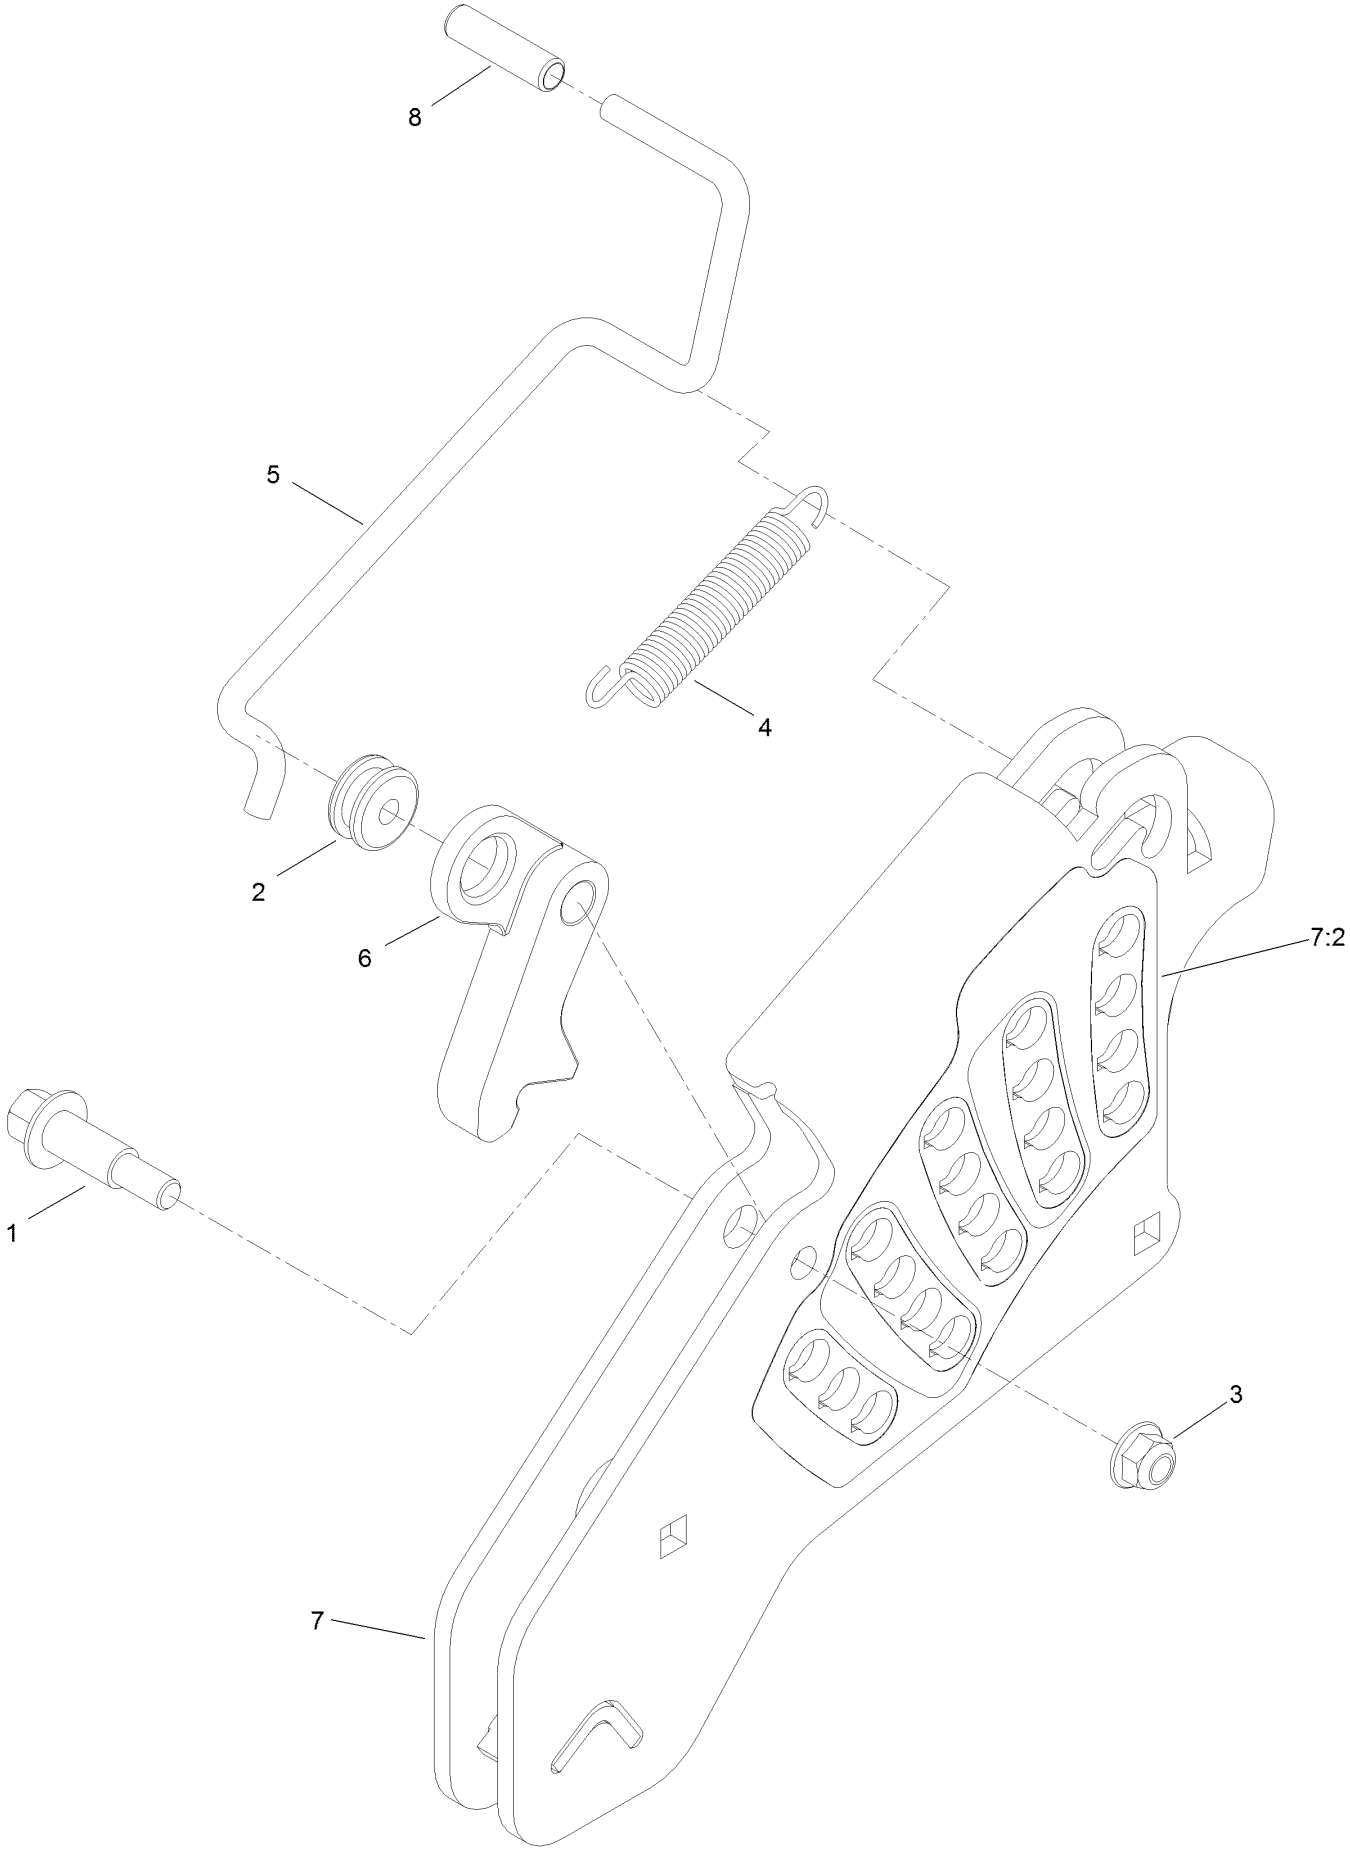

Height-of-Cut Assembly No. 109-7438 (continued)

Ref.	Part Number	Qty.	Description
1	62-1330	1	Bolt-Shoulder
2	109-7130	1	Grommet
3	104-8301	1	Nut-HF, NI
4	109-7124	1	Spring-Extension
5	109-7128	1	Rod-Lock, Transport
6	116-0118	1	Pawl-Transport, HOC
7	109-7335	1	HOC Plate ASM
7:2	126-4398	1	Decal-HOC
8	109-8250	1	Grip-Lever

Engine Assembly

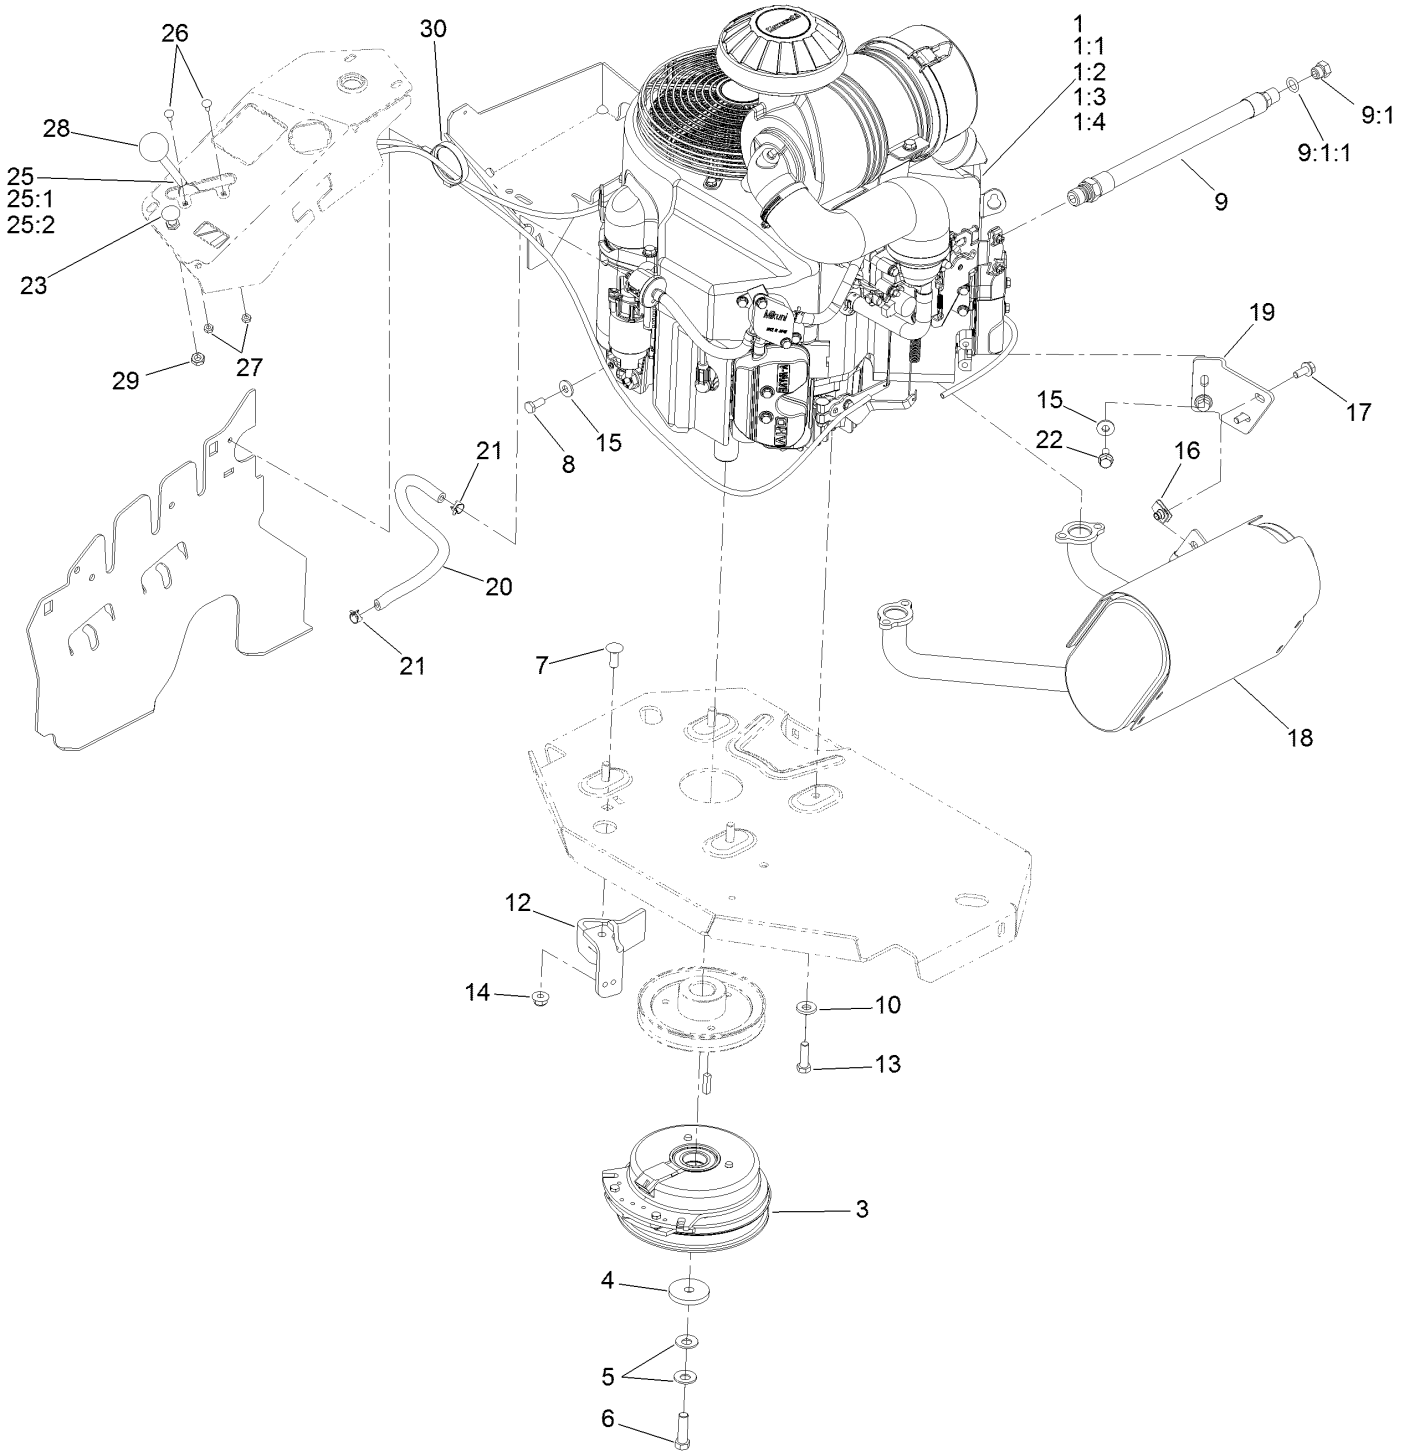


Engine Assembly (continued)

Ref.	Part Number	Qty.	Description
1		1	Engine-Kawasaki, Fx751V-S07-R ▲◆
1:1		1	Kawasaki 49065-2078 Engine Oil Filter ▲◆
1:2		1	Kawasaki 49019-7001 Fuel Filter ▲◆
1:3		1	Kawasaki 11013-7039 Safety Filter ▲◆
1:4		1	Kawasaki 11013-7038 Air Filter ▲◆
3	116-1620	1	Clutch Kit
4	109-6919	1	Washer-Clutch
5	1-603610	2	Washer-Spring
6	109-9761	1	Screw-HH ❑
7	3231-22	1	Screw-CARR
8	33114-020	1	Screw-HH
9	116-4924	1	Engine Oil Drain Hose ASM ■
9:1	353-508	1	Plug-HH ●
9:1:1	237-42	1	O-Ring
10	98-5975	4	Washer-Belleville
12	116-2612-01	1	Clutch-Anchor
13	323-7	4	Screw-HH
14	104-8301	1	Nut-HF, NI
15	1-303334	3	Washer-Spring
16	94-2413	2	Nut-U
17	3234-5	2	Screw-HHF
18	116-1712	1	Muffler
19	116-0203	1	Bracket-Muffler
20	109-0296	1	Hose-Fuel
21	2412-98	2	Clamp-Hose
22	95-4184	2	Screw-HHF
23	115-2753	1	Control-Choke
25	110-5727	1	Throttle Control ASM
25:1	112-2334	1	Lever-Throttle
25:2	110-5728	1	Cable-Throttle
26	1-807513	2	Bolt-CARR
27	3296-2	2	Nut-Lock, NI
28	1-603175	1	Knob-Ball
29	3220-3	1	Nut-HJ
30	117-7817	1	Clamp-Harness

● Torque to 24-26 ft-lb
▲ Not serviced separately
❑ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.
■ Torque to 23-29 ft-lb
◆ Obtain parts from www.kawpowerepc.com

Deck Assembly

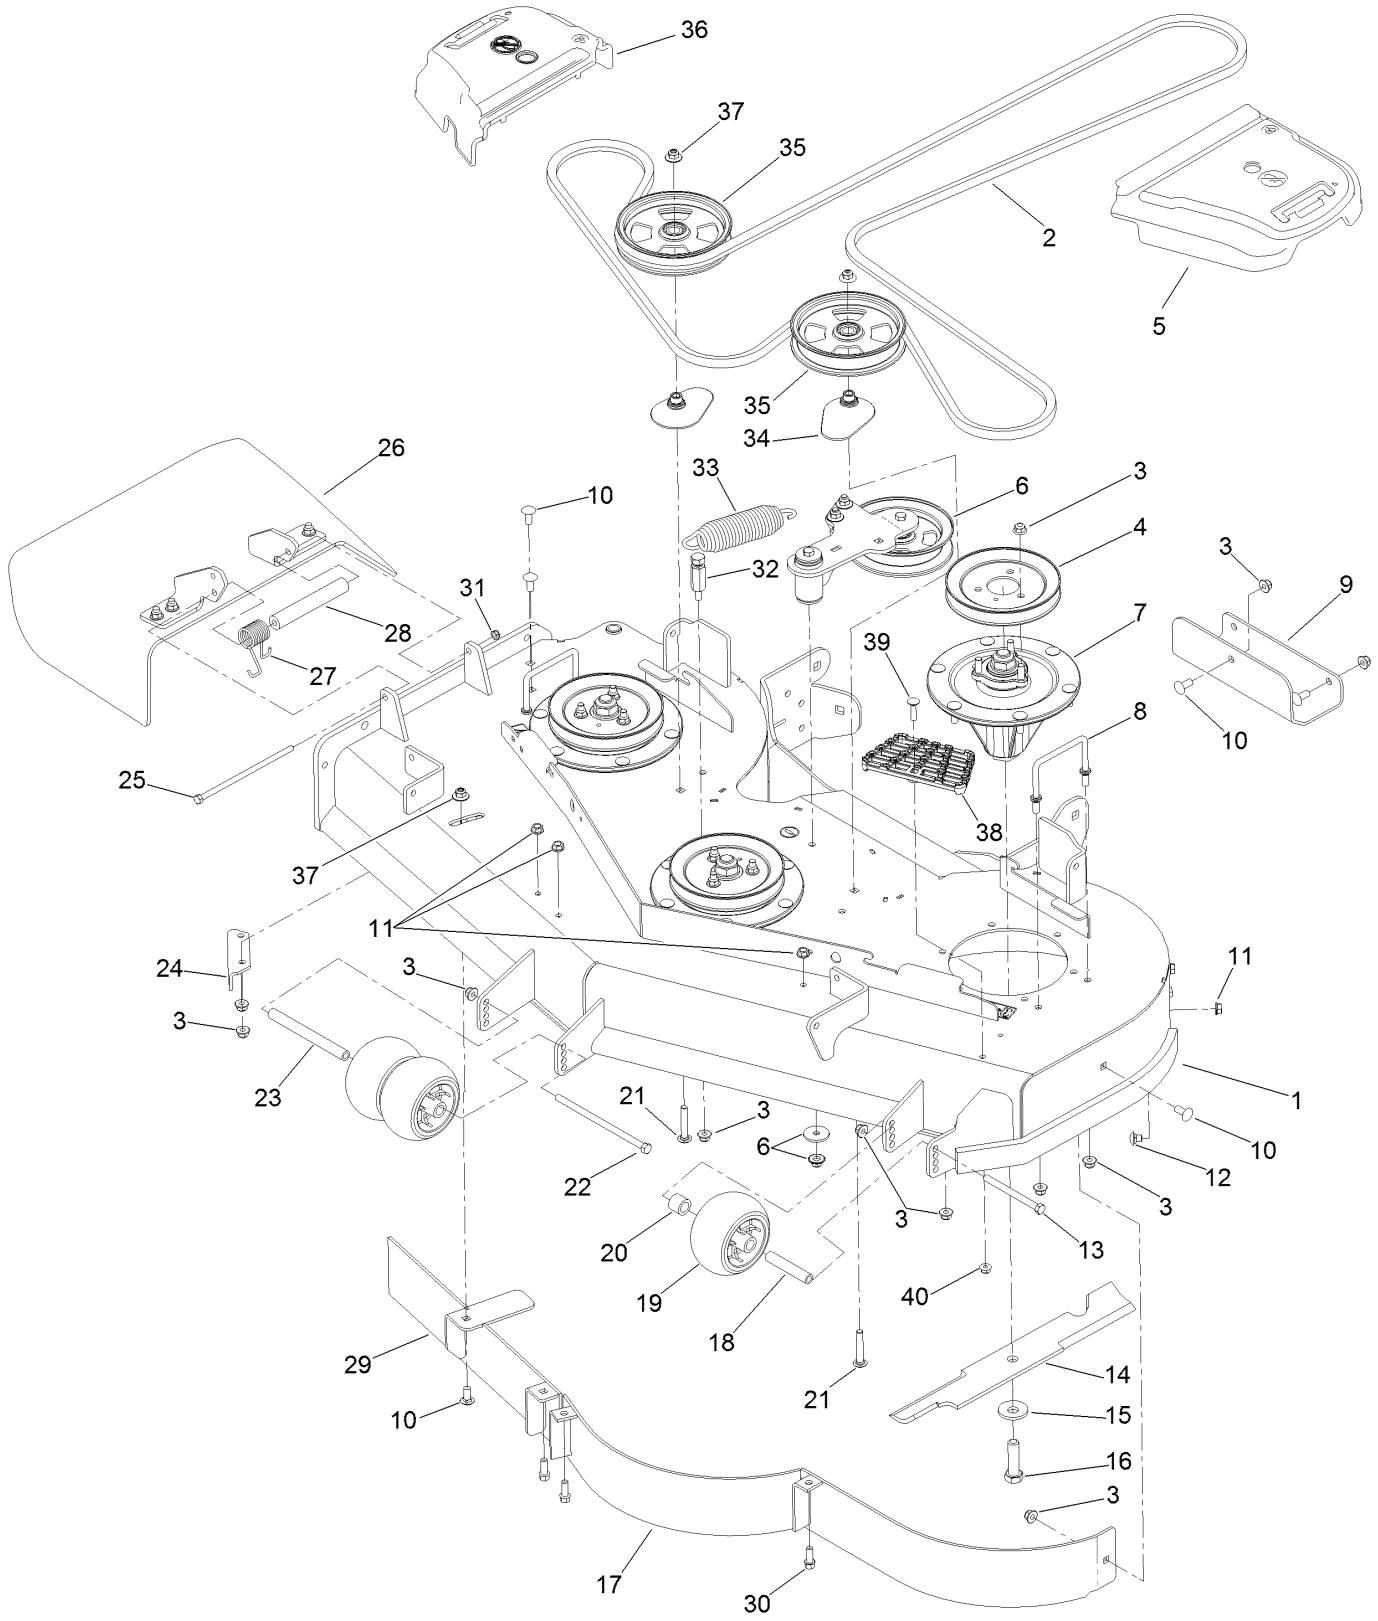


Deck Assembly (continued)

Ref.	Part Number	Qty.	Description
1	114-5810	1	Deck Decal ASM
2	115-7426	1	Belt-V
3	104-8301	41	Nut-HF, NI
4	115-7450	3	Pulley
5	109-6936	1	Cover-Belt, LH
6		1	Idler Arm ASM●
7	127-0560	3	Spindle ASM
8	109-6982	2	Wireform-Cover
9	121-7975-01	1	Plate-Skid
10	3231-27	8	Screw-CARR
11	3290-357	6	Nut-HHF, Whiz
12	108-5387	3	Screw-CARR
13	323-23	1	Screw-HH
14	105-7781-03	3	Blade-18In, Hi Flow
15	103-0865	3	Washer-Blade Bolt, Heavy
16	51-4060	3	Screw-Blade
17	115-7461-01	1	Baffle ASM
18	98-7912	1	Tube-Spanner
19	1-603299	3	Roller-Scalp, Anti
20	98-7913	1	Tube-Spacer
21	3231-40	2	Bolt-CARR, Short Neck
22	108-5388	1	Screw-HH
23	98-5967	1	Spacer-Wheel
24	107-8541-01	1	Baffle-Discharge
25	322-50	1	Screw-HH
26	108-2792	1	Rubber Deflector ASM
27	108-4052	1	Spring-Torsion
28	105-4622	1	Spacer
29	115-7455-01	1	Baffle ASM
30	92-1624	3	Screw-HWH
31	3296-47	1	Nut-Lock, NI
32	114-5867	1	Anchor-Spring, Tall
33	116-6317	1	Spring-Extension
34	109-2872	2	Spacer-Pulley
35	136-5404	2	Pulley-Idler, Flat
36	109-6935	1	Cover-Belt, RH
37	109-6658	3	Nut-Flange, NI
38	126-4781-03	1	Step-Deck
39	3230-3	1	Screw-CARR
40	104-8300	1	Nut-HF, NI

● Not serviced separately


Deck Decal Assembly No. 114-5810

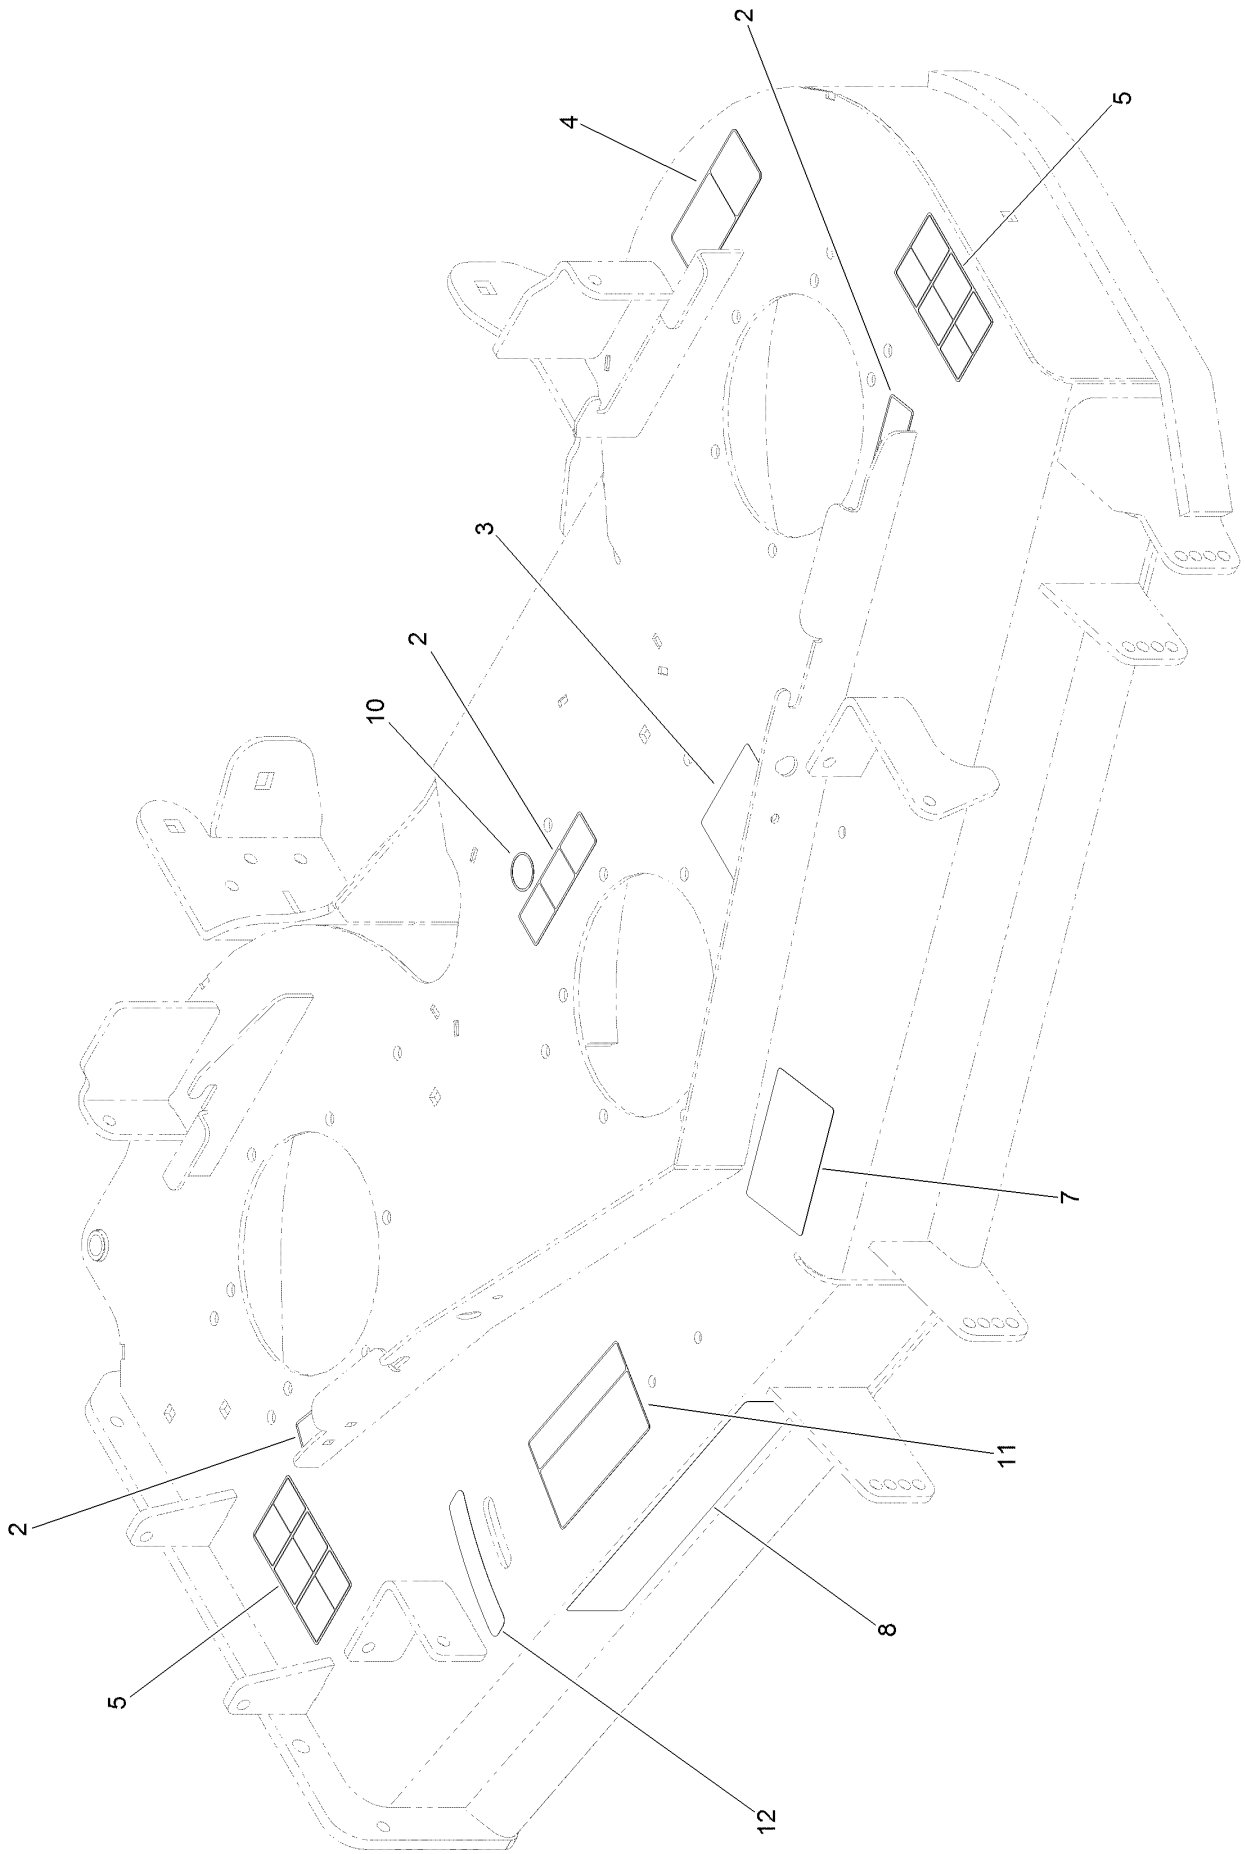

Deck Decal Assembly No. 114-5810 (continued)

Ref.	Part Number	Qty.	Description
2	112-9028	3	Decal-Missing, Cover
3	136-5508	1	Decal-Routing, Deck Belt
4	93-7818	1	Decal-Torque, Blade Bolt
5	117-3848	2	Decal-Danger
7	127-0326	1	Decal-Scalp, Anti
8	107-1618	1	Decal
10	58-6520	1	Decal-Grease
11	110-2068	1	Decal-Adjustment, Baffle
12	110-2067	1	Decal-Setting, Baffle


Idler Arm Assembly

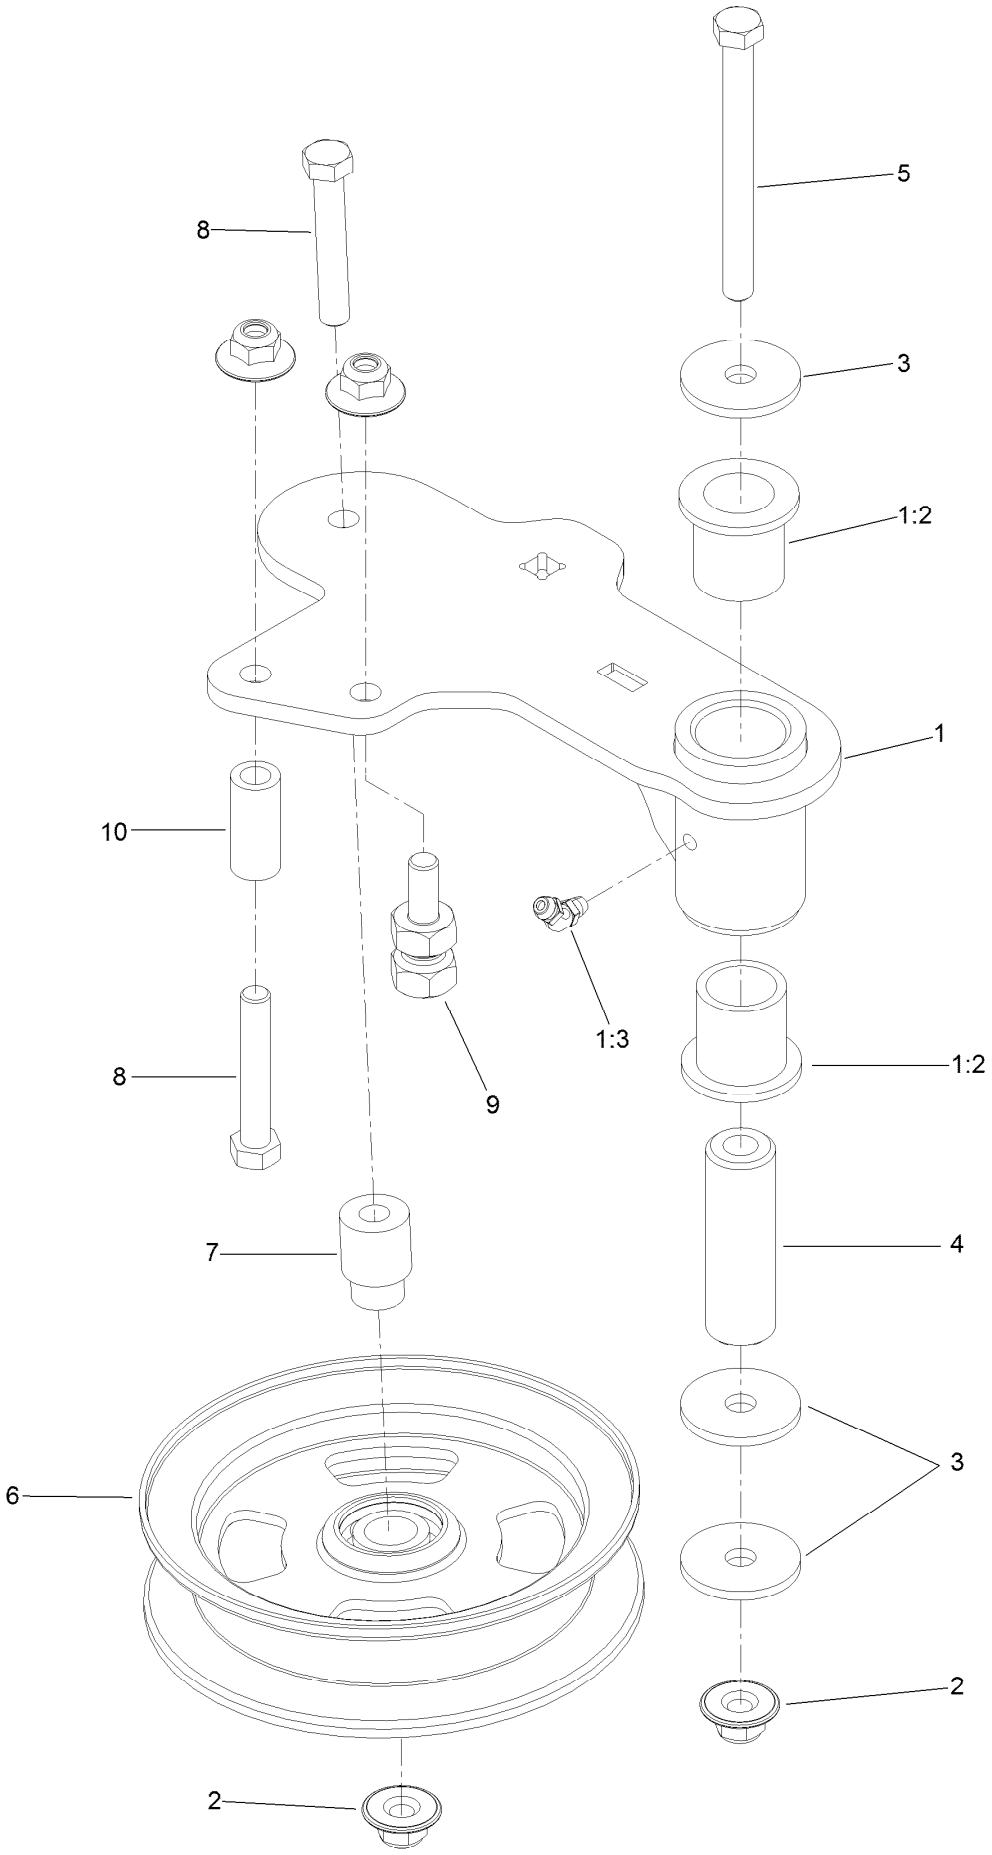

Idler Arm Assembly (continued)

Ref.	Part Number	Qty.	Description
1	114-5870	1	Idler Arm ASM
1:2	1-303514	2	Bearing-Flanged
1:3	1481	1	Fitting-Grease
2	109-6658	4	Nut-Flange, NI
3	1-213069	3	Washer
4	114-5848	1	Spacer-Plain
5	98-5961	1	Screw-HH
6	132-9425	1	Pulley-Idler, Flat
7	112-4212	1	Mount-Pulley
8	323-11	2	Screw-HH
9	132-4729	1	Anchor-Spring, Short
10	104-0151	1	Spacer

Spindle Assembly No. 127-0560

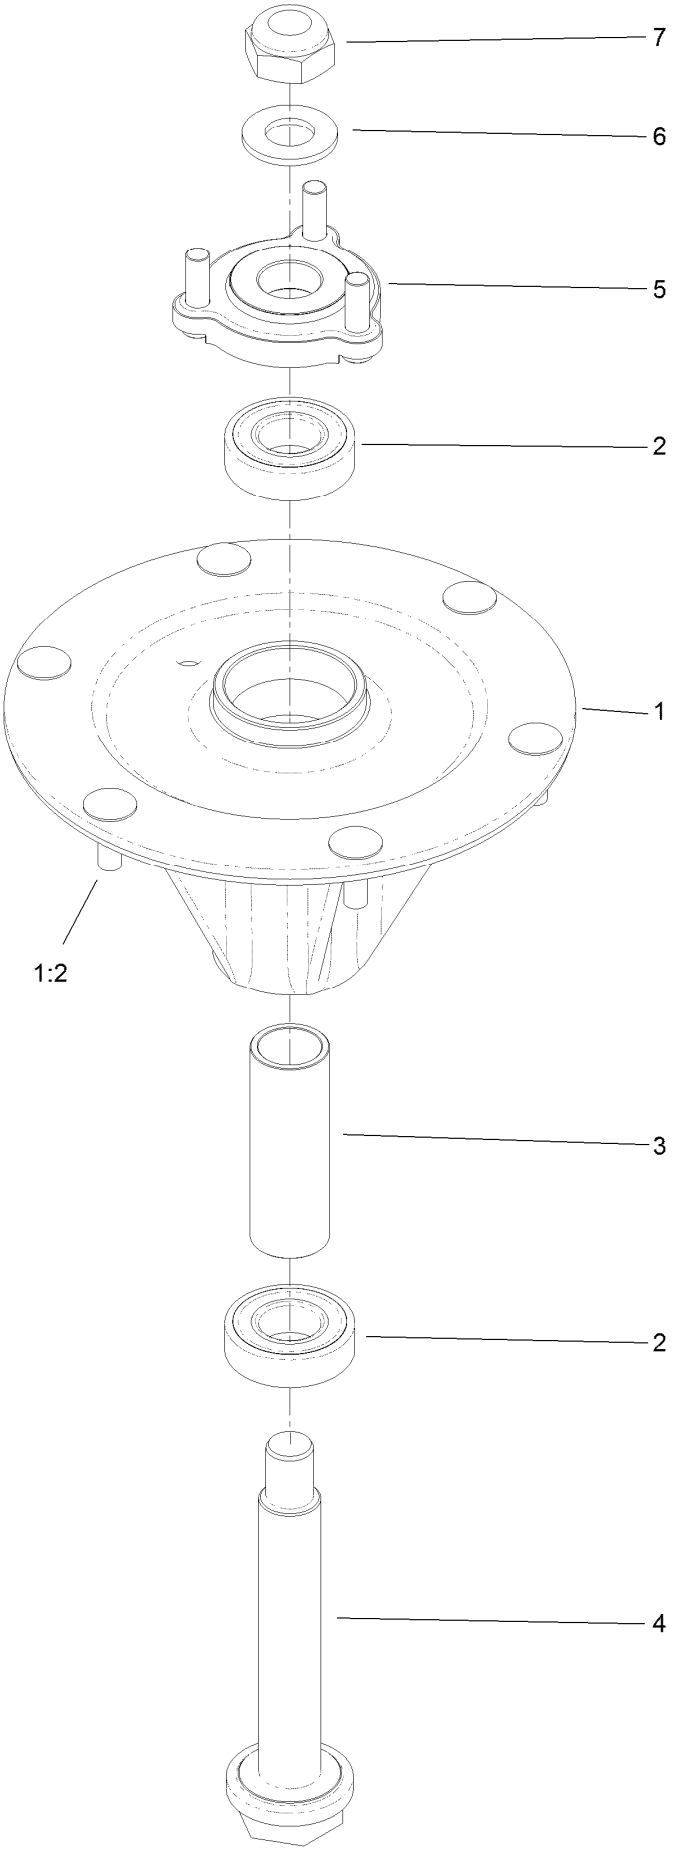


Spindle Assembly No. 127-0560 (continued)

Ref.	Part Number	Qty.	Description
1		1	Spindle Housing ASM W/Studs ●
1:2	114-8195	6	Bolt-Ribbed Neck
2	116-0720	2	Bearing-Ball
3	127-0554	1	Spacer-Bearing
4	127-0556	1	Shaft-Spindle, Ball Bearing
5	127-0557	1	Hub-Spindle (W/Studs)
6	92-5836	1	Washer
7	3296-67	1	Nut-Lock, NI

● Not serviced separately


Rubber Deflector Assembly No. 108-2792

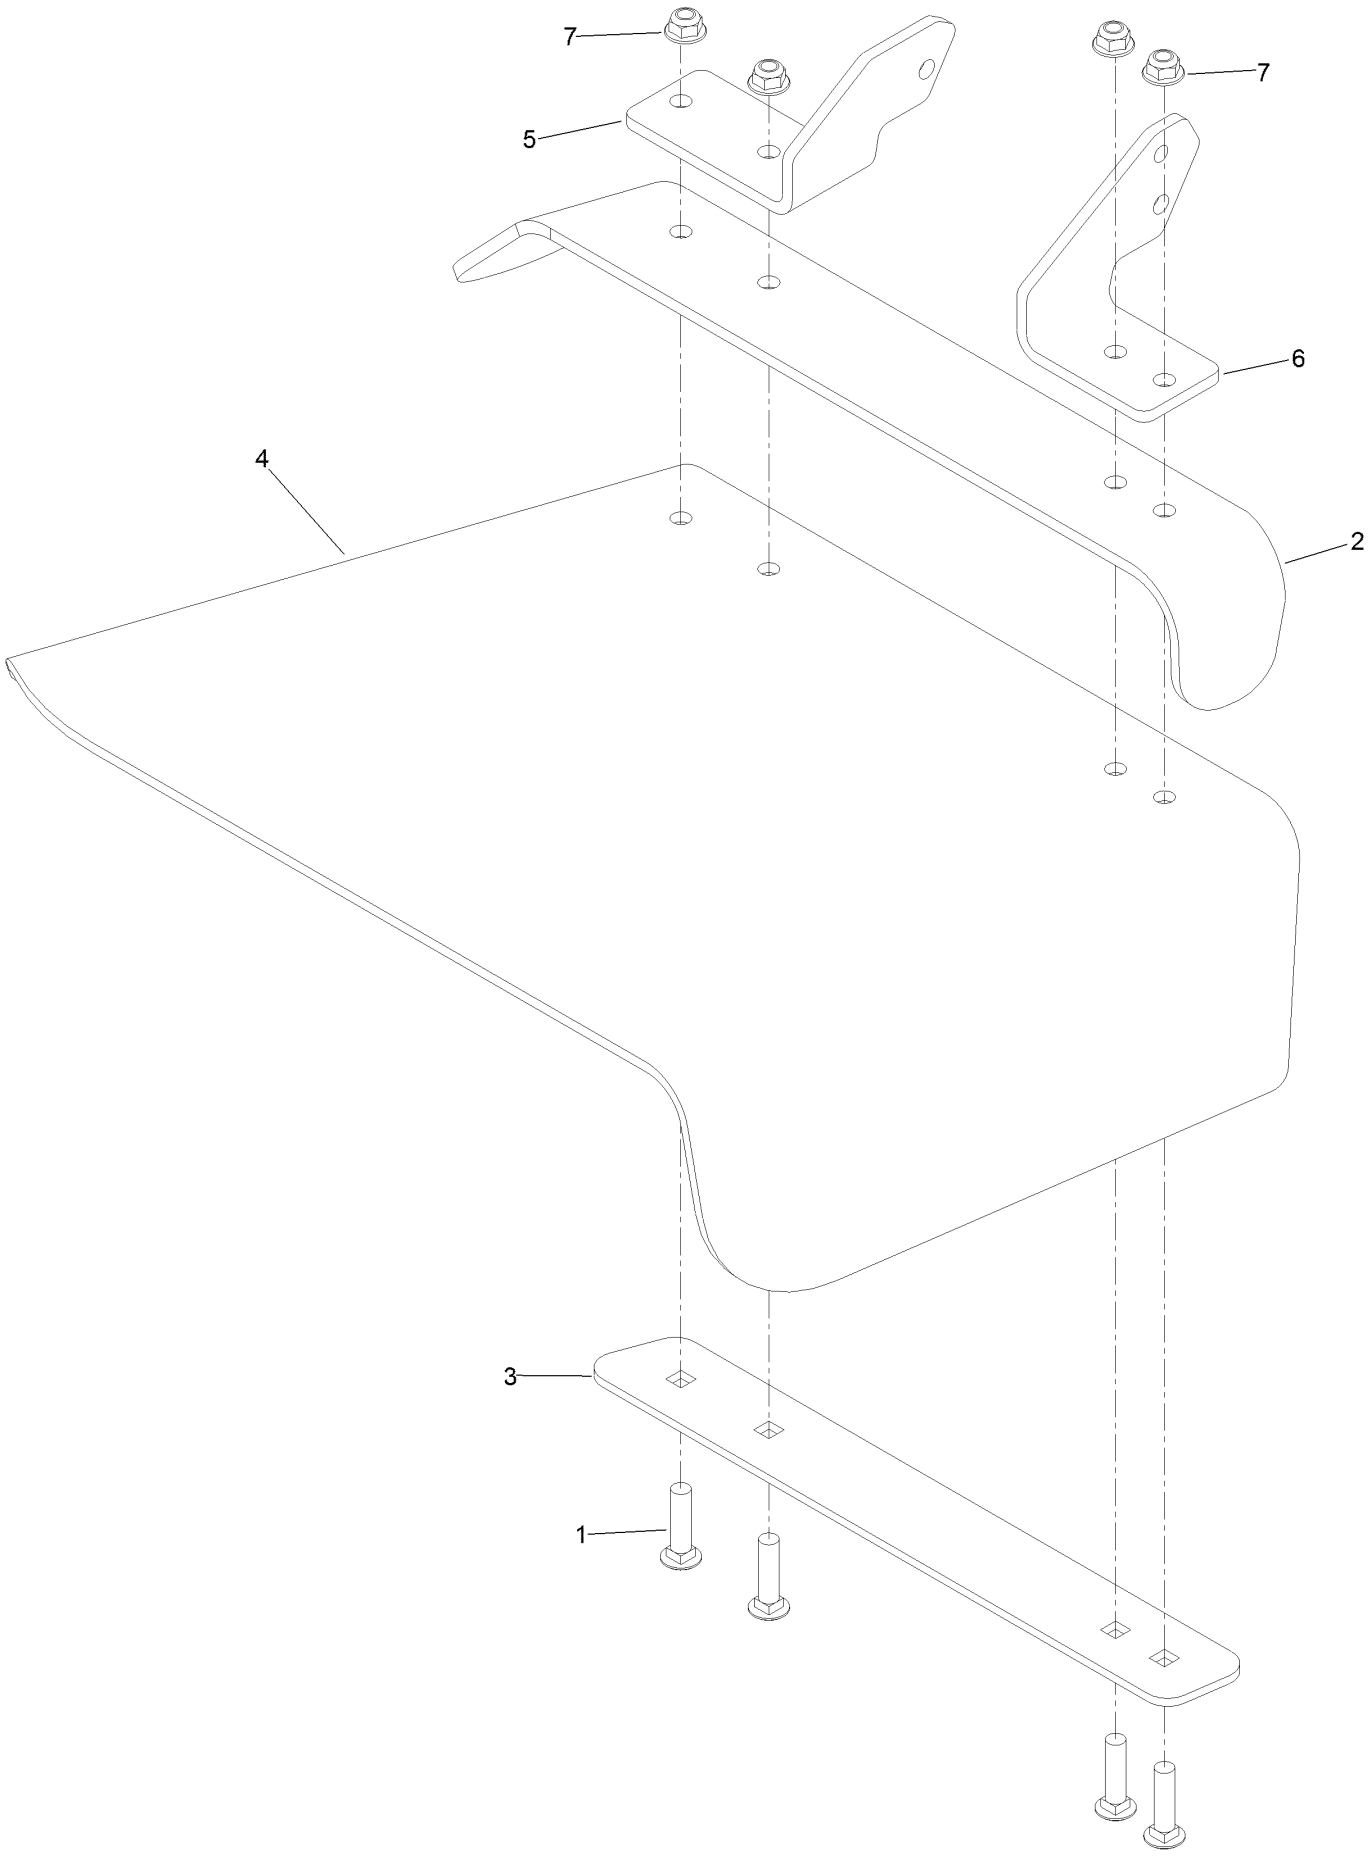

Rubber Deflector Assembly No. 108-2792 (continued)

Ref.	Part Number	Qty.	Description
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	108-5029	1	Deflector-Rubber
5	108-4059-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	104-8301	4	Nut-HF, NI

Frame Decal Assembly

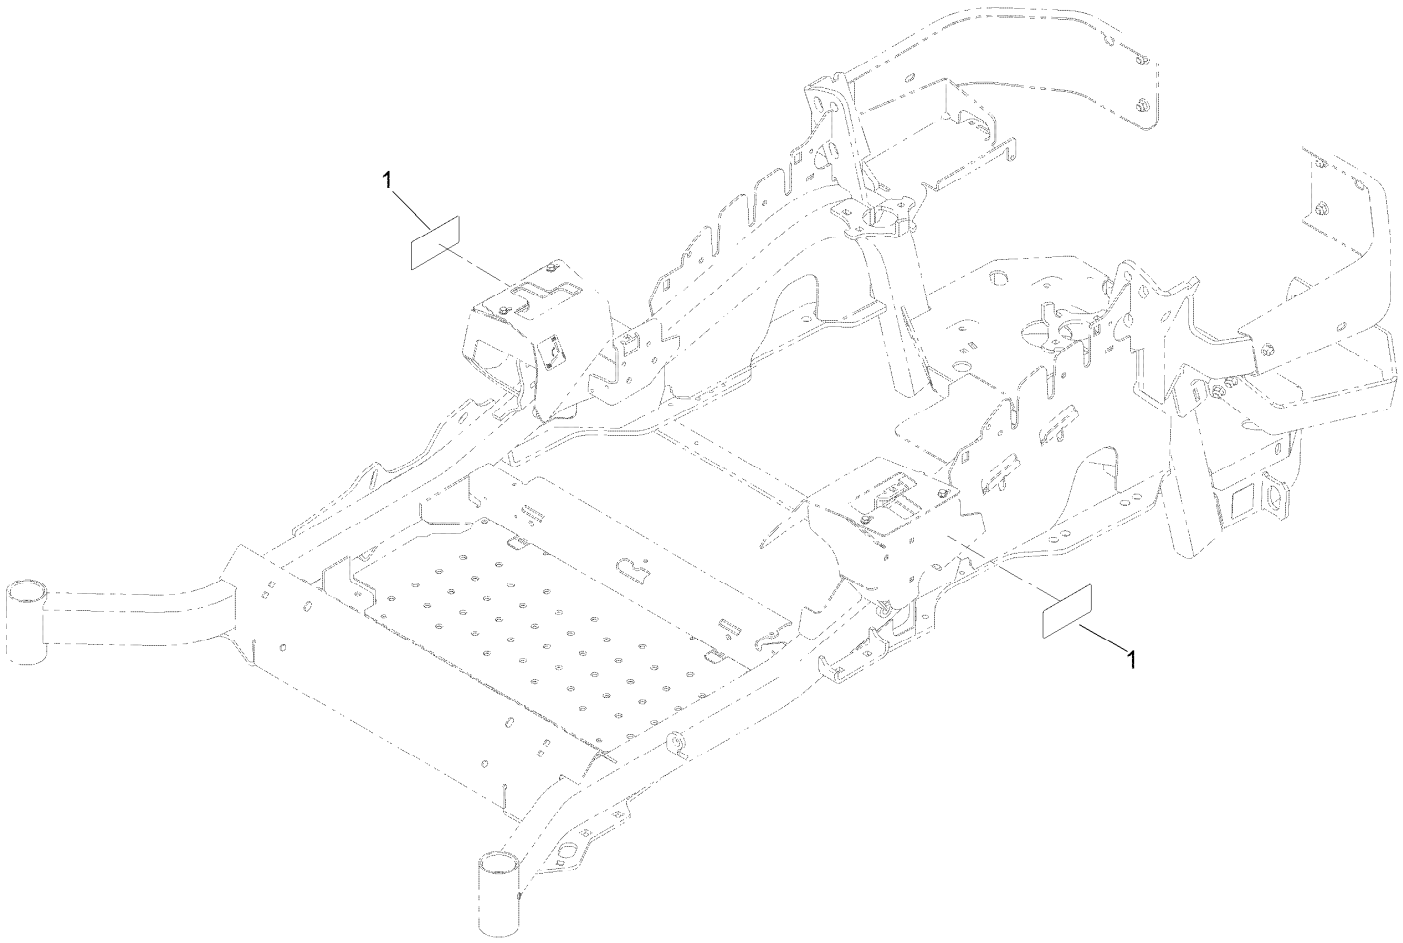

Frame Decal Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	120-5892	2	Decal

Attachments and Accessories

For 75932 Z Master Commercial 3000 Series Riding Mower with 52in TURBO FORCE Side Discharge Mower

Product Name	Model/Part
Anti-Scalp Kit (Trim Side)	108-4140
Hitch Kit	109-9487
Hypr-Oil 500 (quart)	114-4713
Hypr-Oil 500 (gallon)	114-4714
Hypr-Oil 500-5 (5 gallon)	114-4715
Bimini Folding Shade Assembly	115-4510
Light Kit	116-1154
Seat Cover W/arm rest	117-0095
Operator Controlled Discharge Chute Kit	117-3600
Deluxe Seat Kit	121-7595
Seat Tilt Frame And Iso Mount Kit	121-7596
Jack Mount Kit	127-6665
Jack Kit	127-6666
Power Deck Lift Kit	132-5986
Toro Deluxe Rider Cover	490-7319
Spark Arrestor Screen	75-6880
Filter Minder Gauge	99-4664
Trash Holder Kit	TC26

Notes:

Notes:

Notes:



Count on it.