FORM NO. 3321–152


TORO®

MODEL NO. 70041–8900001 & UP

PARTS CATALOG

WHEEL HORSE®

825 Recycler® Riding Mower

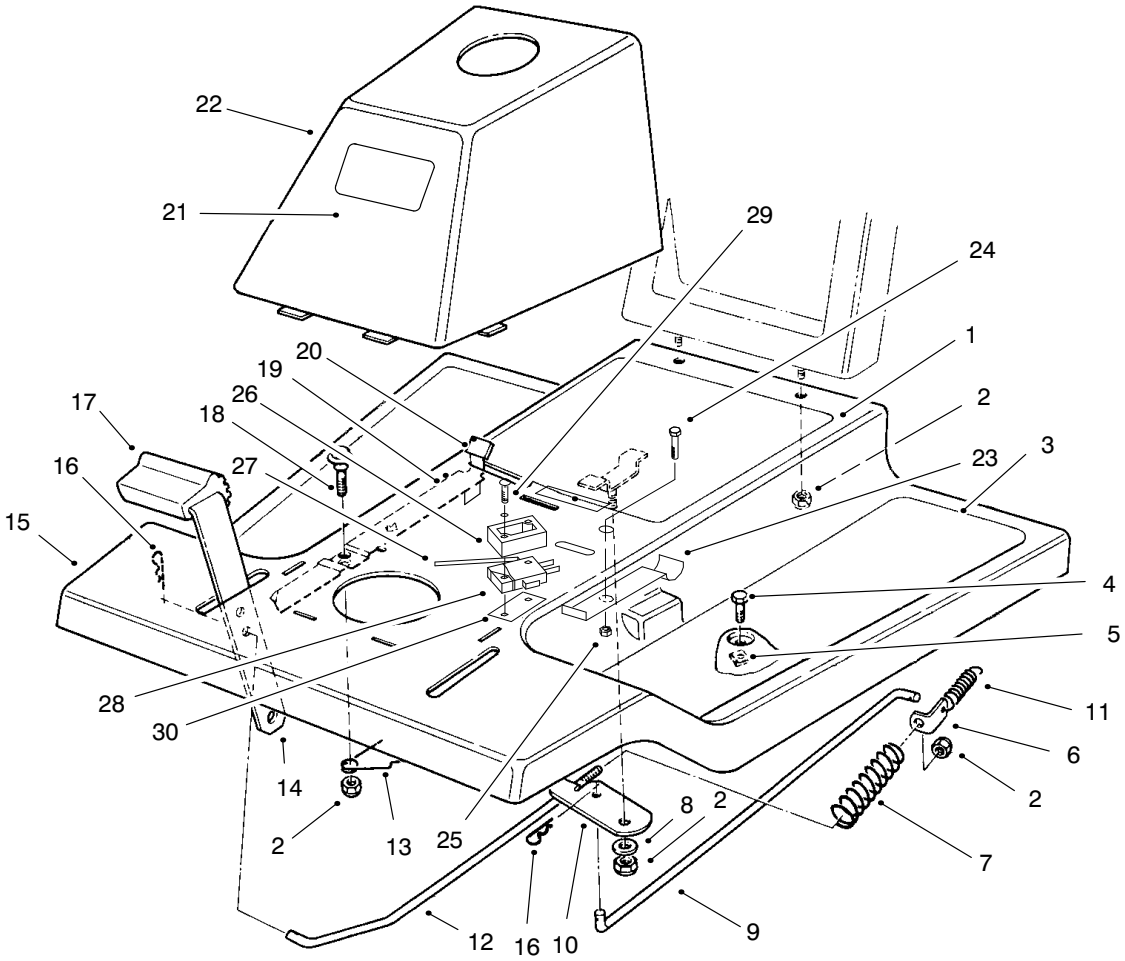


C–1940

FRONT BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93–9499	Decal – Instruction	1
2	3296–29	Nut – Lock	5
3	44–7030	Tread – Foot Rest	2
4	32104–110	Screw – Cap Hex. Hd.	4
5	3290–347	Nut – U–Type	4
6	67–1590	Bracket – Brake Return	1
7	67–1430	Spring – Compression	1
8	26–9530	Washer – Pivot	1
9	67–1340	Rod – Brake, Transmission	1
10	67–1330–03	Lever – Brake, Bellcrank	1
11	67–1450	Spring – Extension	1
12	67–1350	Rod – Front, Brake	1
13	19–1970	Spring – Brake, Parking	1
14	67–1130–03	Pedal – Brake & Clutch	2
15	98–2387	Body W.A. – Front	1
16	3290–250	Pin – Hair, Cotter	2
17	65–2920	Pad – Pedal	2
18	19–1470	Bolt – Shoulder	1
19	98–0711	Lever – Brake, Parking	1
20	19–2200	Tip – Brake, Parking	1
21	92–7981	Decal – Toro	1
22	55–7103	Tower (Incl. Ref. #21)	1
23	98–0709	Clamp	1
24	321–2	Screw – Hex Hd.	1
25	3296–16	Nut – Lock	1
26	88–4880	Spacer – Micro Switch	1
27	88–9932	Switch – Micro	1
28	93–3240	Seal – Plunger	1
29	9104784	Screw	2
30	3290–354	Nut – Speed	1

©The TORO Company – 1998
All Rights Reserved

TPS

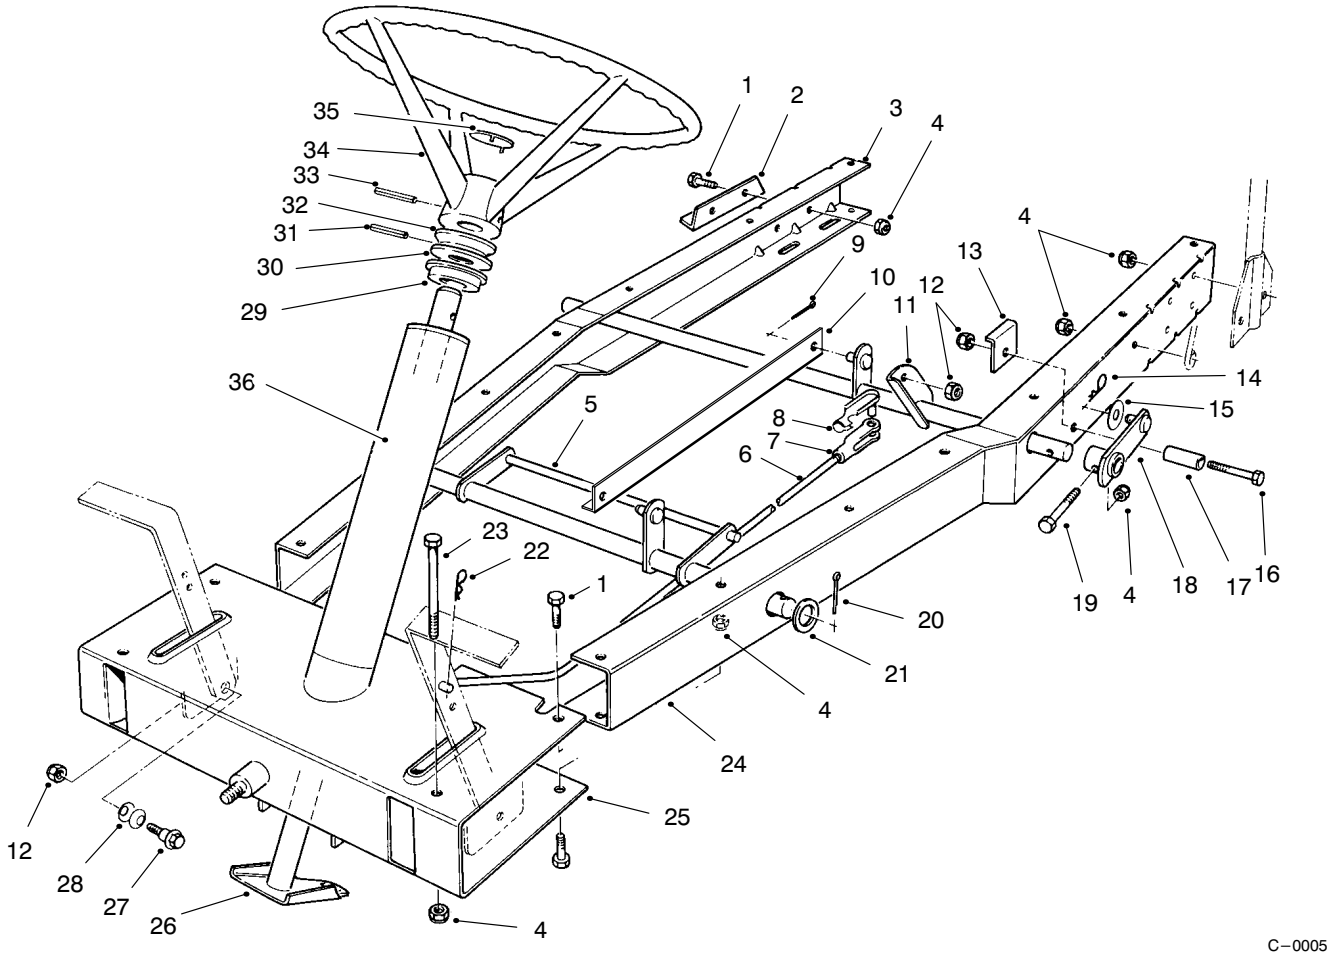


C−0005

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322−3	Screw − Cap Hex. Hd.	6
2	44−7140−01	Mount − Bearing, Axle	1
3	67−0520−01	Channel − R.H.	1
4	3296−29	Nut − Lock	16
5	67−0010−03	Lift W.A. − Front, Deck	1
6	67−0430	Rod − Clutch	1
7	282−27	Clevis	1
8	67−1530	Pin − Clevis	1
9	3272−6	Pin − Cotter	2
10	67−0090−01	Bracket − Link, H.O.C.	1
11	67−0050−01	Tube W.A. − Support, Rear	1
12	3296−39	Nut − Lock	5
13	67−1510−03	Brace − Stop, Deck	2
14	3290−355	Pin − Hair, Cotter	2
15	67−1460	Washer − Flat	2
16	323−10	Screw − Cap Hex. Hd.	2
17	68−8380	Spacer − Stop, Deck	2
18	67−0300−01	Lever W.A. − H.O.C.	2
19	46−2511	Bolt − Mounting, Axle	2

Ref. No.	Part No.	Description	No. Used
20	3272−23	Pin − Cotter	2
21	3256−29	Washer − Flat	2
22	3290−250	PIn − Hair, Cotter	1
23	322−14	Screw − Cap Hex. Hd.	2
24	67−0530−01	Channel − L.H.	1
25	67−0450−01	Frame W.A. − Front	1
26	67−0830−03	Shaft W.A. − Steering	1
27	67−0870	Bolt − Shoulder	2
28	3290−413	Washer − Belleville	4
29	67−0850	Bushing − Steering	2
30	67−0860	Washer − Steering	1
31	32121−32	Pin − Roll	1
32	67−0440	Spacer − Steering	1
33	32121−78	Pin − Roll	1
34	49−3242	Wheel − Steering	1
35	92−7990	Insert − Wheel, Steering	1
36	76−4080	Decal	1
*	13−6049	Kit − Loose parts	1

*Not Illustrated

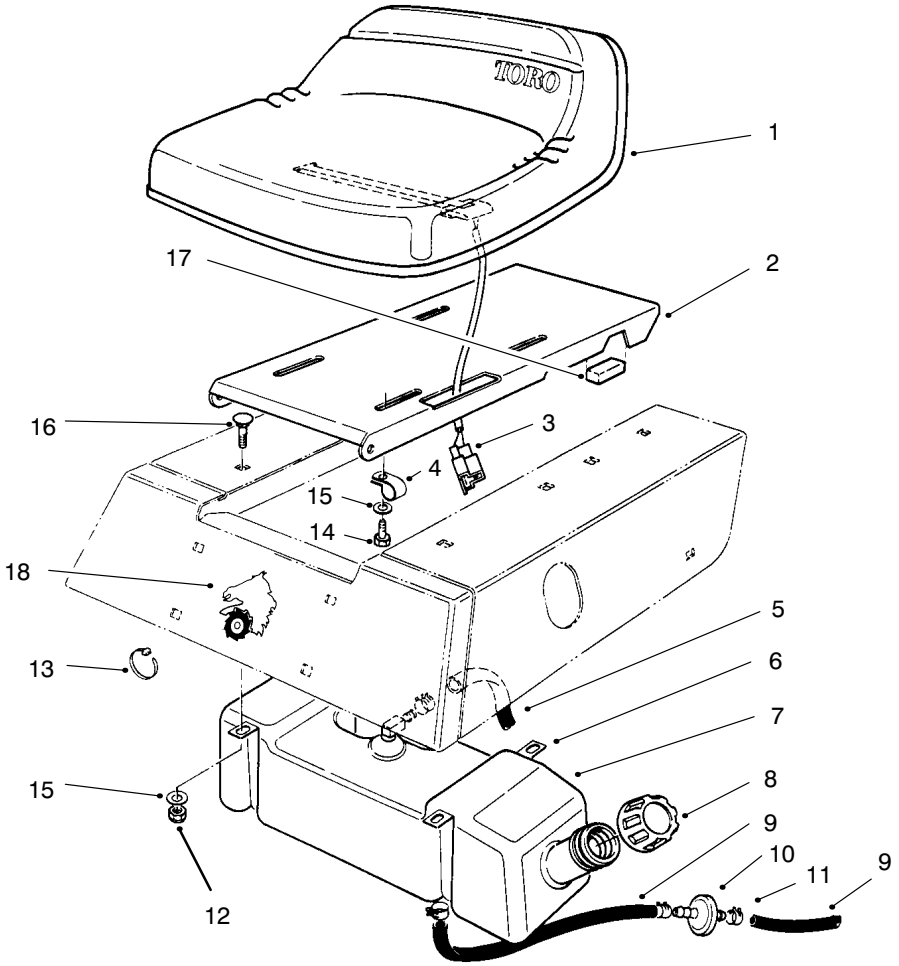


C−1941

SEAT & GAS TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88−4330	Seat	1
2	67−1242−01	Base − Seat	1
3	38−1420	Switch − Seat	1
4	18−2970	R−Clamp	1
5	47−2986	Hose − Gas	1
6	67−0950	Strap − Tank, Gas	2
7	80−4580	Tank − Gas	1
8	55−3576	Assembly − Cap, Gas	1
9	47−2964	Hose − Gas	2

Ref. No.	Part No.	Description	No. Used
10	56−6360	Filter	1
11	2412−98	Clamp − Hose	5
12	3296−29	Nut − Lock	4
13	3290−378	Tie − Cable	1
14	322−3	Screw − Cap Hex. Hd.	4
15	3256−23	Washer − Flat	8
16	3230−1	Bolt − Carriage	4
17	66−6920	Pad − Isolator	2
18	92−7978	Decal − Horsehead	1

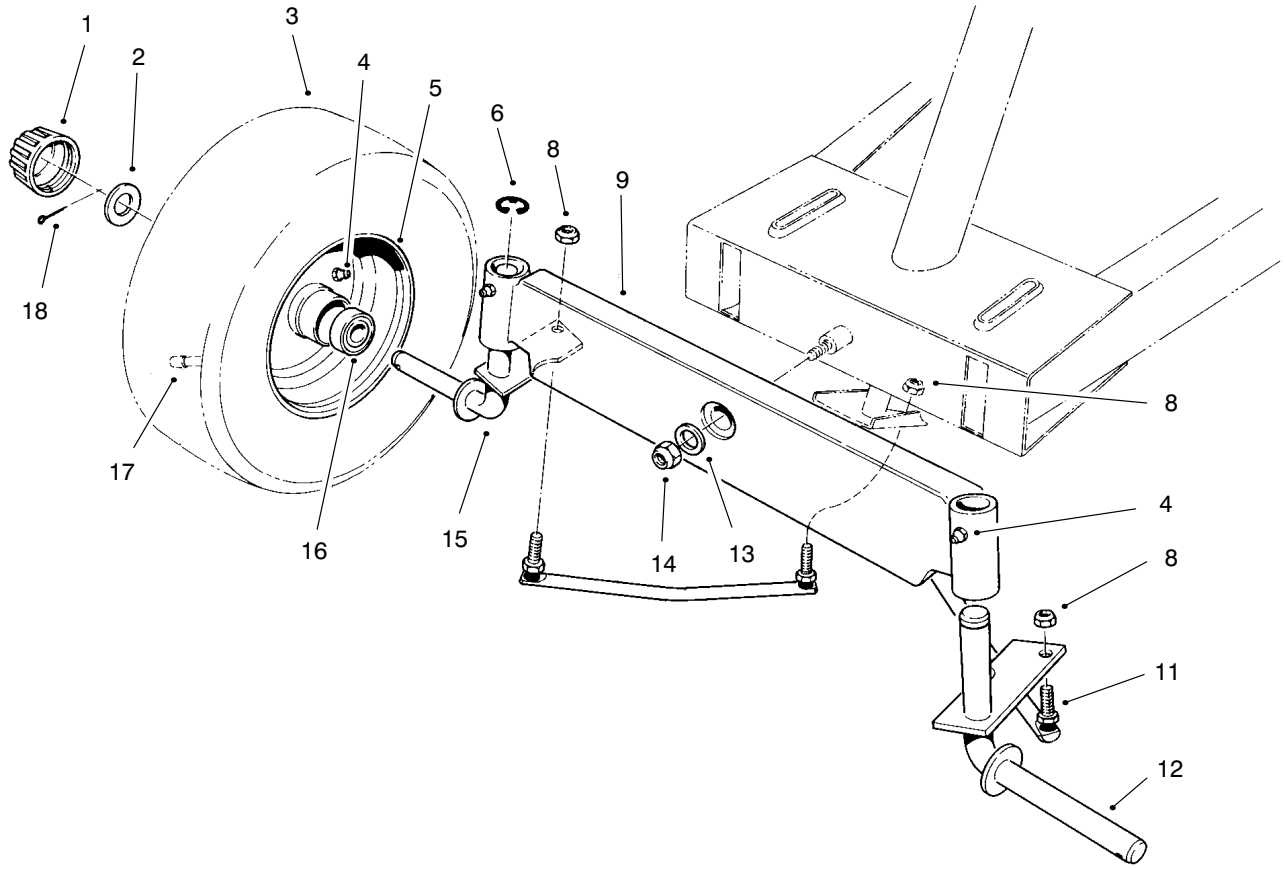


C−0003A

FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	61−9780	Cap − Hub	2
2	28−2480	Washer − Flat	2
3	231−116	Tire	2
4	302−5	Fitting − Grease	4
5	217−80	Rim	2
6	32151−48	Ring − Retaining	2
8	3296−4	Nut − Lock	4
9	67−0990−01	Axle − Front	1
11	67−0880	Assembly − Tie Rod	2

Ref. No.	Part No.	Description	No. Used
12	67−0810−01	Spindle − L.H.	1
13	3256−26	Washer − Flat	1
14	3296−25	Nut − Lock	1
15	67−0800−01	Spindle − R.H.	1
16	88−4400	Bearing	4
17	232−27	Valve Stem w/Cap	2
18	3272−12	Pin − Cotter	2
*	232−44	Tube − Inner	2

*Not Illustrated

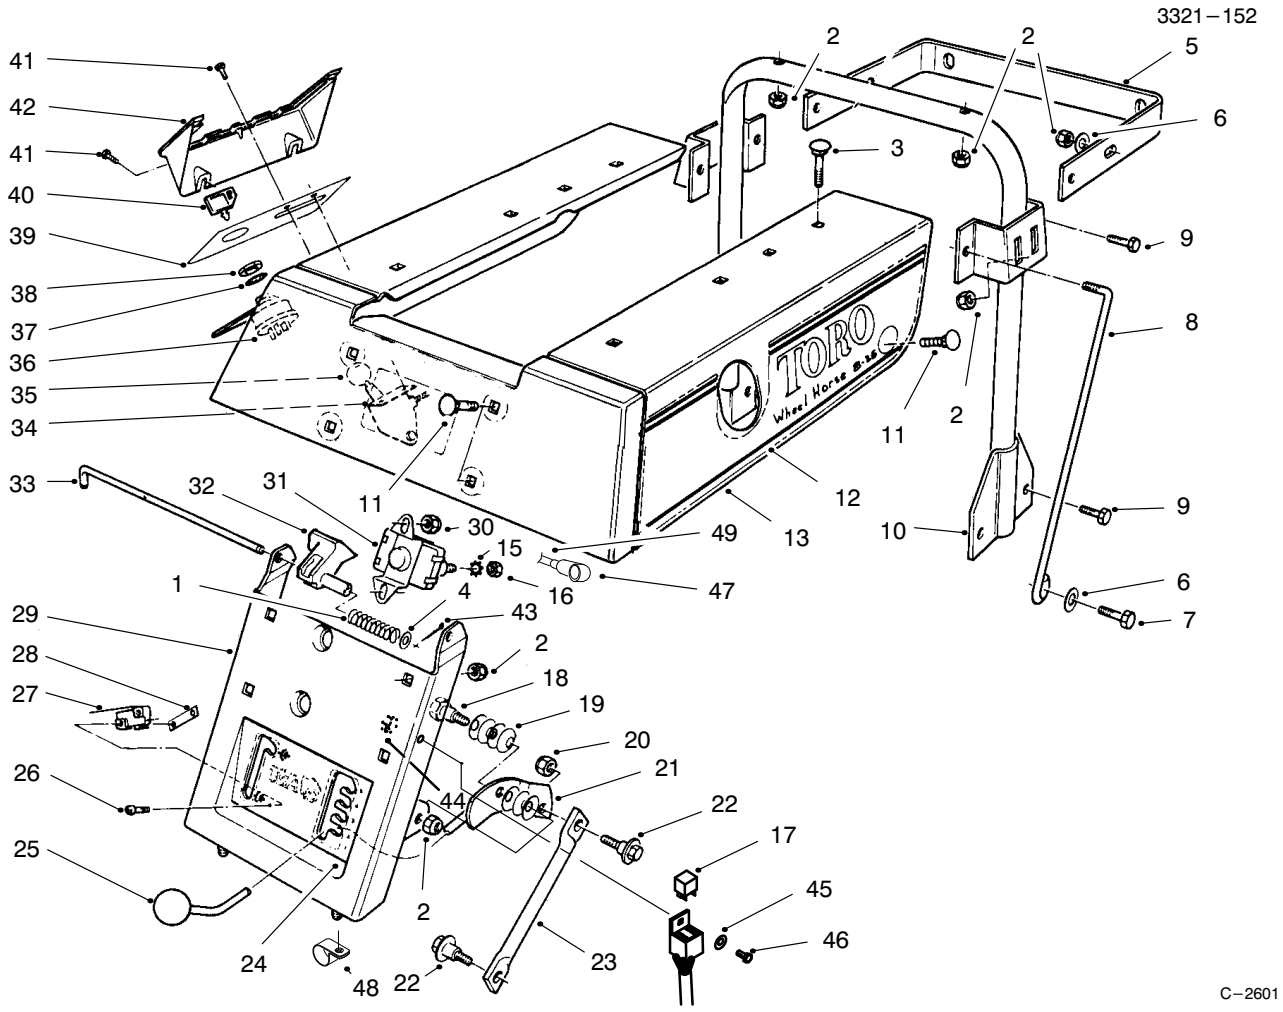


REAR BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71−8310	Spring − Prop, Seat	1
2	3296−29	Nut − Lock	13
3	3230−3	Bolt − Carriage	2
4	3256−22	Washer − Flat	1
5	67−1500−03	Bar − Stand	1
6	3256−23	Washer − Flat	4
7	322−5	Screw − Cap Hex. Hd.	2
8	67−1480	Brace − Support, Seat	2
9	322−3	Screw − Cap Hex. Hd.	6
10	67−0790−03	Support W.A. − Seat	1
11	3230−1	Bolt − Carriage	6
12	98−1456	Decal − Toro L.H.	1
*	98−1457	Decal − Toro R.H.	1
13	67−0231−01	Body W.A. − Rear	1
15	3253−3	Washer − Lock	2
16	3218−1	Nut − Jam	2
17	116397	Relay	1
18	28−0540	Bolt − Shoulder	1
19	3290−413	Washer − Belleville	7
20	3296−39	Nut − Lock	1
21	67−0270	Handle W.A. − H.O.C.	1
22	67−0870	Bolt − Shoulder	2
23	67−0080	Link − H.O.C.	1
24	76−3920	Decal − H.O.C./Deck Engage.	1
25	233−22	Knob	1

Ref. No.	Part No.	Description	No. Used
26	910478	Screw − Pan Head	2
27	88−9932	Switch − Micro	1
28	3290−354	Nut − Double	1
29	67−1090−01	Support W.A. − Seat	1
30	3296−42	Nut − Lock	2
31	92−9845	Solenoid	1
32	80−4330	Prop − Seat	1
33	80−4550	Rod − Base, Seat	1
34	66−6640	Control − Throttle	1
35	233−25	Knob	1
36	88−9830	Switch − Ignition (Incl. Ref. #37 & 38)	1
37	3254−5	Washer − Lock, Int. Tooth	1
38	218−461	Nut − Hex.	1
39	67−1270	Decal − Panel, Control	1
40	63−8360	Key	1
41	32144−42	Screw − Hex. Hd. Tapping	4
42	67−1030	Cover − Panel, Control	1
43	3272−4	Pin − Cotter	1
44	3296−2	Nut − Lock	1
45	3256−14	Washer − Flat	1
46	3290−134	Screw − Cap Mach. Hd.	1
47	93−3190	Boot − Terminal Insulator	1
48	18−2970	Clamp	1
49	98−0707	Cable	1


*Not Illustrated

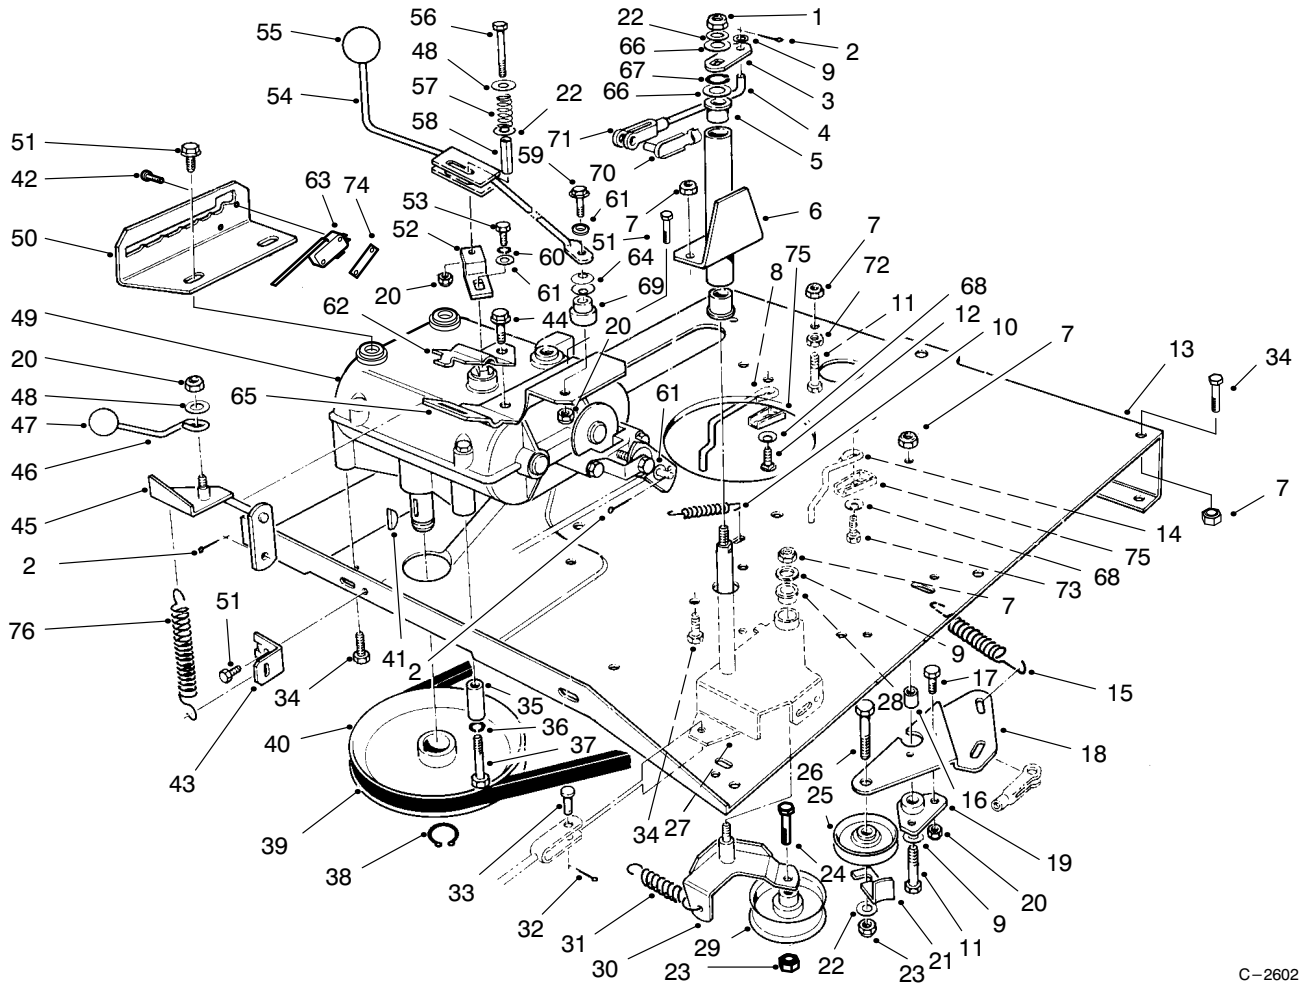

TRANSMISSION & LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296−39	Nut − Lock	1
2	3272−6	Pin − Cotter	2
3	67−0690−03	Flat − Deck Engage	1
4	68−8370	Link − Deck Engage	1
5	256−90	Bushing	2
6	67−0540−03	Tube W.A. − Pivot (Incl. Ref. #5)	1
7	3296−29	Nut − Lock	13
8	67−0930	Guide R.H. − Belt, Engine	1
9	3256−23	Washer − Flat	3
10	26−6700	Spring − Return, Brake	1
11	322−6	Screw − Cap Hex. Hd.	2
12	32144−49	Screw − Tapping	1
13	76−4090−01	Plate − Engine	1
14	67−0940	Guide L.H. − Belt, Engine	1
15	68−9950	Spring − Traction	1
16	67−0410	Spacer − Pivot	1
17	321−4	Screw − Cap Hex. Hd.	2
18	67−0420−03	Plate − Mount, Idler	1
19	67−0400	Mount − Pivot	1
20	3296−42	Nut − Lock	5
21	12−9020	Retainer − Belt	1
22	3256−24	Washer − Flat	3
23	3296−59	Nut − Lock	2


Ref. No.	Part No.	Description	No. Used
24	323−9	Screw − Cap Hex. Hd.	1
25	12−5820	Pulley − Idler, Traction	1
26	323−8	Screw − Cap Hex. Hd.	1
27	67−0360−03	Bracket − Arm, Idler (Incl. Ref. #28)	1
28	256−155	Bushing	1
29	56−9870	Pulley − Idler, Deck	1
30	67−0330−03	Idler − Plate, Mount	1
31	67−9170	Spring	1
32	3272−4	Pin − Cotter	1
33	283−67	Pin − Clevis	1
34	322−3	Screw − Cap Hex. Hd.	13
35	67−0920	Guide − Belt	1
36	3253−4	Washer − Lock	1
37	322−10	Screw − Cap Hex. Hd.	1
38	32120−64	Ring − Retaining	1
39	67−0900	Belt − Traction	1
40	82−6450	Pulley − Transmission	1
41	3257−23	Key	1
42	910478	Screw − Tapping	2
43	67−0750	Bracket − Mount, Spring	1
44	32144−70	Screw − Hex. Hd. Tapping	1
45	67−0600−03	Lever W.A. − Deck Engage	1
46	67−0640	Handle − Deck Engage	1

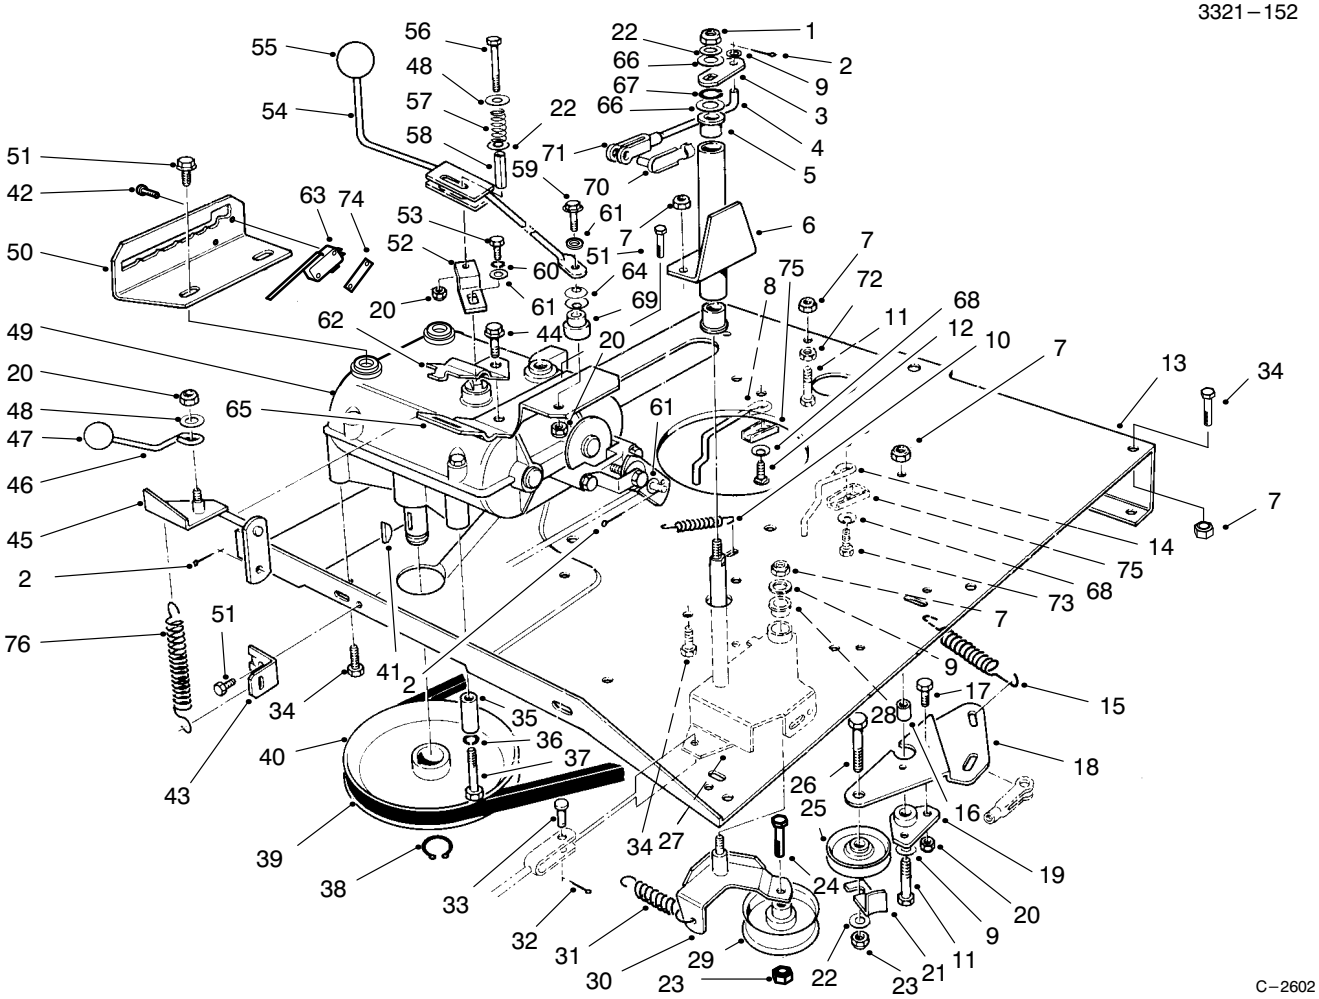

TRANSMISSION & LINKAGE ASSEMBLY (CONTINUED)

Ref. No.	Part No.	Description	No. Used
47	233−22	Knob	1
48	3256−55	Washer − Fender	2
49	67−1400	Transmission	1
50	88−9810−03	Gate − Shift	1
51	32144−14	Screw − Wash. Hd., Tap.	4
52	56−7620	Lever − Shift	1
53	329−4	Screw − Cap Hex. Hd.	1
54	76−3940−03	Lever W.A. − Shift	1
55	233−48	Knob	1
56	321−15	Screw − Cap Hex. Hd.	1
57	56−7730	Spring	1
58	56−7740	Spacer	1
59	321−8	Screw − Cap Hex. Hd.	1
60	3253−3	Washer − Lock	1
61	3256−22	Washer − Flat	3
62	67−0670	Bracket − Engage, Deck	1


Ref. No.	Part No.	Description	No. Used
63	88−9930	Switch − Micro	1
64	3290−478	Washer − Belleville	2
65	67−0660	Bracket − Mount, Shifter	1
66	20−3220	Washer − Flat	2
67	32151−62	Ring − Retaining	1
68	3290−456	Washer − Belleville	2
69	76−3970	Spacer − Pivot	1
70	67−1530	Assembly − Pin, Clevis	1
71	282−27	Clevis	1
72	3218−2	Nut − Jam	1
73	3230−2	Bolt − Carriage	1
74	3290−354	Nut − Double	1
75	76−3820	Anchor − Guide, Belt	2
76	76−4660	Spring	1

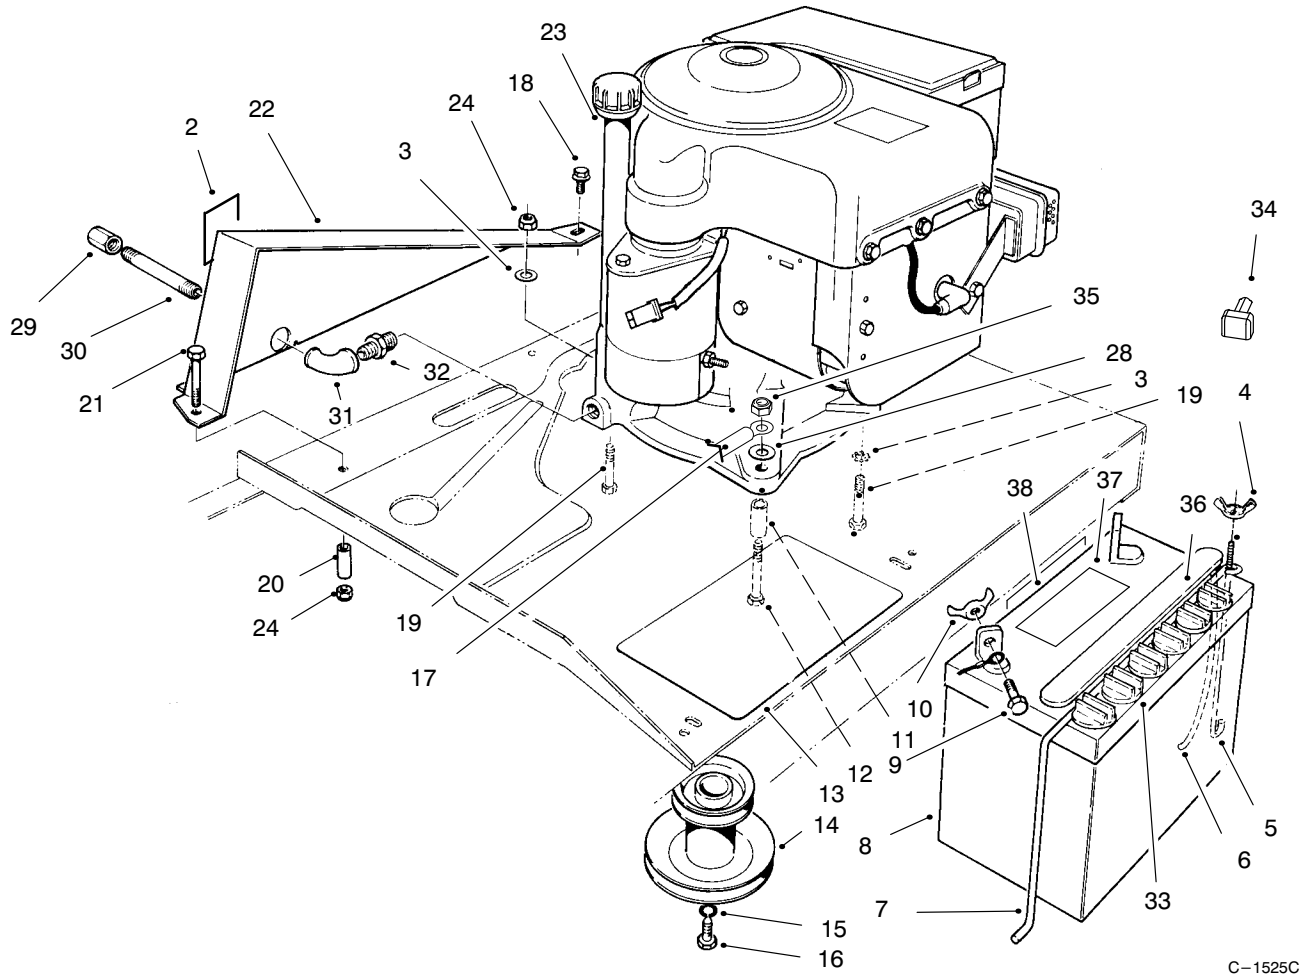

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
3	3256−23	Washer − Flat	2
4	32103−12	Nut − Wing	1
5	56−7720	Post − Hold Down, Battery	1
6	56−2540	Tube − Drain	1
7	56−7710	Hold Down − Battery	1
8	80−2600	Battery 12V	1
9	321−4	Screw − Cap Hex. Hd.	2
10	32103−22	Nut − Wing	2
11	80−4560	Spacer	1
12	322−12	Screw − Cap Hex. Hd.	1
13	62−4300	Pad − Anti−Skid	1
14	98−0712	Pulley − Engine	1
15	3256−25	Washer − Flat	1
16	62−3760	Screw − Cap Hex. Hd.	1
17	98−0708	Assembly − Wire Battery to Ground	2
18	32144−14	Screw − Self Tapping	1
19	322−7	Screw − Cap Hex. Hd.	3


Ref. No.	Part No.	Description	No. Used
20	67−0920	Guide − Belt	1
21	322−10	Screw − Cap Hex. Hd.	1
22	67−0962−01	Guard − Chain	1
23		Engine − 8 H.P. B & S	1
24	3296−29	Nut − Lock	4
28	3255−8	Washer − Lock	3
29	288−2	Cap − Pipe	1
30	289−34	Nipple − Pipe	1
31	2811−17	Elbow − Street	1
32	2812−1	Reducer	1
33	218−560	Cap − Battery	6
34	28−8080	Boot − Battery Terminal	1
35	32153−3	Nut − Lock	1
36	93−9354	Decal − Battery	1
37	93−7276	Decal − Danger	1
38	93−6668	Decal − Battery Charging Instructions	1

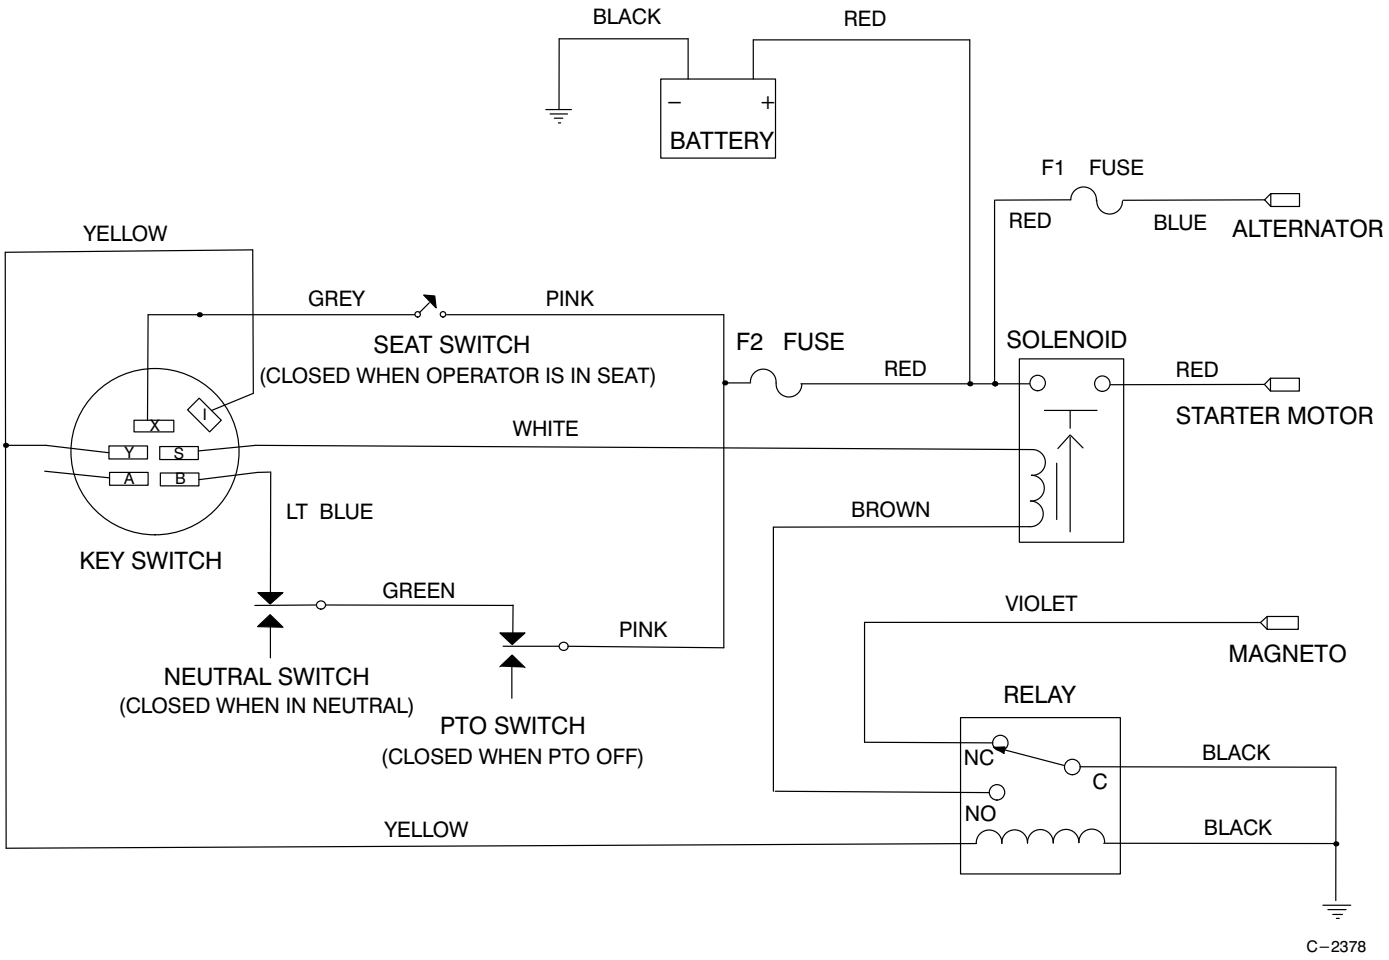

ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	98 – 0706	Harness – Wire	1

Ref. No.	Part No.	Description	No. Used

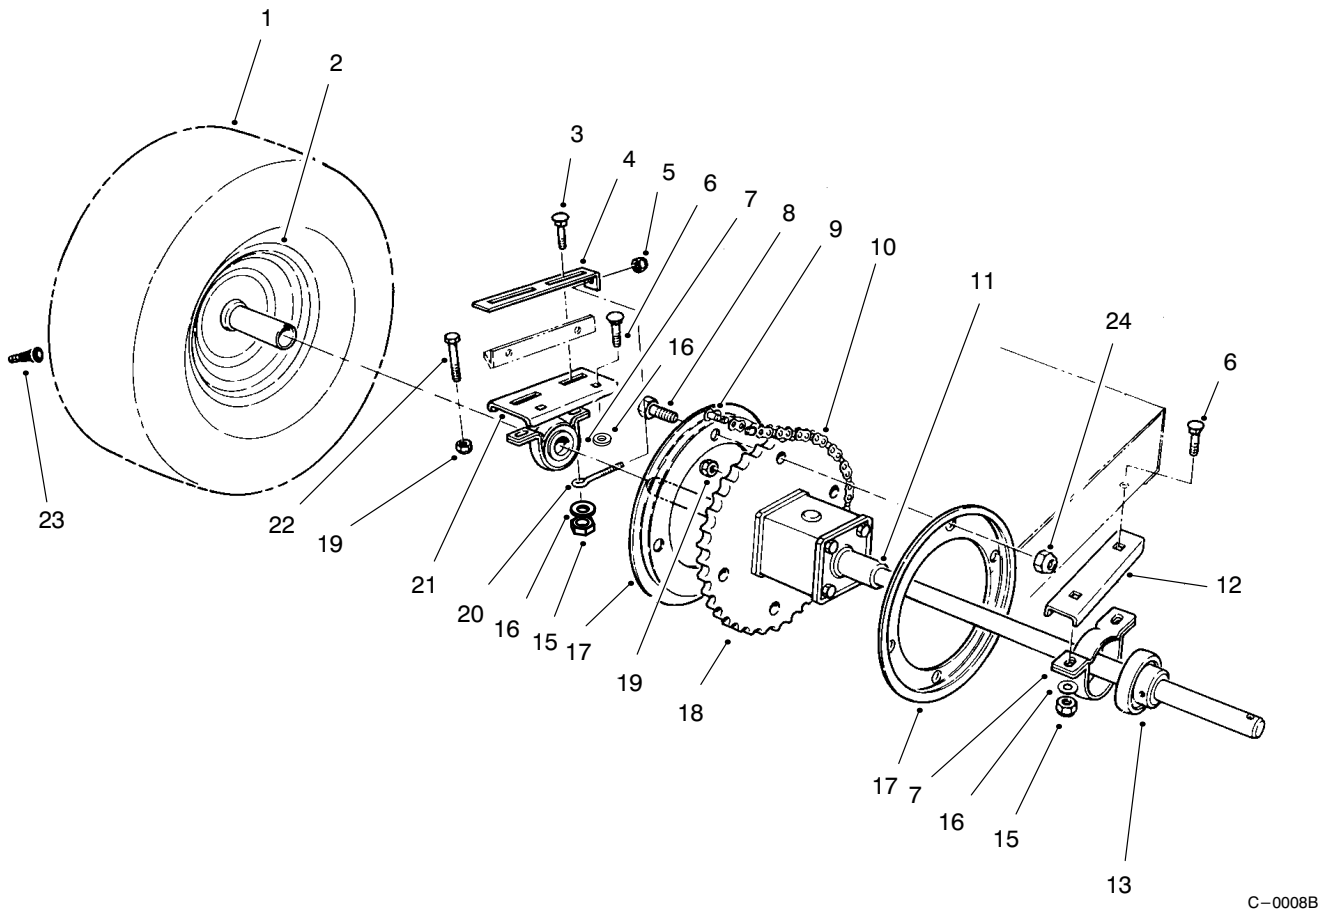


REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	231−115	Tire	2
2	44−9760	Rim	2
3	3231−4	Bolt − Carriage	2
4	61−9990	Plate − Adjusting	1
5	3296−42	Nut − Lock	1
6	3231−25	Bolt − Carriage	4
7	47−1480	Mount − Bearing	2
8	321−4	Screw − Cap Hex. Hd.	4
9	2710−11	Link − Connecting	1
10	67−0910	Chain (Incl. Ref. #9)	1
11	56−9960	Differential	1
12	66−6630−03	Support L.H.	1

Ref. No.	Part No.	Description	No. Used
13	47−1490	Bearing (Incl. Ref. #14)	2
15	3296−39	Nut − Lock	6
16	3256−24	Washer − Flat	6
17	76−1580−03	Guide − Chain	2
18	76−4010	Sprocket	1
19	3296−29	Nut − Lock	6
20	61−9980	Screw − Adjusting	1
21	66−6620−03	Support R.H.	1
22	46−2511	Bolt − Axle	2
23	232−27	Valve Stem w/Cap	2
24	3296−8	Nut − Lock	4
*	232−40	Tube − Inner	2

*Not Illustrated

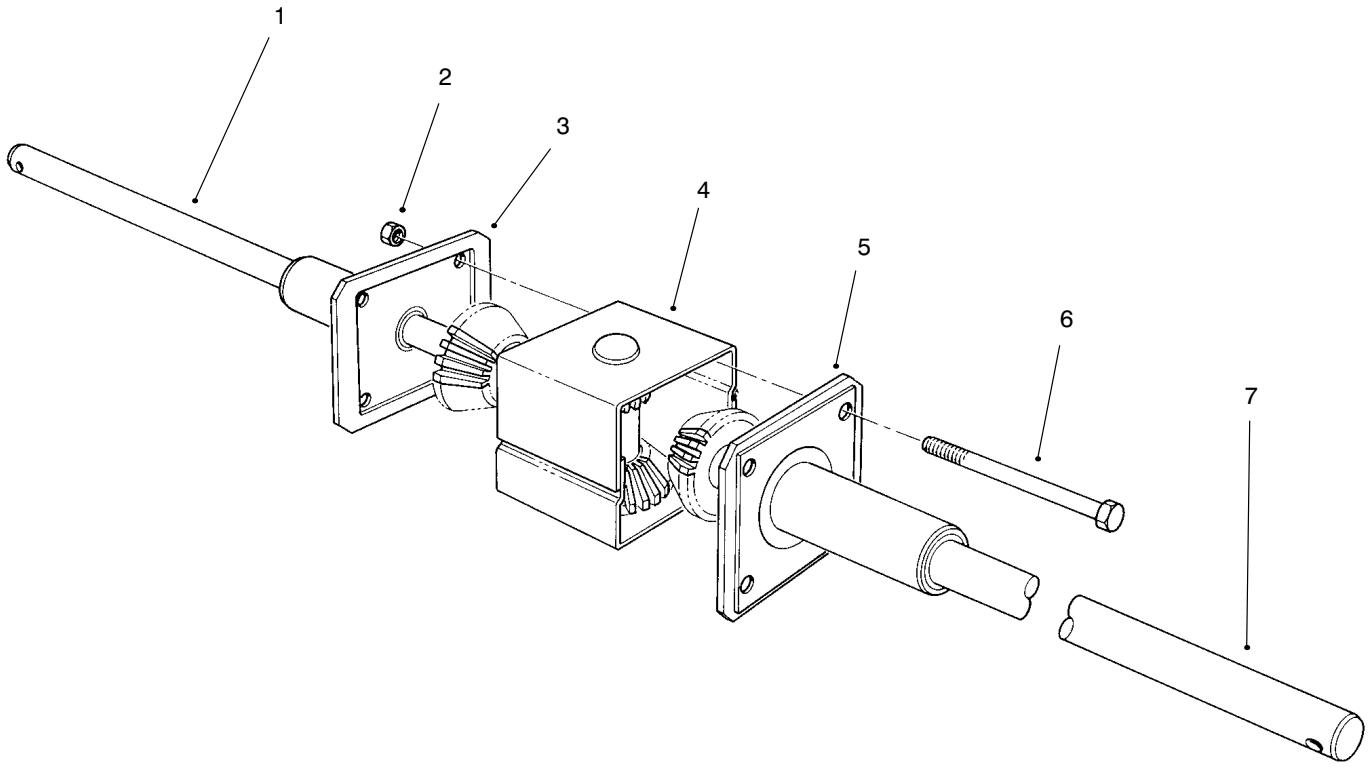


C – 0010

DIFFERENTIAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	55 – 7762	Axle – R.H.	1
2	32152 – 1	Nut – Lock	4
3	55 – 7770	Cap – End, R.H.	1
4	55 – 7780	Case – Gear, Transfer	1

Ref. No.	Part No.	Description	No. Used
5	55 – 7771	Cap – End, L.H.	1
6	322 – 22	Screw – Cap Hex. Hd.	4
7	55 – 7763	Axle – L.H.	1
*	56 – 9960	Differential – Complete	1

*Not Illustrated

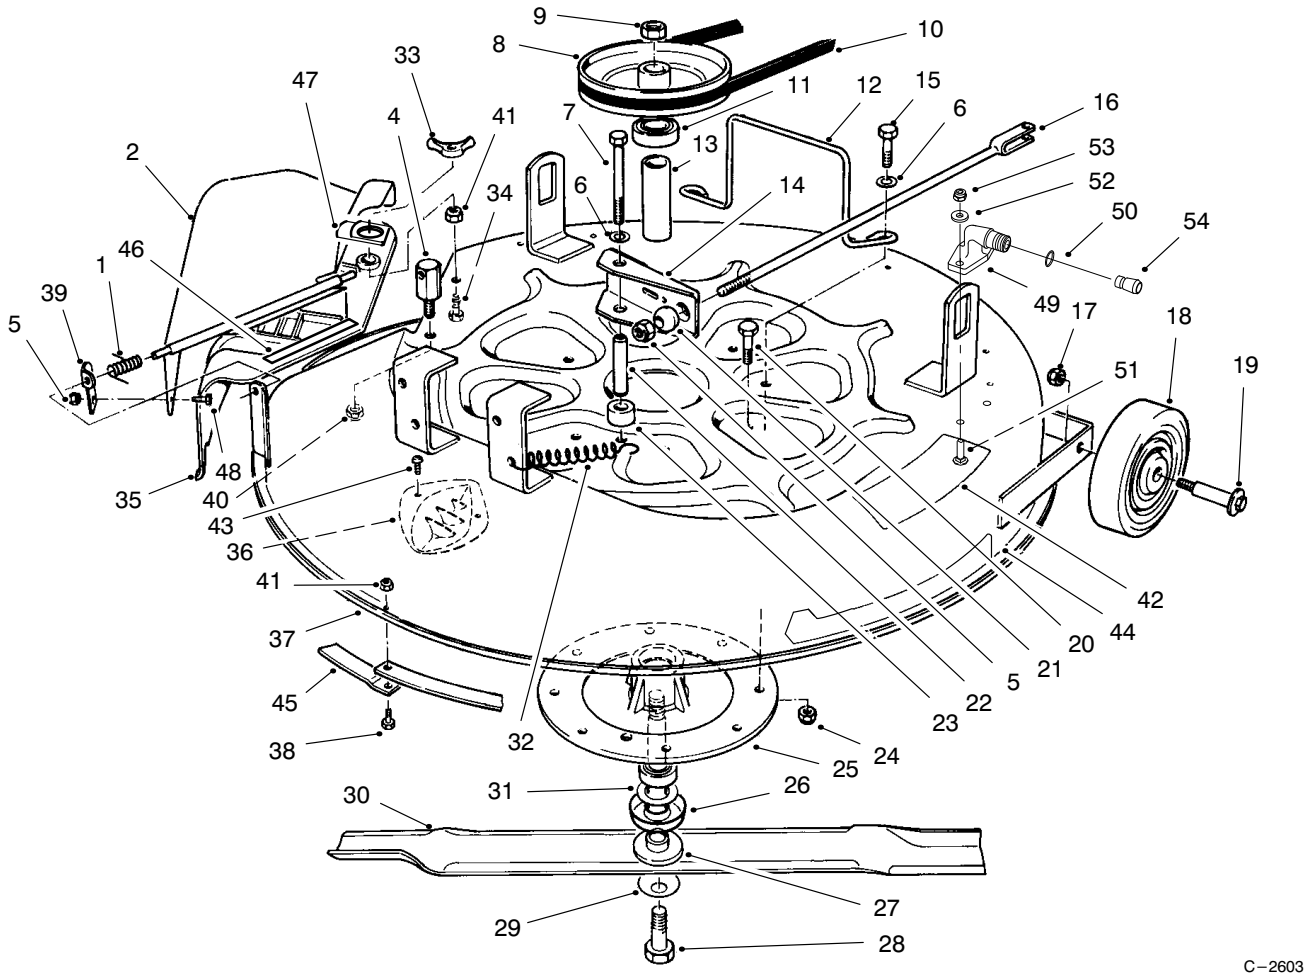


C−2603

CUTTING UNIT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28−8010	Spring	1
2	67−1150−01	Deflector	1
4	67−0140	Post − Pivot	1
5	3296−8	Nut − Lock	2
6	3256−23	Washer − Lock	3
7	322−22	Screw − Cap Hex. Hd.	1
8	80−4460	Pulley − Deck	1
9	3219−6	Nut − Hex.	1
10	98−0710	V−Belt	1
11	38−7820	Bearing − Ball	2
12	80−4520	Guide − Belt	1
13	62−3660	Spacer − Bearing	1
14	67−1370−01	Assy. − Brake, Deck	1
15	322−6	Screw − Cap Hex. Hd.	2
16	67−0570	Rod W.A. − Brake, Deck	1
17	3296−39	Nut − Lock	2
18	61−9760	Wheel − Deck	2
19	56−6590	Bolt − Wheel	2
20	322−3	Screw − Cap Hex. Hd.	6
21	67−0710	Ball − Swivel	1
22	67−0730	Post − Mount, Brake	1
23	67−0740	Spacer − Brake, Deck	1
24	3296−29	Nut − Lock	9
25	67−0970	Hub − Spindle	1
26	80−4360	Shield − Bearing	1
27	80−4340	Shaft − Spindle	1
28	26−0671	Bolt − Blade	1

Ref. No.	Part No.	Description	No. Used
29	3290−465	Washer − Belleville	1
30	80−4530	Blade	1
31	80−4380	Spacer − Spindle	1
32	67−1440	Spring − Brake	1
33	32109−14	Nut − Wing	1
34	3234−21	Screw − Cap Hex. Hd.	1
35	80−4450	Cover − Recycler	1
36	80−4510	Kicker	4
37	94−7484	Deck (Incl. Ref. #42 & 46)	1
38	321−4	Screw − Cap Hex. Hd.	8
39	67−1600−01	Bracket − Deflector	1
40	3296−59	Nut − Lock	1
41	3296−42	Nut − Lock	9
42	76−4070	Decal − Danger	1
43	32144−111	Screw − Special	8
44	92−9522	Decal − Recycler	1
45	80−4540−03	Ring − Deck, Recycler	4
46	68−3650	Decal − Warning	1
47	83−6610	Tab − Hold Down	1
48	321−5	Screw − Hex Hd. Cap	1
49	95−2747	Fitting − Washout	1
50	46−6290	O−Ring	1
51	3229−1	Screw − Carriage	2
52	3256−1	Washer − Flat	2
53	3296−16	Nut − Lock	2
54	95−3270	Connector − Hose	1

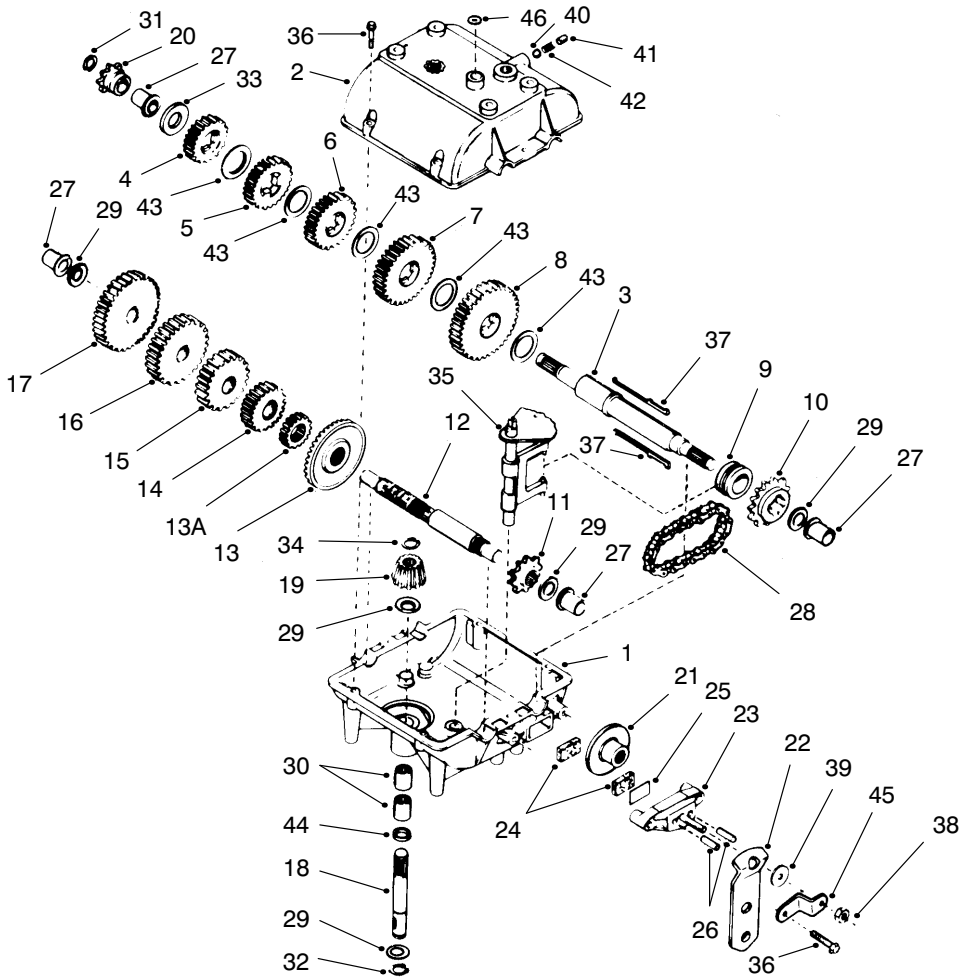


C – 0441

TRANSMISSION PEERLESS MODEL 700 – 025

Ref. No.	Part No.	Description	No. Used
1	770061	Case – Transmission	1
2	772083	Cover – Transmission	1
3	776217	Shaft – Output	1
4	778121A	Gear – Spur (20 Teeth)	1
5	778122A	Gear – Spur (22 Teeth)	1
6	778123A	Gear – Spur (25 Teeth)	1
7	778124A	Gear – Spur (30 Teeth)	1
8	778125	Gear – Spur (35 Teeth)	1
9	784266	Collar – Shift	1
10	786083	Sprocket (18 Teeth)	1
11	786082	Sprocket (9 Teeth)	1
12	776134	Shaft – Counter	1
13	788137A	Gear – Bevel (42 Teeth)	1
13A	778136	Gear – Spur (15 Teeth)	1
14	778126A	Gear – Spur (20 Teeth)	1
15	778127A	Gear – Spur (25 Teeth)	1
16	778128A	Gear – Spur (28 Teeth)	1
17	778129A	Gear – Spur (30 Teeth)	1
18	776135	Shaft – Input	1
19	778113A	Bevel – Pinion, Input	1
20	786047	Sprocket (8 Teeth)	1
21	790003	Disk – Brake	1
22	790008A	Lever – Brake	1
23	790025	Holder – Pad, Brake	1

Ref. No.	Part No.	Description	No. Used
24	790006	Pad – Brake	2
25	790007	Plate – Pad, Brake	1
26	786026	Pin – Dowel	2
27	780105A	Bushing – Flange	4
28	786081	Chain – Roller (No. 41 Chain, 24 Links)	1
29	780072	Washer – Thrust	5
30	780086	Bearing – Needle	2
31	792072	Ring – Retaining	1
32	792035	Ring – Retaining	1
33	780109	Washer	1
34	788040	Ring – Retaining	1
35	784267	Assy. Rod & Fork – Shift	1
36	792073	Screw – Thread Forming	8
37	792089A	Key	2
38	792075	Nut – Lock	1
39	792076	Washer	1
40	792077	Ball – Steel	1
41	792078	Screw – Set	1
42	792079	Spring	1
43	780108	Washer – Thrust	5
44	792001	O–Ring	1
45	786086	Bracket – Lever, Brake	1
46	788069	Seal – Square Cut	1

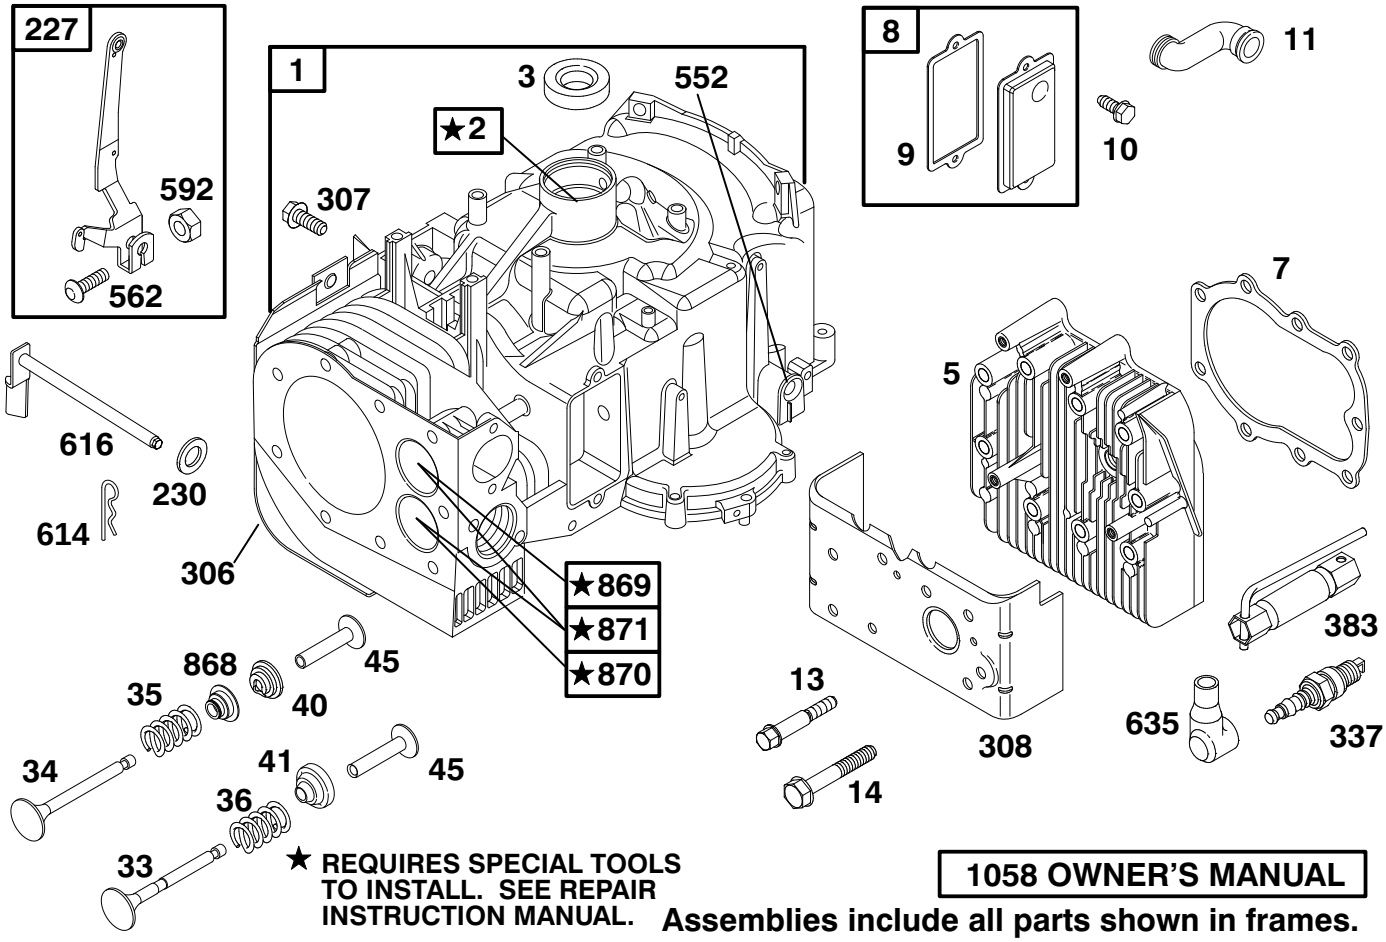

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.

1058 OWNER'S MANUAL


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 195707–0421–E1

Ref. No.	Part No.	Description	No. Used
1	495623	Cylinder Assembly	1
2	495657	Bushing	1
★3	391086	Seal–Oil	1
5	214015	Head–Cylinder	1
†★7	272163	Gasket–Cylinder Head	1
8	495735	Breather Assy.	1
†★9	27803	Gasket–Breather	1
10	94621	Screw–Breather Mtg.	1
11	280005	Grommet	1
13	94565	Screw–Cylinder Head	1
14	94622	Screw–Cylinder Head	1
33	390420	Valve–Exhaust	1
34	261055	Valve–Intake	1
35	65906	Spring–Valve (Intake)	1
36	691597	Spring–Valve (Exhaust)	1
40	221596	Retainer–Valve	1
41	691939	Retainer–Valve	1
45	260933	Tappet–Valve	1
227	493935	Lever Assy.–Governor	1

Ref. No.	Part No.	Description	No. Used
230	94927	Washer	1
306	496797	Shield–Cylinder	1
307	94930	Screw–Hex. Hd.	1
308	224896	Cover–Cylinder Head	1
337	802592	Plug–Spark	1
383	89838	Wrench–Spark Plug	1
552	491986	Bushing–Gov. Crank	1
562	94907	Bolt–Carriage	1
592	231978	Nut–Hex.	1
614	93306	Pin–Cotter	1
616	495157	Crank–Governor	1
635	66538	Elbow–Spark Plug	1
868	497656	Seal–Valve	1
869	211661	Seat–Int. Valve	1
870	211661	Seat–Ex. Valve	1
871	261961	Guide–Exhaust Valve	1
	231218	Guide–Intake Valve	1
1058	273681	Owner's Manual	1

★ Included in Gasket Set–Part No. 299577.
● Included in Carburetor Kit–Part No. 497535.
◆ Included in Carburetor Gasket Set–Part No. 494385.
† Included in Valve Overhaul Gasket Set–Part No. 498536.

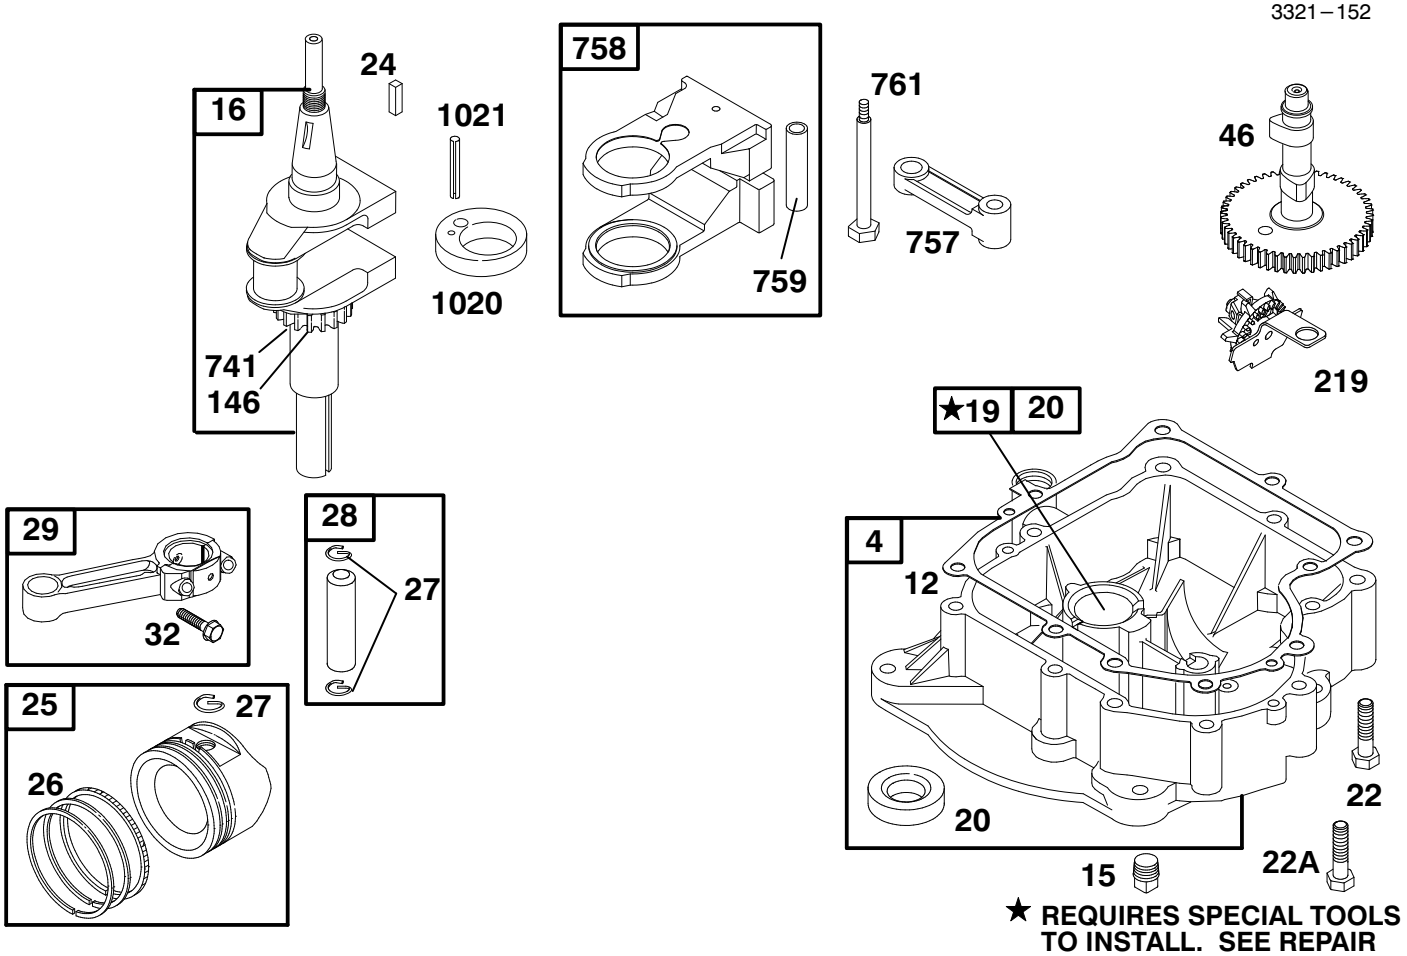

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 195707–0421–E1

Ref. No.	Part No.	Description	No. Used
4	392548	Sump–Engine	1
★12	271701	Gasket–Crankcase (.015” Thick, Std.)	1
★	27876	Gasket–Crankcase (.005” Thick)	1
★	27877	Gasket–Crankcase (.009” Thick)	1
15	94239	Plug–Oil Drain	1
16	495629	Crankshaft	1
19	295963	Bushing	1
★20	391086	Seal–Oil	1
22	93585	Screw–Hex.	1
22A	94690	Screw–Hex. (Used in Pos. #1)	1
24	222698	Key–Flywheel	1
25	499907	Piston Assy. (Std.)	1
	499908	Piston Assy. (.010” O.S.)	1
	499909	Piston Assy. (.020” O.S.)	1
	499910	Piston Assy. (.030” O.S.)	1

Ref. No.	Part No.	Description	No. Used
26	499421	Ring Set (Std.)	1
	299743	Ring Set (Std. Chrome)	1
	391670	Ring Set (.010” O.S.)	1
	391671	Ring Set (.020” O.S.)	1
	391672	Ring Set (.030” O.S.)	1
27	690975	Lock–Piston Pin	1
28	499911	Pin–Piston (Std.)	1
	499920	Pin–Piston (.005” O.S.)	1
29	390402	Rod–Connecting	1
	390773	Rod–Connecting (.020” U.S.)	1
32	94670	Screw–Conn. Rod	1
46	214786	Gear–Cam	1
146	94388	Key–Timing	1
219	491397	Gear–Governor	1
741	263025	Gear–Timing	1
757	213998	Link–Counterweight	1
758	390172	Counterweight	1
759	230787	Pin–Counterweight	1
761	94592	Screw–Shoulder	1
1020	261190	Eccentric	1
1021	94853	Pin–Groove	1

★ Included in Gasket Set–Part No. 299577.
● Included in Carburetor Kit–Part No. 497535.
◆ Included in Carburetor Gasket Set–Part No. 494385.
† Included in Valve Overhaul Gasket Set–Part No. 498536.

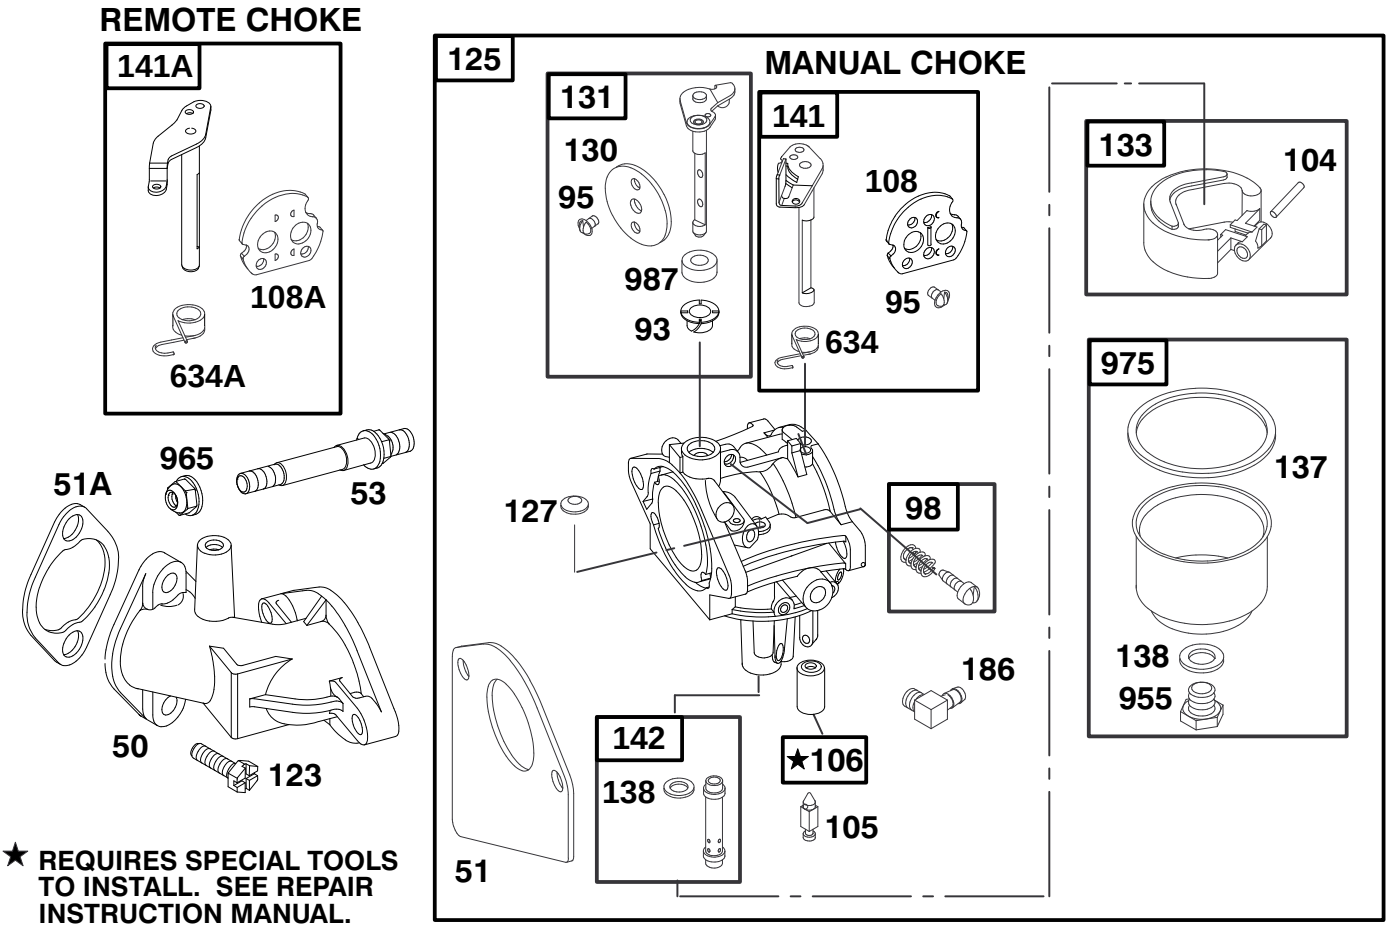

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 195707–0421–E1

Ref. No.	Part No.	Description	No. Used
50	213819	Manifold–Intake	1
◆●51	272465	Gasket–Carb. Elbow	1
★†51A	272554	Gasket–Carb. Mtg.	1
53	94637	Stud–Carb. Mtg.	1
93	281346	Bushing–Throttle Shaft	1
●95	94098	Screw–Slotted	1
98	495800	Screw–Idle Speed	1
●104	231789	Pin–Float Hinge	1
●105	231855	Valve–Needle	1
●106	231854	Seat–Inlet	1
108	224558	Valve–Manual Choke	1
108A	224540	Valve–Remote Choke	1
123	94913	Screw–TorxRHex.	1
125	692684	Carburetor	1
●127		Plug–Welch **Note:** Sold in Kit Only.	1
130	224668	Valve–Throttle	1

Ref. No.	Part No.	Description	No. Used
131	494885	Shaft–Throttle	1
133	494381	Float–Carburetor	1
◆●137	281165	Gasket–Float Bowl	1
◆●138	281164	Washer	1
141	495097	Shaft–Manual Choke	1
141A	495931	Shaft–Remote Choke	1
142	692687	Nozzle–Carburetor (Standard) Nozzle–Carburetor (High Altitude)	1
186	493496	Connector–Hose	1
●634	494453	Seal–Choke Shaft	1
●634A	494455	Seal–Choke Shaft	1
955	94642	Plug	1
965	94010	Nut–Hex.	1
975	495933	Bowl–Float	1
◆987	281166	Seal–Throttle Shaft	1

★ Included in Gasket Set–Part No. 299577.
● Included in Carburetor Kit–Part No. 497535.
◆ Included in Carburetor Gasket Set–Part No. 494385.
† Included in Valve Overhaul Gasket Set–Part No. 498536.

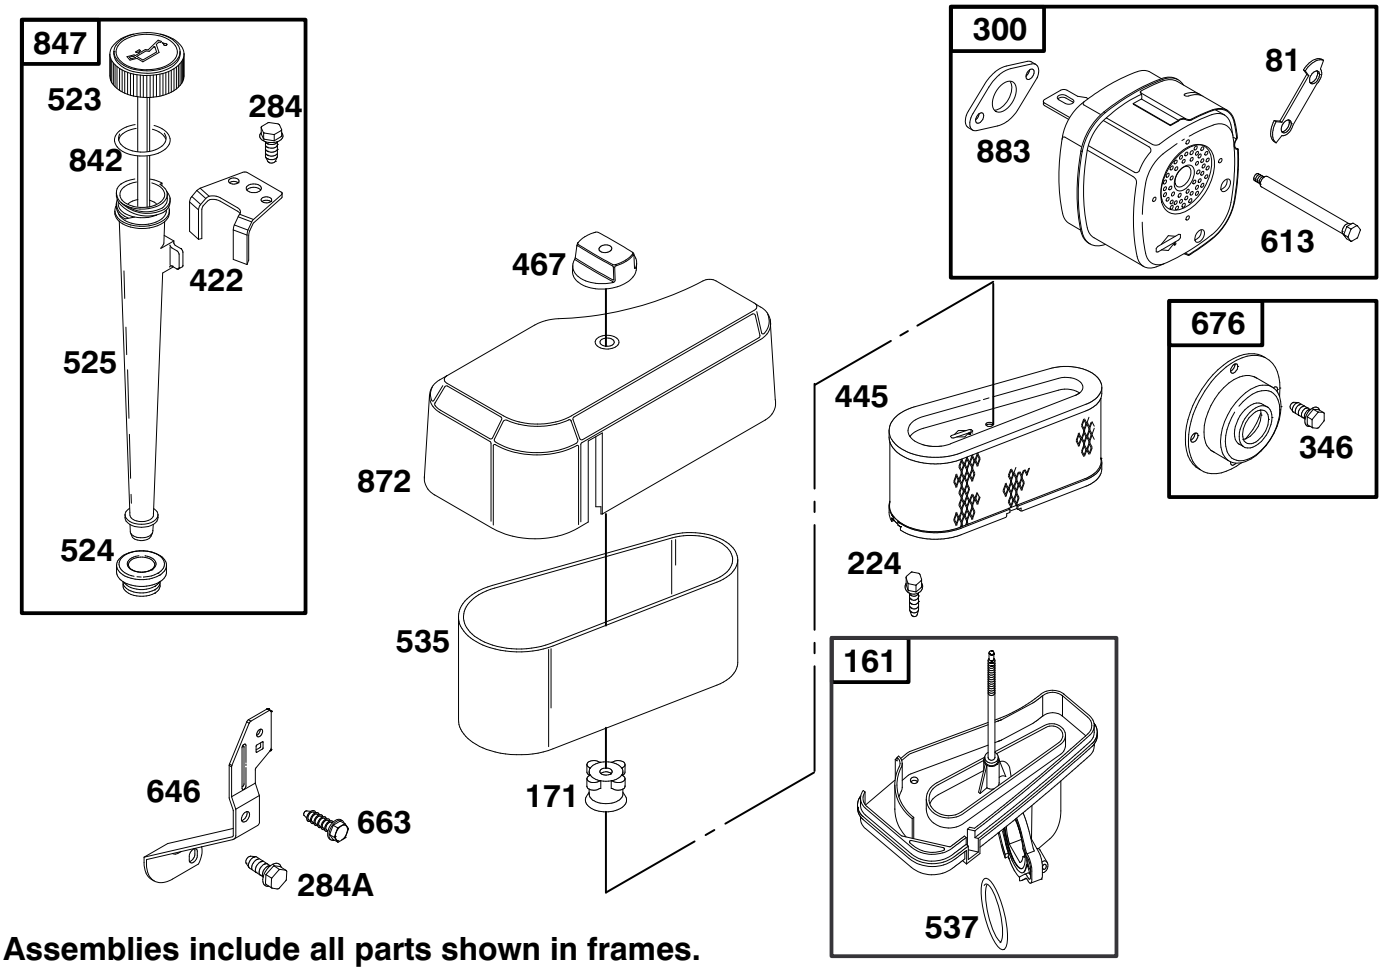


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 195707–0421–E1

Ref. No.	Part No.	Description	No. Used
81	222263	Lock – Screw	1
161	494827	Base – Air Cleaner	1
171	281051	Nut	1
224	94730	Screw–Hex.	1
284	94874	Screw–Hex.	1
284A	94704	Screw–Hex.	1
300	692304	Muffler – Exhaust	1
346	94896	Screw – Hex.	1
422	224872	Bracket–Oil Fill	1
445	493910	Filter – Air	1
467	493903	Knob	1
523	495228	Dipstick	1

Ref. No.	Part No.	Description	No. Used
★524	81370	Grommet	1
525	280133	Tube–Oil Fill	1
535	272477	Filter – Air	1
★537	281106	Gasket – Air Cleaner	1
613	94042	Screw – Shoulder	1
646	224614	Brace	1
663	94929	Screw – Hex.	1
676	395700	Deflector – Exhaust	1
★842	270920	Seal–O-Ring	1
847	392066	Dipstick/Tube Assembly	1
872	281105	Cover – Air Cleaner	1
†★883	272309	Gasket – Exhaust	1

★ Included in Gasket Set–Part No. 299577.
● Included in Carburetor Kit–Part No. 497535.
◆ Included in Carburetor Gasket Set–Part No. 494385.
† Included in Valve Overhaul Gasket Set–Part No. 498536.

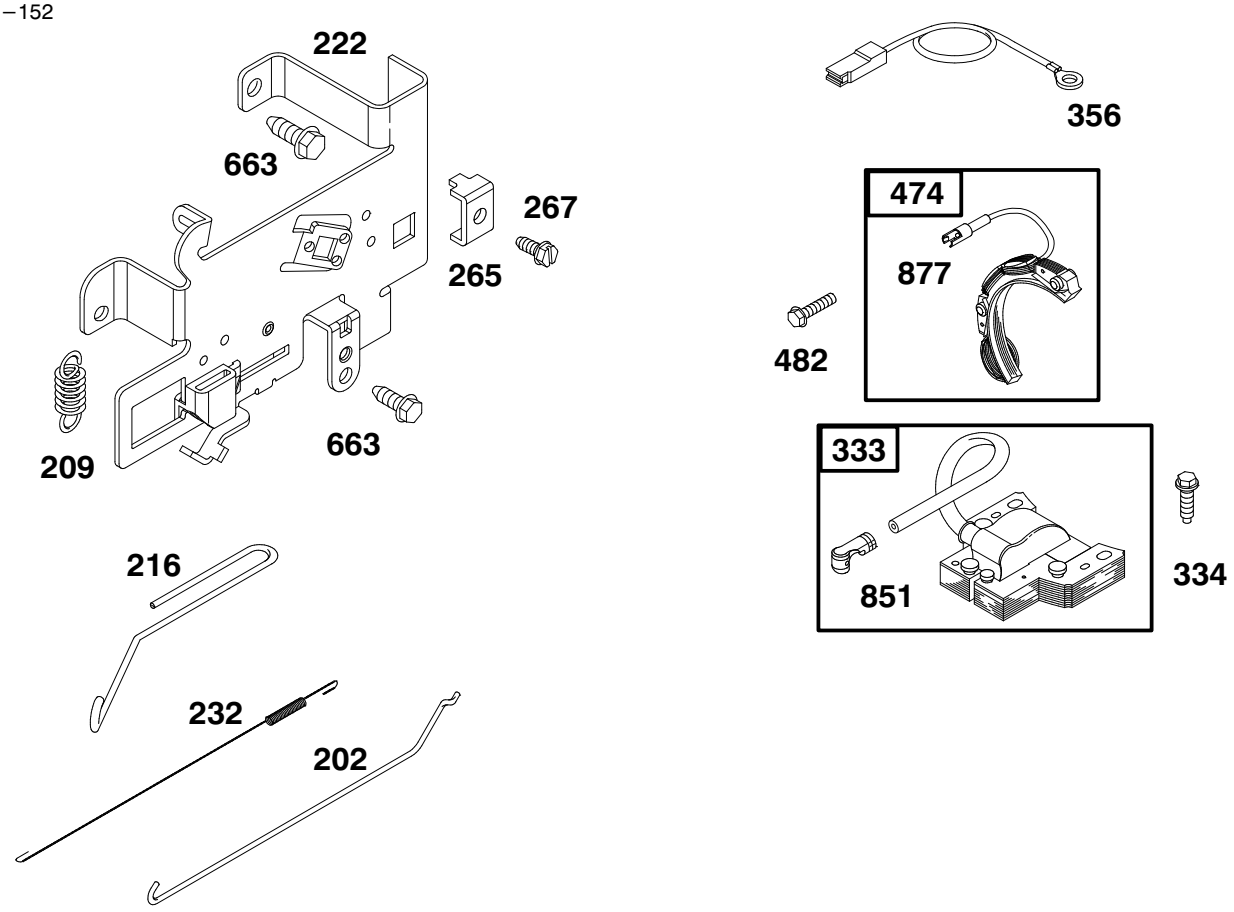


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 195707–0421–E1

Ref. No.	Part No.	Description	No. Used
202	262769	Link–Mechanical Governor	1
209	260871	Spring–Governor	1
216	262768	Link–Choke	1
222	495611	Bracket–Control	1
232	262787	Spring–Link	1
265	221535	Clamp–Casing	1
267	94906	Screw–Hex.	1

Ref. No.	Part No.	Description	No. Used
333	398811	Armature–Magneto	1
334	94731	Screw–Hex.	1
356	494328	Wire–Stop	1
474	391529	Alternator	1
482	93621	Screw–Hex.	1
663	94929	Screw–Hex.	1
851	493880	Terminal–Cable	1
877	393814	Wire–Alternator	1

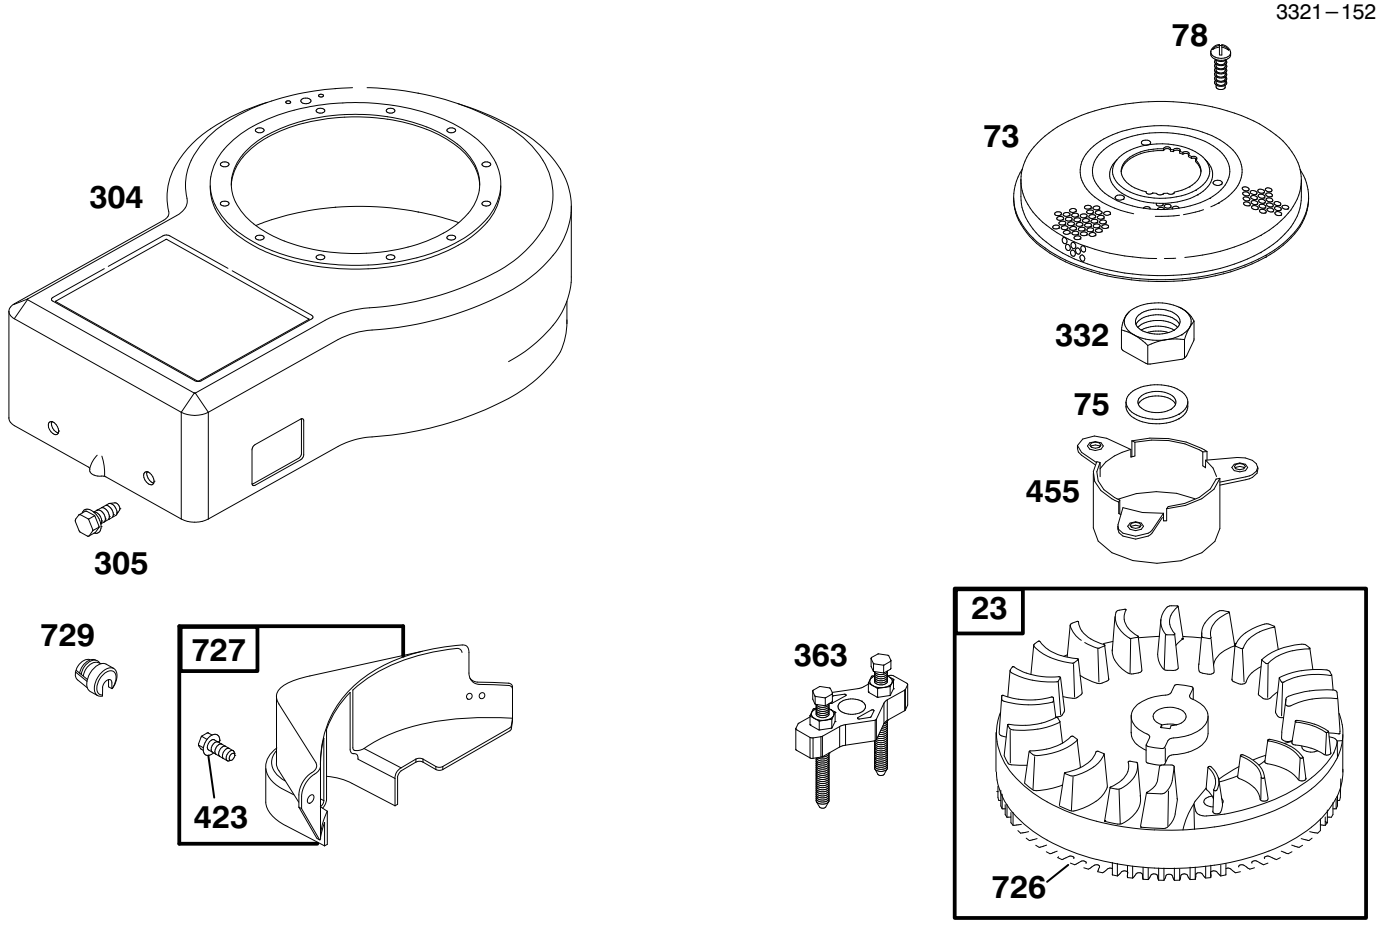


Assemblies include all parts shown in frames.

1036 LABEL KIT – EMISSIONS

ENGINE BRIGGS & STRATTON MODEL 195707–0421–E1

Ref. No.	Part No.	Description	No. Used
23	391983	Flywheel	1
73	224517	Screen – Rotating	1
75	225136	Washer–Flywheel	1
78	94626	Screw – Hex.	1
304	494084	Housing – Blower	1
305	94786	Screw – Hex.	1
332	94877	Nut – Flywheel	1

Ref. No.	Part No.	Description	No. Used
363	19165	Flywheel Puller	1
423	94625	Screw–Shoulder	1
455	222561	Cup – Flywheel	1
726	392134	Gear–Ring	1
727	395405	Guard–Starter Drive	1
729	281395	Clip–Wire	1
1036	499356	Label Kit – Emissions	1

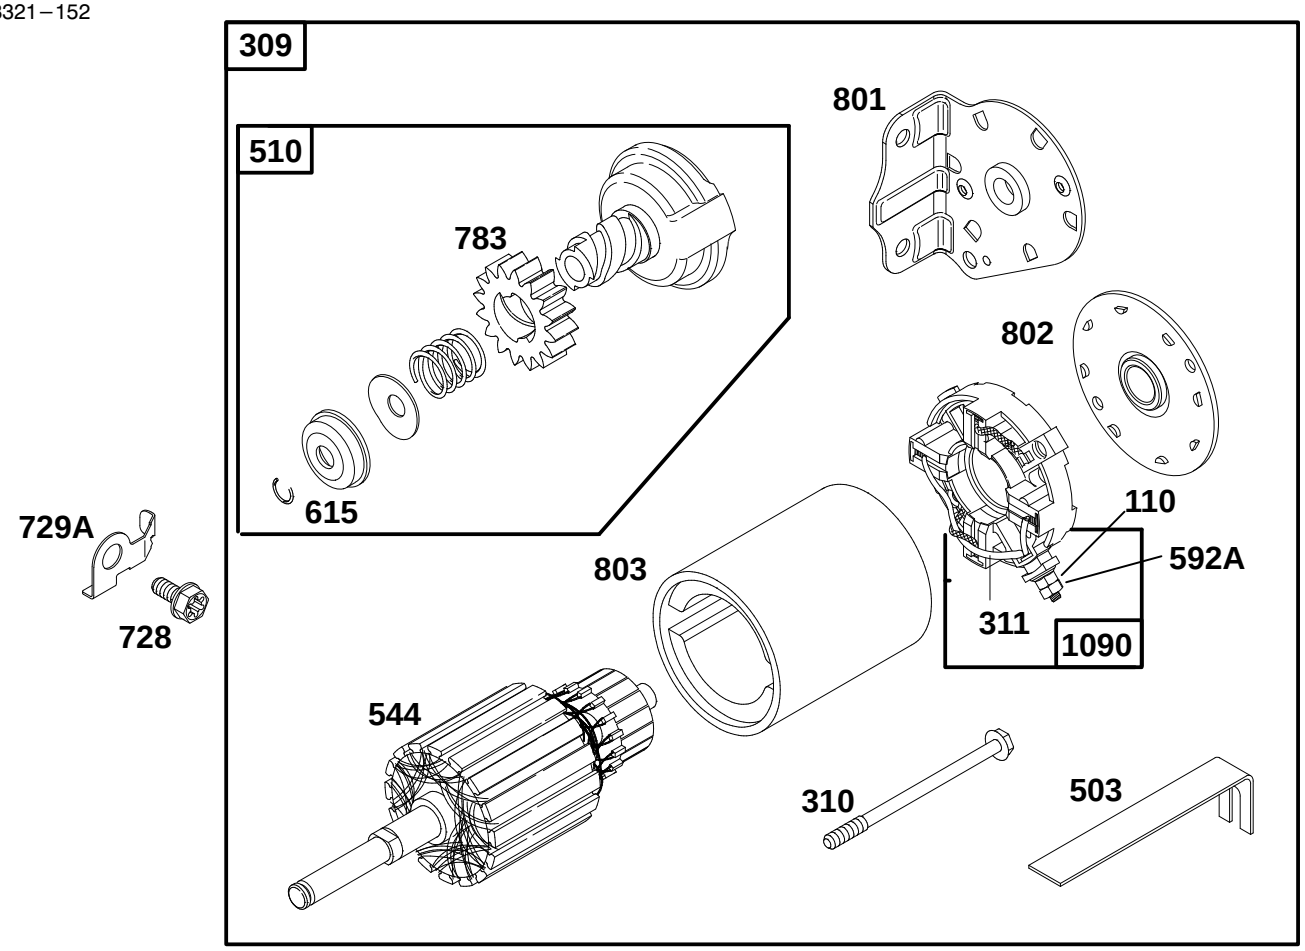



Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 195707–0421–E1


Ref. No.	Part No.	Description	No. Used
110	225137	Washer–Flat	1
309	497595	Motor–Starter	1
310	94003	Screw–Hex.	1
311	497608	Brush Set	1
592A	92278	Nut–Hex.	1
503	806006	Strap–Starter	1
510	497606	Drive–Starter	1
544	497603	Armature–Starter	1

Ref. No.	Part No.	Description	No. Used
615	263080	Retainer	1
728	94951	Screw–Torx®Hex.	1
729A	225170	Clip–Wire	1
783	280104	Gear–Starter	1
801	394856	Cap–Drive	1
802	497607	Cap–End	1
803	497604	Housing–Starter	1
1090	497605	Retainer–Brush	1

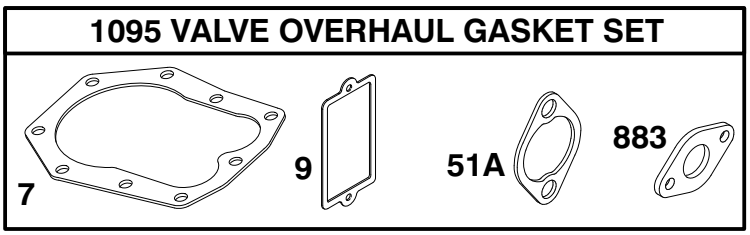

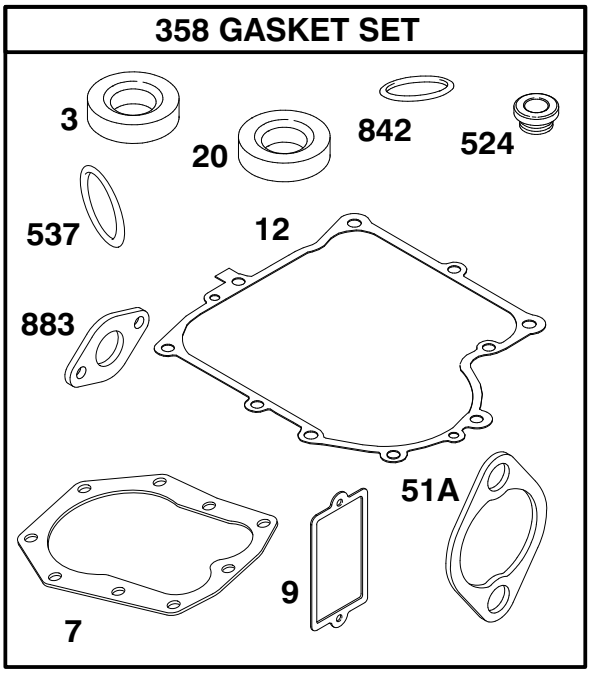

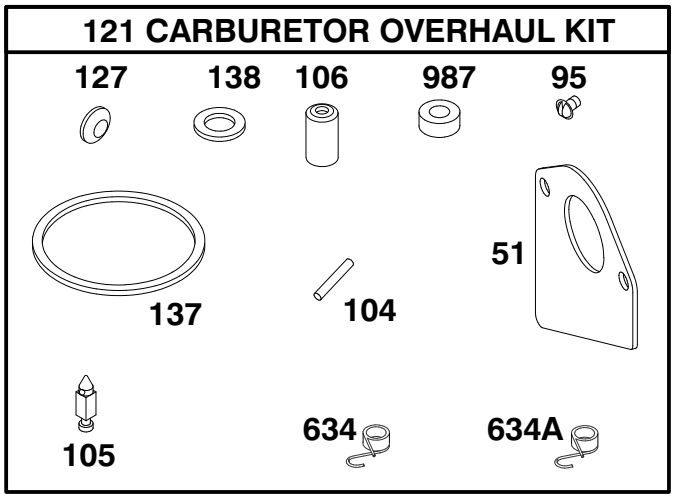

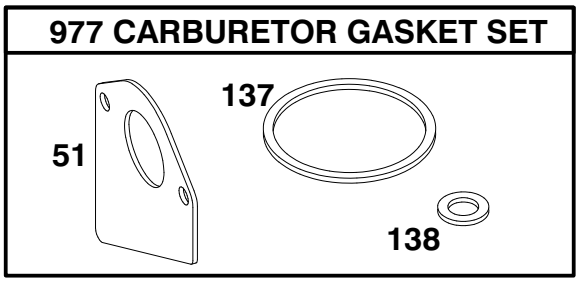

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 195707–0421–E1

Ref. No.	Part No.	Description	No. Used
★3	391086	Seal – Oil	1
†★7	272163	Gasket – Cylinder Head	1
†★9	27803	Gasket – Breather	1
★12	271701	Gasket – Crankcase (.015” Thick, Std.)	1
★	27876	Gasket – Crankcase (.005” Thick)	1
★	27877	Gasket – Crankcase (.009” Thick)	1
★20	391086	Seal – Oil	1
◆●51	272465	Gasket – Carburetor Elbow	1
★†51A	272554	Gasket – Carb. Mtg.	1
●95	94098	Screw–Slotted	1
●104	231789	Pin–Float Hinge	1
●105	231855	Valve–Needle	1
●106	231854	Seat–Inlet	1

Ref. No.	Part No.	Description	No. Used
121	497535	Carburetor Kit	1
●127		Plug – Welch **Note:** Sold in Kit Only.	1
◆●137	281165	Gasket – Float Bowl	1
◆●138	281164	Washer	1
358	299577	Gasket Set	1
★524	281370	Grommet	1
★537	281106	Gasket – Air Cleaner	1
●634	494453	Seal – Choke Shaft	1
●634A	494455	Seal – Choke Shaft	1
★842	270920	Seal–O-Ring	1
†★883	272309	Gasket – Exhaust	1
977	494385	Gasket Set – Carburetor	1
◆987	281166	Seal – Throttle Shaft	1
1095	498536	Gasket Set – Valve Overhaul	1

★ Included in Gasket Set–Part No. 299577.
● Included in Carburetor Kit–Part No. 497535.
◆ Included in Carburetor Gasket Set–Part No. 494385.
† Included in Valve Overhaul Gasket Set–Part No. 498536.

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
116397	Relay	5	17	1
910478	Screw − Pan Head	5	26	2
910478	Screw − Tapping	6	42	2
9104784	Screw	1	29	2
12−5820	Pulley − Idler, Traction	6	25	1
12−9020	Retainer − Belt	6	21	1
13−6049	Kit − Loose parts	2	*	1
18−2970	Clamp	5	48	1
18−2970	R−Clamp	3	4	1
19−1470	Bolt − Shoulder	1	18	1
19−1970	Spring − Brake, Parking	1	13	1
19−2200	Tip − Brake, Parking	1	20	1
20−3220	Washer − Flat	7	66	2
26−0671	Bolt − Blade	12	28	1
26−6700	Spring − Return, Brake	6	10	1
26−9530	Washer − Pivot	1	8	1
28−0540	Bolt − Shoulder	5	18	1
28−2480	Washer − Flat	4	2	2
28−8010	Spring	12	1	1
28−8080	Boot − Battery Terminal	8	34	1
38−1420	Switch − Seat	3	3	1
38−7820	Bearing − Ball	12	11	2
44−7030	Tread − Foot Rest	1	3	2
44−7140−01	Mount − Bearing, Axle	2	2	1
44−9760	Rim	10	2	2
46−2511	Bolt − Axle	10	22	2
46−2511	Bolt − Mounting, Axle	2	19	2
46−6290	O−Ring	12	50	1
47−1480	Mount − Bearing	10	7	2
47−1490	Bearing	10	13	2
47−2964	Hose − Gas	3	9	2
47−2986	Hose − Gas	3	5	1
49−3242	Wheel − Steering	2	34	1
55−3576	Assembly − Cap, Gas	3	8	1
55−7103	Tower	1	22	1
55−7762	Axle − R.H.	11	1	1
55−7763	Axle − L.H.	11	7	1
55−7770	Cap − End, R.H.	11	3	1
55−7771	Cap − End, L.H.	11	5	1
55−7780	Case − Gear, Transfer	11	4	1
56−2540	Tube − Drain	8	6	1
56−6360	Filter	3	10	1
56−6590	Bolt − Wheel	12	19	2
56−7620	Lever − Shift	7	52	1
56−7710	Hold Down − Battery	8	7	1
56−7720	Post − Hold Down, Battery	8	5	1
56−7730	Spring	7	57	1
56−7740	Spacer	7	58	1
56−9870	Pulley − Idler, Deck	6	29	1
56−9960	Differential	10	11	1
56−9960	Differential − Complete	11	*	1
61−9760	Wheel − Deck	12	18	2
61−9780	Cap − Hub	4	1	2
61−9980	Screw − Adjusting	10	20	1
61−9990	Plate − Adjusting	10	4	1
62−3660	Spacer − Bearing	12	13	1
62−3760	Screw − Cap Hex. Hd.	8	16	1
62−4300	Pad − Anti−Skid	8	13	1
63−8360	Key	5	40	1
65−2920	Pad − Pedal	1	17	2
66−6620−03	Support R.H.	10	21	1
66−6630−03	Support L.H.	10	12	1
66−6640	Control − Throttle	5	34	1
66−6920	Pad − Isolator	3	17	2
67−0010−03	Lift W.A. − Front, Deck	2	5	1
67−0050−01	Tube W.A. − Support, Rear	2	11	1
67−0080	Link − H.O.C.	5	23	1
67−0090−01	Bracket − Link, H.O.C.	2	10	1
67−0140	Post − Pivot	12	4	1
67−0231−01	Body W.A. − Rear	5	13	1
67−0270	Handle W.A. − H.O.C.	5	21	1
67−0300−01	Lever W.A. − H.O.C.	2	18	2
67−0330−03	Idler − Plate, Mount	6	30	1
67−0360−03	Bracket − Arm, Idler	6	27	1
67−0400	Mount − Pivot	6	19	1
67−0410	Spacer − Pivot	6	16	1
67−0420−03	Plate − Mount, Idler	6	18	1
67−0430	Rod − Clutch	2	6	1
67−0440	Spacer − Steering	2	32	1
67−0450−01	Frame W.A. − Front	2	25	1
67−0520−01	Channel − R.H.	2	3	1
67−0530−01	Channel − L.H.	2	24	1
67−0540−03	Tube W.A. − Pivot	6	6	1
67−0570	Rod W.A. − Brake, Deck	12	16	1
67−0600−03	Lever W.A. − Deck Engage	6	45	1
67−0640	Handle − Deck Engage	6	46	1
67−0660	Bracket − Mount, Shifter	7	65	1
67−0670	Bracket − Engage, Deck	7	62	1
67−0690−03	Flat − Deck Engage	6	3	1
67−0710	Ball − Swivel	12	21	1
67−0730	Post − Mount, Brake	12	22	1
67−0740	Spacer − Brake, Deck	12	23	1
67−0750	Bracket − Mount, Spring	6	43	1
67−0790−03	Support W.A. − Seat	5	10	1
67−0800−01	Spindle − R.H.	4	15	1
67−0810−01	Spindle − L.H.	4	12	1
67−0830−03	Shaft W.A. − Steering	2	26	1
67−0850	Bushing − Steering	2	29	2
67−0860	Washer − Steering	2	30	1
67−0870	Bolt − Shoulder	5	22	2
67−0870	Bolt − Shoulder	2	27	2
67−0880	Assembly − Tie Rod	4	11	2
67−0900	Belt − Traction	6	39	1
67−0910	Chain	10	10	1
67−0920	Guide − Belt	8	20	1
67−0920	Guide − Belt	6	35	1
67−0930	Guide R.H. − Belt, Engine	6	8	1
67−0940	Guide L.H. − Belt, Engine	6	14	1
67−0950	Strap − Tank, Gas	3	6	2
67−0962−01	Guard − Chain	8	22	1
67−0970	Hub − Spindle	12	25	1
67−0990−01	Axle − Front	4	9	1
67−1030	Cover − Panel, Control	5	42	1
67−1090−01	Support W.A. − Seat	5	29	1
67−1130−03	Pedal − Brake & Clutch	1	14	2
67−1150−01	Deflector	12	2	1
67−1242−01	Base − Seat	3	2	1
67−1270	Decal − Panel, Control	5	39	1
67−1330−03	Lever − Brake, Bellcrank	1	10	1
67−1340	Rod − Brake, Transmission	1	9	1
67−1350	Rod − Front, Brake	1	12	1
67−1370−01	Assy. − Brake, Deck	12	14	1
67−1400	Transmission	7	49	1
67−1430	Spring − Compression	1	7	1
67−1440	Spring − Brake	12	32	1
67−1450	Spring − Extension	1	11	1
67−1460	Washer − Flat	2	15	2
67−1480	Brace − Support, Seat	5	8	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
67−1500−03	Bar − Stand	5	5	1
67−1510−03	Brace − Stop, Deck	2	13	2
67−1530	Assembly − Pin, Clevis	7	70	1
67−1530	Pin − Clevis	2	8	1
67−1590	Bracket − Brake Return	1	6	1
67−1600−01	Bracket − Deflector	12	39	1
67−9170	Spring	6	31	1
68−3650	Decal − Warning	12	46	1
68−8370	Link − Deck Engage	6	4	1
68−8380	Spacer − Stop, Deck	2	17	2
68−9950	Spring − Traction	6	15	1
71−8310	Spring − Prop, Seat	5	1	1
76−1580−03	Guide − Chain	10	17	2
76−3820	Anchor − Guide, Belt	7	75	2
76−3920	Decal − H.O.C./Deck	5	24	1
76−3940−03	Lever W.A. − Shift	7	54	1
76−3970	Spacer − Pivot	7	69	1
76−4010	Sprocket	10	18	1
76−4070	Decal − Danger	12	42	1
76−4080	Decal	2	36	1
76−4090−01	Plate − Engine	6	13	1
76−4660	Spring	7	76	1
80−2600	Battery 12V	8	8	1
80−4330	Prop − Seat	5	32	1
80−4340	Shaft − Spindle	12	27	1
80−4360	Shield − Bearing	12	26	1
80−4380	Spacer − Spindle	12	31	1
80−4450	Cover − Recycler	12	35	1
80−4460	Pulley − Deck	12	8	1
80−4510	Kicker	12	36	4
80−4520	Guide − Belt	12	12	1
80−4530	Blade	12	30	1
80−4540−03	Ring − Deck, Recycler	12	45	4
80−4550	Rod − Base, Seat	5	33	1
80−4560	Spacer	8	11	1
80−4580	Tank − Gas	3	7	1
82−6450	Pulley − Transmission	6	40	1
83−6610	Tab − Hold Down	12	47	1
88−4330	Seat	3	1	1
88−4400	Bearing	4	16	4
88−4880	Spacer − Micro Switch	1	26	1
88−9810−03	Gate − Shift	7	50	1
88−9830	Switch − Ignition	5	36	1
88−9930	Switch − Micro	7	63	1
88−9932	Switch − Micro	1	27	1
88−9932	Switch − Micro	5	27	1
92−7978	Decal − Horsehead	3	18	1
92−7981	Decal − Toro	1	21	1
92−7990	Insert − Wheel, Steering	2	35	1
92−9522	Decal − Recycler	12	44	1
92−9845	Solenoid	5	31	1
93−3190	Boot − Terminal Insulator	5	47	1
93−3240	Seal − Plunger	1	28	1
93−6668	Decal − Battery Charging	8	38	1
93−7276	Decal − Danger	8	37	1
93−9354	Decal − Battery	8	36	1
93−9499	Decal − Instruction	1	1	1
94−7484	Deck	12	37	1
95−2747	Fitting − Washout	12	49	1
95−3270	Connector − Hose	12	54	1
98−0706	Harness − Wire	9	1	1
98−0707	Cable	5	49	1
98−0708	Assembly − Wire	8	17	2
98−0709	Clamp	1	23	1
98−0710	V−Belt	12	10	1
98−0711	Lever − Brake, Parking	1	19	1
98−0712	Pulley − Engine	8	14	1
98−1456	Decal − Toro L.H.	5	12	1
98−1457	Decal − Toro R.H.	5	*	1
98−2387	Body W.A. − Front	1	15	1
217−80	Rim	4	5	2
218−461	Nut − Hex.	5	38	1
218−560	Cap − Battery	8	33	6
231−115	Tire	10	1	2
231−116	Tire	4	3	2
232−27	Valve Stem w/Cap	4	17	2
232−27	Valve Stem w/Cap	10	23	2
232−40	Tube − Inner	10	*	2
232−44	Tube − Inner	4	*	2
233−22	Knob	5	25	1
233−22	Knob	7	47	1
233−25	Knob	5	35	1
233−48	Knob	7	55	1
2412−98	Clamp − Hose	3	11	5
256−90	Bushing	6	5	2
256−155	Bushing	6	28	1
2710−11	Link − Connecting	10	9	1
282−27	Clevis	2	7	1
282−27	Clevis	7	71	1
283−67	Pin − Clevis	6	33	1
288−2	Cap − Pipe	8	29	1
289−34	Nipple − Pipe	8	30	1
2811−17	Elbow − Street	8	31	1
2812−1	Reducer	8	32	1
302−5	Fitting − Grease	4	4	4
321−2	Screw − Hex Hd.	1	24	1
321−4	Screw − Cap Hex. Hd.	10	8	4
321−4	Screw − Cap Hex. Hd.	8	9	2
321−4	Screw − Cap Hex. Hd.	6	17	2
321−4	Screw − Cap Hex. Hd.	12	38	8
321−5	Screw − Hex Hd. Cap	12	48	1
321−8	Screw − Cap Hex. Hd.	7	59	1
321−15	Screw − Cap Hex. Hd.	7	56	1
322−3	Screw − Cap Hex. Hd.	2	1	6
322−3	Screw − Cap Hex. Hd.	5	9	6
322−3	Screw − Cap Hex. Hd.	3	14	4
322−3	Screw − Cap Hex. Hd.	12	20	6
322−3	Screw − Cap Hex. Hd.	6	34	13
322−5	Screw − Cap Hex. Hd.	5	7	2
322−6	Screw − Cap Hex. Hd.	6	11	2
322−6	Screw − Cap Hex. Hd.	12	15	2
322−7	Screw − Cap Hex. Hd.	8	19	3
322−10	Screw − Cap Hex. Hd.	8	21	1
322−10	Screw − Cap Hex. Hd.	6	37	1
322−12	Screw − Cap Hex. Hd.	8	12	1
322−14	Screw − Cap Hex. Hd.	2	23	2
322−22	Screw − Cap Hex. Hd.	11	6	4
322−22	Screw − Cap Hex. Hd.	12	7	1
323−8	Screw − Cap Hex. Hd.	6	26	1
323−9	Screw − Cap Hex. Hd.	6	24	1
323−10	Screw − Cap Hex. Hd.	2	16	2
329−4	Screw − Cap Hex. Hd.	7	53	1
3218−1	Nut − Jam	5	16	2
3218−2	Nut − Jam	7	72	1
3219−6	Nut − Hex.	12	9	1
3229−1	Screw − Carriage	12	51	2
3230−2	Bolt − Carriage	7	73	1
3230−3	Bolt − Carriage	5	3	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
3230−1	Bolt − Carriage	5	11	6
3230−1	Bolt − Carriage	3	16	4
3231−4	Bolt − Carriage	10	3	2
3231−25	Bolt − Carriage	10	6	4
3234−21	Screw − Cap Hex. Hd.	12	34	1
3253−3	Washer − Lock	5	15	2
3253−3	Washer − Lock	7	60	1
3253−4	Washer − Lock	6	36	1
3254−5	Washer − Lock, Int. Tooth	5	37	1
3255−8	Washer − Lock	8	28	3
3256−1	Washer − Flat	12	52	2
3256−14	Washer − Flat	5	45	1
3256−22	Washer − Flat	5	4	1
3256−22	Washer − Flat	7	61	3
3256−23	Washer − Flat	8	3	2
3256−23	Washer − Flat	5	6	4
3256−23	Washer − Flat	6	9	3
3256−23	Washer − Flat	3	15	8
3256−23	Washer − Lock	12	6	3
3256−24	Washer − Flat	10	16	6
3256−24	Washer − Flat	6	22	3
3256−25	Washer − Flat	8	15	1
3256−26	Washer − Flat	4	13	1
3256−29	Washer − Flat	2	21	2
3256−55	Washer − Fender	7	48	2
3257−23	Key	6	41	1
3272−4	Pin − Cotter	5	43	1
3272−4	Pin − Cotter	6	32	1
3272−6	Pin − Cotter	6	2	2
3272−6	Pin − Cotter	2	9	2
3272−12	Pin − Cotter	4	18	2
3272−23	Pin − Cotter	2	20	2
3290−134	Screw − Cap Mach. Hd.	5	46	1
3290−250	PIn − Hair, Cotter	2	22	1
3290−250	Pin − Hair, Cotter	1	16	2
3290−347	Nut − U−Type	1	5	4
3290−354	Nut − Double	5	28	1
3290−354	Nut − Double	7	74	1
3290−354	Nut − Speed	1	30	1
3290−355	Pin − Hair, Cotter	2	14	2
3290−378	Tie − Cable	3	13	1
3290−413	Washer − Belleville	5	19	7
3290−413	Washer − Belleville	2	28	4
3290−456	Washer − Belleville	7	68	2
3290−465	Washer − Belleville	12	29	1
3290−478	Washer − Belleville	7	64	2
3296−2	Nut − Lock	5	44	1
3296−4	Nut − Lock	4	8	4
3296−8	Nut − Lock	12	5	2
3296−8	Nut − Lock	10	24	4
3296−16	Nut − Lock	1	25	1
3296−16	Nut − Lock	12	53	2
3296−25	Nut − Lock	4	14	1
3296−29	Nut − Lock	1	2	5
3296−29	Nut − Lock	5	2	13
3296−29	Nut − Lock	2	4	16
3296−29	Nut − Lock	6	7	13
3296−29	Nut − Lock	3	12	4
3296−29	Nut − Lock	10	19	6
3296−29	Nut − Lock	12	24	9
3296−29	Nut − Lock	8	24	4
3296−39	Nut − Lock	6	1	1
3296−39	Nut − Lock	2	12	5
3296−39	Nut − Lock	10	15	6
3296−39	Nut − Lock	12	17	2
3296−39	Nut − Lock	5	20	1
3296−42	Nut − Lock	10	5	1
3296−42	Nut − Lock	6	20	5
3296−42	Nut − Lock	5	30	2
3296−42	Nut − Lock	12	41	9
3296−59	Nut − Lock	6	23	2
3296−59	Nut − Lock	12	40	1
32103−12	Nut − Wing	8	4	1
32103−22	Nut − Wing	8	10	2
32104−110	Screw − Cap Hex. Hd.	1	4	4
32109−14	Nut − Wing	12	33	1
32120−64	Ring − Retaining	6	38	1
32121−32	Pin − Roll	2	31	1
32121−78	Pin − Roll	2	33	1
32144−14	Screw − Self Tapping	8	18	1
32144−14	Screw − Wash. Hd., Tap.	7	51	4
32144−42	Screw − Hex. Hd. Tapping	5	41	4
32144−49	Screw − Tapping	6	12	1
32144−70	Screw − Hex. Hd. Tapping	6	44	1
32144−111	Screw − Special	12	43	8
32151−48	Ring − Retaining	4	6	2
32151−62	Ring − Retaining	7	67	1
32152−1	Nut − Lock	11	2	4
32153−3	Nut − Lock	8	35	1

OPTIONAL EQUIPMENT

Easy Empty Bagging Kit . . . . . Model No. 79090
Twin Bag Bagger Kit . . . . . Model No. 79080
Tire Chains . . . . . Part No. 11−0410
Hi−Sail Blade . . . . . Part No. 67−0200

*Not Illustrated