FORM NO. 3321–385

TORO®

ProLine

# 15 HP / 48” Mid Size Fixed Deck Kohler

**Model No. 30197 – 890001 & Up**

# Parts Catalog

## ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

# Contents


| Description | Page |
|---|---|
| Engine & Fuel Tank | 1 |
| Transmission, Pulleys And Drive Belt | 2–3 |
| Wheel, Brakes And Traction Belts | 4 |
| Handle Asm | 5 |
| Deck, Cover and Deck Drive Belts | 6 |
| Deck, Drive Pulleys And Deflector | 7 |
| Brake Assembly | 8 |
| Spindles And Blades | 9 |
| Center Spindles And Blade | 10 |
| Toro Part Number Index | 11–15 |
| Maintenance Record | 16 |


**Note:**

# Accessories

| Description | Model / Parts No. |
|---|---|
| Recycler Kit | Model No. 30143 |
| Bagging Kit | Model No. 30198 |
| Low Sail Blade | Part Number E403149 |

# Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

| Abbreviation | Meaning |
|---|---|
| AR | as required |
| ASM | assembly |
| CARR | carriage |
| DEG | degrees |
| FH | flat head |
| GA | gauge |
| HF | hex flange |
| HFW | hex flange washer |
| HH | hex head |
| HHF | hex head flange |
| HHST | hex head self tapping |
| HJ | hex jam |
| HOC | height-of-cut |
| HS | hex socket |
| HSBH | hex socket button head |
| HSFH | hex socket flat head |
| HSH | hex socket head |
| HWH | hex washer head |
| HWHTF | hex washer head thread forming |
| INC | incorporated |
| LH | left hand |
| PH | pan head |
| PPH | Phillips pan head |
| PTO | power take off |
| RH | right hand |
| SFH | slotted fillister head |
| SH | square head |
| SHWH | slotted hex washer head |
| SPH | slotted pan head |
| STD | standard |
| TAP | self tapping |
| TH | truss head |
| TTH | Torx truss head |
| WH | wing head |



© The TORO Company — 1998
*All Rights Reserved*

# Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

## Service Assemblies

Parts within service assemblies have reference numbers in the form *X:Y. X* is the reference number of the service assembly and *Y* is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

## Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form *X (Y). X* is the reference number. *Y* in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

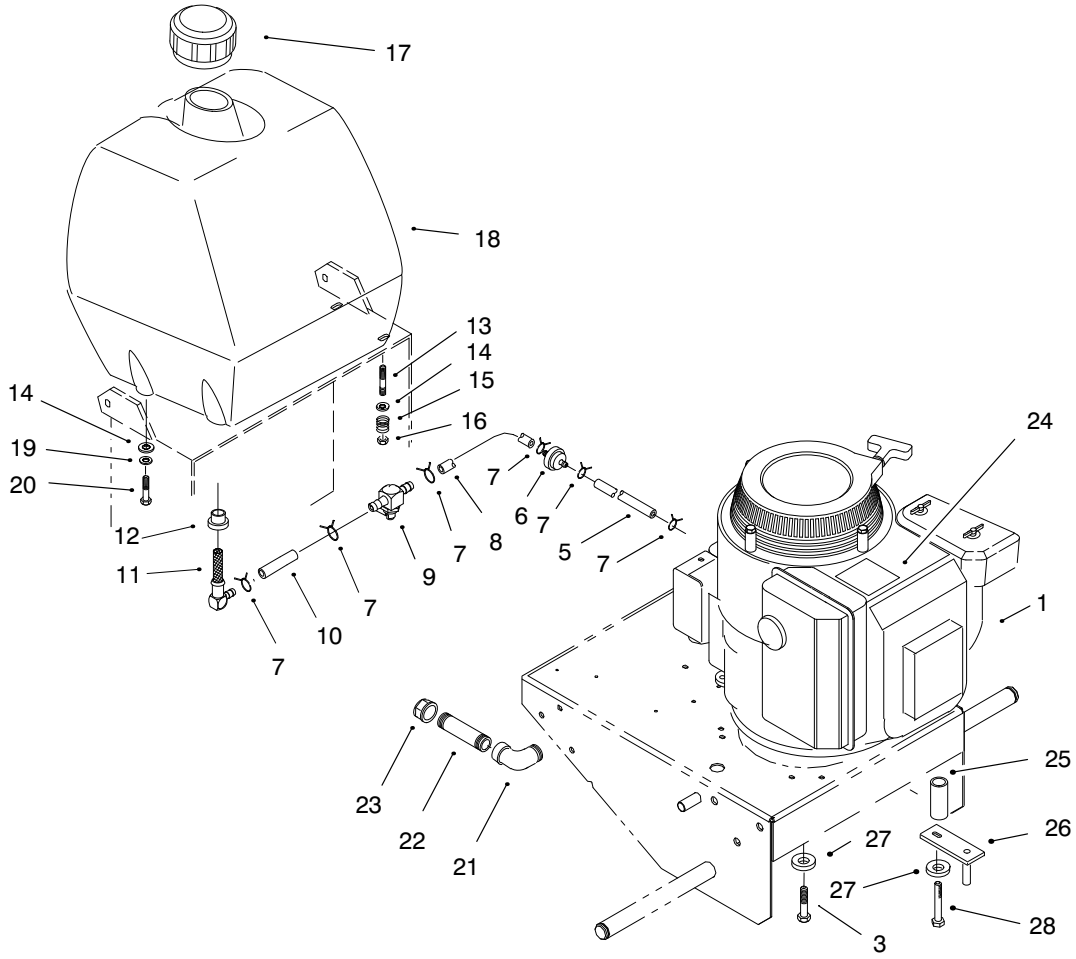



Sheet No.: 2

# Engine & Fuel Tank

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | | 1 | Engine 15hp Kohler Command (Obtain Parts From Kohler Model Cv15t–41542 |
| 3 | 33114–025 | 1 | Screw–HH |
| 5 | E603954 | 1 | Hose–Fuel |
| 6 | E303197 | 1 | Filter |
| 7 | E303077 | 6 | Clamp |
| 8 | E603776 | 1 | Fuel–Line |
| 9 | E603770 | 1 | Valve–Gas |
| 10 | E603955 | 1 | Fuel–Line |
| 11 | E543277 | 1 | Elbow |
| 12 | E513645 | 1 | Bushing |
| 13 | E633023 | 2 | Stud |
| 14 | 3256–2 | 4 | Washer–Flat |
| 15 | E633349 | 2 | Spring–Fuel Tank |
| 16 | 3296–29 | 2 | Nut–Lock |
| 17 | E513508 | 1 | Cap–Fuel Tank |
| 18 | E323551 | 1 | Tank |
| 19 | 3253–4 | 2 | Washer–Lock |
| 20 | 322–3 | 2 | Screw–HH |
| 21 | E303431 | 1 | Elbow |
| 22 | E323326 | 1 | Nipple |
| 23 | E543233 | 1 | Cap |
| 24 | 63–8440 | 1 | Decal–Hot Surface |
| 25 | E323228 | 3 | Spacer |

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| 26 | E322110 | 3 | Guide–Belt |
| 27 | E303334 | 4 | Washer–Lock |
| 28 | E809065 | 3 | Screw–HH |

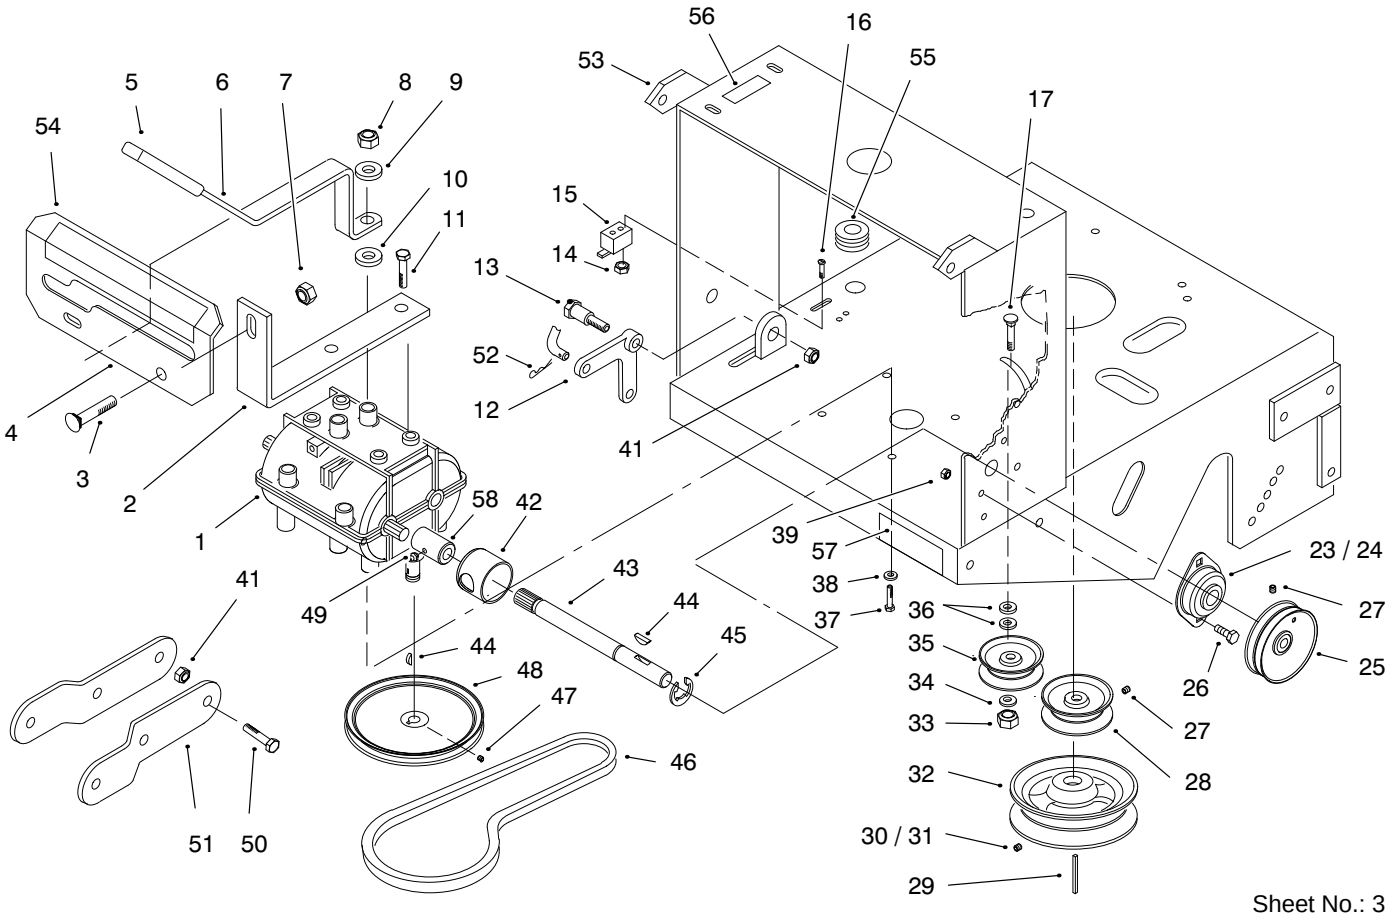



Sheet No.: 3

# Transmission, Pulleys And Drive Belt

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | | 1 | Transmission–Peerle s Obtain Parts From Peerless Model No. 700–070a |
| 2 | E323389 | 2 | Leg–Shifter Lever |
| 3 | 3230–1 | 21 | Bolt–CARR |
| 4 | E323387 | 1 | Shifter Plate |
| 5 | E303020 | 1 | Grip |
| 6 | E323570 | 1 | Lever–Shift |
| 7 | 32128–20 | 2 | Nut–Lock |
| 8 | 3296–6 | 1 | Nut–Lock |
| 9 | E303327 | 1 | Washer–Lock |
| 10 | E323379 | 1 | Washer |
| 11 | 32104–32 | 4 | Screw–HH |
| 12 | E303186 | 1 | Bell Crank |
| 13 | E603403 | 1 | Bolt–Shoulder |
| 14 | 32146–18 | 2 | Nut–Lock |
| 15 | E513152 | 1 | Switch–Seat |
| 16 | E803028 | 2 | Screw |
| 17 | E807511 | 1 | Bolt–CARR |
| 23 | E323252 | 2 | Bearing |
| 24 | E323254 | 2 | Flange |
| 25 | E323257 | 2 | Sheave |
| 26 | 321–3 | 4 | Screw–HH |
| 27 | E803310 | 3 | Screw–Set |
| 28 | E323256 | 1 | Sheave |
| 29 | E807264 | 1 | Key |

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| 30 | 3242–4 | 1 | Screw–Set |
| 31 | 3242–6 | 1 | Screw–Sqh Set |
| 32 | E403087 | 1 | Pulley |
| 33 | 32146–2 | 1 | Nut–Hex Lock |
| 34 | 3256–24 | 1 | Washer–Flat |
| 35 | E323285 | 1 | Idler Pulley |
| 36 | 3256–25 | 1 | Washer–Flat |
| 37 | 322–3 | 4 | Screw–HH |
| 38 | 3253–4 | 4 | Washer–Lock |
| 39 | 32146–17 | 4 | Nut–Lock |
| 41 | 32128–43 | 5 | Nut–Flange |
| 42 | E323680 | 2 | Coupling |
| 43 | E323502 | 2 | Output Shaft |
| 44 | E807009 | 3 | Key |
| 45 | E808523 | 2 | Ring–Retaining |
| 46 | E323630 | 1 | Belt–Trans Drive |
| 47 | E803293 | 2 | Screw–Set |
| 48 | E323278 | 1 | Sheave |
| 49 | 302–58 | 2 | Fitting–Grease |
| 50 | 323–6 | 4 | Screw–HH |
| 51 | E323318 | 2 | Hitch Bracket |
| 52 | 3290–307 | 1 | Pin–Cotter |
| 53 | E322201 | 1 | Deck–Engine |
| 54 | E323560 | 1 | Decal–Ground Speed |
| 55 | E543296 | 1 | Grommet–Fuel Line |

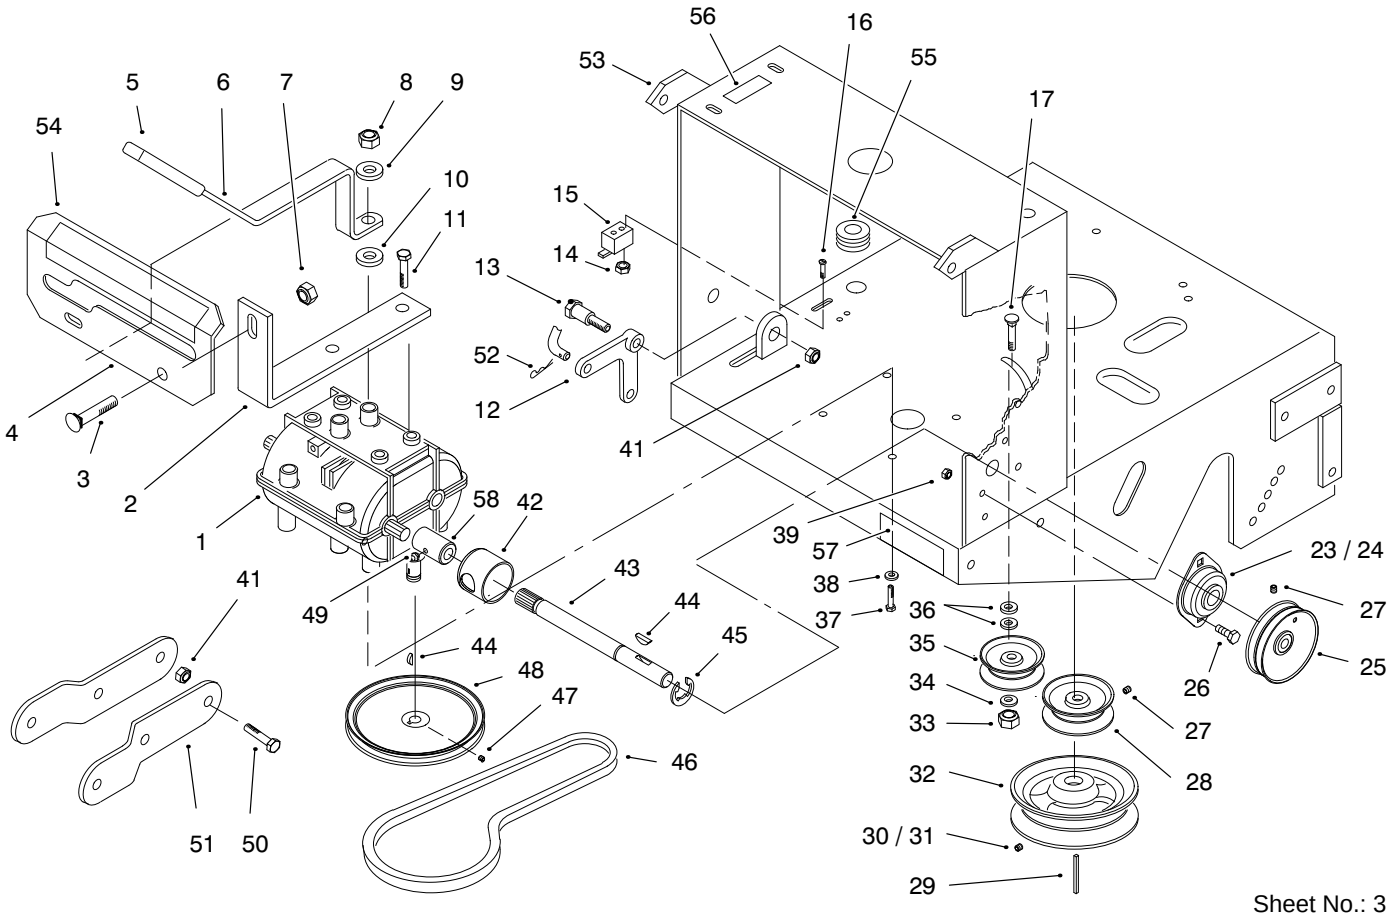



Sheet No.: 3

# Transmission, Pulleys And Drive Belt

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| 56 | 95–2814 | 1 | Decal–Fuel Shut–Off |
| 57 | E323562 | 1 | Decal–Caution |
| 58 | 51–4220 | 2 | Guard–Coupler |

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|

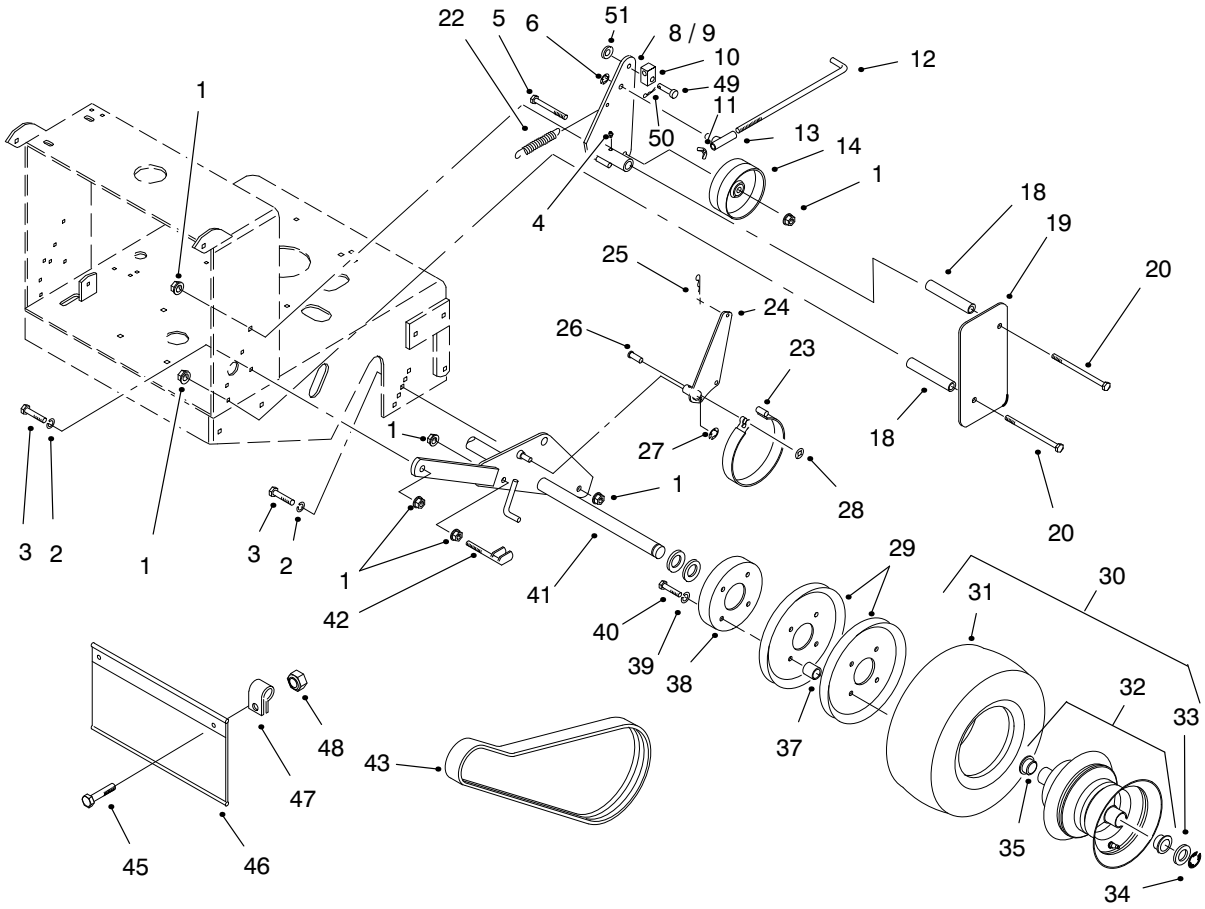



Sheet No.: 4

# Wheel, Brakes And Traction Belts

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 32128–43 | 14 | Nut–Flange |
| 2 | E303327 | 4 | Washer–Lock |
| 3 | 323–6 | 4 | Screw–HH |
| 4 | 302–58 | 2 | Fitting–Grease |
| 5 | 323–11 | 2 | Screw |
| 6 | E808522 | 2 | Ring |
| 8 | E322205 | 1 | Idler Arm ASM LH |
| 9 | E322206 | 1 | Idler Arm ASM RH |
| 10 | 74–0521 | 2 | Rod–Fitting |
| 11 | E513959 | 2 | Wingnut |
| 12 | E323296 | 2 | Brake Rod |
| 13 | E323694 | 2 | Swivel |
| 14 | E323634 | 2 | Idler–Wheel Drive |
| 18 | E323197 | 4 | Spacer |
| 19 | E323632 | 2 | Shield |
| 20 | 323–16 | 4 | Screw–HH |
| 22 | E323574 | 2 | Spring–Extension |
| 23 | E323595 | 2 | Band–Brake |
| 24 | E322209 | 2 | Brake Arm ASM |
| 25 | 3290–307 | 2 | Pin–Cotter |
| 26 | E323307 | 4 | Pin |
| 27 | E808501 | 2 | Ring–Retaining |
| 28 | E803051 | 4 | Nut |
| 29 | E323253 | 4 | Sheave |
| 30 | | 2 | Wheel/Tire ASM |
| 31 | E303125 | 2 | Tire |

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| 32 | E323360 | 2 | Wheel ASM w/Bearings |
| 33 | E523157 | A/R | Spacer–14 GA |
| 33 | E543436 | A/R | Spacer–18 GA |
| 34 | E808519 | 2 | Ring–Retaining |
| 35 | E323329 | 4 | Bearing |
| 37 | E323260 | 8 | Spacer |
| 38 | E323261 | 2 | Drum–Brake |
| 39 | 3253–4 | 8 | Washer–Lock |
| 40 | 322–6 | 8 | Screw–HH |
| 41 | E322212 | 1 | Axle ASM |
| 42 | E412358 | 2 | Scraper |
| 43 | E323631 | 2 | Belt–Drive |
| 45 | 3210–3 | 2 | Screw–HH |
| 46 | E323607 | 1 | Shield–Trailing |
| 47 | 2412–104 | 2 | Clamp |
| 48 | 32146–4 | 2 | Nut–Lock |
| 49 | 283–6 | 2 | Pin–Clevis |
| 50 | 3290–307 | 2 | Pin–Cotter |
| 51 | 3256–23 | 2 | Washer–Flat |

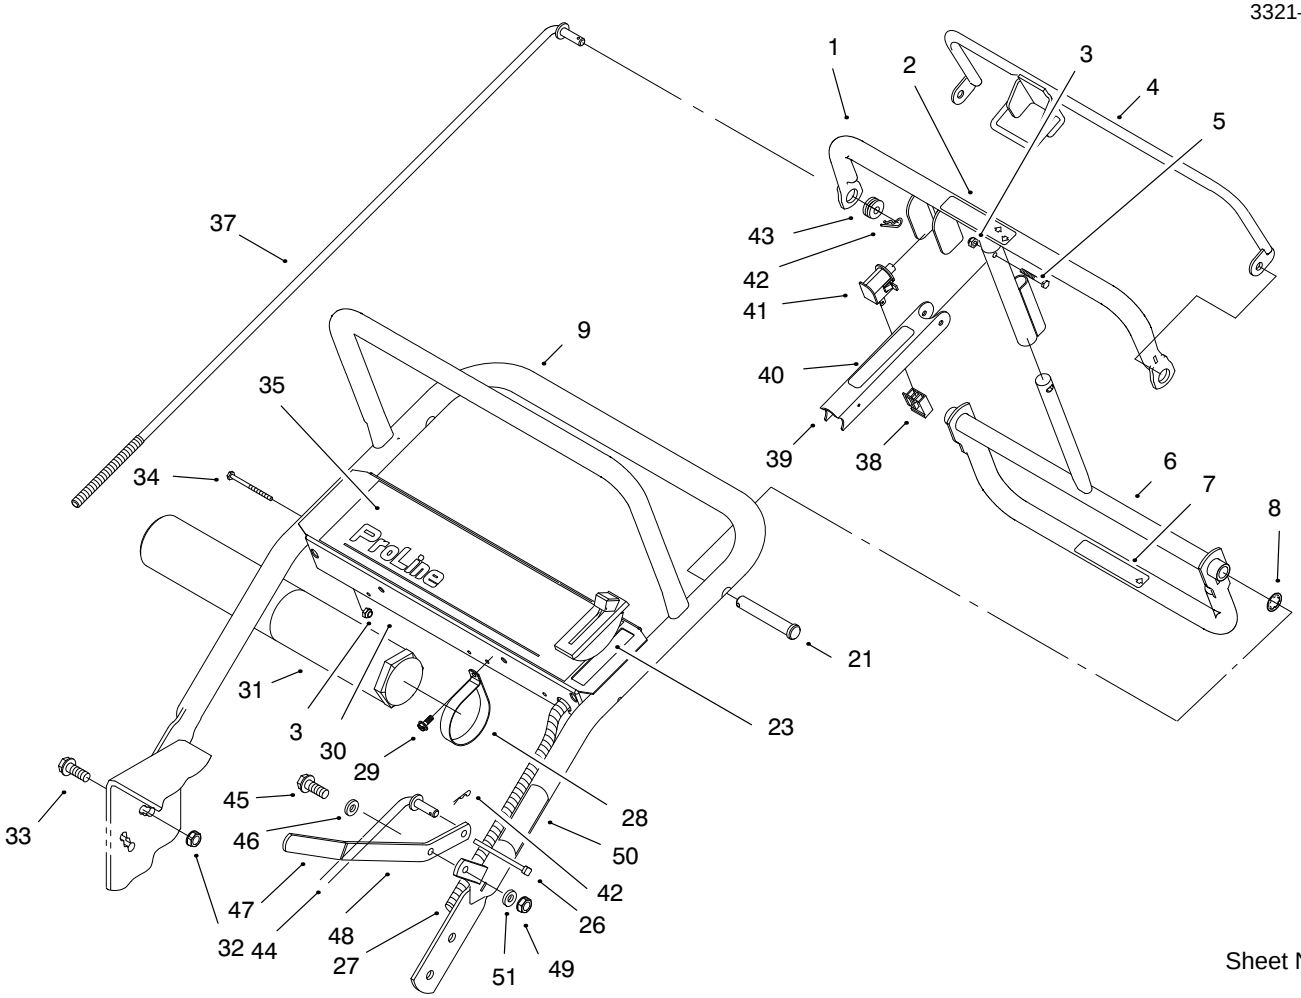



Sheet No.: 5

# Handle Asm

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | E322215 | 1 | Control Bar |
| 2 | 82–2290 | 1 | Decal–Control Bar |
| 3 | 3296–2 | 5 | Nut–Lock |
| 4 | E322208 | 1 | Bail ASM |
| 5 | 32105–1 | 1 | Screw–HH |
| 6 | E322207 | 1 | Pivot–Control |
| 7 | 82–2280 | 1 | Decal–Reverse |
| 8 | 32151–80 | 2 | Ring–Push On |
| 9 | E322216 | 1 | Upper Handle ASM |
| 21 | 283–55 | 2 | Pin–Clevis |
| 23 | E323637 | 1 | Throttle Control |
| 26 | 3290–378 | 2 | Tie–Cable |
| 27 | E323568 | 1 | Wire Harness–Kohler |
| 28 | 2412–120 | 2 | Clamp–R |
| 29 | 32104–76 | 2 | Screw–Self TAP |
| 30 | E304259 | 1 | Control Panel ASM |
| 31 | 74–0720 | 1 | Tube–Manual |
| 32 | 32128–21 | 4 | Nut–HF |
| 33 | 3234–11 | 4 | Screw–HHF |
| 34 | 32105–14 | 4 | Screw–HH |
| 35 | E323564 | 1 | Decal–Panel |
| 37 | E323569 | 2 | Rod–Control |
| 38 | 218–595 | 1 | Connector–Body |
| 39 | E323614 | 1 | Lever–Parking Brake |
| 40 | E323558 | 1 | Decal–Parking Brake |
| 41 | 740275 | 1 | Switch–Bail |

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| 42 | 3290–307 | 3 | Pin–Cotter |
| 43 | 237–141 | 2 | Grommet |
| 44 | E323576 | 1 | Linkage–Blade Drive |
| 45 | 614672 | 1 | Bolt–Shoulder |
| 46 | 47–2910 | 1 | Washer–Thrust |
| 47 | E303020 | 1 | Grip |
| 48 | E323573 | 1 | Lever–Blade Engagement |
| 49 | 32146–2 | 1 | Nut–Hex Lock |
| 50 | E323563 | 1 | Decal–Blade Engagement |
| 51 | 3256–24 | 1 | Washer–Flat |

3321–385

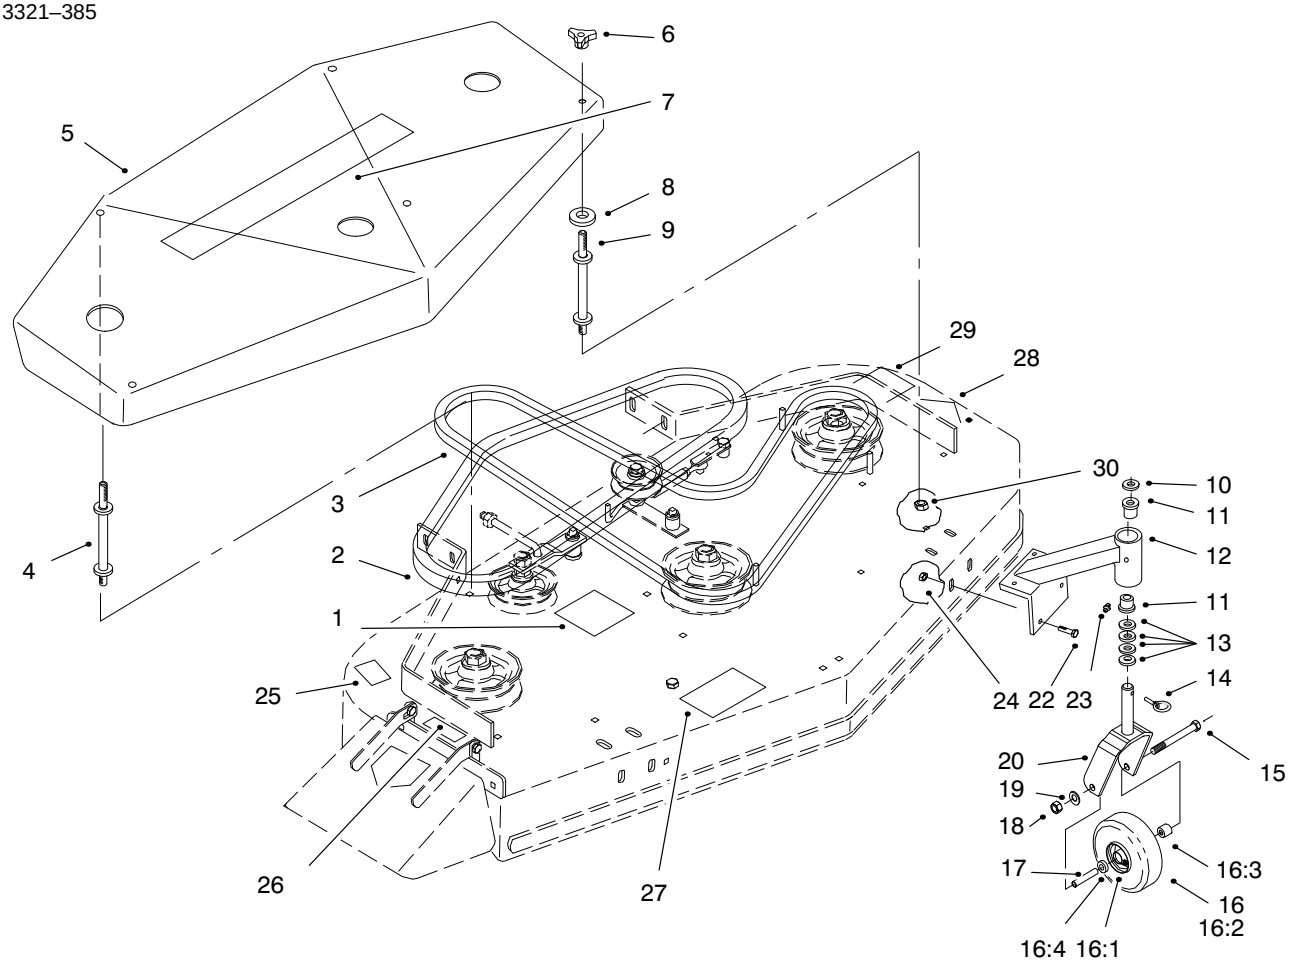



Sheet No.: 10

# Deck, Cover and Deck Drive Belts

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | E323594 | 1 | Decal–Belt Routing |
| 2 | E403164 | 1 | Belt–Blade Drive |
| 3 | E403163 | 1 | Belt–Blade Drive |
| 4 | E303536 | 3 | Stud–Belt Shield(Long) |
| 5 | E404246 | 1 | Belt Cover w/Decal |
| 6 | E323385 | 5 | Knob |
| 7 | E323561 | 1 | Decal–Proline 48 |
| 8 | E323417 | 5 | Washer |
| 9 | E303537 | 2 | Stud–Belt Shield(Short) |
| 10 | E513338 | 2 | Washer |
| 11 | E303514 | 4 | Bearing–Flanged |
| 12 | E302194 | 2 | Support–Caster |
| 13 | E303314 | 8 | Spacer |
| 14 | E809020 | 2 | Pin |
| 15 | 325–20 | 2 | Screw–HH |
| 16 | | 2 | Tire/Wheel ASM |
| 16:1 | E513807 | 2 | Wheel Hub ASM |
| 16:2 | E513808 | 2 | Tire |
| 16:3 | E513809 | 2 | Bearing–Roller |
| 16:4 | E513810 | 4 | Bushing |
| 17 | E513547 | 2 | Spacer |
| 18 | 3217–9 | 2 | Nut–HH |
| 19 | 3253–7 | 2 | Washer–Lock |
| 20 | E322145 | 2 | Fork |

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| 22 | 323–4 | 8 | Screw–HH |
| 23 | E811001 | 2 | Zerk |
| 24 | 32128–43 | 8 | Nut–Flange |
| 25 | 98–3269 | 1 | Decal–Made In USA |
| 26 | 67–5360 | 1 | Decal–Danger |
| 27 | 66–1340 | 1 | Decal–Discharge |
| 28 | 43–8480 | 1 | Decal–Danger |
| 29 | E323659 | 1 | Decal–Torque |
| 30 | 32128–20 | 5 | Nut–Lock |

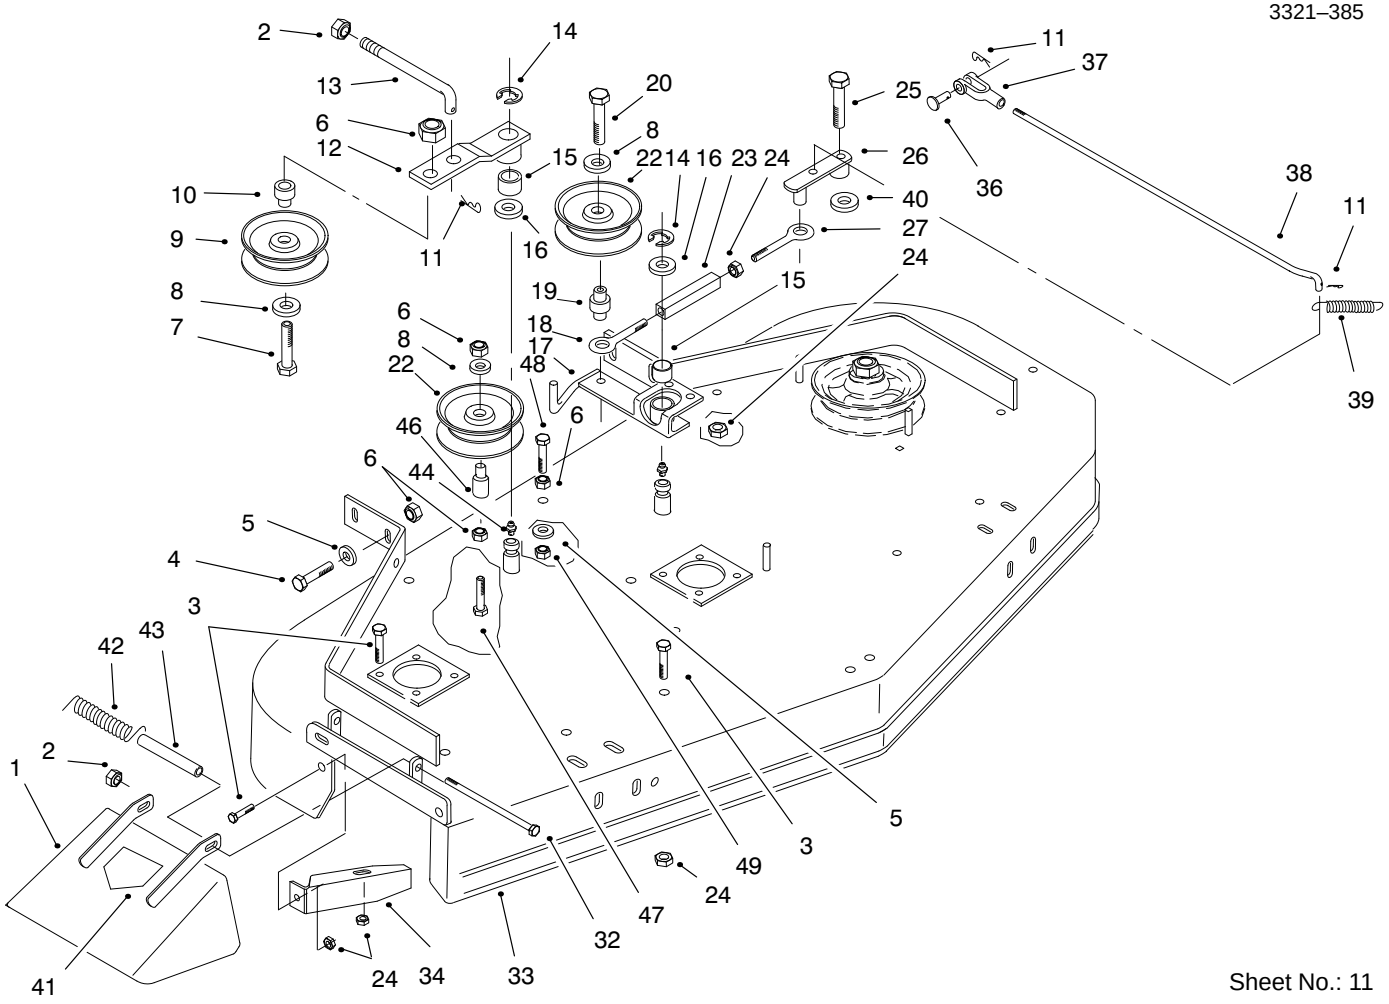



Sheet No.: 11

# Deck, Drive Pulleys And Deflector

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | E404245 | 1 | Discharge Chute w/Decal |
| 2 | 3296–29 | 2 | Nut–Lock |
| 3 | E800270 | 10 | Screw–HH |
| 4 | 323–7 | 6 | Screw–HH |
| 5 | E303327 | 7 | Washer–Lock |
| 6 | 32128–43 | 10 | Nut–Flange |
| 7 | 323–9 | 1 | Screw–HH |
| 8 | 3256–24 | 3 | Washer–Flat |
| 9 | E403119 | 1 | Pulley–Idler |
| 10 | E603496 | 1 | Bushing |
| 11 | 3290–307 | 3 | Pin–Cotter |
| 12 | E402053 | 1 | Idler Arm Assembly |
| 13 | E403107 | 1 | Rod–Tension |
| 14 | E808505 | 2 | Ring–Retaining |
| 15 | E303144 | 2 | Bearing |
| 16 | E303352 | 2 | Washer–Spindle |
| 17 | E324344 | 1 | Engagement Arm w/Bushing |
| 18 | E303348 | 1 | Eye Bolt |
| 19 | E303434 | 1 | Bushing |
| 20 | E803003 | 1 | Bolt–Whizlock |
| 22 | E603843 | 2 | Pulley–Idler |
| 23 | E303236 | 1 | Turnbuckle Body |
| 24 | 32128–20 | 12 | Nut–Lock |
| 25 | E809084 | 1 | Bolt–Shoulder |

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| 26 | E322211 | 1 | Assist Arm ASM |
| 27 | E303238 | 1 | Eye Bolt |
| 32 | E800291 | 1 | Screw–HH |
| 33 | E404244 | 1 | Deck ASM w/ Decals |
| 34 | E402107 | 1 | Baffle Weldment |
| 36 | E808280 | 1 | Pin–Clevis |
| 37 | E303105 | 1 | Yoke |
| 38 | E323303 | 1 | Linkage–Assist Arm |
| 39 | E323608 | 1 | Spring–Extension |
| 40 | 80–4980 | 1 | Washer |
| 41 | 93–1122 | 1 | Decal–Danger |
| 42 | E323575 | 1 | Spring–Deflector |
| 43 | E323636 | 1 | Spacer–Spring |
| 44 | 302–58 | 2 | Fitting–Grease |
| 46 | E543879 | 1 | Bushing |
| 47 | E800029 | 1 | TAP Bolt |
| 48 | 323–13 | 1 | Screw–HH |
| 49 | 32146–2 | 1 | Nut–Hex Lock |

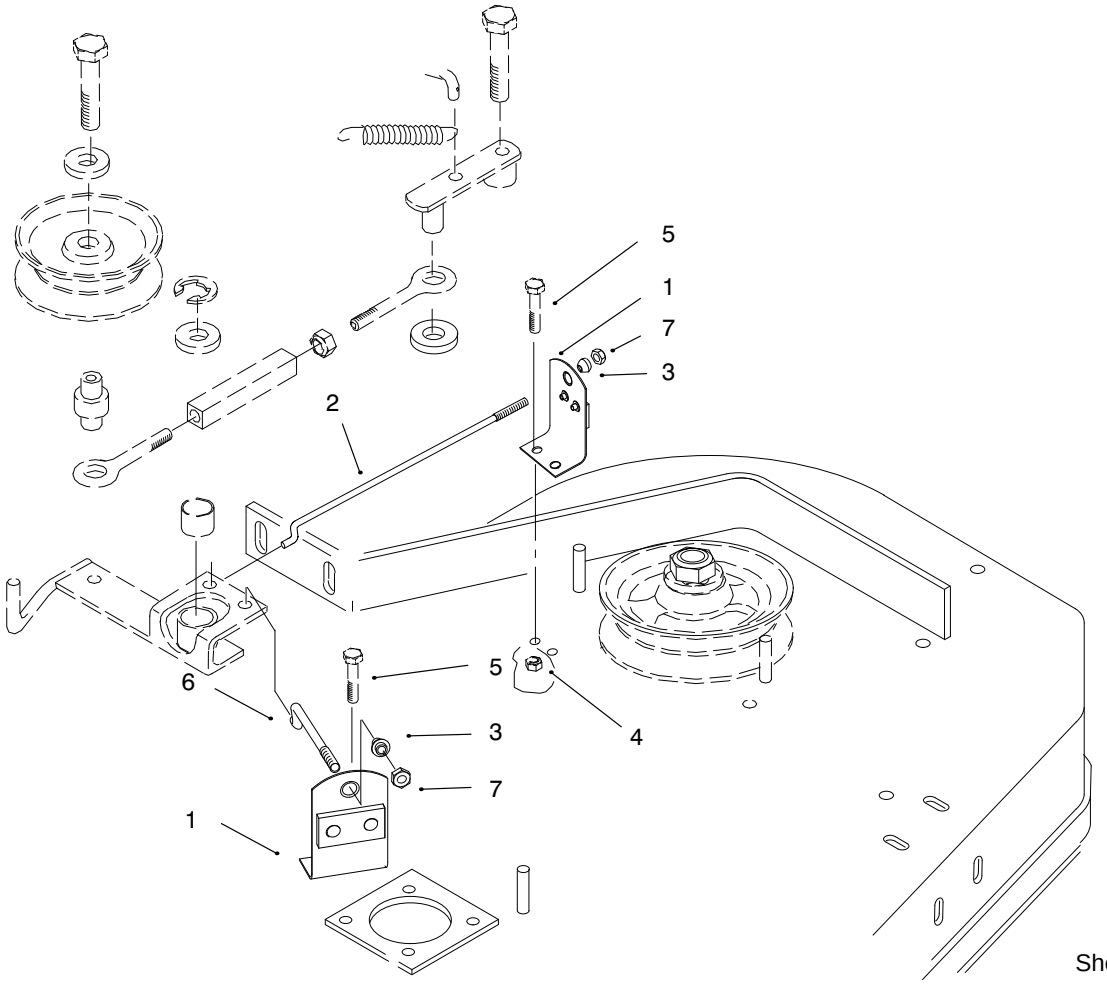



Sheet No.: 12

# Brake Assembly

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | E324305 | 2 | Brake ASM |
| 2 | E323601 | 1 | Rod–Brake |
| 3 | 67–0710 | 2 | Ball – Swivel |
| 4 | 3296–29 | 4 | Nut–Lock |
| 5 | 322–3 | 4 | Screw–HH |
| 6 | E323600 | 1 | Rod–Brake |
| 7 | 3296–42 | 2 | Nut–Lock |

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|

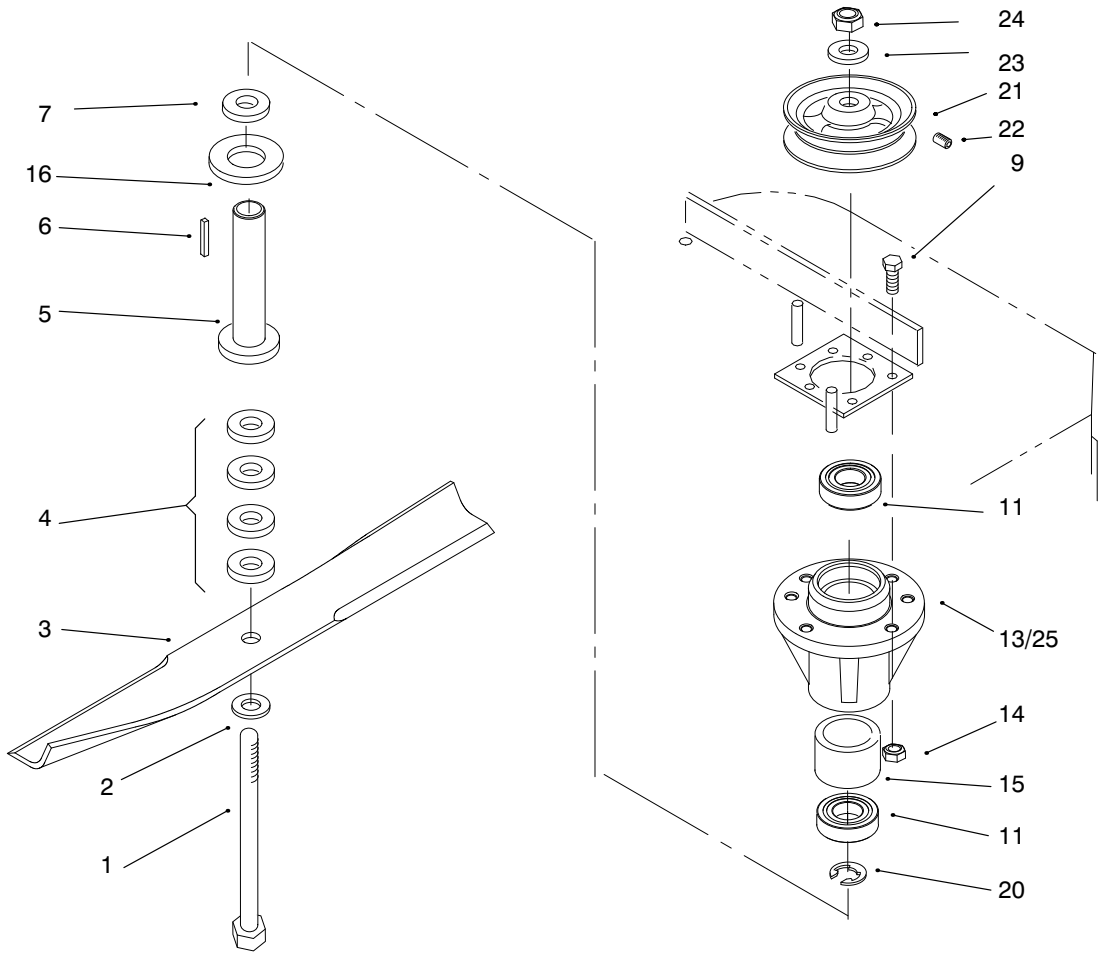



Sheet No.: 8

# Spindles And Blades

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | E800861 | 2 | Screw–HH |
| 2 | E513208 | 2 | Washer–Lock |
| 3 | E323515 | 2 | Blade–High Lift |
| 3 | E403149 | 2 | Blade–Low Lift |
| 4 | E323539 | 8 | Spacer |
| 5 | E323529 | 2 | Tube Spindle Short |
| 6 | E807267 | 2 | Key |
| 7 | E323533 | 2 | Spacer |
| 9 | 323–7 | 12 | Screw–HH |
| 11 | E513016 | 4 | Bearing |
| 13 | E634619 | 2 | Housing–Spindle Incl |
| 14 | 32146–2 | 12 | Nut–Hex Lock |
| 15 | E323528 | 2 | Spacer |
| 16 | E633573 | 2 | Guard |
| 20 | E403167 | 2 | Ring–Retaining |
| 21 | E303558 | 2 | Pulley |
| 22 | E803310 | 2 | Screw–Set |
| 23 | E323399 | 2 | Spacer |
| 24 | 3219–6 | 2 | Nut–Hex |
| 25 | E323532 | 2 | Housing |

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|

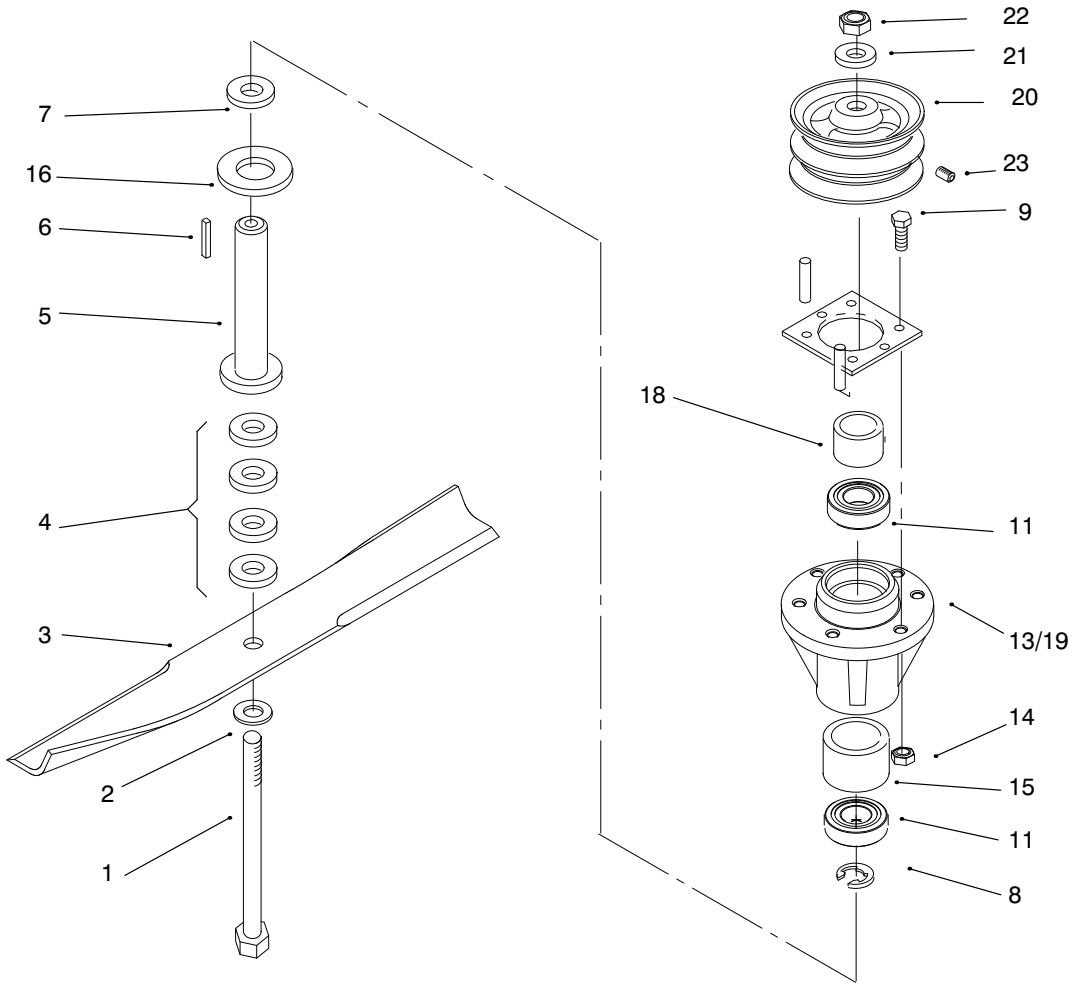


Sheet No.: 9

# Center Spindles And Blade

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | E800862 | 1 | Screw–Hhcs |
| 2 | E513208 | 1 | Washer–Lock |
| 3 | E323515 | 1 | Blade–High Lift |
| 3 | E403149 | 1 | Blade–Low Lift |
| 4 | E323539 | 4 | Spacer |
| 5 | E323530 | 1 | Tube–Spindle Long |
| 6 | E807267 | 1 | Key |
| 7 | E323533 | 1 | Spacer |
| 8 | E808502 | 1 | Ring–Retaining |
| 9 | 323–7 | 6 | Screw–HH |
| 11 | E513016 | 2 | Bearing |
| 13 | E323532 | 1 | Housing |
| 14 | 32146–2 | 6 | Nut–Hex Lock |
| 15 | E323528 | 1 | Spacer |
| 16 | E633573 | 1 | Guard |
| 18 | E323538 | 1 | Spacer–Sheave/Bear ng |
| 19 | E634619 | 1 | Housing–Spindle Incl |
| 20 | E403133 | 1 | Sheave–Double Groove |
| 21 | E323399 | 1 | Spacer |
| 22 | 3219–6 | 1 | Nut–Hex |
| 23 | E803310 | 1 | Screw–Set |

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|

# Toro Part Number Index

| Part No. | Page No. | Ref. No. | Qty. | Description |
|---|---|---|---|---|
| 614672 | 5 | 45 | 1 | Bolt–Shoulder |
| 740275 | 5 | 41 | 1 | Switch–Bail |
| E302194 | 6 | 12 | 2 | Support–Caster |
| E303020 | 2 | 5 | 1 | Grip |
| E303020 | 5 | 47 | 1 | Grip |
| E303077 | 1 | 7 | 6 | Clamp |
| E303105 | 7 | 37 | 1 | Yoke |
| E303125 | 4 | 31 | 2 | Tire |
| E303144 | 7 | 15 | 2 | Bearing |
| E303186 | 2 | 12 | 1 | Bell Crank |
| E303197 | 1 | 6 | 1 | Filter |
| E303236 | 7 | 23 | 1 | Turnbuckle Body |
| E303238 | 7 | 27 | 1 | Eye Bolt |
| E303314 | 6 | 13 | 8 | Spacer |
| E303327 | 2 | 9 | 1 | Washer–Lock |
| E303327 | 4 | 2 | 4 | Washer–Lock |
| E303327 | 7 | 5 | 7 | Washer–Lock |
| E303334 | 1 | 27 | 4 | Washer–Lock |
| E303348 | 7 | 18 | 1 | Eye Bolt |
| E303352 | 7 | 16 | 2 | Washer–Spindle |
| E303431 | 1 | 21 | 1 | Elbow |
| E303434 | 7 | 19 | 1 | Bushing |
| E303514 | 6 | 11 | 4 | Bearing–Flanged |
| E303536 | 6 | 4 | 3 | Stud–Belt Shield(Long) |
| E303537 | 6 | 9 | 2 | Stud–Belt Shield(Short) |
| E303558 | 9 | 21 | 2 | Pulley |
| E304259 | 5 | 30 | 1 | Control Panel ASM |
| E322110 | 1 | 26 | 3 | Guide–Belt |
| E322145 | 6 | 20 | 2 | Fork |
| E322201 | 2 | 53 | 1 | Deck–Engine |
| E322205 | 4 | 8 | 1 | Idler Arm ASM LH |
| E322206 | 4 | 9 | 1 | Idler Arm ASM RH |
| E322207 | 5 | 6 | 1 | Pivot–Control |
| E322208 | 5 | 4 | 1 | Bail ASM |
| E322209 | 4 | 24 | 2 | Brake Arm ASM |
| E322211 | 7 | 26 | 1 | Assist Arm ASM |
| E322212 | 4 | 41 | 1 | Axle ASM |
| E322215 | 5 | 1 | 1 | Control Bar |
| E322216 | 5 | 9 | 1 | Upper Handle ASM |
| E323197 | 4 | 18 | 4 | Spacer |
| E323228 | 1 | 25 | 3 | Spacer |
| E323252 | 2 | 23 | 2 | Bearing |
| E323253 | 4 | 29 | 4 | Sheave |
| E323254 | 2 | 24 | 2 | Flange |
| E323256 | 2 | 28 | 1 | Sheave |
| E323257 | 2 | 25 | 2 | Sheave |
| E323260 | 4 | 37 | 8 | Spacer |
| E323261 | 4 | 38 | 2 | Drum–Brake |
| E323278 | 2 | 48 | 1 | Sheave |
| E323285 | 2 | 35 | 1 | Idler Pulley |
| E323296 | 4 | 12 | 2 | Brake Rod |
| E323303 | 7 | 38 | 1 | Linkage–Assist Arm |
| E323307 | 4 | 26 | 4 | Pin |
| E323318 | 2 | 51 | 2 | Hitch Bracket |
| E323326 | 1 | 22 | 1 | Nipple |
| E323329 | 4 | 35 | 4 | Bearing |
| E323360 | 4 | 32 | 2 | Wheel ASM w/Bearings |
| E323379 | 2 | 10 | 1 | Washer |
| E323385 | 6 | 6 | 5 | Knob |
| E323387 | 2 | 4 | 1 | Shifter Plate |
| E323389 | 2 | 2 | 2 | Leg–Shifter Lever |
| E323399 | 9 | 23 | 2 | Spacer |

*Not Illustrated

# Toro Part Number Index (cont.)

| Part No. | Page No. | Ref. No. | Qty. | Description |
|---|---|---|---|---|
| E323399 | 10 | 21 | 1 | Spacer |
| E323417 | 6 | 8 | 5 | Washer |
| E323502 | 2 | 43 | 2 | Output Shaft |
| E323515 | 9 | 3 | 2 | Blade–High Lift |
| E323515 | 10 | 3 | 1 | Blade–High Lift |
| E323528 | 9 | 15 | 2 | Spacer |
| E323528 | 10 | 15 | 1 | Spacer |
| E323529 | 9 | 5 | 2 | Tube Spindle Short |
| E323530 | 10 | 5 | 1 | Tube–Spindle Long |
| E323532 | 9 | 25 | 2 | Housing |
| E323532 | 10 | 13 | 1 | Housing |
| E323533 | 9 | 7 | 2 | Spacer |
| E323533 | 10 | 7 | 1 | Spacer |
| E323538 | 10 | 18 | 1 | Spacer–Sheave/Bearing |
| E323539 | 9 | 4 | 8 | Spacer |
| E323539 | 10 | 4 | 4 | Spacer |
| E323551 | 1 | 18 | 1 | Tank |
| E323558 | 5 | 40 | 1 | Decal–Parking Brake |
| E323560 | 2 | 54 | 1 | Decal–Ground Speed |
| E323561 | 6 | 7 | 1 | Decal–Proline 48 |
| E323562 | 3 | 57 | 1 | Decal–Caution |
| E323563 | 5 | 50 | 1 | Decal–Blade Engagement |
| E323564 | 5 | 35 | 1 | Decal–Panel |
| E323568 | 5 | 27 | 1 | Wire Harness–Kohler |
| E323569 | 5 | 37 | 2 | Rod–Control |
| E323570 | 2 | 6 | 1 | Lever–Shift |
| E323573 | 5 | 48 | 1 | Lever–Blade Engagement |
| E323574 | 4 | 22 | 2 | Spring–Extension |
| E323575 | 7 | 42 | 1 | Spring–Deflector |
| E323576 | 5 | 44 | 1 | Linkage–Blade Drive |
| E323594 | 6 | 1 | 1 | Decal–Belt Routing |
| E323595 | 4 | 23 | 2 | Band–Brake |
| E323600 | 8 | 6 | 1 | Rod–Brake |
| E323601 | 8 | 2 | 1 | Rod–Brake |
| E323607 | 4 | 46 | 1 | Shield–Trailing |
| E323608 | 7 | 39 | 1 | Spring–Extension |
| E323614 | 5 | 39 | 1 | Lever–Parking Brake |
| E323630 | 2 | 46 | 1 | Belt–Trans Drive |
| E323631 | 4 | 43 | 2 | Belt–Drive |
| E323632 | 4 | 19 | 2 | Shield |
| E323634 | 4 | 14 | 2 | Idler–Wheel Drive |
| E323636 | 7 | 43 | 1 | Spacer–Spring |
| E323637 | 5 | 23 | 1 | Throttle Control |
| E323659 | 6 | 29 | 1 | Decal–Torque |
| E323680 | 2 | 42 | 2 | Coupling |
| E323694 | 4 | 13 | 2 | Swivel |
| E324305 | 8 | 1 | 2 | Brake ASM |
| E324344 | 7 | 17 | 1 | Engagement Arm w/Bushing |
| E402053 | 7 | 12 | 1 | Idler Arm Assembly |
| E402107 | 7 | 34 | 1 | Baffle Weldment |
| E403087 | 2 | 32 | 1 | Pulley |
| E403107 | 7 | 13 | 1 | Rod–Tension |
| E403119 | 7 | 9 | 1 | Pulley–Idler |
| E403133 | 10 | 20 | 1 | Sheave–Double Groove |
| E403149 | 9 | 3 | 2 | Blade–Low Lift |
| E403149 | 10 | 3 | 1 | Blade–Low Lift |
| E403163 | 6 | 3 | 1 | Belt–Blade Drive |
| E403164 | 6 | 2 | 1 | Belt–Blade Drive |
| E403167 | 9 | 20 | 2 | Ring–Retaining |
| E404244 | 7 | 33 | 1 | Deck ASM w/ Decals |
| E404245 | 7 | 1 | 1 | Discharge Chute w/Decal |
| E404246 | 6 | 5 | 1 | Belt Cover w/Decal |

*Not Illustrated

# Toro Part Number Index (cont.)

| Part No. | Page No. | Ref. No. | Qty. | Description |
|---|---|---|---|---|
| E412358 | 4 | 42 | 2 | Scraper |
| E513016 | 9 | 11 | 4 | Bearing |
| E513016 | 10 | 11 | 2 | Bearing |
| E513152 | 2 | 15 | 1 | Switch–Seat |
| E513208 | 9 | 2 | 2 | Washer–Lock |
| E513208 | 10 | 2 | 1 | Washer–Lock |
| E513338 | 6 | 10 | 2 | Washer |
| E513508 | 1 | 17 | 1 | Cap–Fuel Tank |
| E513547 | 6 | 17 | 2 | Spacer |
| E513645 | 1 | 12 | 1 | Bushing |
| E513807 | 6 | 16:1 | 2 | Wheel Hub ASM |
| E513808 | 6 | 16:2 | 2 | Tire |
| E513809 | 6 | 16:3 | 2 | Bearing–Roller |
| E513810 | 6 | 16:4 | 4 | Bushing |
| E513959 | 4 | 11 | 2 | Wingnut |
| E523157 | 4 | 33 | A/R | Spacer–14 GA |
| E543233 | 1 | 23 | 1 | Cap |
| E543277 | 1 | 11 | 1 | Elbow |
| E543296 | 2 | 55 | 1 | Grommet–Fuel Line |
| E543436 | 4 | 33 | A/R | Spacer–18 GA |
| E543879 | 7 | 46 | 1 | Bushing |
| E603403 | 2 | 13 | 1 | Bolt–Shoulder |
| E603496 | 7 | 10 | 1 | Bushing |
| E603770 | 1 | 9 | 1 | Valve–Gas |
| E603776 | 1 | 8 | 1 | Fuel–Line |
| E603843 | 7 | 22 | 2 | Pulley–Idler |
| E603954 | 1 | 5 | 1 | Hose–Fuel |
| E603955 | 1 | 10 | 1 | Fuel–Line |
| E633023 | 1 | 13 | 2 | Stud |
| E633349 | 1 | 15 | 2 | Spring–Fuel Tank |
| E633573 | 9 | 16 | 2 | Guard |
| E633573 | 10 | 16 | 1 | Guard |
| E634619 | 9 | 13 | 2 | Housing–Spindle Incl |
| E634619 | 10 | 19 | 1 | Housing–Spindle Incl |
| E800029 | 7 | 47 | 1 | TAP Bolt |
| E800270 | 7 | 3 | 10 | Screw–HH |
| E800291 | 7 | 32 | 1 | Screw–HH |
| E800861 | 9 | 1 | 2 | Screw–HH |
| E800862 | 10 | 1 | 1 | Screw–Hhcs |
| E803003 | 7 | 20 | 1 | Bolt–Whizlock |
| E803028 | 2 | 16 | 2 | Screw |
| E803051 | 4 | 28 | 4 | Nut |
| E803293 | 2 | 47 | 2 | Screw–Set |
| E803310 | 2 | 27 | 3 | Screw–Set |
| E803310 | 9 | 22 | 2 | Screw–Set |
| E803310 | 10 | 23 | 1 | Screw–Set |
| E807009 | 2 | 44 | 3 | Key |
| E807264 | 2 | 29 | 1 | Key |
| E807267 | 9 | 6 | 2 | Key |
| E807267 | 10 | 6 | 1 | Key |
| E807511 | 2 | 17 | 1 | Bolt–CARR |
| E808280 | 7 | 36 | 1 | Pin–Clevis |
| E808501 | 4 | 27 | 2 | Ring–Retaining |
| E808502 | 10 | 8 | 1 | Ring–Retaining |
| E808505 | 7 | 14 | 2 | Ring–Retaining |
| E808519 | 4 | 34 | 2 | Ring–Retaining |
| E808522 | 4 | 6 | 2 | Ring |
| E808523 | 2 | 45 | 2 | Ring–Retaining |
| E809020 | 6 | 14 | 2 | Pin |
| E809065 | 1 | 28 | 3 | Screw–HH |
| E809084 | 7 | 25 | 1 | Bolt–Shoulder |
| E811001 | 6 | 23 | 2 | Zerk |

*Not Illustrated

# Toro Part Number Index (cont.)

| Part No. | Page No. | Ref. No. | Qty. | Description |
|---|---|---|---|---|
| 43−8480 | 6 | 28 | 1 | Decal−Danger |
| 47−2910 | 5 | 46 | 1 | Washer−Thrust |
| 51−4220 | 3 | 58 | 2 | Guard−Coupler |
| 63−8440 | 1 | 24 | 1 | Decal−Hot Surface |
| 66−1340 | 6 | 27 | 1 | Decal−Discharge |
| 67−0710 | 8 | 3 | 2 | Ball − Swivel |
| 67−5360 | 6 | 26 | 1 | Decal−Danger |
| 74−0521 | 4 | 10 | 2 | Rod−Fitting |
| 74−0720 | 5 | 31 | 1 | Tube−Manual |
| 80−4980 | 7 | 40 | 1 | Washer |
| 82−2280 | 5 | 7 | 1 | Decal−Reverse |
| 82−2290 | 5 | 2 | 1 | Decal−Control Bar |
| 93−1122 | 7 | 41 | 1 | Decal−Danger |
| 95−2814 | 3 | 56 | 1 | Decal−Fuel Shut−Off |
| 98−3269 | 6 | 25 | 1 | Decal−Made In USA |
| 218−595 | 5 | 38 | 1 | Connector−Body |
| 237−141 | 5 | 43 | 2 | Grommet |
| 2412−104 | 4 | 47 | 2 | Clamp |
| 2412−120 | 5 | 28 | 2 | Clamp−R |
| 283−6 | 4 | 49 | 2 | Pin−Clevis |
| 283−55 | 5 | 21 | 2 | Pin−Clevis |
| 302−58 | 2 | 49 | 2 | Fitting−Grease |
| 302−58 | 4 | 4 | 2 | Fitting−Grease |
| 302−58 | 7 | 44 | 2 | Fitting−Grease |
| 321−3 | 2 | 26 | 4 | Screw−HH |
| 322−3 | 1 | 20 | 2 | Screw−HH |
| 322−3 | 2 | 37 | 4 | Screw−HH |
| 322−3 | 8 | 5 | 4 | Screw−HH |
| 322−6 | 4 | 40 | 8 | Screw−HH |
| 323−4 | 6 | 22 | 8 | Screw−HH |
| 323−6 | 2 | 50 | 4 | Screw−HH |
| 323−6 | 4 | 3 | 4 | Screw−HH |
| 323−7 | 7 | 4 | 6 | Screw−HH |
| 323−7 | 9 | 9 | 12 | Screw−HH |
| 323−7 | 10 | 9 | 6 | Screw−HH |
| 323−9 | 7 | 7 | 1 | Screw−HH |
| 323−11 | 4 | 5 | 2 | Screw |
| 323−13 | 7 | 48 | 1 | Screw−HH |
| 323−16 | 4 | 20 | 4 | Screw−HH |
| 325−20 | 6 | 15 | 2 | Screw−HH |
| 3210−3 | 4 | 45 | 2 | Screw−HH |
| 3217−9 | 6 | 18 | 2 | Nut−HH |
| 3219−6 | 9 | 24 | 2 | Nut−Hex |
| 3219−6 | 10 | 22 | 1 | Nut−Hex |
| 3230−1 | 2 | 3 | 21 | Bolt−CARR |
| 3234−11 | 5 | 33 | 4 | Screw−HHF |
| 3242−4 | 2 | 30 | 1 | Screw−Set |
| 3242−6 | 2 | 31 | 1 | Screw−Sqh Set |
| 3253−4 | 1 | 19 | 2 | Washer−Lock |
| 3253−4 | 2 | 38 | 4 | Washer−Lock |
| 3253−4 | 4 | 39 | 8 | Washer−Lock |
| 3253−7 | 6 | 19 | 2 | Washer−Lock |
| 3256−2 | 1 | 14 | 4 | Washer−Flat |
| 3256−23 | 4 | 51 | 2 | Washer−Flat |
| 3256−24 | 2 | 34 | 1 | Washer−Flat |
| 3256−24 | 5 | 51 | 1 | Washer−Flat |
| 3256−24 | 7 | 8 | 3 | Washer−Flat |
| 3256−25 | 2 | 36 | 1 | Washer−Flat |
| 3290−307 | 2 | 52 | 1 | Pin−Cotter |
| 3290−307 | 4 | 25 | 2 | Pin−Cotter |
| 3290−307 | 4 | 50 | 2 | Pin−Cotter |
| 3290−307 | 5 | 42 | 3 | Pin−Cotter |

*Not Illustrated

# Toro Part Number Index (cont.)

| Part No. | Page No. | Ref. No. | Qty. | Description |
|---|---|---|---|---|
| 3290–307 | 7 | 11 | 3 | Pin–Cotter |
| 3290–378 | 5 | 26 | 2 | Tie–Cable |
| 3296–2 | 5 | 3 | 5 | Nut–Lock |
| 3296–6 | 2 | 8 | 1 | Nut–Lock |
| 3296–29 | 1 | 16 | 2 | Nut–Lock |
| 3296–29 | 7 | 2 | 2 | Nut–Lock |
| 3296–29 | 8 | 4 | 4 | Nut–Lock |
| 3296–42 | 8 | 7 | 2 | Nut–Lock |
| 32104–32 | 2 | 11 | 4 | Screw–HH |
| 32104–76 | 5 | 29 | 2 | Screw–Self TAP |
| 32105–1 | 5 | 5 | 1 | Screw–HH |
| 32105–14 | 5 | 34 | 4 | Screw–HH |
| 32128–20 | 2 | 7 | 2 | Nut–Lock |
| 32128–20 | 6 | 30 | 5 | Nut–Lock |
| 32128–20 | 7 | 24 | 12 | Nut–Lock |
| 32128–21 | 5 | 32 | 4 | Nut–HF |
| 32128–43 | 2 | 41 | 5 | Nut–Flange |
| 32128–43 | 4 | 1 | 14 | Nut–Flange |
| 32128–43 | 6 | 24 | 8 | Nut–Flange |
| 32128–43 | 7 | 6 | 10 | Nut–Flange |
| 32146–2 | 2 | 33 | 1 | Nut–Hex Lock |
| 32146–2 | 5 | 49 | 1 | Nut–Hex Lock |
| 32146–2 | 7 | 49 | 1 | Nut–Hex Lock |
| 32146–2 | 9 | 14 | 12 | Nut–Hex Lock |
| 32146–2 | 10 | 14 | 6 | Nut–Hex Lock |
| 32146–4 | 4 | 48 | 2 | Nut–Lock |
| 32146–17 | 2 | 39 | 4 | Nut–Lock |
| 32146–18 | 2 | 14 | 2 | Nut–Lock |
| 32151–80 | 5 | 8 | 2 | Ring–Push On |
| 33114–025 | 1 | 3 | 1 | Screw–HH |

*Not Illustrated

# MAINTENANCE RECORD

| Date | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |