
FORM NO. 3321–433

TORO®

MODEL NO. 30386–80001 & UP

PARTS CATALOG

ROTARY BRUSH
FOR GROUNDSMASTER® 3000

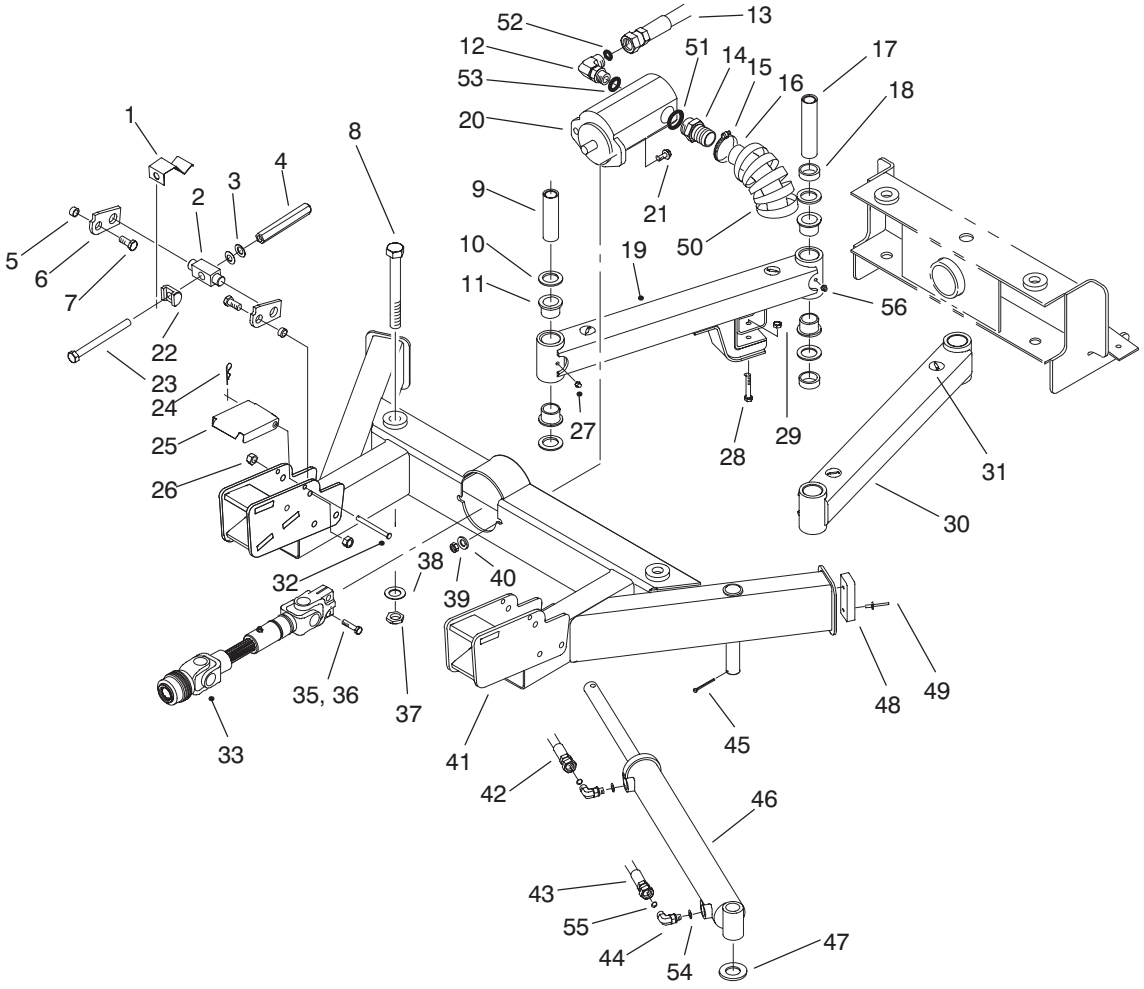


T–3023

ARM & MOUNT ASM

Ref. No.	Part No.	Description	No. Used
1	93–4818	Spring–Lever	2
2	93–4677	Hub–Release	2
3	3290–413	Washer–Belleville	4
4	93–4678	Lever–Release	2
5	93–4618	Spacer–Pivot	4
6	93–4675	Plate–Release	4
7	33115–025	Screw–HH	2
8	3216–14	Screw–HH	2
9	94–7394	Spacer–Bushing	2
10	3–6781	Washer–Thrust	8
11	28–9290	Bushing	8
12	340–117	Elbow	1
13	95–5115	Asm–Hose	1
14	95–5620	Fitting (Incl. Ref. #51)	1
15	2412–3	Clamp–Hose	1
16	95–5118	Hose	1
17	94–7377	Spacer–Bushing	2
18	63–0070	Spacer	4
19	95–6102	Asm–Arm, LH (Incl. Ref. #11, 27, 31 & 56)	1
20	94–7376	Pump–Hydraulic	1
21	33105–030	Screw–HHF	2
22	93–4676	Shaft–Latch	2
23	3213–24	Screw–HH	2
24	3290–467	Pin–Cotter, Hair	2
25	93–4819	Cover–Latch	2
26	33025–00	Nut–Lock	4
27	302–11	Fitting–Grease 45°	2
28	33113–060	Screw–HH	1
29	33023–00	Nut–Lock	1
30	94–7383	Asm–Arm, RH (Incl. Ref. #11, 27, 31 & 56)	1
31	58–6520	Decal–Grease	4

© The TORO Company – 1998
All Rights Reserved

TPS

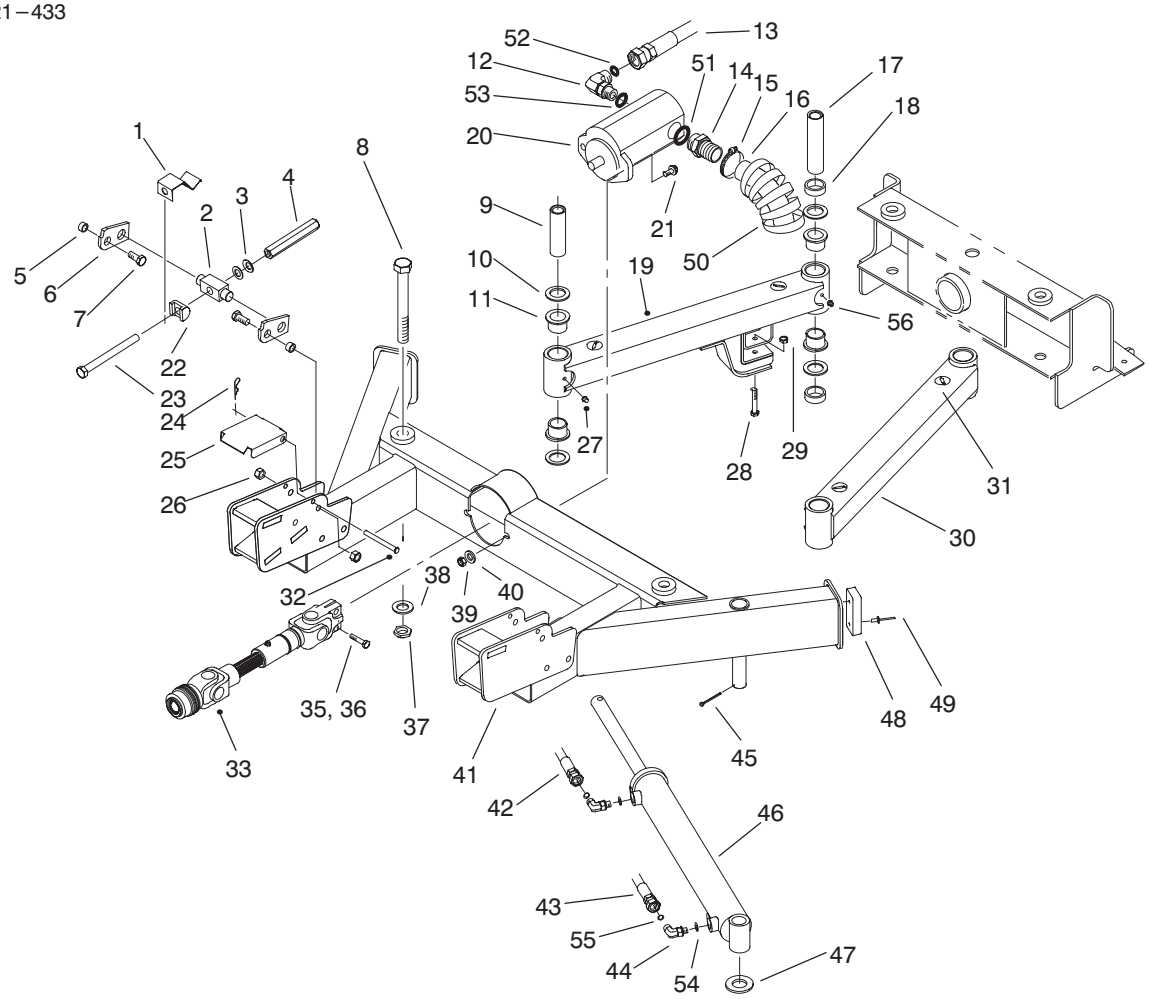


T–3023

ARM & MOUNT ASM (Continued)

Ref. No.	Part No.	Description	No. Used
32	283–88	Pin–Clevis	2
33	94–7375	Shaft–Drive	1
34	322–7	Screw–HH	2
36	32153–3	Nut–Lock	2
37	32146–20	Nut–Jam	2
38	3256–28	Washer–Flat	2
39	33025–00	Nut–Lock	2
40	33095–00	Washer–Flat	2
41	94–7390	Asm–Mount	1
42	95–7777	Asm–Hose	1
43	95–7778	Asm–Hose	1
44	95–7889	Fitting (Incl. Ref. #54 & 55)	2

Ref. No.	Part No.	Description	No. Used
45	3272–20	Pin–Cotter	1
46	95–7775	Cylinder–Hydraulic	1
47	3256–62	Washer–Flat	1
48	86–5350	Bumper–Rubber	2
49	3269–11	Rivet	4
50	95–7001	Hose–Wrap	1
51	237–146	O–Ring	1
52	237–65	O–Ring	2
53	237–80	O–Ring	2
54	237–78	O–Ring	2
55	237–21	O–Ring	2
56	302–5	Fitting–Grease	2

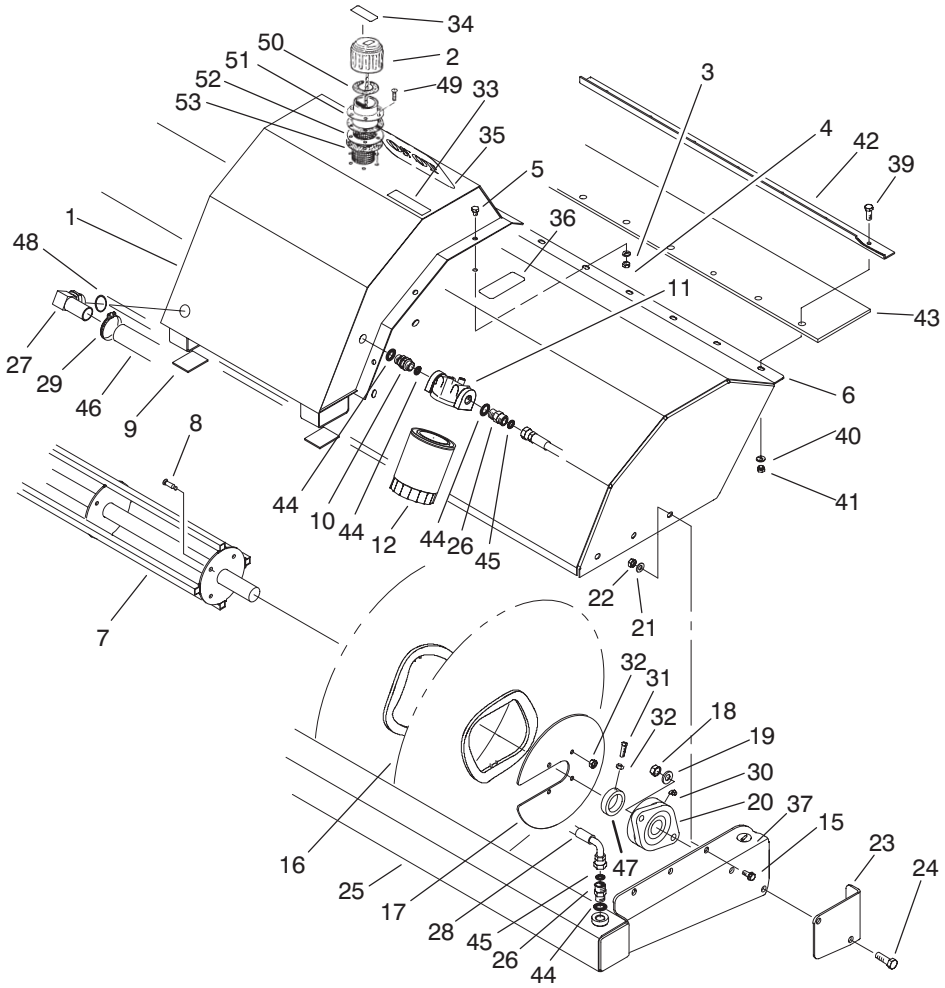


T−3024

FRAME & AXLE ASM

Ref. No.	Part No.	Description	No. Used
1	95−6105	Asm−Tank, Hydraulic (Incl. Ref. #33−35)	1
2	353−962	Asm−Cap & Chain	1
3	33024−00	Nut−Lock	8
4	33094−00	Washer−Flat	8
5	33104−016	Screw−HHF	8
6	94−7481	Asm−Cover (Incl. Ref. #33 & 36)	1
7	94−7364	Asm−Axle	1
8	95−3210	Stud−Wheel	4
9	95−2899	Pad−Rubber	2
10	95−3209	Fitting−Straight (Incl. Ref. # 44 & 45)	1
11	86−9080	Head−Filter	1
12	54−0110	Element−Filter, Oil	1
15	33105−020	Screw−HHF	6
16	94−7372	Element−Brush, Plastic	32
17	94−7370	Plate−Axle	1
18	33026−00	Nut−Lock	2
19	33096−00	Washer−Flat	2
20	94−7484	Bearing−Axle (Incl. Ref. #31, 32 & 47)	2
21	33095−00	Washer−Flat	6
22	33025−00	Nut−Lock	6
23	95−3206	Guard−Right	1
24	33106−040	Screw−HHF	2
25	95−6100	Asm−Frame	1
26	340−4	Fitting (Incl. Ref. #44 & 45)	2
27	56−9530	Fitting−90° Elbow	1
28	95−5119	Asm−Hose	1
29	2412−3	Clamp−Hose	1
30	302−40	Fitting−Grease	2
31	3242−14	Screw−Set, Square Head	2
32	3219−2	Nut−Hex.	6
33	68−7390	Decal−Warning	1
34	85−4730	Decal−Hydraulic Oil Only	1
35	67−7320	Decal−Toro	1
36	54−0910	Decal−Warning	2
37	58−6520	Decal−Grease	2
39	32104−23	Screw−HH	14
40	3256−23	Washer−Flat	14
41	3296−29	Nut−Lock	14
42	95−7787	Strap	2
43	95−7788	Deflector	1
44	237−79	O−Ring	3
45	237−30	O−Ring	3
46	95−5118	Hose	1
47		Collar−Bearing (Incl. Ref. #31 & 32)	2
48	237−117	O−Ring	1
49	32144−39	Screw	6
50	76−1720	Gasket−Cap, Filler	1
51	353−961	Bayonet Flange	1
52	62−2610	Strainer	1
53	353−963	Gasket	1
*	95−7004	Asm−Cap, Filler (Incl. Ref. #2 & 50−53)	1

* Not Illustrated

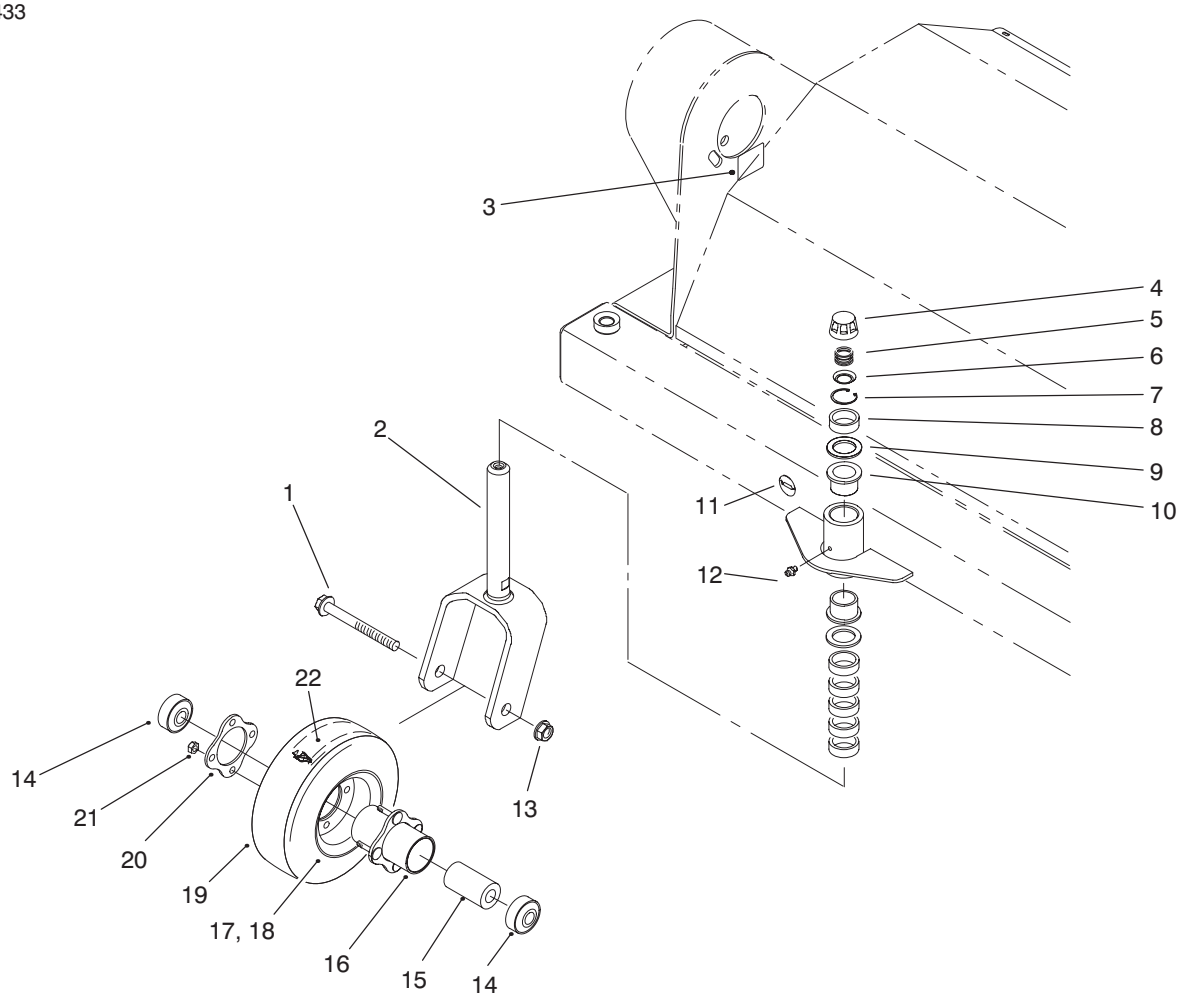


T−3027

CASTOR WHEEL ASM

Ref. No.	Part No.	Description	No. Used
1	327−24	Screw−HH	2
2	98−7069	Fork−Castor	2
3	88−8950	Decal−Warning, Belt	1
4	92−8861	Cap−Height−of−Cut	2
5	92−5584	Spring−Compression	2
6	92−5583	Washer−Cap	2
7	92−5581	Ring−Retaining	2
8	63−0070	Spacer	12
9	3−6781	Washer−Thrust	4
10	28−9290	Bushing	4
11	58−6520	Decal−Grease	2
12	302−5	Fitting−Grease	2
13	3296−53	Nut−Lock	2

Ref. No.	Part No.	Description	No. Used
14	93−4237	Bearing	4
15	93−4241	Spacer−Bearing	2
16	93−5980	Hub	2
17	93−4239	Rim−Wheel	2
18	95−2741	Rim−Wheel	2
19	93−9939	Tire	2
20	93−4242	Plate	2
21	32128−16	Nut−HHF	8
22	68−8950	Tube−w/Valve	2
*	93−9938	Asm−Wheel, Pneumatic (Incl. Ref. #14−22)	2
*	95−6100	Asm−Frame (Incl. Ref. #3 & 10−12)	1


* Not Illustrated

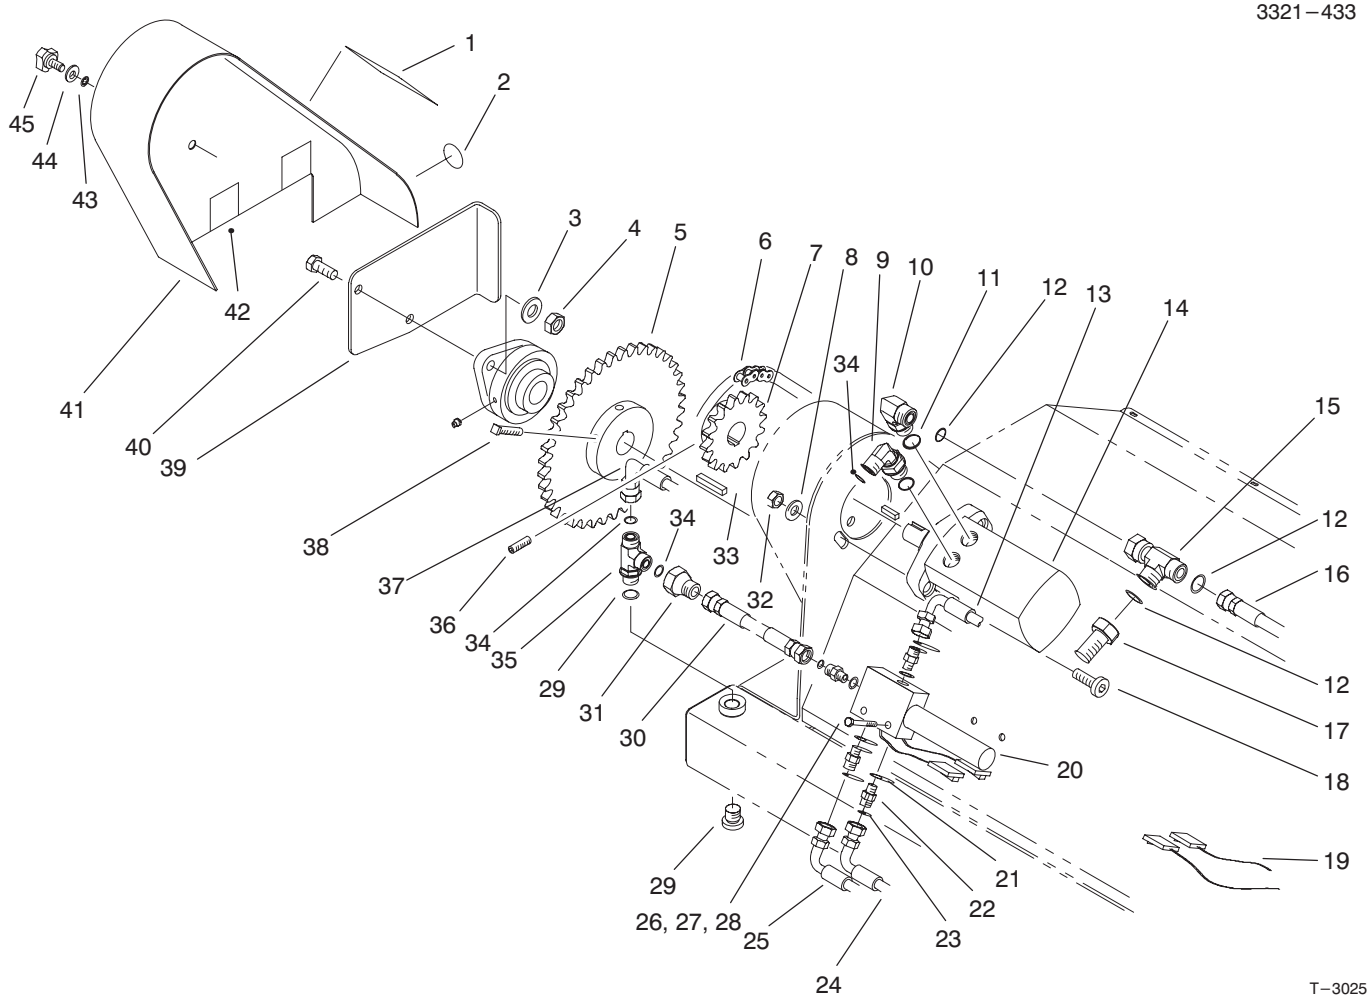

SPROCKET & MOTOR ASM

Ref. No.	Part No.	Description	No. Used
1	95−5919	Decal−Danger	1
2	58−6520	Decal−Grease	1
3	33096−00	Washer−Flat	2
4	33026−00	Nut−Lock	2
5	94−7352	Sprocket−40 Teeth (Incl. Ref. #38)	1
6	95−7771	Chain−Roller	1
7	94−7353	Sprocket−16 Teeth (Incl. Ref. #36)	1
8	3256−26	Washer−Flat	2
9	340−105	Fitting−Elbow (Incl. Ref. #11 & 34)	1
10	340−17	Fitting−Elbow (Incl. Ref. #11 & 12)	1
11	237−80	O−Ring	2
12	237−65	O−Ring	3
13	95−7780	Asm−Hose	1
14	94−7374	Motor−Hydraulic	1
15	340−147	Fitting−Hydraulic	1
16	95−5115	Asm−Hose	1
17	98−7067	Fitting−Hydraulic	1
18	3274−4	Screw−HSH	2
19	95−3290	Harness−Wire	1
20	95−7774	Block−Valve	1
21	237−78	O−Ring	4
22	340−2	Adapter (Incl. Ref. #21 & 23)	2

Ref. No.	Part No.	Description	No. Used
23	237−21	O−Ring	4
24	95−7778	Asm−Hose	1
25	95−7777	Asm−Hose	1
26	33114−045	Screw−HH	2
27	33094−00	Washer−Flat	2
28	33024−00	Nut−Lock	2
29	353−988	Plug−w/O−Ring Seal	1
30	95−7779	Asm−Hose	1
31	95−7776	Fitting−Hydraulic	1
32	32146−13	Nut−Lock	2
33	95−7023	Key−Square	1
34	237−30	O−Ring	3
35	98−7067	Fitting−Hydraulic	1
36		Screw−Set	2
37	95−5112	Asm−Hose	1
38	3243−9	Screw−Set, Square Head	2
39	95−3205	Guard−Left	1
40	33106−040	Screw−HH	2
41	95−6106	Asm−Cover (Incl. Ref. #1)	1
42	95−7769	Foam	2
43	32151−72	Ring−Retaining	1
44	3256−3	Washer−Flat	1
45	77−3620	Retainer−Cover	1

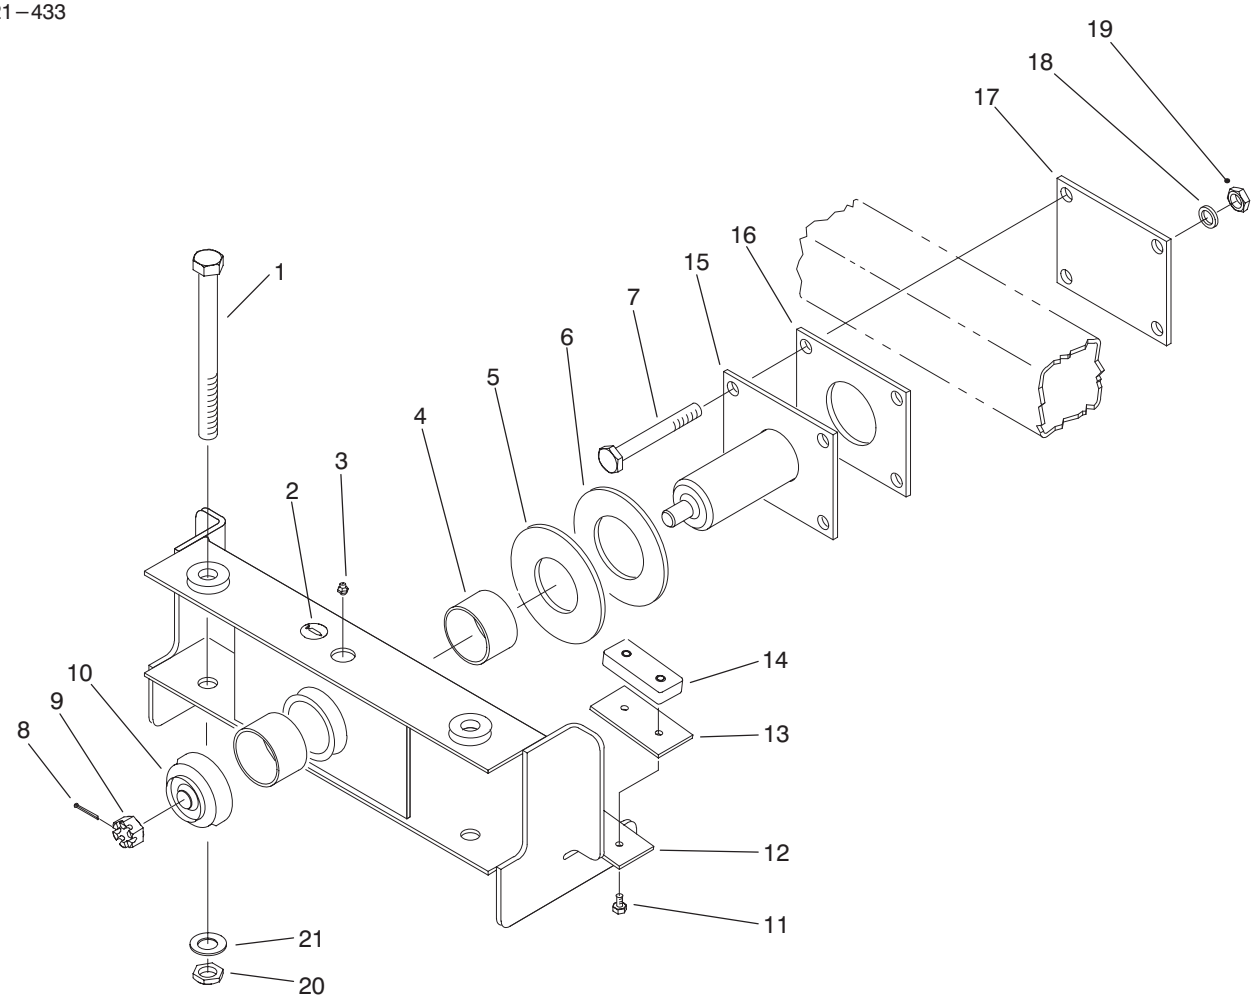


T−3026

PIVOT PIN & MOUNT ASM

Ref. No.	Part No.	Description	No. Used
1	3216−19	Screw−HH	2
2	58−6520	Decal−Grease	1
4	95−5127	Bushing	2
5	95−3204	Washer−Pivot	1
6	95−3200	Washer−Pivot	1
7	32118−140	Screw−HH	4
8	3272−42	Pin−Cotter	1
9	32136−5	Nut−Hex. Slotted	1
10	95−3202	Cap−Pivot	1
11	321−4	Screw−HH	4
12	95−6104	Asm−Mount−Top (Incl. Ref. #2−4)	1

Ref. No.	Part No.	Description	No. Used
13	95−2897	Mount−Bumper	2
14	86−5350	Bumper−Rubber	2
15	95−2888	Pin−Pivot	1
16	95−2896	Plate−Spacer	1
17	95−2884	Plate−Back	1
18	33098−00	Washer−Flat	4
19	33028−00	Nut−Lock	4
20	32146−20	Nut−Jam	2
21	3256−28	Washer−Flat	2

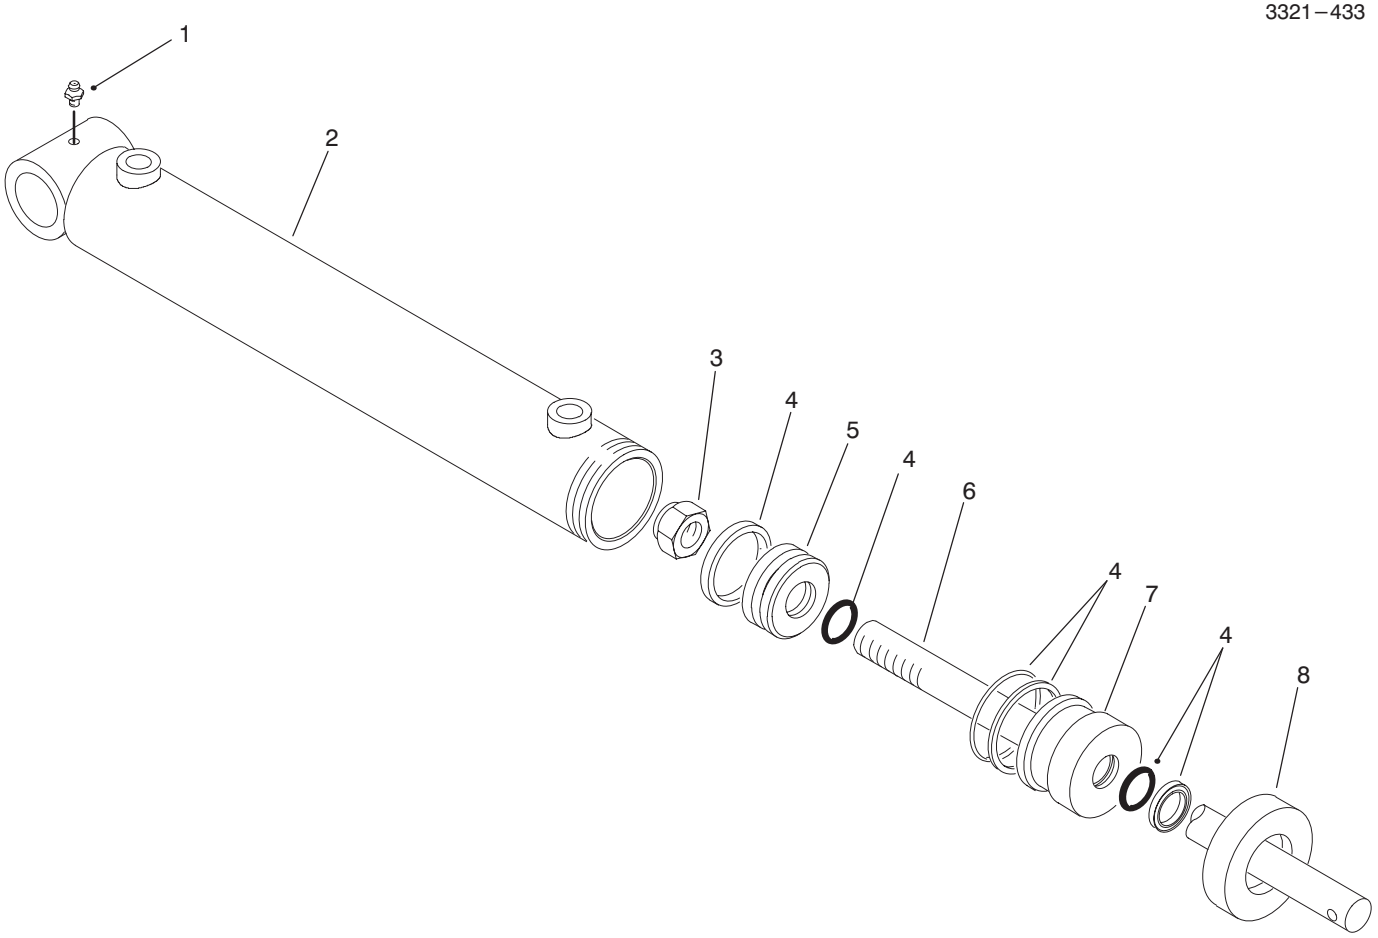


T–3028

HYDRAULIC CYLINDER NO. 95–7775 ASM

Ref. No.	Part No.	Description	No. Used
1	302–5	Fitting–Grease	1
2	95–6145	Barrel	1
3	60–9760	Nut–Lock	1
4	95–6149	Kit–Seal Repair	1

Ref. No.	Part No.	Description	No. Used
5	95–6146	Piston	1
6	95–6148	Shaft	1
7	95–6147	Head	1
8		Collar	1

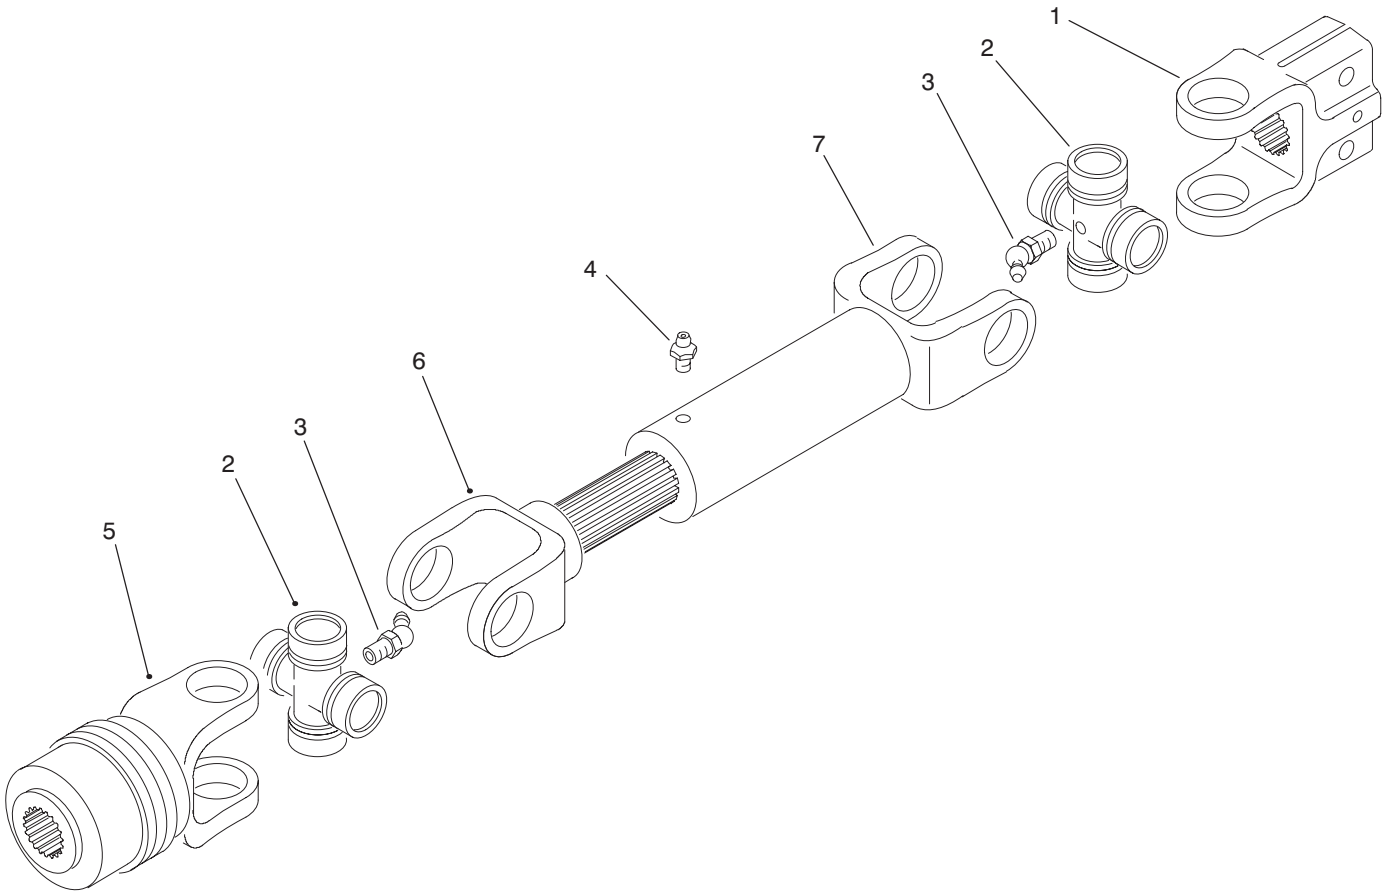


T–2615

DRIVE SHAFT NO. 94–7375 ASM

Ref. No.	Part No.	Description	No. Used
1	94–7450	Yoke–End	1
2	54–9180	Kit–U Joint	2
3	62–3820	Fitting–Grease	2
4	302–58	Fitting–Grease	1

Ref. No.	Part No.	Description	No. Used
5	93–4633	Yoke–Auto–Lok	1
6	94–7378	Shaft–Slip Yoke	1
7	94–7379	Tube–Slip Yoke	1

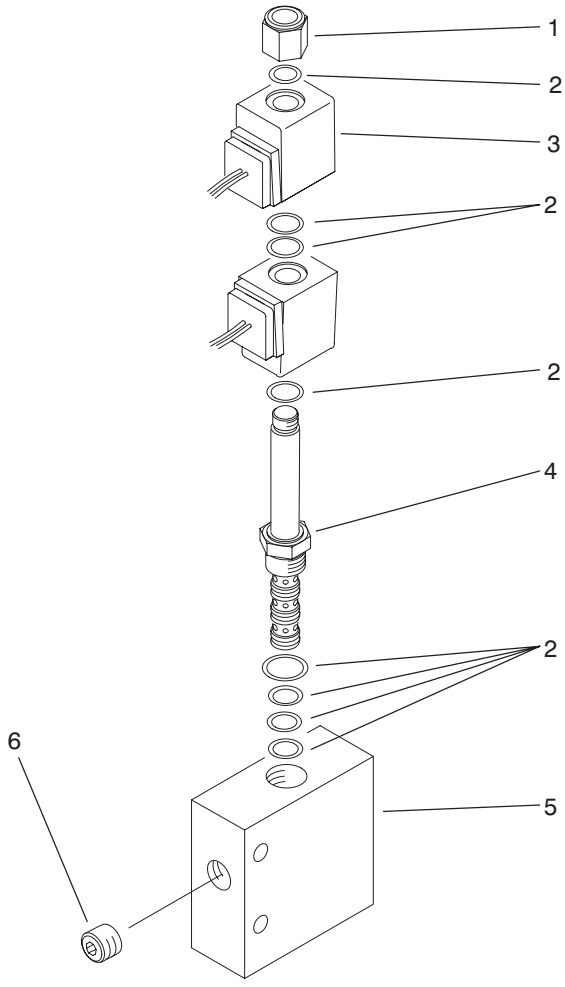


T−3029

VALVE BLOCK ASM

Ref. No.	Part No.	Description	No. Used
1	3219−10	Nut−Hex.	1
2	95−6144	Kit−Seal	1
3	95−6142	Coil	2
4	95−6143	Valve	1
5		Block	1
6	95−7888	Plug−Orifice	1
*	95−7774	Asm−Block, Valve (Incl. Ref. #1−60	1

* Not Illustrated

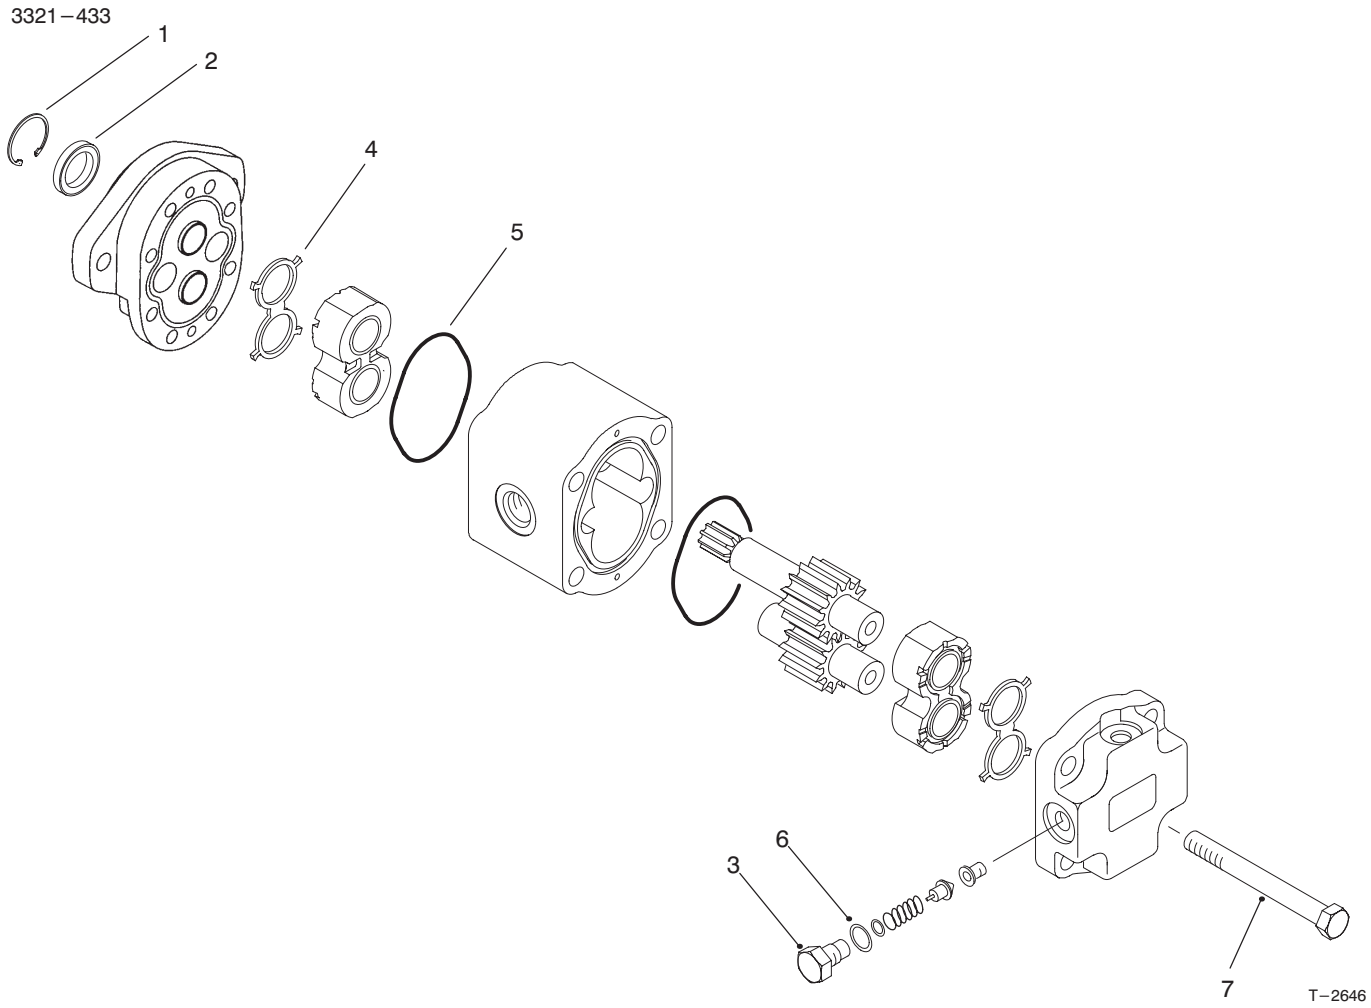


HYDRAULIC PUMP NO. 94–7376 ASM

Ref. No.	Part No.	Description	No. Used
1		Ring–Retaining	1
2	95–5938	Seal–Shaft	1
3	95–5937	Valve–Relief	1
4		E–Ring	2
5		O–Ring	2

Ref. No.	Part No.	Description	No. Used
6	96–1289	Kit–Seal, Relief Valve	1
7	95–5940	Bolt	4
*	95–5939	Kit–Seal, Pump (Incl. Ref. #1, 2 & 4–6)	1

* Not Illustrated

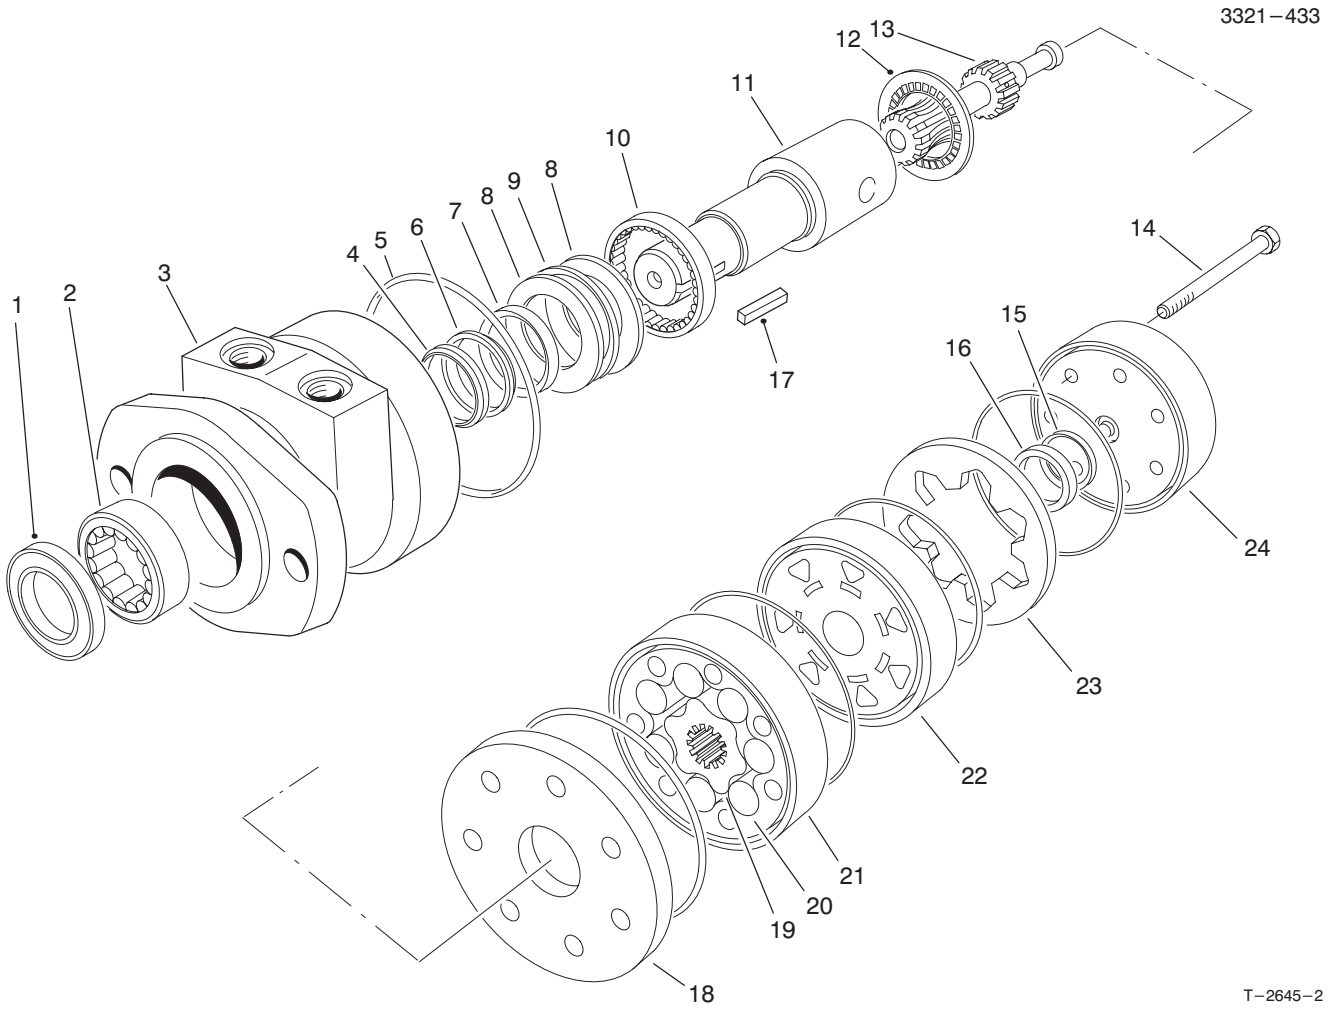


HYDRAULIC MOTOR NO. 94–7374 ASM

Ref. No.	Part No.	Description	No. Used
1		Seal – Dirt & Water	1
2		Bearing	1
3		Housing	1
4		Washer – Backup	1
5		Seal – Rings	5
6		Washer – Backup	1
7		Seal – Inner	1
8		Washer – Thrust	2
9		Bearing – Thrust	1
10		Bearing	1
11	95–6137	Shaft – Coupling	1
12	76–0850	Bearing – Thrust	1
13	76–0930	Link – Drive	7
14	76–1030	Screw – Cap, Hex. Hd.	1
15		Seal – Commutator	1
16		Commutator	1

Ref. No.	Part No.	Description	No. Used
17	11–5790	Key – Square	1
18	76–0870	Plate – Wear	1
19		Rotor	1
20		Vane	7
21		Stator	1
22	95–6139	Manifold	1
23		Ring – Commutator	1
24	76–0940	Assembly – Cover, End	1
*	76–0950	Rotor Set (Incl. Ref. #19–21)	1
*	95–6138	Assembly – Commutator (Incl. Ref. #15, 16 & 23)	1
*	76–0800	Kit – Seal (Incl. Ref. #1, 4–7 & 15)	1
*	95–6136	Assembly – Housing (Incl. Ref. #2, 3 & 8–10)	1

* Not Illustrated

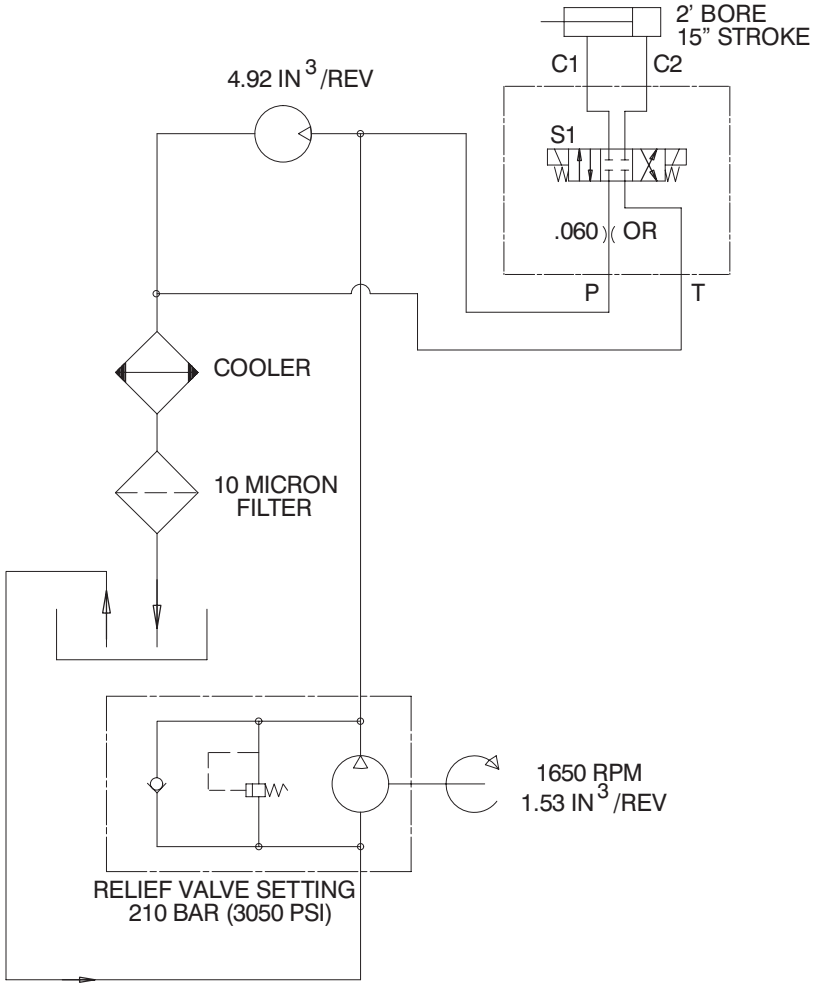

T–2616

HYDRAULIC SCHEMATIC

Ref. No.	Part No.	Description	No. Used

Ref. No.	Part No.	Description	No. Used

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
3–6781	Washer–Thrust	4	9	4
3–6781	Washer–Thrust	1	10	8
11–5790	Key–Square	11	17	1
28–9290	Bushing	4	10	4
28–9290	Bushing	1	11	8
54–0110	Element–Filter, Oil	3	12	1
54–0910	Decal–Warning	3	36	2
54–9180	Kit–U–Joint	8	2	2
56–9530	Fitting–90° Elbow	3	27	1
58–6520	Decal–Grease	5	2	1
58–6520	Decal–Grease	6	2	1
58–6520	Decal–Grease	4	11	2
58–6520	Decal–Grease	1	31	4
58–6520	Decal–Grease	3	37	2
60–9760	Nut–Lock	7	3	1
62–2610	Strainer	3	52	1
62–3820	Fitting–Grease	8	3	2
63–0070	Spacer	4	8	12
63–0070	Spacer	1	18	4
67–7320	Decal–Toro	3	35	1
68–7390	Decal–Warning	3	33	1
68–8950	Tube–w/Valve	4	22	2
76–0800	Kit–Seal	11	*	1
76–0850	Bearing–Thrust	11	12	1
76–0870	Plate–Wear	11	18	1
76–0930	Link–Drive	11	13	7
76–0940	Assembly–Cover, End	11	24	1
76–0950	Rotor Set	11	*	1
76–1030	Screw–Cap, Hex. Hd.	11	14	1
76–1720	Gasket–Cap, Filler	3	50	1
77–3620	Retainer–Cover	5	45	1
85–4730	Decal–Hydraulic Oil Only	3	34	1
86–5350	Bumper–Rubber	6	14	2
86–5350	Bumper–Rubber	2	48	2
86–9080	Head–Filter	3	11	1
88–8950	Decal–Warning, Belt	4	3	1
92–5581	Ring–Retaining	4	7	2
92–5583	Washer–Cap	4	6	2
92–5584	Spring–Compression	4	5	2
92–8861	Cap–Height–of–Cut	4	4	2
93–4237	Bearing	4	14	4
93–4239	Rim–Wheel	4	17	2
93–4241	Spacer–Bearing	4	15	2
93–4242	Plate	4	20	2
93–4618	Spacer–Pivot	1	5	4
93–4633	Yoke–Auto–Lok	8	5	1
93–4675	Plate–Release	1	6	4
93–4676	Shaft–Latch	1	22	2
93–4677	Hub–Release	1	2	2
93–4678	Lever–Release	1	4	2
93–4818	Spring–Lever	1	1	2
93–4819	Cover–Latch	1	25	2
93–5980	Hub	4	16	2
93–9938	Asm–Wheel, Pneumatic	4	*	2
93–9939	Tire	4	19	2
94–7352	Sprocket–40 Teeth	5	5	1
94–7353	Sprocket–16 Teeth	5	7	1
94–7364	Asm–Axle	3	7	1
94–7370	Plate–Axle	3	17	1
94–7372	Element–Brush, Plastic	3	16	32
94–7374	Motor–Hydraulic	5	14	1
94–7375	Shaft–Drive	2	33	1
94–7376	Pump–Hydraulic	1	20	1
94–7377	Spacer–Bushing	1	17	2
94–7378	Shaft–Slip Yoke	8	6	1
94–7379	Tube–Slip Yoke	8	7	1
94–7383	Asm–Arm, RH	1	30	1
94–7390	Asm–Mount	2	41	1
94–7394	Spacer–Bushing	1	9	2
94–7450	Yoke–End	8	1	1
94–7481	Asm–Cover	3	6	1
94–7484	Bearing–Axle	3	20	2
95–2741	Rim–Wheel	4	18	2
95–2884	Plate–Back	6	17	1
95–2888	Pin–Pivot	6	15	1
95–2896	Plate–Spacer	6	16	1
95–2897	Mount–Bumper	6	13	2
95–2899	Pad–Rubber	3	9	2
95–3200	Washer–Pivot	6	6	1
95–3202	Cap–Pivot	6	10	1
95–3204	Washer–Pivot	6	5	1
95–3205	Guard–Left	5	39	1
95–3206	Guard–Right	3	23	1
95–3209	Fitting–Straight	3	10	1
95–3210	Stud–Wheel	3	8	4
95–3290	Harness–Wire	5	19	1
95–5112	Asm–Hose	5	37	1
95–5115	Asm–Hose	1	13	1
95–5115	Asm–Hose	5	16	1
95–5118	Hose	1	16	1
95–5118	Hose	3	46	1
95–5119	Asm–Hose	3	28	1
95–5127	Bushing	6	4	2
95–5620	Fitting	1	14	1
95–5919	Decal–Danger	5	1	1
95–5937	Valve–Relief	10	3	1
95–5938	Seal–Shaft	10	2	1
95–5939	Kit–Seal, Pump	10	*	1
95–5940	Bolt	10	7	4
95–6100	Asm–Frame	4	*	1
95–6100	Asm–Frame	3	25	1
95–6102	Asm–Arm, LH	1	19	1
95–6104	Asm–Mount–Top	6	12	1
95–6105	Asm–Tank, Hydraulic	3	1	1
95–6106	Asm–Cover	5	41	1
95–6136	Assembly–Housing	11	*	1
95–6137	Shaft–Coupling	11	11	1
95–6138	Assembly–Commutator	11	*	1
95–6139	Manifold	11	22	1
95–6142	Coil	9	3	2
95–6143	Valve	9	4	1
95–6144	Kit–Seal	9	2	1
95–6145	Barrel	7	2	1
95–6146	Piston	7	5	1
95–6147	Head	7	7	1
95–6148	Shaft	7	6	1
95–6149	Kit–Seal Repair	7	4	1
95–7001	Hose–Wrap	2	50	1
95–7004	Asm–Cap, Filler	3	*	1
95–7023	Key–Square	5	33	1
95–7769	Foam	5	42	2
95–7771	Chain–Roller	5	6	1
95–7774	Asm–Block, Valve	9	*	1
95–7774	Block–Valve	5	20	1
95–7775	Cylinder–Hydraulic	2	46	1
95–7776	Fitting–Hydraulic	5	31	1
95–7777	Asm–Hose	5	25	1
95–7777	Asm–Hose	2	42	1
95–7778	Asm–Hose	5	24	1
95–7778	Asm–Hose	2	43	1
95–7779	Asm–Hose	5	30	1
95–7780	Asm–Hose	5	13	1
95–7787	Strap	3	42	2
95–7788	Deflector	3	43	1
95–7888	Plug–Orifice	9	6	1
95–7889	Fitting	2	44	2
96–1289	Kit–Seal, Relief Valve	10	6	1
98–7067	Fitting–Hydraulic	5	17	1
98–7067	Fitting–Hydraulic	5	35	1
98–7069	Fork–Castor	4	2	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
237−21	O−Ring	5	23	4
237−21	O−Ring	2	55	2
237−30	O−Ring	5	34	3
237−30	O−Ring	3	45	3
237−65	O−Ring	5	12	3
237−65	O−Ring	2	52	2
237−78	O−Ring	5	21	4
237−78	O−Ring	2	54	2
237−79	O−Ring	3	44	3
237−80	O−Ring	5	11	2
237−80	O−Ring	2	53	2
237−117	O−Ring	3	48	1
237−146	O−Ring	2	51	1
2412−3	Clamp−Hose	1	15	1
2412−3	Clamp−Hose	3	29	1
283−88	Pin−Clevis	2	32	2
302−5	Fitting−Grease	7	1	1
302−5	Fitting−Grease	4	12	2
302−5	Fitting−Grease	2	56	2
302−11	Fitting−Grease 45°	1	27	2
302−40	Fitting−Grease	3	30	2
302−58	Fitting−Grease	8	4	1
321−4	Screw−HH	6	11	4
322−7	Screw−HH	2	34	2
327−24	Screw−HH	4	1	2
3213−24	Screw−HH	1	23	2
3216−14	Screw−HH	1	8	2
3216−19	Screw−HH	6	1	2
3219−2	Nut−Hex.	3	32	6
3219−10	Nut−Hex.	9	1	1
3242−14	Screw−Set, Square Head	3	31	2
3243−9	Screw−Set, Square Head	5	38	2
3256−3	Washer−Flat	5	44	1
3256−23	Washer−Flat	3	40	14
3256−26	Washer−Flat	5	8	2
3256−28	Washer−Flat	6	21	2
3256−28	Washer−Flat	2	38	2
3256−62	Washer−Flat	2	47	1
3269−11	Rivet	2	49	4
3272−20	Pin−Cotter	2	45	1
3272−42	Pin−Cotter	6	8	1
3274−4	Screw−HSH	5	18	2
3290−413	Washer−Belleville	1	3	4
3290−467	Pin−Cotter, Hair	1	24	2
3296−29	Nut−Lock	3	41	14
3296−53	Nut−Lock	4	13	2
32104−23	Screw−HH	3	39	14
32118−140	Screw−HH	6	7	4
32128−16	Nut−HHF	4	21	8
32136−5	Nut−Hex. Slotted	6	9	1
32144−39	Screw	3	49	6
32146−13	Nut−Lock	5	32	2
32146−20	Nut−Jam	6	20	2
32146−20	Nut−Jam	2	37	2
32151−72	Ring−Retaining	5	43	1
32153−3	Nut−Lock	2	36	2
33023−00	Nut−Lock	1	29	1
33024−00	Nut−Lock	3	3	8
33024−00	Nut−Lock	5	28	2
33025−00	Nut−Lock	3	22	6
33025−00	Nut−Lock	1	26	4
33025−00	Nut−Lock	2	39	2
33026−00	Nut−Lock	5	4	2
33026−00	Nut−Lock	3	18	2
33028−00	Nut−Lock	6	19	4
33094−00	Washer−Flat	3	4	8
33094−00	Washer−Flat	5	27	2
33095−00	Washer−Flat	3	21	6
33095−00	Washer−Flat	2	40	2
33096−00	Washer−Flat	5	3	2
33096−00	Washer−Flat	3	19	2
33098−00	Washer−Flat	6	18	4
33104−016	Screw−HHF	3	5	8
33105−020	Screw−HHF	3	15	6
33105−030	Screw−HHF	1	21	2
33106−040	Screw−HH	5	40	2
33106−040	Screw−HHF	3	24	2
33113−060	Screw−HH	1	28	1
33114−045	Screw−HH	5	26	2
33115−025	Screw−HH	1	7	2
340−2	Adapter	5	22	2
340−4	Fitting	3	26	2
340−17	Fitting−Elbow	5	10	1
340−105	Fitting−Elbow	5	9	1
340−117	Elbow	1	12	1
340−147	Fitting−Hydraulic	5	15	1
353−961	Bayonet Flange	3	51	1
353−962	Asm−Cap & Chain	3	2	1
353−963	Gasket	3	53	1
353−988	Plug−w/O−Ring Seal	5	29	1

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Rotary Brush has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the Brush cover. In any correspondence concerning the Rotary Brush, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:
1. Model and serial number of the Rotary Brush.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Arm & Mount Asm	1–2	Drive Shaft No. 94–7375 Asm	8
Frame & Axle Asm	3	Valve Block Asm	9
Castor Wheel Asm	4	Hydraulic Pump No. 94–7376 Asm	10
Sprocket & Motor Asm	5	Hydraulic Motor No. 94–7374 Asm	11
Pivot Pin & Mount Asm	6	Hydraulic Schemataic	12
Hydraulic Cylinder No. 95–7775 Asm	7	TORO Part Number Index	13–14

MAINTENANCE RECORD

Date								