FORM NO. 3321–526

TORO®

ProLine

52” Side Discharge Cutting Unit

Model No. 30152 – 890001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page
Deck and Spindle Asm	1
Cover And Gage Wheels	2
Carrier Frame	3
Decals	4

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
. .			

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HFW	hex flange washer
HH	hex head
HHF	hex head flange
HHST	hex head self tapping
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
INC	incorporated
LH	left hand
PH	pan head
PPH	Phillips pan head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
STD	standard
TAP	self tapping
TH	truss head
TTH	Torx truss head
WH	wing head

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form *X:Y. X* is the reference number of the service assembly and *Y* is a sequential number unique to each part within the service assembly.

© The TORO Company — 1998
All Rights Reserved


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form *X (Y). X* is the reference number. *Y* in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

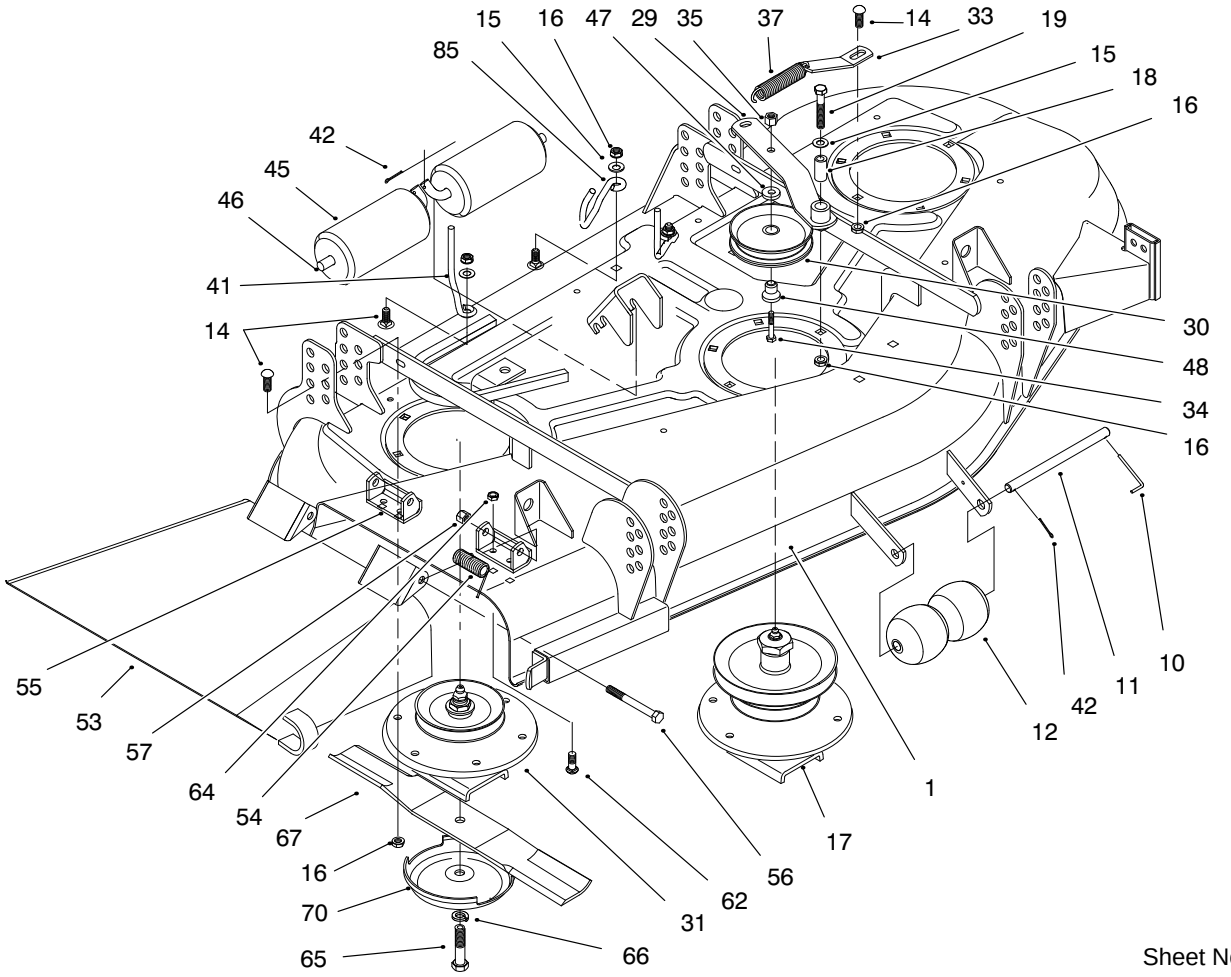


Sheet No.: 2

Deck and Spindle Asm

Ref. No.	Part No.	Qty.	Description
1	94–6781	1	Deck ASM
10	57–0690	1	Pin–Cotter
11	40–6400	1	Shaft–Roller
12	29–4820	2	Roller
14	3231–22	20	Bolt–CARR
15	3256–24	4	Washer–Flat
16	32128–21	21	Nut–HF
17	54–7781	1	ASM–Housing
18	51–3640	1	Sleeve–Pivot
19	323–11	1	Screw
29	55–7640–03	1	Idler Arm ASM
30	65–5940	1	Pulley–Idler
31	27–0870–03	2	Spindle Hsg ASM
33	55–7650	1	Plate–Spring
34	3211–8	1	Screw–HH
35	3296–5	1	Nut–Lock
37	51–3650	1	Spring–Extension
41	52–4780	2	Rod–Belt
42	3272–11	3	Pin–Cotter
45	36–1740	2	Roller–Deck
46	40–0340	2	Shaft–Roller
47	7–0081	1	Washer–Special
48	65–5950	1	Bushing–Pulley
53	40–6200–01	1	Deflector–Grass
54	40–6230	2	Spring–Torsion
55	29–5590–03	2	Fincket–Pivot

Ref. No.	Part No.	Qty.	Description
56	3211–15	2	Screw–HH
57	3296–5	2	Nut–Lock
62	3230–18	4	Screw–CARR
64	32152–1	4	Nut–Lock
65	44–2200	3	Bolt–Blade
66	3253–27	3	Washer–Lock
67	27–0990	3	Blade
70	72–9361	3	Anti–Scalp Cup
85	55–7620	1	Guide–Belt

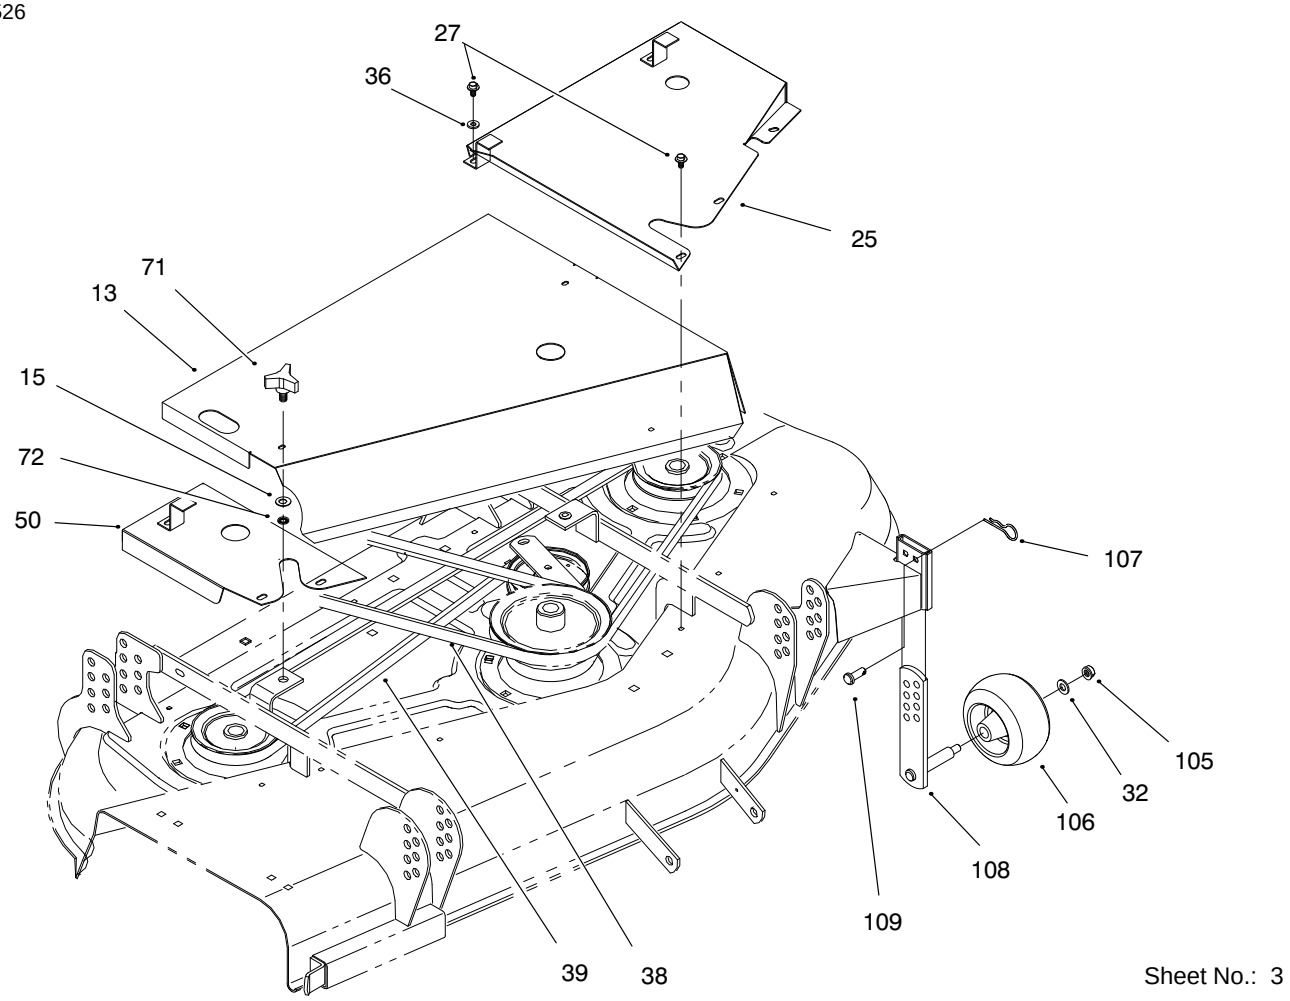


Sheet No.: 3

Cover And Gage Wheels

Ref. No.	Part No.	Qty.	Description
13	82–5410	1	Cover–Center
15	3256–24	2	Washer–Flat
25	51–3910	1	Cover–LH
27	46–8560	7	Screw–HHF
32	3256–24	1	Washer–Flat
36	3256–22	1	Washer–Flat
38	55–7660	1	”v” Belt–Drive
39	27–1160	1	Belt–Deck Drive
50	51–3890	1	Cover RH
71	62–6520	2	Knob
72	32151–72	2	Ring–Retaining
105	3296–39	1	Nut–Lock
106	68–2730	1	Wheel–Gage
107	3290–467	1	Pin–Cotter
108	68–2350	1	Plate–Gage Wheel
109	283–2	1	Pin–Clevis

Ref. No.	Part No.	Qty.	Description

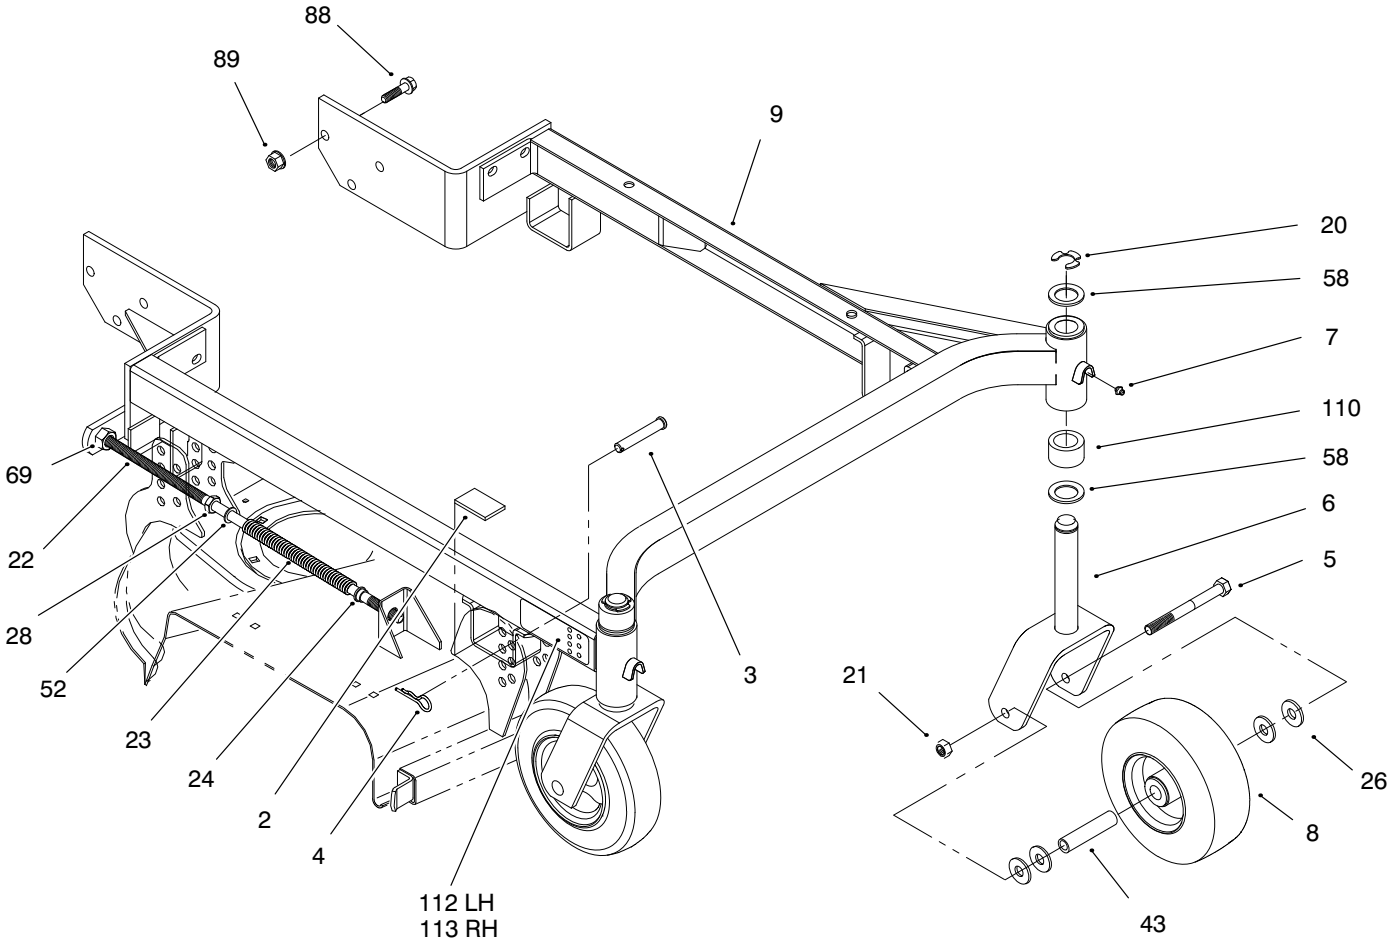


Sheet No.: 4

Carrier Frame

Ref. No.	Part No.	Qty.	Description
2	74–0350	4	Cushion–Rubber
3	283–55	4	Pin–Clevis
4	3290–355	4	Pin–Hair
5	325–19	2	Screw–HH
6	98–2857	2	Castor Fork ASM
7	302–5	2	Fitting–Grease
8	98–2859	2	Wheel & Tire Asm
8:3	62–5580	4	Bearing–Outside
8:4	62–5570	2	Bearing–Roller
8:6	302–11	2	Fitting–Grease
9	94–4185	1	Frame–Carrier
20	32151–91	2	Ring–Retaining
21	32153–5	2	Nut–Lock
22	74–0310	2	Shaft–Adjusting
23	74–0290	2	Spring–Compression
24	256–156	2	Bushing–Flange
26	3256–6	8	Washer–Flat
28	3218–5	4	Nut–Jam
43	68–8980	2	Bushing–Spanner
52	41–8440	2	Spacer–Hardened
58	3–6781	8	Washer–Thrust
69	3296–45	2	Nut
110	93–1167	2	Spacer–Castor
112	85–7450	1	Decal–HOC
113	85–7460	1	Decal–HOC

Ref. No.	Part No.	Qty.	Description

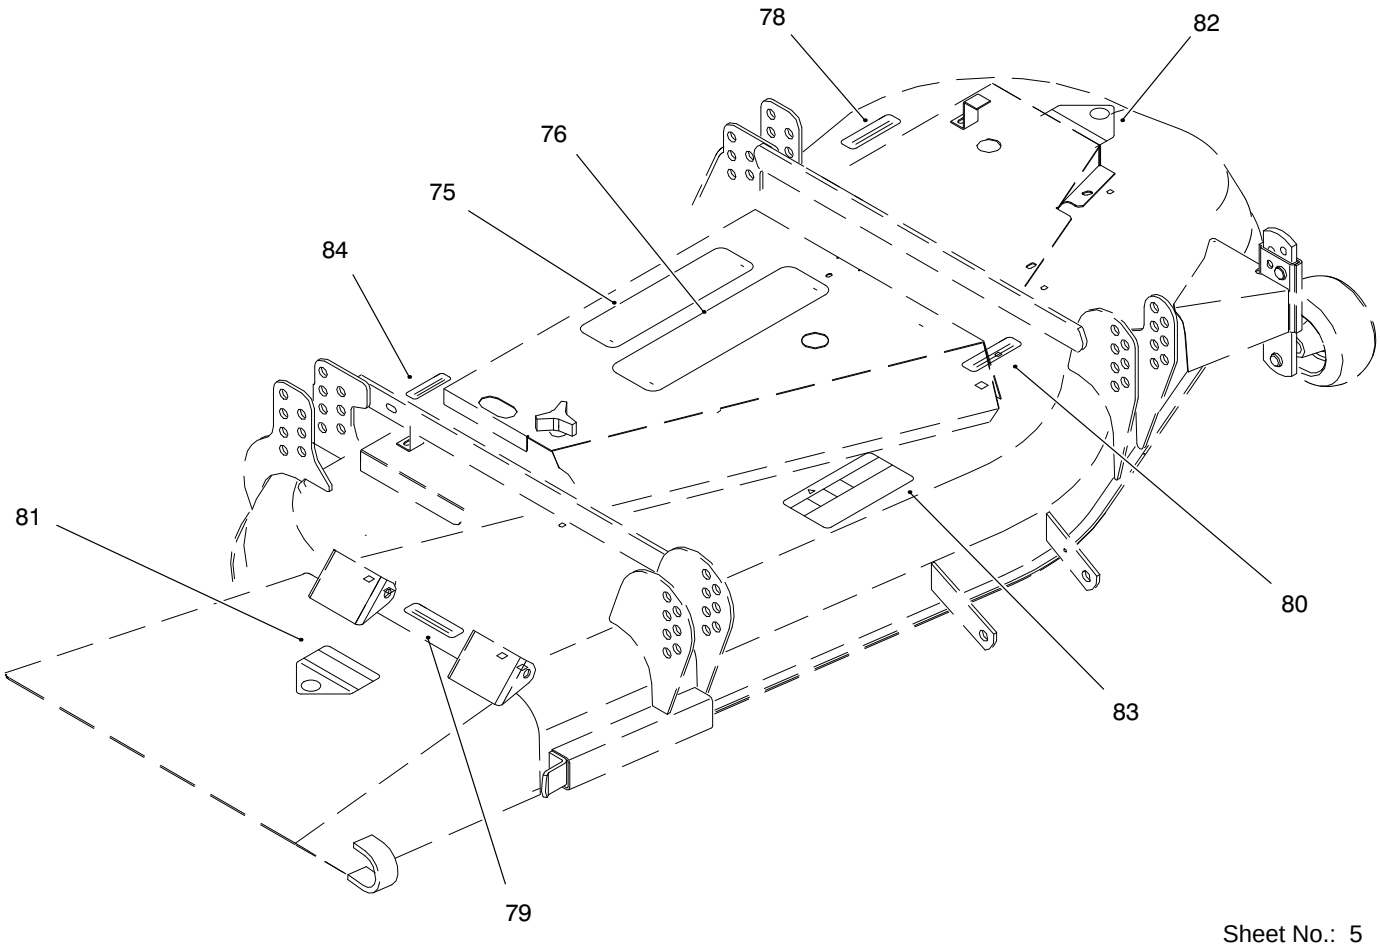

Sheet No.: 5

Decals

Ref. No.	Part No.	Qty.	Description
75	74–2080	1	Decal–Proline
76	98–5953	1	Decal–52”
78	68–8340	1	Decal–Torque
79	66–6380	1	Decal–Danger
80	67–5360	1	Decal–Danger
81	93–1122	1	Decal–Danger
82	43–8480	1	Decal–Danger
83	66–1340	1	Decal–Discharge
84	88–1270	1	Decal–Safety STD

Ref. No.	Part No.	Qty.	Description

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
– – – – – – –	3	8:2	2	Rim Assembly
3–6781	3	58	8	Washer–Thrust
7–0081	1	47	1	Washer–Special
Pi30152	5	98	1	Packaging Instructions
27–0870–03	1	31	2	Spindle Hsg ASM
27–0990	1	67	3	Blade
27–1160	2	39	1	Belt–Deck Drive
29–4820	1	12	2	Roller
29–5590–03	1	55	2	Fincket–Pivot
36–1740	1	45	2	Roller–Deck
40–0340	1	46	2	Shaft–Roller
40–6200–01	1	53	1	Deflector–Grass
40–6230	1	54	2	Spring–Torsion
40–6400	1	11	1	Shaft–Roller
41–8440	3	52	2	Spacer–Hardened
43–8480	4	82	1	Decal–Danger
44–2200	1	65	3	Bolt–Blade
46–8560	2	27	7	Screw–HHF
51–3640	1	18	1	Sleeve–Pivot
51–3650	1	37	1	Spring–Extension
51–3890	2	50	1	Wa–Cover
51–3910	2	25	1	Coveer–LH
51–3960	4	76	1	Decal–52”
52–4780	1	41	2	Rod–Belt
54–7781	1	17	1	ASM–Housing
55–7620	1	85	1	Guide–Belt
55–7640–03	1	29	1	Idler Arm ASM
55–7650	1	33	1	Plate–Spring
55–7660	2	38	1	”v” Belt–Drive
57–0690	1	10	1	Pin–Cotter
62–5570	3	8:4	2	Bearing–Roller
62–5580	3	8:3	4	Bearing–Outside
62–6520	2	71	2	Knob
65–5940	1	30	1	Pulley–Idler
65–5950	1	48	1	Bushing–Pulley
66–1340	4	83	1	Decal–Discharge
66–6380	4	79	1	Decal–Danger
67–5360	4	80	1	Decal–Danger
68–2350	2	108	1	Plate–Gage Wheel
68–2730	2	106	1	Wheel–Gage
68–8340	4	78	1	Decal–Torque
68–8360	3	77	1	Decal–HOC LH
68–8980	3	43	2	Bushing–Spanner
72–9361	1	70	3	Anti–Scalp Cup
74–0290	3	23	2	Spring–Compression
74–0310	3	22	2	Shaft–Adjusting
74–0350	3	2	4	Cushion–Rubber
74–0940	3	74	1	Decal–HOC RH
74–2080	4	75	1	Decal–Proline
82–5410	2	13	1	Cover–Center
85–7450	3	112	1	Decal–HOC
85–7460	3	113	1	Decal–HOC
88–1270	4	84	1	Decal–Safety STD
93–1122	4	81	1	Decal–Danger
93–1167	3	110	2	Spacer–Castor
94–4185	3	9	1	Frame–Carrier
94–4186	1	1	1	Deck ASM
98–2857	3	6	2	Castor Fork ASM
98–2877	3	8:1	2	Tire–Tubless
98–2888	5	105	1	Specifications–Engr
232–27	3	8:5	2	Valve Stem
256–156	3	24	2	Bushing–Flange

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
283−2	2	109	1	Pin−Clevis
283−55	3	3	4	Pin−Clevis
302−5	3	7	2	Fitting−Grease
302−11	3	8:6	2	Fitting−Grease
323−11	1	19	1	Screw
325−19	3	5	2	Screw−HH
3211−8	1	34	1	Screw−HH
3211−15	1	56	2	Screw−HH
3218−5	3	28	4	Nut−Jam
3230−18	1	62	4	Screw−CARR
3231−22	1	14	20	Bolt−CARR
3234−6	5	88	6	Screw−HF
3253−27	1	66	3	Washer−Lock
3256−6	3	26	8	Washer−Flat
3256−22	2	36	1	Washer−Flat
3256−24	1	15	4	Washer−Flat
3256−24	2	15	2	Washer−Flat
3256−24	2	32	1	Washer−Flat
3256−24	5	95	A/R	Washer−Flat
3272−11	1	42	3	Pin−Cotter
3290−355	3	4	4	Pin−Hair
3290−467	2	107	1	Pin−Cotter
3296−5	1	35	1	Nut−Lock
3296−5	1	57	2	Nut−Lock
3296−39	2	105	1	Nut−Lock
3296−45	3	69	2	Nut
32128−21	1	16	21	Nut−HF
32128−23	5	89	6	Nut−Lock
32151−72	2	72	2	Ring−Retaining
32151−91	3	20	2	Ring−Retaining
32152−1	1	64	4	Nut−Lock
32153−5	3	21	2	Nut−Lock
3317−808	5	100	1	Catalog−Parts
3318−175	5	99	1	Manual−Operators
3331−615	5	103	1	Bag−Poly

*Not Illustrated

MAINTENANCE RECORD

Date								

MAINTENANCE RECORD

Date								