FORM NO. 3321–461

LAWN-BOY®

Commercial Walk–Behind Mower

Model No. 11003 – 8900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page
Housing Assembly	1
Rear Axle Assembly	2
Engine & Blade Assembly	3
Handle Assembly	4
Engine Assembly	5
Engine Assembly (cont.)	6
Short Block Assembly	7
Gear Case Assembly	8
Carburetor Assembly	9
Lawn−Boy Part Number Index	10−13

Note:

Accessories

Description	Model / Parts No.
Side Bagging Kit	Model No. 89814
Rear Bagging Kit	Model No. 89800
Leaf Bag	Model No. 89804
Mulch Plate	Model No. 89864

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HFW	hex flange washer
HH	hex head
HHF	hex head flange
HHST	hex head self tapping
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
INC	incorporated
LH	left hand
PH	pan head
PPH	Phillips pan head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
STD	standard
TAP	self tapping
TH	truss head
TTH	Torx truss head
WH	wing head

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

© The Lawn–Boy Inc. – 1998
All Rights Reserved

Service Assemblies

Parts within service assemblies have reference numbers in the form *X:Y. X* is the reference number of the service assembly and *Y* is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form *X (Y). X* is the reference number. *Y* in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

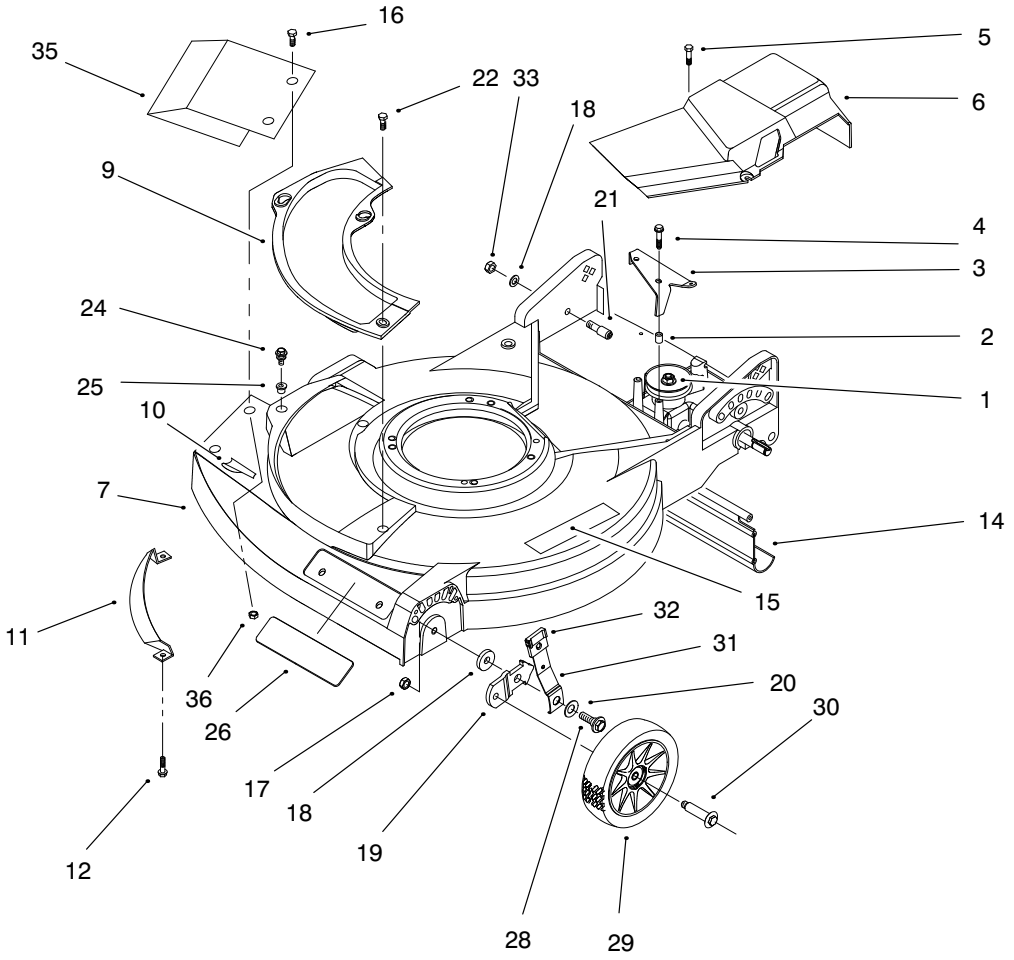


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	92–7869	1	ASM–Gear Case
2	46–5551	2	Bushing–Spacer
3	92–7699	1	Bracket–Actuator
4	92–7748	2	Screw
5	12–5450	2	Screw–Thread Forming
6	98–4493	1	Cover–Drive
7	99–5204	1	H0using–21” Sp
9	95–7052	1	Plate–Cover
10	93–7009	1	Decal–Deflector Danger
11	608175	1	Toe Bar 21
12	46–6811	2	Screw–HWH
14	92–7736	1	Shield–Trailing
15	93–4105	1	Decal–Danger
16	32105–15	2	Screw–HH
17	3296–39	2	Nut–Lock
18	608834	2	Washer
19	614637	2	Bracket–Wheel Height Adj
20	3290–413	2	Washer–Spring
21	92–9673	2	Bolt–Shoulder
22	49–2040	1	Screw–HH
24	614677	2	Screw–Sems
25	94–1610	3	Grommet–Plastic
26	99–1503	1	Decal–Deck 550cs


Ref. No.	Part No.	Qty.	Description
28	92–4856	2	Bolt–Shoulder
29	684159	2	Wheel & Tire
30	603567	2	Bolt–Wheel
31	92–1006	2	ASM–Spring Arm
32	92–1008	4	Knob–Height Adjust
33	610358	2	Nut–Lock
35	93–7415	1	Guard–Plate
36	3296–42	2	Nut–Lock

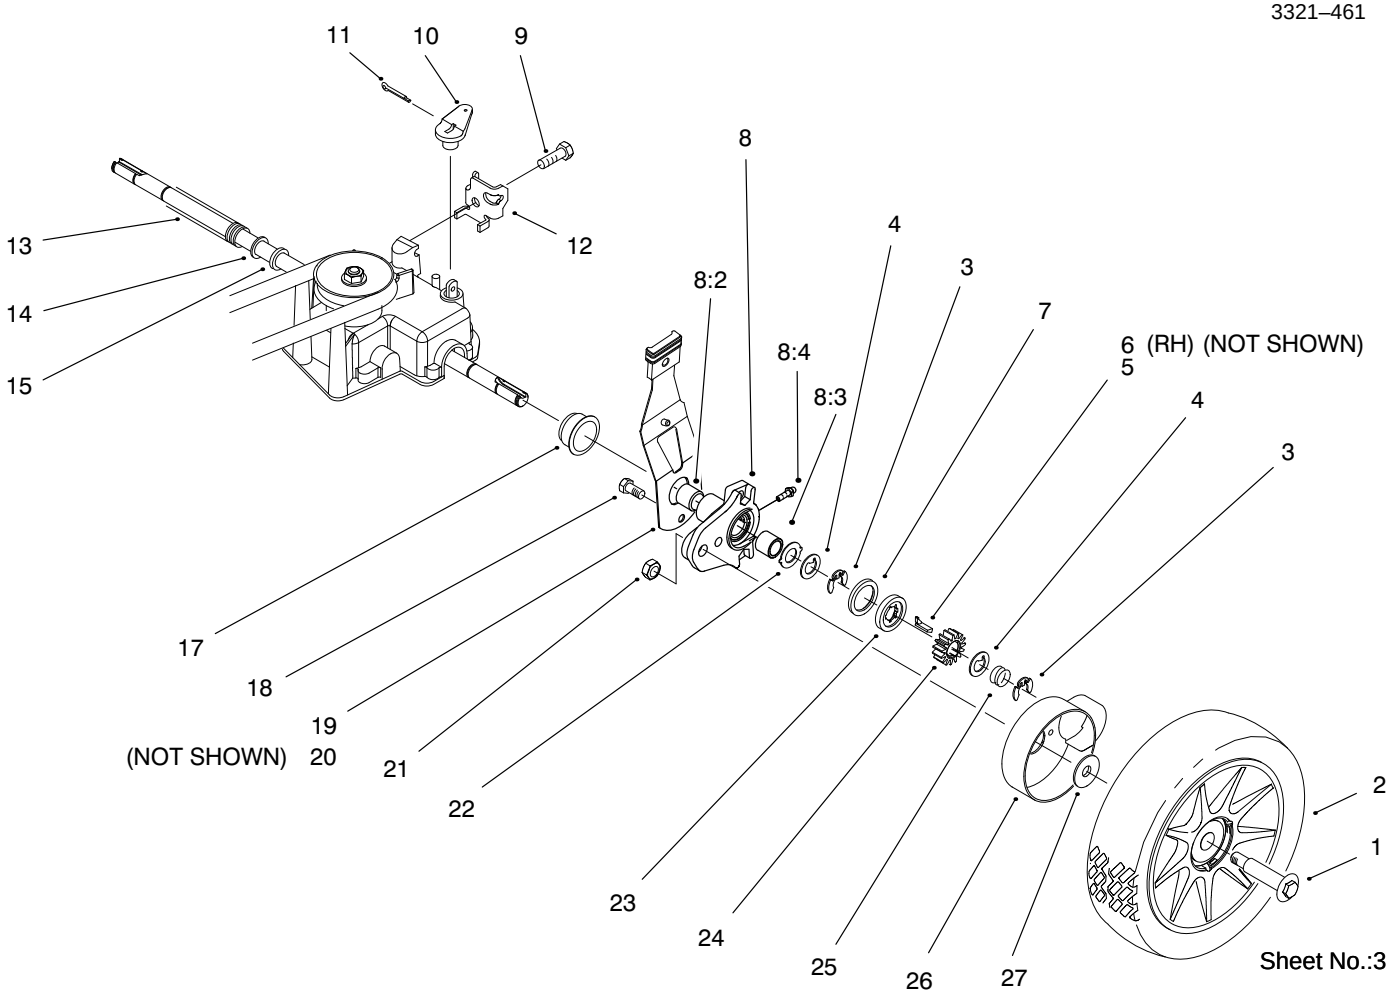

Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	92–1057	2	Bolt–Shoulder
2	95–1714	2	ASM–Whl
3	65–2720	4	Ring–Retaining
4	65–4740	4	Washer–Thrust
5	66–6050	1	Key–Rocking LH
6	66–6040	1	Key–Locking RH
7	65–4710	2	Ring–Friction
8	92–7746	2	ASM–Hgt Adj Arm
8:2	70–9760	2	Bushing
8:3	47–2900	2	Bushing
8:4	302–56	2	Fitting–Grease
9	32144–70	1	Screw–TAP
10	60–8821	1	Lever–Shift
11	3272–10	1	Pin–Cotter
12	82–8780	1	Retainer–Cable
13	24–7920	1	Cover–Drive Shaft
14	303259	1	Washer
15	605255	1	Washer–Flat
17	92–6535	2	Cap–End
18	32144–85	2	Screw–HH
19	92–6540	1	ASM–Spring Arm
20	92–6539	1	ASM–Spring Arm
21	610358	2	Nut–Lock
22	65–4730	2	Washer–Thrust
23	65–4760	2	Washer
24	65–4750	2	Gear–Pinion

Ref. No.	Part No.	Qty.	Description
25	65–4720	2	Spring–Compression
26	94–1609	2	Cover–Wheel
27	614426	2	Washer–Stepped

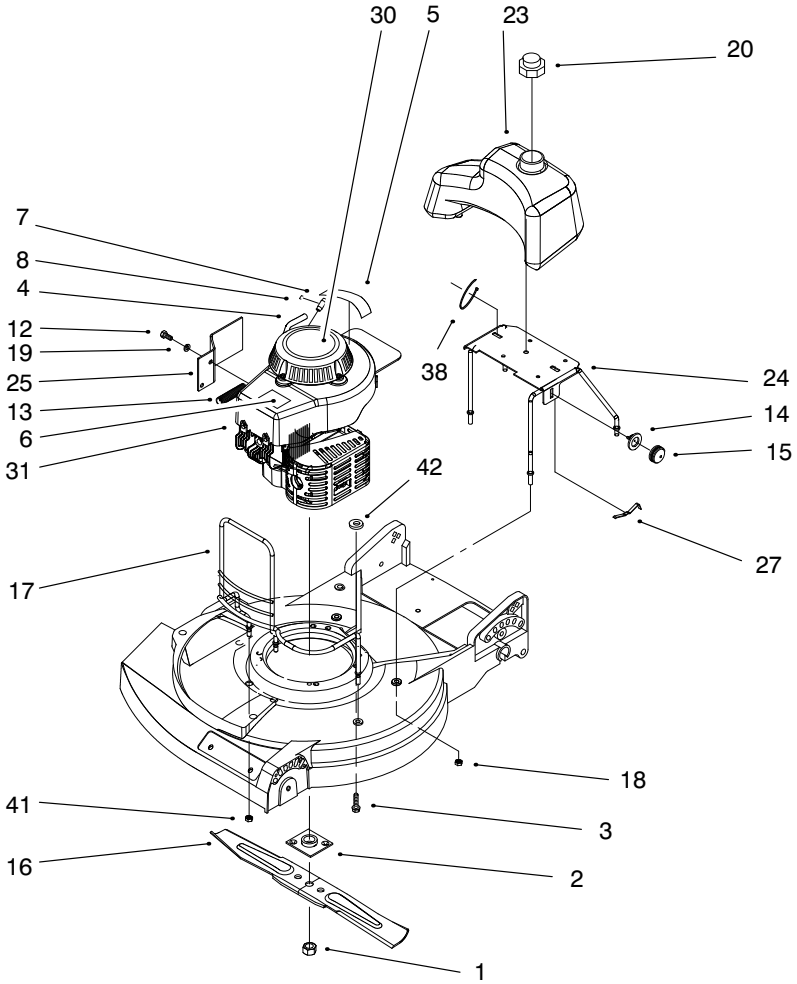


Sheet No.:4

Engine & Blade Assembly

Ref. No.	Part No.	Qty.	Description
1	603164	1	Nut–Blade
2	677525	1	ASM–Plate & Collar
3	98–4480	3	Screw–Sems
4	612782	1	Gas Line
5	99–1520	1	Decal–Fuel Mix
6	99–1517	1	Decal–Lawn Boy
7	47–2480	1	Rope Stop
8	3290–443	1	Staple
12	322–3	2	Screw–HH
13	93–4306	1	Spring–Compression
14	44–2750	1	Body–Primer
15	66–7460	1	Bulb–Primer
16	612543	1	Blade–21” Whirl
17	98–1598	1	Guard–Engine
18	608311	4	Locknut
19	3253–4	2	Washer–Lock
20	93–3660	1	ASM–Fuel/Oil Cap
21	306531	1	Nut–Throttle Cable
22	314576	1	Screw–Throttle Cable
23	98–4497	1	Tank–Fuel
24	98–4459	1	Tank Bkt ASM
25	99–1515	1	Guard–Brake
27	609830	2	Spring
28	612428	4	Screw–Sems
29	32144–53	4	Screw–Tf Acorn Hd
30	92–9551	1	Decal – Recoil

Ref. No.	Part No.	Qty.	Description
31	99–2910	1	Engine ASM
38	614249	1	Tie Strap
41	3296–39	2	Locknut
42	68–5920	3	Washer

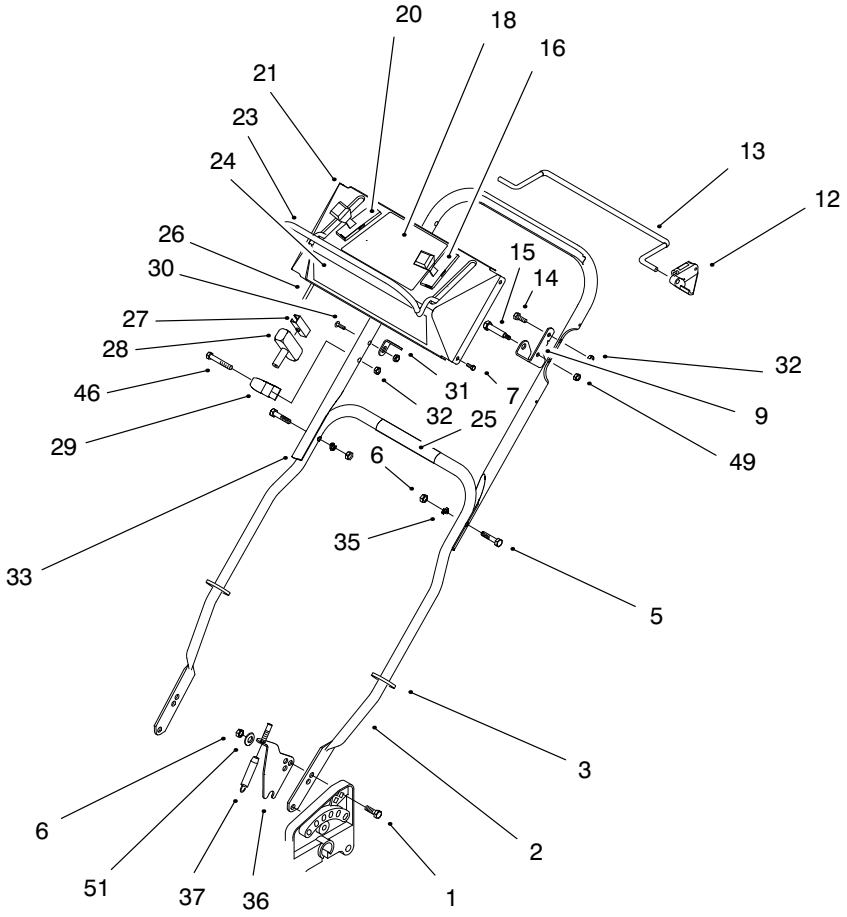


Sheet No.:5

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	3230–29	2	Bolt–CARR
2	92–6537	1	Handle Section–Lower
3	614249	4	Tie Strap
5	322–9	2	Screw–HH
6	3296–29	4	Nut–Lock
7	92–9665	4	Screw–Phil
9	92–1094	1	Bail Stop Bracket
12	92–5412	1	Stop–Pivot
13	92–1001	1	Bail–Sp Control
14	321–4	1	Screw–HH
15	613050	1	Bolt
16	95–7410	1	Throttle Cable
18	98–8349	1	Decal–Control Panel
20	92–8926	1	Control–Speed
21	99–5205	1	Panel–Control
23	92–1093	1	Engine Control Bail
24	93–0297	1	Decal–Console
25	93–7266	1	Decal–Operation
26	95–7438	1	Cable–Control
27	612824	1	Clip–Rope
28	612825	1	Handle–Starter
29	93–7383	1	Guide–Rope
30	92–2268	1	Handle Screw
31	92–2928	1	Bracket–Cable Anchor
32	3296–73	3	Nut–Lock
33	92–1092	1	Handle–Upper

Ref. No.	Part No.	Qty.	Description
35	609739	2	Washer
36	92–7899	1	Bracket–Traction Cable
37	92–6518	1	Cable
46	321–51	1	Bolt–Hex
49	3296–56	1	Nut–Lock
51	3256–23	2	Washer–Flat

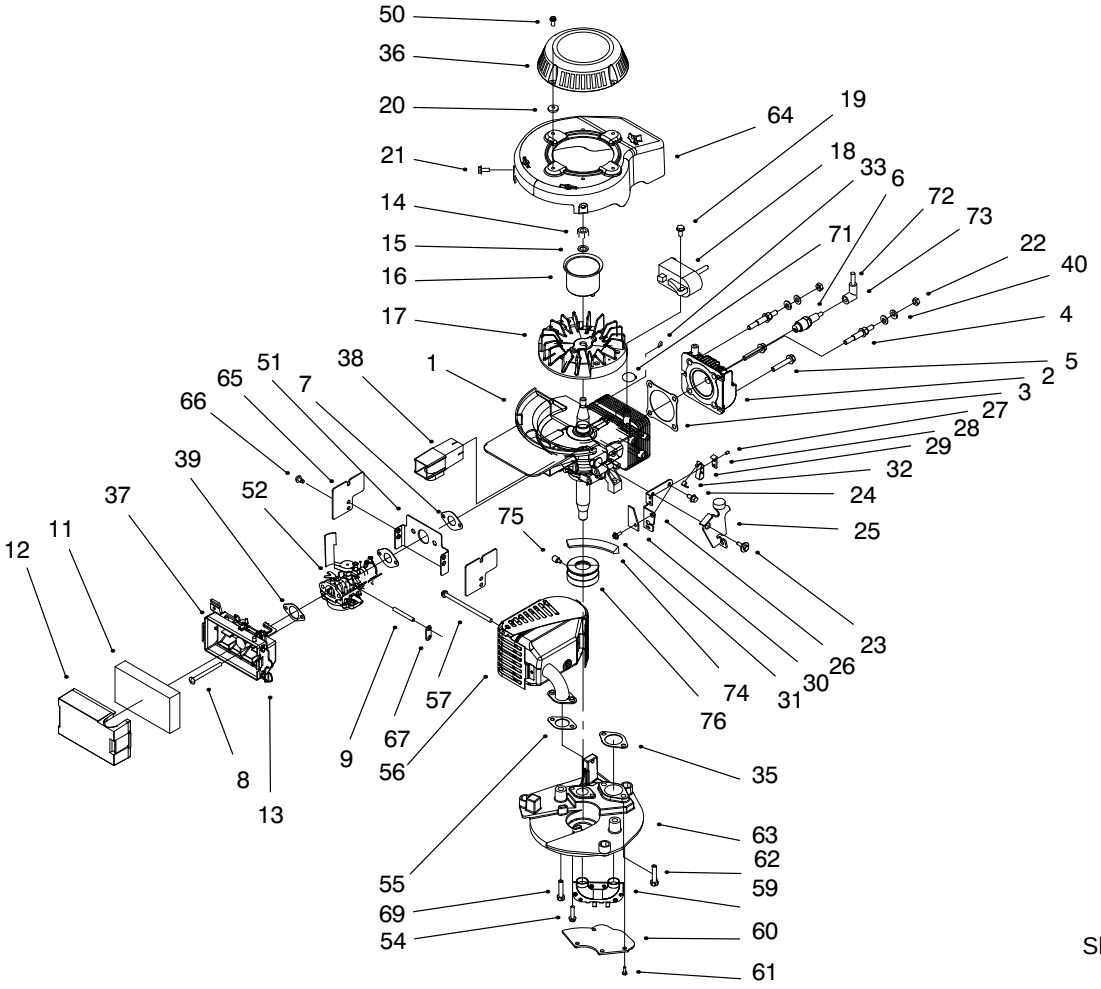


Sheet No.:100

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	95–7636	1	Short Block ASM
2	94–5776	1	Head
3	94–5778	1	Gasket–Head
4	94–5779	2	Stud
5	94–5780	2	Bolt
6	81–0181	1	Spark Plug
7	94–5795	2	Intake Gasket
8	612507	2	Screw
9	44–3170	1	Primer Hose
11	95–5574	1	Element–Air Filter
12	95–5577	1	Cover–Air Filter
13	610383	1	Retainer–Filter
14	130743	1	Nut
15	316959	1	Washer–Lock
16	612949	1	Hub–Starter
17	95–1866	1	Flywheel Machined Recoil
18	92–1152	1	Ignition ASM
19	613208	2	Screw–HWH
20	98–4478	4	Spacer
21	700094	2	Screw
22	146501	2	Nut–Lock
23	95–1870	1	Shoulder Screw Brake
24	95–1871	1	Screw (Brake)
25	93–4312	1	ASM–Brake Plate
26	84–7820	1	Plate–Mount Brake

Ref. No.	Part No.	Qty.	Description
27	3290–459	2	Rivet–Self Expand Plas
28	92–2925	1	Strap–Insulation
29	60–9010	1	Strap–Ground
30	53–4690	1	Stop–Ground Strap
31	12–5450	1	Screw–Thread Forming
32	98–7037	1	Brake Switch Lead Wire
33	607199	1	Key
35	95–1778	1	Gasket–Exhaust
36	684566	1	ASM–Starter
37	95–5588	1	Air Filter Base ASM
38	95–5578	1	Tunnel
39	95–7613	1	Gasket–Filter Base
40	3290–456	4	Washer–Lock
50	98–4484	4	Screw–Sems
51	98–7015	1	Heat Shield
52	98–7042	1	Carburetor ASM
54	613208	2	Screw–HWH
55	98–1392	1	Gasket
56	99–2904	1	Muffler & Guard
57	611228	1	Bolt
59	98–1557	1	Transfer Tube
60	98–1591	1	Cover Plate
61	700822	4	Screw

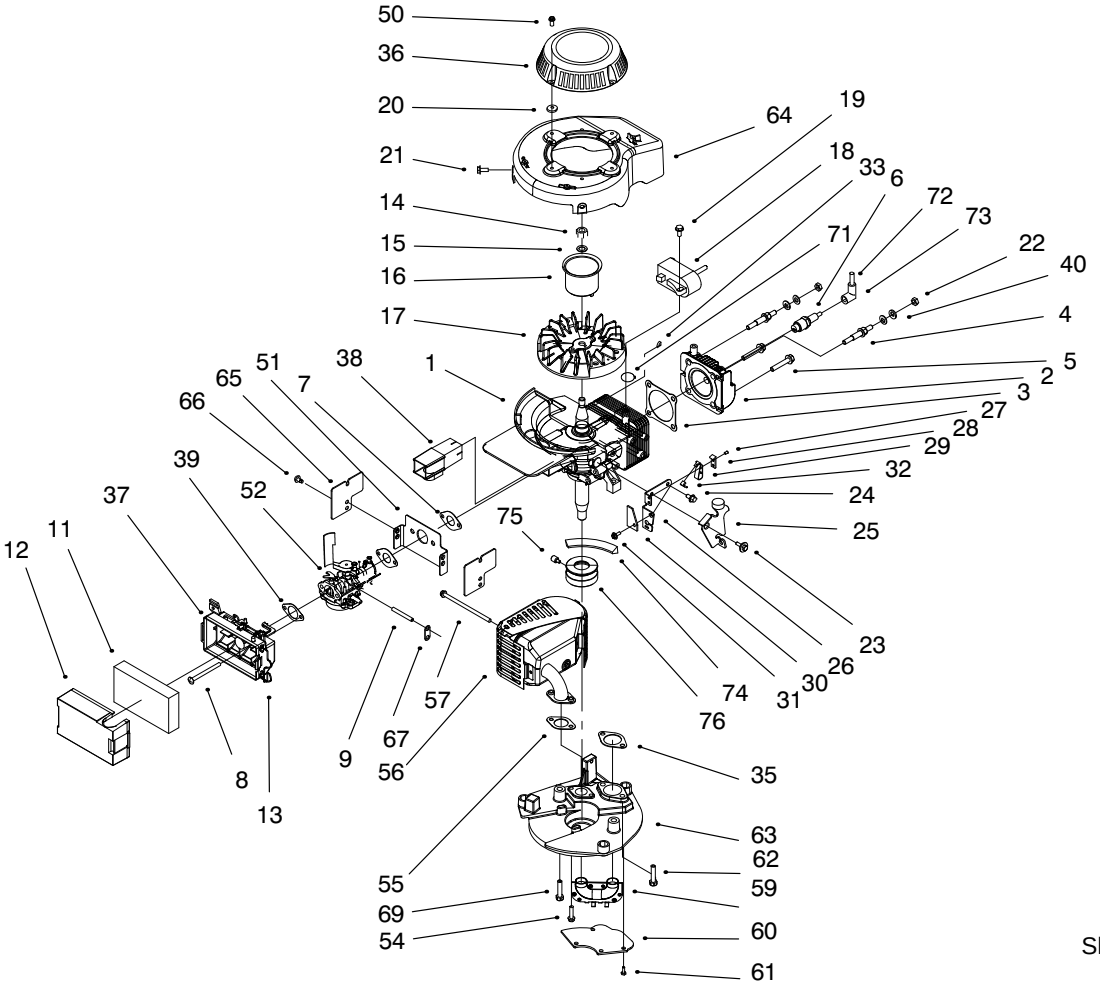


Sheet No.:100

Engine Assembly (cont.)

Ref. No.	Part No.	Qty.	Description
62	322–17	2	Screw–HH
63	98–1383	1	Muffler Plate Machining
64	98–4467	1	Shroud ASM
65	93–4316	2	Shield–Gov Int'l
66	99–2909	4	Screw
67	95–7615	1	Retainer Hose
69	613233	2	Screw–Hhd Washer
71	317893	1	Tie Strap
72	681678	1	Lead & Cover ASM
73	684698	1	Cover & Terminal
74	92–1043	1	V–Belt
75	613227	1	Set Screw
76	95–1878	1	Pulley

Ref. No.	Part No.	Qty.	Description

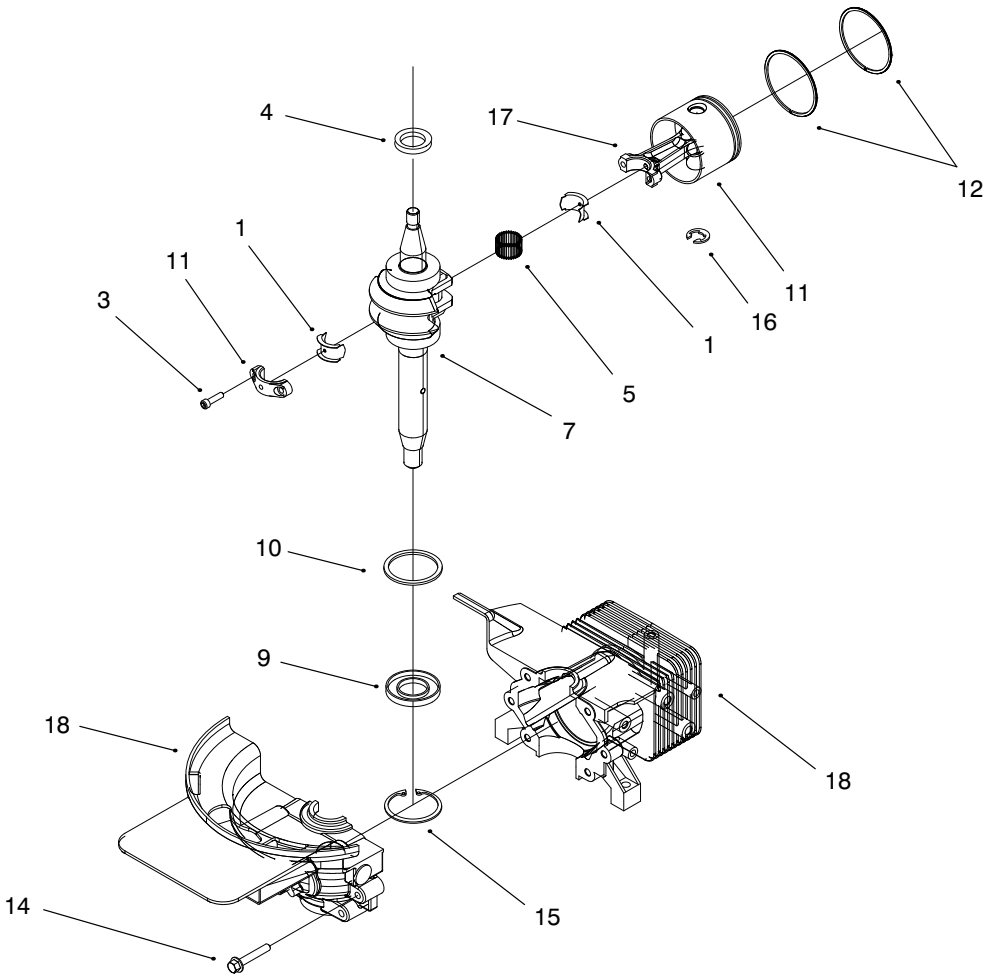


Sheet No.:200

Short Block Assembly

Ref. No.	Part No.	Qty.	Description
1	677982	2	Liner ASM
3	611393	2	Screw
4	611396	1	Oil Seal
5	683911	1	Needle Bearing
7	99–2901	1	Crankshaft & Bearing ASM
9	94–5764	1	Oil Seal
10	94–5765	1	Ring Retaining
11	95–7628	1	Piston & Conn Rod ASM
12	95–7626	1	Ring Set
14	94–5781	6	Screw–HWH
15	98–7046	1	Ring–Retaining
16	303712	2	Retaining Ring
17	95–7629	1	Connecting Rod
18	95–7631	1	Cylinder & Ccase ASM
†	610372	A/R	Sealant
†	609790	A/R	Sealant

Ref. No.	Part No.	Qty.	Description

† Not Illustrated

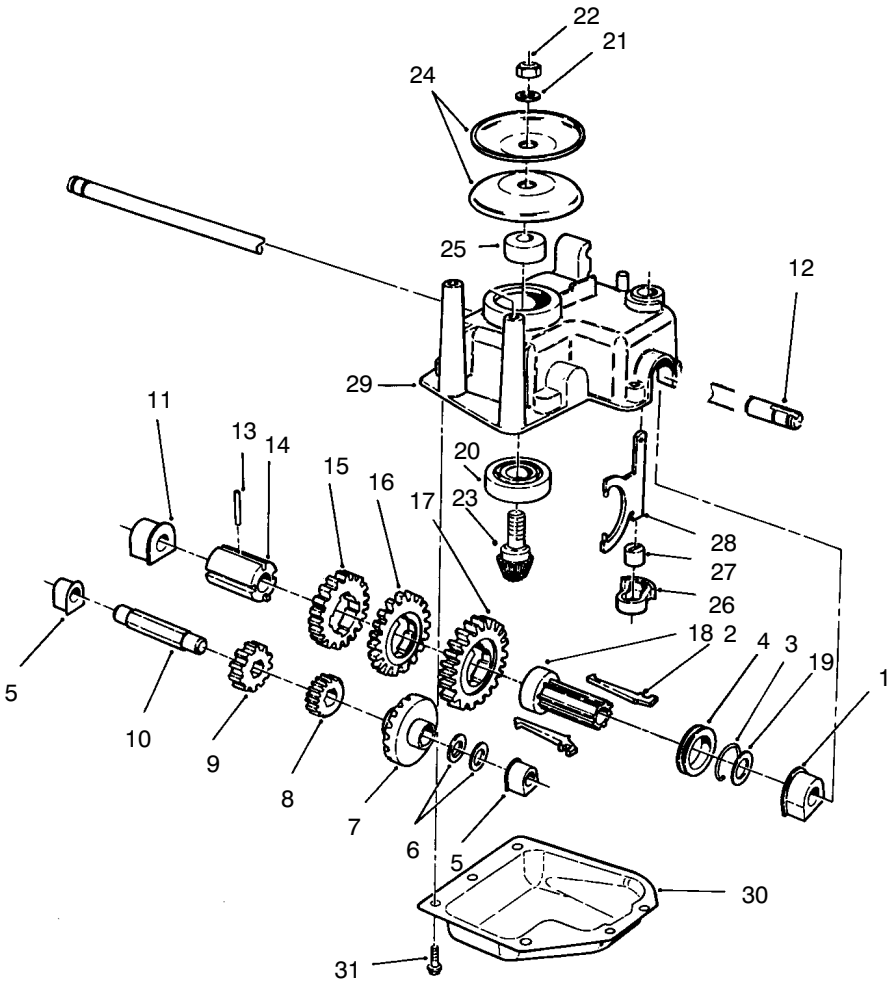


Sheet No.:300

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description
1	60–8770	1	Bushing–Output Shaft
2	76–0760	2	Key–Shift
3	65–5250	1	Clip–Spring
4	76–0770	1	Collar–Shift
5	60–8750	2	Bushing
6	36–4791	2	Washer–Thrust
7	55–3760	1	15 T Pinion
8	55–3780	1	Pinion 20t 2nd Gear
9	55–3800	1	Pinion 25t 3rd Gear
10	60–8800	1	Shaft–Intermediate
11	60–8850	1	Bushing–Output
12	65–4770	1	Shaft–Output
13	3285–19	1	Pin–Spirol
14	60–8790	1	Sleeve–Gear
15	55–3810	1	Gear 39t 3rd Gear
16	55–3790	1	Gear 44t 2nd Gear
17	55–3770	1	Gear 49t 1st Gear
18	76–0780	1	Sleeve–Shift Key
19	36–4780	1	Washer–Thrust
20	38–7820	1	Bearing–Ball
21	3256–24	1	Washer–Flat
22	3296–5	1	Nut–Lock
23	92–5790	1	Pinion–Bevel
24	60–8840	2	Pulley–Half
25	92–5791	1	Spacer–Pulley
26	60–8810	1	Retainer–Shift–Fork

Ref. No.	Part No.	Qty.	Description
27	29–9570	1	Bushing–Yoke
28	60–8870	1	Yoke–Shift
29	60–8710	1	Gearcase–Upper 3 Sp
30	60–8730	1	Cover–Gearcase
31	49–2040	6	Screw–HH

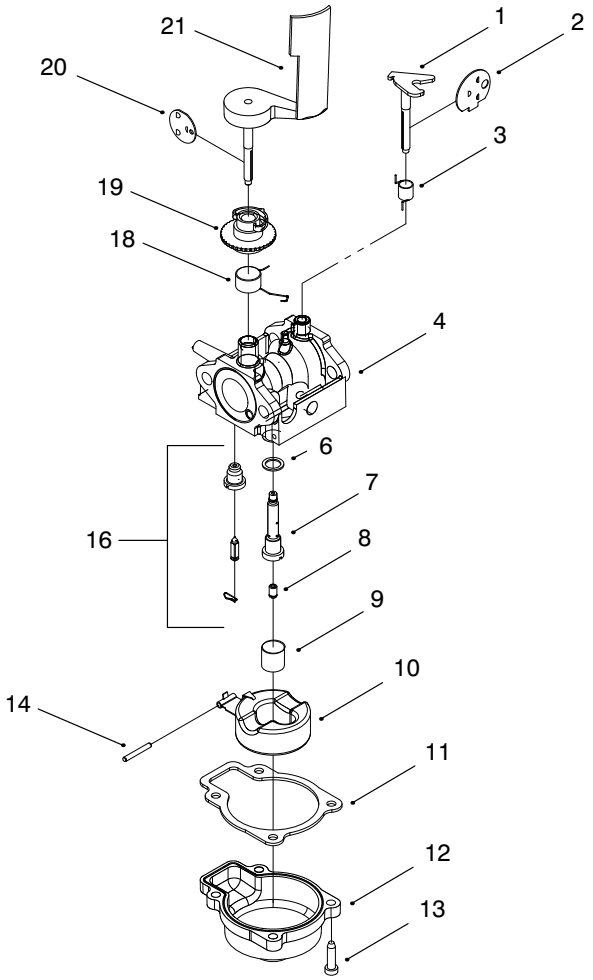

Sheet No.:400

Carburetor Assembly

Ref. No.	Part No.	Qty.	Description
1	95–5581	1	Shaft–Choke
2	94–5788	1	Disc–Choke
3	95–5583	1	Spring–Choke Return
4	98–7042	1	Carb ASM w/Gaskets
6	612383	1	Washer
7	98–7001	1	Nozzle
8	98–1357	1	Mainjet 77.5
9	94–5787	1	Filter–Fuel
10	95–1899	1	Float & Arm ASM
11	98–1362	1	Gasket–Float Chamber
12	92–9691	1	Float Chamber
13	608850	4	Screw
14	92–6389	1	Pin
16	92–9697	1	Float Valve & Seat
18	98–7011	1	Spring–Throttle
19	610834	1	Collar Adjustment
20	98–7047	1	Disc–Throttle
21	92–6376	1	Air Vane & Shaft

Ref. No.	Part No.	Qty.	Description

Lawn–Boy Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
130743	5	14	1	Nut
146501	5	22	2	Nut–Lock
303259	2	14	1	Washer
303712	7	16	2	Retaining Ring
306531	3	21	1	Nut–Throttle Cable
314576	3	22	1	Screw–Throttle Cable
316959	5	15	1	Washer–Lock
317893	6	71	1	Tie Strap
603164	3	1	1	Nut–Blade
603567	1	30	2	Bolt–Wheel
605255	2	15	1	Washer–Flat
607199	5	33	1	Key
608175	1	11	1	Toe Bar 21
608311	3	18	4	Locknut
608834	1	18	2	Washer
608850	9	13	4	Screw
609739	4	35	2	Washer
609790	7		A/R	Sealant
609830	3	27	2	Spring
610358	1	33	2	Nut–Lock
610358	2	21	2	Nut–Lock
610372	7		A/R	Sealant
610383	5	13	1	Retainer–Filter
610834	9	19	1	Collar Adjustment
611228	5	57	1	Bolt
611393	7	3	2	Screw
611396	7	4	1	Oil Seal
612383	9	6	1	Washer
612428	3	28	4	Screw–Sems
612507	5	8	2	Screw
612543	3	16	1	Blade–21” Whirl
612782	3	4	1	Gas Line
612824	4	27	1	Clip–Rope
612825	4	28	1	Handle–Starter
612949	5	16	1	Hub–Starter
613050	4	15	1	Bolt
613208	5	19	2	Screw–HWH
613208	5	54	2	Screw–HWH
613227	6	75	1	Set Screw
613233	6	69	2	Screw–Hhd Washer
614249	3	38	1	Tie Strap
614249	4	3	4	Tie Strap
614426	2	27	2	Washer–Stepped
614637	1	19	2	Bracket–Wheel Height Adj
614677	1	24	2	Screw–Sems
677525	3	2	1	ASM–Plate & Collar
677982	7	1	2	Liner ASM
681678	6	72	1	Lead & Cover ASM
683911	7	5	1	Needle Bearing
684159	1	29	2	Wheel & Tire
684566	5	36	1	ASM–Starter
684698	6	73	1	Cover & Terminal
700094	5	21	2	Screw
700822	5	61	4	Screw
12–5450	1	5	2	Screw–Thread Forming
12–5450	5	31	1	Screw–Thread Forming
24–7920	2	13	1	Cover–Drive Shaft
29–9570	8	27	1	Bushing–Yoke
36–4780	8	19	1	Washer–Thrust
36–4791	8	6	2	Washer–Thrust
38–7820	8	20	1	Bearing–Ball
44–2750	3	14	1	Body–Primer
44–3170	5	9	1	Primer Hose

*Not Illustrated

Lawn−Boy Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
46−5551	1	2	2	Bushing−Spacer
46−6811	1	12	2	Screw−HWH
47−2480	3	7	1	Rope Stop
47−2900	2	8:3	2	Bushing
49−2040	1	22	1	Screw−HH
49−2040	8	31	6	Screw−HH
53−4690	5	30	1	Stop−Ground Strap
55−3760	8	7	1	15 T Pinion
55−3770	8	17	1	Gear 49t 1st Gear
55−3780	8	8	1	Pinion 20t 2nd Gear
55−3790	8	16	1	Gear 44t 2nd Gear
55−3800	8	9	1	Pinion 25t 3rd Gear
55−3810	8	15	1	Gear 39t 3rd Gear
60−8710	8	29	1	Gearcase−Upper 3 Sp
60−8730	8	30	1	Cover−Gearcase
60−8750	8	5	2	Bushing
60−8770	8	1	1	Bushing−Output Shaft
60−8790	8	14	1	Sleeve−Gear
60−8800	8	10	1	Shaft−Intermediate
60−8810	8	26	1	Retainer−Shift−Fork
60−8821	2	10	1	Lever−Shift
60−8840	8	24	2	Pulley−Half
60−8850	8	11	1	Bushing−Output
60−8870	8	28	1	Yoke−Shift
60−9010	5	29	1	Strap−Ground
65−2720	2	3	4	Ring−Retaining
65−4710	2	7	2	Ring−Friction
65−4720	2	25	2	Spring−Compression
65−4730	2	22	2	Washer−Thrust
65−4740	2	4	4	Washer−Thrust
65−4750	2	24	2	Gear−Pinion
65−4760	2	23	2	Washer
65−4770	8	12	1	Shaft−Output
65−5250	8	3	1	Clip−Spring
66−6040	2	6	1	Key−Locking RH
66−6050	2	5	1	Key−Rocking LH
66−7460	3	15	1	Bulb−Primer
68−5920	3	42	3	Washer
70−9760	2	8:2	2	Bushing
76−0760	8	2	2	Key−Shift
76−0770	8	4	1	Collar−Shift
76−0780	8	18	1	Sleeve−Shift Key
81−0181	5	6	1	Spark Plug
82−8780	2	12	1	Retainer−Cable
84−7820	5	26	1	Plate−Mount Brake
92−1001	4	13	1	Bail−Sp Control
92−1006	1	31	2	ASM−Spring Arm
92−1008	1	32	4	Knob−Height Adjust
92−1043	6	74	1	V−Belt
92−1057	2	1	2	Bolt−Shoulder
92−1092	4	33	1	Handle−Upper
92−1093	4	23	1	Engine Control Bail
92−1094	4	9	1	Bail Stop Bracket
92−1152	5	18	1	Ignition ASM
92−2268	4	30	1	Handle Screw
92−2925	5	28	1	Strap−Insulation
92−2928	4	31	1	Bracket−Cable Anchor
92−4856	1	28	2	Bolt−Shoulder
92−5412	4	12	1	Stop−Pivot
92−5790	8	23	1	Pinion−Bevel
92−5791	8	25	1	Spacer−Pulley
92−6376	9	21	1	Air Vane & Shaft
92−6389	9	14	1	Pin

*Not Illustrated

Lawn–Boy Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92–6518	4	37	1	Cable
92–6535	2	17	2	Cap–End
92–6537	4	2	1	Handle Section–Lower
92–6539	2	20	1	ASM–Spring Arm
92–6540	2	19	1	ASM–Spring Arm
92–7699	1	3	1	Bracket–Actuator
92–7736	1	14	1	Shield–Trailing
92–7746	2	8	2	ASM–Hgt Adj Arm
92–7748	1	4	2	Screw
92–7869	1	1	1	ASM–Gear Case
92–7899	4	36	1	Bracket–Traction Cable
92–8926	4	20	1	Control–Speed
92–9551	3	30	1	Decal – Recoil
92–9665	4	7	4	Screw–Phil
92–9673	1	21	2	Bolt–Shoulder
92–9691	9	12	1	Float Chamber
92–9697	9	16	1	Float Valve & Seat
93–0297	4	24	1	Decal–Console
93–3660	3	20	1	ASM–Fuel/Oil Cap
93–4105	1	15	1	Decal–Danger
93–4306	3	13	1	Spring–Compression
93–4312	5	25	1	ASM–Brake Plate
93–4316	6	65	2	Shield–Gov Int'l
93–7009	1	10	1	Decal–Deflector Danger
93–7266	4	25	1	Decal–Operation
93–7383	4	29	1	Guide–Rope
93–7415	1	35	1	Guard–Plate
94–1609	2	26	2	Cover–Wheel
94–1610	1	25	3	Grommet–Plastic
94–5764	7	9	1	Oil Seal
94–5765	7	10	1	Ring Retaining
94–5776	5	2	1	Head
94–5778	5	3	1	Gasket–Head
94–5779	5	4	2	Stud
94–5780	5	5	2	Bolt
94–5781	7	14	6	Screw–HWH
94–5787	9	9	1	Filter–Fuel
94–5788	9	2	1	Disc–Choke
94–5795	5	7	2	Intake Gasket
95–1714	2	2	2	ASM–Whl
95–1778	5	35	1	Gasket–Exhaust
95–1866	5	17	1	Flywheel Machined Recoil
95–1870	5	23	1	Shoulder Screw Brake
95–1871	5	24	1	Screw (Brake)
95–1878	6	76	1	Pulley
95–1899	9	10	1	Float & Arm ASM
95–5574	5	11	1	Element–Air Filter
95–5577	5	12	1	Cover–Air Filter
95–5578	5	38	1	Tunnel
95–5581	9	1	1	Shaft–Choke
95–5583	9	3	1	Spring–Choke Return
95–5588	5	37	1	Air Filter Base ASM
95–7052	1	9	1	Plate–Cover
95–7410	4	16	1	Throttle Cable
95–7438	4	26	1	Cable–Control
95–7613	5	39	1	Gasket–Filter Base
95–7615	6	67	1	Retainer Hose
95–7626	7	12	1	Ring Set
95–7628	7	11	1	Piston & Conn Rod ASM
95–7629	7	17	1	Connecting Rod
95–7631	7	18	1	Cylinder & Ccase ASM
95–7636	5	1	1	Short Block ASM
98–1357	9	8	1	Mainjet 77.5

*Not Illustrated

Lawn−Boy Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
98−1362	9	11	1	Gasket−Float Chamber
98−1383	6	63	1	Muffler Plate Machining
98−1392	5	55	1	Gasket
98−1557	5	59	1	Transfer Tube
98−1591	5	60	1	Cover Plate
98−1598	3	17	1	Guard−Engine
98−4459	3	24	1	Tank Bkt ASM
98−4467	6	64	1	Shroud ASM
98−4478	5	20	4	Spacer
98−4480	3	3	3	Screw−Sems
98−4484	5	50	4	Screw−Sems
98−4493	1	6	1	Cover−Drive
98−4497	3	23	1	Tank−Fuel
98−7001	9	7	1	Nozzle
98−7011	9	18	1	Spring−Throttle
98−7015	5	51	1	Heat Shield
98−7037	5	32	1	Brake Switch Lead Wire
98−7042	9	4	1	Carb ASM w/Gaskets
98−7042	5	52	1	Carburetor ASM
98−7046	7	15	1	Ring−Retaining
98−7047	9	20	1	Disc−Throttle
98−8349	4	18	1	Decal−Control Panel
99−1503	1	26	1	Decal−Deck 550cs
99−1515	3	25	1	Guard−Brake
99−1517	3	6	1	Decal−Lawn Boy
99−1520	3	5	1	Decal−Fuel Mix
99−2901	7	7	1	Crankshaft & Bearing ASM
99−2904	5	56	1	Muffler & Guard
99−2909	6	66	4	Screw
99−2910	3	31	1	Engine ASM
99−5204	1	7	1	H0using−21” Sp
99−5205	4	21	1	Panel−Control
302−56	2	8:4	2	Fitting−Grease
321−4	4	14	1	Screw−HH
321−51	4	46	1	Bolt−Hex
322−3	3	12	2	Screw−HH
322−9	4	5	2	Screw−HH
322−17	6	62	2	Screw−HH
3230−29	4	1	2	Bolt−CARR
3253−4	3	19	2	Washer−Lock
3256−23	4	51	2	Washer−Flat
3256−24	8	21	1	Washer−Flat
3272−10	2	11	1	Pin−Cotter
3285−19	8	13	1	Pin−Spirol
3290−413	1	20	2	Washer−Spring
3290−443	3	8	1	Staple
3290−456	5	40	4	Washer−Lock
3290−459	5	27	2	Rivet−Self Expand Plas
3296−5	8	22	1	Nut−Lock
3296−29	4	6	4	Nut−Lock
3296−39	3	41	2	Locknut
3296−39	1	17	2	Nut−Lock
3296−42	1	36	2	Nut−Lock
3296−56	4	49	1	Nut−Lock
3296−73	4	32	3	Nut−Lock
32105−15	1	16	2	Screw−HH
32144−53	3	29	4	Screw−Tf Acorn Hd
32144−70	2	9	1	Screw−TAP
32144−85	2	18	2	Screw−HH

*Not Illustrated