
FORM NO. 3321–635 Rev A

TORO®

MODEL NO. 38062–9900001 & UP
MODEL NO. 38063–9900001 & UP

PARTS CATALOG

622 SNOWTHROWER

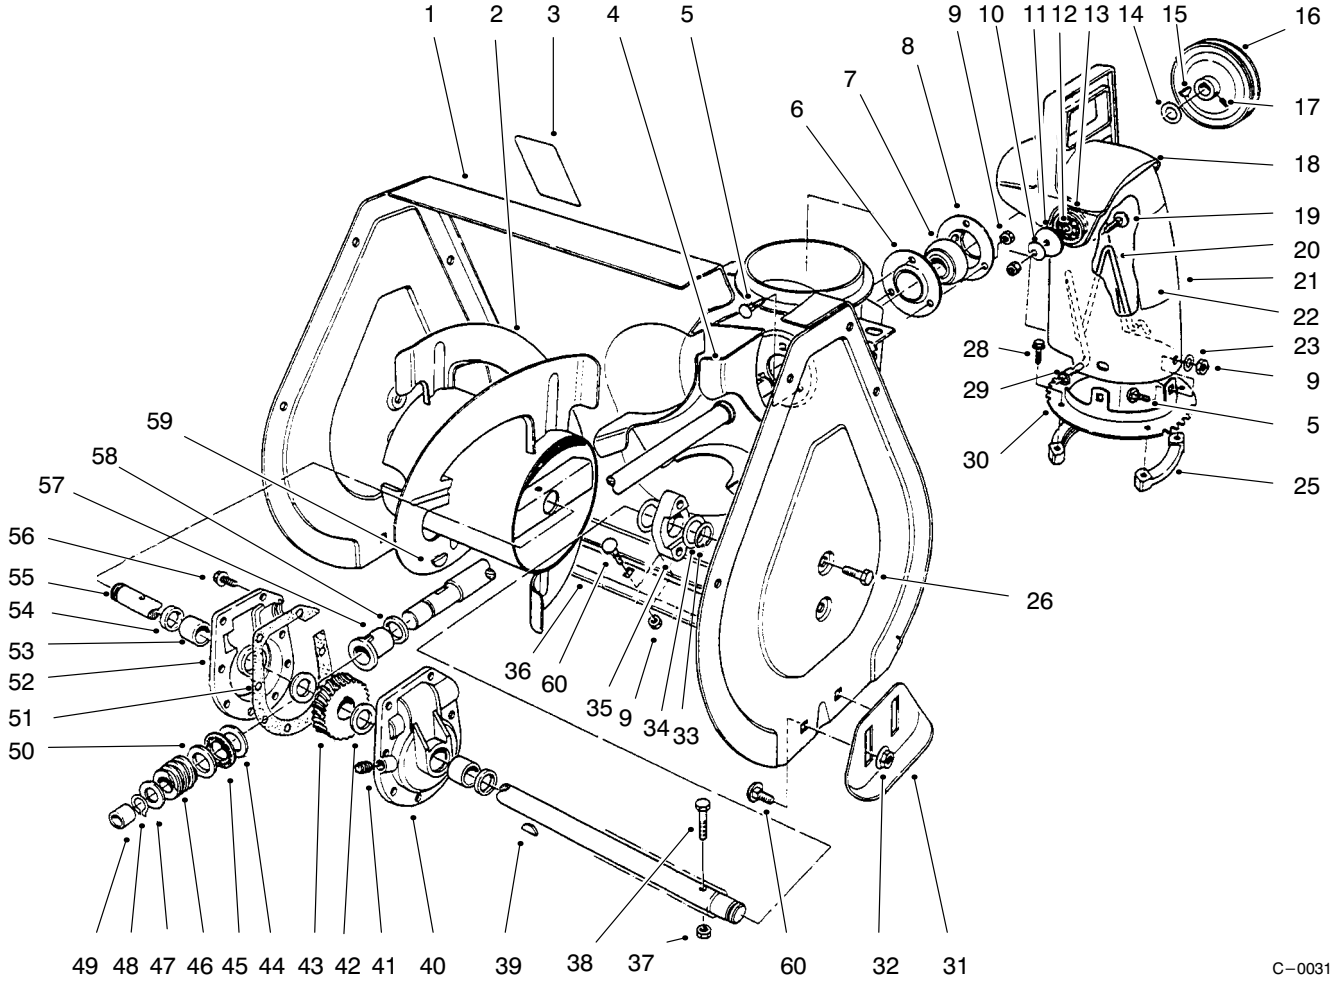


AUGER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	43–7722–01	Housing–Auger (Incl. Ref. #3)	1
2	39–1180–03	Auger – R.H.	1
*	39–1190–03	Auger – L.H.	1
3	53–7670	Decal – Auger Warning (Model 38062 Only)	1
4	37–6990	Shaft & Impeller	1
5	3230–18	Bolt – Carriage	6
6	26–6120	Flange – Bearing Front	1
7	63–3450	Bearing – Ball	1
8	26–6110	Flange – Bearing Rear	1
9	3296–29	Nut – Lock	13
10	3290–456	Washer – Belleville	2
11	3256–68	Washer – Flat	2
12	55–8950	Plate – Friction	2
13	20–4320	Washer – Rubber	2
14	3–0737	Washer	1
15	3257–23	Key	1
16	37–6890	Pulley	1
17	3242–4	Screw – Set	2
18	56–2680	Deflector	1
19	3230–22	Bolt – Carriage	2
20	56–2670	Chute – Wire	1
21	94–2793	Chute – Discharge (Incl. Ref.# 22) (Model 38062 Only)	1

*Not Illustrated

© The TORO Company – 1998
All Rights Reserved

TPS

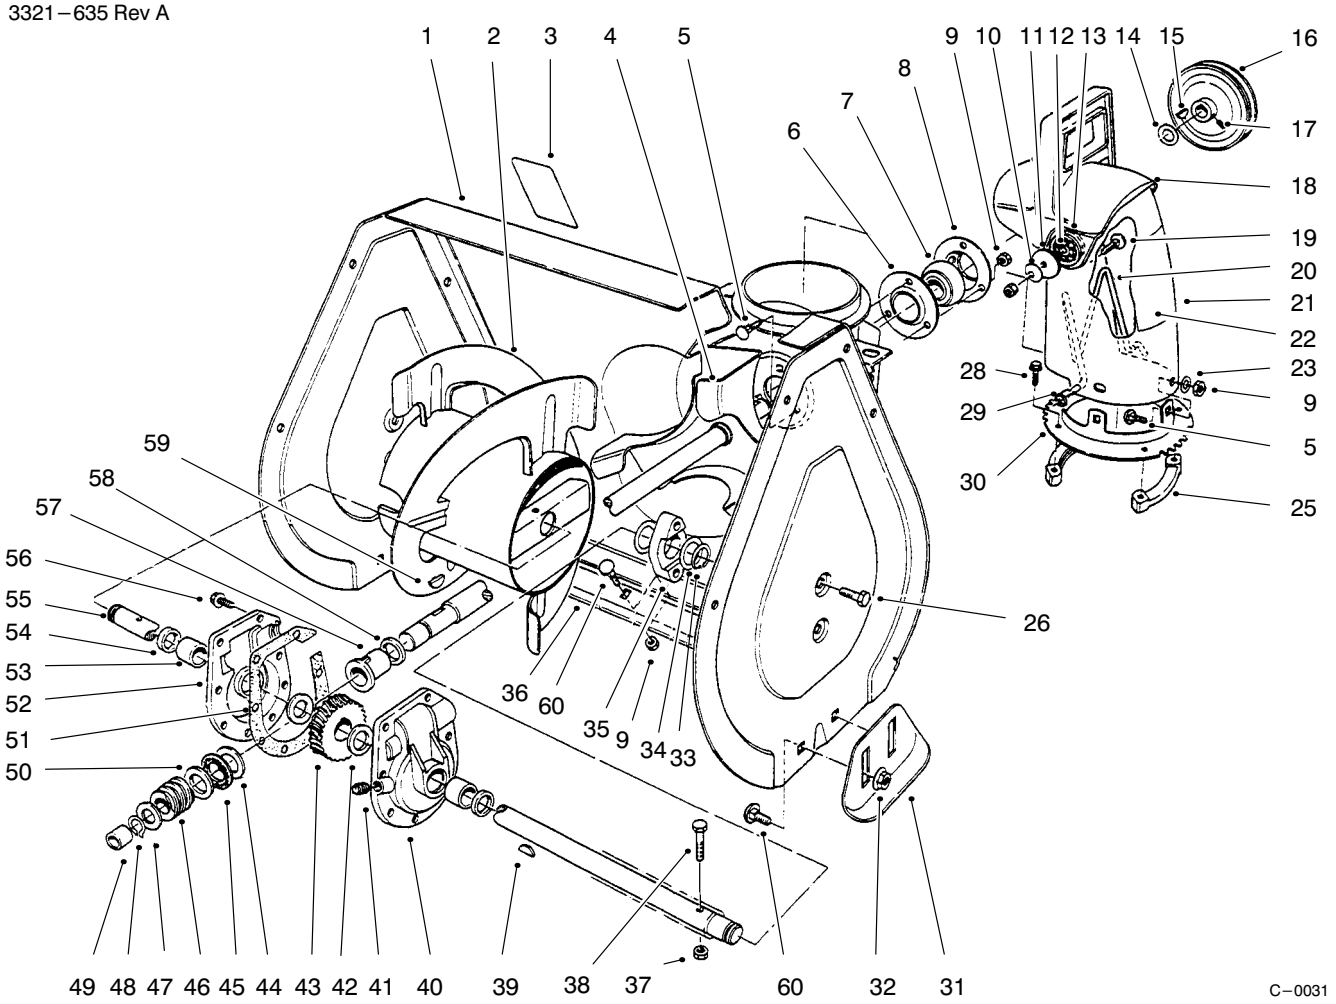


AUGER ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
*	94−2792	Chute − Discharge (Incl. Ref.# 22) (Model 38063 Only)	1
22	94−8079	Decal−Discharge (Model 38062 Only)	1
22	94−2558	Decal−Discharge (Model 38063 Only)	1
23	3256−23	Washer	3
25	37−6490	Retainer − Chute Ring	3
26	32144−70	Screw − Self Tapping	4
28	27−0220	Screw − Self Tapping	6
29	3290−326	Pushnut	1
30	37−8941−03	Ring − Chute	1
31	40−8160−01	Skid	2
32	32128−20	Nut − Flange	4
33	32151−36	Ring − Retaining	2
34	5−1550	Washer − Thrust	4
35	37−6550	Bearing − Auger	2
36	94−8892−01	Blade − Scraper	1
37	3296−42	Nut − Lock	2
38	321−10	Screw	2
39	3257−33	Key − Woodruff	1
40	14−2459	Gear Case L.H. (Incl. Ref. #53 & 54)	1

Ref. No.	Part No.	Description	No. Used
41	281−1	Pipe − Plug	1
42	252−71	Bearing − Thrust	2
43	5−7180	Gear	1
44	257−3	Washer − Thrust	1
45	252−76	Bearing − Needle, Thrust	1
46	5−7170	Gear − Worm	1
47	3−8664	Washer	1
48	32120−72	Ring − Retaining	1
49	256−32	Bushing	1
50	252−80	Washer − Thrust	1
51	51−0460	Gasket	1
52	14−2449	Gear Case R.H. (Incl. Ref. #53 & 54)	1
53	256−237	Bushing	2
54	7−0045	Seal − Oil	2
55	37−6802	Shaft − Auger	1
56	32144−41	Screw − Self Tap.	8
57	37−6560	Bushing − Input	1
58	237−87	Seal	1
59	3257−23	Key − Woodruff	1
60	3230−1	Bolt − Carriage	9
*	37−6962	Gear Case Asm.	1
*	12−8789	Bearing Assembly (Incl. Ref. #6−8)	1

*Not Illustrated

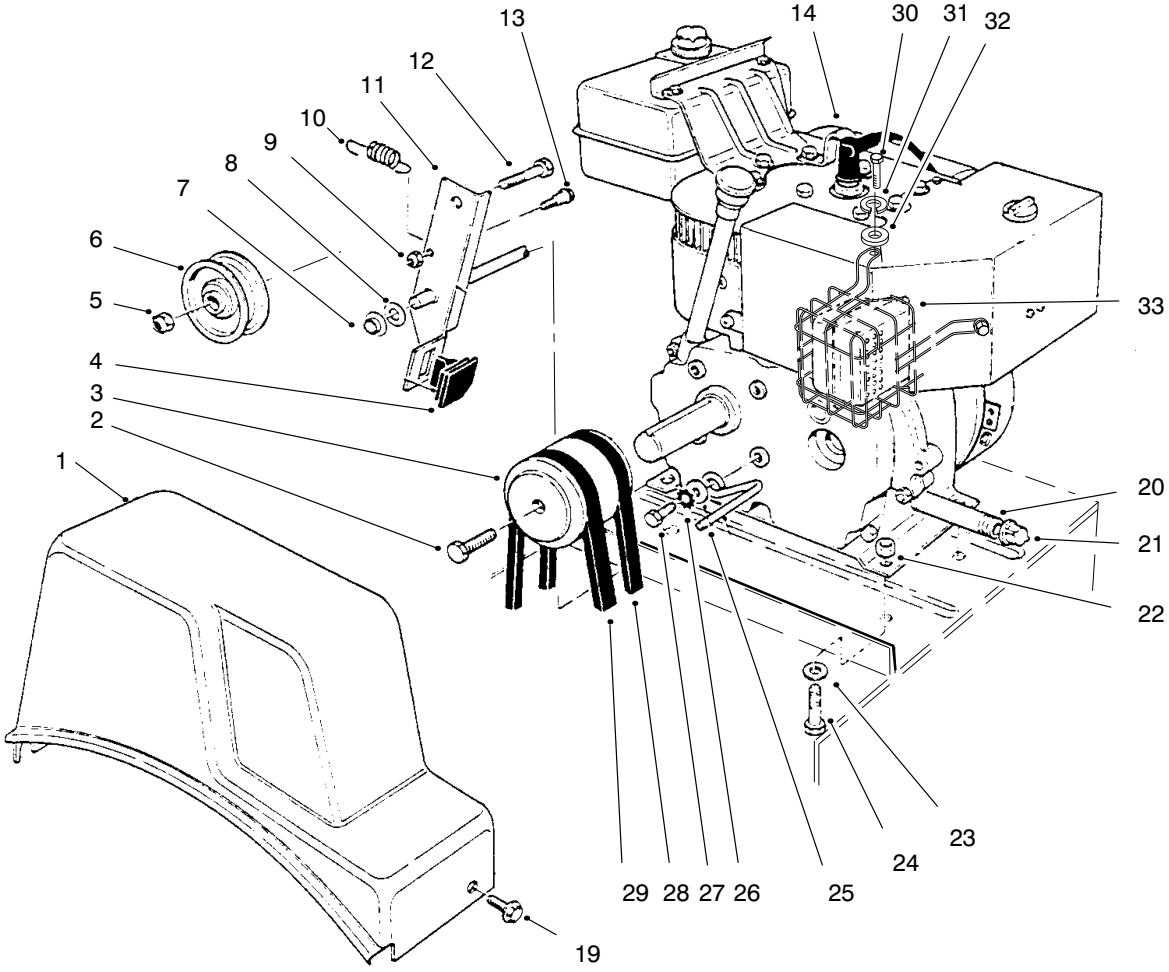


C−1278

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	37−6900	Cover − Belt	1
2	43−7290	Screw − Special	1
3	74−1370	Engine Pulley	1
4	66−8060	Molded Brake Asm.	1
5	3296−59	Nut − Lock	1
6	3−4244	Idler Pulley	1
7	3290−320	Nut − Push On	1
8	3256−24	Washer − Flat	1
9	3296−56	Nut − Lock	1
10	53−7570	Spring − Auger Disengage	1
11	14−7959	Auger Clutch (Incl. Ref. #4)	1
12	323−29	Screw	1
13	42−3560	Bolt − Shoulder	1
14		Engine	1
19	32144−4	Screw − Self Tap.	2
20	289−9	Pipe Nipple	1
21	288−2	Cap	1

Ref. No.	Part No.	Description	No. Used
22	3296−29	Nut − Lock	4
23	3256−23	Washer − Flat	5
24	322−4	Screw	4
25	37−8990	Retainer − Belt	1
26	3255−8	Washer −Lock Ext. Tooth	1
27	3210−3	Screw	1
28	37−9090	V−Belt − Traction	1
29	26−9672	V−Belt − Auger	1
†30	42−671	Screw (Model 38063 Only)	3
31	3253−17	Washer − Lock (Model 38063 Only)	3
32	3256−49	Washer − Flat (Model 38063 Only)	3
†33	127−19	Guard − Muffler (Model 38063 Only)	1


†Order From Tecumseh

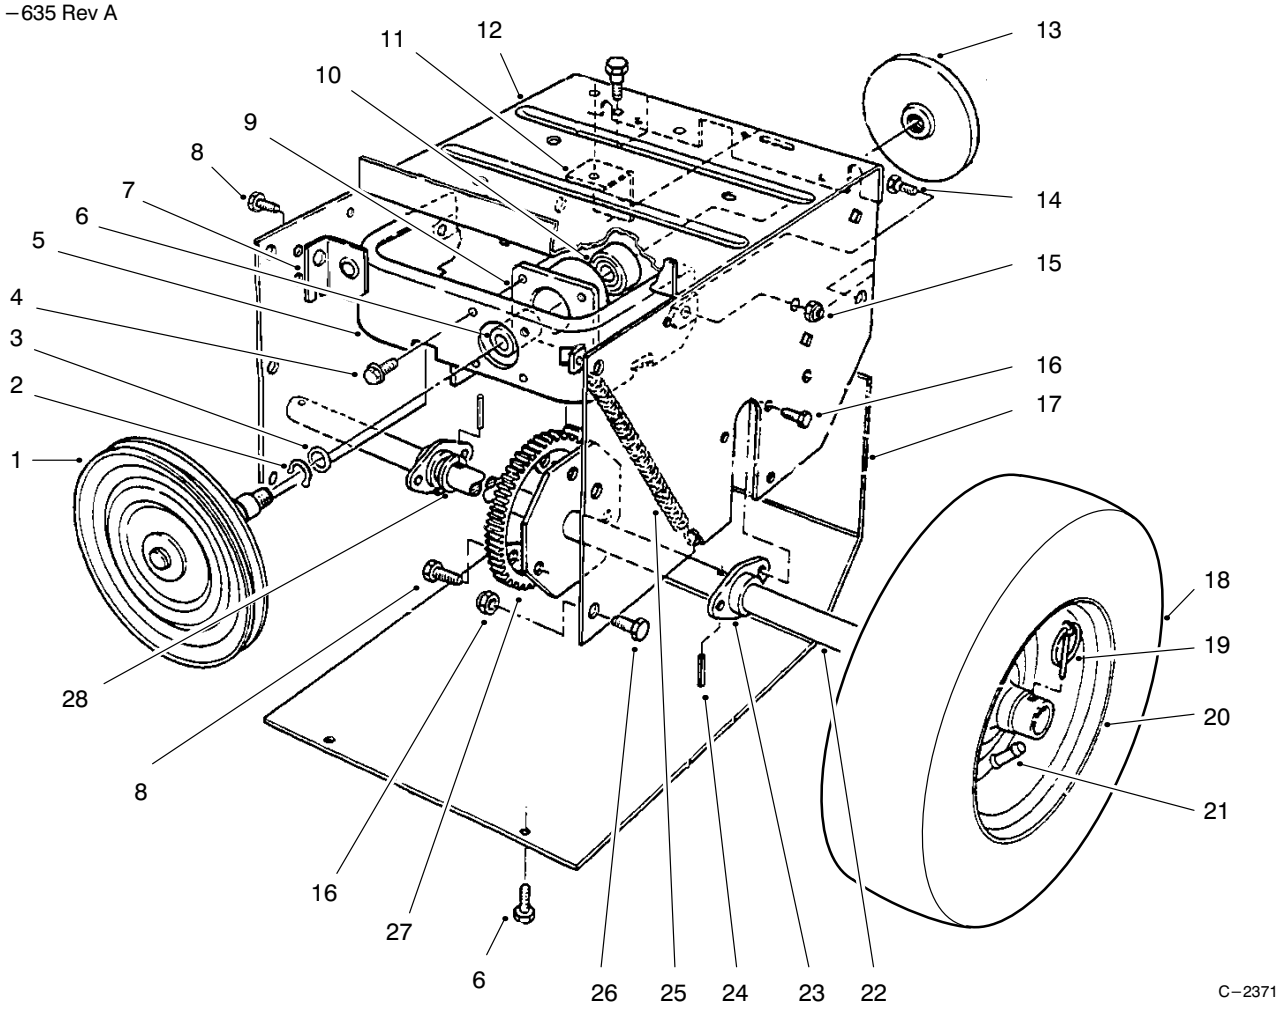

TRACTION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88−0850	Pulley & Shaft	1
2	32151−103	Ring − Snap	1
3	252−80	Washer − Thrust	1
4	12−3270	Screw − Tapping	8
5	88−0550−03	Frame − Friction Plate	1
6	256−322	Bushing	1
7	66−6790	Mount − Clutch Rod Front	1
8	32144−70	Screw − Self Tap. Hex. Hd.	5
9	88−0560	Hub − Frame	1
10	38−7820	Bearing	1
11	37−9070	Mount − Clutch Rod Rear	1
12	37−8900−01	Frame − Traction	1
13	38−0800	Plate − Friction	1
14	37−8770	Bolt − Shoulder	2
15	3296−29	Nut − Lock	6

Ref. No.	Part No.	Description	No. Used
16	32144−4	Screw − Self Tap. Hex. Hd.	6
17	37−6830−01	Cover − Bottom	1
18	231−120	Tire	2
19	3290−243	Pin − Klik	2
20	241−131	Rim	2
21	232−46	Tube	2
22	74−1350	Shaft − Axle	1
23	37−6850	Bearing − Axle	2
24	32121−31	Pin − Roll	2
25	37−8870	Spring − Friction Plate Frame	1
26	322−2	Screw − Hex. Hd.	6
27	37−6520	Gear − Axle	1
28	3−8664	Washer − Thrust	2

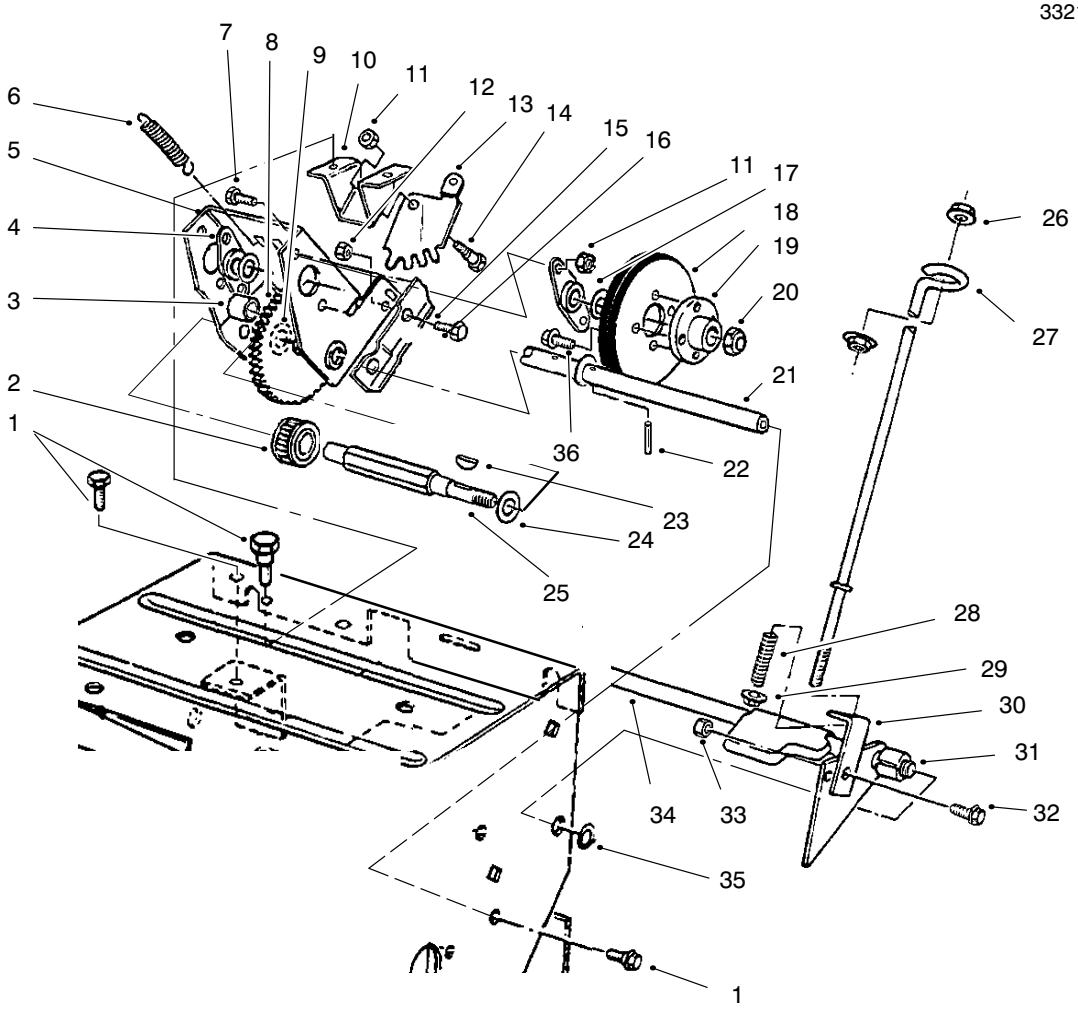


C−2372

TRACTION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
1	32144−70	Screw − Self Tap. Hex. Hd.	4
2	37−6500	Gear − Sliding	1
3	256−86	Bushing	1
4	20−1620	Bearing − Friction Wheel	2
5	39−1230	Bracket − Sliding	1
6	37−8880	Spring − Traction Engage	1
7	322−2	Screw − Hex. Hd.	4
8	37−9160	Intermediate Gear & Bushing (Incl. Ref. #4)	1
9	10−9280	Washer − Thrust	2
10	37−8790	Mount − Quadrant Gear	1
11	3296−29	Nut − Lock	1
12	3296−16	Nut − Lock	1
13	37−8801	Quadrant − Gear	1
14	37−8770	Bolt − Shoulder	1
15	39−1250	Cam − Receiver	1
16	321−4	Screw − Hex. Hd.	1
17	36−4790	Washer − Thrust	2
18	37−6570	Wheel − Friction	1

Ref. No.	Part No.	Description	No. Used
19	39−1520	Hub − Friction Wheel Mount	1
20	3296−48	Nut − Lock	1
21	37−6760	Shaft − Pivot	1
22	32121−45	Pin − Roll	2
23	3257−24	Key	1
24	5−7570	Washer − Thrust	2
25	37−6780	Shaft − Hex	1
26	32128−33	Nut − Flange	2
27	39−3060	Rod − Lower Traction	1
28	38−4520	Spring − Compression	1
29	32128−32	Nut − Flange	1
30	38−4490	Bracket − Traction	1
31	40−9680	Spacer	1
32	40−8350	Screw − Shoulder	1
33	3296−42	Nut − Lock	1
34	43−7310−03	Traction Engagement Asm.	1
35	32151−61	Ring − Retaining	1
36	12−3270	Screw − Special	4

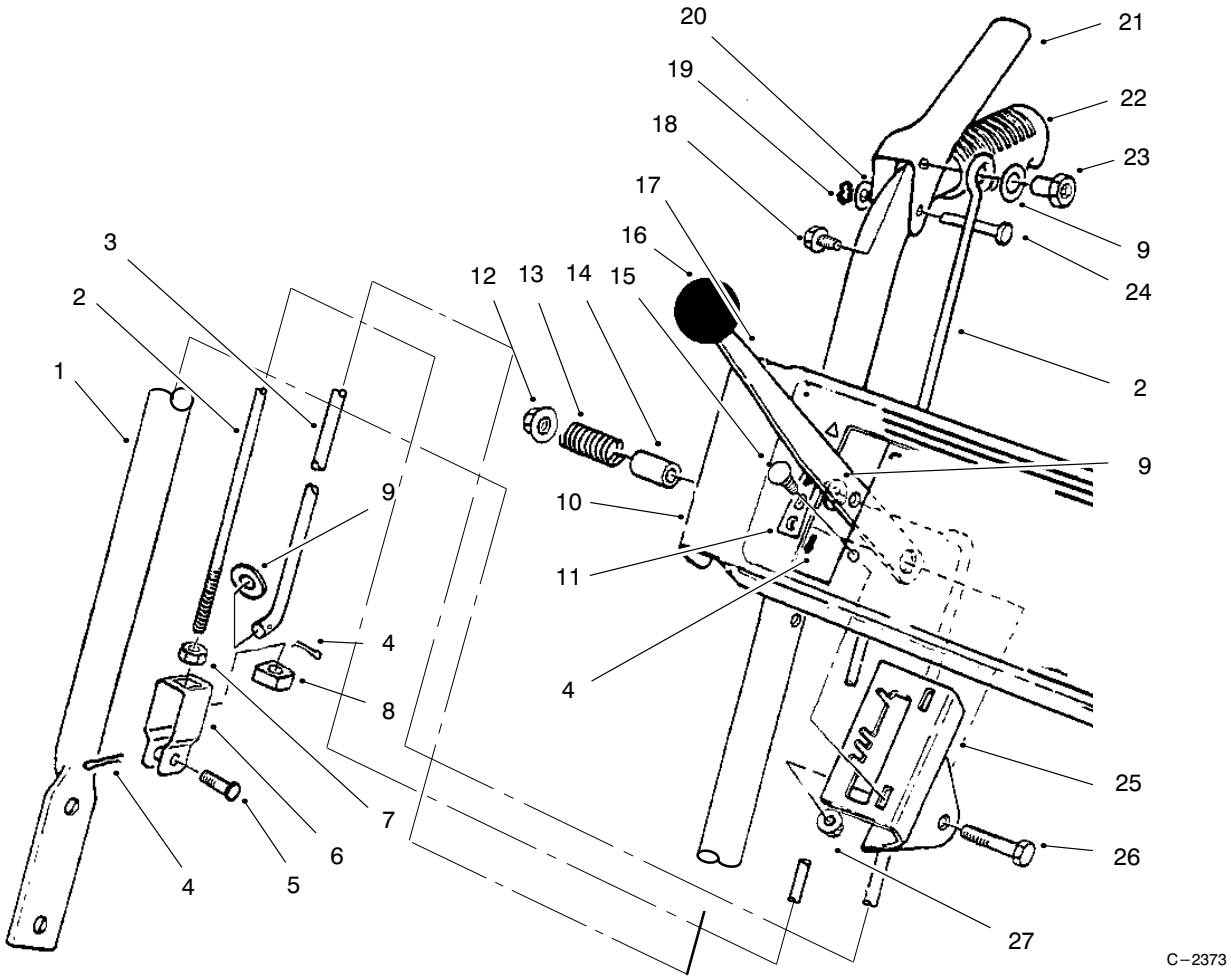


HANDLE ASSEMBLY RIGHT SIDE

Ref. No.	Part No.	Description	No. Used
1	52−5561−03	Handle − Right	1
2	52−5590	Link − Upper	1
3	74−1490	Rod − Speed Selector	1
4	3272−4	Pin − Cotter	3
5	283−3	Pin − Clevis	1
6	39−3080	Clevis	1
7	3218−1	Nut − Jam	1
8	32115−5	Retainer − Nut	1
9	3256−23	Washer	4
10	99−5961	Panel − Escutcheon Ass'y (Model No. 38062)	1
10	99−5962	Panel − Escutcheon Ass'y (Model No. 38063)	1
11	94−8097	Decal − Escutcheon	1
12	32128−13	Nut − Flange Lock	1
13	37−9150	Spring	1

Ref. No.	Part No.	Description	No. Used
14	40−8130	Spacer − Speed Selector	1
15	3229−11	Bolt − Carriage	2
16	233−21	Knob	1
17	37−8821−03	Selector − Speed	1
18	3234−13	Screw − Hex. Flange Hd.	1
19	32151−73	Ring − Clip	1
20	3256−24	Washer	1
21	63−3640	Handle − Control	1
22	74−1360	Grip − Handle	1
23	47−4990	Post − Linkage Mounting	1
24	52−5600	Pin − Control Lever	1
25	39−1280−03	Mount − Speed Selector	1
26	322−7	Screw	1
27	32128−33	Nut − Flange Lock	2
*	3290−378	Cable Tie	1

*Not Illustrated

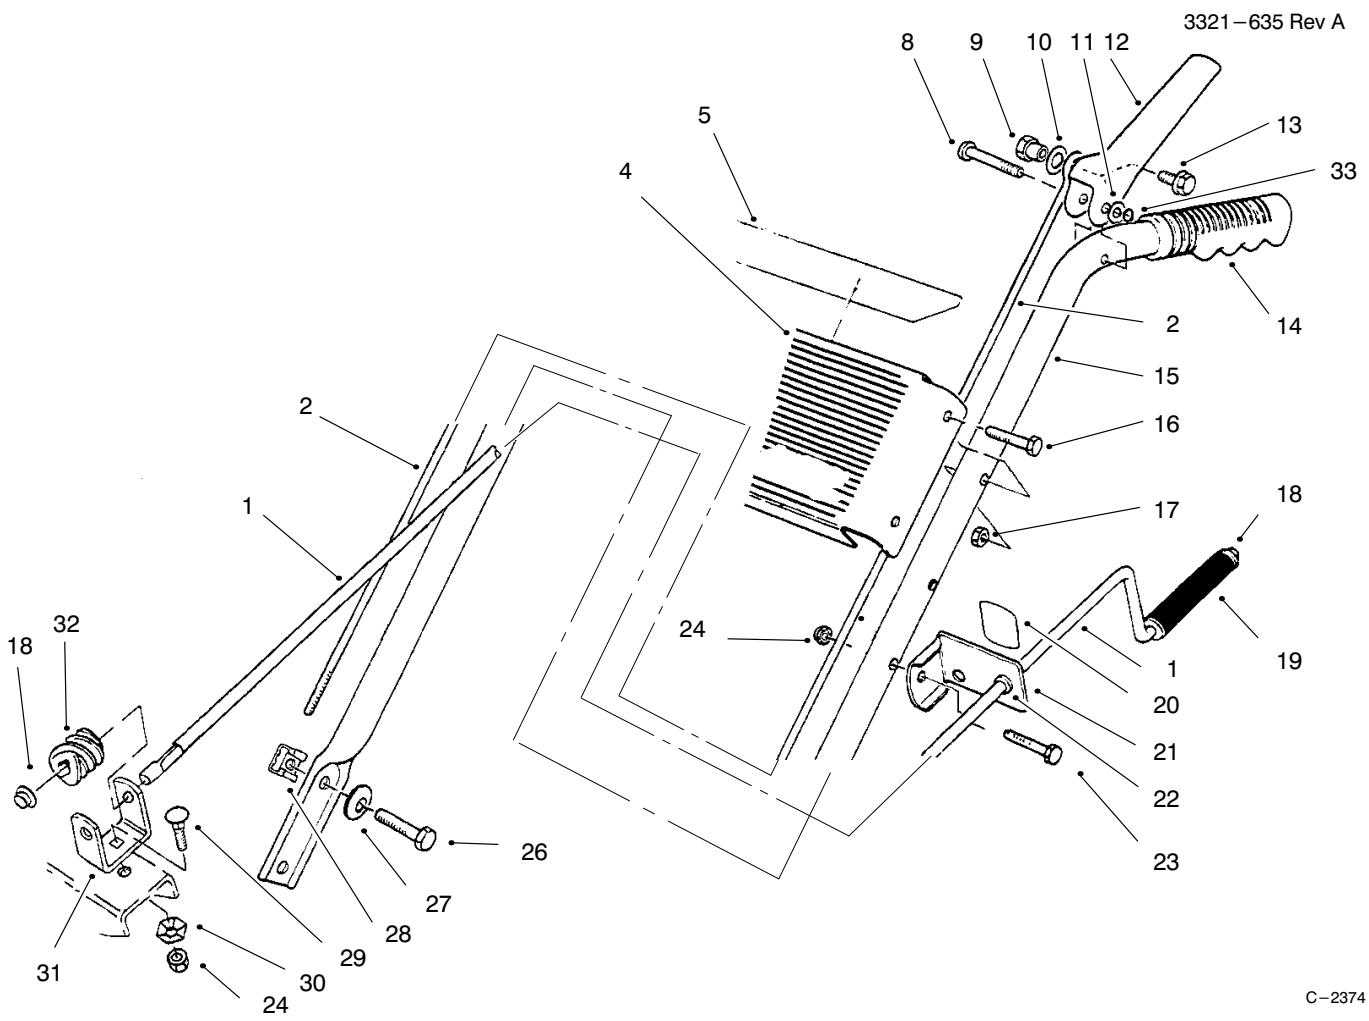


HANDLE ASSEMBLY LEFT SIDE

Ref. No.	Part No.	Description	No. Used
1	40−8270	Rod − Chute Control	1
2	52−5590	Link − Upper	1
4	Reference	Panel − Escutcheon	
5	99−3214	Decal − Escutcheon Back (Model 38602 Only)	1
*	99−3215	Decal − Escutcheon Back (Model 38063 Only)	1
8	52−5600	Pin − Control Lever	1
9	47−4990	Post − Linkage Mounting	1
10	3256−23	Washer	1
11	3256−24	Washer	1
12	63−3640	Handle − Control	1
13	3234−13	Screw − Hex. Flange Hd.	1
14	74−1360	Grip − Handle	1
15	52−5571−03	Handle − Left	1
16	321−9	Screw − Hex. Head	4
17	3296−42	Nut − Lock	2

Ref. No.	Part No.	Description	No. Used
18	3290−320	Nut − Push	2
19	40−8230	Grip − Rod	1
20	63−3510	Decal − Chute Direction	1
21	12−7739	Bracket − Chute Control (Incl. Ref.# 20 & 22)	1
22	256−249	Nyliner	1
23	322−7	Screw − Hex. Hd.	1
24	3296−29	Nut − Lock	2
26	322−2	Screw − Hex. Hd.	4
27	3290−456	Washer − Belleville	4
28	3290−196	Retainer − Nut	4
29	3230−22	Bolt − Carriage	1
30	3290−238	Washer − Pyramidal	1
31	40−8280	Bracket − Chute Worm	1
32	40−8250	Gear − Worm	1
33	32151−73	Ring − Clip	1

*Not Illustrated

ENGINE TECUMSEH MODEL HSK60–76011C

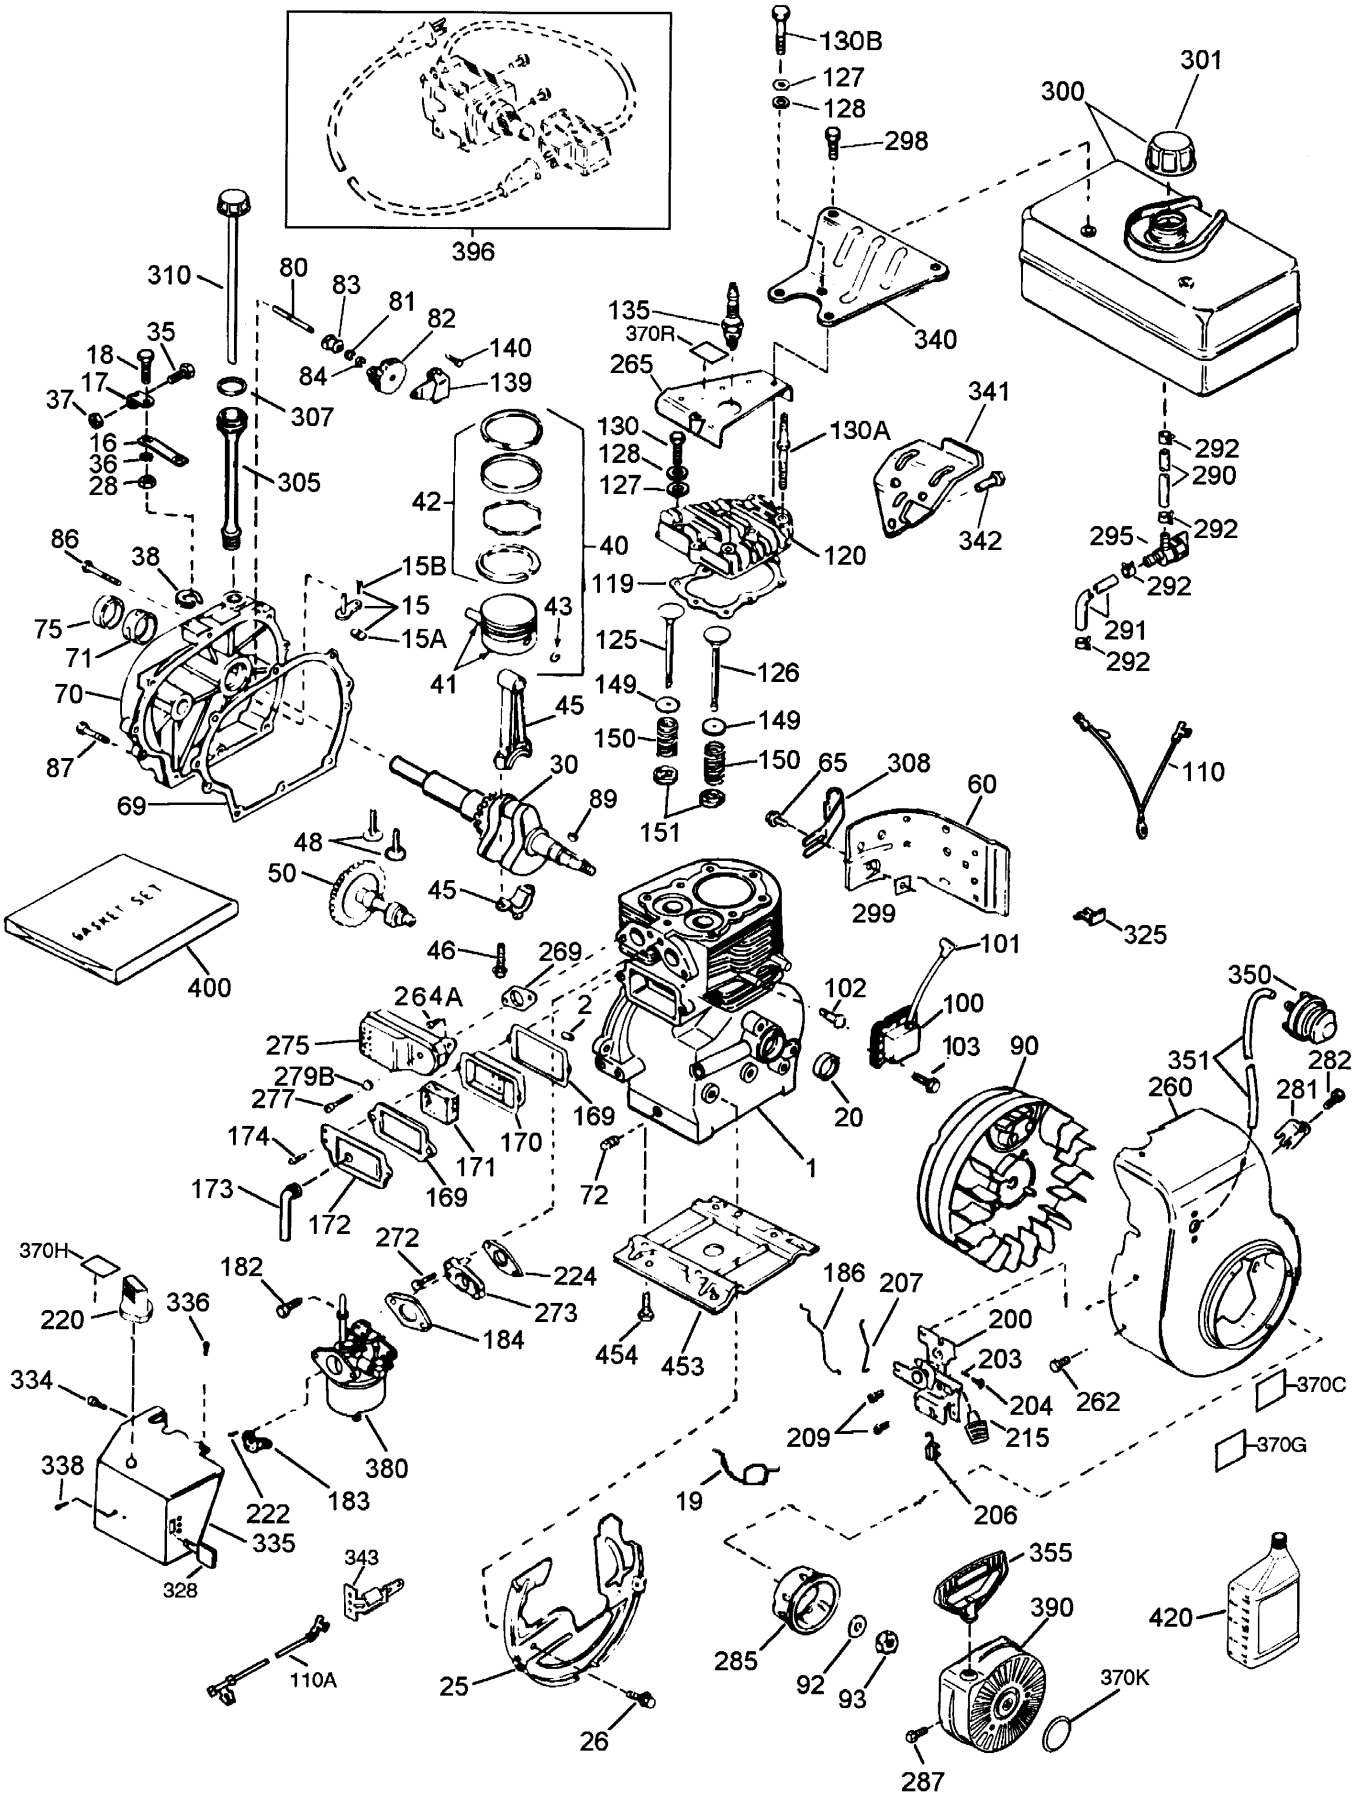


ENGINE TECUMSEH MODEL HSK60−76011C

Ref. No.	Part No.	Description	No. Used
1	34919B	Cylinder (Incl. Ref. #2,20 & 72)	1
2	27652	Dowel Pin	2
15	30699C	Governor Rod (Incl. Ref. #15A & 15B)	1
15A	30700	Governor Yoke	1
15B	650494	Screw	1
16	33454	Governor Lever	1
17	29916	Governor Lever Clamp	1
18	651028	Screw	1
19	34663	Speed Control Spring	1
20	32630	Oil Seal	1
25	36460	Blower Housing Baffle	1
26	650561	Screw	2
28	30322	Lock Nut	1
30	35193	Crankshaft	1
35	29826	Screw	1
36	29918	Lock Washer	1
37	29216	Lock Nut	1
38	29642	Retaining Ring	1
40	34531	Piston, Pin & Ring Set (.010” OS)	1
40	34532	Piston, Pin & Ring Set (.020” OS)	1
40	34533	Piston, Pin & Ring Set (Std.)	1
41	33312B	Piston & Pin Ass’y (.010” OS) (Incl. Ref. #43)	1
41	33313B	Piston & Pin Ass’y (.020” OS) (Incl. Ref. #43)	1
41	33314B	Piston & Pin Ass’y (Std.) (Incl. Ref. #43)	1
42	34854	Ring Set (Std.)	1
42	34855	Ring Set (.020” OS)	1
42	34856	Ring Set (.010” OS)	1
43	27888	Piston Pin Retaining Ring	2
45	31380C	Connecting Rod Ass’y (Incl. Ref. #46 & 49)	1
46	650662C	Connecting Rod Bolt	2
48	34034	Valve Lifter	2
50	32115	Camshaft (MCR)	1
60	30622A	Blower Housing Extension	1
65	650128	Screw	1
69	30684	Cylinder Cover Gasket	1PK
*70	31303C	Cylinder Cover (Incl. Ref. #71, 75, & 80)	1
71	31546	Crankshaft Bushing	1
72	27642	Oil Drain Plug	2
75	28427	Oil Seal	1
80	31845	Governor Shaft	1
81	30590A	Washer	1
82	30591	Governor Gear Ass’y	1
83	30588A	Governor Spool	1
84	29193	Retaining Ring	1
86	650488	Screw	7
87	650493	Screw	1
89	32589	Flywheel Key	1
90	611085	Flywheel	1
92	650815	Belleville Washer	1
93	8116	Flywheel Nut	1
100	34443B	Solid State Ignition	1
101	610118	Spark Plug Cover	1
102	651024	Solid State Mounting Stud	2
103	651007	Screw, Torx T−15	2
110	35187	Ground Wire	1
110A	37047	Ground Wire	1
*119	36445	Cylinder Head Gasket	1PK
120	36446	Cylinder Head (Incl. 3 of 131)	1
125	27878A	Exhaust Valve (Std.) (Incl. Ref. #151)	1
125	27880A	Exhaust Valve (1/32” OS) (Incl. Ref. #151)	1
126	32784	Intake Valve (1/32” OS) (Incl. Ref. #151)	1
126	32783	Intake Valve (Std.) (Incl. Ref. #151)	1
127	650691	Washer	3
128	650690	Belleville Washer	3
130	650697A	Screw	3
130A	650697A	Screw	2
130B	650697A	Screw	3
135	35395	Resistor Spark Plug (RJ19LM)	1
139	31843A	Governor Gear Bracket	1
140	650965	Screw, Torx T−25	2
149	27882	Valve Spring Cap	2
150	27881	Valve Spring	2
151	32581	Valve Spring Keeper	2
*169	27896A	Valve Cover Gasket	2PK
170	28423	Breather Body	1
171	28424	Breather Element	1
172	28425	Valve Cover	1
173	35350	Breather Tube	1
174	650128	Screw	2
182	650517	Screw	2
183	32398	Choke Bracket	1
*184	31688A	Carburetor To Intake Pipe Gasket	1PK
186	34661	Governor Link	1
200	34677	Control Bracket (Incl. Ref. #203, 204, & 206)	1
203	31342	Compression Spring	1
204	651029	Screw	1
206	610973	Terminal	1
207	34662	Throttle Link	1
209	650821	Screw	2
215	35440	Control Knob	1
220	35439	Control Knob	1
222	28820	Screw	2
*224	27915A	Intake Pipe Gasket	1PK
260	36254	Blower Housing	1
262	29747B	Screw, Torx T−40	2
264A	30196	Screw	1
265	30939A	Cylinder Head Cover	1
269	35865	Exhaust Gasket	1PK
272	30196	Screw	2

Note: Order individual parts from your local Tecumseh dealer.
*Included in Gasket Set Ref. #400.


ENGINE TECUMSEH MODEL HSK60–76011C

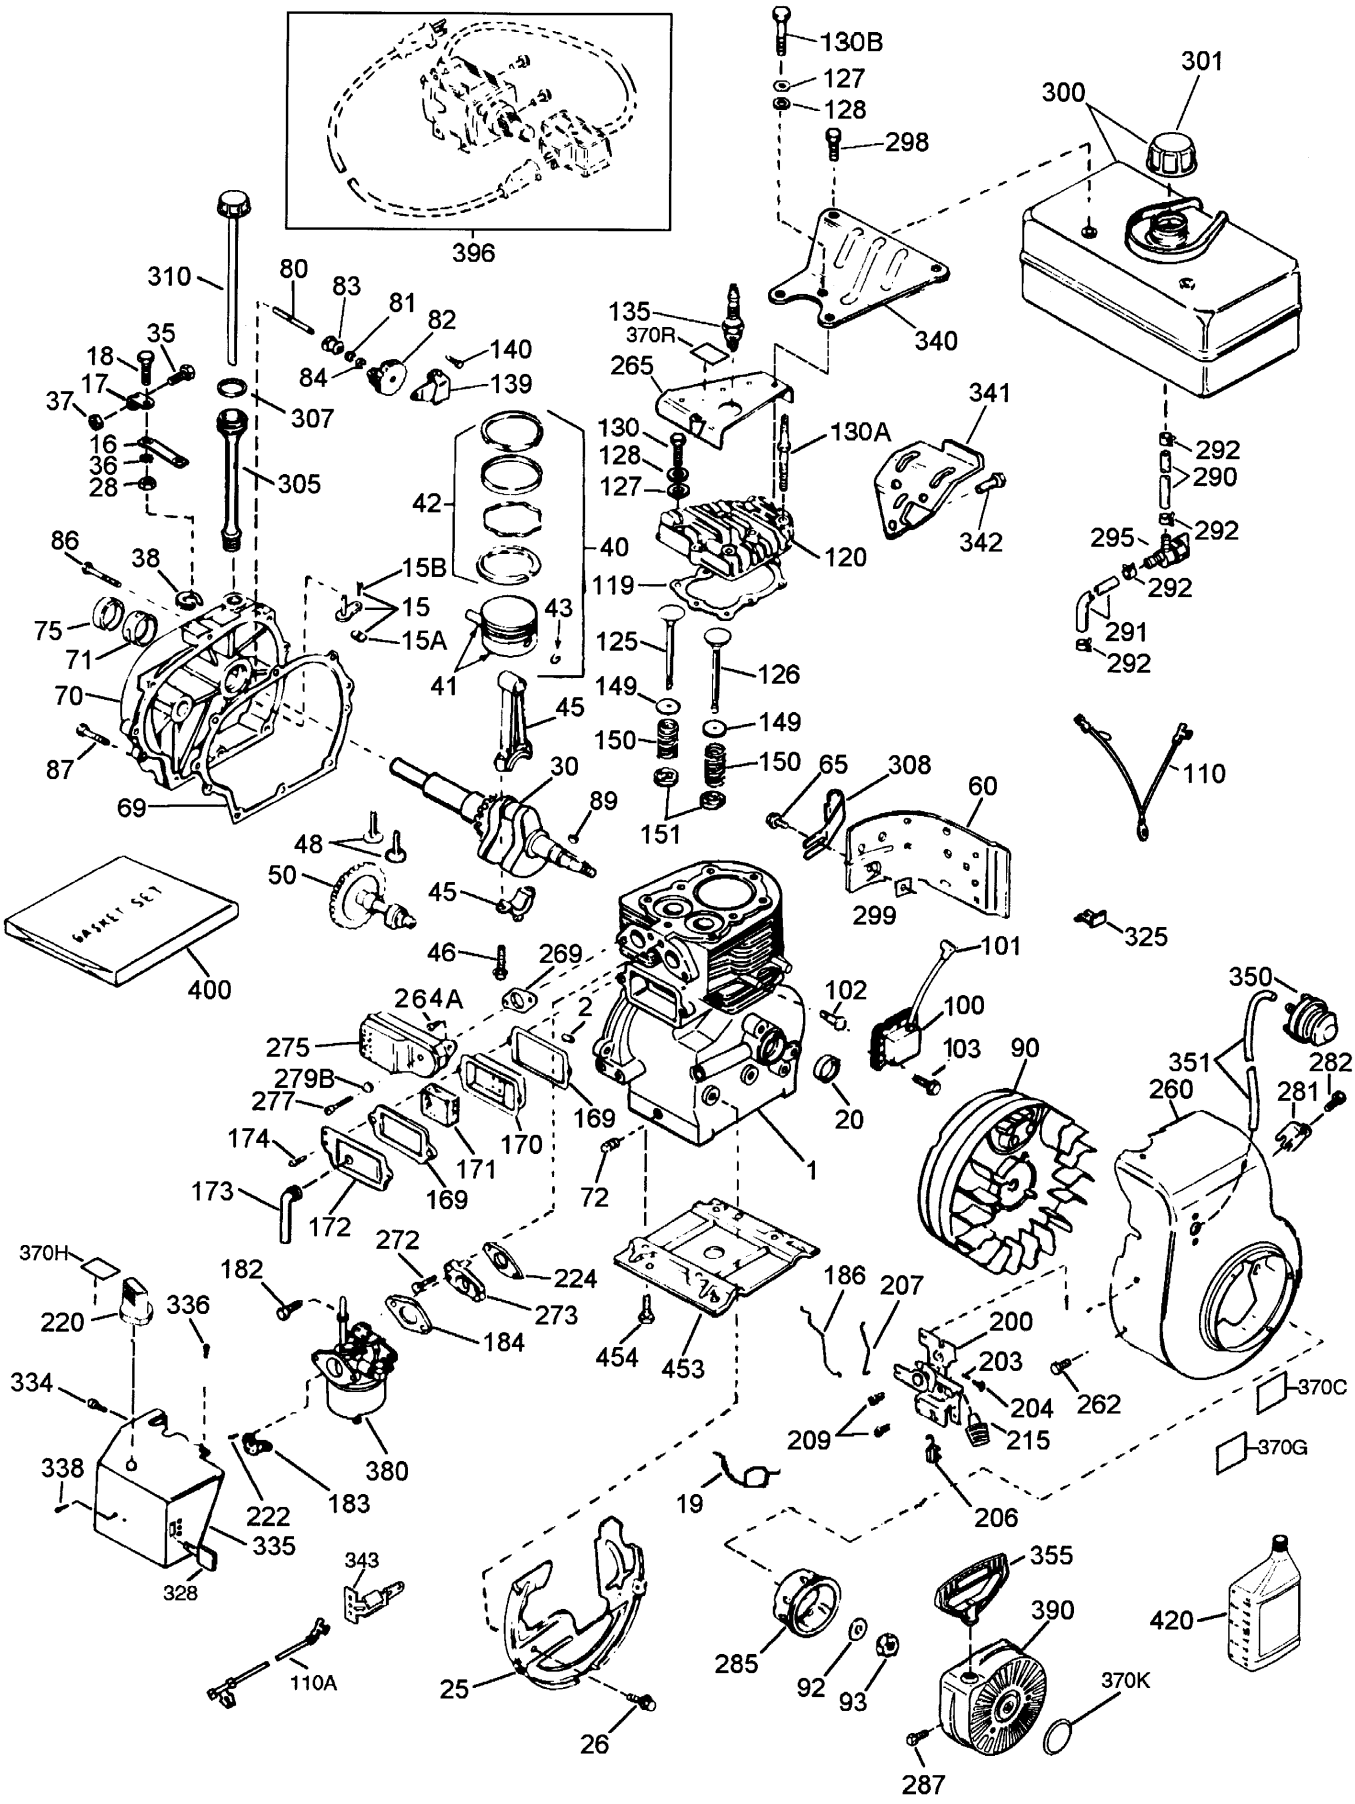

ENGINE TECUMSEH MODEL HSK60−76011C

Ref. No.	Part No.	Description	No. Used
273	34712	Carburetor Flange	1
275	32401	Muffler	1
277	650694A	Screw	1
279B	26073	Washer	1
281	33013	Starter Bubble Cover	1
282	650760	Screw	1
285	35287B	Starter Cup	1
287	650926	Screw	3
290	29774	Fuel Line	1
291	30962	Fule Line	1
292	26460	Fuel Line Clamp	4
295	35857	Fuel Shut−Off Valve	1
298	650665	Screw	2
299	650764	”U” Type Nut	1
300	34186A	Fuel Tank (Incl. Ref. #292 & 301)	1
301	36246	Fuel Cap	1
305	35554	Oil Fill Tube	1
307	35499	”O” Ring	1
308	35540	Fill Tube Clip	1
310	36205	Dipstick	1
325	29443	Wire Clip	1
328	35062	Key Switch	2
334	650257	Screw	2
335	35060	Carburetor Cover	1
336	650765	Screw	1
338	650760	Screw	1
340	34159	Fuel Tank Bracket	1
341	34158	Fuel Tank Bracket	1
342	650561	Screw	1
343	35079	Key Switch Bracket	1
350	570682A	Primer Ass’y	1
351	32180C	Primer Line	1
355	590574	Starter Handle	1
370C	36501	Primer Decal	1
370G	35063	Instruction Decal	1
370H	34418	Choke Decal	1
370K	36695	Starter Decal	1
370R	37119	Warning Decal	1
380	640081	Carburetor (Incl. Ref. #184)	1
390	590742	Rewind Starter	1
396	33328D	Electric Starter Motor (Optional)	1
400	33235A	Gasket Set	1
420	730225	Sae 30 4−Cycle Engine Oil (Quart)	1
453	29538	Engine Mounting Base	1
454	650542	Screw	4

Note: Order individual parts from your local Tecumseh dealer.
*Included in Gasket Set Ref. #400.

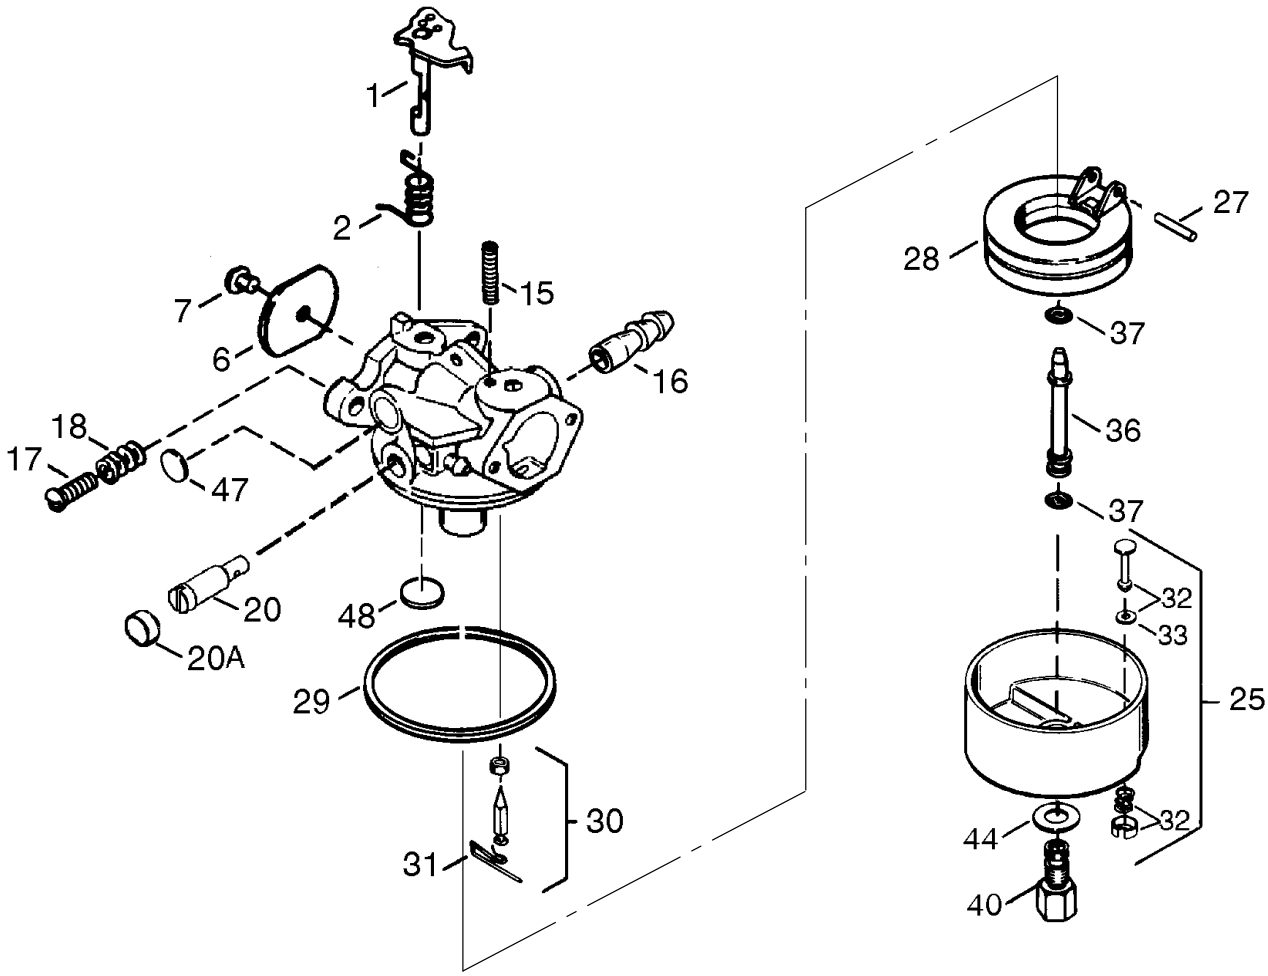


CARBURETOR NO. 640081

Ref. No.	Part No.	Description	No. Used
1	31834	Shaft & Lever Assembly	1
2	631767	Spring – Throttle Return	1
6	640070	Shutter – Throttle	1
7	650506	Screw	2
15	630735	Spring – Choke Stop	1
16	632164	Fitting – Fuel Inlet	1
17	651025	Screw – Idle	1
18	630766	Spring – Idle Screw	2
20	640018	Screw – Idle Restrictor	1
20A	640053	Screw – Idle Restrictor Cap	1
25	631951	Bowl – Assembly (Incl. Ref. #32 & 33)	1
27	631024	Shaft – Float	1
28	632019	Float – Carburetor	1

Ref. No.	Part No.	Description	No. Used
29	631028	Gasket – Bowl–to–Body	1
30	631021	Inlet Needle – Seat & Clip (Incl. Ref. #31)	1
31	631022	Clip – Inlet Needle	1
32	27136A	Drain Assembly – Bowl)	1
33	27554	Gasket – Bow Drain	1
36	632745	Tube – Main Nozzle	1
37	632547	O–Ring – Main Nozzle Tube	1
40	640110	Nut – High Speed Bowl	1
44	27110	Washer – Bowl Nut	1
47	630748	Welch Plug – Idle Mix Well	1
48	631027	Welch Plug – Atmospheric Vent	1
*	640081	Carburetor (Incl. Ref. #1–48)	1

Note: Order individual parts from your local Tecumseh dealer.
* Not Illustrated

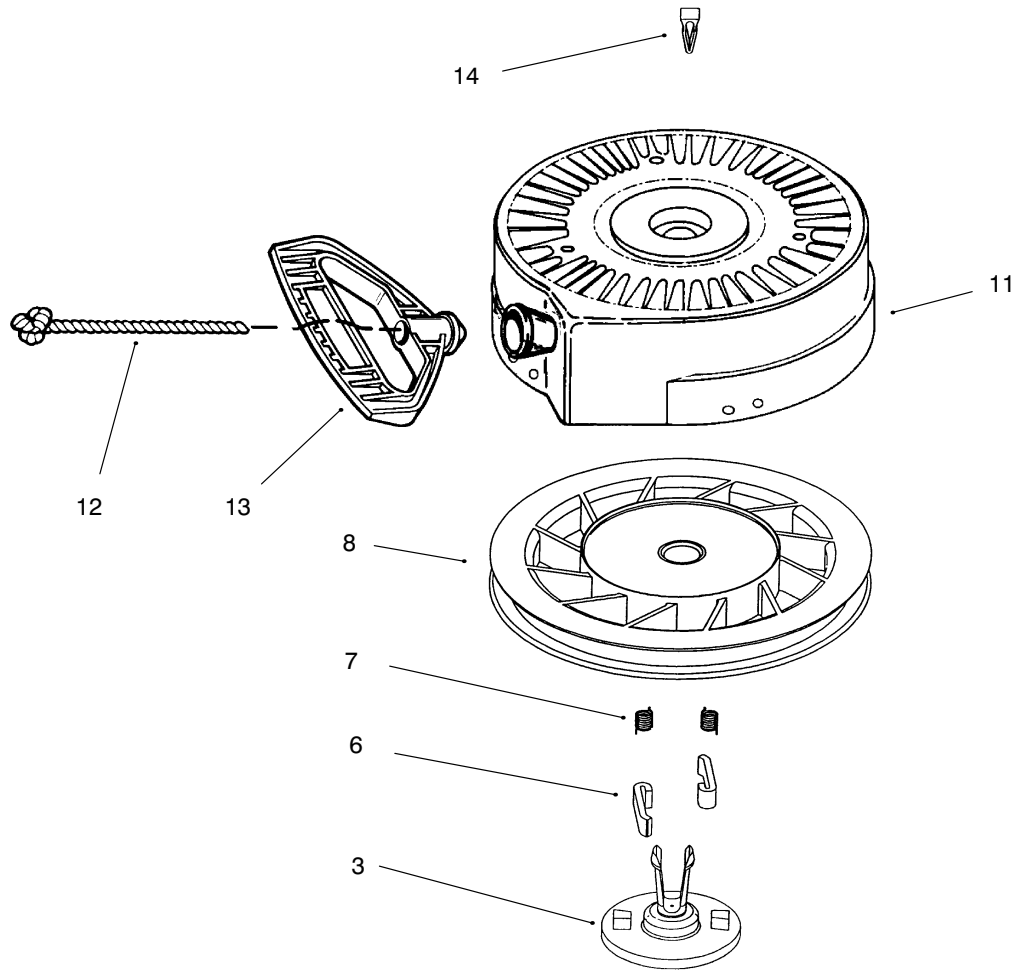


RECOIL STARTER NO. 590742

Ref. No.	Part No.	Description	No. Used
3	590740	Retainer	1
6	590616	Starter Dog	2
7	590617	Dog Spring	2
8	590645A	Pulley & Rewind Spring Asm.	1

Ref. No.	Part No.	Description	No. Used
11	590647	Starter Housing Asm.	1
12	590535	Starter Rope	1
13	590574	Mitten Grip Handle	1
14	590741	Locking Tab	1

Note: Order individual parts from your local Tecumseh dealer.

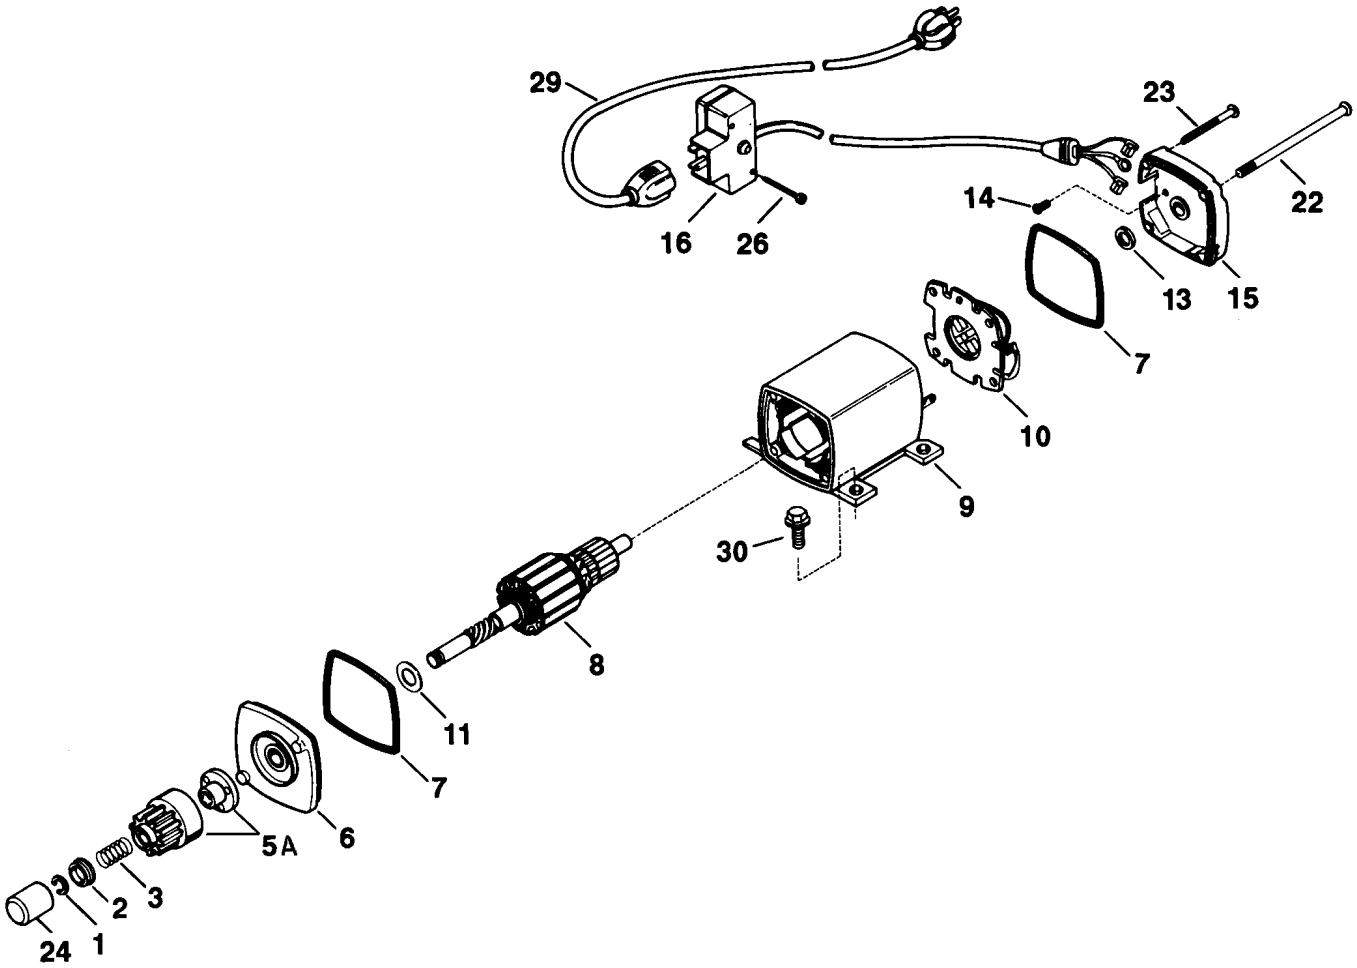

ELECTRIC STARTER KIT NO. 38 – 7590 (OPTIONAL)

Ref. No.	Part No.	Description	No. Used
1	33842	Ring – Retainer	1
2	33430	Retainer – Spring	1
3	33431	Spring – Anti–Drift	1
5A	35913	Gear & Nut (Incl. Ref. #1)	1
6	35449	Cap Assembly – Drive End (Incl. Ref. #7)	1
7	35450	”O” Ring	2
8	35914	Armature	1
9	35457A	Housing Assembly	1
10	35452A	Card Assembly – Brush	1
11	35911	Washer – Thrust	1
13	590500	Washer – Thrust	1

Ref. No.	Part No.	Description	No. Used
14	33441	Screw – Ground	1
15	35453	Cap Assy., Commutator End (Incl. Ref. #7)	1
16	35454	Box Assembly – Switch (Incl. Ref. #26)	1
22	35458	Bolt – Case	2
23	35456	Screw – Grounding	1
24	33451	Cover – Dust	1
26	650819	Screw – Hex. Hd.	2
29	32450B	Cord – Extension, 10’ 6’’	1
30	30063	Screw – Hex. Hd.	4
*	730623	Switch Repair Kit	1

Note: Order individual parts from your local Tecumseh dealer.

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
3−0737	Washer	1	14	1
3−4244	Idler Pulley	3	6	1
3−8664	Washer	2	47	1
3−8664	Washer − Thrust	4	28	2
5−1550	Washer − Thrust	2	34	4
5−7170	Gear − Worm	2	46	1
5−7180	Gear	2	43	1
5−7570	Washer − Thrust	5	24	2
7−0045	Seal − Oil	2	54	2
10−9280	Washer − Thrust	5	9	2
12−3270	Screw − Tapping	4	4	8
12−3270	Screw − Tapping	5	36	4
12−7739	Bracket − Chute Control	7	21	1
12−8789	Bearing Assembly	2	*	1
14−2449	Gear Case R.H.	2	52	1
14−2459	Gear Case L.H.	2	40	1
14−7959	Auger Clutch	3	11	1
Reference	Panel − Escutcheon	7	4	
20−1620	Bearing − Friction Wheel	5	4	2
20−4320	Washer − Rubber	1	13	2
26−6110	Flange − Bearing Rear	1	8	1
26−6120	Flange − Bearing Front	1	6	1
26−9672	V−Belt − Auger	3	29	1
27−0220	Screw − Self Tapping	2	28	6
36−4790	Washer − Thrust	5	17	2
37−6490	Retainer − Chute Ring	2	25	3
37−6500	Gear − Sliding	5	2	1
37−6520	Gear − Axle	4	27	1
37−6550	Bearing − Auger	2	35	2
37−6560	Bushing − Input	2	57	1
37−6570	Wheel − Friction	5	18	1
37−6760	Shaft − Pivot	5	21	1
37−6780	Shaft − Hex	5	25	1
37−6802	Shaft − Auger	2	55	1
37−6830−01	Cover − Bottom	4	17	1
37−6850	Bearing − Axle	4	23	2
37−6890	Pulley	1	16	1
37−6900	Cover − Belt	3	1	1
37−6962	Gear Case Asm.	2	*	1
37−6990	Shaft & Impeller	1	4	1
37−8770	Bolt − Shoulder	4	14	2
37−8770	Bolt − Shoulder	5	14	1
37−8790	Mount − Quadrant Gear	5	10	1
37−8801	Quadrant − Gear	5	13	1
37−8821−03	Selector − Speed	6	17	1
37−8870	Spring − Friction Plate Frame	4	25	1
37−8880	Spring − Traction Engage	5	6	1
37−8900−01	Frame − Traction	4	12	1
37−8941−03	Ring − Chute	2	30	1
37−9070	Mount − Clutch Rod Rear	4	11	1
37−9090	V−Belt − Traction	3	28	1
37−9150	Spring	6	13	1
37−9160	Intermediate Gear	5	8	1
38−0800	Plate − Friction	4	13	1
38−4490	Bracket − Traction	5	30	1
38−4520	Spring − Compression	5	28	1
38−7820	Bearing	4	10	1
39−1180−03	Auger − R.H.	1	2	1
39−1190−03	Auger − L.H.	1	*	1
39−1230	Bracket − Sliding	5	5	1
39−1250	Cam − Receiver	5	15	1
39−1280−03	Mount − Speed Selector	6	25	1
39−1520	Hub − Friction	5	19	1
39−3060	Rod − Lower Traction	5	27	1
39−3080	Clevis	6	6	1
40−8130	Spacer − Speed Selector	6	14	1
40−8160−01	Skid	2	31	2
40−8230	Grip − Rod	7	19	1
40−8250	Gear − Worm	7	32	1
40−8270	Rod − Chute Control	7	1	1
40−8280	Bracket − Chute Worm	7	31	1
40−8350	Screw − Shoulder	5	32	1
40−9680	Spacer	5	31	1
42−671	Screw	3	30	3
42−3560	Bolt − Shoulder	3	13	1
43−7290	Screw − Special	3	2	1
43−7310−03	Traction Engagement Asm.	5	34	1
43−7722−01	Housing−Auger	1	1	1
47−4990	Post − Linkage Mounting	7	9	1
47−4990	Post − Linkage Mounting	6	23	1
51−0460	Gasket	2	51	1
52−5561−03	Handle − Right	6	1	1
52−5571−03	Handle − Left	7	15	1
52−5590	Link − Upper	6	2	1
52−5590	Link − Upper	7	2	1
52−5600	Pin − Control Lever	7	8	1
52−5600	Pin − Control Lever	6	24	1
53−7570	Spring − Auger Disengage	3	10	1
53−7670	Decal − Auger Warning	1	3	1
55−8950	Plate − Friction	1	12	2
56−2670	Chute − Wire	1	20	1
56−2680	Deflector	1	18	1
63−3450	Bearing − Ball	1	7	1
63−3510	Decal − Chute Direction	7	20	1
63−3640	Handle − Control	7	12	1
63−3640	Handle − Control	6	21	1
66−6790	Mount − Clutch Rod Front	4	7	1
66−8060	Molded Brake Asm.	3	4	1
74−1350	Shaft − Axle	4	22	1
74−1360	Grip − Handle	7	14	1
74−1360	Grip − Handle	6	22	1
74−1370	Engine Pulley	3	3	1
74−1490	Rod − Speed Selector	6	3	1
88−0550−03	Frame − Friction Plate	4	5	1
88−0560	Hub − Frame	4	9	1
88−0850	Pulley & Shaft	4	1	1
94−2558	Decal − Discharge	2	*	1
94−2792	Chute − Discharge	2	*	1
94−2793	Chute − Discharge	1	21	1
94−8079	Decal − Discharge	2	22	1
94−8097	Decal − Escutcheon	6	11	1
94−8892−01	Blade − Scraper	2	36	1
99−3214	Decal − Escutcheon Back	7	5	1
99−3215	Decal − Escutcheon Back	7	*	1
99−5961	Panel − Escutcheon Ass'y	6	10	1
99−5962	Panel − Escutcheon Ass'y	6	10	1
127−19	Guard − Muffler	3	33	1
231−120	Tire	4	18	2
232−46	Tube	4	21	2
233−21	Knob	6	16	1
237−87	Seal	2	58	1
241−131	Rim	4	20	2
252−71	Bearing − Thrust	2	42	2
252−76	Bearing − Needle, Thrust	2	45	1
252−80	Washer − Thrust	4	3	1
252−80	Washer − Thrust	2	50	1
256−32	Bushing	2	49	1
256−86	Bushing	5	3	1
256−237	Bushing	2	53	2
256−249	Nyliner	7	22	1
256−322	Bushing	4	6	1
257−3	Washer − Thrust	2	44	1
281−1	Pipe − Plug	2	41	1
283−3	Pin − Clevis	6	5	1
288−2	Cap	3	21	1
289−9	Pipe Nipple	3	20	1
321−4	Screw − Hex. Hd.	5	16	1
321−9	Screw − Hex. Head	7	16	4
321−10	Screw	2	38	2
322−2	Screw − Hex. Hd.	5	7	4
322−2	Screw − Hex. Hd.	4	26	6
322−2	Screw − Hex. Hd.	7	26	4
322−4	Screw	3	24	4
322−7	Screw	6	26	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
322−7	Screw − Hex. Hd.	7	23	1
323−29	Screw	3	12	1
3210−3	Screw	3	27	1
3218−1	Nut − Jam	6	7	1
3229−11	Bolt − Carriage	6	15	2
3230−1	Bolt − Carriage	2	60	9
3230−18	Bolt − Carriage	1	5	6
3230−22	Bolt − Carriage	1	19	2
3230−22	Bolt − Carriage	7	29	1
3234−13	Screw − Hex. Flange Hd.	7	13	1
3234−13	Screw − Hex. Flange Hd.	6	18	1
3242−4	Screw − Set	1	17	2
3253−17	Washer − Lock	3	31	3
3255−8	Washer −Lock Ext. Tooth	3	26	1
3256−23	Washer	6	9	4
3256−23	Washer	7	10	1
3256−23	Washer	2	23	3
3256−23	Washer − Flat	3	23	5
3256−24	Washer	7	11	1
3256−24	Washer	6	20	1
3256−24	Washer − Flat	3	8	1
3256−49	Washer − Flat	3	32	3
3256−68	Washer − Flat	1	11	2
3257−23	Key	1	15	1
3257−23	Key − Woodruff	2	59	1
3257−24	Key	5	23	1
3257−33	Key − Woodruff	2	39	1
3272−4	Pin − Cotter	6	4	3
3290−196	Retainer − Nut	7	28	4
3290−238	Washer − Pyramidal	7	30	1
3290−243	Pin − Klik	4	19	2
3290−320	Nut − Push	7	18	2
3290−320	Nut − Push On	3	7	1
3290−326	Pushnut	2	29	1
3290−378	Cable Tie	6	*	1
3290−456	Washer − Belleville	1	10	2
3290−456	Washer − Belleville	7	27	4
3296−16	Nut − Lock	5	12	1
3296−29	Nut − Lock	5	11	1
3296−29	Nut − Lock	4	15	6
3296−29	Nut − Lock	3	22	4
3296−29	Nut − Lock	7	24	2
3296−29	Nut − Lock	1	9	13
3296−42	Nut − Lock	7	17	2
3296−42	Nut − Lock	5	33	1
3296−42	Nut − Lock	2	37	2
3296−48	Nut − Lock	5	20	1
3296−56	Nut − Lock	3	9	1
3296−59	Nut − Lock	3	5	1
32115−5	Retainer − Nut	6	8	1
32120−72	Ring − Retaining	2	48	1
32121−31	Pin − Roll	4	24	2
32121−45	Pin − Roll	5	22	2
32128−13	Nut − Flange Lock	6	12	1
32128−20	Nut − Flange	2	32	4
32128−32	Nut − Flange	5	29	1
32128−33	Nut − Flange	5	26	2
32128−33	Nut − Flange Lock	6	27	2
32144−4	Screw − Self Tap.	3	19	2
32144−4	Screw − Self Tap. Hex. Hd.	4	16	6
32144−41	Screw − Self Tap.	2	56	8
32144−70	Screw − Self Tap. Hex. Hd.	5	1	4
32144−70	Screw − Self Tap. Hex. Hd.	4	8	5
32144−70	Screw − Self Tapping	2	26	4
32151−36	Ring − Retaining	2	33	2
32151−61	Ring − Retaining	5	35	1
32151−73	Ring − Clip	6	19	1
32151−73	Ring − Clip	7	33	1
32151−103	Ring − Snap	4	2	1

OPTIONAL EQUIPMENT

110 Vac Electric Starter Kit	38037
Tire Chain Kit	56−2700
Drift Breaker Kit	37−7022
Snow Cab	88−0600

*Not Illustrated