Form No. 3421-198 Rev A

TORO®

Count on it.

Parts Catalog

PT-46 Power Trowel

Model No. 68050—Serial No. 402000000 and Up

Register at www.Toro.com.
Original Instructions (EN)

3421-198 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.


For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

46 Inch Rotating Ring, Blade and Gearbox Assembly 4
Gearbox Assembly No. 125-4991 5
46 Inch Standard Handle and Guard Assembly 6
Standard Handle Assembly No. 125-4999 7
Engine Assembly 8

© 2018—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420


Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

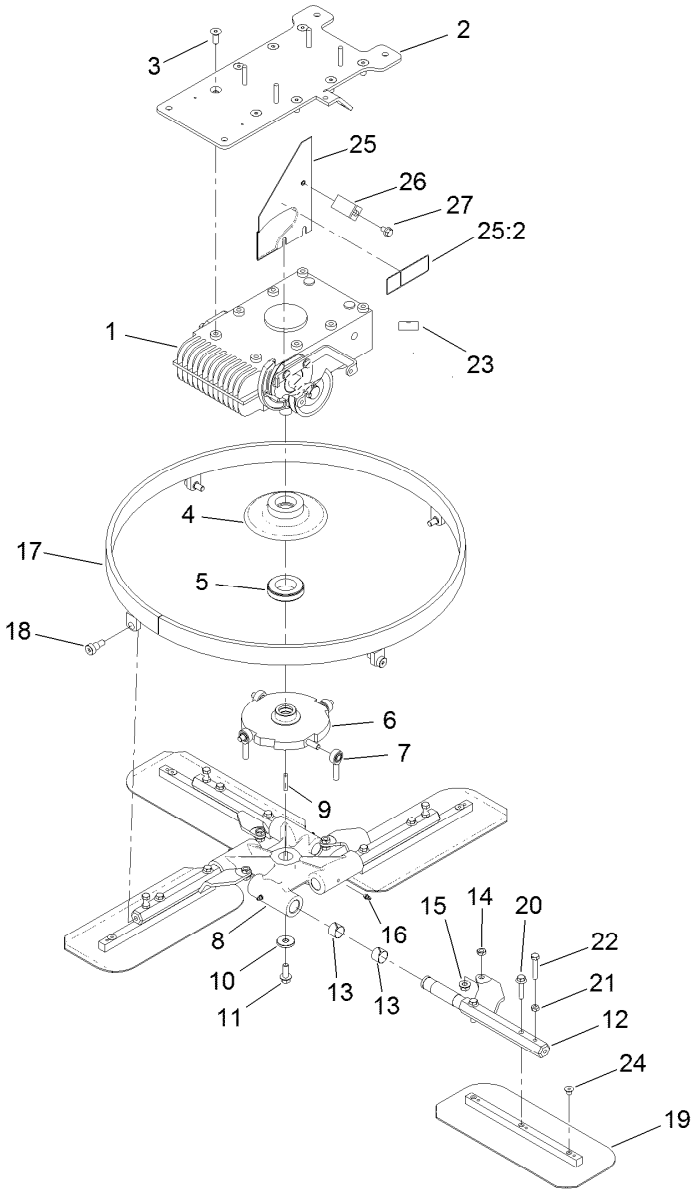

46 Inch Rotating Ring, Blade and Gearbox Assembly


Ref.	*Part Number*	*Qty.*	*Description*
1	125-4991	1	Gearbox ASM
2	125-6248	1	Engine Base Assembly
3	ST80068	8	Screw
4	ST22200-01	1	Cover-Plate, Thrust
5	ST32123	1	Bearing-Ball
6	ST21684	1	Plate-Tilt
7	2411-36	4	Bearing-End, Rod
8	ST28283	1	Spider-4 Arm
9	79-3370	1	Key
10	ST28435	1	Washer-Flat
11	3234-42	1	Screw-HHF
12	ST22184-03	4	Arm
13	ST32180	8	Bushing-Sleeve, Nylon
14	3220-3	4	Nut-HJ

Ref.	*Part Number*	*Qty.*	*Description*
15	127-6852	4	Nut-Flange, Lock
16	ST46042	4	Fitting-Grease
17	ST22172-01	1	Rotating-Ring
18	ST80066	4	Screw-HSBH
19	125-4996	4	Blade-Combination
20	115-1794	8	Screw-HHF
21	3218-2	4	Nut-Jam
22	322-41	4	Screw-HH
23	ST28022	1	Rod-Pivot, Cable
24	ST47183	4	Carplug-Red
25	127-2802	1	Rear Belt Guard ASM
25:2	117-4979	1	Decal-Warning, Shields
26	ST28431-01	1	Guide-Belt
27	100-1719	1	Screw-Flange

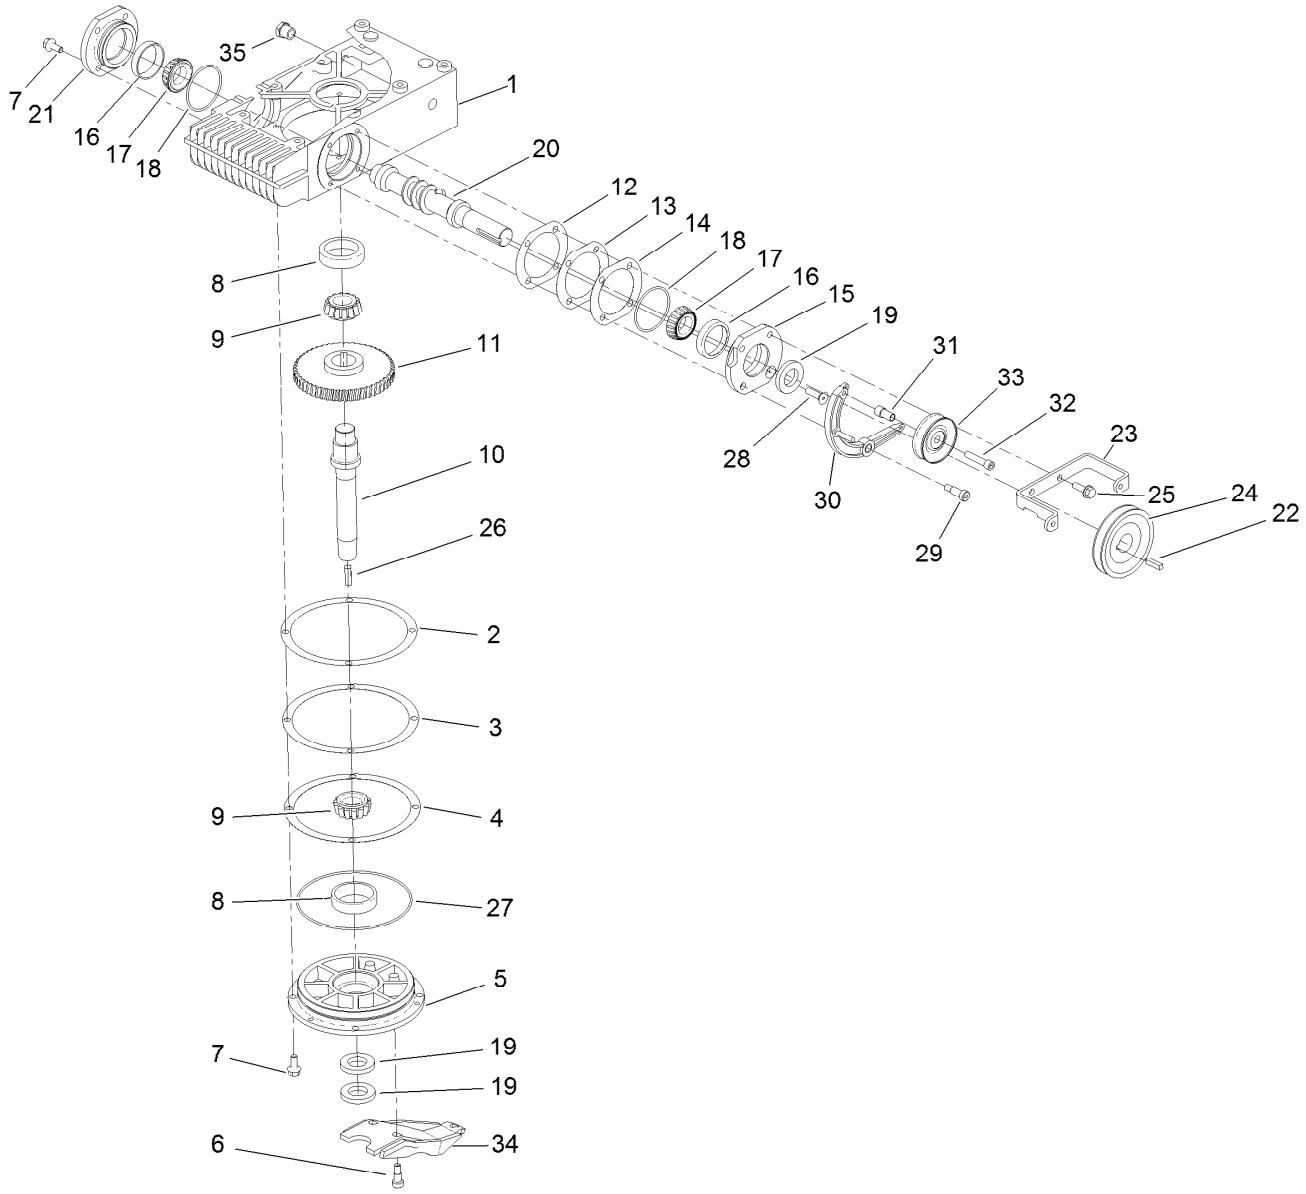


Gearbox Assembly No. 125-4991

Ref.	*Part Number*	*Qty.*	*Description*
1	ST39547	1	Gearcase
2	ST47333	3	Shim-Cover, Bottom (.001 Inch)
3	ST47334	1	Shim-Cover, Bottom (.005 Inch)
4	ST47335	5	Shim-Cover, Bottom (.010 Inch)
5	ST42720	1	Cap-Bearing, Bottom
6	ST80285	2	Screw-HSBH
7	3234-47	8	Screw-HHF
8	127-5561	2	Bearing-Cup
9	127-5560	2	Bearing-Cone
10	ST42715	1	Shaft-Output
11	ST39009	1	Gear-Worm
12	ST47336	3	Shim-Cover, Side (.001 Inch)
13	ST47337	1	Shim-Cover, Side (.005 Inch)
14	ST47338	5	Shim-Cover, Side (.010 Inch)
15	ST42718	1	Cover-Bearing, Sheave End
16	254-72	2	Bearing-Cup, Tapered
17	254-94	2	Bearing-Cone, Tapered
18	400-0261	2	O-Ring
19	ST39014	3	Seal-Shaft
20	ST42712	1	Shaft-Input
21	ST42719	1	Cover-Bearing, Blind End
22	5-7280	1	Key
23	ST42787-01	1	Bracket-Guard, Belt
24	ST34835	1	Sheave
25	3234-17	2	Screw-HHF
26	ST80744	1	Key-Hardened
27	ST32272	1	O-Ring
28	ST80105	1	Screw
29	119-6915	1	Screw-Shoulder, HSH
30	127-1662	1	Clutch Lever ASM
31	127-7628	1	Spacer-Idler, Trowel
32	3274-83	1	Screw-HSH
33	127-7629	1	Idler-V, Trowel
34	125-8707-01	1	Lever-Tilt
35	ST34096	1	Plug-Sight, Oil

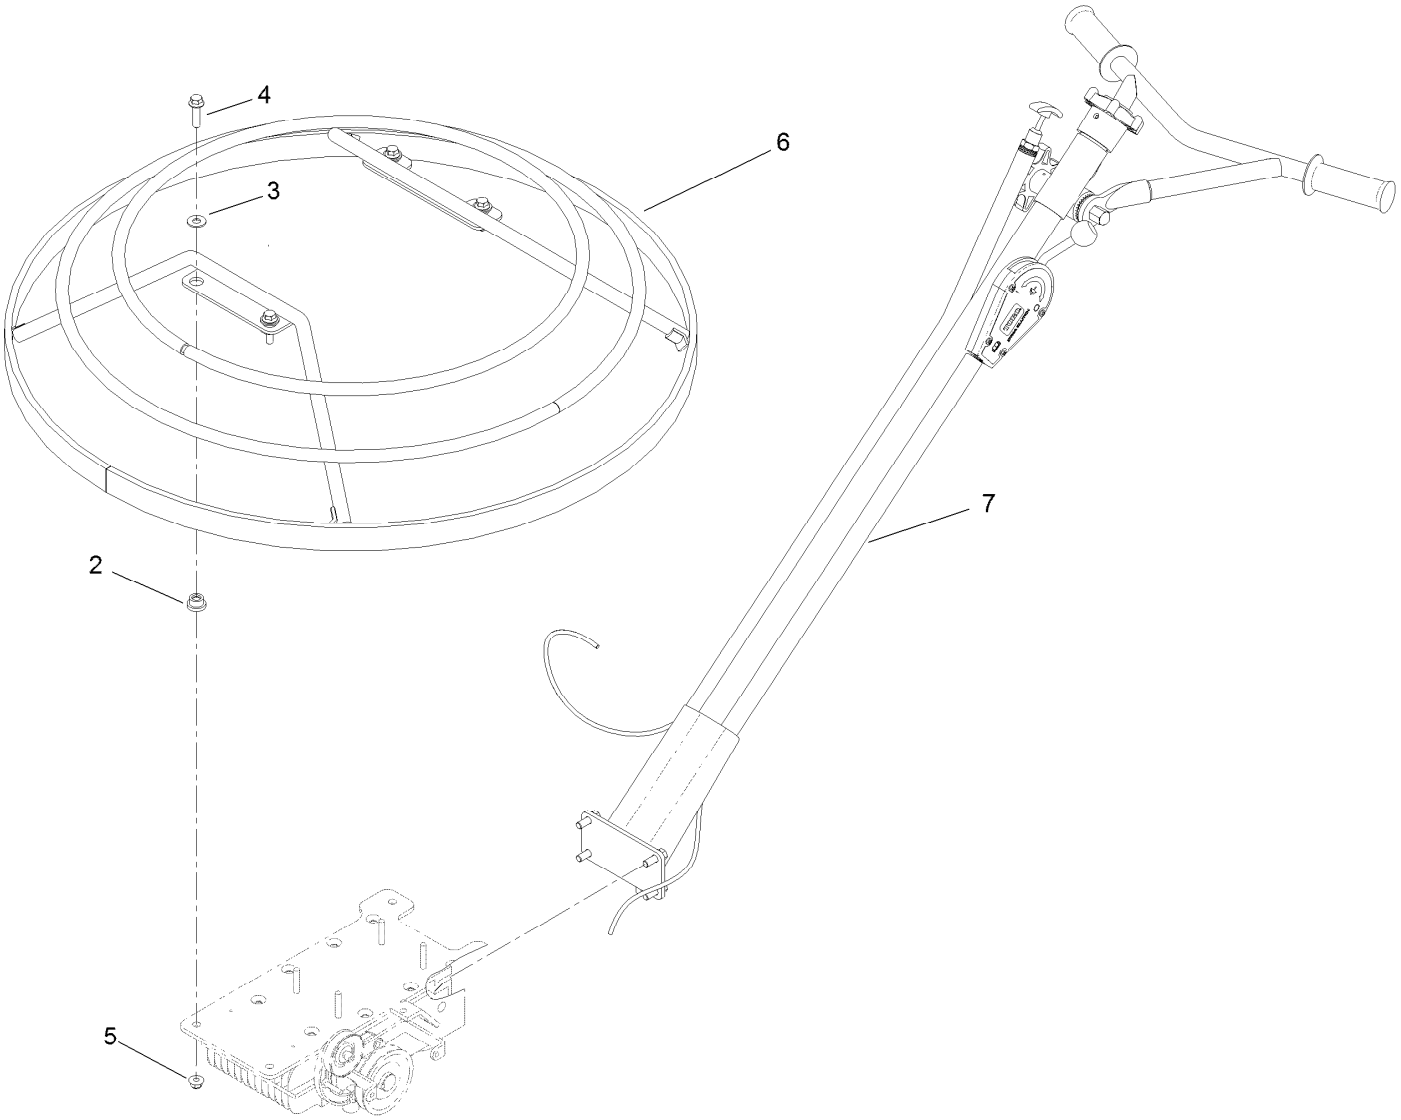


46 Inch Standard Handle and Guard Assembly

Ref.	*Part Number*	*Qty.*	*Description*
2	ST47355	4	Mount-Shock
3	3256-4	4	Washer-Flat
4	114-4681	4	Screw-HHF
5	104-8301	4	Nut-HF, NI
6	127-2804-01	1	Guard-Stationary
7	125-4999	1	Handle-Standard

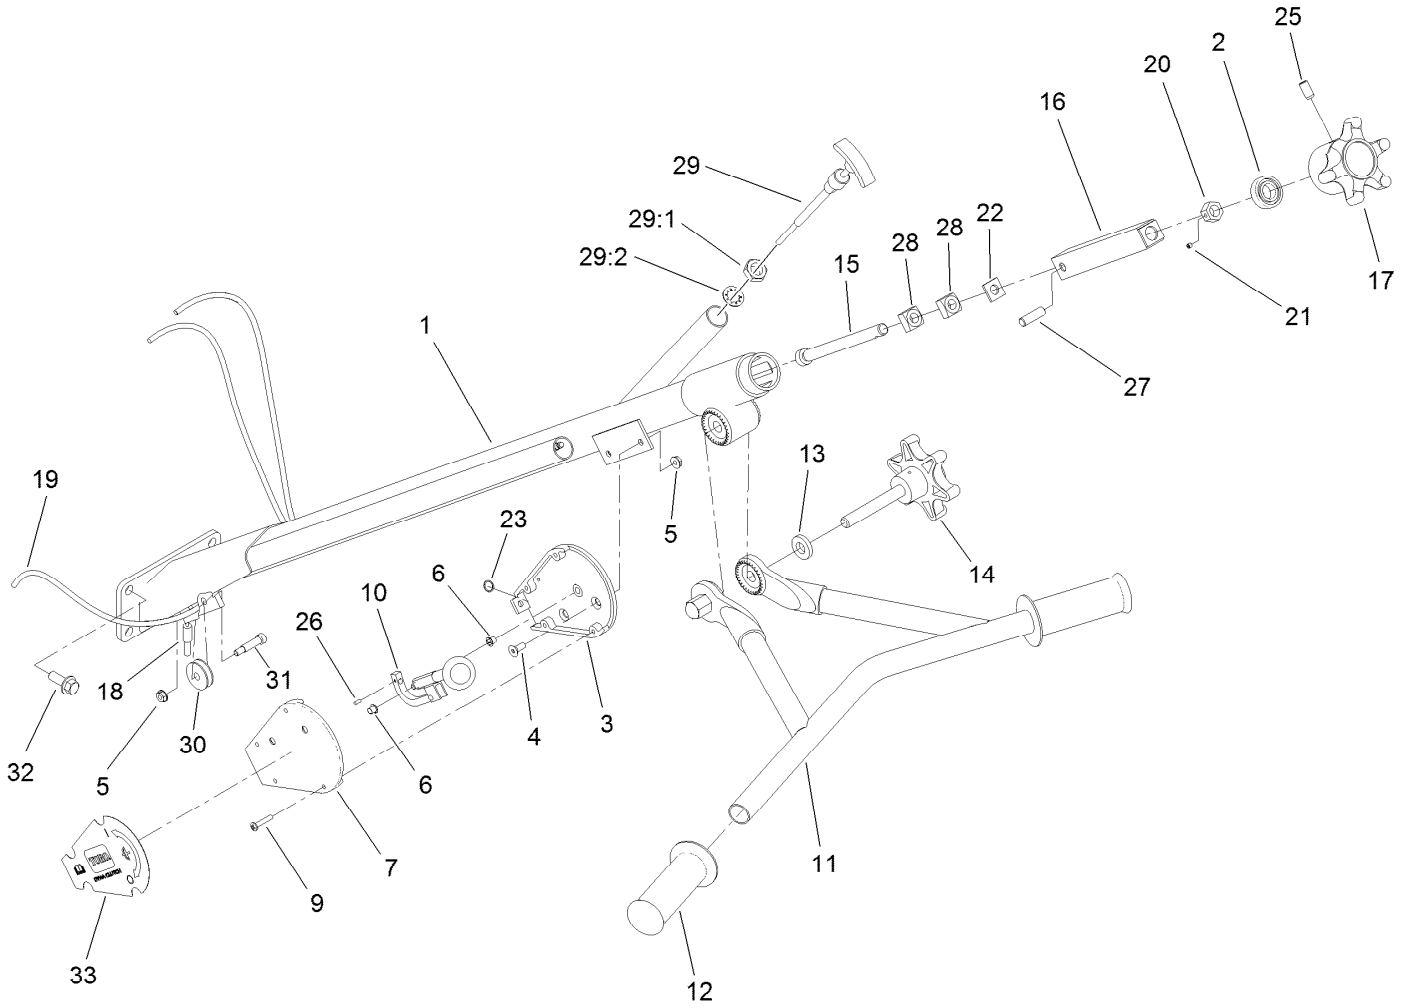

Standard Handle Assembly No. 125-4999

Ref.	Part Number	Qty.	Description
1	ST22169-01	1	Handle-Main
2	ST32118	1	Bearing-Ball
3	ST27353	1	Housing-Clutch
4	3274-47	2	Screw-HSFH
5	32149-2	3	Nut-Keps
6	ST32117	2	Bushing-Flange
7	ST27355	1	Cover-Clutch
9	ST80070	4	Screw-PPH
10	ST21977	1	Lever ASM
11	127-2809-01	1	Handle-Adjustable
12	ST47125	2	Grip-Handle
13	ST80125	1	Washer-Flat
14	ST21844	1	Knob-Adjustment
15	ST22239	1	Rod-Tilt
16	ST22244-01	1	Block-Tilt
17	ST27360	1	Handle-Tilt, Blade
18	ST34795	1	Cable-Tilt
19	ST35202	1	Clutch Cable ASM
20	ST42530	1	Nut-Lock, Tilt
21	ST81156	1	Screw-HSH, Set
22	ST47185	1	Washer-Square
23	ST80069	1	Ring-External
25	ST80261	1	Screw-HSH, Set
26	ST80305	1	Pin
27	ST80321	1	Pin
28	3290-510	2	Nut-Square
29	ST35346	1	Cable ASM
29:1	127-5558	1	Nut-Jam
29:2	127-5559	1	Washer-Lock
30	ST36767	1	Pulley-Pivot
31	ST80275	1	Screw-HSBH
32	3234-42	4	Screw-HHF
33	125-4934	1	Decal

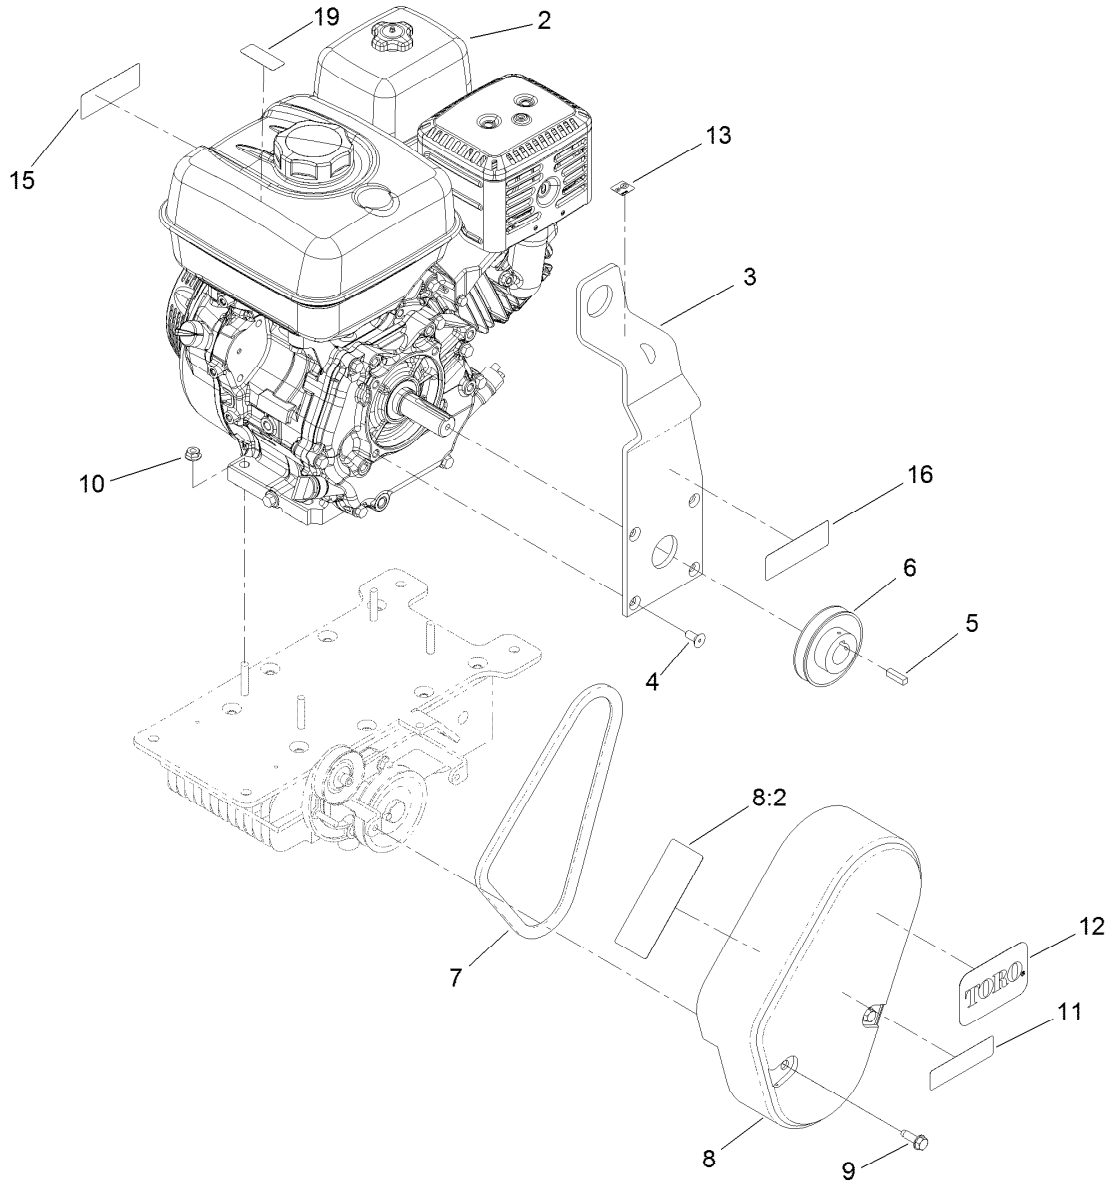

Engine Assembly

Ref.	Part Number	Qty.	Description
2	125-4814	1	Engine-Honda, Gx240 ●
3	127-5586	1	Plate-Eye, Lift
3	ST28683-01	1	Eye-Lift
4	ST80171	4	Screw
5	ST80674	1	Key-Square
6	ST34834	1	Sheave
7	ST35333	1	Belt-V
8	127-2801	1	Belt Guard ASM
8:2	125-4933	1	Decal-Warning

Ref.	Part Number	Qty.	Description
9	701243	2	Screw-Thd Roll, HWH
10	32128-26	4	Nut-Flange
11	125-4932	1	Decal
12	105-6971	1	Decal
13	93-9084	1	Decal-Point, Lift
15	133-5619	1	Decal-Arrester, Spark
16	117-4979	1	Decal-Warning, Shields
19	130-8322	1	Decal-Warning, Ethanol

● Obtain parts from www.honda-engines.com

Notes:

Notes:

Notes:



Count on it.