FORM NO. 3322–187


TORO®

MODEL NO. 30165–990001 & UP

PARTS CATALOG

ProLine MID SIZE TRACTION UNIT

12.5 HP Kawasaki Gear Drive

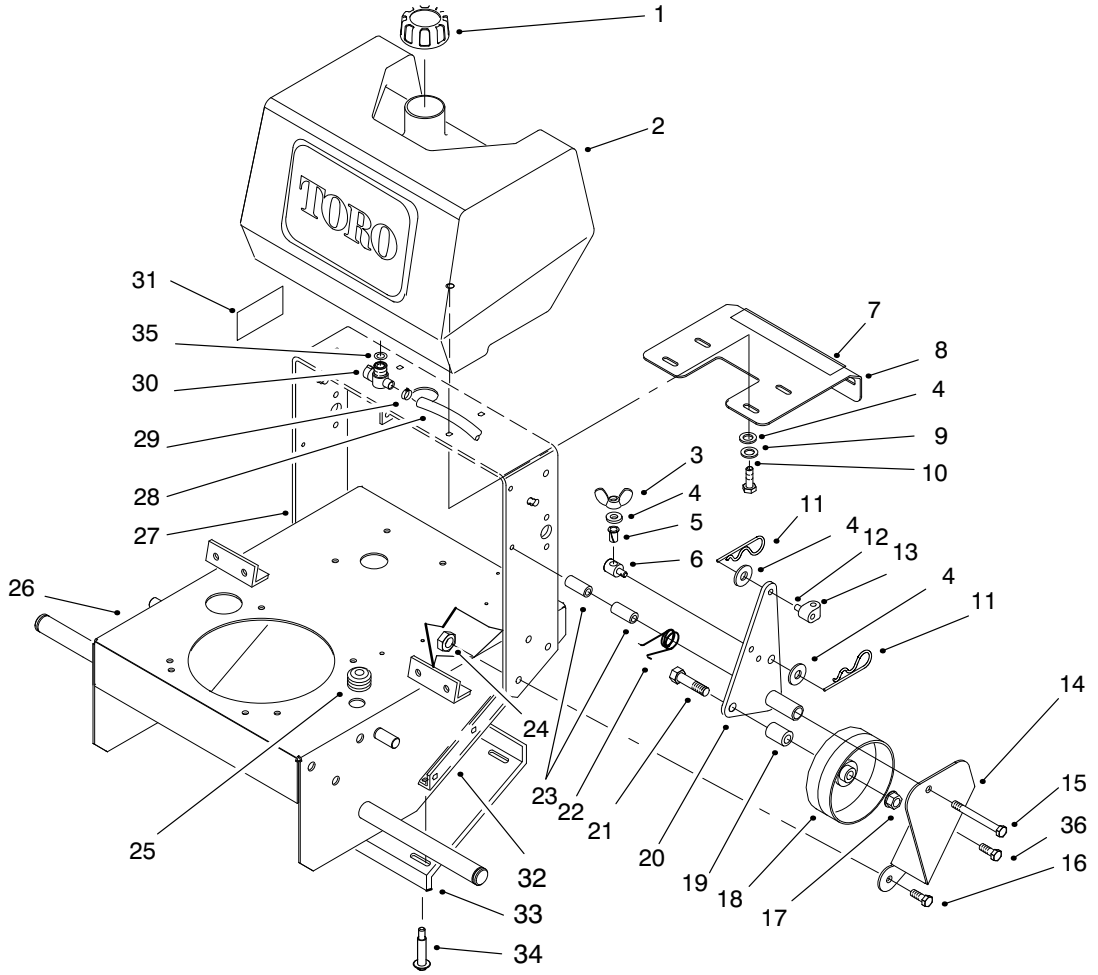

C–2151


FRAME, FUEL TANK AND WHEEL DRIVE IDLER

Ref. No.	Part No.	Description	No. Used
1	55–3570	Fuel Tank	1
2	95–2802	Tank – Fuel	1
3	32103–25	Nut – Wing	2
4	3256–23	Washer – Flat	9
5	52–2890	Bushing	2
6	68–9690	Fitting – Rod	2
7	93–7297	Decal – Ground Speed	1
8	66–7400	Plate – Control	1
9	3253–4	Washer – Lock	4
10	322–4	Screw – Hex. Hd.	4
11	3290–307	Pin – Cotter	4
12	283–6	Pin – Clevis	2
13	74–0521	Fitting – Rod	2
14	67–6380	Bracket – Support L.H.	1
*	67–6370	Bracket – Support R.H.	1
15	323–16	Screw – Hex. Hd.	2
16	323–7	Screw – Hex. Hd.	4
17	3296–23	Nut – Lock	2
18	51–4480	Idler – Wheel	2
19	51–4490	Spacer – Idler Wheel	2

Ref. No.	Part No.	Description	No. Used
20	74–0220	Idler – Bracket L.H.	1
*	74–0230	Idler – Bracket R.H.	1
21	51–4450	Screw – Leveler	2
22	51–4380	Spring – Torsion L.H.	1
*	51–4370	Spring – Torsion R.H.	1
23	74–0040	Spacer – Pivot Idler	4
24	3296–39	Nut – Lock	6
25	237–124	Grommet	1
26	93–7438	Frame	1
27	74–0360	Frame – Rear	1
28	47–2982	Hose – Fuel	1
29	2412–98	Clamp – Fuel line	1
30	74–0510	Valve – Fuel	1
31	93–9353	Decal – Fuel Shut Off	1
32	93–7436	Mount – Angle	2
33	93–7437	Panel – Bottom	1
34	12–3270	Screw – Hex. Hd.	4
35	237–7	"O"Ring	1
36	323–8	Screw – Hex. Hd.	2

*Not Illustrated

© The TORO Company –1998
All Rights Reserved

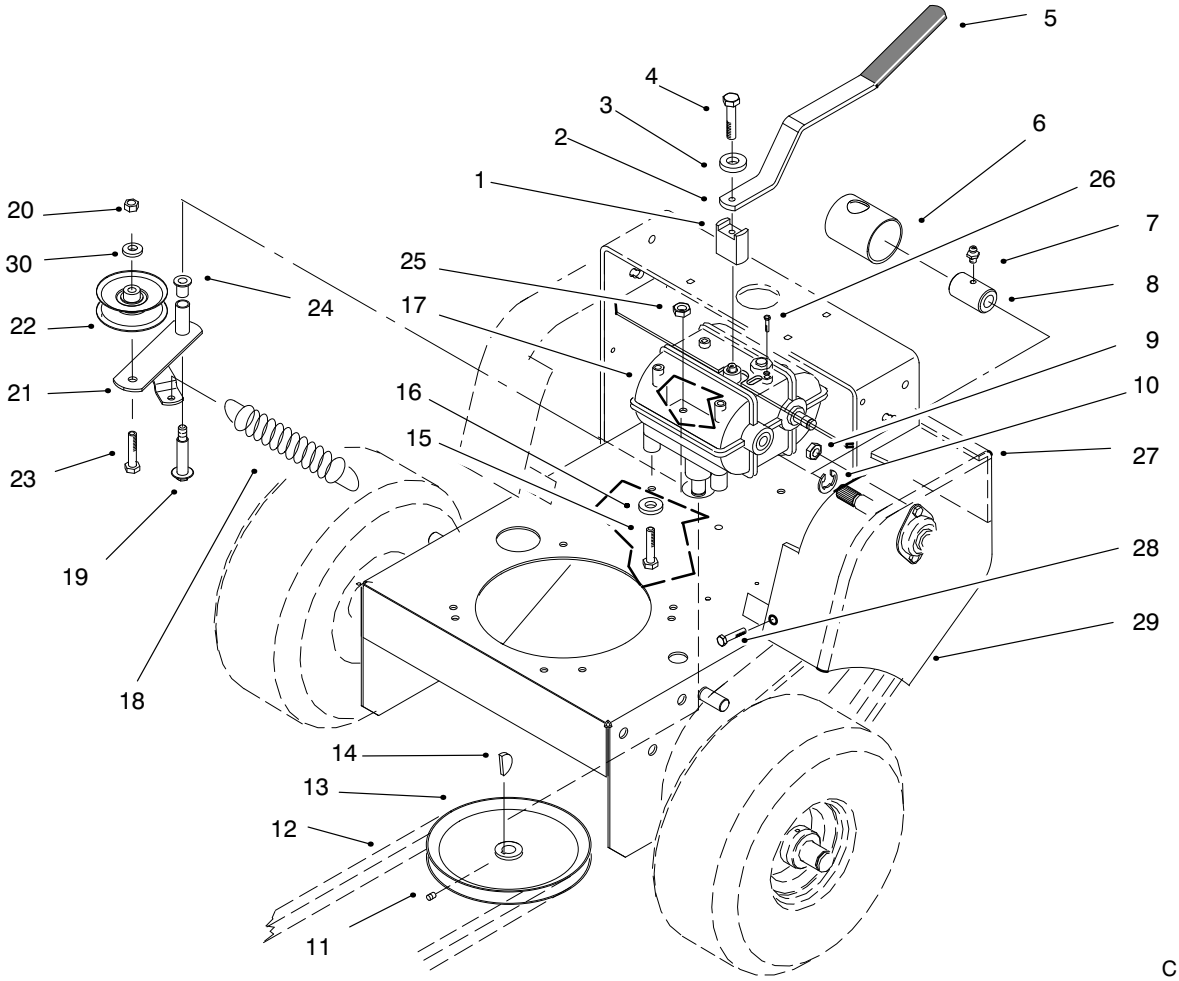


C−2152

TRANSMISSION, IDLER, DRIVE PULLEYS & DRIVE BELT

Ref. No.	Part No.	Description	No. Used
1	72−2190	Mount − Shift Lever	1
2	74−0320	Lever − Shift	1
3	7−5461	Spacer	1
4	329−10	Screw − Hex. Hd.	1
5	47−1970	Grip − Engagement	1
6	51−4220	Guard − Coupler	2
7	302−5	Fitting − Grease	2
8	98−0789	Coupler	1
9	3296−42	Nut − Lock	4
10	32120−64	Ring − Retaining	3
11	3245−1	Screw − Socket Hd.	1
12	26−9671	Belt − Traction	1
13	51−4190	Pulley − Driven	1
14	3257−5	Key − Woodruff	3
15	322−2	Screw −Hex. Hd.	4
16	3253−4	Washer − Lock	4

Ref. No.	Part No.	Description	No. Used
17	98−0791	Transmission	1
18	68−2190	Spring − Extension	18
19	27−6230	Bolt	1
20	3296−39	Nut − Lock	1
21	82−4800	Lever − Idler (Incl. Ref.#24)	1
22	62−4540	Pulley − Idler	1
23	323−8	Screw − Hex. Hd.	1
24	256−155	Bushing	2
25	3296−6	Nut	1
26	32144−14	Screw − Hex. Hd.	2
27	93−7431	Guard − Transmission Shaft	1
28	12−3270	Screw − Hex. Hd.	6
29	93−7434	Guard − Belt, L.H.	1
*	93−7433	Guard − Belt, R.H.	1
30	3256−24	Washer	1

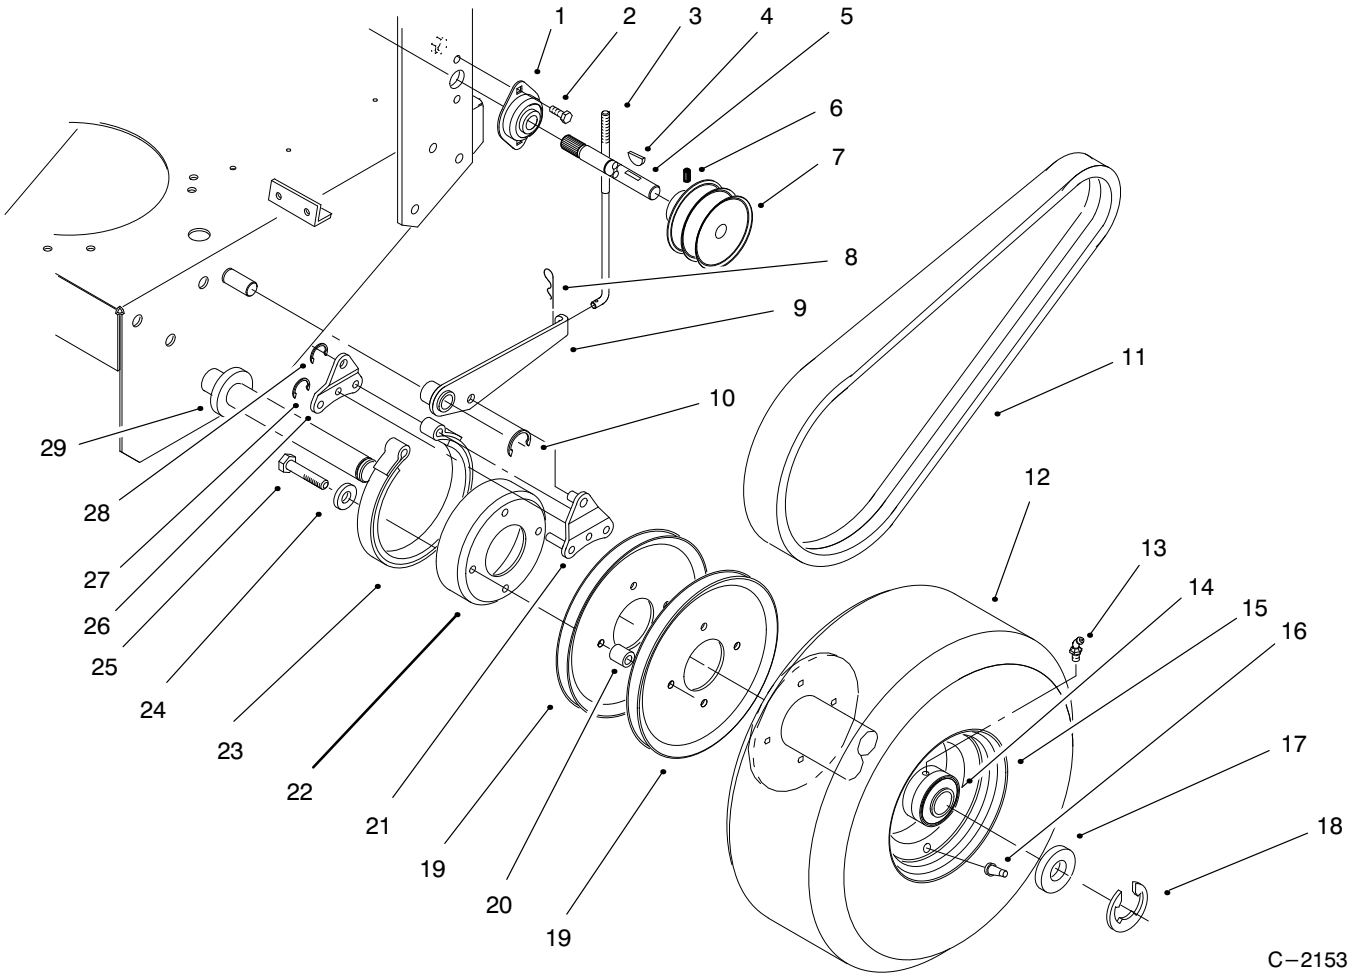


AXLE, BRAKE, WHEEL DRIVE AND BELTS

Ref. No.	Part No.	Description	No. Used
1	51−4270	Bearing − Shaft Extension	2
2	321−4	Screw − Hex. Hd.	4
3	51−4580	Rod − Brake	2
4	3257−5	Key − Woodruff	3
5	98−0788	Shaft − Extension R.H.	1
*	98−0787	Shaft − Extension L.H.	1
6	3245−3	Screw − Socket Hd. Set	2
7	74−0480	Pulley − Drive	2
8	3290−307	Pin − Cotter	2
9	51−4610	Brake Arm L.H.	1
*	51−4600	Brake Arm R.H.	1
10	32151−40	Ring − Retaining	2
11	51−4290	Belt − Drive	2
12	231−111	Tire	2
13	302−11	Fitting − Grease	2
14	92−1746	Bearing	4

Ref. No.	Part No.	Description	No. Used
15	242−80	Rim	2
16	232−27	Valve Stem	2
17	10−8110	Washer − Flat	A/R
18	32151−91	Ring − Retaining	2
19	51−4160	Pulley − Wheel	4
20	51−4170	Spacer − Pulley	8
21	51−4650	Link − Brake	2
22	51−4180	Drum − Brake	2
23	51−4700	Brake Band Assembly	2
24	3253−4	Washer − Lock	8
25	322−7	Screw − Hex. Hd.	8
26	51−4660	Plate − Link Brake	2
27	32151−72	Ring − Retaining	4
28	32151−56	Ring − Retaining	2
29	51−4230	Washer − Wheel	2

*Not Illustrated

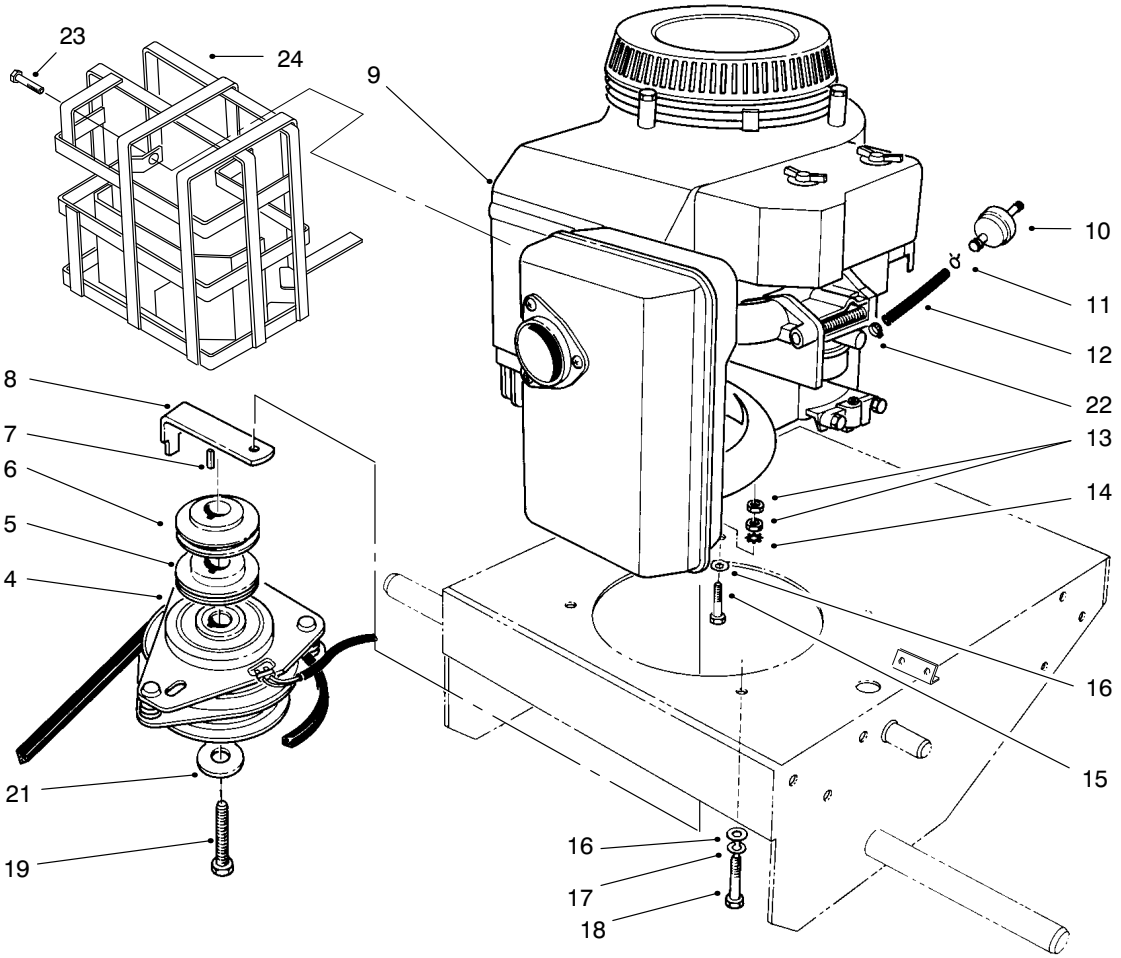


C−2099

ENGINE & CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
4	54−3200	Clutch Brake Assembly	1
5	74−0050	Sheave − Lower Half	1
6	74−0060	Sheave − Upper Half	1
7	92−5436	Key	1
8	51−4540	Retainer − Clutch	1
9		Engine − Kawasaki Model FB460V Type KS08	1
10	56−6360	Fuel − Filter	1
11	2412−98	Clamp − Fuel Line	2
12	47−2982	Hose − Gas	1
13	57−6390	Nut	2
14	3255−8	Washer − External Tooth	1
15	57−6370	Screw − Hex. Hd.	1

Ref. No.	Part No.	Description	No. Used
16	3256−23	Washer − Flat	3
17	3253−4	Washer − Lock	3
18	57−6380	Screw − Hex. Hd.	3
19	57−6360	Screw − Hex. Hd.	1
21	112843	Washer − Clutch	1
22	2412−108	Clamp − Hose	1
23		Screw − Hex. Hd. (Engine)	
24	94−1295	Guard − Muffler Asm.	1
*	54−2750	V−Belt − Deck Drive (36” & 44” Cutting Units)	1
*	55−7660	V−Belt − Deck Drive (52” Cutting Unit)	1

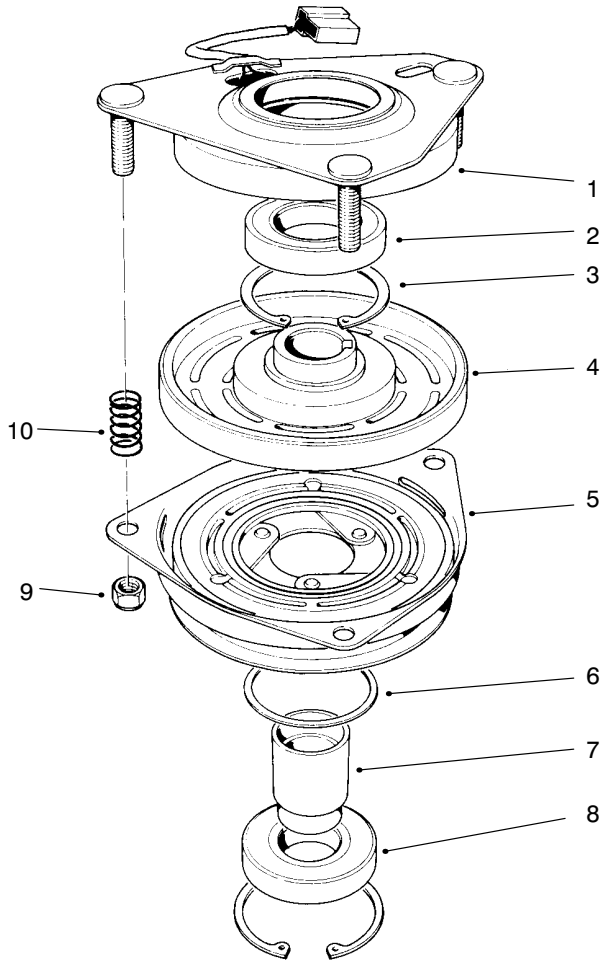


T−0080

CLUTCH ASSEMBLY NO. 54−3200

Ref. No.	Part No.	Description	No. Used
1	54−0230	Field Assembly (Incl. Ref. # 2 & 3)	1
2	251−292	Bearing − Field	1
3	44−8310	Ring − Retaining	2
4	44−8360	Field Coil, Rotor & Bearing Assembly (Incl. Ref. # 1)	1
5	55−7410	Armature & Pulley Assembly (Incl. Ref. # 3, 6, 7, & 8)	1

Ref. No.	Part No.	Description	No. Used
6	44−8330	Spacer − Pulley Bearing	1
7	44−8340	Collar − Bearing	1
8	251−291	Bearing − Pulley	1
9	3296−5	Nut − Lock	3
10	44−8320	Spring	3

3322−187

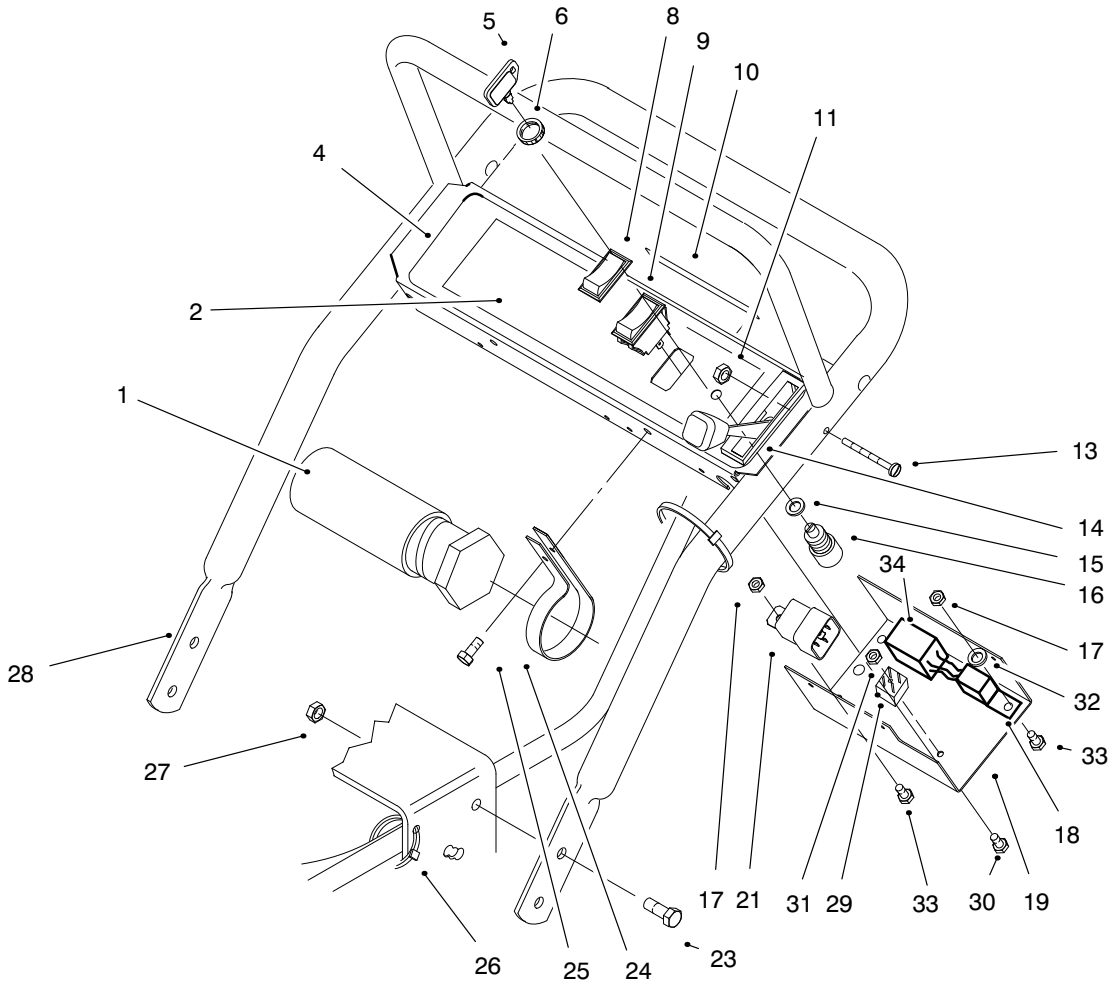


C−2155

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	74−0720	Tube − Manual	1
2	93−7295	Decal − Proline	1
4	82−2180	Panel − Control	1
5	63−8360	Key	2
6	218−461	Nut	1
8	82−3820	Boot	1
9	82−2300	Switch − Clutch (Incl. Ref.#8)	1
10	93−6657	Decal − Danger	1
11	3296−2	Nut − Lock	4
13	32105−14	Screw − Hex. Hd. Machine	4
14	74−0740	Control − Throttle	1
15	3254−5	Washer − Lock	1
16	29−5560	Switch − Ignition (Incl. Ref. #5,6, &15)	1
17	3296−42	Nut − Hex	3

Ref. No.	Part No.	Description	No. Used
18	86−7910	Module − Interlock	1
19	57−5811	Panel − Bottom	1
21	63−7590	Relay	1
23	3234−11	Screw − Hex. Hd.	4
24	2412−120	”R”Clamp	2
25	32144−19	Screw − Self Tapping	4
26	3290−378	Cable Tie	3
27	32128−21	Nut − Lock	4
28	67−6440	Handle − Upper	1
29	37−7600	Bridge − Rectifier	1
30	32105−13	Screw	1
31	3296−2	Nut	1
32	3255−7	Washer	1
33	321−2	Screw	2
34	94−5818	Module	1

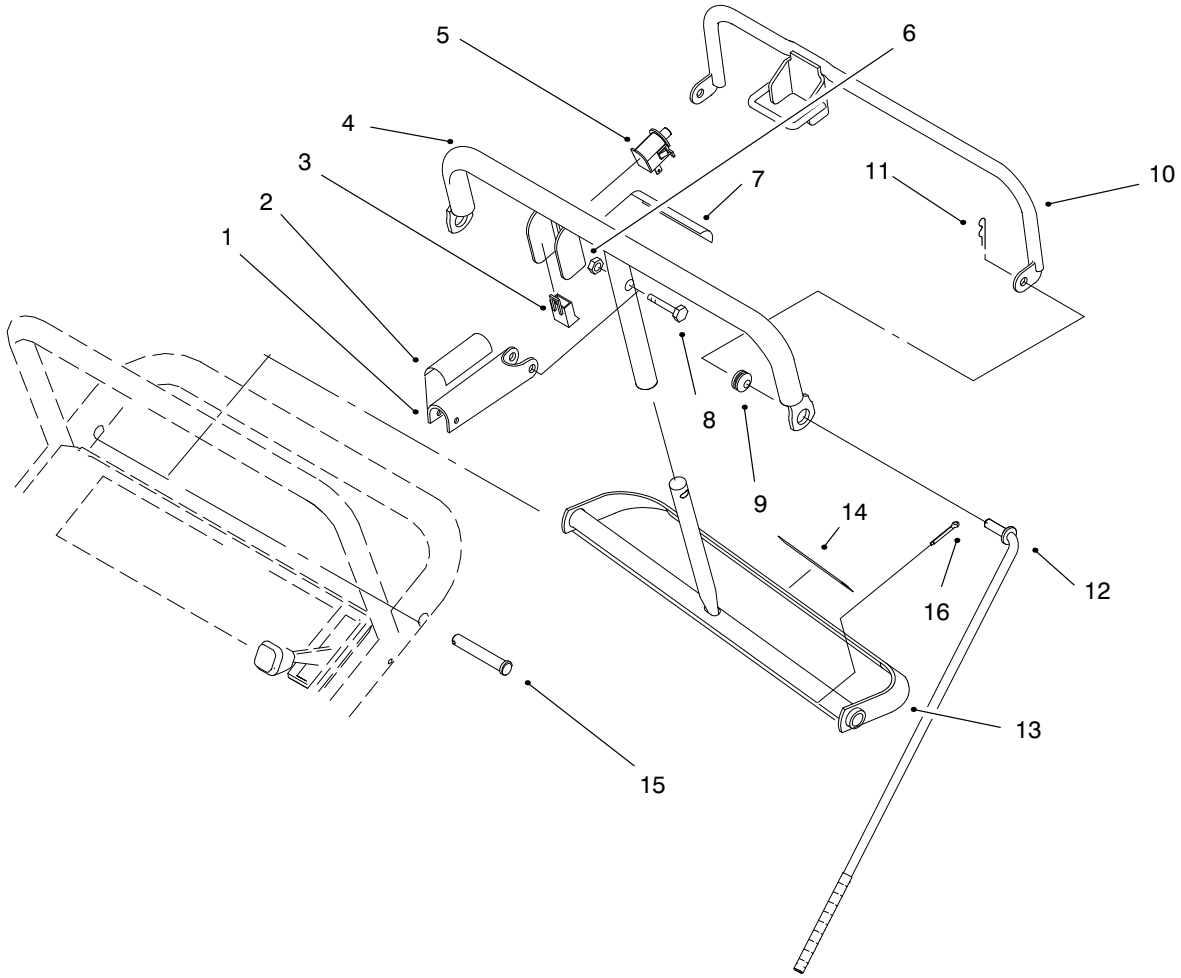


C−2156

HANDLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
1	51−4850	Lever − Parking Brake	1
2	93−7442	Decal − Parking Brake	1
3	218−595	Connector − Body	1
4	82−7690	Bar − Control	1
5	82−2190	Switch − Bail	1
6	3296−2	Nut − Lock	5
7	93−7298	Decal − Control Bar	1
8	32105−1	Screw − Hex. Hd. Machine	1


Ref. No.	Part No.	Description	No. Used
9	237−141	Grommet − Rubber	2
10	82−7680	Bail Assembly	1
11	3290−307	Pin − Cotter	2
12	82−7631	Rod − Control	2
13	99−8501	Control − Pivot	1
14	93−7299	Decal − Reverse Handle	1
15	283−55	Pin − Clevis	1
16	3272−11	Pin − Cotter	2

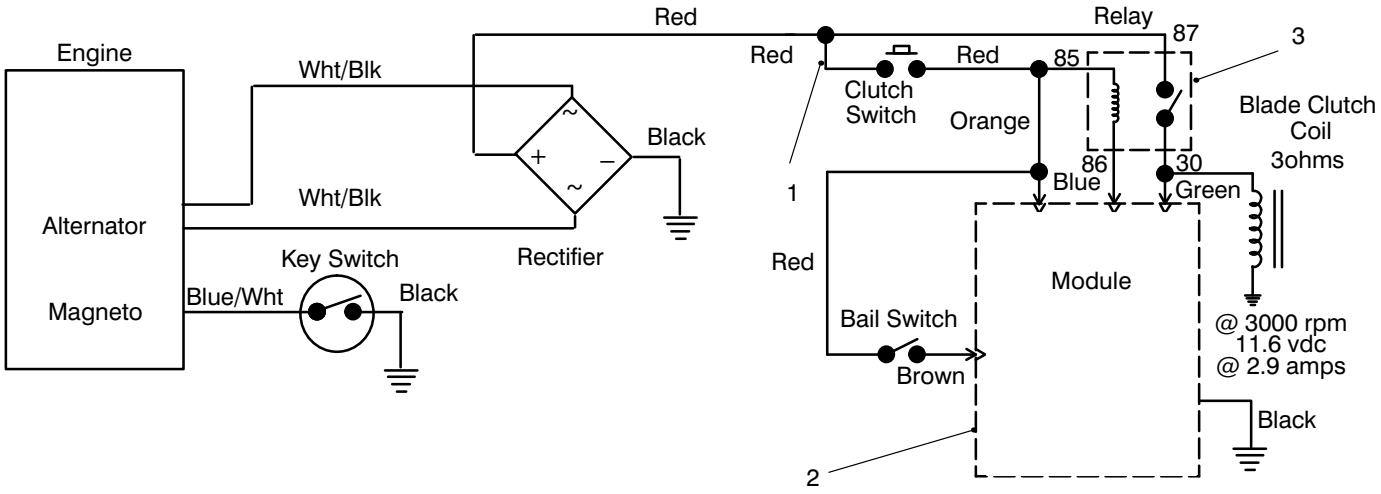

ELECTRIC SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	82−2240	Wire Harness	1
2	86−7910	Module − Interlock	1

Ref. No.	Part No.	Description	No. Used
3	63−7590	Relay	1

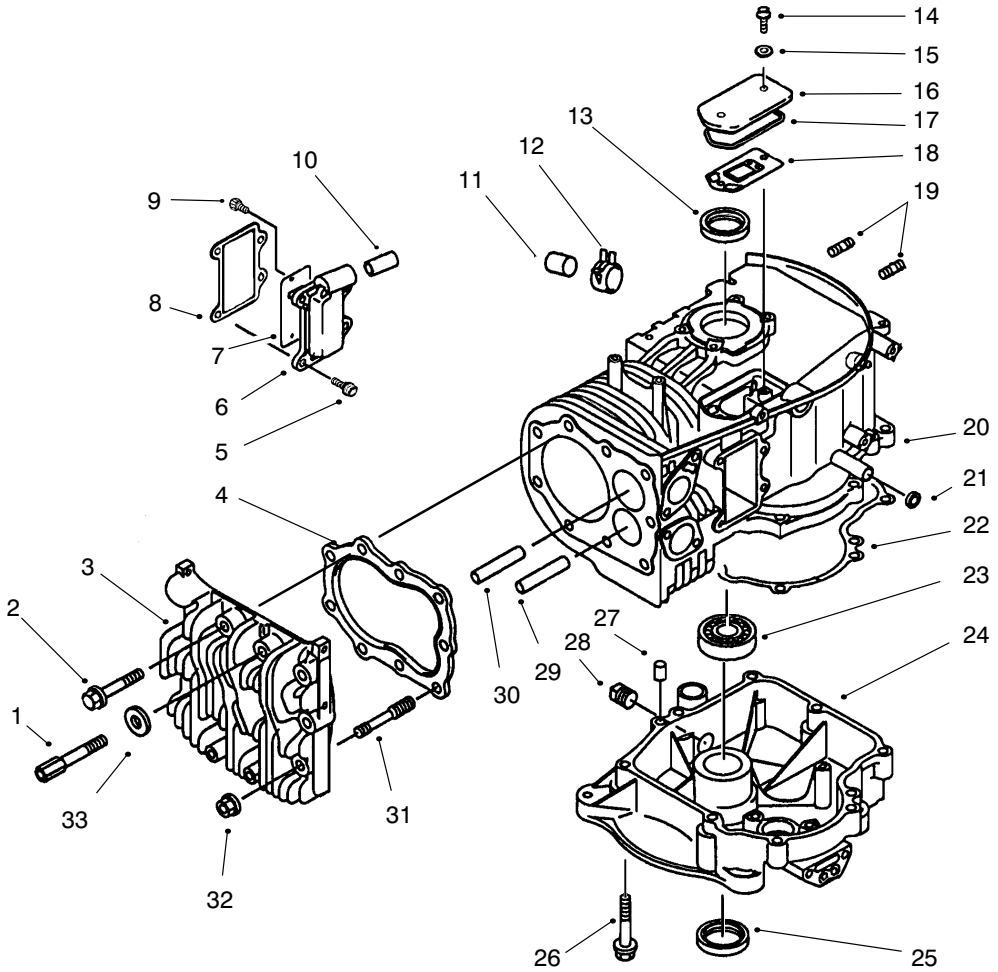


CRANKCASE

Ref. No.	Part No.	Description	No. Used
1	92002−2258	Bolt	2
2	130G1055	Bolt − Flanged	4
3	11001−2151	Head − Cylinder	1
4	11004−2091	Gasket − Head	1
5	130G0616	Bolt − Flanged	4
6	49108−2011	Cover − Valve Chamber	1
7	14025−2143	Cover	1
8	11060−2059	Gasket	1
9	92009−2307	Screw	2
10	92059−2142	Tube − 10 x 14 x 29−1/2	1
11	92066−2096	Plug	1
12	92170−2088	Clamp	1
13	92049−2096	Seal − Oil	1
14	92002−2087	Bolt	2
15	11060−2323	Gasket	2
16	14025−2040	Cover − Breather	1
17	11009−2339	Gasket − Cover	1

Ref. No.	Part No.	Description	No. Used
18	14069−2062	Breather	1
19	92004−2083	Stud − 6 x 14	4
20	49120−6108	Crankcase − Complete (Incl. Ref. #29, 30)	1
21	92049−2097	Seal − Oil	1
22	11060−2015	Gasket − Crankcase	1
23	601A6207	Bearing − Ball	1
24	49015−6176	Cover − Crankcase	1
25	92049−2227	Seal − Oil	1
26	130G0845	Bolt − Flanged	8
27	92043−1263	Pin	2
28	92066−2097	Plug	1
29	49002−2071	Guide − Valve, Exhaust	1
30	49002−2070	Guide − Valve, Intake	1
31	92004−2082	Stud	3
32	92015−2115	Nut − 10 MM	3
33	410B1000	W−Plain−S	2

Kawasaki Model FB460V Type KS08

* Order Parts from Kawasaki

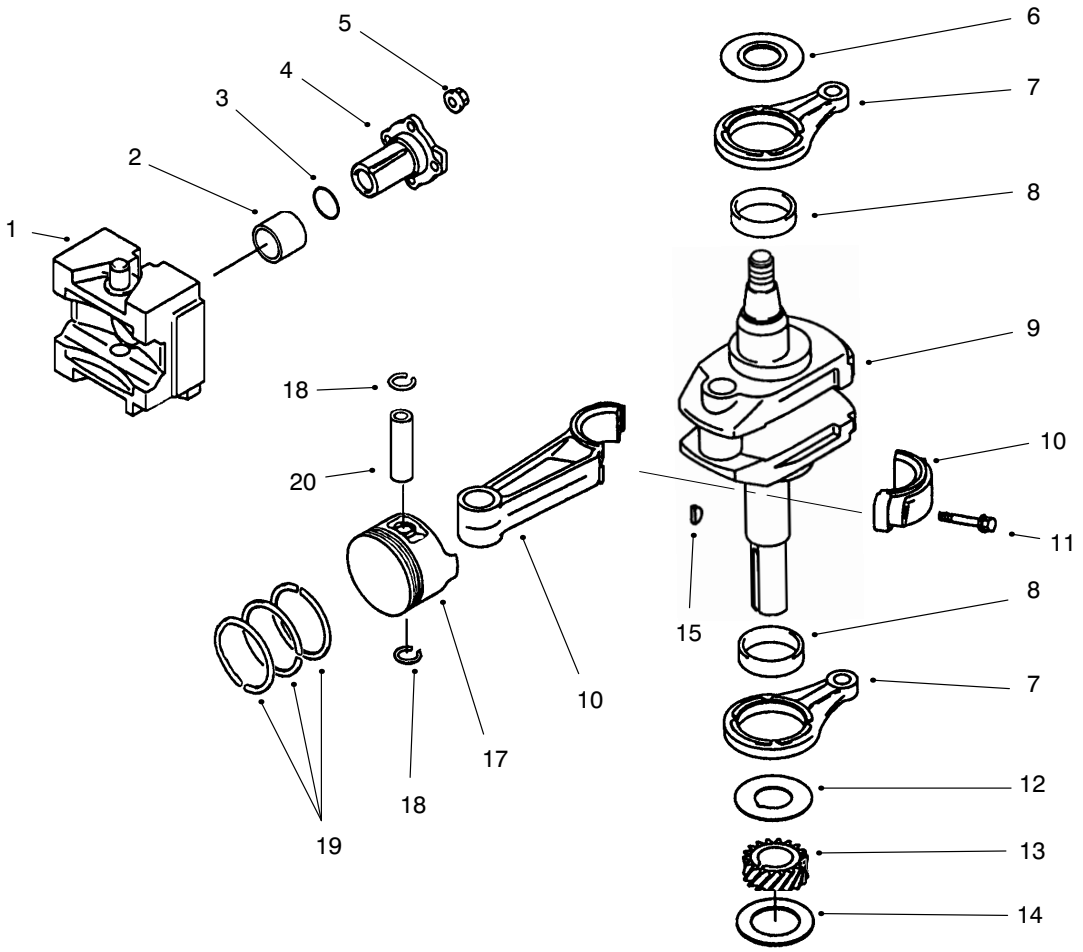


PISTON / CRANKSHAFT

Ref. No.	Part No.	Description	No. Used
1	13042−6006	Weight (Incl. Ref. # 2)	1
2	92141−2097	Bearing − Plane	1
3	92055−2072	O−Ring	1
4	13107−2253	Shaft	1
5	92015−1193	Nut	4
6	92026−2164	Spacer	1
7	46102−6007	Rod (Incl. Ref. #8)	2
8	92141−2108	Bearing − Plane	2
9	49119−2177	Crankshaft − Assembly	1
10	13251−6005	Rod / Cap Asm (Incl. Ref. #11)	1
	13251−6007	Rod / Cap Asm U/S=0.50 (Incl. Ref. #11)	A/R
11	92150−2193	Bolt	2
12	92026−2156	Spacer	1
13	59056−2105	Gear − Helical	1
14	92025−2145	Shim, T=1.18	A/R
	92025−2146	Shim, T=1.25	A/R

Ref. No.	Part No.	Description	No. Used
	92025−2147	Shim, T=1.32	A/R
	92025−2148	Shim, T=1.39	A/R
	92025−2149	Shim, T=1.46	A/R
	92025−2150	Shim, T=1.53	A/R
	92025−2151	Shim, T=1.60	A/R
	92025−2152	Shim, T=1.67	A/R
	92025−2153	Shim, T=1.74	A/R
	92180−2015	Shim, T=1.11	A/R
	92180−2016	Shim, T=1.81	A/R
15	92038−2094	Key	1
17	13001−2084	Piston − Engine	1
	13029−2019	Piston − Engine L 0.25	A/R
	13029−2020	Piston − Engine L 0.50	A/R
18	92033−2066	Ring − Snap	
19	13008−6001	Ring − Set, Piston	1
*	13008−6002	Ring − Set, Piston L 0.25	A/R
*	13008−6003	Ring − Set, Piston L 0.50	A/R
20	13002−2066	Pin − Piston	1

Kawasaki Model FB460V Type KS08

* Order Parts from Kawasaki

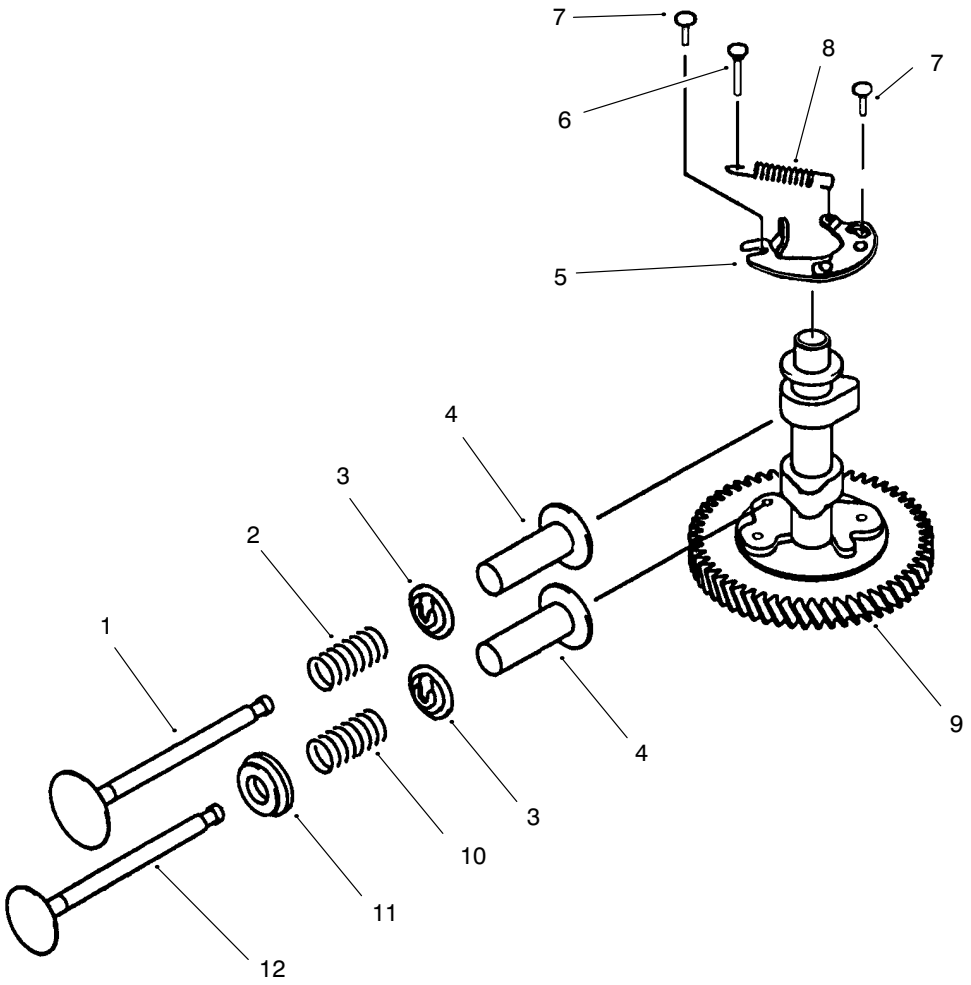


VALVE / CAMSHAFT

Ref. No.	Part No.	Description	No. Used
1	12004−2076	Valve − Intake	1
2	49078−2059	Spring − Engine Valve	1
3	39108−2054	Retainer − Spring	2
4	12032−2058	Tappet	2
5	21118−2068	Decompressor	1
6	92043−2167	Pin	1
7	92043−2113	Pin	2

Ref. No.	Part No.	Description	No. Used
8	92144−2171	Spring	1
9	49118−2134	Camshaft − Complete (Incl. Ref. #5−8)	1
10	49078−2058	Spring − Engine Valve	1
11	12039−2052	Rotator	1
12	12005−2066	Valve − Exhaust	1

Kawasaki Model FB460V Type KS08
* Order Parts from Kawasaki

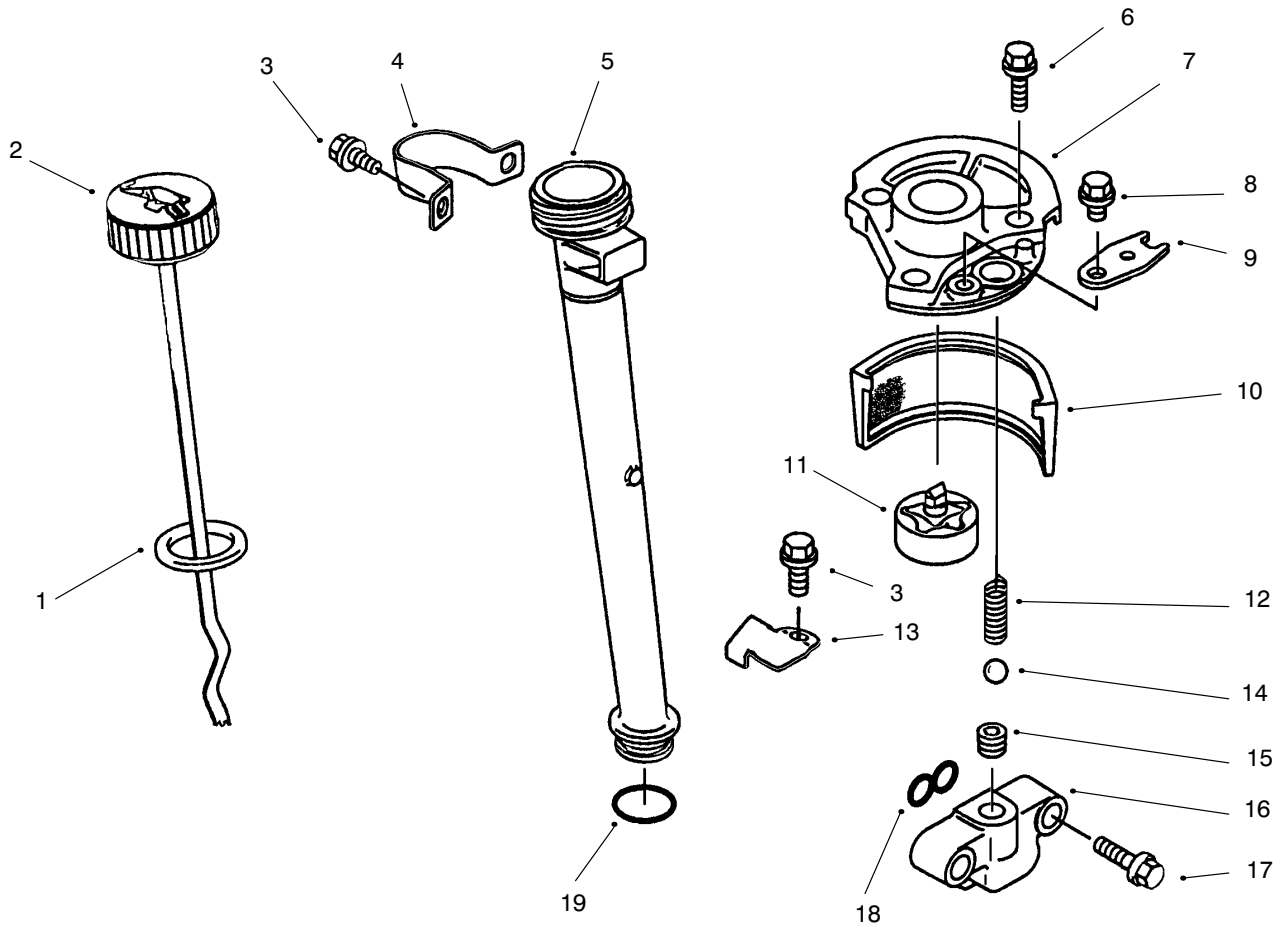


LUBRICATION EQUIPMENT

Ref. No.	Part No.	Description	No. Used
1	11009−2346	Gasket − Oil Gauge	1
2	52005−2058	Gauge − Oil	1
3	130B0508	Bolt − Flanged	3
4	92170−2014−9H	Clamp	1
5	59231−2059	Filler	1
6	130G0825	Bolt − Flanged	3
7	16142−6001	Cover − Pump	1
8	130B0610	Bolt − Flanged	1
9	13270−2054	Plate	1
10	49065−2056	Filter − Oil	1

Ref. No.	Part No.	Description	No. Used
11	16082−2057	Pump − Assembly, Oil	1
12	92081−2216	Spring	1
13	13169−2359	Plate	1
14	600A1000	Ball − Steel	1
15	92066−2211	Plug	1
16	14025−2145	Cover	1
17	130B0830	Bolt − Flanged	2
18	92055−2063	O−Ring	1
19	670D2016	O−Ring	1

Kawasaki Model FB460V Type KS08

* Order Parts from Kawasaki

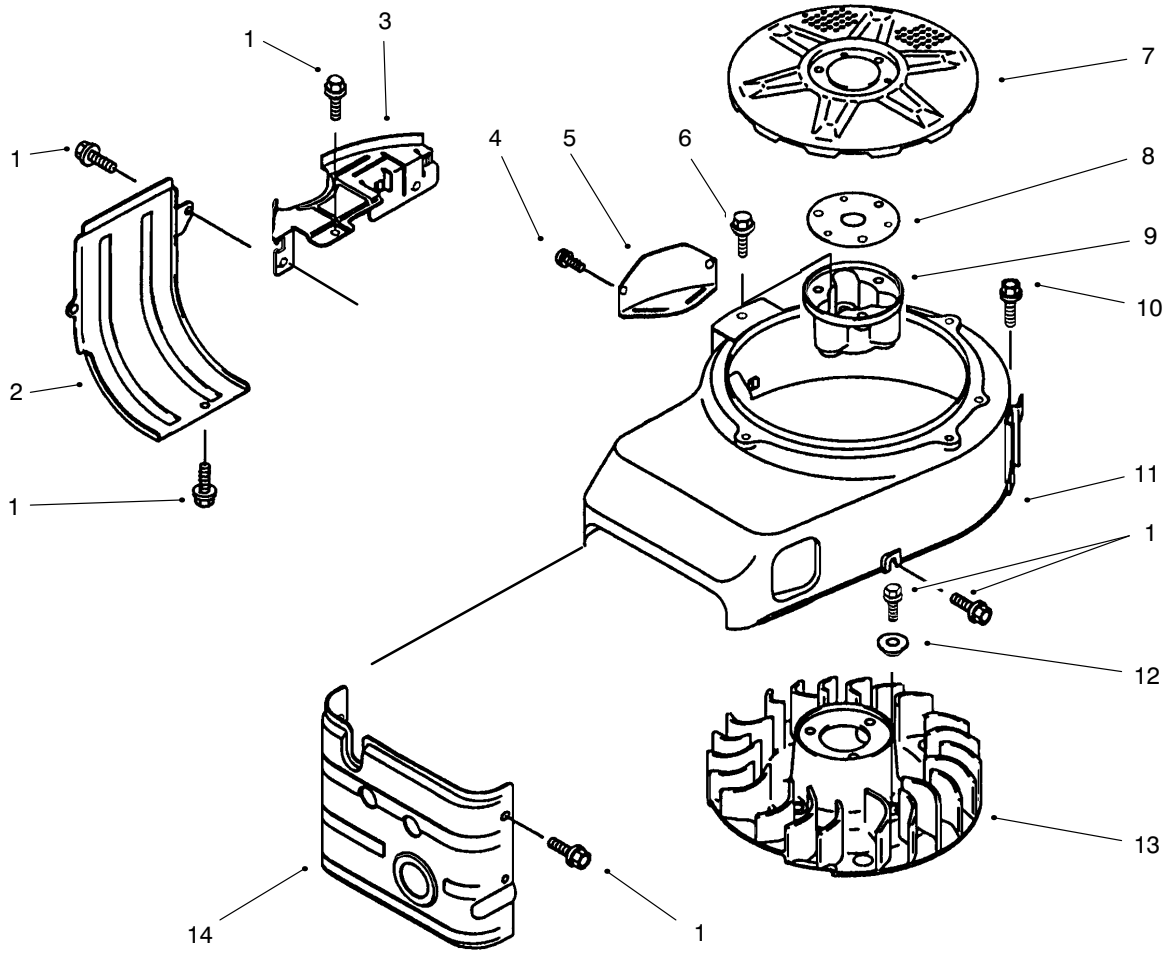


COOLING EQUIPMENT

Ref. No.	Part No.	Description	No. Used
1	130G0610	Bolt − Flanged	9
2	49089−2199−9H	Shroud − Engine	1
3	59066−2295−9H	Housing − Fan	1
4	234B0408	Screw − Pan−WSP	2
5	14024−2038−9H	Cover	1
6	130B0820	Bolt − Flanged	3
7	14037−2104−9H	Screen	1

Ref. No.	Part No.	Description	No. Used
8	92025−2003	Shim, T=1.20	AR
9	11044−2084	Bracket	1
10	130G0614	Bolt − Flanged	6
11	59066−2677−9H	Housing − Fan	1
12	92143−2179	Collar	4
13	59041−2081	Fan	1
14	49089−2181−9H	Shroud − Engine	1

Kawasaki Model FB460V Type KS08
* Order Parts from Kawasaki

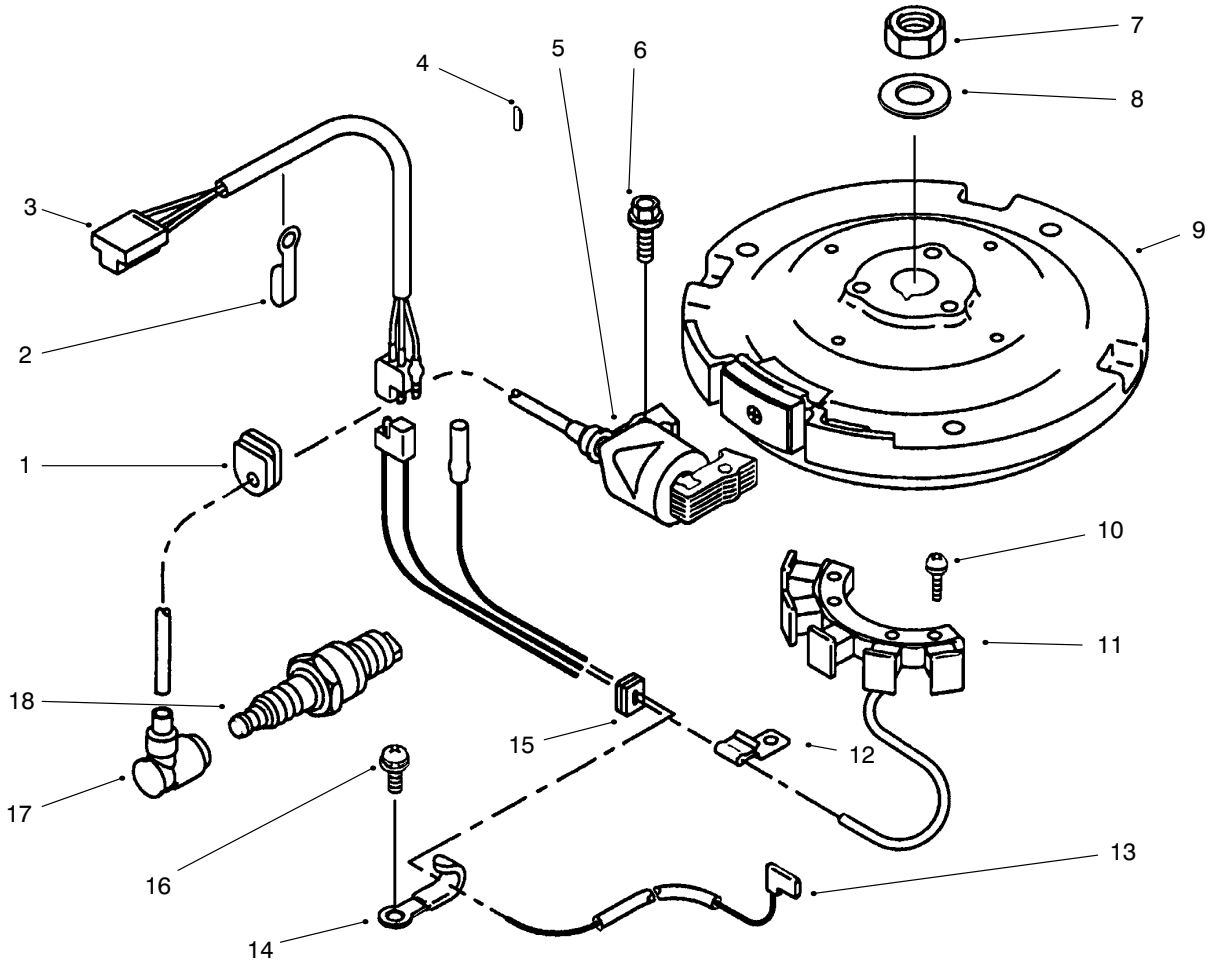


ELECTRIC EQUIPMENT

Ref. No.	Part No.	Description	No. Used
1	92071−2100	Grommet	1
2	92037−2063	Clamp	1
3	26001−2113	Harness	1
4	92038−2094	Key	1
5	21121−2086	Coil − Ignition	1
6	130B0520	Bolt − Flanged	2
7	314G1800	Nut − Hex, Fine	1
8	92022−2178	Washer	1
9	21194−2323	Flywheel	1

Ref. No.	Part No.	Description	No. Used
10	224B0620	Screw − Pan	2
11	59031−2106	Coil − Charging	1
12	92037−2158	Clamp	1
13	26011−2329	Wire − Lead	1
14	92170−2029	Clamp	1
15	92071−2099	Grommet	1
16	234B0408	Screw − Pan	1
17	21130−2060	Cap − Spark Plug	1
18	92070−2101	Plug − Spark, RCJ8	1

Kawasaki Model FB460V Type KS08
* Order Parts from Kawasaki

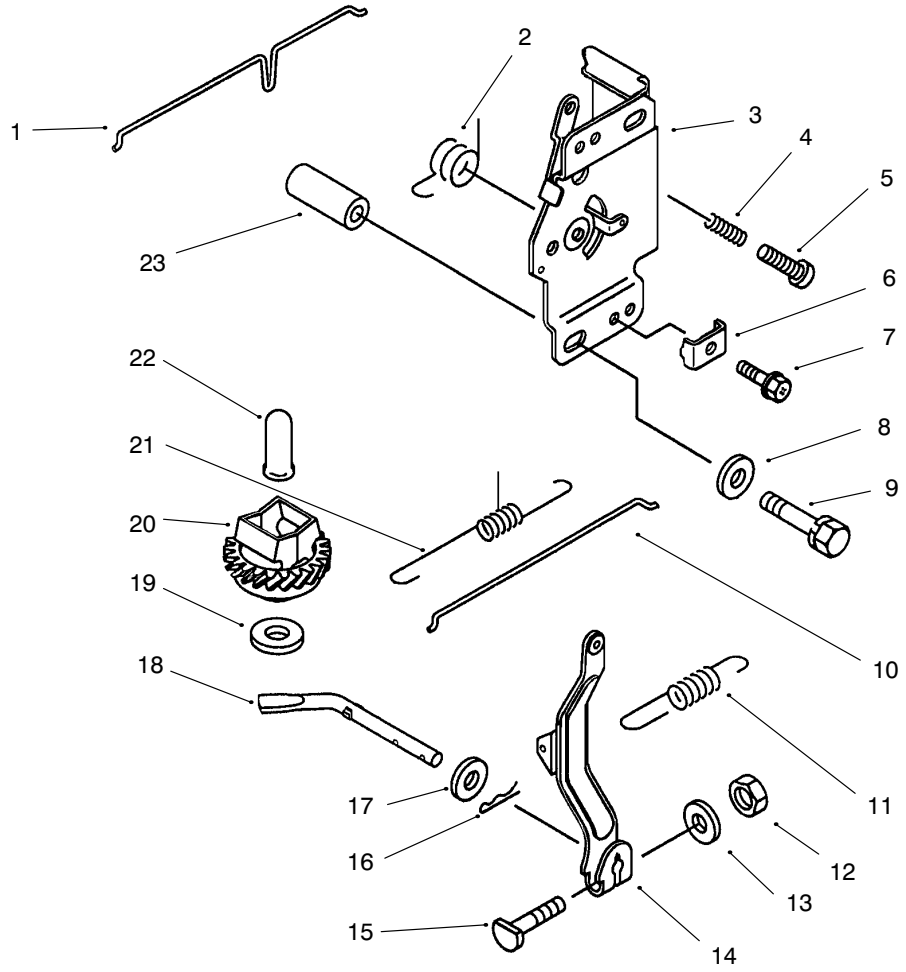


CONTROL EQUIPMENT

Ref. No.	Part No.	Description	No. Used
1	16169−2126	Link − Choke	1
2	92081−2316	Spring	1
3	49113−2067	Panel − Comp. Control (Incl. Ref. # 2, & 4−7)	1
4	92144−2266	Spring	1
5	214B0425	Screw − Pan	1
6	92037−2020	Clamp	1
7	92150−2182	Bolt − 5 x 8	1
8	92200−2070	Washer	2
9	180B0650	Bolt − Upset−Ws	2
10	16171−2083	Link	1
11	39129−2010	Spring − Governor	1

Ref. No.	Part No.	Description	No. Used
12	311B0600	Nut − Hex	1
13	411B0600	Washer − Plain	1
14	21187−2052	Arm − Assembly	1
15	92002−2269	Bolt	1
16	554A0600	Pin − Snap	1
17	92200−2029	Washer	1
18	39003−2072	Arm − Pivot	1
19	92200−2036	Washer	1
20	49110−2067	Governor − Assembly	1
21	92081−2213	Spring	1
22	42036−2060	Sleeve	1
23	92027−2071	Collar	2

Kawasaki Model FB460V Type KS08
* Order Parts from Kawasaki

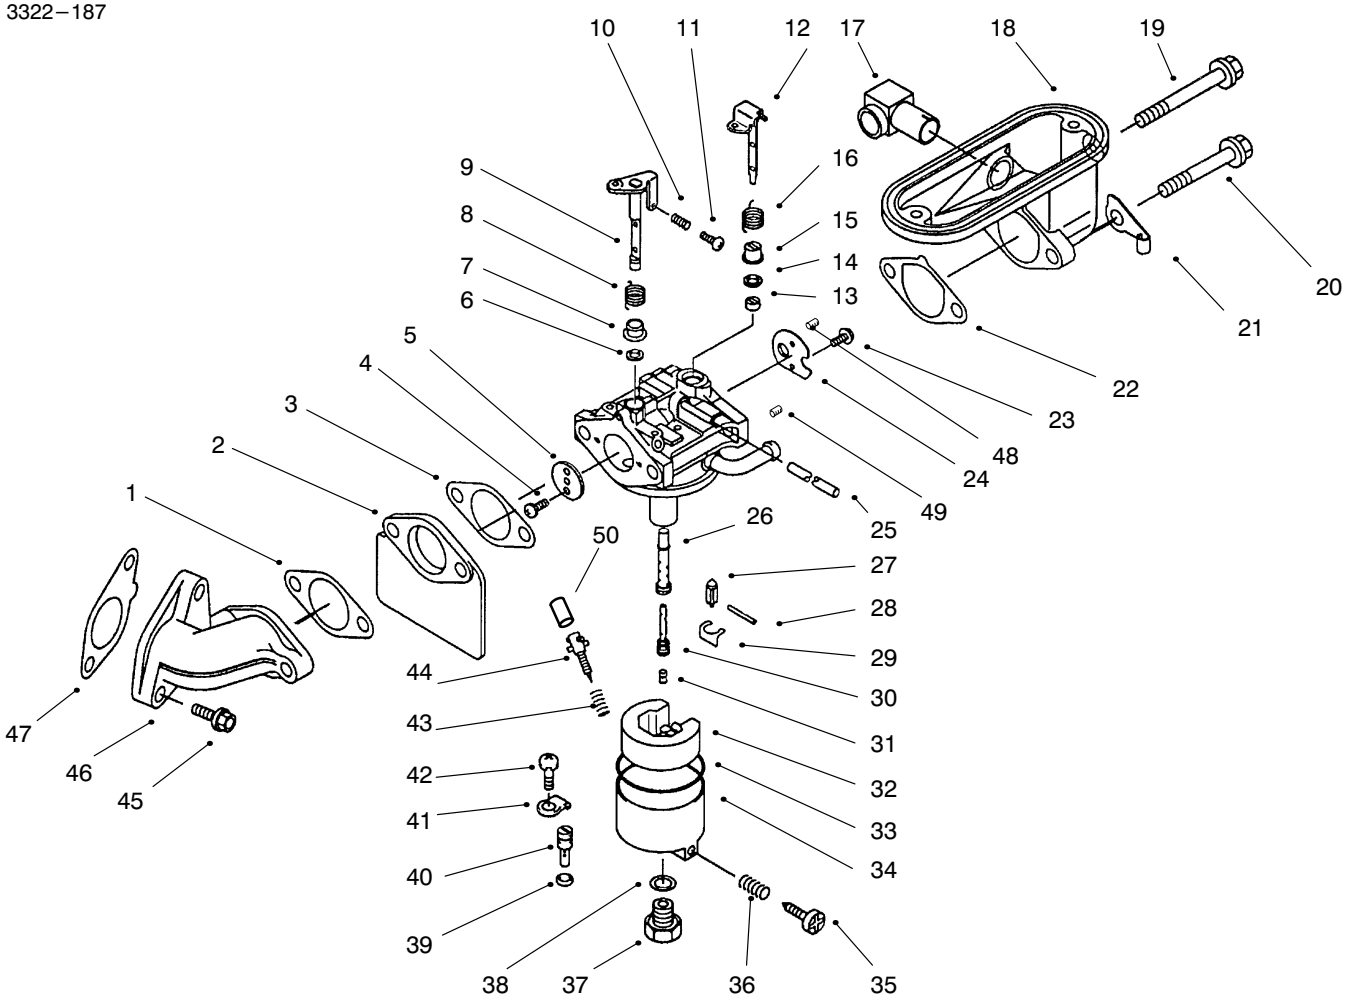


CARBURETOR

Ref. No.	Part No.	Description	No. Used
1	11060−2338	Gasket − Intake Pipe	1
2	16073−2091	Insulator	1
3	11060−2339	Gasket − Carburetor	2
4	92009−2080	Screw	2
5	16025−2141	Valve − Throttle, #110	1
6	92093−2082	Seal	1
7	92027−2025	Collar	1
8	92081−2077	Spring	1
9	16041−2009	Shaft − Throttle	1
10	92081−2046	Spring	1
11	92009−2079	Screw	1
12	16041−2010	Shaft − Choke	1

Ref. No.	Part No.	Description	No. Used
13	92027−2003	Collar	1
14	92093−2069	Seal	1
15	92143−2142	Collar	1
16	92144−2160	Spring	1
17	59071−2062	Joint	1
18	16060−2108	Pipe − Intake	1
19	92002−2254	Bolt − 8 x 110	1
20	92002−2253	Bolt − 8 x 92	1
21	92170−2019	Clamp	1
22	11060−2338	Gasket	1
23	92009−2081	Screw	2
24	16126−2206	Valve − Choke	1

Kawasaki Model FB460V Type KS08
* Order Parts from Kawasaki

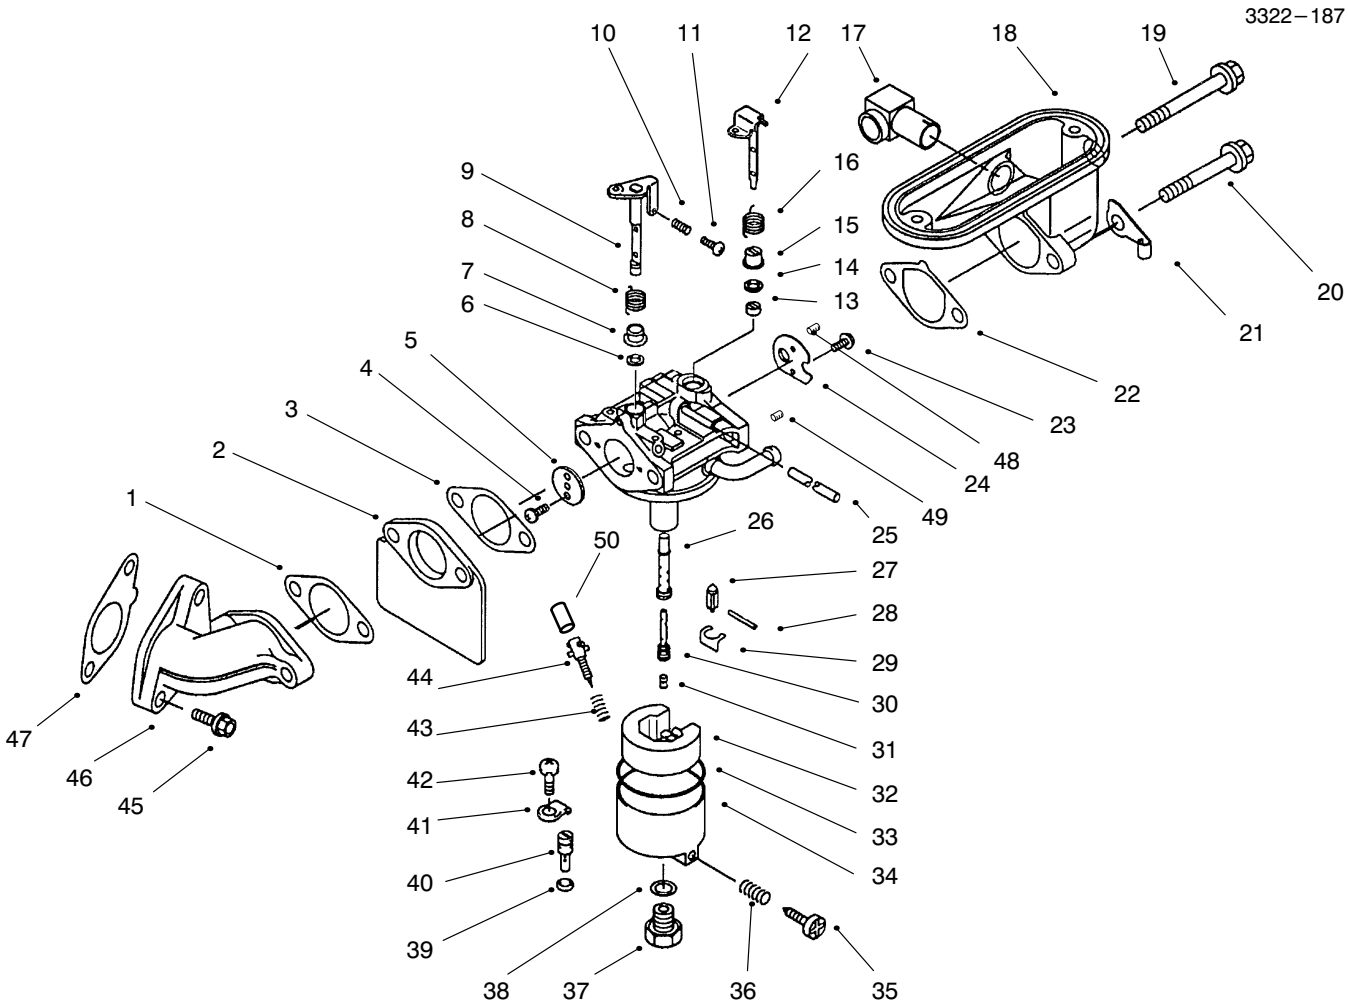

CARBURETOR (Continued)


Ref. No.	Part No.	Description	No. Used
25	92059−2266	Tube − 3 x 5 x 110	1
26	49121−2207	Nozzle − Main	1
27	16030−2073	Valve − Float	1
28	92043−2006	Pin	1
29	92033−2067	Ring − Snap	1
30	49123−2078	Holder − Main Jet	1
31	92063−2294	Jet − Main	1
32	16031−2066	Float	1
33	11009−2024	Gasket	1
34	16020−2109	Chamber − Float (Incl. Ref. #35, 36)	1
35	92009−2015	Screw	1
36	92081−2009	Spring	1
37	92150−2146	Bolt	1
38	11009A−2025	Gasket	1

Ref. No.	Part No.	Description	No. Used
39	16038−024	Gasket	1
40	92064−2108	Jet − Pilot	1
41	13183−2252	Plate	1
42	92009−2244	Screw	1
43	92081−2009	Spring	1
44	16014−2076	Screw − Pilot Air	1
45	130G0825	Bolt − Flanged	2
46	16060−2109	Pipe − Intake	1
47	11060−2337	Gasket − Intake Pipe	1
48	16035−2063	Jet−Air #0.9	1
49	16035−2051	Jet−Air #1.4	1
50	39076−2053	Limiter	1
*	15003−2467	Carburetor − Assembly (Incl. Ref. # 1−16 & 22−44)	1

Kawasaki Model FB460V Type KS08

* Order Parts from Kawasaki

3322−187

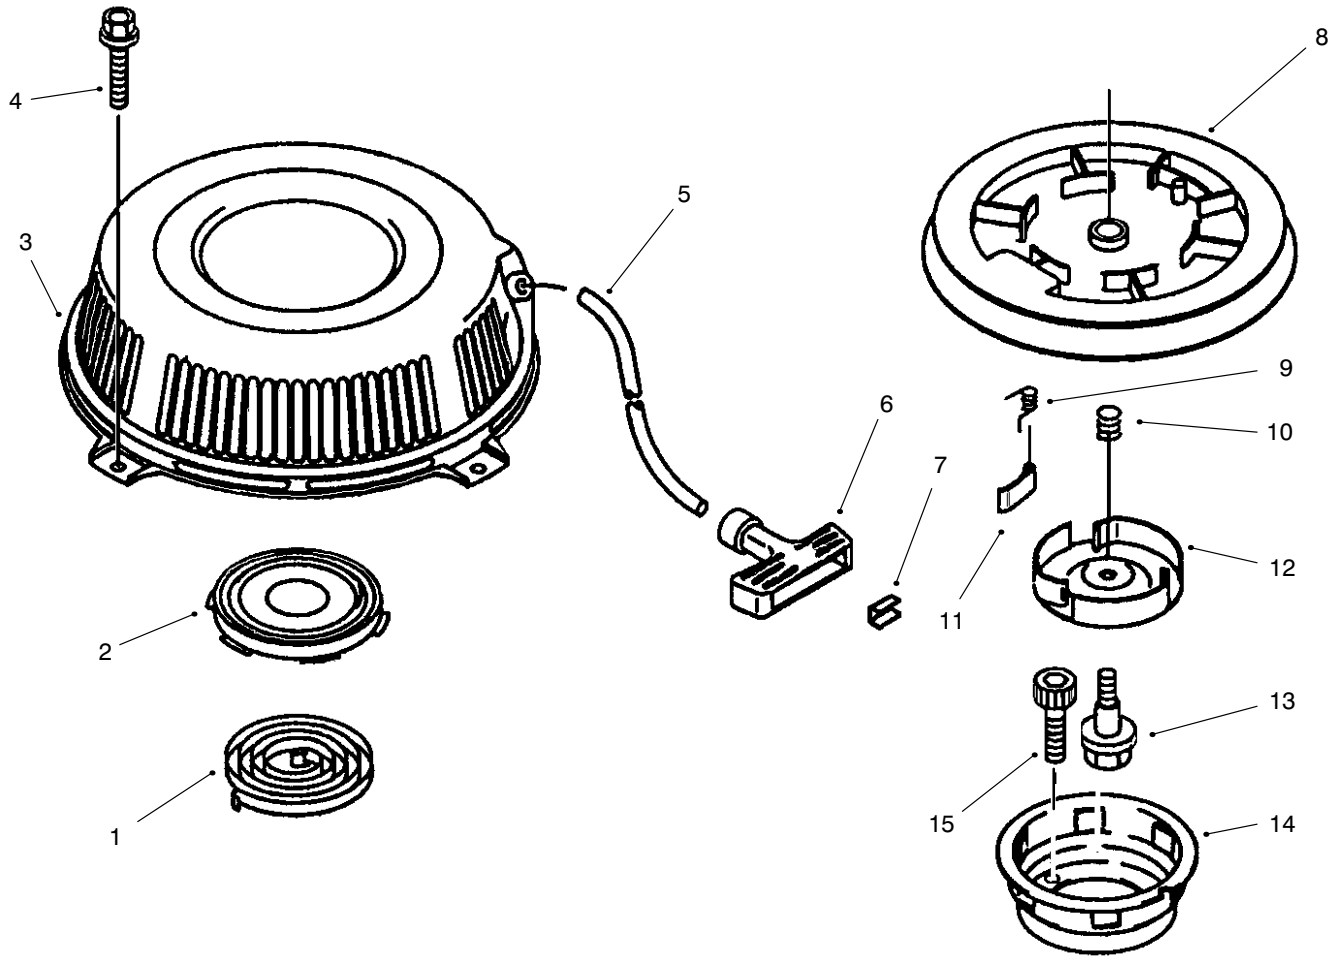


STARTER

Ref. No.	Part No.	Description	No. Used
1	92081−2267	Spring − Recoil	1
2	32099−2060	Case − Spring	1
3	32099−2239−YK	Case − Recoil Starter	1
4	130B0610	Bolt − Flanged	4
5	59106−2060	Rope − 6 x 1380	1
6	46075−2059	Grip − Recoil Starter	1
7	92022−2248	Washer	1
8	59101−2054	Reel − Recoil Starter	1
9	92081−2021	Spring	3

Ref. No.	Part No.	Description	No. Used
10	92081−2268	Spring − Return	1
11	13165−2073	Pawl − Recoil Starter	3
12	14020−2054	Retainer − Recoil Starter	1
13	92001−2027	Bolt	1
14	49080−2144	Pulley − Starting	1
15	120P0620	Bolt − Socket	3
	49088−2412−YK	Starter − Recoil (Incl. Ref. #1−5 & 8−14)	1

Kawasaki Model FB460V Type KS08

* Order Parts from Kawasaki

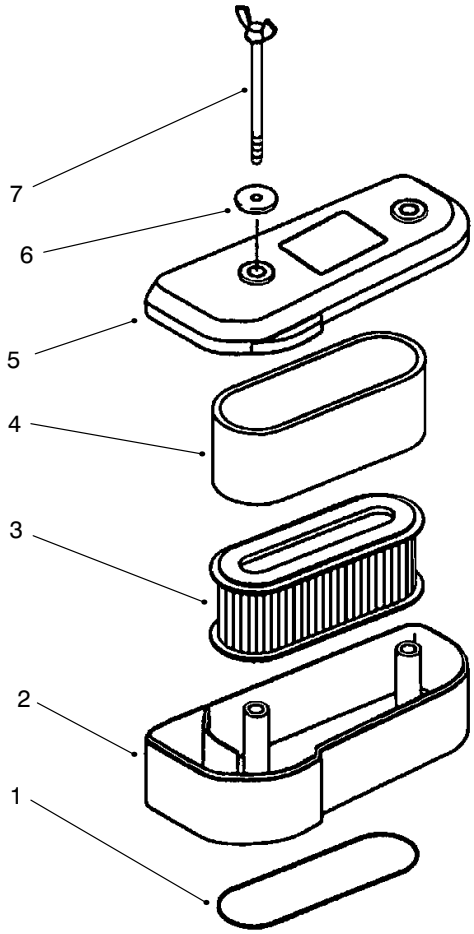


AIR−FILTER

Ref. No.	Part No.	Description	No. Used
1	11009−2443	Gasket − Air Filter	1
2	11011−2174	Case − Air Filter	1
3	11013−2021	Element − Air Filter	1
4	11013−2020	Element − Air Filter	1
5	11012−2192	Cap − Air Filter	1
6	92022−2220	Washer	2
7	92002−2230	Bolt	2
*	11010−2291	Filter Assembly (Incl. Ref. # 2−6)	1

Kawasaki Model FB460V Type KS08

* Order Parts from Kawasaki

3322−187

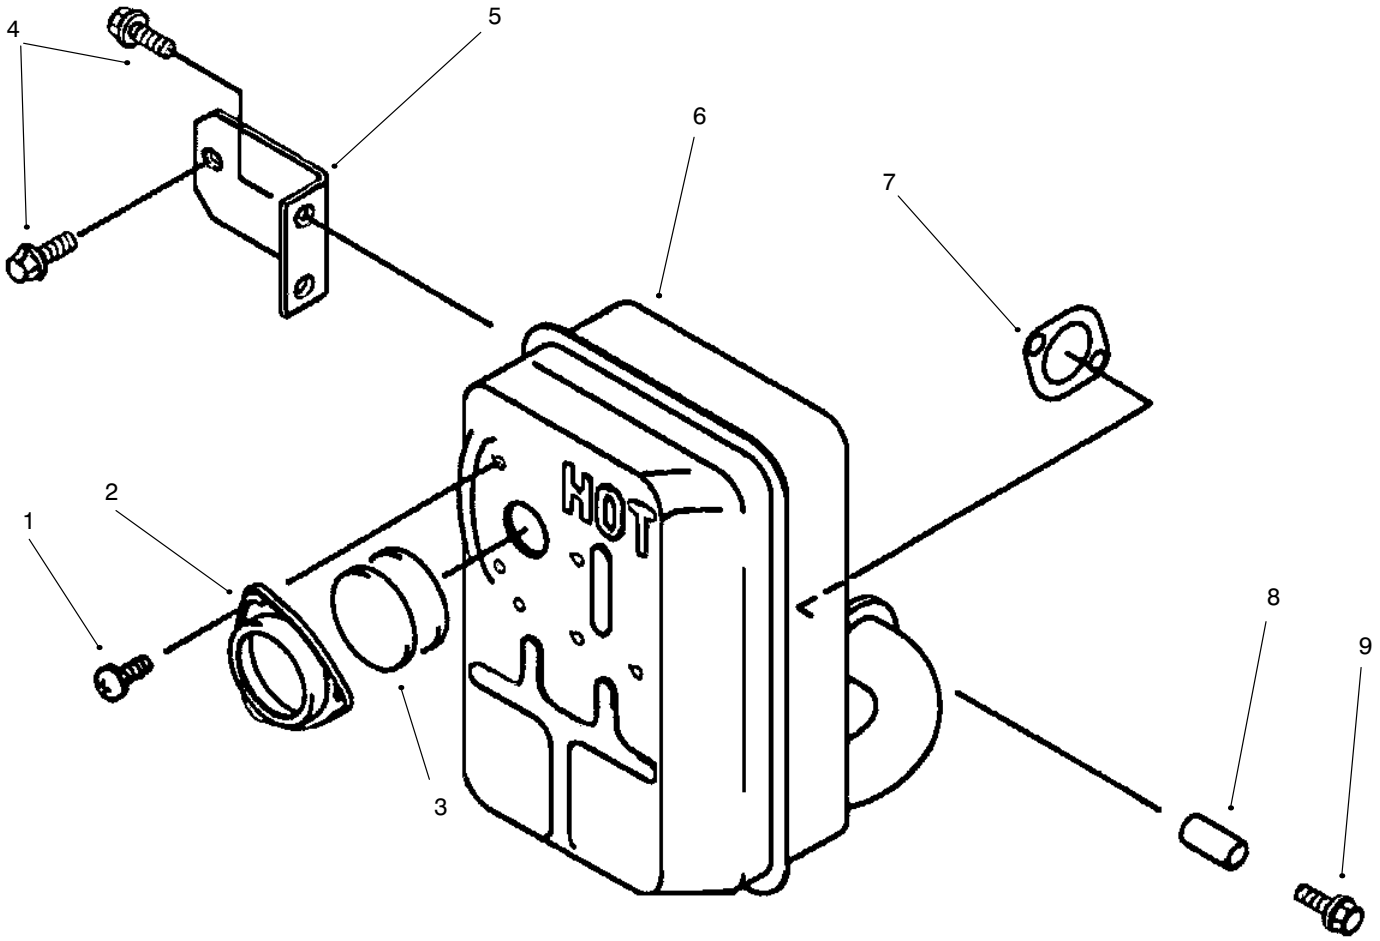


MUFFLER

Ref. No.	Part No.	Description	No. Used
1	92009−2166	Screw − 5 x 8	2
2	11012−2165−9Y	Cap − Spark Arrester	1
3	18077−2052	Arrester − Spark	2
4	130G0812	Bolt − Flanged	4
5	11044−2069−9Y	Bracket	1

Ref. No.	Part No.	Description	No. Used
6	49069−2190−9Y	Muffler Assembly (Incl. Ref. #1−3)	1
7	11009−2527	Gasket − Muffler	1
8	92027−2081	Collar	2
9	130G0845	Bolt − Flanged	2

Kawasaki Model FB460V Type KS08

* Order Parts from Kawasaki

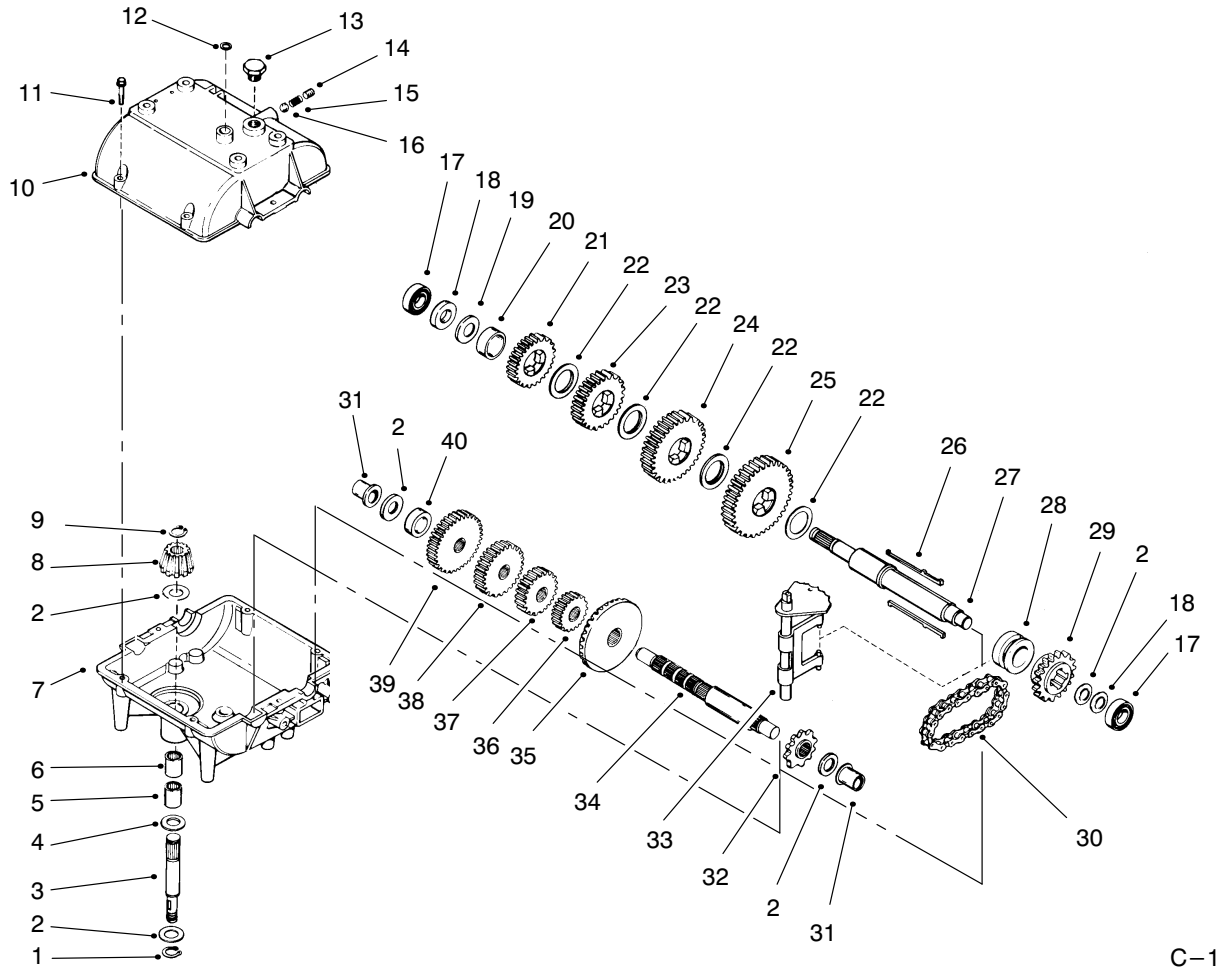

C–1776

PEERLESS TRANSMISSION MODEL 700–082

Ref. No.	Part No.	Description	No. Used
1	792035	Ring – Retaining	1
2	780072	Washer – Thrust	5
3	776135	Shaft – Input	1
4	792001	”O”Ring	2
5	780142	Bearing – Needle	1
6	780086A	Bearing – Needle	1
7	770090A	Case – Transmission	1
8	778153	Bevel Pinion – Input	1
9	788040	Ring – Retaining	1
10	772099A	Cover – Transmission	1
11	792073A	Screw – Self Tapping	6
12	788069	Seal – Square Cut	1
13	792074	Plug – Threaded	1
14	792078	Screw – Set	1
15	792079	Spring	1
16	792077A	Ball – Steel	1
17	780092	Bearing – Ball	2
18	780065	Washer – Thrust	2
19	780139	Washer – Thrust	1
20	786072	Spacer	1
21	778123A	Gear – Spur (25 Teeth)	1
22	780108	Washer – Thrust	4

Ref. No.	Part No.	Description	No. Used
23	778250	Gear – Spur (27 Teeth)	1
24	778124A	Gear – Spur (30 Teeth)	1
25	778125	Gear – Spur (35 Teeth)	1
26	792089A	Key	4
27	776421	Shaft – Shifter & Brake	1
28	784266	Collar – Shift	1
29	786083	Sprocket (18 Teeth)	1
30	786081	Chain – Roller (No. 41 Chain 24 Links)	1
31	780105A	Bushing – Flanged	2
32	786082	Sprocket (9 Teeth)	1
33	784267	Rod & Fork Asm – Shift	1
34	776134	Shaft – Counter	1
35	778154	Gear – Bevel (42Teeth)	1
36	778136	Gear – Spur (15 Teeth)	1
37	778126A	Gear – Spur (20 Teeth)	1
38	778249	Gear – Spur (23 Teeth)	1
39	778127A	Gear – Spur (25 Teeth)	1
40	786071	Spacer	1
*	788067B	Grease 32oz Bottle	1
*	510334	Grease Eliminator	1

Peerless transmission
Order Part’s from Peerless

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
112843	Washer − Clutch	4	21	1
7−5461	Spacer	2	3	1
10−8110	Washer − Flat	3	17	A/R
12−3270	Screw − Hex. Hd.	2	28	6
12−3270	Screw − Hex. Hd.	1	34	4
26−9671	Belt − Traction	2	12	1
27−6230	Bolt	2	19	1
29−5560	Switch − Ignition	6	16	1
37−7600	Bridge − Rectifier	6	29	1
44−8310	Ring − Retaining	5	3	2
44−8320	Spring	5	10	3
44−8330	Spacer − Pulley Bearing	5	6	1
44−8340	Collar − Bearing	5	7	1
44−8360	Field Coil, Rotor & Bearing	5	4	1
47−1970	Grip − Engagement	2	5	1
47−2982	Hose − Fuel	1	28	1
47−2982	Hose − Gas	4	12	1
51−4160	Pulley − Wheel	3	19	4
51−4170	Spacer − Pulley	3	20	8
51−4180	Drum − Brake	3	22	2
51−4190	Pulley − Driven	2	13	1
51−4220	Guard − Coupler	2	6	2
51−4230	Washer − Wheel	3	29	2
51−4270	Bearing − Shaft Extension	3	1	2
51−4290	Belt − Drive	3	11	2
51−4370	Spring − Torsion R.H.	1	*	1
51−4380	Spring − Torsion L.H.	1	22	1
51−4450	Screw − Leveler	1	21	2
51−4480	Idler − Wheel	1	18	2
51−4490	Spacer − Idler Wheel	1	19	2
51−4540	Retainer − Clutch	4	8	1
51−4580	Rod − Brake	3	3	2
51−4600	Brake Arm R.H.	3	*	1
51−4610	Brake Arm L.H.	3	9	1
51−4650	Link − Brake	3	21	2
51−4660	Plate − Link Brake	3	26	2
51−4700	Brake Band Assembly	3	23	2
51−4850	Lever − Parking Brake	7	1	1
52−2890	Bushing	1	5	2
54−0230	Field Assembly	5	1	1
54−2750	V−Belt − Deck Drive	4	*	1
54−3200	Clutch Brake Assembly	4	4	1
55−3570	Fuel Tank	1	1	1
55−7410	Armature & Pulley Assembly	5	5	1
55−7660	V−Belt − Deck Drive	4	*	1
56−6360	Fuel − Filter	4	10	1
57−5811	Panel − Bottom	6	19	1
57−6360	Screw − Hex. Hd.	4	19	1
57−6370	Screw − Hex. Hd.	4	15	1
57−6380	Screw − Hex. Hd.	4	18	3
57−6390	Nut	4	13	2
62−4540	Pulley − Idler	2	22	1
63−7590	Relay	8	3	1
63−7590	Relay	6	21	1
63−8360	Key	6	5	2
66−7400	Plate − Control	1	8	1
67−6370	Bracket − Support R.H.	1	*	1
67−6380	Bracket − Support L.H.	1	14	1
67−6440	Handle − Upper	6	28	1
68−2190	Spring − Extension	2	18	18
68−9690	Fitting − Rod	1	6	2
72−2190	Mount − Shift Lever	2	1	1
74−0040	Spacer − Pivot Idler	1	23	4
74−0050	Sheave − Lower Half	4	5	1
74−0060	Sheave − Upper Half	4	6	1
74−0220	Idler − Bracket L.H.	1	20	1
74−0230	Idler − Bracket R.H.	1	*	1
74−0320	Lever − Shift	2	2	1
74−0360	Frame − Rear	1	27	1
74−0480	Pulley − Drive	3	7	2
74−0510	Valve − Fuel	1	30	1
74−0521	Fitting − Rod	1	13	2
74−0720	Tube − Manual	6	1	1
74−0740	Control − Throttle	6	14	1
82−2180	Panel − Control	6	4	1
82−2190	Switch − Bail	7	5	1
82−2240	Wire Harness	8	1	1
82−2300	Switch − Clutch	6	9	1
82−3820	Boot	6	8	1
82−4800	Lever − Idler	2	21	1
82−7631	Rod − Control	7	12	2
82−7680	Bail Assembly	7	10	1
82−7690	Bar − Control	7	4	1
86−7910	Module − Interlock	8	2	1
86−7910	Module − Interlock	6	18	1
92−1746	Bearing	3	14	4
92−5436	Key	4	7	1
93−6657	Decal − Danger	6	10	1
93−7295	Decal − Proline	6	2	1
93−7297	Decal − Ground Speed	1	7	1
93−7298	Decal − Control Bar	7	7	1
93−7299	Decal − Reverse Handle	7	14	1
93−7431	Guard − Transmission Shaft	2	27	1
93−7433	Guard − Belt, R.H.	2	*	1
93−7434	Guard − Belt, L.H.	2	29	1
93−7436	Mount − Angle	1	32	2
93−7437	Panel − Bottom	1	33	1
93−7438	Frame	1	26	1
93−7442	Decal − Parking Brake	7	2	1
93−9353	Decal − Fuel Shut Off	1	31	1
94−1295	Guard − Muffler Asm.	4	24	1
94−5818	Module	6	34	1
95−2802	Tank − Fuel	1	2	1
98−0787	Shaft − Extension L.H.	3	*	1
98−0788	Shaft − Extension R.H.	3	5	1
98−0789	Coupler	2	8	1
98−0791	Transmission	2	17	1
99−8501	Control − Pivot	7	13	1
218−461	Nut	6	6	1
218−595	Connector − Body	7	3	1
231−111	Tire	3	12	2
232−27	Valve Stem	3	16	2
237−7	O−Ring	1	35	1
237−124	Grommet	1	25	1
237−141	Grommet − Rubber	7	9	2
242−80	Rim	3	15	2
2412−98	Clamp − Fuel Line	4	11	2
2412−98	Clamp − Fuel line	1	29	1
2412−108	Clamp − Hose	4	22	1
2412−120	R−Clamp	6	24	2
251−291	Bearing − Pulley	5	8	1
251−292	Bearing − Field	5	2	1
256−155	Bushing	2	24	2
283−6	Pin − Clevis	1	12	2
283−55	Pin − Clevis	7	15	1
302−5	Fitting − Grease	2	7	2
302−11	Fitting − Grease	3	13	2
321−2	Screw	6	33	2
321−4	Screw − Hex. Hd.	3	2	4
322−2	Screw −Hex. Hd.	2	15	4

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
322−4	Screw − Hex. Hd.	1	10	4
322−7	Screw − Hex. Hd.	3	25	8
323−7	Screw − Hex. Hd.	1	16	4
323−8	Screw − Hex. Hd.	2	23	1
323−8	Screw − Hex. Hd.	1	36	2
323−16	Screw − Hex. Hd.	1	15	2
329−10	Screw − Hex. Hd.	2	4	1
3234−11	Screw − Hex. Hd.	6	23	4
3245−1	Screw − Socket Hd.	2	11	1
3245−3	Screw − Socket Hd. Set	3	6	2
3253−4	Washer − Lock	1	9	4
3253−4	Washer − Lock	2	16	4
3253−4	Washer − Lock	4	17	3
3253−4	Washer − Lock	3	24	8
3254−5	Washer − Lock	6	15	1
3255−7	Washer	6	32	1
3255−8	Washer − External Tooth	4	14	1
3256−23	Washer − Flat	1	4	9
3256−23	Washer − Flat	4	16	3
3256−24	Washer	2	30	1
3257−5	Key − Woodruff	3	4	3
3272−11	Pin−Cotter	7	16	2
3290−307	Pin − Cotter	3	8	2
3290−307	Pin − Cotter	1	11	4
3290−307	Pin − Cotter	7	11	2
3290−378	Cable Tie	6	26	3
3296−2	Nut	6	31	1
3296−2	Nut − Lock	7	6	5
3296−2	Nut − Lock	6	11	4
3296−5	Nut − Lock	5	9	3
3296−6	Nut	2	25	1
3296−23	Nut − Lock	1	17	2
3296−39	Nut − Lock	2	20	1
3296−39	Nut − Lock	1	24	6
3296−42	Nut − Hex	6	17	3
3296−42	Nut − Lock	2	9	4
32103−25	Nut − Wing	1	3	2
32105−1	Screw − Hex. Hd. Machine	7	8	1
32105−13	Screw	6	30	1
32105−14	Screw − Hex. Hd. Machine	6	13	4
32120−64	Ring − Retaining	2	10	3
32128−21	Nut − Lock	6	27	4
32144−14	Screw − Hex. Hd.	2	26	2
32144−19	Screw − Self Tapping	6	25	4
32151−40	Ring − Retaining	3	10	2
32151−56	Ring − Retaining	3	28	2
32151−72	Ring − Retaining	3	27	4
32151−91	Ring − Retaining	3	18	2

TABLE OF CONTENTS

Description	Page
Frame, Fuel Tank And Wheel Drive Idler	1
Transmission, Idler, Drive Pulleys & Drive Belt	2
Axle, Brakes, Wheel Drive And Belts	3
Engine And Clutch Assembly	4
Clutch Assembly No. 54−3200	5
Handle Assembly	6−7
Electrical Schematic	8
Engine Kawasaki Model FB460V Type KS08	
Crankcase	9
Piston / Crankshaft	10
Valve / Camshaft	11
Lubrication / Equipment	12
Cooling / Equipment	13
Electrical / Equipment	14
Control / Equipment	15
Carburetor	16−17
Starter	18
Air Filter	19
Muffler	20
Peerless Transmission Model No. 700−082	21
Numerical Parts Index	22−23
Maintenance	24

Optional Equipment

Description	Model / Part No.
36” Cutting Unit	Model No. 30136
37” Recycler Deck	Model No. 30137
44” Cutting Unit	Model No. 30144
48” Recycler Deck	Model No. 30148
52” Cutting Unit	Model No. 30152
62” Cutting Unit	Model No. 30162
36” Deck Bag Kit	Model No. 30125
37” Deck (Cloth Bag) Bag Kit	Model No. 30129
37” Deck (Steel Hopper) Bag Kit	Model No. 30130
44/52” Deck Bag Kit	Model No. 30128
2−5” HOC Kit	Part No. 84−5010
Front Weight Kit−36/37” Deck	Part No. 80−3350
Standard Sulky	Model No. 30122
Steerable Sulky	Model No. 30123

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

*Not Illustrated

Litho in U.S.A.

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

Date								

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.