Form No. 3409-421 Rev C

TORO®

Count on it.

Parts Catalog

TimeCutter® MX 5025

Riding Mower

Model No. 74776—Serial No. 400000000 and Up

Register at www.Toro.com.
Original Instructions (EN)

3409-421 C

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Frame Assembly 4
Deck Lift Assembly 6
Caster, Wheel and Tire Assembly 8
Traction Drive Assembly 10
LH Transaxle Assembly No. 131-3640 12
RH Transaxle Assembly No. 131-3641 14
Brake Assembly 16
Tire Assembly 18
Seat Assembly 20
Seat Assembly No. 131-4147 22
Motion Control Assembly 24
Engine and Muffler Assembly 26
Body Styling and Fuel Tank Assembly 28
Battery and Electrical Assembly 30
50 Inch Deck Assembly 32
50 Inch Deck and Decal Assembly No. 131-3614 34
Model Specific Decal Assembly 36
Frame Decal Assembly 38
Clutch Assembly 40
Attachments and Accessories 42

© 2018—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Frame Assembly

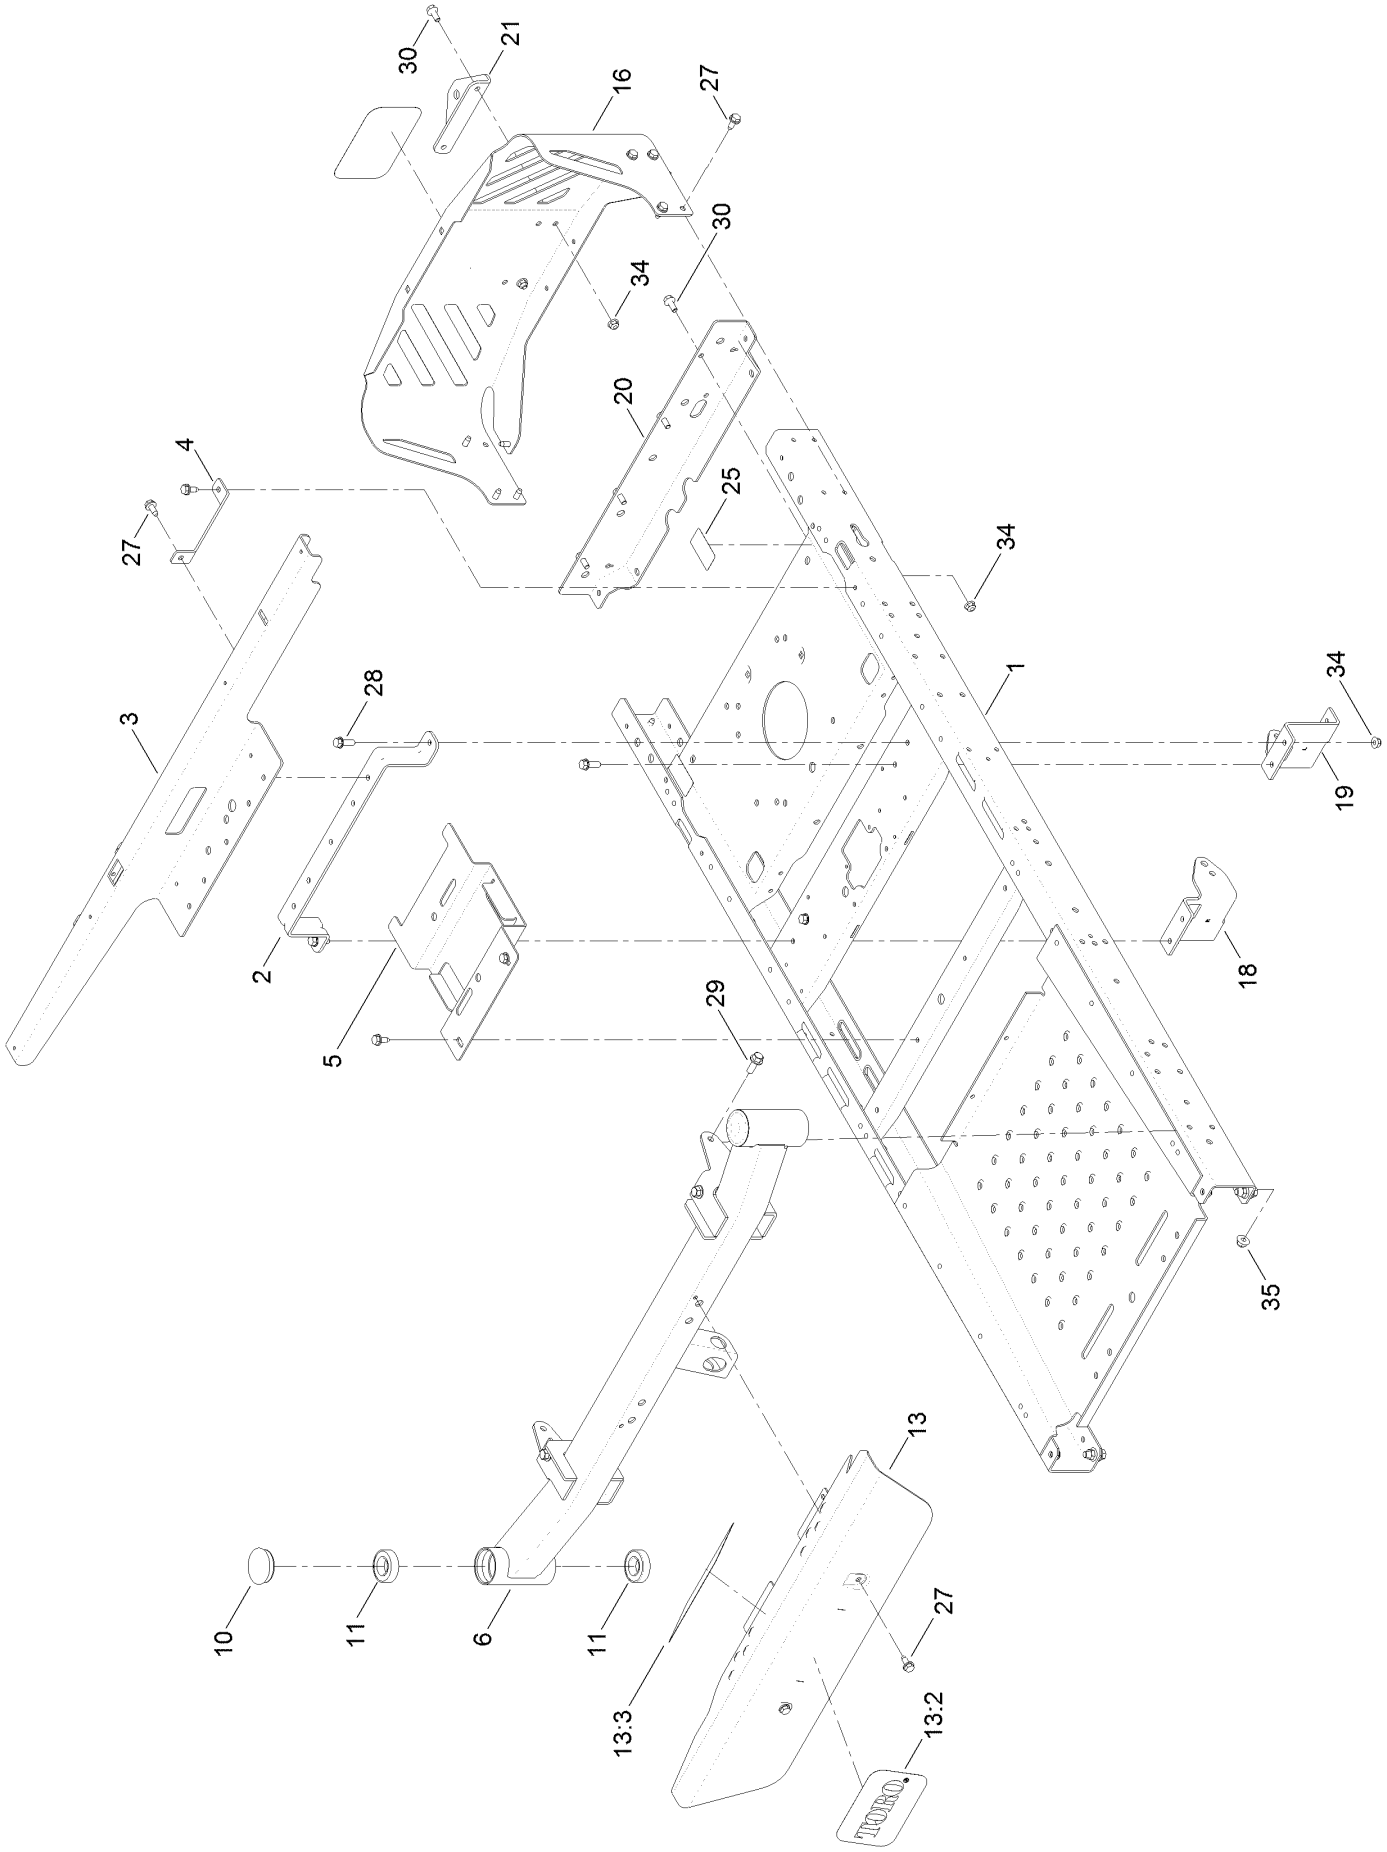

Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	130-0699-01	1	Frame ASM
2	117-7337-03	1	Brace-Seat, Rear
3	131-1039-03	1	Support-Pod, Wide
4	119-3431-03	2	Support-Tank, Rear
5	131-0914-03	1	Bracket-Battery
6	125-1726-01	1	Axle ASM
10	116-4348	2	Cap-Grease
11	109-3678	4	Bearing-Ball
13	132-0892	1	Footrest ASM
13:2	99-4693	1	Decal
13:3	132-0869	1	Decal-Danger
16	130-0701-03	1	Guard-Engine, Wide
18	131-0901-01	1	Mount-Hydro, Front (RH)
19	131-0902-01	1	Mount-Hydro, Front (LH)
20	130-6946-01	1	Crossmember-Rear, Wide
21	117-1232-03	1	Bracket-Hitch
25	121-2989	2	Decal-Bypass
27	32144-70	18	Screw-Thd Roll, HWH
28	3234-29	4	Screw-HHF
29	3234-42	6	Screw-HHF
30	3234-47	8	Screw-HHF
34	104-8300	12	Nut-HF, NI
35	104-8301	6	Nut-HF, NI


Deck Lift Assembly

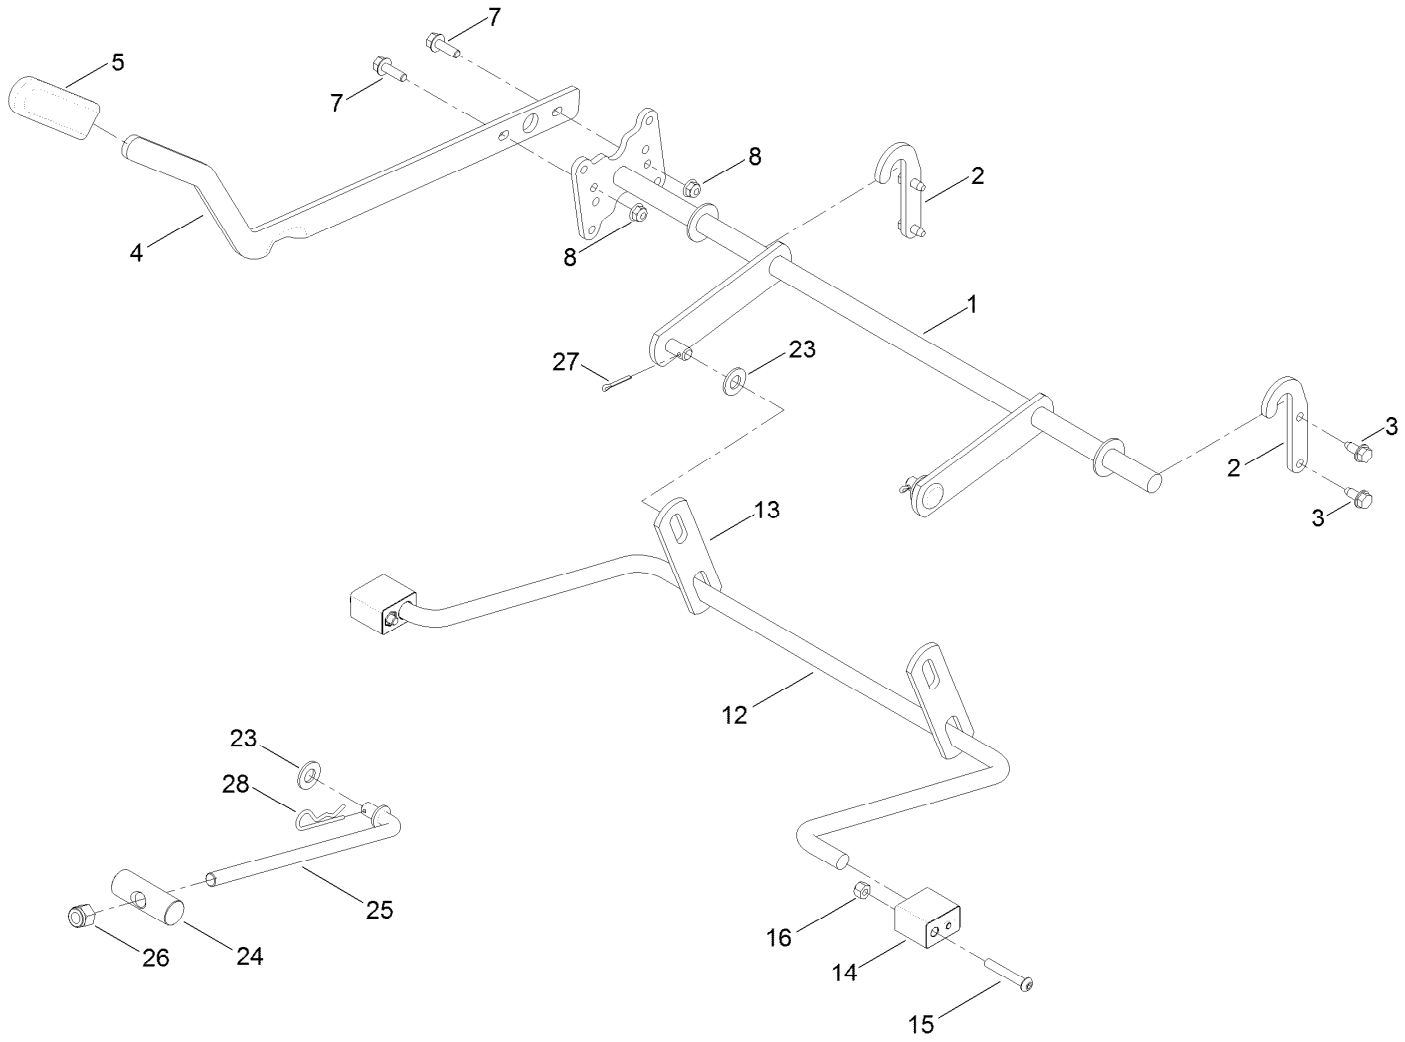

Deck Lift Assembly (continued)

Ref.	Part Number	Qty.	Description
1	132-6878-03	1	Lift-Deck, Wide
2	119-8875	2	Bracket-Lift
3	32144-70	4	Screw-Thd Roll, HWH
4	119-3427-03	1	Lever-Lift
5	1-633268	1	Grip-Lever
7	3234-29	2	Screw-HHF
8	104-8300	2	Nut-HF, NI
12	119-3347	1	Arm-Lift, Rear (Wide)
13	108-7840	2	Link-Lift
14	108-7845	2	Block-Pivot
15	120-5499	2	Screw-HSBH
16	3296-29	2	Nut-Lock, NI
23	3256-26	3	Washer-Flat
24	119-8810	1	Pin-Pivot
25	133-4319	1	Rod-Mount, Deck
26	3296-19	1	Nut-Hex
27	3272-11	2	Pin-Cotter
28	1-806005	1	Pin-Cotter

Caster, Wheel and Tire Assembly

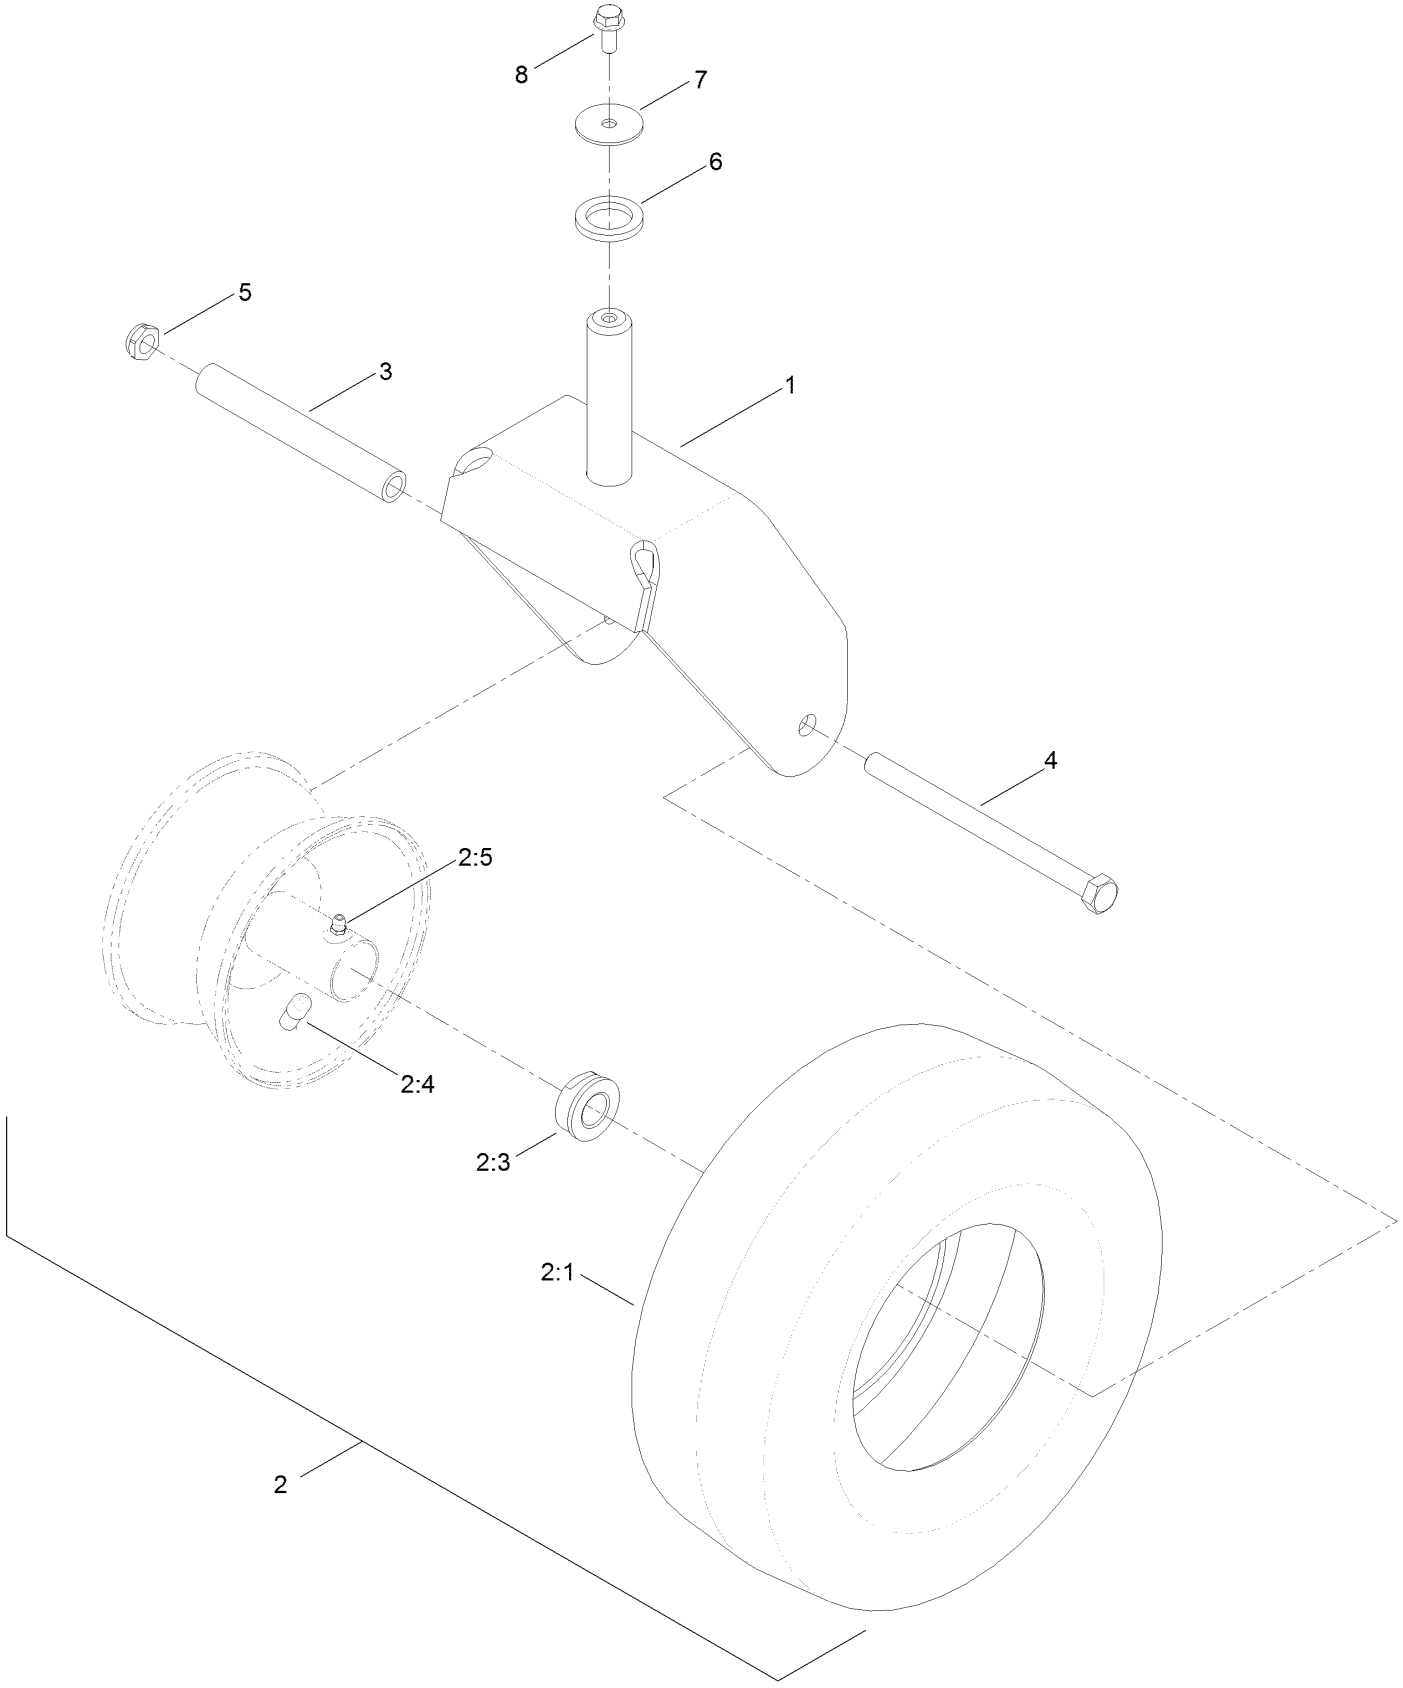


Caster, Wheel and Tire Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-3349-01	2	Fork-Caster
2	119-3473	2	13 Inch Wheel And Tire ASM
2:1	119-3471	1	Tire-13 Inch
2:3	114-1640	2	Bushing-Flange
2:4	232-27	1	Stem-Valve
2:5	302-5	1	Fitting-Grease
2:99	232-46	1	Tube-Inner ●
3	119-3475	2	Spanner
4	325-37	2	Screw-HH
5	3296-45	2	Nut-Lock, NI
6	117-7394	2	Washer-Thrust
7	3256-68	2	Washer-Flat
8	3234-47	2	Screw-HHF

● Not illustrated


Traction Drive Assembly

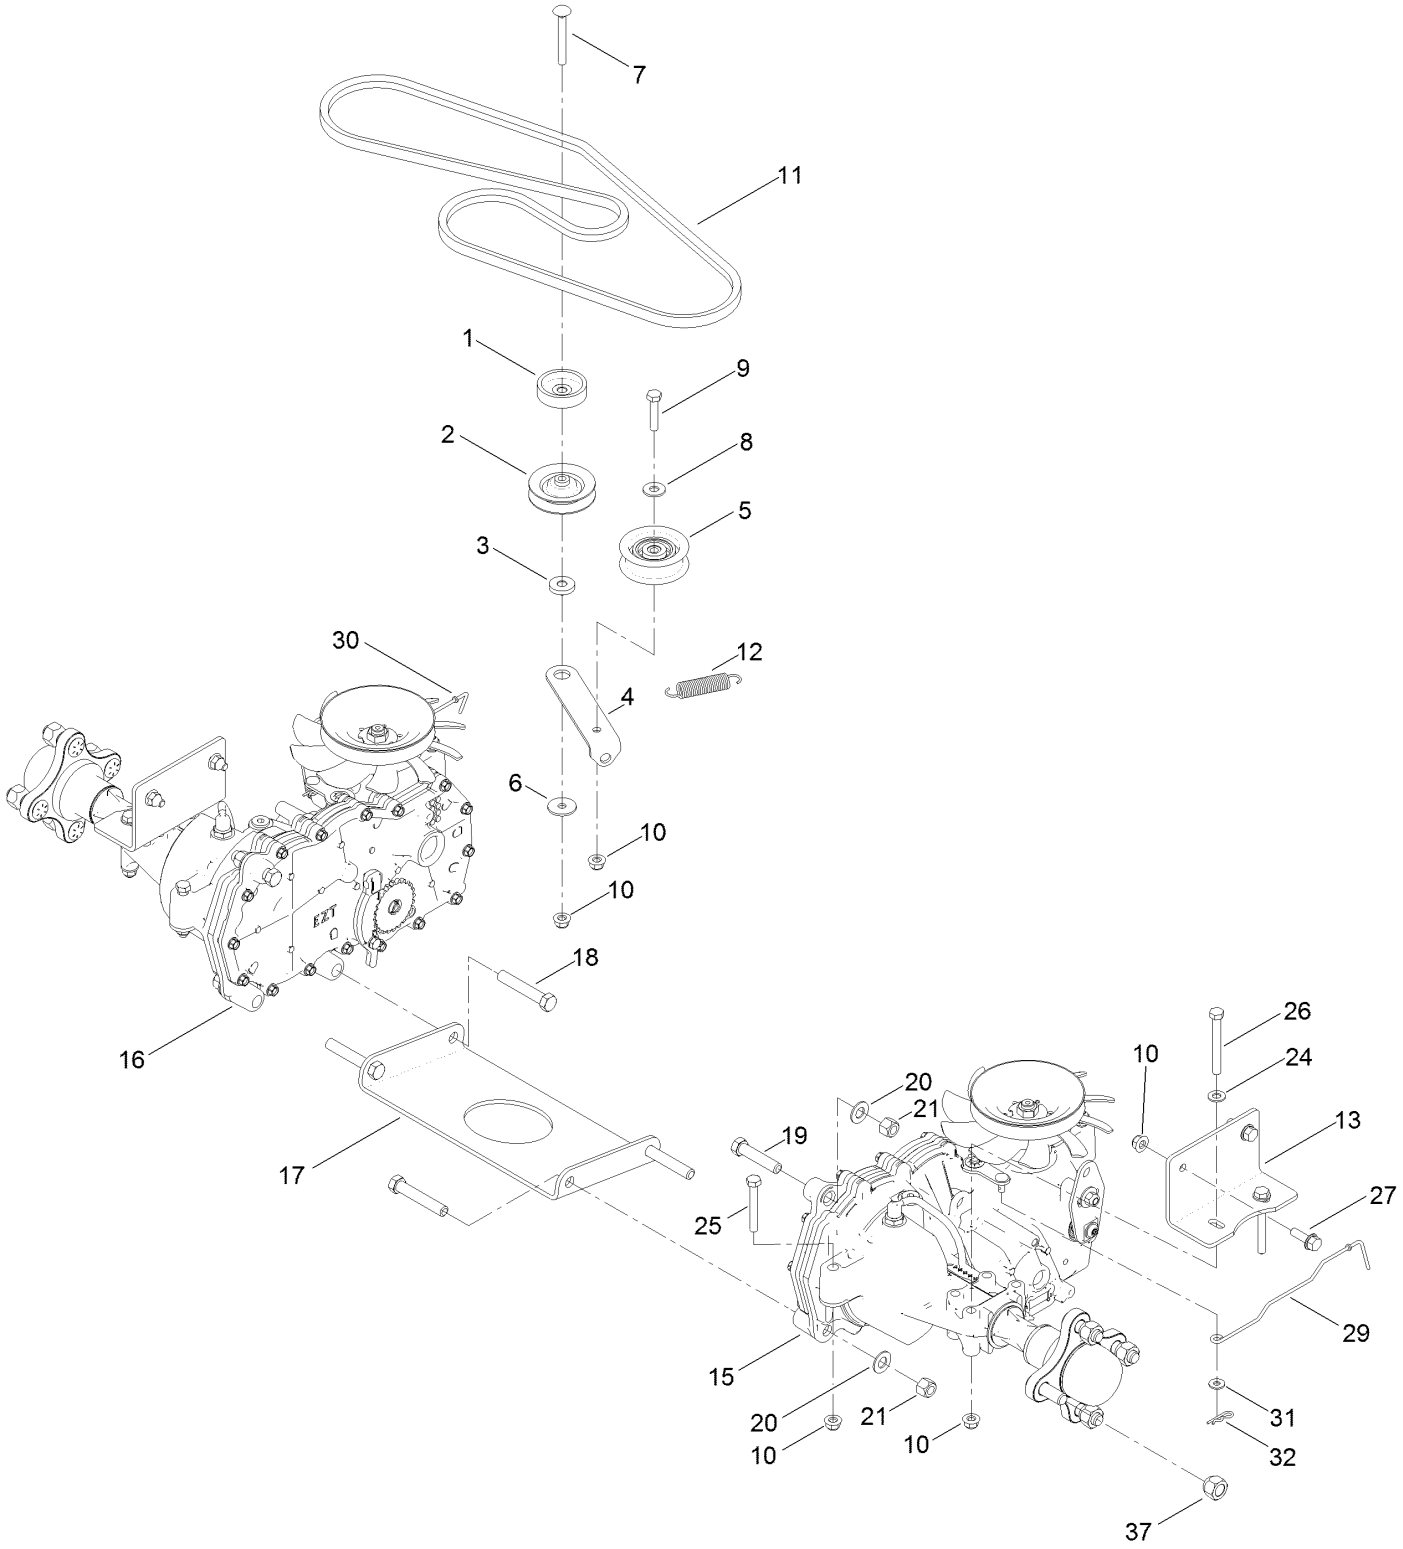

Traction Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-3353	1	Spacer
2	119-8822	1	Pulley-Idler
3	119-3327	1	Spacer-Arm, Idler
4	119-3326	1	Arm-Idler
5	106-2176	1	Pulley-Idler
6	5-4460	1	Washer-Pivot
7	3230-8	1	Screw-CARR
8	3256-3	1	Washer-Flat
9	322-7	1	Screw-HH
10	104-8300	14	Nut-HF, NI
11	130-6976	1	V-Belt
12	104-6415	1	Spring-Return, Pedal
13	117-7264-03	2	Mount-Hydro
15	131-3640	1	LH Hydro Transmission ASM
16	131-3641	1	RH Hydro Transmission ASM
17	119-3342-03	1	Plate-Cross, Hydro
18	324-10	4	Screw-HH
19	324-8	2	Screw-HH
20	3256-25	6	Washer-Flat
21	3296-48	6	Nut-Lock, NI
24	3256-23	6	Washer-Plain
25	322-11	4	Screw-HH
26	322-13	4	Screw-HH
27	3234-29	4	Screw-HHF
29	131-0900	1	Rod-Bypass, LH
30	130-7049	1	Rod-Bypass, RH
31	119-8952	2	Washer
32	3290-307	2	Pin-Cotter
37	242-50	8	Nut-Lug


LH Transaxle Assembly No. 131-3640

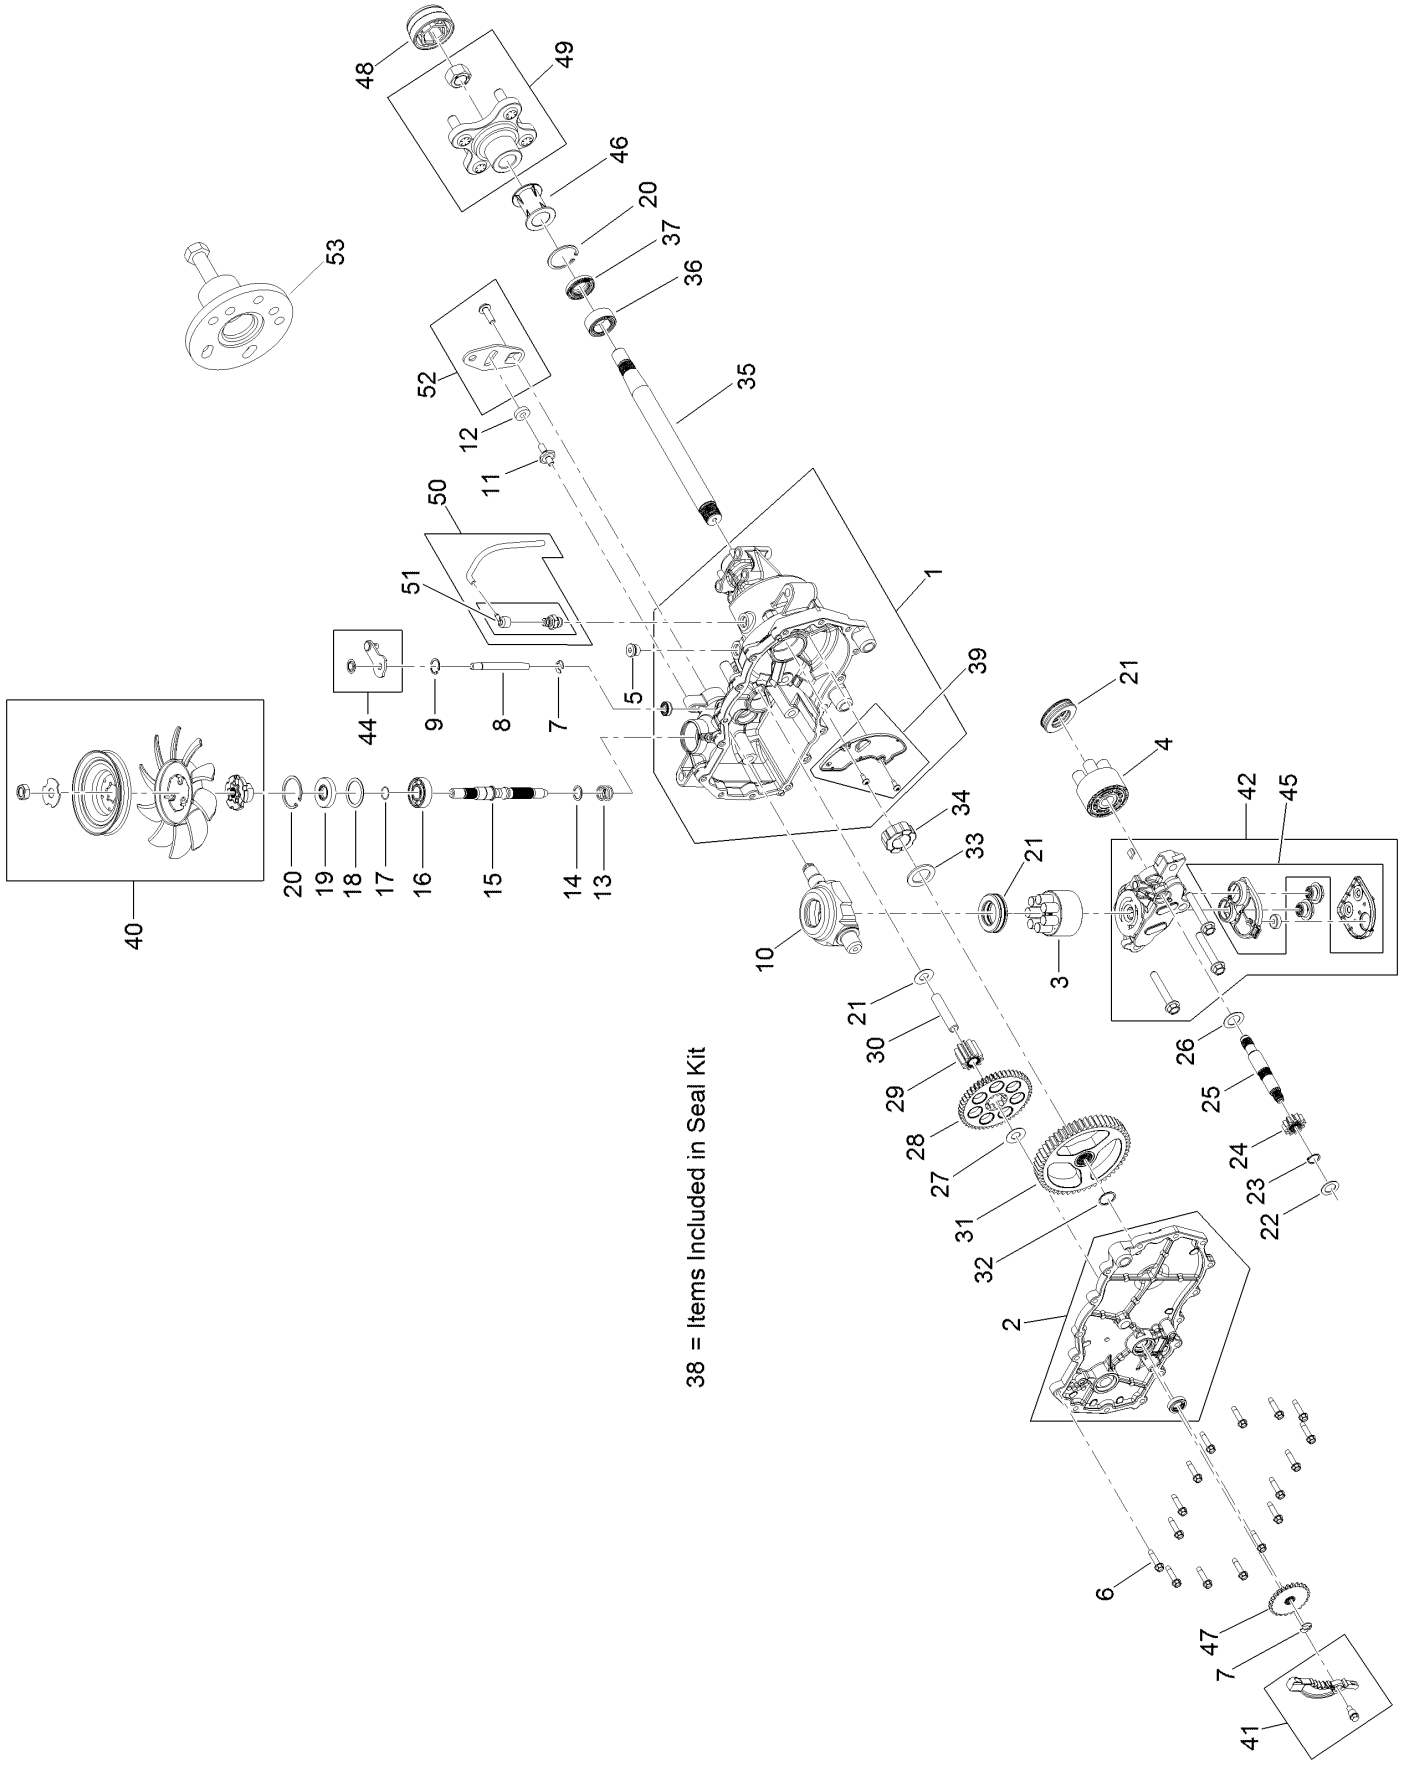

LH Transaxle Assembly No. 131-3640 (continued)

Ref.	Part Number	Qty.	Description
1	106-8695	1	Main Housing ASM
2	106-8696	1	Side ASM
3	110-8561	1	Pump Block ASM
4	103-2666	1	Cylinder Block Kit
5	104-2189	1	Plug-Thread, Straight
6	117-5359	16	Screw-HHF
7	106-8677	2	Ring-Retaining, External
8	106-8678	1	Rod-Bypass
9	106-8679	1	Ring-Retaining, Internal
10	104-5304	1	Swashplate-Trunnion
11	104-2116	1	Stud
12	112-9853	1	Puck-Friction
13	94-1936	1	Spring-Block
14	94-1937	1	Washer-Thrust
15	104-5306	1	Shaft-Input
16	104-5311	1	Bearing-Ball
17	104-5307	1	Ring-Retaining
18	104-5308	1	Spacer
19	104-5310	1	Seal-Lip
20	104-5309	2	Ring-Retaining
21	94-6922	2	Bearing-Thrust
22	104-5339	1	Washer-Flat
23	104-5340	1	Ring-Retaining
24	132-0912	1	Gear-12T
25	106-8683	1	Shaft-Motor
26	104-5360	1	Washer
27	94-1933	2	Washer
28	132-0911	1	Gear-49T
29	104-5318	1	Gear-Jackshaft, 10T
30	104-5329	1	Pin-Jackshaft
31	112-9854	1	Ring-Spiral, Retaining
32	112-9855	1	Gear-52T, Bull
33	112-9856	1	Washer
34	112-9857	1	Bearing-Sleeve
35	120-7104	1	Shaft-Axle
36	112-9859	1	Bushing-Axle
37	112-9860	1	Seal-Lip
38	106-8686	1	Seal Kit
39	106-8697	1	Expansion Plate Kit
40	121-5746	1	Fan Pulley Kit
41	106-8688	1	Brake Arm Kit
42	112-9861	1	Center Section Filter Kit
44	120-5549	1	Bypass Kit
45	114-1634	1	Filter Kit
46	120-7109	1	Tube-Axle
47	106-8694	1	Disc-Brake, Cog
48	115-5057	1	Cover-Nut, Axle
49	109-5939	1	Hub Kit
50	112-9866	1	Breather Kit
51	114-1635	1	Breather ASM
52	117-5362	1	Control Arm Kit
53	114-8467	1	Puller-Hub, 4 Bolt


RH Transaxle Assembly No. 131-3641

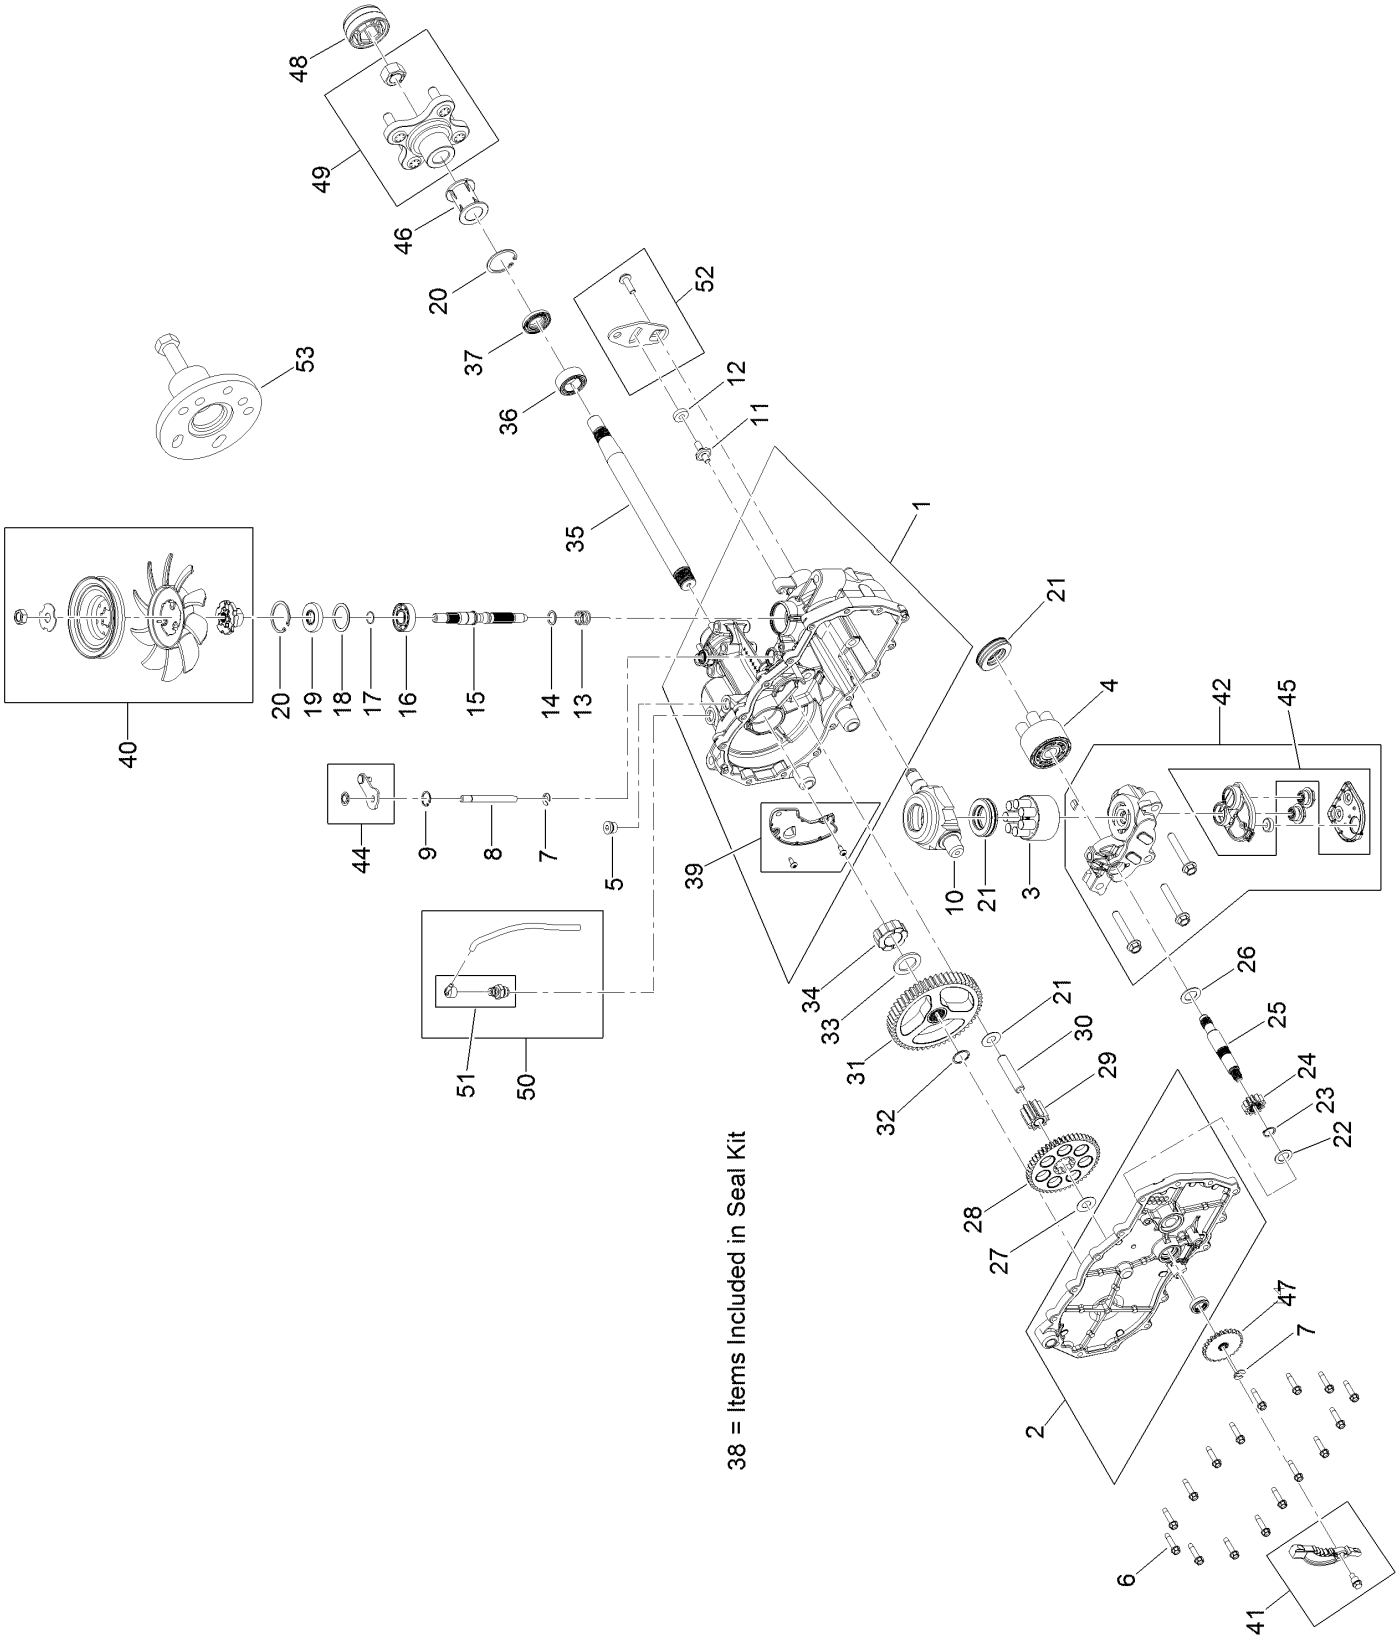

RH Transaxle Assembly No. 131-3641 (continued)

Ref.	Part Number	Qty.	Description
1	106-8674	1	Main Housing ASM
2	106-8675	1	Side ASM
3	110-8561	1	Pump Block ASM
4	103-2666	1	Cylinder Block Kit
5	104-2189	1	Plug-Thread, Straight
6	117-5359	16	Screw-HHF
7	106-8677	2	Ring-Retaining, External
8	106-8678	1	Rod-Bypass
9	106-8679	1	Ring-Retaining, Internal
10	104-5304	1	Swashplate-Trunnion
11	104-2116	1	Stud
12	112-9853	1	Puck-Friction
13	94-1936	1	Spring-Block
14	94-1937	1	Washer-Thrust
15	104-5306	1	Shaft-Input
16	104-5311	1	Bearing-Ball
17	104-5307	1	Ring-Retaining
18	104-5308	1	Spacer
19	104-5310	1	Seal-Lip
20	104-5309	2	Ring-Retaining
21	94-6922	2	Bearing-Thrust
22	104-5339	1	Washer-Flat
23	104-5340	1	Ring-Retaining
24	132-0912	1	Gear-12T
25	106-8683	1	Shaft-Motor
26	104-5360	1	Washer
27	94-1933	2	Washer
28	132-0911	1	Gear-49T
29	104-5318	1	Gear-Jackshaft, 10T
30	104-5329	1	Pin-Jackshaft
31	112-9854	1	Ring-Spiral, Retaining
32	112-9855	1	Gear-52T, Bull
33	112-9856	1	Washer
34	112-9857	1	Bearing-Sleeve
35	120-7104	1	Shaft-Axle
36	112-9859	1	Bushing-Axle
37	112-9860	1	Seal-Lip
38	106-8686	1	Seal Kit
39	106-8687	1	Expansion Plate Kit
40	121-5746	1	Fan Pulley Kit
41	106-8688	1	Brake Arm Kit
42	112-9862	1	Center Section Filter Kit
44	107-2489	1	Bypass Arm Kit
45	114-1634	1	Filter Kit
46	120-7109	1	Tube-Axle
47	106-8694	1	Disc-Brake, Cog
48	115-5057	1	Cover-Nut, Axle
49	109-5939	1	Hub Kit
50	112-9866	1	Breather Kit
51	114-1635	1	Breather ASM
52	117-5362	1	Control Arm Kit
53	114-8467	1	Puller-Hub, 4 Bolt


Brake Assembly

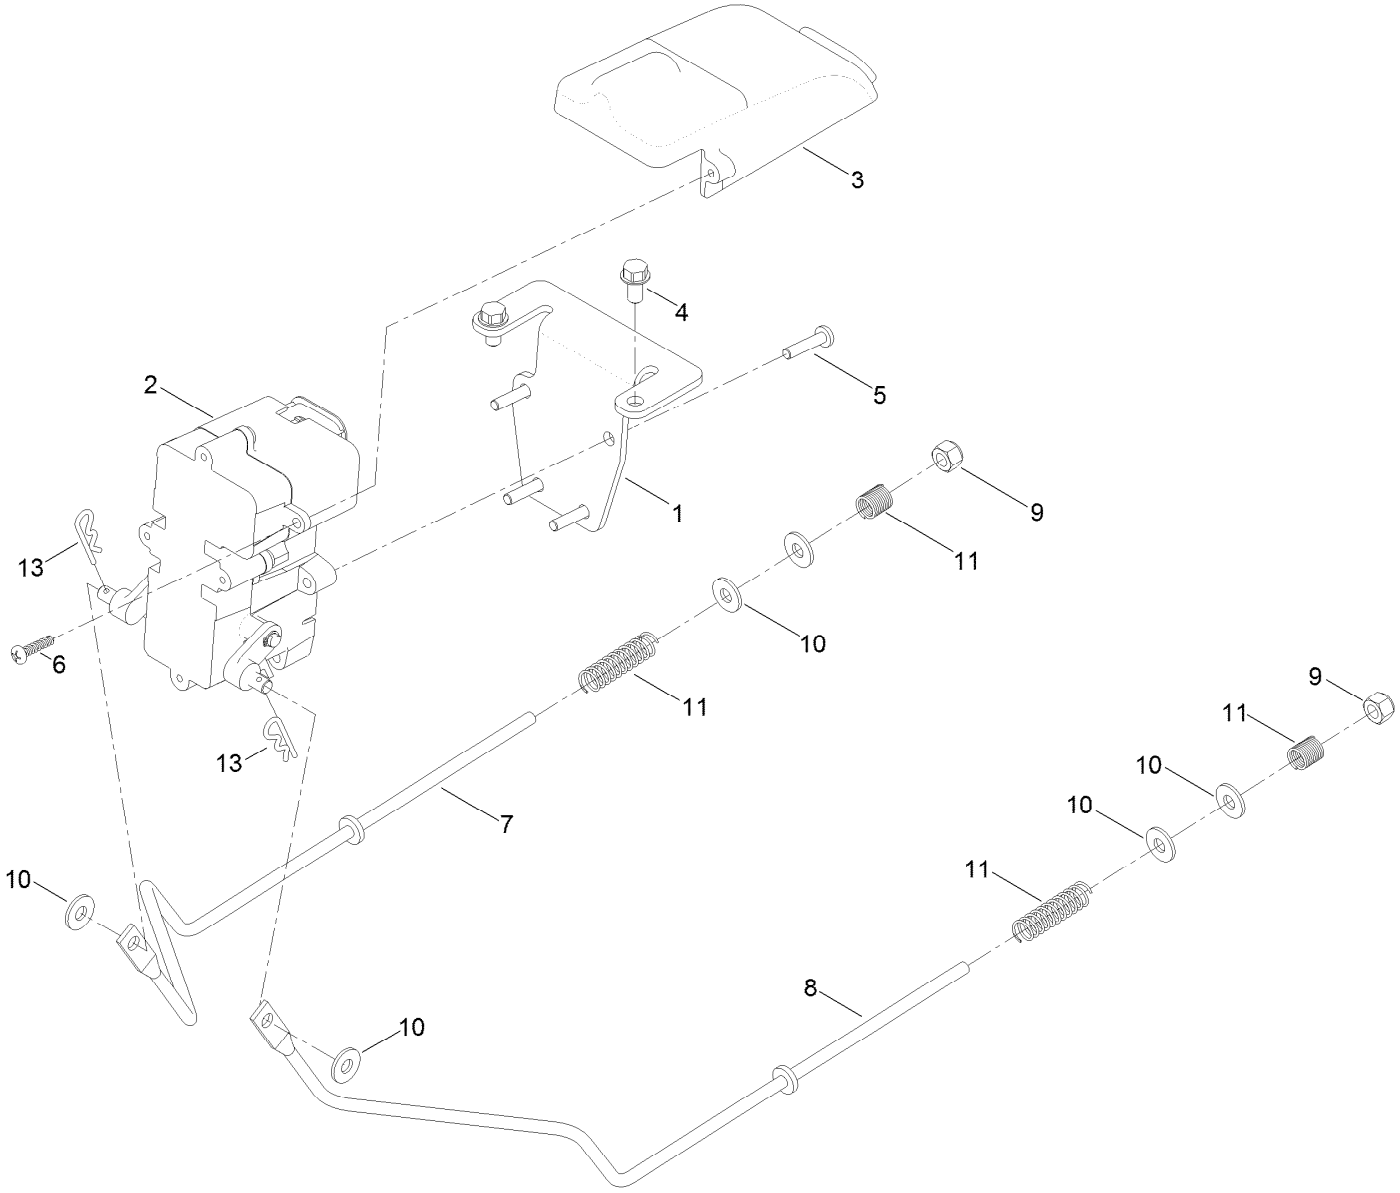

Brake Assembly (continued)

Ref.	Part Number	Qty.	Description
1	130-0790-03	1	Bracket-Mount, Brake
2	136-7480	1	Brake Box ASM
3	132-6949	1	Cover-Connector
4	32144-4	2	Screw-HWH
5	32144-36	4	Screw-PPH
6	94-4496	2	Screw-PPH
7	121-2976	1	Rod-Brake, Wide (RH)
8	121-2977	1	Rod-Brake, Wide (LH)
9	3296-42	2	Nut-Lock, NI
10	119-8952	6	Washer
11	117-1169	4	Spring-Compression
13	3290-307	2	Pin-Cotter

Tire Assembly

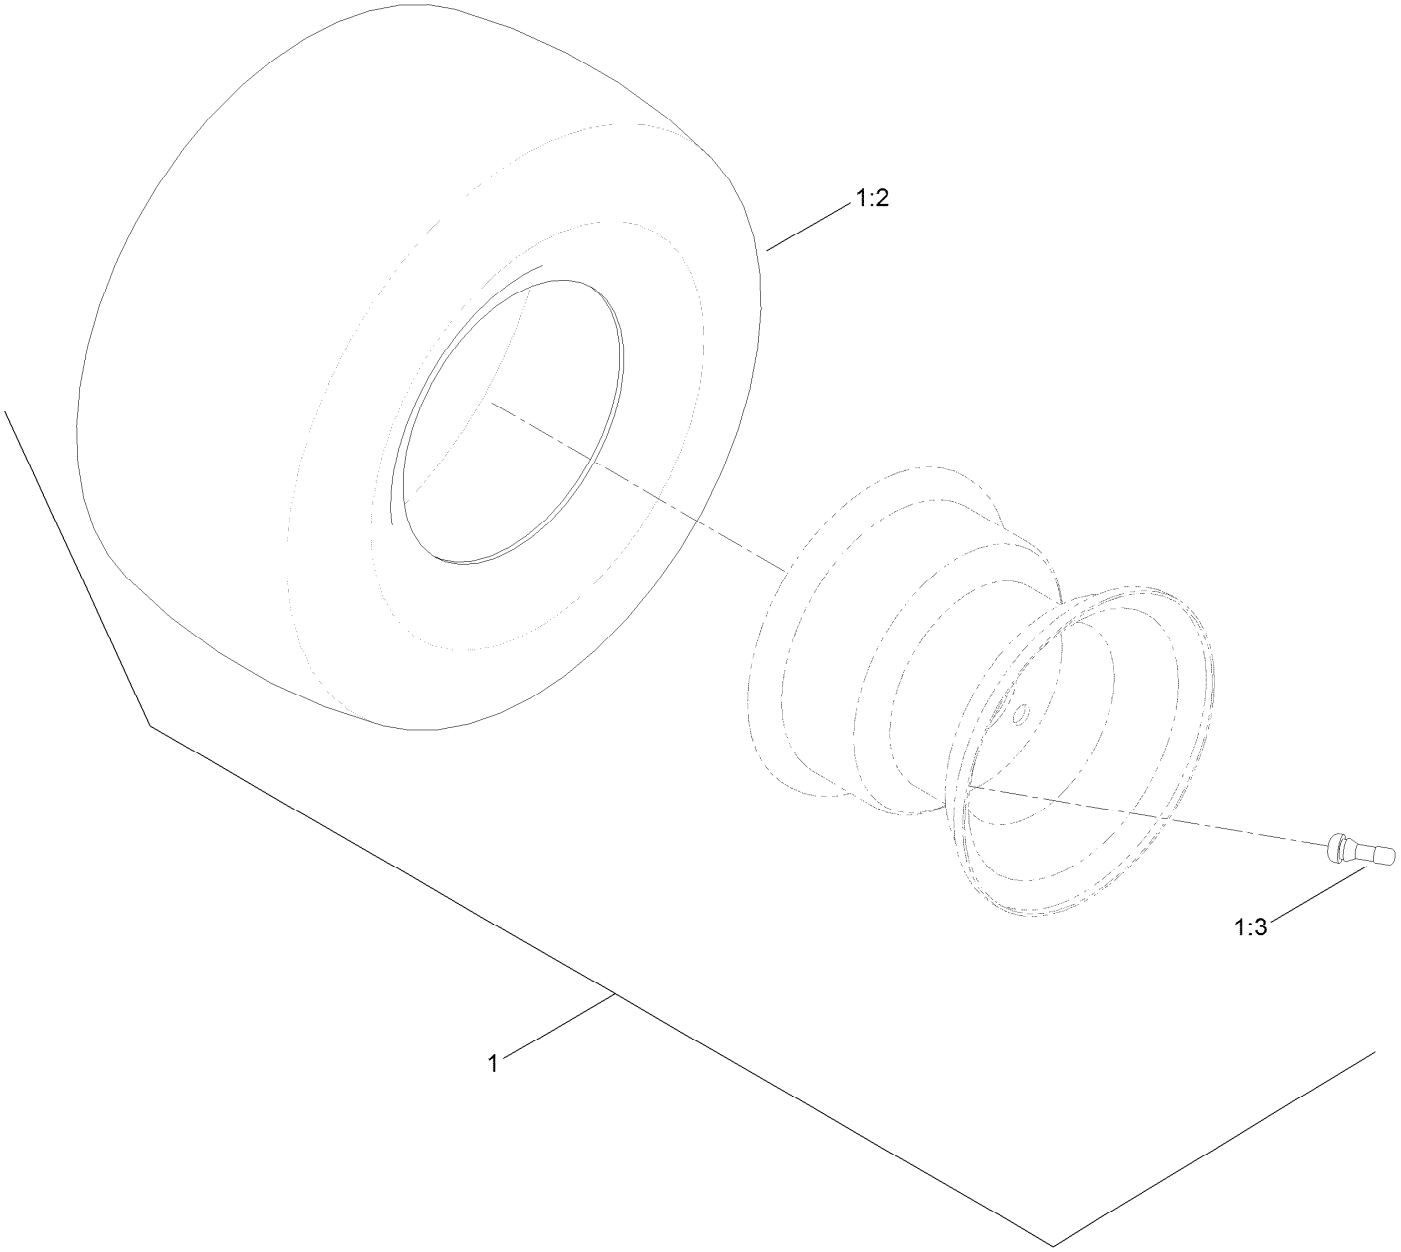


Tire Assembly (continued)

Ref.	Part Number	Qty.	Description
1	131-3673	2	2 Ply Tire And Wheel ASM
1:2	131-3680	1	Tire-2 Ply
1:3	232-27	1	Stem-Valve
1:4	93-3893	1	Tube-Inner ●

● Not illustrated


Seat Assembly

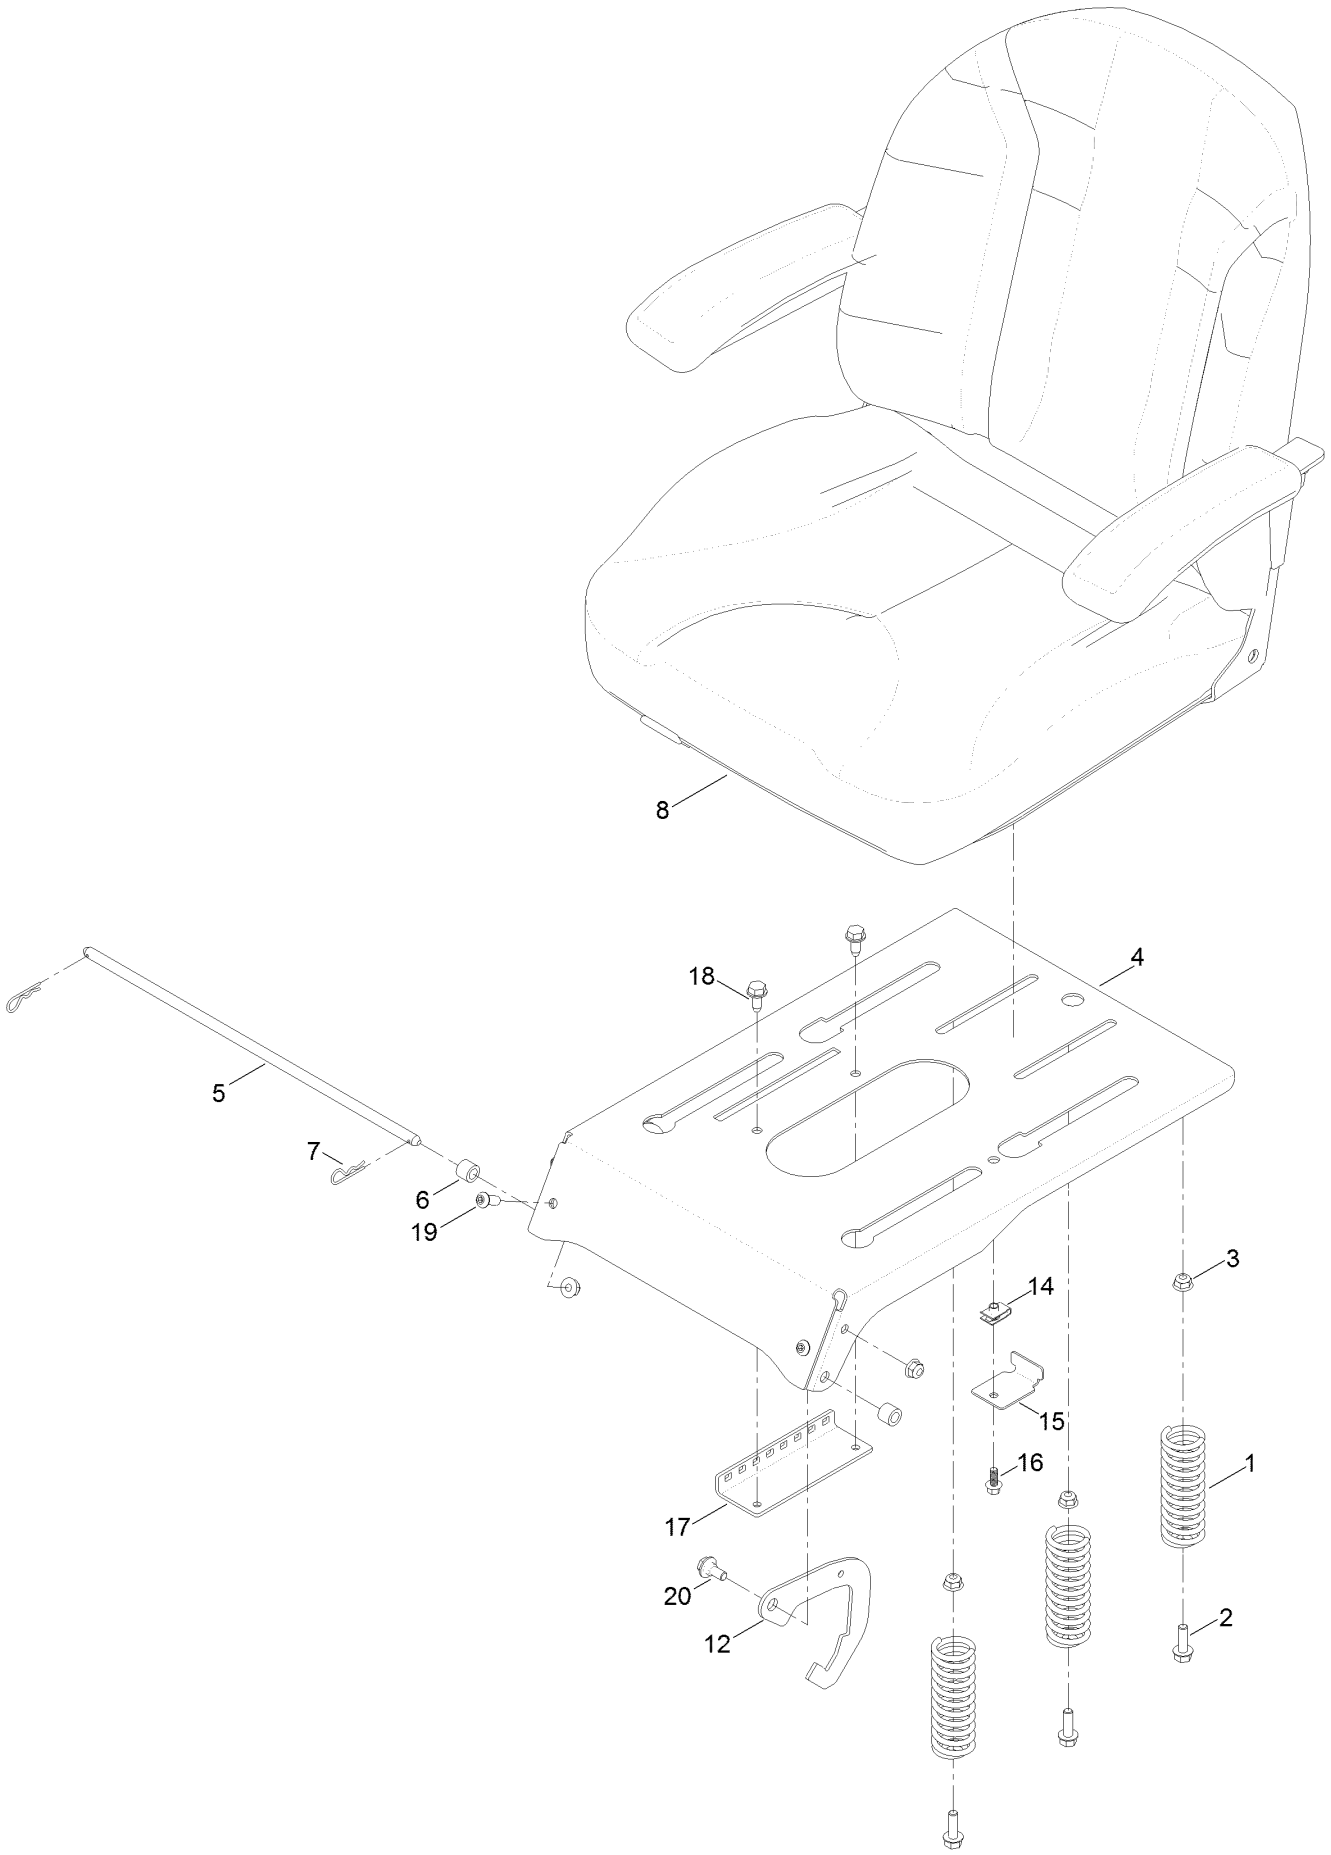

Seat Assembly (continued)

Ref.	Part Number	Qty.	Description
1	92-7054	3	Spring-Compression
2	3234-29	3	Screw-HHF
3	104-8300	7	Nut-HF, NI
4	136-5571-03	1	Pan-Seat, Deluxe
5	115-4966	1	Rod-Stop
6	1-413088	2	Bushing-Lever, Lift
7	3290-250	2	Pin-Cotter
8	131-4147	1	Seat ASM
12	132-9353	2	Latch-Seat
14	107069	1	Clip
15	131-1038	1	Bracket-Stop, Seat
16	99-6810	1	Screw-HHF
17	131-4008-03	1	Bracket-Latch, Seat
18	32144-70	2	Screw-Thd Roll, HWH
19	3274-55	2	Screw-HSBH
20	19-1470	2	Screw-Shoulder


Seat Assembly No. 131-4147

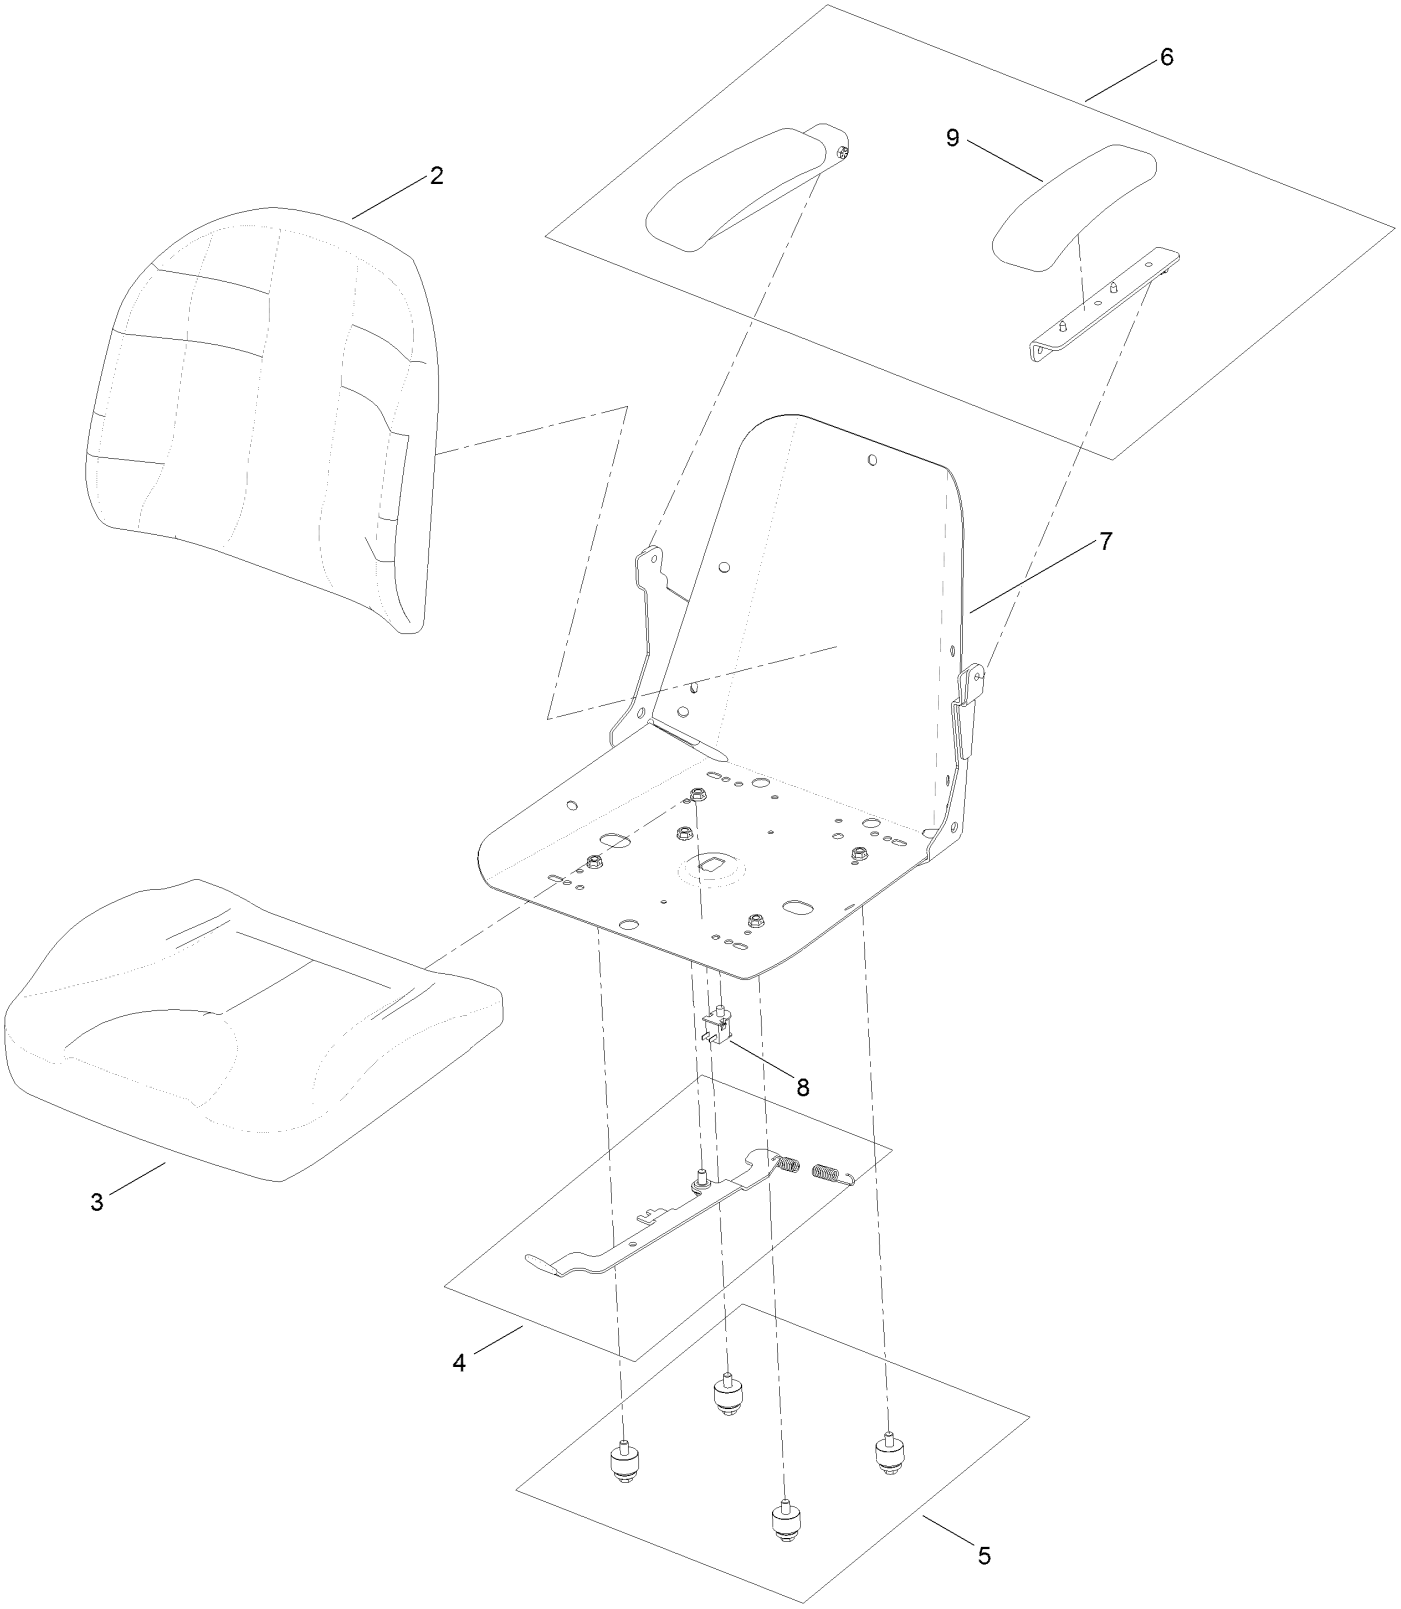

Seat Assembly No. 131-4147 (continued)

Ref.	Part Number	Qty.	Description
2	131-4149	1	Cushion-Seat, Back
3	131-4151	1	Cushion-Seat, Bottom
4	131-4153	1	Track ASM
5	131-4154	1	Bushing ASM
6	131-4155	1	Armrest Kit
7	131-4156	1	Shell
8	82-2190	1	Switch-Bail
9	110-4163	2	Cushion-Rest, Arm


Motion Control Assembly

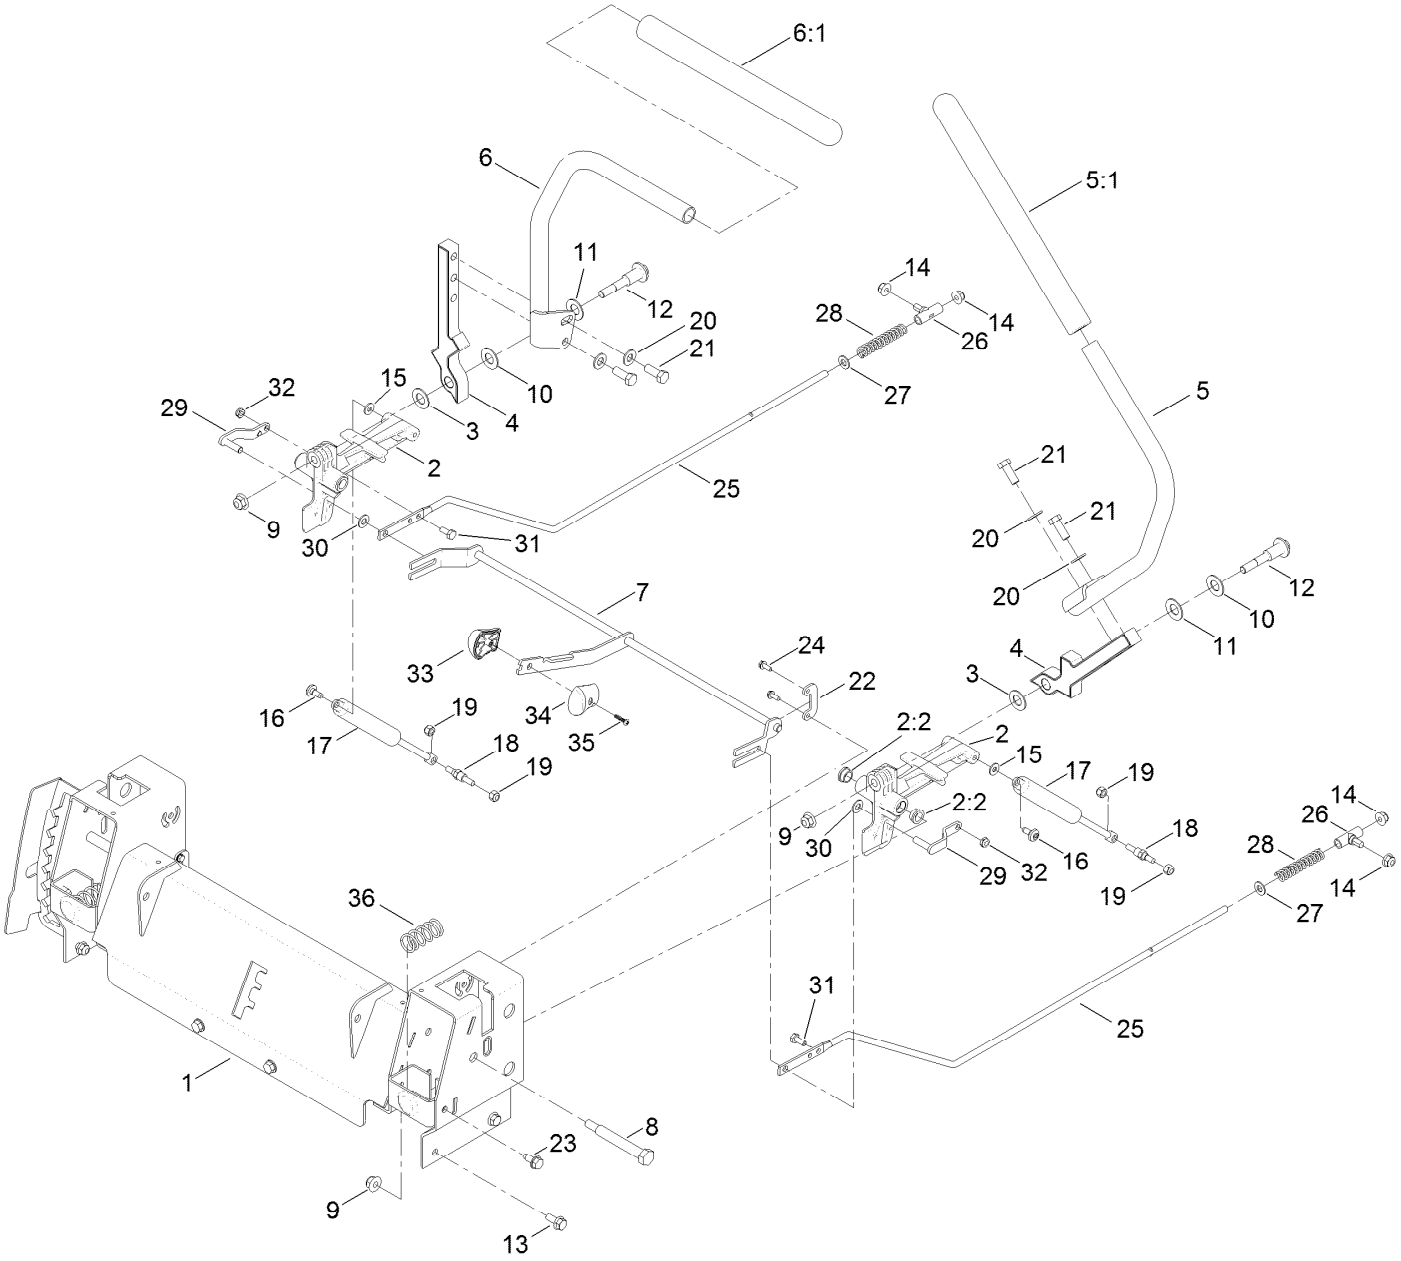

Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	136-4155-03	1	Control Box ASM
2	119-3470	2	Actuator Arm ASM
2:2	256-156	2	Bushing-Flange
3	120-2273	2	Washer-Nylon
4	115-5098-05	2	Lever-Control
5	121-0730	1	Handle-Control, LH
5:1	121-0726	1	Grip
6	121-0731	1	Handle-Control, RH
6:1	121-0726	1	Grip
7	131-1062	1	Speed Control ASM
8	115-5099	2	Bolt-Pivot
9	104-8301	4	Nut-HF, NI
10	117-1240	2	Washer
11	119-8925	2	Washer-Belleville
12	117-1198	2	Bolt-Pivot
13	3234-47	6	Screw-HHF
14	104-8300	10	Nut-HF, NI
15	119-8952	2	Washer
16	120-7950	2	Screw-Shoulder
17	131-4132	2	Damper
18	110-6810	2	Stud-Damper
19	3296-42	4	Nut-Lock, NI
20	3256-24	4	Washer-Flat
21	323-6	4	Screw-HH
22	117-5385	2	Retainer
23	32144-70	4	Screw-Thd Roll, HWH
24	32144-1	4	Screw-Taptite
25	117-5388	2	Rod-Hydro
26	119-8842	2	Mount-Rod, Hydro
27	3256-23	2	Washer-Plain
28	1-603807	2	Spring-Return, Neutral
29	119-3303	2	Pin-Rod, Hydro
30	93-6079	2	Spacer-Nylon
31	321-3	2	Screw-HH
32	3296-56	2	Nut-Lock, NI
33	119-8935	1	Knob-RH
34	119-8936	1	Knob-LH
35	94-4496	1	Screw-PPH
36	119-8876	2	Spring-Return

Engine and Muffler Assembly

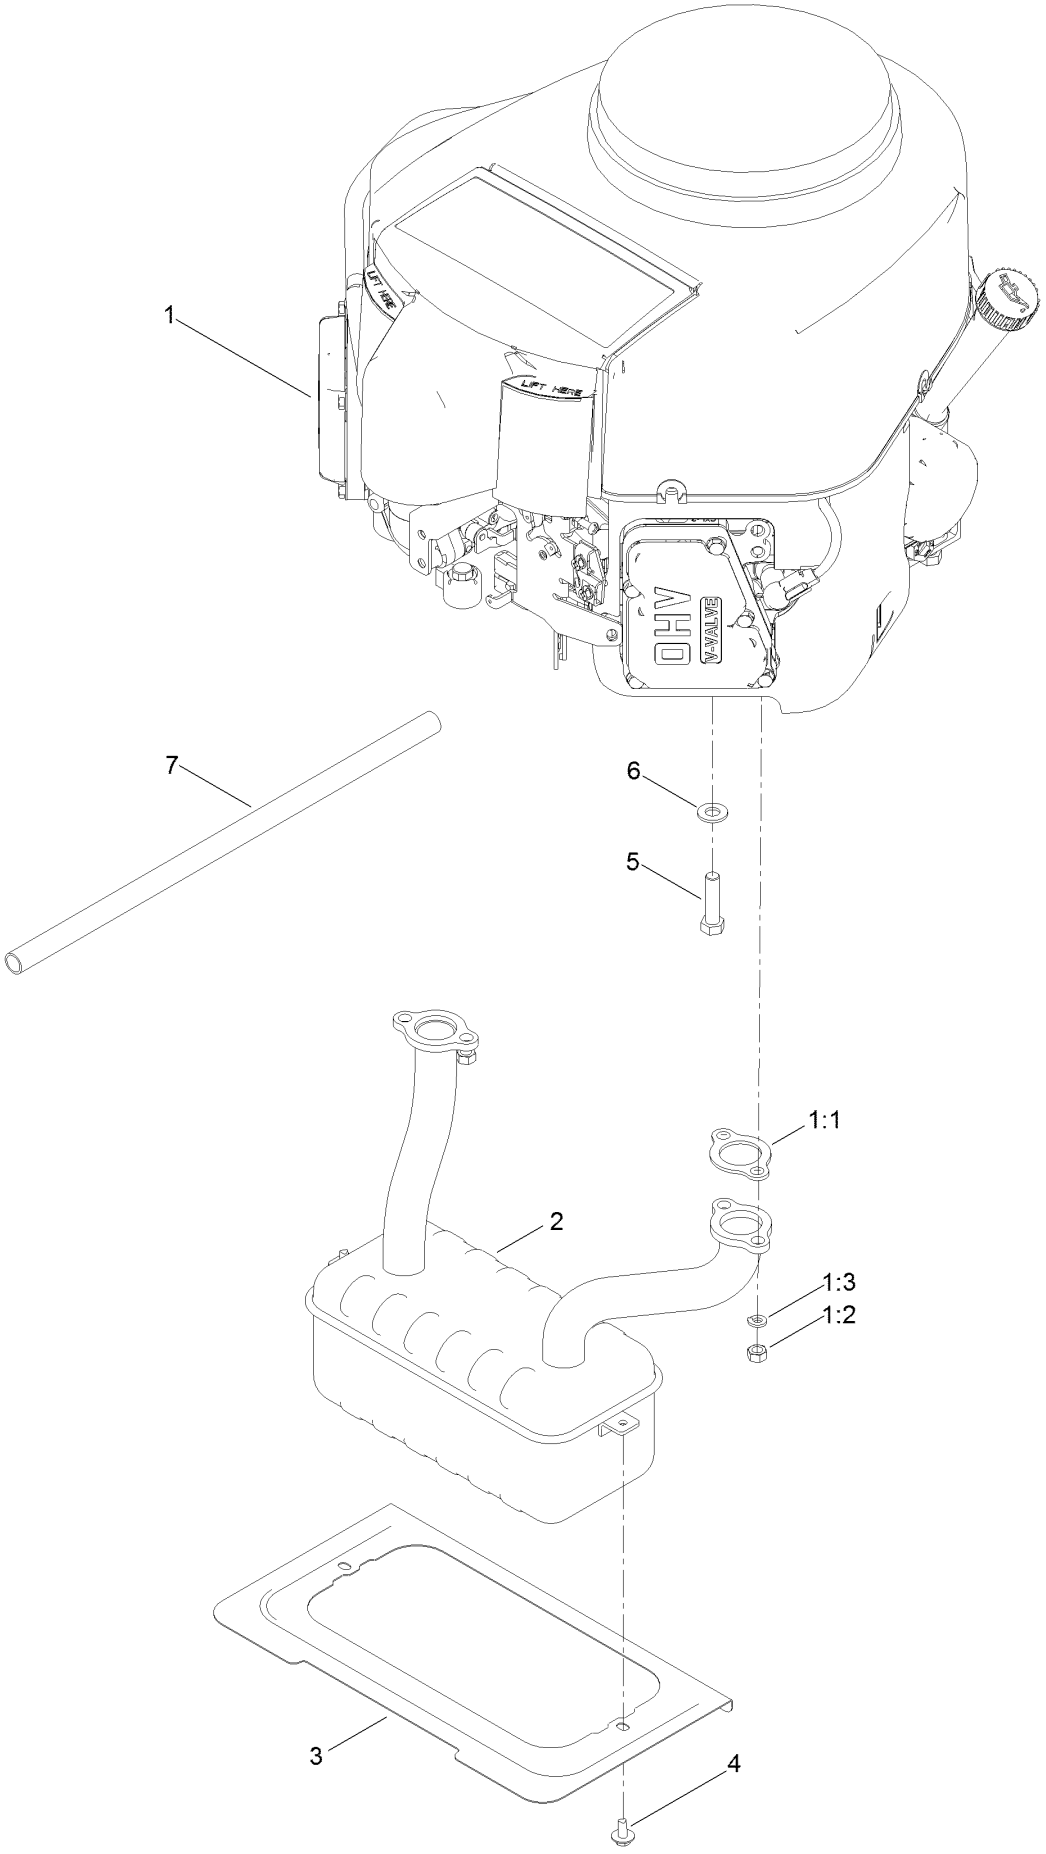


Engine and Muffler Assembly (continued)

Ref.	Part Number	Qty.	Description
1		1	Engine-Kawasaki, Fr691V-S07-R ●■
1:1	1-653313	2	Gasket-Exhaust
1:2	114-3549	4	Nut
1:3	114-3550	4	Washer-Lock
2	130-0673	1	Muffler
3	131-1071-03	1	Shield-Heat
4	46-8560	2	Screw-HHFTF
5	323-50	4	Bolt-HH
6	3256-24	3	Washer-Flat
7	106-7022	1	Tube-Drain, Oil

● Not serviced separately

■ Obtain parts from www.kawpowerepc.com


Body Styling and Fuel Tank Assembly

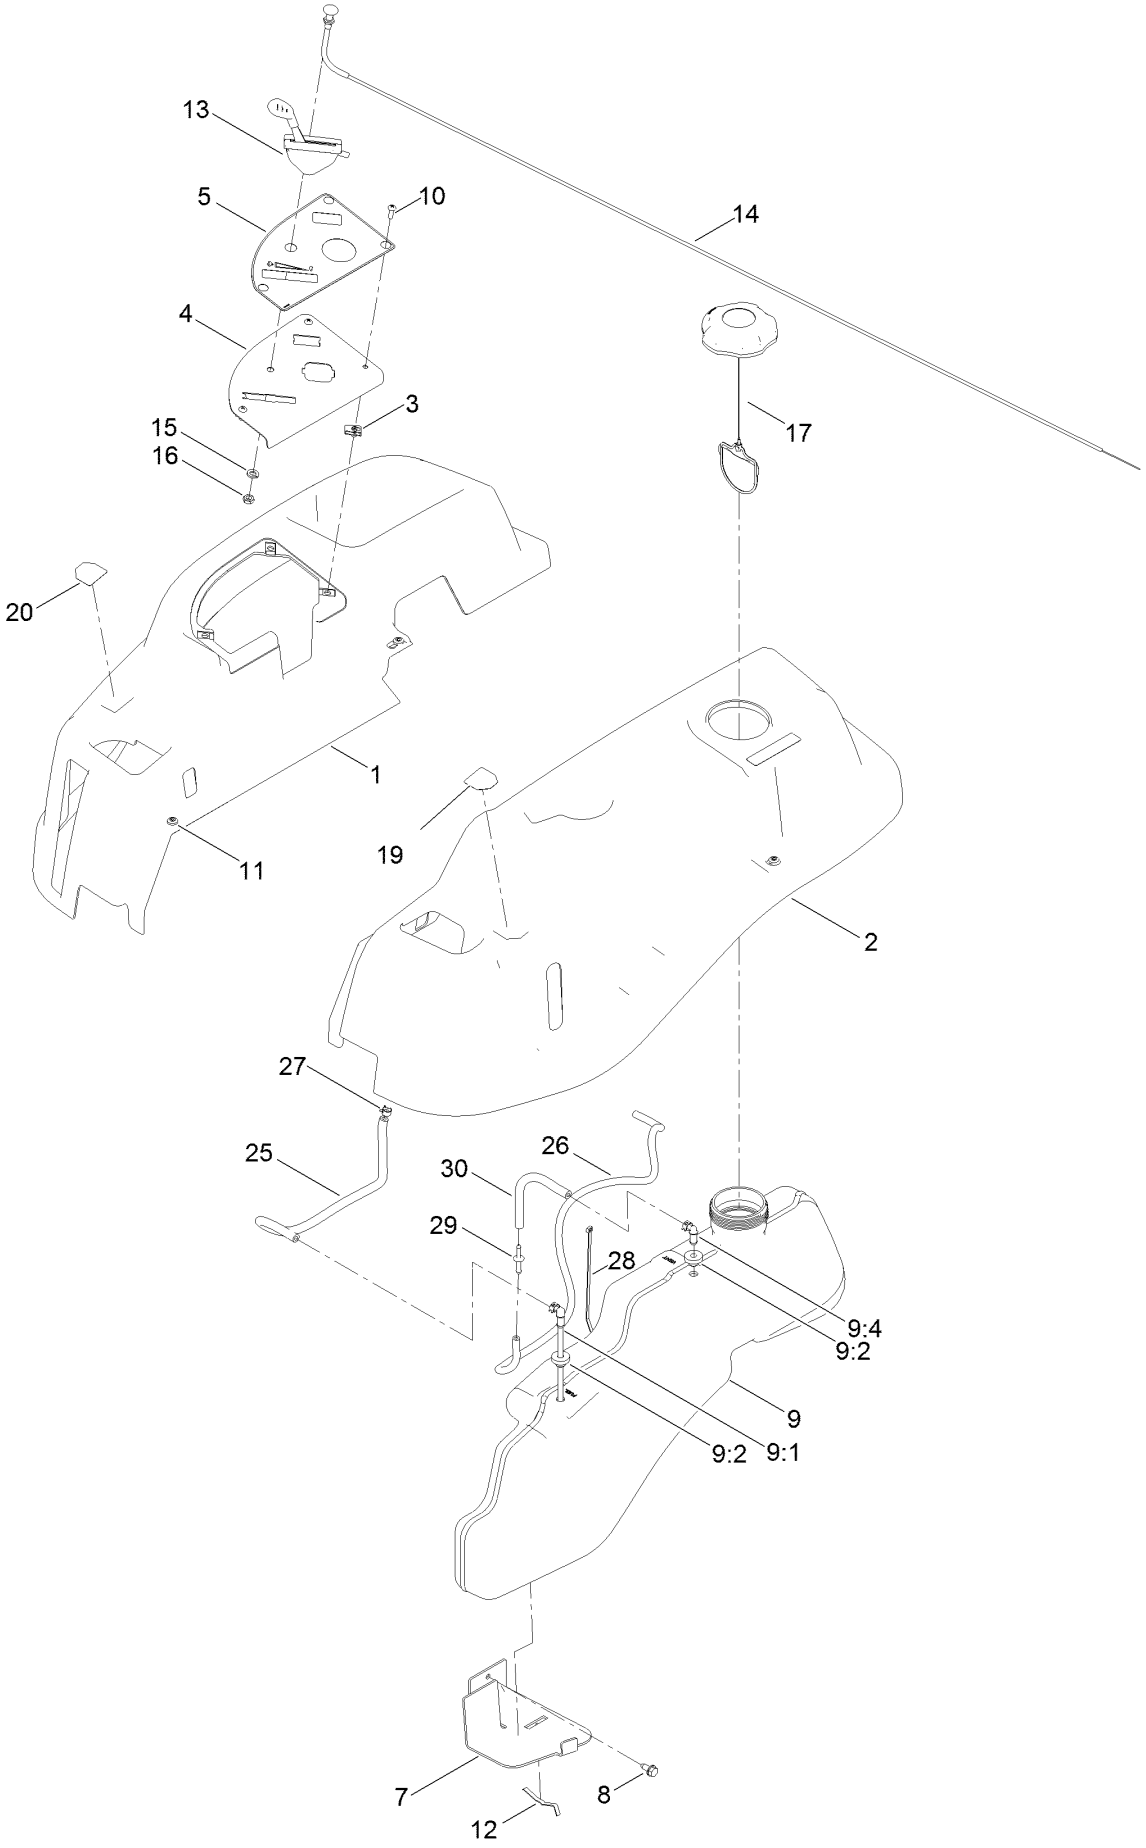

Body Styling and Fuel Tank Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-3338	1	Pod-RH
2	119-3337	1	Pod-LH
3	107069	3	Clip
4	119-3377-03	1	Plate-Control
5	121-0773	1	Decal-Panel, Control
7	119-3395-03	1	Support-Tank, Front
8	32144-70	2	Screw-Thd Roll, HWH
9	119-3324	1	Fuel Tank ASM
9:1	121-0793	1	Connector-Elbow, 90 DEG
9:2	46-6560	2	Bushing
9:4	117-7400	1	Fitting-Plastic
10	3258-166	3	Screw-PRH
11	120-7950	6	Screw-Shoulder
12	609830	2	Spring
13	121-0769	1	Cable-Throttle
14	112-9753	1	Cable-Choke
15	3253-21	1	Washer-Lock
16	3220-3	1	Nut-HJ
17	120-5461	1	Cap-Fuel, Ratcheting
19	119-8814	1	Decal-Lever, Control (LH)
20	119-8815	1	Decal-Lever, Control (RH)
25	109-0301	1	Hose-Fuel
26	51-3212	1	Hose-Fuel
27	2412-98	3	Clamp-Hose
28	614249	3	Tie-Cable
29	117-5399	1	Adaptor-Orifice
30	110-1876	1	Hose-Fuel


Battery and Electrical Assembly

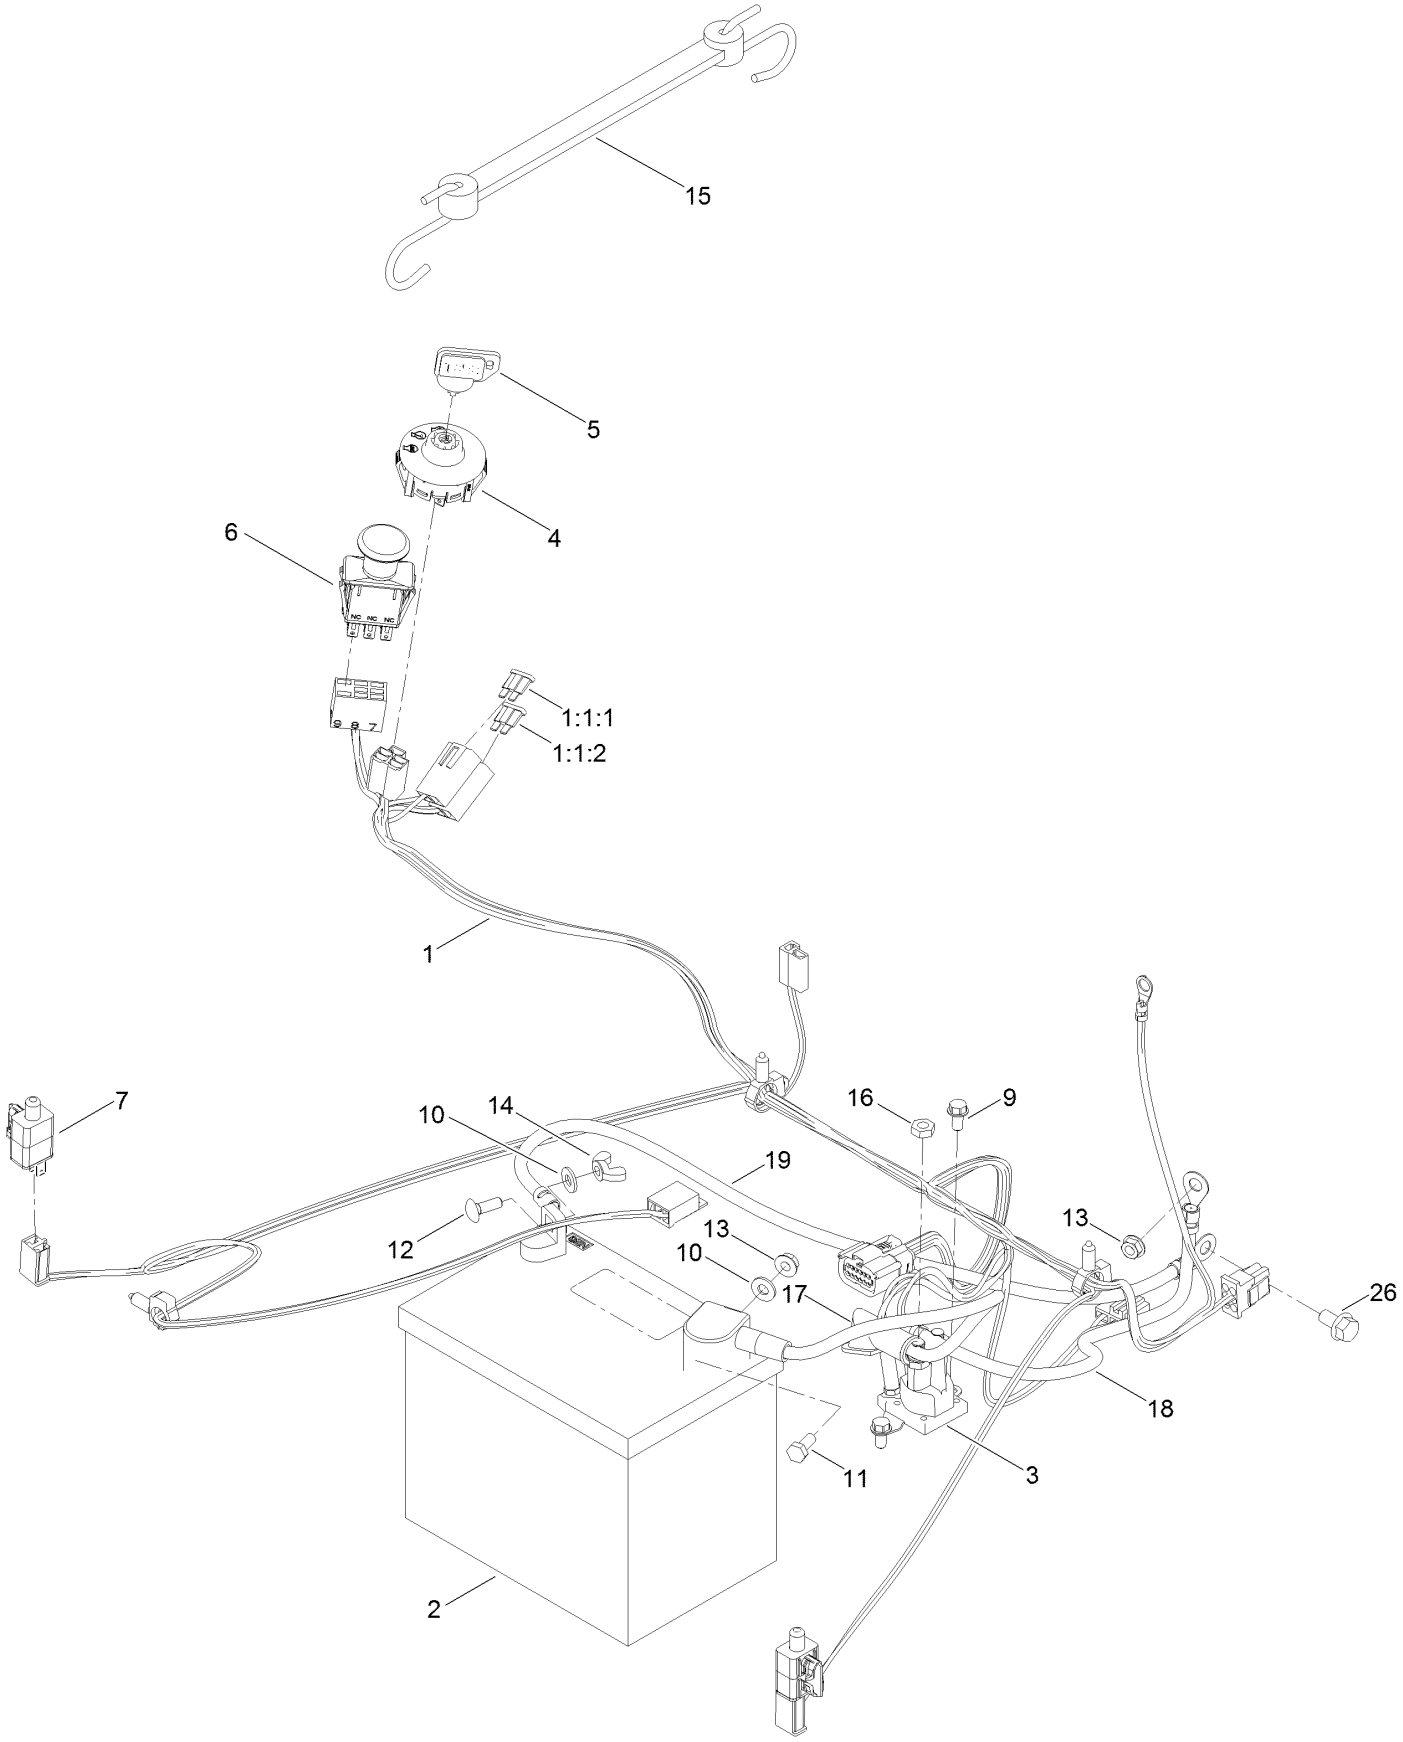

Battery and Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	136-7482	1	Harness-Wire
1:1:1	109103	1	Fuse-Blade, 30 Amp
1:1:2	109102	1	Fuse-Blade, 25 Amp
2	105-1692	1	Battery
3	117-1197	1	Solenoid
4	117-2221	1	Switch-Ignition
5	63-8360	1	Key-Ignition
6	103-5221	1	Switch-PTO
7	110-6765	2	Switch
9	32144-4	2	Screw-HWH
10	3256-22	2	Washer-Flat
11	321-3	1	Screw-HH
12	3229-1	1	Bolt-CARR
13	32128-33	2	Nut-HF
14	32103-22	1	Nut-Wing
15	104-2466	1	Holddown-Battery
16	3220-2	2	Nut-Jam
17	119-8897	1	Cable-Battery, Red
18	119-8898	1	Cable-Battery, Red
19	119-8899	1	Cable-Battery, Black
26	33104-016	1	Screw-HHF


50 Inch Deck Assembly

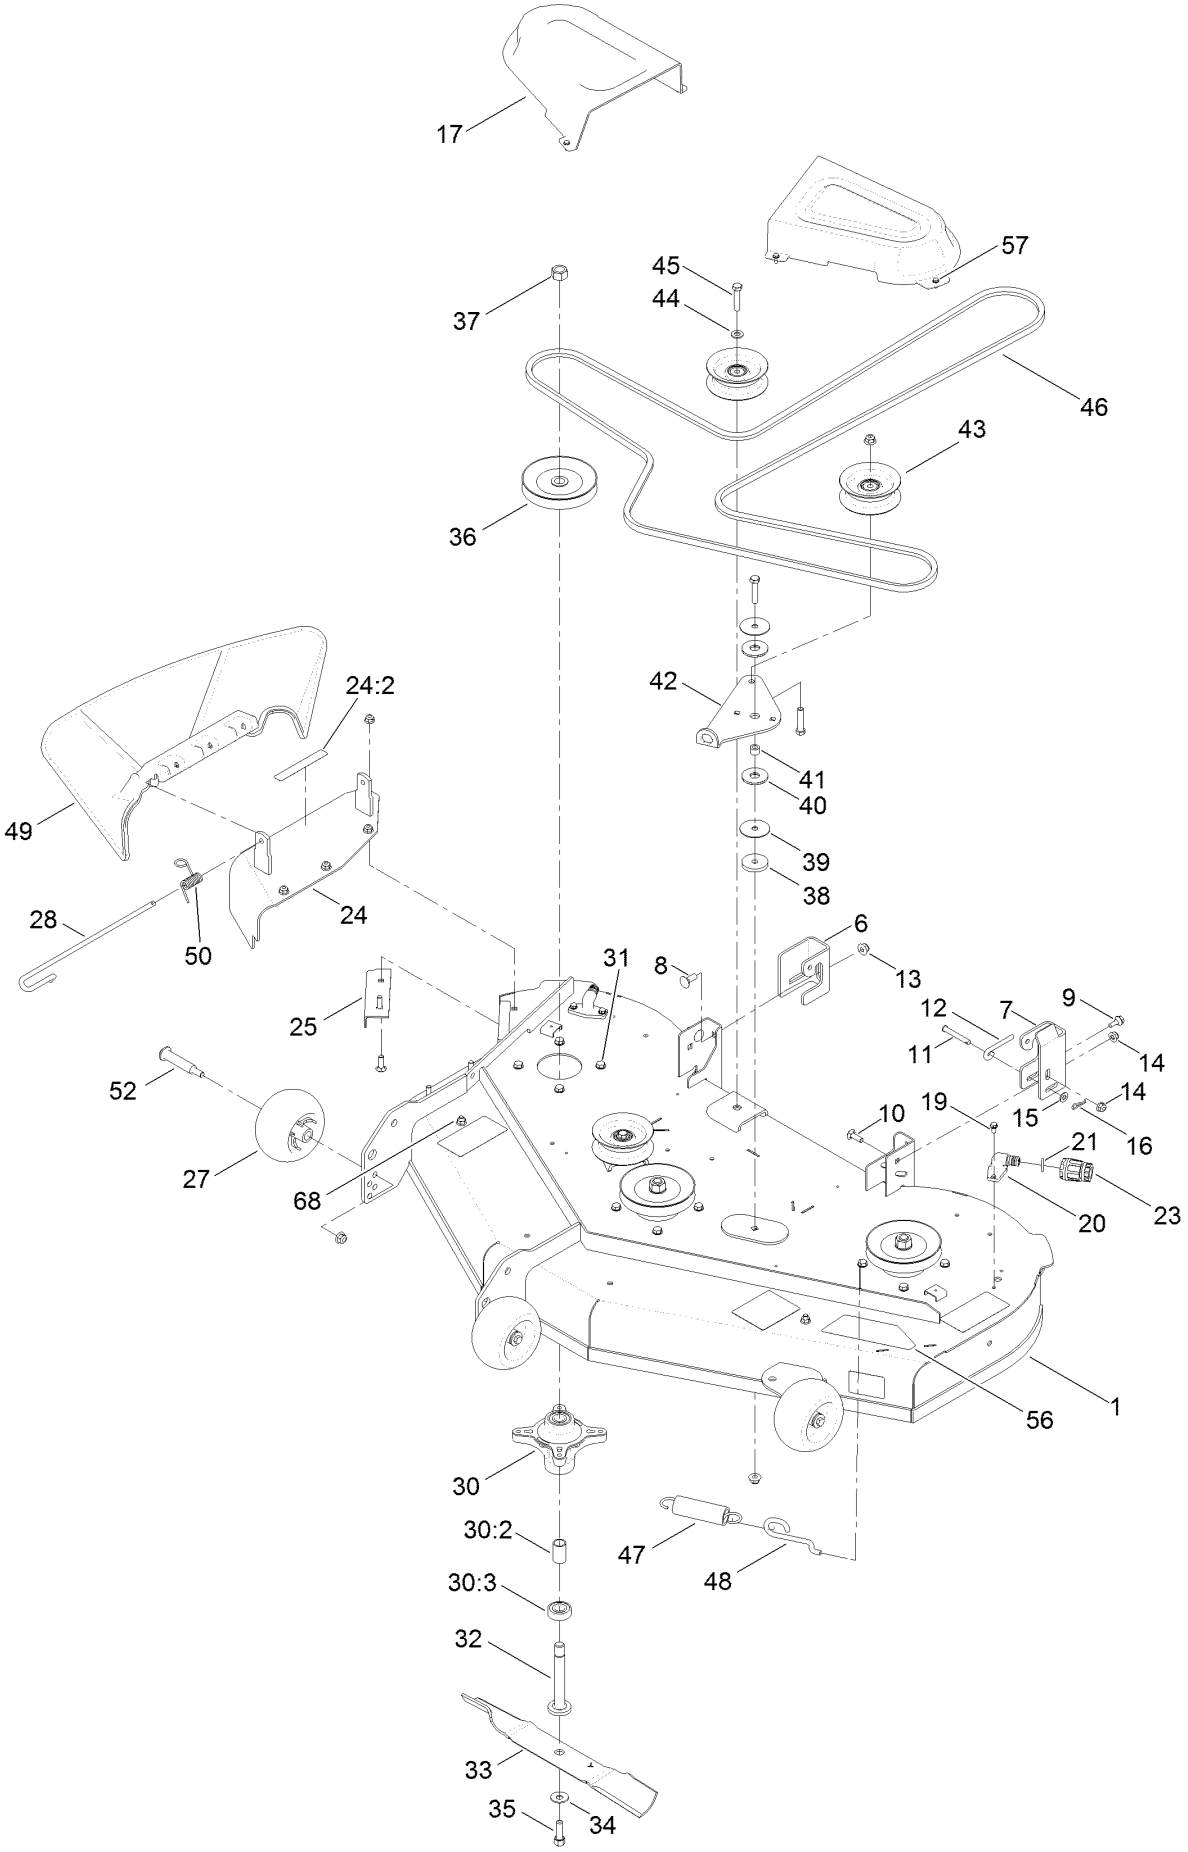

50 Inch Deck Assembly (continued)

Ref.	Part Number	Qty.	Description
1	131-3614	1	Deck And Decal ASM
6	131-4138	1	Bracket-Hanger, RH
7	131-3935	1	Bracket-Hanger, LH
8	3231-2	2	Bolt-CARR
9	120-7024	1	Screw-Shoulder, HHF
10	3230-22	5	Screw-CARR
11	110-0618	1	Pin-Clevis
12	131-0955	1	Rod-Level, Deck
13	104-8301	7	Nut-HF, NI
14	104-8300	8	Nut-HF, NI
15	3256-23	1	Washer-Plain
16	1-806003	1	Pin-Cotter
17	108-7890	2	Cover-Belt
19	32144-4	4	Screw-HWH
20	95-2747	2	Fitting-Washout
21	46-6290	2	O-Ring
23	95-3270	1	Connector-Hose
24	131-3962	1	Cover ASM W/Decal
24:2	93-7009	1	Decal-Danger
25	120-7951-03	1	Baffle-Cutoff
27	1-603299	3	Roller-Scalp, Anti
28	109-8854	1	Pin-Chute
30	121-0751	3	Spindle ASM
30:2	120-7935	2	Spacer
30:3	38-7820	2	Bearing-Ball
31	32144-41	12	Screw-Taptite
32	117-7268	3	Shaft-Spindle
33	115-5059-03	3	Blade-Hi Lift
34	3290-465	3	Washer-Belleville
35	26-0671	3	Screw-HH
36	125-5575	3	Pulley
37	3219-6	3	Nut-Hex
38	110-9981	1	Washer-Plain
39	120-2229	2	Washer
40	114-0463	2	Washer-Friction, Composite
41	115-4986	1	Spacer
42	114-8540	1	Arm-Idler
43	106-2175	3	Pulley-Idler, Flat
44	3256-24	2	Washer-Flat
45	323-9	4	Screw-HH
46	119-8820	1	V-Belt
47	1-603414	1	Spring-Extension
48	112-3973	1	Hook-Return, Spring
49	121-0739	1	Deflector-Discharge
50	121-2983	1	Spring-Torsion
52	112-3977	3	Bolt-Shoulder
56	121-0792	1	Decal-Deck
57	32144-1	6	Screw-Taptite
68	322-2	2	Screw-HH


50 Inch Deck and Decal Assembly No. 131-3614

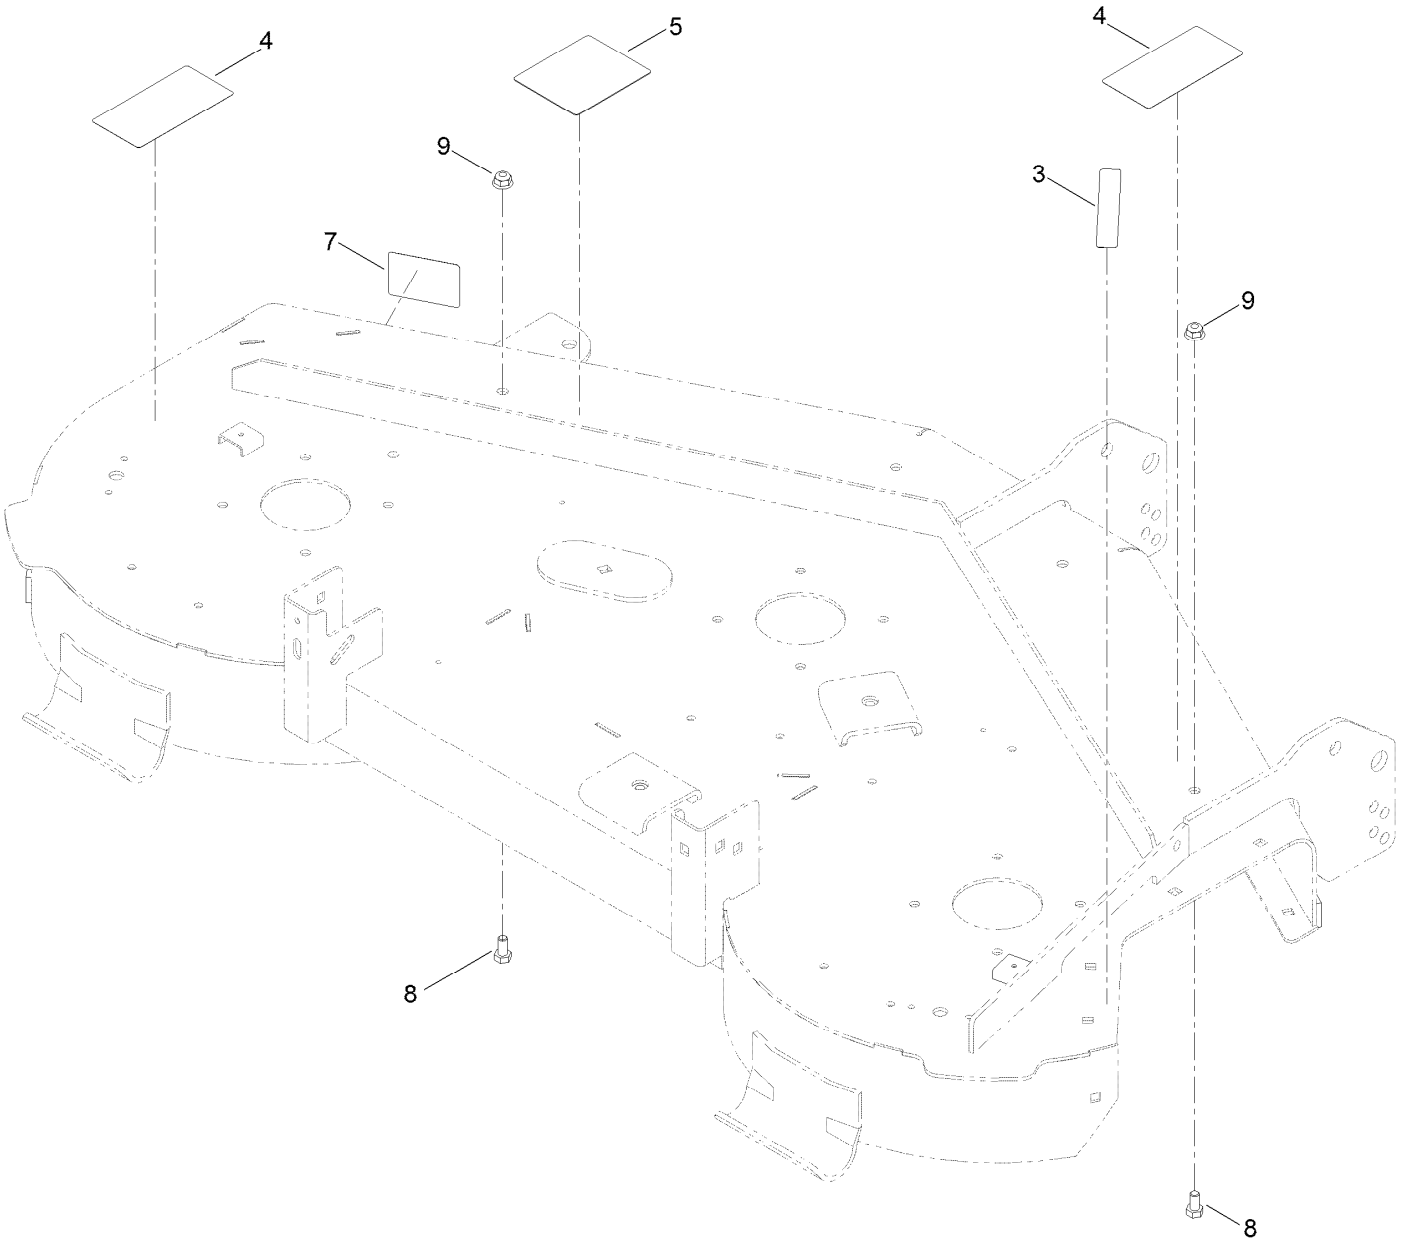

50 Inch Deck and Decal Assembly No. 131-3614 (continued)

Ref.	Part Number	Qty.	Description
3	93-7009	1	Decal-Danger
4	132-0872	2	Decal-Danger, Deck
5	99-3943	1	Decal-Routing, Belt
7	112-9840	1	Decal-Scalp, Anti
8	322-2	2	Screw-HH
9	104-8300	2	Nut-HF, NI


Model Specific Decal Assembly

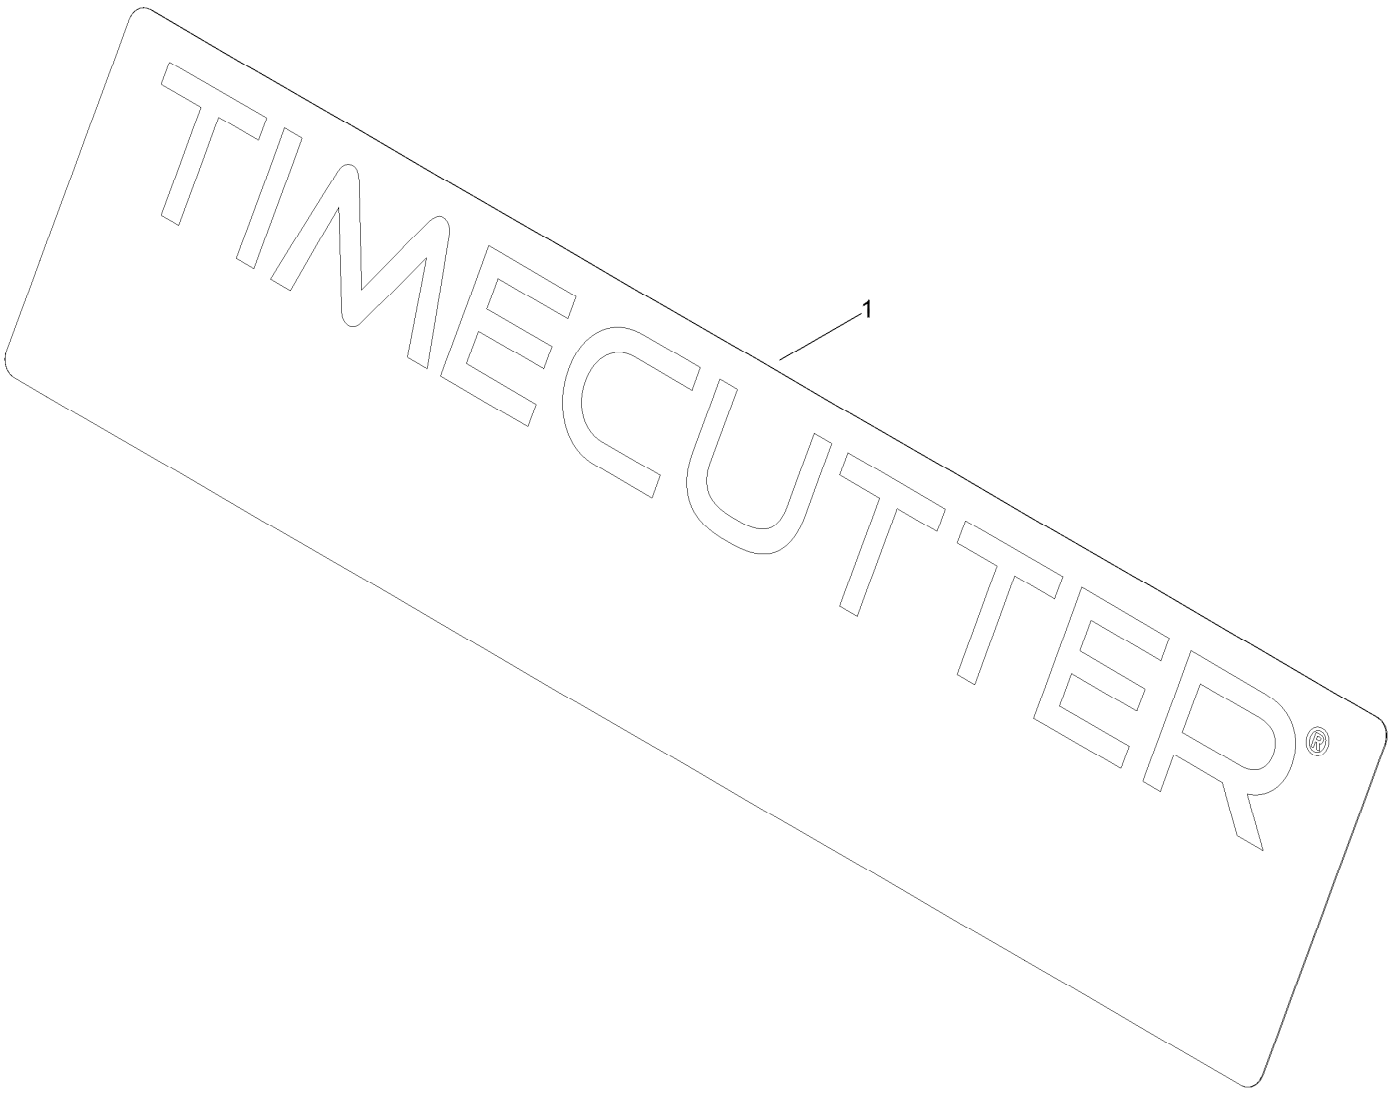

Model Specific Decal Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	136-5579	1	Decal-Timecutter


Frame Decal Assembly

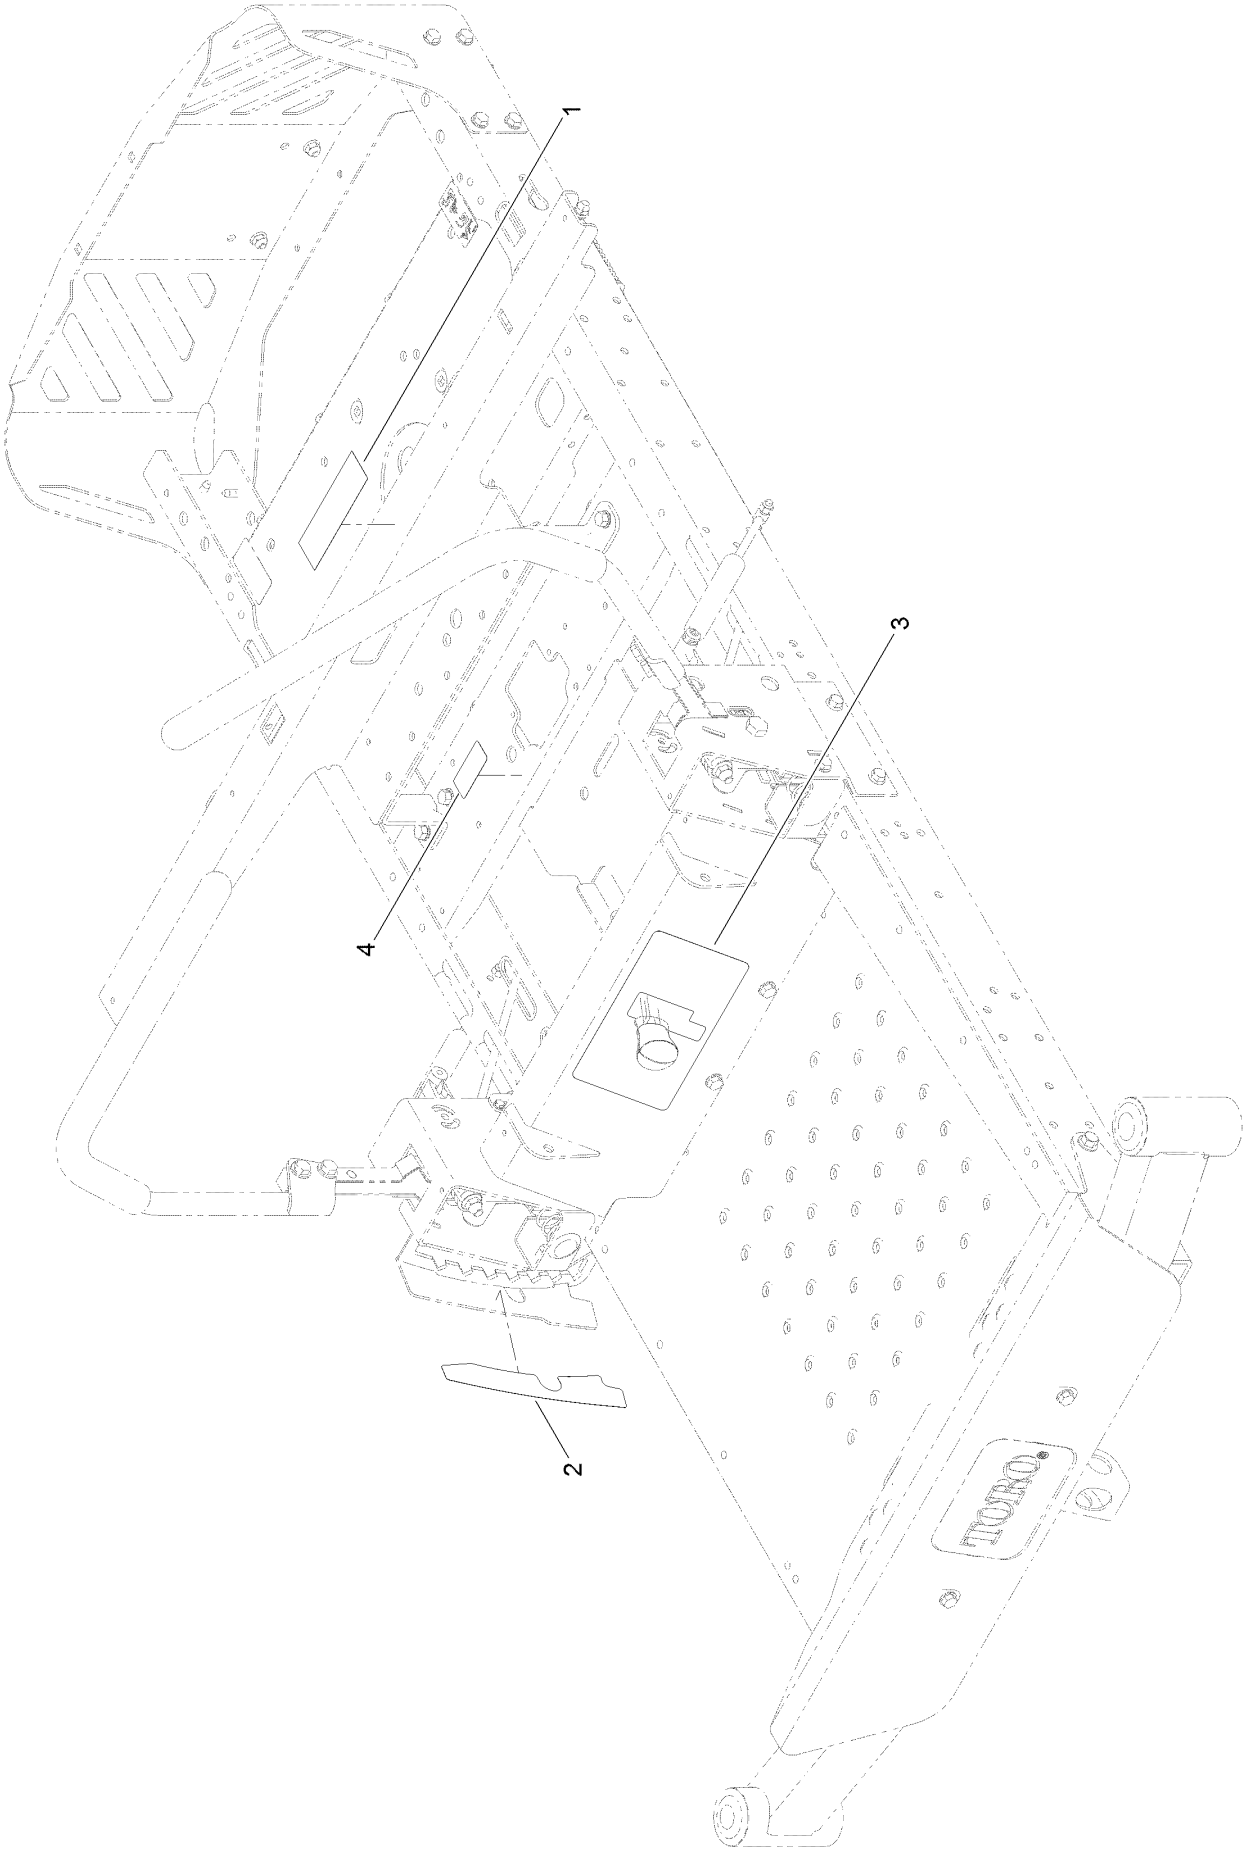

Frame Decal Assembly (continued)

Ref.	Part Number	Qty.	Description
1	106-8717	1	Decal-Service, CE
2	119-8870	1	Decal-HOC
3	131-3947	1	Decal-Control, Speed
4	121-5684	1	Decal-Location, Service Dealer

Clutch Assembly

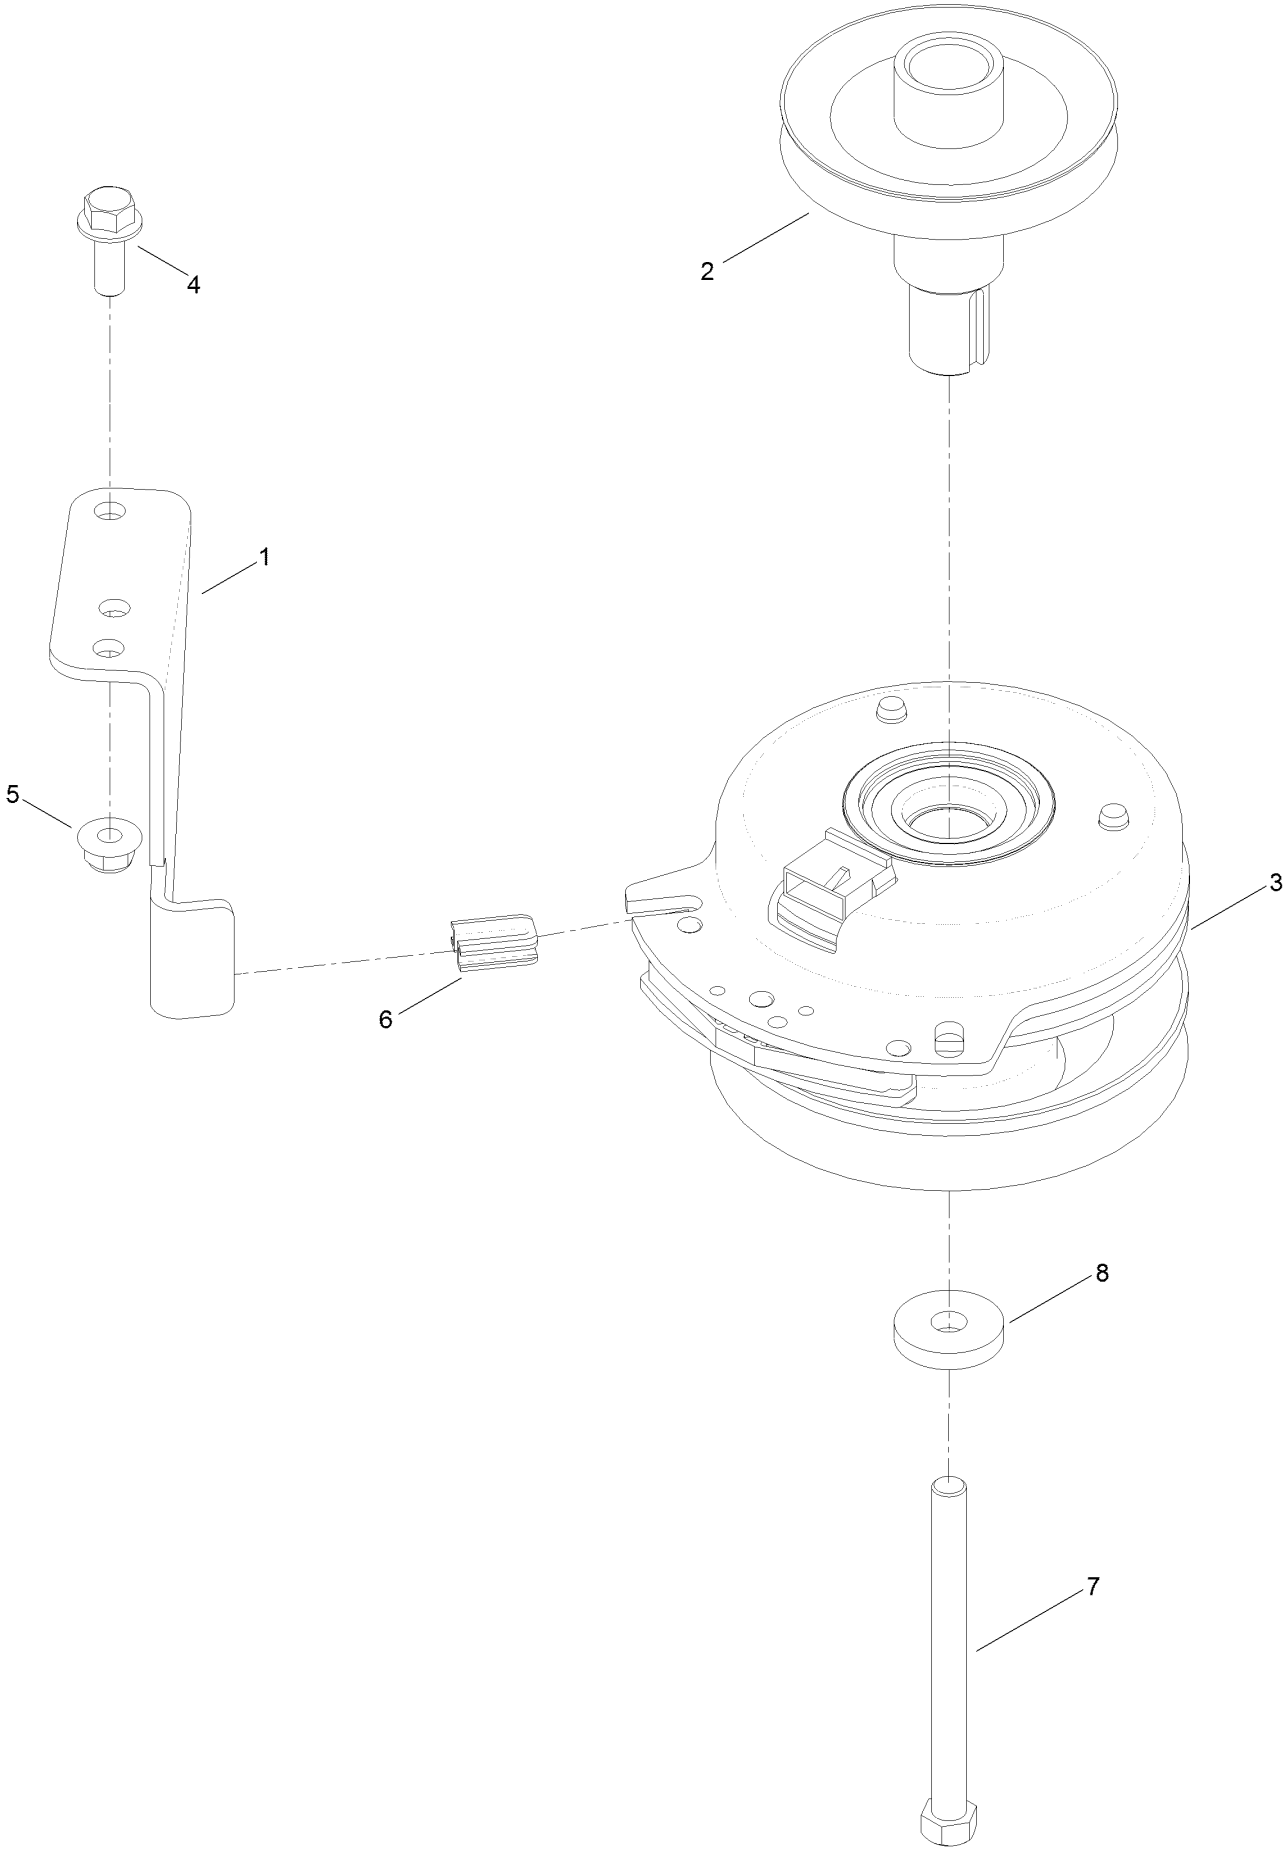

Clutch Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-8885	1	Stop-Clutch
2	130-6854	1	Pulley-Engine
3	127-3410	1	Clutch-PTO
4	3234-42	1	Screw-HHF
5	104-8301	1	Nut-HF, NI
6	120-2217	1	Isolator-Clutch
7	3212-19	1	Screw-HH
8	112843	1	Washer

Attachments and Accessories

For 74776 TimeCutter MX 5025 Riding Mower

Product Name	Model/Part
Hourmeter Kit	116-5461
All Season Synthetic Oil	117-0066
Seat Cover w/Arm Rest	117-0097
Bagging Enhancement Kit	121-5692
Striping Kit	121-5706
Jack Mount Kit	126-5251
Jack Kit	127-6666
Fuel Stabilizer .05 oz	130-2393
4-Cycle Fuel, Snow And Lawn 32oz Can	131-3823
Attachment Mount Kit	131-3966
Toro Premium Fuel Treatment 12 Oz Bottle	131-6572
Weight Kit	131-7658
Floor Mat Kit	132-6921
Seat ASM	136-5598
10w30 4-cycle Engine Oil (32oz Bottle)	38280
Toro 4-cycle SAE 30 Oil (32oz Bottle)	38903
Storage Cover	490-7516
Foot Assist Deck Lift Kit, 2011 and After Zero-Turn-Radius Riding Mower	79010
Sunshade Kit	79011
Blade Kit	79016P
50in Recycler Kit	79024
Assist Handle and Step Kit	79339
50in Bagger	79395

Notes:



Count on it.