Form No. 3400-840 Rev B

TORO®

Count on it.

Parts Catalog

# TimeCutter® SW 5425

## Riding Mower

**Model No. 74793—Serial No. 316000001 and Up**

Register at www.Toro.com.
Original Instructions (EN)

*3400-840* B

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents


Frame, Front Axle and Caster Wheel Assembly . . . . . 4
Deck Lift Assembly . . . . . 6
Steering Column Assembly . . . . . 8
Speed Control Assembly . . . . . 10
Neutral Return Assembly . . . . . 12
Steering Gear Assembly . . . . . 14
Steering Cable Assembly . . . . . 16
Steering Assembly . . . . . 18
Motion Control Assembly . . . . . 20
Brake Assembly . . . . . 22
Seat Assembly . . . . . 24
Seat Assembly No. 131-4147 . . . . . 26
Belt and Idler Assembly . . . . . 28
Hydro Transaxle Drive and Rear Wheel Assembly . . . . . 30
2 Ply Wheel and Tire Assembly No. 131-3673 . . . . . 32
RH Transaxle Assembly No. 131-3641 . . . . . 34
LH Transaxle Assembly No. 131-3640 . . . . . 36
Clutch Assembly . . . . . 38
Engine and Muffler Assembly . . . . . 40
Fuel System Assembly with Non-Canister Style Air Filter . . . . . 42
Carburetor Assembly No. 127-9289 with Non-Canister Style Air Filter . . . . . 44
Air Intake and Filtration Assembly with Non-Canister Style Air Filter . . . . . 46
Ignition and Electrical Assembly . . . . . 48
Crankcase and Crankshaft Assembly . . . . . 50
Governor Control Assembly . . . . . 52
Piston and Cylinder Head Assembly . . . . . 54
Blower Housing Assembly . . . . . 56
Gasket and Seal Kit Assembly . . . . . 58
Body Styling and Fuel Tank Assembly . . . . . 60
Fuel Delivery Assembly . . . . . 62
Wire Harness Assembly . . . . . 64
Battery and Electrical Assembly . . . . . 66
54 Inch Deck Assembly . . . . . 68
54 Inch Deck Decal Assembly No. 130-7004 . . . . . 70
54 Inch Deck, Belt and Blade Assembly . . . . . 72
Attachments and Accessories . . . . . 74




**© 2018—The Toro® Company**
**8111 Lyndale Avenue South**
**Bloomington, MN 55420**





**Contact us at www.Toro.com.**
**Printed in the USA.**
**All Rights Reserved**

# Frame, Front Axle and Caster Wheel Assembly

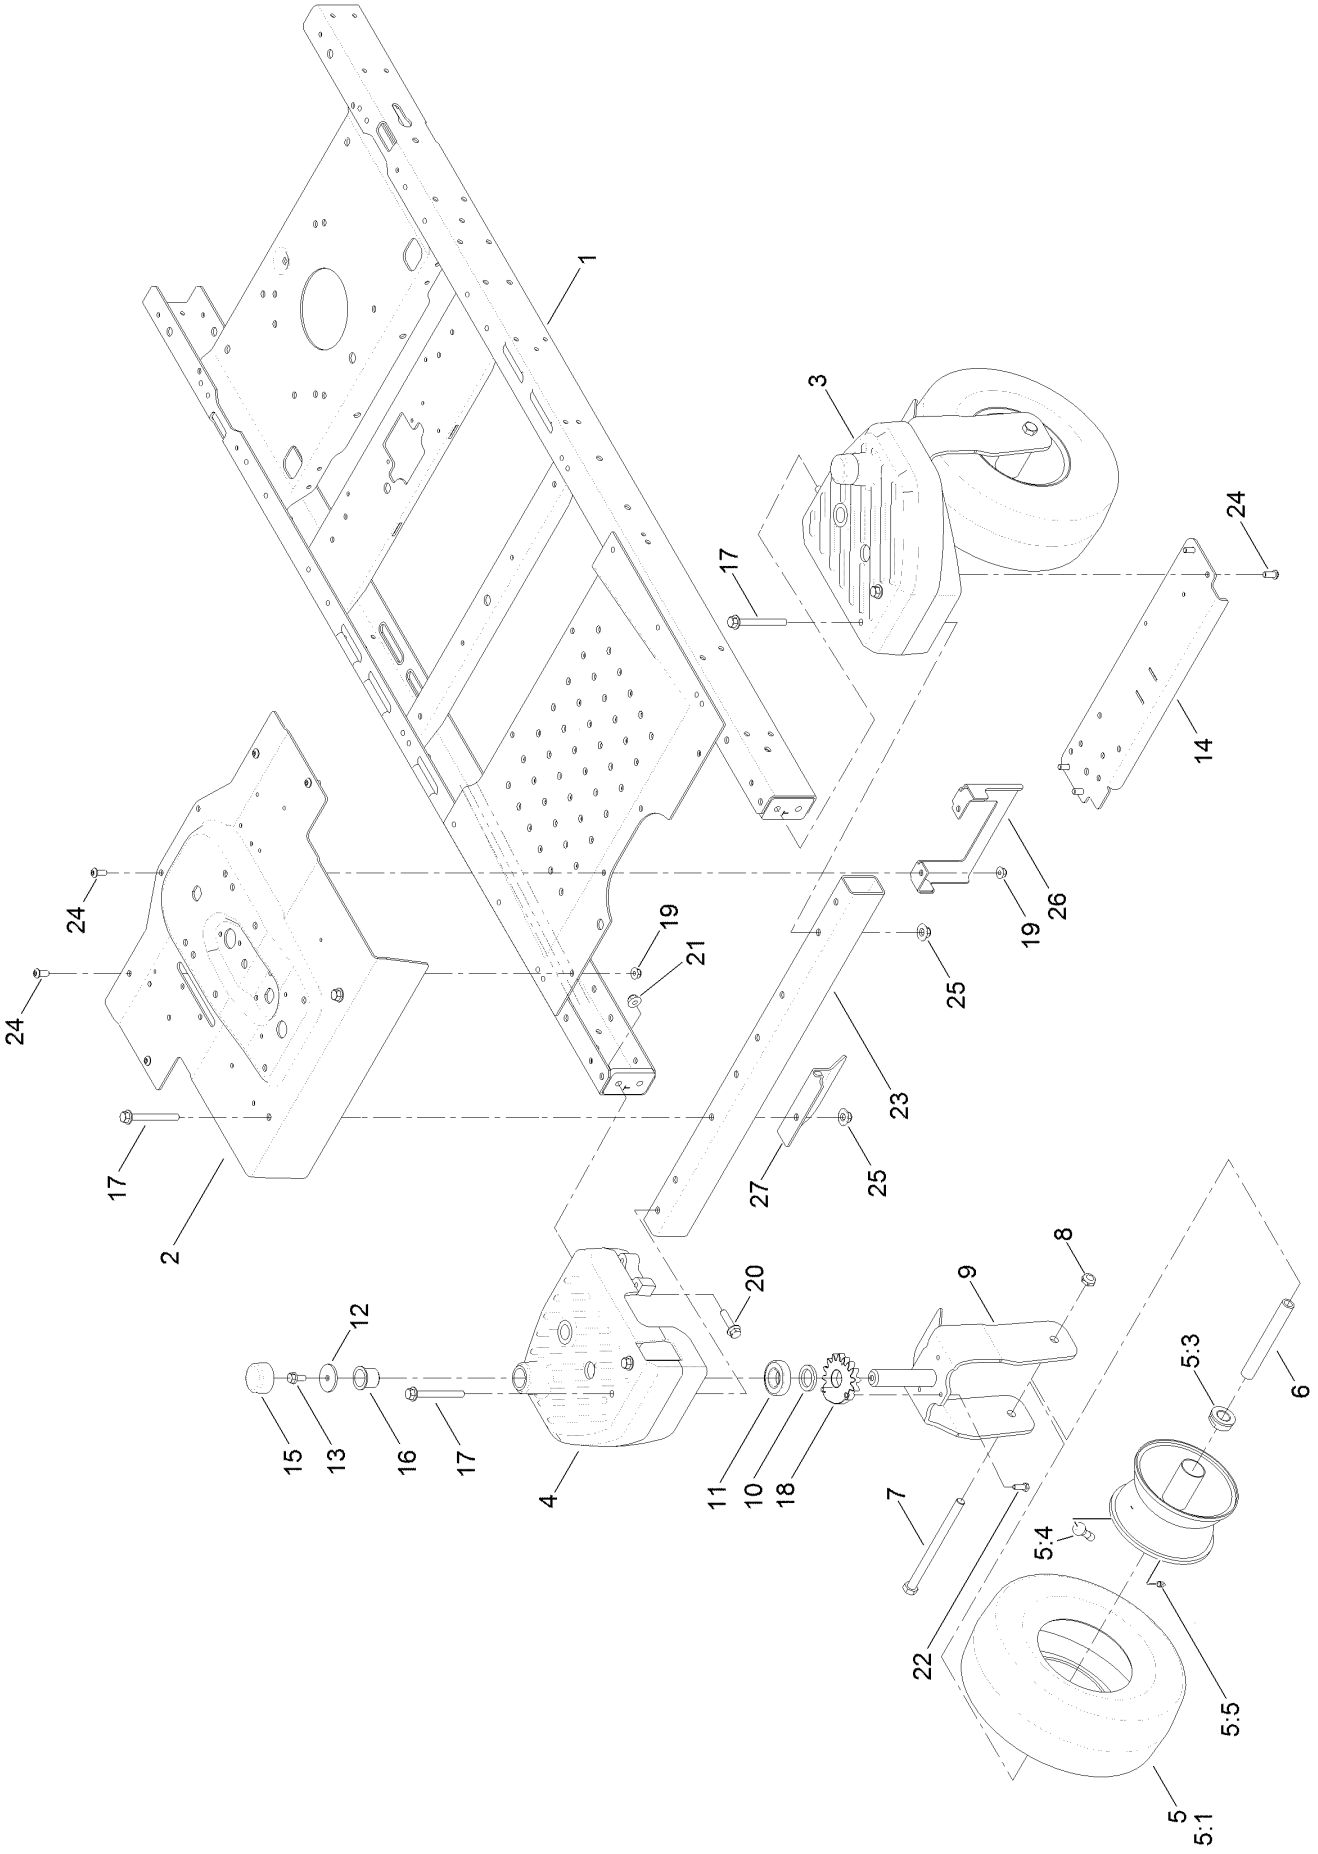


# Frame, Front Axle and Caster Wheel Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 130-0805-01 | 1 | Frame ASM (Wide) |
| 2 | 132-9346-05 | 1 | Pan-Steer, Front |
| 3 | 130-0748-05 | 1 | Housing-Spindle, LH |
| 4 | 130-0746-05 | 1 | Housing-Spindle, RH |
| 5 | 119-3473 | 2 | 13 Inch Wheel And Tire ASM |
| 5:1 | 119-3471 | 1 | Tire-13 Inch |
| 5:3 | 114-1640 | 2 | Bushing-Flange |
| 5:4 | 232-27 | 1 | Stem-Valve |
| 5:5 | 302-5 | 1 | Fitting-Grease |
| 5:99 | 232-46 | 1 | Tube-Inner ● |
| 6 | 119-3475 | 2 | Spanner |
| 7 | 325-37 | 2 | Screw-HH |
| 8 | 3296-45 | 2 | Nut-Lock, NI |
| 9 | 130-0670-03 | 2 | Caster Fork ASM |
| 10 | 117-7394 | 2 | Washer-Thrust |
| 11 | 109-3678 | 2 | Bearing-Ball |
| 12 | 131-1032 | 2 | Washer-Flat |
| 13 | 3234-47 | 2 | Screw-HHF |
| 14 | 130-6979-03 | 1 | Plate-Bridge, Wide |
| 15 | 130-7015 | 2 | Cap-Caster |
| 16 | 126-1963 | 2 | Bushing-Pivot |
| 17 | 115-7660 | 6 | Screw-HHF |
| 18 | 130-0689 | 2 | Gear-Wheel, 15 Tooth |
| 19 | 104-8300 | 6 | Nut-HF, NI |
| 20 | 114-4681 | 4 | Screw-HHF |
| 21 | 104-8301 | 4 | Nut-HF, NI |
| 22 | 321-4 | 4 | Screw-HH |
| 23 | 130-0829-03 | 1 | Tube-Front, Wide |
| 24 | 3274-55 | 10 | Screw-HSBH |
| 25 | 109-6658 | 6 | Nut-Flange, NI |
| 26 | 132-0941-03 | 1 | Bracket-Upstop |
| 27 | 132-0868-03 | 1 | Guard-Front |

● Not illustrated


# Deck Lift Assembly

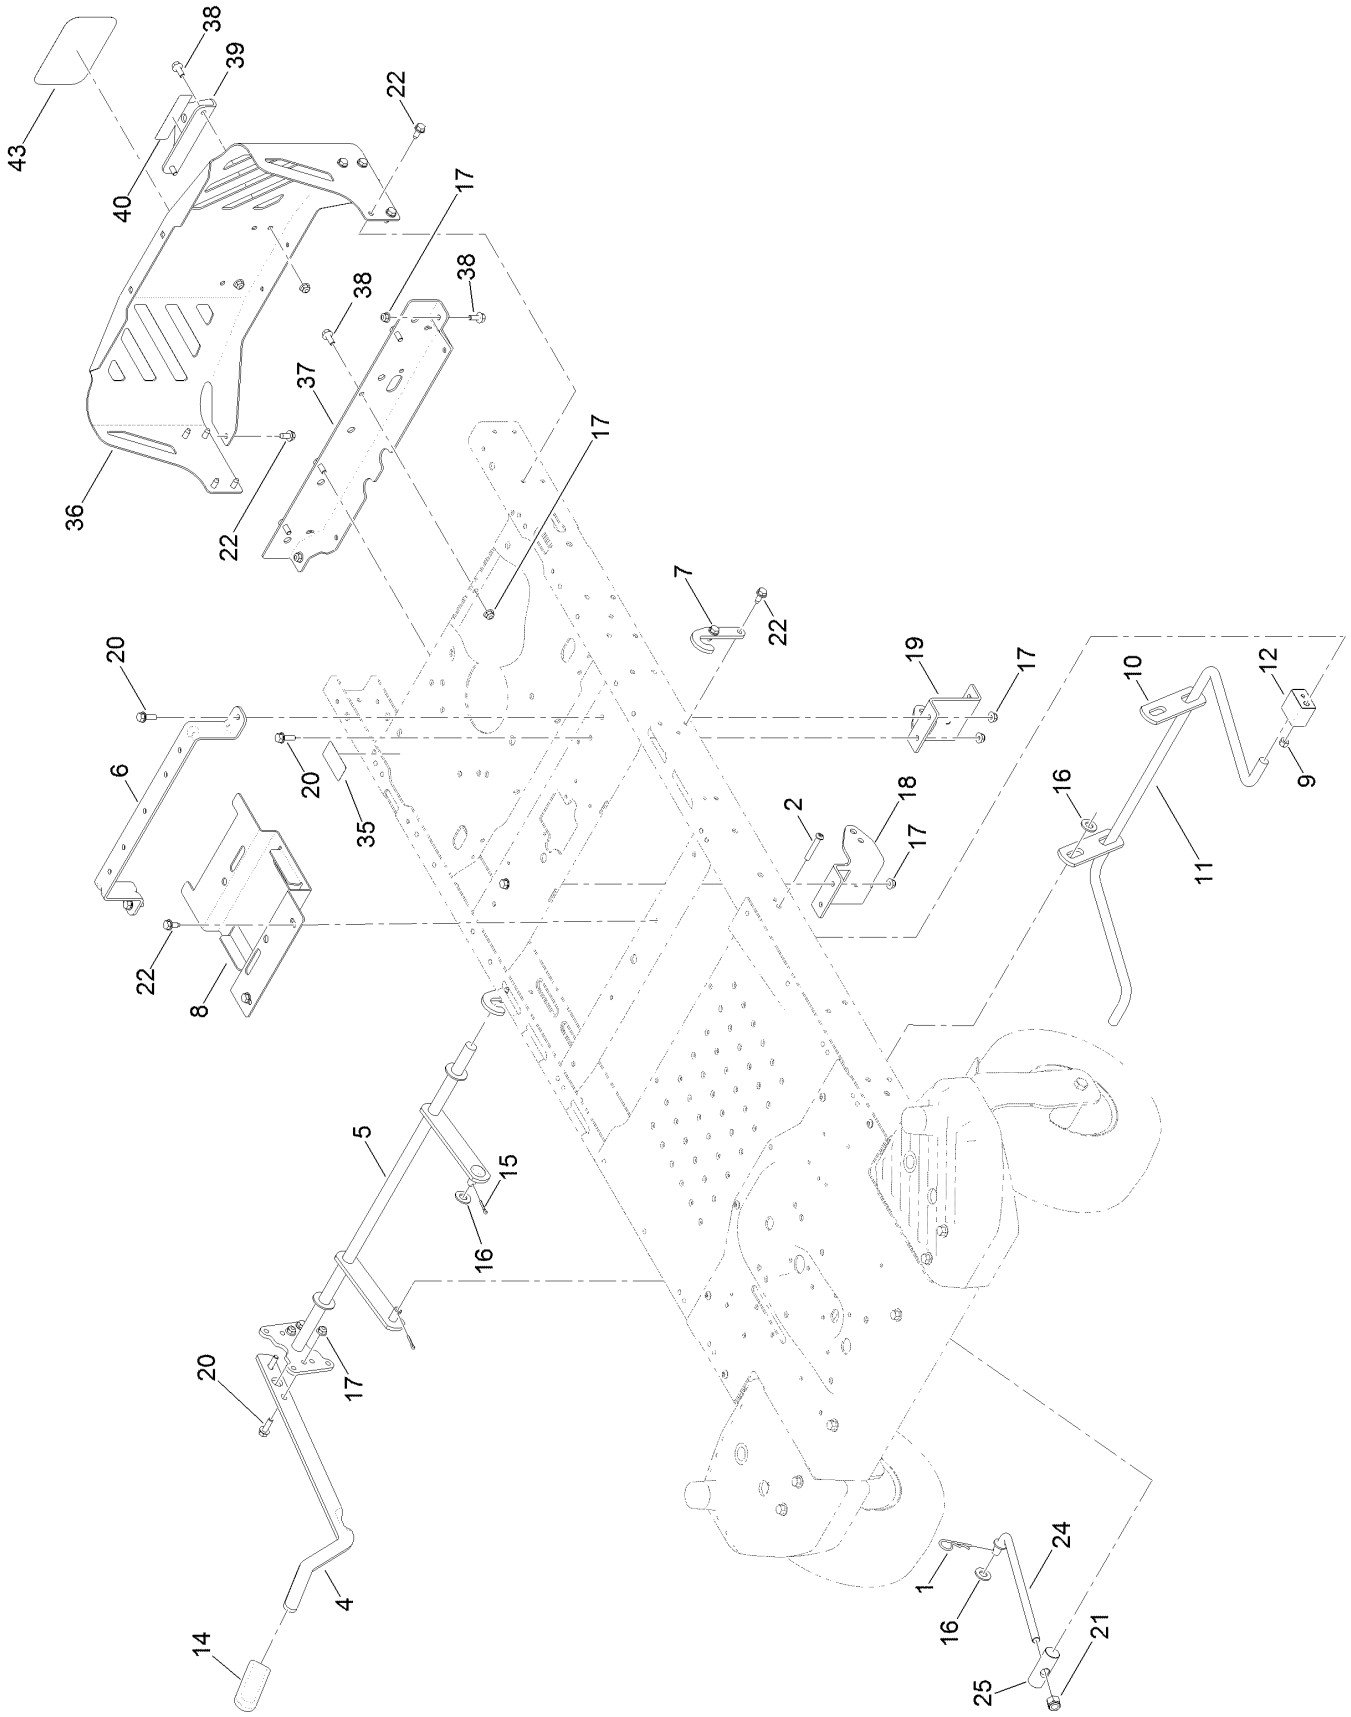

# Deck Lift Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 1-806005 | 1 | Pin-Cotter |
| 2 | 120-5499 | 2 | Screw-HSBH |
| 4 | 119-3427-03 | 1 | Lever-Lift |
| 5 | 132-6878-03 | 1 | Lift-Deck, Wide |
| 6 | 117-7337-03 | 1 | Brace-Seat, Rear |
| 7 | 119-8875 | 2 | Bracket-Lift |
| 8 | 131-0914-03 | 1 | Bracket-Battery |
| 9 | 3296-29 | 2 | Nut-Lock, NI |
| 10 | 108-7840 | 2 | Link-Lift |
| 11 | 119-3347 | 1 | Arm-Lift, Rear (Wide) |
| 12 | 108-7845 | 2 | Block-Pivot |
| 14 | 1-633268 | 1 | Grip-Lever |
| 15 | 3272-11 | 2 | Pin-Cotter |
| 16 | 3256-26 | 3 | Washer-Flat |
| 17 | 104-8300 | 14 | Nut-HF, NI |
| 18 | 131-0901-01 | 1 | Mount-Hydro, Front (RH) |
| 19 | 131-0902-01 | 1 | Mount-Hydro, Front (LH) |
| 20 | 3234-29 | 6 | Screw-HHF |
| 21 | 3296-19 | 1 | Nut-Hex |
| 22 | 32144-70 | 16 | Screw-HWH |
| 24 | 131-3945 | 1 | Rod-Mount, Deck |
| 25 | 119-8810 | 1 | Pin-Pivot |
| 35 | 121-2989 | 2 | Decal-Bypass |
| 36 | 130-0701-03 | 1 | Guard-Engine, Wide |
| 37 | 130-6946-01 | 1 | Crossmember-Rear, Wide |
| 38 | 3234-47 | 8 | Screw-HHF |
| 39 | 117-1232-03 | 1 | Bracket-Hitch |
| 40 | 131-4036 | 1 | Decal |
| 43 | 99-4693 | 1 | Decal |


# Steering Column Assembly

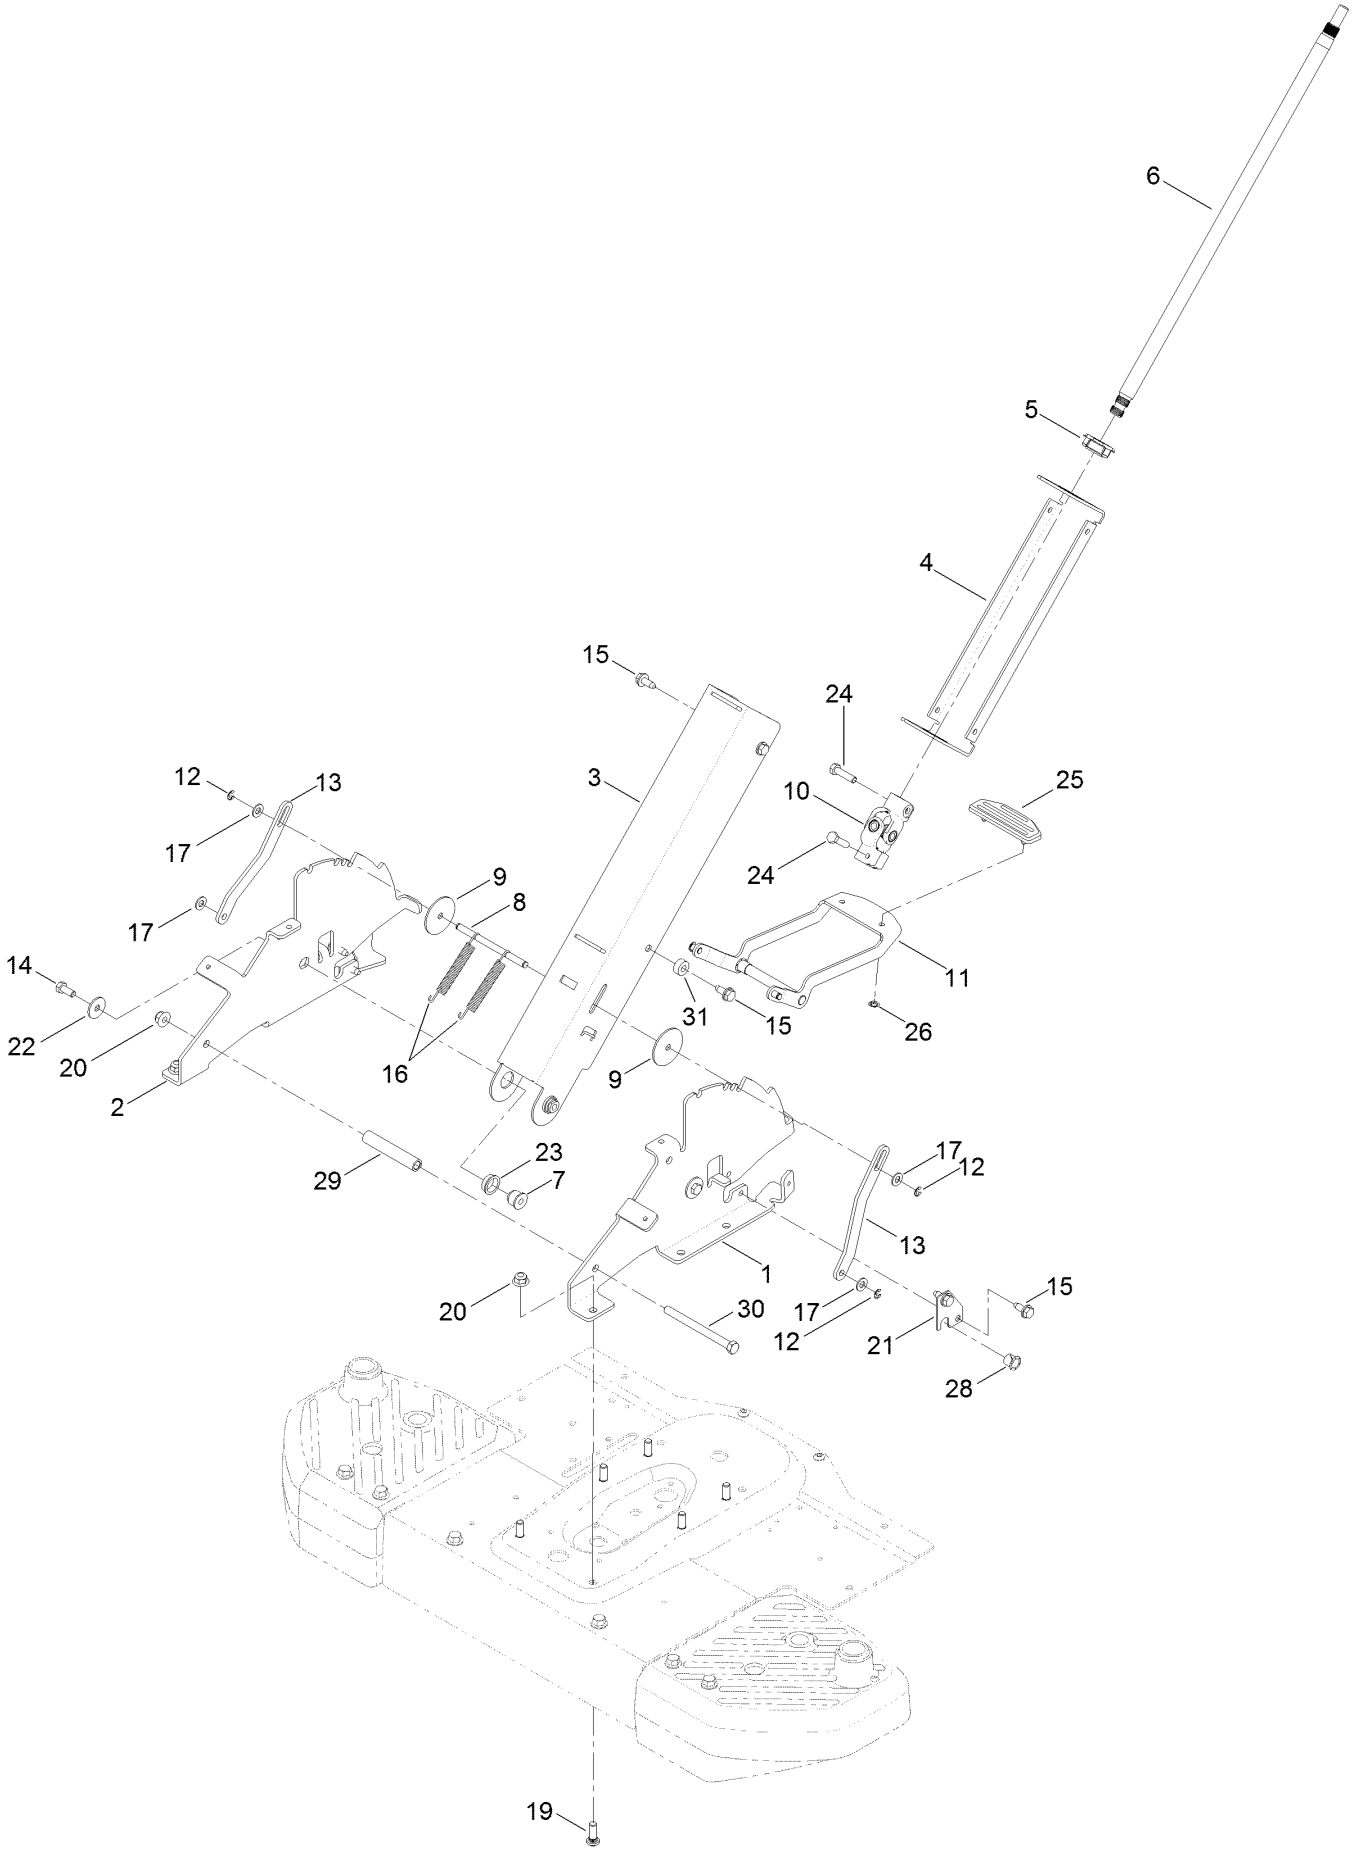

# Steering Column Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 131-1052-03 | 1 | Bracket-Pivot, Column (LH) |
| 2 | 131-1053-03 | 1 | Bracket-Pivot, Column (RH) |
| 3 | 131-1054-01 | 1 | Column-Front |
| 4 | 132-9315-01 | 1 | Column-Back |
| 5 | 133-1160 | 1 | Bearing-Spherical |
| 6 | 125-5507 | 1 | Shaft-Steering, Upper |
| 7 | 131-1056 | 2 | Spacer-Pivot, Column |
| 8 | 131-1050 | 1 | Rod-Plunger |
| 9 | 131-8729 | 2 | Washer-Shaft, Tilt |
| 10 | 131-1030 | 1 | U-Joint ASM |
| 11 | 132-6868 | 1 | Release Pedal ASM |
| 12 | 701197 | 4 | E-Ring |
| 13 | 131-1049 | 2 | Plate-Plunger |
| 14 | 322-3 | 2 | Screw-HH |
| 15 | 32144-70 | 8 | Screw-HWH |
| 16 | 130-6998 | 2 | Spring-Extension |
| 17 | 3256-23 | 4 | Washer-Plain |
| 19 | 132-0921 | 6 | Stud-Push-In |
| 20 | 104-8301 | 7 | Nut-HF, NI |
| 21 | 131-1043 | 2 | Plate-Retainer |
| 22 | 5-4460 | 2 | Washer-Pivot |
| 23 | 99-4243 | 2 | Bushing-Flange |
| 24 | 322-6 | 2 | Screw-HH |
| 25 | 131-4096 | 1 | Pad-Tilt Pedal |
| 26 | 32112-6 | 2 | Nut-Push |
| 28 | 256-257 | 2 | Bushing-Nyliner |
| 29 | 131-3697 | 1 | Spacer |
| 30 | 323-23 | 1 | Screw-HH |
| 31 | 121-1759 | 2 | Spacer |


# Speed Control Assembly

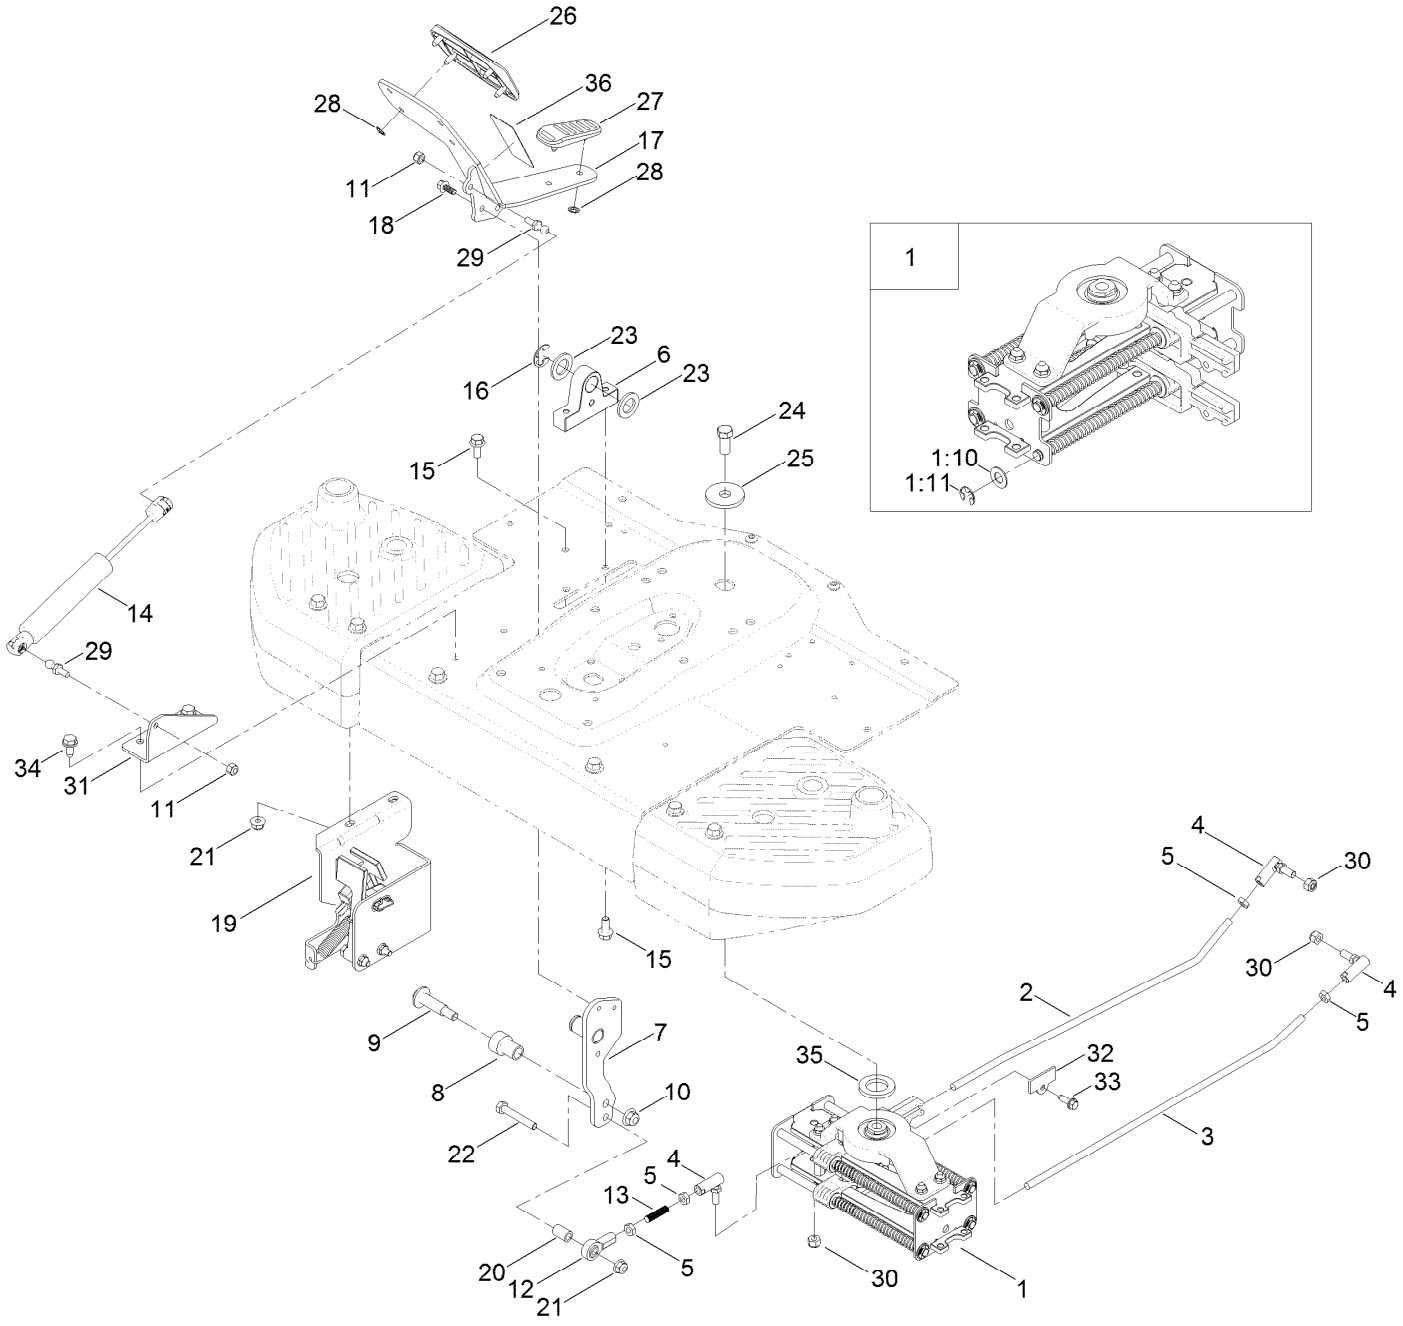

# Speed Control Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 131-0904 | 1 | Speed Control ASM |
| 1:10 | 131-8667 | 12 | Washer-Thrust |
| 1:11 | 32120-18 | 8 | E-Ring |
| 2 | 127-0115 | 1 | Rod-Hydro, RH |
| 3 | 127-0116 | 1 | Rod-Hydro, LH |
| 4 | 2411-33 | 3 | Balljoint-RH (W/Grommet) |
| 5 | 3220-2 | 4 | Nut-Jam |
| 6 | 130-6887 | 1 | Mount-Pedal Pivot |
| 7 | 132-6907 | 1 | Pivot Lever ASM |
| 8 | 127-3397 | 1 | Roller |
| 9 | 56-6590 | 1 | Bolt-Wheel |
| 10 | 104-8301 | 1 | Nut-HF, NI |
| 11 | 3296-42 | 4 | Nut-Lock, NI |
| 12 | 1-543017 | 1 | Balljoint-RH |
| 13 | 130-6906 | 1 | Rod-Threaded |
| 14 | 133-1171 | 1 | Damper-Non Cavitating |
| 15 | 3234-47 | 4 | Screw-HHF |
| 16 | 32151-48 | 1 | E-Ring |
| 17 | 132-6865-01 | 1 | Pedal-Traction |
| 18 | 99-6810 | 2 | Screw-HHF |
| 19 | 131-0903 | 1 | Neutral Return ASM |
| 20 | 131-1034 | 1 | Spacer |
| 21 | 104-8300 | 3 | Nut-HF, NI |
| 22 | 322-10 | 1 | Screw-HH |
| 23 | 70-1160 | 2 | Washer |
| 24 | 324-4 | 1 | Screw-HH |
| 25 | 84-1560 | 1 | Washer-Thrust |
| 26 | 98-9040 | 1 | Pad-Toe, Hydro Pedal |
| 27 | 98-9039 | 1 | Pad-Heel, Hydro Pedal |
| 28 | 32112-6 | 6 | Nut-Push |
| 29 | 132-6917 | 2 | Ball Stud |
| 30 | 3296-4 | 3 | Nut-Lock |
| 31 | 130-6910-03 | 1 | Bracket-Damper |
| 32 | 131-1041 | 2 | Cover-End Rod |
| 33 | 32144-44 | 2 | Screw-HWH, Thread Roll |
| 34 | 32144-70 | 2 | Screw-HWH |
| 35 | 131-8736 | 1 | Spacer-Bearing |
| 36 | 132-6863 | 1 | Decal-Release, Break |


# Neutral Return Assembly

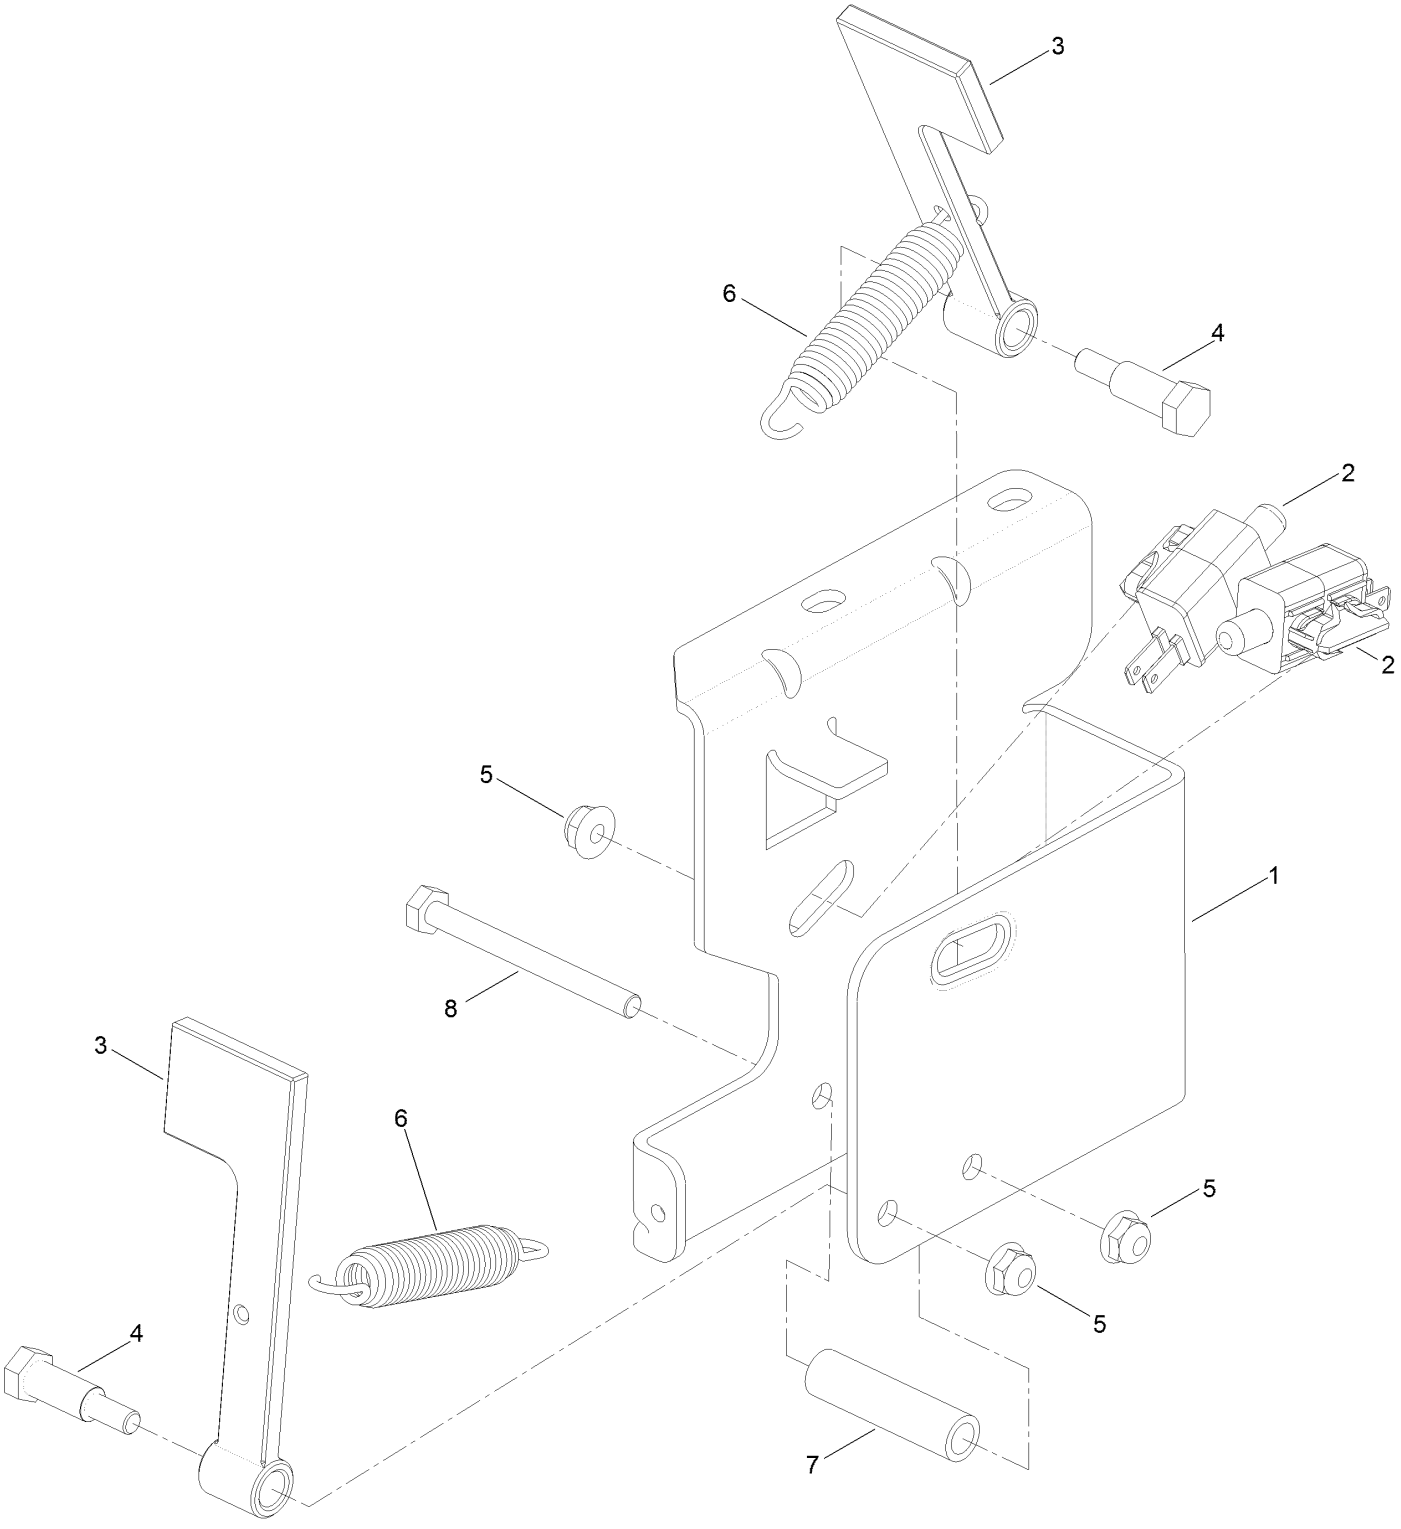

# Neutral Return Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 132-0909-03 | 1 | Bracket-Switch |
| 2 | 110-6765 | 2 | Switch |
| 3 | 130-0782 | 2 | Arm-Switch |
| 4 | 119-2309 | 2 | Bolt-Shoulder |
| 5 | 104-7201 | 3 | Nut-HF |
| 6 | 132-6915 | 2 | Spring-Extension |
| 7 | 131-3976 | 1 | Spacer |
| 8 | 321-14 | 1 | Screw-HH |


# Steering Gear Assembly

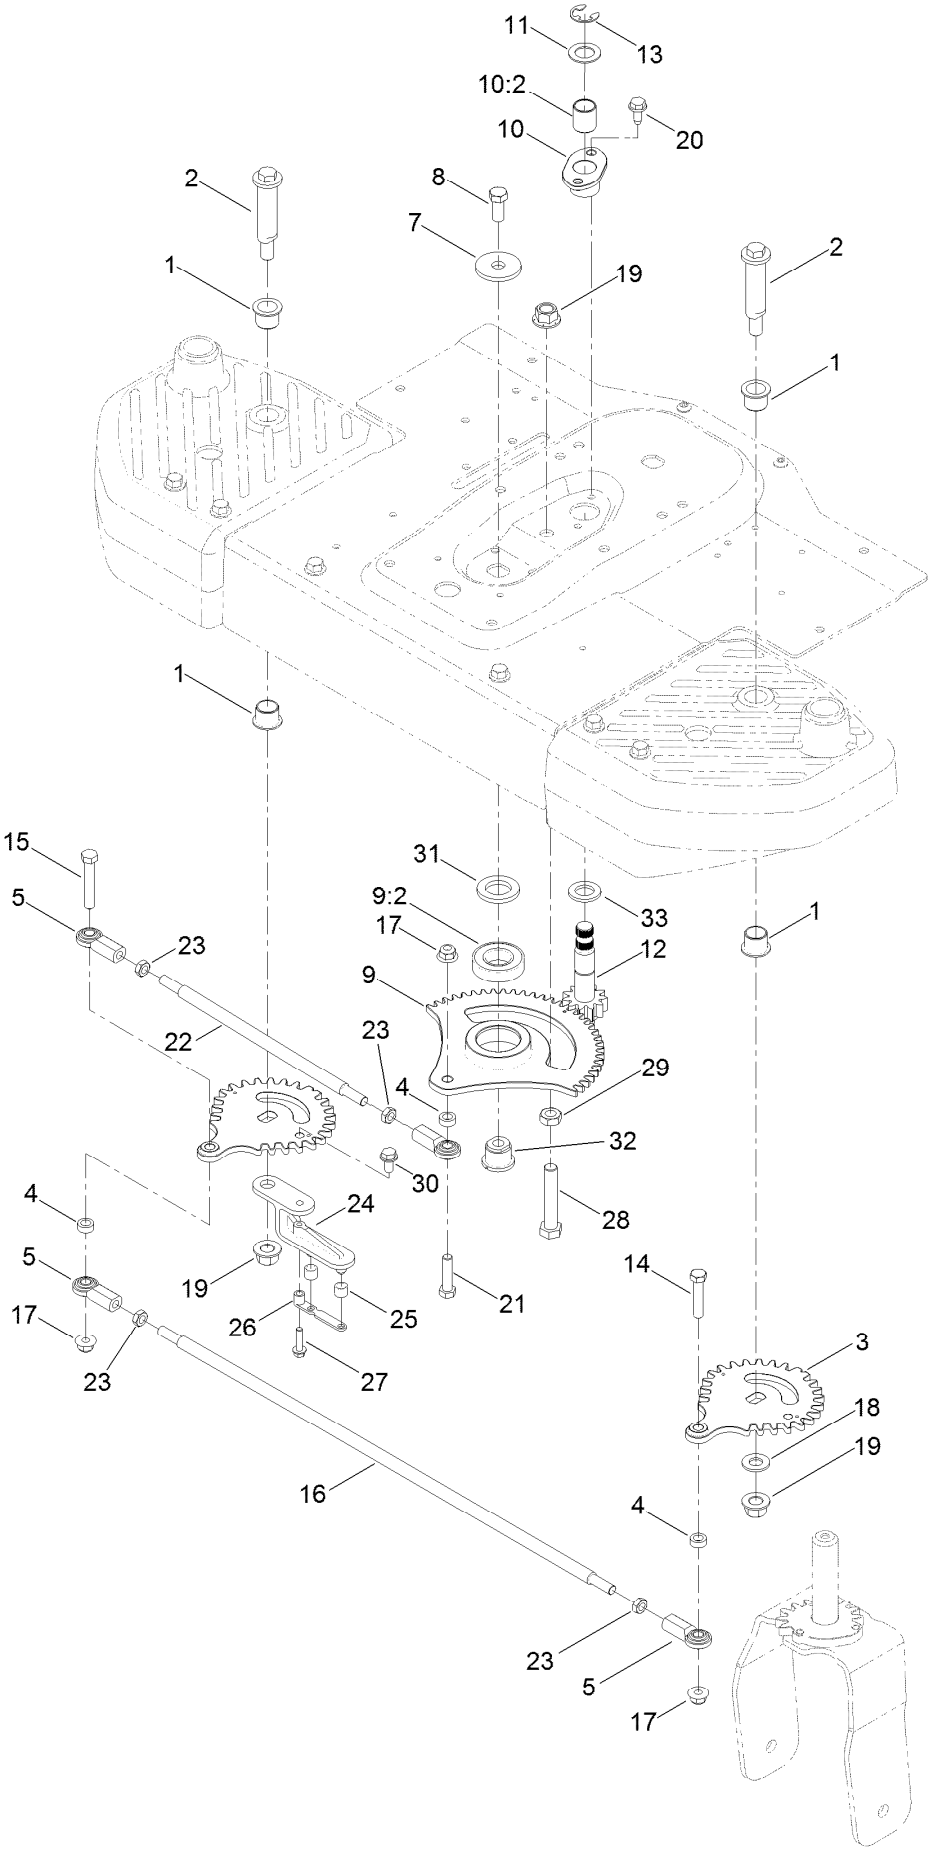

# Steering Gear Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 103-4398 | 4 | Bearing-Flange, Iglide |
| 2 | 131-1031 | 2 | Bolt-Shoulder |
| 3 | 130-0830 | 2 | Gear-Wheel, 30 Tooth |
| 4 | 83-1050 | 3 | Spacer |
| 5 | 103-0608 | 4 | Joint-Ball, End |
| 7 | 84-1560 | 1 | Washer-Thrust |
| 8 | 324-4 | 1 | Screw-HH |
| 9 | 131-8731 | 1 | Sector Gear ASM |
| 9:2 | 109-3678 | 1 | Bearing-Ball |
| 10 | 131-8733 | 1 | Flange Bearing ASM |
| 10:2 | 115-7019 | 1 | Bushing-Straight |
| 11 | 119-7640 | 1 | Washer-Thrust |
| 12 | 125-5508 | 1 | Lower Steering Shaft ASM |
| 13 | 32151-48 | 1 | E-Ring |
| 14 | 323-9 | 1 | Screw-HH |
| 15 | 323-11 | 1 | Screw-HH |
| 16 | 130-6986 | 1 | Rod-Cross, Wide |
| 17 | 104-8301 | 3 | Nut-HF, NI |
| 18 | 3256-26 | 1 | Washer-Flat |
| 19 | 99-5107 | 3 | Nut-Lock |
| 20 | 32144-70 | 2 | Screw-HWH |
| 21 | 323-8 | 1 | Screw-HH |
| 22 | 131-1037 | 1 | Rod-Steering, Wide |
| 23 | 3220-3 | 4 | Nut-HJ |
| 24 | 130-6878 | 1 | Lever-Cable |
| 25 | 131-3951 | 2 | Bushing |
| 26 | 131-3950 | 1 | Strap-Roller |
| 27 | 32144-86 | 1 | Screw-HWHTF |
| 28 | 325-11 | 1 | Screw-HH |
| 29 | 3218-5 | 1 | Nut-Jam |
| 30 | 32144-14 | 1 | Screw-HWHTF |
| 31 | 131-8736 | 1 | Spacer-Bearing |
| 32 | 131-8737 | 1 | Pivot-Bearing |
| 33 | 70-1160 | 1 | Washer |


# Steering Cable Assembly

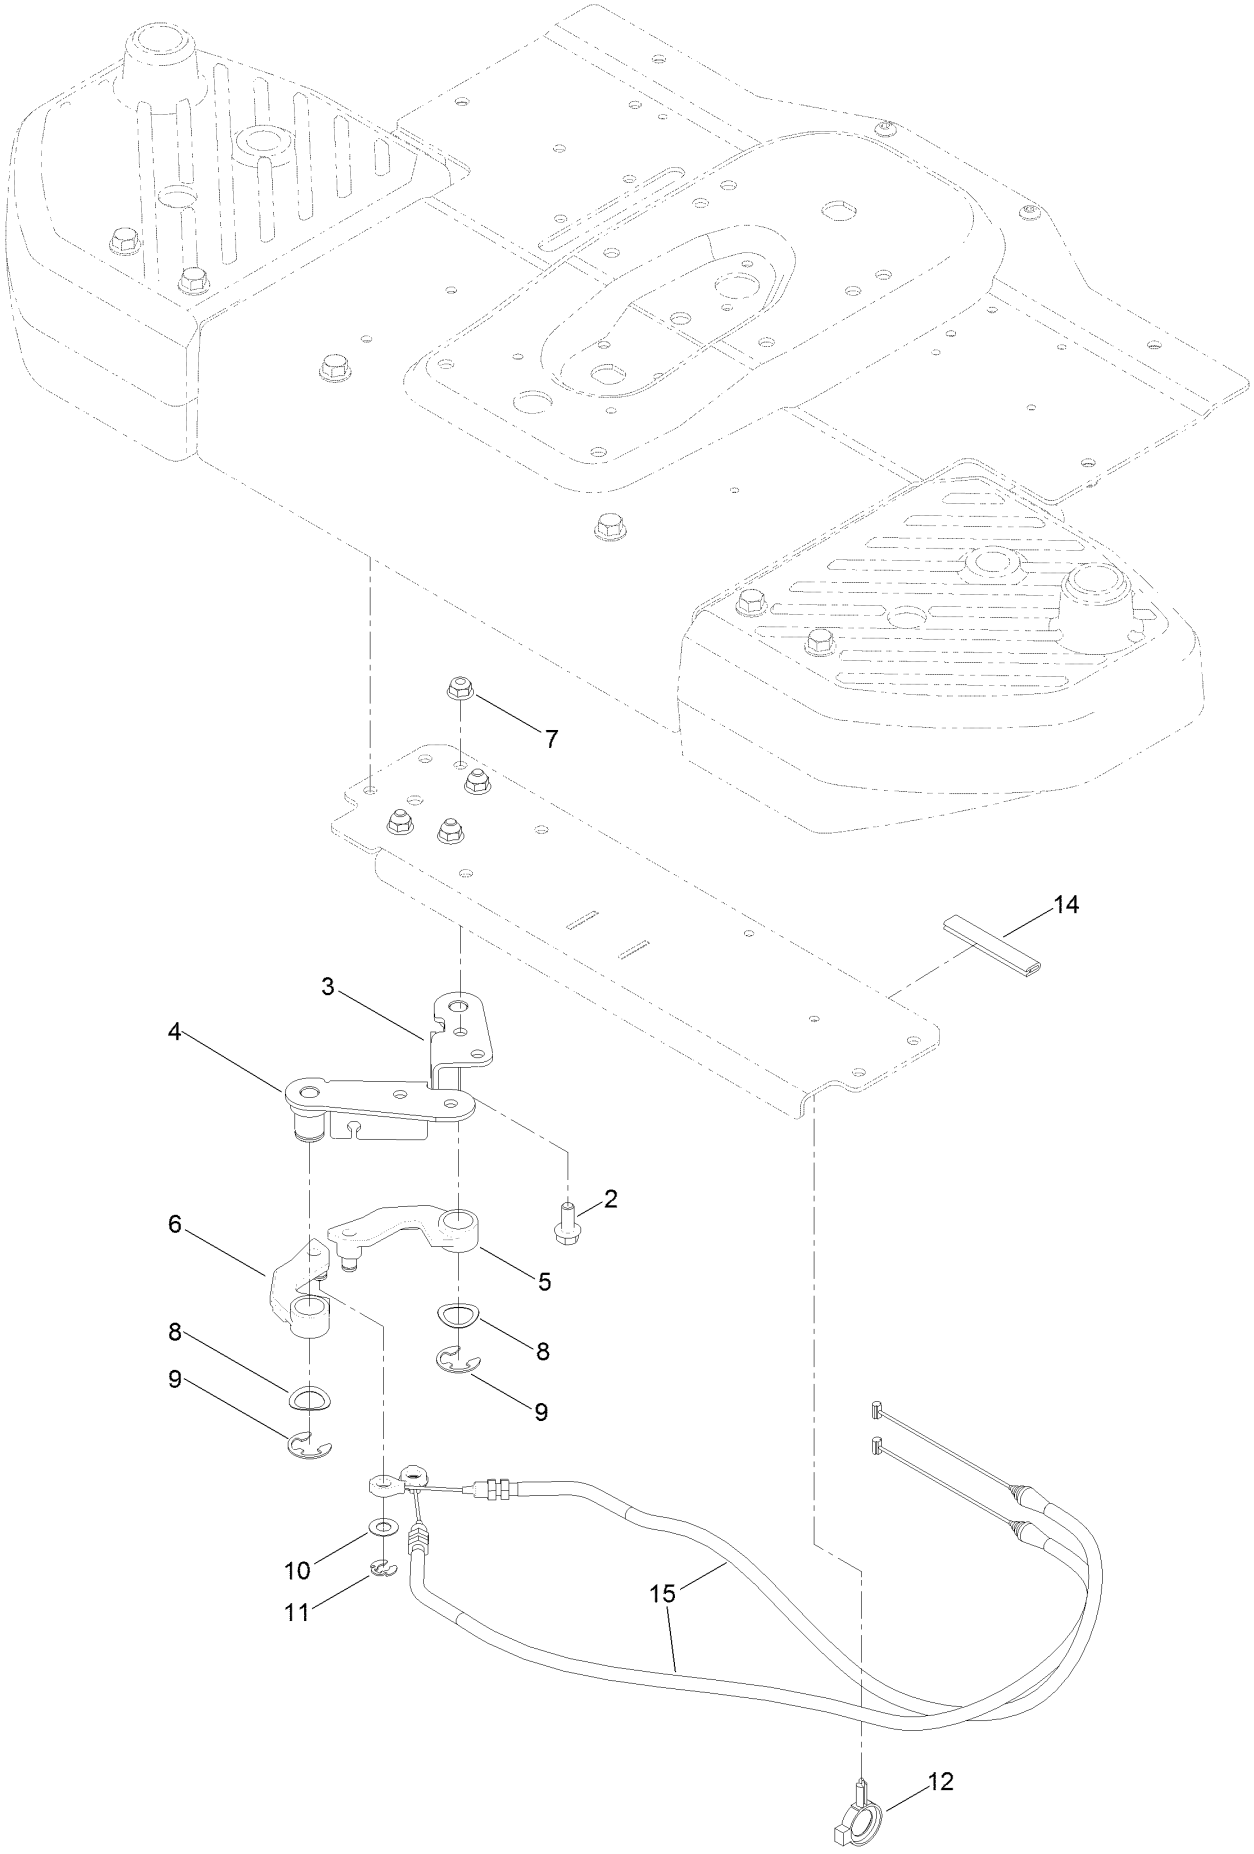

# Steering Cable Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 2 | 3234-47 | 4 | Screw-HHF |
| 3 | 132-6943 | 1 | Cable Bracket ASM |
| 4 | 132-6944 | 1 | Cable Bracket ASM |
| 5 | 131-3623 | 1 | Arm-Cable, RH |
| 6 | 131-3647 | 1 | Arm-Cable, LH |
| 7 | 104-8300 | 4 | Nut-HF, NI |
| 8 | 7896 | 2 | Washer-Bowed |
| 9 | 32151-48 | 2 | E-Ring |
| 10 | 37-8080 | 2 | Washer-Thrust |
| 11 | 32151-47 | 2 | Ring-Retaining |
| 12 | 105-1853 | 2 | Clamp-Hose |
| 14 | 105-7699 | 1 | Strip-Seal |
| 15 | 127-0118 | 2 | Cable-Steering |


# Steering Assembly

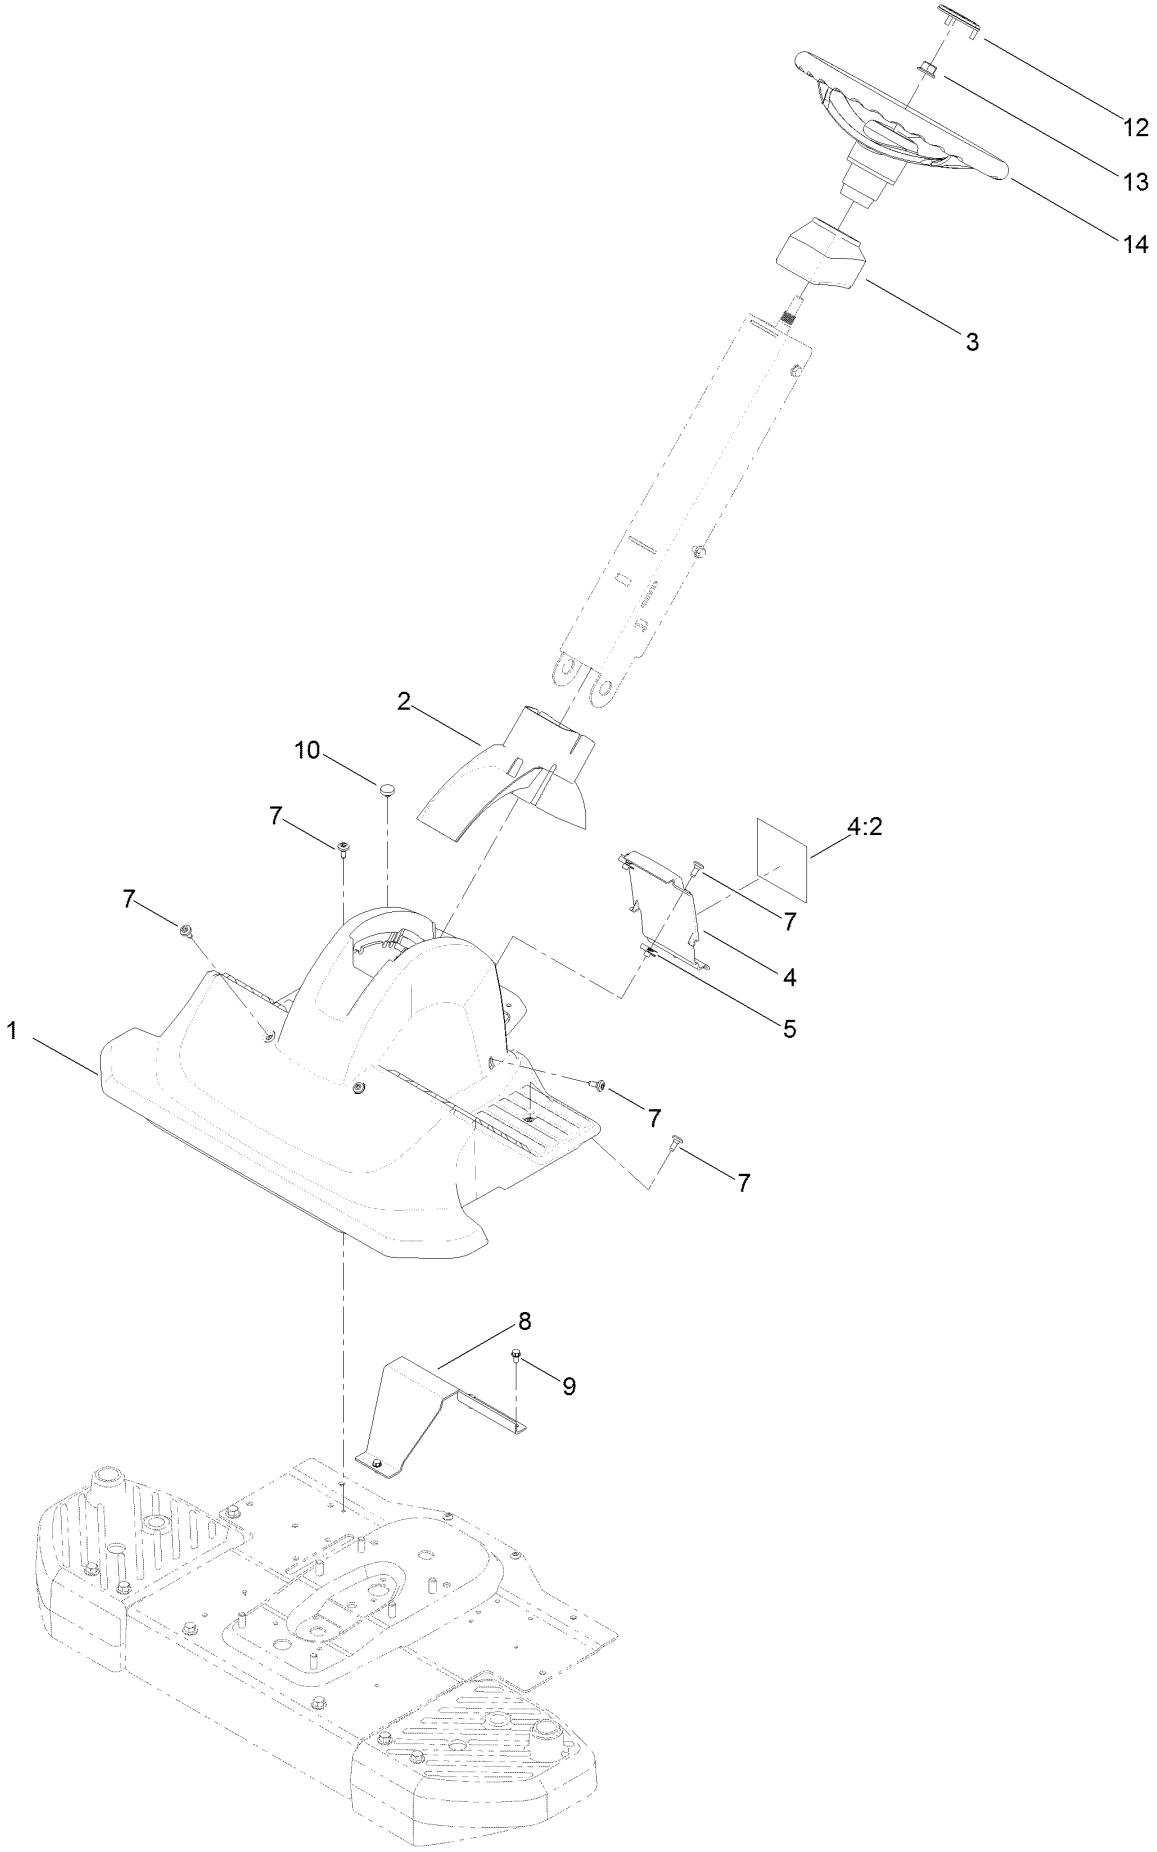

# Steering Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 133-1152 | 1 | Shroud-Styling, Front |
| 2 | 131-1028 | 1 | Cover-Pivot, Column |
| 3 | 131-1066 | 1 | Cap-Column |
| 4 | 131-4099 | 1 | Rear Cover And Decal ASM |
| 4:2 | 132-0870 | 1 | Decal-Danger |
| 5 | 107069 | 2 | Clip |
| 7 | 120-7950 | 9 | Screw-Shoulder |
| 8 | 131-1029-03 | 1 | Support-Footrest |
| 9 | 32144-4 | 3 | Screw-HWH |
| 10 | 1-513658 | 1 | Bumper |
| 12 | 131-3630 | 1 | Cap-Wheel, Steering |
| 13 | 99-5107 | 1 | Nut-Lock |
| 14 | 131-0957 | 1 | Wheel-Steering |


# Motion Control Assembly

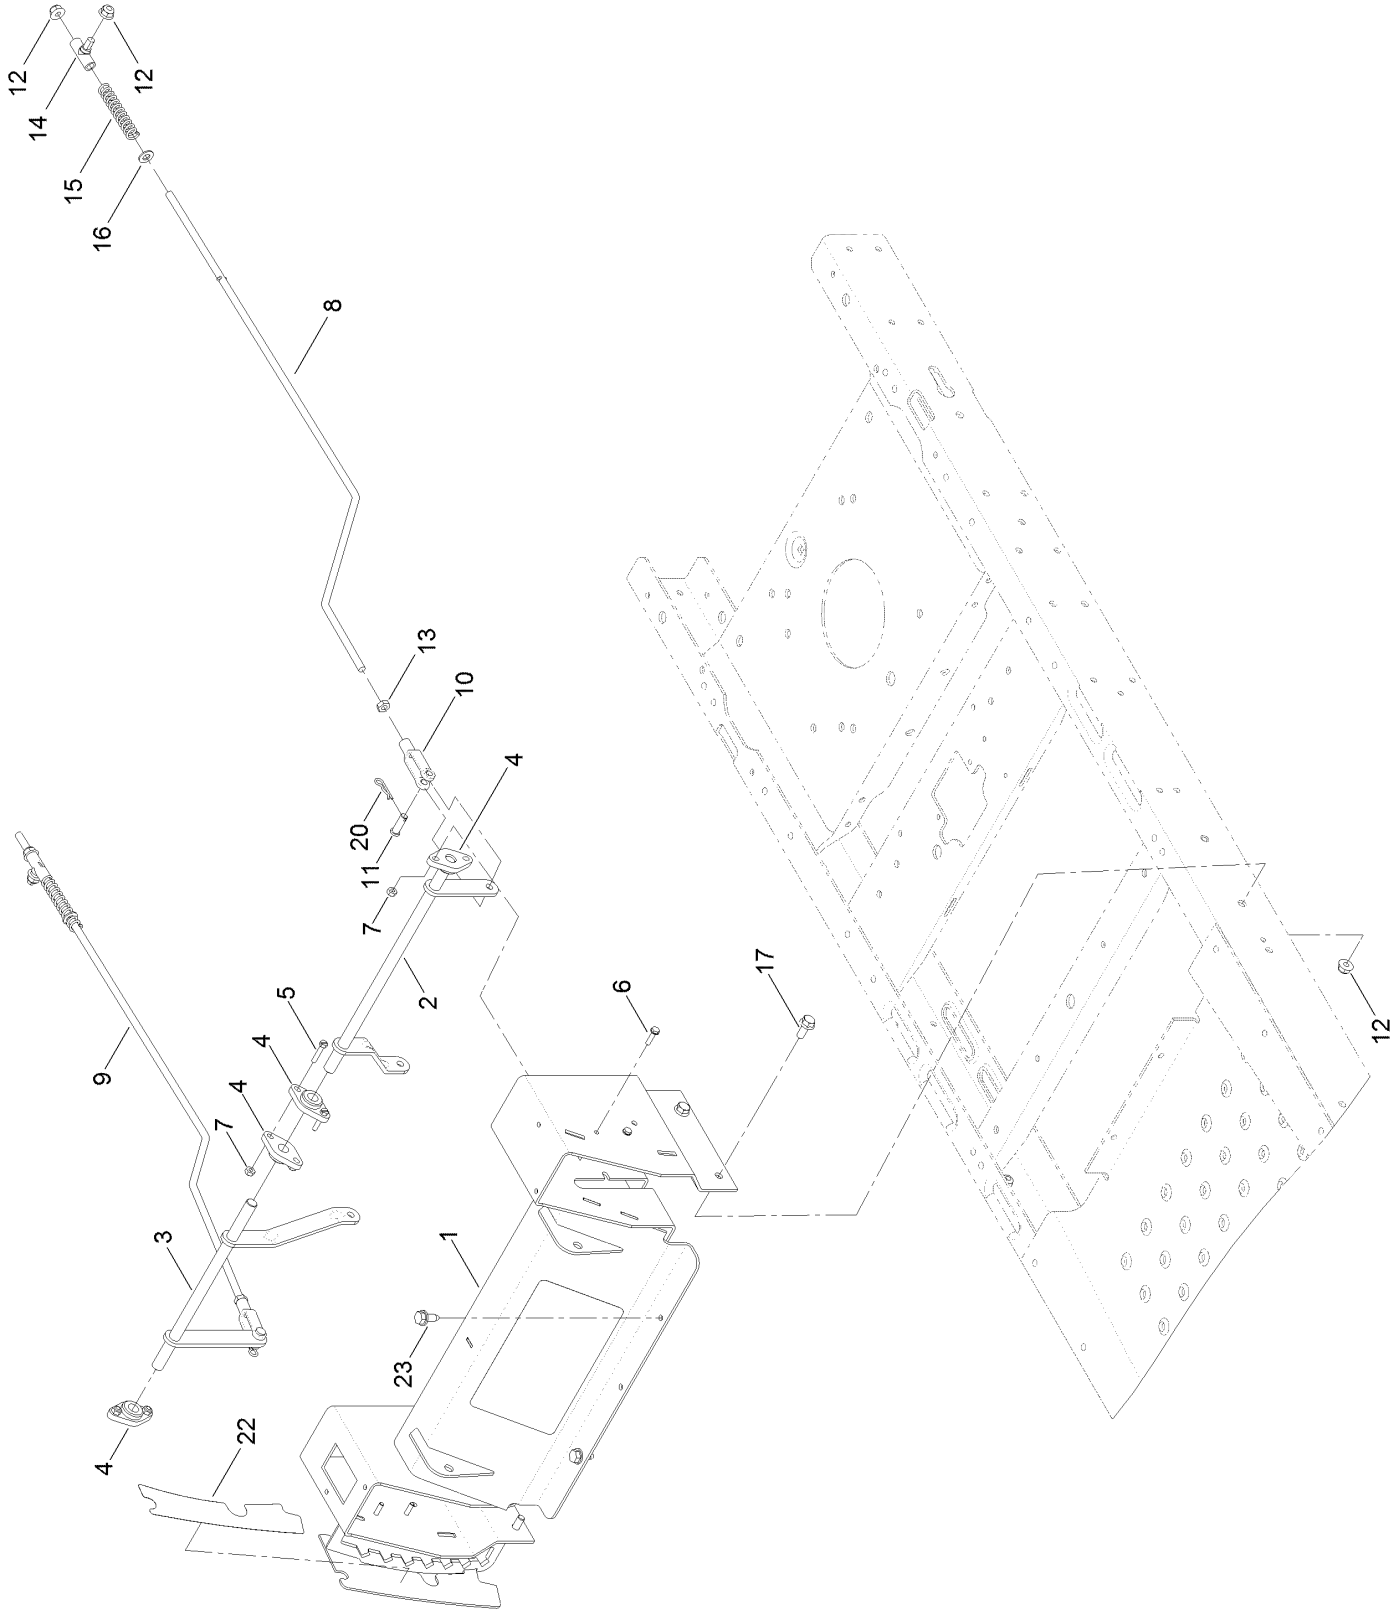

# Motion Control Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 125-5458-03 | 1 | Box-Control, Wide |
| 2 | 132-6880 | 1 | Bellcrank-LH |
| 3 | 132-6886 | 1 | Bellcrank-RH |
| 4 | 127-0146 | 4 | Bearing-Flange |
| 5 | 32105-12 | 2 | Screw |
| 6 | 3290-126 | 4 | Screw-HWH |
| 7 | 3296-2 | 6 | Nut-Lock, NI |
| 8 | 125-1812 | 1 | Rod-Hydro, LH |
| 9 | 127-3378 | 1 | Rod-Hydro, RH |
| 10 | 1-303105 | 2 | Yoke-Adjustable |
| 11 | 1-808280 | 2 | Pin-Clevis |
| 12 | 104-8300 | 8 | Nut-HF, NI |
| 13 | 3220-2 | 2 | Nut-Jam |
| 14 | 119-8842 | 2 | Mount-Rod, Hydro |
| 15 | 1-603807 | 2 | Spring-Return, Neutral |
| 16 | 3256-23 | 2 | Washer-Plain |
| 17 | 3234-47 | 4 | Screw-HHF |
| 20 | 1-806003 | 2 | Pin-Cotter |
| 22 | 119-8870 | 1 | Decal-HOC |
| 23 | 32144-70 | 2 | Screw-HWH |


# Brake Assembly

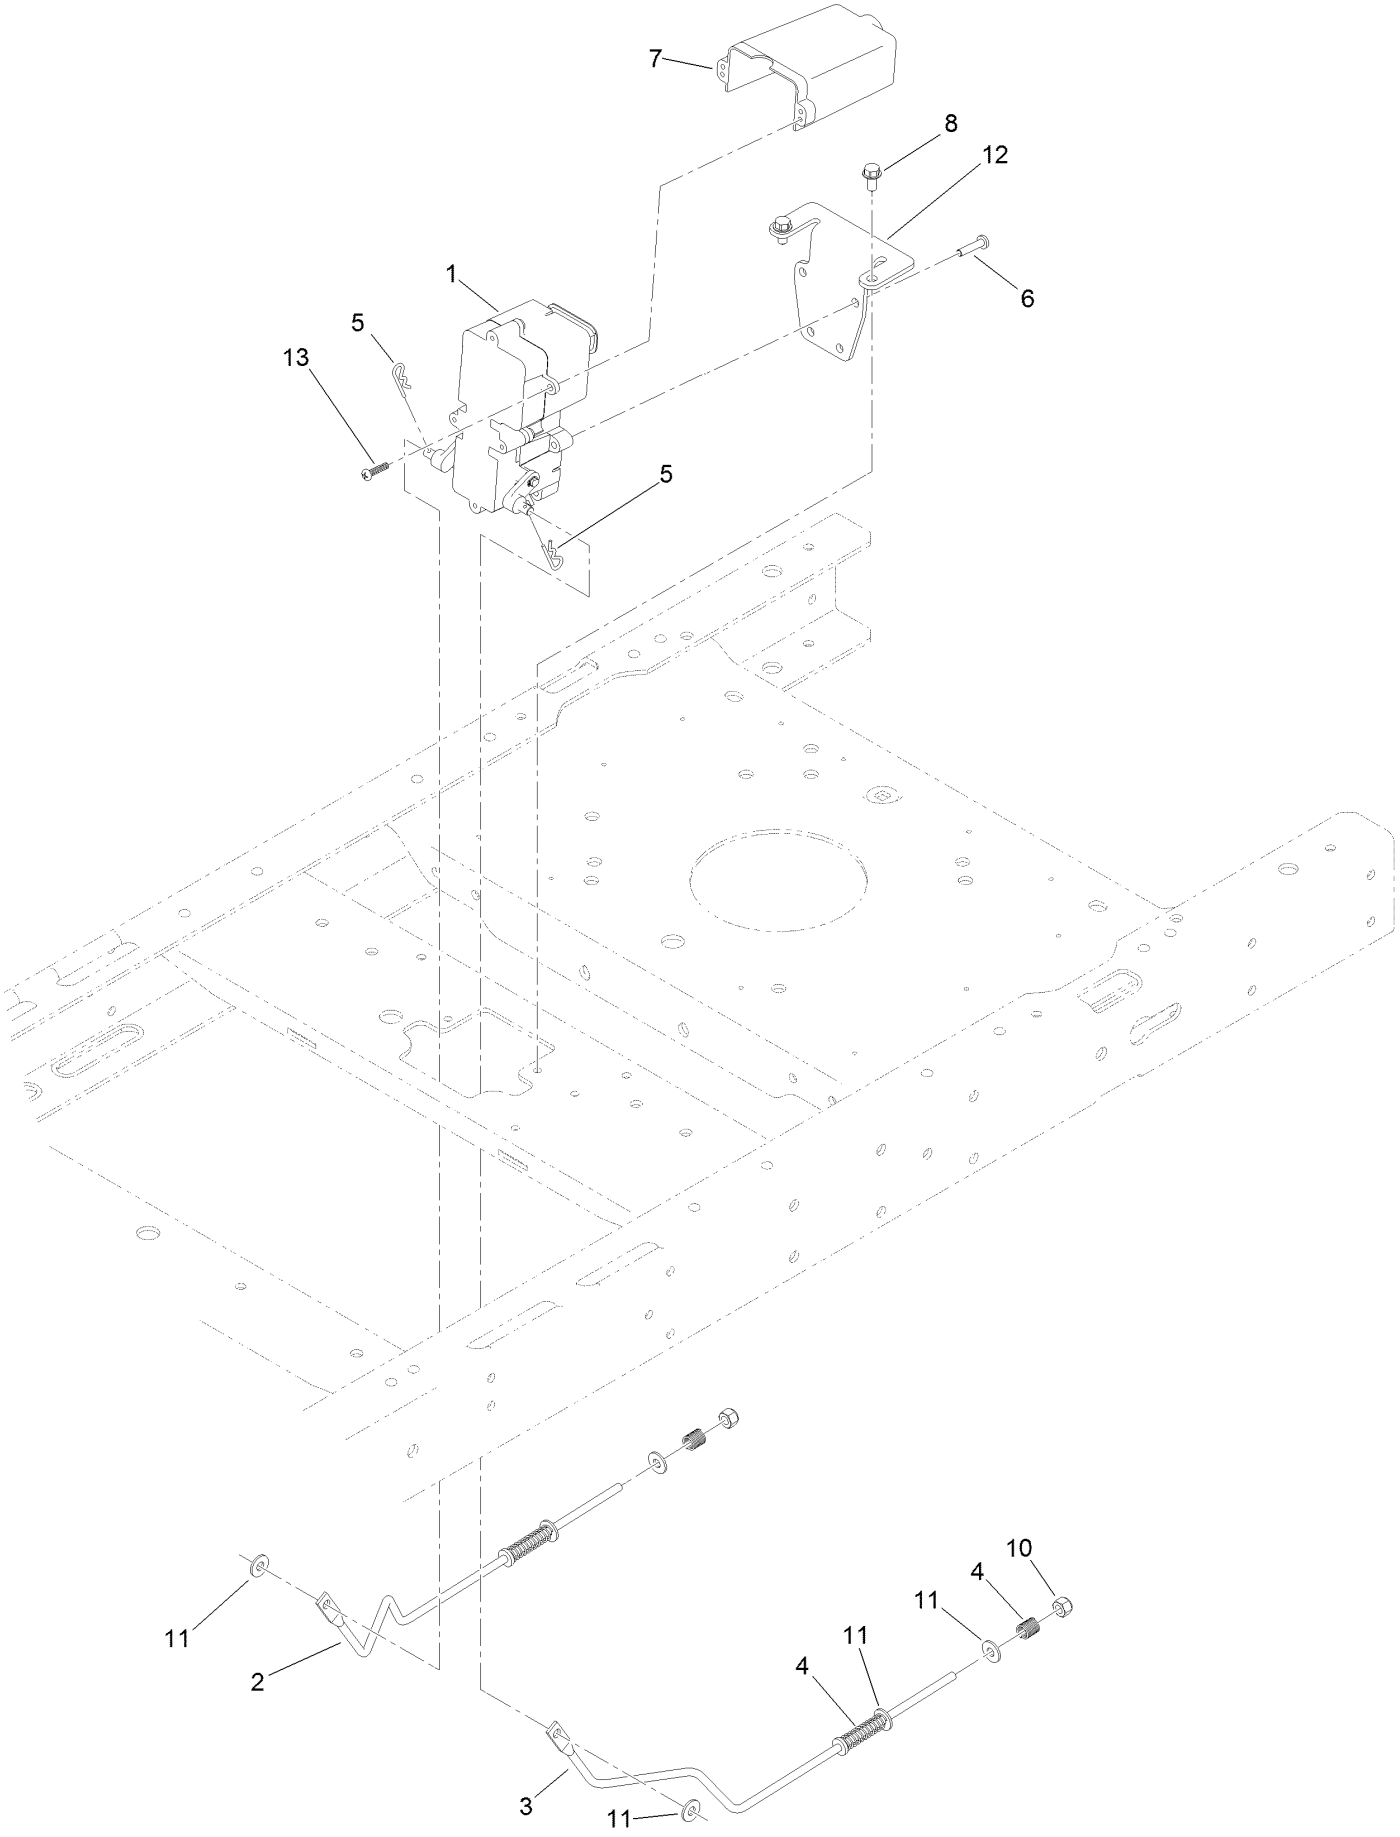

# Brake Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 130-0795 | 1 | Brake Box ASM |
| 2 | 121-2976 | 1 | Rod-Brake, Wide (RH) |
| 3 | 121-2977 | 1 | Rod-Brake, Wide (LH) |
| 4 | 117-1169 | 4 | Spring-Compression |
| 5 | 3290-307 | 2 | Pin-Cotter |
| 6 | 32144-36 | 4 | Screw-PPH |
| 7 | 130-6974 | 1 | Cover-Connector |
| 8 | 32144-4 | 2 | Screw-HWH |
| 10 | 3296-42 | 2 | Nut-Lock, NI |
| 11 | 119-8952 | 6 | Washer |
| 12 | 130-0790-03 | 1 | Bracket-Mount, Brake |
| 13 | 94-4496 | 2 | Screw-PPH |


# Seat Assembly

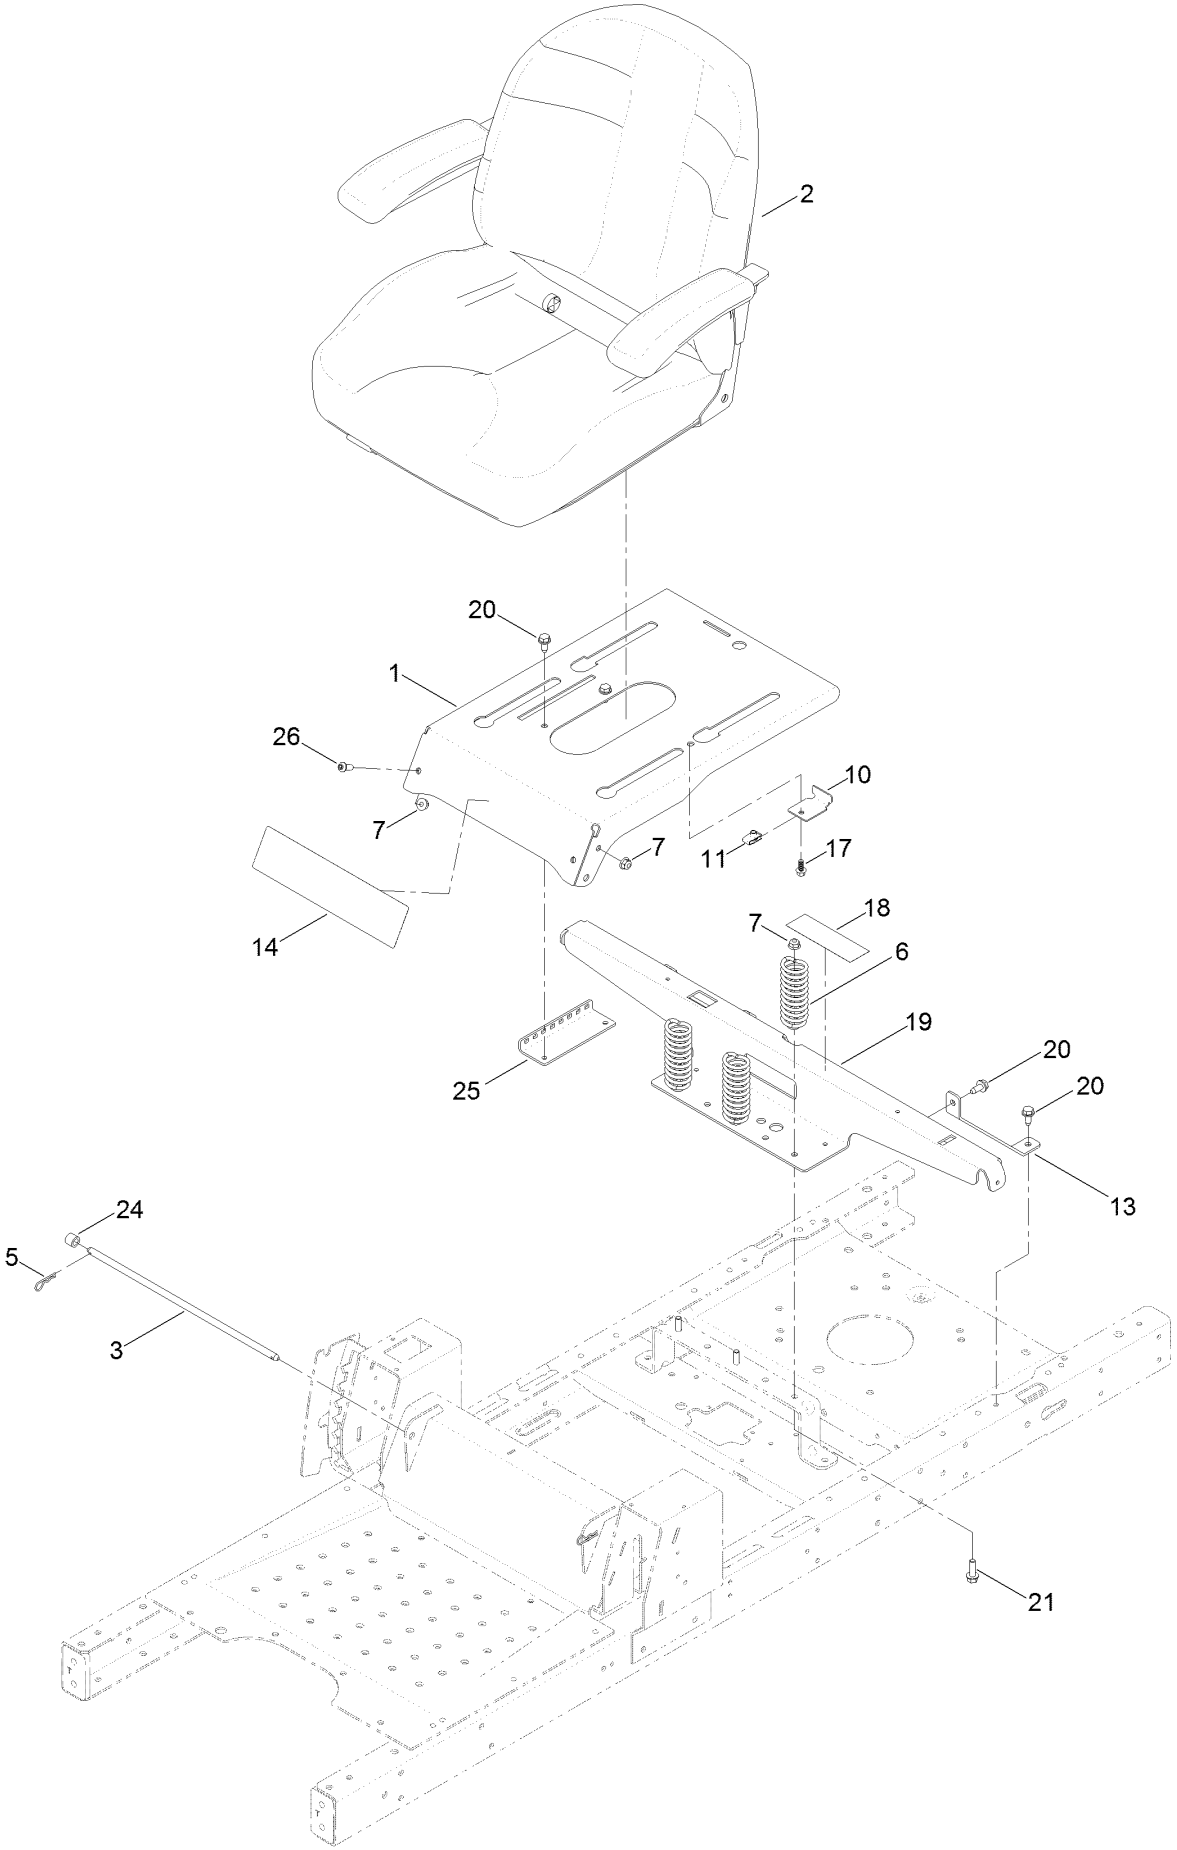

# Seat Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 132-0919-03 | 1 | Pan-Seat |
| 2 | 131-4147 | 1 | Seat ASM |
| 3 | 115-4966 | 1 | Rod-Stop |
| 5 | 3290-250 | 2 | Pin-Cotter |
| 6 | 92-7054 | 3 | Spring-Compression |
| 7 | 104-8300 | 5 | Nut-HF, NI |
| 10 | 131-1038 | 1 | Bracket-Stop, Seat |
| 11 | 107069 | 1 | Clip |
| 13 | 119-3431-03 | 2 | Support-Tank, Rear |
| 14 | 132-0888 | 1 | Decal |
| 17 | 99-6810 | 1 | Screw-HHF |
| 18 | 106-8717 | 1 | Decal-Service, CE |
| 19 | 131-1039-03 | 1 | Support-Pod, Wide |
| 20 | 32144-70 | 4 | Screw-HWH |
| 21 | 3234-29 | 3 | Screw-HHF |
| 24 | 1-413088 | 2 | Bushing-Lever, Lift |
| 25 | 131-4008-03 | 1 | Bracket-Latch, Seat |
| 26 | 3274-55 | 2 | Screw-HSBH |


# Seat Assembly No. 131-4147

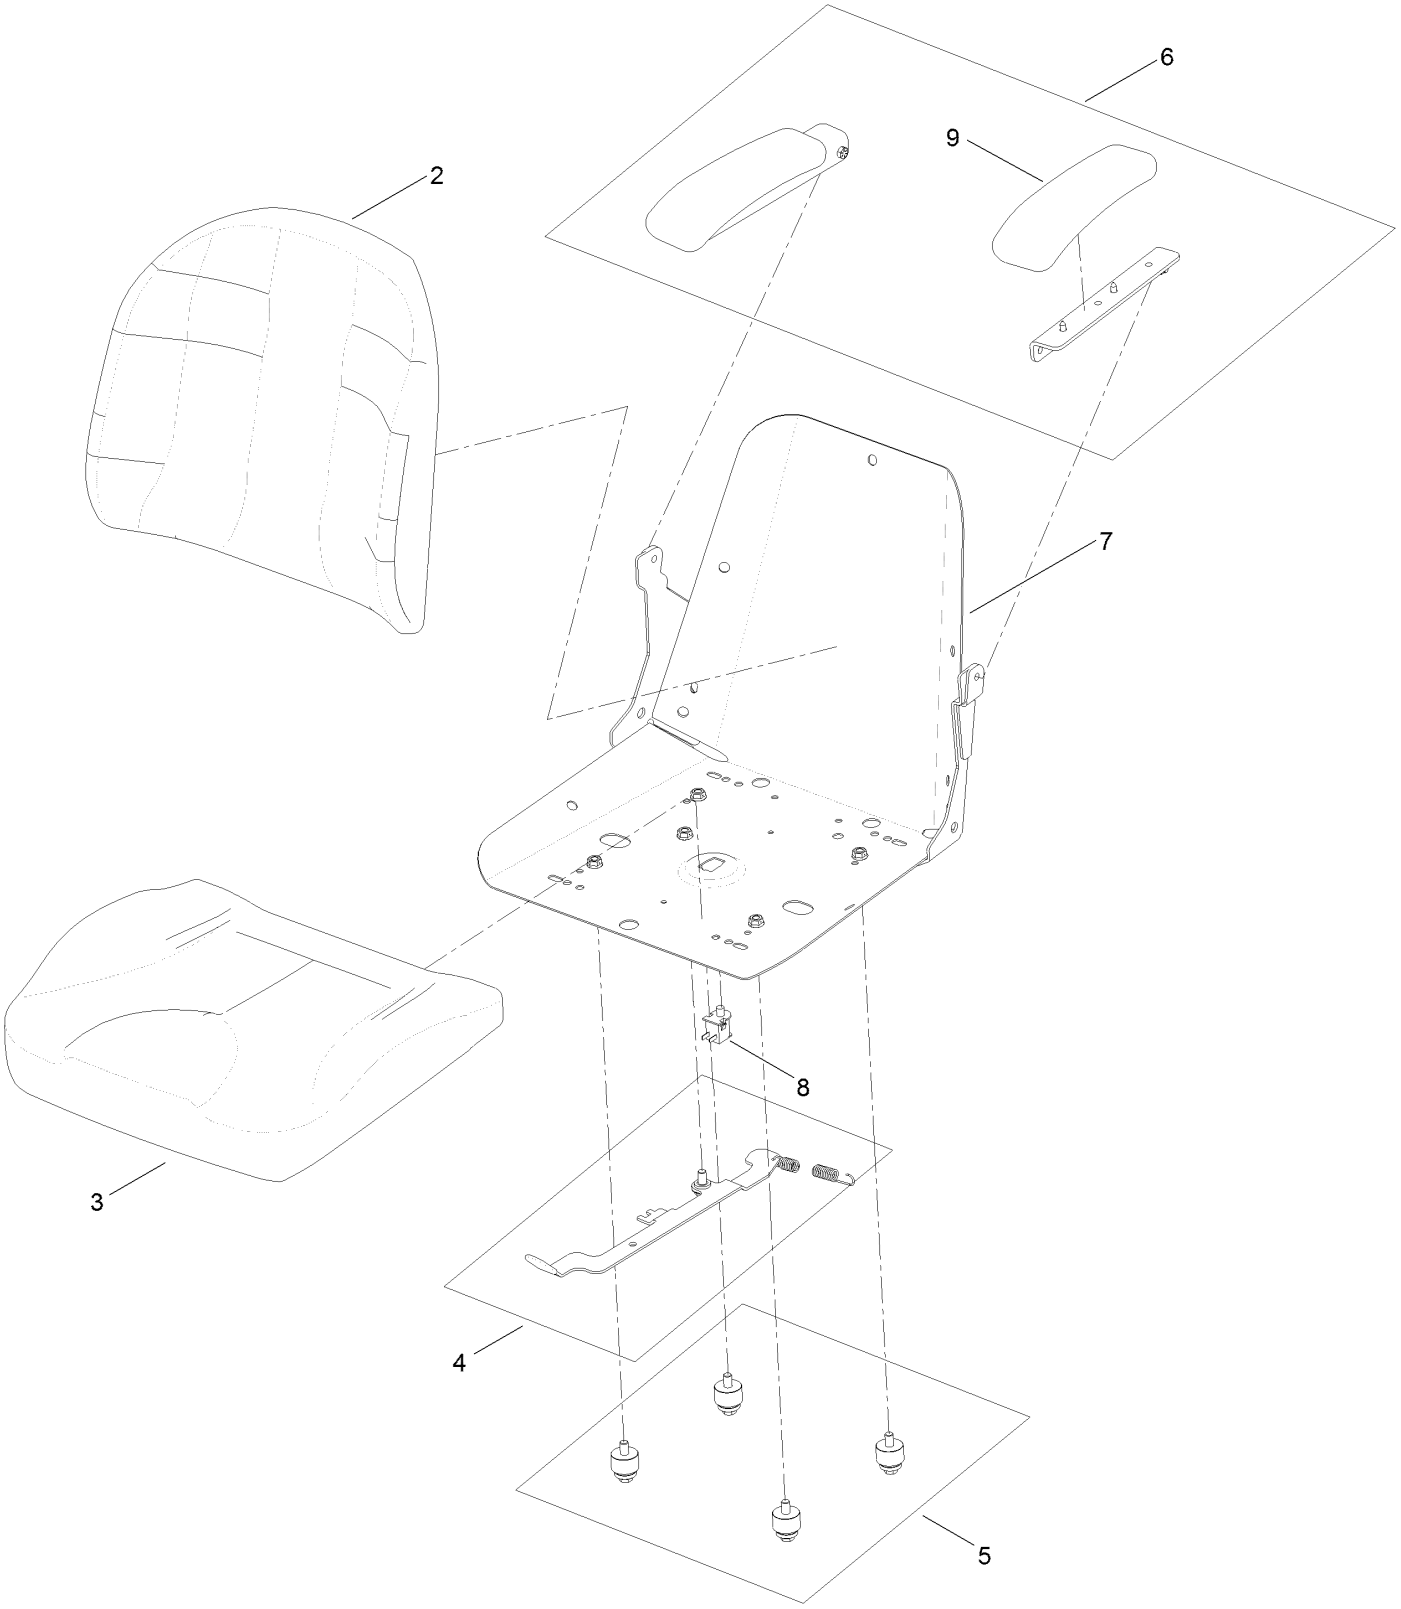

# Seat Assembly No. 131-4147 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 2 | 131-4149 | 1 | Cushion-Seat, Back |
| 3 | 131-4151 | 1 | Cushion-Seat, Bottom |
| 4 | 131-4153 | 1 | Track ASM |
| 5 | 131-4154 | 1 | Bushing ASM |
| 6 | 131-4155 | 1 | Armrest Kit |
| 7 | 131-4156 | 1 | Shell |
| 8 | 82-2190 | 1 | Switch-Bail |
| 9 | 110-4163 | 2 | Cushion-Rest, Arm |


# Belt and Idler Assembly

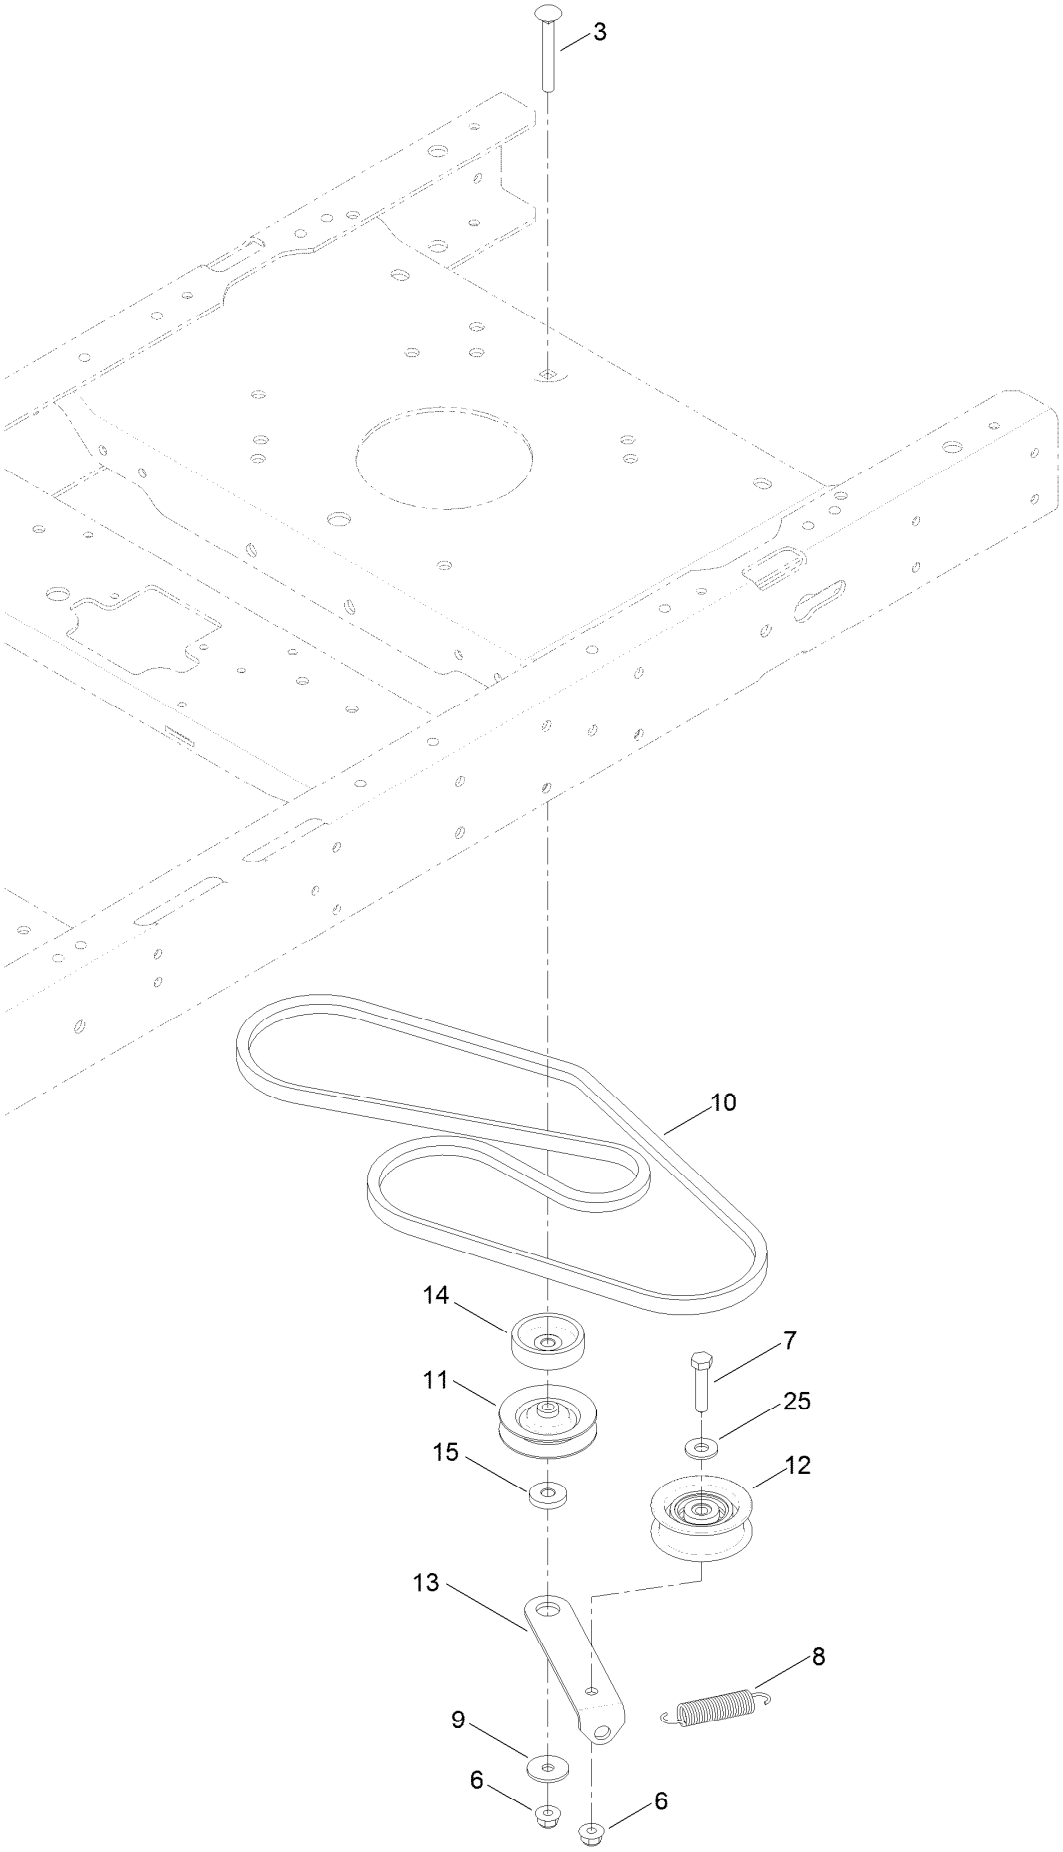

# Belt and Idler Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 3 | 3230-8 | 1 | Screw-CARR |
| 6 | 104-8300 | 2 | Nut-HF, NI |
| 7 | 322-7 | 1 | Screw-HH |
| 8 | 104-6415 | 1 | Spring-Return, Pedal |
| 9 | 5-4460 | 1 | Washer-Pivot |
| 10 | 130-6976 | 1 | V-Belt |
| 11 | 119-8822 | 1 | Pulley-Idler |
| 12 | 106-2176 | 1 | Pulley-Idler |
| 13 | 119-3326 | 1 | Arm-Idler |
| 14 | 119-3353 | 1 | Spacer |
| 15 | 119-3327 | 1 | Spacer-Arm, Idler |
| 25 | 3256-3 | 1 | Washer-Flat |


# Hydro Transaxle Drive and Rear Wheel Assembly

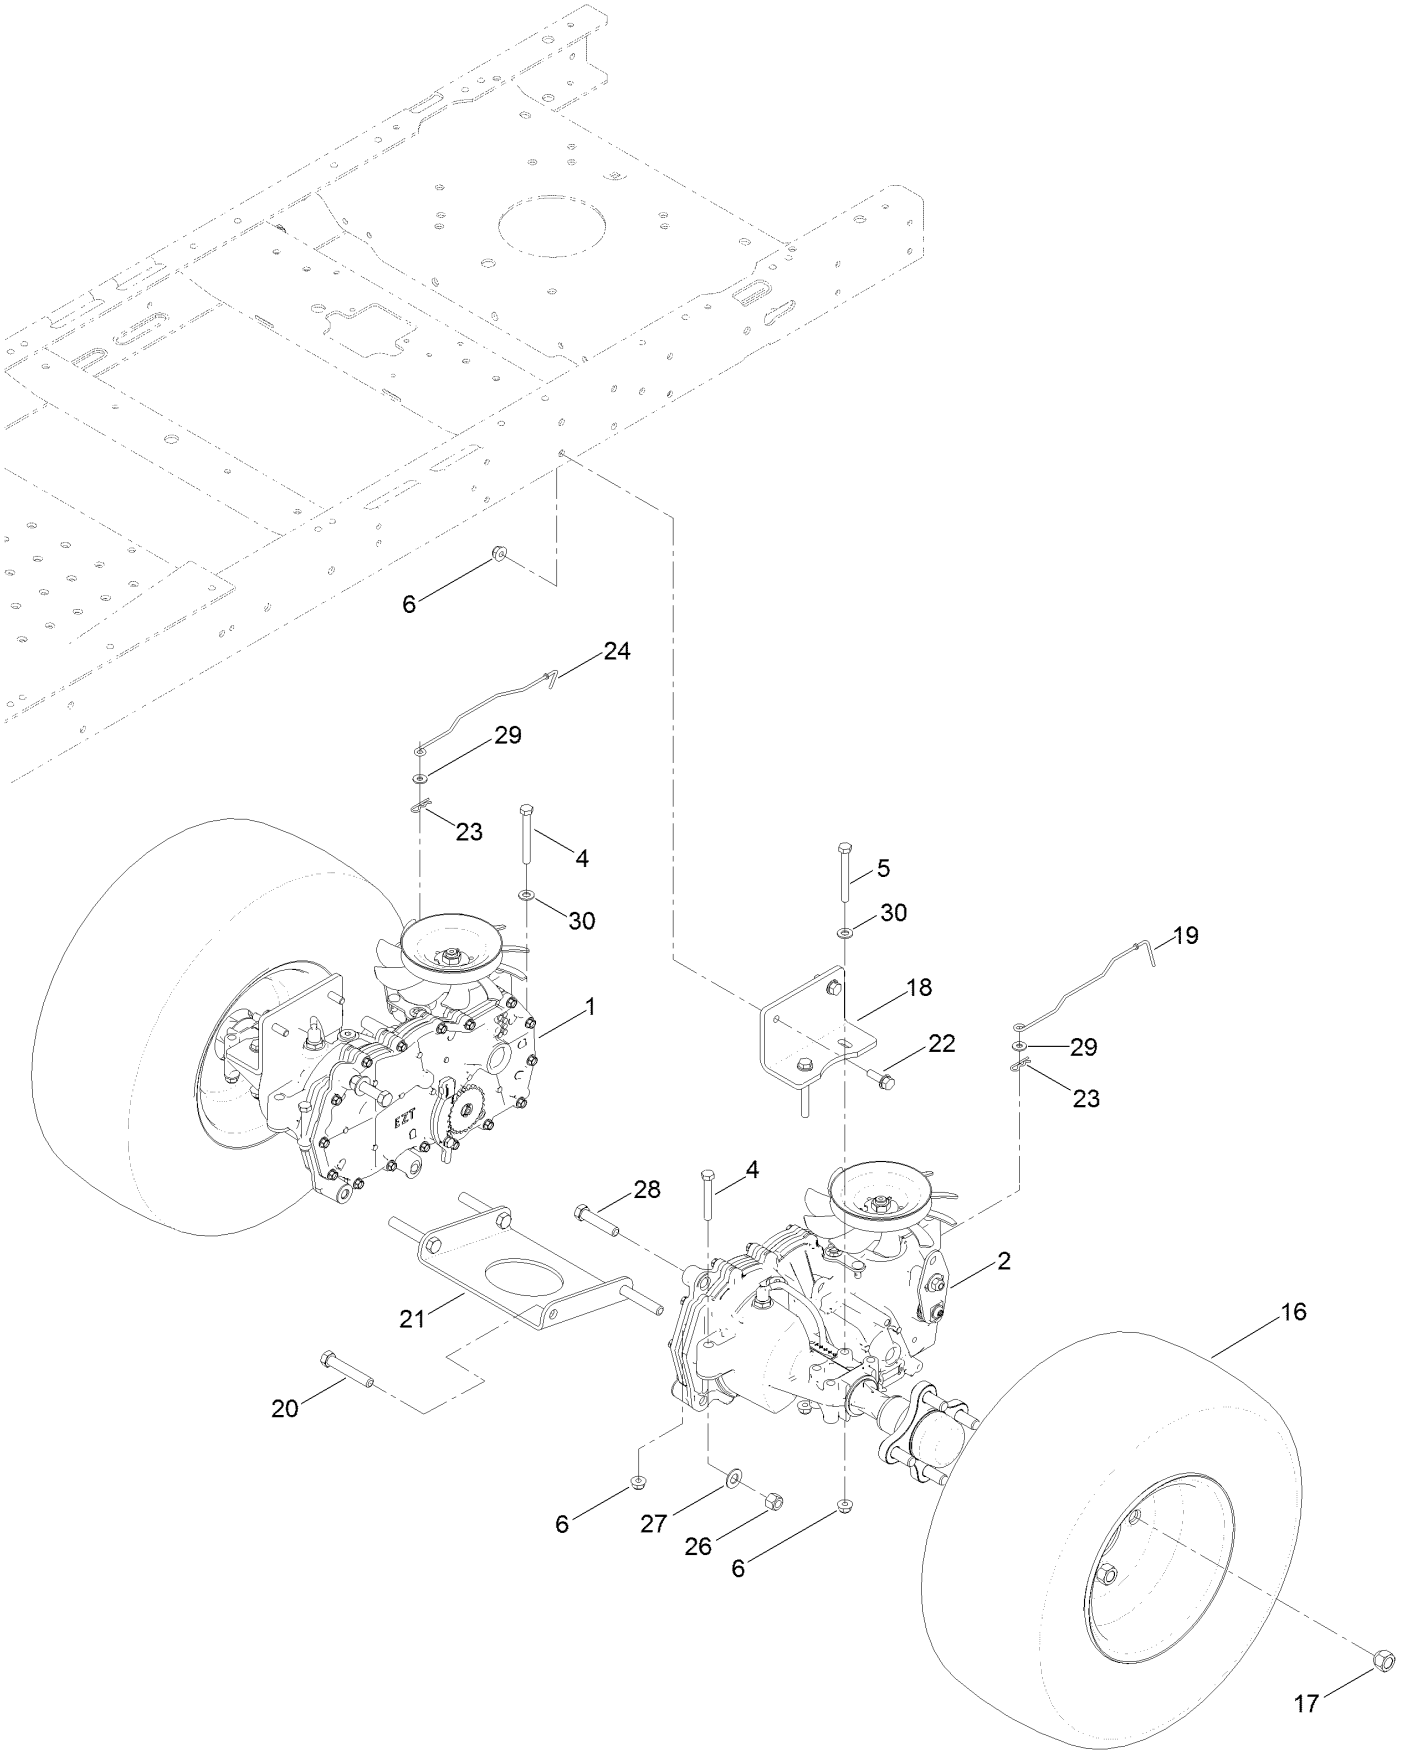

# Hydro Transaxle Drive and Rear Wheel Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 131-3641 | 1 | RH Hydro Transmission ASM |
| 2 | 131-3640 | 1 | LH Hydro Transmission ASM |
| 4 | 322-11 | 4 | Screw-HH |
| 5 | 322-13 | 4 | Screw-HH |
| 6 | 104-8300 | 12 | Nut-HF, NI |
| 16 | 131-3673 | 2 | 2 Ply Tire And Wheel ASM |
| 17 | 242-50 | 8 | Nut-Lug |
| 18 | 117-7264-03 | 2 | Mount-Hydro |
| 19 | 131-0900 | 1 | Rod-Bypass, LH |
| 20 | 324-10 | 4 | Screw-HH |
| 21 | 119-3342-03 | 1 | Plate-Cross, Hydro |
| 22 | 3234-29 | 4 | Screw-HHF |
| 23 | 3290-307 | 2 | Pin-Cotter |
| 24 | 130-7049 | 1 | Rod-Bypass, RH |
| 26 | 3296-48 | 6 | Nut-Lock, NI |
| 27 | 3256-25 | 6 | Washer-Flat |
| 28 | 324-8 | 2 | Screw-HH |
| 29 | 119-8952 | 2 | Washer |
| 30 | 3256-23 | 6 | Washer-Plain |

# 2 Ply Wheel and Tire Assembly No. 131-3673

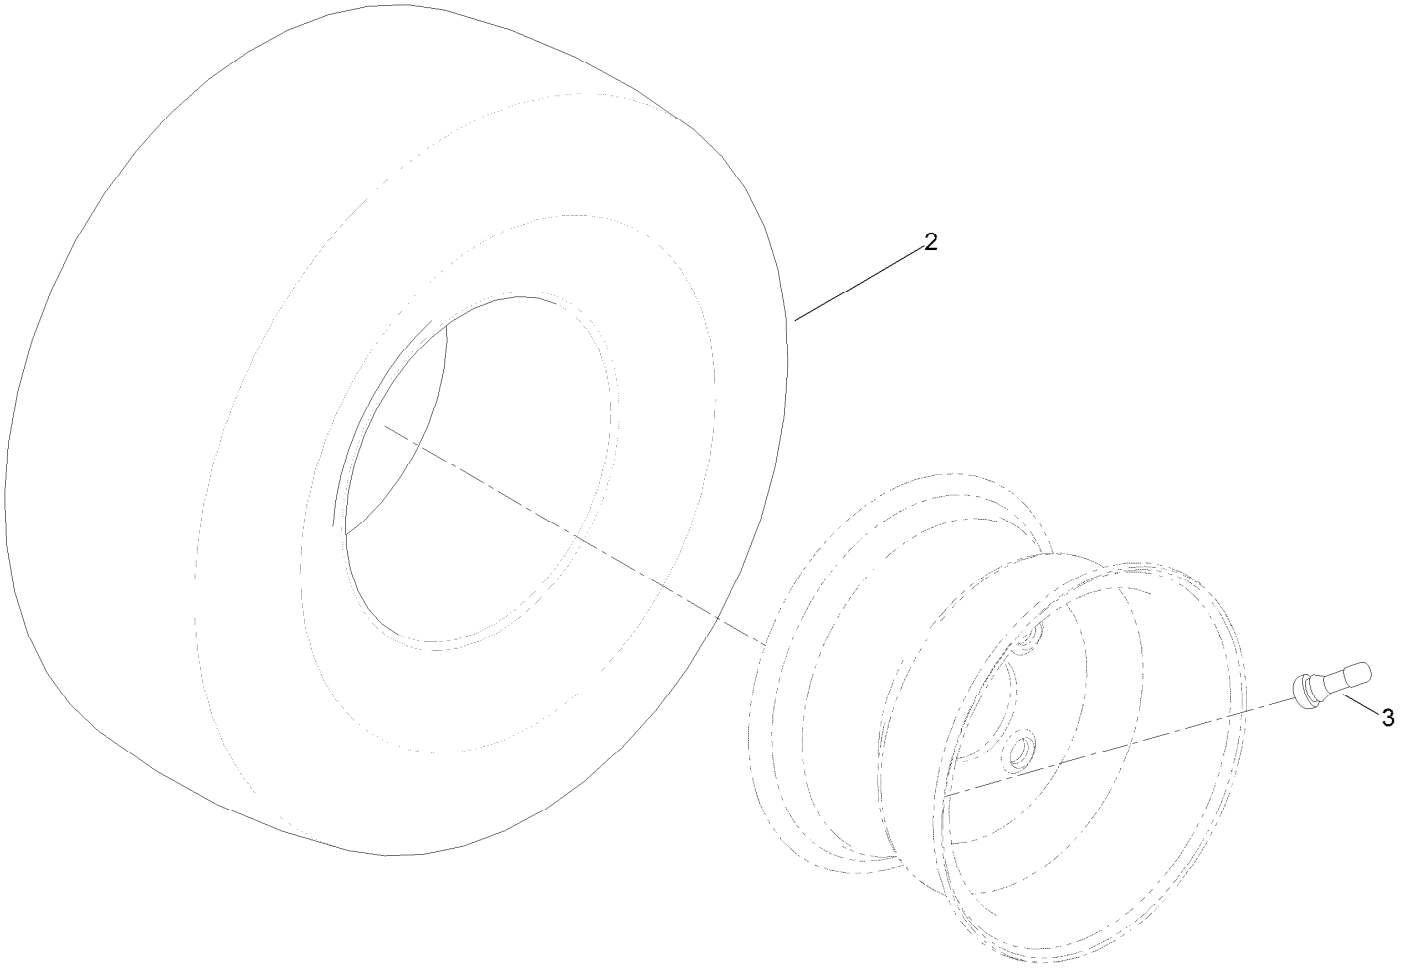


# 2 Ply Wheel and Tire Assembly No. 131-3673 (continued)

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 2 | 131-3680 | 1 | Tire-2 Ply |
| 3 | 232-27 | 1 | Stem-Valve |
| 4 | 93-3893 | 1 | Tube-Inner ● |

● Not illustrated


# RH Transaxle Assembly No. 131-3641

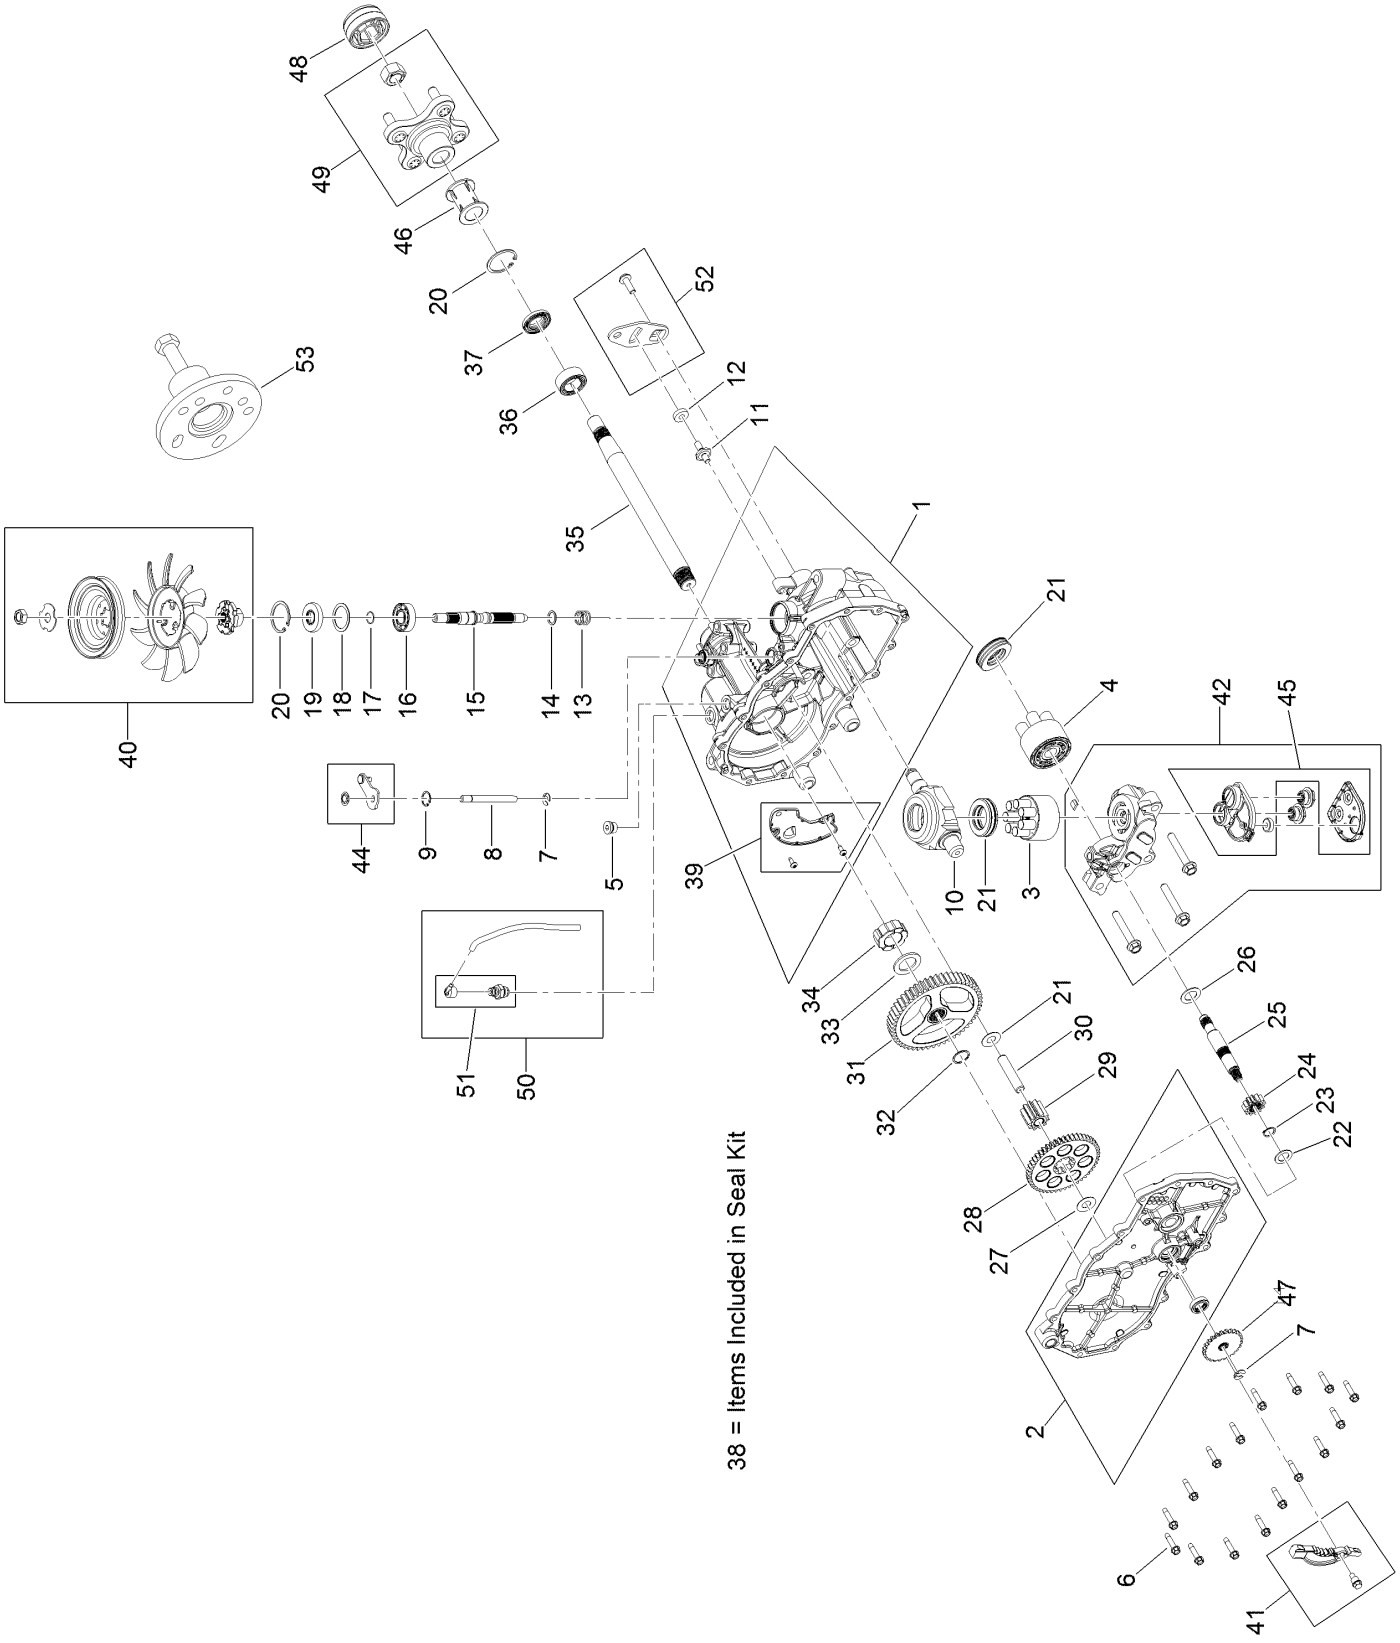

# RH Transaxle Assembly No. 131-3641 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 106-8674 | 1 | Main Housing ASM |
| 2 | 106-8675 | 1 | Side ASM |
| 3 | 110-8561 | 1 | Pump Block ASM |
| 4 | 103-2666 | 1 | Cylinder Block Kit |
| 5 | 104-2189 | 1 | Plug-Thread, Straight |
| 6 | 117-5359 | 16 | Screw-HHF |
| 7 | 106-8677 | 2 | Ring-Retaining, External |
| 8 | 106-8678 | 1 | Rod-Bypass |
| 9 | 106-8679 | 1 | Ring-Retaining, Internal |
| 10 | 104-5304 | 1 | Swashplate-Trunnion |
| 11 | 104-2116 | 1 | Stud |
| 12 | 112-9853 | 1 | Puck-Friction |
| 13 | 94-1936 | 1 | Spring-Block |
| 14 | 94-1937 | 1 | Washer-Thrust |
| 15 | 104-5306 | 1 | Shaft-Input |
| 16 | 104-5311 | 1 | Bearing-Ball |
| 17 | 104-5307 | 1 | Ring-Retaining |
| 18 | 104-5308 | 1 | Spacer |
| 19 | 104-5310 | 1 | Seal-Lip |
| 20 | 104-5309 | 2 | Ring-Retaining |
| 21 | 94-6922 | 2 | Bearing-Thrust |
| 22 | 104-5339 | 1 | Washer-Flat |
| 23 | 104-5340 | 1 | Ring-Retaining |
| 24 | 132-0912 | 1 | Gear-12T |
| 25 | 106-8683 | 1 | Shaft-Motor |
| 26 | 104-5360 | 1 | Washer |
| 27 | 94-1933 | 2 | Washer |
| 28 | 132-0911 | 1 | Gear-49T |
| 29 | 104-5318 | 1 | Gear-Jackshaft, 10T |
| 30 | 104-5329 | 1 | Pin-Jackshaft |
| 31 | 112-9854 | 1 | Ring-Spiral, Retaining |
| 32 | 112-9855 | 1 | Gear-52T, Bull |
| 33 | 112-9856 | 1 | Washer |
| 34 | 112-9857 | 1 | Bearing-Sleeve |
| 35 | 120-7104 | 1 | Shaft-Axle |
| 36 | 112-9859 | 1 | Bushing-Axle |
| 37 | 112-9860 | 1 | Seal-Lip |
| 38 | 106-8686 | 1 | Seal Kit |
| 39 | 106-8687 | 1 | Expansion Plate Kit |
| 40 | 121-5746 | 1 | Fan Pulley Kit |
| 41 | 106-8688 | 1 | Brake Arm Kit |
| 42 | 112-9862 | 1 | Center Section Filter Kit |
| 44 | 107-2489 | 1 | Bypass Arm Kit |
| 45 | 114-1634 | 1 | Filter Kit |
| 46 | 120-7109 | 1 | Tube-Axle |
| 47 | 106-8694 | 1 | Disc-Brake, Cog |
| 48 | 115-5057 | 1 | Cover-Nut, Axle |
| 49 | 109-5939 | 1 | Hub Kit |
| 50 | 112-9866 | 1 | Breather Kit |
| 51 | 114-1635 | 1 | Breather ASM |
| 52 | 117-5362 | 1 | Control Arm Kit |
| 53 | 114-8467 | 1 | Puller-Hub, 4 Bolt |


# LH Transaxle Assembly No. 131-3640

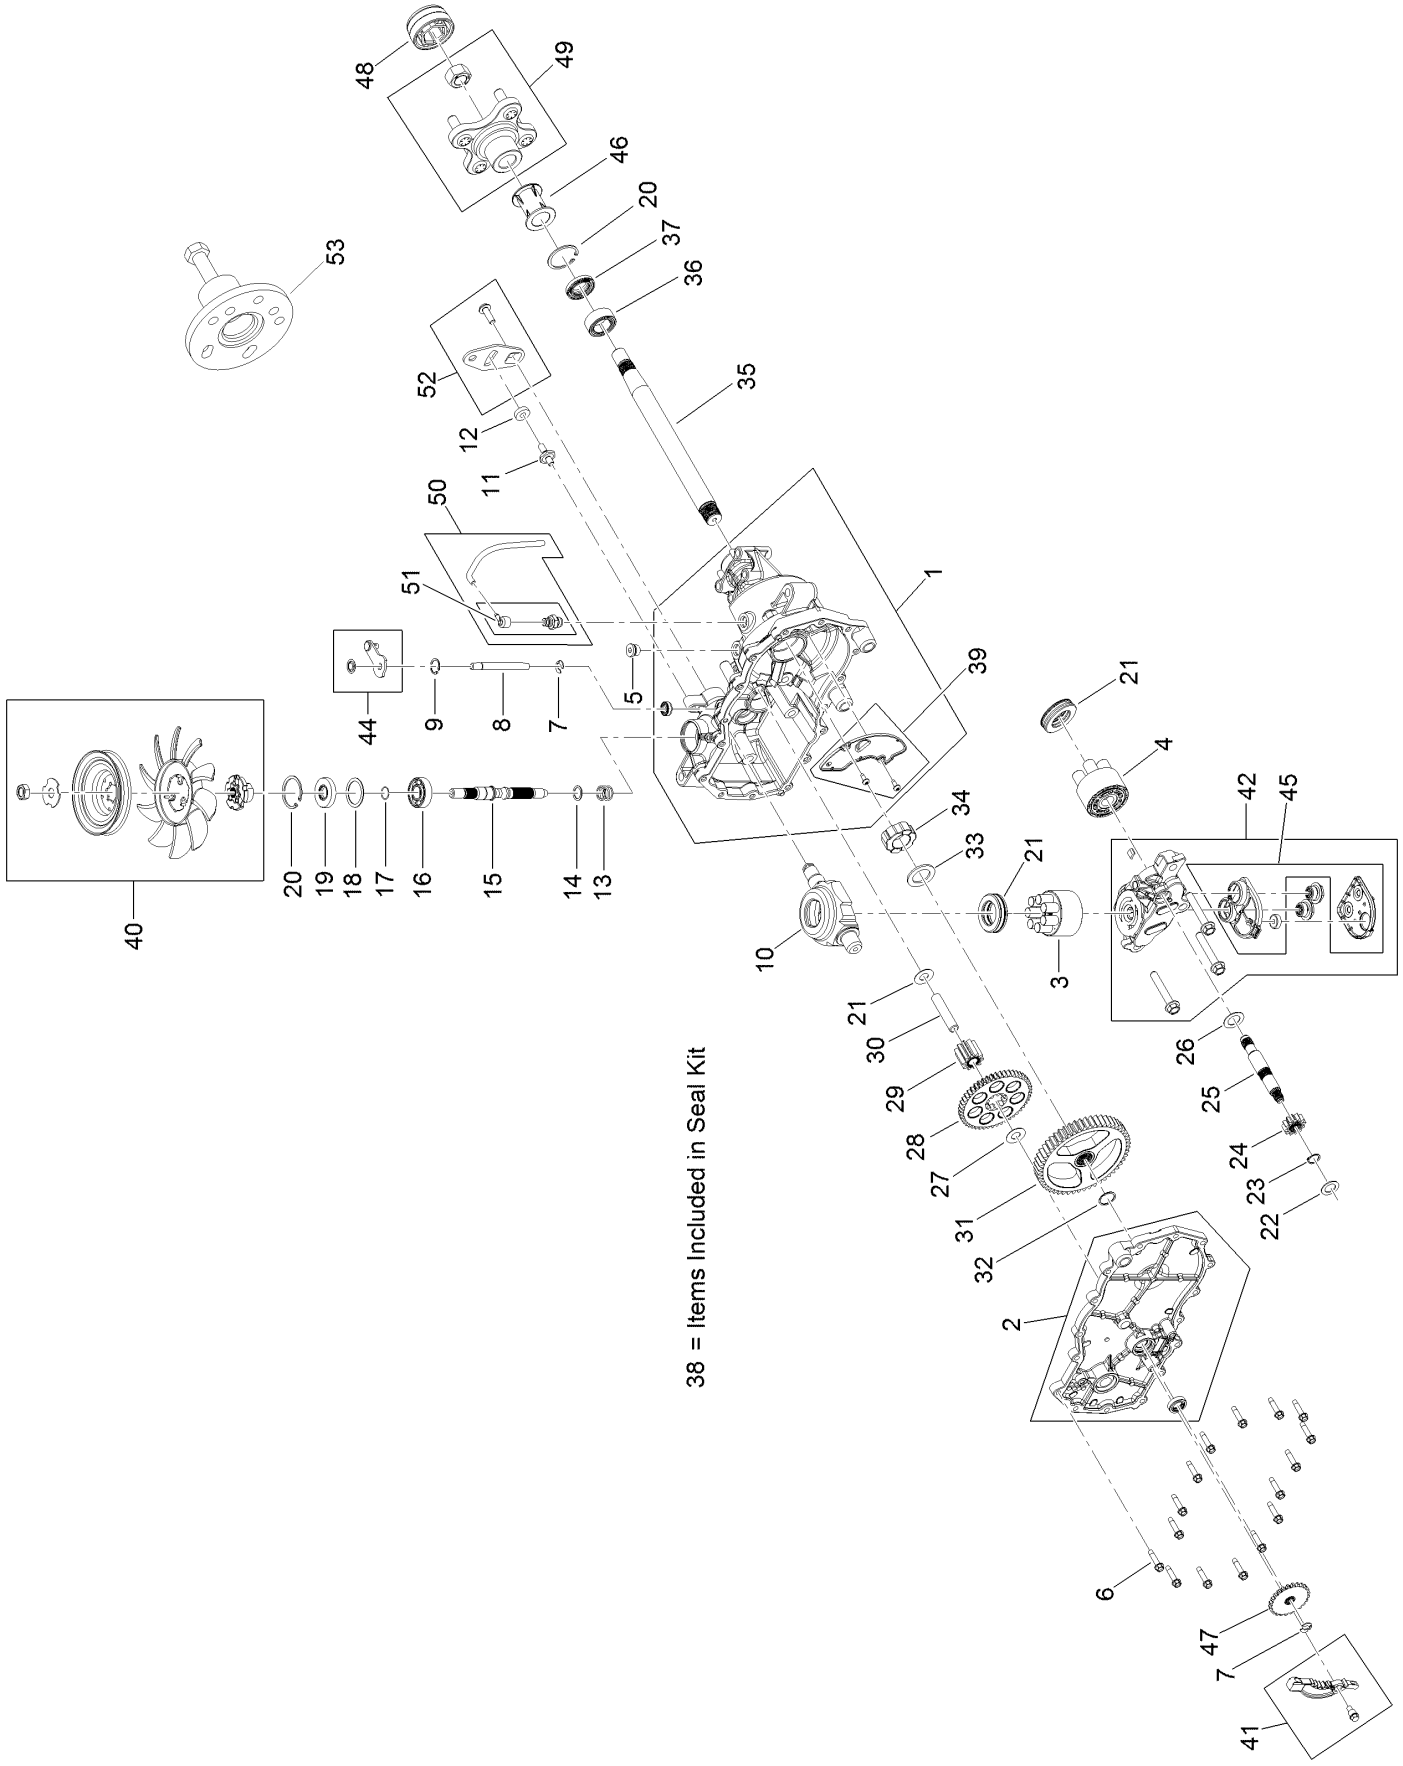

# LH Transaxle Assembly No. 131-3640 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 106-8695 | 1 | Main Housing ASM |
| 2 | 106-8696 | 1 | Side ASM |
| 3 | 110-8561 | 1 | Pump Block ASM |
| 4 | 103-2666 | 1 | Cylinder Block Kit |
| 5 | 104-2189 | 1 | Plug-Thread, Straight |
| 6 | 117-5359 | 16 | Screw-HHF |
| 7 | 106-8677 | 2 | Ring-Retaining, External |
| 8 | 106-8678 | 1 | Rod-Bypass |
| 9 | 106-8679 | 1 | Ring-Retaining, Internal |
| 10 | 104-5304 | 1 | Swashplate-Trunnion |
| 11 | 104-2116 | 1 | Stud |
| 12 | 112-9853 | 1 | Puck-Friction |
| 13 | 94-1936 | 1 | Spring-Block |
| 14 | 94-1937 | 1 | Washer-Thrust |
| 15 | 104-5306 | 1 | Shaft-Input |
| 16 | 104-5311 | 1 | Bearing-Ball |
| 17 | 104-5307 | 1 | Ring-Retaining |
| 18 | 104-5308 | 1 | Spacer |
| 19 | 104-5310 | 1 | Seal-Lip |
| 20 | 104-5309 | 2 | Ring-Retaining |
| 21 | 94-6922 | 2 | Bearing-Thrust |
| 22 | 104-5339 | 1 | Washer-Flat |
| 23 | 104-5340 | 1 | Ring-Retaining |
| 24 | 132-0912 | 1 | Gear-12T |
| 25 | 106-8683 | 1 | Shaft-Motor |
| 26 | 104-5360 | 1 | Washer |
| 27 | 94-1933 | 2 | Washer |
| 28 | 132-0911 | 1 | Gear-49T |
| 29 | 104-5318 | 1 | Gear-Jackshaft, 10T |
| 30 | 104-5329 | 1 | Pin-Jackshaft |
| 31 | 112-9854 | 1 | Ring-Spiral, Retaining |
| 32 | 112-9855 | 1 | Gear-52T, Bull |
| 33 | 112-9856 | 1 | Washer |
| 34 | 112-9857 | 1 | Bearing-Sleeve |
| 35 | 120-7104 | 1 | Shaft-Axle |
| 36 | 112-9859 | 1 | Bushing-Axle |
| 37 | 112-9860 | 1 | Seal-Lip |
| 38 | 106-8686 | 1 | Seal Kit |
| 39 | 106-8697 | 1 | Expansion Plate Kit |
| 40 | 121-5746 | 1 | Fan Pulley Kit |
| 41 | 106-8688 | 1 | Brake Arm Kit |
| 42 | 112-9861 | 1 | Center Section Filter Kit |
| 44 | 120-5549 | 1 | Bypass Kit |
| 45 | 114-1634 | 1 | Filter Kit |
| 46 | 120-7109 | 1 | Tube-Axle |
| 47 | 106-8694 | 1 | Disc-Brake, Cog |
| 48 | 115-5057 | 1 | Cover-Nut, Axle |
| 49 | 109-5939 | 1 | Hub Kit |
| 50 | 112-9866 | 1 | Breather Kit |
| 51 | 114-1635 | 1 | Breather ASM |
| 52 | 117-5362 | 1 | Control Arm Kit |
| 53 | 114-8467 | 1 | Puller-Hub, 4 Bolt |


# Clutch Assembly

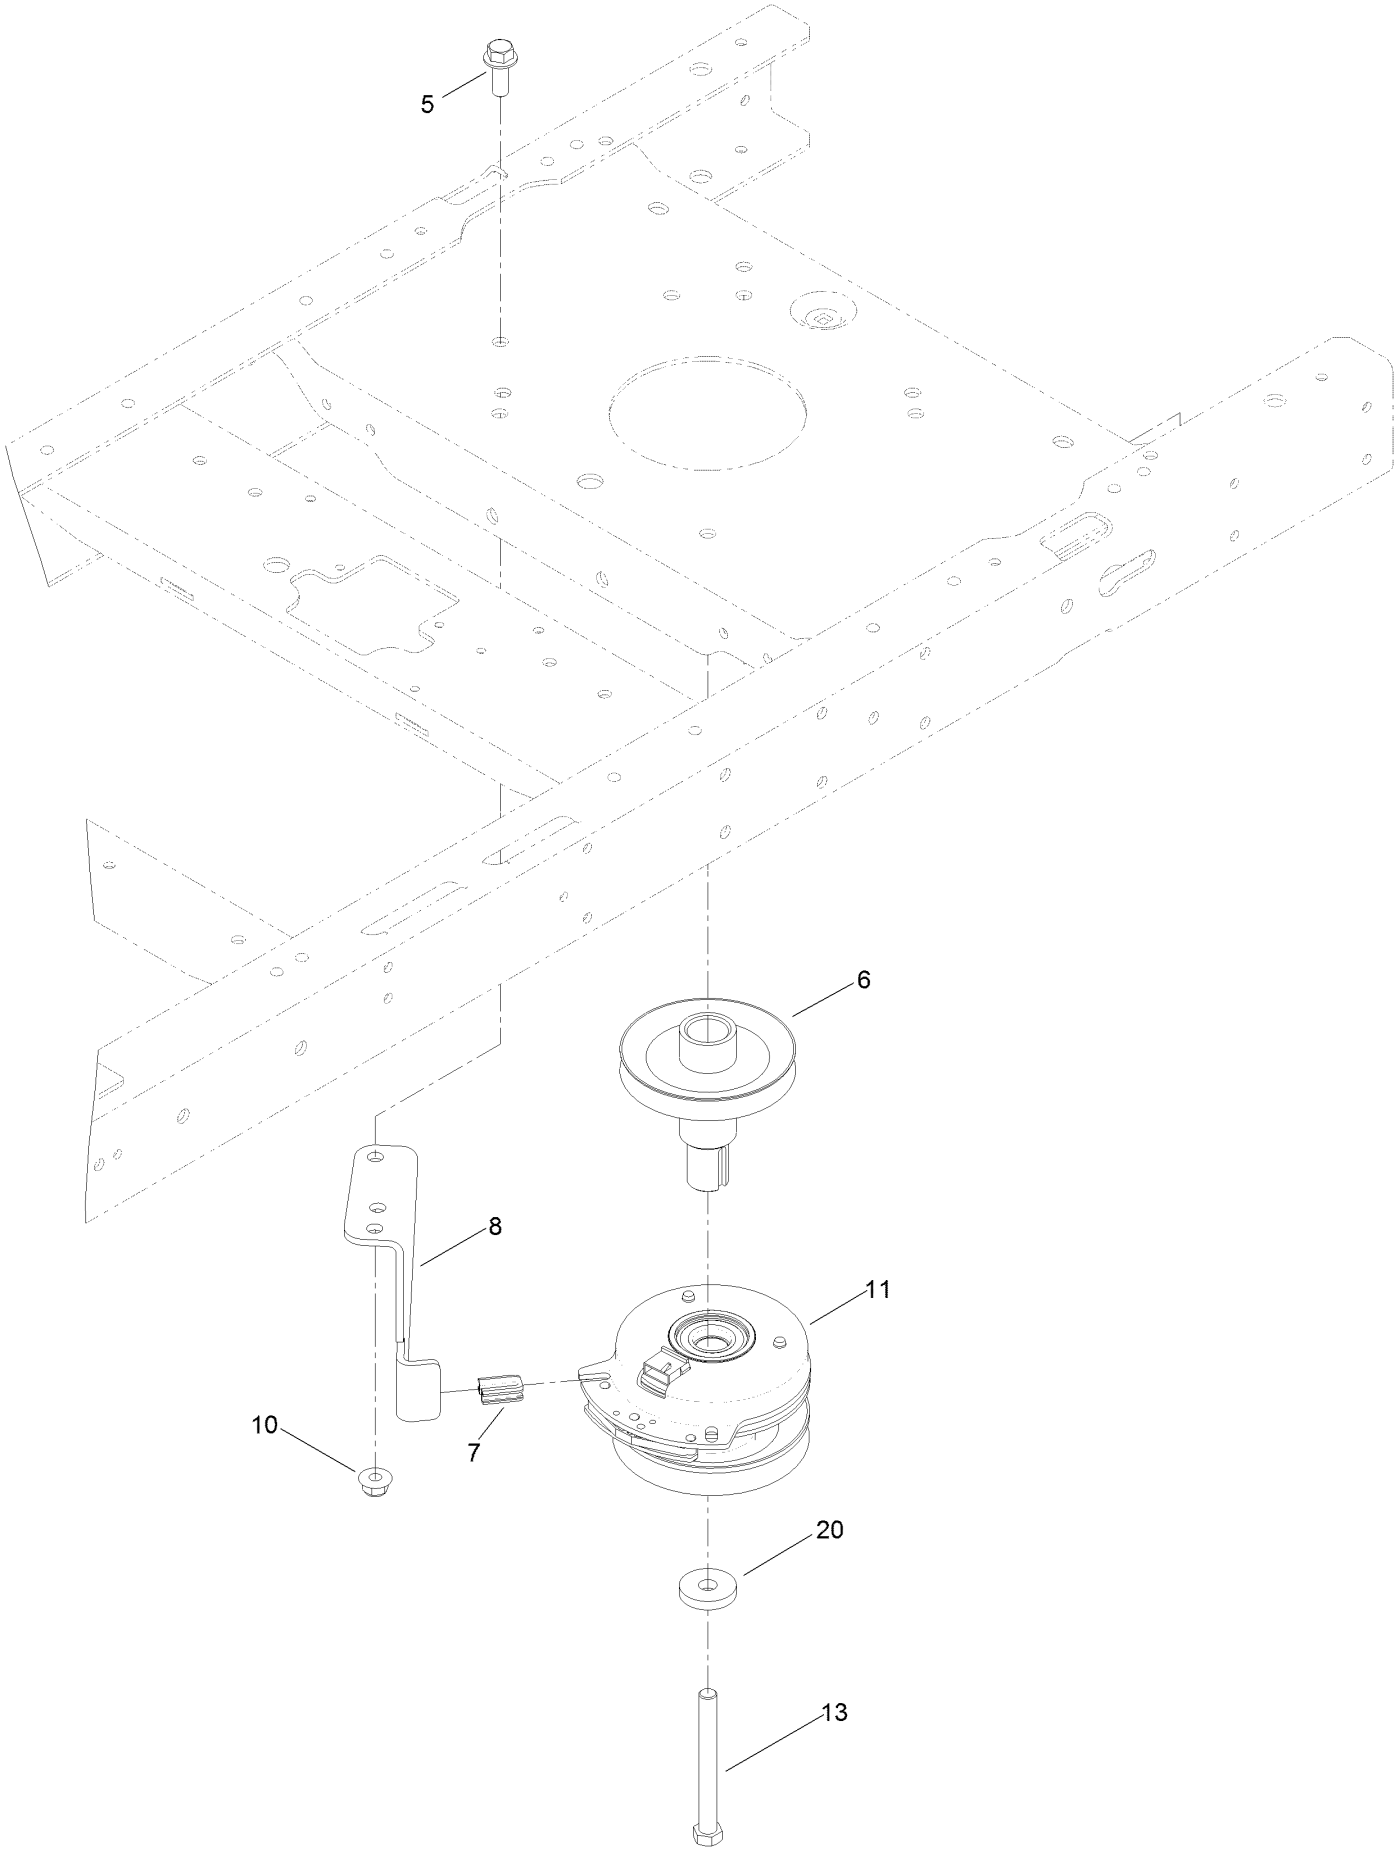

# Clutch Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 5 | 3234-42 | 1 | Screw-HHF |
| 6 | 130-6854 | 1 | Pulley-Engine |
| 7 | 120-2217 | 1 | Isolator-Clutch |
| 8 | 119-8885 | 1 | Stop-Clutch |
| 10 | 104-8301 | 1 | Nut-HF, NI |
| 11 | 127-3410 | 1 | Clutch-PTO |
| 13 | 3212-19 | 1 | Screw-HH |
| 20 | 112843 | 1 | Washer |


# Engine and Muffler Assembly

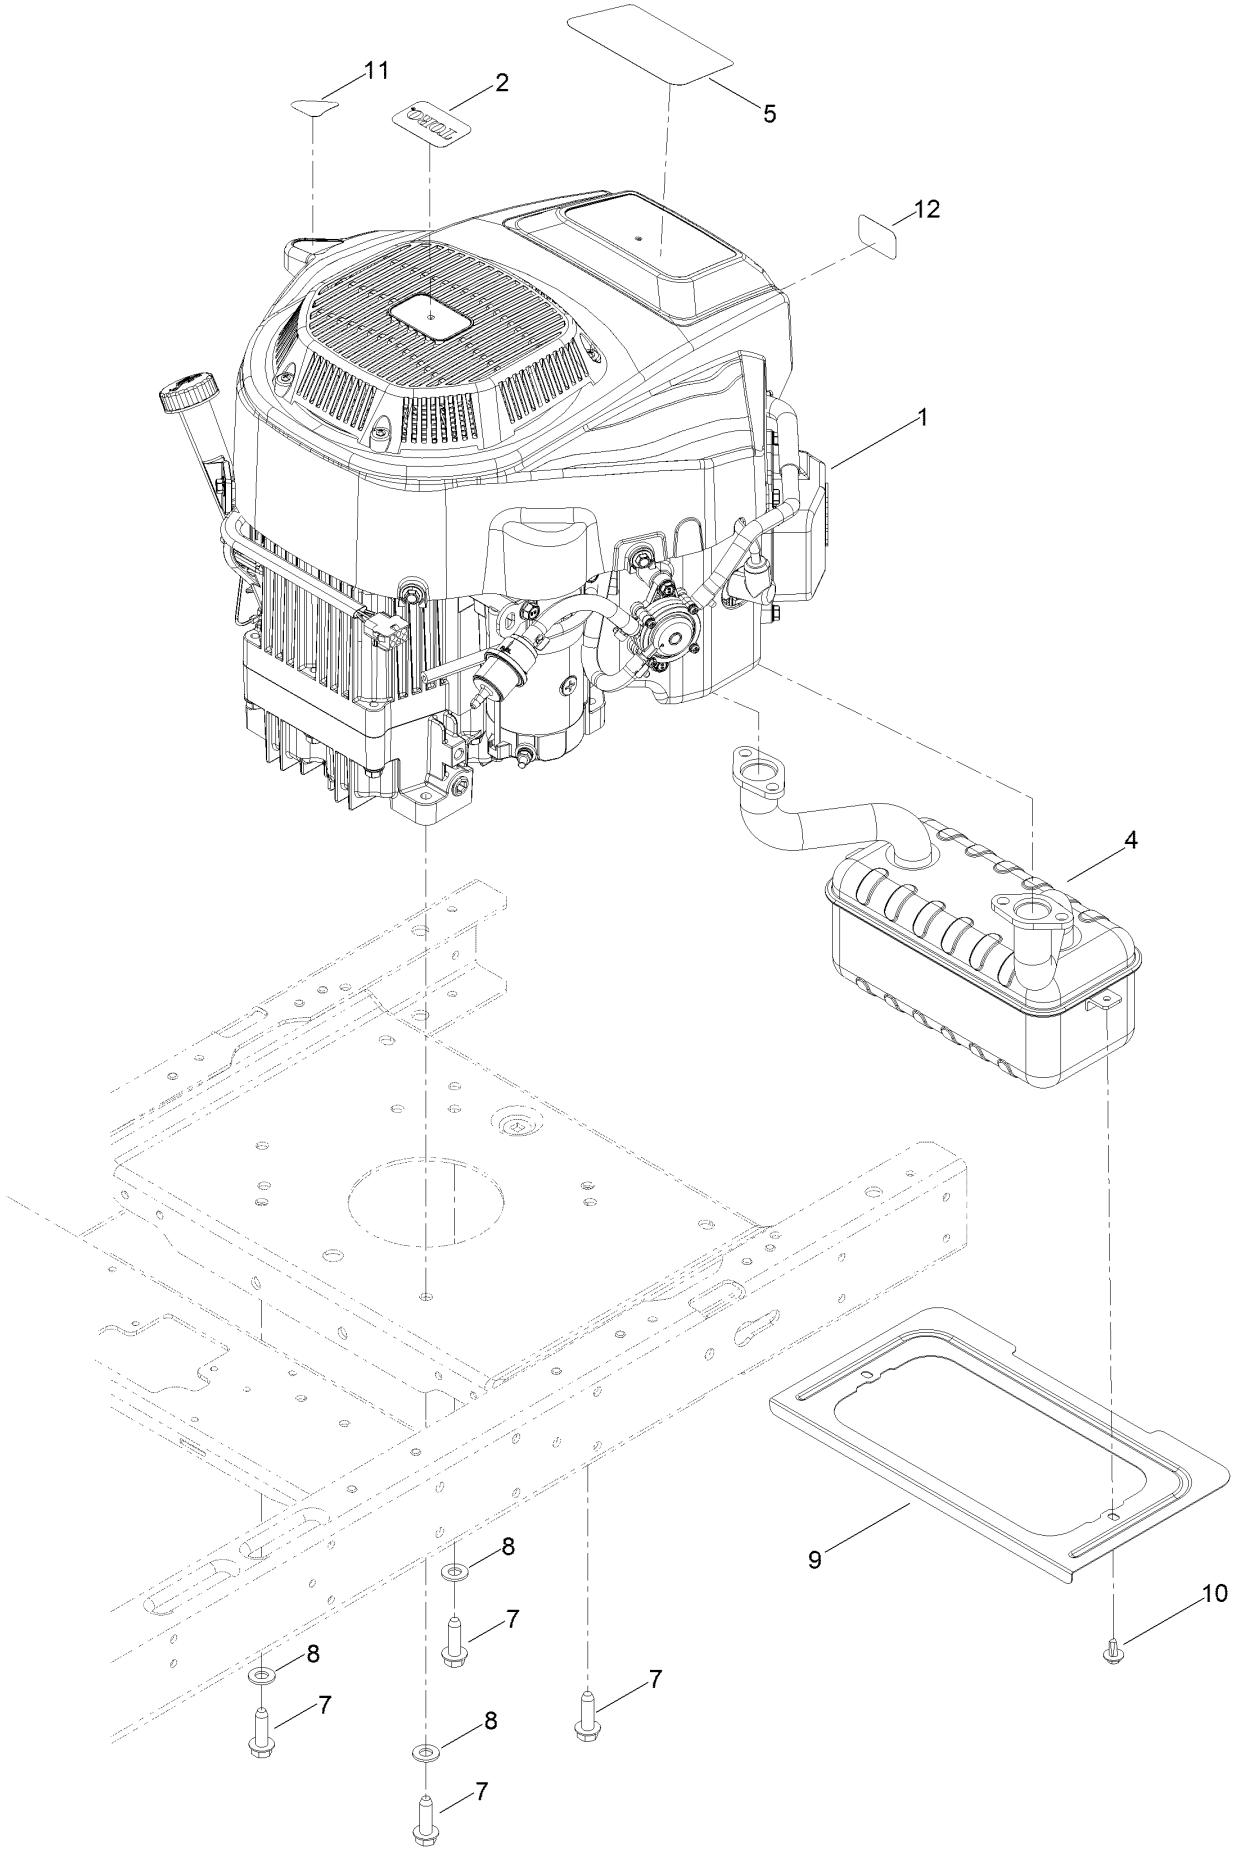


# Engine and Muffler Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 127-9041 | 1 | Engine-2P77F |
| 2 | 131-4157 | 1 | Decal |
| 4 | 130-6851 | 1 | Muffler |
| 5 | 132-0902 | 1 | Decal-Engine |
| 7 | 32144-109 | 4 | Screw-Taptite |
| 8 | 3256-24 | 3 | Washer-Flat |
| 9 | 131-1071-03 | 1 | Shield-Heat |
| 10 | 46-8560 | 2 | Screw-HHFTF |
| 11 | 131-1097 | 1 | Decal-Drain, Oil |
| 12 | 127-9076 | 1 | Placard-Intake |


# Fuel System Assembly
# with Non-Canister Style Air Filter

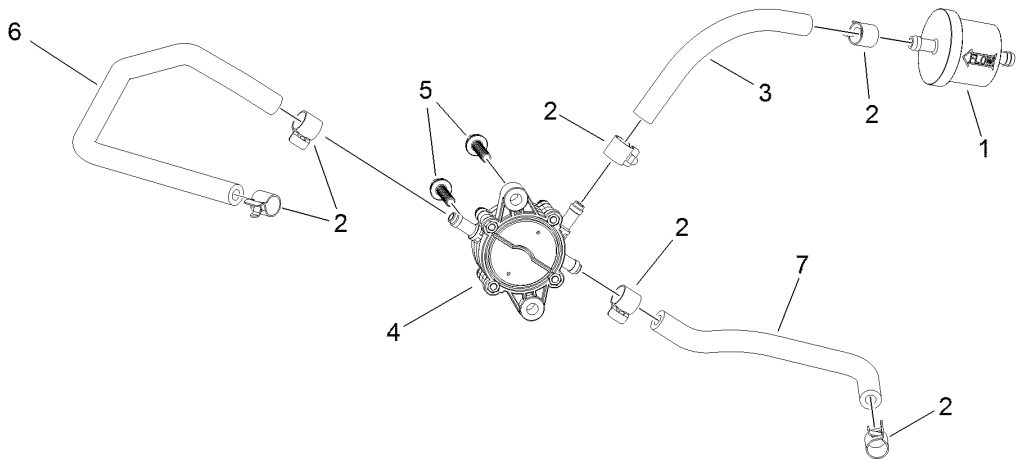

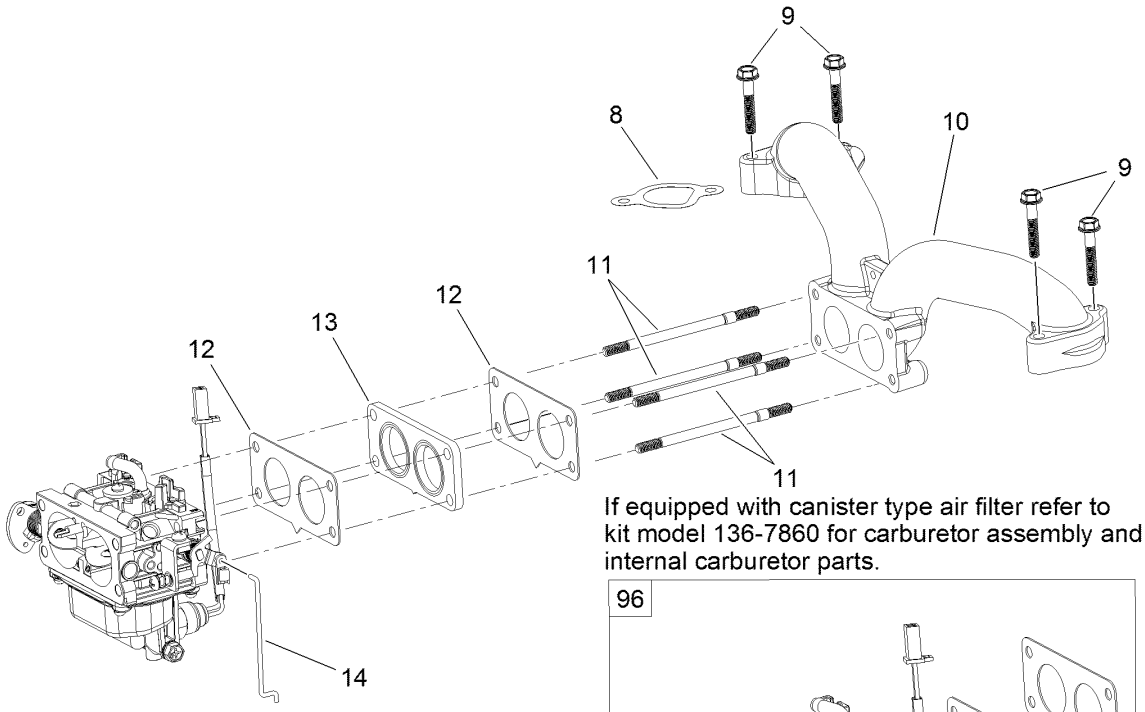




If equipped with canister type air filter refer to kit model 136-7860 for carburetor assembly and internal carburetor parts.

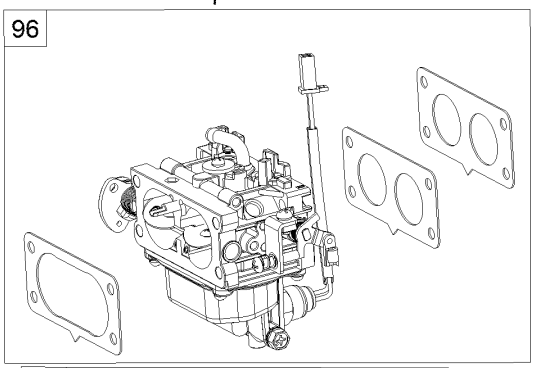
96

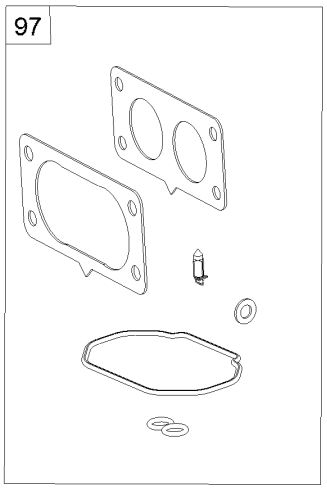

97



98

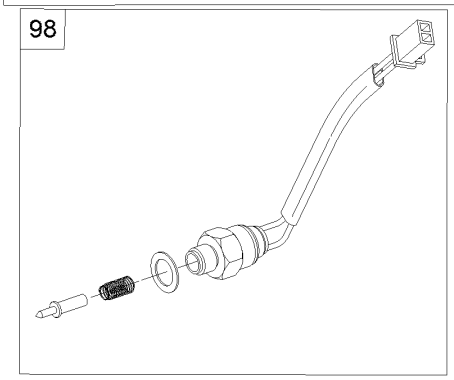


# Fuel System Assembly with Non-Canister Style Air Filter (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 133-1563 | 1 | Filter-Fuel |
| 2 | 120-4251 | 6 | Clamp-Fuel Line |
| 3 | 120-4371 | 1 | Line-Fuel |
| 4 | 127-9206 | 1 | Pump-Fuel |
| 5 | 120-4225 | 2 | Screw-HHF |
| 6 | 127-9205 | 1 | Hose-Fuel |
| 7 | 127-9207 | 1 | Hose-Fuel |
| 8 | 127-9230 | 2 | Gasket-Intake |
| 9 | 120-4284 | 4 | Screw-HHF |
| 10 | 127-9244 | 1 | Manifold-Intake |
| 11 | 127-9245 | 4 | Stud |
| 12 | 127-9246 | 2 | Gasket-Carburetor |
| 13 | 127-9247 | 1 | Insulator-Carburetor |
| 14 | 127-9248 | 1 | Linkage-Throttle |
| 96 | 127-9289 | 1 | Carburetor Replacement Kit |
| 97 | 127-9290 | 1 | Carburetor Repair Kit |
| 98 | 127-9292 | 1 | Solenoid Kit |
| 99 | 127-9303 | 1 | High Altitude Kit ● |

● Not illustrated

# Carburetor Assembly No. 127-9289
# with Non-Canister Style Air Filter

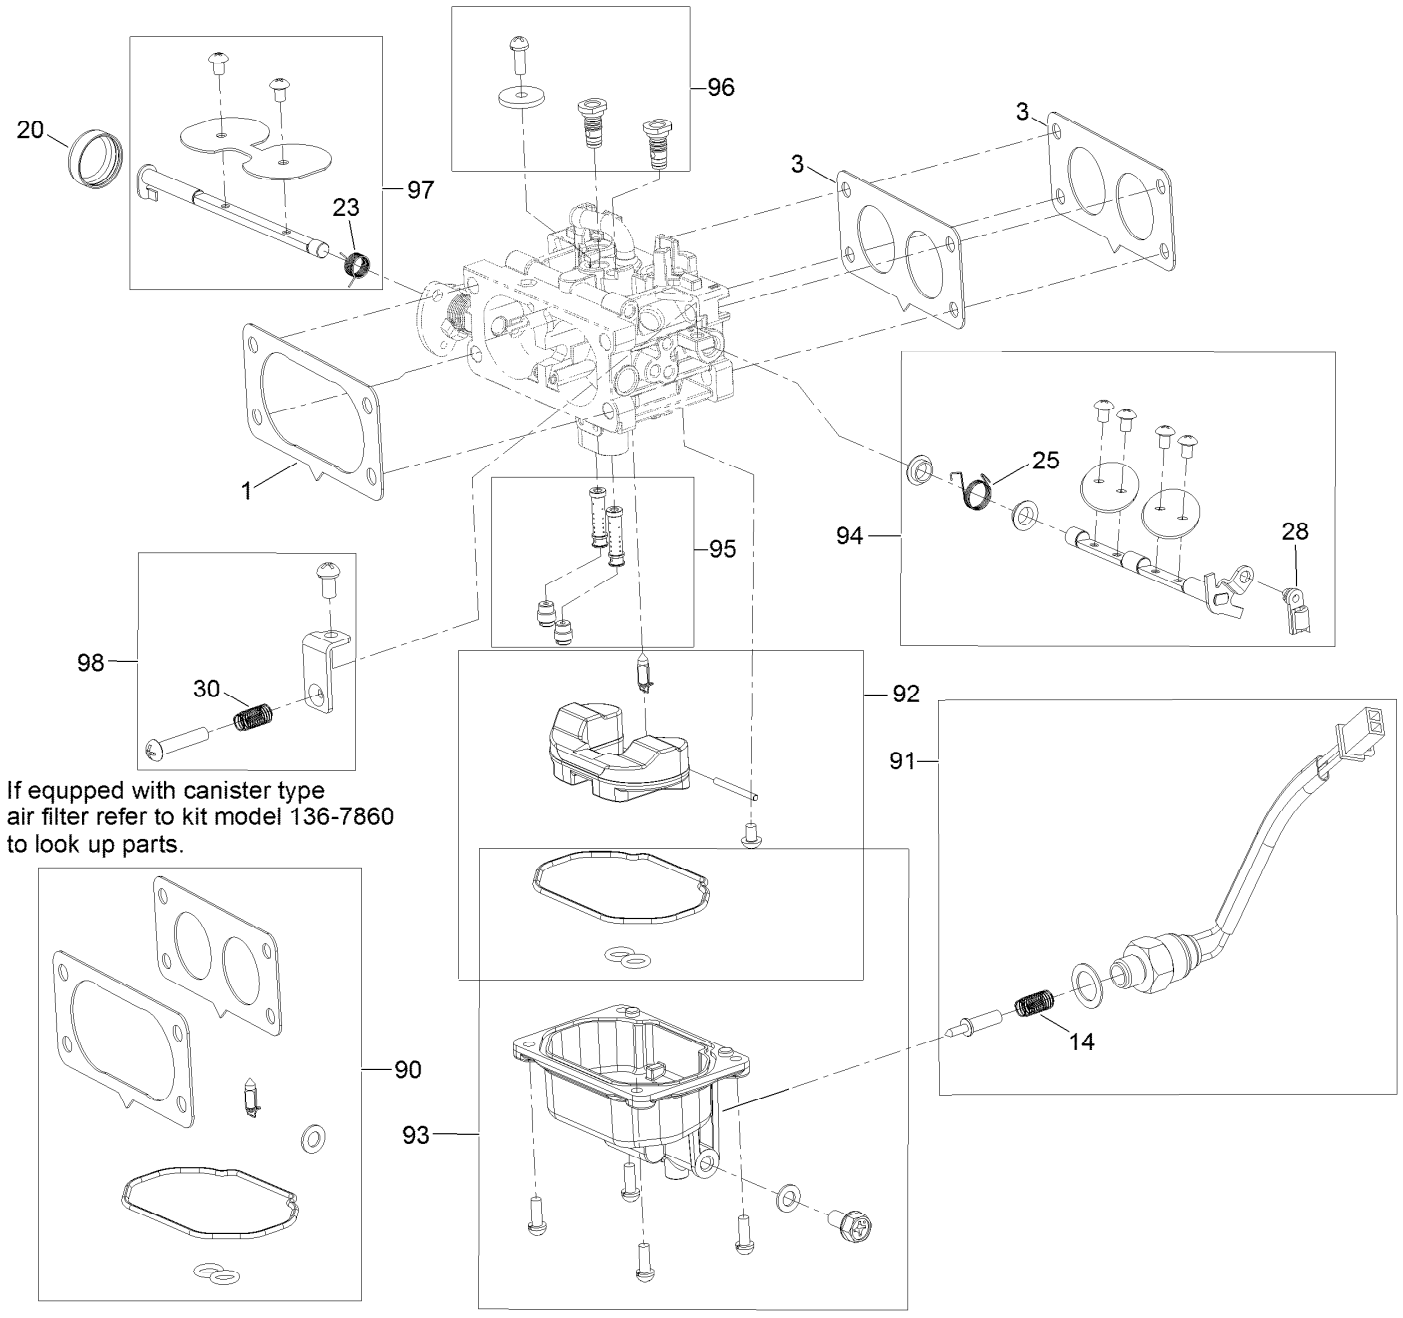



If equpped with canister type
air filter refer to kit model 136-7860
to look up parts.

# Carburetor Assembly No. 127-9289 with Non-Canister Style Air Filter (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 127-9249 | 1 | Carburetor |
| 1 | 127-9251 | 1 | Gasket-Carburetor |
| 3 | 127-9246 | 2 | Gasket-Carburetor |
| 14 | 127-9319 | 1 | Spring |
| 20 | 127-9325 | 1 | Cover-Shaft, Choke |
| 23 | 127-9328 | 1 | Spring |
| 25 | 127-9330 | 1 | Spring |
| 28 | 127-9333 | 1 | Clamp-Lock |
| 30 | 127-9335 | 1 | Spring |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 90 | 127-9290 | 1 | Carburetor Repair Kit |
| 91 | 127-9292 | 1 | Solenoid Kit |
| 92 | 127-9340 | 1 | Float Kit |
| 93 | 127-9341 | 1 | Bowl Kit |
| 94 | 127-9342 | 1 | Throttle Shaft Kit |
| 95 | 127-9343 | 1 | Nozzle And Jet Kit |
| 96 | 127-9344 | 1 | Air Jet Kit |
| 97 | 127-9345 | 1 | Choke Shaft Kit |
| 98 | 127-9347 | 1 | Idlestop Kit |


# Air Intake and Filtration Assembly with Non-Canister Style Air Filter

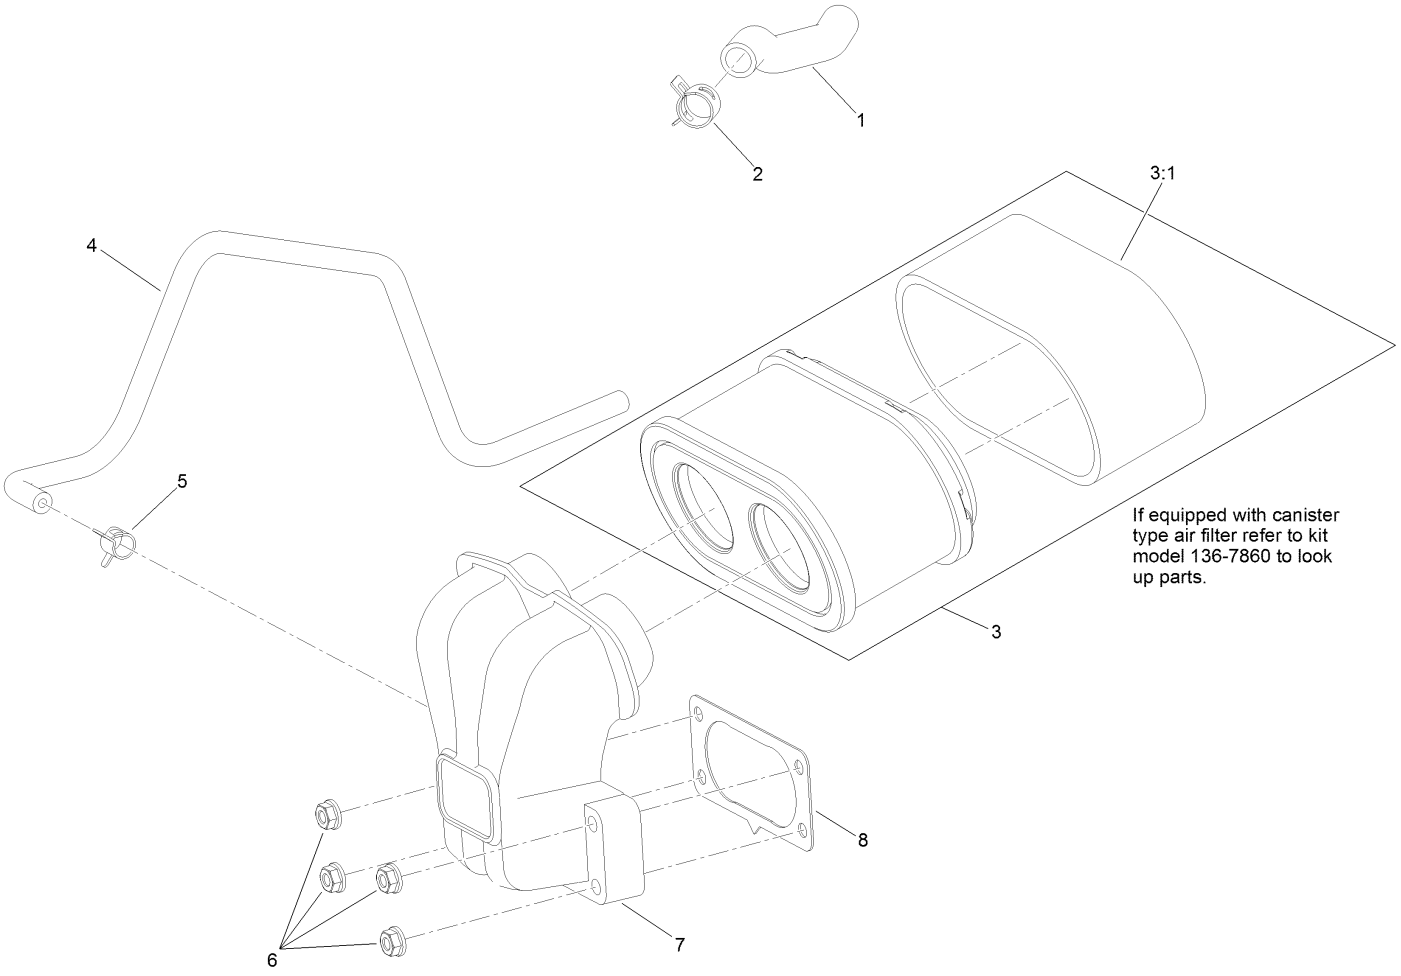

# Air Intake and Filtration Assembly with Non-Canister Style Air Filter (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 127-9235 | 1 | Tube-Breather |
| 2 | 127-9234 | 2 | Clamp-Hose |
| 3 | 127-9252 | 1 | Filter-Air, Complete |
| 3:1 | 127-9288 | 1 | Filter-Pre, Foam |
| 4 | 127-9253 | 1 | Hose-Fuel |
| 5 | 127-9187 | 1 | Clamp-Hose |
| 6 | 120-4236 | 4 | Nut-Flange |
| 7 | 127-9047 | 1 | Manifold-Filter, Air |
| 8 | 127-9251 | 1 | Gasket-Carburetor |


# Ignition and Electrical Assembly

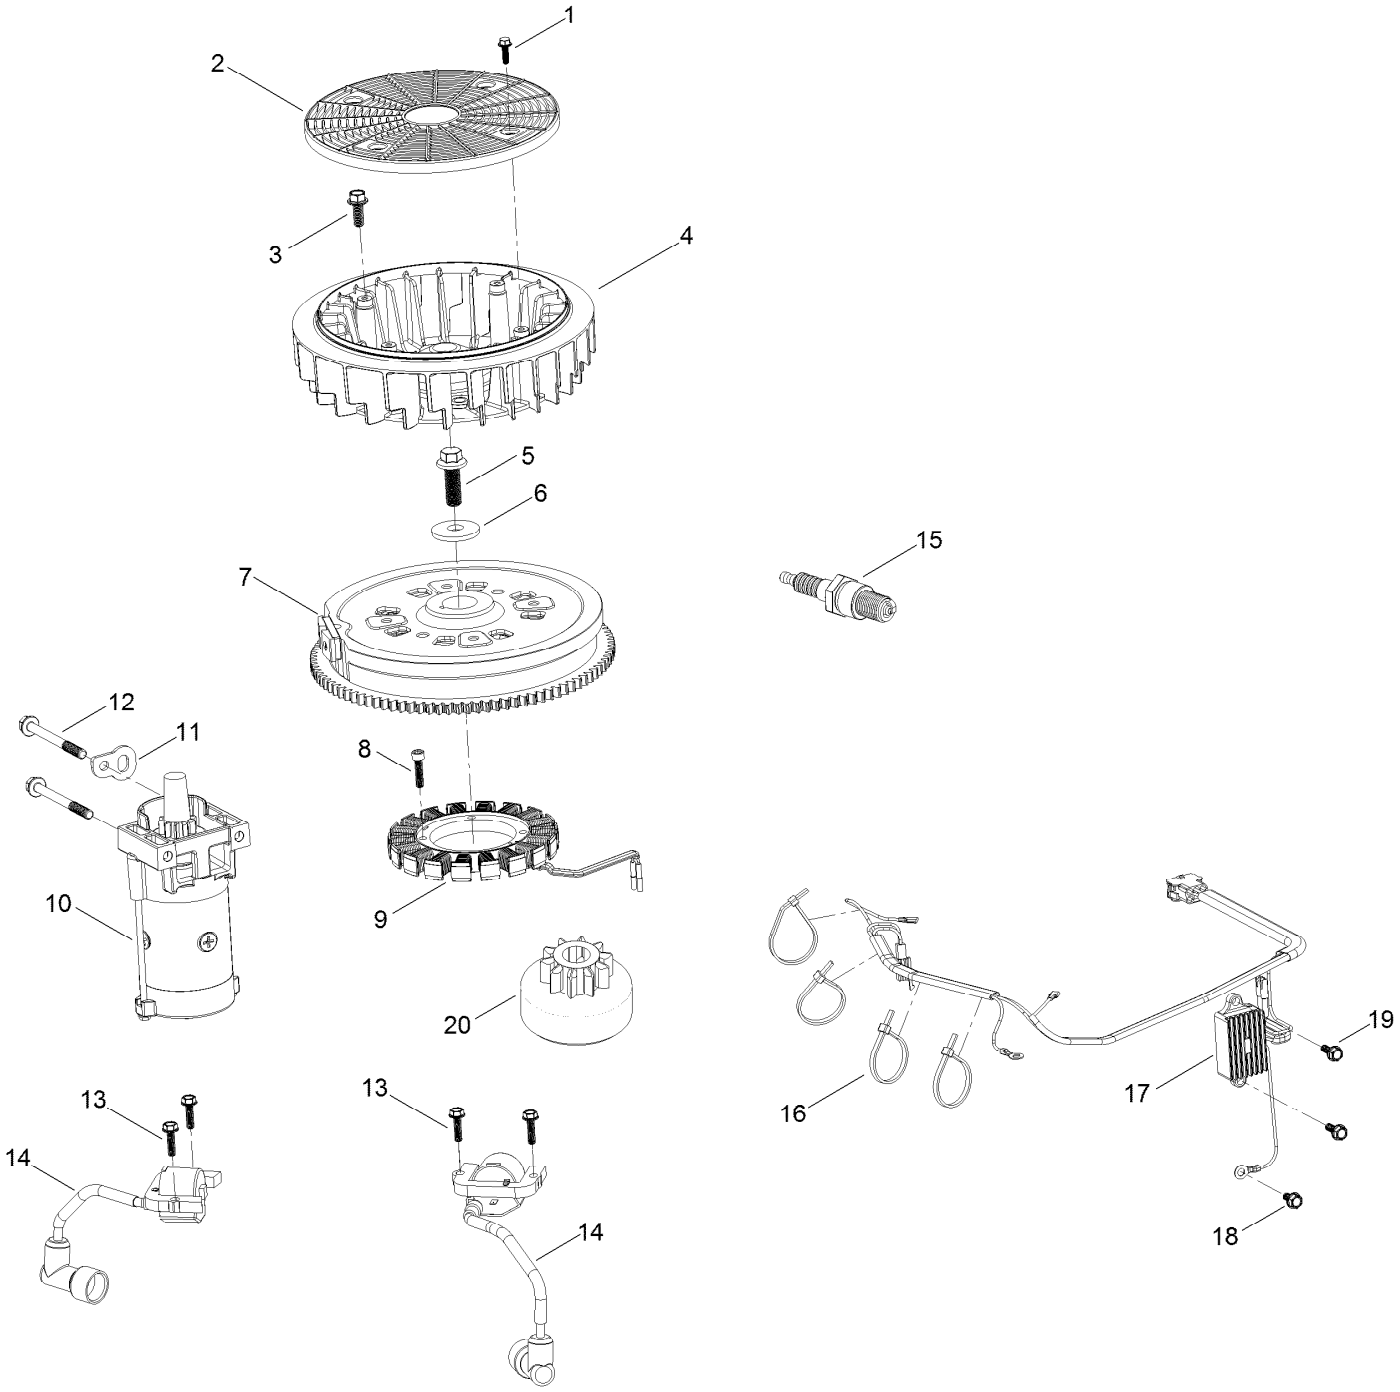


# Ignition and Electrical Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 127-9197 | 4 | Screw-HWH |
| 2 | 127-9198 | 1 | Screen-Rotating |
| 3 | 127-9199 | 4 | Screw-HWH |
| 4 | 127-9200 | 1 | Fan-Cooling |
| 5 | 127-9201 | 1 | Screw-HWH |
| 6 | 127-9202 | 1 | Washer-Flat |
| 7 | 127-9306 | 1 | Flywheel |
| 8 | 127-9210 | 4 | Screw-HSH |
| 9 | 127-9211 | 1 | Alternator |
| 10 | 133-1564 | 1 | Motor-Starter |
| 11 | 127-9208 | 1 | Bracket-Lift |
| 12 | 120-4231 | 2 | Screw-HHF |
| 13 | 121-0007 | 4 | Bolt-Flange |
| 14 | 127-9216 | 2 | Ignition Coil ASM |
| 15 | 81-3250 | 2 | Spark Plug |
| 16 | 127-9220 | 4 | Tie-Zip |
| 17 | 127-9219 | 1 | Regulator-Voltage W/Harness |
| 18 | 120-4216 | 1 | Screw-HHF |
| 19 | 120-4232 | 2 | Screw-HHF |
| 20 | 133-1562 | 1 | Pinion-Starter |

# Crankcase and Crankshaft Assembly

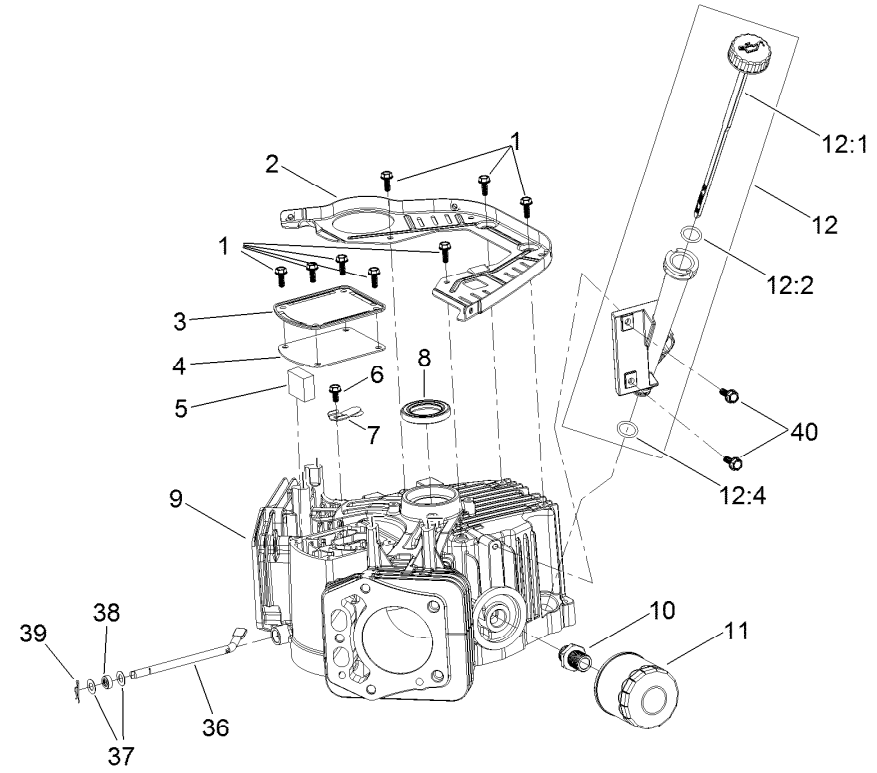

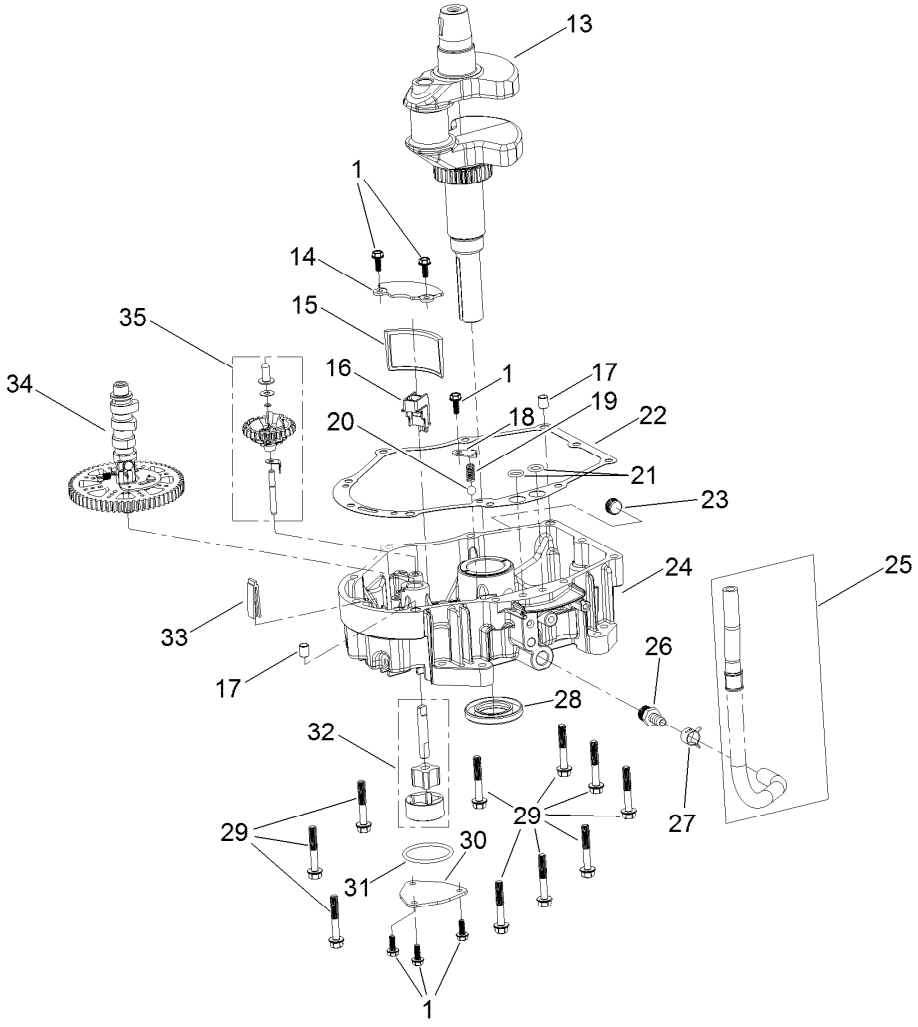
# Crankcase and Crankshaft Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 120-4232 | 14 | Screw-HHF |
| 2 | 127-9212 | 1 | Baffle |
| 3 | 127-9213 | 1 | Cover-Breather |
| 4 | 127-9214 | 1 | Gasket-Breather |
| 5 | 127-9215 | 1 | Filter-Breather |
| 6 | 120-4216 | 1 | Screw-HHF |
| 7 | 127-9217 | 1 | Valve-Breather |
| 8 | 120-4267 | 1 | Seal-Oil |
| 9 | 127-9223 | 1 | Crankcase |
| 10 | 127-9221 | 1 | Fitting-Threaded, Oil Filter |
| 11 | 120-4276 | 1 | Filter-Oil |
| 12 | 127-9218 | 1 | Oil Tube ASM |
| 12:1 | 127-9283 | 1 | Dipstick |
| 12:2 | 127-9284 | 1 | O-Ring |
| 12:4 | 127-9286 | 1 | O-Ring |
| 13 | 127-9255 | 1 | Crankshaft |
| 14 | 127-9261 | 1 | Cover-Screen, Oil |
| 15 | 127-9262 | 1 | Screen-Oil |
| 16 | 127-9263 | 1 | Retainer-Screen |
| 17 | 120-4274 | 2 | Pin-Dowel |
| 18 | 127-9264 | 1 | Plate-Retainer |
| 19 | 127-9265 | 1 | Spring |
| 20 | 127-9266 | 1 | Valve-Ball |
| 21 | 120-4262 | 2 | O-Ring |
| 22 | 127-9267 | 1 | Gasket-Cover, Crankcase |
| 23 | 120-4285 | 1 | Plug-Drain |
| 24 | 127-9268 | 1 | Cover-Crankcase |
| 25 | 127-9293 | 1 | Oil Drain Hose ASM |
| 26 | 127-9275 | 1 | Fitting-Hose |
| 27 | 127-9276 | 1 | Clamp-Hose |
| 28 | 127-9271 | 1 | Seal |
| 29 | 121-0473 | 10 | Screw-HHF |
| 30 | 127-9274 | 1 | Cover-Oil Pump |
| 31 | 127-9273 | 1 | O-Ring |
| 32 | 127-9272 | 1 | Oil Pump ASM |
| 33 | 120-4275 | 1 | Deflector-Oil, Rubber |
| 34 | 133-1568 | 1 | Camshaft |
| 35 | 133-1569 | 1 | Governor ASM |
| 36 | 127-9238 | 1 | Rod-Governor |
| 37 | 120-4258 | 2 | Washer-Plain |
| 38 | 120-4257 | 1 | Seal-Oil |
| 39 | 120-4256 | 1 | Pin-Hair |
| 40 | 120-4232 | 2 | Screw-HHF |


# Governor Control Assembly

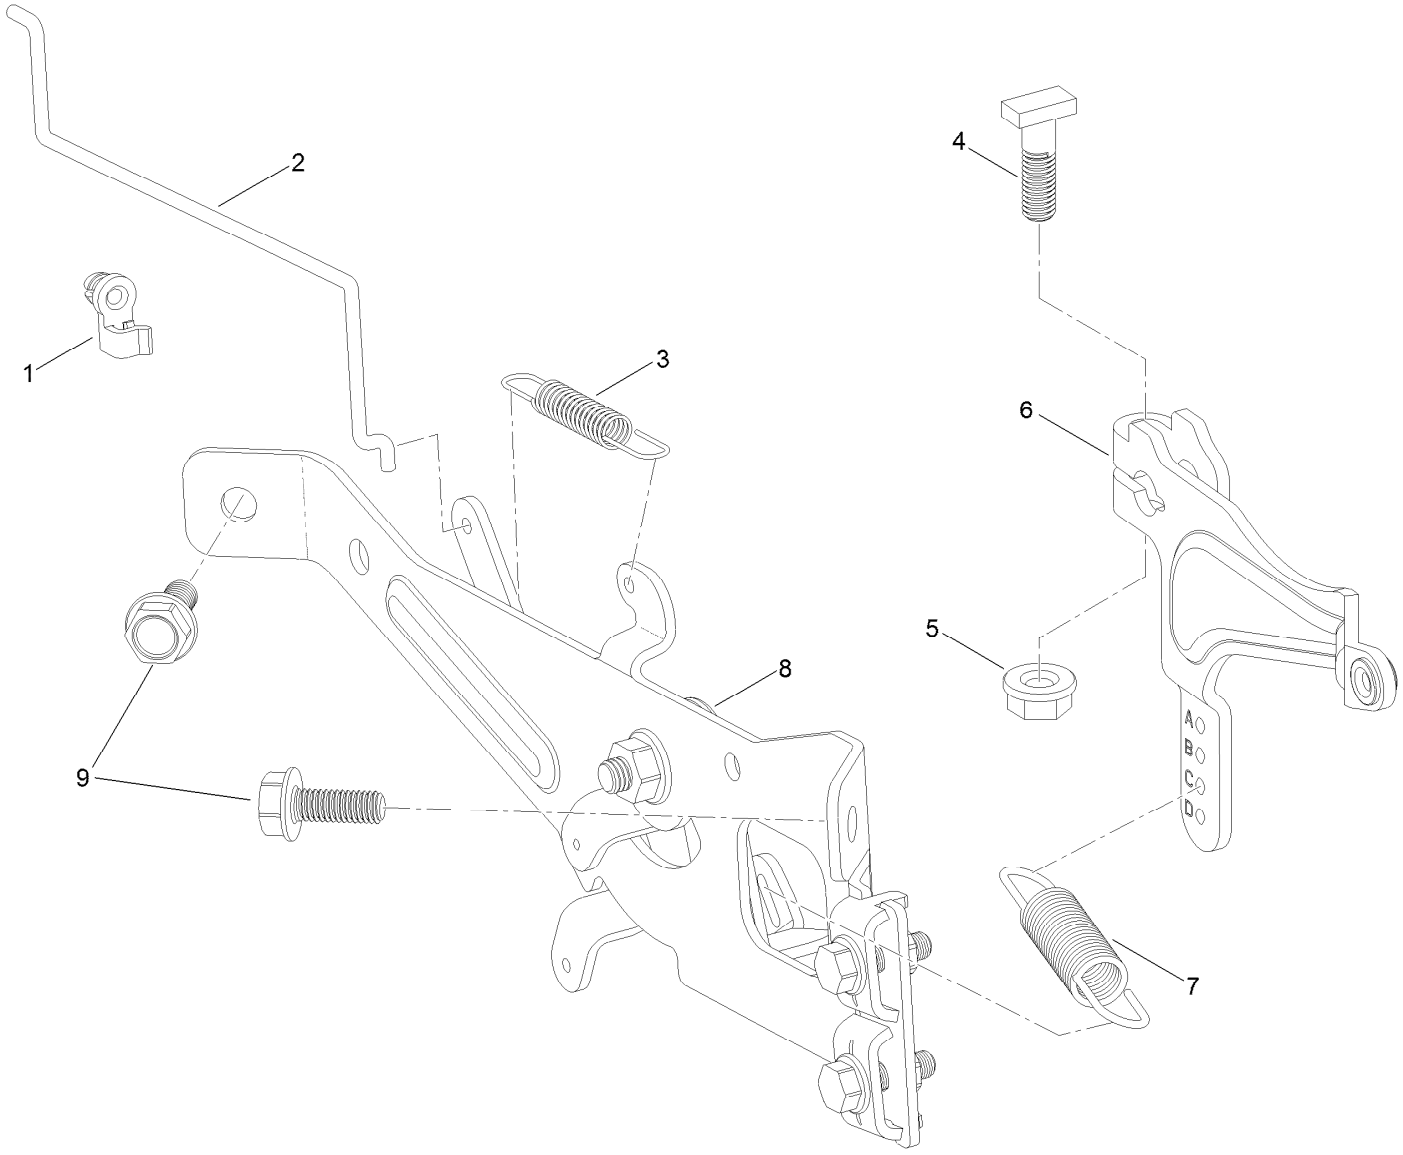

# Governor Control Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 127-9250 | 1 | Clip-Linkage |
| 2 | 127-9242 | 1 | Linkage-Choke |
| 3 | 127-9241 | 1 | Spring-Governor |
| 4 | 120-4238 | 1 | Bolt-Arm, Governor |
| 5 | 120-4236 | 1 | Nut-Flange |
| 6 | 127-9239 | 1 | Arm-Governor |
| 7 | 127-9240 | 1 | Spring-Governor |
| 8 | 133-1570 | 1 | Control Plate ASM |
| 9 | 120-4232 | 2 | Screw-HHF |


# Piston and Cylinder Head Assembly

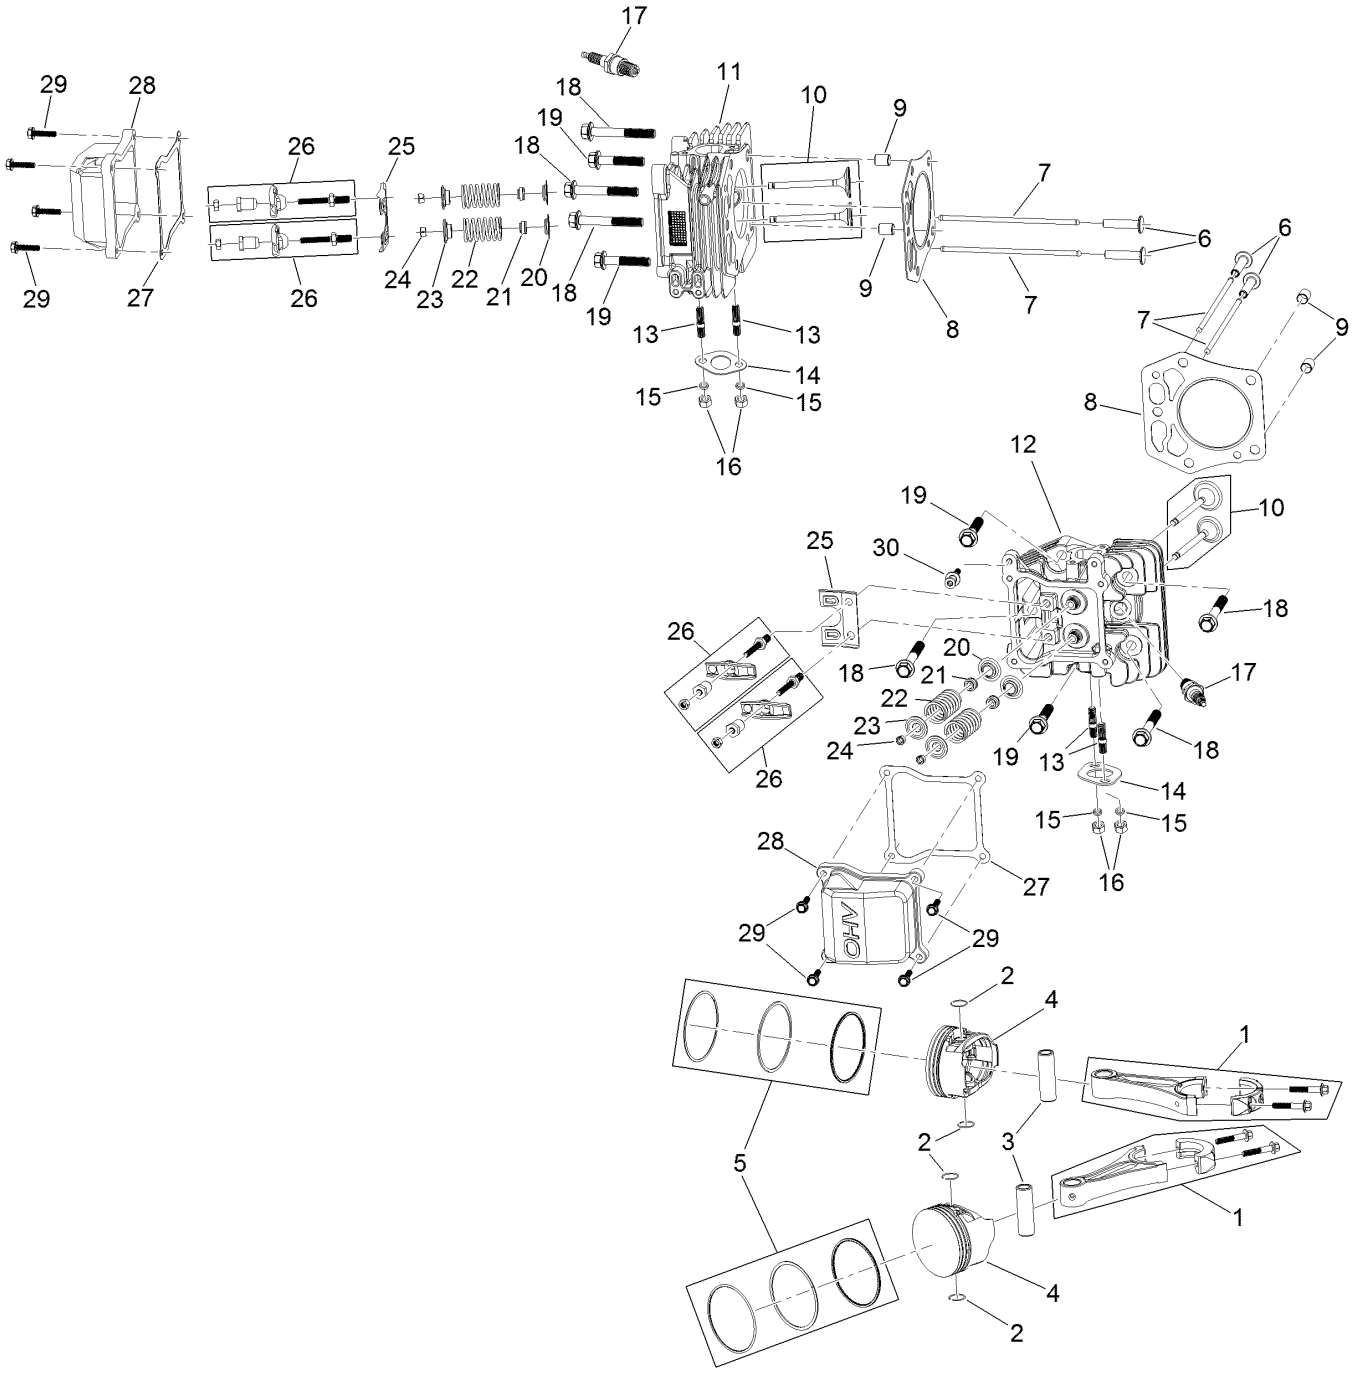

# Piston and Cylinder Head Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 127-9256 | 2 | Connecting Rod ASM |
| 2 | 127-9258 | 4 | Clip-Pin, Piston |
| 3 | 127-9257 | 2 | Pin-Piston |
| 4 | 127-9259 | 2 | Piston |
| 5 | 127-9260 | 2 | Piston Ring Set |
| 6 | 127-9224 | 4 | Lifter-Valve |
| 7 | 127-9225 | 4 | Rod-Push |
| 8 | 127-9226 | 2 | Gasket-Head, Cylinder |
| 9 | 127-9227 | 4 | Pin-Dowel |
| 10 | 127-9228 | 2 | Valve Set |
| 11 | 127-9229 | 1 | Head-Cylinder |
| 12 | 127-9254 | 1 | Head-Cylinder |
| 13 | 127-9236 | 4 | Stud |
| 14 | 120-4317 | 2 | Gasket-Exhaust |
| 15 | 127-9279 | 4 | Washer-Lock, Split |
| 16 | 121-0199 | 4 | Nut-HH |
| 17 | 81-3250 | 2 | Spark Plug |
| 18 | 127-9231 | 6 | Screw-HWH |
| 19 | 127-9232 | 4 | Screw-HWH |
| 20 | 120-4303 | 4 | Seat-Spring, Valve |
| 21 | 120-4304 | 4 | Seal-Stem, Valve |
| 22 | 120-4305 | 4 | Spring-Valve |
| 23 | 120-4306 | 4 | Retainer-Spring, Valve |
| 24 | 120-4307 | 4 | Keeper-Valve |
| 25 | 127-9233 | 2 | Plate-Guide, Push Rod |
| 26 | 127-9294 | 4 | Rocker Arm ASM |
| 27 | 127-9295 | 2 | Gasket-Valve Cover |
| 28 | 127-9050 | 2 | Cover-Valve |
| 29 | 120-4225 | 8 | Screw-HHF |
| 30 | 120-4214 | 1 | Screw-Shoulder, HH |


# Blower Housing Assembly

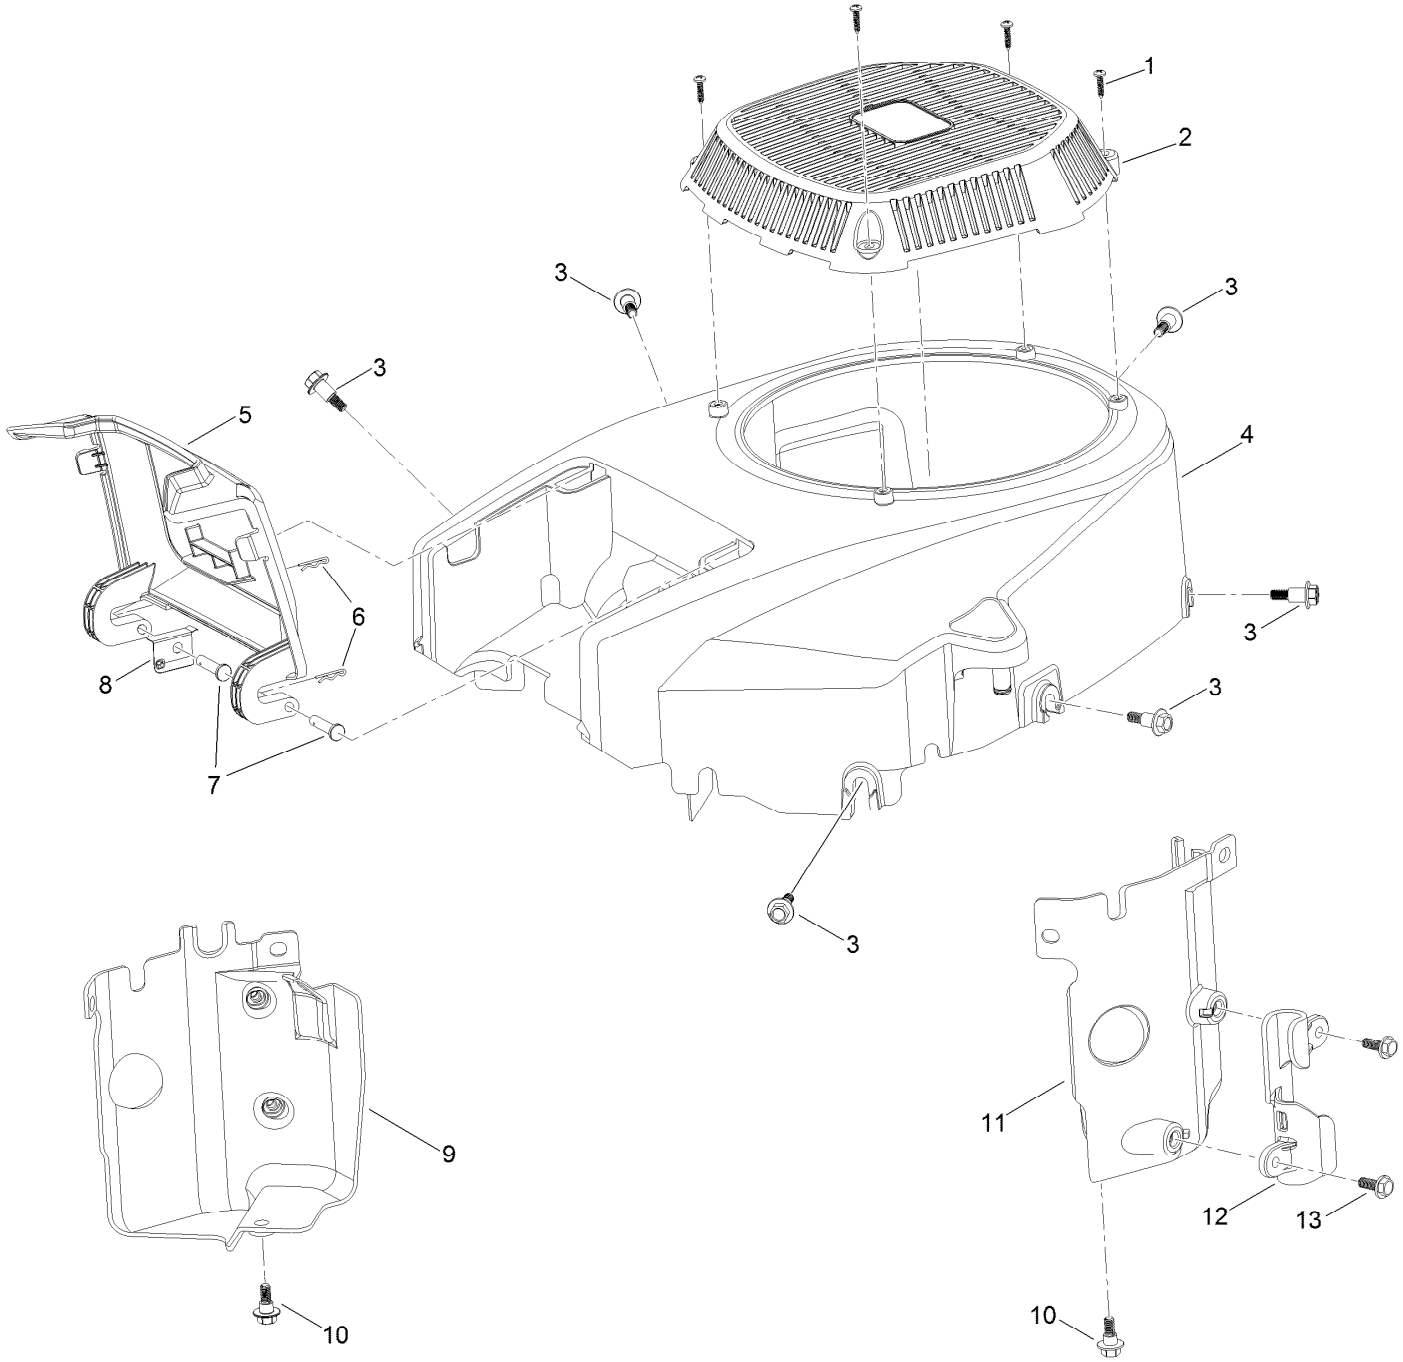

# Blower Housing Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 133-1571 | 4 | Screw-PPH, Plastic |
| 2 | 127-9045 | 1 | Cover-Fan |
| 3 | 127-9196 | 6 | Screw-Shoulder, HWH |
| 4 | 133-1572 | 1 | Shroud-Engine |
| 5 | 127-9046 | 1 | Door-Filter, Air |
| 6 | 127-9280 | 2 | Pin-Hair |
| 7 | 127-9282 | 2 | Pin |
| 8 | 127-9281 | 1 | Plate-Spring |
| 9 | 127-9049 | 1 | Baffle-Air, Left |
| 10 | 120-4210 | 2 | Screw-Shoulder, HHF |
| 11 | 127-9048 | 1 | Baffle-Air, Right |
| 12 | 127-9287 | 1 | Cleat-Hose |
| 13 | 120-4232 | 2 | Screw-HHF |


# Gasket and Seal Kit Assembly

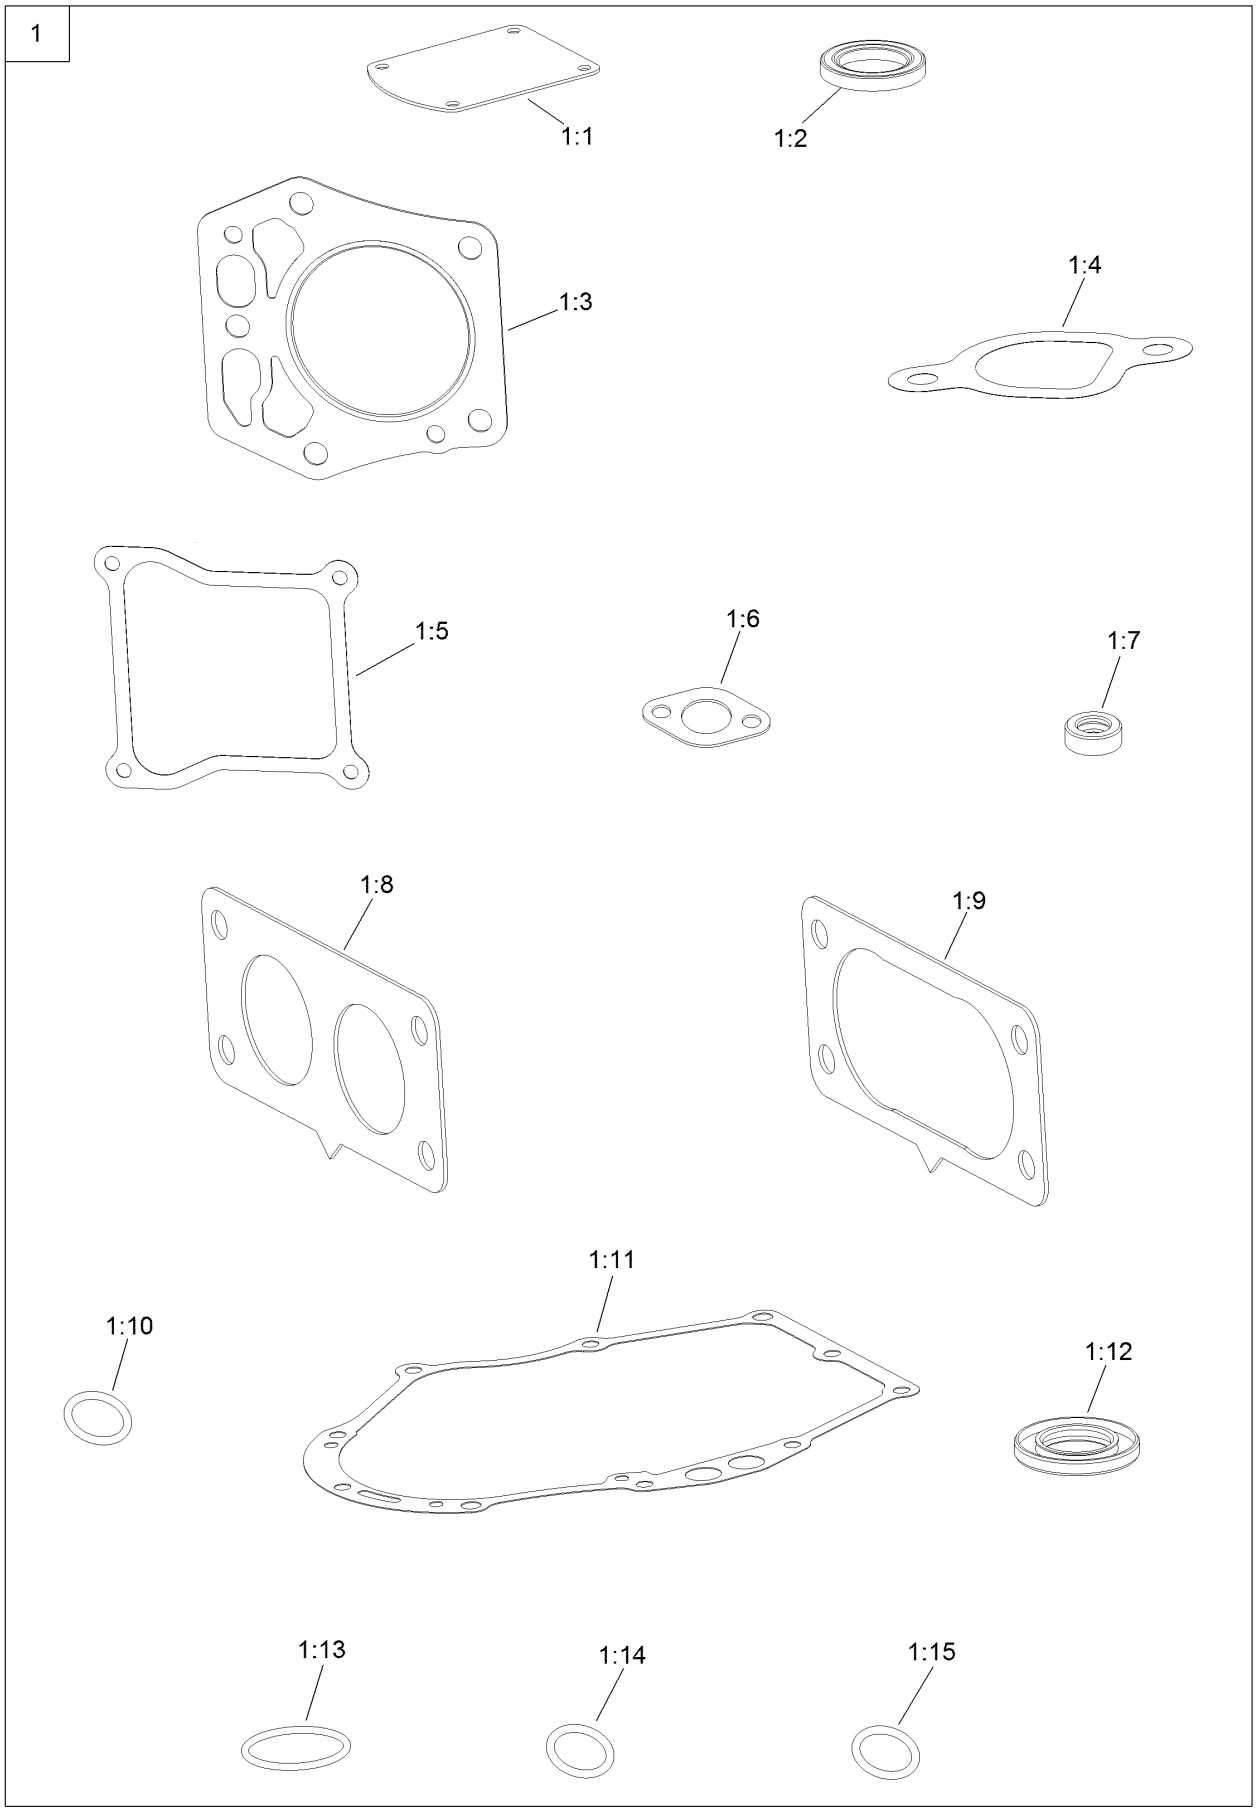

# Gasket and Seal Kit Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 127-9296 | 1 | Gasket And Seal Kit |
| 1:1 | 127-9214 | 1 | Gasket-Breather |
| 1:2 | 120-4267 | 1 | Seal-Oil |
| 1:3 | 127-9226 | 2 | Gasket-Head, Cylinder |
| 1:4 | 127-9230 | 2 | Gasket-Intake |
| 1:5 | 127-9295 | 2 | Gasket-Valve Cover |
| 1:6 | 120-4317 | 2 | Gasket-Exhaust |
| 1:7 | 120-4257 | 1 | Seal-Oil |
| 1:8 | 127-9246 | 2 | Gasket-Carburetor |
| 1:9 | 127-9251 | 1 | Gasket-Carburetor |
| 1:10 | 120-4262 | 2 | O-Ring |
| 1:11 | 127-9267 | 1 | Gasket-Cover, Crankcase |
| 1:12 | 127-9271 | 1 | Seal |
| 1:13 | 127-9273 | 1 | O-Ring |
| 1:14 | 127-9284 | 1 | O-Ring |
| 1:15 | 127-9286 | 1 | O-Ring |


# Body Styling and Fuel Tank Assembly

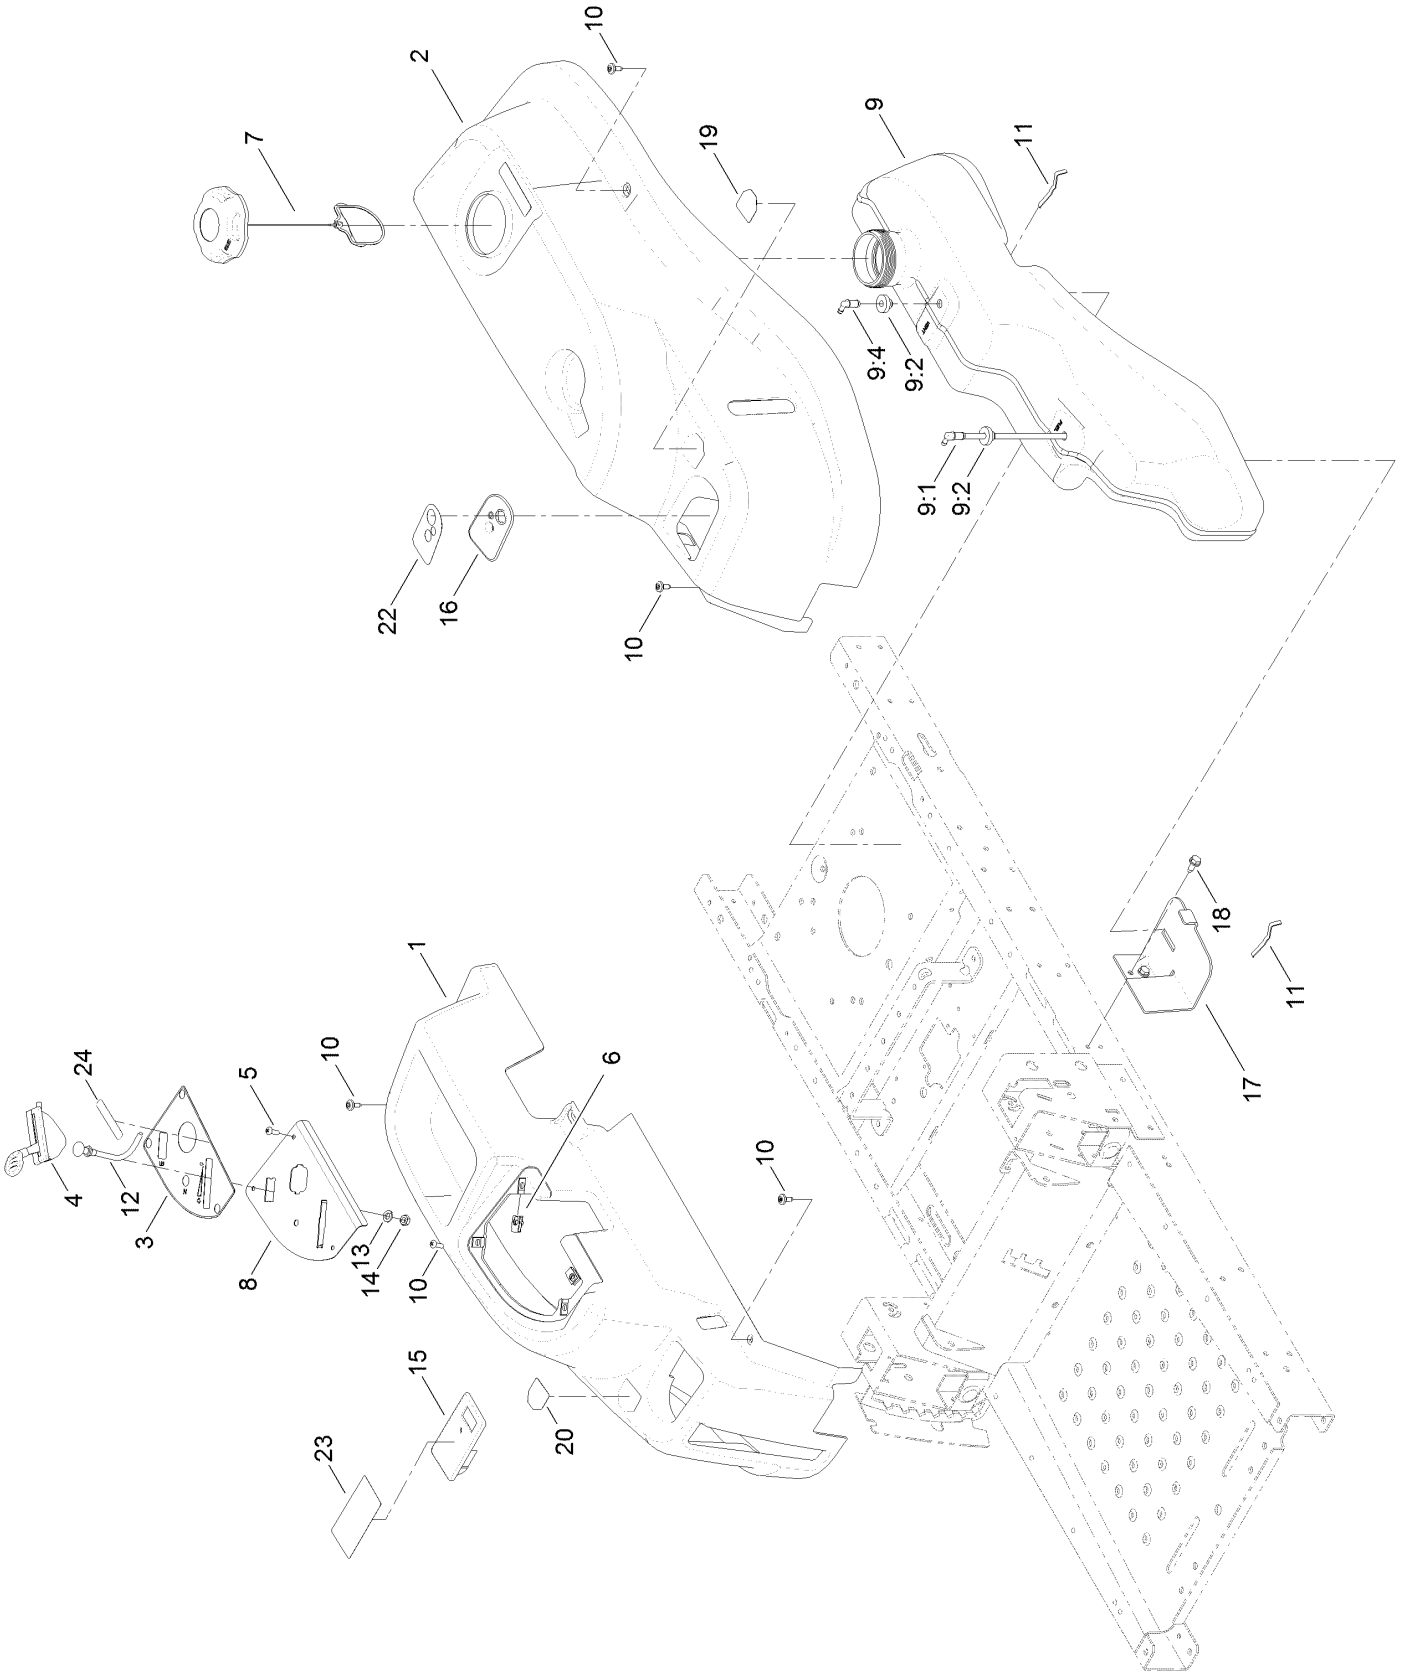

# Body Styling and Fuel Tank Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 119-3338 | 1 | Pod-RH |
| 2 | 119-3337 | 1 | Pod-LH |
| 3 | 121-0773 | 1 | Decal-Panel, Control |
| 4 | 121-0769 | 1 | Cable-Throttle |
| 5 | 3258-166 | 3 | Screw-PRH |
| 6 | 107069 | 3 | Clip |
| 7 | 120-5461 | 1 | Cap-Fuel, Ratcheting |
| 8 | 119-3377-03 | 1 | Plate-Control |
| 9 | 119-3324 | 1 | Fuel Tank ASM |
| 9:1 | 121-0793 | 1 | Connector-Elbow, 90 DEG |
| 9:2 | 46-6560 | 2 | Bushing |
| 9:4 | 117-7400 | 1 | Fitting-Plastic |
| 10 | 120-7950 | 8 | Screw-Shoulder |
| 11 | 609830 | 2 | Spring |
| 12 | 112-9753 | 1 | Cable-Choke |
| 13 | 3253-21 | 1 | Washer-Lock |
| 14 | 3220-3 | 1 | Nut-HJ |
| 15 | 130-7039 | 1 | Cover-RH |
| 16 | 130-7040 | 1 | Cover-LH |
| 17 | 119-3395-03 | 1 | Support-Tank, Front |
| 18 | 32144-70 | 2 | Screw-HWH |
| 19 | 131-3621 | 1 | Decal-Nmir |
| 20 | 131-3620 | 1 | Decal-Control, Pedal |
| 22 | 131-3664 | 1 | Decal-Keychoice |
| 23 | 131-3954 | 1 | Decal-Brake, Parking |
| 24 | 132-0904 | 1 | Decal-Shutdown |

# Fuel Delivery Assembly

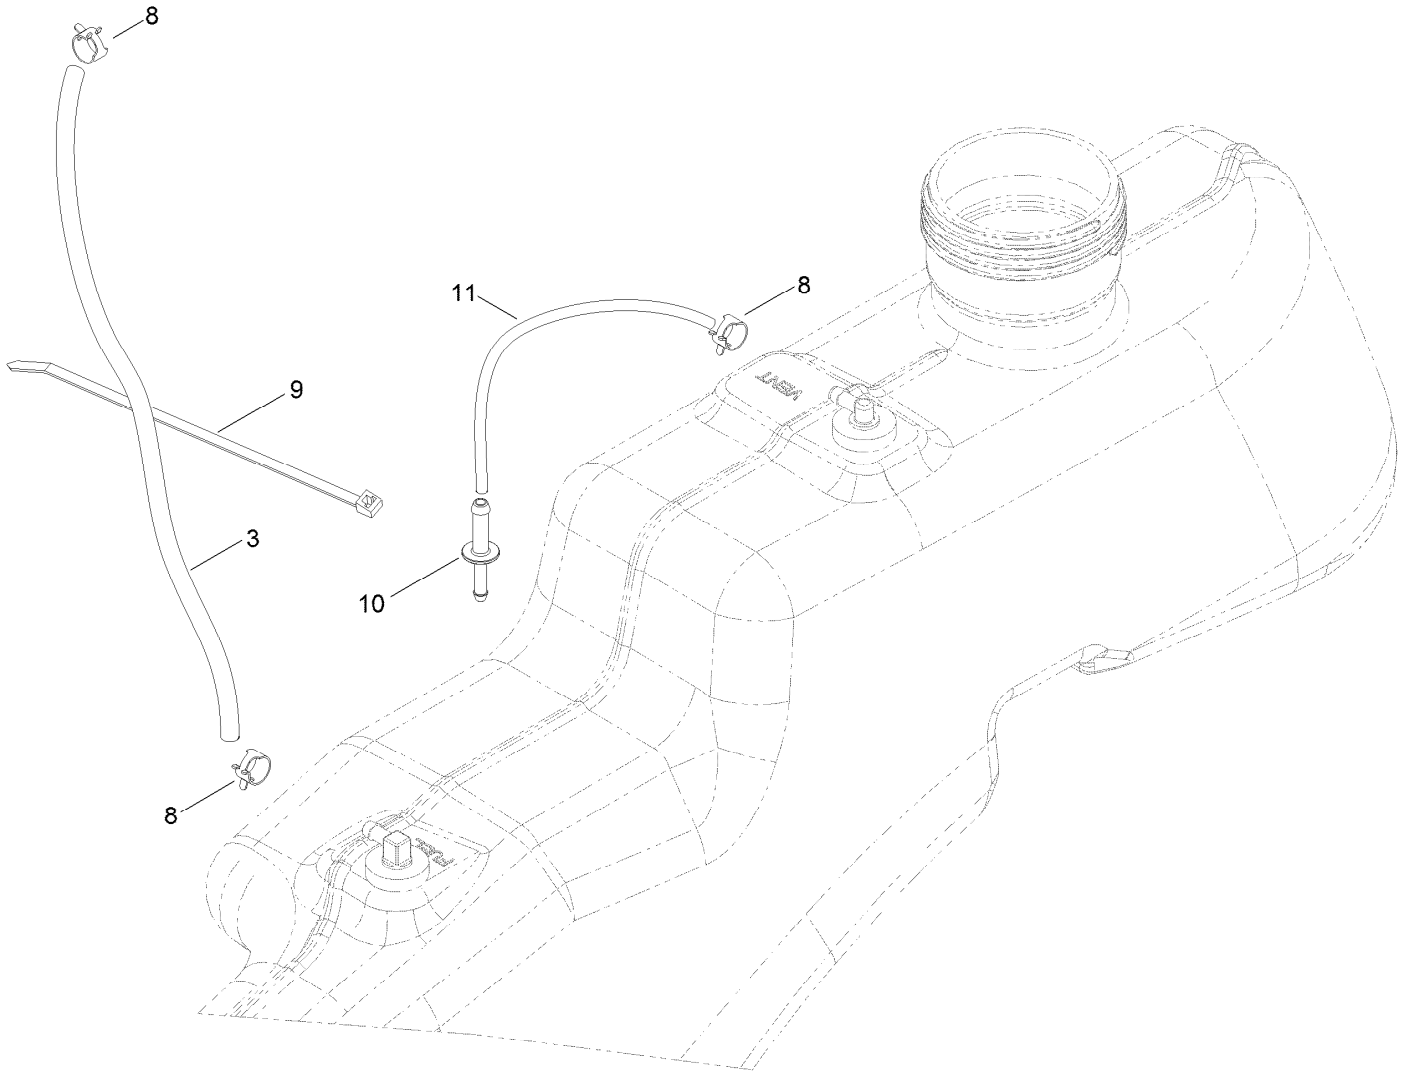

# Fuel Delivery Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 3 | 109-0281 | 1 | Hose-Fuel |
| 8 | 2412-98 | 3 | Clamp-Hose |
| 9 | 614249 | 1 | Tie-Cable |
| 10 | 117-5399 | 1 | Adaptor-Orifice |
| 11 | 110-1876 | 1 | Hose-Fuel |


# Wire Harness Assembly



# Wire Harness Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 131-3639 | 1 | Key-Toro |
| 2 | 132-9361 | 1 | Harness-Wire |
| 2:1 | 109103 | 1 | Fuse-Blade, 30 Amp |
| 2:2 | 109102 | 1 | Fuse-Blade, 25 Amp |
| 3 | 130-6874 | 1 | Switch-Rocker, (On)-Off-(On) |
| 4 | 119-3068 | 1 | Switch-Momentary, N.O. |
| 5 | 131-4136 | 1 | Light-Indicator |


# Battery and Electrical Assembly

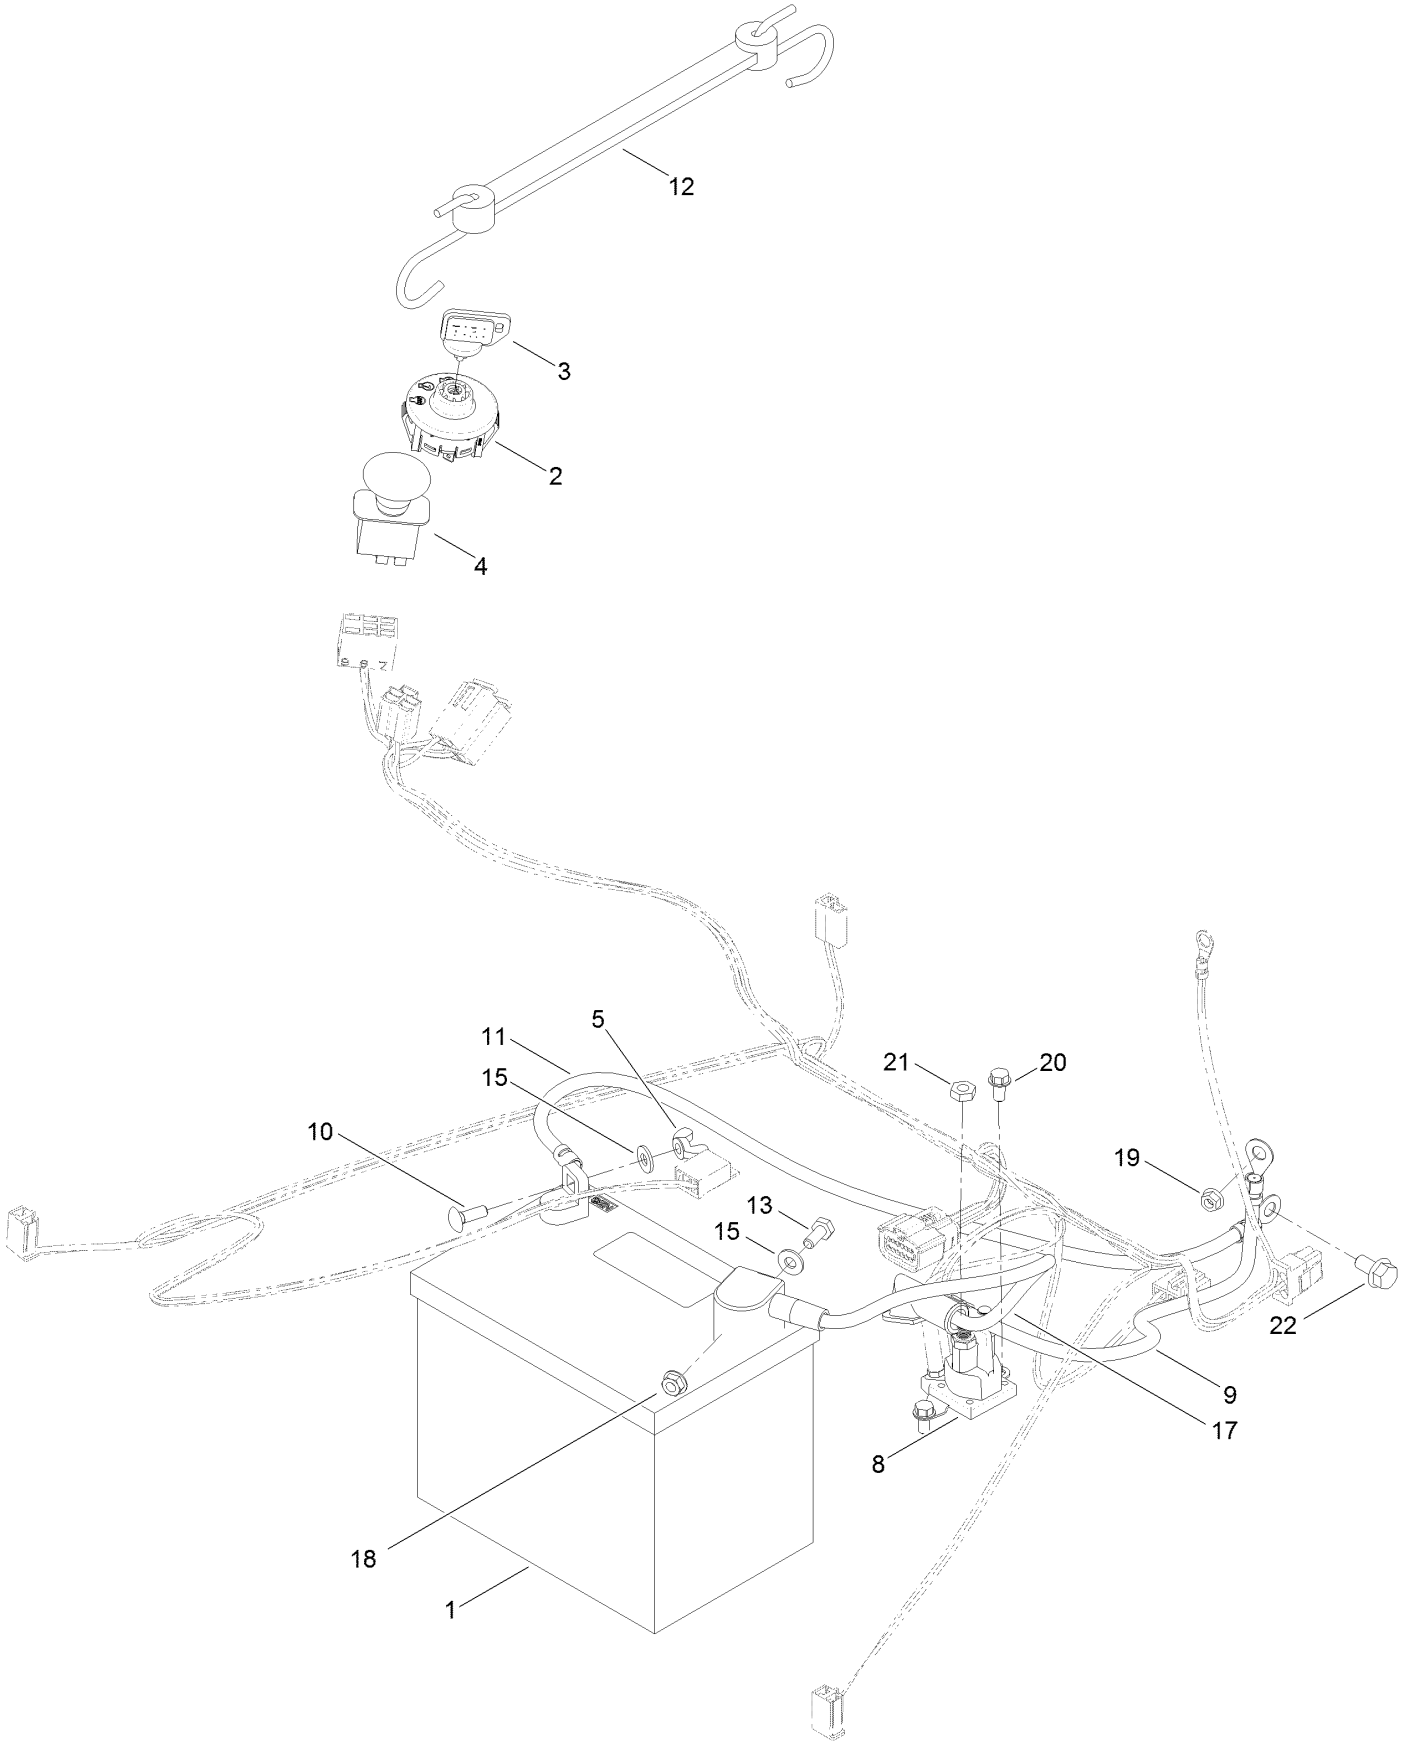

# Battery and Electrical Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 105-1692 | 1 | Battery |
| 2 | 117-2221 | 1 | Switch-Ignition |
| 3 | 63-8360 | 1 | Key-Ignition |
| 4 | 114-0279 | 1 | Switch-PTO, On-On-(On) |
| 5 | 32103-22 | 1 | Nut-Wing |
| 8 | 117-1197 | 1 | Solenoid |
| 9 | 121-0711 | 1 | Cable-Battery, Positive |
| 10 | 3229-1 | 1 | Bolt-CARR |
| 11 | 119-8899 | 1 | Cable-Battery, Black |
| 12 | 104-2466 | 1 | Holddown-Battery |
| 13 | 321-3 | 1 | Screw-HH |
| 15 | 3256-22 | 2 | Washer-Flat |
| 17 | 119-8897 | 1 | Cable-Battery, Red |
| 18 | 32128-33 | 1 | Nut-HF |
| 19 | 33003-00 | 1 | Nut-HF |
| 20 | 32144-4 | 2 | Screw-HWH |
| 21 | 3220-2 | 2 | Nut-Jam |
| 22 | 3234-14 | 1 | Screw-HHF |


# 54 Inch Deck Assembly

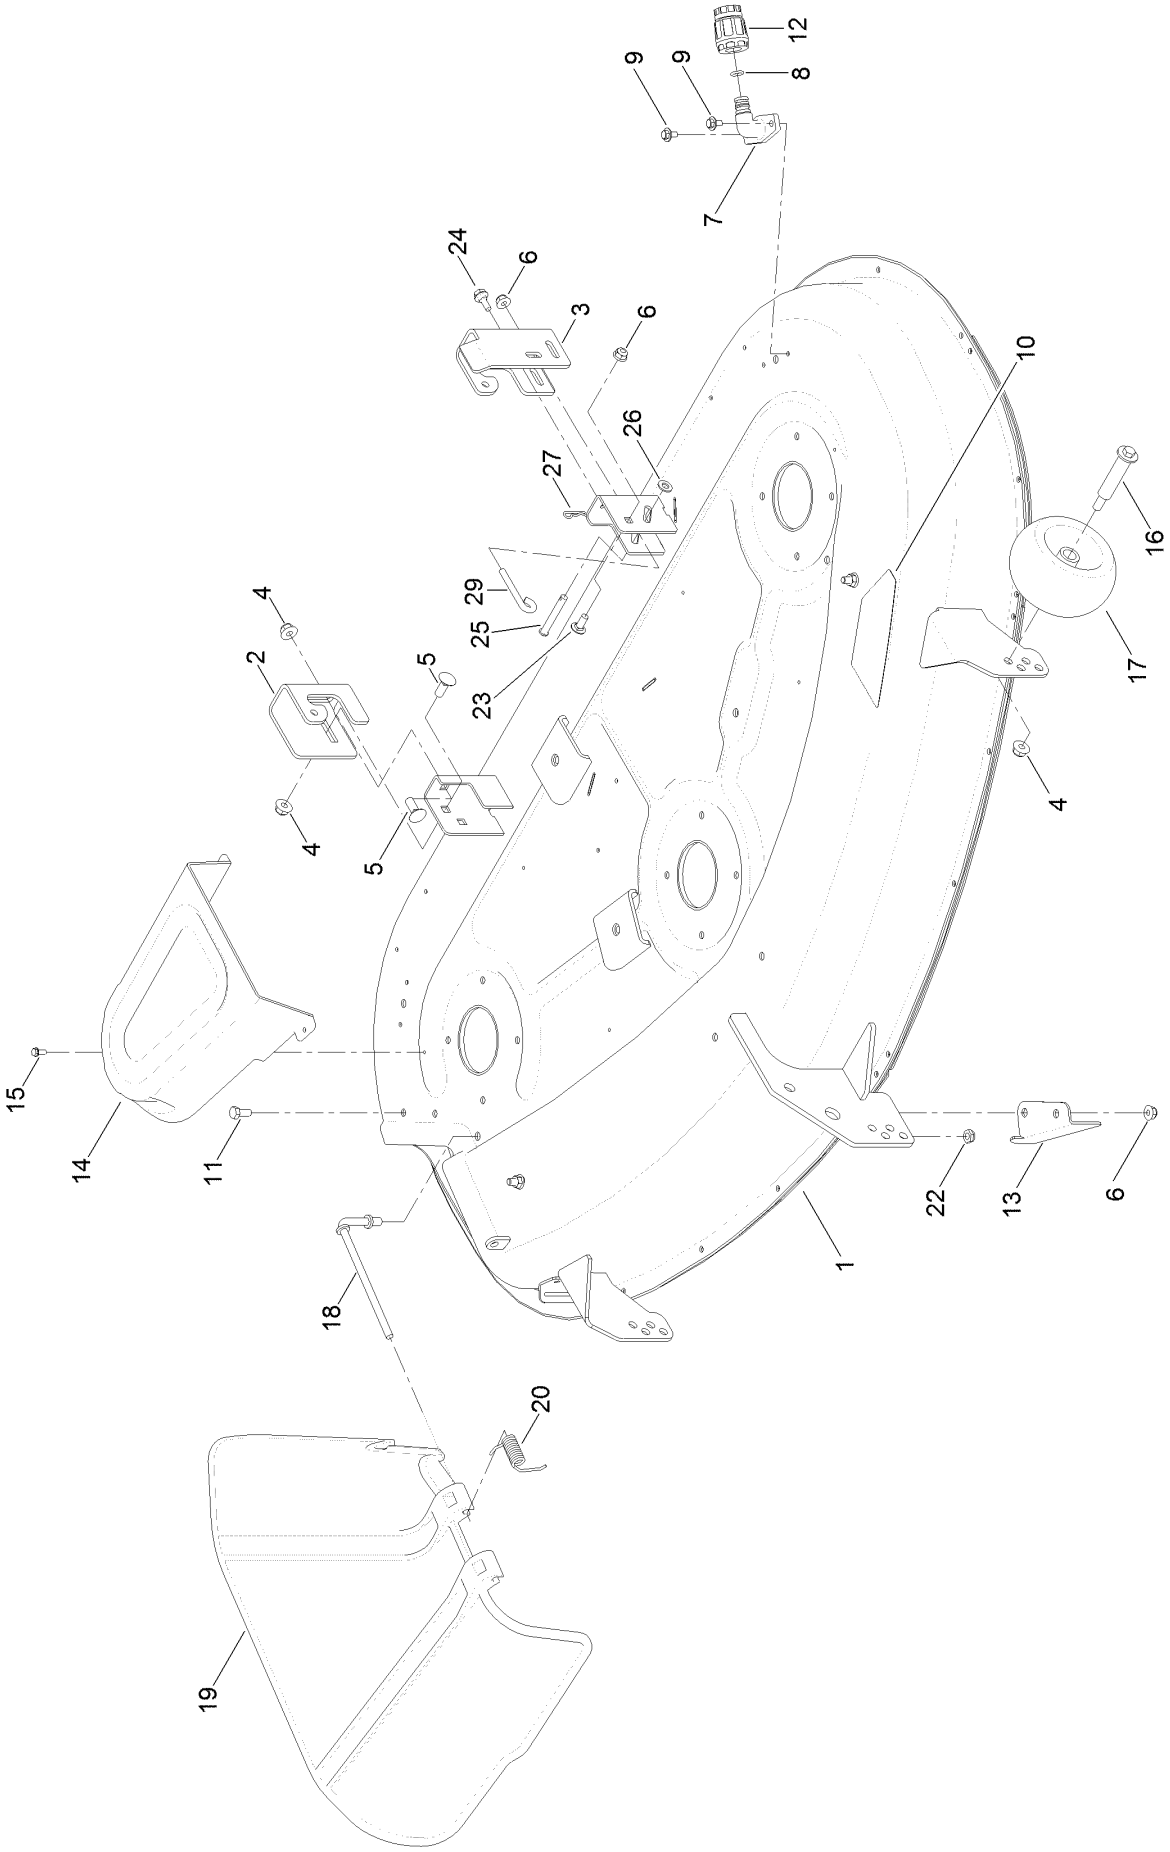

# 54 Inch Deck Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 130-7004 | 1 | 54 Inch Deck ASM |
| 2 | 131-4138 | 1 | Bracket-Hanger, RH |
| 3 | 131-3935 | 1 | Bracket-Hanger, LH |
| 4 | 104-8301 | 5 | Nut-HF, NI |
| 5 | 3231-2 | 2 | Bolt-CARR |
| 6 | 104-8300 | 4 | Nut-HF, NI |
| 7 | 95-2747 | 2 | Fitting-Washout |
| 8 | 46-6290 | 2 | O-Ring |
| 9 | 46-8560 | 4 | Screw-HHFTF |
| 10 | 131-0961 | 1 | Decal-Deck |
| 11 | 322-3 | 2 | Screw-HH |
| 12 | 95-3270 | 1 | Connector-Hose |
| 13 | 112-3983-03 | 1 | Baffle-Cutoff |
| 14 | 108-7890 | 2 | Cover-Belt |
| 15 | 32144-1 | 6 | Screw-Taptite |
| 16 | 112-3977 | 3 | Bolt-Shoulder |
| 17 | 1-603299 | 3 | Roller-Scalp, Anti |
| 18 | 112-3950 | 1 | Rod-Pivot |
| 19 | 108-7895 | 1 | Deflector |
| 20 | 110-6694 | 1 | Spring-Torsion |
| 22 | 3296-59 | 1 | Nut-Lock, NI |
| 23 | 3230-23 | 1 | Screw-CARR |
| 24 | 120-7024 | 1 | Screw-Shoulder, HHF |
| 25 | 110-0618 | 1 | Pin-Clevis |
| 26 | 3256-23 | 1 | Washer-Plain |
| 27 | 1-806003 | 1 | Pin-Cotter |
| 29 | 131-0955 | 1 | Rod-Level, Deck |


# 54 Inch Deck Decal Assembly No. 130-7004

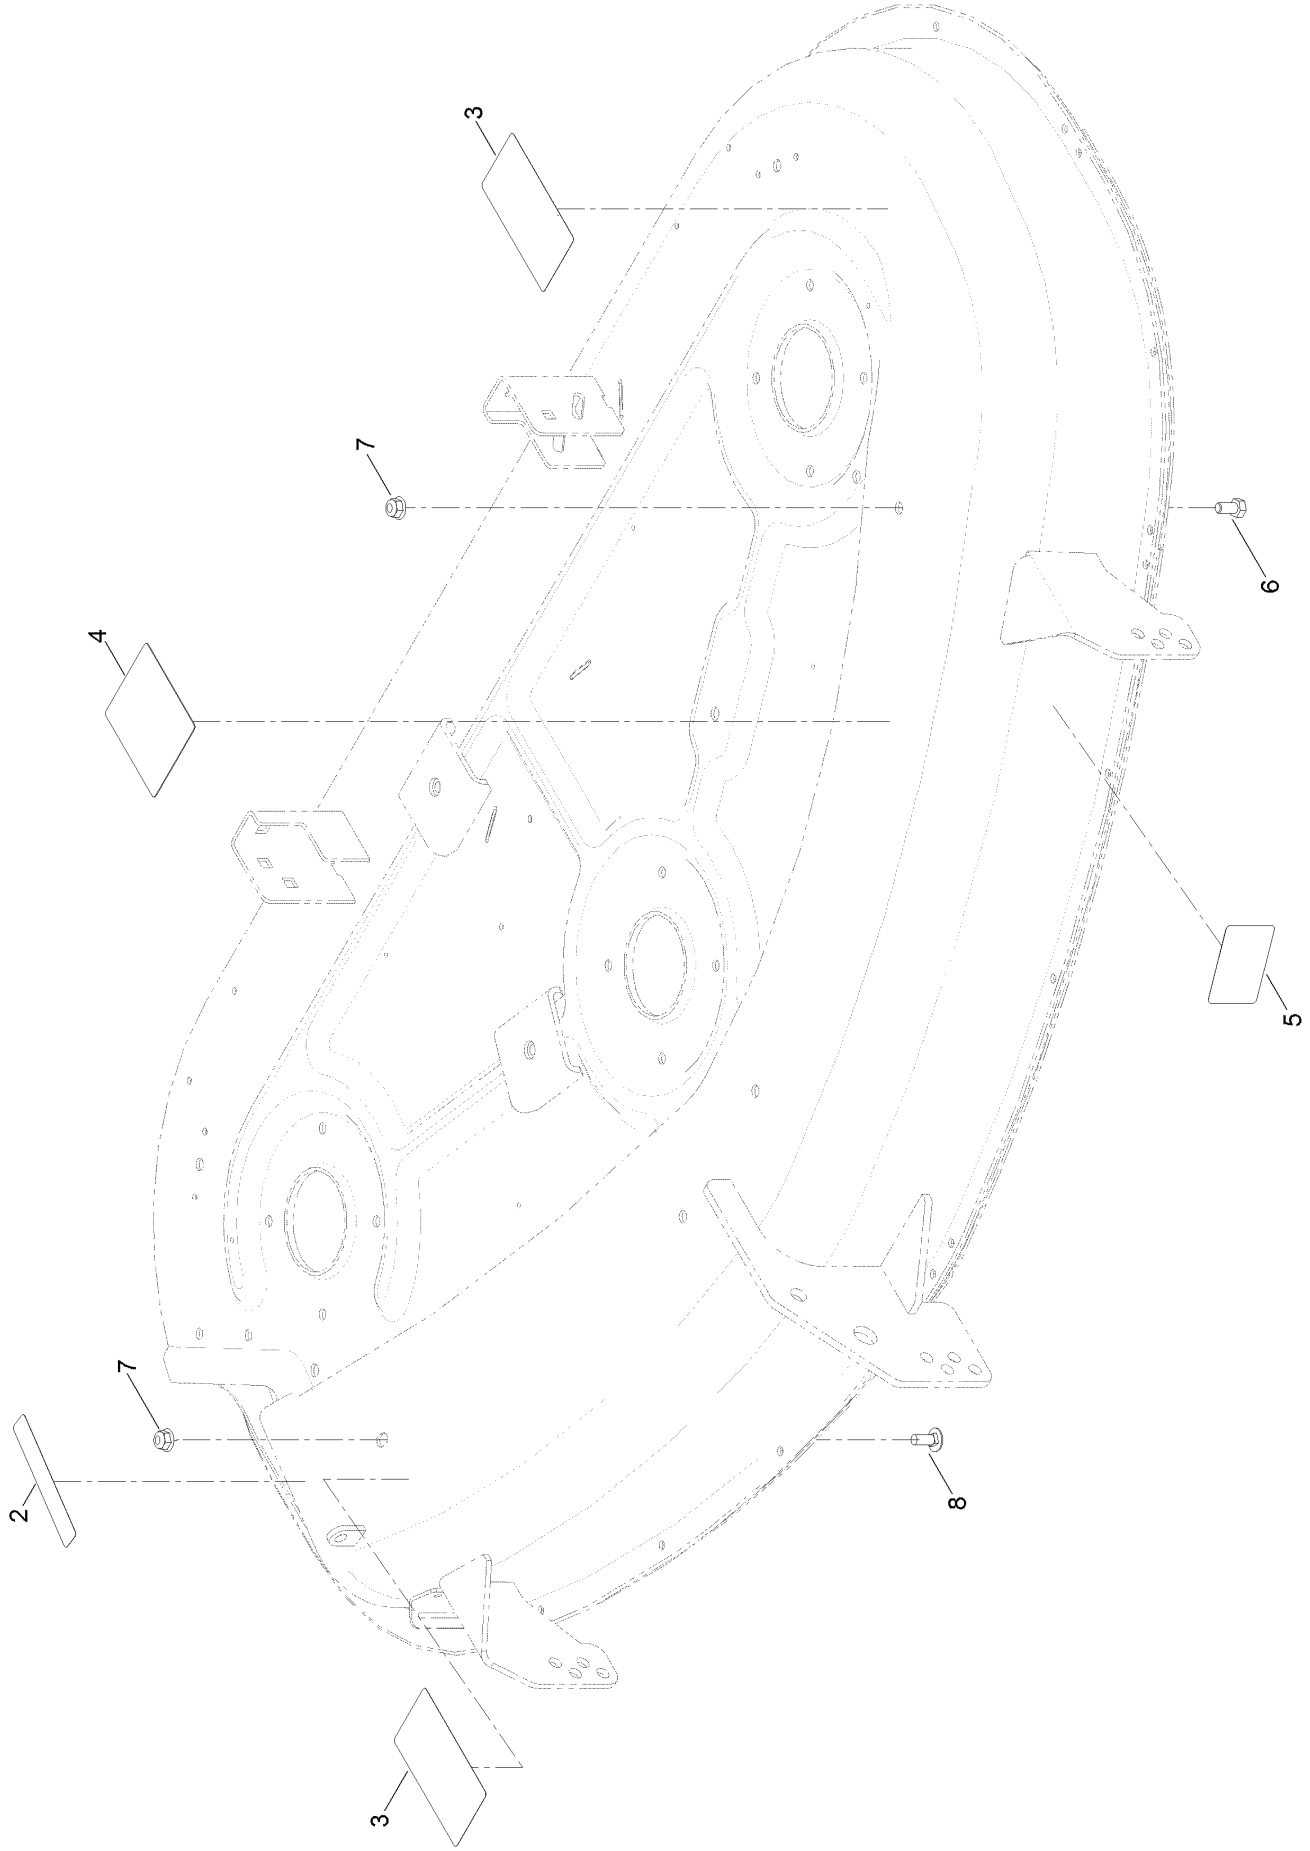

# 54 Inch Deck Decal Assembly No. 130-7004 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 2 | 93-7009 | 1 | Decal-Danger |
| 3 | 132-0872 | 2 | Decal-Danger, Deck |
| 4 | 99-3943 | 1 | Decal-Routing, Belt |
| 5 | 112-9840 | 1 | Decal-Scalp, Anti |
| 6 | 322-2 | 1 | Screw-HH |
| 7 | 104-8300 | 2 | Nut-HF, NI |
| 8 | 3230-23 | 1 | Screw-CARR |

# 54 Inch Deck, Belt and Blade Assembly

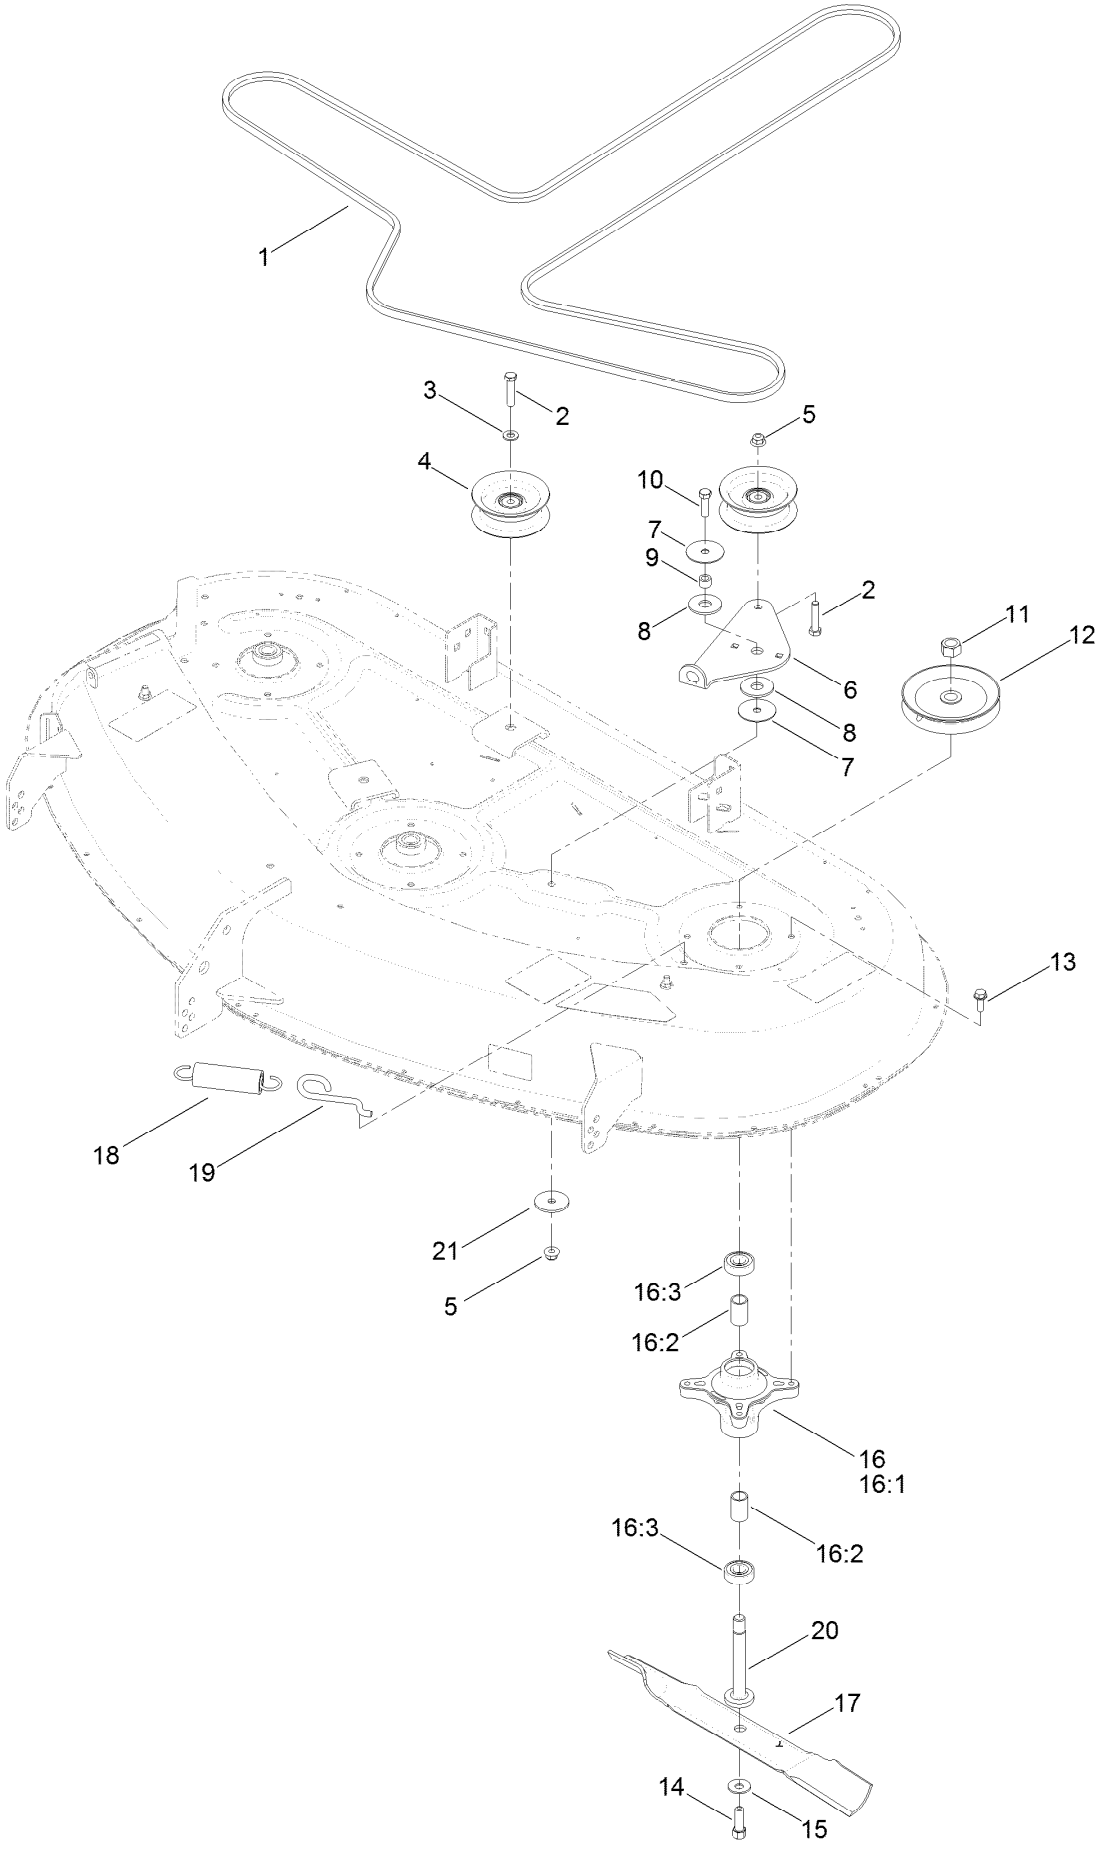

# 54 Inch Deck, Belt and Blade Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 130-0843 | 1 | Belt-V |
| 2 | 323-9 | 3 | Screw-HH |
| 3 | 3256-24 | 2 | Washer-Flat |
| 4 | 106-2175 | 3 | Pulley-Idler, Flat |
| 5 | 104-8301 | 2 | Nut-HF, NI |
| 6 | 114-8540 | 1 | Arm-Idler |
| 7 | 120-2229 | 2 | Washer |
| 8 | 114-0463 | 2 | Washer-Friction, Composite |
| 9 | 115-4986 | 1 | Spacer |
| 10 | 323-7 | 1 | Screw-HH |
| 11 | 3219-6 | 3 | Nut-Hex |
| 12 | 130-0656 | 3 | Pulley ASM |
| 13 | 32144-41 | 12 | Screw-Taptite |
| 14 | 26-0671 | 3 | Screw-HH |
| 15 | 3290-465 | 3 | Washer-Belleville |
| 16 | 121-0751 | 3 | Spindle ASM |
| 16:1 | 117-7267 | 1 | Spindle |
| 16:2 | 120-7935 | 2 | Spacer |
| 16:3 | 38-7820 | 2 | Bearing-Ball |
| 17 | 115-2454-03 | 3 | Blade-Hi Lift, 18.75 Inch |
| 18 | 1-603414 | 1 | Spring-Extension |
| 19 | 112-3973 | 1 | Hook-Return, Spring |
| 20 | 117-7268 | 3 | Shaft-Spindle |
| 21 | 63-7400 | 1 | Washer-Rebound |

# Attachments and Accessories

## For 74793 TimeCutter SW 5425 Riding Mower

| Product Name | Model/Part |
|---|---|
| Hourmeter Kit | 116-5461 |
| All Season Synthetic Oil | 117-0066 |
| Fuel Stabilizer (4oz) | 117-0089 |
| Fuel Stabilizer (16oz) | 117-0090 |
| Seat Cover w/Arm Rest | 117-0097 |
| Jack Mount Kit | 126-5251 |
| Jack Kit | 127-6666 |
| Attachment Mount Kit | 131-3966 |
| 54in Striping Kit | 131-4165 |
| 54in Bagging Enhancement Kit | 131-4166 |
| 54in Recycler Kit | 131-4185 |
| Floor Mat Kit | 132-6920 |
| HD Air Cleaner Kit | 136-7860 |
| 10w30 4-cycle Engine Oil (32oz Bottle) | 38280 |
| Toro 4-cycle SAE 30 Oil (32oz Bottle) | 38903 |
| Storage Cover | 490-7516 |
| Sunshade Kit | 79011 |
| Cargo Carrier | 79040 |
| 50in and 54in Bagger | 79392 |

## Notes:




**Count on it.**