
FORM NO. 3322–139

TORO®

MODEL NO. 09502–90001 & UP
MODEL NO. 09512

PARTS CATALOG

FAIRWAY AERATOR

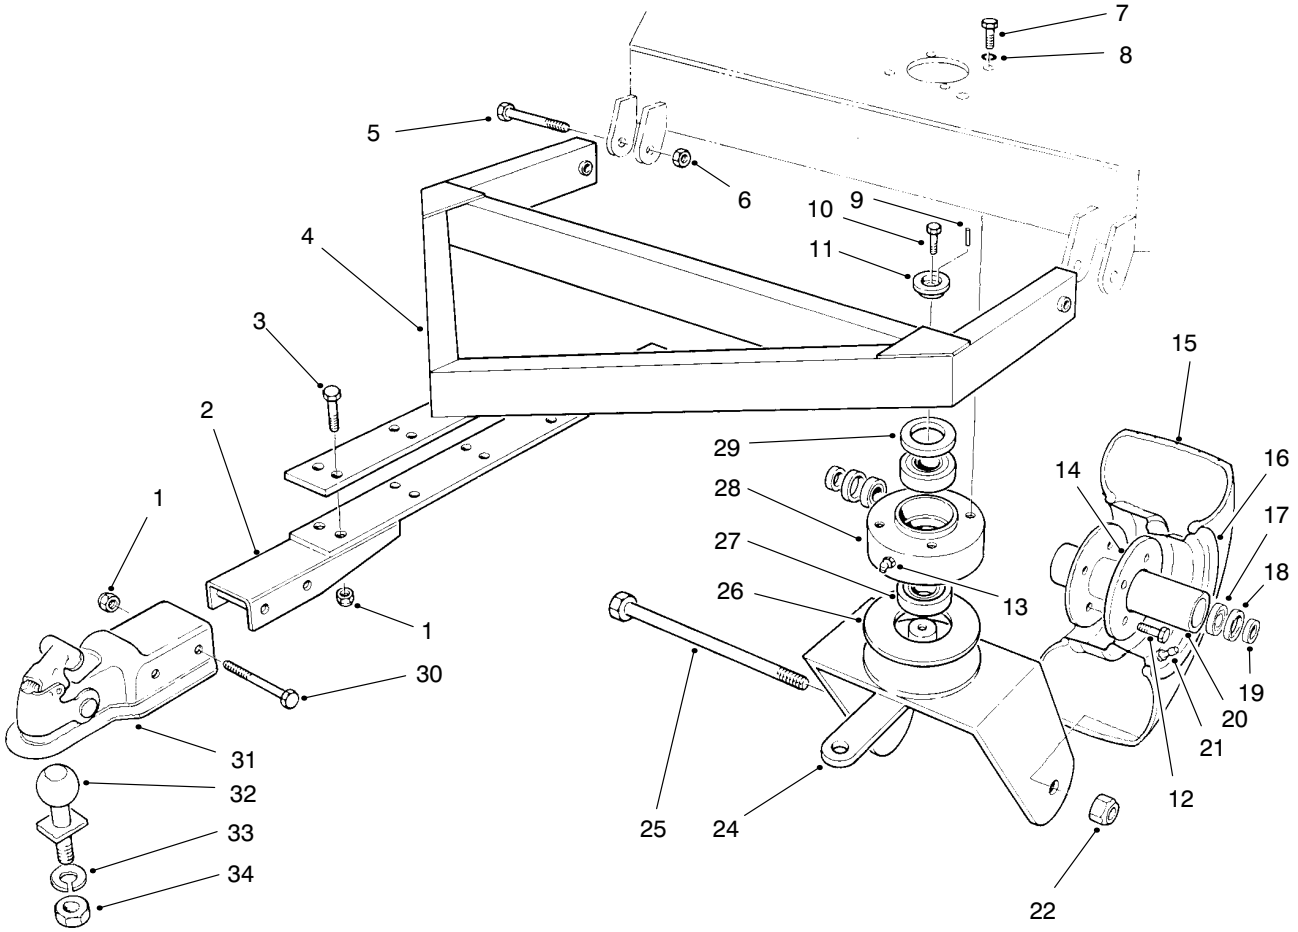


T–1309–1

HITCH & FRONT WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296–23	Nut–Lock	6
2	71–7020	ASM–Adapter, Hitch	1
3	325–8	Screw–HH	4
4	71–6890	ASM–Hitch	1
5	327–14	Screw–HH	2
6	3217–11	Nut–Hex.	2
7	325–5	Screw–HH	4
8	3253–7	Washer–Lock	4
9	32121–3	Pin–Roll	1
10	325–6	Screw–HH	1
11	71–6820	Cap–Retaining	1
12	3212–5	Screw–HH	4
13	302–61	Fitting–Grease	1
14	71–6760	Support–Rim	1
15	231–119	Tire	1
16	217–60	Rim	1
17	71–6780	Bearing	2

Ref. No.	Part No.	Description	No. Used
18	71–6790	Seal–Oil	2
19	71–6750	Spacer–Outer	2
20	71–6830	ASM–Hub Wheel	1
21	232–35	Stem–Valve	1
22	3296–70	Nut–Hex.	1
24	71–6730	ASM–Caster	1
25	71–6800	Shaft–Axle	1
26	71–6810	Disc–Plastic	1
27	71–6720	Bearing	2
28	71–6770	Housing–Bearing	1
29	71–6710	Seal–Oil	1
30	325–17	Screw–HH	2
31	71–7010	Coupler–Hitch	1
32	71–7070	Ball–Hitch	1
33	3253–11	Washer–Lock	1
34	72–8010	Nut–Hex.	1

© The TORO Company – 1998
All Rights Reserved

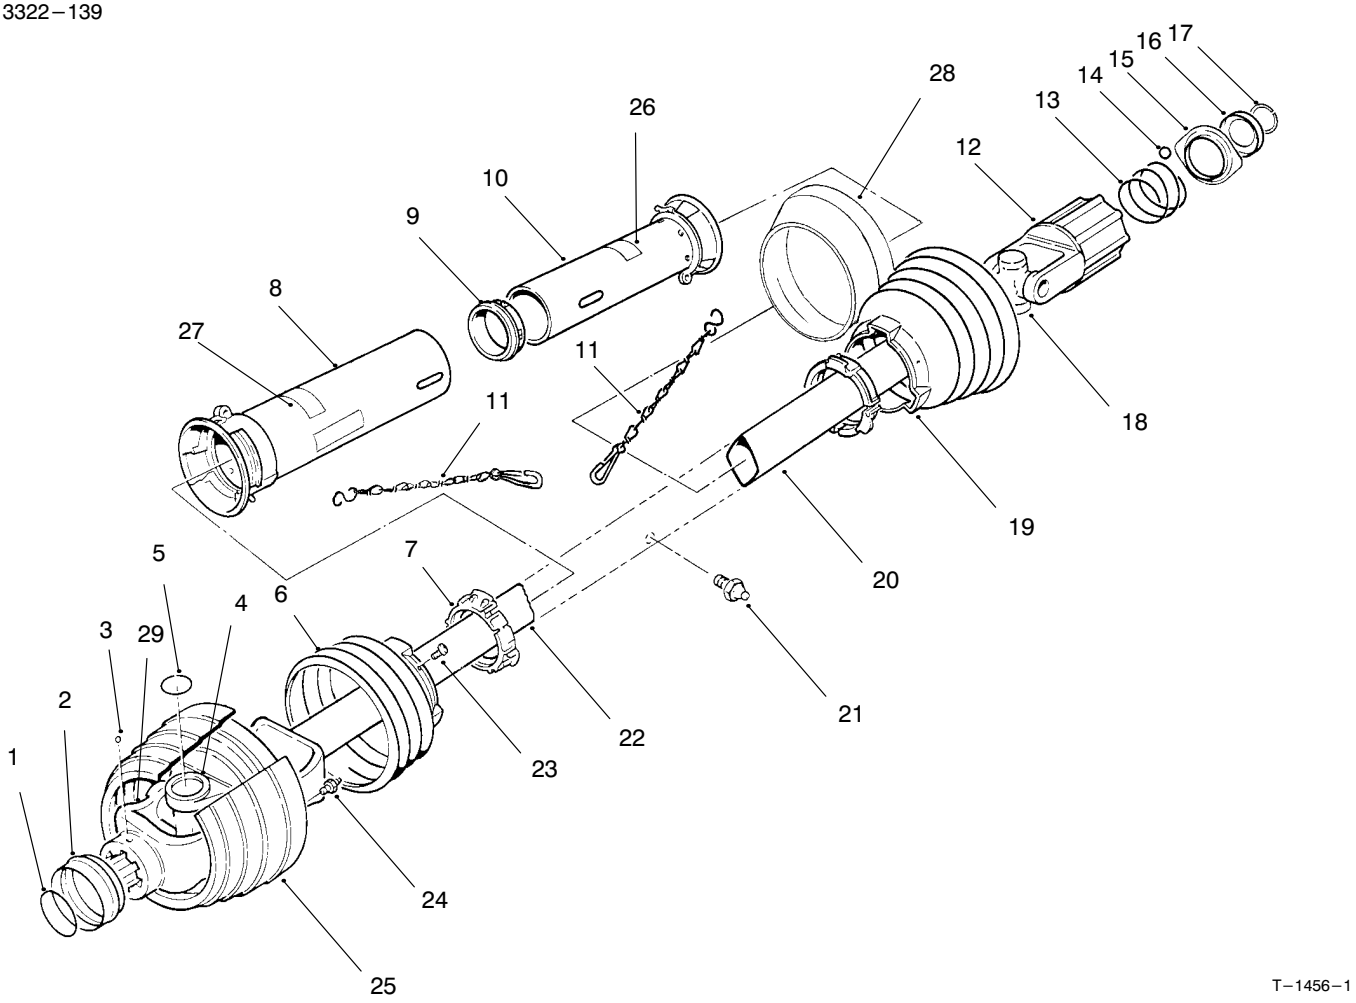

T−1456−1


FRONT DRIVE LINE ASSEMBLY NO. 94−9144

Ref. No.	Part No.	Description	No. Used
1		Ring−Retaining	1
2		ASM−Collar	1
3		Ball	3
4	84−6300	Yoke−Double	1
5	84−6310	Kit−Cross & Bearing	2
6	84−6350	Shield−3 Rib	1
7	77−4740	Ring−Bearing	2
8	94−9146	Tube−Shield, Outer	1
9	77−4790	Bearing−Support	1
10	84−6330	Tube−Shield, Inner	1
11	77−4760	Chain−Safety	2
12	94−9145	Clutch−Radial Pin	1
13		Spring−Compression	1
14		Ball	1
15		Collar−Lock	1
16		Ring−Flanged	1
17		Ring−Snap	1
18	77−4720	Kit−Cross & Bearing	1
19	77−4730	Cone−Shield	1

Ref. No.	Part No.	Description	No. Used
20	84−6390	Outer Shaft & Yoke	1
21	84−6370	Fitting−Grease	1
22	84−6380	Inner Shaft & Yoke	1
23	84−6360	Screw	8
24	84−6290	Fitting−Grease	1
25	84−6340	ASM−Bearing & Cone	1
26	92−7937	Decal−Inner	1
27	92−7936	Decal−Outer	1
28	93−7734	Reinforced Collar	1
29	84−6280	ASM−Yoke (Incl. Ref.#1−4)	1
*	77−4670	Kit−Collar (Incl. Ref.#1−3)	1
*	77−4660	Kit−Flange (Incl. Ref.#13−17	1
*	94−9144	Drive Line (Complete)	1
**	94−1775	Kit−Clutch, Cams & Springs	4

*Not Illustrated

**Number of Kits Required to Rebuild Clutch

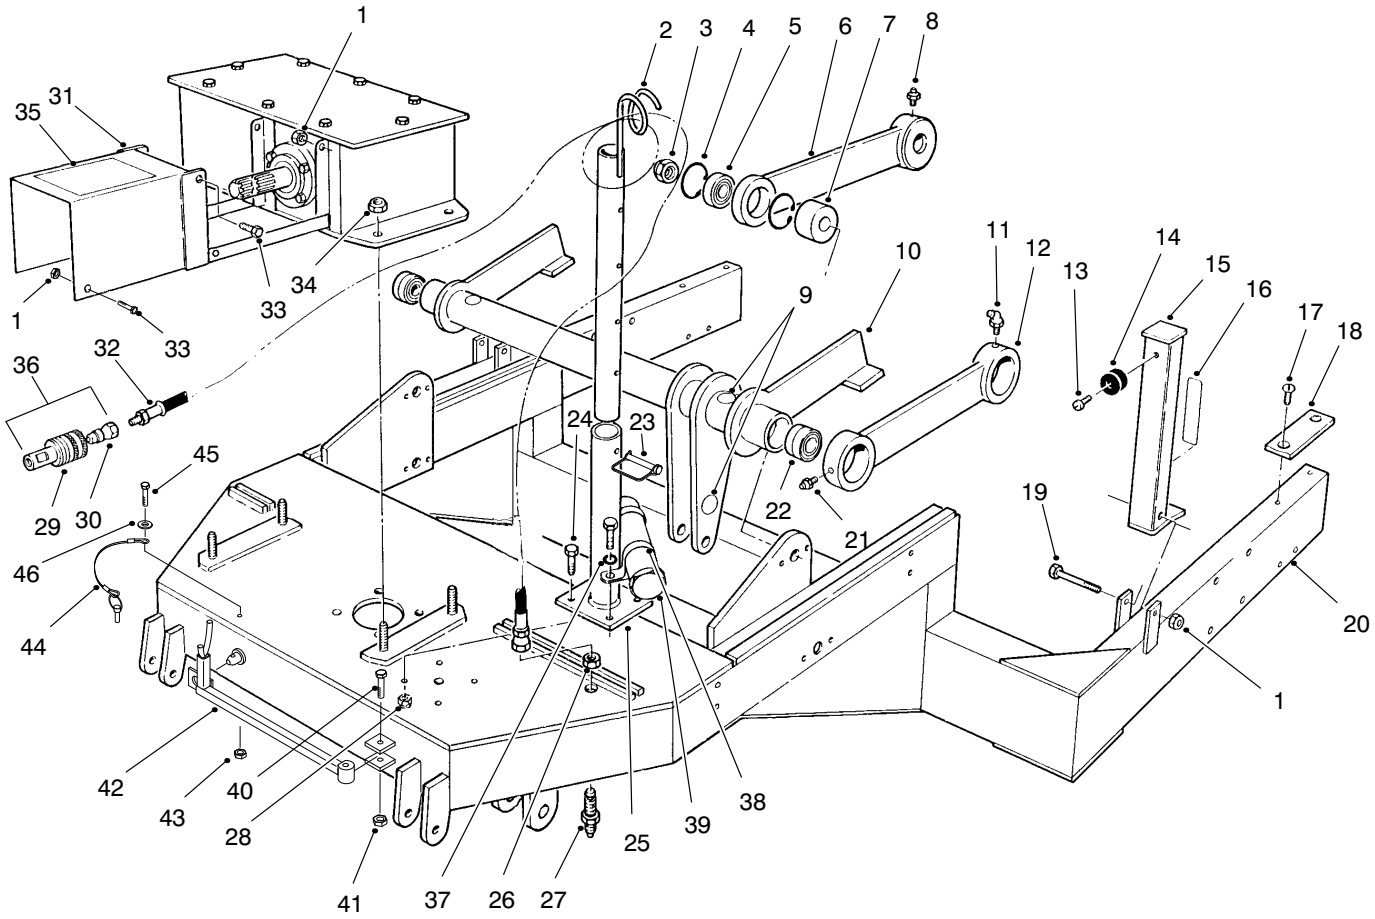


T–0898–3

CHASSIS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296–39	Nut–Lock	5
2	71–6910	ASM–Extension, Stand	1
3	3296–70	Nut–Hex	2
4	32120–8	Ring–Retaining	4
5	70–9240	Bearing	2
6	71–6590	Lift Arm–Top	2
7	72–7970	Spacer–Lift Arm, Top	2
8	302–55	Fitting–Grease	3
9	58–6520	Decal–Grease	3
10	71–6510	ASM–Lift Unit	1
11	302–61	Fitting–Grease	2
12	71–6600	Lift Arm–Bottom, LH	1
*	74–3110	Lift Arm–Bottom, RH	1
13	47–2830	Screw	2
14	71–7530	Grommet	2
15	76–2920	Stand–Transport	2
16	67–5370	Decal–Caution	2
17	32108–20	Screw–Countersink	4
18	71–7510	Pad–Absorber, Shock	2
19	323–15	Screw–HH	2
20	94–1778	ASM–Frame, Carrier	1
21	302–55	Fitting–Grease	2
22	70–9240	Bearing	4
23	93–4696	Pin–Snapper	1
24	322–6	Screw–HH	4

Ref. No.	Part No.	Description	No. Used
25	71–6950	ASM–Stand, Hose	1
†26		Nut–Bulkhead	1
27	354–33	ASM–Fitting, Bulkhead (Incl. Ref. #26)	1
28	3296–29	Nut–Lock	4
†29		Body–Female	1
†30		Tip–Male	1
31	95–3122	Shield–Drive Line (Incl. Ref. #35)	1
32	71–6980	Hose–Hydraulic	1
33	323–6	Screw–HH	3
34	3296–23	Nut–Lock	4
35	82–9400	Decal–Danger	1
36	71–7060	Coupler–Quick (Incl. Ref. #29 & 30)	1
37	3256–74	Washer–Flat	2
38	2412–133	R–Clamp	2
39	74–0720	Tube–Manual	1
40	325–12	Screw–HH	1
41	3296–23	Nut–Lock	1
42	94–1762	Rest–Drive Shaft	1
43	3296–29	Nut–Lock	1
44	92–9941	Lynch Pin & Tie	1
45	322–5	Screw–HH	1
46	3256–2	Washer–Flat	1

*Not Illustrated
†Not Serviced Separately

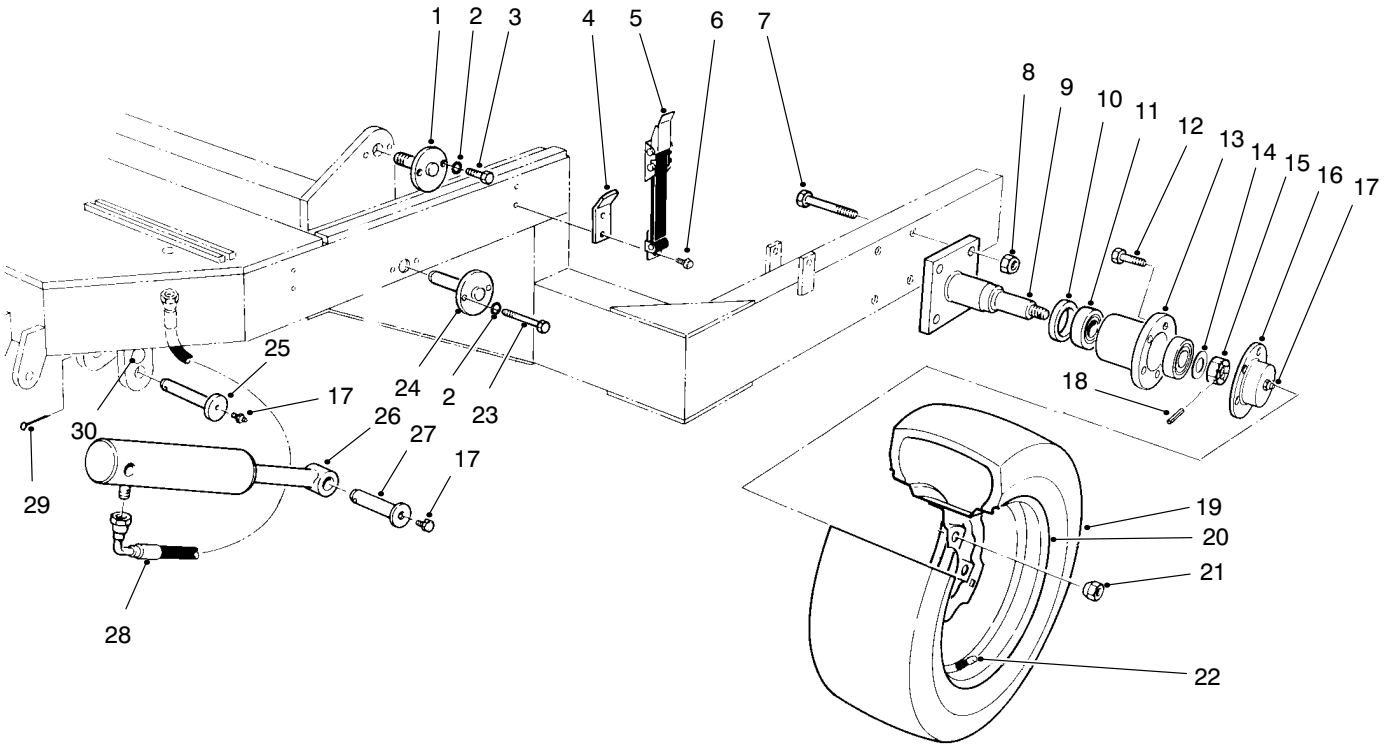


T–0897–1

REAR WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71–6620	Pin–Location, Top	2
2	3253–21	Washer–Lock	4
3	323–6	Screw–HH	4
4	71–6900	Guide–Cover, Front	4
5	71–6990	Latch–Draw, Flexible	4
6	3234–13	Screw–HFH	8
7	327–14	Screw–HH	8
8	3296–61	Nut–Lock	8
9	71–6860	Shaft–Axle	2
10	71–6710	Seal–Oil	2
11	71–6630	Bearing	4
12	77–4520	Screw–HH	10
13	71–6850	Housing–Bearing	2
14	70–9520	Washer–Flat	2
15	70–9460	Nut–Castle	2

Ref. No.	Part No.	Description	No. Used
16	71–6840	Cap–Hub	2
17	302–55	Fitting–Grease	2
18	32121–34	Pin–Roll	2
19	231–101	Tire	2
20	217–117	Rim	2
21	23–7270	Nut–Wheel	10
22	232–27	Stem–Valve	2
23	323–14	Screw–HH	4
24	71–6520	Pin–Location, Bottom	2
25	71–6540	Pin–Mount, Front	1
26	71–6560	Cylinder–Hydraulic	1
27	71–6550	Pin–Mount, Rear	1
28	71–7490	ASM–Hose	1
29	3272–23	Pin–Cotter	2
30	58–6520	Decal–Grease	1

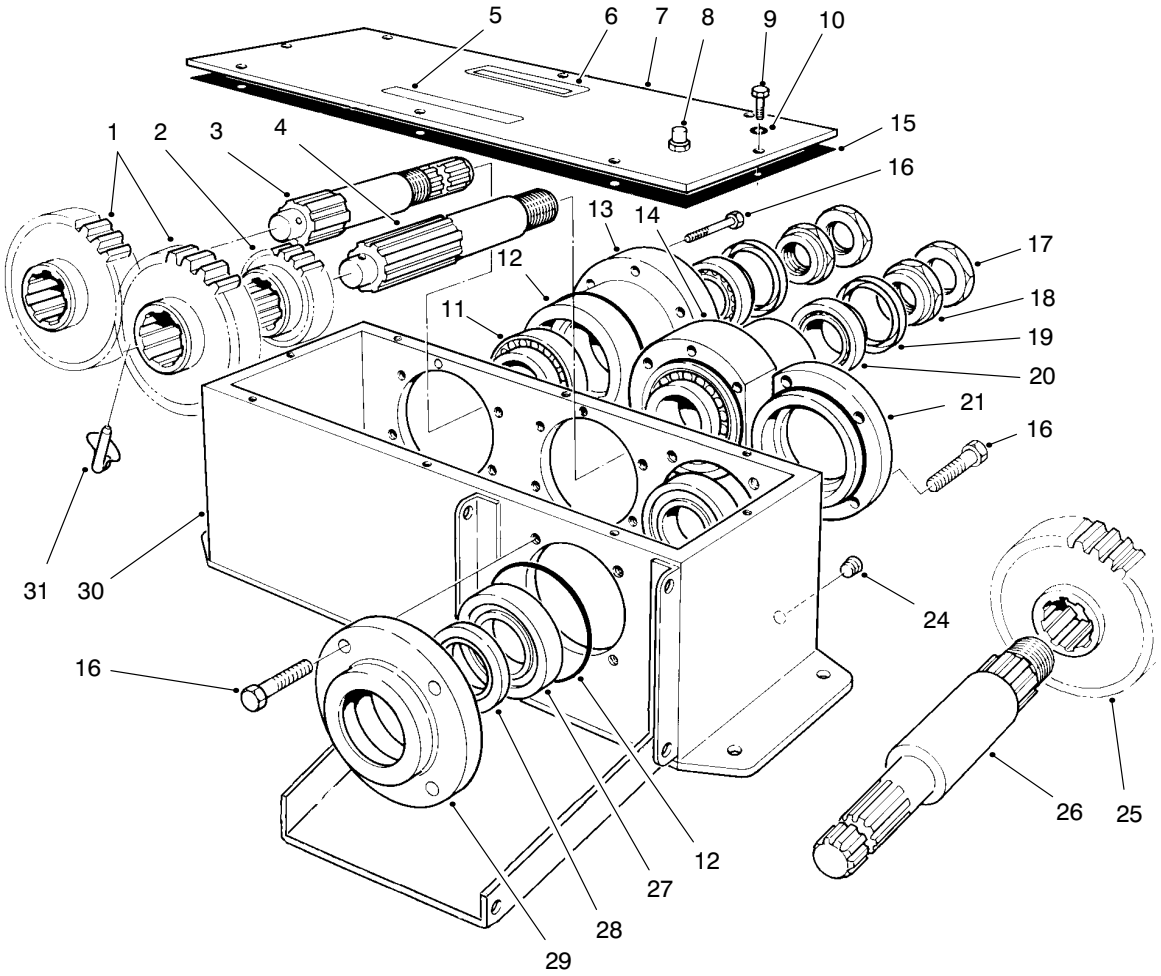


T−0893−1

FRONT GEAR BOX ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71−7300	Gear−30 Tooth	1
*	71−7310	Gear−31 Tooth	1
*	71−7320	Gear−32 Tooth	1
*	71−7330	Gear−33 Tooth	1
*	71−7340	Gear−34 Tooth	1
*	71−7350	Gear−35 Tooth	2
*	71−7360	Gear−36 Tooth	1
*	71−7370	Gear−37 Tooth	1
*	71−7380	Gear−38 Tooth	1
*	71−7390	Gear−39 Tooth	1
*	71−7400	Gear−40 Tooth	1
2	71−7200	Gear−20 Tooth	1
3	71−6570	Shaft−Corer	1
4	70−9690	Shaft−Intermediate	1
5	65−3090	Decal	1
6	67−5360	Decal−Warning	1
7	70−9670	Cover−Gearbox	1
8	72−3800	Breather	1
9	322−5	Screw−HH	8
10	3253−4	Washer−Lock	8

Ref. No.	Part No.	Description	No. Used
11	71−6700	Bearing	2
12	92−3013	O−Ring	4
13	92−3011	Housing−Bearing	1
14	92−3010	Housing−Bearing	1
15	71−6610	Gasket−Cover	1
16	323−8	Screw−HH	20
17	70−9720	Nut−Jam	2
18	70−9710	Nut−Hex	2
19	71−6490	Seal−Oil	2
20	71−6690	Bearing	2
21	92−3008	Cap−Bearing	1
24	285−21	Plug−Pipe	1
25	82−2900	Gear−35 Tooth	1
26	94−5309	Shaft−Tractor	1
27	72−3820	Bearing	2
28	70−9680	Seal−Oil	1
29	92−3009	Cap−Bearing	1
30	94−1779	ASM−Gear Case.	1
31	283−72	Pin−Lynch	2

*Not Illustrated

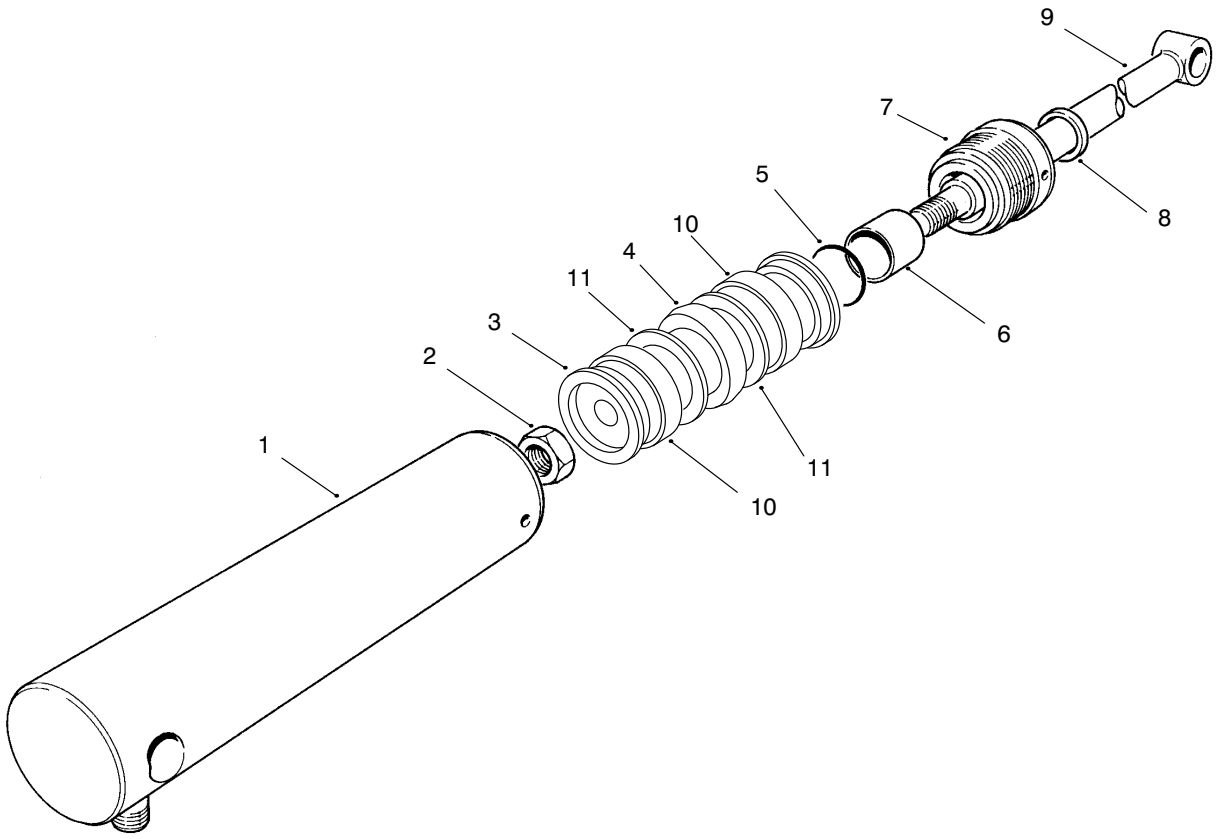


T−0899−1

HYDRAULIC CYLINDER ASSEMBLY NO. 71−6560

Ref. No.	Part No.	Description	No. Used
1	92−2410	Barrel	1
2	93−8770	Nut	1
3	92−2412	Piston	1
†4		Seal−Piston	1
†5		O−Ring	1
†6		Bushing−Bronze	1
7	92−2411	Cap−End	1

Ref. No.	Part No.	Description	No. Used
†8		Seal−Wiper	1
9	92−2413	Rod	1
		(Incl. Ref. #4−6,8,10,11)	1
10		Plastic Anti−Extrusion Ring	2
11		Spiral Back−Up Wear Ring	2
*	71−6640	Kit−Seal	
		(Incl. Ref.# 4−6,8,10,11)	1

*Not Illustrated
†Not Serviced Separately

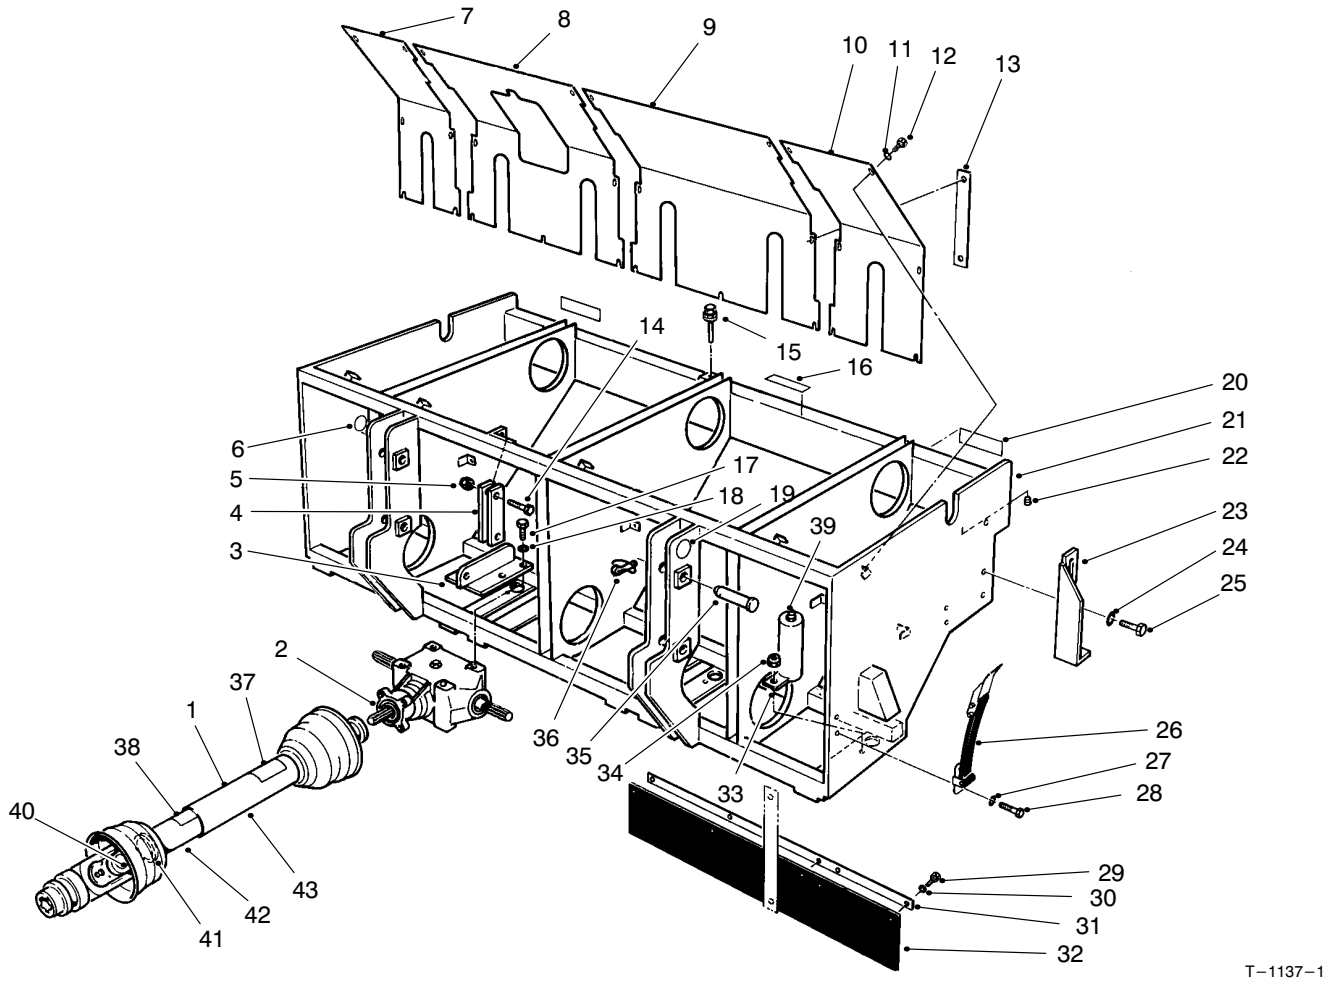


T–1137–1

FRAME & SHIELD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	68–8060	ASM–Drive Line (Incl. Ref. #37, 38 & 40–43)	1
2	77–3050	Gearbox–Rear, Bevel	1
3	76–3760	Plate–Mounting, Gearbox	1
4	71–7150	Plate–Upright, Gearbox	2
5	3296–23	Nut–Lock	2
6	58–6520	Decal–Grease	1
7	77–3070	Screen–Outer, RH	1
8	77–3090	Screen–Inner, RH	1
9	77–3080	Screen–Inner, LH	1
10	77–3060	Screen–Outer, LH	1
11	3253–4	Washer–Lock	16
12	322–3	Screw–HH	16
13	72–7980	Strap	6
14	325–8	Screw–HH	2
15	72–7960	Indicator–Oil Level	1
16	67–5360	Decal–Warning, Covers	1
17	48–7830	Screw, HH	4
18	3253–7	Washer–Lock	4
19	58–6520	Decal–Grease	1
20	59–9930	Decal–Danger	2
21	92–3004	ASM–Coring Frame	1
22	285–21	Plug–Pipe	1

Ref. No.	Part No.	Description	No. Used
23	71–7470	Adjuster–LH	1
*	71–7480	Adjuster–RH	1
24	3256–69	Washer–Flat	4
25	327–4	Screw–HH	4
26	71–6990	Latch–Draw, Flexible (Complete)	4
27	3253–3	Washer–Lock	8
28	321–2	Screw–HH	8
29	322–5	Screw–HH	10
30	3256–2	Washer–Flat	10
31	71–7460	Strap–Securing, Curtain	2
32	71–7450	Curtain–Lower	2
33	71–7180	Cover–Dust	6
34	3296–39	Nut–Lock	6
35	71–6530	Pin–Mount, Lift Arm	4
36	283–71	Pin–Lynch	4
37	92–1581	Decal–Safety	1
38	92–1582	Decal–Safety	1
39	302–55	Fitting–Grease	6
40	72–7990	Kit–Cross & Bearing	1
41	92–1580	Kit–Nylon Repair	1
42	92–7931	Inner Guard	1
43	92–7930	Outer Guard	1

*Not Illustrated

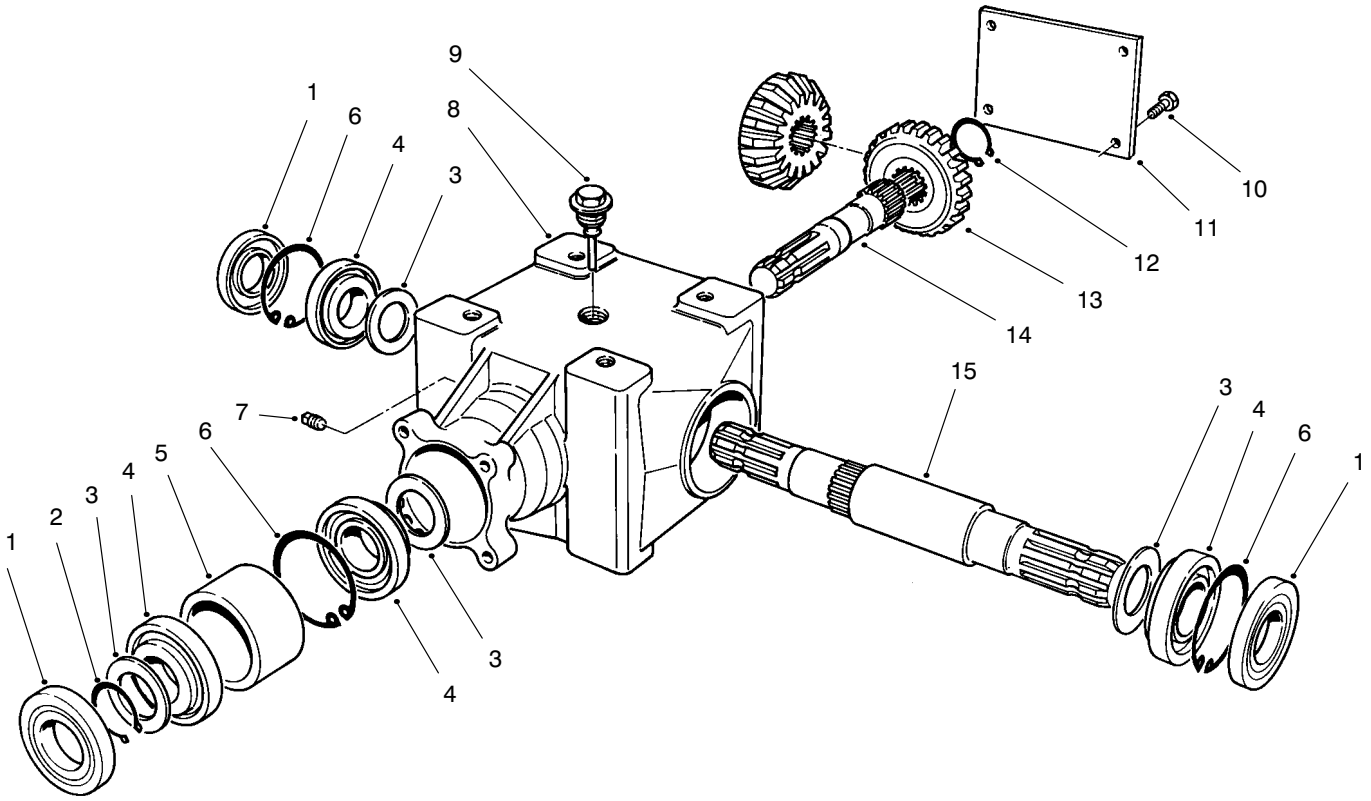


GEAR BOX ASSEMBLY NO. 77–3050

Ref. No.	Part No.	Description	No. Used
1	74–3200	Seal–Oil	3
2	74–2960	Ring–Retaining	1
†3	74–2990	Shim Kit	4
4	71–6630	Bearing	4
5	77–4430	Spacer	1
6	32120–31	Ring–Snap	3
7	281–1	Plug–Pipe	1
*8		Case	1
9	77–4490	Plug–Oil Level/Filler	1

Ref. No.	Part No.	Description	No. Used
10	77–4500	Bolt–HSH	4
11	77–4470	Cover	1
12	77–4460	Ring–Retaining	1
13	77–4450	Gear–18 Tooth	2
14	77–4440	Shaft–Input	1
15	77–4480	Shaft	1

†Includes three (3) shims of various thickness to properly adjust gear backlash & shaft end play. Required when replacing items #4, 5, & 13–15. Instruction sheet included.

*Not Serviced Separately

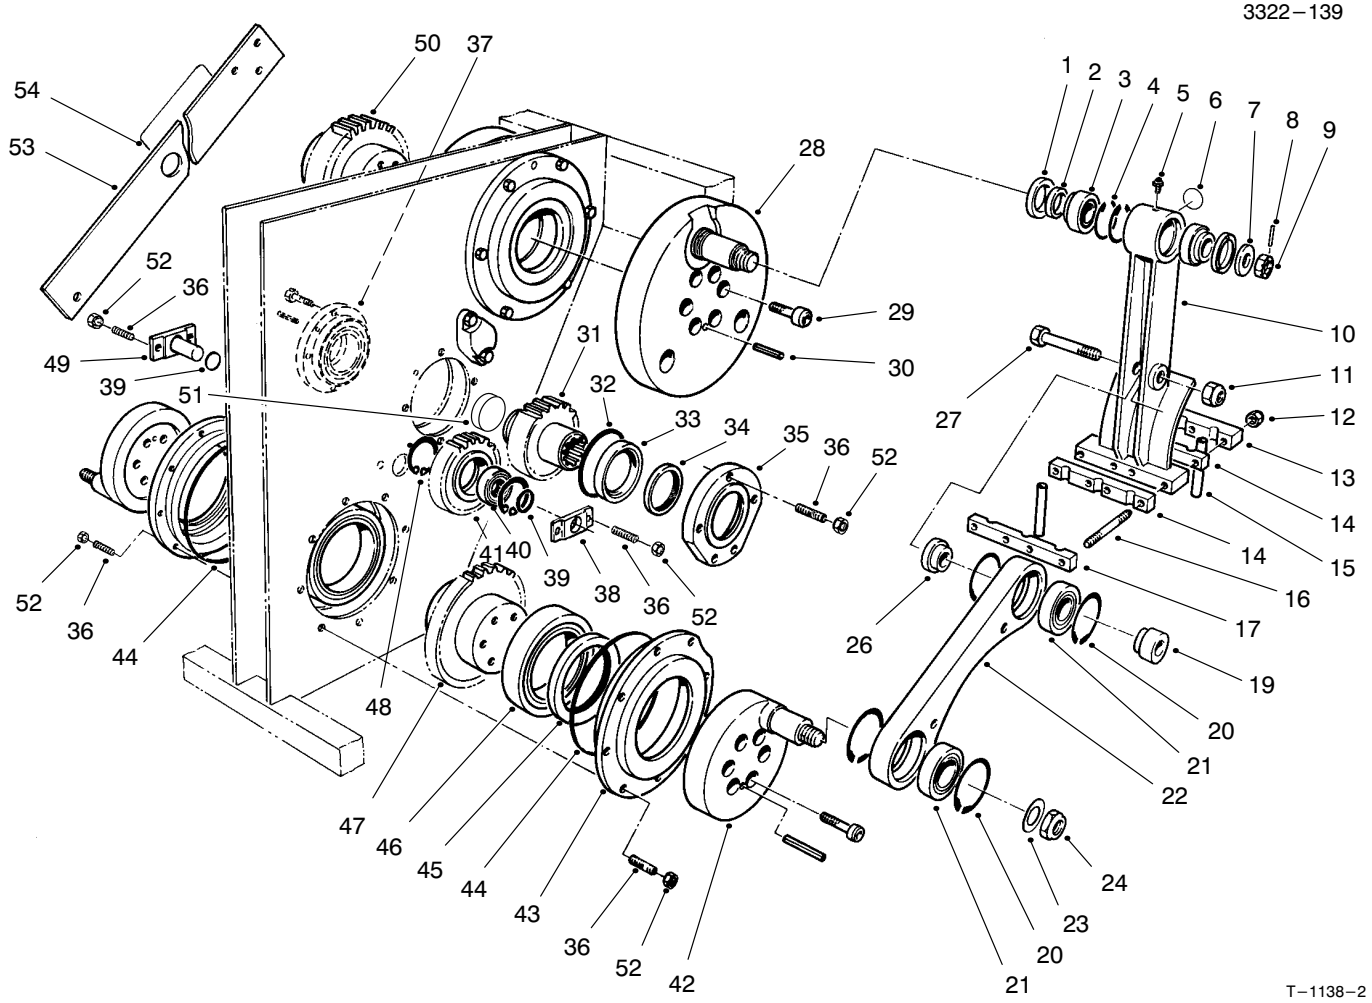


FRAME GEAR CASE & STOMPER ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	72–3840	Seal–Oil	12
2	70–9580	Spacer–Inner	6
3	72–3810	Bearing	12
4	82–3190	Ring–Retaining	12
5	302–55	Fitting–Grease	6
6	58–6520	Decal–Grease	6
7	70–9570	Spacer–Outer	6
8	32121–34	Pin–Roll	6
9	70–9460	Nut–Castle	6
10	70–9420	Arm–Tine	6
11	3296–70	Nut–Lock	6
12	3296–23	Nut–Lock	24
†13		Block–Outer	
†14		Block–Inner	
†15		Tine	
†16		Stud	
†17		Block–Bridging	
19	72–8060	Bushing–Spacer, Long	6
20	32151–88	Ring–Retaining	24
21	72–8070	Bearing	12
22	77–3040	Rod–Connecting	6
23	3256–62	Washer–Flat	6
24	3296–70	Nut–Lock	6
26	72–8090	Bushing–Spacer, Short	6
27	70–9550	Bolt–Connecting	6
28	92–9948	Crank–Top	6

Ref. No.	Part No.	Description	No. Used
29	3274–4	Screw–HSH	72
30	71–7100	Pin–Roll	12
31	76–3630	Gear–Shaft, Driver	3
32	92–3013	O–Ring	6
33	70–9220	Bearing	6
34	99–6882	Seal–Oil	4
35	99–6878	Housing–Shaft, Drive, Open	4
36	92–3005	Stud	150
37	99–6879	Housing–Closed	2
38	92–3003	Cap–End	6
39	237–168	O–Ring	12
40	77–4560	Bearing	6
41	76–3640	Gear–Idler	6
42	72–8100	Crank–Bottom	6
43	92–3000	Flange–Crankshaft	12
44	92–3012	O–Ring	12
45	99–5398	Seal–Oil	12
46	70–9330	Bearing	12
47	76–3660	Gear–Crankshaft, Bottom	3
48	32120–62	Ring–Retaining	12
49	92–3002	Shaft–Idler	6
50	76–3650	Gear–Crankshaft, Top	3
51	99–6880	Plug–Drive Gear	2
52	92–3006	Nut–Lock	150
53	82–3200	Timing Bar	1
54	82–3220	Decal	1


† See pages 10 & 11 for selection.

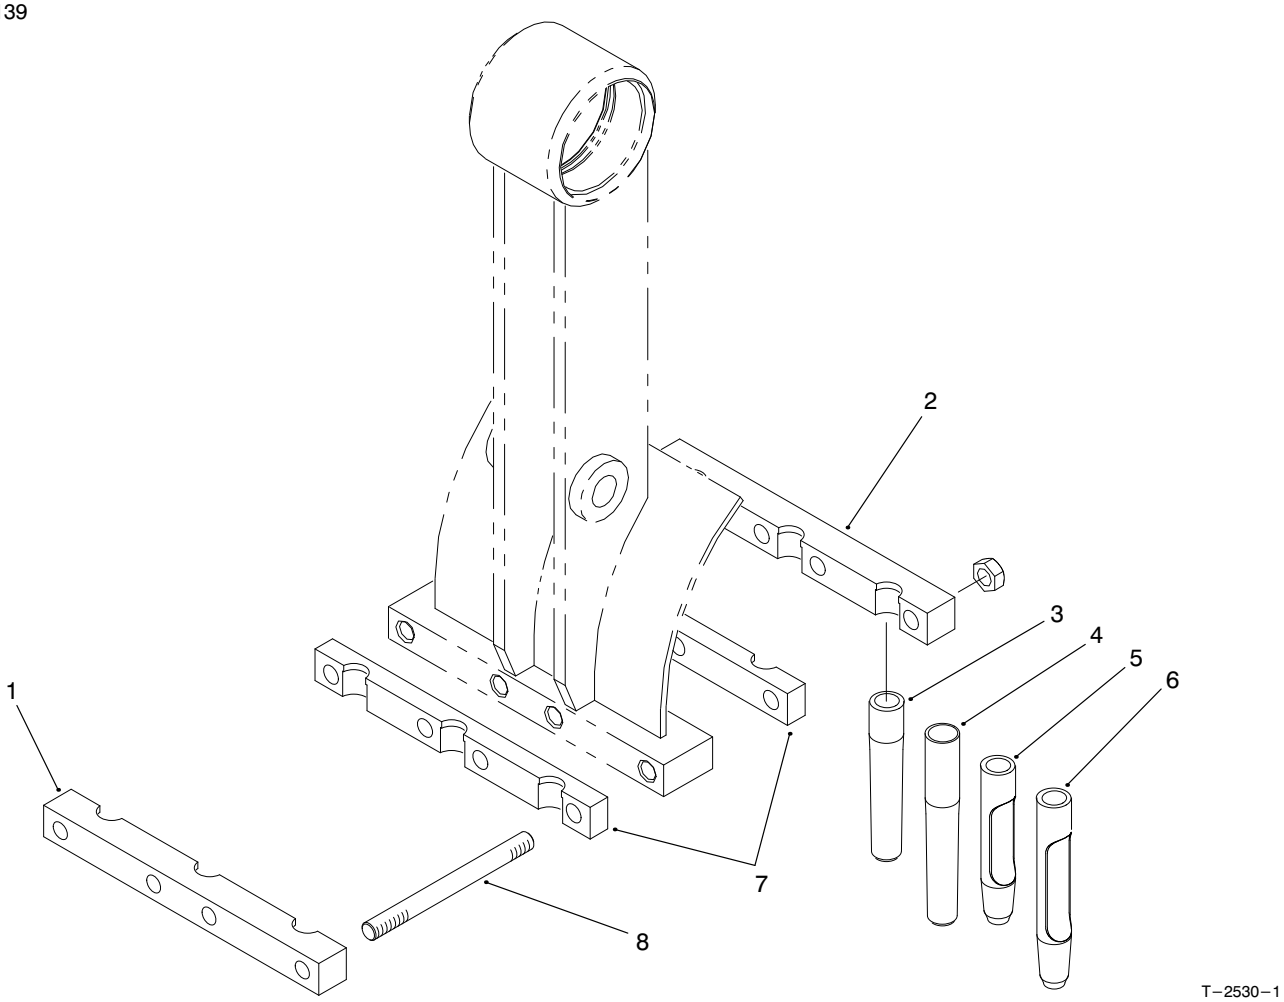

6–TINE BLOCKS & .75 DIAMETER TINE SELECTION

Ref. No.	Part No.	Description	No. Used
1	70–9390	Block–Bridging, 6–Tine	6
2	70–9380	Block–Outer, 6–Tine	6
3	62–4600	Tine–Tubular .75 x 4.75	36
4	86–9720	Tine–Tubular .75 x 5.75	36


Ref. No.	Part No.	Description	No. Used
5	92–7941	Tine–Open Center .75 x 4.75	36
6	92–7900	Tine–Open Center .75 x 5.75	36
7	70–9400	Block, Inner, 6–Tine	12
8	71–7120	Stud–.50 x 150mm	24

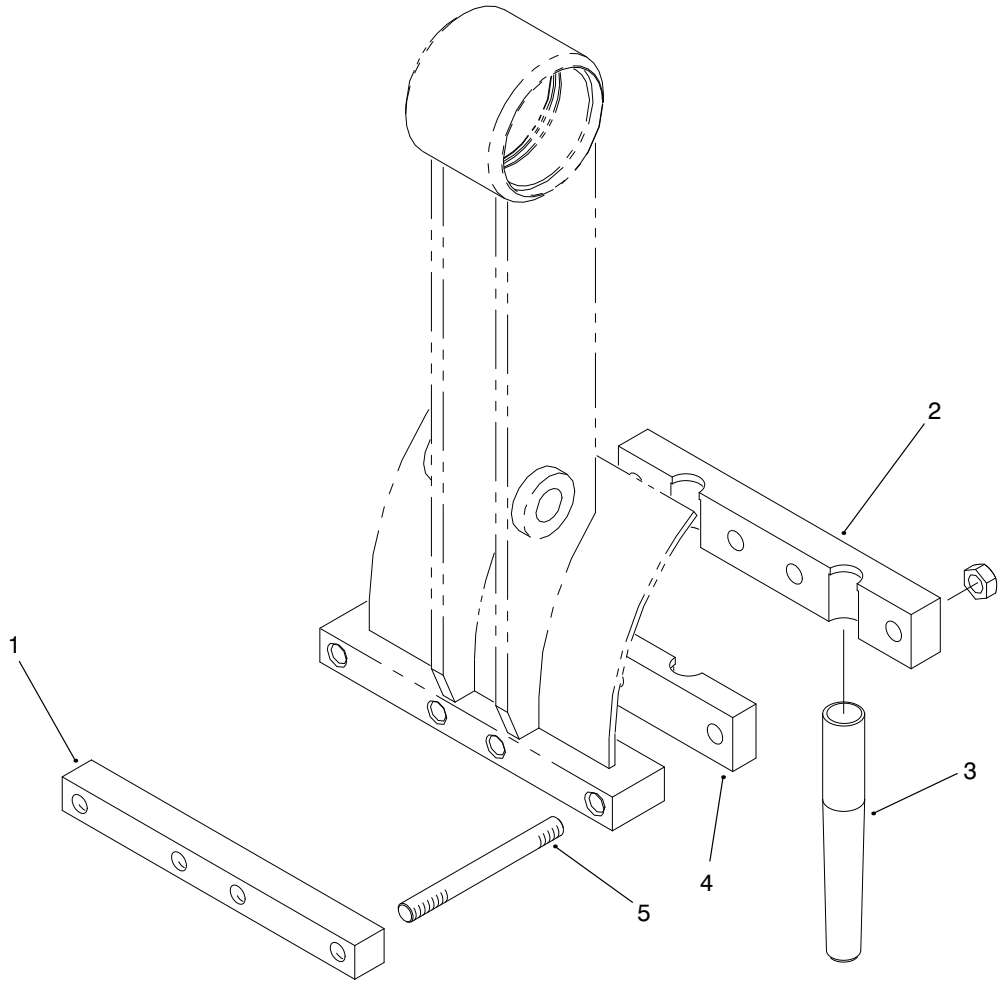

T–2531–1

2–TINE BLOCKS & TINE SELECTION

Ref. No.	Part No.	Description	No. Used
1	70–9410	Block–Bridging, 2–Tine	6
2	70–9260	Block–Outer, 2–Tine	6
3	71–0940	Tine–Tubular .88 x 7.00	12
4	70–9270	Block–Inner, 2–Tine	6
5	71–7110	Stud–.50 x 130mm	24

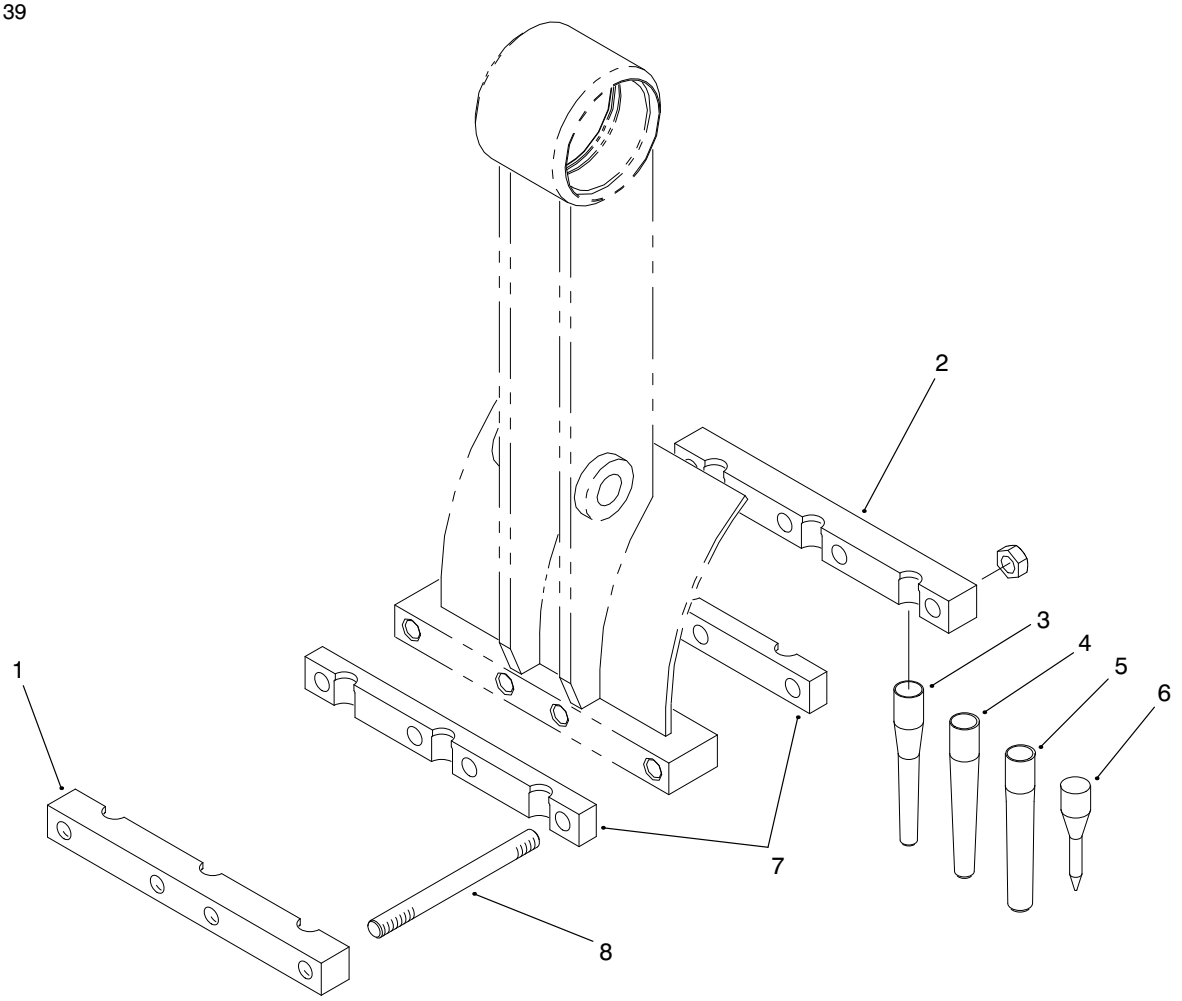


T–2532–1

6–TINE BLOCKS & TINE SELECTION

Ref. No.	Part No.	Description	No. Used
1	95–3104	Block–Bridging, 6–Tine	6
2	95–3103	Block–Outer, 6–Tine	6
3	59–3690	Tine–Tubular .38 x 4.75	36
4	94–3419	Tine–Tubular .50 x 4.75	36

Ref. No.	Part No.	Description	No. Used
5	59–3670	Tine–Tubular .62 x 4.75	36
6	77–5320	Tine–Spiker .31 x 3.25	36
7	95–3105	Block–Inner, 6–Tine	12
8	71–7120	Stud–.50 x 150mm	24

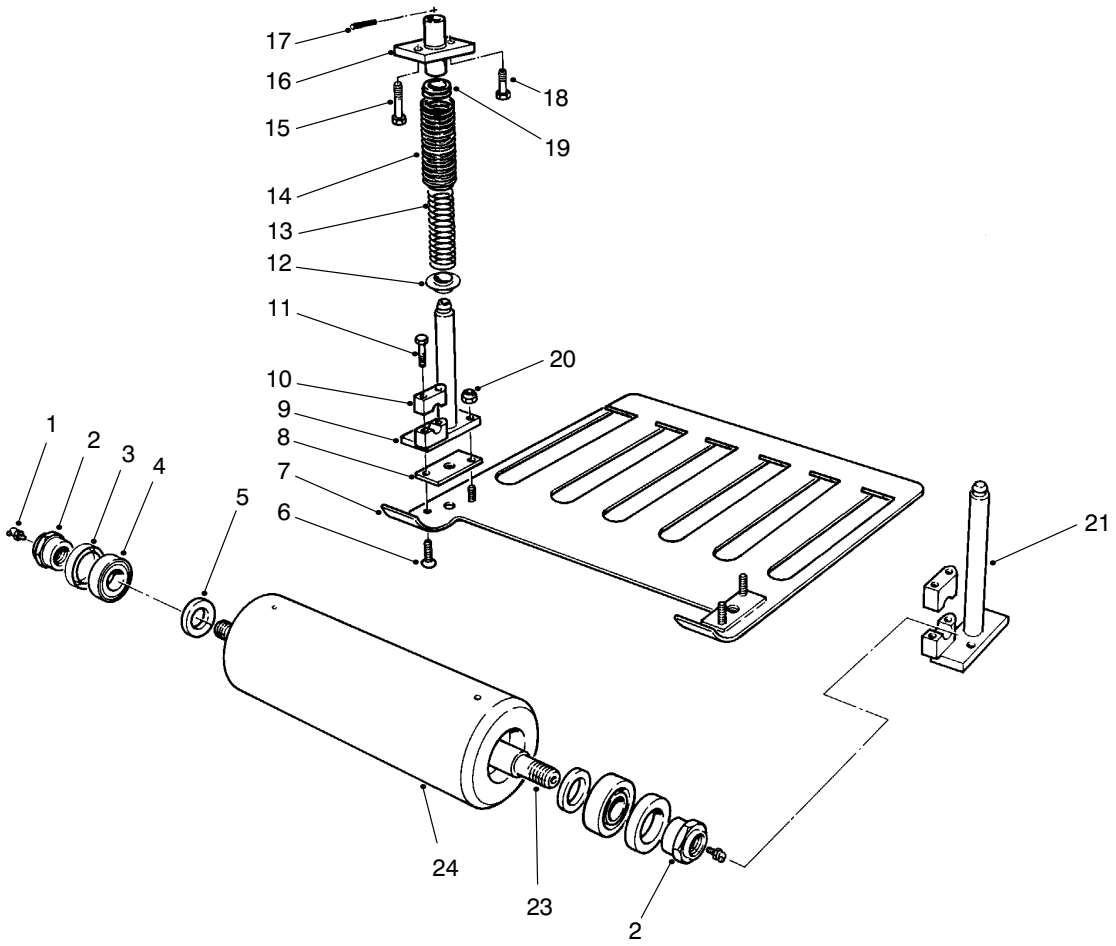

T−0896−1


ROLLER & FINGER PLATE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	302−61	Fitting−Grease	6
2	71−7290	Nut−Thin	6
3	71−6790	Seal−Oil	6
4	71−6780	Bearing	6
5	72−3830	Seal−Oil	6
6	3289−17	Screw−HSFH	12
7	70−9440	Plate−6 Tine	3
*	70−9430	Plate−2 Tine	3
8	71−7270	Plate−Backing	6
9	71−7220	Shaft−RH	3
10	72−8020	Block−Clamp, Top	6
11	3212−6	Screw−HH	12
12	71−7240	Ring−Clamp, Bottom	6

Ref. No.	Part No.	Description	No. Used
13	70−9450	Spring−Compression	6
14	82−2890	Shield−Rubber	6
15	323−35	Screw−HH	6
16	71−7130	Bushing	6
17	32121−15	Pin−Roll	6
18	323−7	Screw−HH	6
19	71−7230	Ring−Clamp, Top	6
20	3296−39	Nut−Lock	12
21	71−7210	Shaft−LH	3
23	71−7280	Shaft	3
24	71−7250	ASM−Roller (Incl. Ref. #1−5, 22 & 23)	3

*Not Illustrated

3322−139

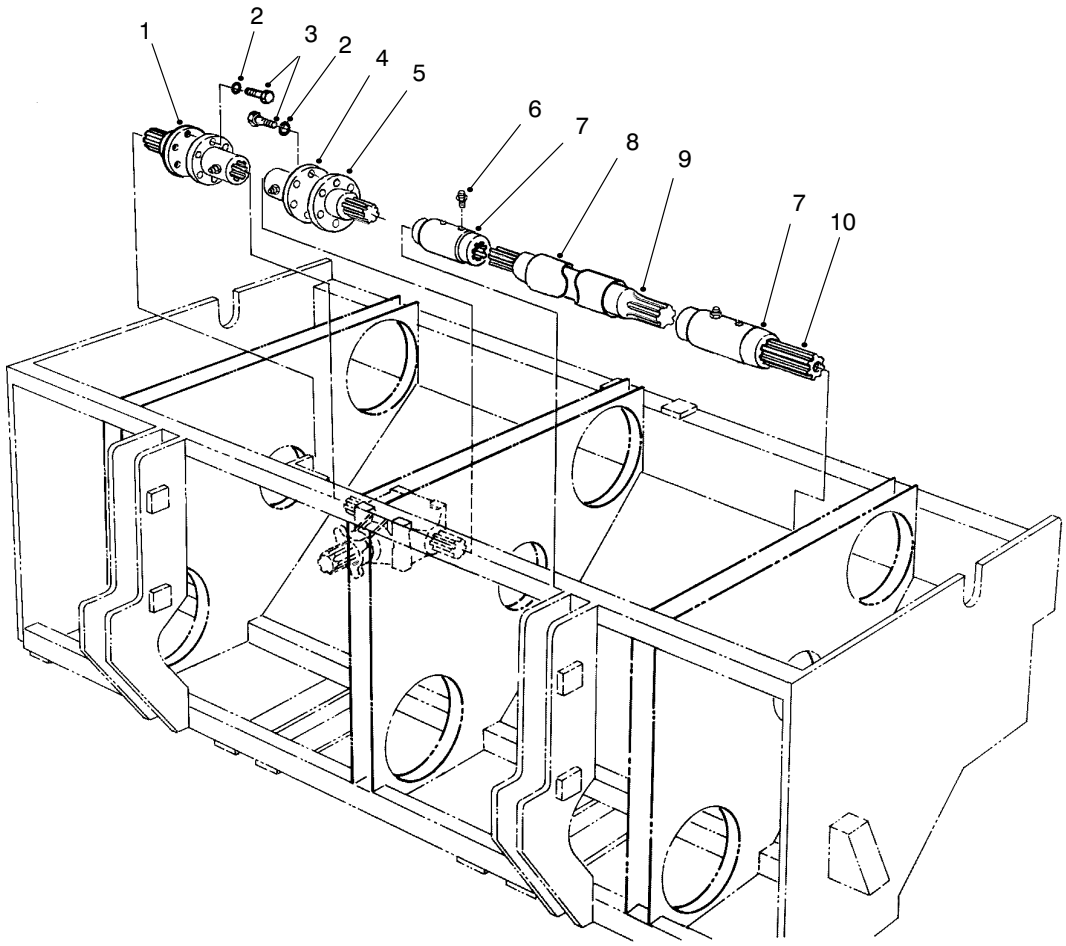


T−3193

DRIVE LINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	98−6872	Shaft−Splined	1
2	3253−7	Washer−Lock	12
3	3274−89	Screw−HSH	12
5	76−3710	Coupling−Flange	2
8	99−6873	Shaft−Splined	1

Ref. No.	Part No.	Description	No. Used
6	302−55	Fitting−Grease	4
7	98−6876	Coupling−Splined	2
8	98−6877	Tube−Shield	1
9	99−6874	Shaft−Splined	1
10	99−6875	Shaft−Splined	1

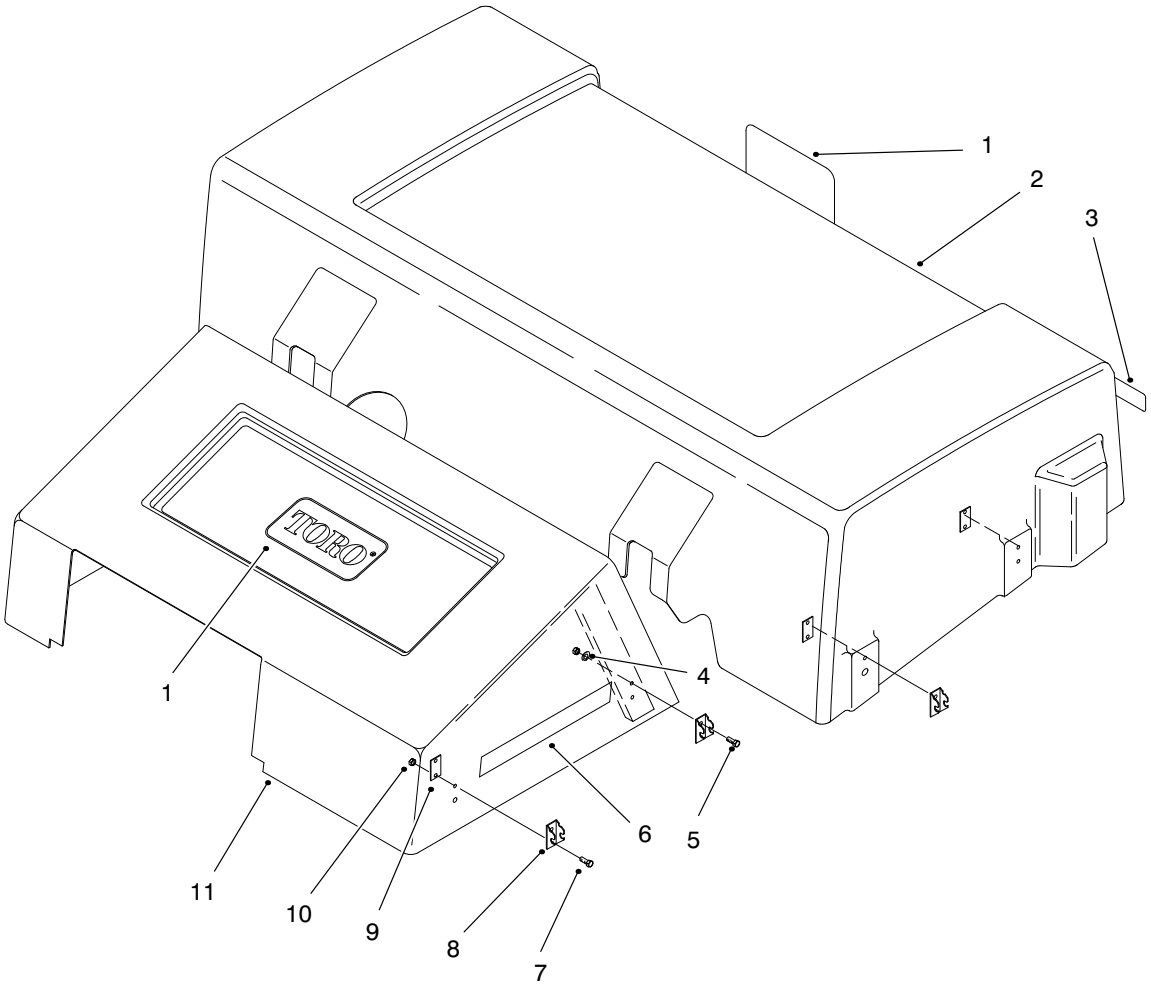

T−0900−2

AERATOR & CORING HEAD COVERS

Ref. No.	Part No.	Description	No. Used
1	67−7310	Decal−Toro	2
2	84−5980	Cover−Coring Head	1
3	59−9930	Decal−Danger	2
4	3256−22	Washer−Flat	4
5	321−9	Screw−HH	4
6	67−5330	Decal−Aerator, Fairway	2

Ref. No.	Part No.	Description	No. Used
7	321−4	Screw−HH	12
8	71−6990	Latch (Complete) (Keeper Shown Illustrated)	4
9	71−6940	Plate−Backing	6
10	3296−56	Nut−Lock	16
11	84−5970	Cover−Front, Aerator	1

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
23–7270	Nut–Wheel	4	21	10
47–2830	Screw	3	13	2
48–7830	Screw, HH	7	17	4
58–6520	Decal–Grease	7	6	1
58–6520	Decal–Grease	9	6	6
58–6520	Decal–Grease	3	9	3
58–6520	Decal–Grease	7	19	1
58–6520	Decal–Grease	4	30	1
59–3670	Tine–Tubular	12	5	36
59–3690	Tine–Tubular	12	3	36
59–9930	Decal–Danger	15	3	2
59–9930	Decal–Danger	7	20	2
62–4600	Tine–Tubular	10	3	36
65–3090	Decal	5	5	1
67–5330	Decal–Aerator, Fairway	15	6	2
67–5360	Decal–Warning	5	6	1
67–5360	Decal–Warning, Covers	7	16	1
67–5370	Decal–Caution	3	16	2
67–7310	Decal–Toro	15	1	2
68–8060	ASM–Drive Line	7	1	1
70–9220	Bearing	9	33	6
70–9240	Bearing	3	5	2
70–9240	Bearing	3	22	4
70–9260	Block–Outer, 2–Tine	11	2	6
70–9270	Block–Inner, 2–Tine	11	4	6
70–9330	Bearing	9	46	12
70–9380	Block–Outer, 6–Tine	10	2	6
70–9390	Block–Bridging, 6–Tine	10	1	6
70–9400	Block, Inner, 6–Tine	10	7	12
70–9410	Block–Bridging, 2–Tine	11	1	6
70–9420	Arm–Tine	9	10	6
70–9430	Plate–2 Tine	13	*	3
70–9440	Plate–6 Tine	13	7	3
70–9450	Spring–Compression	13	13	6
70–9460	Nut–Castle	9	9	6
70–9460	Nut–Castle	4	15	2
70–9520	Washer–Flat	4	14	2
70–9550	Bolt–Connecting	9	27	6
70–9570	Spacer–Outer	9	7	6
70–9580	Spacer–Inner	9	2	6
70–9670	Cover–Gearbox	5	7	1
70–9680	Seal–Oil	5	28	1
70–9690	Shaft–Intermediate	5	4	1
70–9710	Nut–Hex	5	18	2
70–9720	Nut–Jam	5	17	2
71–0940	Tine–Tubular	11	3	12
71–6490	Seal–Oil	5	19	2
71–6510	ASM–Lift Unit	3	10	1
71–6520	Pin–Location, Bottom	4	24	2
71–6530	Pin–Mount, Lift Arm	7	35	4
71–6540	Pin–Mount, Front	4	25	1
71–6550	Pin–Mount, Rear	4	27	1
71–6560	Cylinder–Hydraulic	4	26	1
71–6570	Shaft–Corer	5	3	1
71–6590	Lift Arm–Top	3	6	2
71–6600	Lift Arm–Bottom, LH	3	12	1
71–6610	Gasket–Cover	5	15	1
71–6620	Pin–Location, Top	4	1	2
71–6630	Bearing	8	4	4
71–6630	Bearing	4	11	4
71–6640	Kit–Seal	6	*	1
71–6690	Bearing	5	20	2
71–6700	Bearing	5	11	2
71–6710	Seal–Oil	4	10	2
71–6710	Seal–Oil	1	29	1
71–6720	Bearing	1	27	2
71–6730	ASM–Caster	1	24	1
71–6750	Spacer–Outer	1	19	2
71–6760	Support–Rim	1	14	1
71–6770	Housing–Bearing	1	28	1
71–6780	Bearing	13	4	6
71–6780	Bearing	1	17	2
71–6790	Seal–Oil	13	3	6
71–6790	Seal–Oil	1	18	2
71–6800	Shaft–Axle	1	25	1
71–6810	Disc–Plastic	1	26	1
71–6820	Cap–Retaining	1	11	1
71–6830	ASM–Hub Wheel	1	20	1
71–6840	Cap–Hub	4	16	2
71–6850	Housing–Bearing	4	13	2
71–6860	Shaft–Axle	4	9	2
71–6890	ASM–Hitch	1	4	1
71–6900	Guide–Cover, Front	4	4	4
71–6910	ASM–Extension, Stand	3	2	1
71–6940	Plate–Backing	15	9	6
71–6950	ASM–Stand, Hose	3	25	1
71–6980	Hose–Hydraulic	3	32	1
71–6990	Latch (Complete)	15	8	4
71–6990	Latch–Draw, Flexible	4	5	4
71–6990	Latch–Draw, Flexible	7	26	4
71–7010	Coupler–Hitch	1	31	1
71–7020	ASM–Adapter, Hitch	1	2	1
71–7060	Coupler–Quick	3	36	1
71–7070	Ball–Hitch	1	32	1
71–7100	Pin–Roll	9	30	12
71–7110	Stud–.50 x 130mm	11	5	24
71–7120	Stud–.50 x 150mm	10	8	24
71–7120	Stud–.50 x 150mm	12	8	24
71–7130	Bushing	13	16	6
71–7150	Plate–Upright, Gearbox	7	4	2
71–7180	Cover–Dust	7	33	6
71–7200	Gear–20 Tooth	5	2	1
71–7210	Shaft–LH	13	21	3
71–7220	Shaft–RH	13	9	3
71–7230	Ring–Clamp, Top	13	19	6
71–7240	Ring–Clamp, Bottom	13	12	6
71–7250	ASM–Roller	13	24	3
71–7270	Plate–Backing	13	8	6
71–7280	Shaft	13	23	3
71–7290	Nut–Thin	13	2	6
71–7300	Gear–30 Tooth	5	1	1
71–7310	Gear–31 Tooth	5	*	1
71–7320	Gear–32 Tooth	5	*	1
71–7330	Gear–33 Tooth	5	*	1
71–7340	Gear–34 Tooth	5	*	1
71–7350	Gear–35 Tooth	5	*	2
71–7360	Gear–36 Tooth	5	*	1
71–7370	Gear–37 Tooth	5	*	1
71–7380	Gear–38 Tooth	5	*	1
71–7390	Gear–39 Tooth	5	*	1
71–7400	Gear–40 Tooth	5	*	1
71–7450	Curtain–Lower	7	32	2
71–7460	Strap–Securing, Curtain	7	31	2
71–7470	Adjuster–LH	7	23	1
71–7480	Adjuster–RH	7	*	1
71–7490	ASM–Hose	4	28	1
71–7510	Pad–Absorber, Shock	3	18	2
71–7530	Grommet	3	14	2
72–3800	Breather	5	8	1
72–3810	Bearing	9	3	12
72–3820	Bearing	5	27	2
72–3830	Seal–Oil	13	5	6
72–3840	Seal–Oil	9	1	12
72–7960	Indicator–Oil Level	7	15	1
72–7970	Spacer–Lift Arm, Top	3	7	2
72–7980	Strap	7	13	6
72–7990	Kit–Cross & Bearing	7	40	1
72–8010	Nut–Hex.	1	34	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
72–8020	Block–Clamp, Top	13	10	6
72–8060	Bushing–Spacer, Long	9	19	6
72–8070	Bearing	9	21	12
72–8090	Bushing–Spacer, Short	9	26	6
72–8100	Crank–Bottom	9	42	6
74–0720	Tube–Manual	3	39	1
74–2960	Ring–Retaining	8	2	1
74–2990	Shim Kit	8	3	4
74–3110	Lift Arm–Bottom, RH	3	*	1
74–3200	Seal–Oil	8	1	3
76–2920	Stand–Transport	3	15	2
76–3630	Gear–Shaft, Driver	9	31	3
76–3640	Gear–Idler	9	41	6
76–3650	Gear–Crankshaft, Top	9	50	3
76–3660	Gear–Crankshaft, Bottom	9	47	3
76–3710	Coupling–Flange	14	5	2
76–3760	Plate–Mounting, Gearbox	7	3	1
77–3040	Rod–Connecting	9	22	6
77–3050	Gearbox–Rear, Bevel	7	2	1
77–3060	Screen–Outer, LH	7	10	1
77–3070	Screen–Outer, RH	7	7	1
77–3080	Screen–Inner, LH	7	9	1
77–3090	Screen–Inner, RH	7	8	1
77–4430	Spacer	8	5	1
77–4440	Shaft–Input	8	14	1
77–4450	Gear–18 Tooth	8	13	2
77–4460	Ring–Retaining	8	12	1
77–4470	Cover	8	11	1
77–4480	Shaft	8	15	1
77–4490	Plug–Oil Level/Filler	8	9	1
77–4500	Bolt–HSH	8	10	4
77–4520	Screw–HH	4	12	10
77–4560	Bearing	9	40	6
77–4660	Kit–Flange	2	*	1
77–4670	Kit–Collar	2	*	1
77–4720	Kit–Cross & Bearing	2	18	1
77–4730	Cone–Shield	2	19	1
77–4740	Ring–Bearing	2	7	2
77–4760	Chain–Safety	2	11	2
77–4790	Bearing–Support	2	9	1
77–5320	Tine–Spiker	12	6	36
82–2890	Shield–Rubber	13	14	6
82–2900	Gear–35 Tooth	5	25	1
82–3190	Ring–Retaining	9	4	12
82–3200	Timing Bar	9	53	1
82–3220	Decal	9	54	1
82–9400	Decal–Danger	3	35	1
84–5970	Cover–Front, Aerator	15	11	1
84–5980	Cover–Coring Head	15	2	1
84–6280	ASM–Yoke	2	29	1
84–6290	Fitting–Grease	2	24	1
84–6300	Yoke–Double	2	4	1
84–6310	Kit–Cross & Bearing	2	5	2
84–6330	Tube–Shield, Inner	2	10	1
84–6340	ASM–Bearing & Cone	2	25	1
84–6350	Shield–3 Rib	2	6	1
84–6360	Screw	2	23	8
84–6370	Fitting–Grease	2	21	1
84–6380	Inner Shaft & Yoke	2	22	1
84–6390	Outer Shaft & Yoke	2	20	1
86–9720	Tine–Tubular	10	4	36
92–1580	Kit–Nylon Repair	7	41	1
92–1581	Decal–Safety	7	37	1
92–1582	Decal–Safety	7	38	1
92–2410	Barrel	6	1	1
92–2411	Cap–End	6	7	1
92–2412	Piston	6	3	1
92–2413	Rod	6	9	1
92–3000	Flange–Crankshaft	9	43	12
92–3002	Shaft–Idler	9	49	6
92–3003	Cap–End	9	38	6
92–3004	ASM–Coring Frame	7	21	1
92–3005	Stud	9	36	150
92–3006	Nut–Lock	9	52	150
92–3008	Cap–Bearing	5	21	1
92–3009	Cap–Bearing	5	29	1
92–3010	Housing–Bearing	5	14	1
92–3011	Housing–Bearing	5	13	1
92–3012	O–Ring	9	44	12
92–3013	O–Ring	5	12	4
92–3013	O–Ring	9	32	6
92–7900	Tine–Open Center	10	6	36
92–7930	Outer Guard	7	43	1
92–7931	Inner Guard	7	42	1
92–7936	Decal–Outer	2	27	1
92–7937	Decal–Inner	2	26	1
92–7941	Tine–Open Center	10	5	36
92–9941	Lynch Pin & Tie	3	44	1
92–9948	Crank–Top	9	28	6
93–4696	Pin–Snapper	3	23	1
93–7734	Reinforced Collar	2	28	1
93–8770	Nut	6	2	1
94–1762	Rest–Drive Shaft	3	42	1
94–1775	Kit–Clutch, Cams & Springs	2	**	4
94–1778	ASM–Frame, Carrier	3	20	1
94–1779	ASM–Gear Case.	5	30	1
94–3419	Tine–Tubular	12	4	36
94–5309	Shaft–Tractor	5	26	1
94–9144	Drive Line (Complete)	2	*	1
94–9145	Clutch–Radial Pin	2	12	1
94–9146	Tube–Shield, Outer	2	8	1
95–3103	Block–Outer, 6–Tine	12	2	6
95–3104	Block–Bridging, 6–Tine	12	1	6
95–3105	Block–Inner, 6–Tine	12	7	12
95–3122	Shield–Drive Line	3	31	1
98–6872	Shaft–Splined	14	1	1
98–6876	Coupling–Splined	14	7	2
98–6877	Tube–Shield	14	8	1
99–5398	Seal–Oil	9	45	12
99–6873	Shaft–Splined	14	8	1
99–6874	Shaft–Splined	14	9	1
99–6875	Shaft–Splined	14	10	1
99–6878	Housing–Shaft, Drive, Open	9	35	4
99–6879	Housing–Closed	9	37	2
99–6880	Plug–Drive Gear	9	51	2
99–6882	Seal–Oil	9	34	4
217–60	Rim	1	16	1
217–117	Rim	4	20	2
231–101	Tire	4	19	2
231–119	Tire	1	15	1
232–27	Stem–Valve	4	22	2
232–35	Stem–Valve	1	21	1
237–168	O–Ring	9	39	12
2412–133	R–Clamp	3	38	2
281–1	Plug–Pipe	8	7	1
283–71	Pin–Lynch	7	36	4
283–72	Pin–Lynch	5	31	2
285–21	Plug–Pipe	7	22	1
285–21	Plug–Pipe	5	24	1
302–55	Fitting–Grease	9	5	6
302–55	Fitting–Grease	14	6	4
302–55	Fitting–Grease	3	8	3
302–55	Fitting–Grease	4	17	2
302–55	Fitting–Grease	3	21	2
302–55	Fitting–Grease	7	39	6
302–61	Fitting–Grease	13	1	6
302–61	Fitting–Grease	3	11	2
302–61	Fitting–Grease	1	13	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
321−2	Screw−HH	7	28	8
321−4	Screw−HH	15	7	12
321−9	Screw−HH	15	5	4
322−3	Screw−HH	7	12	16
322−5	Screw−HH	5	9	8
322−5	Screw−HH	7	29	10
322−5	Screw−HH	3	45	1
322−6	Screw−HH	3	24	4
323−6	Screw−HH	4	3	4
323−6	Screw−HH	3	33	3
323−7	Screw−HH	13	18	6
323−8	Screw−HH	5	16	20
323−14	Screw−HH	4	23	4
323−15	Screw−HH	3	19	2
323−35	Screw−HH	13	15	6
325−5	Screw−HH	1	7	4
325−6	Screw−HH	1	10	1
325−8	Screw−HH	1	3	4
325−8	Screw−HH	7	14	2
325−12	Screw−HH	3	40	1
325−17	Screw−HH	1	30	2
327−4	Screw−HH	7	25	4
327−14	Screw−HH	1	5	2
327−14	Screw−HH	4	7	8
3212−5	Screw−HH	1	12	4
3212−6	Screw−HH	13	11	12
3217−11	Nut−Hex.	1	6	2
3234−13	Screw−HFH	4	6	8
3253−3	Washer−Lock	7	27	8
3253−4	Washer−Lock	5	10	8
3253−4	Washer−Lock	7	11	16
3253−7	Washer−Lock	14	2	12
3253−7	Washer−Lock	1	8	4
3253−7	Washer−Lock	7	18	4
3253−11	Washer−Lock	1	33	1
3253−21	Washer−Lock	4	2	4
3256−2	Washer−Flat	7	30	10
3256−2	Washer−Flat	3	46	1
3256−22	Washer−Flat	15	4	4
3256−62	Washer−Flat	9	23	6
3256−69	Washer−Flat	7	24	4
3256−74	Washer−Flat	3	37	2
3272−23	Pin−Cotter	4	29	2
3274−4	Screw−HSH	9	29	72
3274−89	Screw−HSH	14	3	12
3289−17	Screw−HSFH	13	6	12
3296−23	Nut−Lock	1	1	6
3296−23	Nut−Lock	7	5	2
3296−23	Nut−Lock	9	12	24
3296−23	Nut−Lock	3	34	4
3296−23	Nut−Lock	3	41	1
3296−29	Nut−Lock	3	28	4
3296−29	Nut−Lock	3	43	1
3296−39	Nut−Lock	3	1	5
3296−39	Nut−Lock	13	20	12
3296−39	Nut−Lock	7	34	6
3296−56	Nut−Lock	15	10	16
3296−61	Nut−Lock	4	8	8
3296−70	Nut−Hex	3	3	2
3296−70	Nut−Hex.	1	22	1
3296−70	Nut−Lock	9	11	6
3296−70	Nut−Lock	9	24	6
32108−20	Screw−Countersink	3	17	4
32120−8	Ring−Retaining	3	4	4
32120−31	Ring−Snap	8	6	3
32120−62	Ring−Retaining	9	48	12
32121−3	Pin−Roll	1	9	1
32121−15	Pin−Roll	13	17	6
32121−34	Pin−Roll	9	8	6
32121−34	Pin−Roll	4	18	2
32151−88	Ring−Retaining	9	20	24
354−33	ASM−Fitting, Bulkhead	3	27	1

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Fairway Aerator has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame. In any correspondence concerning the Fairwar Aerator, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:
1. Model and serial number of the Fairway Aerator.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page
Hitch & Front Wheel Assembly	1
Drive Line Assembly	2
Chassis Assembly	3
Rear Wheel Assembly	4
Front Gear Box Assembly	5
Hydraulic Cylinder Assembly No. 71–6560	6
Corer & Shield Assembly	7
Gear Box Assembly No. 77–3050	8
Corer Gear Case & Stomper Arm Assembly	9
6–Tine Blocks & .75 Diameter Tine Selection	10
2–Tine Blocks & Tine Selection	11
6–Tine Blocks & Tine Selection	12
Roller & Finger Plate Assembly	13
Drive Line Assembly	14
Aerator & Coring Head Covers	15
Numerical Parts Index	16–18

MAINTENANCE RECORD

Date								