
FORM NO. 3322−154

TORO®

MODEL NO. 03422−90001 & UP
MODEL NO. 03422TE−90001 & UP
MODEL NO. 03427−90001 & UP
MODEL NO. 03427TE−90001 & UP
MODEL NO. 03471
MODEL NO. 03472

PARTS CATALOG

REELMASTER® 2300D/2600D
TRACTION UNIT

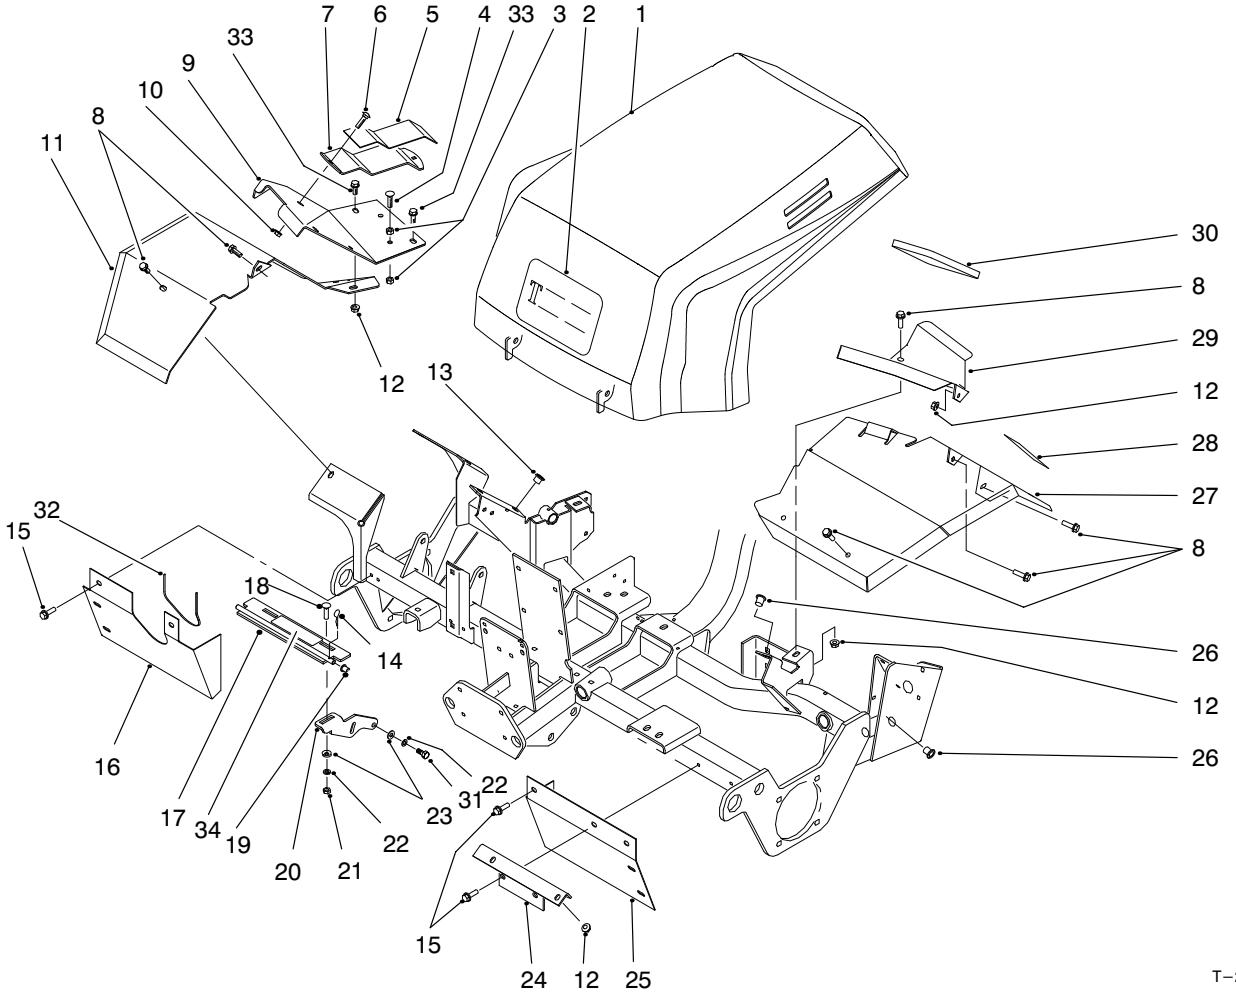

T−2150−5


HOOD & FENDER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94−3622	Asm−Hood (Incl. Ref. #2)	1
2	62−7400	Decal−Toro	1
3	32128−20	Nut−Lock, Flange, Whiz	2
4	3230−27	Screw−Carriage	1
5	76−2260	Pad−Footrest	1
6	3229−1	Bolt−Carriage	2
7	76−2200	Footrest−Traction Pedal	1
8	3234−5	Screw−Flange	10
9	93−6779	Footrest−RH	1
10	32128−33	Nut−Lock Flange	2
11	93−6778	Fender−Right	1
12	32128−44	Nut−Flange, Lrg	12
13	32148−7	Nut−Clinch	3
14	3290−467	Pin−Cotter, Hair	1
15	32104−82	Screw−HWH	5
16	93−6858	Shield−Front RH	1
17	93−6780	Hinge	1
18	3230−23	Screw−Carriage	2
19	256−320	Bushing	2
20	93−6742	Bracket−Hood Pivot	2
21	3217−6	Nut−Hex,	2
22	3253−4	Washer−Spring Lock	6
23	3256−23	Washer−Flat	6
24	83−8510	Bracket−Left Fender	1
25	83−9800	Shield−Front Grass LH	1
26	32148−8	Nut−Clinch	1
27	93−6776	Fender−LH	1
28	93−7267	Decal−Brake	1
*	84−6860	Decal−Brake (Japan)	1
29	83−9710	Footrest−LH	1
30	83−9840	Pad−Foot	1
31	322−3	Screw−HH	4
32	93−6927	Trim	1
33	3234−17	Screw − Hex. Head	4
34	94−5056	Decal − Instructions	1

* Not Illustrated

© The TORO Company − 1998
All Rights Reserved

TPS

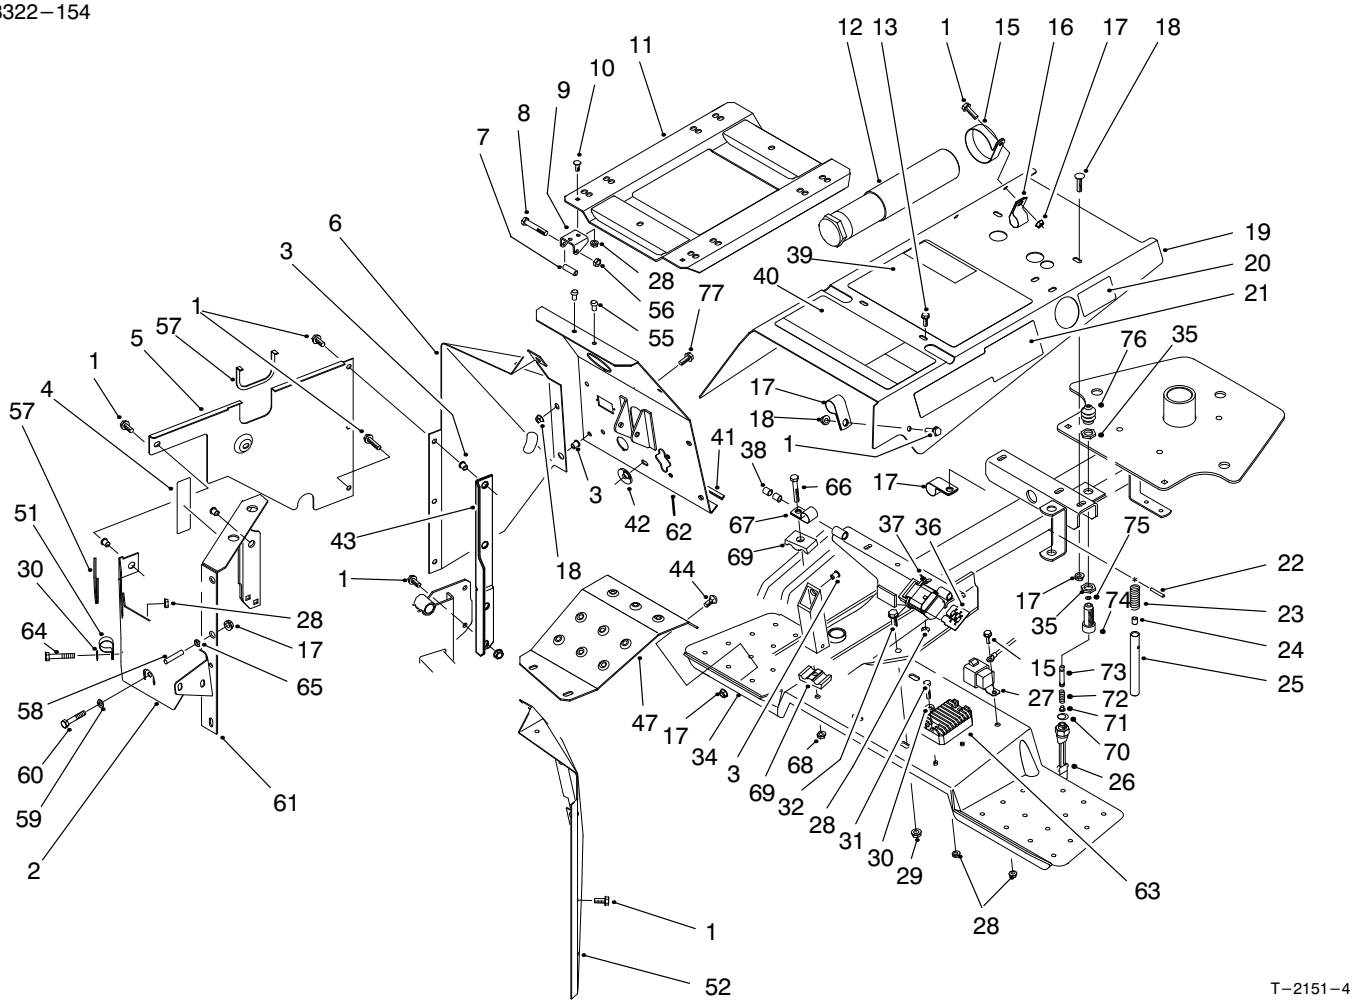


SKIRT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3234−5	Screw−Flange	17
2	93−6847	Panel−Left Front	1
3	32148−7	Nut−Clinch	6
4	67−5360	Decal−Danger	1
*	93−7273	Decal−Danger (Europe)	1
*	84−7280	Decal−Danger (Japan)	1
5	93−6846	Panel−Right Front	1
6	83−8120	Panel−Right Rear	1
7	85−5340	Tube−Seat Pivot	2
8	321−11	Screw−HH	2
9	85−5230	Bracket−Seat Pivot	2
10	3229−11	Screw−Carriage	2
11	85−5330	Asm−Seat Plate	1
12	74−0720	Tube−Manual	1
13	3234−4	Screw−HH	3
15	2412−133	Clamp−R	2
16	2412−39	Clamp−R	3
17	32128−44	Nut−Flange	11
18	3230−2	Bolt−Carriage	2
19	94−3632	Asm−Skirt (Incl. Ref. #20, 21, 39 & 40)	1
20	93−7270	Decal−Control (Model No. 03427 Only)	1
*	84−6960	Decal−Control (Japan) (Model No. 03427 Only)	1
21	93−6761	Decal−Reelmaster 2300D	2
*	94−5070	Decal−Reelmaster 2600D	2

Ref. No.	Part No.	Description	No. Used
22	32121−6	Pin−Roll	1
23	37−9590	Spring−Compression	1
24	28−6180	Pin−Plastic	1
25	27−9870	Pin−Seat Switch	1
26	72−4320	Switch − Seat	1
27	70−1480	Relay	1
28	32128−33	Nut−Lock Flange	6
29	32128−43	Nut−Whiz Flange	4
30	3256−22	Washer−Flat	3
31	321−8	Screw−HH	2
32	3234−11	Screw−Flange	4
34	93−6868	Asm−Footstep	1
35	218−461	Nut−HH	2
36	92−3188	Diode−Circuit Board	1
37	3290−379	Tie−Cable	1
38	256−321	Bushing	4
39	93−6903	Decal−Service	1
*	94−2595	Decal−Service (Italian)	1
*	94−1247	Decal−Service (Swedish)	1
*	94−2594	Decal−Service (German)	1
*	94−2599	Decal−Service (Spanish)	1
*	94−2593	Decal−Service (French)	1
*	94−2590	Decal−Service (Danish)	1
*	94−2591	Decal−Service (Dutch)	1
*	94−2592	Decal−Service (Finnish)	1
*	94−2597	Decal−Service (Norwegian)	1

*Not Illustrated

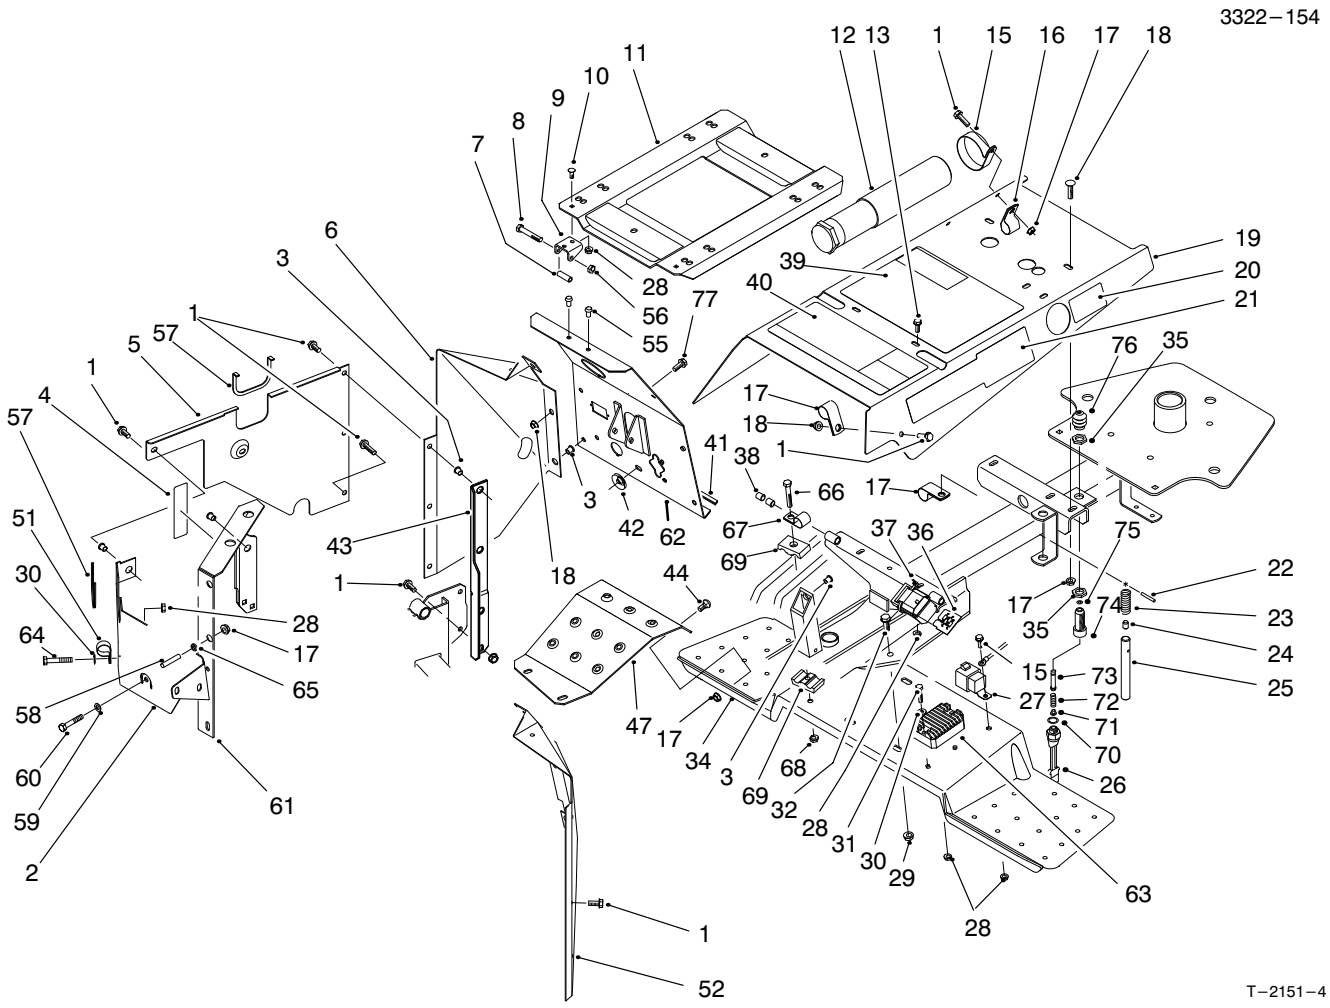


SKIRT ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
39	94–2598	Decal–Service (Portuguese)	1
*	94–2596	Decal–Service (Japan)	1
40	83–9550	Decal–Warning	1
*	93–7271	Decal–Warning (Europe)	1
*	84–7080	Decal–Warning (Japan)	1
41	76–6471	Trim	1
42	62–7170	Spacer	1
43	94–3694	Angle–Right	1
44	3230–1	Bolt–Carriage	1
47	93–6938	Panel–Foot	1
51	2412–106	Clamp–R	1
52	93–6732	Panel–Left Rear	1
55	237–37	Bumper–Rubber	2
56	3296–42	Nut–Hex Lock	2
57	93–6924	Trim	2
58	93–6908	Spacer–Split	1
59	3256–23	Washer–Flat	1
60	322–23	Screw–Hex. Hd.	1
61	94–3633	Asm–U–Bracket Support (Incl. Ref. #4)	1
62	94–3691	Panel–Instrument	1

Ref. No.	Part No.	Description	No. Used
†63	185516061	Regulator	1
64	321–3	Screw–HH	1
65	87–8640	Washer–Flat	1
66	322–9	Screw–Hex. Flange Hd. (Model No. 03427 Only)	1
*	3234–5	Screw–Hex. Flange Hd. (Model No. 03422 Only)	1
67	2412–104	Clamp–R	1
68	3296–29	Nut–Lock	1
69	56–7976	Clamp–Tube (Model No. 03427 Only)	2
70	237–30	O–Ring	1
71	43–8610	Guide–Spring	1
72	43–8600	Spring–Compression	1
73	43–8860	Plunger–Switch	1
74	43–8620	Guide–Pin	1
75	237–7	O–Ring	1
76	43–8870	Boot–Switch	1
77	3234–17	Screw–HFH	1
*	43–9071	Asm–Switch, Limit (Incl. Ref. #26, 35 & 70–67)	1

*Not Illustrated
†Obtain from your Local Perkins Dealer

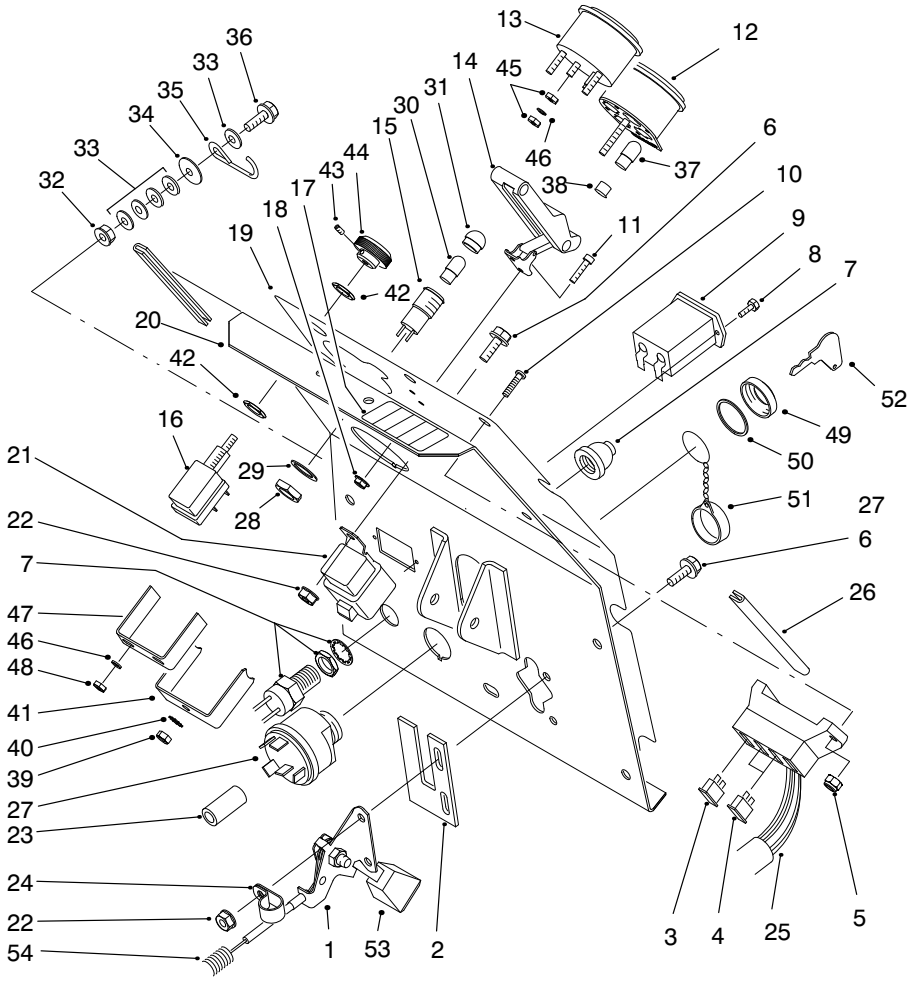

T−2155−5


INSTRUMENT PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93−6816	Control−Throttle (Incl. Ref. # 53)	1
2	93−6743	Stop−Throttle	1
3	218−594	Fuse−20 Amp	1
4	218−578	Fuse−10 Amp	2
5	3296−2	Nut−Lock	2
6	3234−4	Screw−HH	3
7	93−6762	Switch−Push Button	1
8	32144−18	Screw−HWH	2
9	75−6820	Hour Meter	1
10	3250−13	Screw−Pan Hd	2
11	3274−90	Screw−Hex Socket	2
12	92−9775	Warning Light Cluster (Incl. Ref. #37−41)	1
13	93−4411	Gauge−Temperature (Incl. Ref. #45−48)	1
14	80−6980	Asm−Soft Latch	1
15	44−2212	Asm−Indicator Light (Incl. Ref. #28−31)	1
16	92−3194	Switch−Push/Pull (Incl. Ref. #42−44)	1
17	93−6902	Decal−Fuse Block	1
*	94−3352	Decal−Fuse Block (Europe)	1
*	94−2948	Decal−Fuse Block (Japan)	1
18	32149−9	Nut−Flange	2
19	94−4985	Decal−Instrument Panel	1

Ref. No.	Part No.	Description	No. Used
19	94−3351	Decal−Instrument Panel (Europe)	1
*	94−3350	Decal−Instrument Panel (Japan)	1
20	94−3691	Instrument Panel	1
21	70−1480	Relay	1
22	32128−33	Nut−Lock Flange	3
23	80−7345	Hose	1
24	2412−39	Clamp−R	1
25	94−3692	Asm−Wire Harness (Incl. Ref. #3 & 4)	1
26	93−6941	Trim	2
†27	385201160	Asm−Ignition Switch (Incl. Ref. #49−50)	1
28	218−535	Nut−Hex.	1
29	218−536	Washer−Flat	1
30	219−18	Bulb−Light	1
31	218−562	Lens−Light	1
32	32128−44	Nut−Flange (Europe)	1
33	3256−2	Washer−Flat (Europe)	5
34	3256−4	Washer−Flat (Europe)	1
35	93−7726	Hook (Europe)	1
36	32122−35	Screw−Machine (Europe)	1
37	219−17	Bulb	4
38	87−6270	Socket−Light	4
39	3217−26	Nut	1

*Not Illustrated

†Obtain from your local Perkins Dealer.

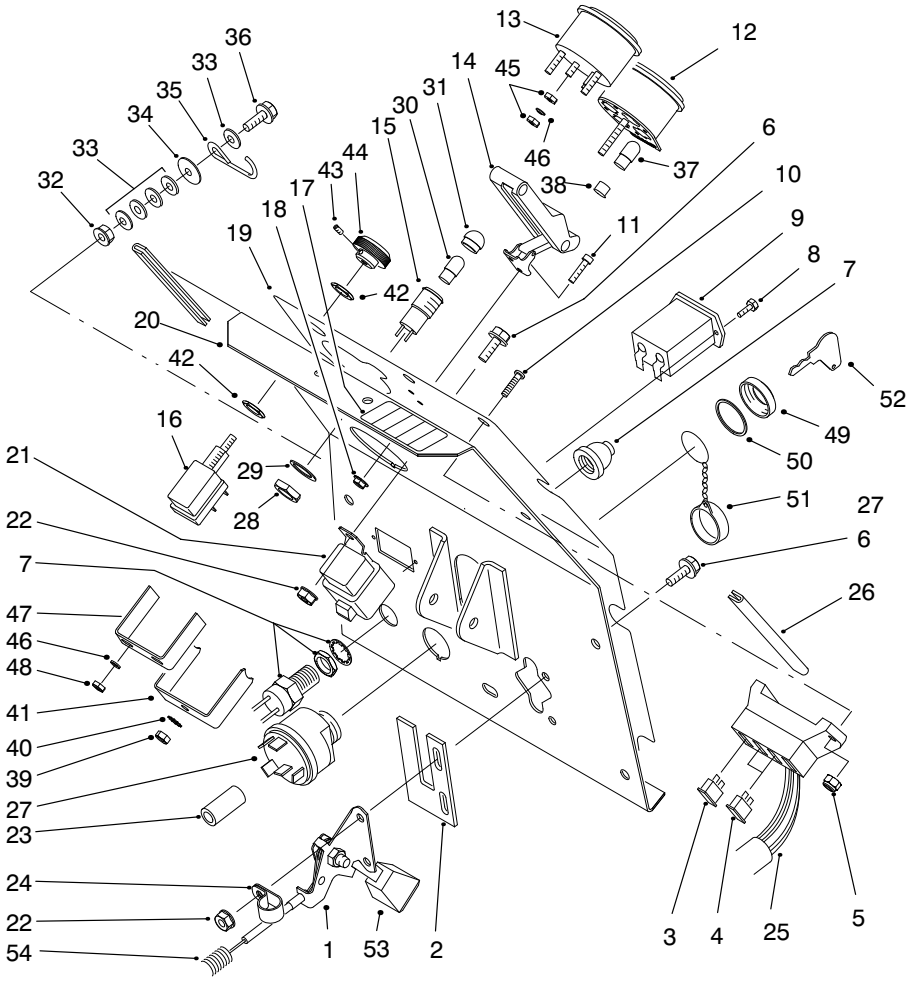

T–2155–5


INSTRUMENT PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
40	3254–1	Washer–Lock	1
41		Clamp–Mounting	1
42	3218–19	Nut–Hex.	2
43	3298–8	Screw–Set	1
44	92–3195	Knob	1
45	3217–29	Nut–Hex.	6
46	3253–2	Washer–Lock	5
47		Clamp–Guage	1


Ref. No.	Part No.	Description	No. Used
48	3217–27	Nut–Hex.	2
†49		Nut–Retaining	1
†50	390190030	Seal–Switch	1
†51	385800010	Cover–Switch	1
52	85–5270	Key–Switch, Start	2
53	66–0120	Knob–Control	1
54	98–7393	Conduit–Convoluted	1

†Obtain from your local Perkins Dealer.

ELECTRICAL SCHEMATIC

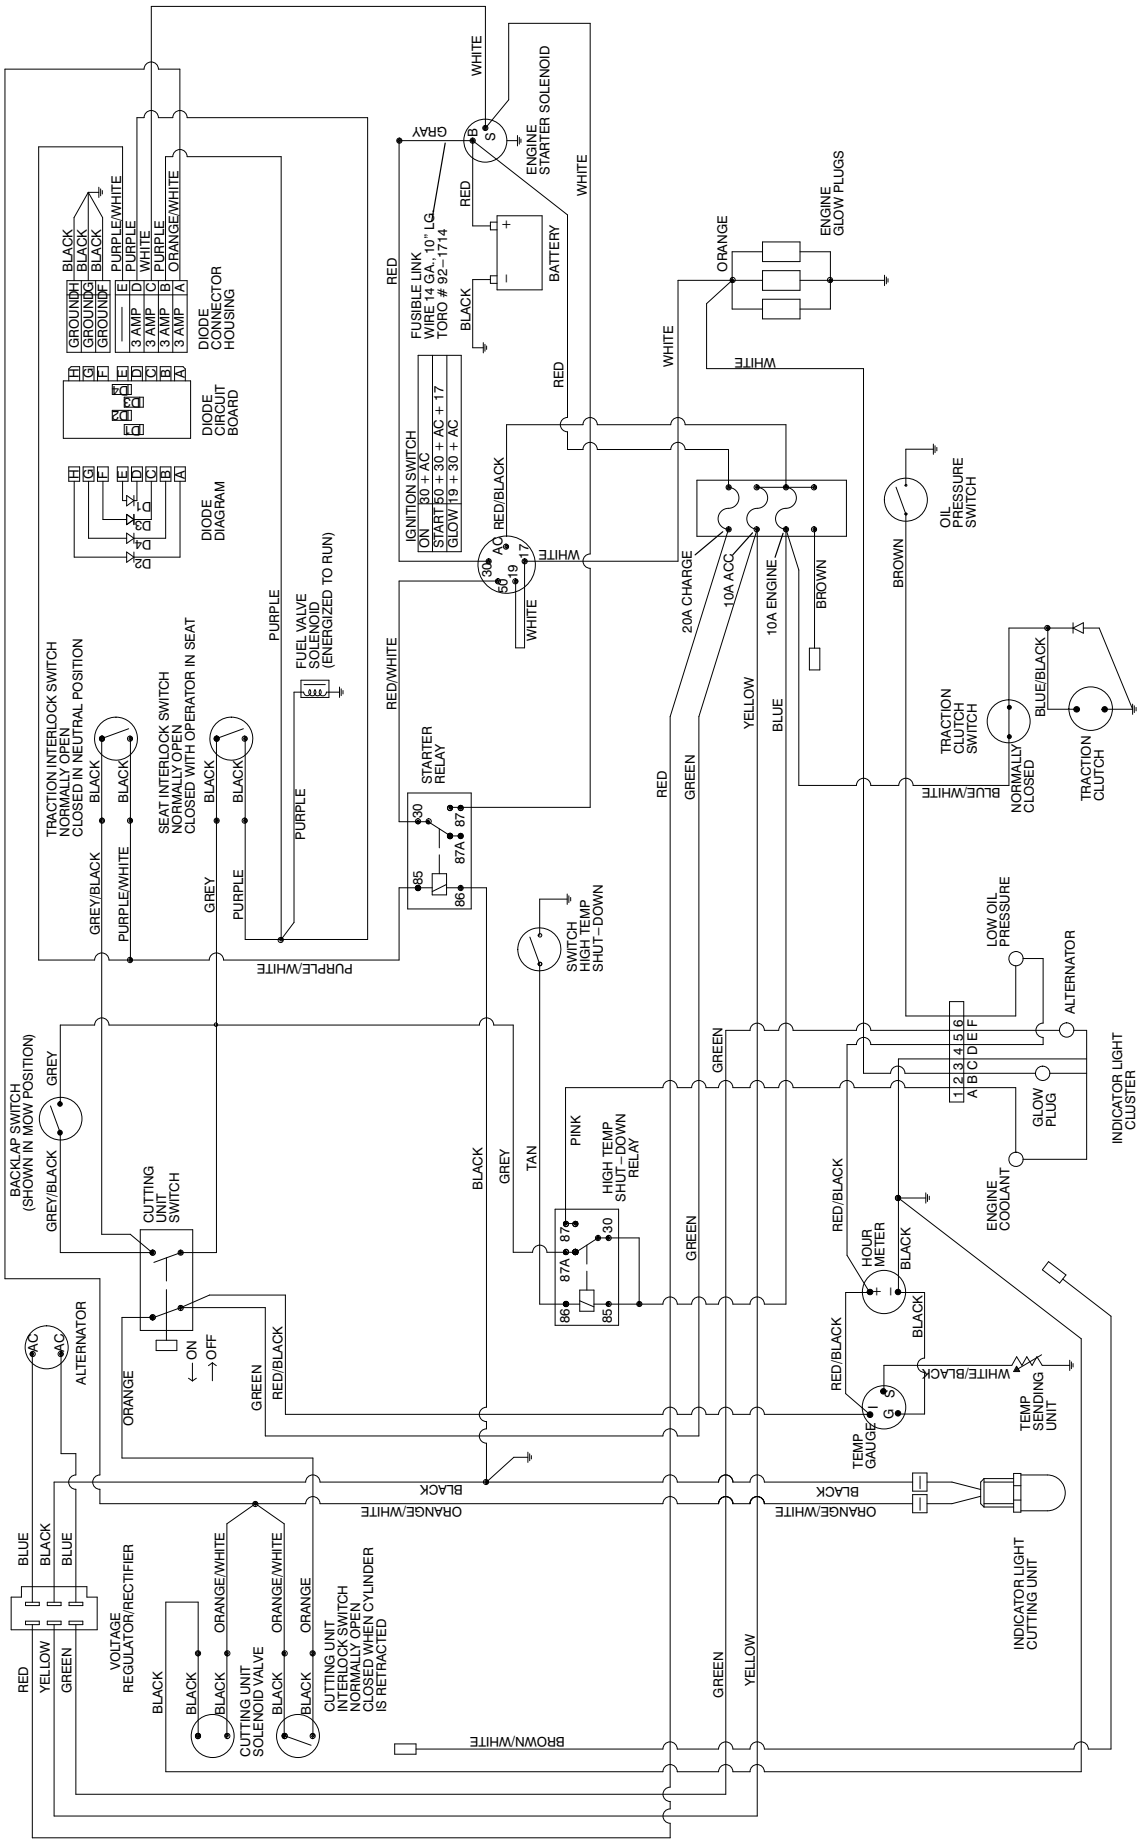

T−2213−3

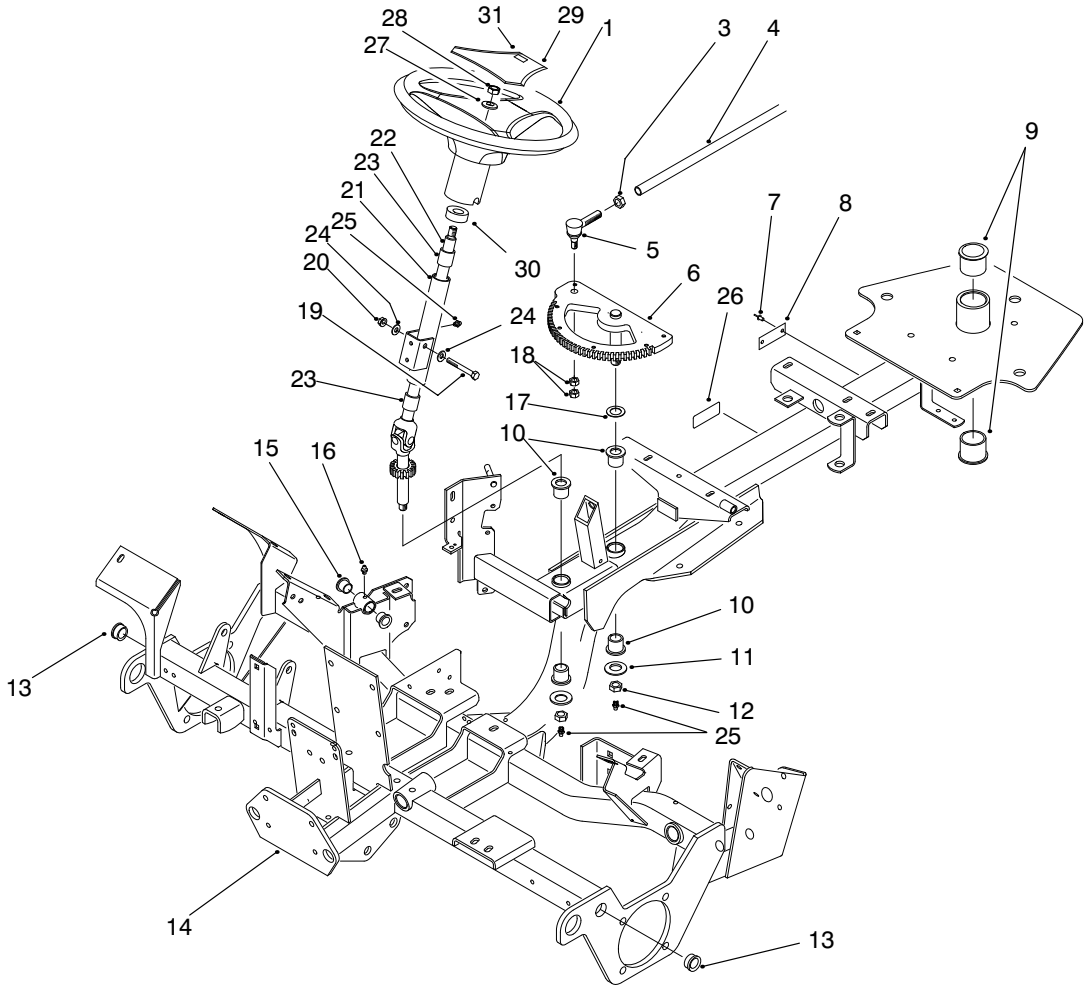


T−2153−6

FRAME & STEERING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	98−1471	Asm−Steering Wheel (Incl. Ref. #29)	1
3	3220−5	Nut−Hex Jam	1
4	61−2070	Tube−Steering	1
5	21−0150	Asm−Socket, LH	1
6	93−6768	Gear−Sector	1
7	3290−55	Rivet−Pop	2
8		Plate−Serial Number	1
9	256−245	Bushing	2
10	92−3162	Bushing−Flange	4
11	3256−27	Washer−Flat	2
12	3296−33	Nut−Lock Nylon	2
13	256−247	Bushing−Flange	2
14	94−5114	Asm−Frame (Incl. Ref. #9−10, 13, 15 & 16)	1
15	75−2160	Bushing−Flange	2
16	302−60	Fitting−Lube	1
17	3−6498	Washer−Thrust	A/R
18	3220−3	Nut−HJ	2
19	322−12	Screw HH	1
20	3296−29	Nut−Hex. Lock	1
21	93−6769	Steering Column	1
22	94−5969	Steering Shaft & Gear	1
23	256−27	Bushing	2
24	87−8640	Washer−Flat, Hardened	2
25	302−5	Fitting−Grease	3
26	93−7252	Decal−CE Mark (Europe)	1
27	3256−26	Washer−Flat	1
28	3296−25	Nut−Lock	1
29	98−1468	Cover−Steering Wheel	1
30	21−9260	Cover−Dust	1
31	98−1459	Decal−Toro	1


3322−154

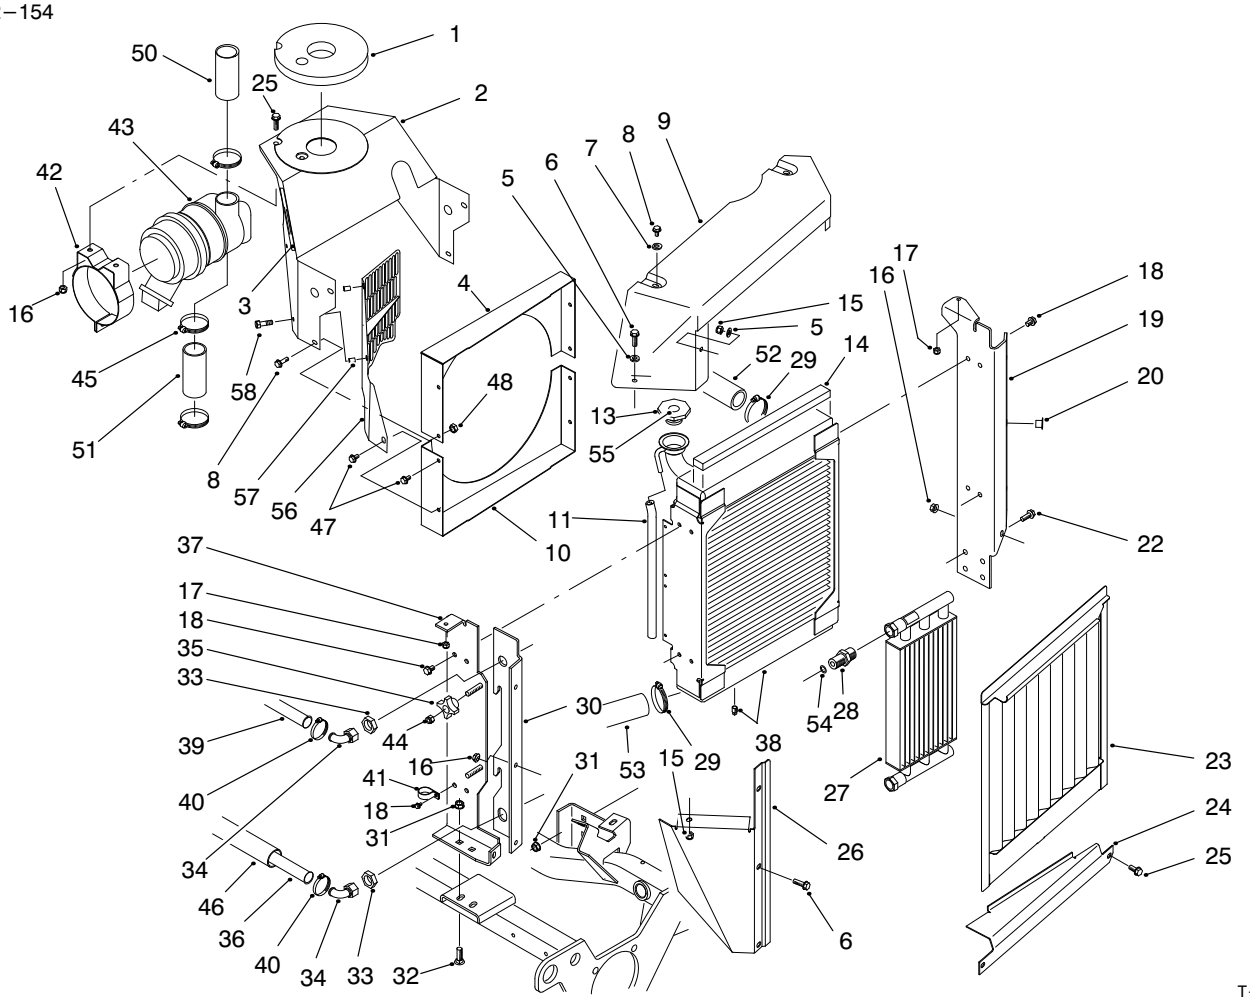

RADIATOR & AIR CLEANER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93−6877	Foam−Seal	1
2	94−3634	Asm−Air Cleaner Housing (Incl. Ref. #3)	1
3	77−3100	Decal−Caution	1
*	93−7272	Decal−Caution (Europe)	1
*	84−6760	Decal−Caution (Japan)	1
4	93−6731	Shroud−Radiator Top	1
5	3256−23	Washer−Flat	2
6	3234−17	Screw−HH	4
7	3256−22	Washer−Flat	2
8	3234−4	Screw−HH	4
9	83−8040	Cover−Left	1
10	93−6730	Shroud−Radiator Bottom	1
11	71−3382	Hose	1
13	66−3240	Cap−Radiator	1
14	83−9030	Foam−Top	1
15	3296−29	Nut−Hex. Lock	2
16	32128−44	Nut−Flange	6
17	3296−42	Nut−Hex. Lock	2
18	3234−28	Screw−HH	8
19	83−7980	Bracket−Radiator Rear	1
20	32148−8	Nut−Clinch	3
22	323−6	Screw−HH	4
23	83−8150	Asm−Screen	1
24	83−8070	Shield−Radiator Bottom	1
25	3234−5	Screw−Flange	4
26	83−8210	Panel−Left Front	1

Ref. No.	Part No.	Description	No. Used
27	93−6932	Exchanger−Heat	1
28	83−7970	Fitting−Hydraulic (Incl. Ref. #54)	2
29	2412−34	Clamp−Hose	2
30	88−6730	Bracket−Screen Front	1
31	32128−43	Nut−Whiz Flange	6
32	3231−22	Bolt−Carriage	2
33	340−127	Nut−Bulkhead ORS	2
34	93−6803	Fitting−90°	2
35	93−7159	Knob	2
36	93−6804	Hose	1
37	88−6720	Radiator Bracket	1
38	93−6726	Asm−Radiator	1
39	93−6805	Hose	1
40	2412−36	Clamp−Hose	2
41	2412−41	Clamp−R	1
42	93−2191	Asm−Clamp	1
43	93−2190	Asm−Air Cleaner	1
45	2412−92	Clamp−Hose	3
46	93−6933	Sleeve−Protective	1
47	32104−116	Screw−HFH	6
48	32128−33	Nut−Lock Flange	2
50	93−6876	Hose−Air Inlet Upper	1
51	93−6724	Hose−Air Inlet Lower	1
52	93−6728	Hose−Radiator Upper	1
53	93−6729	Hose−Radiator Lower	1
54	237−30	O−Ring	2

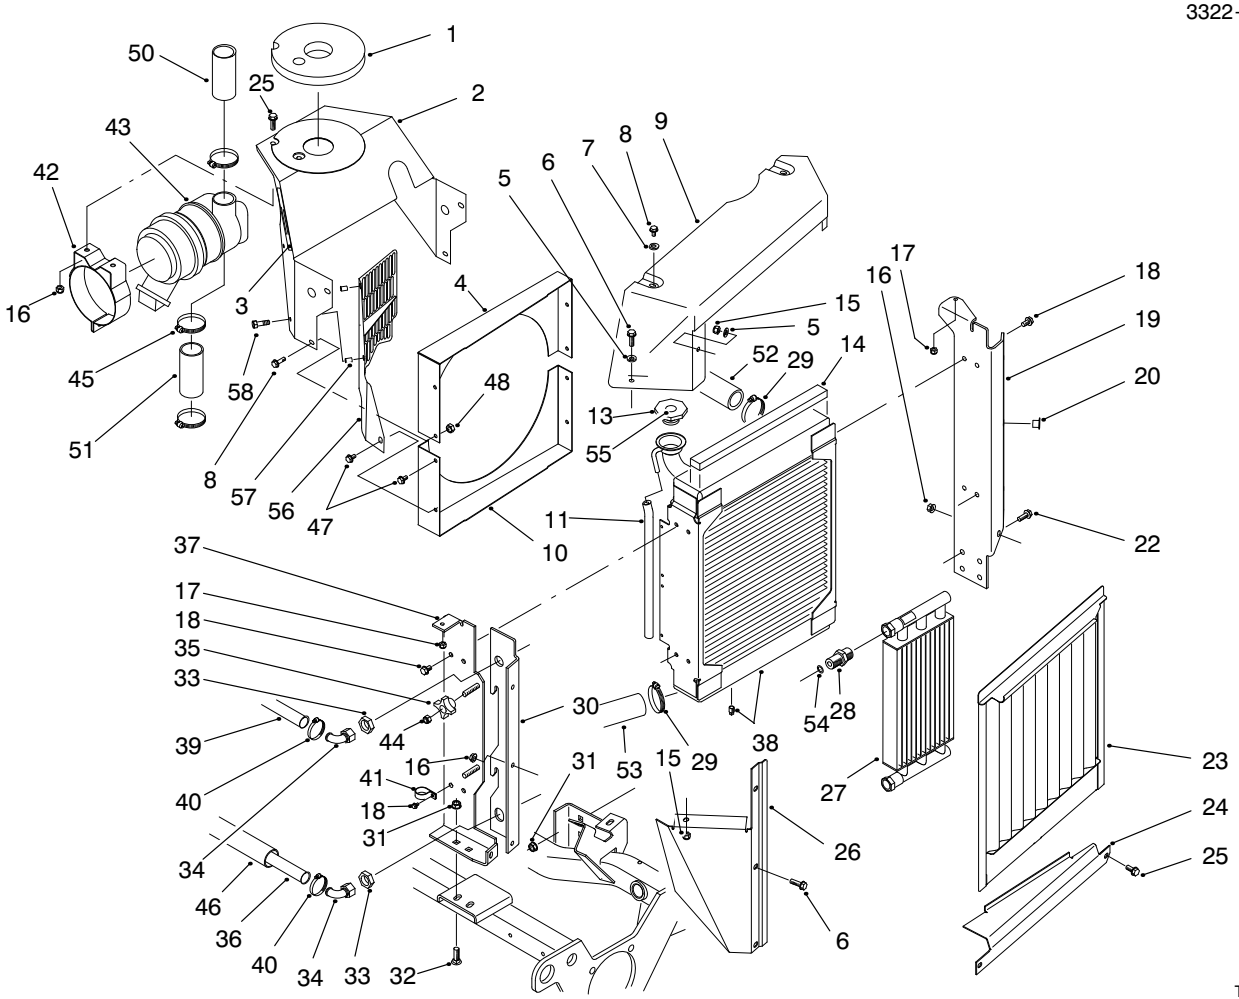


T−2157−2

RADIATOR & AIR CLEANER ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
55	93−7840	Decal−Radiator Cap (Europe)	1
56	94−3665	Asm−Guard (Europe)	1

Ref. No.	Part No.	Description	No. Used
57	32148−6	Insert−Threaded (Europe)	2
58	3234−4	Screw−HH (Europe)	2

3322−154

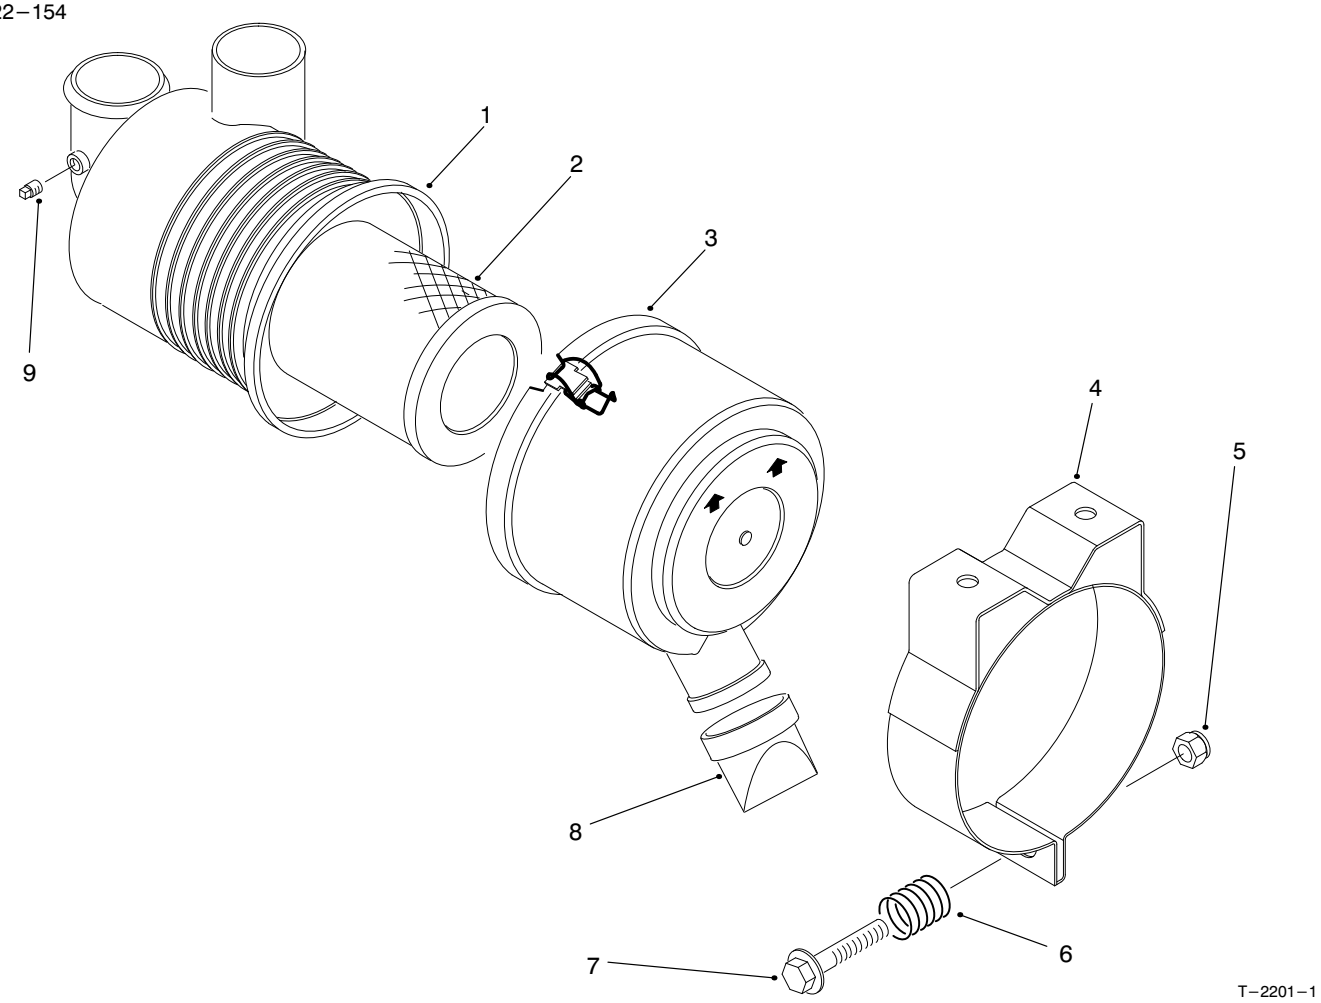


T−2201−1

AIR CLEANER & CLAMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
†1		Body−Air Cleaner	1
2	93−2195	Element−Air Cleaner	1
3	94−3652	Asm−Cover	1
4	93−2191	Asm−Clamp (Incl. Ref. #5−7)	1
5	48−9510	Nut−Lock	1
6	94−3654	Spring−Compression	1
7	94−3653	Bolt	1
8	87−9400	Valve	1
9	285−17	Plug	1
*	93−2190	Asm−Air Cleaner (Incl. Ref. #1−3, 8 & 9)	1

*Not Illustrated
†Not Serviced Separately

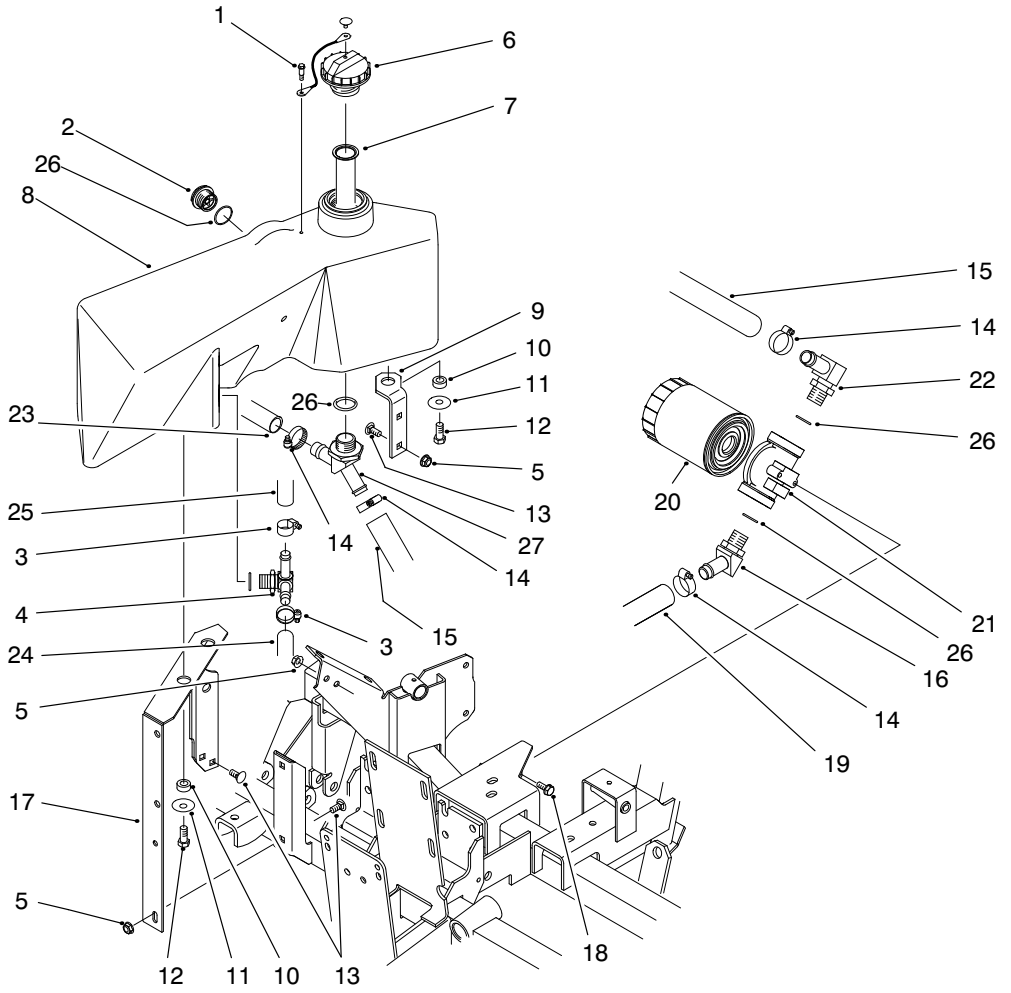


T−2159−1

HYDRAULIC RESERVOIR & FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	57−5420	Screw−Shoulder	1
2	69−1170	Glass−Sight (Incl. Ref. #26)	1
3	2412−36	Clamp−Hose	2
4	93−6793	Fitting−Barb	1
5	32128−44	Nut−Flange	6
6	93−7160	Asm−Oil Cap	1
7	61−2790	Filler−Screen	1
8	93−6811	Tank−Hydraulic	1
9	83−9920	Bracket−Hydraulic Tank	1
10	240−11	Grommet	3
11	63−8410	Washer−Flat	3
12	323−5	Screw−HH	3
13	3230−23	Screw−Carriage	6
14	2412−34	Clamp−Hose	4
15	83−9651	Hose−Hydraulic	1

Ref. No.	Part No.	Description	No. Used
16	354−127	Fitting−45° (Incl. Ref. #26)	1
17	94−3633	U−Bracket Support	1
18	3234−33	Screw−HH	2
19	93−6799	Hose−Hydraulic	1
20	54−0110	Element−Oil Filter	1
21	68−8990	Head−Oil Filter	1
22	353−987	Fitting−90° (Incl. Ref. #26)	1
23	93−6857	Hose−Hydraulic	1
24	93−6804	Hose−Hydraulic	1
25	93−6806	Hose−Hydraulic	1
26	237−81	O−Ring	4
27	93−6794	Fitting−Special (Incl. Ref. #26)	1


3322−154

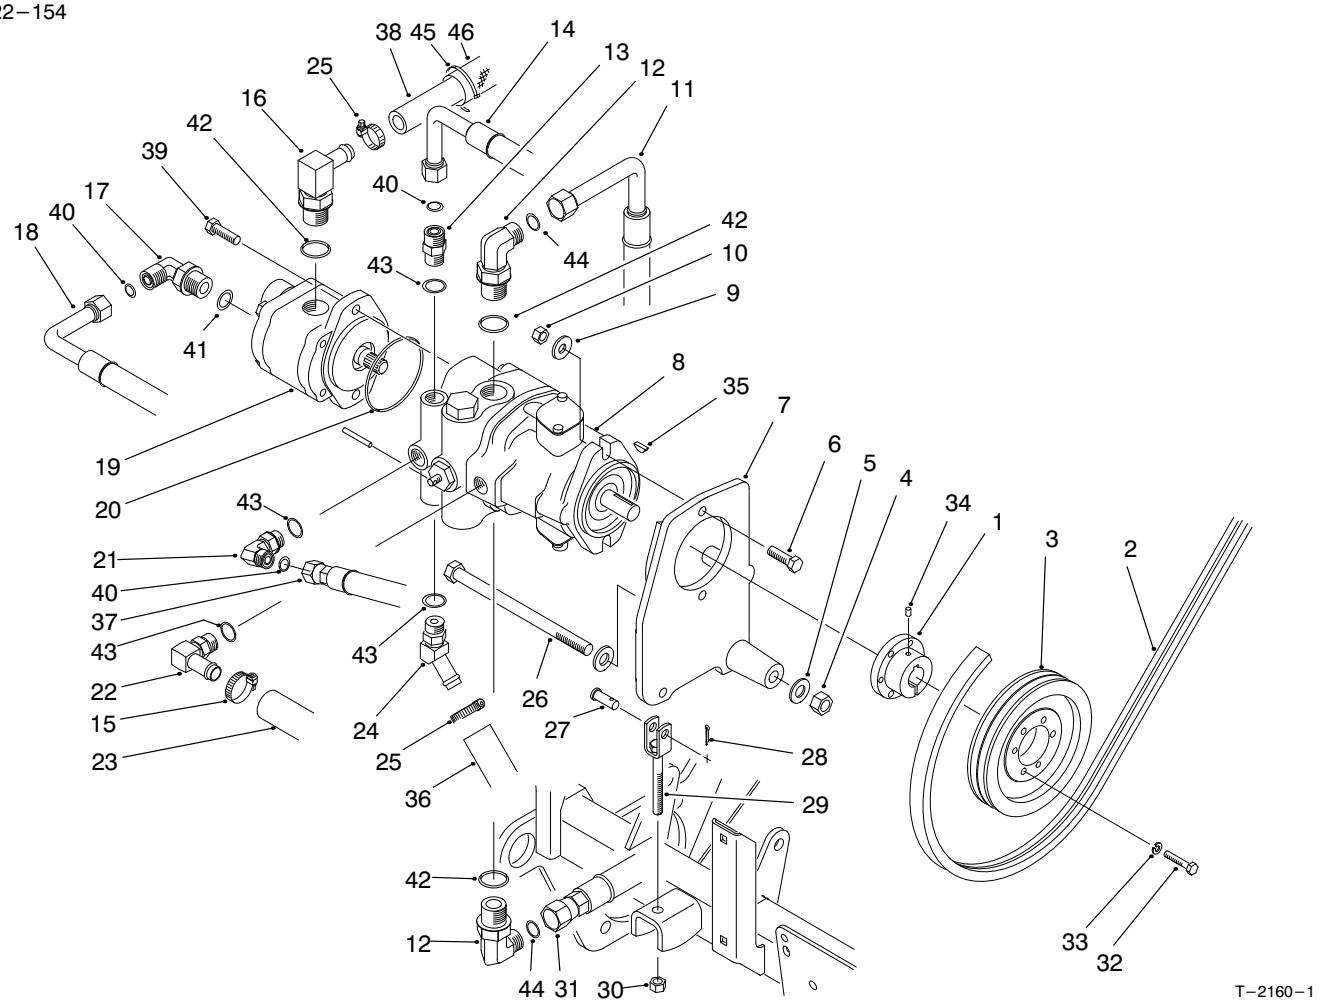

HYDRAULIC PUMP INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93−6842	Asm−Taper Lock Bushing (Incl. Ref. #32−34)	1
2	93−6840	Belt−Pump Drive	1
3	93−6841	Pulley	1
4	3296−23	Nut−Hex. Lock	1
5	87−7270	Washer−Hardened	2
6	323−9	Screw−HH	2
7	93−6737	Pump Mount Mach	1
8	93−6751	Asm−Pump (Incl. Ref. #35)	1
9	80−6990	Washer−Hardened	2
10	3296−39	Nut−Hex. Lock	2
11	93−6829	Asm−Hose	1
12	340−139	Elbow−90° (Incl. Ref. #42 & 44)	2
13	340−4	Fitting−ORS (Incl. Ref. #40 & 43)	1
14	93−6797	Asm−Hose	1
15	2412−36	Clamp−Hose	1
16	353−987	Fitting−90° (Incl. Ref. #42)	1
17	340−105	Elbow (Incl. Ref. #40−41)	1
18	93−6800	Hose−Hyd	1
19	99−6131	Pump−Reel Drive	1
20	353−949	O−Ring	1
21	340−98	Fitting (Incl. Ref. #40 & 43)	1

Ref. No.	Part No.	Description	No. Used
22	93−6795	Fitting−90° (Incl. Ref. #43)	1
23	93−6806	Hose	1
24	93−6848	Fitting−Barb 45° (Incl. Ref. #43)	1
25	2412−34	Clamp−Hose	2
26	325−36	Screw−HH	1
27	283−2	Pin−Clevis	1
28	3272−6	Pin−Cotter	1
29	93−6845	Yoke−Belt Adjust	1
30	3296−6	Nut−Lock	1
31	93−6828	Asm−Hose	1
32	321−13	Screw−Hex. Hd.	3
33	3253−3	Washer−Lock	3
34	3245−36	Screw−Set	1
35	94−3645	Key	1
36	93−6799	Hose−Hydraulic	1
37	93−6798	Hose−Hydraulic	1
38	93−6857	Hose−Hydraulic	1
39	323−7	Screw−HH	2
40	237−30	O−Ring	3
41	237−80	O−Ring	1
42	237−81	O−Ring	3
43	237−79	O−Ring	4
44	237−65	O−Ring	2
45	3290−379	Tie−Cable	2
46	94−3688	Sleeve−Protective	1

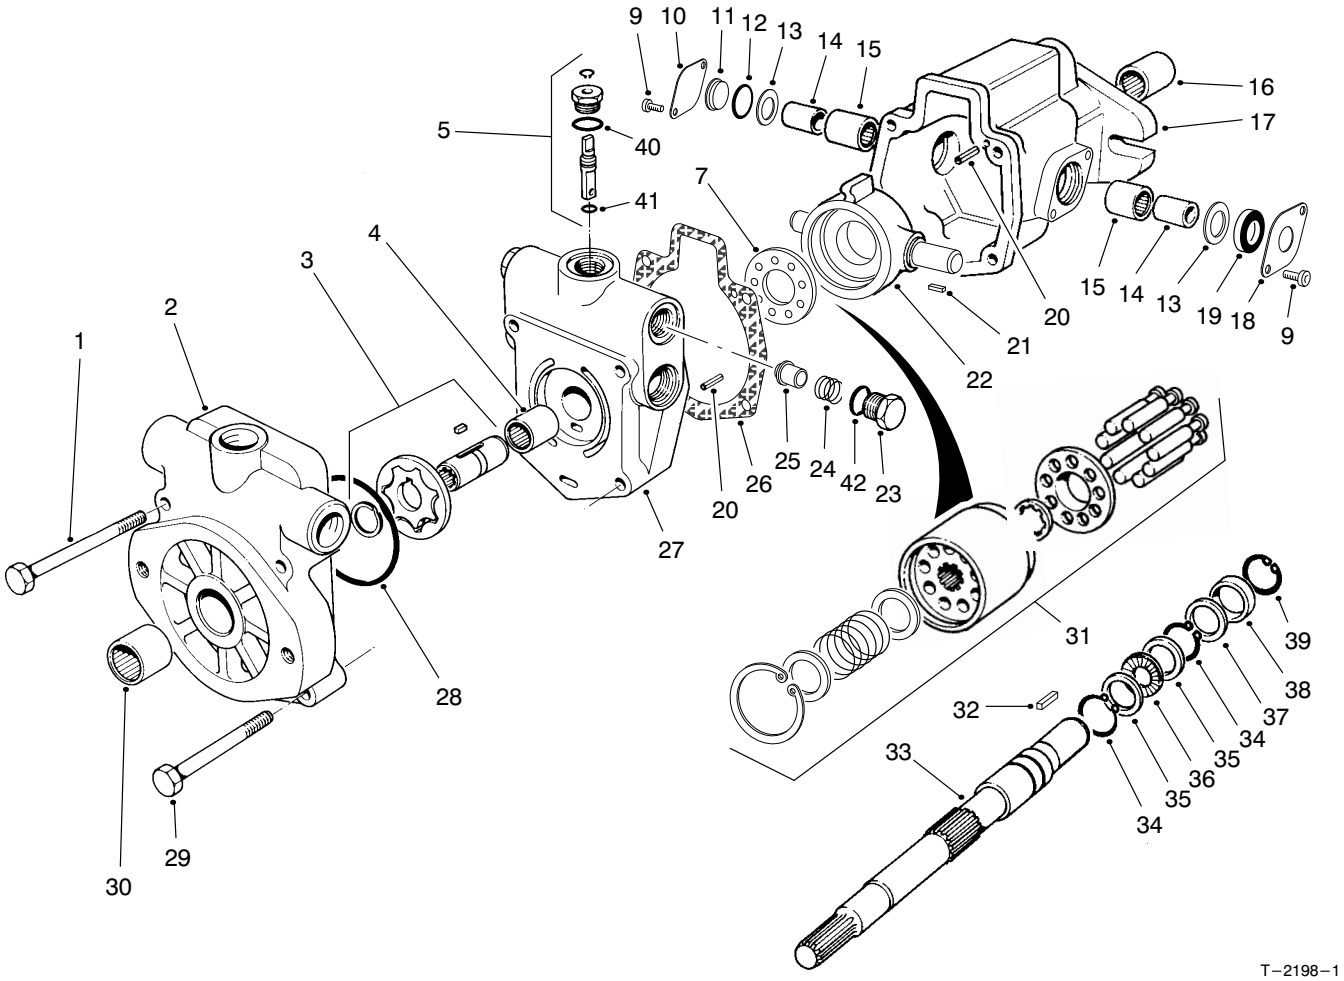

T–2198–1


HYDRAULIC PUMP ASSEMBLY NO. 93–6751

Ref. No.	Part No.	Description	No. Used
1	322–3	Screw–Hex. Hd.	2
2	94–3647	Asm–Charge Pump Adaptor (Incl. Ref. #30)	1
3	94–3648	Asm–Gerotor	1
4		Bearing	1
5	94–3650	Asm–Valve	1
7	94–3649	Plate–Valve	1
9	60–6330	Screw–Pan Hd.	4
10	76–6090	Cover–Trunnion	1
11	76–6100	Cover	1
12	76–6140	O–Ring	1
13	76–6180	Washer	2
14	33–3750	Race–Inner	2
15	252–95	Bearing	2
16		Bearing	1
17	94–3641	Asm–Housing (Incl. Ref. #16)	1
18	76–6080	Cover–Seal	1
19	76–6190	Seal–Shaft	1
20	76–6150	Pin–Dowel	2
21	94–3646	Key	1
22	94–3643	Camplate	1
23	70–1240	Asm–Plug (Incl. Ref. #42)	2

Ref. No.	Part No.	Description	No. Used
24	76–6200	Spring	2
25	94–3644	Seat	2
26	33–4930	Gasket	1
27	94–3640	Asm–Backplate (Incl. Ref. #4 & 20)	1
28		O–Ring	1
29	322–20	Screw–Hex. Hd.	2
30		Bearing	1
31	76–6070	Kit–Rotating Parts	1
32	94–3645	Key	1
33	94–3642	Shaft–Drive	1
34	32151–29	Ring–Retaining	2
35	252–71	Race–Bearing	2
36	252–66	Bearing–Thrust	1
37	33–3270	Washer	1
38	42–2720	Seal–Shaft	1
39	32151–13	Ring–Retaining	1
40		O–Ring	1
41		O–Ring	1
42		O–Ring	2
*	94–3651	Kit–Seal (Incl. Ref. #12, 19, 26, 28, 34, 38 & 39–42)	1

*Not Illustrated


3322−154

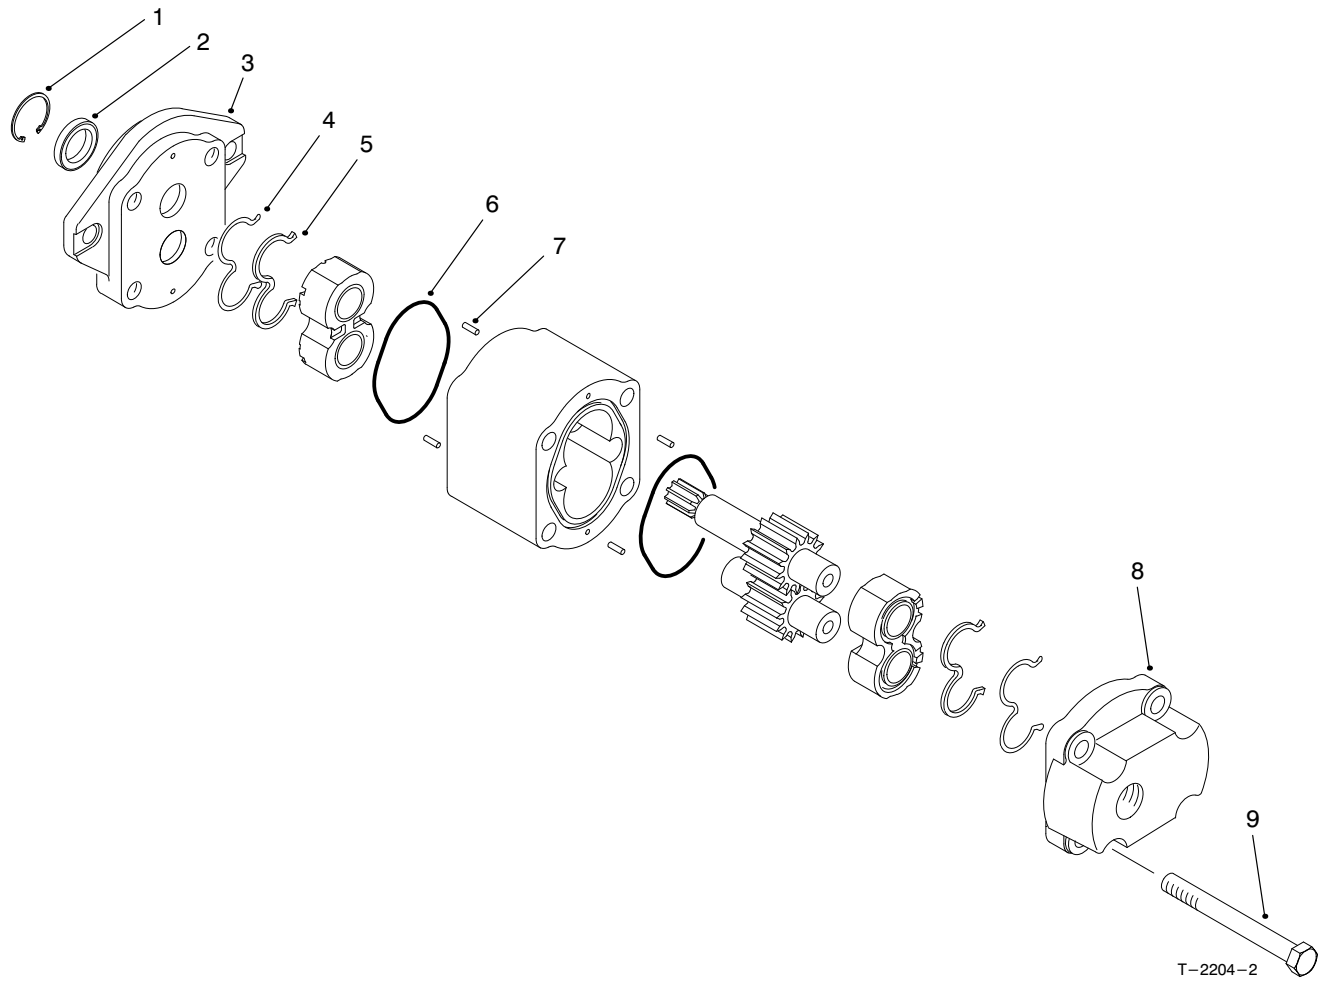

HYDRAULIC PUMP ASSEMBLY NO. 99−6131

Ref. No.	Part No.	Description	No. Used
1		Ring−Retaining	1
2		Seal−Shaft	2
3	94−3624	Asm−Flange (Incl. Ref. #1, 2 & 7)	1
4		Seal−E	2
5		Ring−Backup	2
6		O−Ring	2
7	94−3625	Pin−Dowel	4
8	94−3626	Cover−End	1
9	94−3639	Bolt	4
*	99−6132	Kit−Seal (Incl. Ref. #1, 2 & 4−6)	1

*Not Illustrated

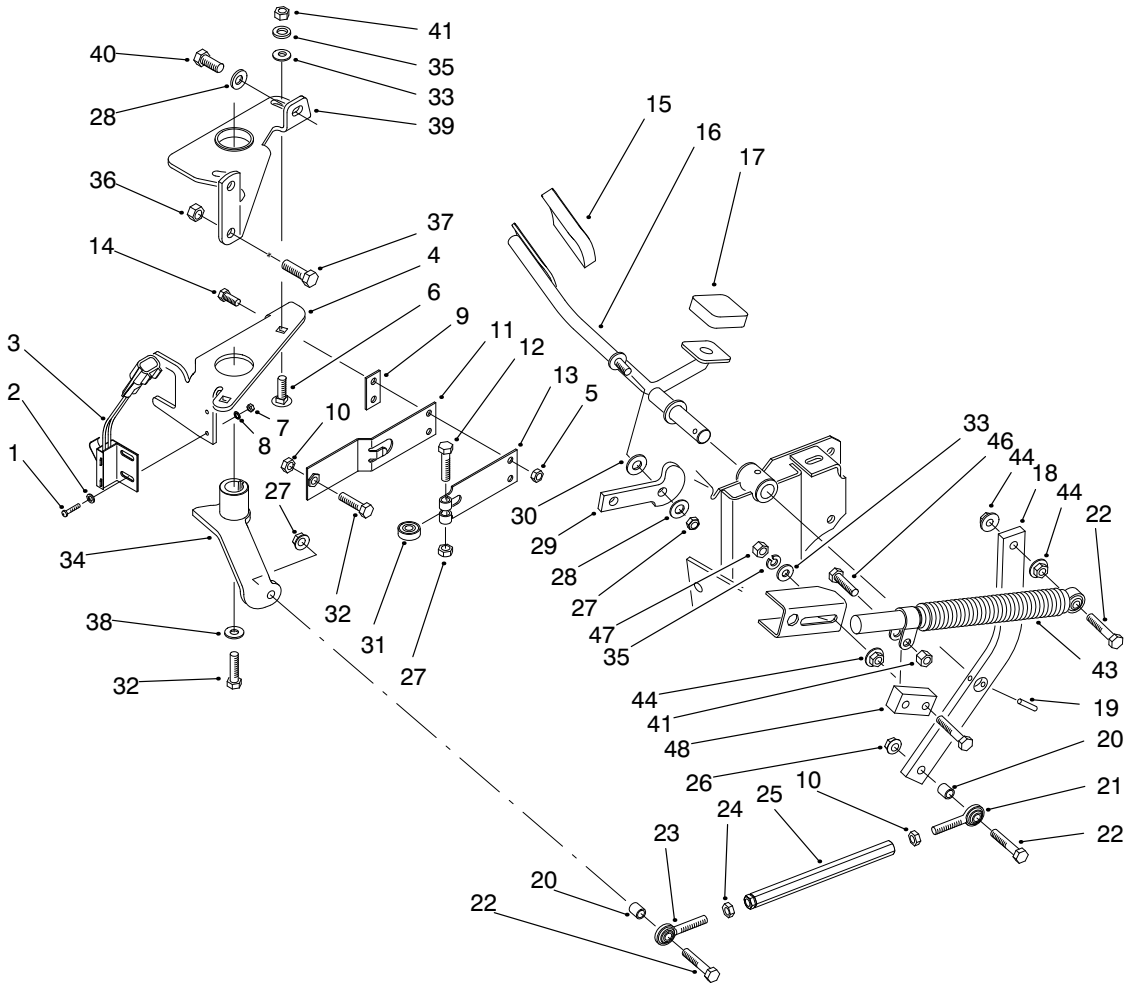


T−2161−1

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3249−3	Screw−Round Hd	2
2	3256−53	Washer−Flat	2
3	94−1754	Micro Switch	1
4	93−6825	Plate−Pump	1
5	3296−16	Nut−Lock	2
6	3230−2	Screw−Carriage	2
7	3217−29	Nut−HH	2
8	3254−9	Washer−Lock Int Tooth	2
9	51−3150	Shim−Spring Arm	1
10	3220−2	Nut−Hex Jam	2
11	29−6170	Asm−Extended Leaf Spring	1
12	322−17	Screw−HH	1
13	29−6150	Spring−Leaf	1
14	321−6	Screw−HH	2
15	74−9100	Pad−Pedal Forward	1
16	83−8270	Pedal−Traction	1
17	74−9110	Pad−Pedal Reverse	1
18	93−6936	Arm−Traction	1
19	32121−6	Pin−Roll	1
20	93−6859	Spacer	2
21	2411−52	Bearing−Rod End RH	1
22	322−9	Screw−HH	4
23	2411−53	Bearing−Rod End LH	1

Ref. No.	Part No.	Description	No. Used
24	3220−20	Nut−Jam	1
25	83−8760	Rod−Pump Control	1
27	3296−59	Nut−Lock	1
28	3256−24	Washer−Flat	2
29	74−6110	Stop−Cam	1
30	66−2920	Washer−Nylon	1
31	251−307	Bearing−Ball	1
32	3210−7	Screw−HH	2
33	3256−23	Washer−Flat	3
34	93−6824	Asm−Pump Lever	1
35	3253−4	Washer−Spring Lock	3
36	3296−39	Nut−Hex Lock	2
37	323−7	Screw−HH	2
38	87−8640	Washer−Flat Hardened	1
39	93−6826	Mounting Bracket	1
40	323−5	Screw−HH	1
41	3296−29	Nut−Hex Lock	3
43	76−8870	Dampner	1
44	32128−44	Nut−Flange Lock	3
46	322−6	Screw−Hex. Hd.	1
47	3217−6	Nut−Hex.	1
48	76−9760	Pivot−Damper	1

3322−154

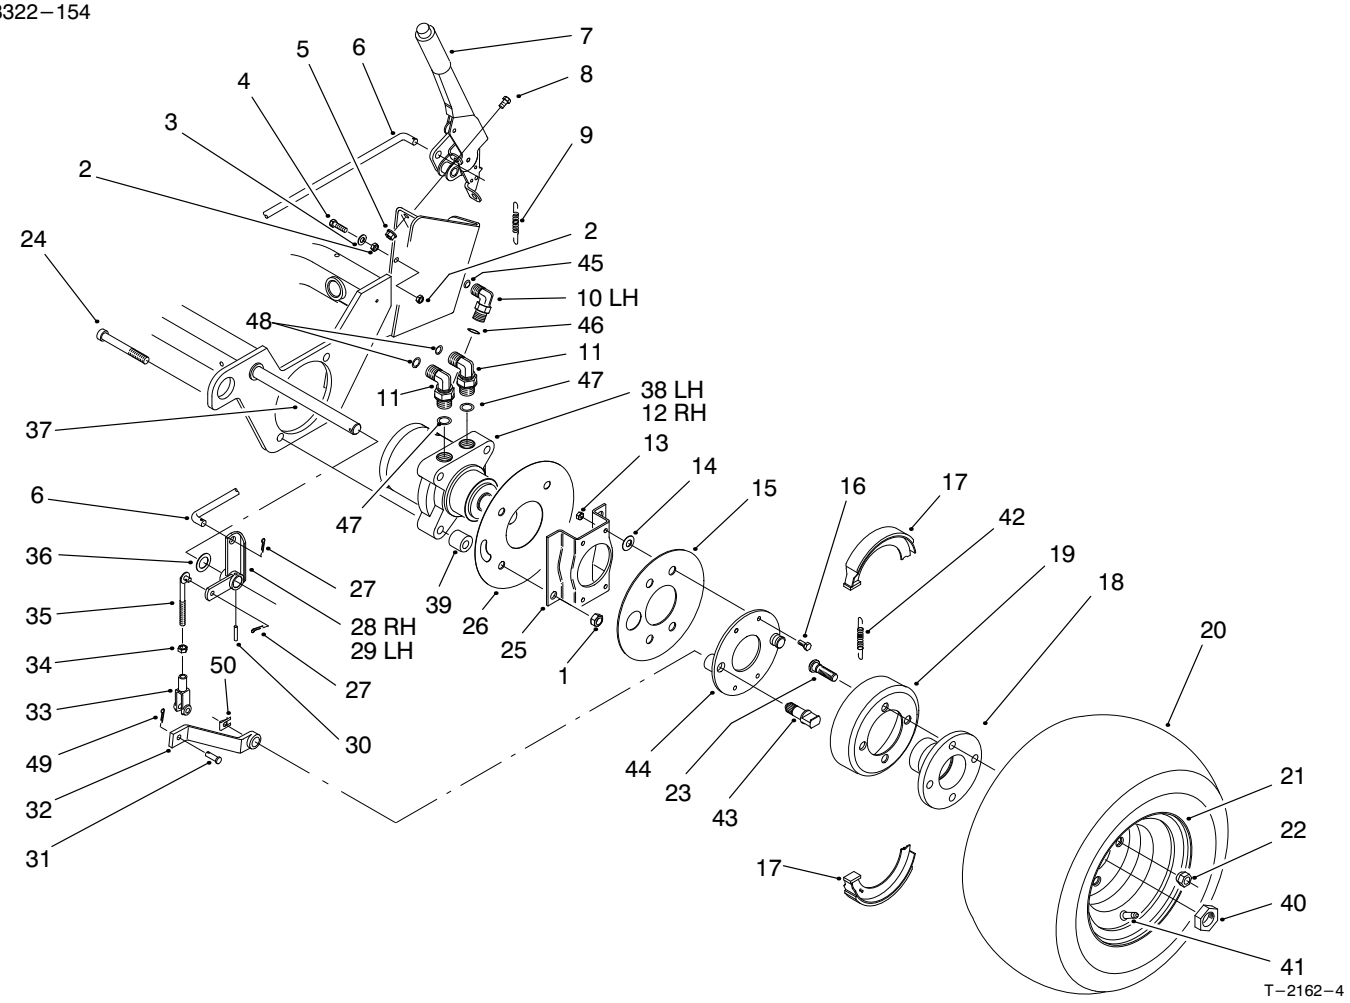


FRONT WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296−23	Nut−Hex Lock	8
2	32128−20	Nut−Lock Flange Whiz	2
3	3256−23	Washer−Flat	1
4	322−17	Screw−HH	1
5	32128−44	Nut−Flange	2
6	83−9350	Rod−Adjusting	1
7	61−3990	Parking Brake	1
8	3234−5	Screw−Flange	2
9	5−7290	Spring	1
10	340−77	Fitting − Hyd. LH (Incl. Ref. #45 & 46)	1
11	340−17	Elbow ORS (Incl. Ref. #47 & 48)	4
12	75−9990	Motor−Hydraulic RH	1
13	3296−42	Nut−Hex Lock	8
14	3256−16	Washer−Flat	8
15	83−9340	Shield−Grass Brake	2
16	321−5	Screw−HH	8
17	70−9840	Shoe−Brake	4
18	93−6838	Hub−Wheel	2
19	10−6850	Drum Brake	2
20	93−6879	Tire	2
21	93−6881	Rim	2
22	242−50	Nut−Lug	8
23	85−6540	Drive Type Stud	8
24	3274−99	Screw−Socket Hd.	8
25	84−2000	Bracket−Brake	2

Ref. No.	Part No.	Description	No. Used
26	93−6905	Shield−Wheel	2
27	3272−6	Pin−Cotter	3
28	83−9310	Brake Arm−RH	1
29	83−9270	Brake Arm−LH	1
30	32121−6	Pin−Roll	2
31	283−1	Pin−Clevis	2
32	93−6850	Brake Lever	2
33	282−2	Clevis	2
34	3220−2	Nut−Hex Jam	2
35	84−1990	Rod−Adjusting	2
36	3−6498	Washer−Thrust	2
37	83−9330	Shaft−Brake	1
38	93−6888	Motor−Hydraulic LH	1
39	94−5135	Spacer	8
40	26−3790	Nut−Lock	2
41	232−27	Stem−Valve	2
42	70−9880	Spring−Extension	4
43	70−9860	Pin−Pivot	2
44	70−9870	Plate−Brake	2
45	237−22	O−Ring	1
46	237−42	O−Ring	1
47	237−80	O−Ring	4
48	237−65	O−Ring	4
49	3272−10	Pin−Cotter	2
*	71−1500	Asm−Brake (Incl. Ref. #17 & 42−44)	2
50	70−9850	Clip − Retaining	2

*Not Illustrated

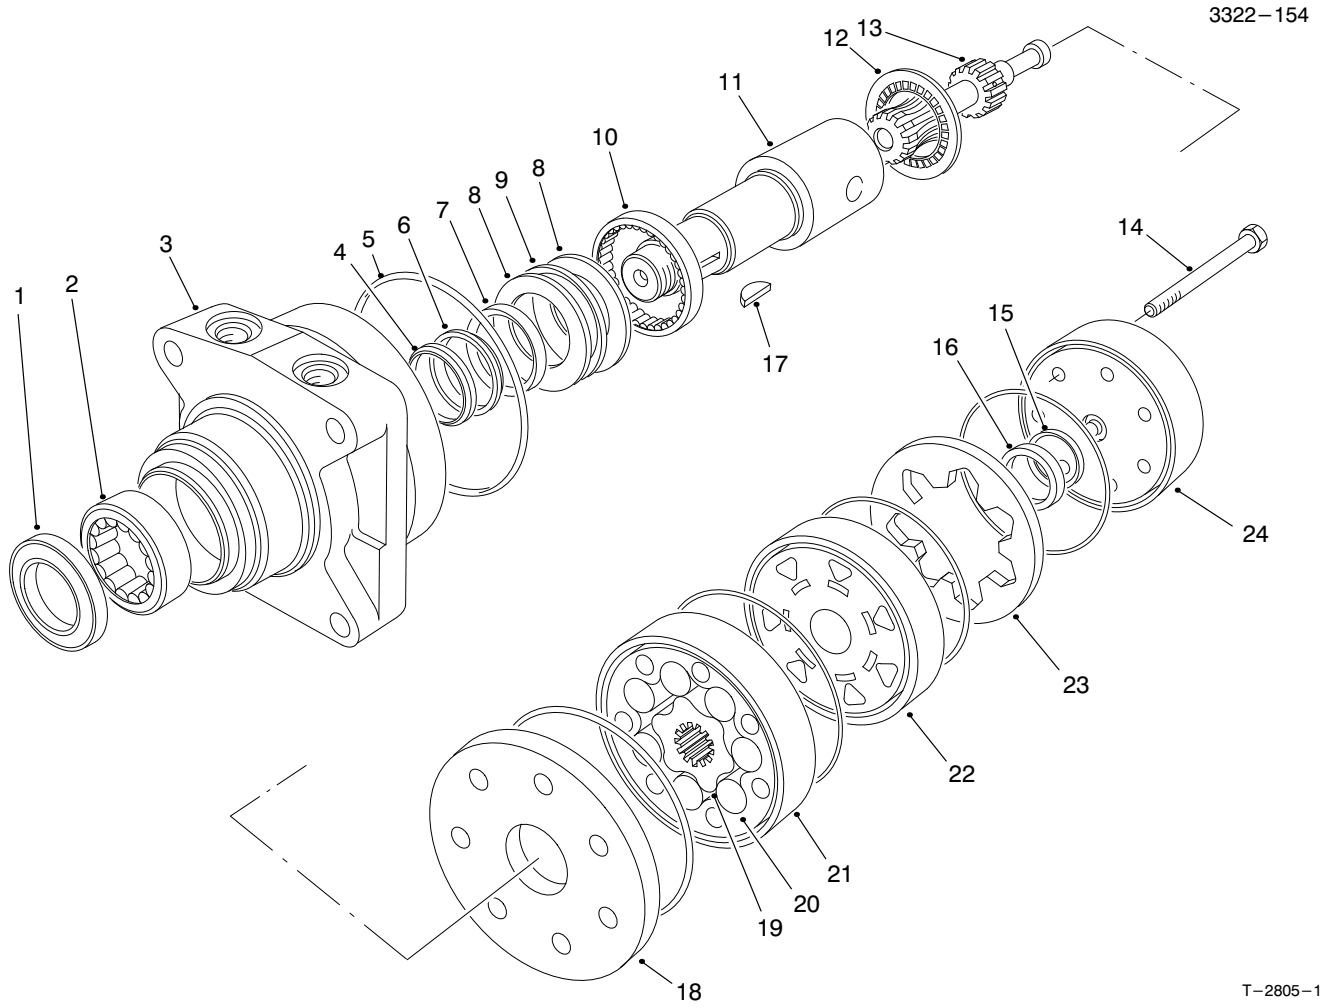


REAR HYDRAULIC DRIVE MOTOR NO. 75−9990 (3WD−MODEL NO. 03427)

Ref. No.	Part No.	Description	No. Used
1		Seal−Dirt & Water	1
2		Bearing	1
3		Housing	1
4		Washer−Backup	1
5		Seal Rings	5
6		Washer−Backup	1
7		Seal−Inner	1
8		Washer−Thrust	2
9		Bearing−Thrust	1
10		Bearing	1
11	76−0860	Shaft−Coupling	1
12	76−0850	Bearing−Thrust	1
13	76−0960	Link−Drive	1
14	76−1010	Screw−Hex. Hd.	7
15		Seal−Commutator	1
16		Commutator	1

Ref. No.	Part No.	Description	No. Used
17	3257−42	Key−Woodruff	1
18	76−0870	Plate−Wear	1
19		Rotor	1
20		Vane	7
21		Stator	1
22	76−0840	Manifold	1
23		Ring−Commutator	1
24	76−0940	Asm−End Cover	1
*	76−0970	Rotor Set (Incl. Ref. #19−21)	1
*	76−0880	Asm−Commutator (Incl. Ref. #15, 16 & 23)	1
*	76−0800	Kit−Seal (Incl. Ref. #1, 4−7 & 15)	1
*	76−0810	Asm−Housing (Incl. Ref. #2, 3 & 8−10)	1

*Not Illustrated

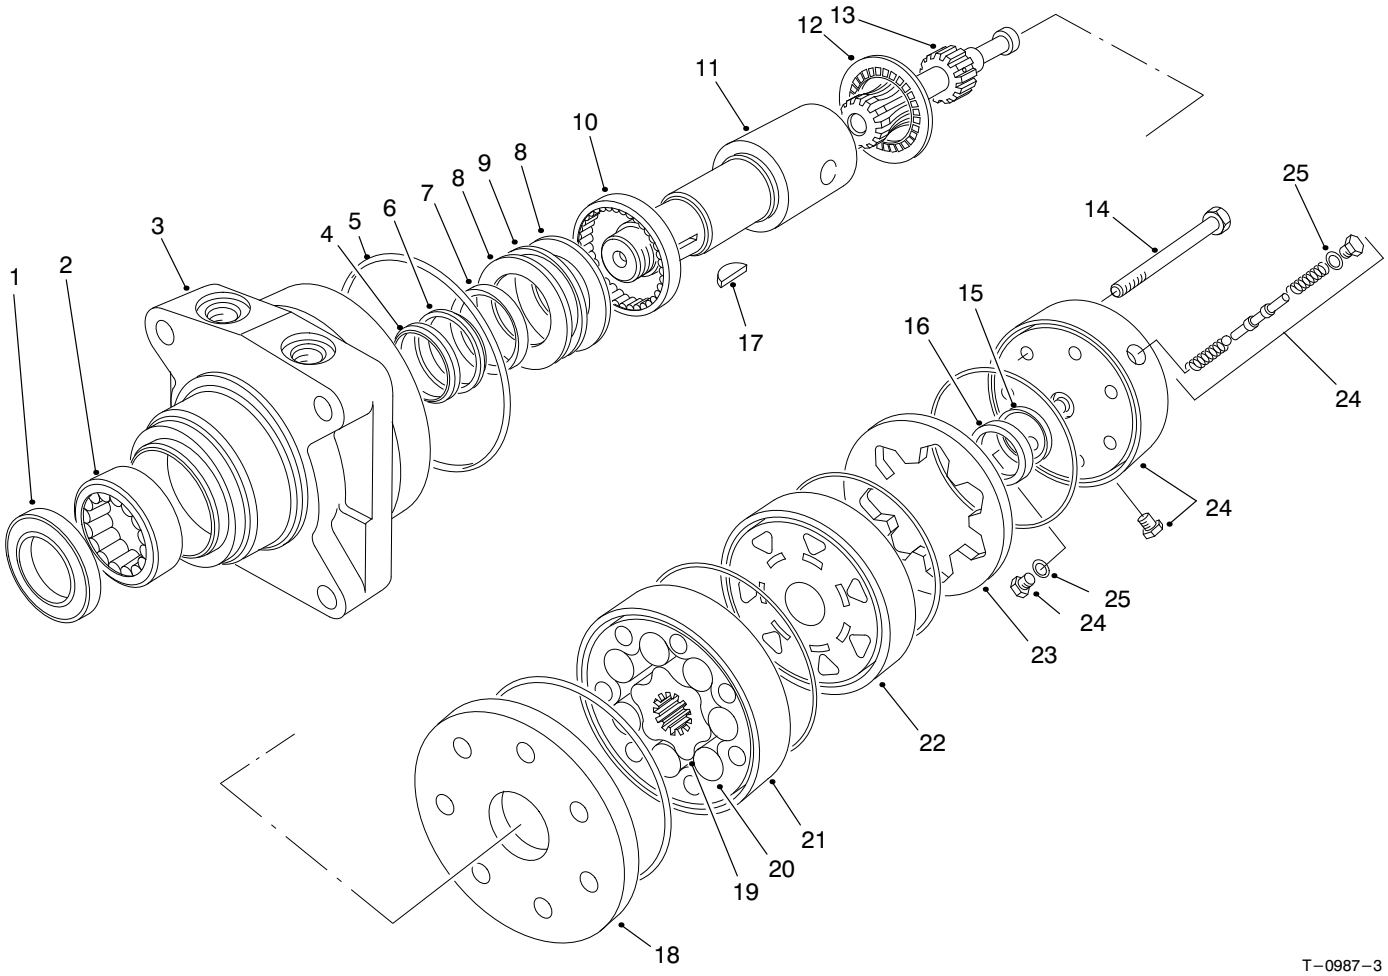


T−0987−3

FRONT HYDRAULIC DRIVE MOTOR NO. 93−6888

Ref. No.	Part No.	Description	No. Used
1		Seal−Dirt & Water	1
2		Bearing	1
3		Housing	1
4		Washer−Backup	1
5		Seal Rings	5
6		Washer−Backup	1
7		Seal−Inner	1
8		Washer−Thrust	2
9		Bearing−Thrust	1
10		Bearing	1
11	76−0860	Shaft−Coupling	1
12	76−0850	Bearing−Thrust	1
13	76−0960	Link−Drive	1
14	94−3662	Screw−Hex. Hd.	7
15		Seal−Commutator	1
16		Commutator	1
17	3257−42	Key−Woodruff	1

Ref. No.	Part No.	Description	No. Used
18	76−0870	Plate−Wear	1
19		Rotor	1
20		Vane	7
21		Stator	1
22	76−0840	Manifold	1
23		Ring−Commutator	1
24	76−0890	Asm−End Cover (Incl. Ref. #25)	1
*	76−0970	Rotor Set (Incl. Ref. #19−21)	1
*	76−0880	Asm−Commutator (Incl. Ref. #15, 16 & 23)	1
*	76−0800	Kit−Seal (Incl. Ref. #1, 4−7 & 15)	1
*	76−0810	Asm−Housing (Incl. Ref. #2, 3 & 8−10)	1
25	237−78	O−Ring	2

*Not Illustrated

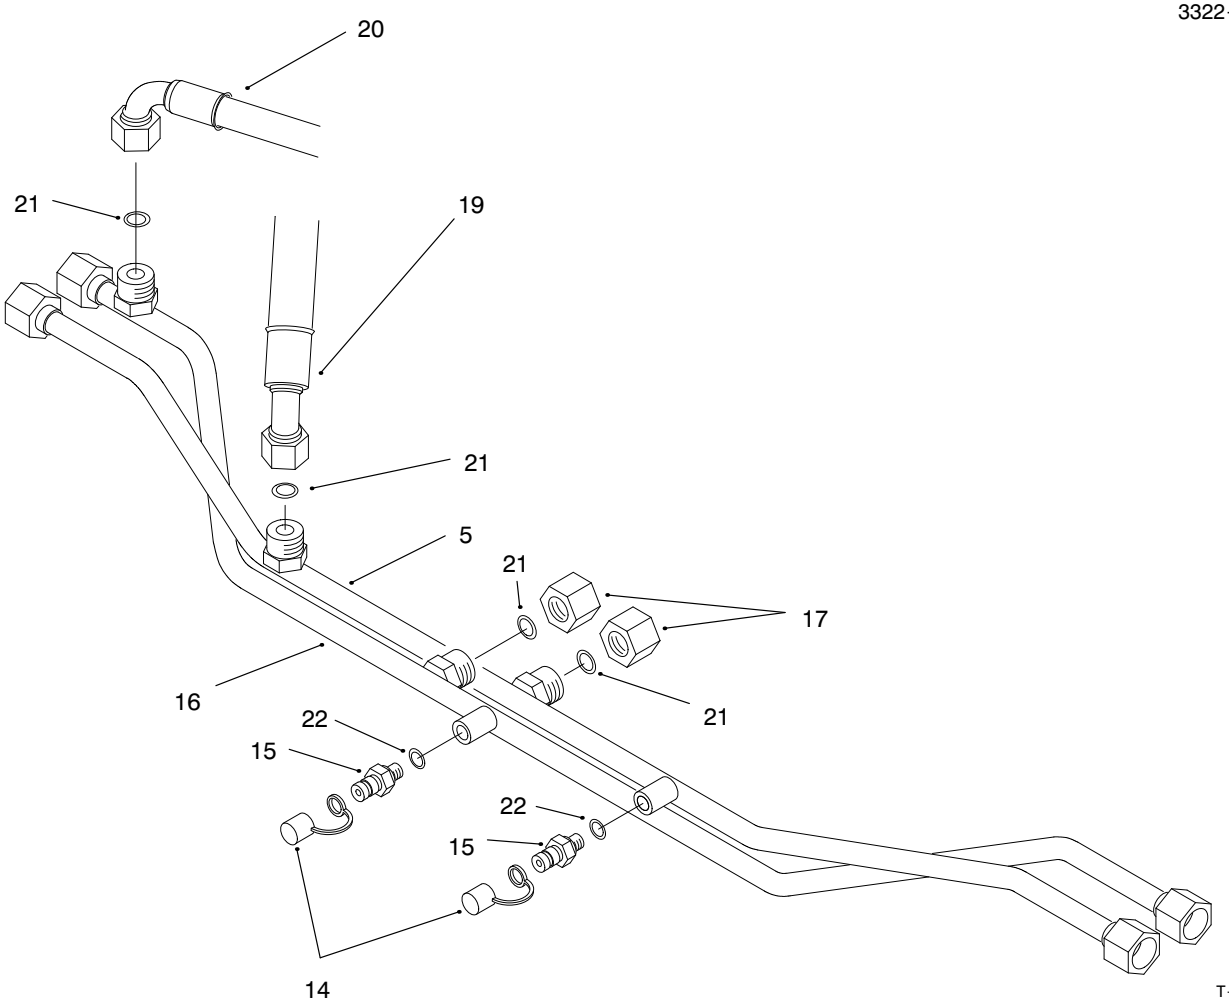


T–2385–1

DRIVE MOTOR PLUMBING ASSEMBLY (2WD–MODEL NO. 03422)

Ref. No.	Part No.	Description	No. Used
5	93–6836	Asm–Tube (Incl. Ref. #21)	1
14	354–79	Cap–Fitting Yellow	2
15	354–77	Fitting–Quick Connect (Incl. Ref. #22)	2
16	93–6837	Asm–Tube (Incl. Ref. #21)	1

Ref. No.	Part No.	Description	No. Used
17	340–152	Cap–Hydraulic	2
19	93–6828	Hose–Hydraulic	1
20	93–6829	Hose–Hydraulic	1
21	237–30	O–Ring	6
22	237–78	O–Ring	2

3322−154

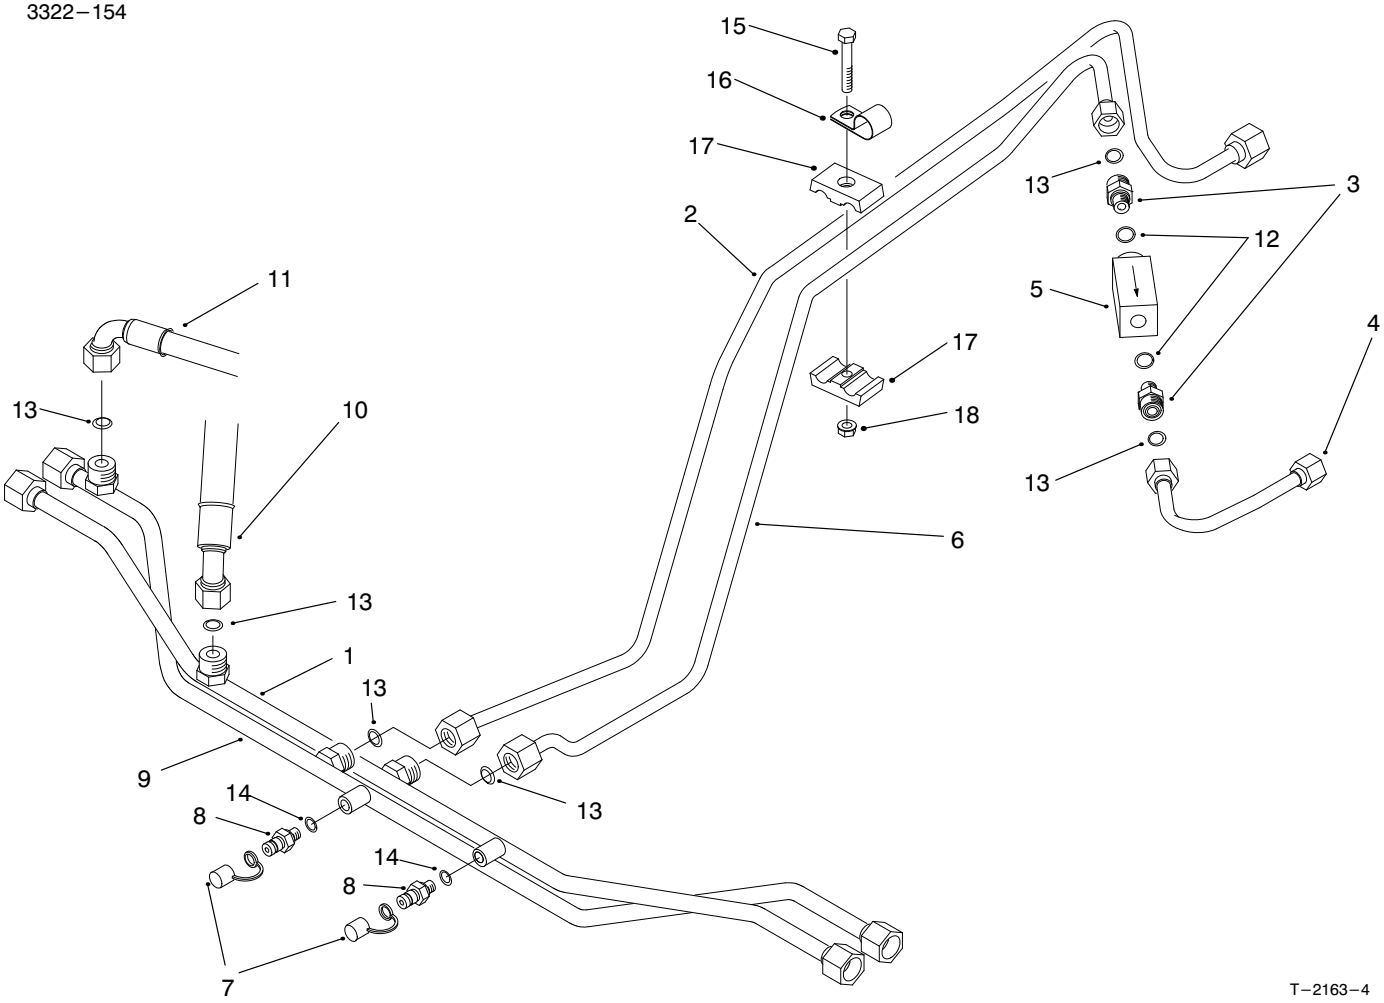


T−2163−4

DRIVE MOTOR PLUMBING ASSEMBLY (3WD−MODEL NO. 03427)


Ref. No.	Part No.	Description	No. Used
1	93−6836	Asm−Tube (Incl. Ref. #13)	1
2	93−6895	Asm−Tube 3wd Fwd	1
3	340−4	Fitting−ORS (Incl. Ref. #12 & 13)	2
4	83−9500	Asm−Tube 3wd Valve	1
5	99−2322	Valve−Flow Control	1
6	93−6896	Asm−Tube 3wd Reverse	1
7	354−79	Cap−Fitting Yellow	2
8	354−77	Fitting−Quick Connect (Incl. Ref. #14)	2

Ref. No.	Part No.	Description	No. Used
9	93−6837	Asm−Tube (Incl. Ref. #13)	1
10	93−6828	Hose−Hydraulic	1
11	93−6829	Hose−Hydraulic	1
12	237−79	O−Ring	2
13	237−30	O−Ring	6
14	237−78	O−Ring	2
15	322−10	Screw−HH	1
16	2412−104	Clamp−R	1
17	56−7976	Clamp−Tube	2
18	3296−29	Nut−Lock	1

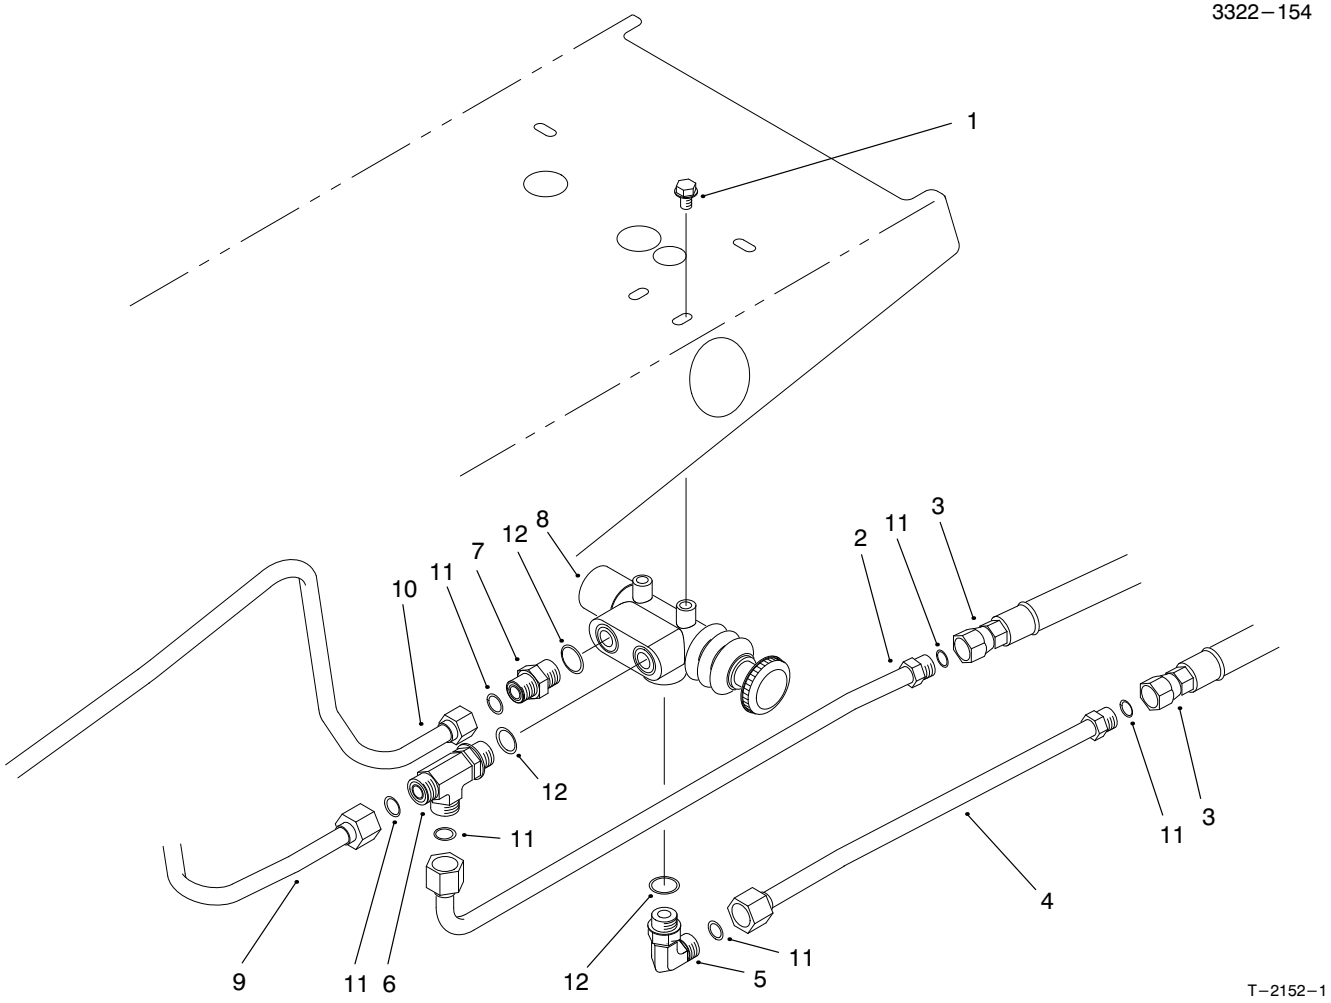

REAR WHEEL DRIVE VALVE ASSEMBLY (3WD−MODEL NO. 03427)

Ref. No.	Part No.	Description	No. Used
1	3234−28	Screw−HH	2
2	93−6830	Tube−Hyd (Incl. Ref. #11)	1
3	93−6843	Asm−Hose	2
4	93−6835	Tube−Hyd (Incl. Ref. #11)	1
5	340−98	Fitting (Incl. Ref. #11 & 12)	1
6	340−109	Fitting−Tee (Incl. Ref. #11 & 12)	1
7	340−4	Fitting−ORS (Incl. Ref. #11 & 12)	1
8	92−3196	Valve−2 Position	1
9	83−9500	Tube−Hydraulic	1
10	93−6895	Tube−Hydraulic	1
11	237−30	O−Ring	6
12	237−79	O−Ring	3

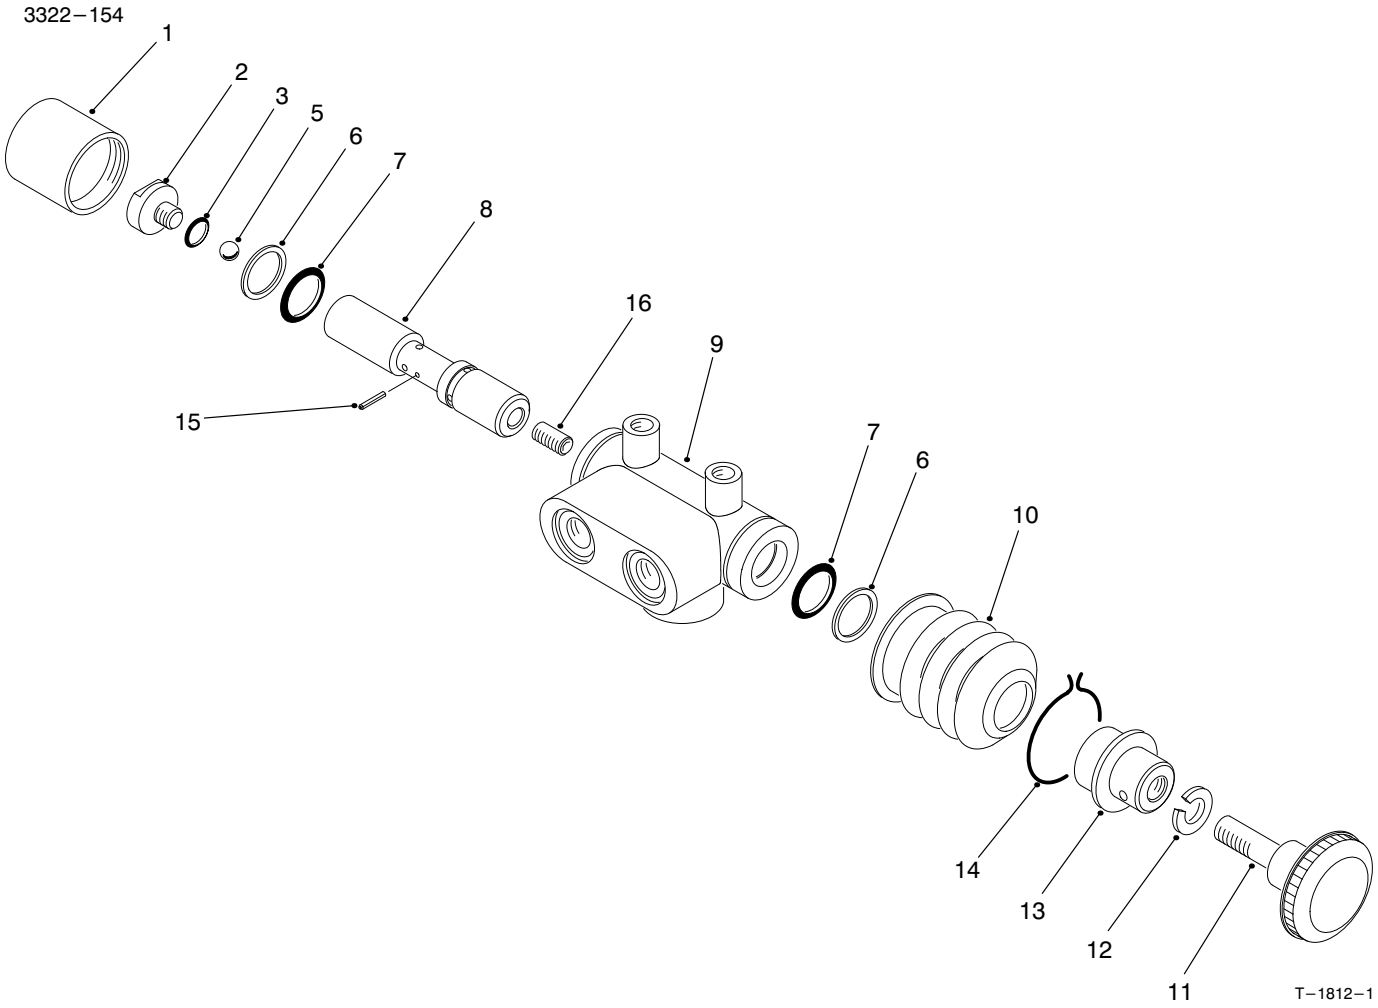


TWO POSITION VALVE ASSEMBLY NO. 92−3196 (3WD−MODEL NO. 03427)

Ref. No.	Part No.	Description	No. Used
1	92−7904	Cap−Valve	1
2	94−3427	Asm−Plug (Incl. Ref. #3)	1
3	237−22	O−Ring	1
5	354−23	Ball	1
6		Ring−Back−Up	2
7		O−Ring	2
8		Spool−Valve	1
9		Housing−Valve	1
10	92−7911	Boot	1

Ref. No.	Part No.	Description	No. Used
11	233−46	Knob	1
12	3253−5	Washer−Lock	1
13	94−3426	Stop−Valve	1
14	92−7912	Retainer−Boot	1
15	32121−38	Pin−Spring	1
16	94−3425	Screw	1
*	92−7913	Kit−Seal Repair (Incl. Ref. #1, 3, 6, 7, 10 & 14)	1


*Not Illustrated

HYDRAULIC SCHEMATIC (2WD–MODEL NO. 03422)

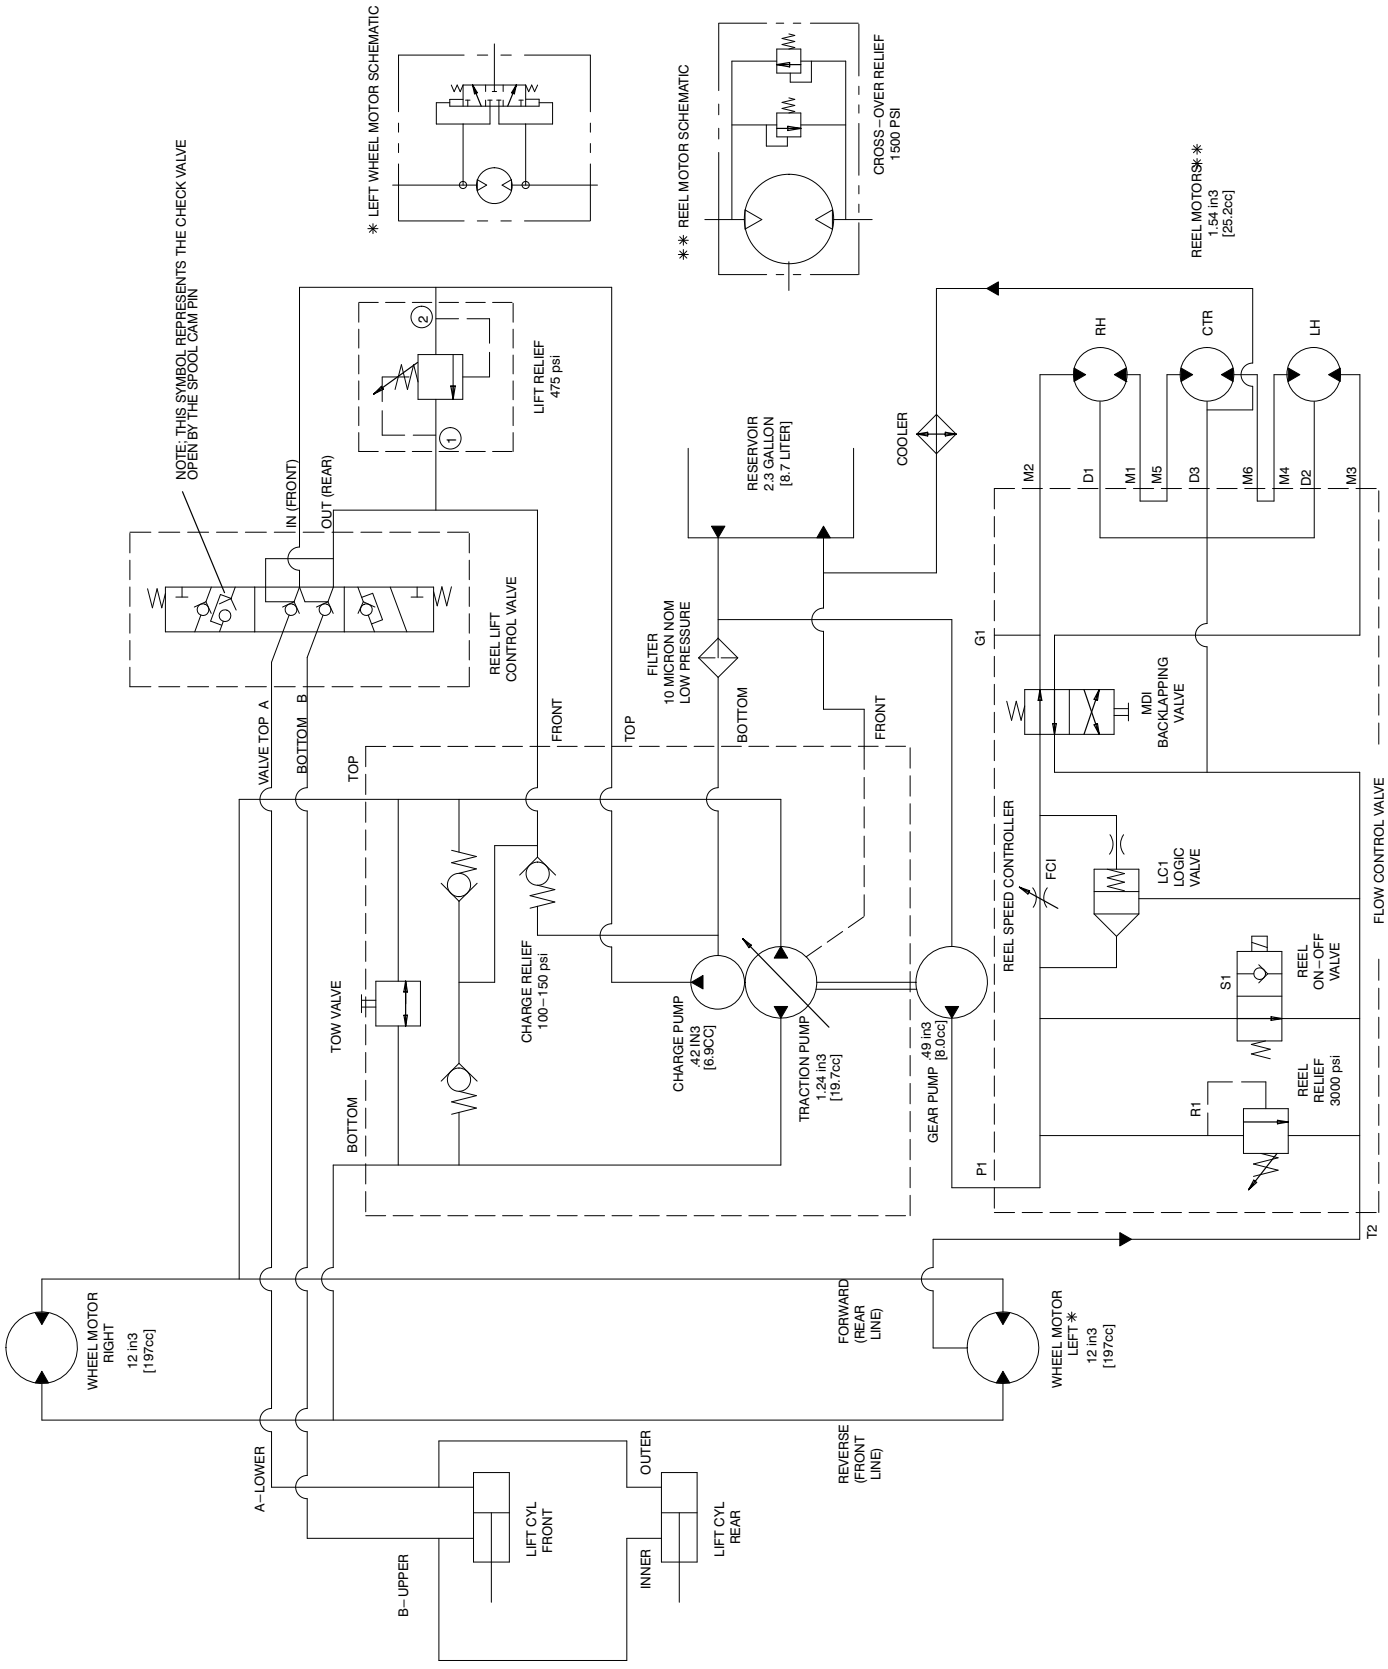


T–2438–3

HYDRAULIC SCHEMATIC (3WD−MODEL NO. 03427)

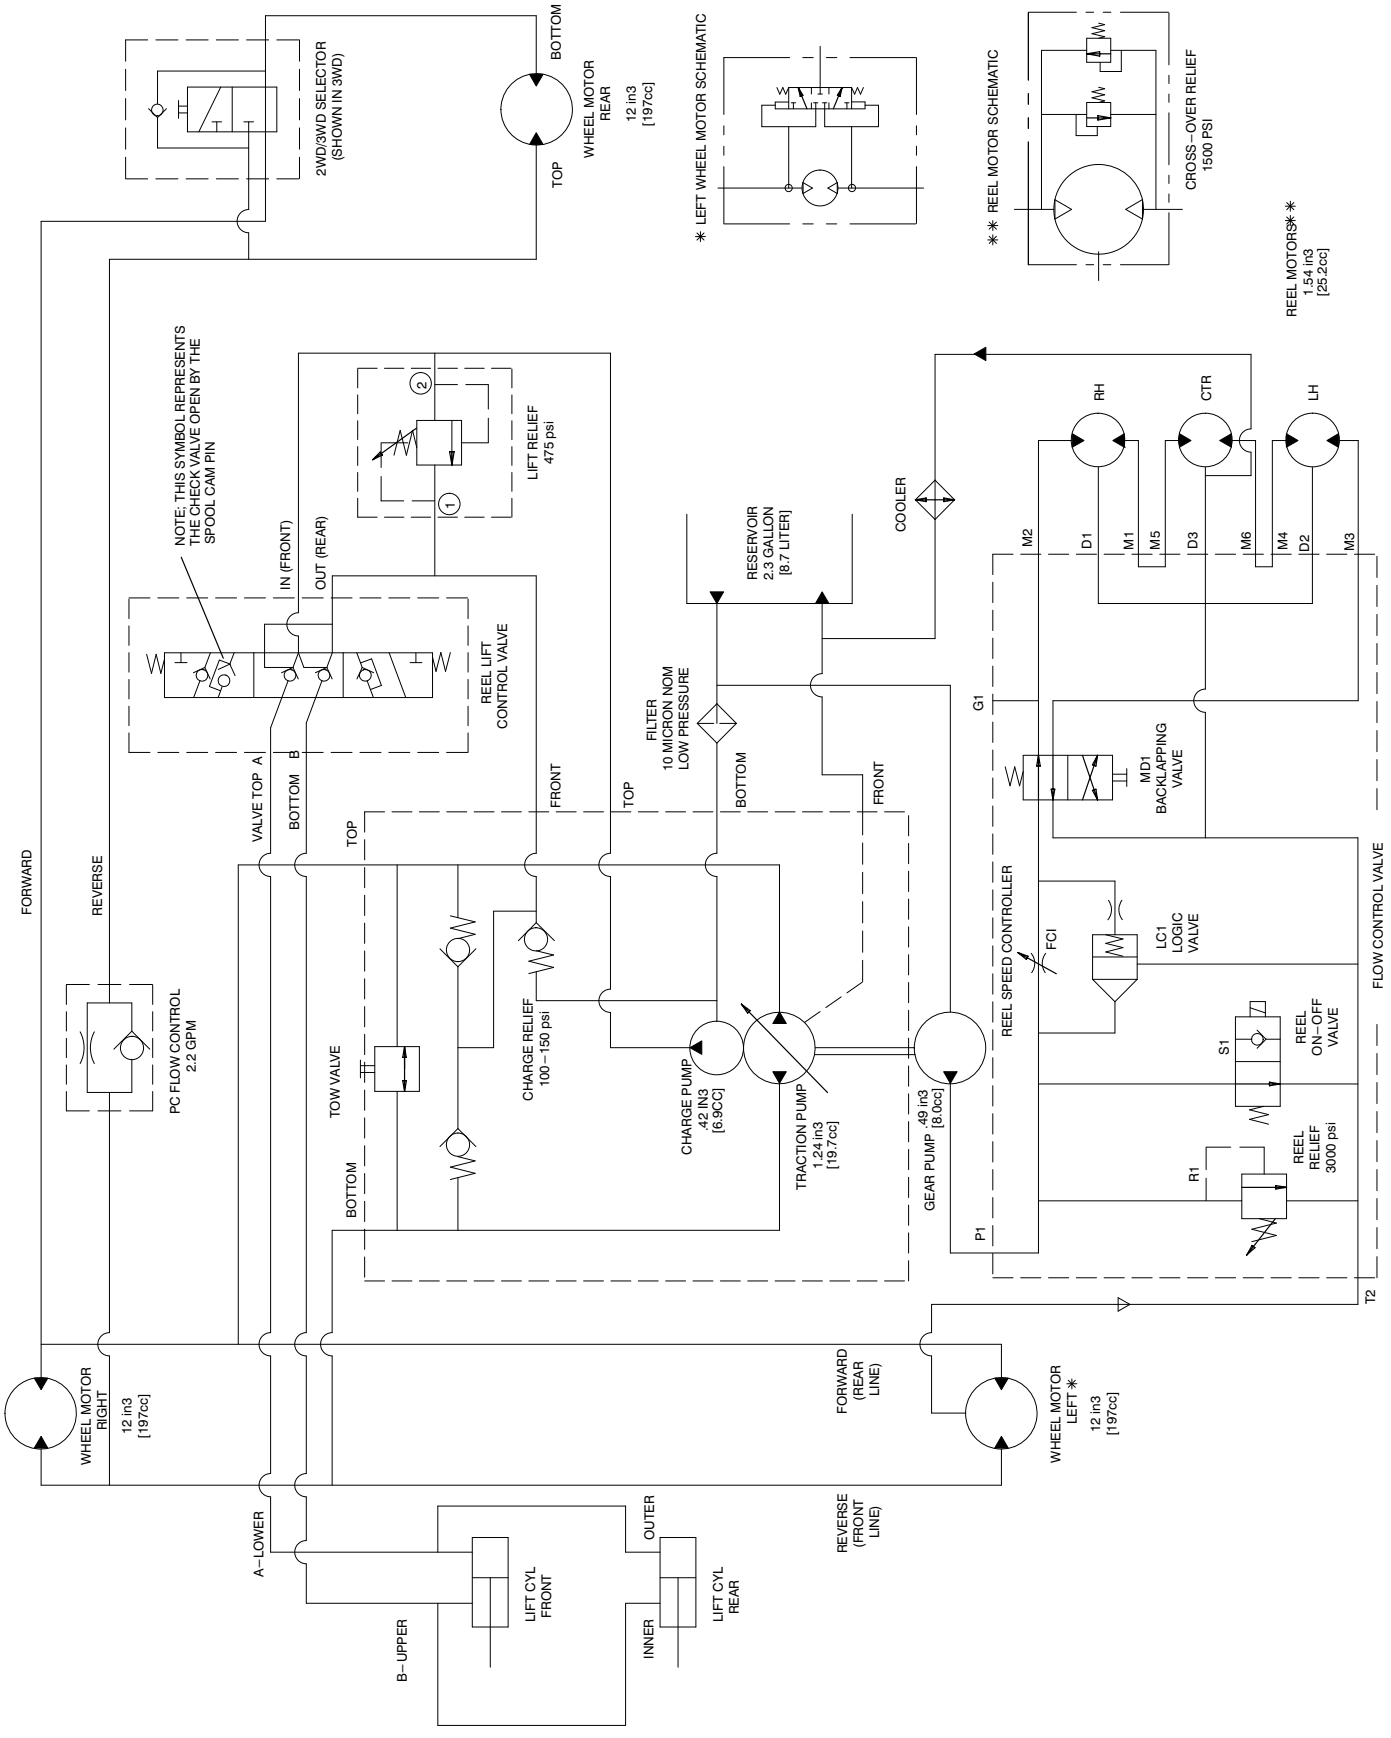

T−2439−4

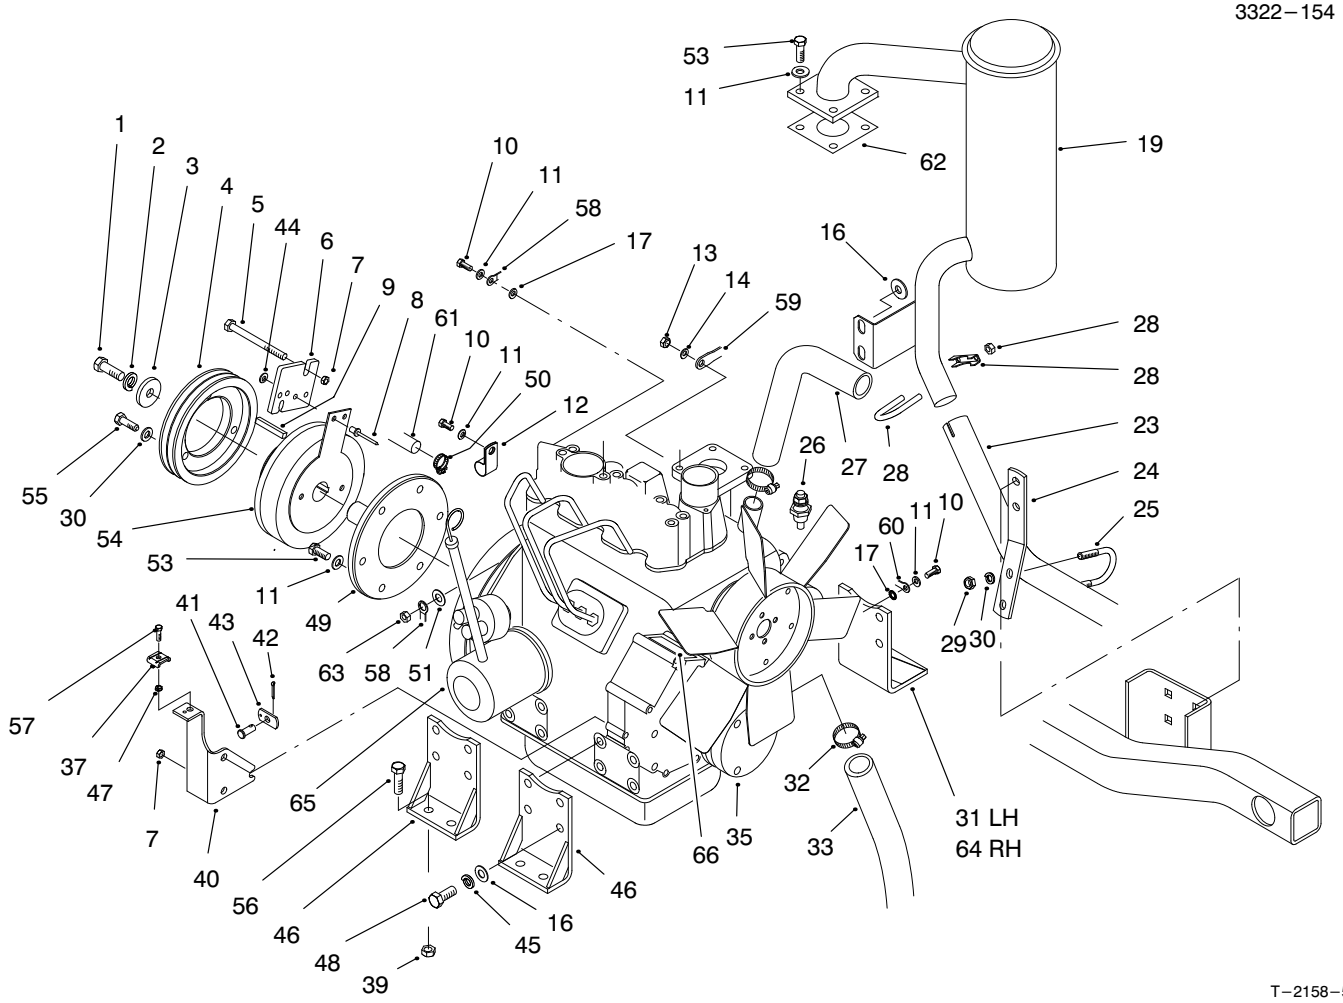


ENGINE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3212–5	Screw–HH	1
2	3253–6	Washer–Lock	1
3	44–8160	Washer–Clutch	1
4	93–6706	Pulley–Engine	1
5	68–6030	Screw–HH	1
6	93–6725	Bracket–Wire Keeper	1
7	33004–00	Nut–HF	4
8	3290–412	Rivet–Pop	2
9	83–8080	Key	1
10	33114–016	Screw–HH	3
11	3256–23	Washer–Flat	13
12	2412–96	Clamp–R	1
13	57–6390	Nut–Jam	1
14	42–9850	Washer–Lock	1
16	80–6990	Washer–Hardened	16
17	3255–8	Washer–Lock	2
19	93–6719	Muffler	1
23	93–6721	Tube–Muffler	1
24	93–6720	Bracket–Muffler	1
25	93–6722	U–Bolt	1
26	82–3110	Sender–Temp	1
27	93–6728	Hose–Radiator, Upper	1
28	2112–11	Clamp–Muffler	1
29	3217–6	Nut–Hex.	2
30	3253–4	Washer–Lock	4
31	93–6713	Bracket–Mount, Rear LH	1

Ref. No.	Part No.	Description	No. Used
32	2412–34	Clamp–Hose	2
33	93–6729	Hose–Radiator, Lower	1
†35	KL70372	Asm–Engine (Carburetor Certified)	1
37	81–1690	Clamp–Throttle Cable	1
39	32128–19	Nut–Flange	7
40	93–6892	Bracket–Throttle Cable	1
41	283–62	Pin–Clevis	1
42	3272–10	Pin–Cotter	1
43	92–3154	Tab–Throttle	1
44	33093–00	Washer–Flat	2
45	48–9590	Washer–Lock	14
46	93–6712	Bracket–Mount, Front	2
47	32148–14	Nut–Insert	1
48	33115–025	Screw–HH	16
49	93–6707	Spindle–Clutch	1
50	2412–108	Clamp–Hose	1
51	3255–17	Washer–Lock	1
53	33114–020	Screw	10
54	93–6727	Clutch–Electric	1
55	322–5	Screw–HH	1
56	3234–24	Screw–HH	7
57	3290–432	Screw–HH	1
58	94–3692	Harness–Wire	1
59	93–6775	Cable–Battery Pos.	1
60	94–5980	Cable–Battery Neg.	1

†Obtain from your local Perkins Dealer.

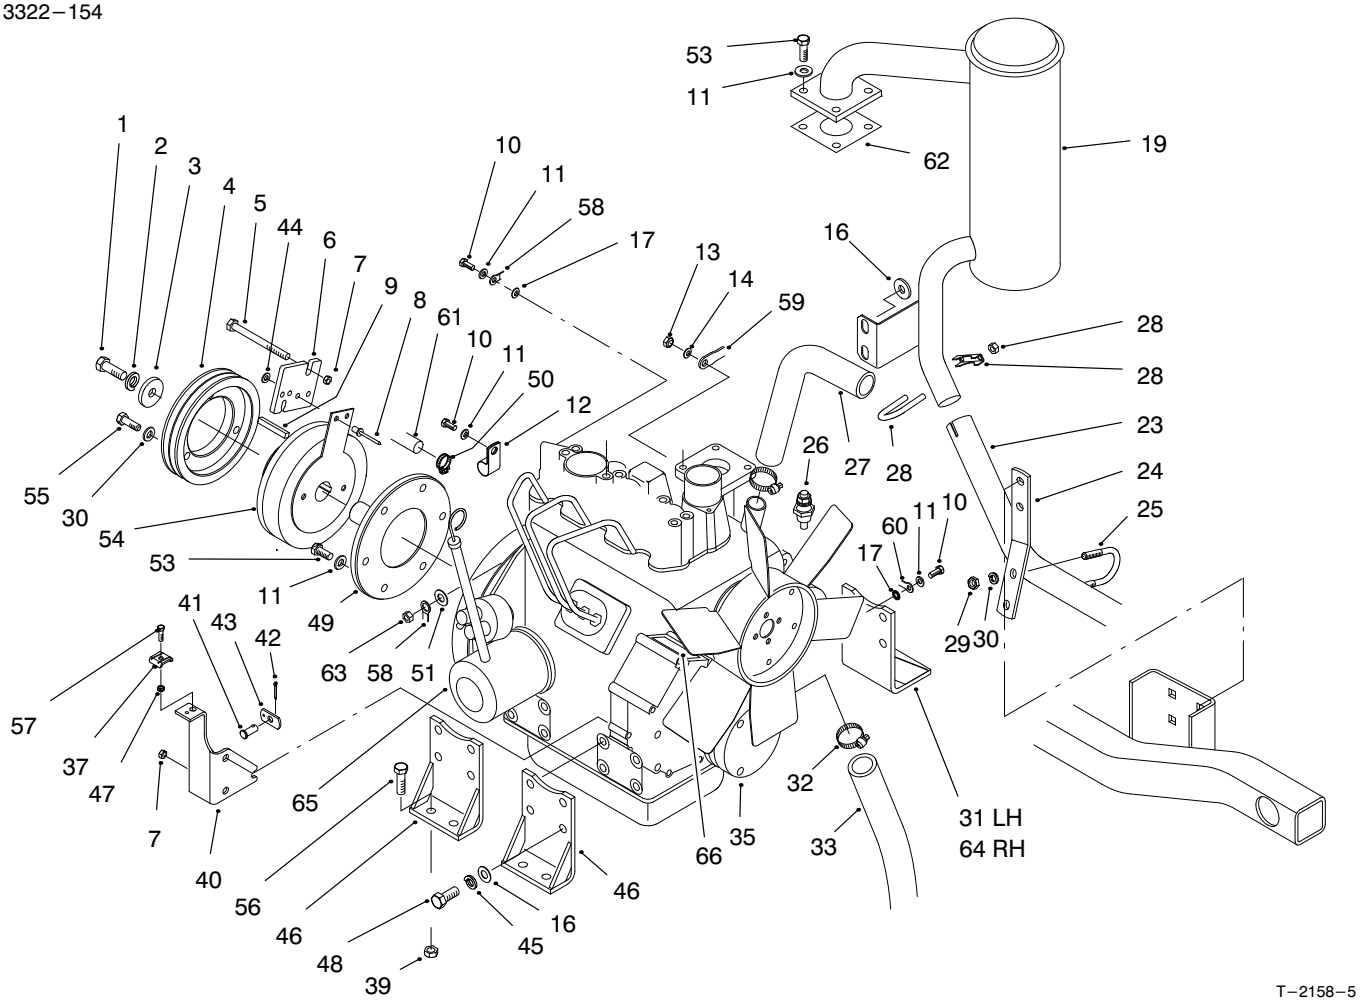


ENGINE INSTALLATION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
61	75−4703	Hose−Fuel	1
†62	314990013	Gasket−Muffler	1
63	33004−00	Nut−Hex.	1

Ref. No.	Part No.	Description	No. Used
64	93−6946	Bracket−Mount Rear RH	1
65	85−4930	Filter−Oil	1
66	99−2321	Decal−Timing	1

†Obtain from your local Perkins Dealer.

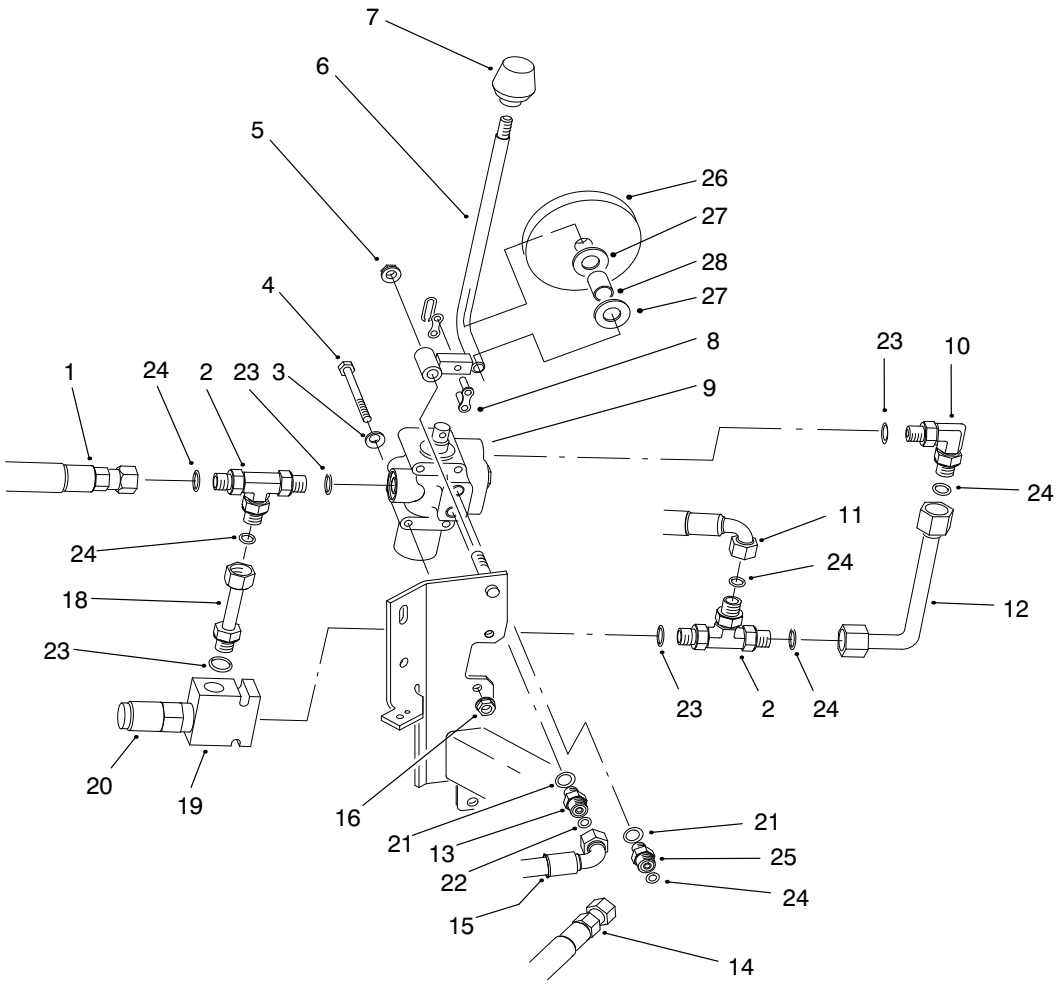


T–2164–3

CUTTING UNIT LIFT VALVE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93–6797	Asm–Hose	1
2	340–86	Fitting–Hyd, Tee (Incl. Ref. #23 & 24)	2
3	3256–22	Washer–Flat	2
4	321–23	Screw–HH	2
5	3296–39	Nut–Hex Lock	1
6	85–5160	Valve Lever	1
7	233–37	Knob	1
8	2710–16	Asm–Connecting Link	1
9	43–1950	Valve–Control Hydraulic	1
10	340–77	Fitting–Hyd 90˚ (Incl. Ref. #23 & 24)	1
11	93–6798	Asm–Hose	1
12	93–6922	Tube–Hydraulic	1
13	340–92	Fitting–Straight (Incl. Ref. #21 & 22)	1
14	94–5007	Asm–Hose	1
15	94–5006	Asm–Hose	1
16	3296–16	Nut–Lock	2
18	93–6923	Tube–Hydraulic (Incl. Ref. #23)	1
19	94–3608	Body–Relief Valve	1
20	94–3607	Cartridge–Relief Valve	1
21	237–78	O–Ring	2
22	237–21	O–Ring	1
23	237–42	O–Ring	4
24	237–22	O–Ring	6
25	340–88	Fitting–Hydraulic (Incl. Ref. #21 & 24)	1
26	94–5119	Sponge	1
27	3256–26	Washer–Flat	2
28	65–9940	Spring–Compression	1
*	93–6921	Asm–Relief Valve (Incl. Ref. #19 & 20)	1

*Not Illustrated

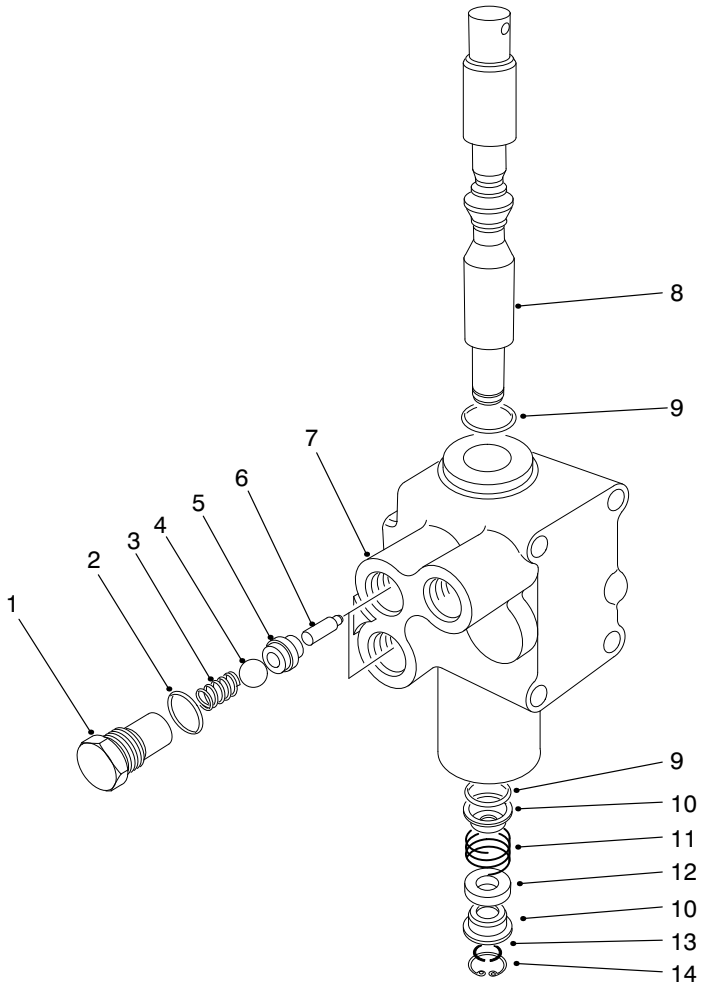


T−0280−2

CONTROL VALVE ASSEMBLY NO. 43−1950

Ref. No.	Part No.	Description	No. Used
1	22−8330	Plug	2
2	237−42	O−Ring	2
3	22−8340	Spring	2
4	22−8350	Ball	2
5	22−8370	Seat−Check Valve	2
6	22−8360	Pin−Cam	2
7		Body	1

Ref. No.	Part No.	Description	No. Used
8	22−8420	Spool	1
9	22−8500	O−Ring	2
10	22−8380	Retainer−Spring	2
11	22−8410	Spring	1
12	23−3030	Spacer	1
13	22−8480	Snap Ring−Spool	1
14	22−8490	Snap Ring	1

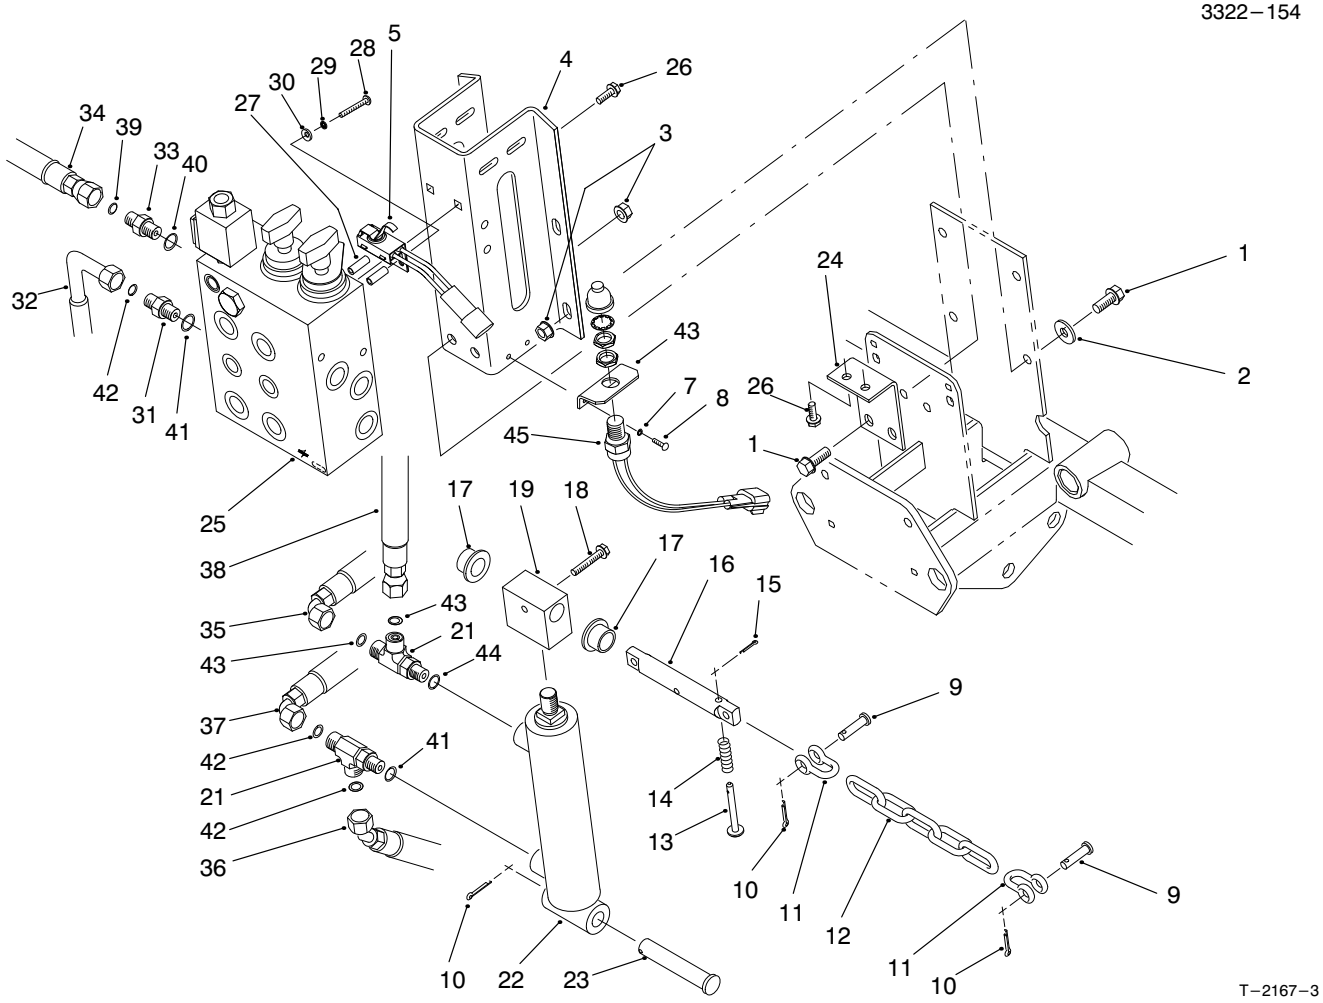


FRONT CUTTING UNIT LIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3234−25	Bolt−Flange	6
2	80−6990	Washer−Hardened	4
3	32128−43	Nut−Whiz	5
4	94−5033	Bracket−Cyl Support	1
5	92−7905	Micro Switch	1
7	3254−9	Washer−Lock Int. Tooth	2
8	3249−3	Screw−PRH	2
9	283−6	Pin−Clevis	4
10	3272−11	Pin−Cotter	5
11	282−4	Clevis	4
12	61−3830	Chain (RM2300D Only)	2
*	94−5057	Chain (RM2600D Only)	2
13	94−5010	Pin−Switch Actuator	1
14	94−5011	Spring−Compression	1
15	3272−4	Pin−Cotter	1
16	72−4190	Pin−Cylinder Guide	1
17	84−8440	Bush−Flange	2
18	321−43	Screw−HH	1
19	61−2450	Hub−Lift	1
21	340−86	Tee (Incl. Ref. #41 & 42)	2
22	94−5031	Cylinder−Lift	1

Ref. No.	Part No.	Description	No. Used
23	283−78	Clevis Pin	1
24	93−6733	Bracket−Valve Mount	1
25	93−6718	Asm−Hydraulic Manifold	1
26	3234−5	Screw−Flange	3
27	93−6904	Spacer	2
28	32105−1	Screw−HH	2
29	3255−17	Washer−Lock Ext. Tooth	2
30	3256−14	Washer−Flat	2
31	340−2	Adaptor (Incl. Ref. #41 & 42)	1
32	93−6935	Asm−Hose	1
33	340−4	Adaptor (Incl. Ref. #39 & 40)	1
34	93−6800	Hose−Hydraulic	1
35	94−5009	Hose−Hydraulic	1
36	94−5008	Hose−Hydraulic	1
37	94−5007	Hose−Hydraulic	1
38	94−5006	Hose−Hydraulic	1
39	237−22	O−Ring	1
40	237−79	O−Ring	1
41	237−42	O−Ring	3
42	237−22	O−Ring	5
43	94−3424	Bracket−Switch Mount	1
45	94−3429	Plunger Switch	1

*Not Illustrated

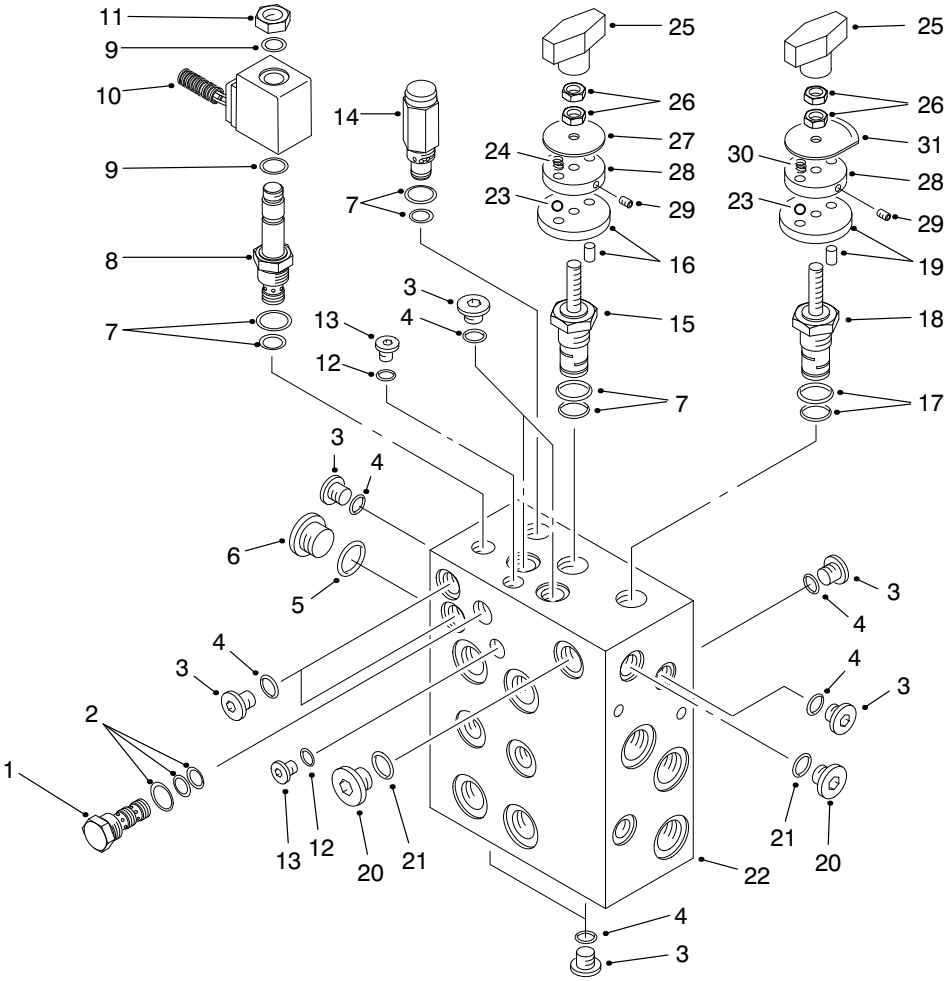


T−2203−2

HYDRAULIC MANIFOLD ASSEMBLY NO. 93−6718

Ref. No.	Part No.	Description	No. Used
1	69−4120	Asm−Cartridge Valve (Incl. Ref. #2)	1
2	69−4240	Kit−Seal	1
3	353−990	Asm−Plug (Incl. Ref. #4)	7
4	237−78	O−Ring	7
5	237−79	O−Ring	1
6	353−988	Asm−Plug (Incl. Ref. #5)	1
7	75−2080	Kit−Seal	3
8	94−3656	Asm−Spool (Incl. Ref. #7, 9 & 11)	1
9	94−5438	O−Ring	2
10	83−2010	Asm−Coil (Incl. Ref. #9)	1
11	69−4300	Nut	1
12	237−156	O−Ring	2
13	353−991	Asm−Plug (Incl. Ref. #12)	2
14	94−3655	Asm−Cartridge Valve (Incl. Ref. #7)	1

Ref. No.	Part No.	Description	No. Used
15	94−3659	Asm−Spool (Incl. Ref. #7)	1
16	94−5025	Asm−Locating Plate	1
17	94−3661	Kit−Seal	1
18	94−3657	Asm−Spool (Incl. Ref. #17)	1
19	94−5021	Asm−Locating Plate	1
20	353−989	Asm−Plug (Incl. Ref. #21)	2
21	237−42	O−Ring	2
†22		Body−Manifold	1
23	255−13	Ball	4
24	94−5027	Spring−Compression	2
25	94−5020	Knob	2
26	3218−1	Nut−Jam	4
27	94−5026	Plate−Indicator	1
28	94−5023	Asm−Detent Plate (Incl. Ref. #29)	2
29	3245−36	Screw−Set	2
30	94−5024	Spring−Compression	2
31	94−5022	Plate−Indicator	1

†Not Serviced Separately

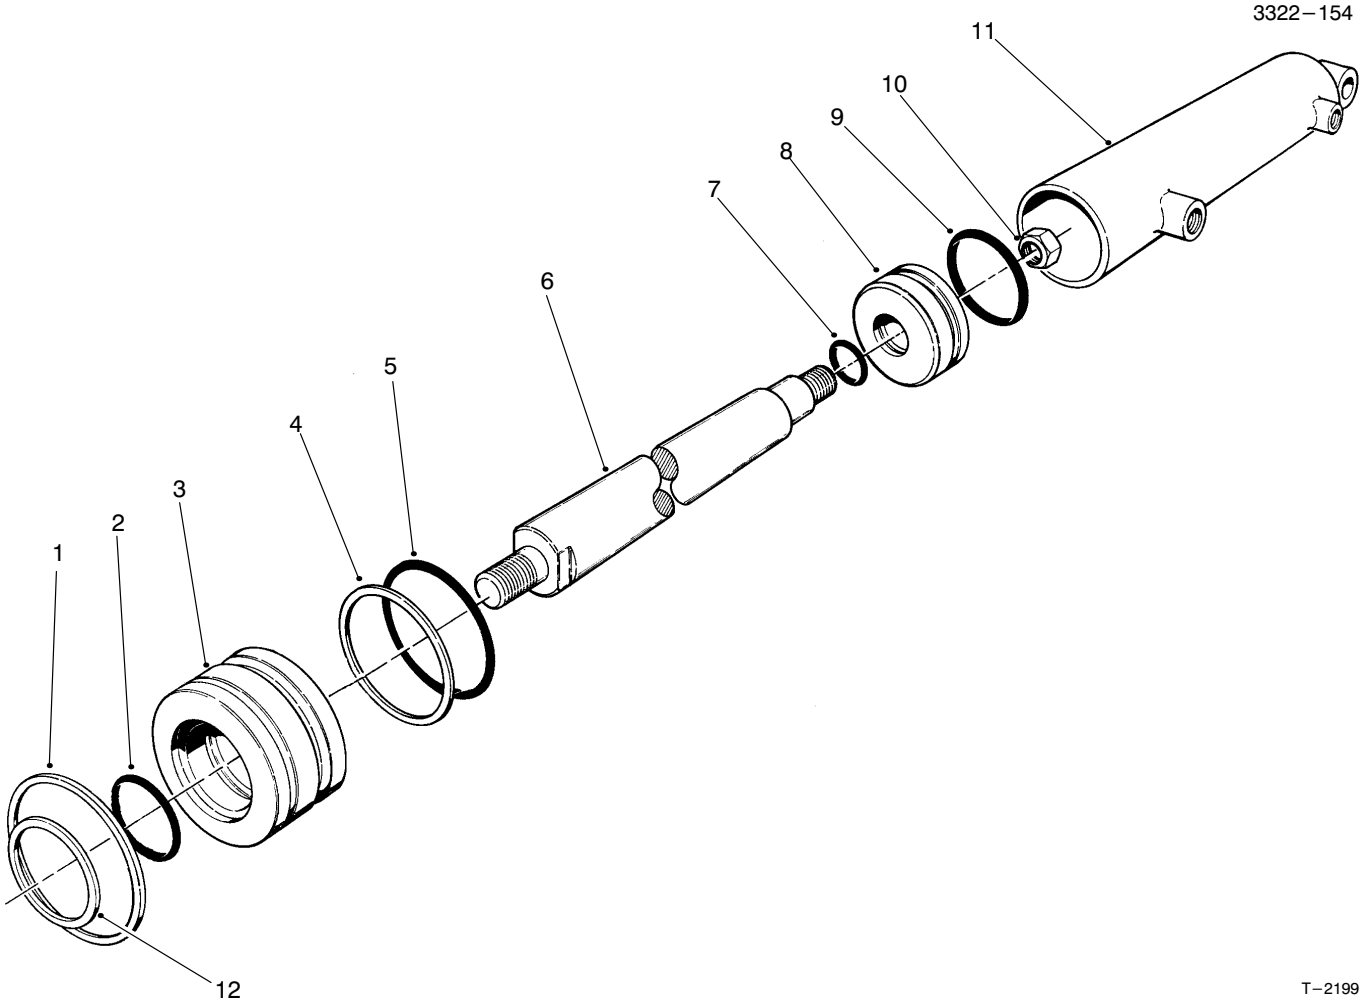


FRONT HYDRAULIC CYLINDER ASSEMBLY NO. 94−5031

Ref. No.	Part No.	Description	No. Used
1	94−3612	Ring−Retaining	1
2		O−Ring	1
3	94−3611	Head	1
4		Washer−Backup	1
5		O−Ring	1
6	94−3610	Shaft	1
7		O−Ring	1
8	94−3609	Piston	1

Ref. No.	Part No.	Description	No. Used
9		Uniring	1
10	32152−10	Nut−Lock	1
11	94−5032	Barrel	1
12		Seal−Dust	1
*	94−3614	Kit−Repair (Incl. Ref. #2, 4−5, 7, 9 & 12)	1


*Not Illustrated

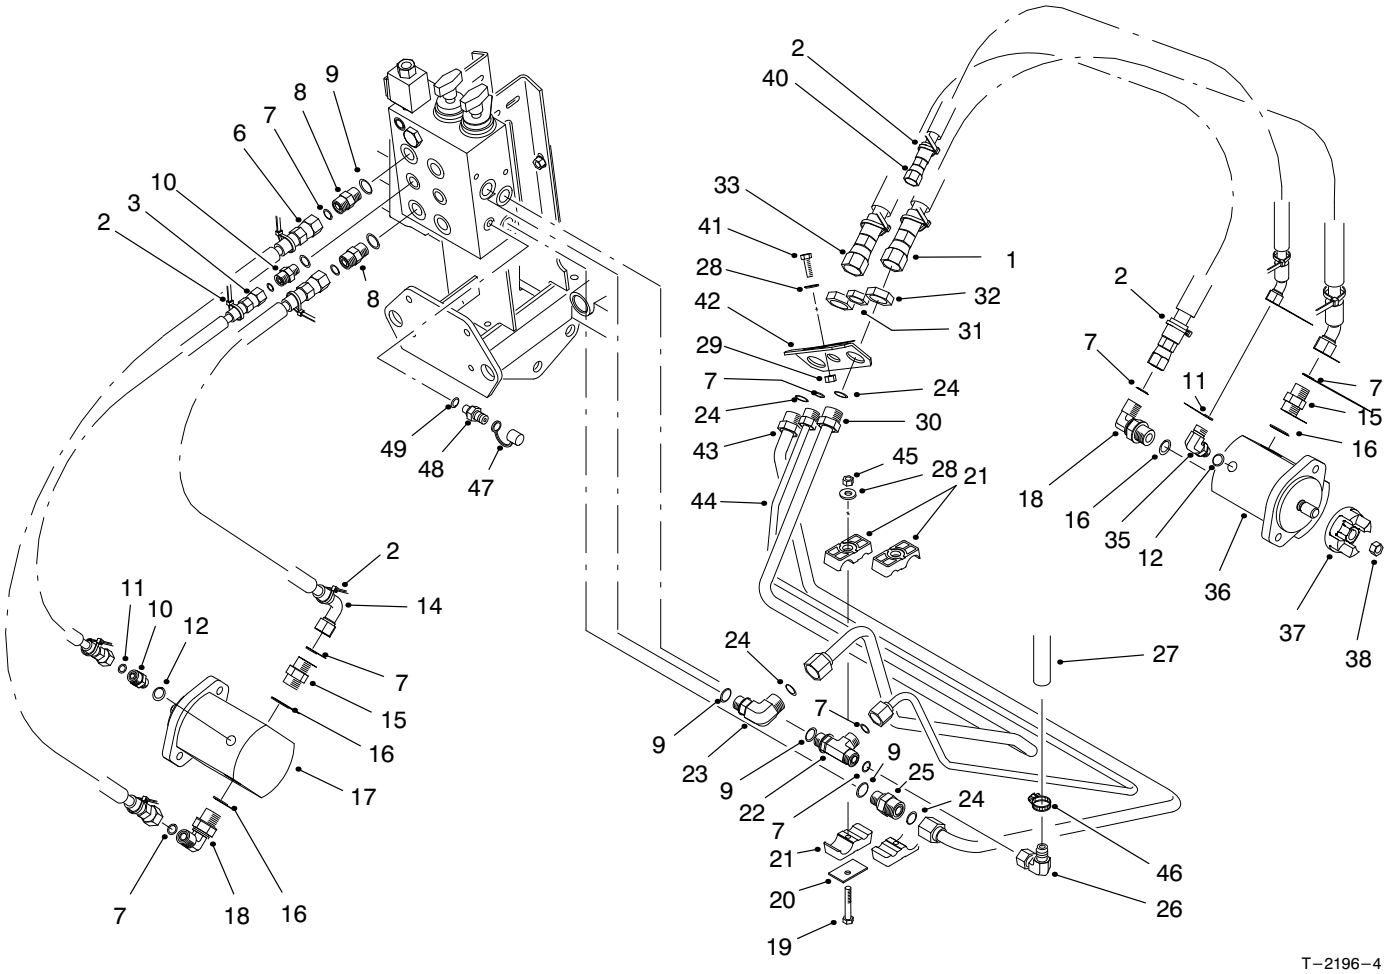

CUTTING UNIT HYDRAULIC PLUMBING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94−5129	Asm−Hydraulic Hose (Incl. Ref. #2 & Protective Sleeve)	1
2	3290−378	Tie − Cable	18
3	94−5986	Asm−Hydraulic Hose (Incl. Ref. #2 & Protective Sleeve)	2
6	94−5987	Asm−Hydraulic Hose (Incl. Ref. #2 & Protective Sleeve)	2
7	237−30	O−Ring	13
8	340−4	Fitting−Hydraulic Straight (Incl. Ref. #7 & 9)	4
9	237−79	O−Ring	7
10	340−2	Fitting−Hydraulic Straight (Incl. Ref. #11 & 12)	4
11	237−22	O−Ring	5
12	237−42	O−Ring	5
14	94−5985	Asm−Hydraulic Hose (Incl. Ref. #2 & Protective Sleeve)	2
15	340−6	Fitting−Hydraulic Straight (Incl. Ref. #7 &16)	3
16	237−80	O−Ring	6
17	93−6972	Asm−Hydraulic Motor	2
18	340−105	Fitting−Hydraulic 90˚ (Incl. Ref. #7 & 16)	3


Ref. No.	Part No.	Description	No. Used
19	322−10	Screw−Hex. Hd.	2
20	69−9760	Plate−Clamp	2
21	56−7970	Clamp−Tube	4
22	340−109	Fitting−Hydraulic Tee (Incl. Ref. #7 & 9)	1
23	340−153	Fitting−Hydraulic 90˚ (Incl. Ref. #9 & 24)	1
24	237−65	O−Ring	4
25	340−155	Fitting−Hydraulic Straight (Incl. Ref. #9 & 24)	1
26	93−6803	Fitting−Hydraulic 90˚	1
27	93−6805	Hose−Hydraulic	1
28	3256−3	Washer−Flat	4
29	32128−44	Nut−Lock	2
30	93−6918	Asm−Hydraulic Tube (Incl. Ref. #24)	1
31	340−70	Nut−Bulkhead	1
32	340−74	Nut−Bulkhead	2
33	93−6790	Asm−Hydraulic Hose (Incl. Ref. #2 & Protective Sleeve)	1
35	340−77	Fitting−Hydraulic 90˚ (Incl. Ref. #11 & 12)	1
36	93−6975	Asm−Hydraulic Motor	1
37	93−8823	Coupling	3
38	32128−48	Nut−Lock	3

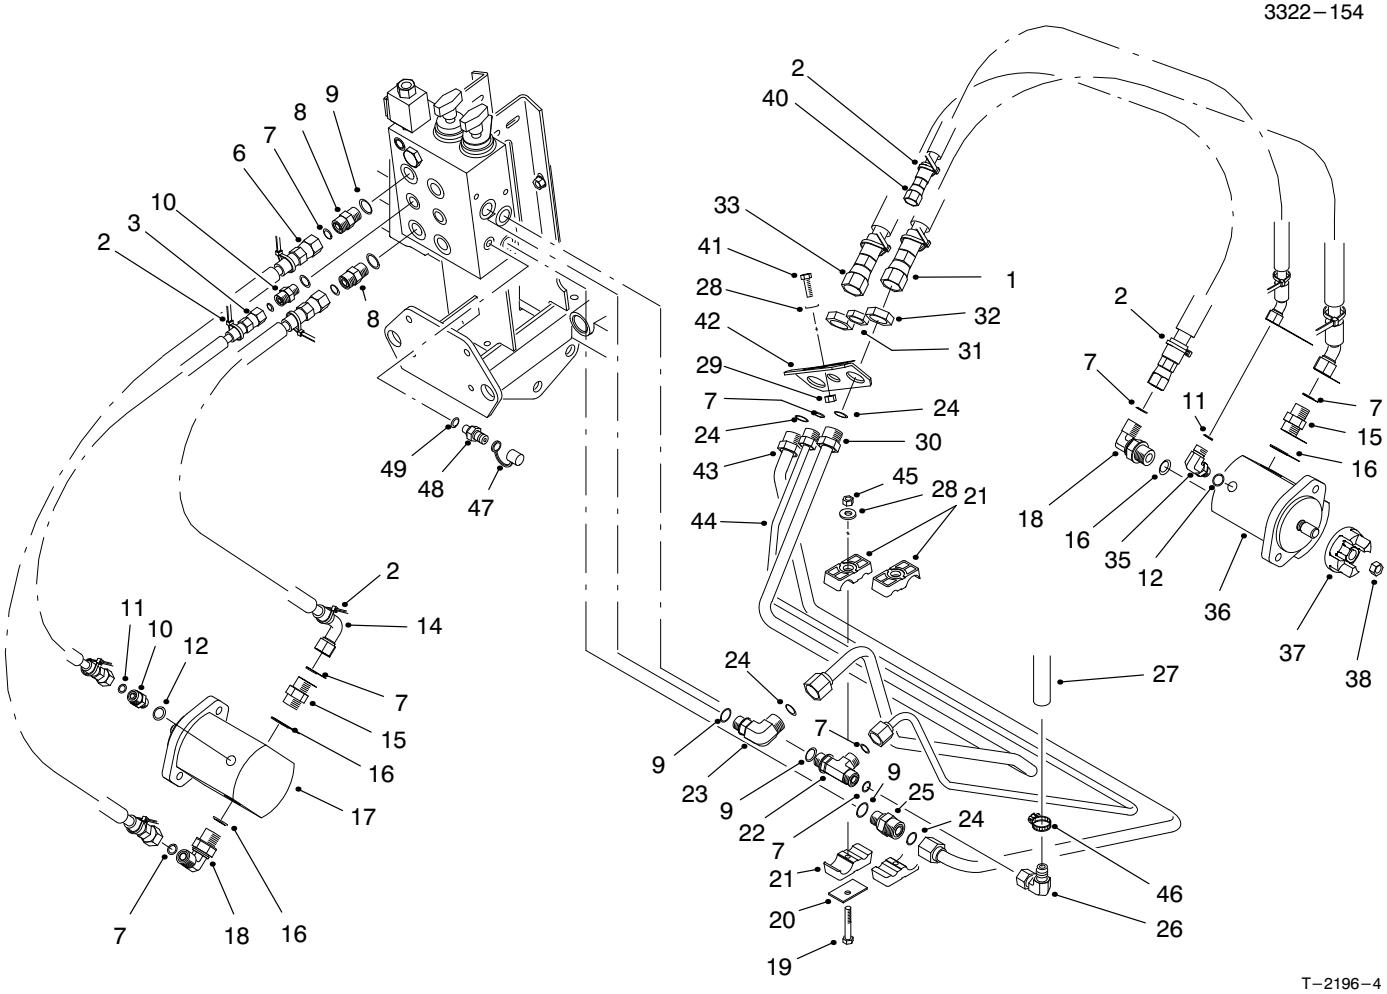

CUTTING UNIT HYDRAULIC PLUMBING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
40	93–6789	Asm–Hydraulic Hose (Incl. Ref. #2 & Protective Sleeve)	1
41	3234–5	Screw–Hex. Hd.	2
42	93–6796	Bracket–Bulkhead	1
43	93–6919	Asm–Hydraulic Tube (Incl. Ref. #24)	1
44	93–6920	Asm–Hydraulic Tube (Incl. Ref. #7)	1

Ref. No.	Part No.	Description	No. Used
45	3296–29	Nut–Lock	2
46	2412–36	Clamp–Hose	1
47	354–79	Cap–Fitting Yellow	1
48	354–77	Fitting–Quick Connect (Incl. Ref. #49)	1
49	237–78	O–Ring	1

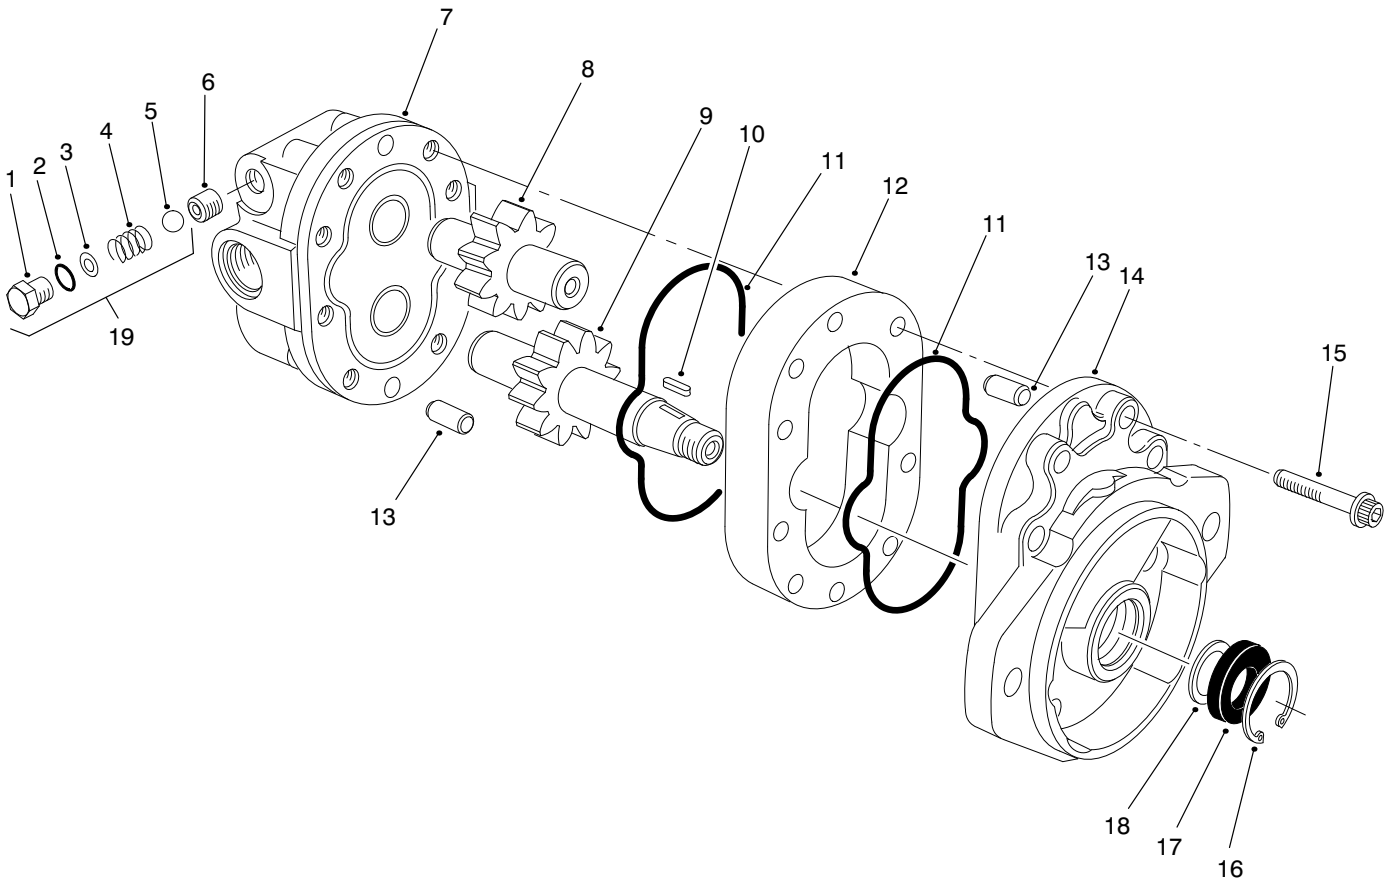


T−2184−3

FRONT REEL MOTOR ASSEMBLY NO. 93−6972

Ref. No.	Part No.	Description	No. Used
†1		Plug	2
†2		O−Ring	2
†3		Shim	A/R
†4		Spring	2
†5		Ball	2
†6		Seal−Relief Valve	2
7	94−3604	Asm−Backplate/Relief (Incl. Ref. #1−6)	1
8	94−3601	Gear−Idler	1
9	94−3602	Gear−Drive	1
10	94−3606	Key	1
11	59−8420	O−Ring	2

Ref. No.	Part No.	Description	No. Used
12	94−3603	Body	1
13	42−2010	Pin−Alignment	2
14	66−5730	Asm−Front Plate	1
15	94−3600	Screw−Hex. Socket Hd.	8
16	59−8320	Ring−Retaining	1
17	66−5710	Seal−Oil	1
18	60−5890	Washer−Backup	1
19	92−9260	Asm−Relief Valve (Incl. Ref. #1−5)	1
*	93−1413	Kit−Seal Repair (Incl. Ref. #11, 16, 17 & 2)	1

*Not Illustrated
†Not Serviced Separately

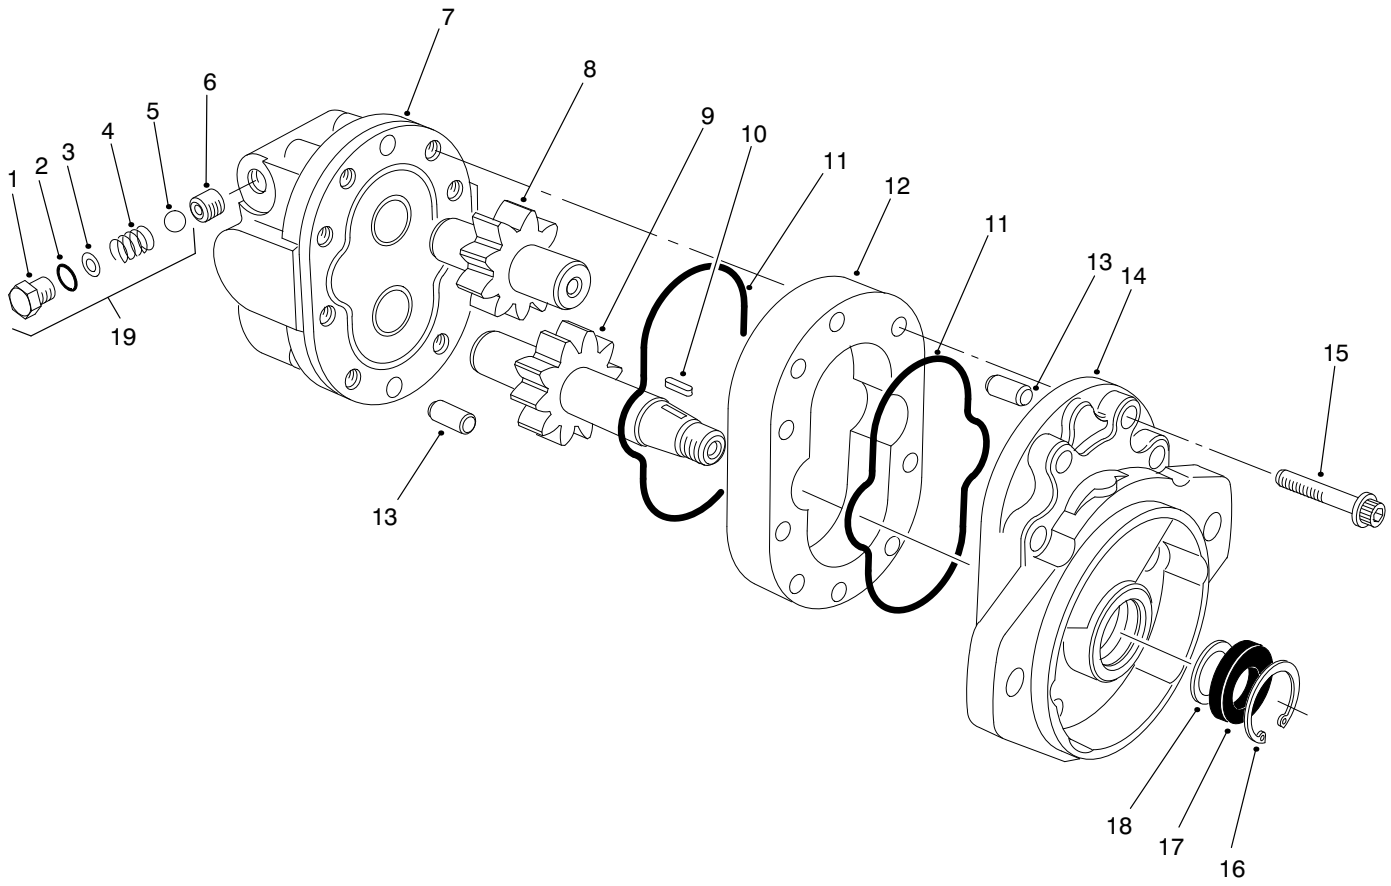


T–2185–3

REAR REEL MOTOR ASSEMBLY NO. 93–6975

Ref. No.	Part No.	Description	No. Used
†1		Plug	2
†2		O–Ring	2
†3		Shim	A/R
†4		Spring	2
†5		Ball	2
†6		Seal–Relief Valve	2
7	94–3605	Asm–Backplate/Relief (Incl. Ref. #1–6)	1
8	94–3601	Gear–Idler	1
9	94–3602	Gear–Drive	1
10	94–3606	Key	1
11	59–8420	O–Ring	2
12	94–3603	Body	1
13	42–2010	Pin–Alignment	2
14	66–5730	Asm–Front Plate	1
15	94–3600	Screw–Hex. Socket Hd.	8
16	59–8320	Ring–Retaining	1
17	66–5710	Seal–Oil	1
18	60–5890	Washer–Backup	1
19	92–9260	Asm–Relief Valve (Incl. Ref. #1–5)	1
*	93–1413	Kit–Seal Repair (Incl. Ref. #11, 16, 17 & 2)	1

*Not Illustrated
†Not Serviced Separately

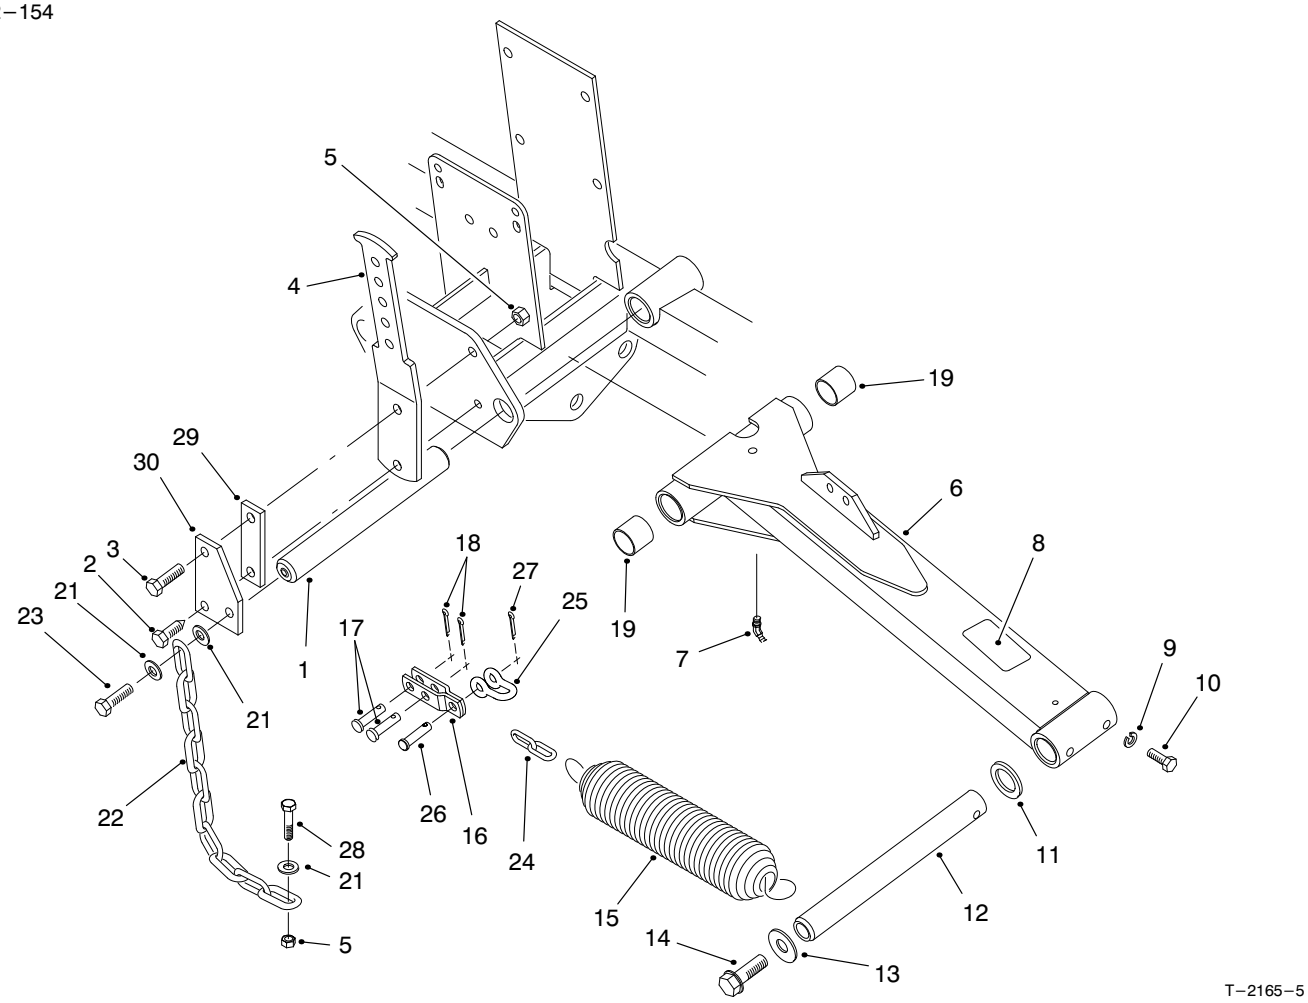


FRONT CUTTING UNIT LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92−1812	Shaft−Lift Pivot	2
2	32144−109	Screw−HH	2
3	323−9	Screw−HH	2
4	92−1818	Arm−Tension Spring	2
5	3296−39	Nut−Hex Lock	4
6	94−5095	Asm−Lift Arm (RM2600D Only) (Incl. Ref. #7−8 & 19)	2
*	94−5100	Asm−Lift Arm (RM2300D Only) (Incl. Ref. #7, 8, & 19)	2
7	302−11	Fitting Lube 45°	2
8	93−6696	Decal−Warning	2
*	84−2940	Decal−Warning (Japan)	2
9	3253−4	Washer−Spring Lock	2
10	322−4	Screw−HH	2
11	256−115	Washer−Thrust	2
12	99−2338	Rod−Pivot	2
13	3256−6	Washer−Flat	2
14	3234−32	Screw−HH	2

Ref. No.	Part No.	Description	No. Used
15	5−0743	Spring	2
16	93−6912	Shackle	2
17	283−75	Pin−Clevis	4
18	3272−10	Pin−Cotter	4
19	3−0348	Bushing	4
21	3256−24	Washer−Flat	6
22	93−6738	Chain−Tipper	2
23	323−18	Screw−Hex. Hd.	2
24	62−7300	Chain (RM2600D Only)	2
25	282−4	Clevis	2
26	283−6	Pin−Clevis	2
27	3272−11	Pin−Cotter	2
28	323−7	Screw−HH	2
29	98−3445	Spacer	2
30	98−3446	Plate−Reinforcement	2
*	03471	RM2300D Lift Arm Kit (Incl. Ref. #6−19)	1
*	03472	RM2600D Lift Arm Kit (Incl. Ref. #6−19 & 24−27)	1

*Not Illustrated

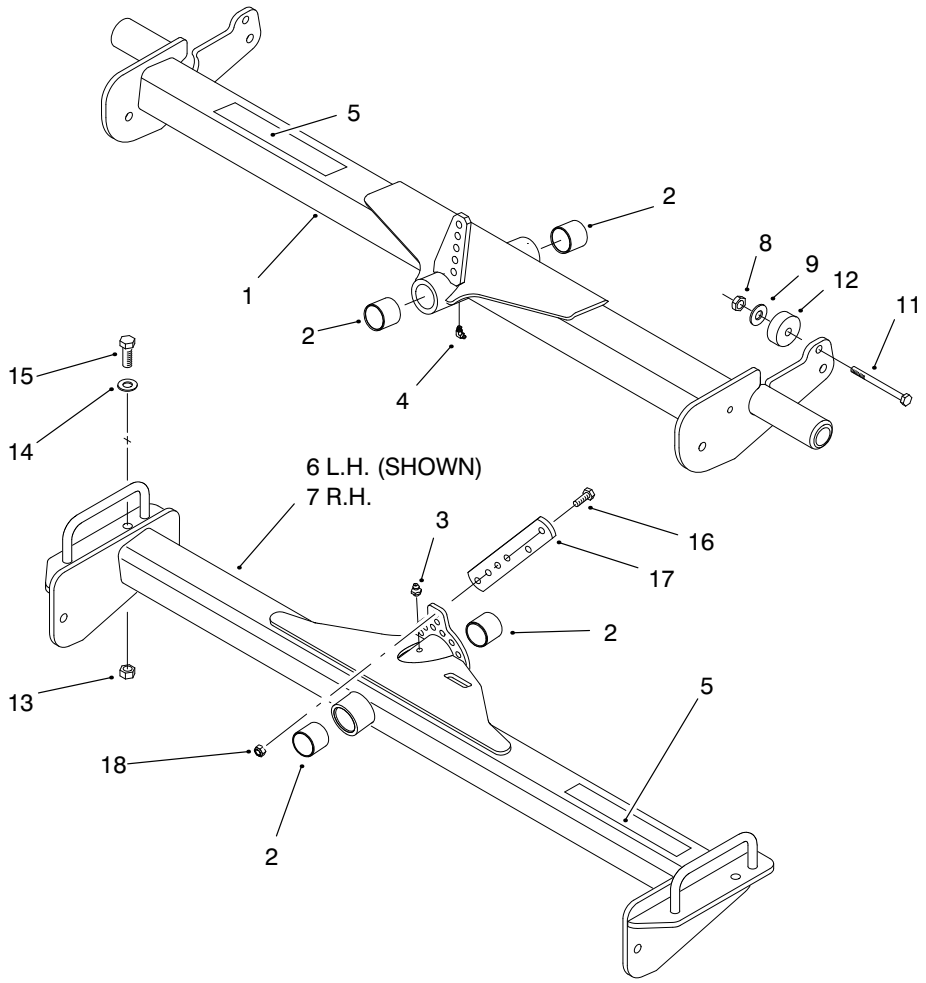


T–2487–4

CUTTING UNIT CARRIER FRAMES

Ref. No.	Part No.	Description	No. Used
1	94–5098	Asm–Carrier Frame, Rear (Incl. Ref. #2, 4 & 5) (For RM2600D Only)	1
*	94–5103	Asm–Carrier Frame, Rear (Incl. Ref. #2, 4 & 5) (For RM2300D Only)	1
2	3–0348	Bushing	6
3	302–5	Fitting–Lube	2
4	302–60	Fitting–Lube 90°	1
5	94–3353	Decal–Warning	3
6	94–5096	Asm–Carrier Frame, LH (Incl. Ref. #2, 3 & 5) (RM2600D Only)	1
*	94–5073	Asm–Carrier Frame, LH (Incl. Ref. #2, 3 & 5) (RM2300D Only)	1
7	94–5097	Asm–Carrier Frame, RH (Incl. Ref. #2, 3 & 5) (RM2600D Only)	1
*	94–5102	Asm–Carrier Frame, RH (Incl. Ref. #2, 3 & 5) (RM2300D Only)	1

Ref. No.	Part No.	Description	No. Used
8	3296–29	Nut–Lock	2
9	3256–3	Washer–Flat	2
11	322–6	Screw–HH	2
12	94–5087	Bumper	2
13	3296–22	Nut–Lock	2
14	3256–24	Washer–Flat	2
15	323–7	Screw–HH	2
16	321–35	Screw–HH (RM2600D Only)	4
17	98–9013	Anchor–Spring (RM2600D Only)	2
18	32153–4	Nut–Lock (RM2600D Only)	4
*	03471	RM2300D Lift Arm Kit (Incl. Ref. #1–12)	1
*	03472	RM2600D Lift Arm Kit (Incl. Ref. #1–12)	1

3322−154

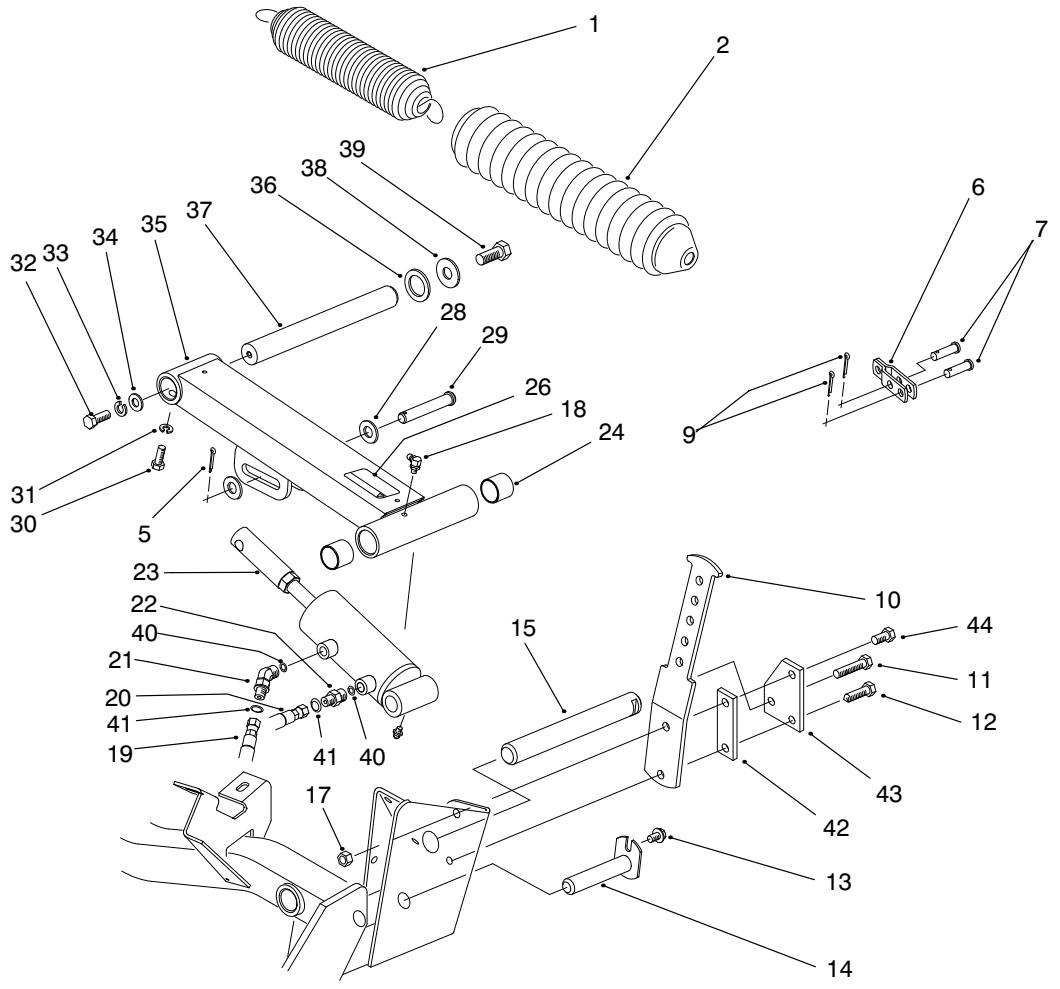


T−2166−3

REAR CUTTING UNIT LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	5−0743	Spring	1
2	62−7240	Sleeve−Vinyl Spring	1
5	3272−11	Pin−Cotter	1
6	93−6912	Shackle	1
7	283−75	Pin−Clevis	2
9	3272−10	Pin−Cotter	2
10	92−1818	Arm−Tension Spring	1
11	323−9	Screw−HH	1
12	32144−109	Screw−HH	1
13	32144−14	Screw−HH	1
14	93−6893	Ram Pivot Pin	1
15	92−1812	Shaft−Lift Pivot	1
17	3296−39	Nut−Hex. Lock	1
18	302−60	Fitting−Lube	1
19	94−5009	Asm−Hose	1
20	94−5008	Asm−Hose	1
21	340−103	Fitting (Incl. Ref. #40 & 41)	1
22	340−92	Fitting−Straight (Incl. Ref. #40 & 41)	1
23	93−6869	Asm−Hydraulic Cylinder	1
24	3−0348	Bushing	2
26	93−6696	Decal−Warning	1

Ref. No.	Part No.	Description	No. Used
*	84−2940	Decal−Warning (Japan)	1
28	3256−26	Washer−Flat	2
29	93−6926	Pin−Clevis	1
30	322−4	Screw−HH	1
31	3253−4	Washer−Spring Lock	1
32	322−26	Screw−HH	1
33	3253−4	Washer−Spring Lock	1
34	3256−57	Washer−Flat	1
35	94−3635	Asm−Lift Arm, Rear (Incl. Ref. #18, 24 & 26)	1
36	256−115	Washer−Thrust	1
37	99−2338	Rod−Pivot	1
38	3256−6	Washer−Flat	1
39	3234−32	Screw−HH	1
40	237−78	O−Ring	2
41	237−21	O−Ring	2
42	98−3445	Spacer	1
43	98−3446	Plate−Reinforcement	1
44	323−4	Screw−HH	1
*	03471	RM2300D Lift Arm Kit (Incl. Ref. #1, 2, 6, 7 & 9)	1
*	03472	RM2600D Lift Arm Kit (Incl. Ref. #1, 2, 6, 7 & 9)	1

*Not Illustrated

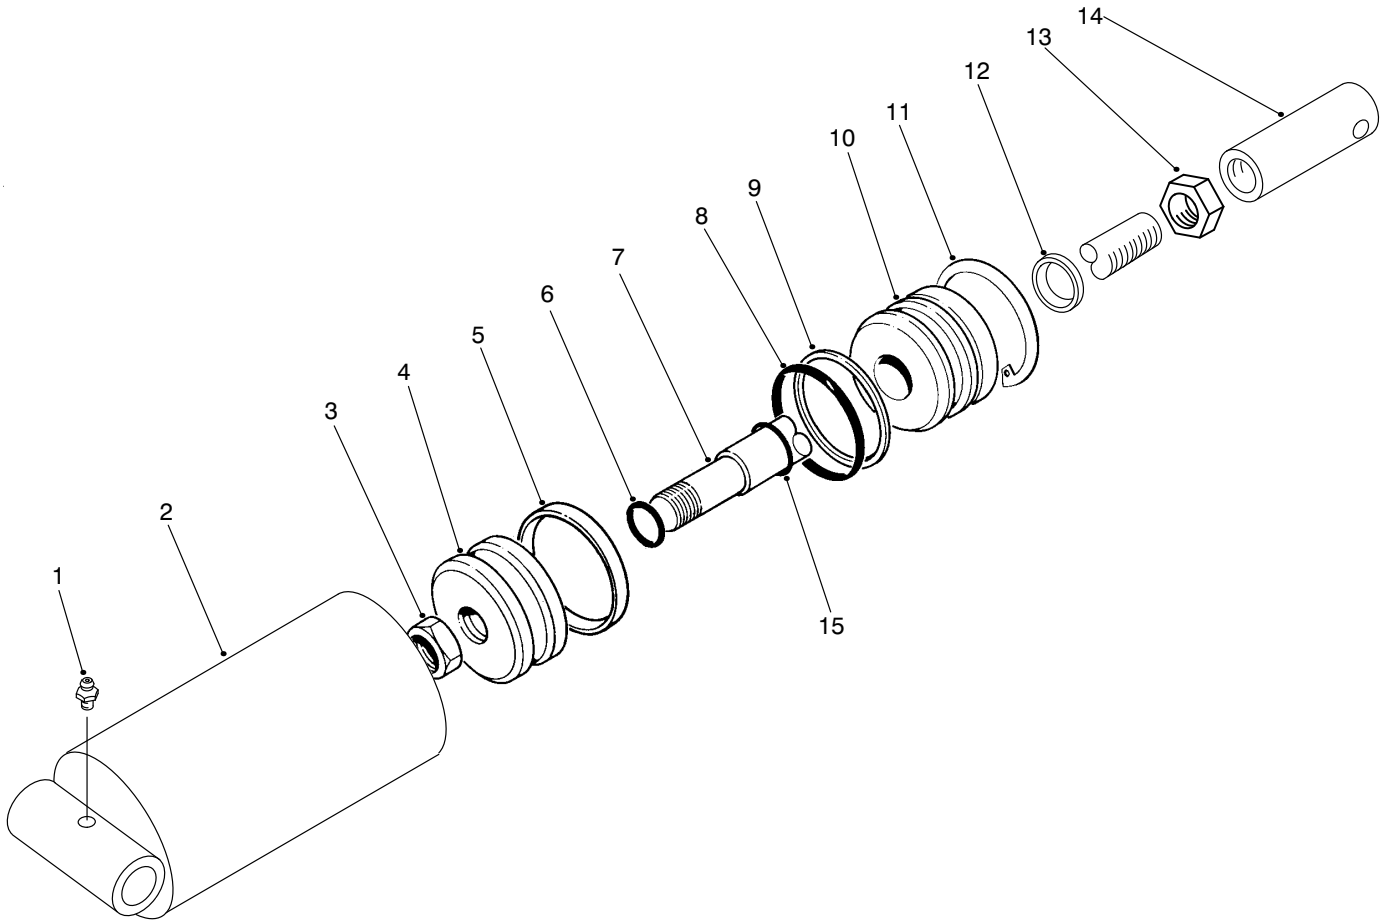


T−2200−1

REAR HYDRAULIC CYLINDER ASSEMBLY NO. 93−6869

Ref. No.	Part No.	Description	No. Used
1	302−58	Fitting−Grease	1
2	94−3620	Barrel	1
3	32152−10	Nut−Lock	1
4	94−3616	Piston	1
5		Uniring	1
6		O−Ring	1
7	94−3618	Shaft	1
8		O−Ring	1
9		Washer−Backup	1

Ref. No.	Part No.	Description	No. Used
10	94−3615	Head	1
11	94−3638	Ring−Retaining	1
12		Seal−Dust	1
13	3220−6	Nut−Hex.	1
14	94−3617	Clevis−Rod	1
*	94−3619	Kit−Repair (Incl. Ref. #5−6, 8−9, 12 & 15)	1

*Not Illustrated

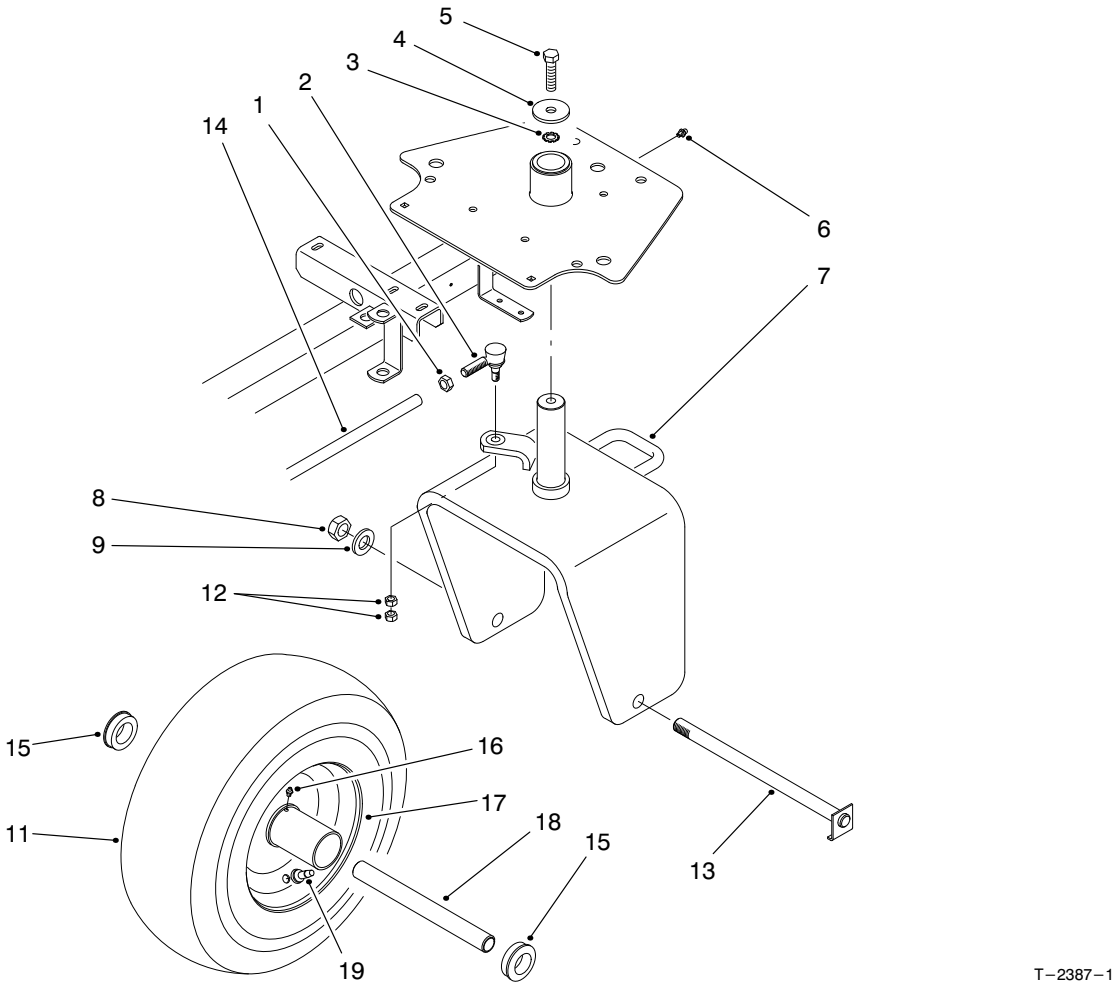


T−2387−1

REAR WHEEL ASSEMBLY (2WD−MODEL NO. 03422)

Ref. No.	Part No.	Description	No. Used
1	3220−12	Nut−Jam	1
2	21−0141	Asm−Socket, RH	1
3	3255−2	Washer−Lock ETLW	1
4	75−7730	Washer−Thrust	1
5	325−6	Screw−Hex. Hd.	1
6	302−5	Fitting−Grease	1
7	94−3675	Fork−Castor	1
8	3296−50	Nut−Lock	1
9	3256−28	Washer−Flat	1
11	94−5028	Tire	1

Ref. No.	Part No.	Description	No. Used
12	3220−3	Nut−Jam	2
13	94−5111	Axle−Castor	1
14	61−2070	Link−Steering	1
15	251−321	Bearing	2
16	302−55	Fitting−Grease	1
17	94−5952	Asm−Rim (Incl. Ref. #16)	1
18	94−5970	Spacer	1
19	232−27	Valve−Stem	1

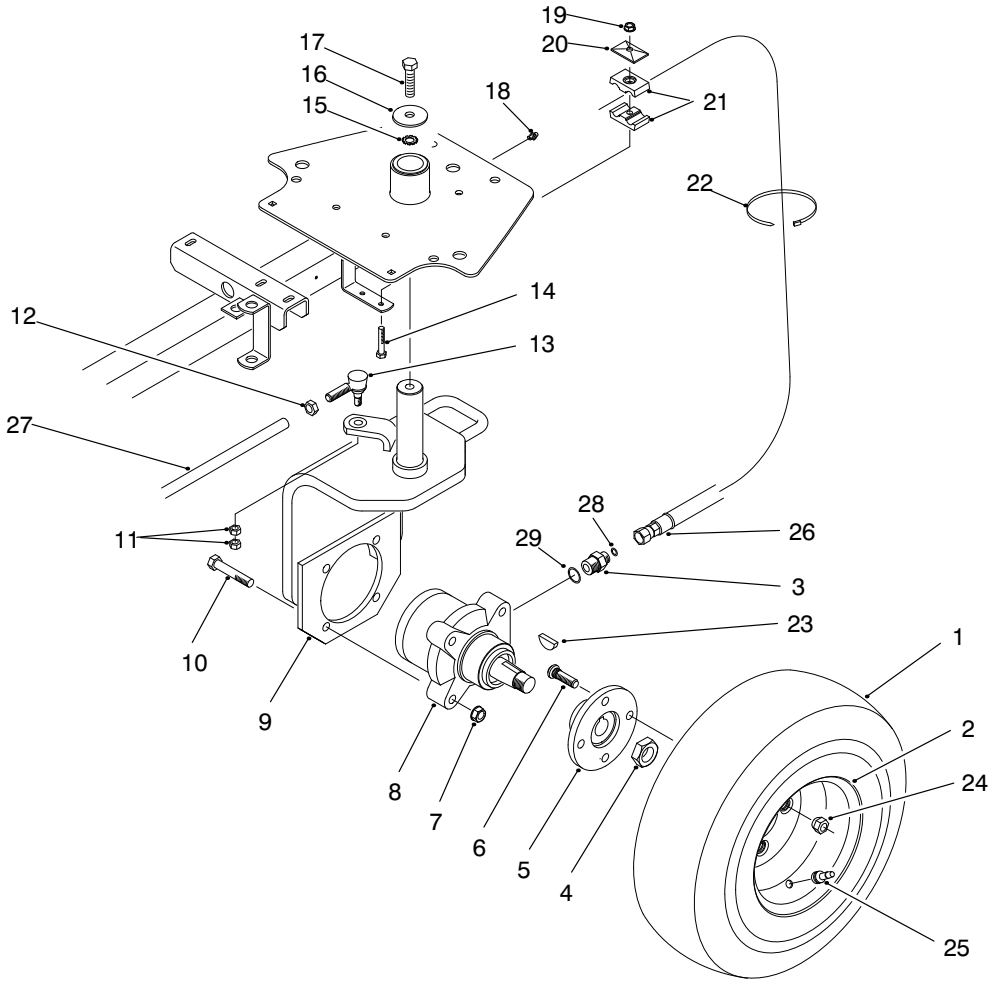


T–2154–1

REAR WHEEL ASSEMBLY (3WD–MODEL NO. 03427)

Ref. No.	Part No.	Description	No. Used
1	94–5028	Tire	1
2	93–6881	Rim	1
3	340–6	Fitting–ORS (Incl. Ref. #28 & 29)	2
4	26–3790	Nut–Lock	1
5	10–6870	Hub–Wheel	1
6	10–6830	Stud–Drive Type	4
7	3296–23	Nut–Hex Lock	4
8	75–9990	Motor–Hydraulic (Incl. Ref. #23) (Service Parts on Page 17)	1
9	93–6782	Fork–Rear Wheel	1
10	3274–93	Screw–HSH	4
11	3220–3	Nut–Hex. Jam	2
12	3220–12	Nut–Hex. Jam	1
13	21–0141	Asm–Socket, RH	1

Ref. No.	Part No.	Description	No. Used
14	322–9	Screw–HH	1
15	3255–2	Washer–Lock Ext Tooth	1
16	75–7730	Washer–Thrust	1
17	325–6	Screw–HH	1
18	302–5	Fitting–Grease, Straight	1
19	3296–29	Nut–Hex. Lock	1
20	69–9760	Plate–Cover	1
21	56–7976	Clamp–Tube	2
22	3290–379	Tie–Cable	1
23	3257–42	Key–Woodruff	1
24	242–50	Nut–Lug	4
25	232–27	Stem–Valve	1
26	93–6843	Hose–Hydraulic	2
27	61–2070	Link–Steering	1
28	237–30	O–Ring	2
29	237–80	O–Ring	2

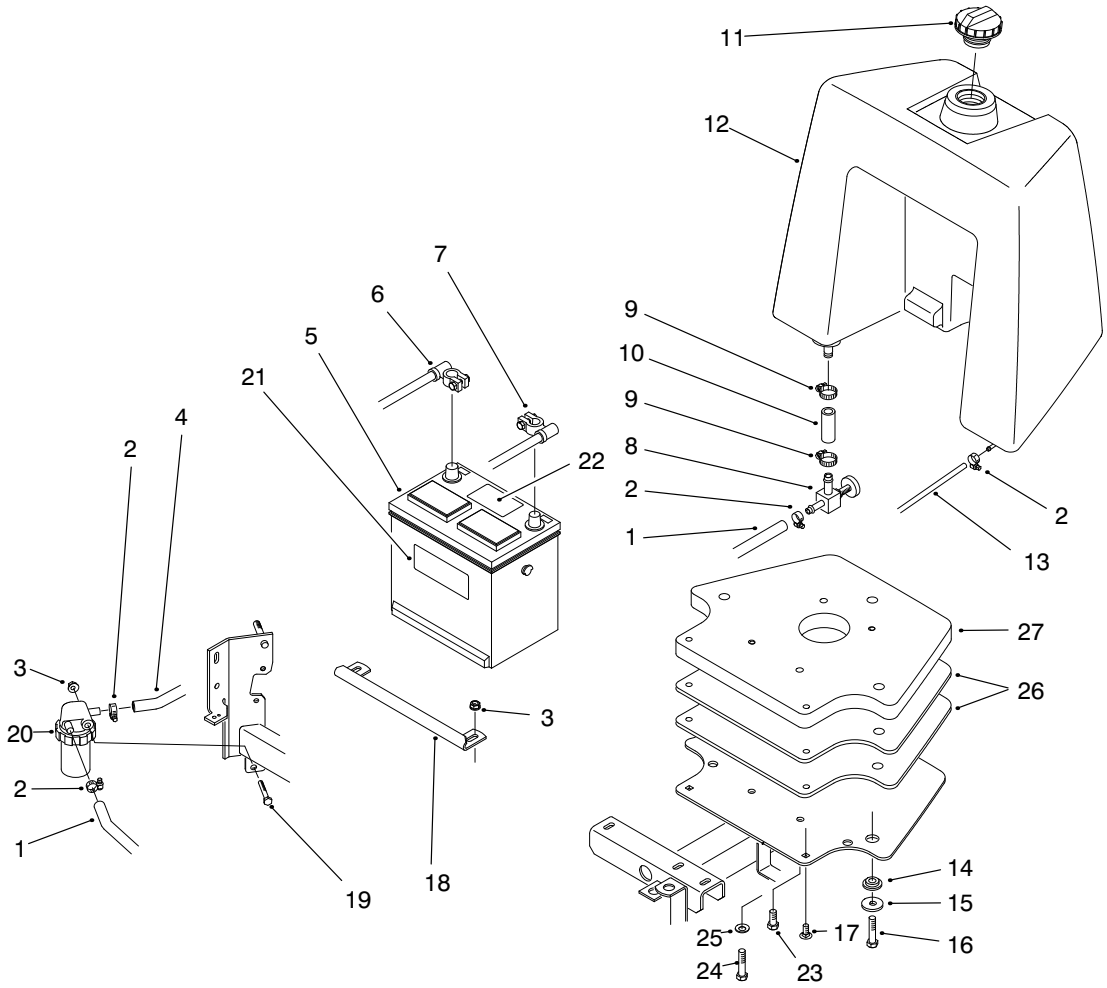

T−2156−2

FUEL SYSTEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	23−2140	Hose−Fuel	1
2	2412−108	Clamp−Hose	4
3	32128−44	Nut−Flange	3
4	51−0670	Hose−Fuel Line	1
5	83−9000	Battery	1
6	93−6775	Cable−Battery, Pos.	1
7	94−5980	Cable−Battery, Neg.	1
8	56−2520	Fitting−Fuel Shutoff	1
9	2412−36	Clamp−Hose	2
10	56−2230	Hose−Fuel	1
11	93−3102	Fuel Cap−Diesel	1
12	83−8720	Tank−Fuel	1
13	75−4703	Hose−Fuel Return	1
14	240−11	Grommet	3
15	63−8410	Washer−Flat	3
16	323−5	Screw−Hex. Hd.	3
*	323−14	Screw−Hex. Hd. (Model No. 03422 Europe)	3
*	323−12	Screw−Hex. Hd. (Model No. 03427 Europe)	3


Ref. No.	Part No.	Description	No. Used
17	3230−1	Bolt−Carriage	3
*	3230−9	Bolt−Carriage (Model No. 03422 Europe)	2
*	3230−7	Bolt−Carriage (Model No. 03427 Europe)	2
18	83−9240	Bracket−Battery	1
19	322−12	Screw HH	1
†20	130306041	Filter−Fuel	1
21	93−6668	Decal−Battery (Europe)	1
22	93−7276	Decal−Danger (Europe)	1
23	3234−18	Screw−Hex. Flange Hd. (Model No. 03427 Europe)	2
24	323−10	Screw−Hex. Hd. (Model No. 03422 Europe)	2
25	3256−24	Washer−Flat (Model No. 03422 Europe)	2
26	94−3698	Weight−Rear (Model No. 03427 Europe)	2
27	83−9390	Weight−Rear (Model No. 03422 Europe)	2
		(Model No. 03427 Europe)	1

*Not Illustrated

†Obtain from your local Perkins Dealer.

SPECIAL TOOLS


DRIVE MOTOR SEAL INSTALLATION TOOL NO. *19–2660

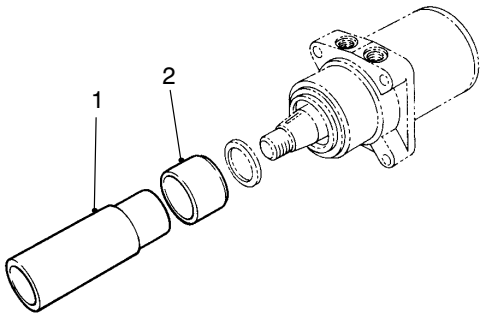

T–0728

Ref. No.	Part No.	Description	No. Used
1		Driver–Seal	1
2		Holder–Seal	1


BEDKNIFE SCREW TOOL NO. *TOR510880

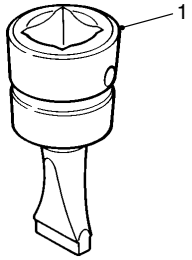

T–0729

Ref. No.	Part No.	Description	No. Used
1		Tool–Bedknife Screw	1


HYDRAULIC OIL RESERVOIR PLUG NO. *88–9220

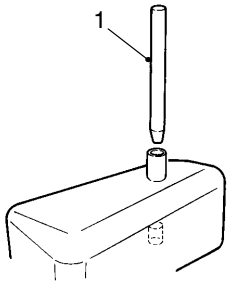

T–1213

Ref. No.	Part No.	Description	No. Used
1		Plug–Reservoir	1


GAUGE BAR ASSEMBLY NO. *TOR138199

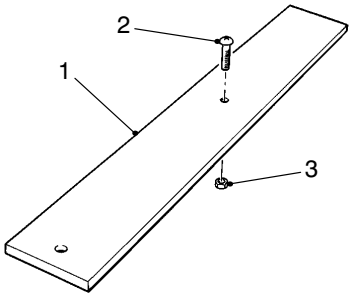

T–1151

Ref. No.	Part No.	Description	No. Used
1	65–8320	Bar–Height–Of–Cut	1
2	32122–2	Screw–Round Hd.	1
3	3219–14	Nut–Hex.	1


BACKLAPPING BRUSH ASSEMBLY NO. *TOR299100

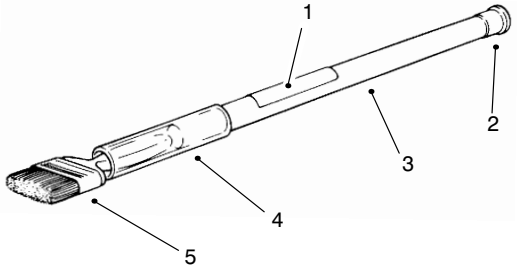

T–0731

Ref. No.	Part No.	Description	No. Used
1	12–9140	Decal	1
2	2410–18	Plug	1
3	29–9080	Handle	1
4	29–9090	Hose–Handle	1
5	36–4310	Brush	1

*Obtain these items directly from OTC 2013 4th St. Owatonna, MN. 55060 1–800–533–0492 (in Minnesota and Canada 1–507–455–7050) Fax. 507–455–7011.

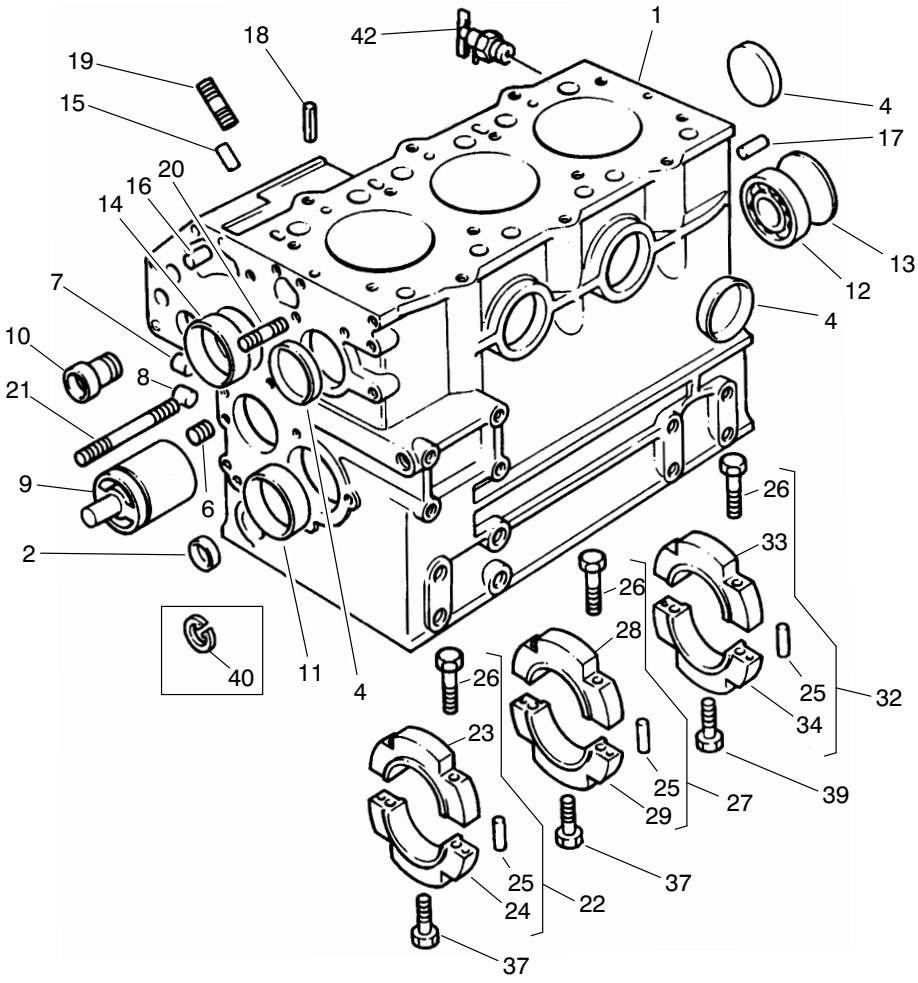


T–1377–2

CYLINDER BLOCK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	110186150	Kit–Cylinder Block	1
2	064200015	Plug	1
4	064200040	Plug	4
6	198466050	Plug	3
7	198466010	Plug	4
8	198466070	Plug	2
9	165296160	Shaft	1
10	198517090	Bushing	1
11	198517300	Bushing	1
*	198517304	Bushing 0.25mm US	1
*	198517307	Bushing 0.50mm US	1
12	040106203	Bearing–Ball	1
13	064100045	Plug	1
14	042303015	Bushing	1
15	030500512	Dowel	2
16	030500616	Dowel	2
17	030500820	Dowel	2
18	030309005	Pin	2
19	012100620	Stud	2
20	012100635	Stud	1
21	012100660	Stud	1

Ref. No.	Part No.	Description	No. Used
22	110156220	Holder (Incl. Ref. #23 & 24)	1
23		Cap	1
24		Cap	1
25	030500612	Dowel	6
26	010810840	Screw	6
27	110156230	Holder (Incl. Ref. #28 & 29)	1
28		Cap	1
29		Cap	1
32	110156240	Holder (Incl. Ref. #33 & 34)	1
33		Cap	1
34		Cap	1
37	011310850	Screw	2
39	010700845	Screw	2
40	036509005	Circlip	1
41	064200018	Plug	2
42	198736052	Cock	1
*	195906840	Kit–Gasket	1

NOTE: Obtain replacement parts from your local Perkins Dealer.
*Not Illustrated

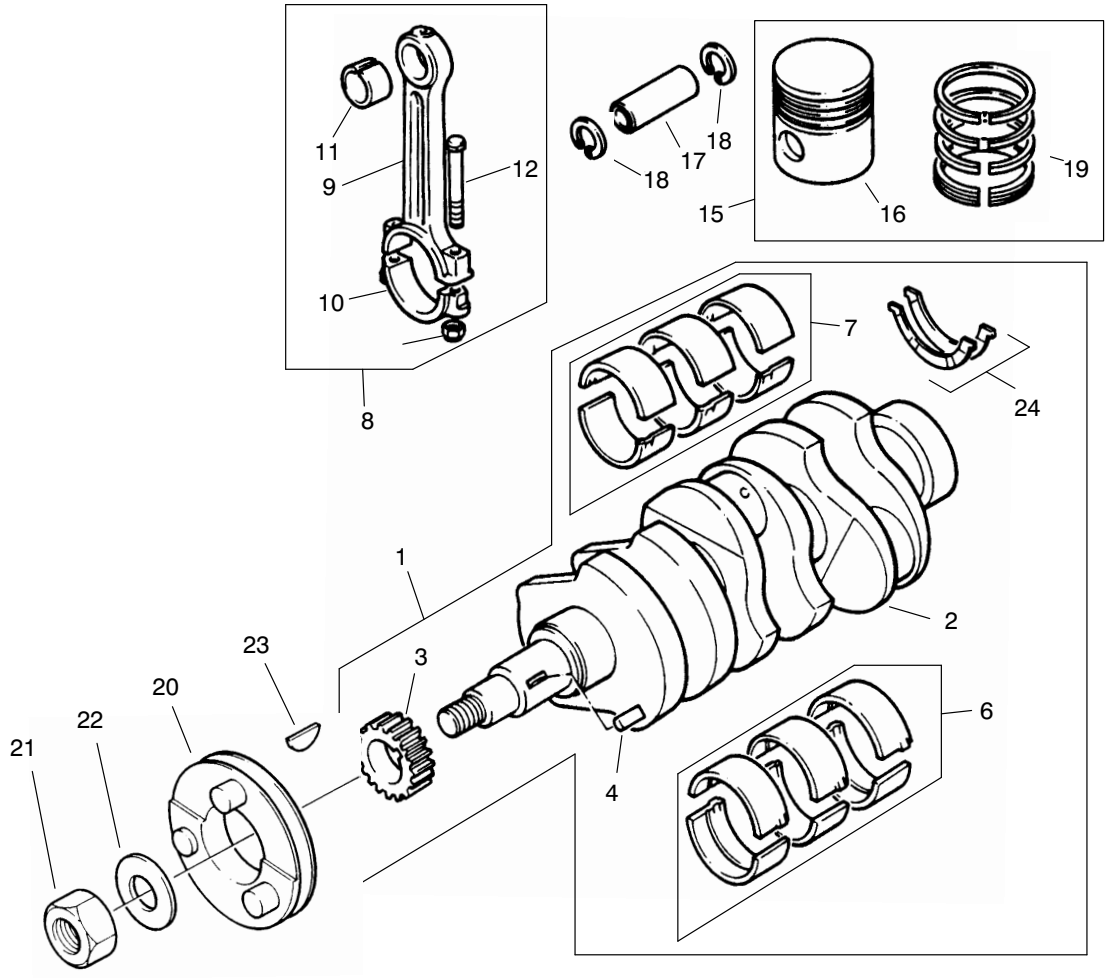


T−2174−4

CRANKSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	115236020	Kit−Crankshaft	
		(Incl. Ref. #2−4, 6−7 & 24)	1
2		Crankshaft	1
3	115276210	Gear	1
4	030509020	Key	1
6	198586030	Kit−Bearing Std.	1
*	198586034	Kit−Bearing 0.25mm US	1
*	198586037	Kit−Bearing 0.50mm US	1
7	198586060	Kit−Bearing Std.	1
*	198586064	Kit−Bearing 0.25mm US	1
*	198586067	Kit−Bearing 0.50mm US	1
8	115026240	Asm−Connecting Rod	
		(Incl. Ref. # 9−13)	3
9		Rod	1
10		Cap	1
11	198517325	Bushing	1

Ref. No.	Part No.	Description	No. Used
12	115176130	Screw	2
13	020109103	Nut	2
15	115017340	Kit−Piston Std.	
		(Incl. Ref. #16 & 19)	1
*	115016970	K−− Piston 0.5mm OS	
		(Incl. Ref. #16 & 19)	1
16		Piston	1
17	115326260	Pin	1
18	036500019	Circlip	2
19	115107820	Kit−Piston Ring Std.	1
*	115107410	Kit−Piston Ring 0.5mm OS	1
20	115397720	Pulley	1
21	020800018	Nut	1
22	026200018	Washer	1
23	034100508	Key	1
24		Ring	2

NOTE: Obtain replacement parts from your local Perkins Dealer.
*Not Illustrated

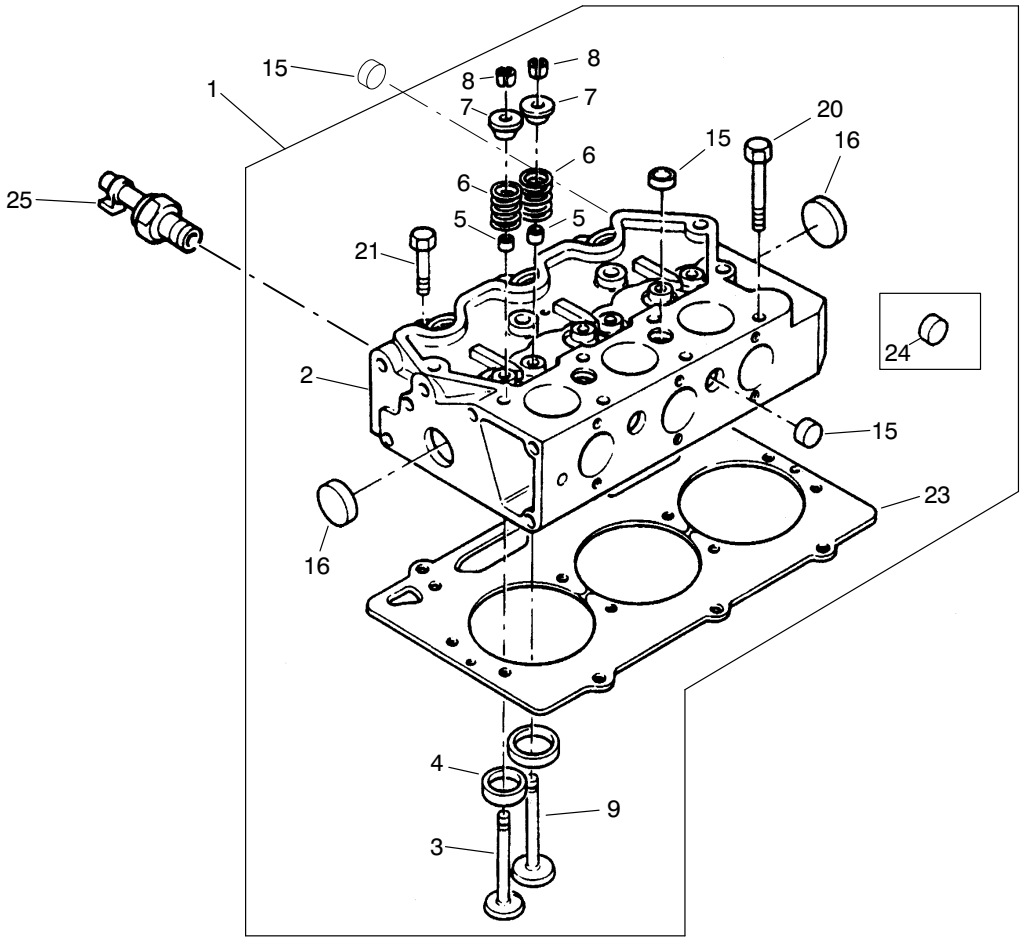


T–2175–4

CYLINDER HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	111016911	Kit–Cylinder Head	1
2	111086030	Kit–Cylinder Head	1
3	120166280	Valve Inlet	3
5	120406080	Seal	6
6	198217070	Spring	6
7	120186100	Cap	6
8	120226080	Cotter	12
9	120176290	Valve–Exhaust	3

Ref. No.	Part No.	Description	No. Used
10	110136290	Insert	6
15	198466070	Plug	4
16	064200022	Plug	6
20	111136340	Screw	11
21	111136350	Screw	3
23	111147400	Gasket 1.3 mm OS	1
24	064200018	Plug	2
25	185246060	Switch–Oil Pressure	1

NOTE: Obtain replacement parts from your local Perkins Dealer

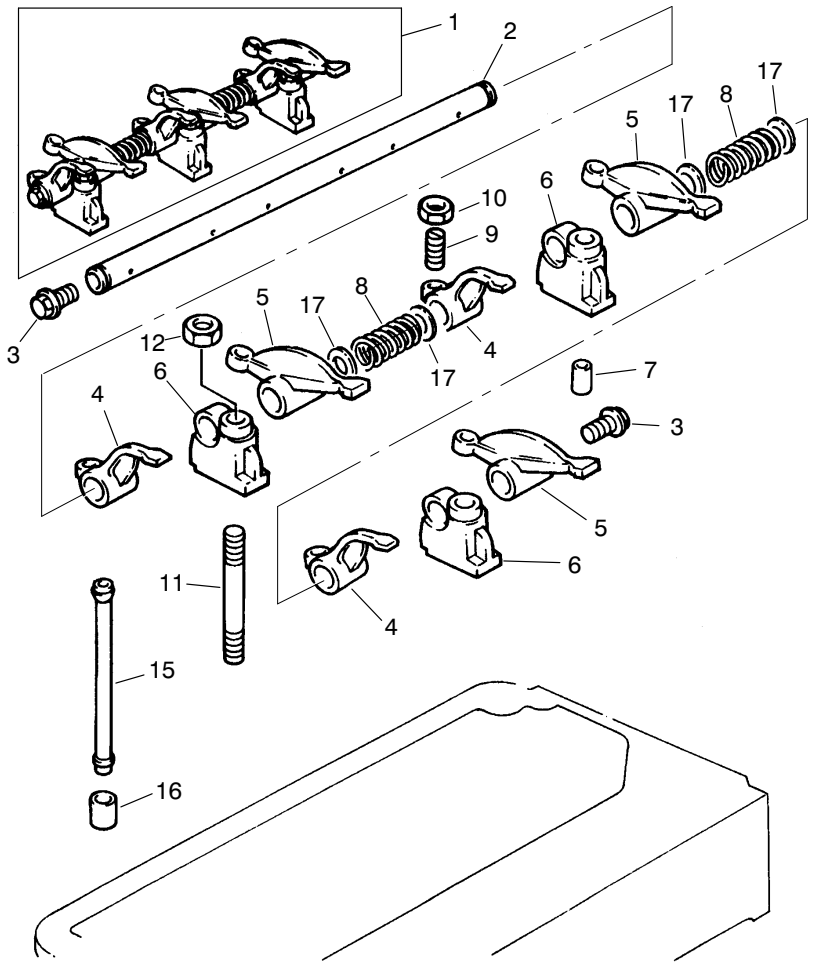


T–1380–1

ROCKER ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	120036330	Asm–Rocker Shaft	1
2	120316190	Shaft	1
3	064609006	Plug	2
4	120356120	Lever	3
5	120356110	Lever	3
6	120346170	Bracket	3
7	030300325	Pin	1
8	198217080	Spring	2

Ref. No.	Part No.	Description	No. Used
9	199486220	Adjusting Screw	6
10	020109076	Nut	6
11	012109177	Stud	3
12	023100008	Nut	3
15	120456240	Rod	6
16	120116160	Tappet	6
17	199280280	Washer	4

NOTE: Obtain replacement parts from your local Perkins Dealer.

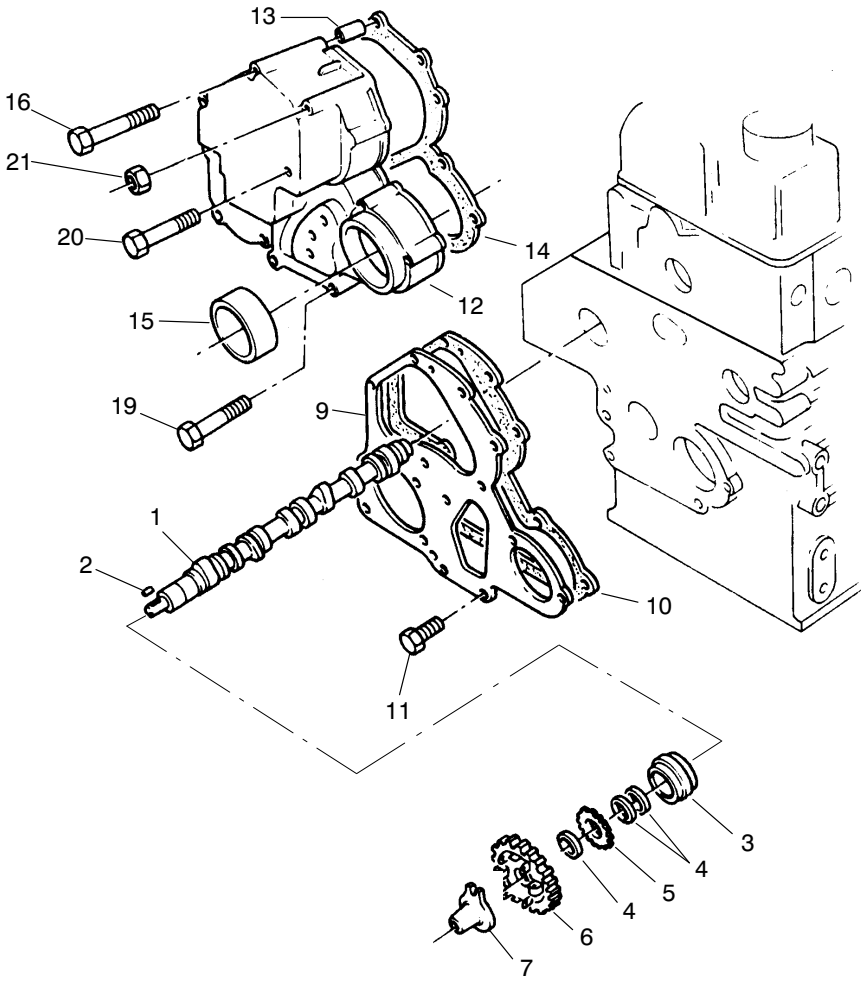


T–1381–1

CAMSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	120026121	Camshaft	1
2	034100508	Key	1
3	040109059	Bearing	1
4	199216230	Spacer	3
5	120736081	Gear	1
6	120016030	Gear	1
7	125256120	Tappet	1
9	165166260	Plate	1
10	165996400	Joint	1

Ref. No.	Part No.	Description	No. Used
11	011300612	Bolt	3
12	165106131	Cover	1
13	030300414	Pin	1
14	165996410	Joint	1
15	198636090	Seal	1
16	011300680	Screw	2
19	011300640	Screw	4
20	011300660	Screw	2
21	023100006	Nut	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

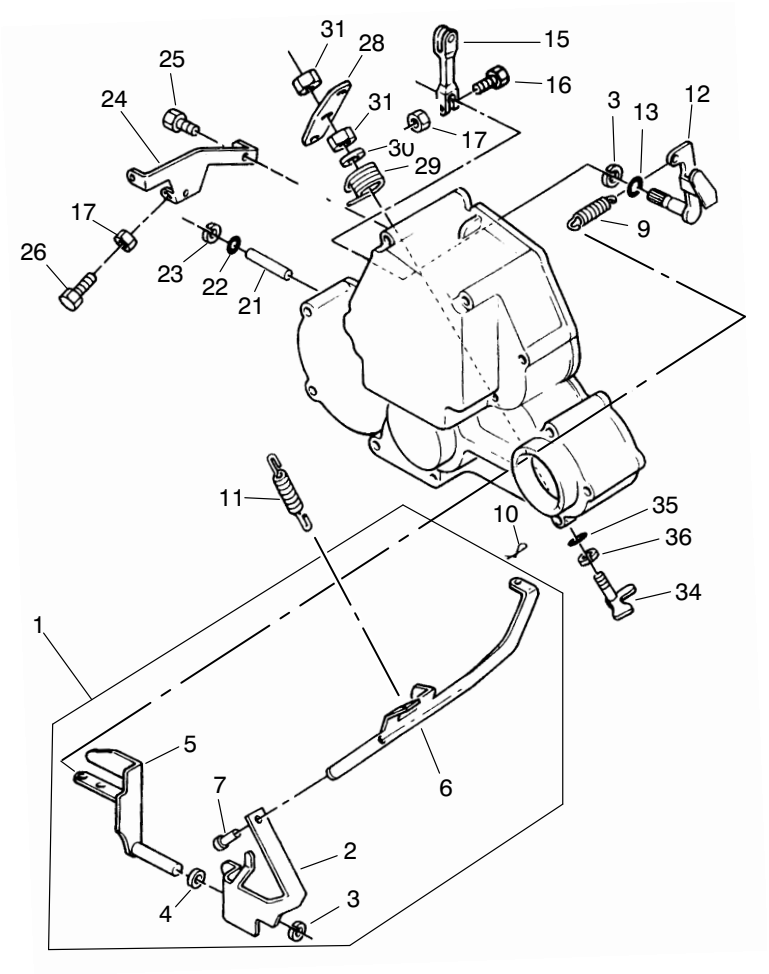


T−1382−2

TIMING COVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	125046250	Lever	
		(Incl. Ref. #2−7)	1
2		Lever	1
3	036800008	Circlip	2
4	026200010	Washer	1
5	125406071	Lever	1
6		Link	1
7		Pin	1
9	198217220	Spring	1
10	031100004	Pin	1
11	198216731	Spring	1
12	125156170	Arm	1
13	052100070	O Ring	1
15	125416020	Lever	1
16	010110630	Screw	1

Ref. No.	Part No.	Description	No. Used
17	023100006	Nut	3
21	125116130	Shaft	1
22	052100030	O−Ring	1
23	036800005	Circlip	1
24	125976120	Stay	1
25	011300616	Screw	2
26	010109264	Screw	2
28	125176080	Lever	1
29	198216760	Spring	1
30	026200008	Washer	1
31	020300008	Nut	2
34	125156180	Arm	1
35	052100050	O−Ring	1
36	036800006	Circlip	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

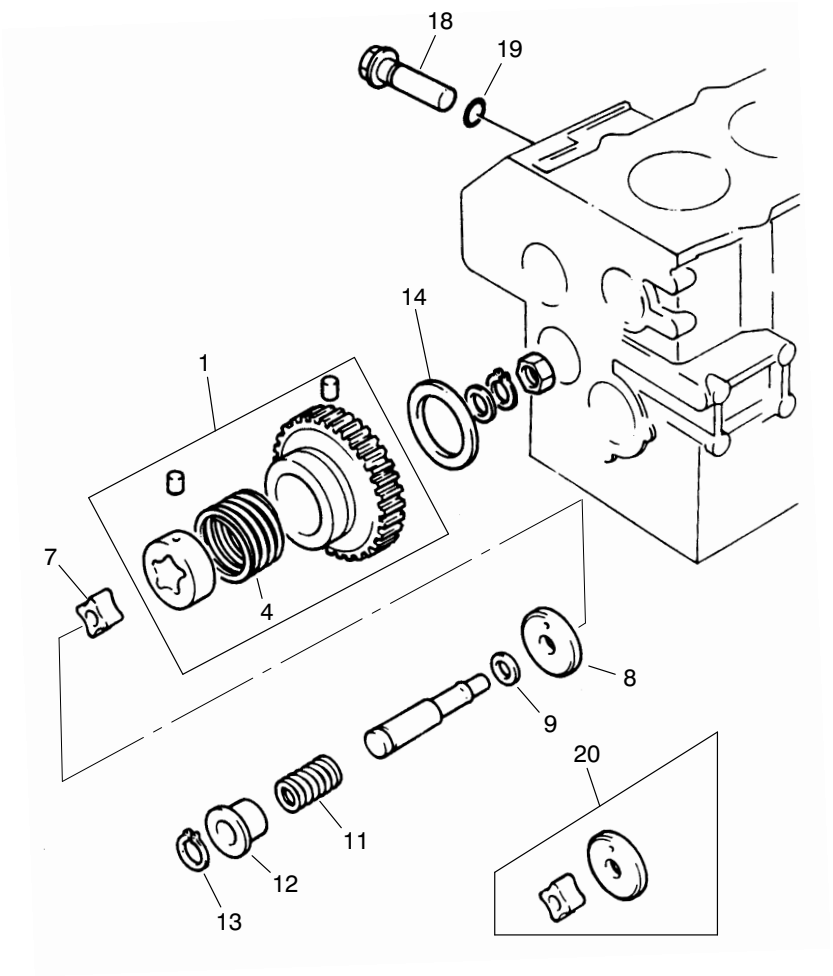


T−1383−1

OIL PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	165026110	Asm−Gear (Incl. Ref. #4)	1
4	198216821	Spring	1
7	140166130	Rotor	1
8	140116140	Cover	1
9	199286150	Shim 0.10mm OS	1
*	199286160	Shim 0.15mm OS	1
*	199286170	Shim 0.20mm OS	1
*	199286180	Shim 0.50mm OS	1

Ref. No.	Part No.	Description	No. Used
11	198216720	Spring	1
12	199236540	Collar	1
13	036800010	Circlip	1
14	199266180	Washer	1
18	140036120	Valve	1
19	052100150	O−Ring	1
20	140186010	Kit−Repalr	1

NOTE: Obtain replacement parts from your local Perkins Dealer.
*Not Illustrated

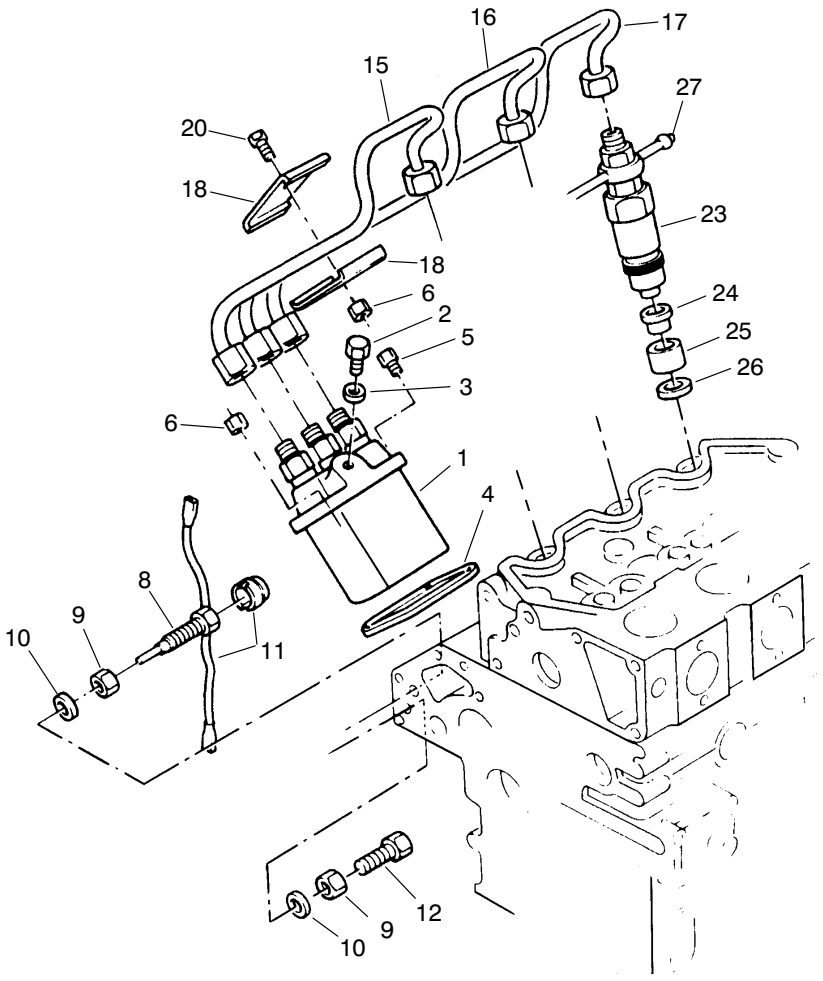


T–1384–2

FUEL INJECTION SYSTEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	131017610	Injection Pump	1
2	131236280	Screw	1
3	025100006	Washer	1
4	131426300	Shim 0.2 mm	1
5	011300620	Screw	2
6	023100006	Nut	4
8	131046160	Screw	1
9	023109002	Nut	2
10	025100010	Washer	2
11	198236030	Wire	1
12	010109270	Screw	1

Ref. No.	Part No.	Description	No. Used
15	131507010	Injection Pipe No. 1 Cyl.	1
16	131507020	Injection Pipe No. 2 Cyl.	1
17	131507030	Injection Pipe No. 3 Cyl.	1
18	199106020	Damper	4
20	010100625	Screw	2
23	131406340	Atomizer	3
24	131426200	Gasket	3
25	111316280	Insert	3
26	198996090	Seal	3
27	131606260	Pipe	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

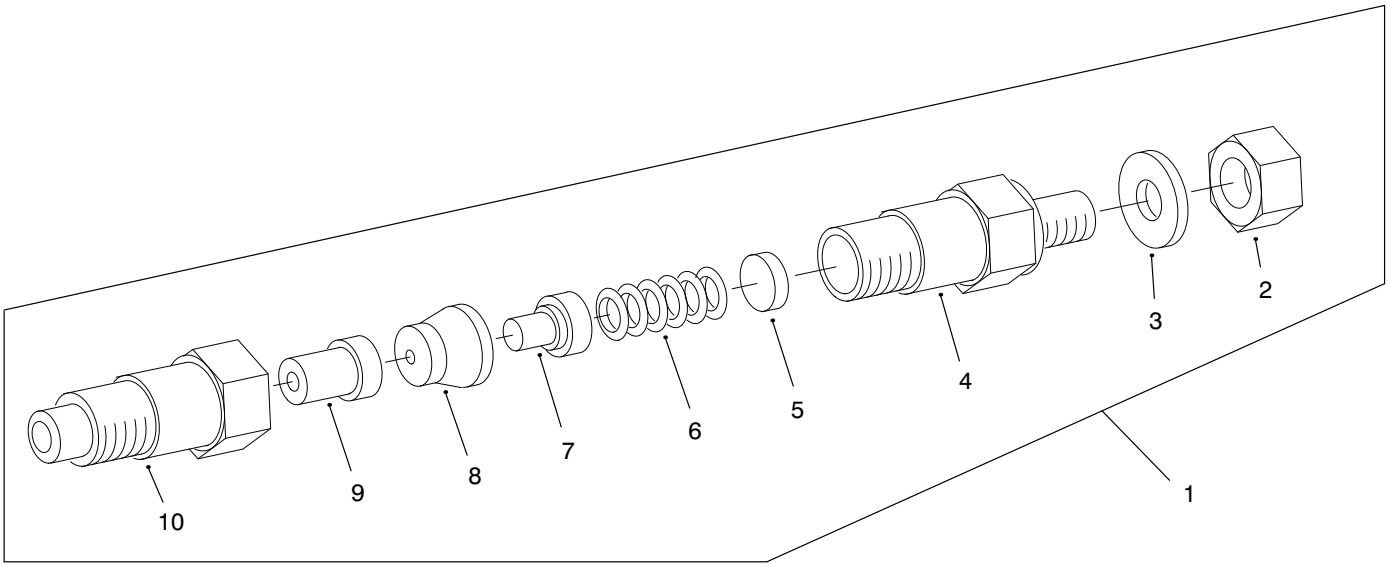


T−2495−2

INJECTION PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	131406340	Atomizer (Incl. Ref. #2−10)	3
2	131446069	Nut	1
3	131426210	Washer	1
4	131446065	Body	1
5	131437250	Shim 0.90mm OS	1
*	131437251	Shim 0.925mm OS	1
*	131437252	Shim 0.95mm OS	1
*	131437253	Shim 0.975mm OS	1
*	131437354	Shim 1.00mm OS	1
*	131437255	Shim 1.025mm OS	1
*	131437256	Shim 1.05mm OS	1
*	131437257	Shim 1.075mm OS	1
*	131437258	Shim 1.10mm OS	1
*	131437259	Shim 1.125mm OS	1
*	131437260	Shim 1.15mm OS	1
*	131437261	Shim 1.175mm OS	1
*	131437262	Shim 1.20mm OS	1
*	131437263	Shim 1.225mm OS	1
*	131437264	Shim 1.250mm OS	1
*	131437265	Shim 1.275mm OS	1
*	131437266	Shim 1.30mm OS	1
*	131437267	Shim 1.325mm OS	1
*	131437268	Shim 1.35mm OS	1
*	131437269	Shim 1.375mm OS	1
*	131437270	Shim 1.40mm OS	1
*	131437271	Shim 1.425mm OS	1
*	131437272	Shim 1.45mm OS	1
6	131446066	Spring	1
7	131446070	Pin	1
8	131446068	Spacer	1
9	131416150	Nozzle	1
10	131446067	Nut	1

NOTE: Obtain replacement parts from your local Perkins Dealer.
*Not Illustrated

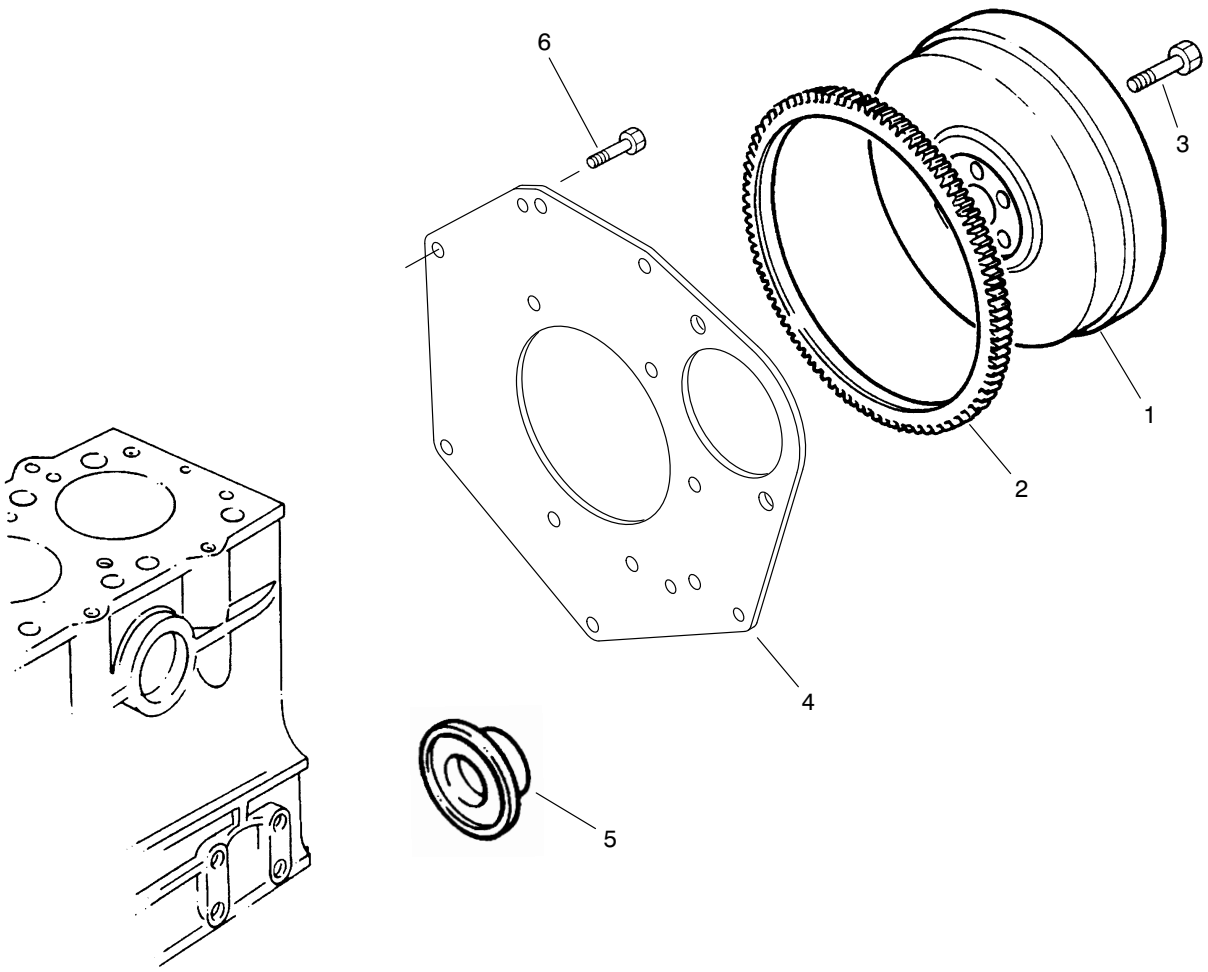


T–1387–3

FLYWHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	115356922	Flywheel	1
2	115376150	Gear–Ring	1
3	010109330	Screw	4
4	110367650	Plate	1
5	198636080	Seal	1
6	011310816	Screw	10

NOTE: Obtain replacement parts from your local Perkins Dealer.

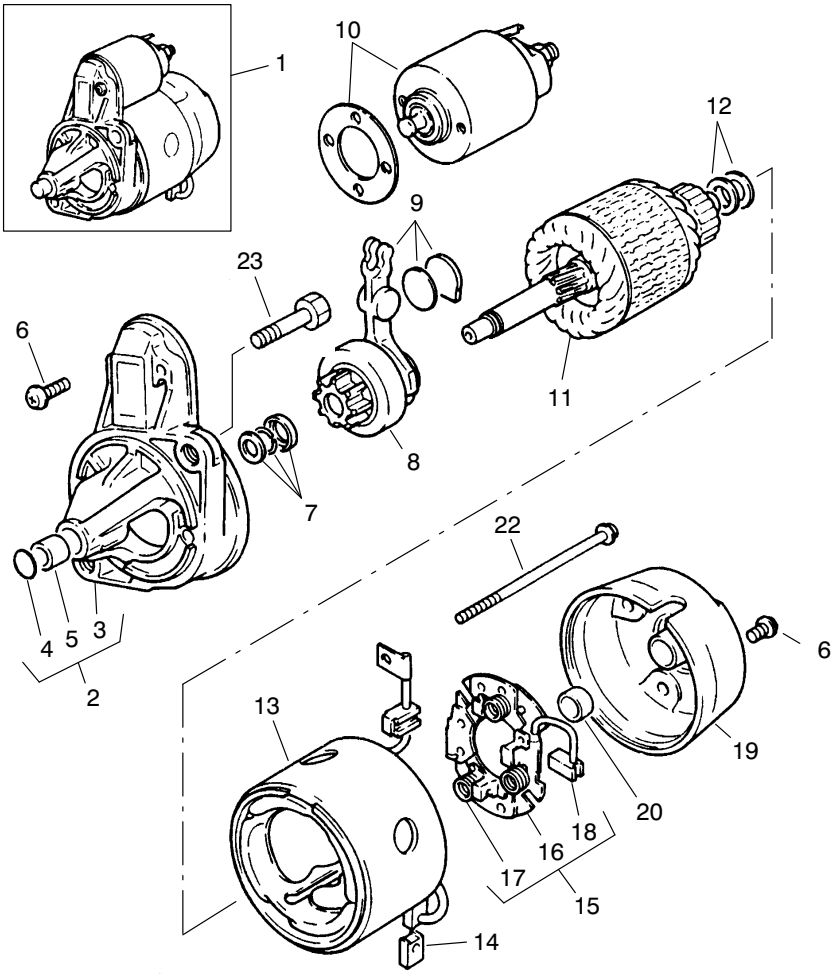


T−1389−3

STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	185086370	Startermotor	1
2	185846471	Cover	
		(Incl. Ref. #3 & 4)	1
3		Cover	1
4		Ring	1
5	185846472	Bushing	2
6	185846468	Screw	5
7	185846473	Washer	1
8	185866240	Pinion	1
9	185846469	Lever	1
10	185816220	Switch	1
11	185846474	Armature	1

Ref. No.	Part No.	Description	No. Used
12	185846475	Washer	1
13	185846476	Yoke	1
14	185416400	Brush	1
15	185416390	Holder	
		(Incl. Ref. #16−18)	1
16		Holder	1
17	185886010	Spring	1
18	185416410	Brush	1
19	185846477	Cover	1
20	185846478	Bushing	1
22	185846470	Screw	2
23	011401020	Screw	2

NOTE: Obtain replacement parts from your local Perkins Dealer.

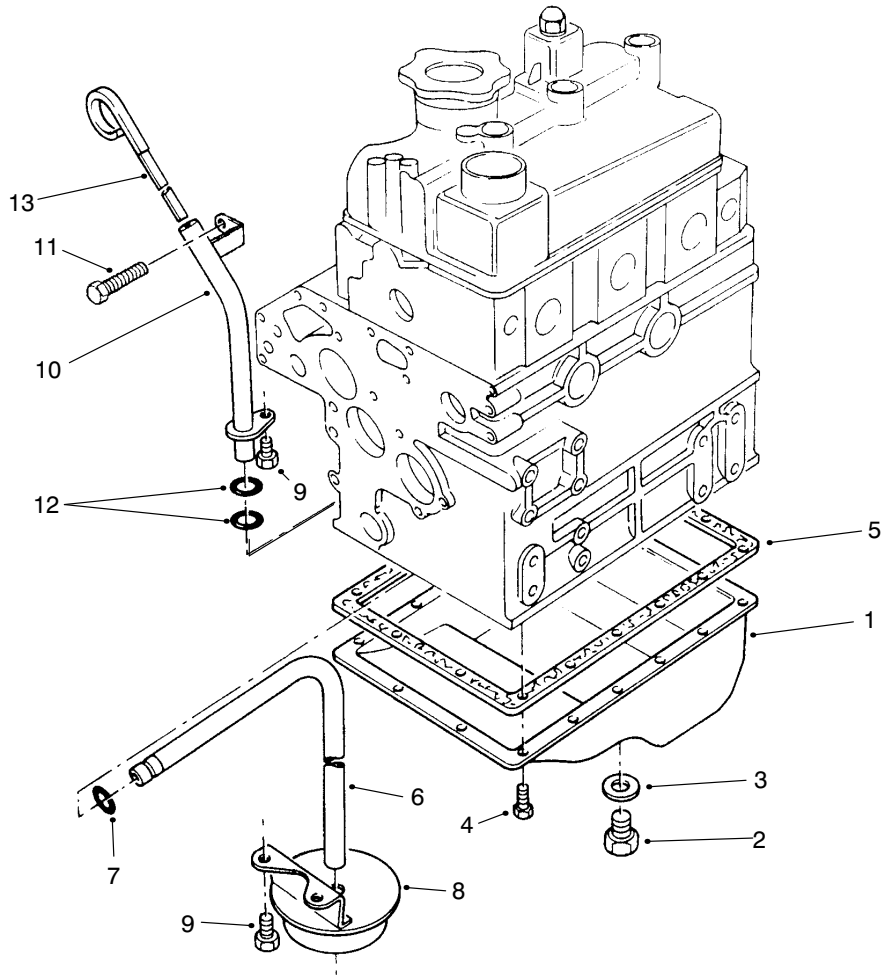


T−1390−2

OIL SUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	110706860	Sump	1
2	010401212	Plug	2
3	025100012	Washer	2
4	010109235	Screw	18
5	110996590	Gasket	1
6	140986590	Pipe	1
7	052109076	O−Ring	1

Ref. No.	Part No.	Description	No. Used
8	140406310	Strainer	1
9	011300612	Bolt	3
10	110756380	Tube	1
11	011300812	Screw	1
12	052100100	O−Ring	2
13	198416371	Dipstick	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

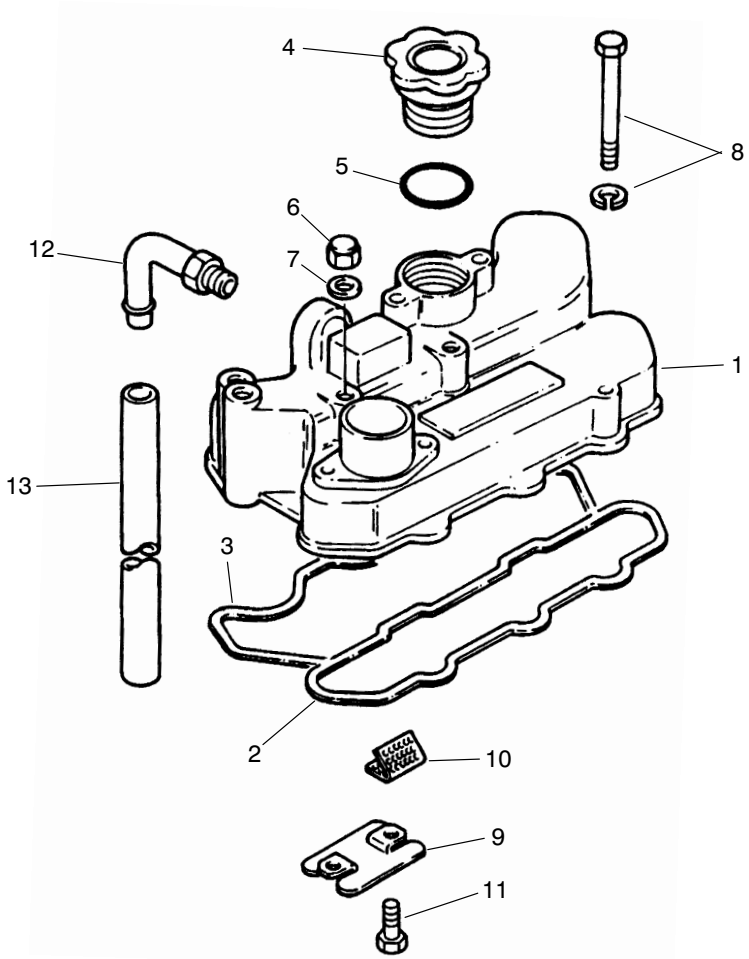


T–1391–1

VALVE COVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	111026371	Cover	1
2	111996330	Gasket	1
3	111996060	Gasket	1
4	198436010	Cap	1
5	052100400	Seal	1
6	024600008	Nut	3
7	198996060	Washer	3

Ref. No.	Part No.	Description	No. Used
8	011300650	Screw	2
9	110666110	Plate	1
10	110666120	Gauze	1
11	011300612	Bolt	2
12	110986500	Pipe	1
13	068122560	Hose	1

NOTE: Obtain replacement parts from your local Perkins Dealer.
*Not Illustrated

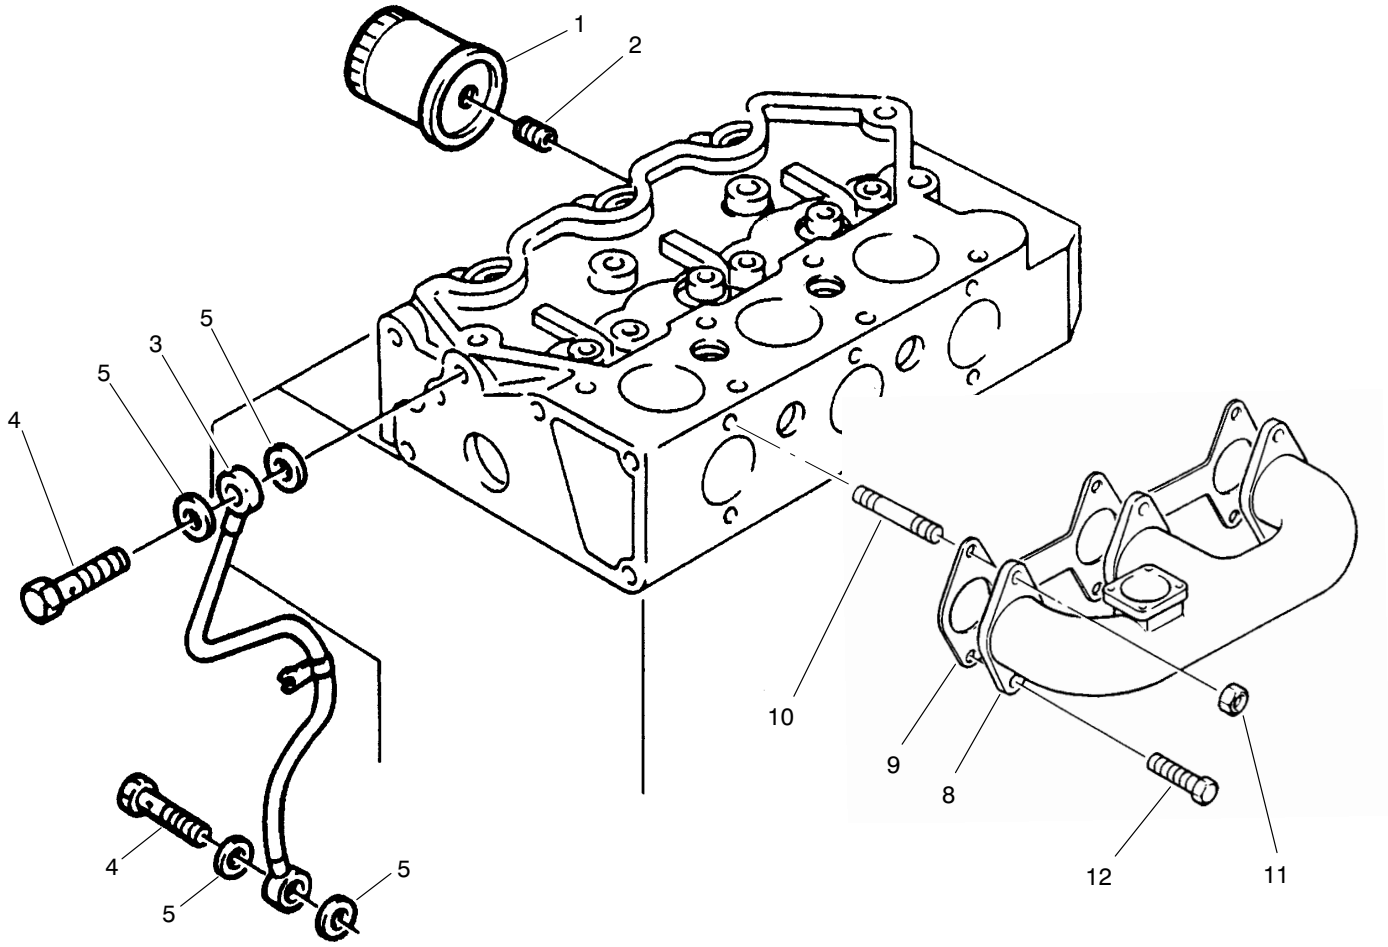


T–1392–3

OIL FILTER & EXHAUST MANIFOLD ASSEMBLIES

Ref. No.	Part No.	Description	No. Used
1	85–4930	Filter–Oil	1
2	140546020	Connection	1
3	140606680	Pipe	1
4	198486780	Bolt	2
5	198996060	Washer	4

Ref. No.	Part No.	Description	No. Used
8	135616630	Manifold–Exhaust	1
9	135996520	Gasket	1
10	012110625	Stud	3
11	023100006	Nut	3
12	011310625	Screw	3

NOTE: Obtain replacement parts from your local Perkins Dealer.

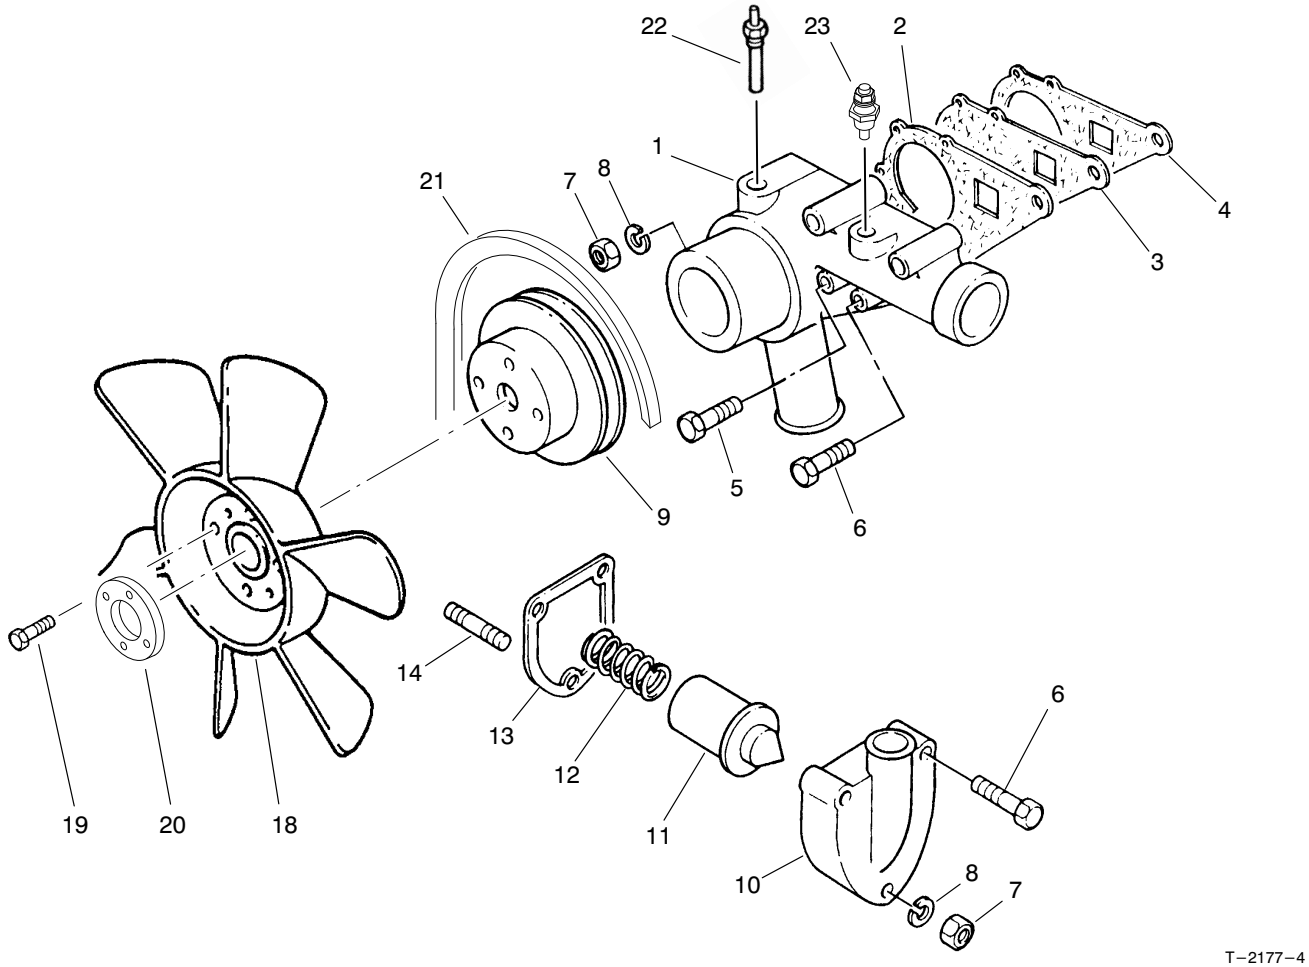


T−2177−4

WATER PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	145017400	Pump−Water	1
2	145996430	Gasket	1
3	145146270	Backplate	1
4	145996420	Gasket	1
5	011300635	Screw	3
6	011300650	Screw	6
7	023100006	Nut	2
8	027100006	Washer	2
9	145336490	Pulley	1
10	145216161	Housing	1
11	145206062	Thermostat	1

Ref. No.	Part No.	Description	No. Used
12	198217410	Spring	1
13	145996440	Gasket	1
14	012100650	Stud	1
18	145306780	Fan	1
19	011310614	Screw	4
20	145386520	Plate	1
21	080109048	Belt−Fan	1
22	385720101	Switch−High Temperature Shutdown	1
23	82−3110	Sender−Temperature Guage	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

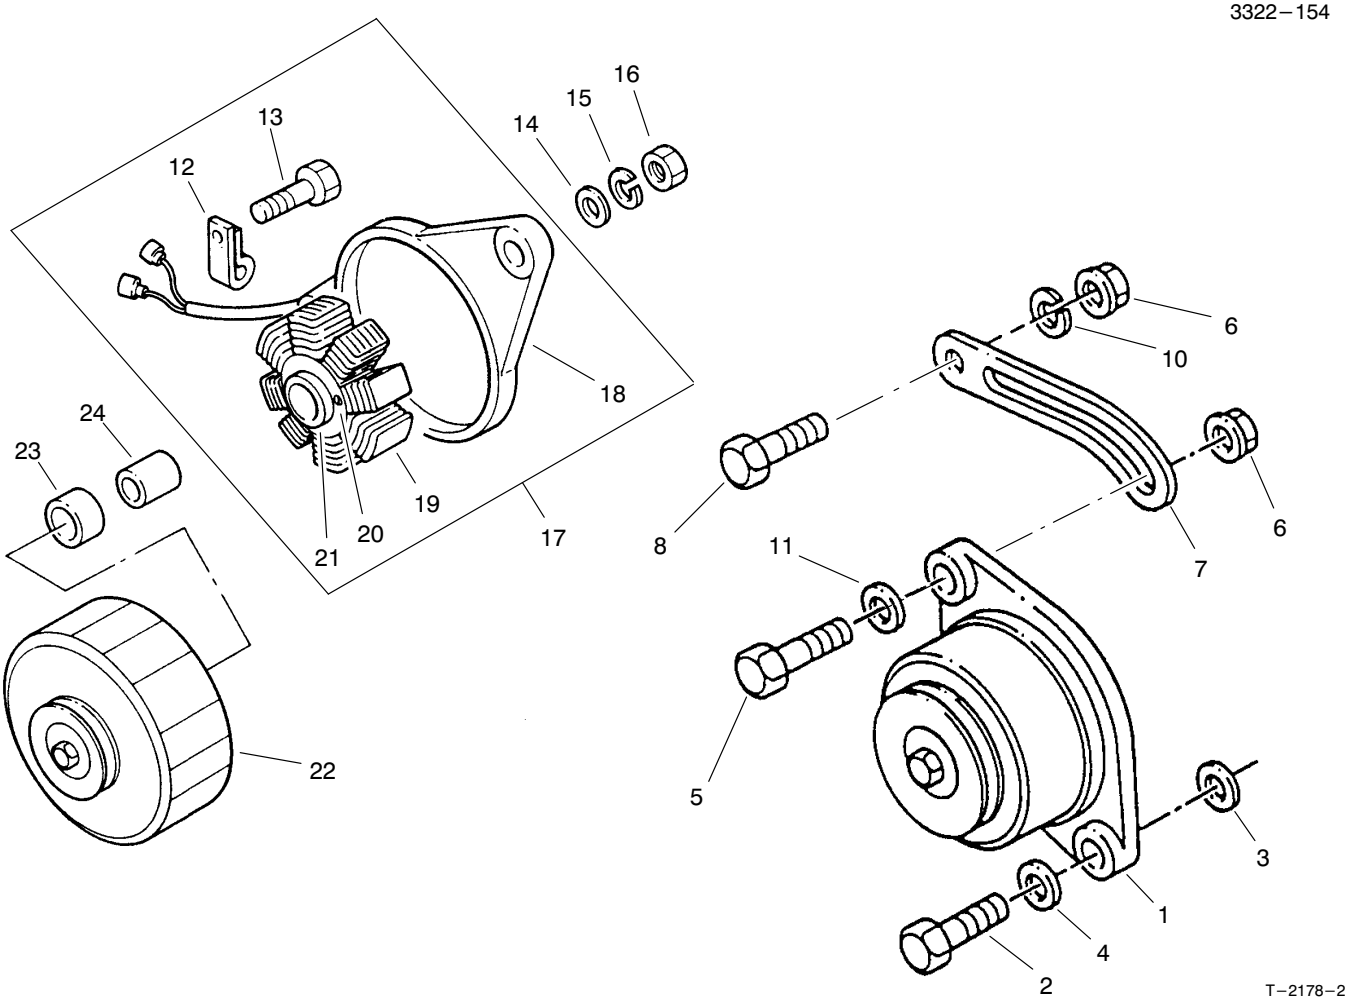


ALTERNATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	185046210	Alternator	1
2	010110850	Screw	1
3	026909011	Washer	1
4	026200008	Washer	1
5	012810840	Screw	1
6	023100008	Nut	2
7	185726431	Lever	1
8	011300816	Screw	1
10	027100008	Washer	1
11	026109017	Washer	1
12	185446220	Clip	1
13	015140408	Screw	1
14	026100010	Washer	1

Ref. No.	Part No.	Description	No. Used
15	027100010	Washer	1
16	020210010	Nut	1
17	185446217	Asm–Plate (Incl. Ref. #12–13 & 18–21)	1
18	185716200	Plate	1
19	185446218	Stator	1
20	015140425	Screw	2
21	040126201	Bearing–Ball	1
22	185446219	Pulley	1
23	040126201	Bearing	1
24	199236510	Collar	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

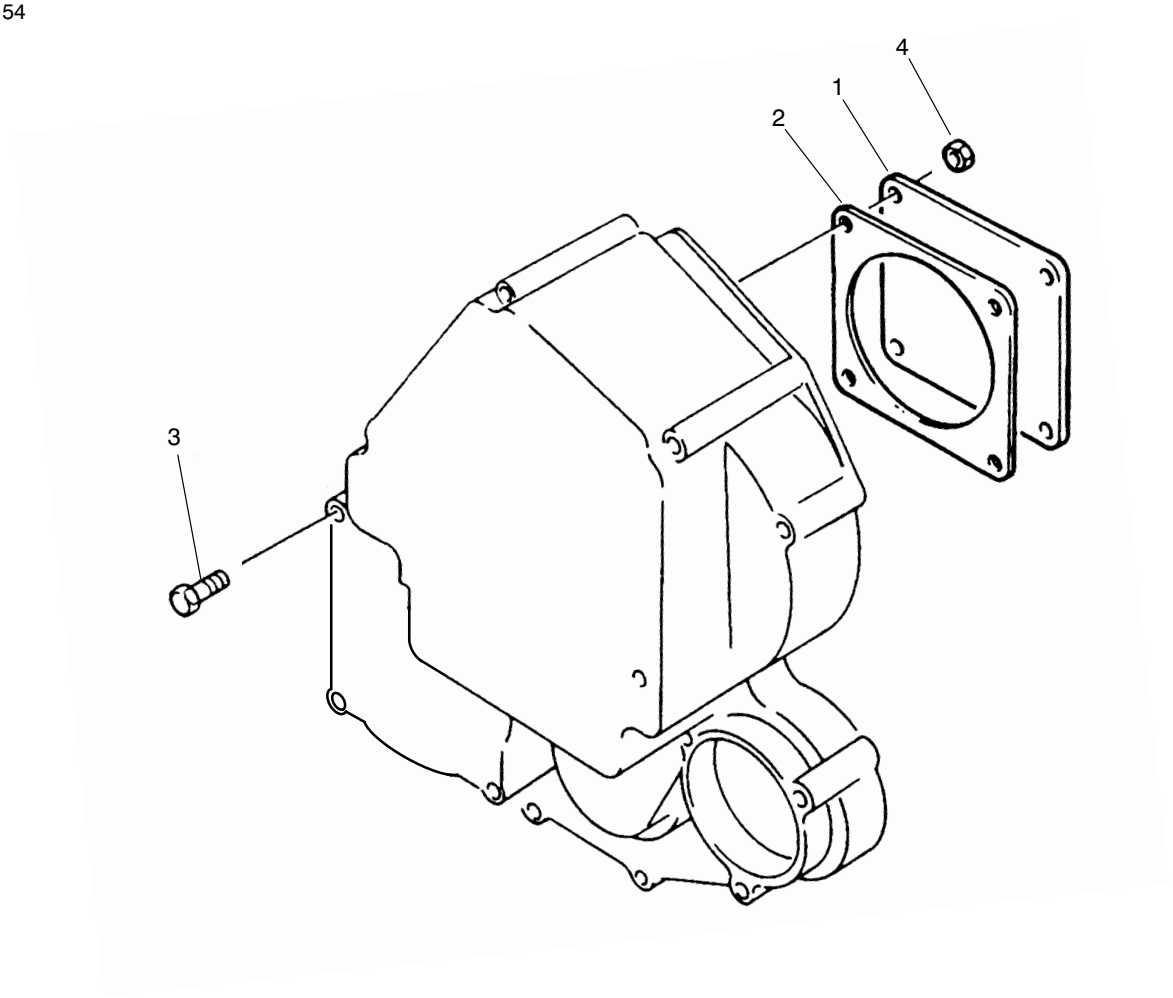


T–1398–1

TIMING COVER PLATE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	165206360	Plate	1
2	165996420	Gasket	1

Ref. No.	Part No.	Description	No. Used
3	010310865	Bolt	4
4	023100008	Nut	4

NOTE: Obtain replacement parts from your local Perkins Dealer.

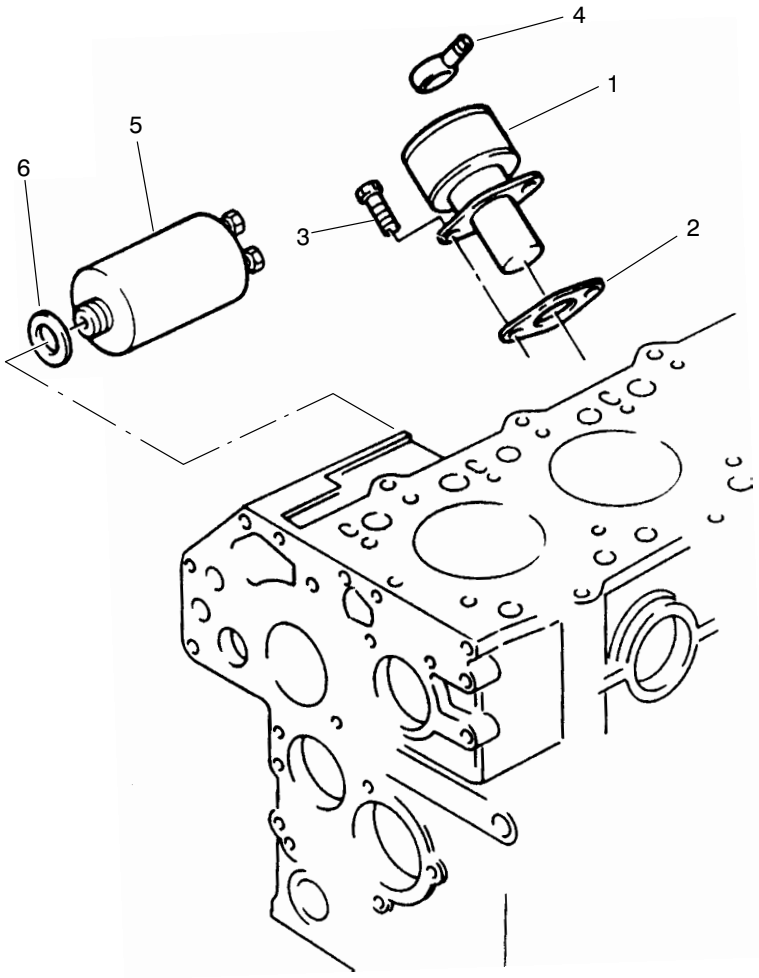


T−2179−1

LOW PRESSURE FUEL SYSTEM & THROTTLE STOP ASSEMBLIES

Ref. No.	Part No.	Description	No. Used
1	130506140	Pump−Lift	1
2	130996130	Joint	1
3	011140616	Screw	2
4	198486840	Connection	2
5	185206082	Solenoid	1
6	025100016	Washer	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

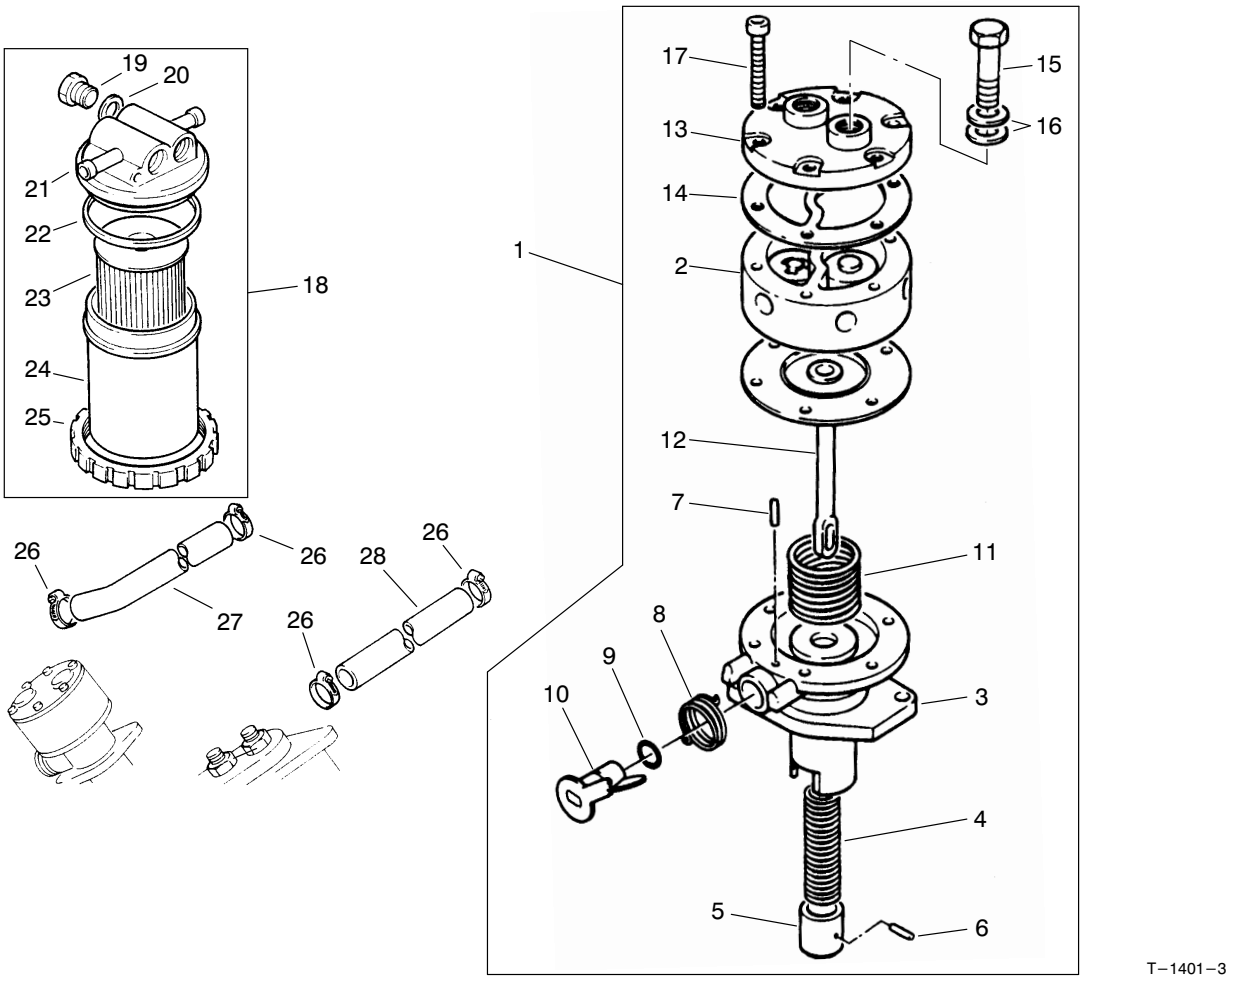


T–1401–3

FUEL FILTER & LIFT PUMP ASSEMBLIES

Ref. No.	Part No.	Description	No. Used
1	130506140	Asm–Lift Pump (Incl. Ref. #2)	1
2		Body	1
3	130516080	Body	1
4	130516081	Spring	1
5	130516082	Plunger	1
6	130516085	Pin	1
7	130516088	Pin	1
8	130516083	Spring	1
9	131226180	O–Ring	1
10	130516086	Lever	1
11	130516087	Spring	1
12	130516084	Diaphragm	1
13	130516090	Cap	1
14	130516089	Gasket	1

Ref. No.	Part No.	Description	No. Used
15	130516092	Bolt	2
16	130516069	Washer	4
17	130516091	Screw	6
18	130306041	Asm–Fuel Filter (Incl. Ref. #19–25)	1
19	130446080	Plug	2
20	130326120	Washer	2
21		Head–Fuel Filter	1
22	052100440	O–Ring	1
23	130366040	Element–Filter	1
24	130336031	Container	1
25	130446090	Ring	1
26	198346020	Clip	4
27	068207224	Pipe–Fuel	1
28	068207400	Pipe–Fuel	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

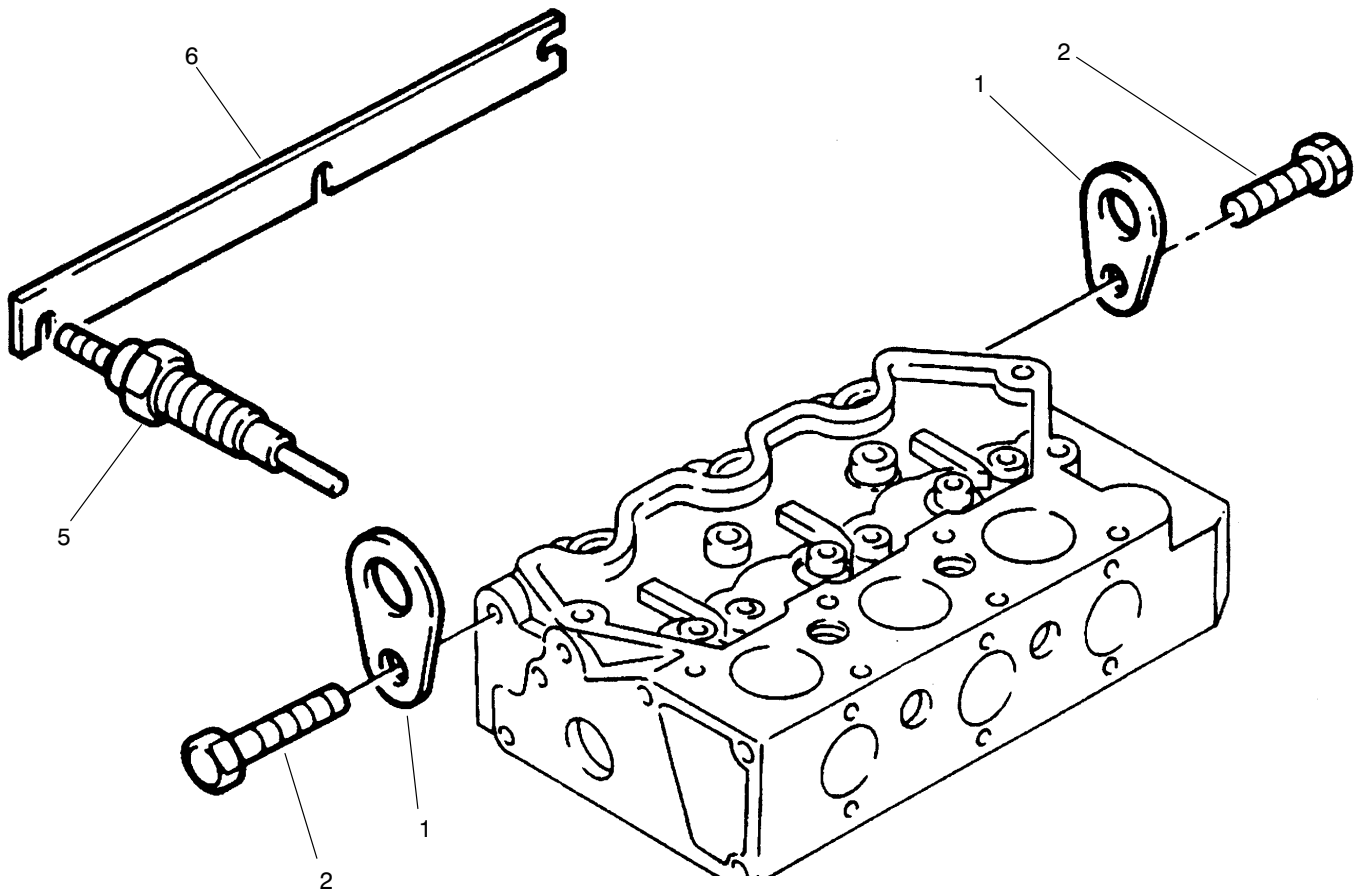


T–1404–3

ENGINE LIFTING TAB & COLD START ASSEMBLIES

Ref. No.	Part No.	Description	No. Used
1	195816200	Plate	2
2	011310816	Screw	2
5	185366060	Heater	3
6	185376170	Bar	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

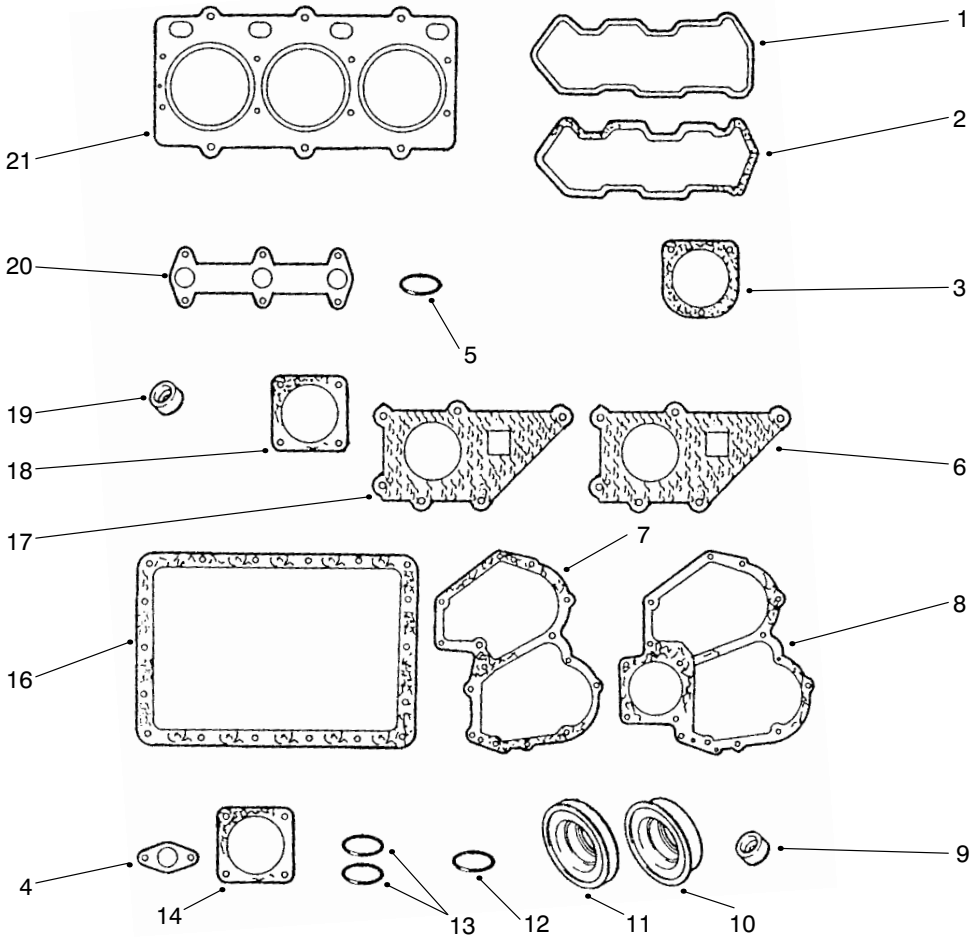

T−2433−1

GASKET AND SEALS

Ref. No.	Part No.	Description	No. Used
1	111996060	Gasket (Valve Cover Asm.)	1
2	111996330	Gasket (Valve Cover Asm.)	1
3	145996440	Gasket (Water Pump Asm.)	1
4	130996070	Gasket (Low Pressure Fuel System Asm.)	2
5	052100400	Seal (Valve Cover Asm.)	1
6	145996430	Gasket (Water Pump Asm.)	1
7	165996400	Gasket (Camshaft Asm.)	1
8	165996410	Gasket (Camshaft Asm.)	1
9	131426200	Gasket (Fuel Injection Asm.)	3
10	198636080	Seal (Flywheel Asm.)	1
11	198636090	Seal (Camshaft Asm.)	1
12	052109076	O−Ring (Oil Sump Asm.)	1

Ref. No.	Part No.	Description	No. Used
13	052100100	O−Ring (Oil Sump Asm.)	2
14	165996420	Gasket (Timing Cover Plate Asm.)	1
16	110996590	Gasket (Oil Sump Asm.)	1
17	145996420	Gasket (Water Pump Asm.)	1
18	314990013	Gasket (Muffler)	1
19	120406080	Seal (Cylinder Head Asm.)	3
20	135996520	Gasket (Exhaust Manifold Asm.)	1
21	111147390	Gasket (Cylinder Head Asm.)	1
*	195906840	Kit−Gasket & Seals (Incl. Ref. #1−21)	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

*Not Illustrated

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
3−0348	Bushing	37	2	6
3−0348	Bushing	36	19	4
3−0348	Bushing	38	24	2
3−6498	Washer−Thrust	7	17	A/R
3−6498	Washer−Thrust	16	36	2
5−0743	Spring	38	1	1
5−0743	Spring	36	15	2
5−7290	Spring	16	9	1
10−6830	Stud−Drive Type	41	6	4
10−6850	Drum Brake	16	19	2
10−6870	Hub−Wheel	41	5	1
12−9140	Decal	43	1	1
21−0141	Asm−Socket, RH	40	2	1
21−0141	Asm−Socket, RH	41	13	1
21−0150	Asm−Socket, LH	7	5	1
21−9260	Cover−Dust	7	30	1
22−8330	Plug	28	1	2
22−8340	Spring	28	3	2
22−8350	Ball	28	4	2
22−8360	Pin−Cam	28	6	2
22−8370	Seat−Check Valve	28	5	2
22−8380	Retainer−Spring	28	10	2
22−8410	Spring	28	11	1
22−8420	Spool	28	8	1
22−8480	Snap Ring−Spool	28	13	1
22−8490	Snap Ring	28	14	1
22−8500	O−Ring	28	9	2
23−2140	Hose−Fuel	42	1	1
23−3030	Spacer	28	12	1
KL70372	Asm−Engine	25	{35	1
26−3790	Nut−Lock	41	4	1
26−3790	Nut−Lock	16	40	2
27−9870	Pin−Seat Switch	2	25	1
28−6180	Pin−Plastic	2	24	1
29−6150	Spring−Leaf	15	13	1
29−6170	Asm−Extended Leaf Spring	15	11	1
29−9080	Handle	43	3	1
29−9090	Hose−Handle	43	4	1
33−3270	Washer	13	37	1
33−3750	Race−Inner	13	14	2
33−4930	Gasket	13	26	1
36−4310	Brush	43	5	1
37−9590	Spring−Compression	2	23	1
42−2010	Pin−Alignment	34	13	2
42−2010	Pin−Alignment	35	13	2
42−2720	Seal−Shaft	13	38	1
42−9850	Washer−Lock	25	14	1
43−1950	Valve−Control Hydraulic	27	9	1
43−8600	Spring−Compression	3	72	1
43−8610	Guide−Spring	3	71	1
43−8620	Guide−Pin	3	74	1
43−8860	Plunger−Switch	3	73	1
43−8870	Boot−Switch	3	76	1
43−9071	Asm−Switch, Limit	3	*	1
44−2212	Asm−Indicator Light	4	15	1
44−8160	Washer−Clutch	25	3	1
48−9510	Nut−Lock	10	5	1
48−9590	Washer−Lock	25	45	14
51−0670	Hose−Fuel Line	42	4	1
51−3150	Shim−Spring Arm	15	9	1
54−0110	Element−Oil Filter	11	20	1
56−2230	Hose−Fuel	42	10	1
56−2520	Fitting−Fuel Shutoff	42	8	1
56−7970	Clamp−Tube	32	21	4
56−7976	Clamp−Tube	20	17	2
56−7976	Clamp−Tube	41	21	2
56−7976	Clamp−Tube	3	69	2
57−5420	Screw−Shoulder	11	1	1
57−6390	Nut−Jam	25	13	1
59−8320	Ring−Retaining	34	16	1
59−8320	Ring−Retaining	35	16	1
59−8420	O−Ring	34	11	2
59−8420	O−Ring	35	11	2
60−5890	Washer−Backup	34	18	1
60−5890	Washer−Backup	35	18	1
60−6330	Screw−Pan Hd.	13	9	4
61−2070	Link−Steering	40	14	1
61−2070	Link−Steering	41	27	1
61−2070	Tube−Steering	7	4	1
61−2450	Hub−Lift	29	19	1
61−2790	Filler−Screen	11	7	1
61−3830	Chain	29	12	2
61−3990	Parking Brake	16	7	1
62−7170	Spacer	3	42	1
62−7240	Sleeve−Vinyl Spring	38	2	1
62−7300	Chain	36	24	2
62−7400	Decal−Toro	1	2	1
63−8410	Washer−Flat	11	11	3
63−8410	Washer−Flat	42	15	3
65−8320	Bar−Height−Of−Cut	43	1	1
65−9940	Spring−Compression	27	28	1
66−0120	Knob−Control	5	53	1
66−2920	Washer−Nylon	15	30	1
66−3240	Cap−Radiator	8	13	1
66−5710	Seal−Oil	34	17	1
66−5710	Seal−Oil	35	17	1
66−5730	Asm−Front Plate	34	14	1
66−5730	Asm−Front Plate	35	14	1
67−5360	Decal−Danger	2	4	1
68−6030	Screw−HH	25	5	1
68−8990	Head−Oil Filter	11	21	1
69−1170	Glass−Sight	11	2	1
69−4120	Asm−Cartridge Valve	30	1	1
69−4240	Kit−Seal	30	2	1
69−4300	Nut	30	11	1
69−9760	Plate−Clamp	32	20	2
69−9760	Plate−Cover	41	20	1
70−1240	Asm−Plug	13	23	2
70−1480	Relay	4	21	1
70−1480	Relay	2	27	1
70−9840	Shoe−Brake	16	17	4
70−9850	Clip − Retaining	16	50	2
70−9860	Pin−Pivot	16	43	2
70−9870	Plate−Brake	16	44	2
70−9880	Spring−Extension	16	42	4
71−1500	Asm−Brake	16	*	2
71−3382	Hose	8	11	1
72−4190	Pin−Cylinder Guide	29	16	1
72−4320	Switch − Seat	2	26	1
74−0720	Tube−Manual	2	12	1
74−6110	Stop−Cam	15	29	1
74−9100	Pad−Pedal Forward	15	15	1
74−9110	Pad−Pedal Reverse	15	17	1
75−2080	Kit−Seal	30	7	3
75−2160	Bushing−Flange	7	15	2
75−4703	Hose−Fuel	26	61	1
75−4703	Hose−Fuel Return	42	13	1
75−6820	Hour Meter	4	9	1
75−7730	Washer−Thrust	40	4	1
75−7730	Washer−Thrust	41	16	1
75−9990	Motor−Hydraulic	41	8	1
75−9990	Motor−Hydraulic RH	16	12	1
76−0800	Kit−Seal	17	*	1
76−0800	Kit−Seal	18	*	1
76−0810	Asm−Housing	17	*	1
76−0810	Asm−Housing	18	*	1
76−0840	Manifold	17	22	1
76−0840	Manifold	18	22	1
76−0850	Bearing−Thrust	17	12	1
76−0850	Bearing−Thrust	18	12	1
76−0860	Shaft−Coupling	17	11	1
76−0860	Shaft−Coupling	18	11	1
76−0870	Plate−Wear	17	18	1
76−0870	Plate−Wear	18	18	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
76−0880	Asm−Commutator	17	*	1
76−0880	Asm−Commutator	18	*	1
76−0890	Asm−End Cover	18	24	1
76−0940	Asm−End Cover	17	24	1
76−0960	Link−Drive	17	13	1
76−0960	Link−Drive	18	13	1
76−0970	Rotor Set	17	*	1
76−0970	Rotor Set	18	*	1
76−1010	Screw−Hex. Hd.	17	14	7
76−2200	Footrest−Traction Pedal	1	7	1
76−2260	Pad−Footrest	1	5	1
76−6070	Kit−Rotating Parts	13	31	1
76−6080	Cover−Seal	13	18	1
76−6090	Cover−Trunnion	13	10	1
76−6100	Cover	13	11	1
76−6140	O−Ring	13	12	1
76−6150	Pin−Dowel	13	20	2
76−6180	Washer	13	13	2
76−6190	Seal−Shaft	13	19	1
76−6200	Spring	13	24	2
76−6471	Trim	3	41	1
76−8870	Dampner	15	43	1
76−9760	Pivot−Damper	15	48	1
77−3100	Decal−Caution	8	3	1
80−6980	Asm−Soft Latch	4	14	1
80−6990	Washer−Hardened	29	2	4
80−6990	Washer−Hardened	12	9	2
80−6990	Washer−Hardened	25	16	16
80−7345	Hose	4	23	1
81−1690	Clamp−Throttle Cable	25	37	1
82−3110	Sender−Temp	25	26	1
83−2010	Asm−Coil	30	10	1
83−7970	Fitting−Hydraulic	8	28	2
83−7980	Bracket−Radiator Rear	8	19	1
83−8040	Cover−Left	8	9	1
83−8070	Shield−Radiator Bottom	8	24	1
83−8080	Key	25	9	1
83−8120	Panel−Right Rear	2	6	1
83−8150	Asm−Screen	8	23	1
83−8210	Panel−Left Front	8	26	1
83−8270	Pedal−Traction	15	16	1
83−8510	Bracket−Left Fender	1	24	1
83−8720	Tank−Fuel	42	12	1
83−8760	Rod−Pump Control	15	25	1
83−9000	Battery	42	5	1
83−9030	Foam−Top	8	14	1
83−9240	Bracket−Battery	42	18	1
83−9270	Brake Arm−LH	16	29	1
83−9310	Brake Arm−RH	16	28	1
83−9330	Shaft−Brake	16	37	1
83−9340	Shield−Grass Brake	16	15	2
83−9350	Rod−Adjusting	16	6	1
83−9390	Weight−Rear	42	27	2
83−9500	Asm−Tube 3wd Valve	20	4	1
83−9500	Tube−Hydraulic	21	9	1
83−9550	Decal−Warning	3	40	1
83−9651	Hose−Hydraulic	11	15	1
83−9710	Footrest−LH	1	29	1
83−9800	Shield−Front Grass LH	1	25	1
83−9840	Pad−Foot	1	30	1
83−9920	Bracket−Hydraulic Tank	11	9	1
84−1990	Rod−Adjusting	16	35	2
84−2000	Bracket−Brake	16	25	2
84−2940	Decal−Warning (Japan)	36	*	2
84−2940	Decal−Warning (Japan)	38	*	1
84−6760	Decal−Caution (Japan)	8	*	1
84−6860	Decal−Brake (Japan)	1	*	1
84−6960	Decal−Control (Japan)	2	*	1
84−7080	Decal−Warning (Japan)	3	*	1
84−7280	Decal−Danger (Japan)	2	*	1
84−8440	Bush−Flange	29	17	2
85−4930	Filter−Oil	26	65	1
85−5160	Valve Lever	27	6	1
85−5230	Bracket−Seat Pivot	2	9	2
85−5270	Key−Switch, Start	5	52	2
85−5330	Asm−Seat Plate	2	11	1
85−5340	Tube−Seat Pivot	2	7	2
85−6540	Drive Type Stud	16	23	8
87−6270	Socket−Light	4	38	4
87−7270	Washer−Hardened	12	5	2
87−8640	Washer−Flat	3	65	1
87−8640	Washer−Flat Hardened	15	38	1
87−8640	Washer−Flat, Hardened	7	24	2
87−9400	Valve	10	8	1
88−6720	Radiator Bracket	8	37	1
88−6730	Bracket−Screen Front	8	30	1
92−1812	Shaft−Lift Pivot	36	1	2
92−1812	Shaft−Lift Pivot	38	15	1
92−1818	Arm−Tension Spring	36	4	2
92−1818	Arm−Tension Spring	38	10	1
92−3154	Tab−Throttle	25	43	1
92−3162	Bushing−Flange	7	10	4
92−3188	Diode−Circuit Board	2	36	1
92−3194	Switch−Push/Pull	4	16	1
92−3195	Knob	5	44	1
92−3196	Valve−2 Position	21	8	1
92−7904	Cap−Valve	22	1	1
92−7905	Micro Switch	29	5	1
92−7911	Boot	22	10	1
92−7912	Retainer−Boot	22	14	1
92−7913	Kit−Seal Repair	22	*	1
92−9260	Asm−Relief Valve	34	19	1
92−9260	Asm−Relief Valve	35	19	1
92−9775	Warning Light Cluster	4	12	1
93−1413	Kit−Seal Repair	34	*	1
93−1413	Kit−Seal Repair	35	*	1
93−2190	Asm−Air Cleaner	10	*	1
93−2190	Asm−Air Cleaner	8	43	1
93−2191	Asm−Clamp	10	4	1
93−2191	Asm−Clamp	8	42	1
93−2195	Element−Air Cleaner	10	2	1
93−3102	Fuel Cap−Diesel	42	11	1
93−4411	Gauge−Temperature	4	13	1
93−6668	Decal−Battery (Europe)	42	21	1
93−6696	Decal−Warning	36	8	2
93−6696	Decal−Warning	38	26	1
93−6706	Pulley−Engine	25	4	1
93−6707	Spindle−Clutch	25	49	1
93−6712	Bracket−Mount, Front	25	46	2
93−6713	Bracket−Mount, Rear LH	25	31	1
93−6718	Asm−Hydraulic Manifold	29	25	1
93−6719	Muffler	25	19	1
93−6720	Bracket−Muffler	25	24	1
93−6721	Tube−Muffler	25	23	1
93−6722	U−Bolt	25	25	1
93−6724	Hose−Air Inlet Lower	8	51	1
93−6725	Bracket−Wire Keeper	25	6	1
93−6726	Asm−Radiator	8	38	1
93−6727	Clutch−Electric	25	54	1
93−6728	Hose−Radiator Upper	8	52	1
93−6728	Hose−Radiator, Upper	25	27	1
93−6729	Hose−Radiator Lower	8	53	1
93−6729	Hose−Radiator, Lower	25	33	1
93−6730	Shroud−Radiator Bottom	8	10	1
93−6731	Shroud−Radiator Top	8	4	1
93−6732	Panel−Left Rear	3	52	1
93−6733	Bracket−Valve Mount	29	24	1
93−6737	Pump Mount Mach	12	7	1
93−6738	Chain−Tipper	36	22	2
93−6742	Bracket−Hood Pivot	1	20	2
93−6743	Stop−Throttle	4	2	1
93−6751	Asm−Pump	12	8	1
93−6761	Decal−Reelmaster 2300D	2	21	2
93−6762	Switch−Push Button	4	7	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
93−6768	Gear−Sector	7	6	1
93−6769	Steering Column	7	21	1
93−6775	Cable−Battery Pos.	25	59	1
93−6775	Cable−Battery, Pos.	42	6	1
93−6776	Fender−LH	1	27	1
93−6778	Fender−Right	1	11	1
93−6779	Footrest−RH	1	9	1
93−6780	Hinge	1	17	1
93−6782	Fork−Rear Wheel	41	9	1
93−6789	Asm−Hydraulic Hose	33	40	1
93−6790	Asm−Hydraulic Hose	32	33	1
93−6793	Fitting−Barb	11	4	1
93−6794	Fitting−Special	11	27	1
93−6795	Fitting−90˚	12	22	1
93−6796	Bracket−Bulkhead	33	42	1
93−6797	Asm−Hose	27	1	1
93−6797	Asm−Hose	12	14	1
93−6798	Asm−Hose	27	11	1
93−6798	Hose−Hydraulic	12	37	1
93−6799	Hose−Hydraulic	11	19	1
93−6799	Hose−Hydraulic	12	36	1
93−6800	Hose−Hyd	12	18	1
93−6800	Hose−Hydraulic	29	34	1
93−6803	Fitting−90˚	8	34	2
93−6803	Fitting−Hydraulic 90˚	32	26	1
93−6804	Hose	8	36	1
93−6804	Hose−Hydraulic	11	24	1
93−6805	Hose	8	39	1
93−6805	Hose−Hydraulic	32	27	1
93−6806	Hose	12	23	1
93−6806	Hose−Hydraulic	11	25	1
93−6811	Tank−Hydraulic	11	8	1
93−6816	Control−Throttle	4	1	1
93−6824	Asm−Pump Lever	15	34	1
93−6825	Plate−Pump	15	4	1
93−6826	Mounting Bracket	15	39	1
93−6828	Asm−Hose	12	31	1
93−6828	Hose−Hydraulic	20	10	1
93−6828	Hose−Hydraulic	19	19	1
93−6829	Asm−Hose	12	11	1
93−6829	Hose−Hydraulic	20	11	1
93−6829	Hose−Hydraulic	19	20	1
93−6830	Tube−Hyd	21	2	1
93−6835	Tube−Hyd	21	4	1
93−6836	Asm−Tube	20	1	1
93−6836	Asm−Tube	19	5	1
93−6837	Asm−Tube	20	9	1
93−6837	Asm−Tube	19	16	1
93−6838	Hub−Wheel	16	18	2
93−6840	Belt−Pump Drive	12	2	1
93−6841	Pulley	12	3	1
93−6842	Asm−Taper Lock Bushing	12	1	1
93−6843	Asm−Hose	21	3	2
93−6843	Hose−Hydraulic	41	26	2
93−6845	Yoke−Belt Adjust	12	29	1
93−6846	Panel−Right Front	2	5	1
93−6847	Panel−Left Front	2	2	1
93−6848	Fitting−Barb 45˚	12	24	1
93−6850	Brake Lever	16	32	2
93−6857	Hose−Hydraulic	11	23	1
93−6857	Hose−Hydraulic	12	38	1
93−6858	Shield−Front RH	1	16	1
93−6859	Spacer	15	20	2
93−6868	Asm−Footstep	2	34	1
93−6869	Asm−Hydraulic Cylinder	38	23	1
93−6876	Hose−Air Inlet Upper	8	50	1
93−6877	Foam−Seal	8	1	1
93−6879	Tire	16	20	2
93−6881	Rim	41	2	1
93−6881	Rim	16	21	2
93−6888	Motor−Hydraulic LH	16	38	1
93−6892	Bracket−Throttle Cable	25	40	1
93−6893	Ram Pivot Pin	38	14	1
93−6895	Asm−Tube 3wd Fwd	20	2	1
93−6895	Tube−Hydraulic	21	10	1
93−6896	Asm−Tube 3wd Reverse	20	6	1
93−6902	Decal−Fuse Block	4	17	1
93−6903	Decal−Service	2	39	1
93−6904	Spacer	29	27	2
93−6905	Shield−Wheel	16	26	2
93−6908	Spacer−Split	3	58	1
93−6912	Shackle	38	6	1
93−6912	Shackle	36	16	2
93−6918	Asm−Hydraulic Tube	32	30	1
93−6919	Asm−Hydraulic Tube	33	43	1
93−6920	Asm−Hydraulic Tube	33	44	1
93−6921	Asm−Relief Valve	27	*	1
93−6922	Tube−Hydraulic	27	12	1
93−6923	Tube−Hydraulic	27	18	1
93−6924	Trim	3	57	2
93−6926	Pin−Clevis	38	29	1
93−6927	Trim	1	32	1
93−6932	Exchanger−Heat	8	27	1
93−6933	Sleeve−Protective	8	46	1
93−6935	Asm−Hose	29	32	1
93−6936	Arm−Traction	15	18	1
93−6938	Panel−Foot	3	47	1
93−6941	Trim	4	26	2
93−6946	Bracket−Mount Rear RH	26	64	1
93−6972	Asm−Hydraulic Motor	32	17	2
93−6975	Asm−Hydraulic Motor	32	36	1
93−7159	Knob	8	35	2
93−7160	Asm−Oil Cap	11	6	1
93−7252	Decal−CE Mark (Europe)	7	26	1
93−7267	Decal−Brake	1	28	1
93−7270	Decal−Control	2	20	1
93−7271	Decal−Warning (Europe)	3	*	1
93−7272	Decal−Caution (Europe)	8	*	1
93−7273	Decal−Danger (Europe)	2	*	1
93−7276	Decal−Danger (Europe)	42	22	1
93−7726	Hook (Europe)	4	35	1
93−7840	Decal−Radiator Cap	9	55	1
93−8823	Coupling	32	37	3
94−1247	Decal−Service (Swedish)	2	*	1
94−1754	Micro Switch	15	3	1
94−2590	Decal−Service (Danish)	2	*	1
94−2591	Decal−Service (Dutch)	2	*	1
94−2592	Decal−Service (Finnish)	2	*	1
94−2593	Decal−Service (French)	2	*	1
94−2594	Decal−Service (German)	2	*	1
94−2595	Decal−Service (Italian)	2	*	1
94−2596	Decal−Service (Japan)	3	*	1
94−2597	Decal−Service (Norwegian)	2	*	1
94−2598	Decal−Service (Portuguese)	3	39	1
94−2599	Decal−Service (Spanish)	2	*	1
94−2948	Decal−Fuse Block (Japan)	4	*	1
94−3350	Decal−Instrument Panel	4	*	1
94−3351	Decal−Instrument Panel	4	19	1
94−3352	Decal−Fuse Block (Europe)	4	*	1
94−3353	Decal−Warning	37	5	3
94−3424	Bracket−Switch Mount	29	43	1
94−3425	Screw	22	16	1
94−3426	Stop−Valve	22	13	1
94−3427	Asm−Plug	22	2	1
94−3429	Plunger Switch	29	45	1
94−3600	Screw−Hex. Socket Hd.	34	15	8
94−3600	Screw−Hex. Socket Hd.	35	15	8
94−3601	Gear−Idler	34	8	1
94−3601	Gear−Idler	35	8	1
94−3602	Gear−Drive	34	9	1
94−3602	Gear−Drive	35	9	1
94−3603	Body	34	12	1
94−3603	Body	35	12	1
94−3604	Asm−Backplate/Relief	34	7	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
94–3605	Asm–Backplate/Relief	35	7	1
94–3606	Key	34	10	1
94–3606	Key	35	10	1
94–3607	Cartridge–Relief Valve	27	20	1
94–3608	Body–Relief Valve	27	19	1
94–3609	Piston	31	8	1
94–3610	Shaft	31	6	1
94–3611	Head	31	3	1
94–3612	Ring–Retaining	31	1	1
94–3614	Kit–Repair	31	*	1
94–3615	Head	39	10	1
94–3616	Piston	39	4	1
94–3617	Clevis–Rod	39	14	1
94–3618	Shaft	39	7	1
94–3619	Kit–Repair	39	*	1
94–3620	Barrel	39	2	1
94–3622	Asm–Hood	1	1	1
94–3624	Asm–Flange	14	3	1
94–3625	Pin–Dowel	14	7	4
94–3626	Cover–End	14	8	1
94–3632	Asm–Skirt	2	19	1
94–3633	Asm–U–Bracket Support	3	61	1
94–3633	U–Bracket Support	11	17	1
94–3634	Asm–Air Cleaner Housing	8	2	1
94–3635	Asm–Lift Arm, Rear	38	35	1
94–3638	Ring–Retaining	39	11	1
94–3639	Bolt	14	9	4
94–3640	Asm–Backplate	13	27	1
94–3641	Asm–Housing	13	17	1
94–3642	Shaft–Drive	13	33	1
94–3643	Camplate	13	22	1
94–3644	Seat	13	25	2
94–3645	Key	13	32	1
94–3645	Key	12	35	1
94–3646	Key	13	21	1
94–3647	Asm–Charge Pump Adaptor	13	2	1
94–3648	Asm–Gerotor	13	3	1
94–3649	Plate–Valve	13	7	1
94–3650	Asm–Valve	13	5	1
94–3651	Kit–Seal	13	*	1
94–3652	Asm–Cover	10	3	1
94–3653	Bolt	10	7	1
94–3654	Spring–Compression	10	6	1
94–3655	Asm–Cartridge Valve	30	14	1
94–3656	Asm–Spool	30	8	1
94–3657	Asm–Spool	30	18	1
94–3659	Asm–Spool	30	15	1
94–3661	Kit–Seal	30	17	1
94–3662	Screw–Hex. Hd.	18	14	7
94–3665	Asm–Guard (Europe)	9	56	1
94–3675	Fork–Castor	40	7	1
94–3688	Sleeve–Protective	12	46	1
94–3691	Instrument Panel	4	20	1
94–3691	Panel–Instrument	3	62	1
94–3692	Asm–Wire Harness	4	25	1
94–3692	Harness–Wire	25	58	1
94–3694	Angle–Right	3	43	1
94–3698	Weight–Rear	42	26	2
94–4985	Decal–Instrument Panel	4	19	1
94–5006	Asm–Hose	27	15	1
94–5006	Hose–Hydraulic	29	38	1
94–5007	Asm–Hose	27	14	1
94–5007	Hose–Hydraulic	29	37	1
94–5008	Asm–Hose	38	20	1
94–5008	Hose–Hydraulic	29	36	1
94–5009	Asm–Hose	38	19	1
94–5009	Hose–Hydraulic	29	35	1
94–5010	Pin–Switch Actuator	29	13	1
94–5011	Spring–Compression	29	14	1
94–5020	Knob	30	25	2
94–5021	Asm–Locating Plate	30	19	1
94–5022	Plate–Indicator	30	31	1
94–5023	Asm–Detent Plate	30	28	2
94–5024	Spring–Compression	30	30	2
94–5025	Asm–Locating Plate	30	16	1
94–5026	Plate–Indicator	30	27	1
94–5027	Spring–Compression	30	24	2
94–5028	Tire	41	1	1
94–5028	Tire	40	11	1
94–5031	Cylinder–Lift	29	22	1
94–5032	Barrel	31	11	1
94–5033	Bracket–Cyl Support	29	4	1
94–5056	Decal – Instructions	1	34	1
94–5057	Chain	29	*	2
94–5070	Decal–Reelmaster 2600D	2	*	2
94–5073	Asm–Carrier Frame, LH	37	*	1
94–5087	Bumper	37	12	2
94–5095	Asm–Lift Arm	36	6	2
94–5096	Asm–Carrier Frame, LH	37	6	1
94–5097	Asm–Carrier Frame, RH	37	7	1
94–5098	Asm–Carrier Frame, Rear	37	1	1
94–5100	Asm–Lift Arm	36	*	2
94–5102	Asm–Carrier Frame, RH	37	*	1
94–5103	Asm–Carrier Frame, Rear	37	*	1
94–5111	Axle–Castor	40	13	1
94–5114	Asm–Frame	7	14	1
94–5119	Sponge	27	26	1
94–5129	Asm–Hydraulic Hose	32	1	1
94–5135	Spacer	16	39	8
94–5438	O–Ring	30	9	2
94–5952	Asm–Rim	40	17	1
94–5969	Steering Shaft & Gear	7	22	1
94–5970	Spacer	40	18	1
94–5980	Cable–Battery Neg.	25	60	1
94–5980	Cable–Battery, Neg.	42	7	1
94–5985	Asm–Hydraulic Hose	32	14	2
94–5986	Asm–Hydraulic Hose	32	3	2
94–5987	Asm–Hydraulic Hose	32	6	2
98–1459	Decal–Toro	7	31	1
98–1468	Cover–Steering Wheel	7	29	1
98–1471	Asm–Steering Wheel	7	1	1
98–3445	Spacer	36	29	2
98–3445	Spacer	38	42	1
98–3446	Plate–Reinforcement	36	30	2
98–3446	Plate–Reinforcement	38	43	1
98–7393	Conduit–Convoluted	5	54	1
98–9013	Anchor–Spring	37	17	2
99–2321	Decal–Timing	26	66	1
99–2322	Valve–Flow Control	20	5	1
99–2338	Rod–Pivot	36	12	2
99–2338	Rod–Pivot	38	37	1
99–6131	Pump–Reel Drive	12	19	1
99–6132	Kit–Seal	14	*	1
218–461	Nut–HH	2	35	2
218–535	Nut–Hex.	4	28	1
218–536	Washer–Flat	4	29	1
218–562	Lens–Light	4	31	1
218–578	Fuse–10 Amp	4	4	2
218–594	Fuse–20 Amp	4	3	1
219–17	Bulb	4	37	4
219–18	Bulb–Light	4	30	1
2112–11	Clamp–Muffler	25	28	1
232–27	Stem–Valve	41	25	1
232–27	Stem–Valve	16	41	2
232–27	Valve–Stem	40	19	1
233–37	Knob	27	7	1
233–46	Knob	22	11	1
237–7	O–Ring	3	75	1
237–21	O–Ring	27	22	1
237–21	O–Ring	38	41	2
237–22	O–Ring	22	3	1
237–22	O–Ring	32	11	5
237–22	O–Ring	27	24	6
237–22	O–Ring	29	39	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
237−22	O−Ring	29	42	5
237−22	O−Ring	16	45	1
237−30	O−Ring	32	7	13
237−30	O−Ring	21	11	6
237−30	O−Ring	20	13	6
237−30	O−Ring	19	21	6
237−30	O−Ring	41	28	2
237−30	O−Ring	12	40	3
237−30	O−Ring	8	54	2
237−30	O−Ring	3	70	1
237−37	Bumper−Rubber	3	55	2
237−42	O−Ring	28	2	2
237−42	O−Ring	32	12	5
237−42	O−Ring	30	21	2
237−42	O−Ring	27	23	4
237−42	O−Ring	29	41	3
237−42	O−Ring	16	46	1
237−65	O−Ring	32	24	4
237−65	O−Ring	12	44	2
237−65	O−Ring	16	48	4
237−78	O−Ring	30	4	7
237−78	O−Ring	20	14	2
237−78	O−Ring	27	21	2
237−78	O−Ring	19	22	2
237−78	O−Ring	18	25	2
237−78	O−Ring	38	40	2
237−78	O−Ring	33	49	1
237−79	O−Ring	30	5	1
237−79	O−Ring	32	9	7
237−79	O−Ring	20	12	2
237−79	O−Ring	21	12	3
237−79	O−Ring	29	40	1
237−79	O−Ring	12	43	4
237−80	O−Ring	32	16	6
237−80	O−Ring	41	29	2
237−80	O−Ring	12	41	1
237−80	O−Ring	16	47	4
237−81	O−Ring	11	26	4
237−81	O−Ring	12	42	3
237−156	O−Ring	30	12	2
240−11	Grommet	11	10	3
240−11	Grommet	42	14	3
242−50	Nut−Lug	16	22	8
242−50	Nut−Lug	41	24	4
2410−18	Plug	43	2	1
2411−52	Bearing−Rod End RH	15	21	1
2411−53	Bearing−Rod End LH	15	23	1
2412−34	Clamp−Hose	11	14	4
2412−34	Clamp−Hose	12	25	2
2412−34	Clamp−Hose	8	29	2
2412−34	Clamp−Hose	25	32	2
2412−36	Clamp−Hose	11	3	2
2412−36	Clamp−Hose	42	9	2
2412−36	Clamp−Hose	12	15	1
2412−36	Clamp−Hose	8	40	2
2412−36	Clamp−Hose	33	46	1
2412−39	Clamp−R	2	16	3
2412−39	Clamp−R	4	24	1
2412−41	Clamp−R	8	41	1
2412−92	Clamp−Hose	8	45	3
2412−96	Clamp−R	25	12	1
2412−104	Clamp−R	20	16	1
2412−104	Clamp−R	3	67	1
2412−106	Clamp−R	3	51	1
2412−108	Clamp−Hose	42	2	4
2412−108	Clamp−Hose	25	50	1
2412−133	Clamp−R	2	15	2
251−307	Bearing−Ball	15	31	1
251−321	Bearing	40	15	2
252−66	Bearing−Thrust	13	36	1
252−71	Race−Bearing	13	35	2
252−95	Bearing	13	15	2
255−13	Ball	30	23	4
256−27	Bushing	7	23	2
256−115	Washer−Thrust	36	11	2
256−115	Washer−Thrust	38	36	1
256−245	Bushing	7	9	2
256−247	Bushing−Flange	7	13	2
256−320	Bushing	1	19	2
256−321	Bushing	2	38	4
2710−16	Asm−Connecting Link	27	8	1
282−2	Clevis	16	33	2
282−4	Clevis	29	11	4
282−4	Clevis	36	25	2
283−1	Pin−Clevis	16	31	2
283−2	Pin−Clevis	12	27	1
283−6	Pin−Clevis	29	9	4
283−6	Pin−Clevis	36	26	2
283−62	Pin−Clevis	25	41	1
283−75	Pin−Clevis	38	7	2
283−75	Pin−Clevis	36	17	4
283−78	Clevis Pin	29	23	1
285−17	Plug	10	9	1
302−5	Fitting−Grease	40	6	1
302−5	Fitting−Grease	7	25	3
302−5	Fitting−Grease, Straight	41	18	1
302−5	Fitting−Lube	37	3	2
302−11	Fitting Lube 45˚	36	7	2
302−55	Fitting−Grease	40	16	1
302−58	Fitting−Grease	39	1	1
302−60	Fitting−Lube	7	16	1
302−60	Fitting−Lube	38	18	1
302−60	Fitting−Lube 90˚	37	4	1
321−3	Screw−HH	3	64	1
321−5	Screw−HH	16	16	8
321−6	Screw−HH	15	14	2
321−8	Screw−HH	2	31	2
321−11	Screw−HH	2	8	2
321−13	Screw−Hex. Hd.	12	32	3
321−23	Screw−HH	27	4	2
321−35	Screw−HH	37	16	4
321−43	Screw−HH	29	18	1
322−3	Screw−HH	1	31	4
322−3	Screw−Hex. Hd.	13	1	2
322−4	Screw−HH	36	10	2
322−4	Screw−HH	38	30	1
322−5	Screw−HH	25	55	1
322−6	Screw−HH	37	11	2
322−6	Screw−Hex. Hd.	15	46	1
322−9	Screw−HH	41	14	1
322−9	Screw−HH	15	22	4
322−9	Screw−Hex. Flange Hd.	3	66	1
322−10	Screw−HH	20	15	1
322−10	Screw−Hex. Hd.	32	19	2
322−12	Screw HH	42	19	1
322−12	Screw HH	7	19	1
322−17	Screw−HH	16	4	1
322−17	Screw−HH	15	12	1
322−20	Screw−Hex. Hd.	13	29	2
322−23	Screw−Hex. Hd.	3	60	1
322−26	Screw−HH	38	32	1
323−4	Screw−HH	38	44	1
323−5	Screw−HH	11	12	3
323−5	Screw−HH	15	40	1
323−5	Screw−Hex. Hd.	42	16	3
323−6	Screw−HH	8	22	4
323−7	Screw−HH	37	15	2
323−7	Screw−HH	36	28	2
323−7	Screw−HH	15	37	2
323−7	Screw−HH	12	39	2
323−9	Screw−HH	36	3	2
323−9	Screw−HH	12	6	2
323−9	Screw−HH	38	11	1
323−10	Screw−Hex. Hd.	42	24	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
323−12	Screw−Hex. Hd.	42	*	3
323−14	Screw−Hex. Hd.	42	*	3
323−18	Screw−Hex. Hd.	36	23	2
325−6	Screw−HH	41	17	1
325−6	Screw−Hex. Hd.	40	5	1
325−36	Screw−HH	12	26	1
3210−7	Screw−HH	15	32	2
3212−5	Screw−HH	25	1	1
3217−6	Nut−Hex,	1	21	2
3217−6	Nut−Hex.	25	29	2
3217−6	Nut−Hex.	15	47	1
3217−26	Nut	4	39	1
3217−27	Nut−Hex.	5	48	2
3217−29	Nut−HH	15	7	2
3217−29	Nut−Hex.	5	45	6
3218−1	Nut−Jam	30	26	4
3218−19	Nut−Hex.	5	42	2
3219−14	Nut−Hex.	43	3	1
3220−2	Nut−Hex Jam	15	10	2
3220−2	Nut−Hex Jam	16	34	2
3220−3	Nut−HJ	7	18	2
3220−3	Nut−Hex. Jam	41	11	2
3220−3	Nut−Jam	40	12	2
3220−5	Nut−Hex Jam	7	3	1
3220−6	Nut−Hex.	39	13	1
3220−12	Nut−Hex. Jam	41	12	1
3220−12	Nut−Jam	40	1	1
3220−20	Nut−Jam	15	24	1
3229−1	Bolt−Carriage	1	6	2
3229−11	Screw−Carriage	2	10	2
3230−1	Bolt−Carriage	42	17	3
3230−1	Bolt−Carriage	3	44	1
3230−2	Bolt−Carriage	2	18	2
3230−2	Screw−Carriage	15	6	2
3230−7	Bolt−Carriage	42	*	2
3230−9	Bolt−Carriage	42	*	2
3230−23	Screw−Carriage	11	13	6
3230−23	Screw−Carriage	1	18	2
3230−27	Screw−Carriage	1	4	1
3231−22	Bolt−Carriage	8	32	2
3234−4	Screw−HH	4	6	3
3234−4	Screw−HH	8	8	4
3234−4	Screw−HH	2	13	3
3234−4	Screw−HH (Europe)	9	58	2
3234−5	Screw−Flange	2	1	17
3234−5	Screw−Flange	1	8	10
3234−5	Screw−Flange	16	8	2
3234−5	Screw−Flange	8	25	4
3234−5	Screw−Flange	29	26	3
3234−5	Screw−Hex. Flange Hd.	3	*	1
3234−5	Screw−Hex. Hd.	33	41	2
3234−11	Screw−Flange	2	32	4
3234−17	Screw − Hex. Head	1	33	4
3234−17	Screw−HFH	3	77	1
3234−17	Screw−HH	8	6	4
3234−18	Screw−Hex. Flange Hd.	42	23	2
3234−24	Screw−HH	25	56	7
3234−25	Bolt−Flange	29	1	6
3234−28	Screw−HH	21	1	2
3234−28	Screw−HH	8	18	8
3234−32	Screw−HH	36	14	2
3234−32	Screw−HH	38	39	1
3234−33	Screw−HH	11	18	2
3245−36	Screw−Set	30	29	2
3245−36	Screw−Set	12	34	1
3249−3	Screw−PRH	29	8	2
3249−3	Screw−Round Hd	15	1	2
3250−13	Screw−Pan Hd	4	10	2
3253−2	Washer−Lock	5	46	5
3253−3	Washer−Lock	12	33	3
3253−4	Washer−Lock	25	30	4
3253−4	Washer−Spring Lock	36	9	2
3253−4	Washer−Spring Lock	1	22	6
3253−4	Washer−Spring Lock	38	31	1
3253−4	Washer−Spring Lock	38	33	1
3253−4	Washer−Spring Lock	15	35	3
3253−5	Washer−Lock	22	12	1
3253−6	Washer−Lock	25	2	1
3254−1	Washer−Lock	5	40	1
3254−9	Washer−Lock Int Tooth	15	8	2
3254−9	Washer−Lock Int. Tooth	29	7	2
3255−2	Washer−Lock ETLW	40	3	1
3255−2	Washer−Lock Ext Tooth	41	15	1
3255−8	Washer−Lock	25	17	2
3255−17	Washer−Lock	25	51	1
3255−17	Washer−Lock Ext. Tooth	29	29	2
3256−2	Washer−Flat (Europe)	4	33	5
3256−3	Washer−Flat	37	9	2
3256−3	Washer−Flat	32	28	4
3256−4	Washer−Flat (Europe)	4	34	1
3256−6	Washer−Flat	36	13	2
3256−6	Washer−Flat	38	38	1
3256−14	Washer−Flat	29	30	2
3256−16	Washer−Flat	16	14	8
3256−22	Washer−Flat	27	3	2
3256−22	Washer−Flat	8	7	2
3256−22	Washer−Flat	2	30	3
3256−23	Washer−Flat	16	3	1
3256−23	Washer−Flat	8	5	2
3256−23	Washer−Flat	25	11	13
3256−23	Washer−Flat	1	23	6
3256−23	Washer−Flat	15	33	3
3256−23	Washer−Flat	3	59	1
3256−24	Washer−Flat	37	14	2
3256−24	Washer−Flat	36	21	6
3256−24	Washer−Flat	42	25	2
3256−24	Washer−Flat	15	28	2
3256−26	Washer−Flat	27	27	2
3256−26	Washer−Flat	7	27	1
3256−26	Washer−Flat	38	28	2
3256−27	Washer−Flat	7	11	2
3256−28	Washer−Flat	40	9	1
3256−53	Washer−Flat	15	2	2
3256−57	Washer−Flat	38	34	1
3257−42	Key−Woodruff	17	17	1
3257−42	Key−Woodruff	18	17	1
3257−42	Key−Woodruff	41	23	1
3272−4	Pin−Cotter	29	15	1
3272−6	Pin−Cotter	16	27	3
3272−6	Pin−Cotter	12	28	1
3272−10	Pin−Cotter	38	9	2
3272−10	Pin−Cotter	36	18	4
3272−10	Pin−Cotter	25	42	1
3272−10	Pin−Cotter	16	49	2
3272−11	Pin−Cotter	38	5	1
3272−11	Pin−Cotter	29	10	5
3272−11	Pin−Cotter	36	27	2
3274−90	Screw−Hex Socket	4	11	2
3274−93	Screw−HSH	41	10	4
3274−99	Screw−Socket Hd.	16	24	8
3290−55	Rivet−Pop	7	7	2
3290−378	Tie − Cable	32	2	18
3290−379	Tie−Cable	41	22	1
3290−379	Tie−Cable	2	37	1
3290−379	Tie−Cable	12	45	2
3290−412	Rivet−Pop	25	8	2
3290−432	Screw−HH	25	57	1
3290−467	Pin−Cotter, Hair	1	14	1
3296−2	Nut−Lock	4	5	2
3296−6	Nut−Lock	12	30	1
3296−16	Nut−Lock	15	5	2
3296−16	Nut−Lock	27	16	2
3296−22	Nut−Lock	37	13	2
3296−23	Nut−Hex Lock	16	1	8

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
3296−23	Nut−Hex Lock	41	7	4
3296−23	Nut−Hex. Lock	12	4	1
3296−25	Nut−Lock	7	28	1
3296−29	Nut−Hex Lock	15	41	3
3296−29	Nut−Hex. Lock	8	15	2
3296−29	Nut−Hex. Lock	41	19	1
3296−29	Nut−Hex. Lock	7	20	1
3296−29	Nut−Lock	37	8	2
3296−29	Nut−Lock	20	18	1
3296−29	Nut−Lock	33	45	2
3296−29	Nut−Lock	3	68	1
3296−33	Nut−Lock Nylon	7	12	2
3296−39	Nut−Hex Lock	27	5	1
3296−39	Nut−Hex Lock	36	5	4
3296−39	Nut−Hex Lock	15	36	2
3296−39	Nut−Hex. Lock	12	10	2
3296−39	Nut−Hex. Lock	38	17	1
3296−42	Nut−Hex Lock	16	13	8
3296−42	Nut−Hex Lock	3	56	2
3296−42	Nut−Hex. Lock	8	17	2
3296−50	Nut−Lock	40	8	1
3296−59	Nut−Lock	15	27	1
3298−8	Screw−Set	5	43	1
32104−82	Screw−HWH	1	15	5
32104−116	Screw−HFH	8	47	6
32105−1	Screw−HH	29	28	2
32121−6	Pin−Roll	15	19	1
32121−6	Pin−Roll	2	22	1
32121−6	Pin−Roll	16	30	2
32121−38	Pin−Spring	22	15	1
32122−2	Screw−Round Hd.	43	2	1
32122−35	Screw−Machine (Europe)	4	36	1
32128−19	Nut−Flange	25	39	7
32128−20	Nut−Lock Flange Whiz	16	2	2
32128−20	Nut−Lock, Flange, Whiz	1	3	2
32128−33	Nut−Lock Flange	1	10	2
32128−33	Nut−Lock Flange	4	22	3
32128−33	Nut−Lock Flange	2	28	6
32128−33	Nut−Lock Flange	8	48	2
32128−43	Nut−Whiz	29	3	5
32128−43	Nut−Whiz Flange	2	29	4
32128−43	Nut−Whiz Flange	8	31	6
32128−44	Nut−Flange	42	3	3
32128−44	Nut−Flange	11	5	6
32128−44	Nut−Flange	16	5	2
32128−44	Nut−Flange	8	16	6
32128−44	Nut−Flange	2	17	11
32128−44	Nut−Flange (Europe)	4	32	1
32128−44	Nut−Flange Lock	15	44	3
32128−44	Nut−Flange, Lrg	1	12	12
32128−44	Nut−Lock	32	29	2
32128−48	Nut−Lock	32	38	3
32144−14	Screw−HH	38	13	1
32144−18	Screw−HWH	4	8	2
32144−109	Screw−HH	36	2	2
32144−109	Screw−HH	38	12	1
32148−6	Insert−Threaded (Europe)	9	57	2
32148−7	Nut−Clinch	2	3	6
32148−7	Nut−Clinch	1	13	3
32148−8	Nut−Clinch	8	20	3
32148−8	Nut−Clinch	1	26	1
32148−14	Nut−Insert	25	47	1
32149−9	Nut−Flange	4	18	2
32151−13	Ring−Retaining	13	39	1
32151−29	Ring−Retaining	13	34	2
32152−10	Nut−Lock	39	3	1
32152−10	Nut−Lock	31	10	1
32153−4	Nut−Lock	37	18	4
33004−00	Nut−HF	25	7	4
33004−00	Nut−Hex.	26	63	1
33093−00	Washer−Flat	25	44	2
33114−016	Screw−HH	25	10	3
33114−020	Screw	25	53	10
33115−025	Screw−HH	25	48	16
340−2	Adaptor	29	31	1
340−2	Fitting−Hydraulic Straight	32	10	4
340−4	Adaptor	29	33	1
340−4	Fitting−Hydraulic Straight	32	8	4
340−4	Fitting−ORS	20	3	2
340−4	Fitting−ORS	21	7	1
340−4	Fitting−ORS	12	13	1
340−6	Fitting−Hydraulic Straight	32	15	3
340−6	Fitting−ORS	41	3	2
340−17	Elbow ORS	16	11	4
340−70	Nut−Bulkhead	32	31	1
340−74	Nut−Bulkhead	32	32	2
340−77	Fitting − Hyd. LH	16	10	1
340−77	Fitting−Hyd 90˚	27	10	1
340−77	Fitting−Hydraulic 90˚	32	35	1
340−86	Fitting−Hyd, Tee	27	2	2
340−86	Tee	29	21	2
340−88	Fitting−Hydraulic	27	25	1
340−92	Fitting−Straight	27	13	1
340−92	Fitting−Straight	38	22	1
340−98	Fitting	21	5	1
340−98	Fitting	12	21	1
340−103	Fitting	38	21	1
340−105	Elbow	12	17	1
340−105	Fitting−Hydraulic 90˚	32	18	3
340−109	Fitting−Hydraulic Tee	32	22	1
340−109	Fitting−Tee	21	6	1
340−127	Nut−Bulkhead ORS	8	33	2
340−139	Elbow−90˚	12	12	2
340−152	Cap−Hydraulic	19	17	2
340−153	Fitting−Hydraulic 90˚	32	23	1
340−155	Fitting−Hydraulic Straight	32	25	1
353−949	O−Ring	12	20	1
353−987	Fitting−90˚	12	16	1
353−987	Fitting−90˚	11	22	1
353−988	Asm−Plug	30	6	1
353−989	Asm−Plug	30	20	2
353−990	Asm−Plug	30	3	7
353−991	Asm−Plug	30	13	2
354−23	Ball	22	5	1
354−77	Fitting−Quick Connect	20	8	2
354−77	Fitting−Quick Connect	19	15	2
354−77	Fitting−Quick Connect	33	48	1
354−79	Cap−Fitting Yellow	20	7	2
354−79	Cap−Fitting Yellow	19	14	2
354−79	Cap−Fitting Yellow	33	47	1
354−127	Fitting−45˚	11	16	1

*Not Illustrated

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Reelmaster 2300D/2600D has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame under the seat. In any correspondence concerning the Reelmaster 2300D/2600D, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:
1. Model and serial number of the Reelmaster 2300D/2600D.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page
Hood & Fender Assembly	1
Skirt Assembly	2−3
Instrument Panel Assembly	4−5
Electrical Schematic	6
Frame & Steering Assembly	7
Radiator & Air Cleaner Assembly	8−9
Air Cleaner & Clamp Assembly	10
Hydraulic Reservoir & Filter Assembly	11
Hydraulic Pump Installation Assembly	12
Hydraulic Pump Assembly No. 93−6751	13
Hydraulic Pump Assembly No. 99−6131	14
Traction Control Assembly	15
Front Wheel Assembly	16
Rear Hydraulic Drive Motor No. 75−9990 (3WD−Model No. 03427)	17
Front Hydraulic Drive Motor No. 93−6888	18
Drive Motor Plumbing Assembly (2WD−Model No. 03422)	19
Drive Motor Plumbing Assembly (3WD−Model No. 03427)	20
Rear Wheel Drive Valve Assembly (3WD−Model No. 03427)	21
Two Position Valve Assembly No. 92−3196 (3WD−Model No. 03427)	22
Hydraulic Schematic (2WD−Model No. 03422)	23
Hydraulic Schematic (3WD−Model No. 03427)	24
Engine Installation Assembly	25−26
Cutting Unit Lift Valve Installation Assembly	27
Control Valve No. 43−1950	28
Front Cutting Unit Lift Assembly	29
Hydraulic Manifold Assembly No. 93−6718	30
Front Hydraulic Cylinder Assembly No. 94−5031	31
Cutting Unit Hydraulic Plumbing Assembly	32−33
Front Reel Motor Assembly No. 93−6972	34
Rear Reel Motor Assembly No. 93−6975	35
Front Cutting Unit Lift Arm Assembly	36
Cutting Unit Carrier Frames	37
Rear Cutting Unit Lift Arm Assembly	38
Rear Hydraulic Cylinder Assembly No. 93−6869	39
Rear Wheel Assembly (2WD−Model No. 03422)	40
Rear Wheel Assembly (3WD−Model No. 03427)	41
Fuel System Assembly	42
Special Tools	43
Cylinder Block Assembly	44
Crankshaft Assembly	45
Cylinder Head Assembly	46
Rocker Arm Assembly	47
Camshaft Assembly	48
Timing Cover Assembly	49
Oil Pump Assembly	50
Fuel Injection System Assembly	51
Injection Pump Assembly	52
Flywheel Assembly	53
Starter Assembly	54
Oil Sump Assembly	55
Valve Cover Assembly	56
Oil Filter & Exhaust Manifold Assemblies	57
Water Pump Assembly	58
Alternator Assembly	59
Timing Cover Plate Assembly	60
Low Pressure Fuel System & Throttle Stop Assemblies	61
Fuel Filter & Lift Pump Assemblies	62
Engine Lifting Tab & Cold Start Assemblies	63
Gasket & Seals	64
TORO Part Number Index	65−71

Japanese parts kit number 94−5975 contains all of the individual parts on the preceding pages designated as (Japan).

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.