Form No. 3422-858 Rev A

TORO®

Count on it.

Parts Catalog

Safety and Security Cage Kit

Groundsmaster® 5900 Traction Unit with 2 Post ROPS Extension

Model No. 31354

Register at www.Toro.com.
Original Instructions (EN)

CE

3422-858 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Door Cage and Rear Screen Assembly 4
Upper and Lower Windshield Assembly 6
LH Door Cage Assembly 8
RH Door Cage Assembly 10

© 2018—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

Door Cage and Rear Screen Assembly

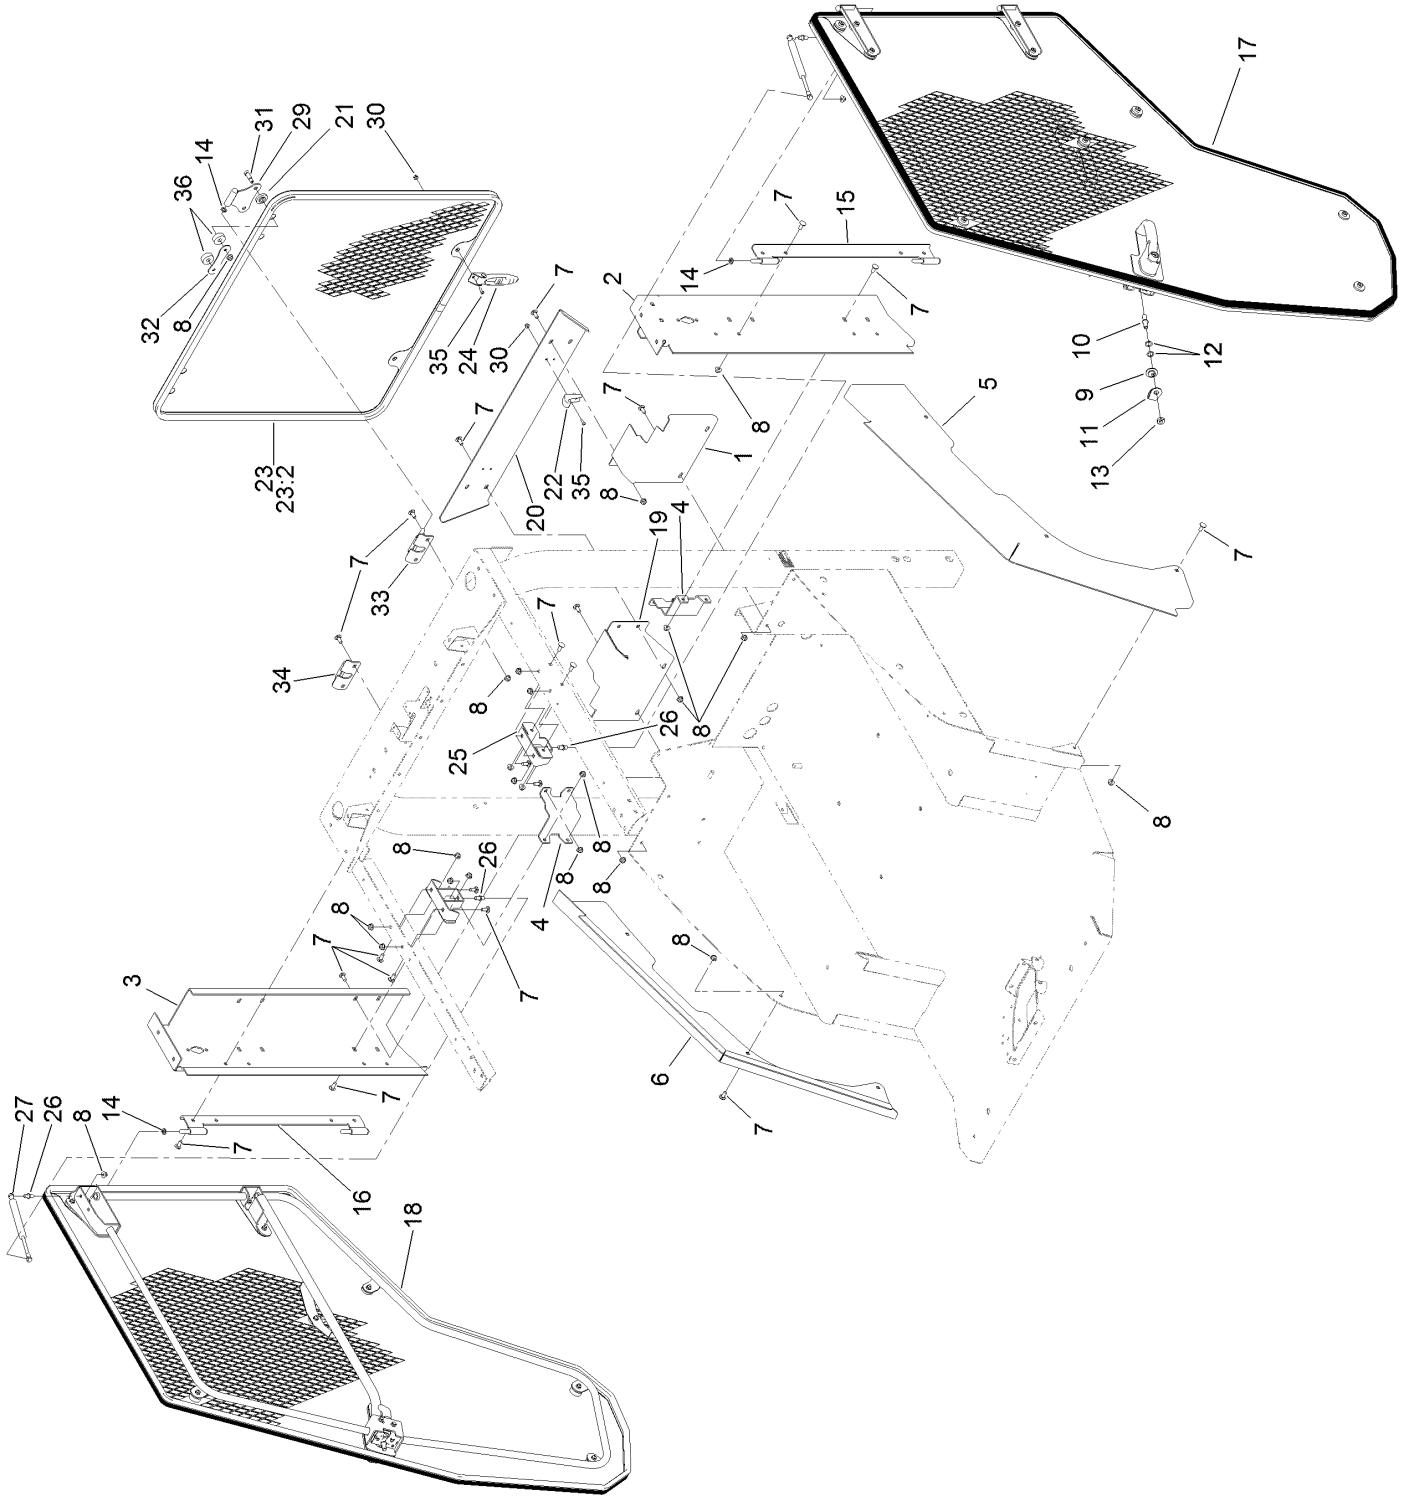


Door Cage and Rear Screen Assembly (continued)

Ref.	Part Number	Qty.	Description
1	132-3721-03	1	Panel-Rear, LH
2	132-3687-03	1	Panel-LH
3	132-3688-03	1	Panel-RH
4	132-3679-03	2	Mount-Bracket
5	132-3689-03	1	Panel-Transition, LH
6	132-3690-03	1	Panel-Transition, RH
7	3230-23	42	Screw-CARR
8	104-8300	50	Nut-HF, NI
9	125-9992	2	Adjuster-Stud
10	132-3718	2	Stud-Striker
11	121-8393	2	Guard-Striker
12	73-0040	4	Washer-Thrust
13	107-8116	2	Nut-Jam, Adhesive
14	121-8441	6	Washer-Spacer
15	132-3729-03	1	Mount-Door, LH
16	132-3730-03	1	Mount-Door RH
17		1	LH Door Cage ASM ●
18		1	RH Door Cage ASM ●
19	132-3733-03	1	Panel-Rear, RH
20	132-3734-03	1	Panel-Rear, Center
21	125-9982	4	Bushing-Flange
22	103-2897	2	Latch-Catch
23	133-0903	1	Rear Screen ASM
23:2	132-3739	1	Trim-Screen, Rear
24	103-2898	2	Latch-Rubber
25	133-0984-03	2	Mount-Gas Spring
26	98-3104	4	Stud-Ball
27	136-1963	2	Spring-Gas, Door
29	121-8535-03	2	Hinge-Window
30	120-4578	6	Nut-HF
31	125-9520	4	Screw-Shoulder, HSH
32	127-9933	2	Plate-Backer, Windshield
33	133-0964-03	1	Hinge-LH
34	133-0965-03	1	Hinge-RH
35	3274-39	6	Screw-HSBH
36	125-9537	4	Bushing-Flange

● Not serviced separately


Upper and Lower Windshield Assembly

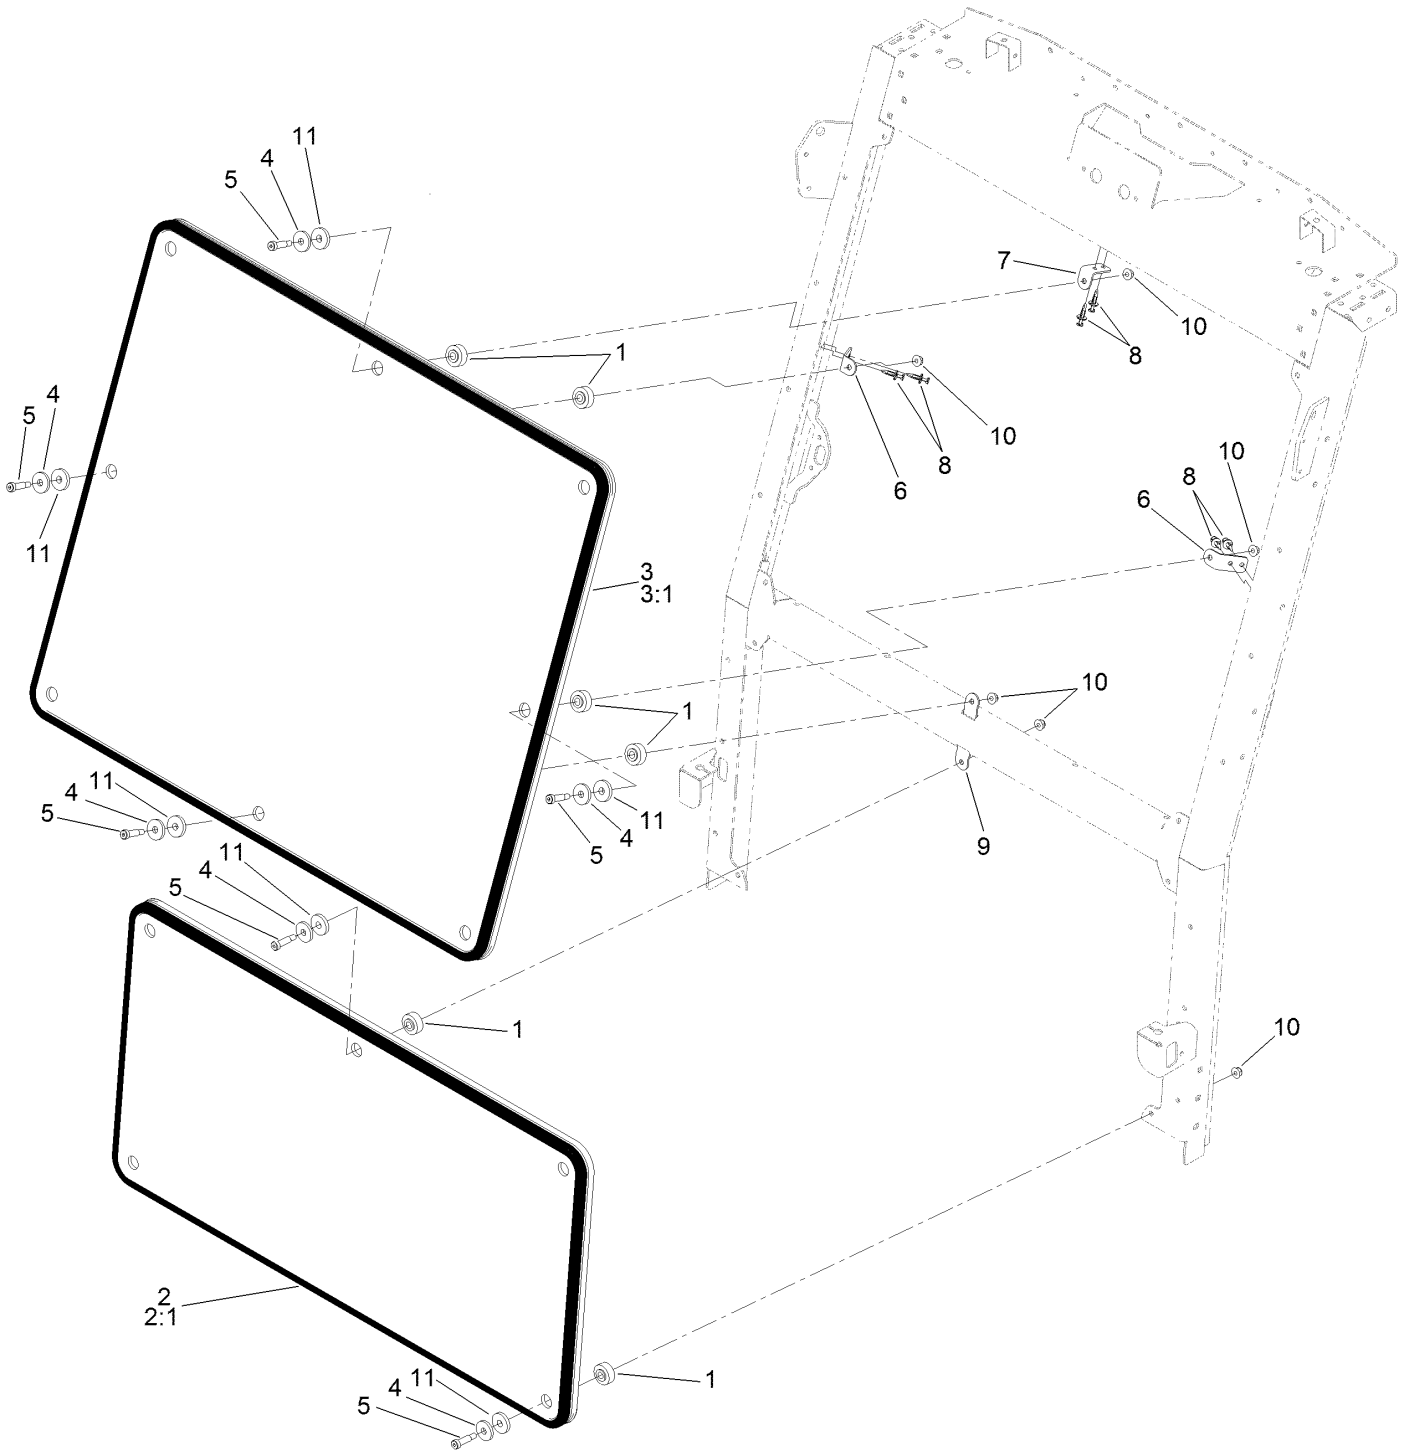

Upper and Lower Windshield Assembly (continued)

Ref.	Part Number	Qty.	Description
1	125-9537	13	Bushing-Flange
2	133-0836	1	Lower Windshield ASM
2:1	132-3411	1	Trim-Windshield, Lower
3	133-0840	1	Upper Windshield ASM
3:1	132-3414	1	Trim-Windshield, Upper
4	130-5815	13	Washer-Backup
5	125-9521	13	Screw-Shoulder, HSH
6	132-3715-03	2	Tab-Mount
7	132-3716-03	1	Tab-Mount
8	125-9622	6	Rivet-Blind
9	132-3717-03	1	Tab-Dual
10	104-8300	13	Nut-HF, NI
11	125-9982	13	Bushing-Flange


LH Door Cage Assembly

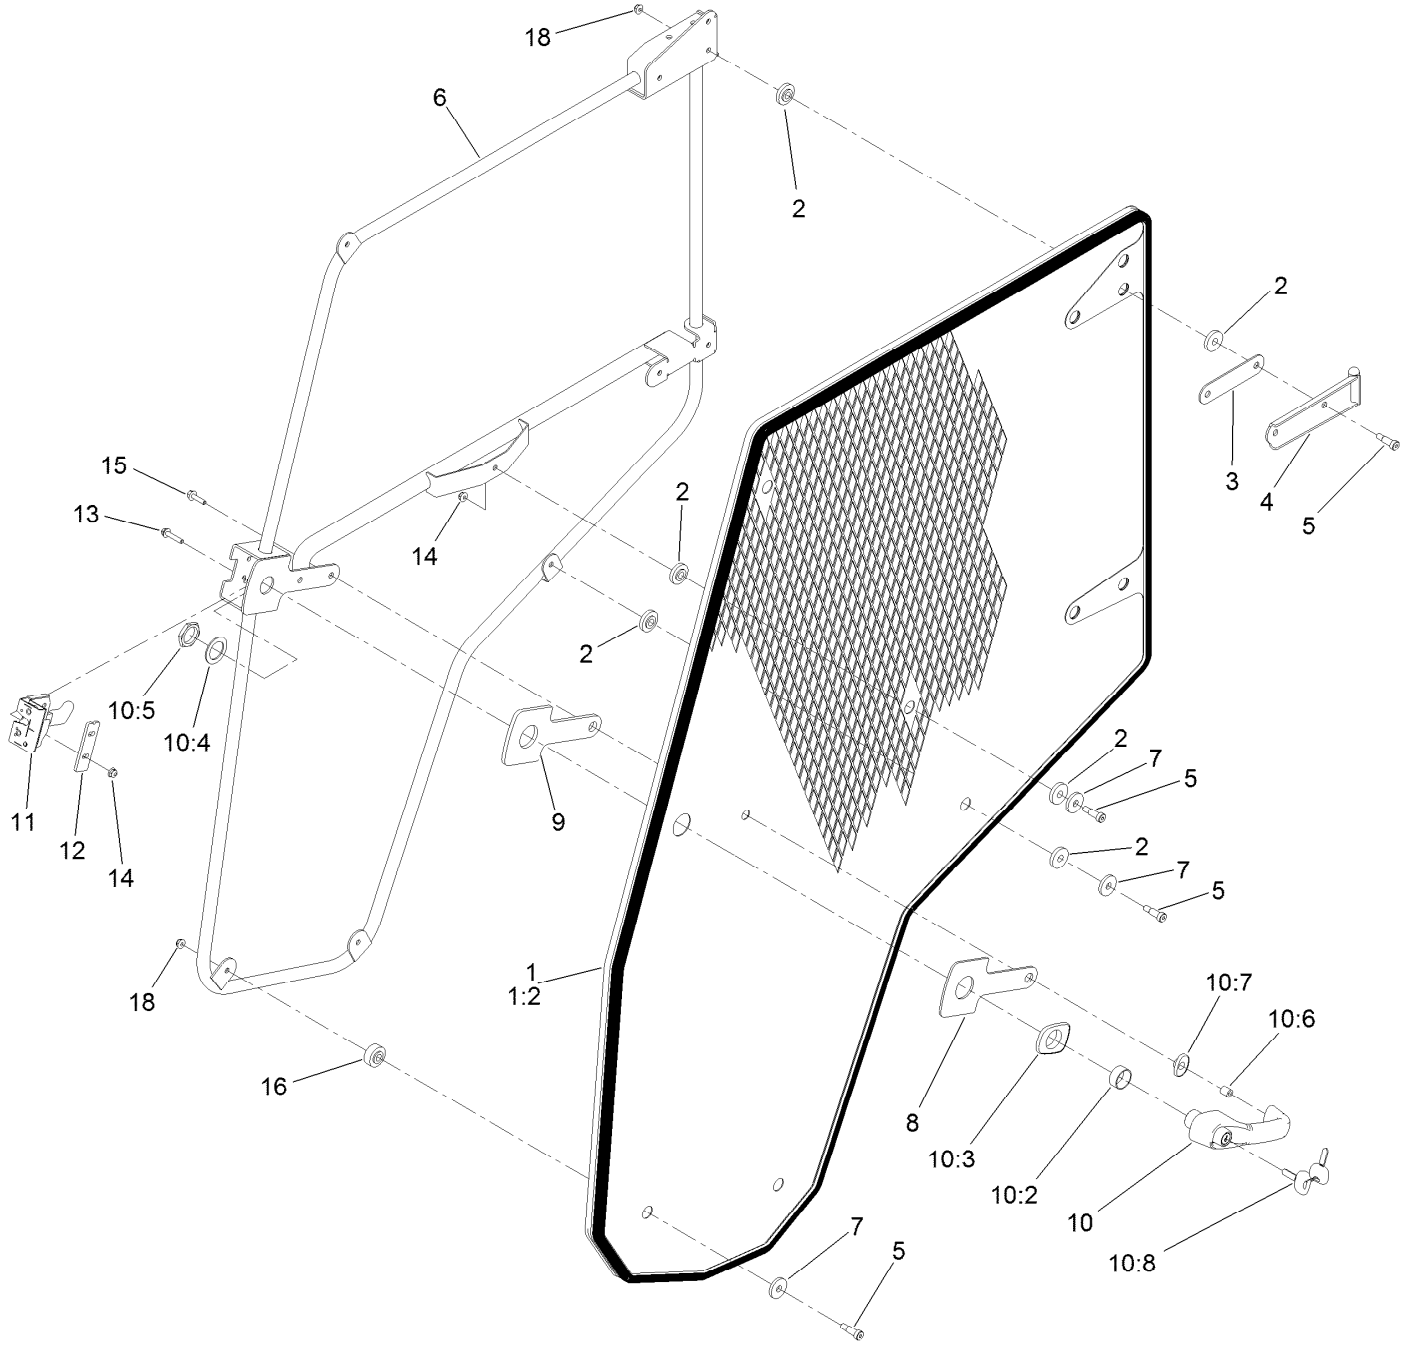

LH Door Cage Assembly (continued)

Ref.	Part Number	Qty.	Description
1	133-0901	1	LH Screen Door ASM
1:2	133-0900	1	Trim-Door
2	125-9982	14	Bushing-Flange
3	132-3722-03	2	Spacer
4	125-9619-03	2	Hinge-Door, LH
5	125-9520	10	Screw-Shoulder, HSH
6	132-3731-03	1	Frame-Cage, LH Door
7	130-5815	6	Washer-Backup
8	130-6172-03	1	Spacer
9	121-8331	1	Gasket-Handle
10	121-8630	1	Handle ASM
10:2	121-8628	1	Cylinder-Mounting, Key
10:3	121-8322	1	Grommet-Mounting, Large
10:4	121-8327	1	Washer
10:5	121-8328	1	Nut
10:6	121-8627	1	Cylinder-Mounting, End
10:7	121-8323	1	Grommet-Mounting, Small
10:8	125-9531	1	Key-Set
11	121-8391	1	Latch-LH
12	121-8395	1	Plate-Support, Latch
13	3234-21	2	Screw-HHF
14	104-7201	2	Nut-HF
15	33103-025	1	Screw-HHF
16	125-9537	3	Bushing-Flange
18	104-8300	10	Nut-HF, NI

RH Door Cage Assembly

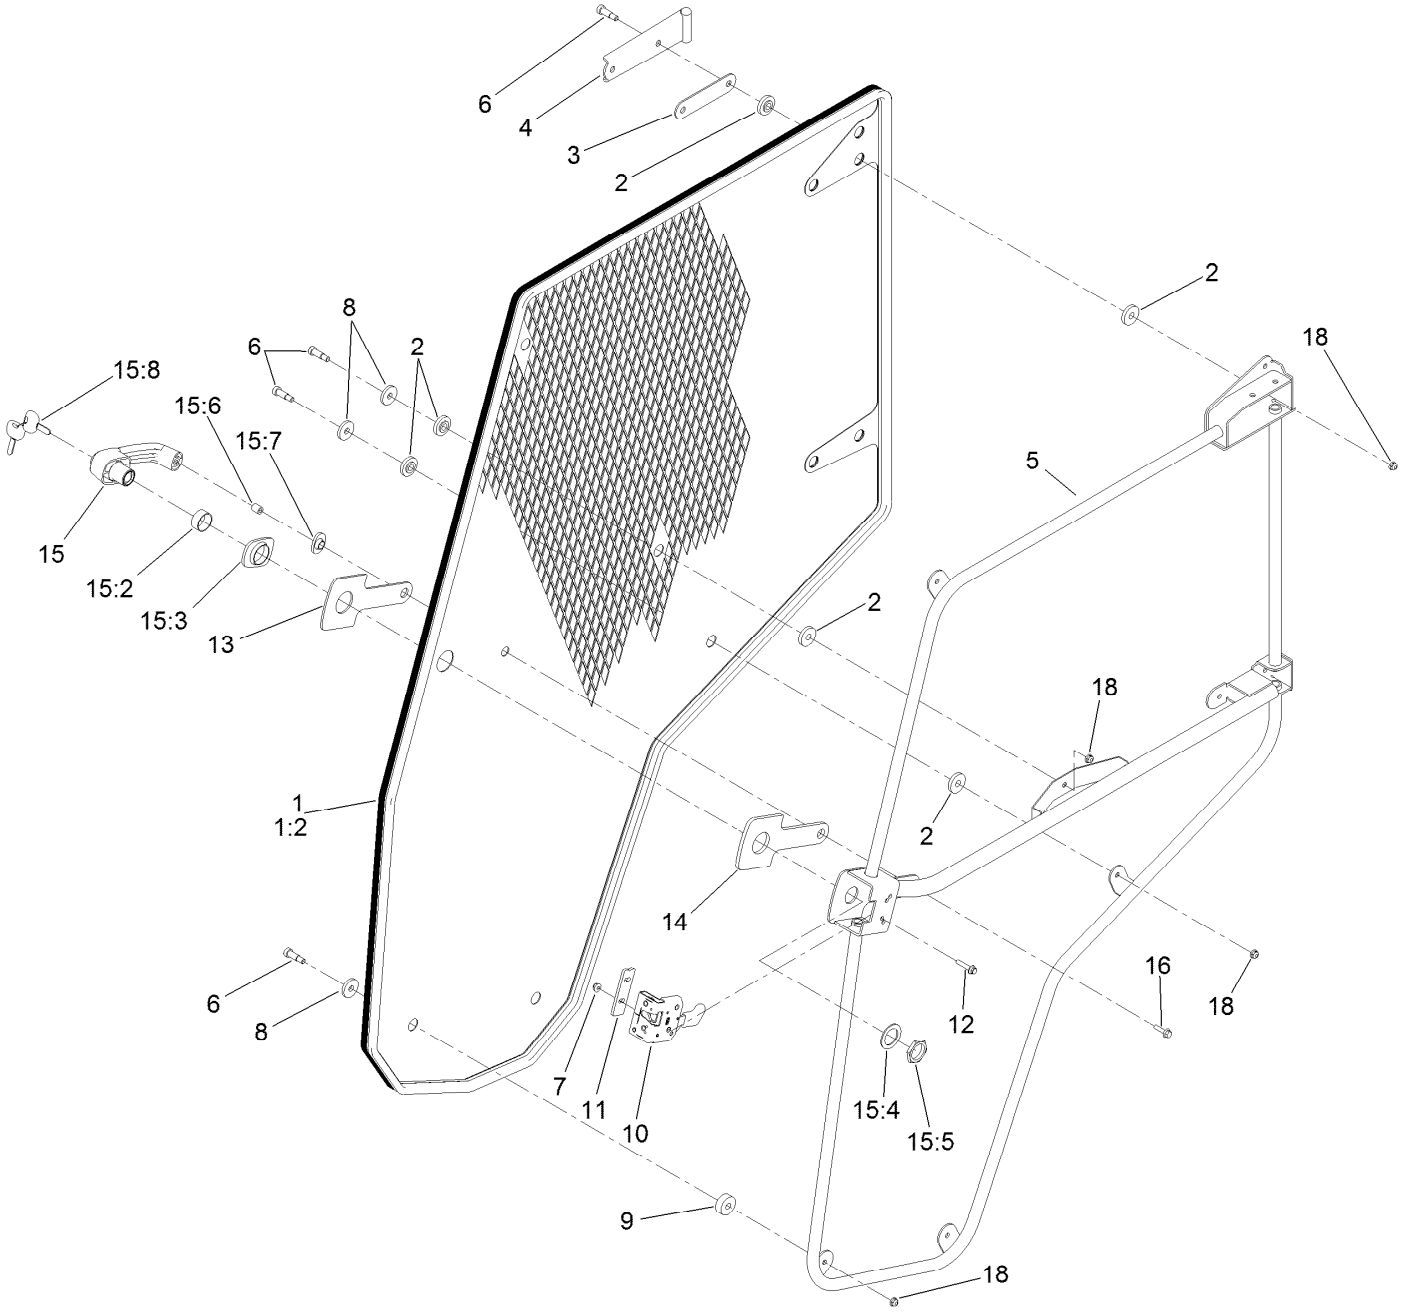

RH Door Cage Assembly (continued)

Ref.	Part Number	Qty.	Description
1	133-0902	1	RH Screen Door ASM
1:2	133-0900	1	Trim-Door
2	125-9982	14	Bushing-Flange
3	132-3722-03	2	Spacer
4	125-9618-03	2	Hinge-Door, RH
5	132-3732-03	1	Frame-Cage, RH Door
6	125-9520	10	Screw-Shoulder, HSH
7	104-7201	2	Nut-HF
8	130-5815	6	Washer-Backup
9	125-9537	3	Bushing-Flange
10	121-8390	1	Latch-RH
11	121-8395	1	Plate-Support, Latch
12	3234-21	2	Screw-HHF
13	130-6172-03	1	Spacer
14	121-8331	1	Gasket-Handle
15	121-8630	1	Handle ASM
15:2	121-8628	1	Cylinder-Mounting, Key
15:3	121-8322	1	Grommet-Mounting, Large
15:4	121-8327	1	Washer
15:5	121-8328	1	Nut
15:6	121-8627	1	Cylinder-Mounting, End
15:7	121-8323	1	Grommet-Mounting, Small
15:8	125-9531	1	Key-Set
16	33103-025	1	Screw-HHF
18	104-8300	10	Nut-HF, NI



Count on it.