
FORM NO. 3321−873

TORO®

MODEL NO. 70122−9900001 & UP

PARTS CATALOG

WHEEL HORSE®
8−25 RIDING MOWER

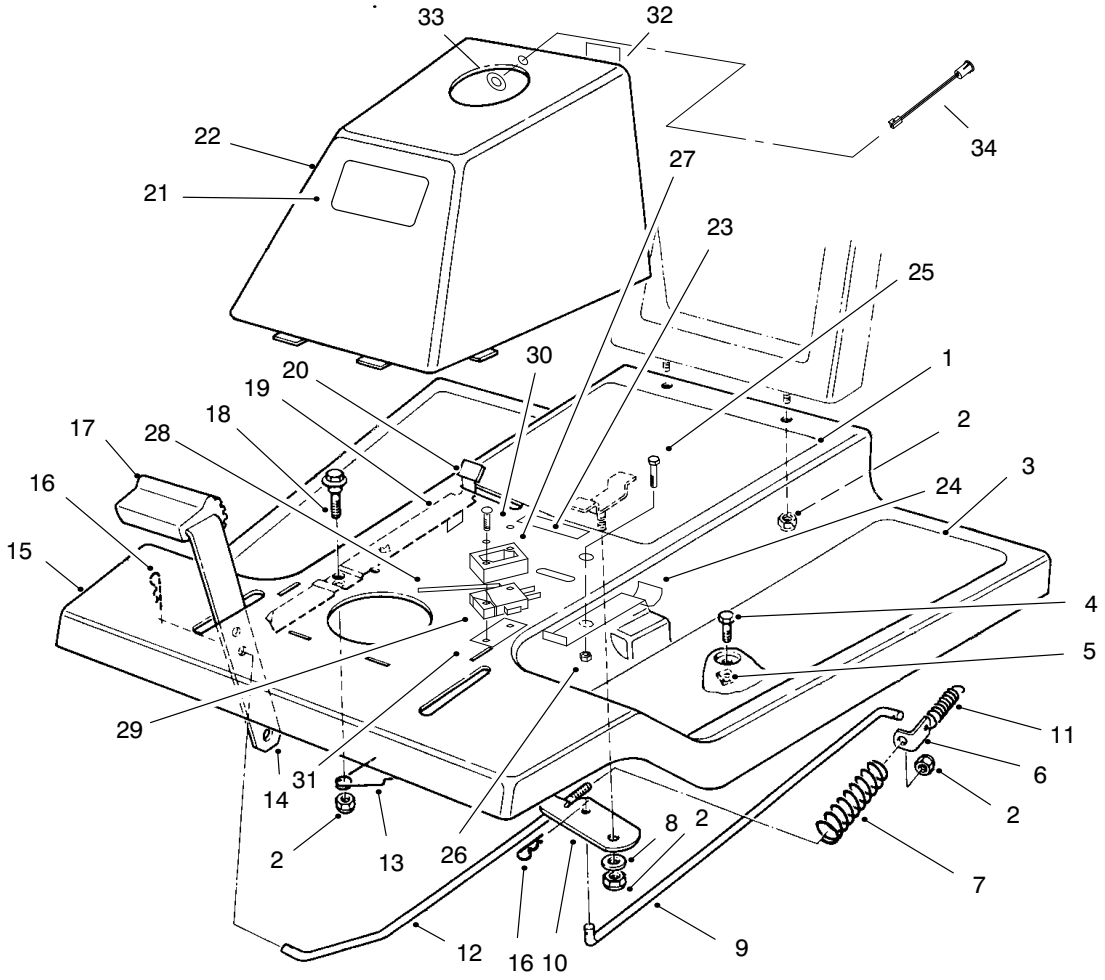


C−0004A

FRONT BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93−7006	Decal − Instruction	1
2	3296−29	Nut − Lock	5
3	44−7030	Tread − Foot Rest	2
4	32104−110	Screw − Cap Hex. Hd.	4
5	3290−347	Nut − U−Type	4
6	67−1590	Bracket − Brake Return	1
7	67−1430	Spring − Compression	1
8	26−9530	Washer − Pivot	1
9	67−1340	Rod − Brake, Transmission	1
10	67−1330−03	Lever − Brake, Bellcrank	1
11	67−1450	Spring − Extension	1
12	67−1350	Rod − Front, Brake	1
13	19−1970	Spring − Brake, Parking	1
14	67−1130−01	Pedal − Brake & Clutch	2
15	98−2387−01	Body W.A. − Front	1
16	3290−250	Pin − Hair, Cotter	2
17	65−2920	Pad − Pedal	2
18	19−1470	Bolt − Shoulder	1
19	98−0711−03	Lever − Brake, Parking	1
20	19−2200	Tip − Brake, Parking	1
21	92−7981	Decal − Toro	1
22	99−2968	Tower (Incl. Ref. #21)	1
23	93−7011	Decal − Parking Brake	1
24	98−0709	Clamp	1
25	321−2	Screw− Hex Hd. Cap	1
26	3296−16	Nut − Hex Lock	1
27	88−4880	Spacer	1
28	88−9932	Switch − Micro	1
29	93−3240	Seal − Plunger	1
30	9104784	Screw	2
31	3290−354	Nut − Speed	1
32	99−2982	Decal − Indicator Light	1
33	99−6059	Clip − Retainer	1
34	95−7652	Light − Indicator	1

©The TORO Company − 1999
All Rights Reserved

TPS

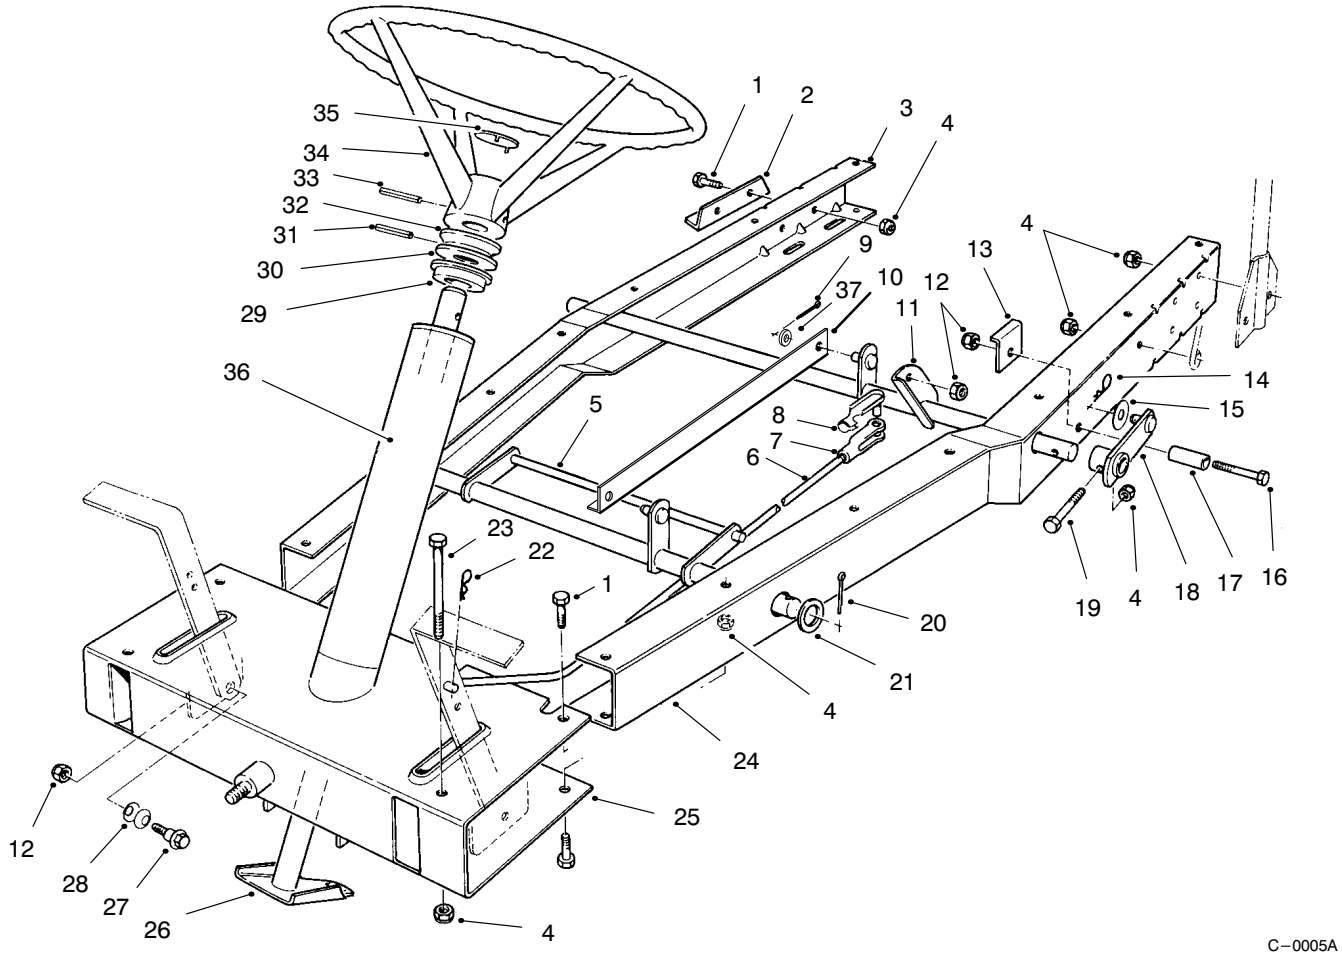


C−0005A

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322−3	Screw − Cap Hex. Hd.	6
2	44−7140−01	Mount − Bearing, Axle	1
3	67−0520−01	Channel − R.H.	1
4	3296−29	Nut − Lock	16
5	67−0010−03	Lift W.A. − Front, Deck	1
6	67−0430	Rod − Clutch	1
7	282−27	Clevis	1
8	67−1530	Assembly − Pin, Clevis	1
9	3272−6	Pin − Cotter	2
10	76−3890	Bracket − Link, H.O.C.	1
11	67−0050−01	Tube W.A. − Support, Rear	1
12	3296−39	Nut − Lock	5
13	67−1510−01	Brace − Stop, Deck	2
14	3290−355	Pin − Hair, Cotter	2
15	67−1460	Washer − Flat	2
16	323−10	Screw − Cap Hex. Hd.	2
17	68−8380	Spacer − Stop, Deck	2
18	76−3790	Lever W.A. − H.O.C.	2
19	46−2511	Bolt − Mounting, Axle	2

Ref. No.	Part No.	Description	No. Used
20	3272−23	Pin − Cotter	2
21	3256−29	Washer − Flat	2
22	3290−250	PIn − Hair, Cotter	1
23	322−14	Screw − Cap Hex. Hd.	2
24	67−0530−01	Channel − L.H.	1
25	67−0450−01	Frame W.A. − Front	1
26	67−0830−03	Shaft W.A. − Steering	1
27	67−0870	Bolt − Shoulder	2
28	3290−413	Washer − Belleville	4
29	67−0850	Bushing − Steering	2
30	67−0860	Washer − Steering	1
31	32121−32	Pin − Roll	1
32	67−0440	Spacer − Steering	1
33	32121−78	Pin − Roll	1
34	49−3242	Wheel − Steering	1
35	92−7990	Insert − Wheel, Steering	1
36	76−4080	Decal	1
37	3256−22	Washer − Flat	1
*	13−6049	Kit − Loose parts	1

*Not Illustrated

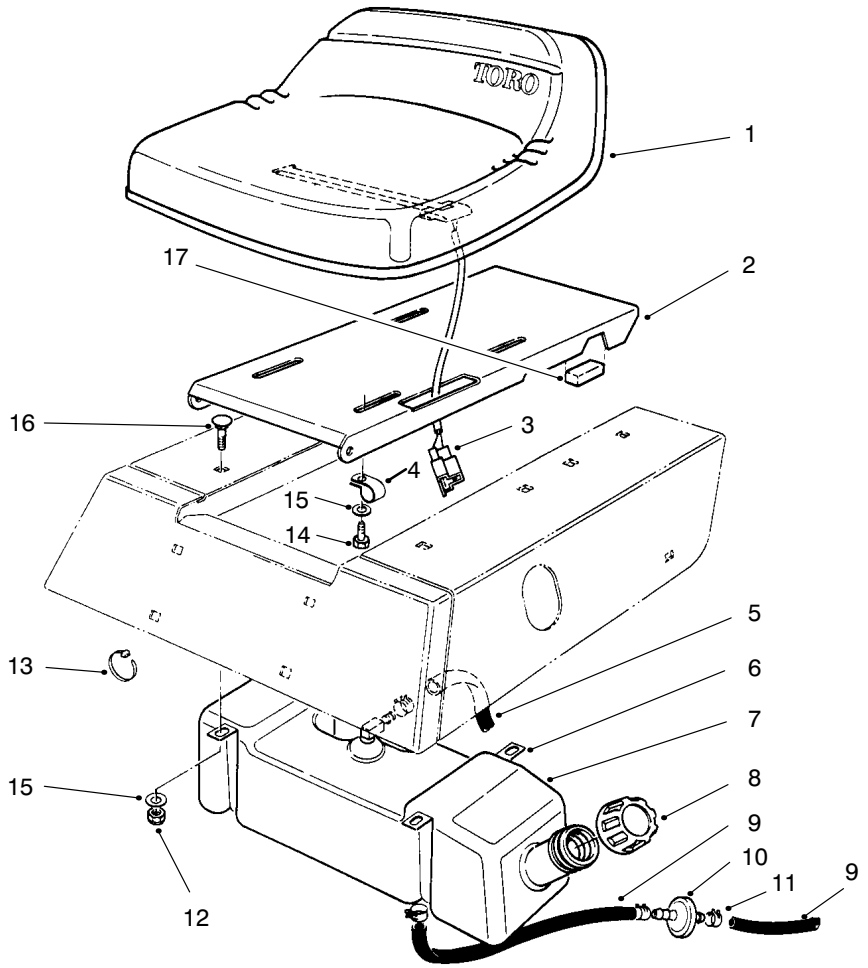


C−0002A

SEAT & GAS TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66−6680	Seat	1
2	67−1242−01	Base − Seat	1
3	38−1420	Switch − Seat	1
4	18−2970	R−Clamp	1
5	47−2986	Hose − Gas	1
6	67−0950	Strap − Tank, Gas	2
7	80−4580	Tank − Gas	1
8	55−3576	Assembly − Cap, Gas	1
9	47−2964	Hose − Gas	2

Ref. No.	Part No.	Description	No. Used
10	56−6360	Filter	1
11	2412−98	Clamp − Hose	5
12	3296−29	Nut − Lock	4
13	3290−378	Tie − Cable	1
14	322−3	Screw − Cap Hex. Hd.	4
15	3256−23	Washer − Flat	8
16	3230−1	Bolt − Carriage	4
17	66−6920	Pad − Isolator	2

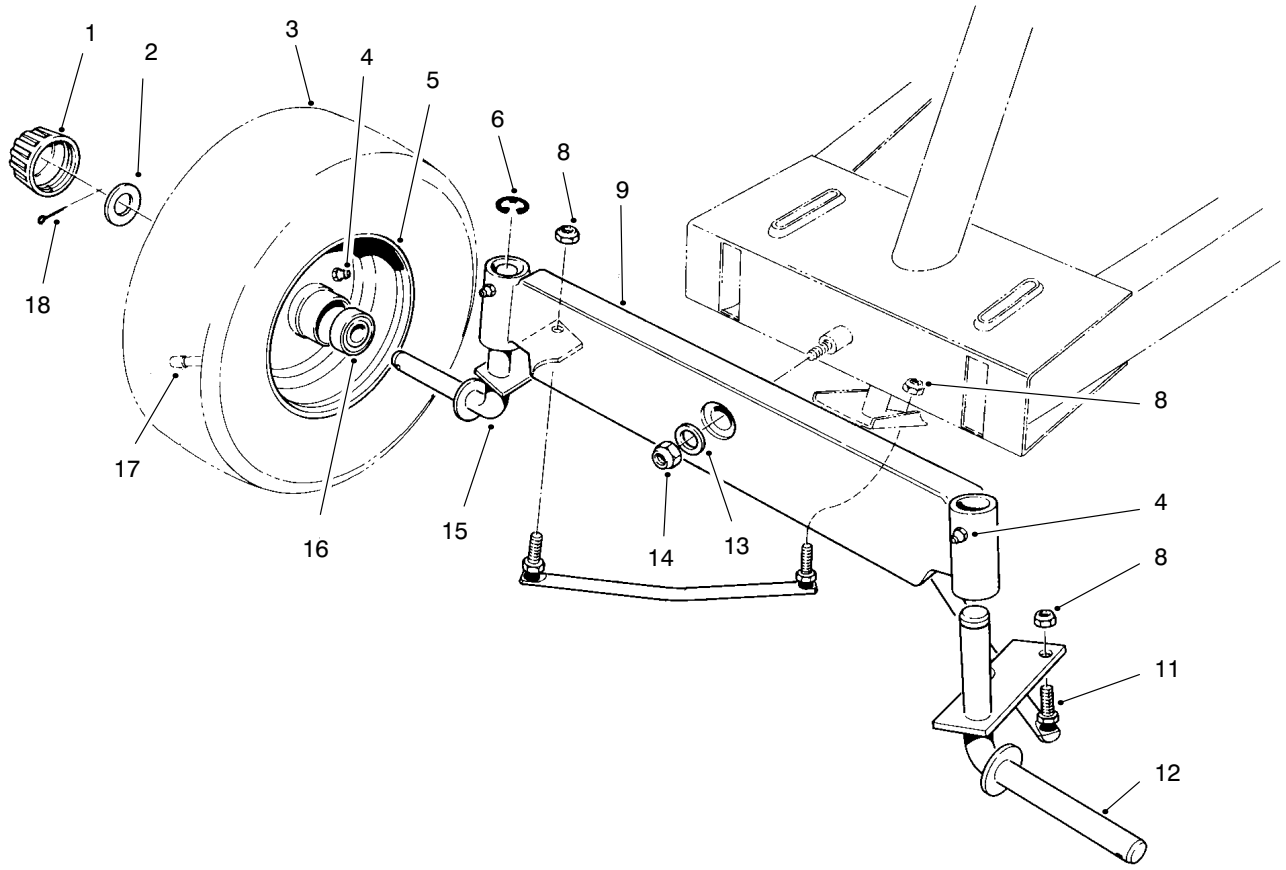


C−0003A

FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	61−9780	Cap − Hub	2
2	28−2480	Washer − Flat	2
3	99−2990	Tire	2
4	302−5	Fitting − Grease	4
5	217−80	Rim	2
6	32151−48	Ring − Retaining	2
8	3296−4	Nut − Lock	4
9	67−0990−01	Axle − Front	1
11	67−0880	Assembly − Tie Rod	2

Ref. No.	Part No.	Description	No. Used
12	67−0810−01	Spindle − L.H.	1
13	3256−26	Washer − Flat	1
14	3296−25	Nut − Lock	1
15	67−0800−01	Spindle − R.H.	1
16	110513	Bearing	4
17	232−27	Valve Stem w/Cap	2
18	3272−12	Pin − Cotter	2
*	232−44	Tube − Inner	2

* Not Illustrated

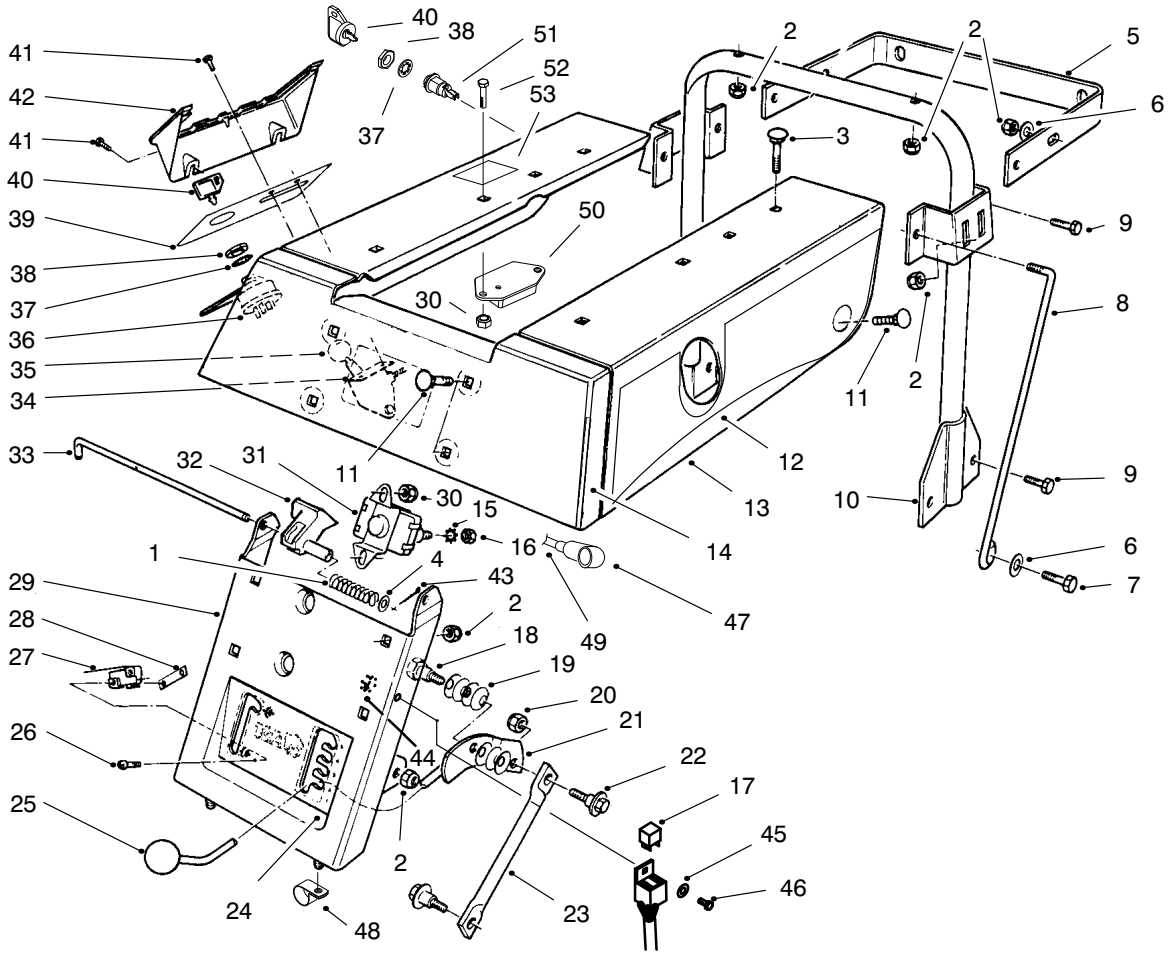

C−0007B


REAR BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71−8310	Spring − Prop, Seat	1
2	3296−29	Nut − Lock	11
3	3230−3	Bolt − Carriage	2
4	3256−22	Washer − Flat	1
5	67−1500−03	Bar − Stand	1
6	3256−23	Washer − Flat	4
7	322−5	Screw − Cap Hex. Hd.	2
8	67−1480	Brace − Support, Seat	2
9	322−3	Screw − Cap Hex. Hd.	6
10	67−0790−03	Support W.A. − Seat	1
11	3230−1	Bolt − Carriage	6
12	98−1456	Decal − Toro L.H.	1
*	99−2984	Decal − Toro R.H.	1
13	99−2964−01	Body W.A. − Rear	1
14	92−7978	Decal − Insignia	1
15	3253−3	Washer − Lock	2
16	3218−1	Nut − Jam	2
17	98−7249	Relay	1
18	28−0540	Bolt − Shoulder	1
19	3290−413	Washer − Belleville	7
20	3296−39	Nut − Lock	1
21	67−0270	Handle W.A. − H.O.C.	1
22	67−0870	Bolt − Shoulder	2
23	67−0080	Link − H.O.C.	1
24	92−7977	Decal − H.O.C. Deck Engage.	1
25	233−22	Knob	1
26	3290−313	Screw − Pan Head	2

Ref. No.	Part No.	Description	No. Used
27	88−9932	Switch − Micro	1
28	3290−354	Nut − Double	1
29	67−1090−03	Support W.A. − Seat	1
30	3296−42	Nut − Lock	4
31	47−1910	Solenoid	1
32	80−4330	Prop − Seat	1
33	80−4550	Rod − Base, Seat	1
34	66−6640	Control − Throttle	1
35	233−25	Knob	1
36	88−9830	Switch − Ignition (Incl. Ref. #37 & 38)	1
37	3254−5	Washer − Lock, Int. Tooth	2
38	218−461	Nut − Hex.	2
39	92−7976	Decal − Panel, Control	1
40	63−8360	Key	2
41	32144−42	Screw − Hex. Hd. Tapping	4
42	67−1030	Cover − Panel, Control	1
43	3272−4	Pin − Cotter	1
44	3296−2	Nut − Lock	1
45	3256−14	Washer − Flat	1
46	3290−134	Screw − Cap Mach. Hd.	1
47	93−3190	Boot − Terminal Insulator	1
48	18−2970	Clamp	1
49	98−0707	Cable	2
50	99−3700	Module − NMIR	1
51	46−5780	Switch − Starter	1
52	321−4	Screw − Hex Hd.	2
53	99−2986	Decal − Danger Int'l	1

*Not Illustrated


3321−873

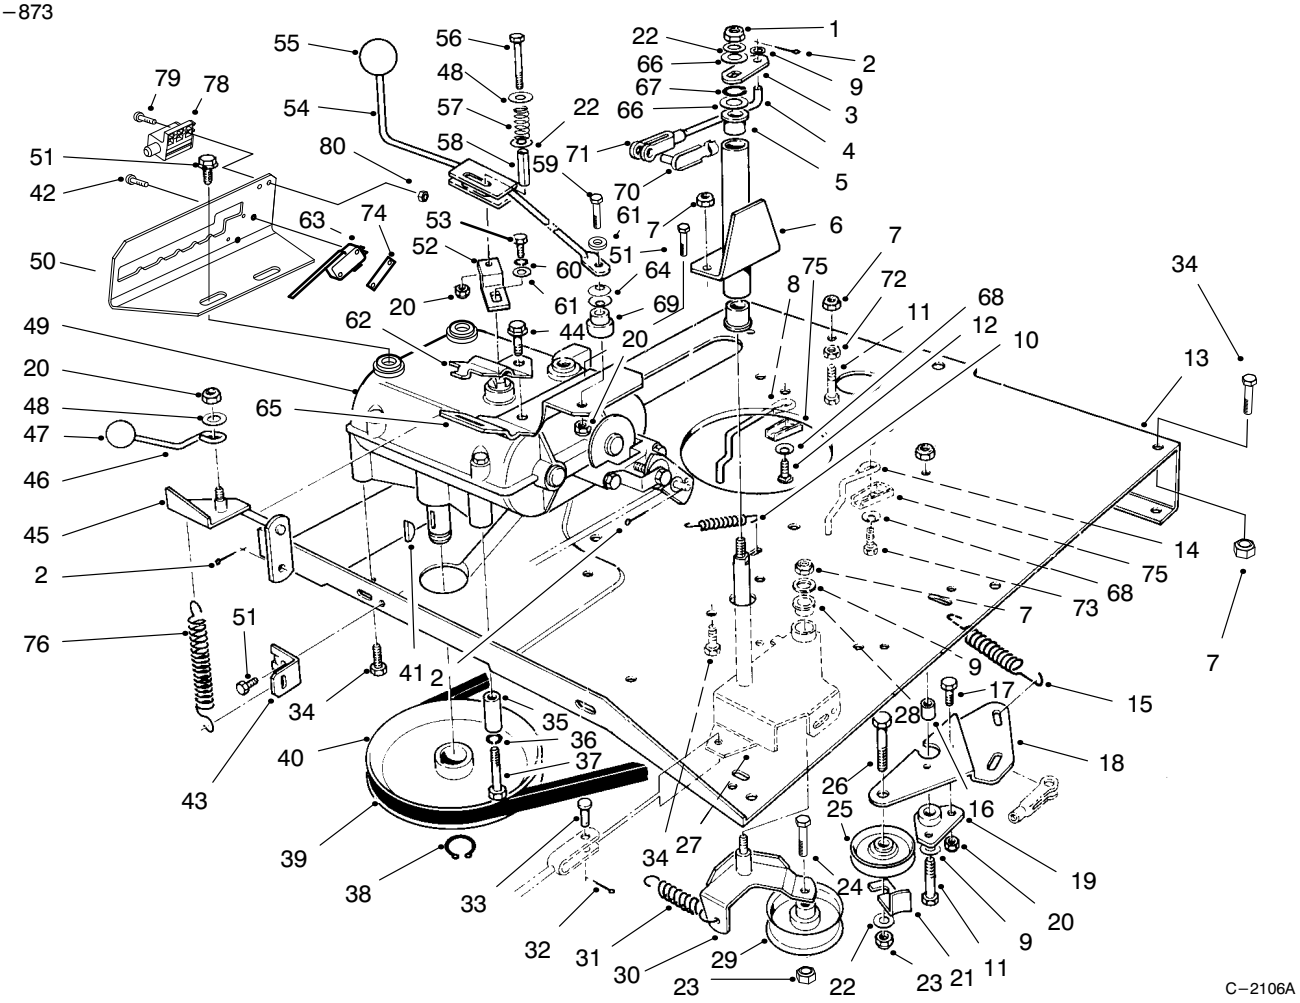

TRANSMISSION & LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296−39	Nut − Lock	1
2	3272−6	Pin − Cotter	2
3	67−0690−03	Flat − Deck Engage Bracket	1
4	68−8370	Link − Deck Engage	1
5	256−90	Bushing	2
6	67−0540−03	Tube W.A. − Pivot (Incl. Ref. #5)	1
7	3296−29	Nut − Lock	13
8	99−2976	Guide R.H. − Belt, Engine	1
9	3256−23	Washer − Flat	3
10	26−6700	Spring − Return, Brake	1
11	322−6	Screw − Cap Hex. Hd.	2
12	32144−49	Bolt − Carriage	1
13	76−4090−01	Plate − Engine	1
14	67−0940	Guide L.H. − Belt, Engine	1
15	68−9950	Spring − Traction	1
16	67−0410	Spacer − Pivot	1
17	321−4	Screw − Cap Hex. Hd.	2
18	67−0420−03	Plate − Mount, Idler	1
19	67−0400	Mount − Pivot	1
20	3296−42	Nut − Lock	5
21	12−9020	Retainer − Belt	1
22	3256−24	Washer − Flat	3
23	3296−59	Nut − Lock	2


Ref. No.	Part No.	Description	No. Used
24	323−9	Screw − Cap Hex. Hd.	1
25	12−5820	Pulley − Idler, Traction	1
26	323−8	Screw − Cap Hex. Hd.	1
27	67−0360	Bracket − Arm, Idler (Incl. Ref. #28)	1
28	256−155	Bushing	1
29	56−9870	Pulley − Idler, Deck	1
30	67−0330−03	Idler − Plate, Mount	1
31	67−9170	Spring	1
32	3272−4	Pin − Cotter	1
33	283−67	Pin − Clevis	1
34	322−3	Screw − Cap Hex. Hd.	14
35	67−0920	Guide − Belt	1
36	3253−4	Washer − Lock	1
37	322−10	Screw − Cap Hex. Hd.	1
38	32120−64	Ring − Retaining	1
39	67−0900	Belt − Traction	1
40	82−6450	Pulley − Transmission	1
41	3257−23	Key	1
42	9104784	Screw − Tapping	4
43	67−0750	Bracket − Mount, Spring	1
44	32144−70	Screw − Hex. Hd. Tapping	1
45	67−0600−03	Lever W.A. − Deck Engage	1
46	67−0640	Handle − Deck Engage Rod	1

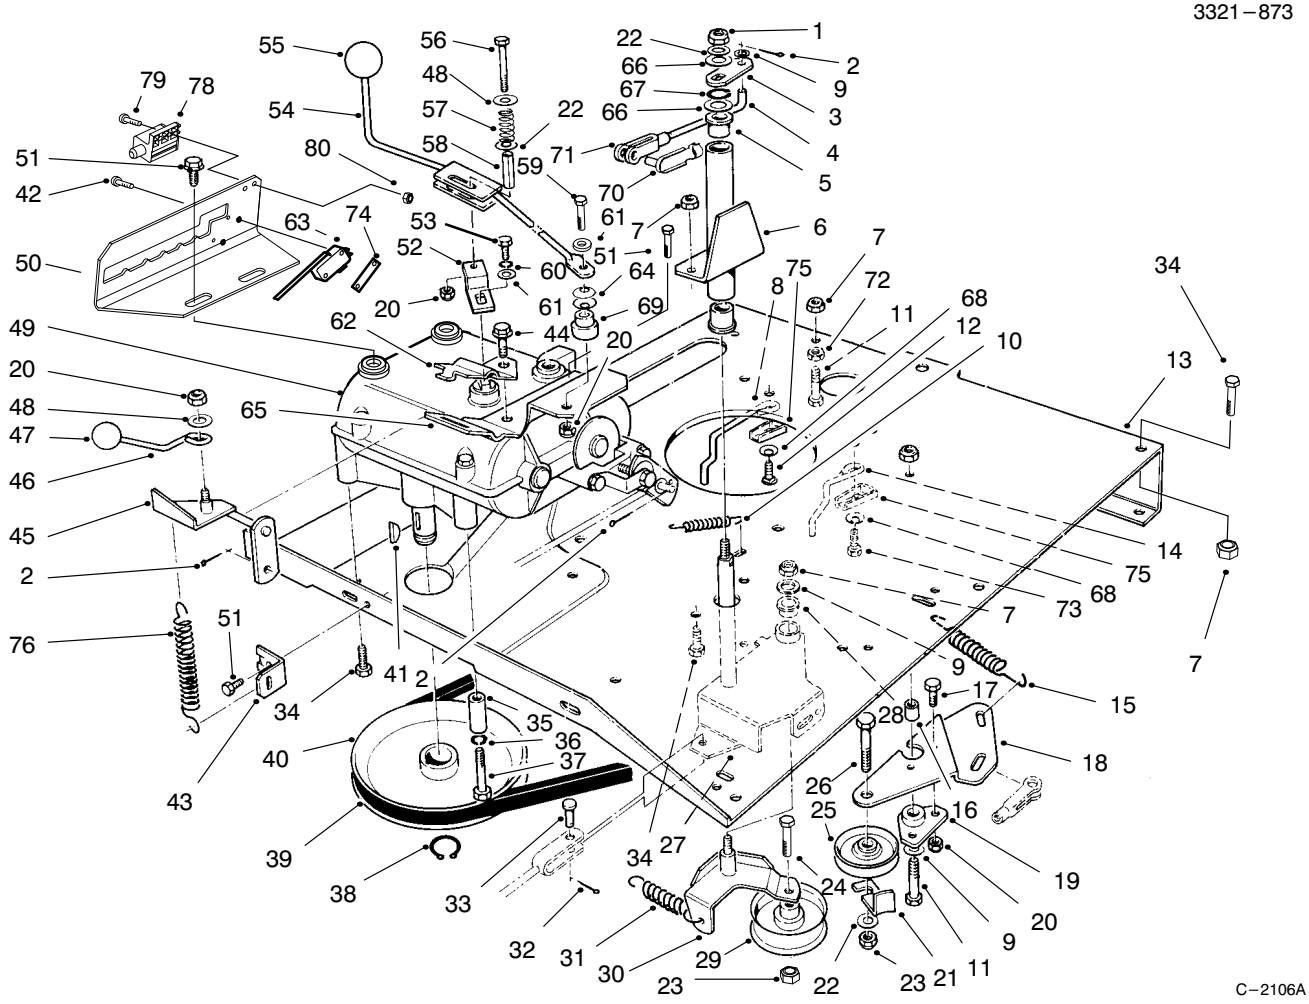

TRANSMISSION & LINKAGE ASSEMBLY (CONTINUED)

Ref. No.	Part No.	Description	No. Used
47	233−22	Knob	1
48	3256−55	Washer − Fender	2
49	67−1400	Transmission	1
50	99−2970−03	Gate − Shift	1
51	32144−14	Screw − Wash. Hd., Tap.	4
52	56−7620	Lever − Shift	1
53	329−4	Screw − Cap Hex. Hd.	1
54	76−3940−03	Lever W.A. − Shift	1
55	233−48	Knob	1
56	321−15	Screw − Cap Hex. Hd.	1
57	56−7730	Spring	1
58	56−7740	Spacer	1
59	321−8	Screw − Cap Hex. Hd.	1
60	3253−3	Washer − Lock	1
61	3256−22	Washer − Flat	2
62	67−0670	Bracket − Engage, Deck	1
63	88−9930	Switch − Micro	1

Ref. No.	Part No.	Description	No. Used
64	3290−478	Washer − Belleville	2
65	67−0660	Bracket − Mount, Shifter	1
66	20−3220	Washer − Flat	2
67	32151−62	Ring − Retaining	1
68	3290−456	Washer − Belleville	2
69	76−3970	Spacer − Pivot	1
70	67−1530	Assembly − Pin, Clevis	1
71	282−27	Clevis	1
72	3218−2	Nut − Jam	1
73	3230−2	Bolt − Carriage	1
74	3290−354	Nut − Double	1
75	76−3820	Anchor − Guide, Belt	2
76	76−4660	Spring	1
77	3290−378	Tie − Cable	1
78	95−1653	Switch − Single Pole	1
79	3290−392	Screw − Hex Slot Hd	2
80	3296−1	Nut − Lock	2

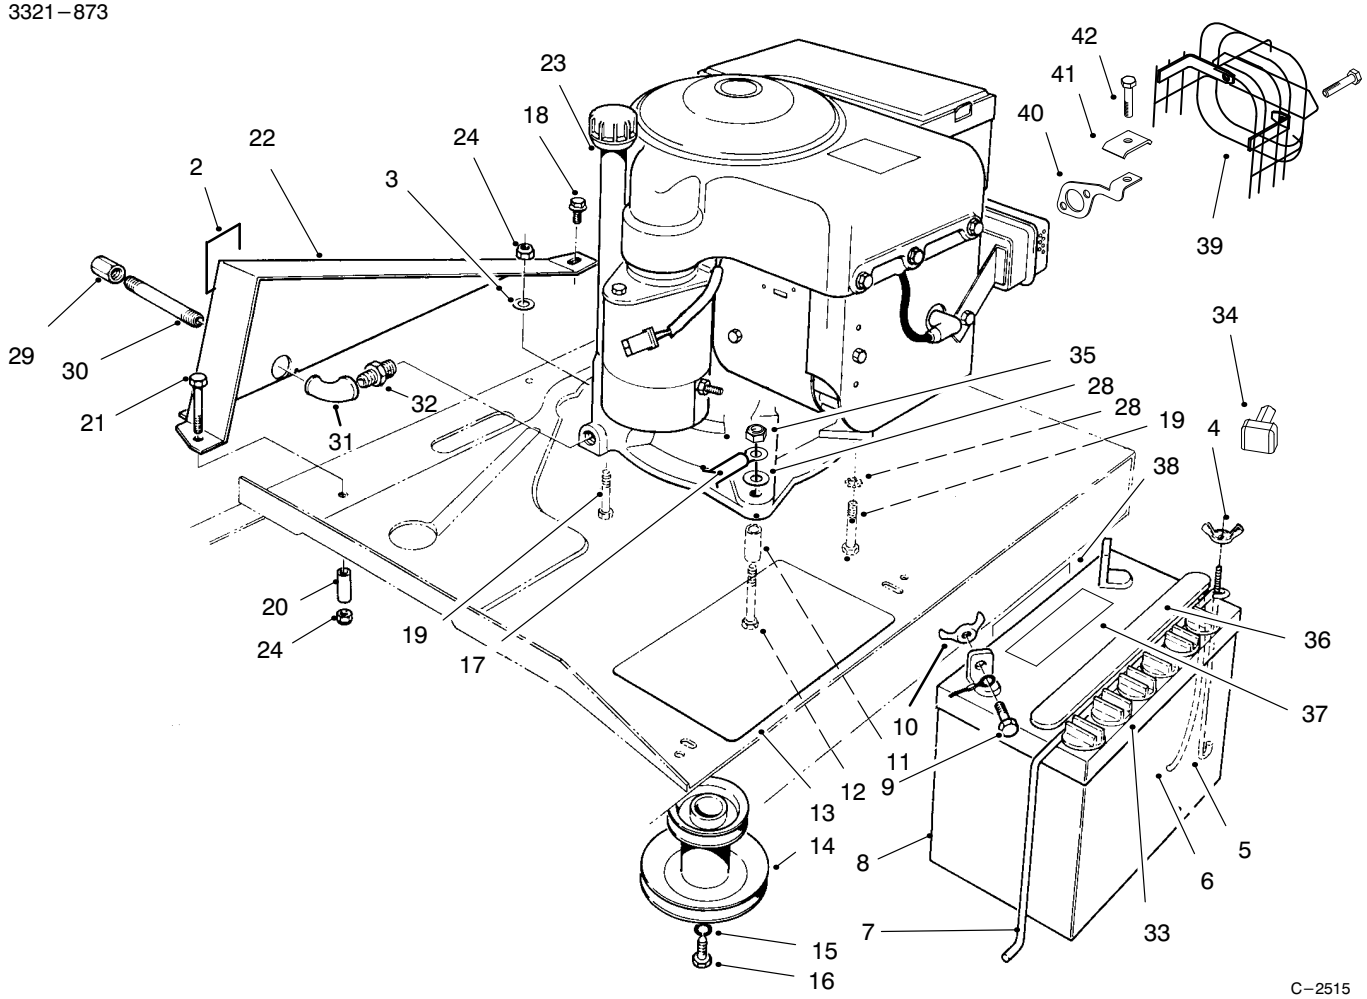


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	114621	Decal − European Noise	1
3	3256−23	Washer − Flat	2
4	32103−12	Nut − Wing	1
5	56−7720	Post − Hold Down, Battery	1
6	56−2540	Tube − Drain	1
7	56−7710	Hold Down − Battery	1
8	80−2600	Battery 12V	1
9	321−4	Screw − Cap Hex. Hd.	2
10	32103−22	Nut − Wing	2
11	80−4560	Spacer	1
12	322−12	Screw − Cap Hex. Hd.	1
13	62−4300	Pad − Anti−Skid	1
14	98−0712	Pulley − Engine	1
15	3256−25	Washer − Flat	1
16	62−3760	Screw − Cap Hex. Hd.	1
17	54−3091	Assembly − Wire Battery to Ground	2
18	32144−14	Screw − Self Tapping	1
19	322−7	Screw − Cap Hex. Hd.	3
20	67−0920	Guide − Belt	1
21	322−10	Screw − Cap Hex. Hd.	1
22	67−0962−01	Guard − Chain	1

Ref. No.	Part No.	Description	No. Used
23		Engine − 8 H.P. B & S	1
24	3296−29	Nut − Lock	4
28	3255−8	Washer − Lock	3
29	288−2	Cap − Pipe	1
30	289−34	Nipple − Pipe	1
31	2811−17	Elbow − Street	1
32	2812−1	Reducer	1
33	218−560	Cap − Battery	6
34	28−8080	Boot − Battery Terminal	1
35	32153−3	Nut − Lock	1
36	93−9354	Decal − Battery	1
37	93−7276	Decal − Danger	1
38	93−6668	Decal − Battery Charging Instructions	1
39	94−6426	Guard − Muffler	1
40	94−6425	Bracket − Muffler Guard	1
41	94−6424	Tab − Muffler Guard	1
42	32104−76	Screw − Self Tap	3
*	94−6427	Muffler Guard Assembly (Incl. Ref. #39−42)	1
*	88−4490	Reducer − Throttle	1

*Not Illustrated

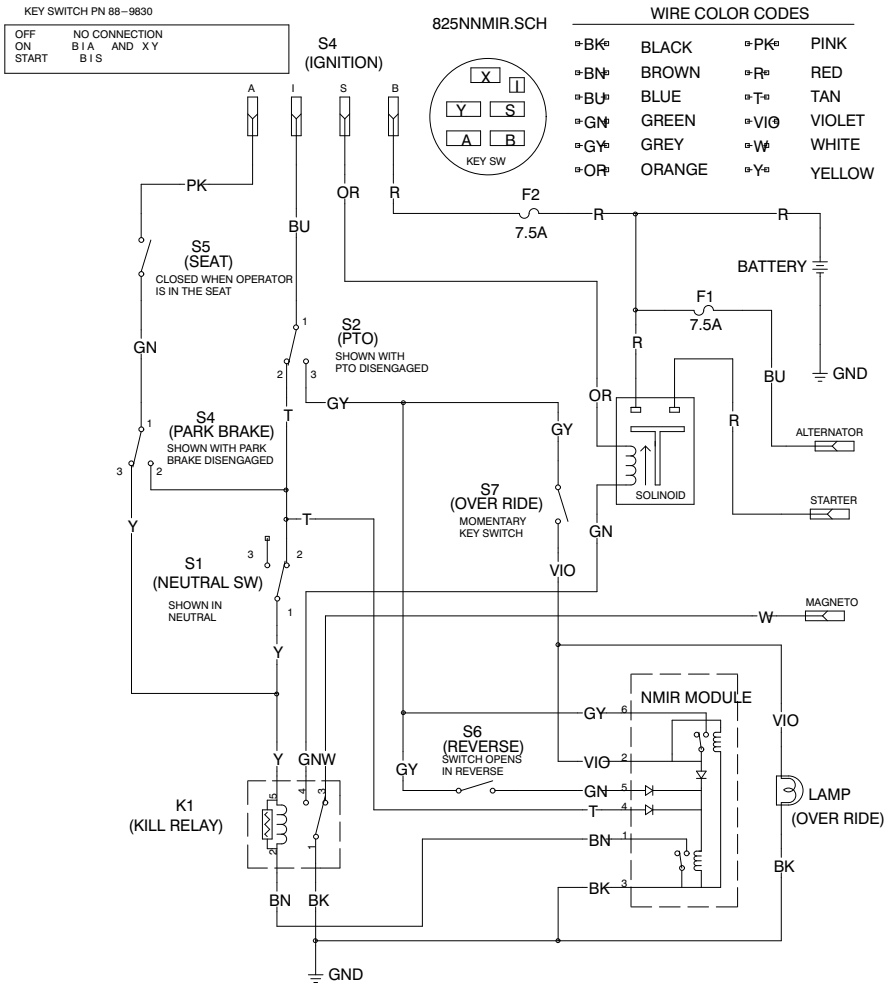


C−2378

ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	99−2325	Harness − Wire	1

Ref. No.	Part No.	Description	No. Used

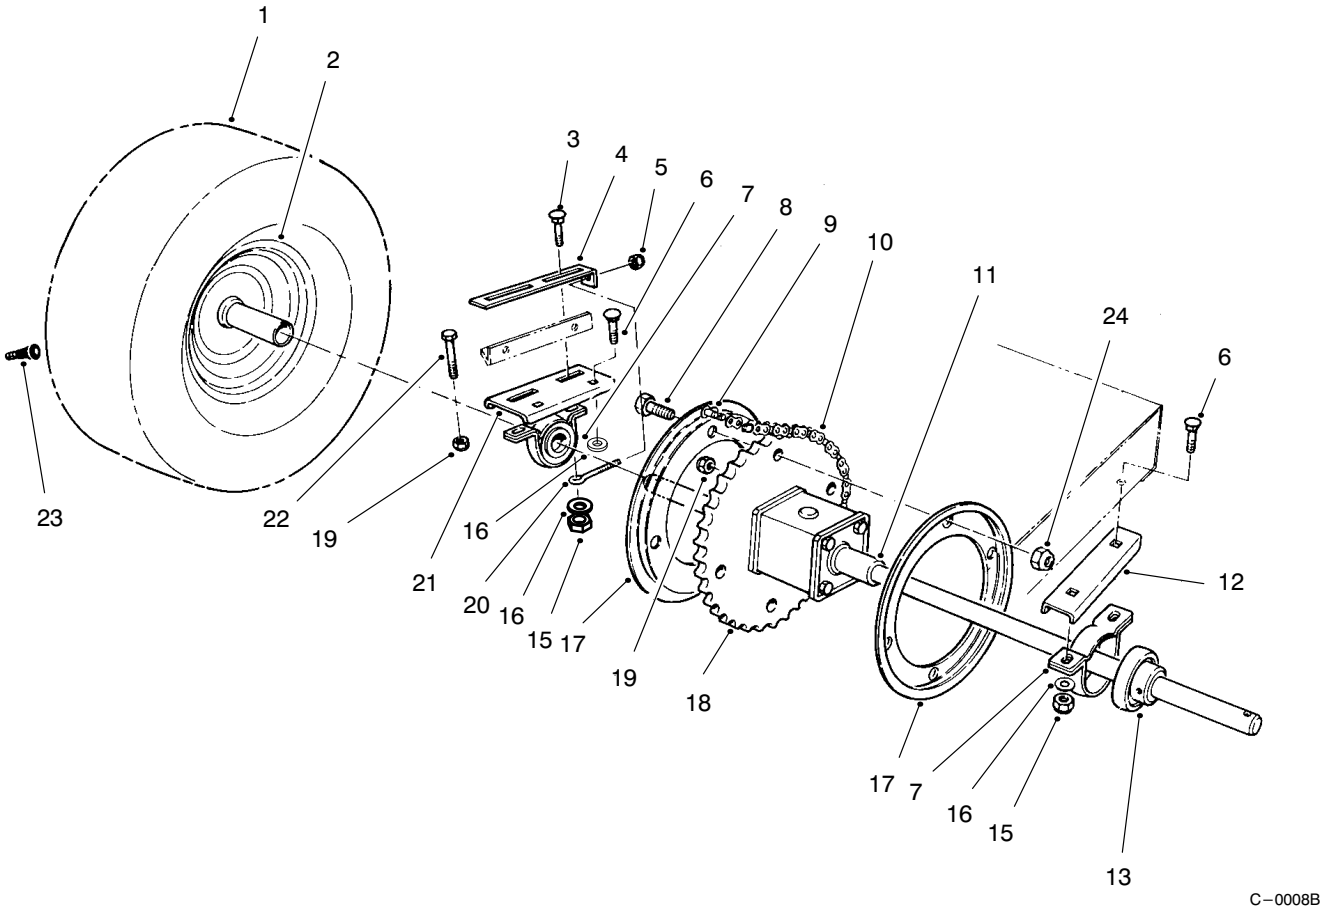


C−0008B

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	99−2992	Tire	2
2	44−9760	Rim	2
3	3231−4	Bolt − Carriage	2
4	61−9990	Plate − Adjusting	1
5	3296−42	Nut − Lock	1
6	3231−25	Bolt − Carriage	4
7	47−1480	Mount − Bearing	2
8	321−4	Screw − Cap Hex. Hd.	4
9	2710−11	Link − Connecting	1
10	67−0910	Chain (Incl. Ref. #9)	1
11	56−9960	Differential	1
12	66−6630−01	Support L.H.	1

Ref. No.	Part No.	Description	No. Used
13	47−1490	Bearing (Incl. Ref. #14)	2
15	3296−39	Nut − Lock	6
16	3256−24	Washer − Flat	6
17	76−1580−03	Guide − Chain	2
18	76−4010	Sprocket	1
19	3296−29	Nut − Lock	6
20	61−9980	Screw − Adjusting	1
21	66−6620−03	Support R.H.	1
22	46−2511	Bolt − Axle	2
23	232−27	Valve Stem w/Cap	2
24	3296−8	Nut − Lock	4
*	232−38	Tube − Inner	2

*Not Illustrated

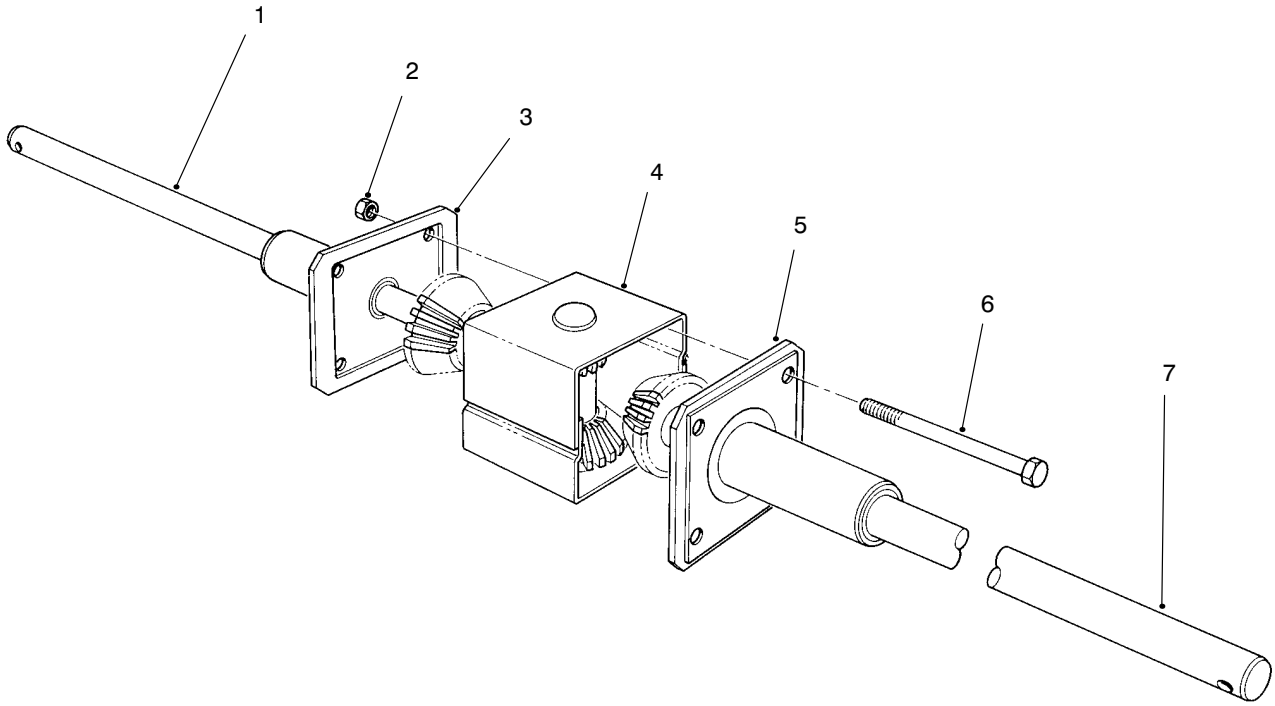


C−0010

DIFFERENTIAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	55−7762	Axle − R.H.	1
2	32152−1	Nut − Lock	4
3	55−7770	Cap − End, R.H.	1
4	55−7780	Case − Gear, Transfer	1

Ref. No.	Part No.	Description	No. Used
5	55−7771	Cap − End, L.H.	1
6	322−22	Screw − Cap Hex. Hd.	4
7	55−7763	Axle − L.H.	1
*	56−9960	Differential − Complete	

*Not Illustrated

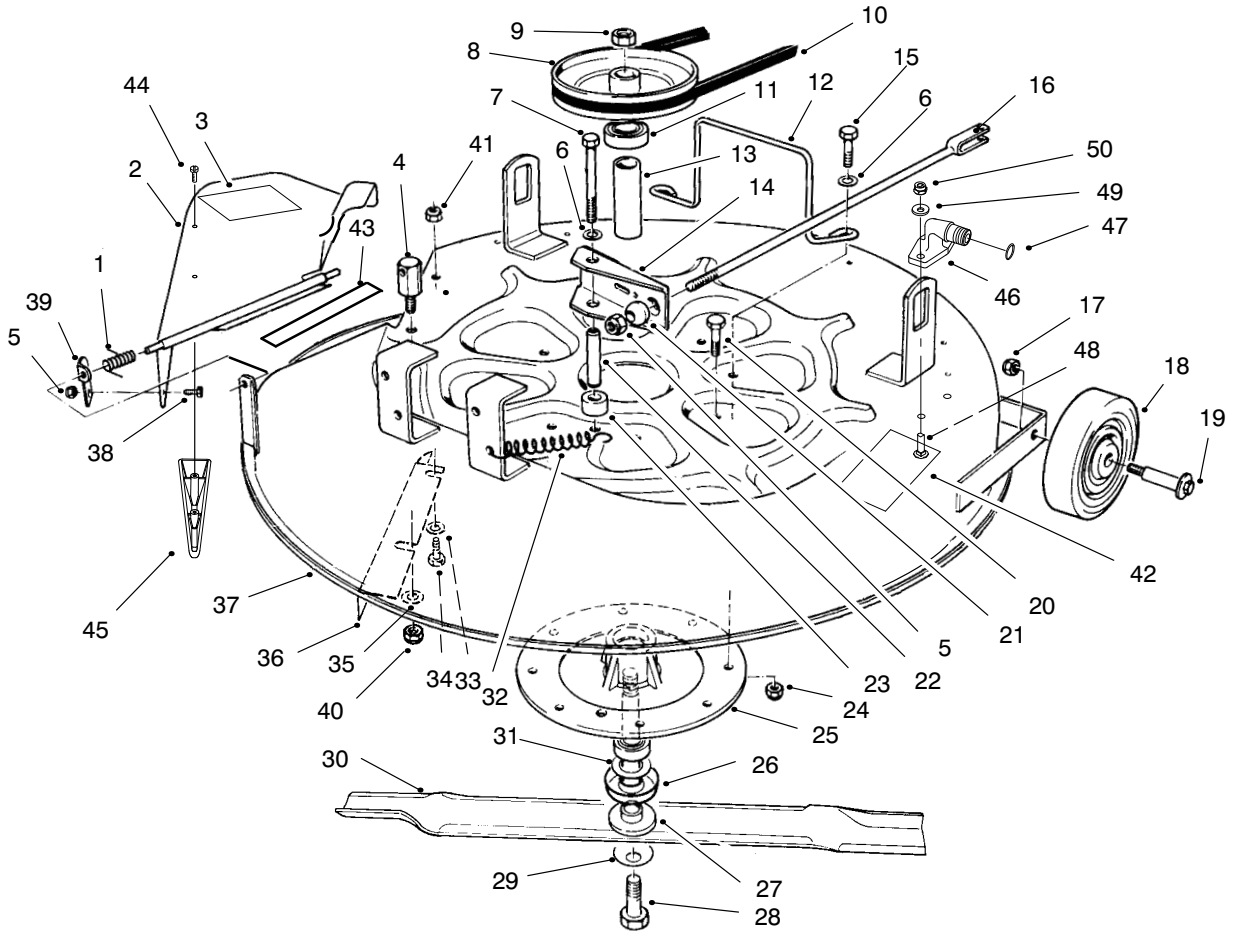


C−0001B

CUTTING UNIT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28−8010	Spring	1
2	93−9492	Deflector (Incl. Ref. #3)	1
3	93−7010	Decal − Danger	1
4	67−0140	Post − Pivot	1
5	3296−8	Nut − Lock	2
6	3256−23	Washer − Lock	3
7	322−19	Screw − Cap Hex. Hd.	1
8	80−4420	Pulley − Deck	1
9	3219−6	Nut − Hex.	1
10	98−0710	V−Belt	1
11	38−7820	Bearing − Ball	2
12	80−4520	Guide − Belt	1
13	62−3660	Spacer − Bearing	1
14	67−1370	Assy. − Brake, Deck	1
15	322−6	Screw − Cap Hex. Hd.	2
16	67−0570	Rod W.A. − Brake, Deck	1
17	3296−39	Nut − Lock	2
18	61−9760	Wheel − Deck	2
19	56−6590	Bolt − Wheel	2
20	322−3	Screw − Cap Hex. Hd.	6
21	67−0710	Ball − Swivel	1
22	67−0730	Post − Mount, Brake	1
23	76−3810	Spacer − Brake, Deck	1
24	3296−29	Nut − Lock	9
25	67−0970	Hub − Spindle	1

Ref. No.	Part No.	Description	No. Used
26	80−4360	Shield − Bearing	1
27	80−4340	Shaft − Spindle	1
28	26−0671	Bolt − Blade	1
29	3290−465	Washer − Belleville	1
30	67−0200	Blade	1
31	80−4380	Spacer − Spindle	1
32	67−1440	Spring − Brake	1
33	3256−22	Washer − Flat	1
34	3234−21	Screw − Cap Hex. Hd.	1
35	3256−24	Washer − Flat	1
36	67−0130−01	Baffle	1
37	95−7485	Deck (Incl. Ref. #42 & 43)	1
38	321−5	Screw − Cap Hex. Hd.	9
39	67−1600−01	Bracket − Deflector	1
40	3296−59	Nut − Lock	1
41	3296−42	Nut − Lock	1
42	93−7010	Decal − Danger	1
43	93−7009	Decal − Warning	1
44	32144−111	Screw − Phillips Pan Hd.	4
45	93−7696	Kicker − CE	2
46	95−2747	Fitting − Washout	1
47	46−6290	O−Ring	1
48	3229−1	Screw − Hex Hd. Cap	2
49	3256−1	Washer	2
50	3296−16	Nut − Hex	2

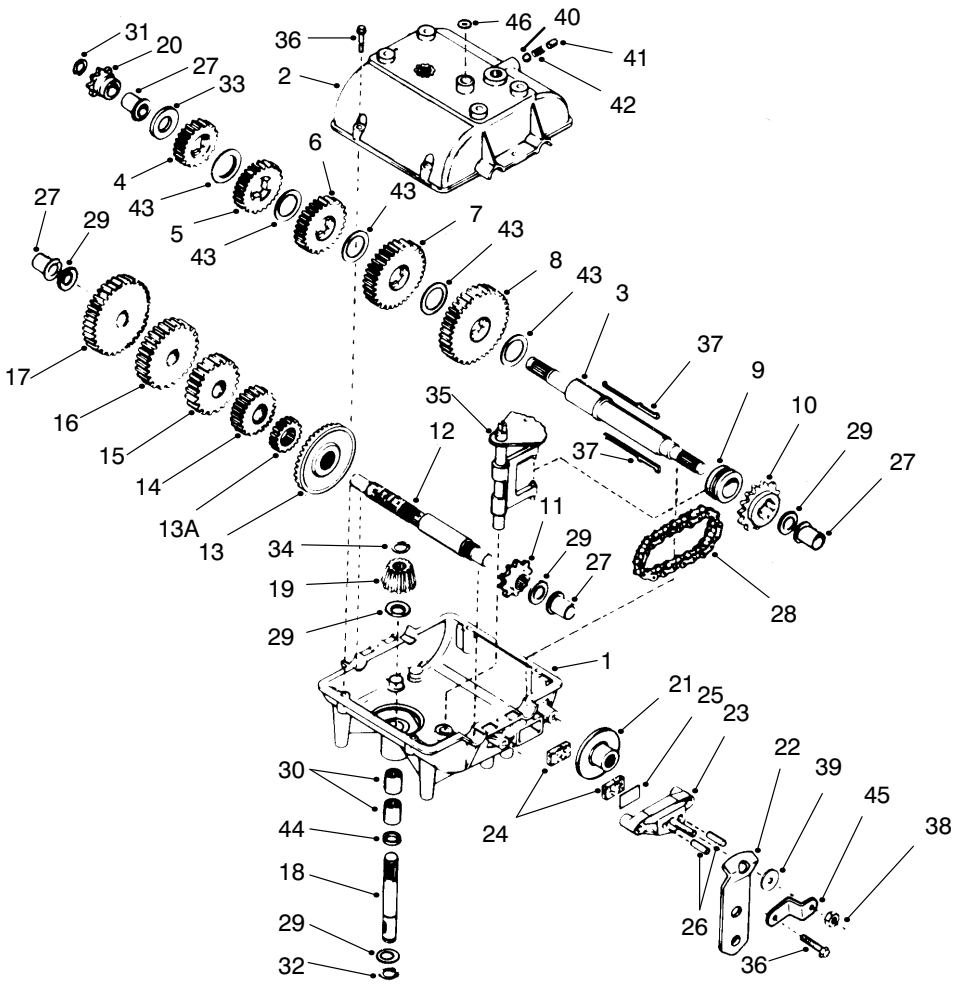


C–0441A

TRANSMISSION PEERLESS MODEL 700–025

Ref. No.	Part No.	Description	No. Used
1	770061	Case – Transmission	1
2	772083	Cover – Transmission	1
3	776217	Shaft – Output	1
4	778121A	Gear – Spur (20 Teeth)	1
5	778122A	Gear – Spur (22 Teeth)	1
6	778123A	Gear – Spur (25 Teeth)	1
7	778124A	Gear – Spur (30 Teeth)	1
8	778125	Gear – Spur (35 Teeth)	1
9	784266	Collar – Shift	1
10	786083	Sprocket (18 Teeth)	1
11	786082	Sprocket (9 Teeth)	1
12	776134	Shaft – Counter	1
13	788137A	Gear – Bevel (42 Teeth)	1
13A	778136	Gear – Spur (15 Teeth)	1
14	778126A	Gear – Spur (20 Teeth)	1
15	778127A	Gear – Spur (25 Teeth)	1
16	778128A	Gear – Spur (28 Teeth)	1
17	778129A	Gear – Spur (30 Teeth)	1
18	776135	Shaft – Input	1
19	778113A	Bevel – Pinion, Input	1
20	786047	Sprocket (8 Teeth)	1
21	790003	Disk – Brake	1
22	790008A	Lever – Brake	1
23	790025	Holder – Pad, Brake	1

Ref. No.	Part No.	Description	No. Used
24	790006	Pad – Brake	2
25	790007	Plate – Pad, Brake	1
26	786026	Pin – Dowel	2
27	780105A	Bushing – Flange	4
28	786081	Chain – Roller (No. 41 Chain, 24 Links)	1
29	780072	Washer – Thrust	5
30	780086	Bearing – Needle	2
31	792072	Ring – Retaining	1
32	792035	Ring – Retaining	1
33	780109	Washer	1
34	788040	Ring – Retaining	1
35	784267	Assy. Rod & Fork – Shift	1
36	792073	Screw – Thread Forming	8
37	792089A	Key	2
38	792075	Nut – Lock	1
39	792076	Washer	1
40	792077	Ball – Steel	1
41	792078	Screw – Set	1
42	792079	Spring	1
43	780108	Washer – Thrust	5
44	792001	O–Ring	1
45	786086	Bracket – Lever, Brake	1
46	788069	Seal – Square Cut	1

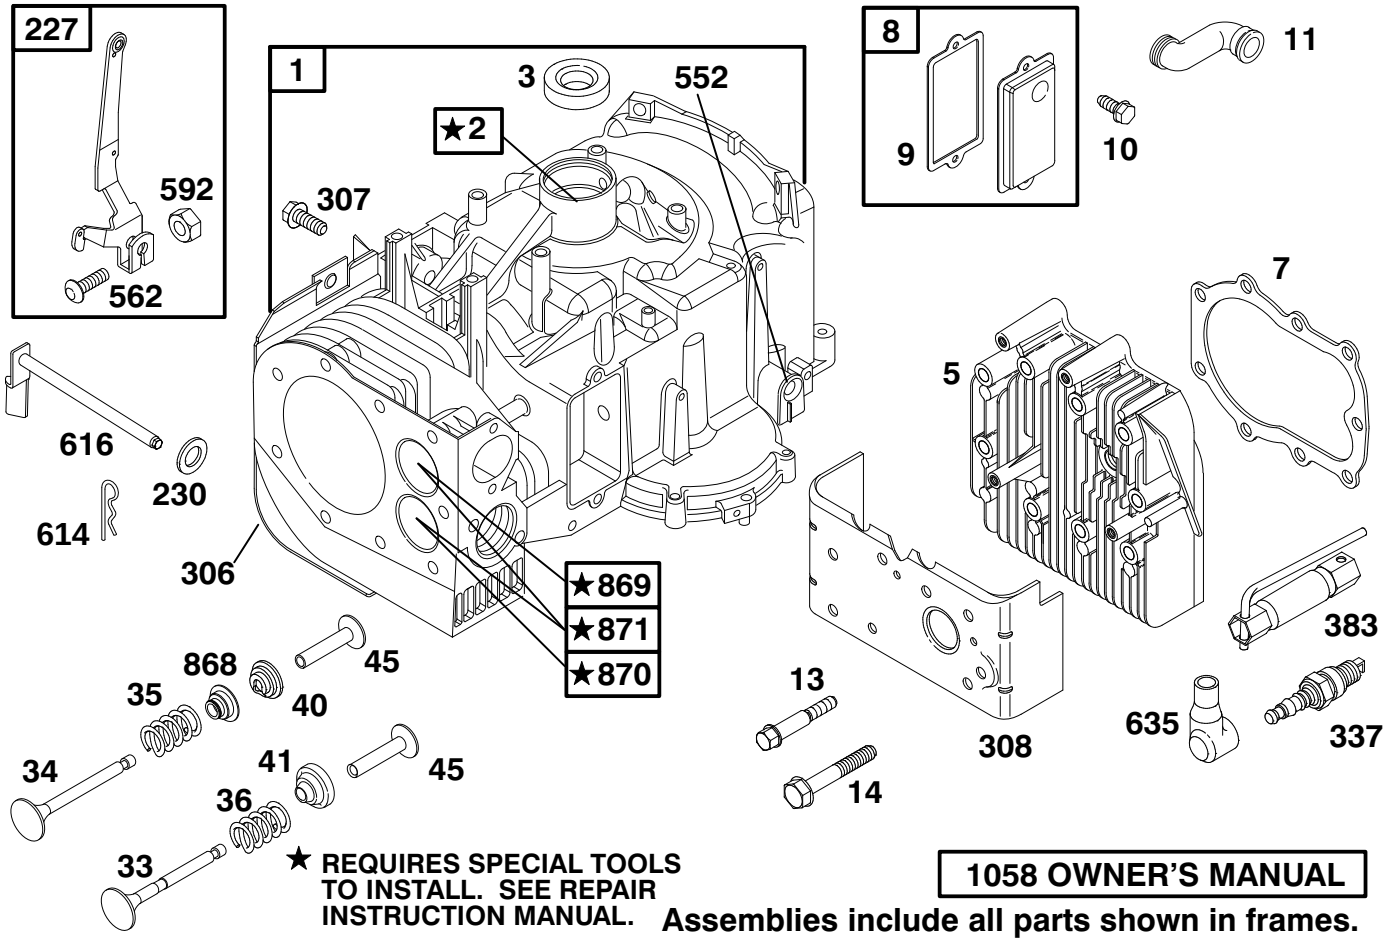

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.

1058 OWNER'S MANUAL


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 195707–0421–E1

Ref. No.	Part No.	Description	No. Used
1	495623	Cylinder Assembly	1
2	495657	Bushing	1
★3	391086	Seal–Oil	1
5	214015	Head–Cylinder	1
†★7	272163	Gasket–Cylinder Head	1
8	495735	Breather Assy.	1
†★9	27803	Gasket–Breather	1
10	94621	Screw–Breather Mtg.	1
11	280005	Grommet	1
13	94565	Screw–Cylinder Head	1
14	94622	Screw–Cylinder Head	1
33	390420	Valve–Exhaust	1
34	261055	Valve–Intake	1
35	65906	Spring–Valve (Intake)	1
36	691597	Spring–Valve (Exhaust)	1
40	221596	Retainer–Valve	1
41	691939	Retainer–Valve	1
45	260933	Tappet–Valve	1
227	493935	Lever Assy.–Governor	1

Ref. No.	Part No.	Description	No. Used
230	94927	Washer	1
306	496797	Shield–Cylinder	1
307	94930	Screw–Hex. Hd.	1
308	224896	Cover–Cylinder Head	1
337	802592	Plug–Spark	1
383	89838	Wrench–Spark Plug	1
552	491986	Bushing–Gov. Crank	1
562	94907	Bolt–Carriage	1
592	231978	Nut–Hex.	1
614	93306	Pin–Cotter	1
616	495157	Crank–Governor	1
635	66538	Elbow–Spark Plug	1
868	497656	Seal–Valve	1
869	211661	Seat–Int. Valve	1
870	211661	Seat–Ex. Valve	1
871	261961	Guide–Exhaust Valve	1
	231218	Guide–Intake Valve	1
1058	273681	Owner's Manual	1

★ Included in Gasket Set–Part No. 299577.
● Included in Carburetor Kit–Part No. 497535.
◆ Included in Carburetor Gasket Set–Part No. 494385.
† Included in Valve Overhaul Gasket Set–Part No. 498536.

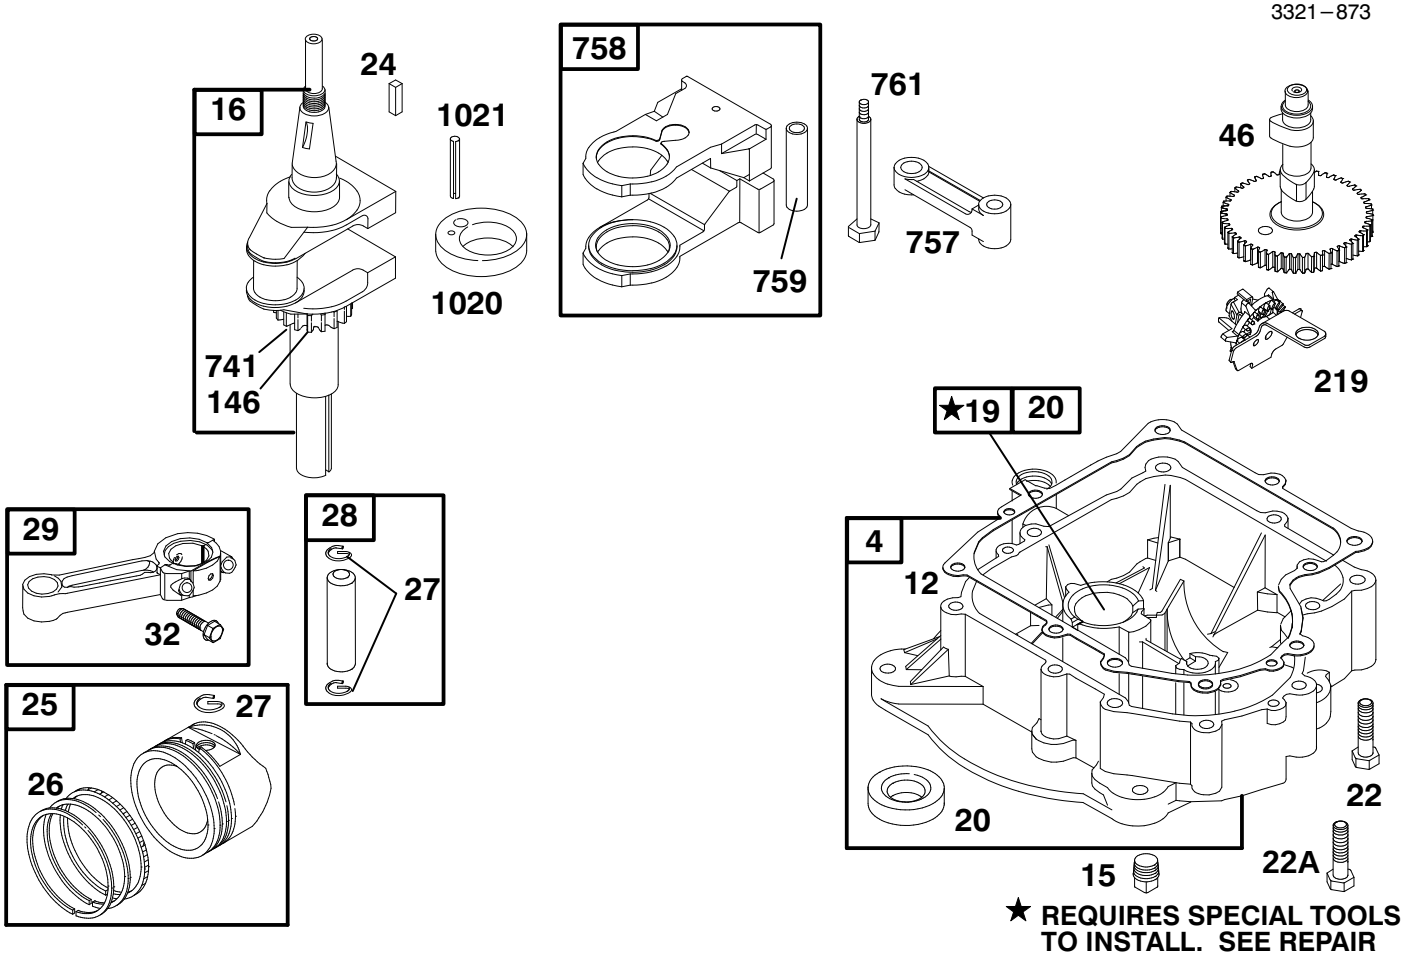

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 195707–0421–E1

Ref. No.	Part No.	Description	No. Used
4	392548	Sump–Engine	1
★12	271701	Gasket–Crankcase (.015” Thick, Std.)	1
★	27876	Gasket–Crankcase (.005” Thick)	1
★	27877	Gasket–Crankcase (.009” Thick)	1
15	94239	Plug–Oil Drain	1
16	495629	Crankshaft	1
19	295963	Bushing	1
★20	391086	Seal–Oil	1
22	93585	Screw–Hex.	1
22A	94690	Screw–Hex. (Used in Pos. #1)	1
24	222698	Key–Flywheel	1
25	499907	Piston Assy. (Std.)	1
	499908	Piston Assy. (.010” O.S.)	1
	499909	Piston Assy. (.020” O.S.)	1
	499910	Piston Assy. (.030” O.S.)	1

Ref. No.	Part No.	Description	No. Used
26	499421	Ring Set (Std.)	1
	299743	Ring Set (Std. Chrome)	1
	391670	Ring Set (.010” O.S.)	1
	391671	Ring Set (.020” O.S.)	1
	391672	Ring Set (.030” O.S.)	1
27	690975	Lock–Piston Pin	1
28	499911	Pin–Piston (Std.)	1
	499920	Pin–Piston (.005” O.S.)	1
29	390402	Rod–Connecting	1
	390773	Rod–Connecting (.020” U.S.)	1
32	94670	Screw–Conn. Rod	1
46	214786	Gear–Cam	1
146	94388	Key–Timing	1
219	491397	Gear–Governor	1
741	263025	Gear–Timing	1
757	213998	Link–Counterweight	1
758	390172	Counterweight	1
759	230787	Pin–Counterweight	1
761	94592	Screw–Shoulder	1
1020	261190	Eccentric	1
1021	94853	Pin–Groove	1

★ Included in Gasket Set–Part No. 299577.
● Included in Carburetor Kit–Part No. 497535.
◆ Included in Carburetor Gasket Set–Part No. 494385.
† Included in Valve Overhaul Gasket Set–Part No. 498536.

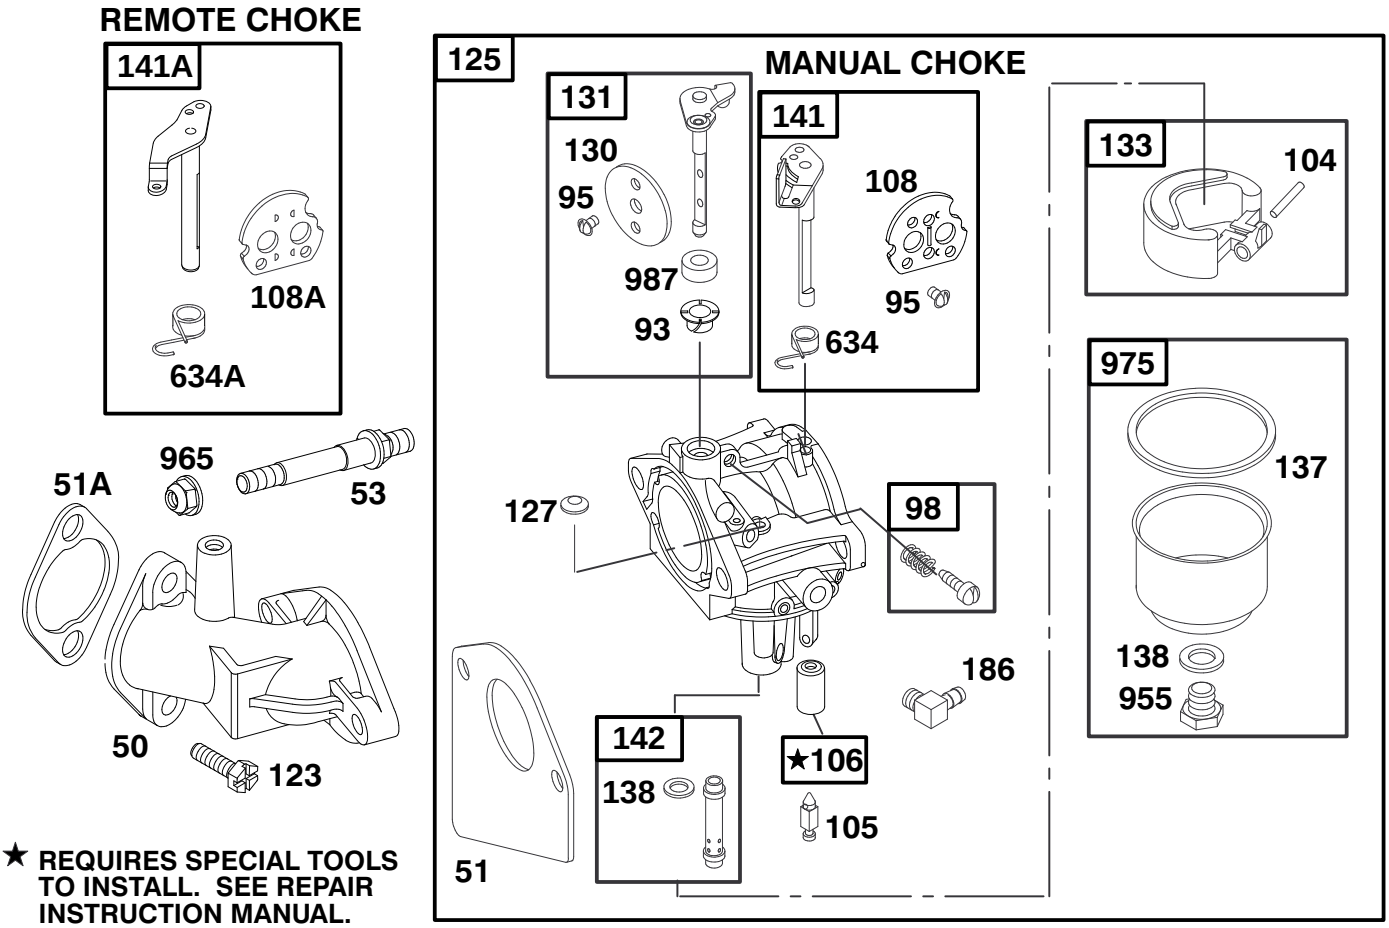

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 195707–0421–E1

Ref. No.	Part No.	Description	No. Used
50	213819	Manifold–Intake	1
◆●51	272465	Gasket–Carb. Elbow	1
★†51A	272554	Gasket–Carb. Mtg.	1
53	94637	Stud–Carb. Mtg.	1
93	281346	Bushing–Throttle Shaft	1
●95	94098	Screw–Slotted	1
98	495800	Screw–Idle Speed	1
●104	231789	Pin–Float Hinge	1
●105	231855	Valve–Needle	1
●106	231854	Seat–Inlet	1
108	224558	Valve–Manual Choke	1
108A	224540	Valve–Remote Choke	1
123	94913	Screw–TorxRHex.	1
125	692684	Carburetor	1
●127		Plug–Welch **Note:** Sold in Kit Only.	1
130	224668	Valve–Throttle	1

Ref. No.	Part No.	Description	No. Used
131	494885	Shaft–Throttle	1
133	494381	Float–Carburetor	1
◆●137	281165	Gasket–Float Bowl	1
◆●138	281164	Washer	1
141	495097	Shaft–Manual Choke	1
141A	495931	Shaft–Remote Choke	1
142	692687	Nozzle–Carburetor (Standard) Nozzle–Carburetor (High Altitude)	1
186	493496	Connector–Hose	1
●634	494453	Seal–Choke Shaft	1
●634A	494455	Seal–Choke Shaft	1
955	94642	Plug	1
965	94010	Nut–Hex.	1
975	495933	Bowl–Float	1
◆987	281166	Seal–Throttle Shaft	1

★ Included in Gasket Set–Part No. 299577.
● Included in Carburetor Kit–Part No. 497535.
◆ Included in Carburetor Gasket Set–Part No. 494385.
† Included in Valve Overhaul Gasket Set–Part No. 498536.

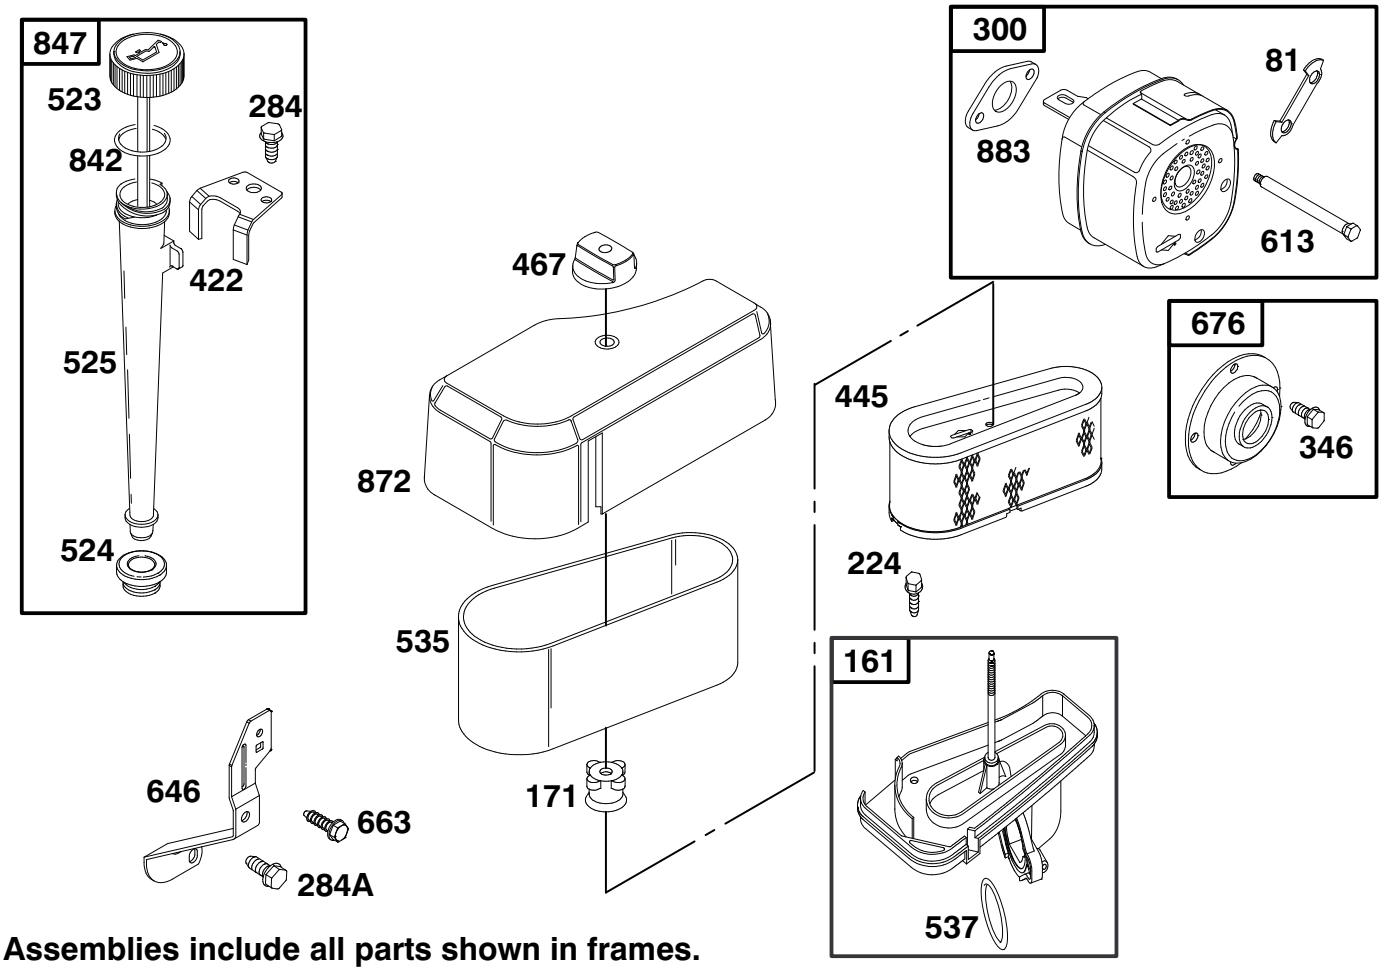


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 195707–0421–E1

Ref. No.	Part No.	Description	No. Used
81	222263	Lock – Screw	1
161	494827	Base – Air Cleaner	1
171	281051	Nut	1
224	94730	Screw–Hex.	1
284	94874	Screw–Hex.	1
284A	94704	Screw–Hex.	1
300	692304	Muffler – Exhaust	1
346	94896	Screw – Hex.	1
422	224872	Bracket–Oil Fill	1
445	493910	Filter – Air	1
467	493903	Knob	1
523	495228	Dipstick	1

Ref. No.	Part No.	Description	No. Used
★524	81370	Grommet	1
525	280133	Tube–Oil Fill	1
535	272477	Filter – Air	1
★537	281106	Gasket – Air Cleaner	1
613	94042	Screw – Shoulder	1
646	224614	Brace	1
663	94929	Screw – Hex.	1
676	395700	Deflector – Exhaust	1
★842	270920	Seal–O-Ring	1
847	392066	Dipstick/Tube Assembly	1
872	281105	Cover – Air Cleaner	1
†★883	272309	Gasket – Exhaust	1

★ Included in Gasket Set–Part No. 299577.
● Included in Carburetor Kit–Part No. 497535.
◆ Included in Carburetor Gasket Set–Part No. 494385.
† Included in Valve Overhaul Gasket Set–Part No. 498536.

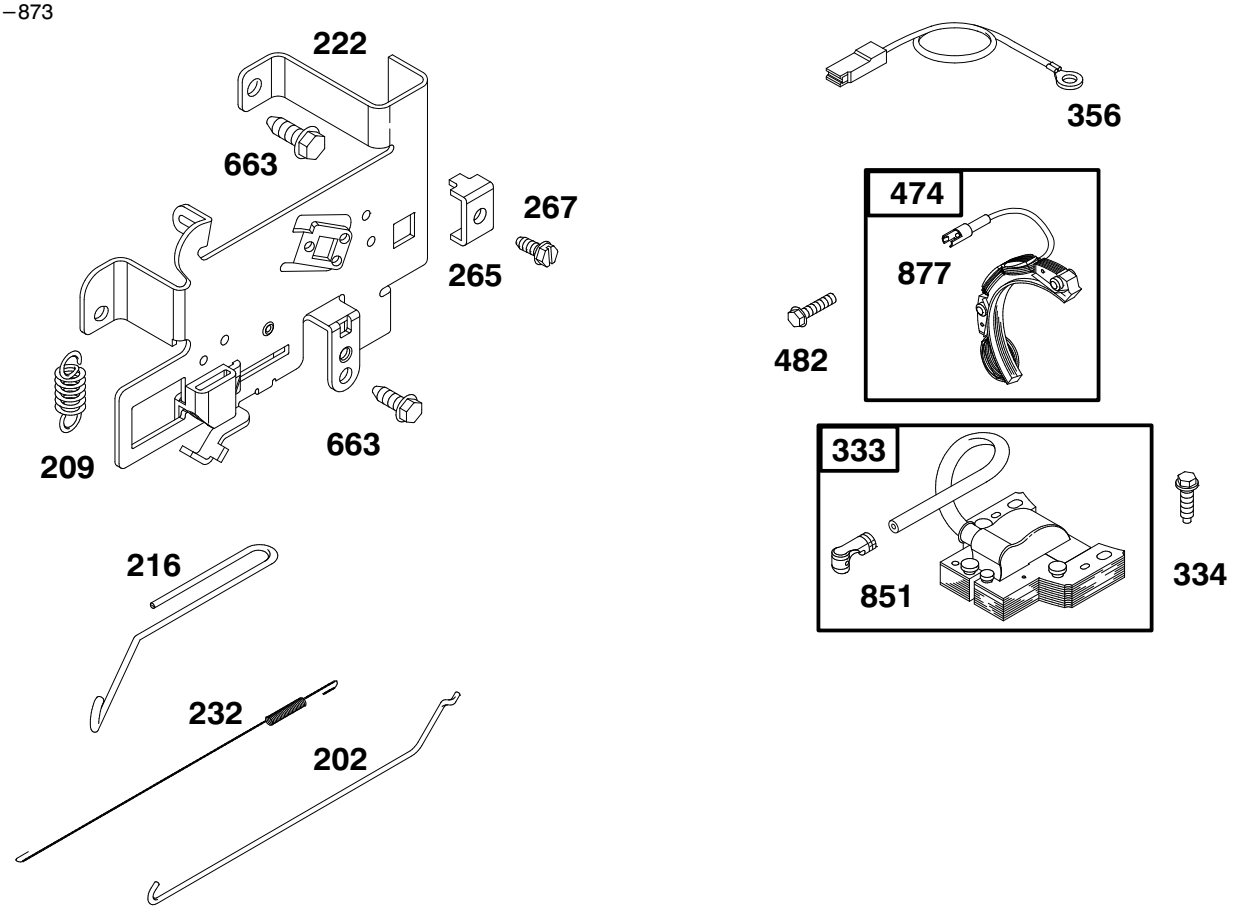


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 195707–0421–E1

Ref. No.	Part No.	Description	No. Used
202	262769	Link–Mechanical Governor	1
209	260871	Spring–Governor	1
216	262768	Link–Choke	1
222	495611	Bracket–Control	1
232	262787	Spring–Link	1
265	221535	Clamp–Casing	1
267	94906	Screw–Hex.	1

Ref. No.	Part No.	Description	No. Used
333	398811	Armature–Magneto	1
334	94731	Screw–Hex.	1
356	494328	Wire–Stop	1
474	391529	Alternator	1
482	93621	Screw–Hex.	1
663	94929	Screw–Hex.	1
851	493880	Terminal–Cable	1
877	393814	Wire–Alternator	1

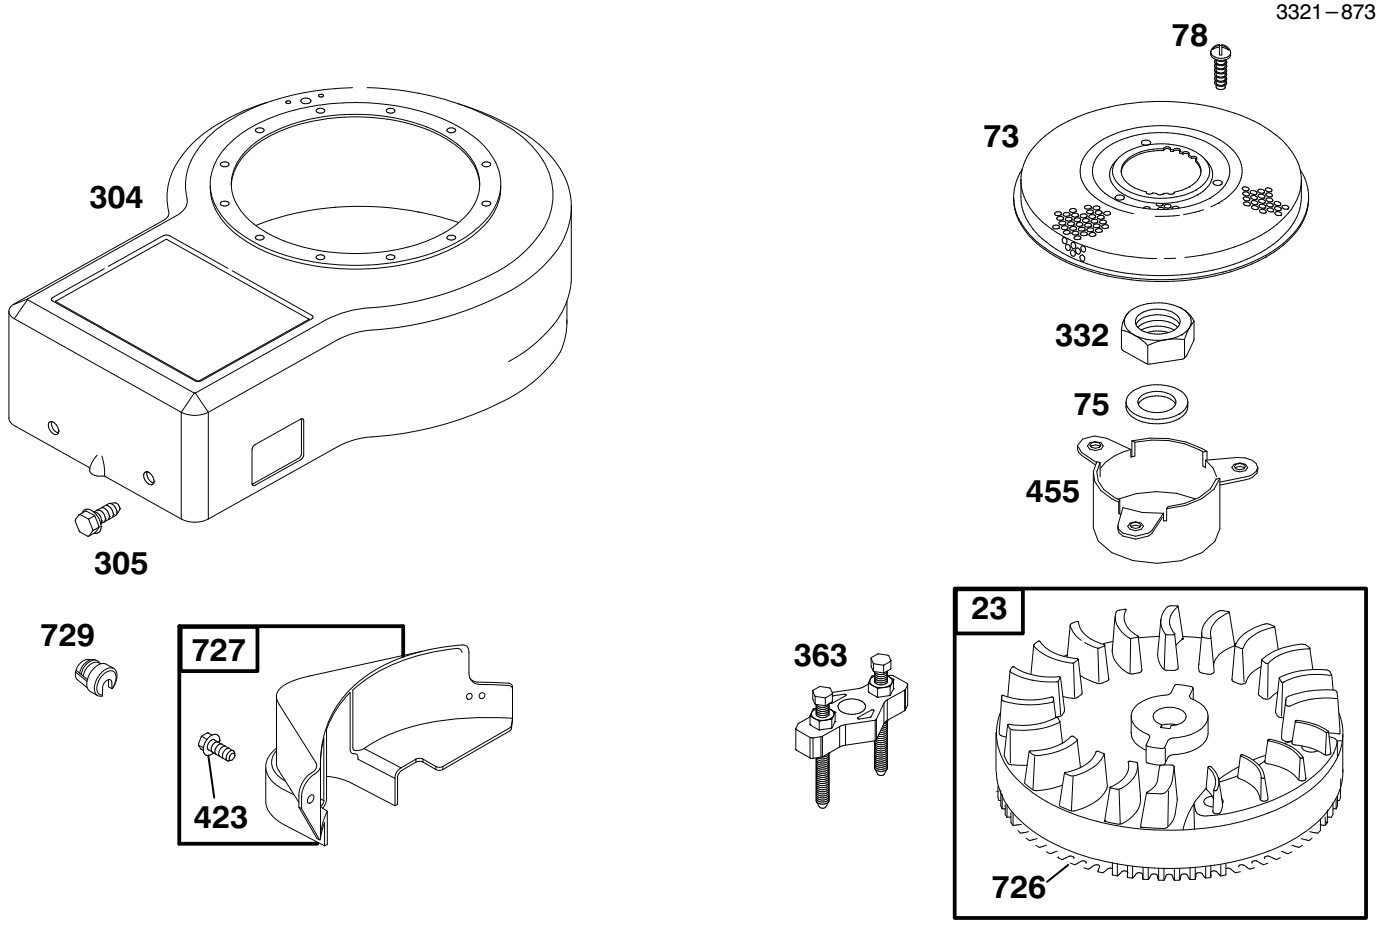


Assemblies include all parts shown in frames.

1036 LABEL KIT – EMISSIONS

ENGINE BRIGGS & STRATTON MODEL 195707–0421–E1

Ref. No.	Part No.	Description	No. Used
23	391983	Flywheel	1
73	224517	Screen – Rotating	1
75	225136	Washer–Flywheel	1
78	94626	Screw – Hex.	1
304	494084	Housing – Blower	1
305	94786	Screw – Hex.	1
332	94877	Nut – Flywheel	1

Ref. No.	Part No.	Description	No. Used
363	19165	Flywheel Puller	1
423	94625	Screw–Shoulder	1
455	222561	Cup – Flywheel	1
726	392134	Gear–Ring	1
727	395405	Guard–Starter Drive	1
729	281395	Clip–Wire	1
1036	499356	Label Kit – Emissions	1

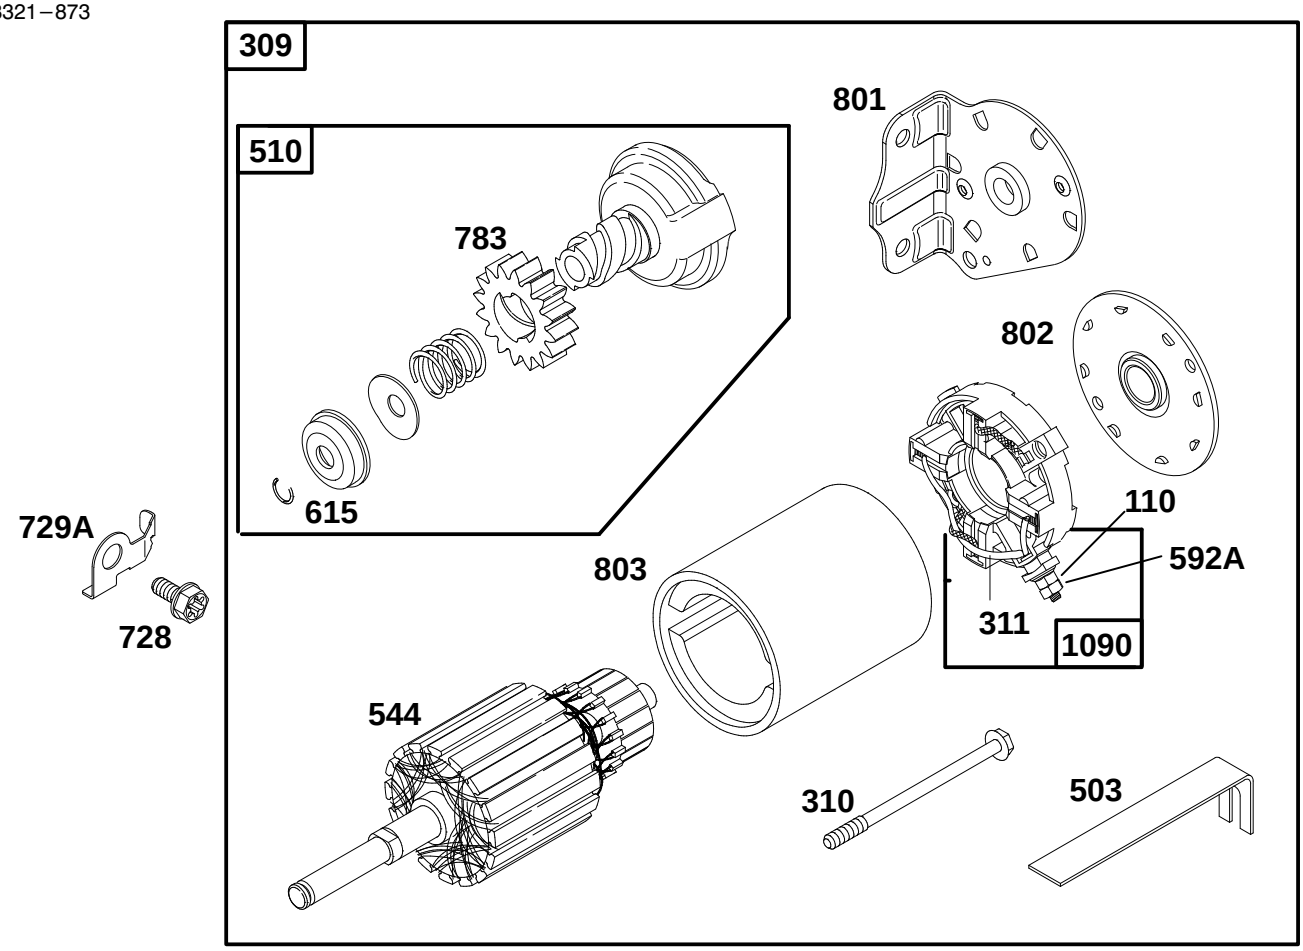



Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 195707–0421–E1


Ref. No.	Part No.	Description	No. Used
110	225137	Washer–Flat	1
309	497595	Motor–Starter	1
310	94003	Screw–Hex.	1
311	497608	Brush Set	1
592A	92278	Nut–Hex.	1
503	806006	Strap–Starter	1
510	497606	Drive–Starter	1
544	497603	Armature–Starter	1

Ref. No.	Part No.	Description	No. Used
615	263080	Retainer	1
728	94951	Screw–Torx®Hex.	1
729A	225170	Clip–Wire	1
783	280104	Gear–Starter	1
801	394856	Cap–Drive	1
802	497607	Cap–End	1
803	497604	Housing–Starter	1
1090	497605	Retainer–Brush	1

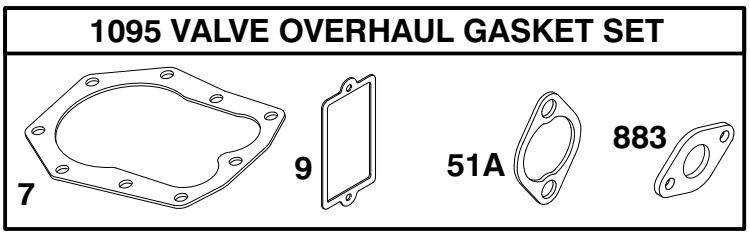

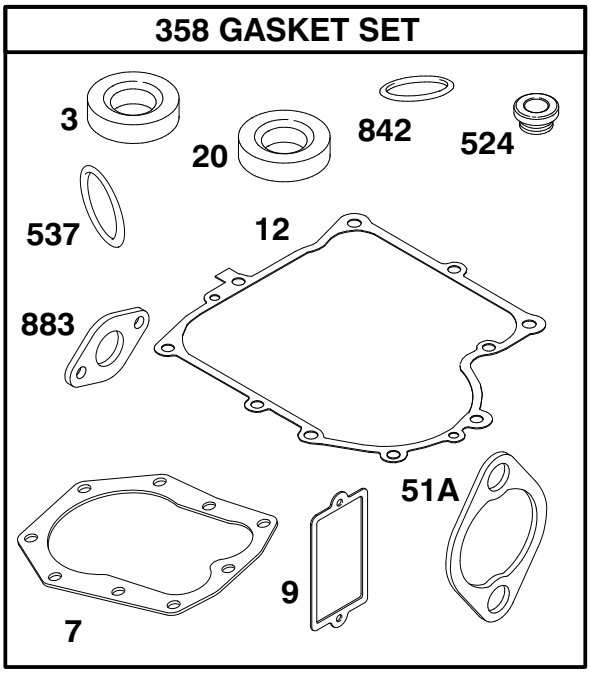

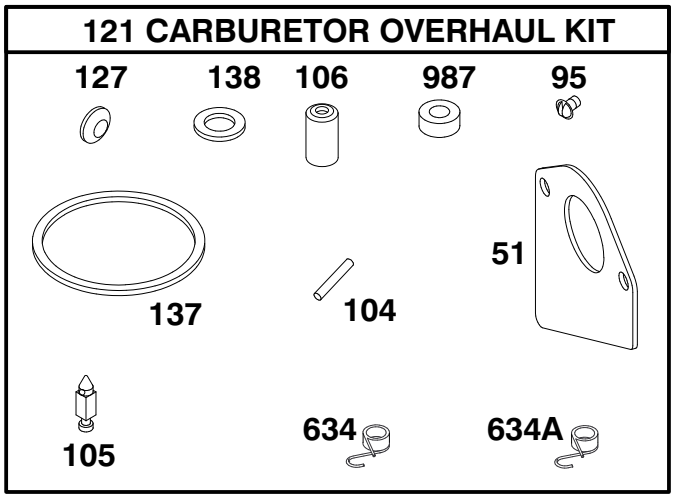

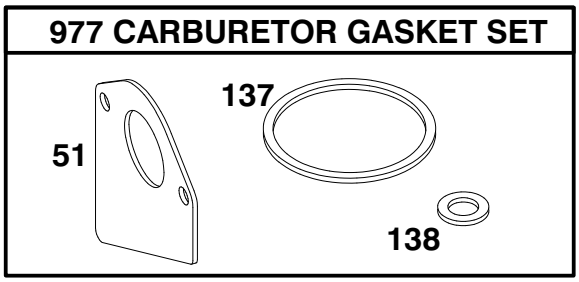

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 195707–0421–E1

Ref. No.	Part No.	Description	No. Used
★3	391086	Seal–Oil	1
†★7	272163	Gasket–Cylinder Head	1
†★9	27803	Gasket–Breather	1
★12	271701	Gasket–Crankcase (.015" Thick, Std.)	1
★	27876	Gasket–Crankcase (.005" Thick)	1
★	27877	Gasket–Crankcase (.009" Thick)	1
★20	391086	Seal–Oil	1
◆●51	272465	Gasket–Carburetor Elbow	1
★†51A	272554	Gasket–Carb. Mtg.	1
●95	94098	Screw–Slotted	1
●104	231789	Pin–Float Hinge	1
●105	231855	Valve–Needle	1
●106	231854	Seat–Inlet	1

Ref. No.	Part No.	Description	No. Used
121	497535	Carburetor Kit	1
●127		Plug–Welch **Note:** Sold in Kit Only.	1
◆●137	281165	Gasket–Float Bowl	1
◆●138	281164	Washer	1
358	299577	Gasket Set	1
★524	281370	Grommet	1
★537	281106	Gasket–Air Cleaner	1
●634	494453	Seal–Choke Shaft	1
●634A	494455	Seal–Choke Shaft	1
★842	270920	Seal–O-Ring	1
†★883	272309	Gasket–Exhaust	1
977	494385	Gasket Set–Carburetor	1
◆987	281166	Seal–Throttle Shaft	1
1095	498536	Gasket Set–Valve Overhaul	1

★ Included in Gasket Set–Part No. 299577.
● Included in Carburetor Kit–Part No. 497535.
◆ Included in Carburetor Gasket Set–Part No. 494385.
† Included in Valve Overhaul Gasket Set–Part No. 498536.

Maintenance Record

Date								

Maintenance Record

Date								

Maintenance Record

Date								