Form No. 3423-910 Rev A

TORO®

Count on it.

Parts Catalog

Pro Force® Debris Blower

Model No. 44553—Serial No. 403070001 and Up

Register at www.Toro.com.
Original Instructions (EN)

3423-910 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.


For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame Assembly 4
Axle Assembly No. 119-2966 5
Hitch Assembly No. 119-3005 6
Turbine Mounting Assembly 7
Turbine Assembly No. 125-4260 8
Nozzle Drive Assembly 9
Battery and Drive Shaft Assembly 10
Engine, Muffler and Fuel Tank Assembly 11
Fuel Tank Assembly No. 115-9048 12
Fuel Delivery Assembly 13
Electrical System Assembly 14
Tail Light Assembly 15
Attachments and Accessories 16


© 2018—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

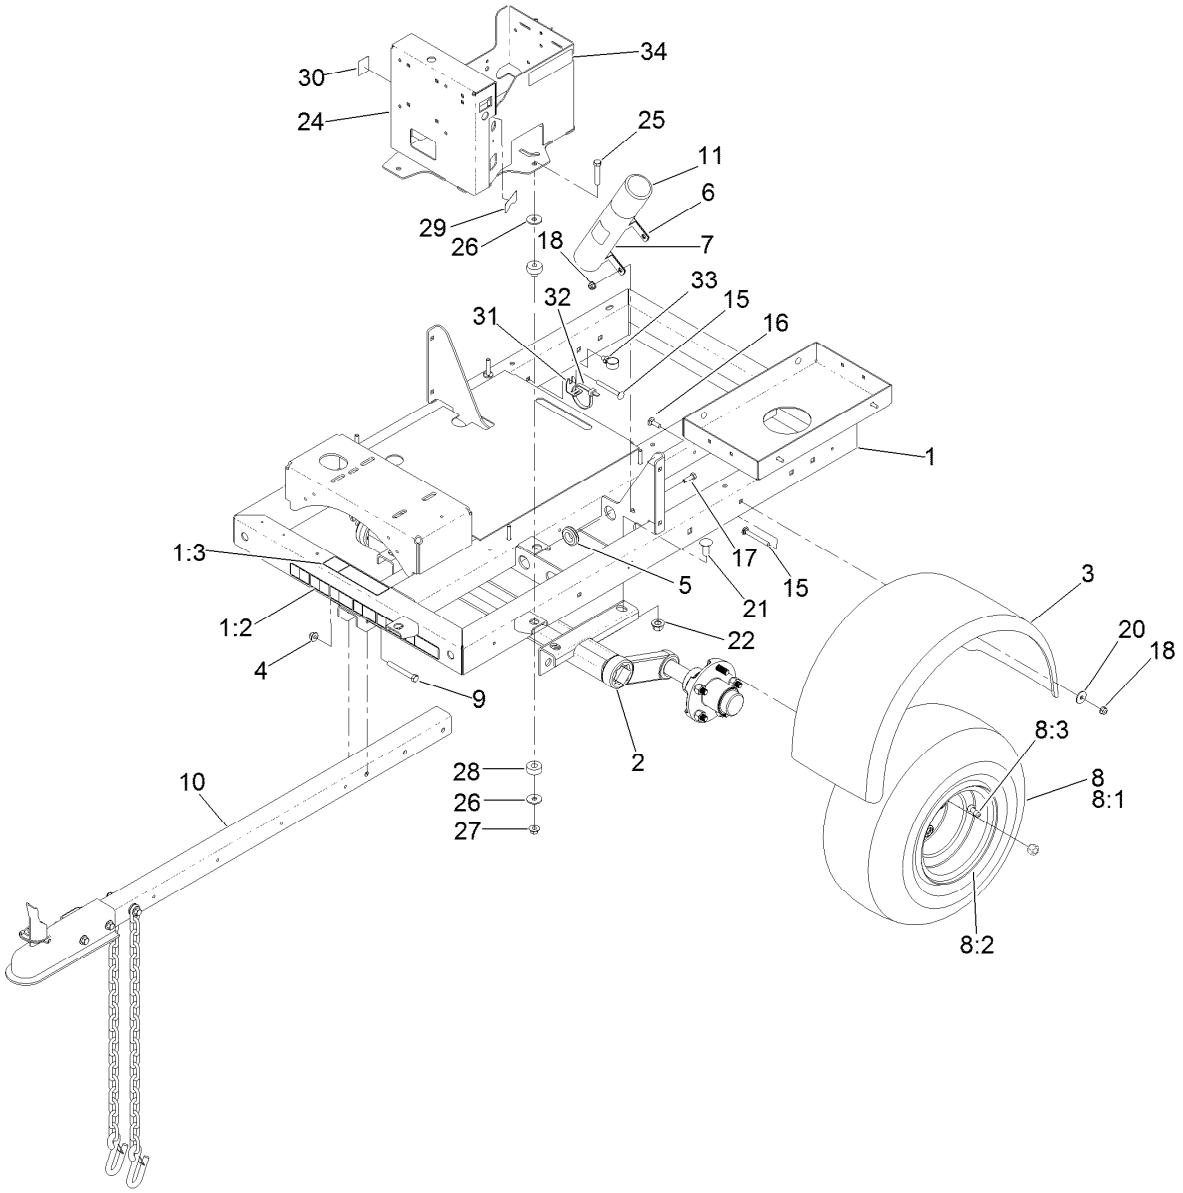

Frame Assembly


Ref.	Part Number	Qty.	Description
1	130-8510	1	Frame ASM
1:2	115-5105	1	Decal-Warning
1:3	115-5113	1	Decal-Protection, Eye And Ear
2	119-2966	1	Axle ASM
3	112-6852	2	Fender
4	104-8301	2	Nut-HF, NI
5	1-543286	2	Grommet
6	2412-133	2	Clamp-R
7	104-7050	1	Tube-Manual
8	119-3013	2	Wheel And Tire ASM
8:1	119-3009	1	Tire
8:2	119-3010	1	Rim
8:3	232-27	1	Stem-Valve
9	323-14	2	Screw-HH
10	119-3005	1	Hitch ASM
11	104-7048	1	Cap-Housing
15	3230-9	4	Screw-CARR
16	3230-2	4	Bolt-CARR
17	322-5	2	Screw-HH
18	104-8300	10	Nut-HF, NI
20	3256-82	8	Washer-Flat
21	3233-26	4	Screw-CARR, Short Neck
22	99-5107	4	Nut-Lock
24	125-6055-01	1	Tower-Control, Wa
25	323-10	3	Screw-HH
26	93-8806	6	Washer-Hardened
27	32128-19	3	Nut-HF
28	121-2870	3	Mount-2 Piece
29	119-6165	1	Decal-Ignition
30	131-6766	1	Decal-Fuses
31	131-6703	1	Bracket-Hold Down, Electrical
32	3334-945	1	Tie-Cable
33	32180-030	1	Clip-Tie
34	133-8062	1	Decal-Arrestor, Spark

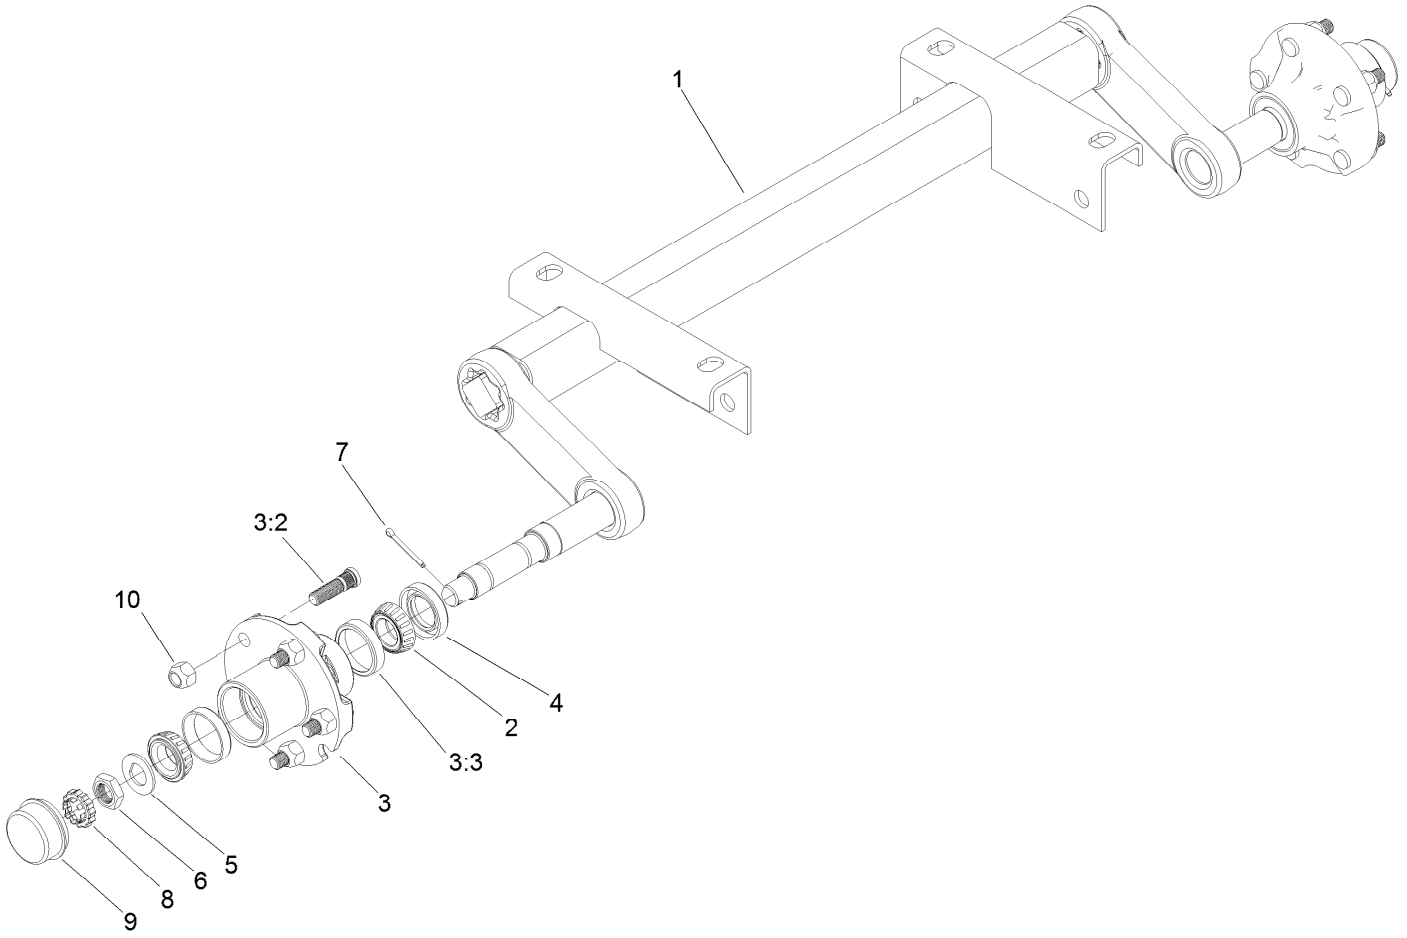

Axle Assembly No. 119-2966

Ref.	*Part Number*	*Qty.*	*Description*
1		1	Axle-Torsion ●
2	254-94	4	Bearing-Cone, Tapered
3	119-3016	1	Hub ASM
3:2	114-3918	5	Stud-Wheel
3:3	254-72	2	Bearing-Cup, Tapered
4	112-1690	2	Seal-Oil
5	117-8259	2	Washer-Spindle
6	117-8260	2	Nut
7	3272-18	2	Pin-Cotter
8	93-0307	2	Nut-Lock, Retainer
9	241-119	2	Cap-Dust
10	242-50	10	Nut-Lug


● Not serviced separately

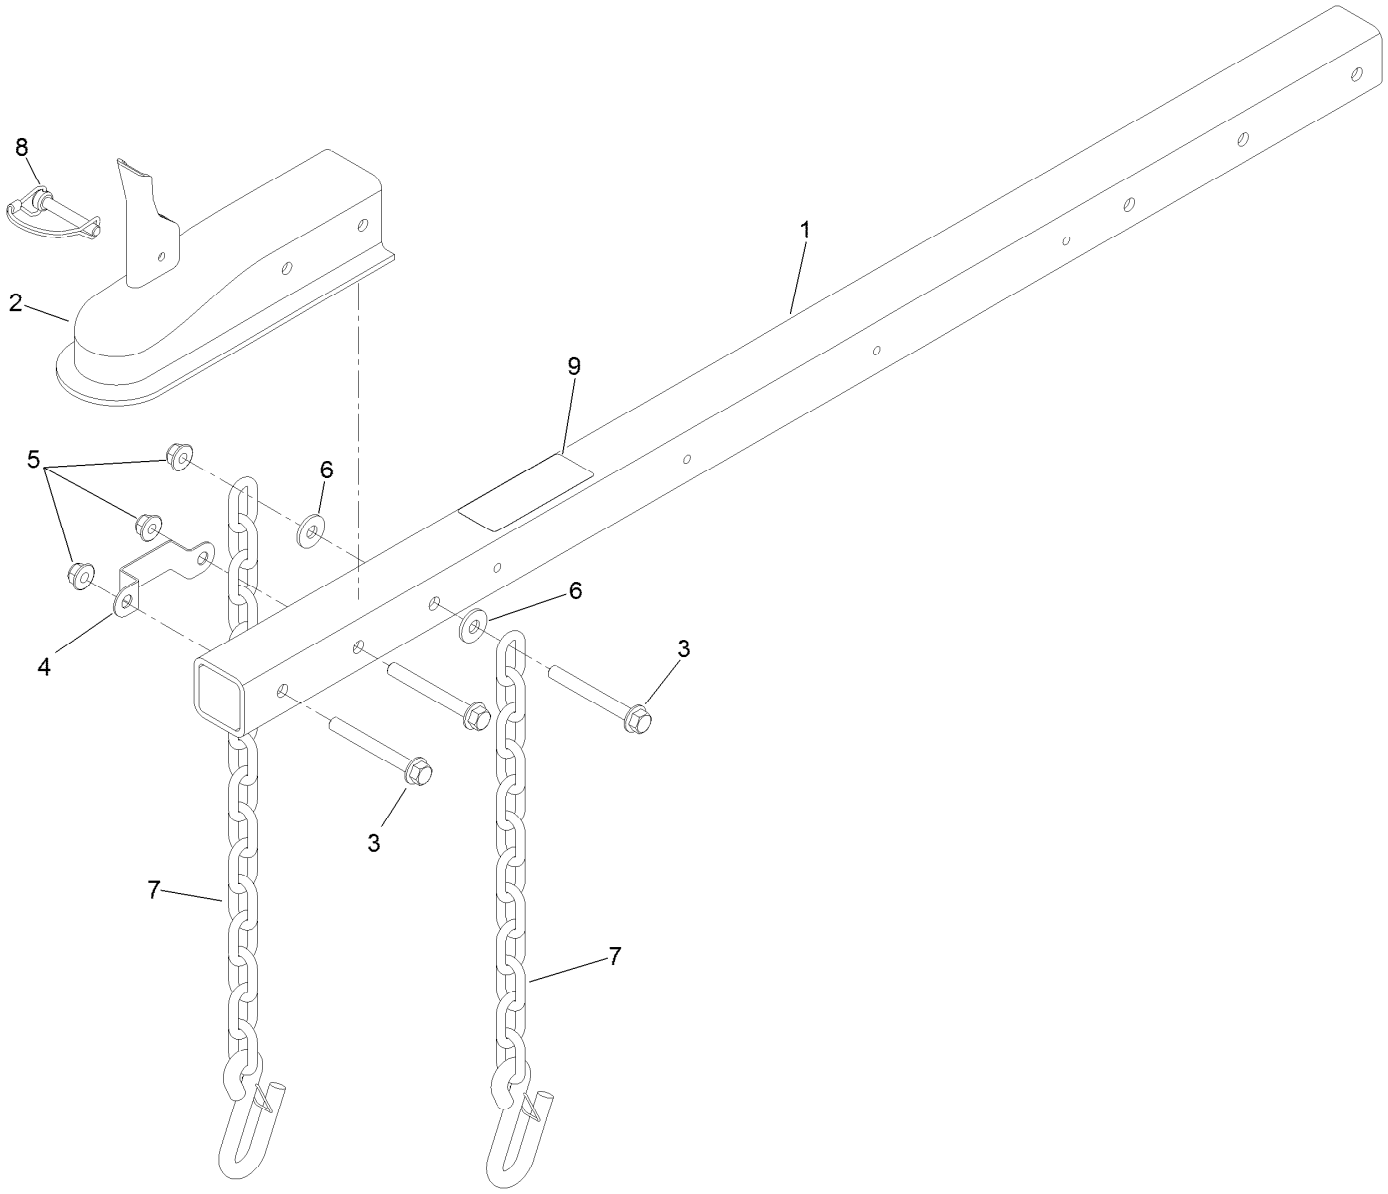

Hitch Assembly No. 119-3005


Ref.	*Part Number*	*Qty.*	*Description*
1		1	Tube-Hitch ●
2	117-8371	1	Receiver-Hitch, Ball
3	3234-41	3	Screw-HHF
4	119-3006	1	Hook-Light
5	104-8301	3	Nut-HF, NI
6	80-6990	2	Washer-Hardened
7	119-3045	2	Chain-Safety, Trailer
8	105-9245	1	Pin-Lock
9	119-6162	1	Decal-Tire

● Not serviced separately

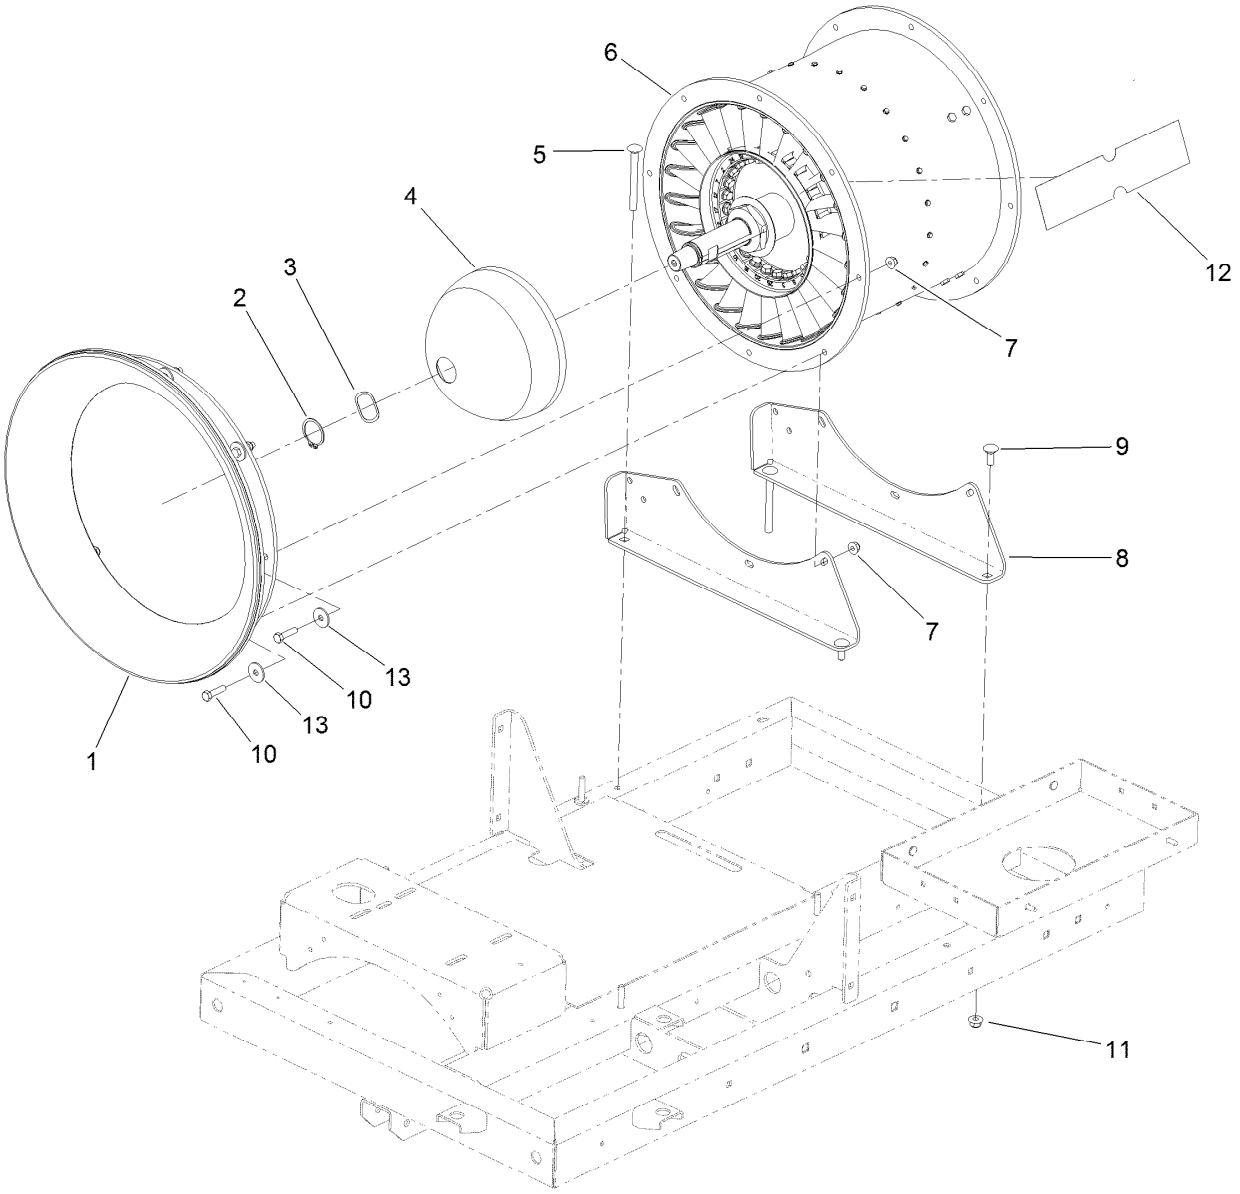

Turbine Mounting Assembly


Ref.	*Part Number*	*Qty.*	*Description*
1	117-8329	1	Bell-Inlet
2	112-1952	1	Ring-Snap, EXT
3	93-4632	1	Washer-Wavey
4	131-9440	1	Cap-Front
5	3231-24	2	Screw-CARR
6	125-4260	1	Turbine ASM
7	104-8300	8	Nut-HF, NI
8	112-6851-01	2	Mount-Fan
9	3231-22	2	Screw-CARR
10	322-6	8	Screw-HH
11	104-8301	4	Nut-HF, NI
12	115-5102	2	Decal
13	5-4460	8	Washer-Pivot

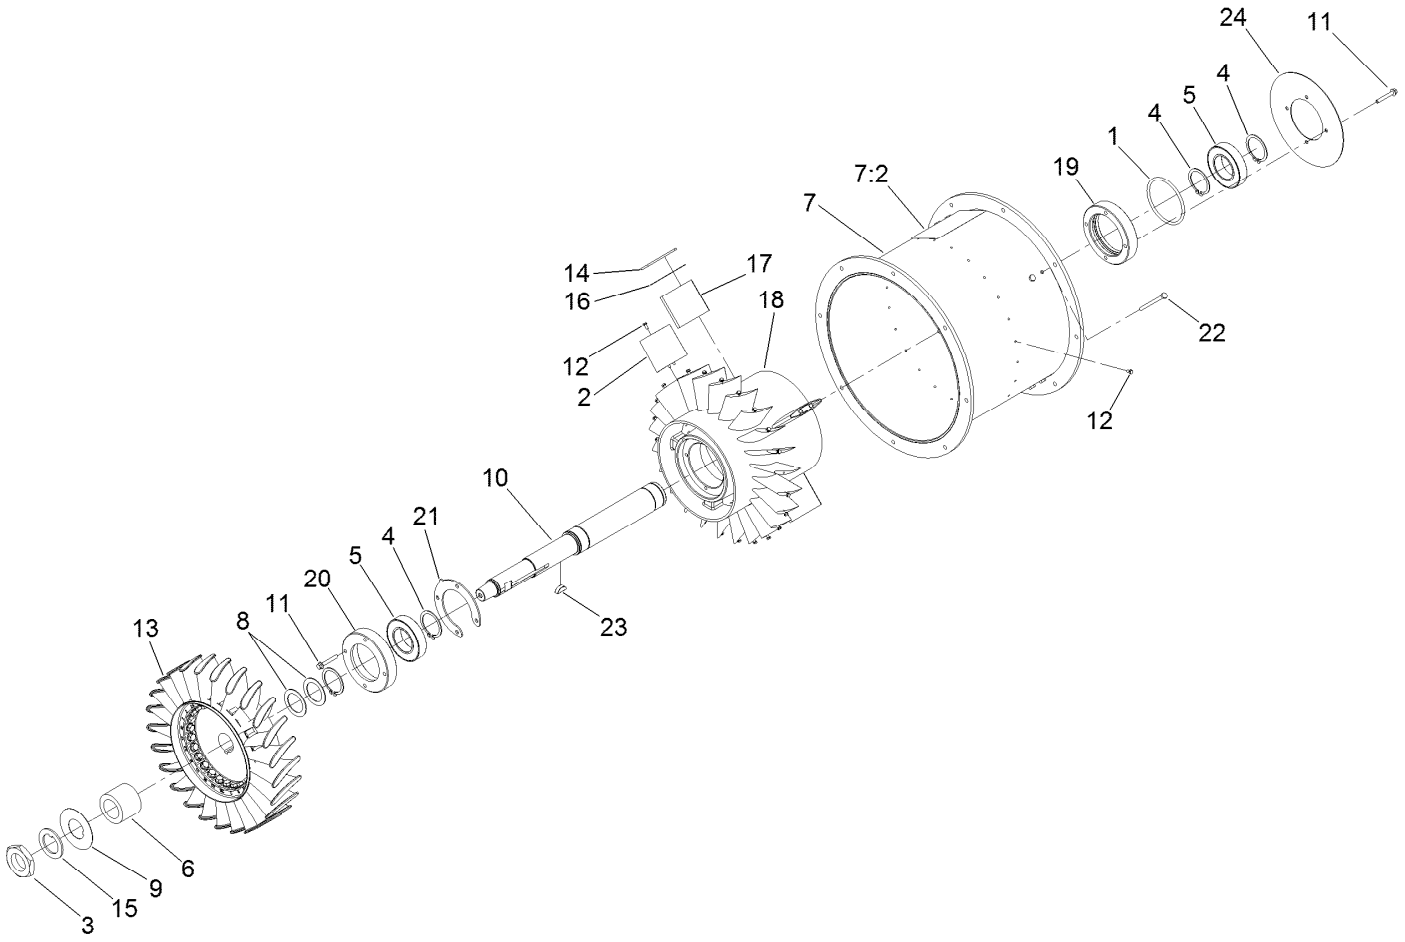

Turbine Assembly No. 125-4260

Ref.	*Part Number*	*Qty.*	*Description*
1	92-9533	1	O-Ring
2	112-1871	24	Vane-Stator
3	112-1899	1	Nut
4	112-1951	4	Ring-Snap, EXT
5	112-6764	2	Bearing-Ball
6	114-2164	1	Spacer
7	115-5128	1	Housing ASM
7:2	115-5106	2	Decal-Danger
8	115-5131	2	Washer
9	115-9005	1	Washer-Tab
10	115-9075	1	Shaft-Fan
11	125-4287	8	Screw-HHF
12	117-8303	24	Screw-HHF


Ref.	*Part Number*	*Qty.*	*Description*
13	117-8356	1	Rotor
14	117-8393	1	Spacer-Fin
15	119-6202	1	Washer-Tab
16	119-6207	1	Spacer-Fin
17	119-6444	4	Mount-Fin
18	120-5920	1	Inner Housing
19	120-6042	1	End-Oring
20	120-6061	1	Bearing-Cap
21	120-6063	1	End-Cap
22	321-19	8	Screw-HH
23	3257-42	1	Key-Woodruff
24	130-0871-03	1	Plate-Center

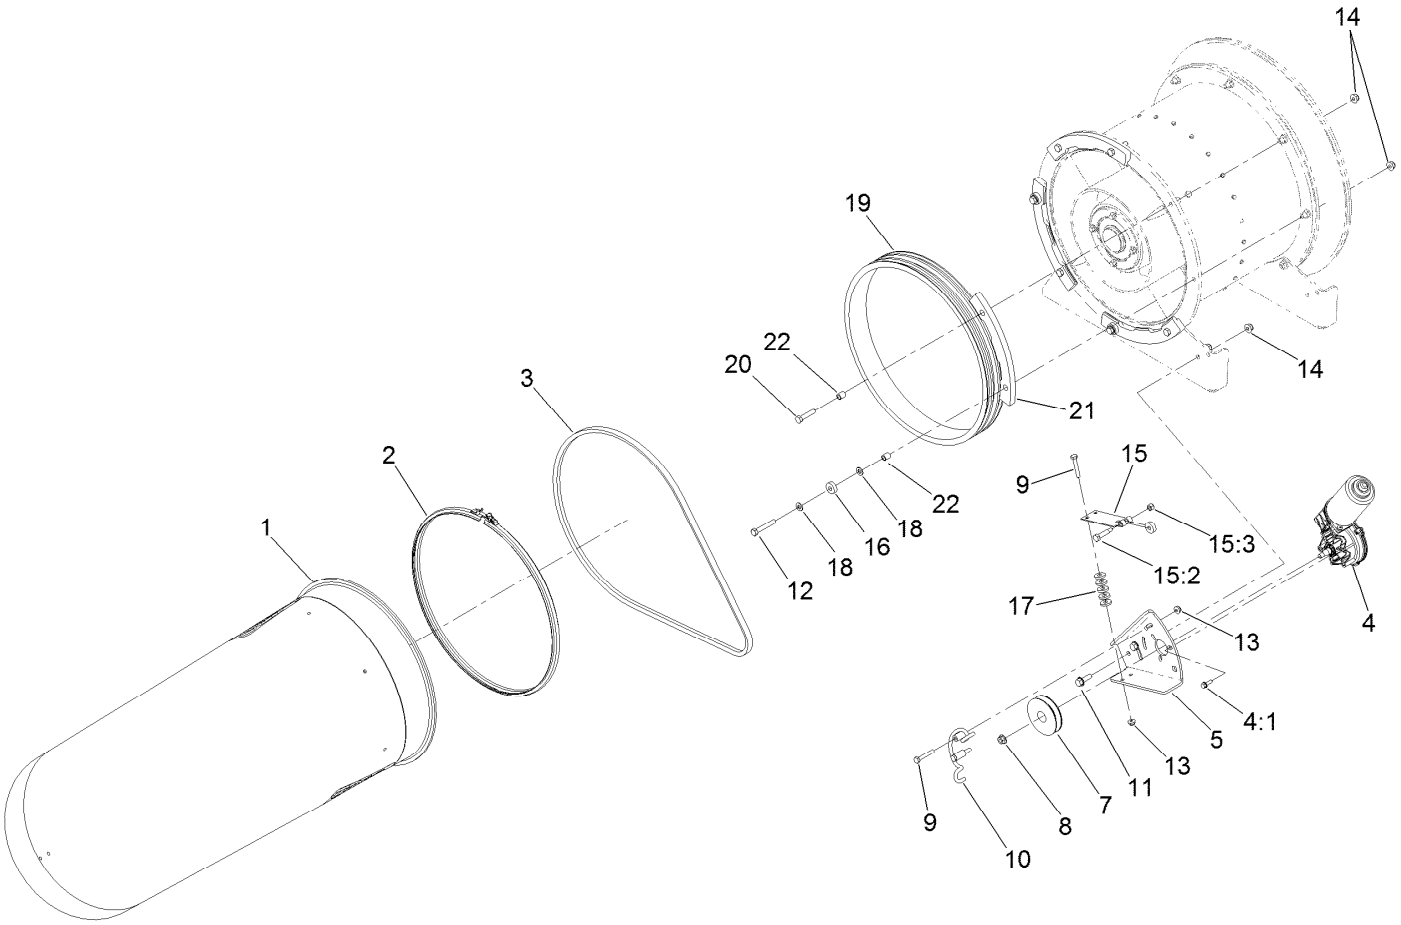

Nozzle Drive Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	119-6287	1	Nozzle
2	112-6899	1	Clamp-Nozzle
3	112-1853	1	Belt-V
4	130-8551	1	Motor-Reversible
4:1	114-8414	3	Screw-HHF
5	115-5149-01	1	Bracket-Motor
7	115-5147	1	Pulley
8	98-0668	1	Nut
9	321-37	4	Screw-HH
10	112-6924	1	Guard-Belt, Drive
11	3234-29	2	Screw-HHF
12	322-10	2	Screw-HH


Ref.	*Part Number*	*Qty.*	*Description*
13	104-7201	4	Nut-HF
14	104-8300	10	Nut-HF, NI
15	110-9650	1	Leaf Spring ASM
15:2	36-2250	1	Bolt-Shoulder
15:3	3296-42	1	Nut-Lock, NI
16	251-259	3	Bearing-Ball
17	88-7200	10	Washer-Flat
18	3256-74	4	Washer-Flat
19	112-1874	1	Pulley-Nozzle
20	322-7	6	Screw-HH
21	114-9868	4	Guide-Nozzle
22	93-6859	8	Spacer

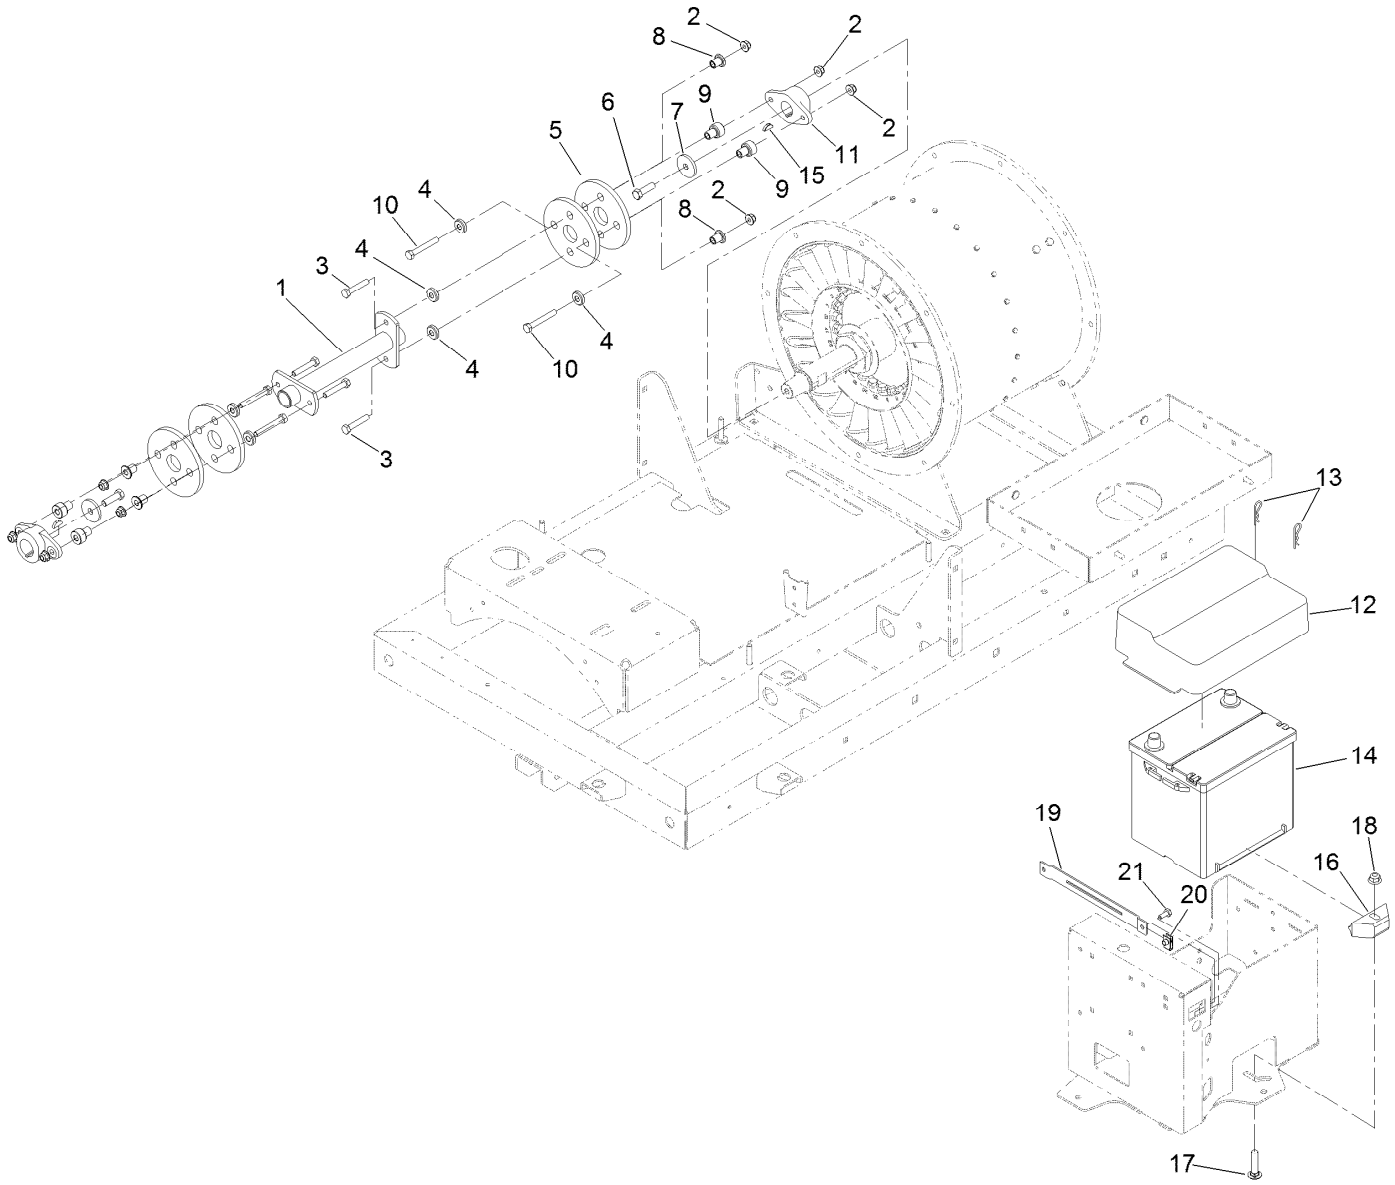

Battery and Drive Shaft Assembly

Ref.	Part Number	Qty.	Description
1	115-5124-03	1	Shaft-Drive
2	104-8300	8	Nut-HF, NI
3	322-39	4	Screw-HH
4	131-6761	8	Washer
5	115-5129	4	Coupling-Rubber
6	323-7	2	Screw-HH
7	114-2120	2	Washer
8	131-6763	4	Spacer-Coupling, Rubber
9	131-6762	4	Spacer-Coupling, Rubber
10	322-32	4	Screw-HH
11	114-2122	2	Hub-Engine

Ref.	Part Number	Qty.	Description
12	130-8569	1	Cover-Battery
13	3290-467	2	Pin-Hair
14	106-5187	1	Battery-Dry
15	3257-5	2	Key-Woodruff
16	66-2490	1	Retainer-Battery
17	3231-5	1	Screw-CARR
18	104-8301	1	Nut-HF, NI
19	130-0932-01	1	Bracket-Cover
20	107069	2	Clip
21	321-3	2	Screw-HH

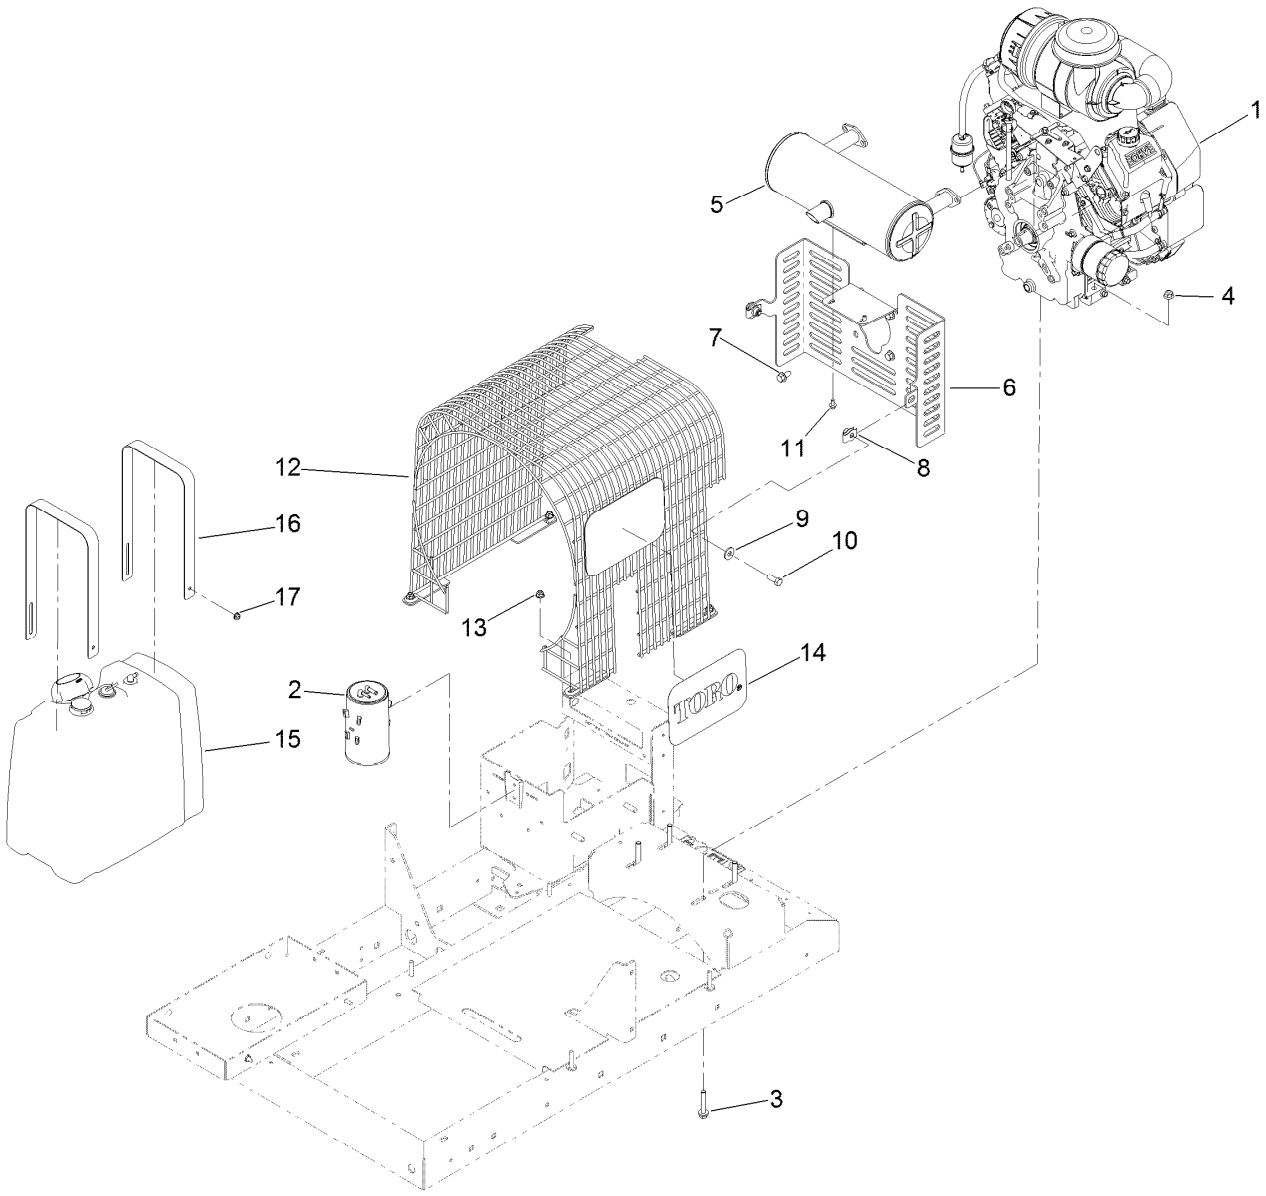


Engine, Muffler and Fuel Tank Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine-Kohler, Ch740-3331 ●■
2	127-8685	1	Canister-Carbon
3	66-9302	4	Screw-HHF, Whiz
4	104-8301	4	Nut-HF, NI
5	112-6862	1	Muffler
6	119-6171-03	1	Mount-Muffler
7	110-1718	4	Screw-HHF
8	105-4886	2	Nut-Tinnerman
9	80-6990	2	Washer-Hardened
10	323-6	2	Screw-HH
11	33103-012	2	Screw-HHF
12	112-6876	1	Grill-Top
13	104-8300	4	Nut-HF, NI
14	92-1242	2	Decal
15	115-9048	1	Fuel Tank ASM
16	119-6285	2	Strap-Hold Down, Tank
17	104-7201	4	Nut-HF


● Not serviced separately

■ Obtain parts from www.kohlerplus.com

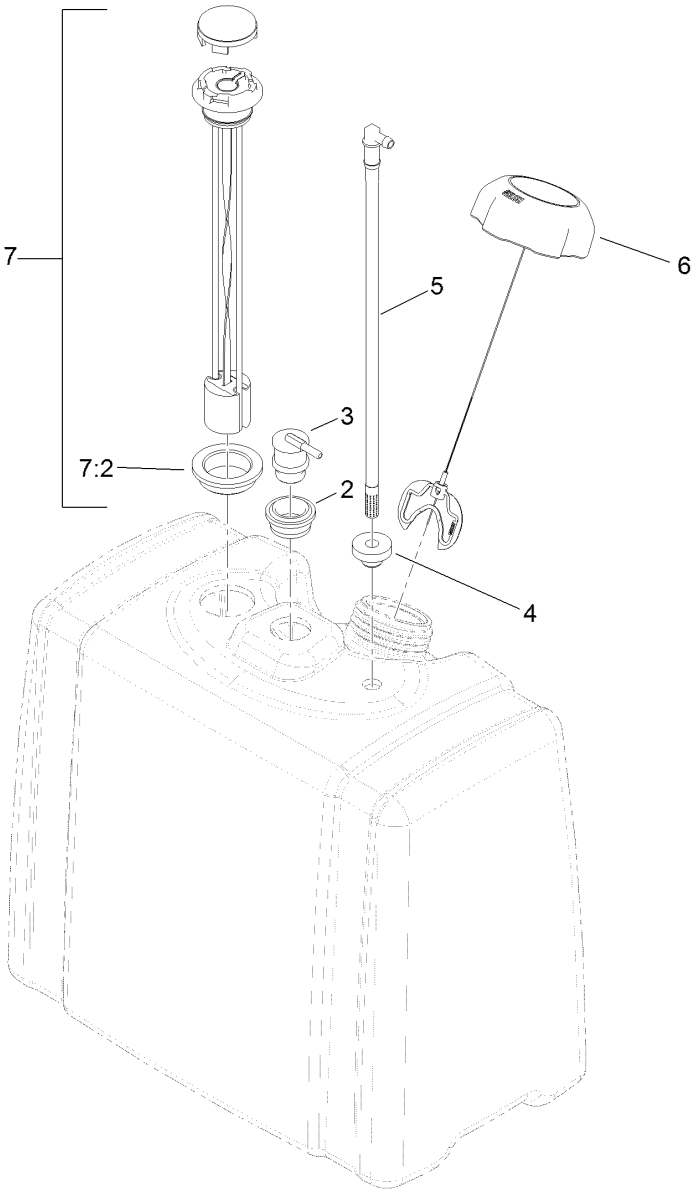

Fuel Tank Assembly No. 115-9048


Ref.	*Part Number*	*Qty.*	*Description*
2	114-0284	1	Grommet
3	114-0285	1	Valve-Rollover
4	46-6560	1	Bushing
5	115-9044	1	Pipe-Stand
6	137-4127	1	Cap-Fuel
7	119-0509	1	Gauge ASM
7:2	119-0508	1	Seal

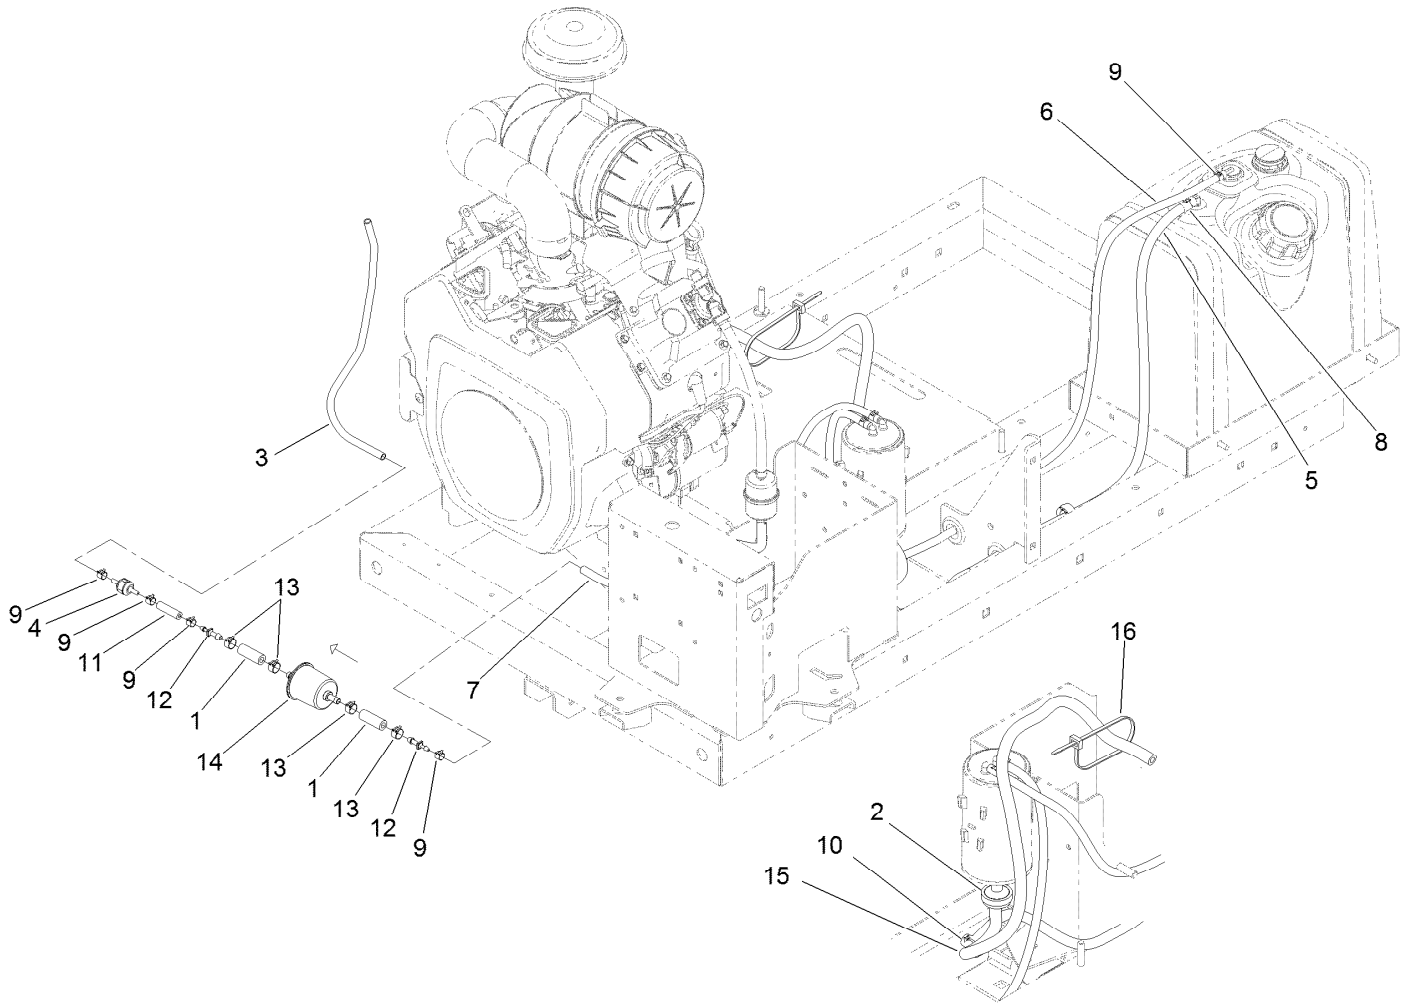

Fuel Delivery Assembly

Ref.	Part Number	Qty.	Description
1	106-5317	3	Hose-Fuel
2	115-7854	1	Filter-Fuel, Inline
3	119-8150	1	Hose-Fuel
4	133-8499	1	Valve-Check, Vacuum
5	107-9298	1	Hose-Fuel
6	119-6073	1	Hose-Fuel
7	110-3254	1	Hose-Fuel
8	2412-98	2	Clamp-Hose


Ref.	Part Number	Qty.	Description
9	2412-80	5	Clamp-Hose
10	32180-030	6	Clip-Tie
11	119-8561	1	Hose-Fuel
12	106-8150	2	Fitting-Straight
13	92-2379	4	Clamp-Hose
14	120-2235	1	Filter-Fuel
15	110-4109	1	Hose-Fuel
16	3290-378	1	Tie-Cable

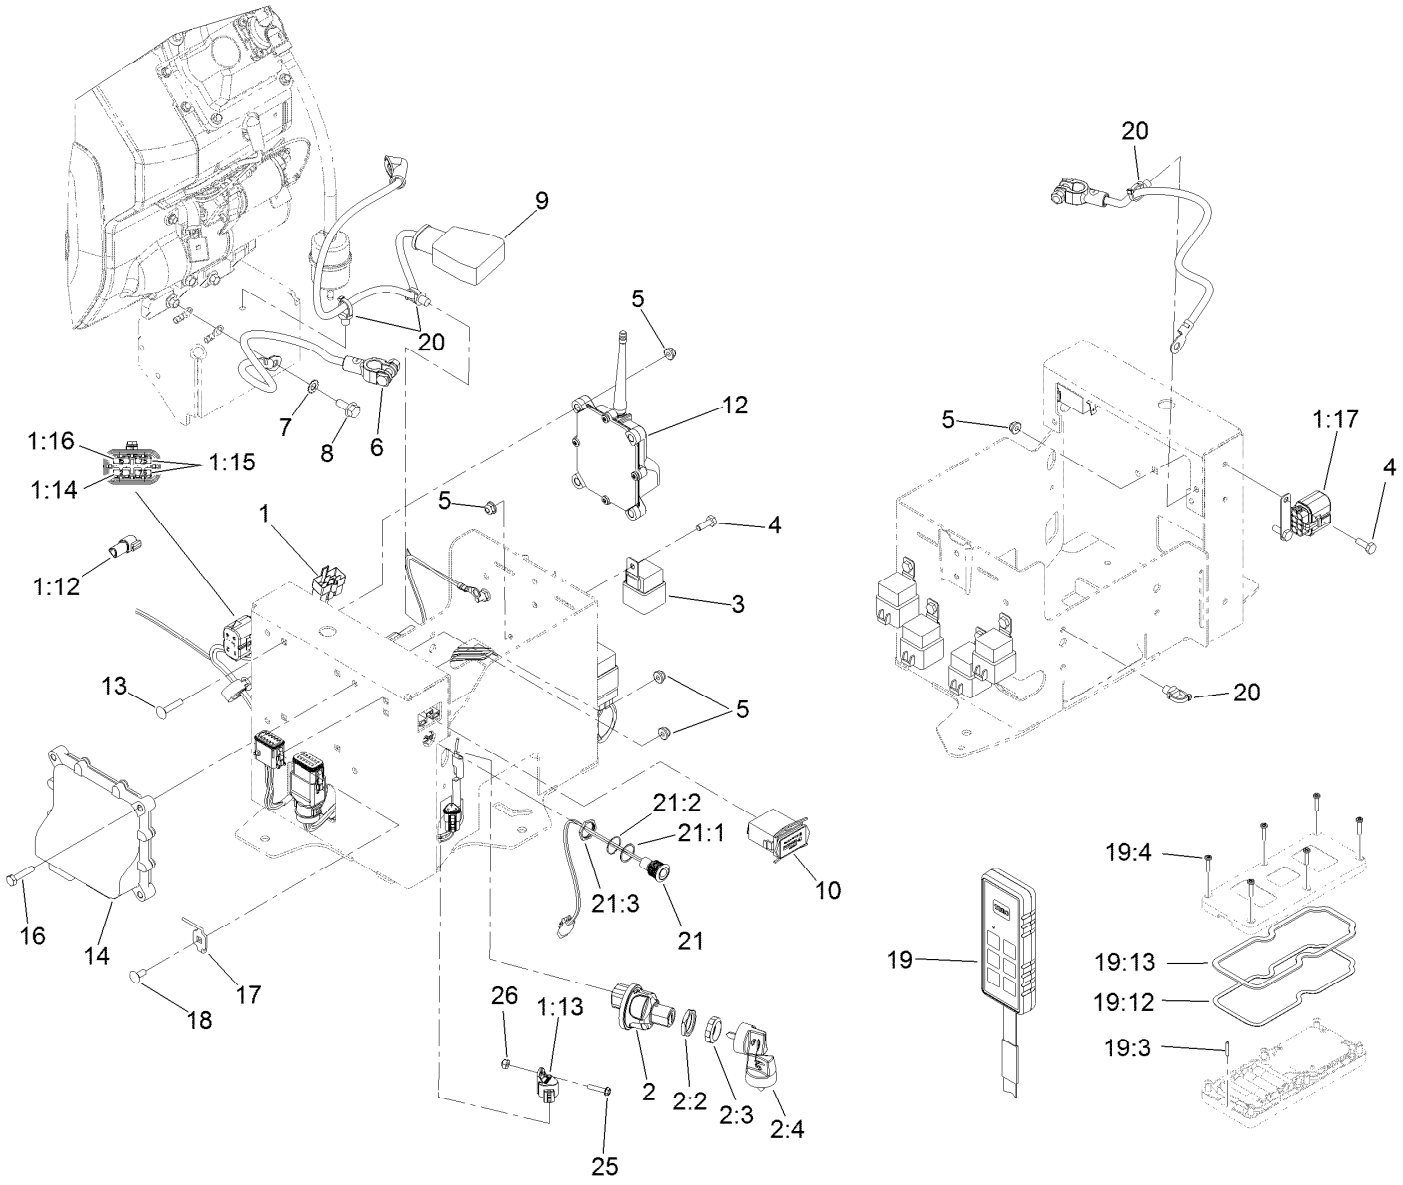

Electrical System Assembly

Ref.	Part Number	Qty.	Description
1	122-0220	1	Harness-Wire, Blower
1:12	32180-043	2	Resistor-120 Ohm
1:13	32180-089	1	Cap-Plug, 3 Way
1:14	121-8861	1	Fuse-Mini Blade, 2 Amp
1:15	121-8865	2	Fuse-Mini Blade, 7.5 Amp
1:16	121-8867	1	Fuse-Mini Blade, 15 Amp
1:17	32180-179	1	Cover-Bussman
2	121-5159	1	Ignition Switch ASM
2:2	121-5160	1	Nut-Hex
2:3	121-5161	1	Nut-Face
2:4	121-5162	1	Set-Key, Ignition
3	99-7430	4	Relay-Mini
4	321-4	6	Screw-HH
5	104-7201	15	Nut-HF
6	125-5966	1	Cable-Battery, Negative
7	3255-8	1	Washer-Lock
8	33104-020	1	Screw-HHF
9	122-0629	1	Cable-Battery, Positive
10	1-513374	1	Meter-Hour

Ref.	Part Number	Qty.	Description
12	132-9600	1	Controller
13	3229-3	4	Screw-CARR
14	125-1360	1	Controller
16	321-8	4	Screw-HH
17	121-2761	1	Mount-Transmitter
18	3229-11	1	Screw-CARR
19	125-1270	1	Remote ASM
19:3	121-2906	1	Pin-Lanyard
19:4	121-2908	6	Screw-PPH
19:12	125-1294	1	Backer-Gasket
19:13	125-1295	1	Gasket (HH-Small)
20	32180-030	3	Clip-Tie
21	122-0630	1	Red LED Indicator Lamp ASM
21:1	122-0634	1	Gasket-LED
21:2	122-0633	1	Washer-Locking
21:3	122-0632	1	Nut-Fixing
25	106-9169	1	Screw-HWH
26	3296-12	2	Nut-Lock, NI

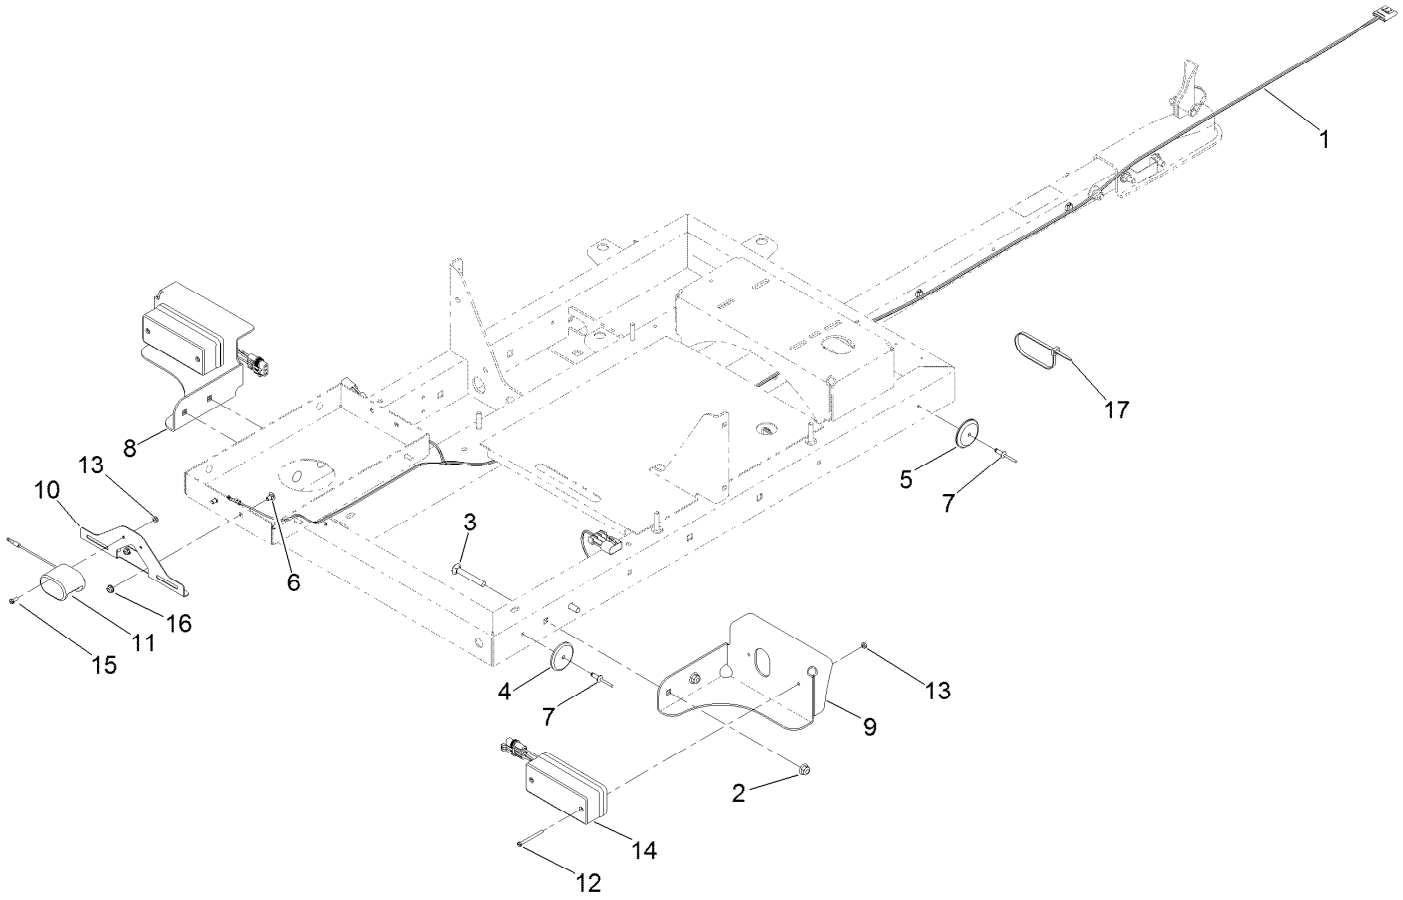

Tail Light Assembly

Ref.	Part Number	Qty.	Description
1	119-1792	1	Harness-Wire
2	104-8301	4	Nut-HF, NI
3	3231-9	4	Screw-CARR
4	74-2390	2	Reflector-Red
5	104-6962	2	Reflector-Amber
6	3229-10	2	Screw-CARR
7	3290-412	4	Rivet-Blind
8	119-3003-03	1	Bracket-Light Mount (LH)
9	119-3004-03	1	Bracket-Light Mount (RH)
10	119-6072-03	1	Bracket-Plate, License
11	119-3041	1	Lamp-License
12	32105-14	4	Screw-SHH
13	3296-12	6	Nut-Lock, NI
14	119-3046	2	Tail-Light
15	32105-8	2	Screw-SHH
16	104-7201	2	Nut-HF
17	3290-379	1	Tie-Cable

Attachments and Accessories

For 44553 Pro Force Debris Blower

Product Name	Model/Part
Tapered Nozzle Kit	119-6280
Rectangular Nozzle Kit	119-6281
Spark Arrestor Screen	94-8157

Notes:

Notes:

Notes:



Count on it.