Form No. 3424-388 Rev A

TORO®

Count on it.

Parts Catalog

Combination Deck

Versa Vac

Model No. 07082—Serial No. 403280001 and Up

Register at www.Toro.com.
Original Instructions (EN)

CE

3424-388 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.


For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Rotor and Skirt Assembly 4
Drive Assembly 6
Hydraulic Motor Assembly No. SVA18400 8
Hydraulic Motor Assembly No. SVA18300 9
Caster Wheel Assembly 10
Caster Mount Assembly 11

© 2018—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

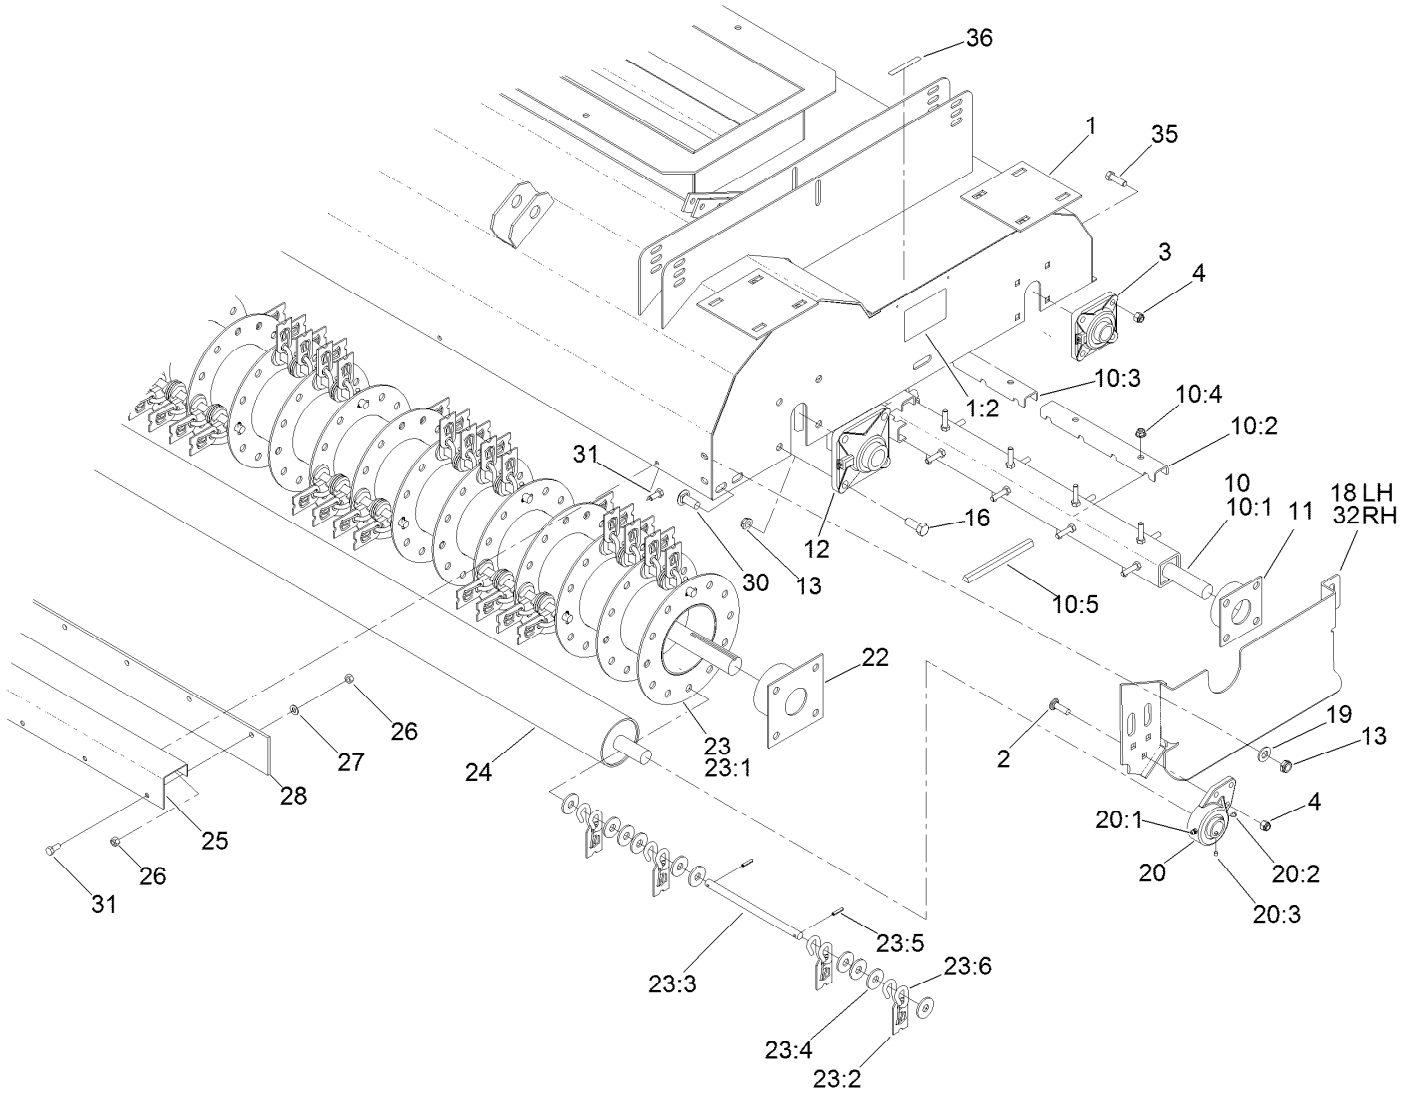


Rotor and Skirt Assembly

Ref.	Part Number	Qty.	Description
1	105-8452	1	Deck-Rake And Finger ASM
1:2	106-0188	2	Decal-Caution
2	3231-28	6	Screw-CARR
3	BD733-00	2	Bearing-Flange
4	3296-39	14	Nut-Lock, NI
10		1	Rubber Rotor Finger ASM ●
10:1	119-6405-03	1	Rotor ASM (With Studs)
10:2	119-6406-03	16	Pincher-Belt, Short
10:3	119-6407-03	4	Pincher-Belt, Long
10:4	104-8301	44	Nut-HF, NI
10:5	SV166-00	88	Finger-Belt
11	RS205-00-01	2	Guard-Bearing, Shaft
12	RS250-00	2	Bearing-Flange
13	3296-45	14	Nut-Hex
16	325-5	8	Screw-HH
18	106-0124-01	1	LH Guard ASM
19	3256-6	6	Washer-Flat
20	106-0326	2	Bearing-Flange

Ref.	Part Number	Qty.	Description
20:1	302-5	1	Fitting-Grease
20:2	302-59	1	Plug-Threaded
20:3	3245-35	2	Screw-Set, HSH
22	RS206-00-01	2	Guard-Bearing, Rotor Shaft
23	106-0224	1	Rotor-Flail, Vertical Cut
23:1	106-0324-03	1	Rotor-Flail
23:2	119-6275	72	Flail Knife ASM
23:3	106-0213	18	Pin-Flail Mount
23:4	63-3340	180	Washer-Support
23:5	32121-4	36	Pin-Roll, Slotted
23:6	110-7500	72	Hanger-Flail, Pivot
24	RS322-00-01	1	Roller-Scalp, Anti
25	RS224-00-01	1	Shield-Front
26	3296-29	12	Nut-Lock, NI
27	3256-23	12	Washer-Plain
28	RS224-01	1	Skirt-Shield, Front
30	3233-26	6	Screw-CARR, Short Neck
31	322-3	16	Screw-HH

● Not serviced separately

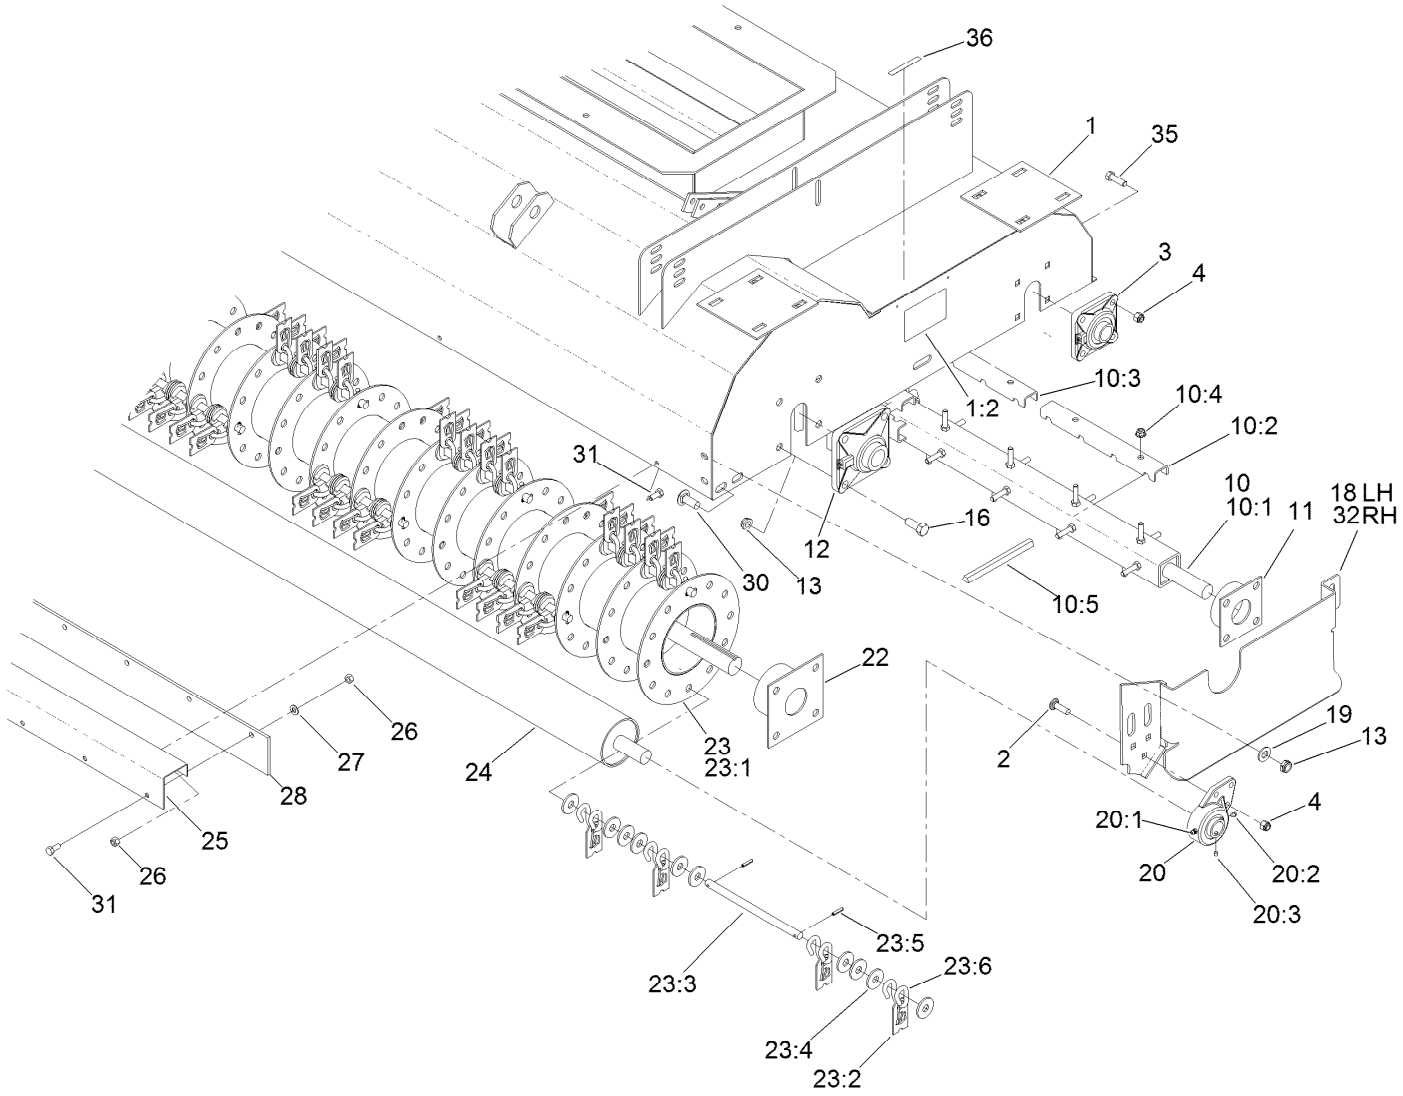


Rotor and Skirt Assembly (continued)

Ref.	Part Number	Qty.	Description
32	106-0125-01	1	RH Guard ASM

Ref.	Part Number	Qty.	Description
35	323-7	8	Screw-HH
36	133-8061	1	Decal-Warning

● Not serviced separately

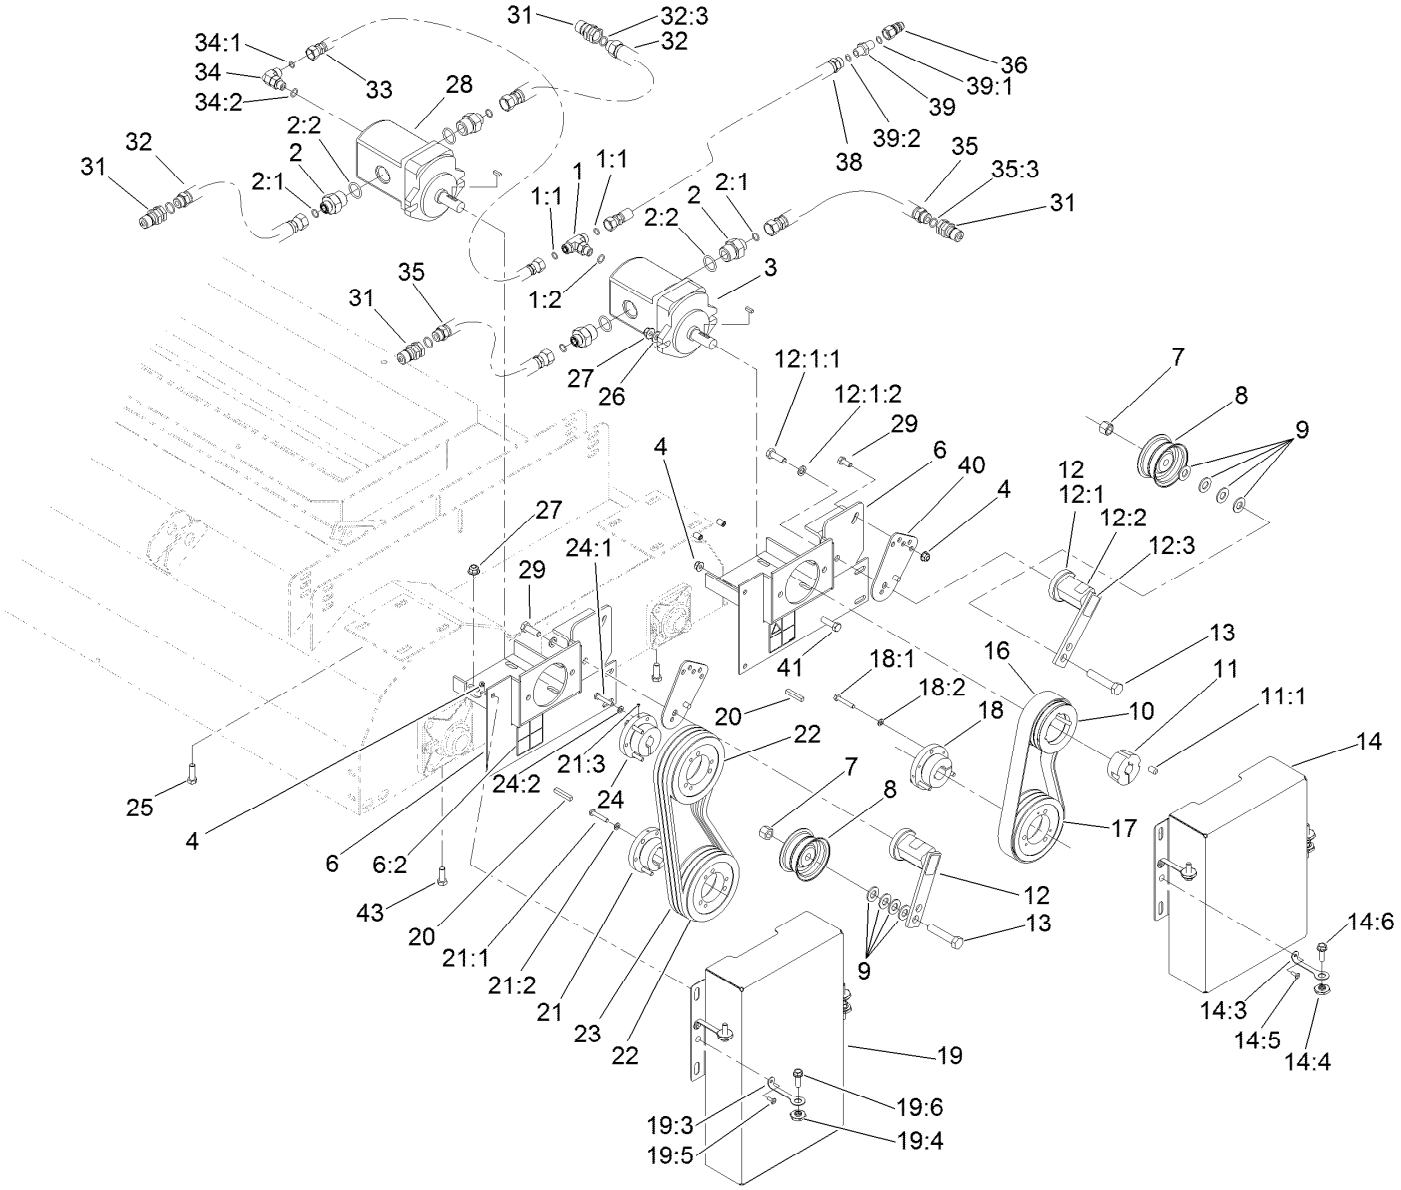


Drive Assembly

Ref.	Part Number	Qty.	Description
1	340-94	1	Adapter
1:1	237-22	2	O-Ring
1:2	237-42	1	O-Ring
2	100-4240	4	Fitting-STR
2:1	237-30	1	O-Ring
2:2	237-81	1	O-Ring
3	SVA18400	1	Motor-HYD
4	104-8300	10	Nut-HF, NI
6	119-3032	2	Mount-Motor
6:2	117-4979	1	Decal-Warning
7	3296-23	2	Nut-Lock, NI
8	GF251-00	2	Pulley-Idler
9	3256-26	9	Washer-Flat
10	GB504-00	1	Pulley-Lock, Taper
11	SVA19300	1	Bushing-Taper Lock
11:1	3247-4	2	Screw-Set
12	106-0179	2	Tensioner Idler ASM
12:1		1	Tensioner-Idler ●

Ref.	Part Number	Qty.	Description
12:1:1	33115-030	1	Screw-HH
12:1:2	48-9590	1	Washer-Lock
12:2	106-0177	1	Decal-Angle
12:3	106-0178	1	Decal-Align
13	325-10	2	Screw-HH
14	119-3036	1	Motor Shield ASM
14:3	117-8339	4	Lanyard-3 Inch
14:4	119-3012	4	Nut-Shoulder
14:5	114439	3	Rivet-Blind
14:6	108-3748	4	Screw-HHF
16	SVA19100	1	Belt
17	105-7854	1	Pulley
18	105-7856	1	Hub
18:1	321-9	3	Screw-HH
18:2	3253-3	3	Washer-Lock
19	119-3038	1	Motor Shield ASM
19:3	117-8339	4	Lanyard-3 Inch
19:4	119-3012	4	Nut-Shoulder

● Not serviced separately

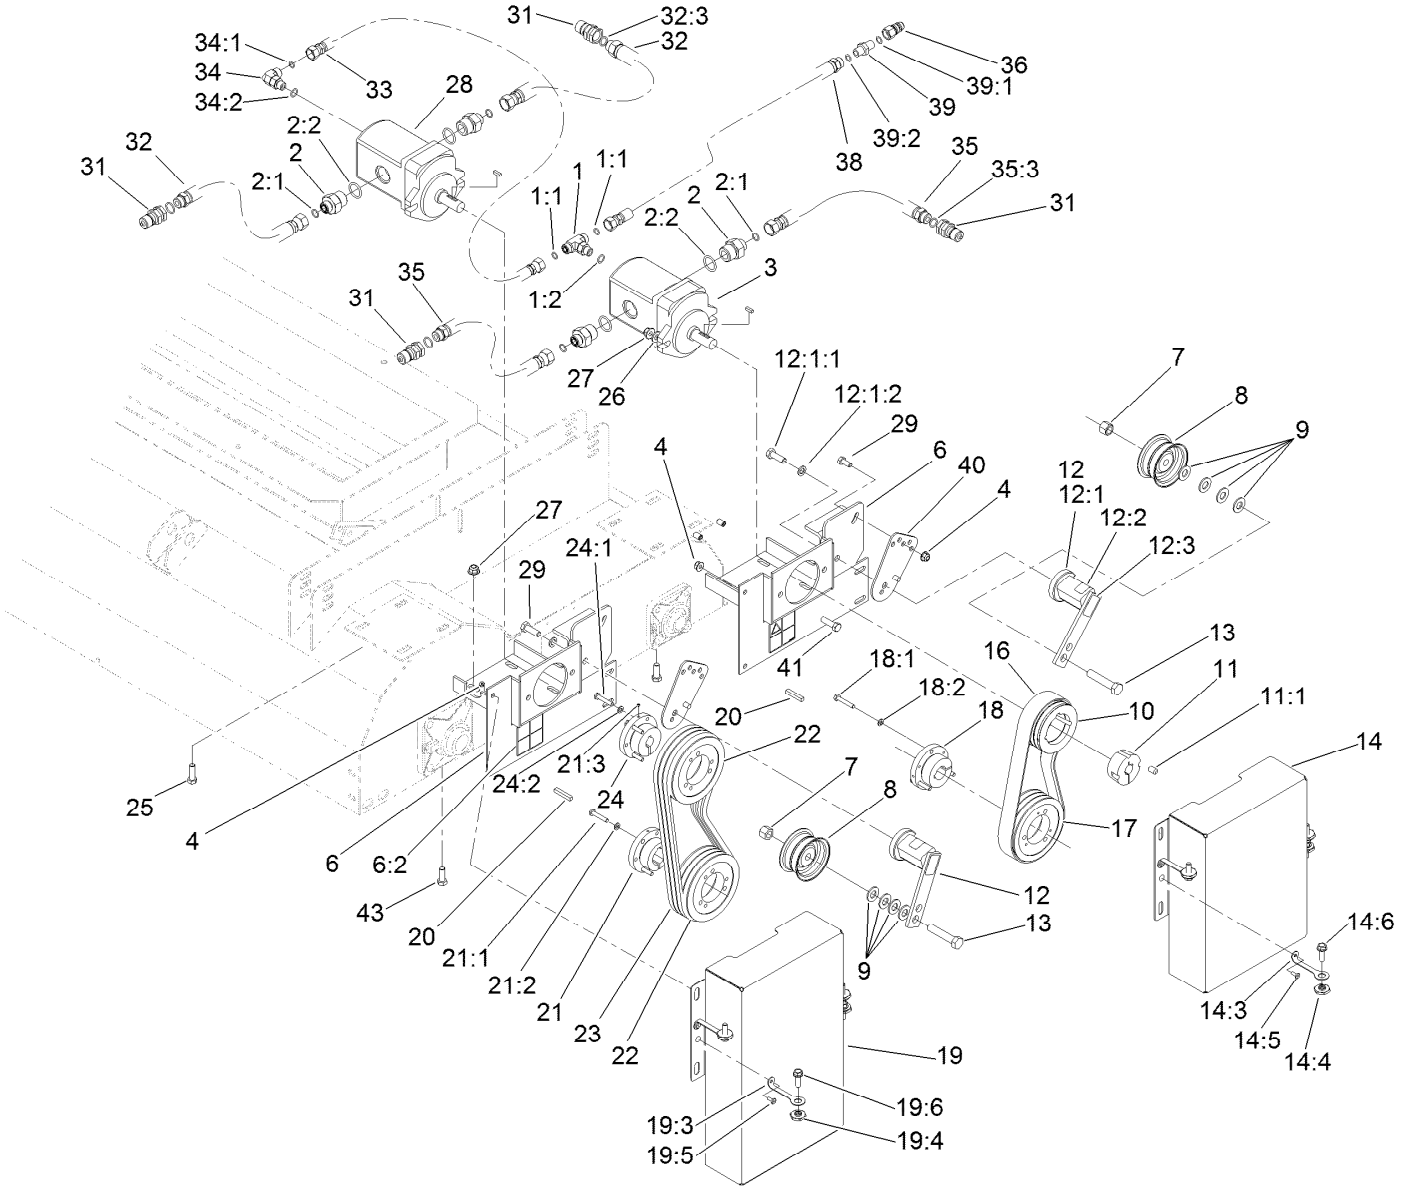


Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
19:5	114439	3	Rivet-Blind
19:6	108-3748	4	Screw-HHF
20	67-7490	2	Key-Square
21	105-8458	1	Bushing-Grip, Full
21:1	32104-96	3	Screw-HH
21:2	3253-3	3	Washer-Lock
21:3	3245-2	1	Screw-Set, HSH
22	105-8457	2	Pulley
23	SVB17500	3	V-Belt
24	105-8461	1	Bushing-Lock, Taper
24:1	32104-96	3	Screw-HH
24:2	3253-3	3	Washer-Lock
25	3234-11	6	Screw-HHF
26	3256-24	4	Washer-Flat
27	104-8301	12	Nut-HF, NI
28	SVA18300	1	Motor-HYD
29	3230-1	2	Bolt-CARR
31	105-4170	4	Coupler-Male

Ref.	Part Number	Qty.	Description
32	105-0643	2	HYD Hose ASM
32:3	237-79	1	O-Ring
33	105-0640	1	HYD Hose ASM
34	340-77	1	Fitting-Elbow, 90 DEG
34:1	237-22	1	O-Ring
34:2	237-42	1	O-Ring
35	105-0644	2	Hyd Hose ASM
35:3	237-79	1	O-Ring
36	63-1240	1	Nipple-Disconnect, Quick
38	105-0641	1	Hyd Hose ASM
39	340-2	1	Fitting-Straight
39:1	237-22	1	O-Ring
39:2	237-42	1	O-Ring
40	106-0232	2	Stabilizer Pin ASM
41	323-7	4	Screw-HH
43	323-6	2	Screw-HH


● Not serviced separately

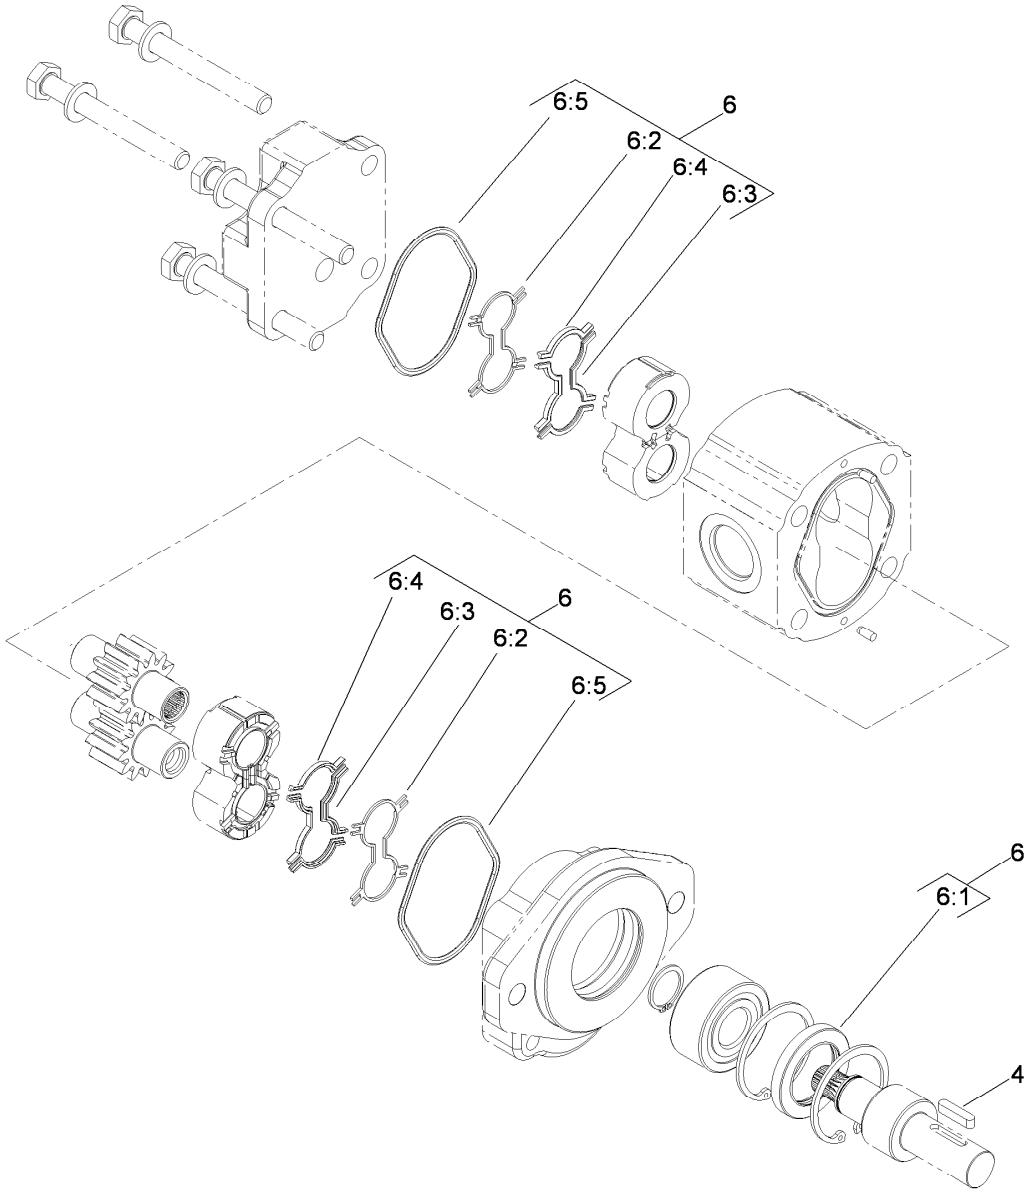

Hydraulic Motor Assembly No. SVA18400

Ref.	*Part Number*	*Qty.*	*Description*
4	94-8850	1	Key-Square
6	108-2437	1	Seal Kit
6:1		1	Seal-Lip ●
6:2		2	Seal-Back Up ●
6:3		4	Seal-Channel ●
6:4		4	Seal-Channel ●
6:5		2	Seal-Section ●


● Not serviced separately

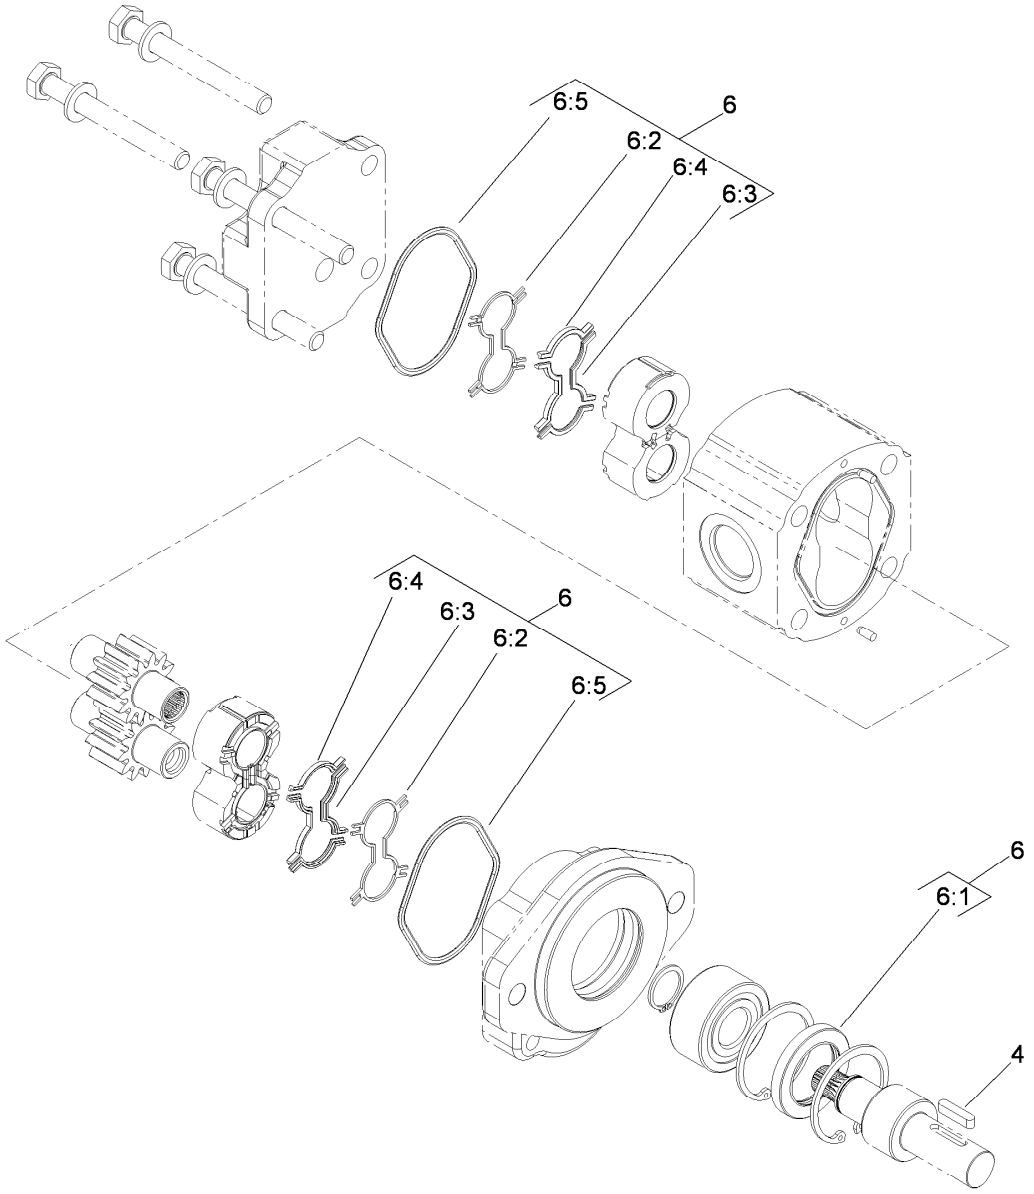

Hydraulic Motor Assembly No. SVA18300


Ref.	*Part Number*	*Qty.*	*Description*
4	94-8850	1	Key-Square
6	108-2437	1	Seal Kit
6:1		1	Seal-Lip ●
6:2		2	Seal-Back Up ●
6:3		4	Seal-Channel ●
6:4		4	Seal-Channel ●
6:5		2	Seal-Section ●

● Not serviced separately

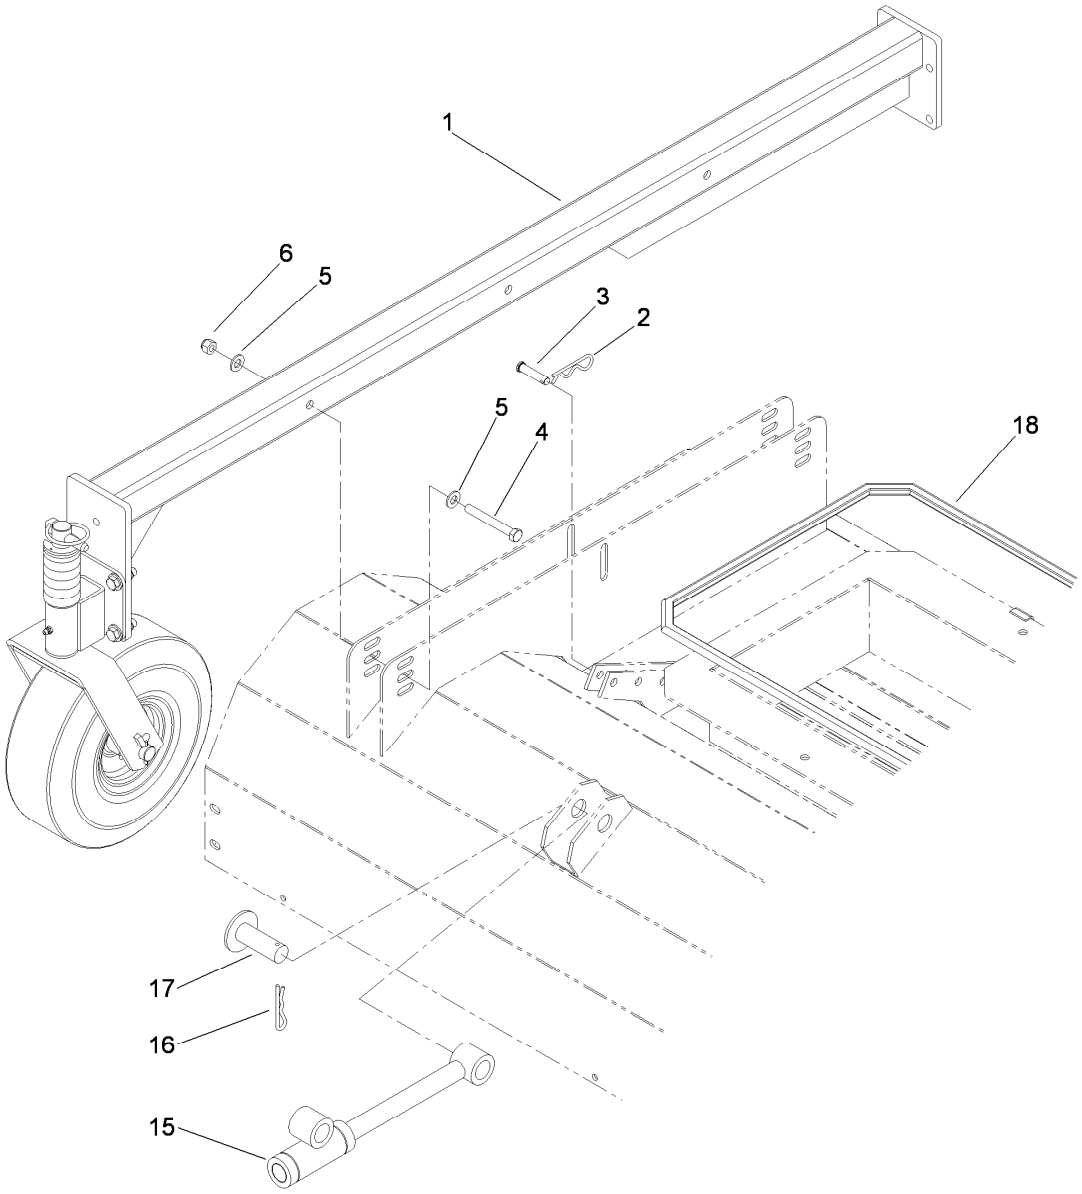

Caster Wheel Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	117-8282	2	Caster Mount ASM
2	3290-355	2	Pin-Hair
3	283-15	2	Pin-Clevis
4	323-14	6	Screw-HH
5	3256-24	12	Washer-Flat
6	3296-39	6	Nut-Lock, NI
15	SV117-00-01	2	Rod-Radius, Short
16	9335064	2	Pin-Cotter, Hair
17	RS218-00	2	Pin-Clevis
18	105-4843	1	Trim

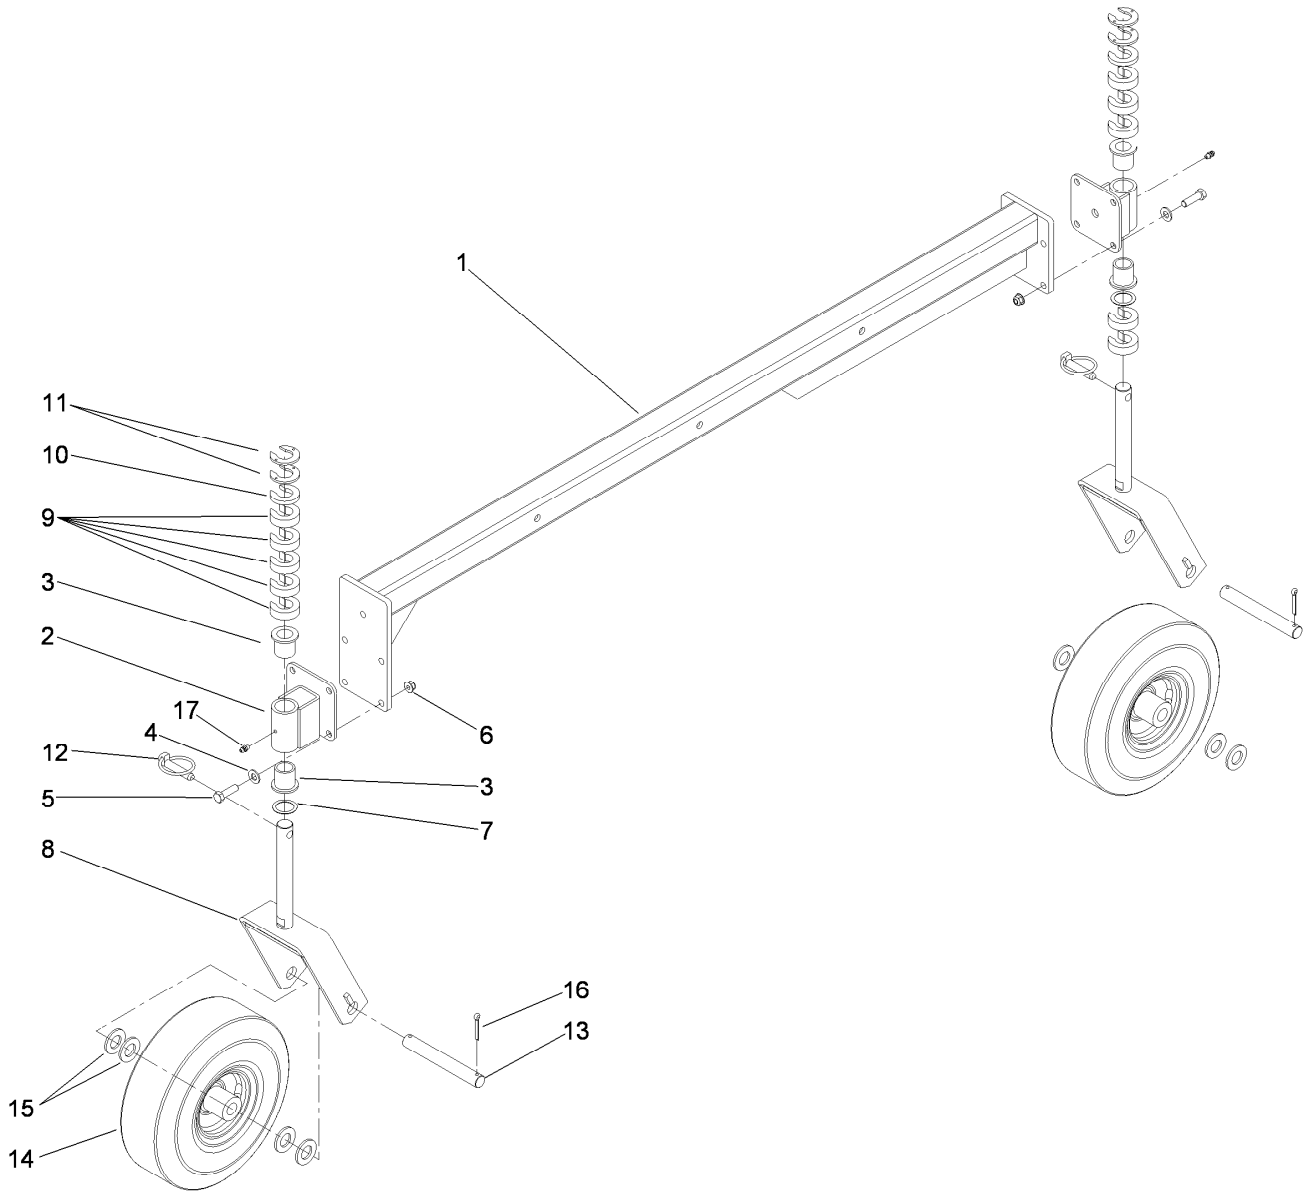

Caster Mount Assembly

Ref.	Part Number	Qty.	Description
1	105-4940-01	1	Mount-Caster
2	BL116-00-01	2	Mount-Wheel
3	RS202-09	4	Bushing-Flange
4	3256-24	8	Washer-Flat
5	323-7	8	Screw-HH
6	104-8301	8	Nut-HF, NI
7	74-1810	2	Washer
8	SV125-00-01	2	Yoke-Caster, Wheel
9	SV126-01	10	Spacer-Slotted
10	117-8256	4	Spacer-Slotted
11	SV170-00	4	Spacer-Slotted, Thin
12	283-71	2	Pin-Lynch
13	RS211-00	2	Axle-Wheel, Caster
14	RS210-00	2	Wheel-Tire
15	3256-39	16	Washer-Flat
16	3272-22	4	Pin-Cotter
17	302-5	2	Fitting-Grease



Count on it.