Form No. 3424-429 Rev A

TORO®

Count on it.

Parts Catalog

# Workman® GTX EFI

## Utility Vehicle with Bench Seat

**Model No. 07060—Serial No. 403151775 and Up**

Register at www.Toro.com.
Original Instructions (EN)

*3424-429* A

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


# Contents

Front Frame and Suspension Assembly . . . . . 4
Floor Plate and Rear Suspension Mount Assembly . . . . . 5
Rear Frame and Suspension Assembly . . . . . 6
Frame Mount and Rear Shock/Spring Assembly . . . . . 7
Brake Assembly . . . . . 8
Master Cylinder Assembly No. 104-6782 . . . . . 9
Brake Caliper Assembly No. 127-7424 . . . . . 10
Steering Assembly . . . . . 11
Pedal and Control Assembly . . . . . 12
Hood and Fender Assembly . . . . . 13
Dash Assembly . . . . . 14
Seatbase Assembly . . . . . 15
Cargo Bed Assembly . . . . . 16
Cargo Bed and Tailgate Assembly No. 131-8592 . . . . . 17
Engine Assembly . . . . . 18
Starter Generator Assembly No. 131-8444 . . . . . 20
Secondary Clutch Assembly No. 119-6011 . . . . . 21
Air Cleaner Assembly No. 99-7120 . . . . . 22
Primary Clutch Assembly No. 138-0095 . . . . . 23
Rear Wheel and Transaxle Assembly . . . . . 24
Transaxle Assembly No. 131-3486 . . . . . 26
Battery and Cable Assembly . . . . . 28
Electrical Assembly . . . . . 29
Fuel System Assembly . . . . . 30
Attachments and Accessories . . . . . 32

**© 2018—The Toro® Company**
**8111 Lyndale Avenue South**
**Bloomington, MN 55420**




**Contact us at www.Toro.com.**
**Printed in the USA.**
**All Rights Reserved**

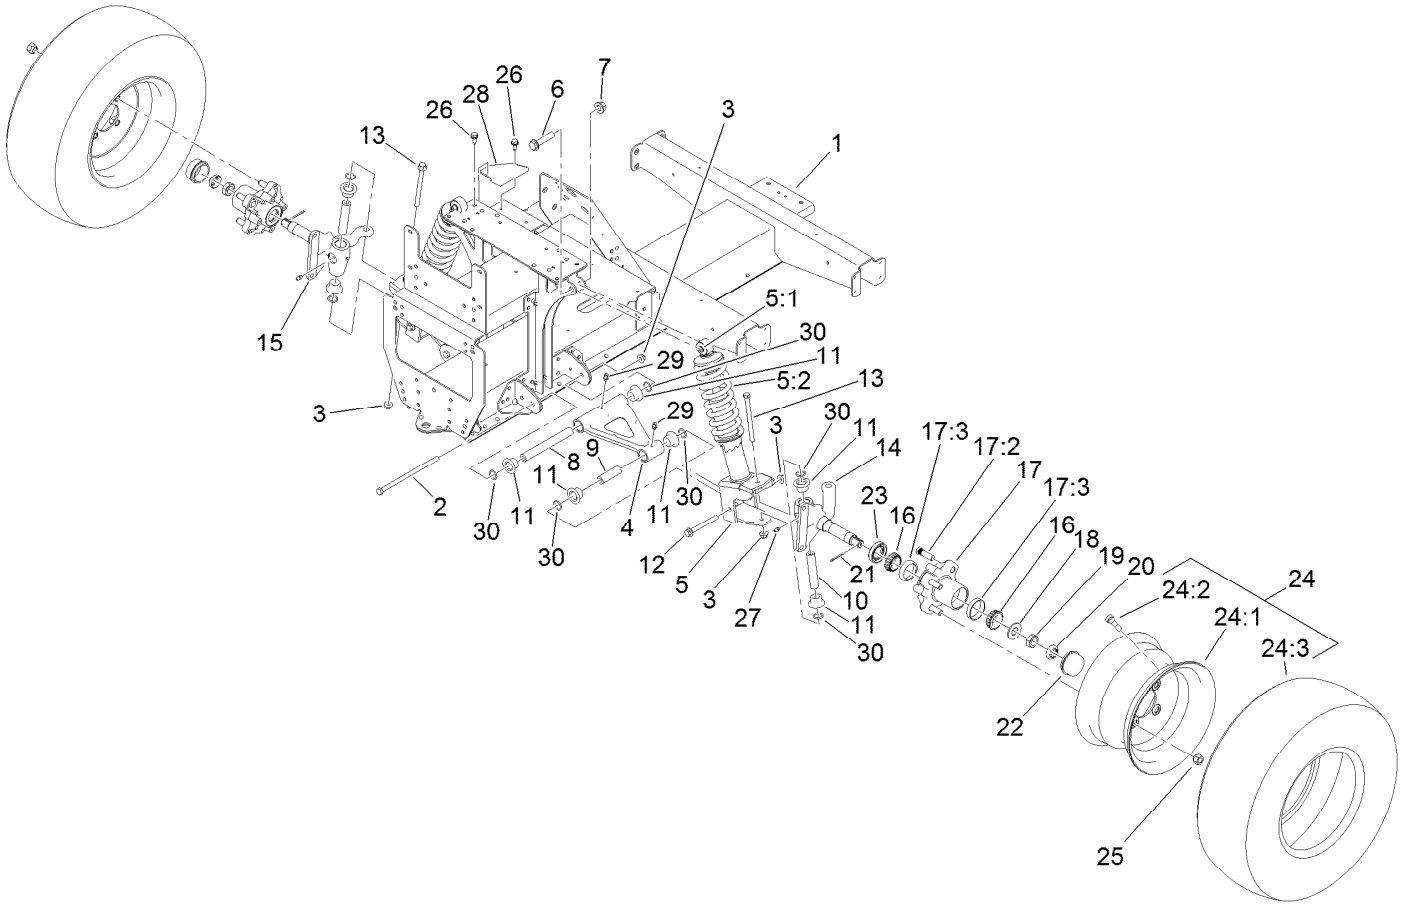


# Front Frame and Suspension Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 127-7718-03 | 1 | Frame-Front |
| 2 | 131-8572 | 2 | Screw-HF |
| 3 | 104-8301 | 6 | Nut-HF, NI |
| 4 | 131-8345 | 2 | A-Arm |
| 5 | 137-6716 | 2 | Strut ASM (250 Lb) |
| 5:1 | 131-8574 | 1 | Isolator-Shock |
| 5:2 | 137-6719 | 1 | Spring-Compression, 250Lb |
| 6 | 3234-46 | 2 | Screw-HHF |
| 7 | 99-5107 | 2 | Nut-Lock |
| 8 | 131-8581 | 2 | Sleeve-Control Arm, Inner |
| 9 | 131-8583 | 2 | Sleeve-Control Arm, Outer |
| 10 | 131-8582 | 2 | Sleeve-Kingpin |
| 11 | 133-0643 | 12 | Bushing-Flange, O-Ring |
| 12 | 116-4701 | 2 | Screw-HHF |
| 13 | 131-8571 | 2 | Screw-HF |
| 14 | 127-8825-03 | 1 | Spindle-LH |
| 15 | 127-8826-03 | 1 | Spindle-RH |
| 16 | 254-94 | 4 | Bearing-Cone, Tapered |
| 17 | 127-8851 | 2 | Front Hub ASM |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 17:2 | 10-6830 | 4 | Stud-Type, Drive |
| 17:3 | 254-72 | 2 | Bearing-Cup, Tapered |
| 18 | 93-0309 | 2 | Washer-Tab |
| 19 | 3220-7 | 2 | Nut-Jam |
| 20 | 93-0307 | 2 | Nut-Lock, Retainer |
| 21 | 3272-12 | 2 | Pin-Cotter |
| 22 | 241-119 | 2 | Cap-Dust |
| 23 | 112-1690 | 2 | Seal-Oil |
| 24 | 131-8319 | 2 | Tire/Wheel ASM |
| 24:1 | 131-8317 | 1 | Wheel |
| 24:2 | 232-27 | 1 | Stem-Valve |
| 24:3 | 131-8318 | 1 | Tire |
| 25 | 242-50 | 8 | Nut-Lug |
| 26 | 32144-70 | 2 | Screw-HWHTF |
| 27 | 302-5 | 2 | Fitting-Grease |
| 28 | 131-8339-03 | 1 | Reinforcement-Tower |
| 29 | 302-40 | 4 | Fitting-Grease, 90 DEG |
| 30 | 237-54 | 12 | O-Ring |

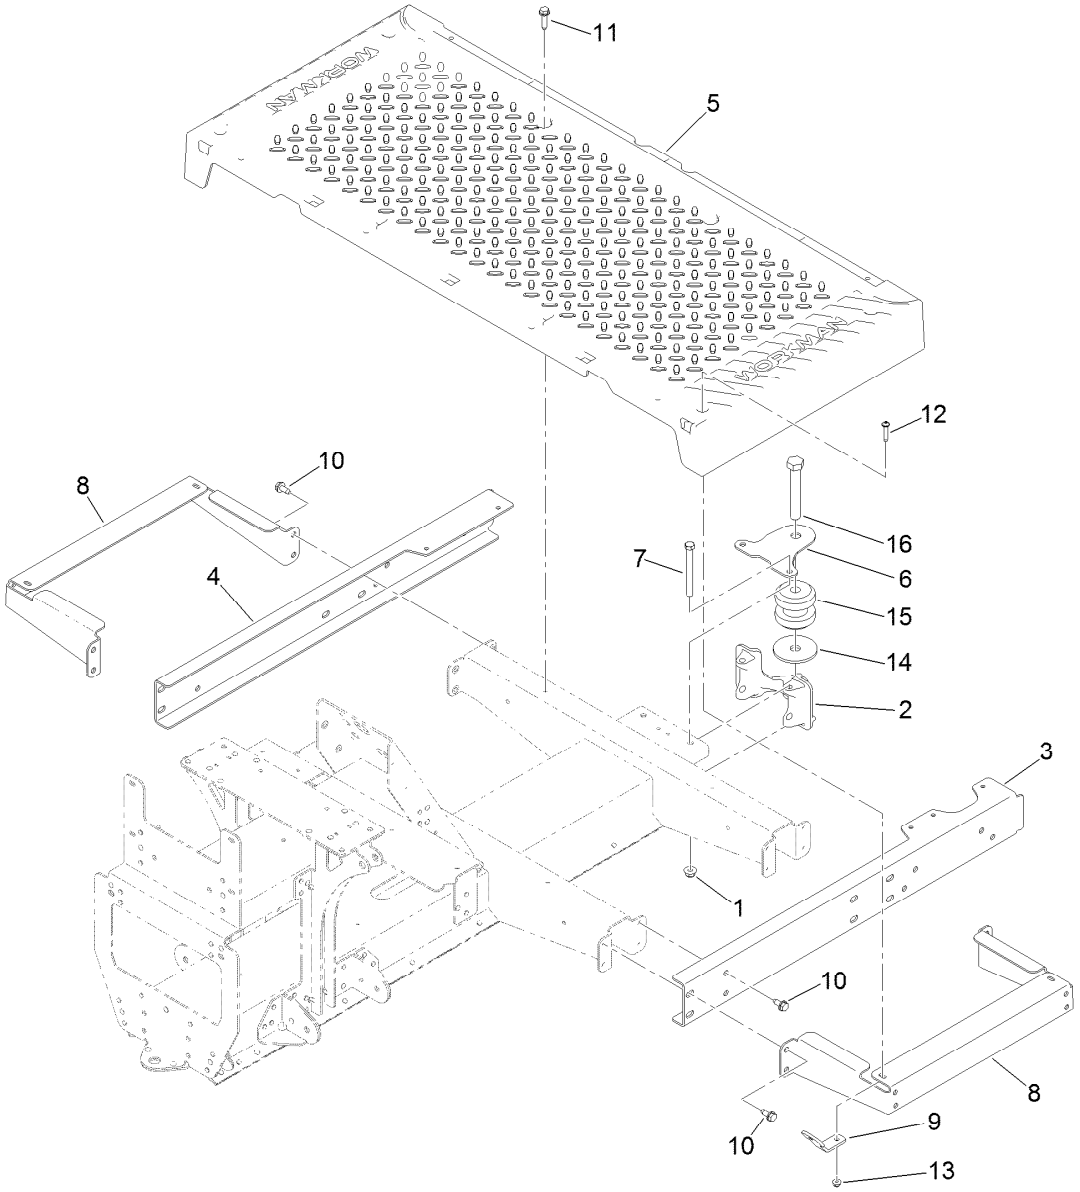


# Floor Plate and Rear Suspension Mount Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 104-8301 | 2 | Nut-HF, NI |
| 2 | 131-8466 | 1 | Mount-Suspension, Rear |
| 3 | 127-7820-03 | 1 | Channel-Frame, Front (LH) |
| 4 | 127-7821-03 | 1 | Channel-Frame, Front (RH) |
| 5 | 127-7829 | 1 | Plate-Floor |
| 6 | 131-8597 | 1 | Plate-Gimbal, Upper |
| 7 | 323-42 | 2 | Screw-HH |
| 8 | 127-7837-03 | 2 | Bracket-Support, Floor Plate |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 9 | 127-7832 | 2 | Bracket-Angle |
| 10 | 32144-70 | 16 | Screw-HWHTF |
| 11 | 32144-49 | 4 | Screw-HWHTF |
| 12 | 132-6777 | 4 | Screw-TTH |
| 13 | 104-7201 | 4 | Nut-HF |
| 14 | 110-4549 | 1 | Washer-Snubbing |
| 15 | 131-8480 | 1 | Isolator |
| 16 | 104-5877 | 1 | Screw-HH |

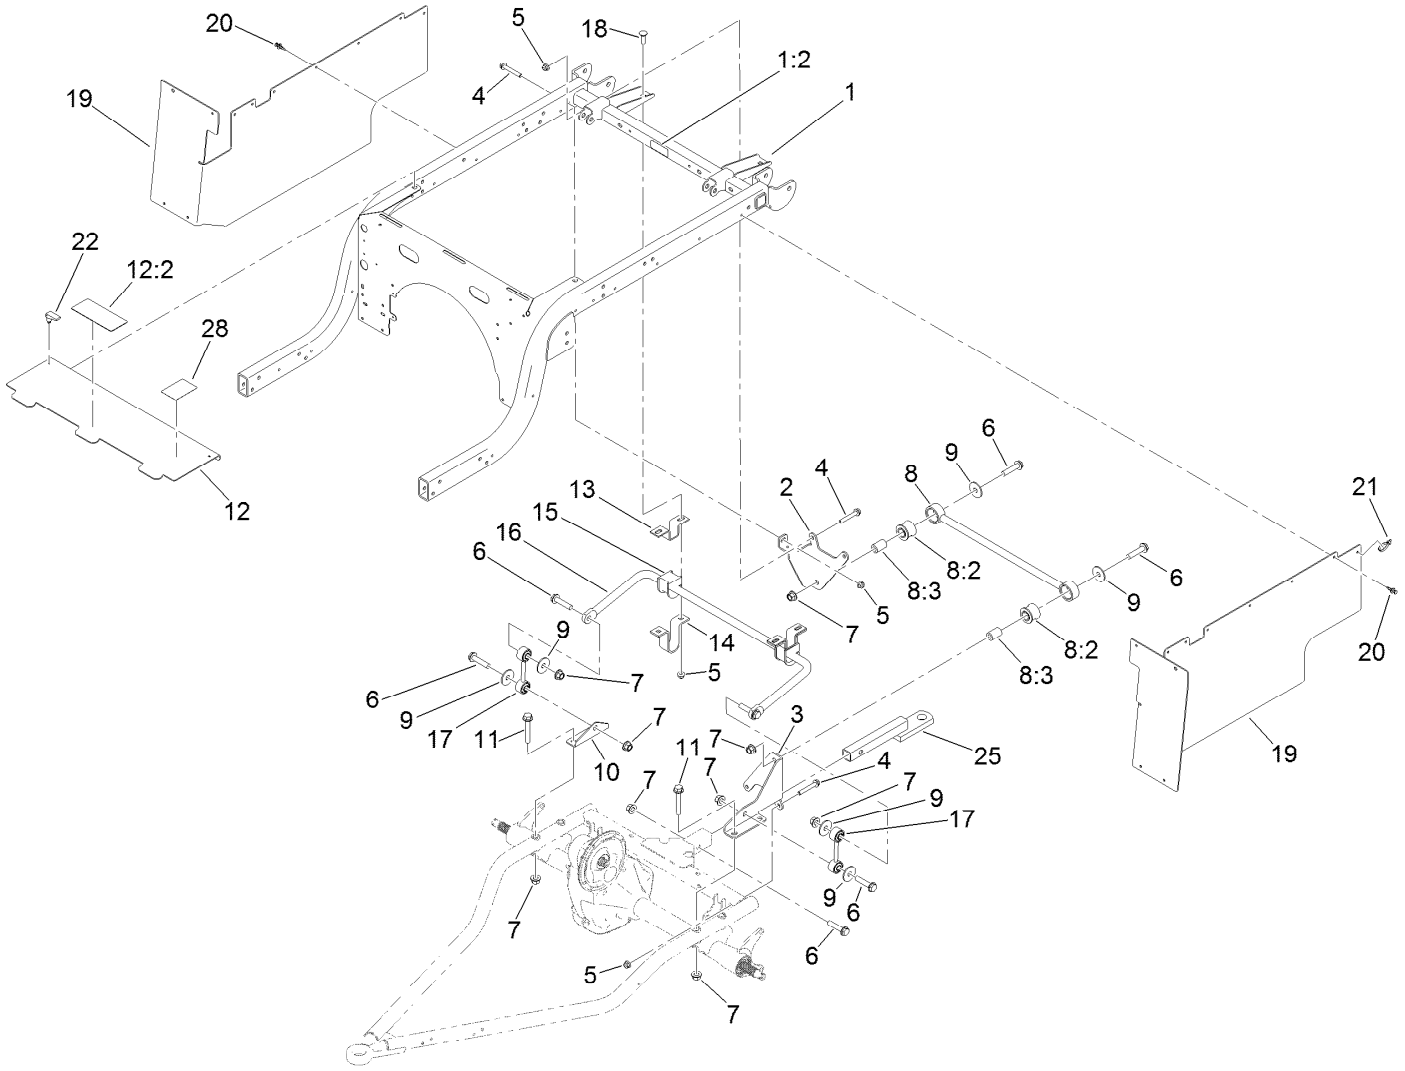


# Rear Frame and Suspension Assembly


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 131-8594 | 1 | Rear Frame ASM |
| 1:2 | 115-2047 | 1 | Decal-Surface, Hot |
| 2 | 127-7412-03 | 1 | Bracket-Bar, Stabilizer |
| 3 | 127-7411-03 | 1 | Bracket-Bar, Stabilizer |
| 4 | 3234-39 | 5 | Screw-HHF |
| 5 | 104-8301 | 9 | Nut-HF, NI |
| 6 | 3234-46 | 7 | Screw-HHF |
| 7 | 99-5107 | 11 | Nut-Lock |
| 8 | 109-5013 | 1 | Panhard Rod ASM |
| 8:2 | 109-5009 | 2 | Bushing-Suspension, Rubber |
| 8:3 | 109-5010 | 2 | Spacer |
| 9 | 86-1990 | 6 | Washer-Thrust |
| 10 | 131-8315 | 1 | Bracket-Link, Sway Bar |
| 11 | 3234-40 | 4 | Screw-HF |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 12 | 131-8595 | 1 | Panel-Cover |
| 12:2 | 99-7345 | 1 | Decal-Warning |
| 13 | 87-3890-03 | 2 | Bracket-Bar, Sway |
| 14 | 87-4010-03 | 2 | Clamp-Bar, Sway |
| 15 | 87-3910 | 2 | Bushing-Rubber |
| 16 | 131-8310-03 | 1 | Bar-Sway, Anti |
| 17 | 131-8394 | 2 | Link-Bar, Sway |
| 18 | 3231-25 | 4 | Bolt-CARR |
| 19 | 131-8346 | 2 | Panel-Side |
| 20 | 125-9622 | 20 | Rivet-Blind |
| 21 | 3290-378 | 2 | Tie-Cable |
| 22 | 74-5950 | 2 | Latch-Swell |
| 25 | 137-6741 | 1 | Ball Mount ASM |
| 28 | 138-3528 | 1 | Decal-Service |

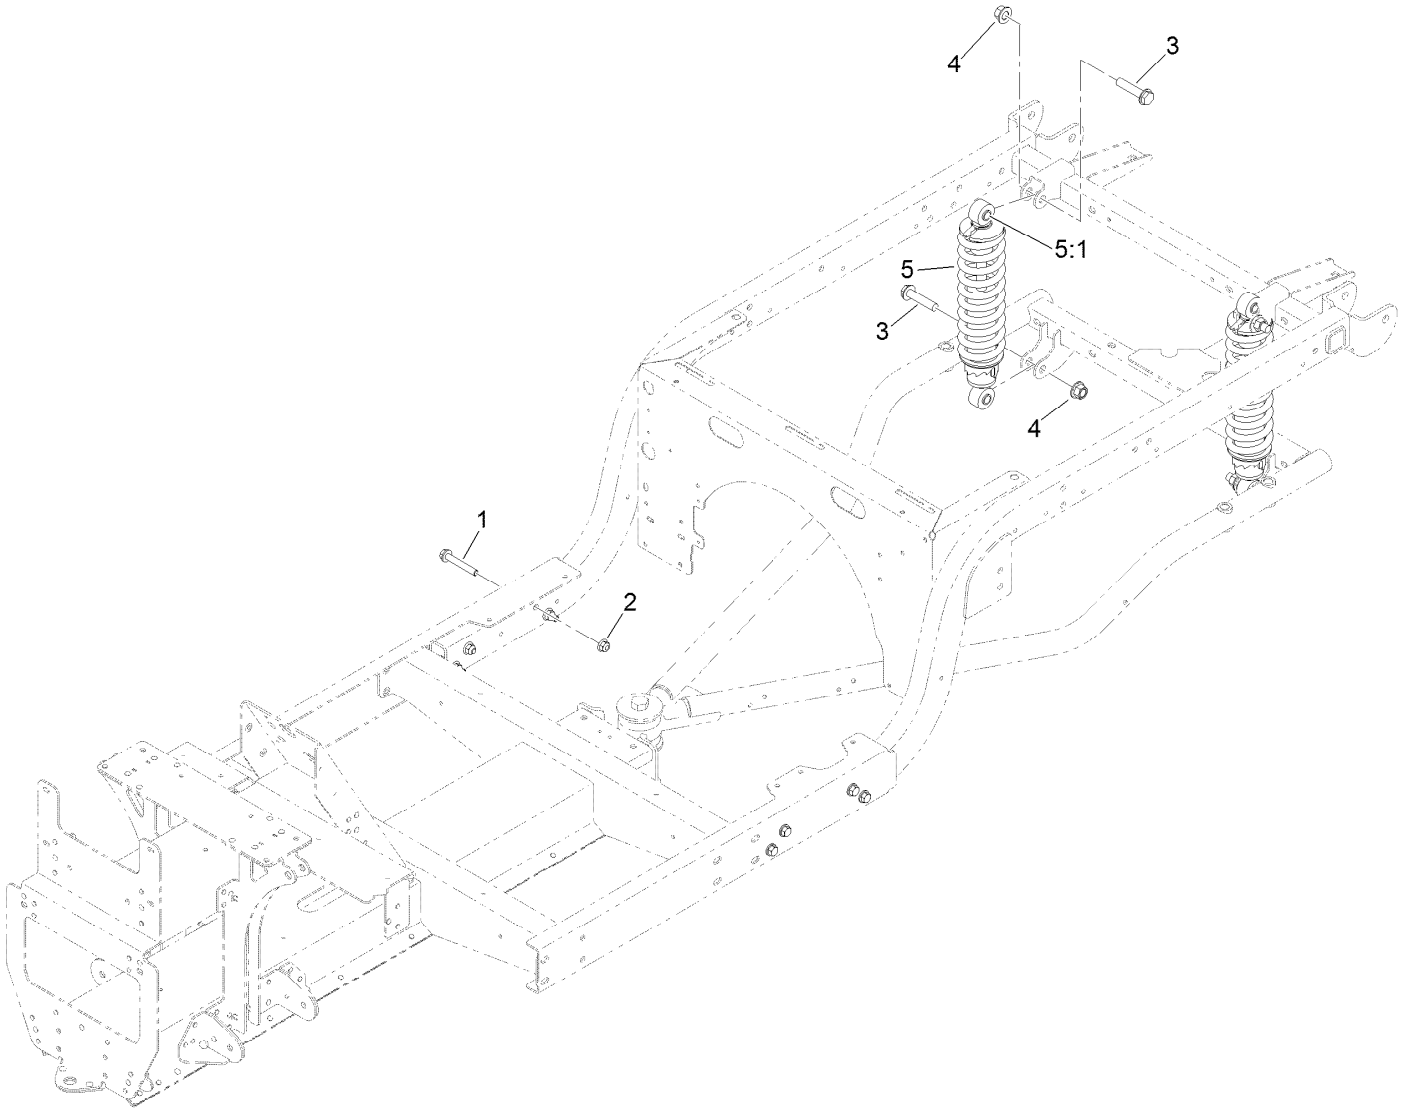


# Frame Mount and Rear Shock/Spring Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 3234-39 | 8 | Screw-HHF |
| 2 | 104-8301 | 8 | Nut-HF, NI |
| 3 | 3234-46 | 4 | Screw-HHF |
| 4 | 99-5107 | 4 | Nut-Lock |
| 5 | 131-3455 | 2 | Shock/Spring ASM |
| 5:1 | 131-8574 | 2 | Isolator-Shock |

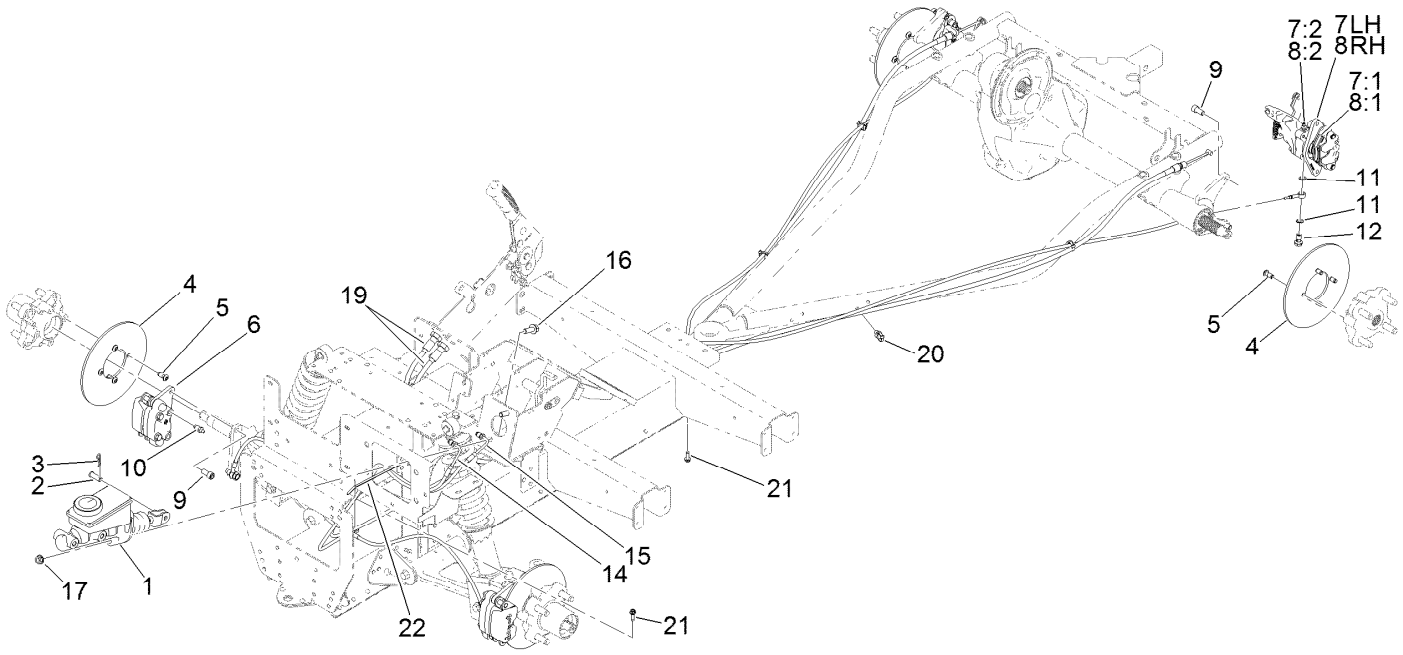



# Brake Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 104-6782 | 1 | Master Cylinder ASM |
| 2 | 283-2 | 1 | Pin-Clevis |
| 3 | 1-806003 | 1 | Pin-Cotter |
| 4 | 136-6295 | 4 | Rotor-Brake |
| 5 | 121-9671 | 16 | Screw-HSBH |
| 6 | 127-7424 | 2 | Brake Caliper ASM |
| 7 | 131-8313 | 1 | Caliper-Rear, LH |
| 7:1 | 131-8518 | 1 | Pad Kit (Set Of 4) |
| 7:2 | 119-9509 | 1 | Screw-Bleed |
| 7:3 | 136-6328 | 2 | Spring-Rattle, Anti ● |
| 8 | 131-8314 | 1 | Caliper-Rear, RH |
| 8:1 | 131-8518 | 1 | Pad Kit (Set Of 4) |
| 8:2 | 119-9509 | 1 | Screw-Bleed |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 8:3 | 136-6328 | 2 | Spring-Rattle, Anti ● |
| 9 | 131-8573 | 8 | Screw-HSH |
| 10 | 119-9509 | 2 | Screw-Bleed |
| 11 | 115-2341 | 8 | Washer-Banjo |
| 12 | 120-4875 | 4 | Bolt-Flange, Banjo |
| 14 | 127-7781 | 1 | Brake Line-Front |
| 15 | 127-7782 | 1 | Brake Line-Rear |
| 16 | 3234-11 | 2 | Screw-HHF |
| 17 | 3290-357 | 2 | Nut-HHF, Whiz |
| 19 | 131-8406 | 2 | Cable-Park Brake |
| 20 | 32180-030 | 4 | Clip-Tie |
| 21 | 49-2040 | 2 | Screw-HWHTF |
| 22 | 3290-378 | 1 | Tie-Cable |

● Not illustrated

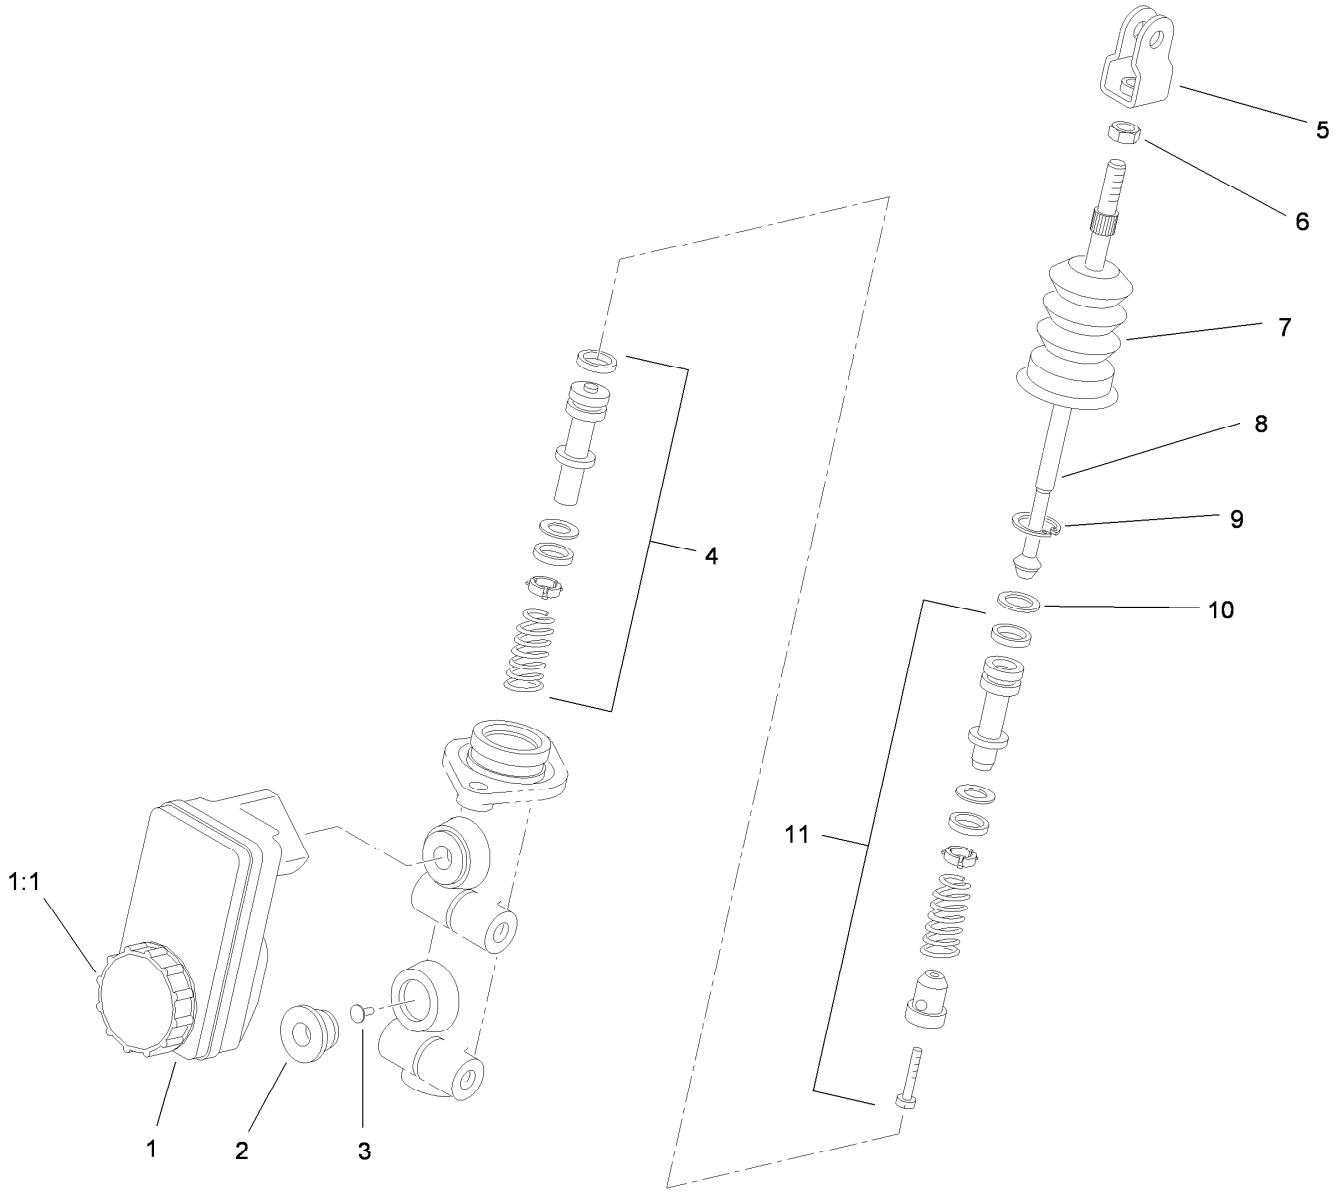



# Master Cylinder Assembly No. 104-6782

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 104-6845 | 1 | Reservoir ASM |
| 1:1 | 92-4112 | 1 | Cap ASM |
| 2 | 93-8971 | 2 | Seal-Port, Flange |
| 3 | 92-4103 | 1 | Pin-Stop |
| 4 | 92-4102 | 1 | Secondary Piston ASM |
| 5 | 92-4110 | 1 | Clevis |
| 6 | 21-0360 | 1 | Nut-Hex |
| 7 | 94-5209 | 1 | Cover-Dust |
| 8 | 94-5210 | 1 | Rod-Push |
| 9 | 92-4109 | 1 | Ring-Snap |
| 10 | 92-4108 | 1 | Retainer-Washer |
| 11 | 92-4101 | 1 | Primary Piston ASM |

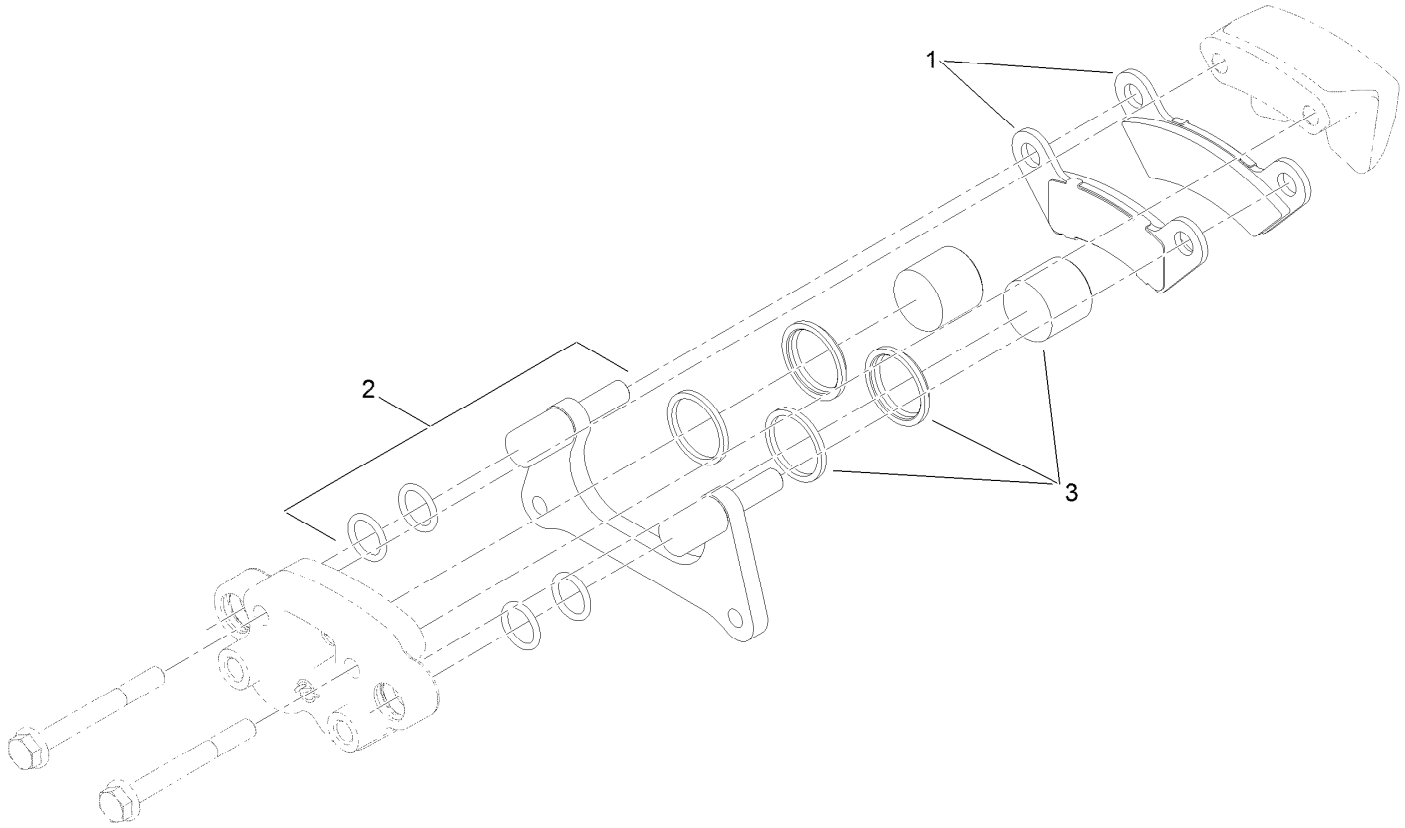


# Brake Caliper Assembly No. 127-7424


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 119-9510 | 1 | Pads-Brake |
| 2 | 119-9511 | 1 | Bracket Kit |
| 3 | 133-0614 | 1 | Piston Kit |

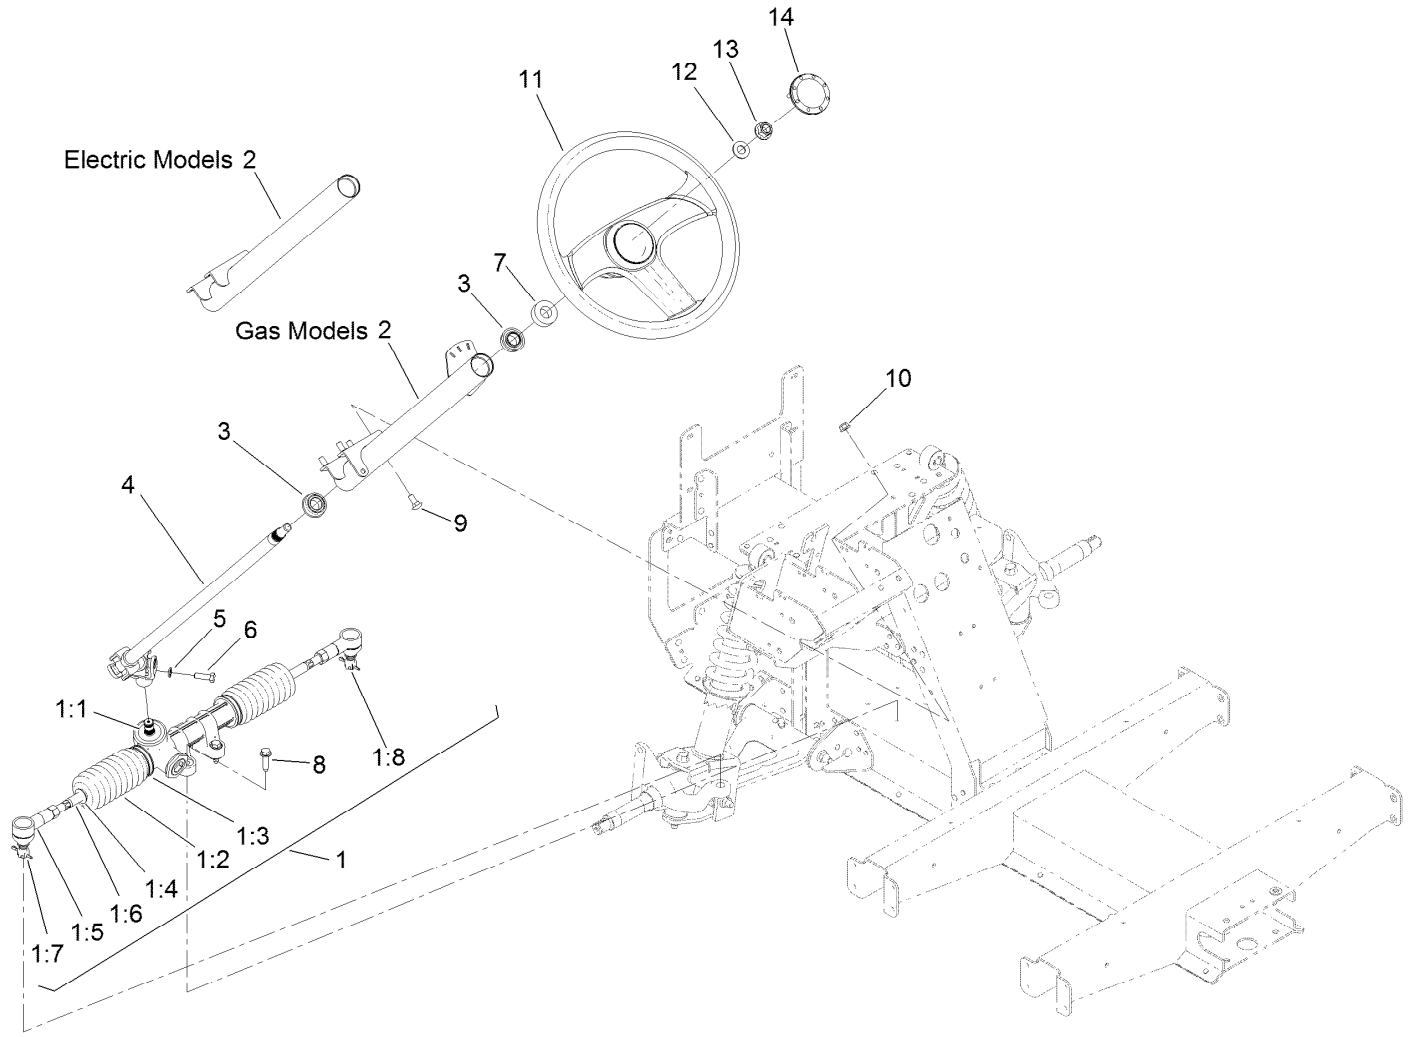


# Steering Assembly


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 127-8797 | 1 | Steering Rack ASM |
| 1:1 | 133-0607 | 1 | Seal-Shaft |
| 1:2 | 133-0606 | 2 | Bellows |
| 1:3 | 133-0605 | 2 | Clamp-Bellows, Inner |
| 1:4 | 133-0604 | 2 | Clamp-Bellows, Outer |
| 1:5 | 133-0602 | 2 | End-Rod, Track |
| 1:6 | 133-0601 | 2 | Rod-Tie, Track |
| 1:7 | 3272-42 | 2 | Pin-Cotter |
| 1:8 | 137-9891 | 2 | Nut-Slotted, Ball Joint |
| 2 | 127-8799-03 | 1 | Steering Column ASM |
| 3 | 112-3262 | 2 | Bearing |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 4 | 127-8804 | 1 | Shaft-Steering |
| 5 | 3253-4 | 1 | Washer-Lock |
| 6 | 116-3515 | 1 | Screw-HH, Special |
| 7 | 21-9260 | 1 | Cover-Dust |
| 8 | 32144-49 | 4 | Screw-HWHTF |
| 9 | 3230-1 | 4 | Bolt-CARR |
| 10 | 104-8300 | 4 | Nut-HF, NI |
| 11 | 131-0957 | 1 | Wheel-Steering |
| 12 | 3256-26 | 1 | Washer-Flat |
| 13 | 99-5107 | 1 | Nut-Lock |
| 14 | 131-3630 | 1 | Cap-Wheel, Steering |

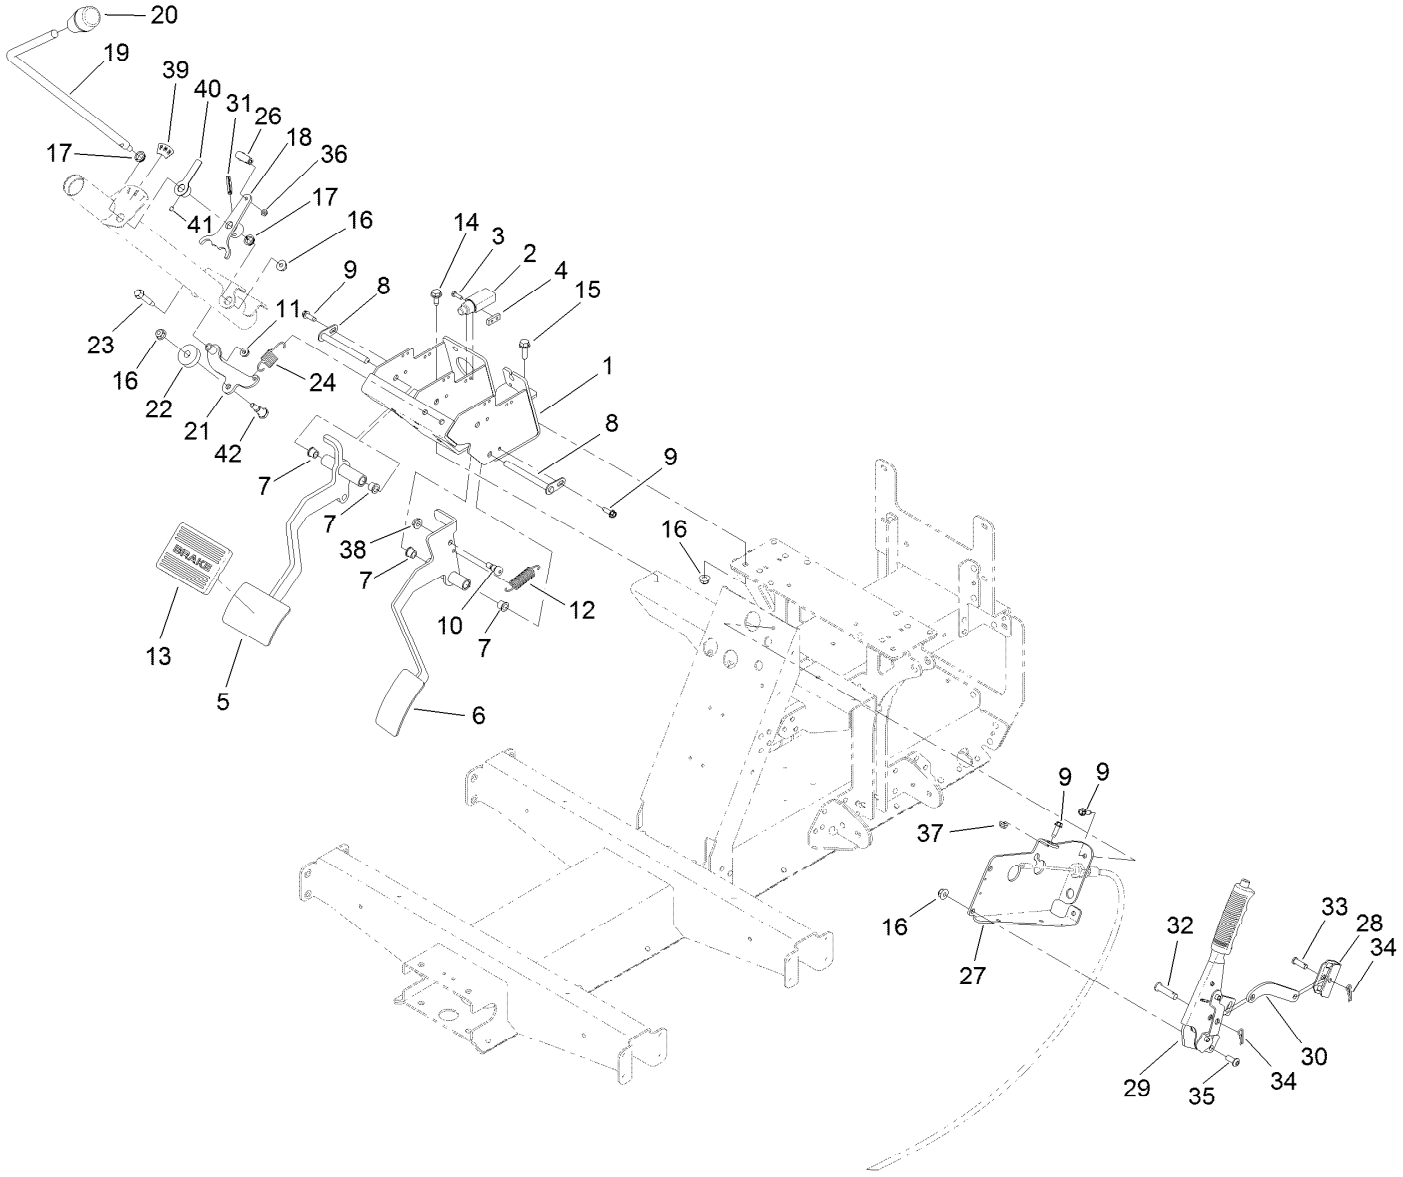



# Pedal and Control Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 127-8817-03 | 1 | Mount-Pedal |
| 2 | 99-7407 | 1 | Switch |
| 3 | 3290-134 | 2 | Screw |
| 4 | 1-633181 | 1 | Plate-Tapped |
| 5 | 127-8818-03 | 1 | Pedal-Brake |
| 6 | 127-8819-03 | 1 | Pedal-Accelerator |
| 7 | 256-116 | 4 | Bushing-Flange |
| 8 | 131-8459 | 2 | Shaft-Pivot |
| 9 | 49-2040 | 5 | Screw-HWHTF |
| 10 | 1-809056 | 1 | Screw-HSH |
| 11 | 32128-33 | 1 | Nut-HF |
| 12 | 67-1450 | 1 | Spring-Idler |
| 13 | 7-3900 | 1 | Pad-Brake |
| 14 | 32144-70 | 2 | Screw-HWHTF |
| 15 | 3234-29 | 1 | Screw-HHF |
| 16 | 104-8300 | 5 | Nut-HF, NI |
| 17 | 110-3318 | 2 | Bushing-Snap |
| 18 | 127-8833 | 1 | Arm-Shift |
| 19 | 127-8830 | 1 | Shaft-Shifter |
| 20 | 131-8473 | 1 | Knob-Tapered |
| 21 | 133-7214 | 1 | Arm-Detent |
| 22 | 133-7212 | 1 | Bushing-Detent, Shift |
| 23 | 116-6876 | 1 | Screw-Shoulder |
| 24 | 131-8419 | 1 | Spring-Extension |
| 26 | 2411-38 | 1 | Joint-Ball |
| 27 | 127-8834-03 | 1 | Mount-Brake, Park |
| 28 | 87-3480 | 1 | Bracket-Equalizer, Cable |
| 29 | 131-8320 | 1 | Lever-Brake, Park |
| 30 | 127-8836-03 | 1 | Link-Brake, Park |
| 31 | 32121-9 | 1 | Pin-Roll, Slotted |
| 32 | 283-10 | 1 | Pin-Clevis |
| 33 | 1-808280 | 1 | Pin-Clevis |
| 34 | 1-806003 | 2 | Pin-Cotter |
| 35 | 3274-55 | 2 | Screw-HSBH |
| 36 | 3296-27 | 1 | Nut-Lock, NI |
| 37 | 104-7201 | 1 | Nut-HF |
| 38 | 32128-20 | 1 | Nut-HF |
| 39 | 131-8463 | 1 | Decal-Shift |
| 40 | 131-8462-01 | 1 | Indicator-Shift |
| 41 | 3245-20 | 1 | Screw-HSH |
| 42 | 613529 | 1 | Screw-Shoulder |

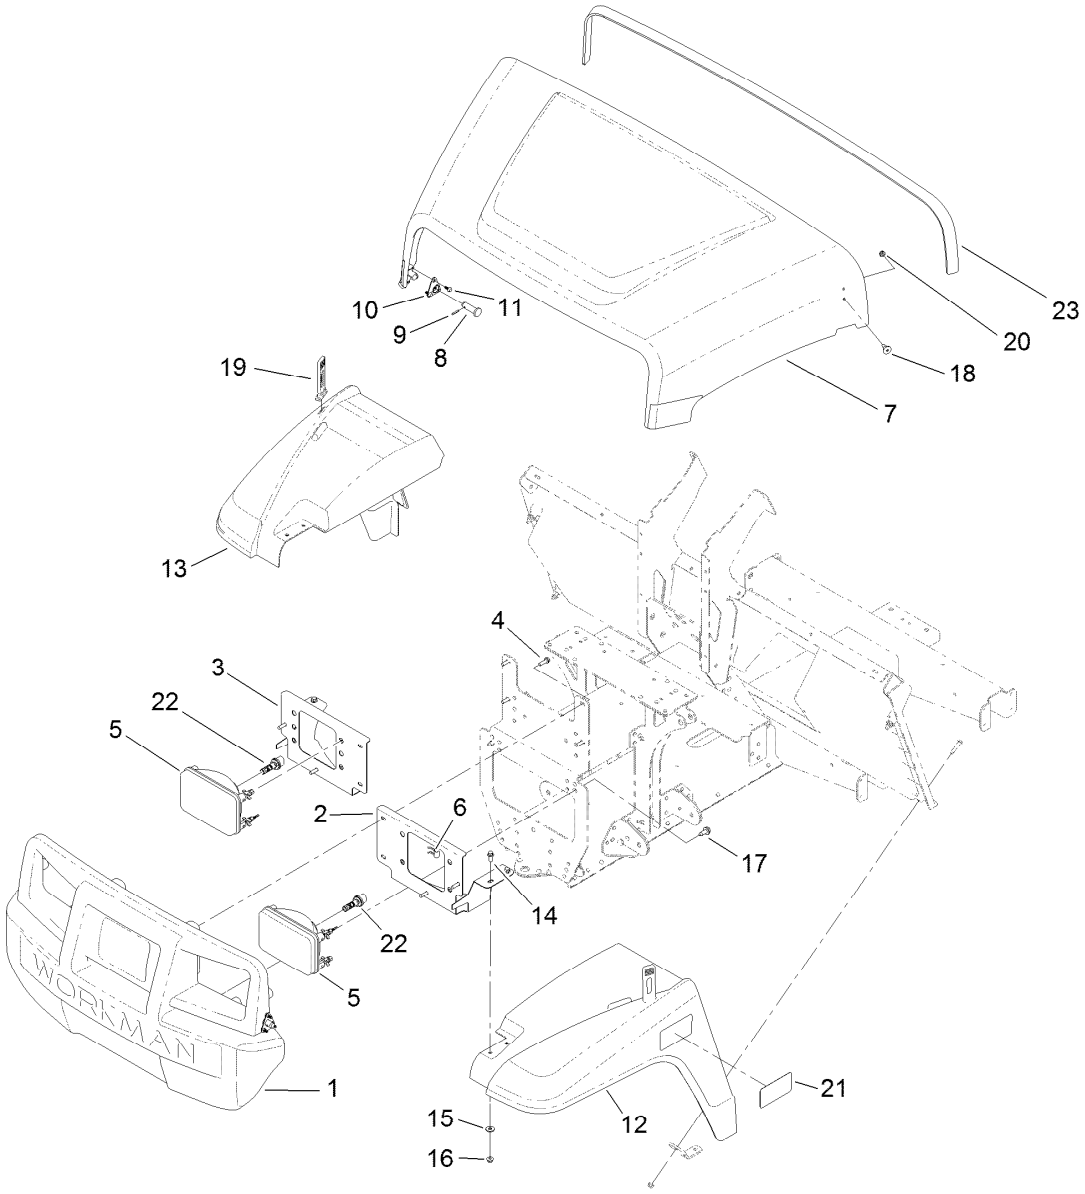


# Hood and Fender Assembly


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 132-8530 | 1 | Bumper |
| 2 | 131-8455-03 | 1 | Bracket-Headlight, LH |
| 3 | 131-8456-03 | 1 | Bracket-Headlight, RH |
| 4 | 46-8091 | 8 | Screw-HWH |
| 5 | 136-6318 | 2 | Housing-Headlight, 12V |
| 6 | 115-2408 | 6 | Clip-Speed |
| 7 | 136-6281 | 1 | Hood |
| 8 | 117-5094 | 2 | Pin-Clevis |
| 9 | 32121-50 | 2 | Pin-Spring |
| 10 | 112-3308 | 2 | Retainer-Pin |
| 11 | 121-9605 | 6 | Screw-HWH |
| 12 | 127-7771 | 1 | Fender-Front, LH |
| 13 | 127-7772 | 1 | Fender-Front, RH |
| 14 | 3234-33 | 4 | Screw-HHF |
| 15 | 3256-2 | 4 | Washer-Flat |
| 16 | 104-7201 | 4 | Nut-HF |
| 17 | 32144-70 | 2 | Screw-HWHTF |
| 18 | 125-1122 | 2 | Screw |
| 19 | 131-8402 | 2 | Strap-Hold Down |
| 20 | 3296-56 | 2 | Nut-Lock, NI |
| 21 | 138-3527 | 2 | Decal-Fender |
| 22 | 133-0574 | 2 | Bulb-LED |
| 23 | 133-7210 | 1 | Seal-Trim, Hood |

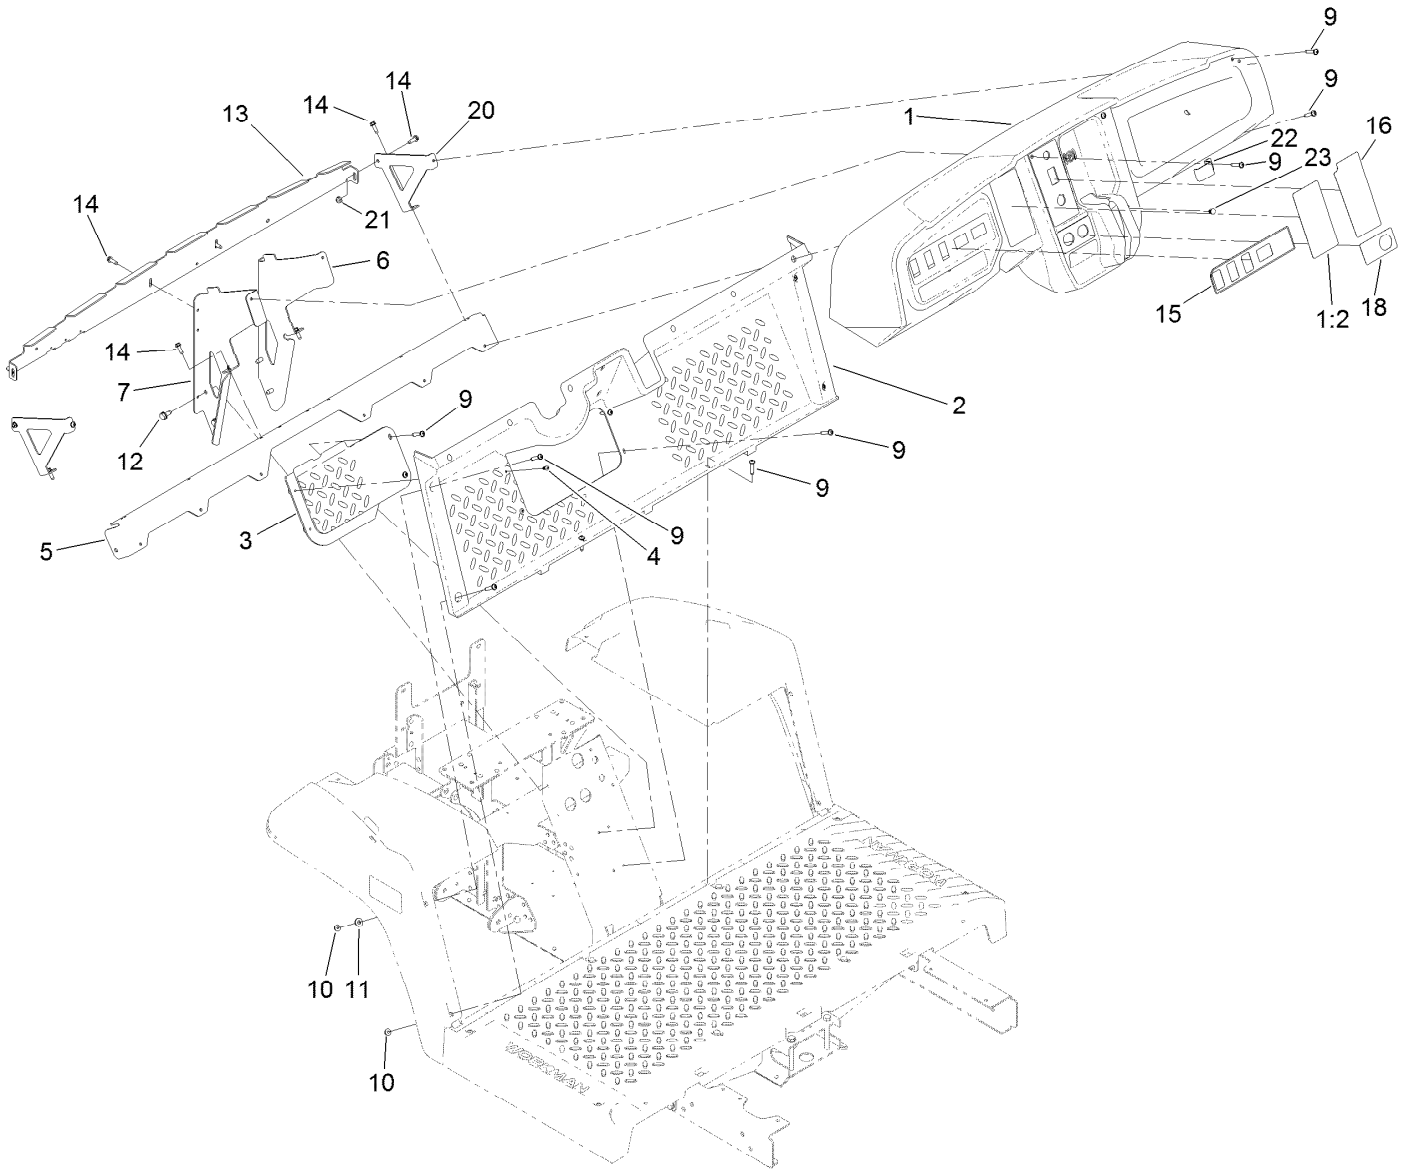


# Dash Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 131-8593 | 1 | Dash |
| 1:2 | 131-8414 | 1 | Decal-Danger |
| 2 | 127-7846 | 1 | Footboard |
| 3 | 127-7847 | 1 | Cover-Footboard |
| 4 | 107-7461 | 2 | Screw-Plastite |
| 5 | 127-7831-03 | 1 | Angle |
| 6 | 131-8336-03 | 1 | Bracket-Dash, RH |
| 7 | 131-8335-03 | 1 | Bracket-Dash, LH |
| 9 | 132-6777 | 20 | Screw-TTH |
| 10 | 104-7201 | 4 | Nut-HF |
| 11 | 3256-2 | 2 | Washer-Flat |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 12 | 32144-70 | 4 | Screw-HWHTF |
| 13 | 131-8568-03 | 1 | Reinforcement-Dash |
| 14 | 49-2040 | 8 | Screw-HWHTF |
| 15 | 138-3524 | 1 | Decal-Dashboard |
| 16 | 138-3397 | 1 | Decal-Control Panel, EFI |
| 18 | 131-8493 | 1 | Decal-USB |
| 20 | 131-8569-03 | 2 | Bracket-Dash, Side |
| 21 | 104-7201 | 2 | Nut-HF |
| 22 | 133-7111-03 | 1 | Bracket-Mount, Radio |
| 23 | 104-9368 | 1 | Plug-Dome |

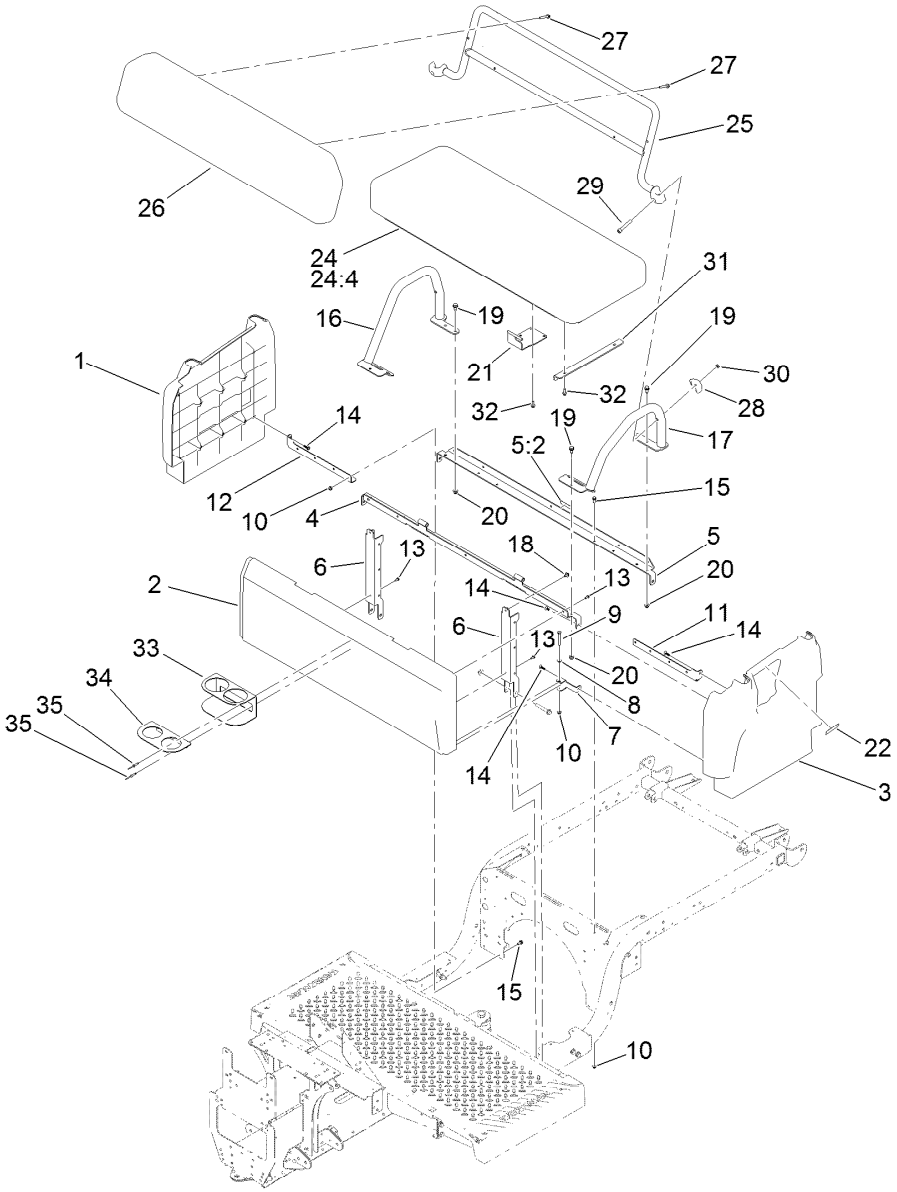


# Seatbase Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 127-7805 | 1 | Side-Base, Seat (RH) |
| 2 | 133-7188 | 1 | Panel-Base, Seat |
| 3 | 127-7807 | 1 | Side-Base, Seat (LH) |
| 4 | 133-7345-03 | 1 | Support-Seat |
| 5 | 137-6991 | 1 | Seat Support ASM |
| 5:2 | 120-9570 | 1 | Decal-Warning |
| 6 | 127-7841-03 | 2 | Channel-Support, Seat |
| 7 | 127-7844-03 | 2 | Clamp-Plate, Floor |
| 8 | 3256-22 | 2 | Washer-Flat |
| 9 | 321-18 | 2 | Screw-HH |
| 10 | 104-7201 | 8 | Nut-HF |
| 11 | 127-7842-03 | 1 | Bracket-Support, Side (LH) |
| 12 | 127-7843-03 | 1 | Bracket-Support, Side (RH) |
| 13 | 112-6349 | 5 | Screw-HWH |
| 14 | 120-2349 | 8 | Screw |
| 15 | 3234-33 | 6 | Screw-HHF |
| 16 | 131-8352-05 | 1 | Restraint-Hip, RH |
| 17 | 131-8353-05 | 1 | Restraint-Hip, LH |
| 18 | 46-6810 | 2 | Screw And Washer ASM |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 19 | 32144-70 | 6 | Screw-HWHTF |
| 20 | 104-8300 | 6 | Nut-HF, NI |
| 21 | 133-7167-03 | 2 | Bracket-Hinge, Seat |
| 22 | 131-8410 | 1 | Decal-Danger, Fuel |
| 24 | 138-0055 | 1 | Bench Seat Bottom ASM |
| 24:4 | 133-7121 | 1 | Cover-Cushion, Bottom |
| 25 | 133-3079-05 | 1 | Back Rest |
| 26 | 138-0053 | 1 | Bench Seat Back Rest ASM |
| 27 | 32105-18 | 6 | Screw-HHF |
| 28 | 132-8586-05 | 2 | Casting-Mount, Bench Seat (Back) |
| 29 | 131-8591 | 2 | Screw-HSH |
| 30 | 3296-59 | 2 | Nut-Lock, NI |
| 31 | 133-7186-03 | 2 | Bracket-Support, Bench Seat |
| 32 | 3234-4 | 8 | Screw-HHF |
| 33 | 133-7122-05 | 1 | Bracket-Holder, Cup |
| 34 | 133-7133-05 | 1 | Bracket-Divider, Cup Holder |
| 35 | 133-7130 | 4 | Rivet-Pop |

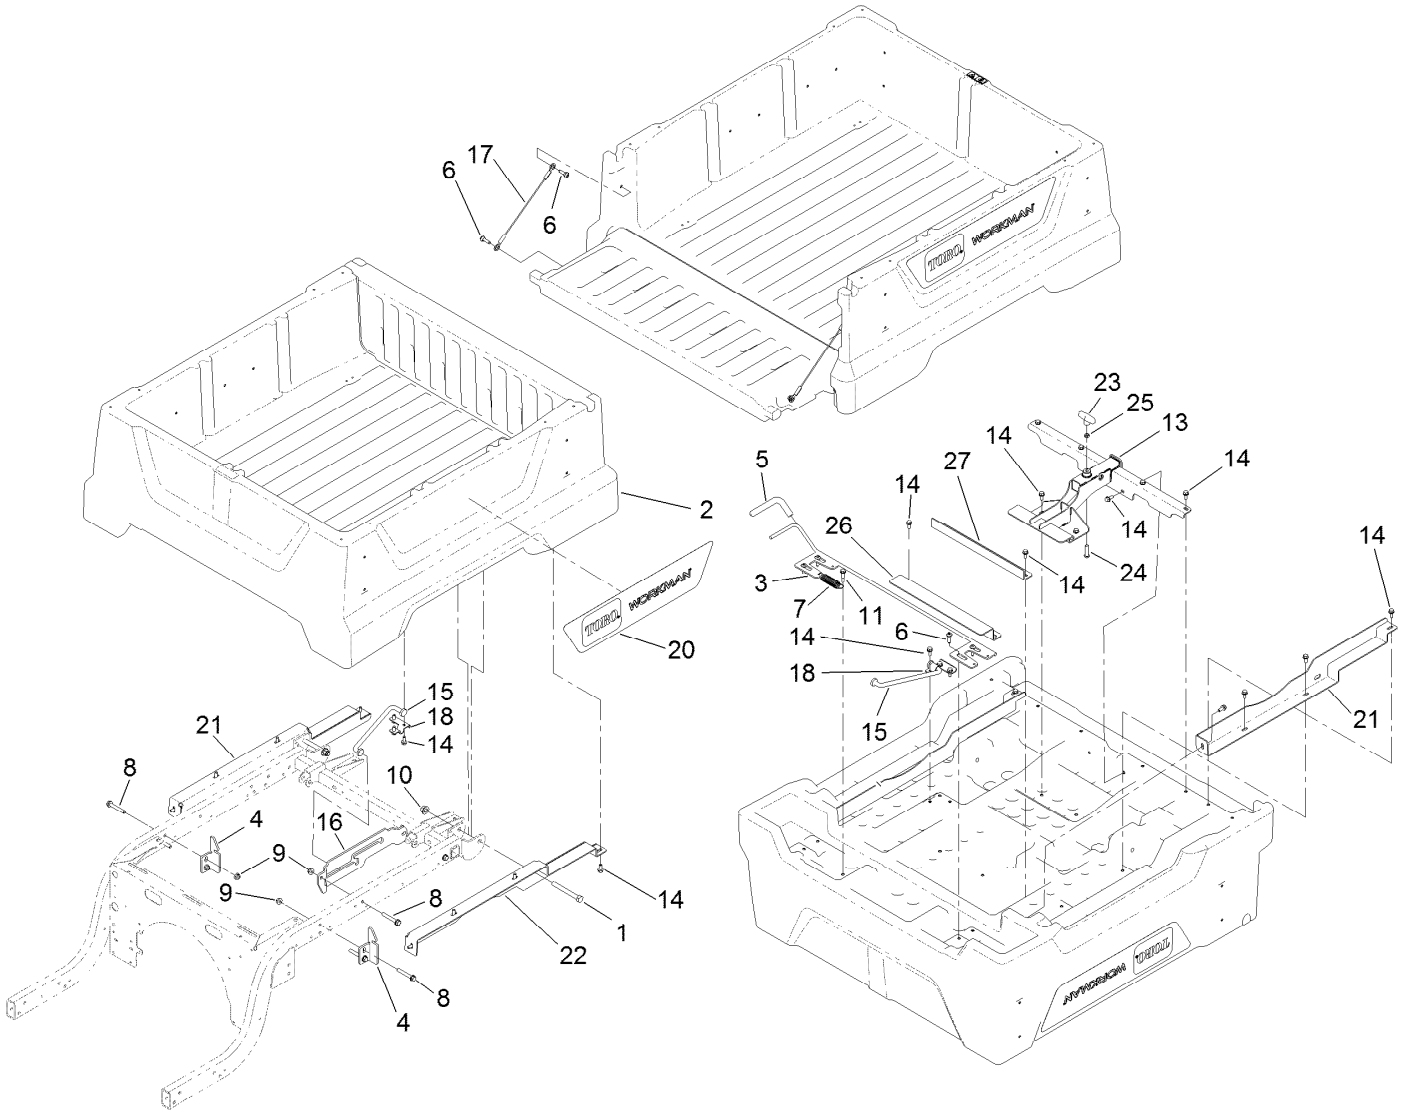


# Cargo Bed Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 325-18 | 2 | Screw-HH |
| 2 | 131-8592 | 1 | Cargo Bed And Tailgate ASM |
| 3 | 132-8524 | 1 | Latch |
| 4 | 127-7428-03 | 2 | Striker-Latch, Bed |
| 5 | 132-8515 | 1 | Grip-Handle |
| 6 | 119-2267 | 8 | Screw-Shoulder, BHTF |
| 7 | 106-5598 | 1 | Spring-Extension |
| 8 | 3234-39 | 6 | Screw-HHF |
| 9 | 104-8301 | 6 | Nut-HF, NI |
| 10 | 99-5107 | 2 | Nut-Lock |
| 11 | 116-8607 | 1 | Screw-Shoulder |
| 13 | 132-8523-03 | 1 | Attachment-Quick, Class 1 |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 14 | 3234-5 | 25 | Screw-HHF |
| 15 | 132-8517 | 1 | Rod-Prop |
| 16 | 132-8518 | 1 | Bracket-Rod, Prop |
| 17 | 121-6343 | 2 | Lanyard-Tailgate |
| 18 | 132-0839 | 1 | Bracket-U, Prop Rod |
| 20 | 132-8538 | 2 | Decal-Workman |
| 21 | 133-3042-03 | 1 | Support-Cargo Bed, RH |
| 22 | 133-3043-03 | 1 | Support-Cargo Bed, LH |
| 23 | 133-3056 | 1 | Handle-T |
| 24 | 95-3857 | 1 | Screw-HSBH |
| 25 | 3218-3 | 1 | Nut-Jam |
| 26 | 133-3099-03 | 1 | Brace-Bed, Extended |
| 27 | 132-8526-03 | 1 | Brace-Middle, Bed |

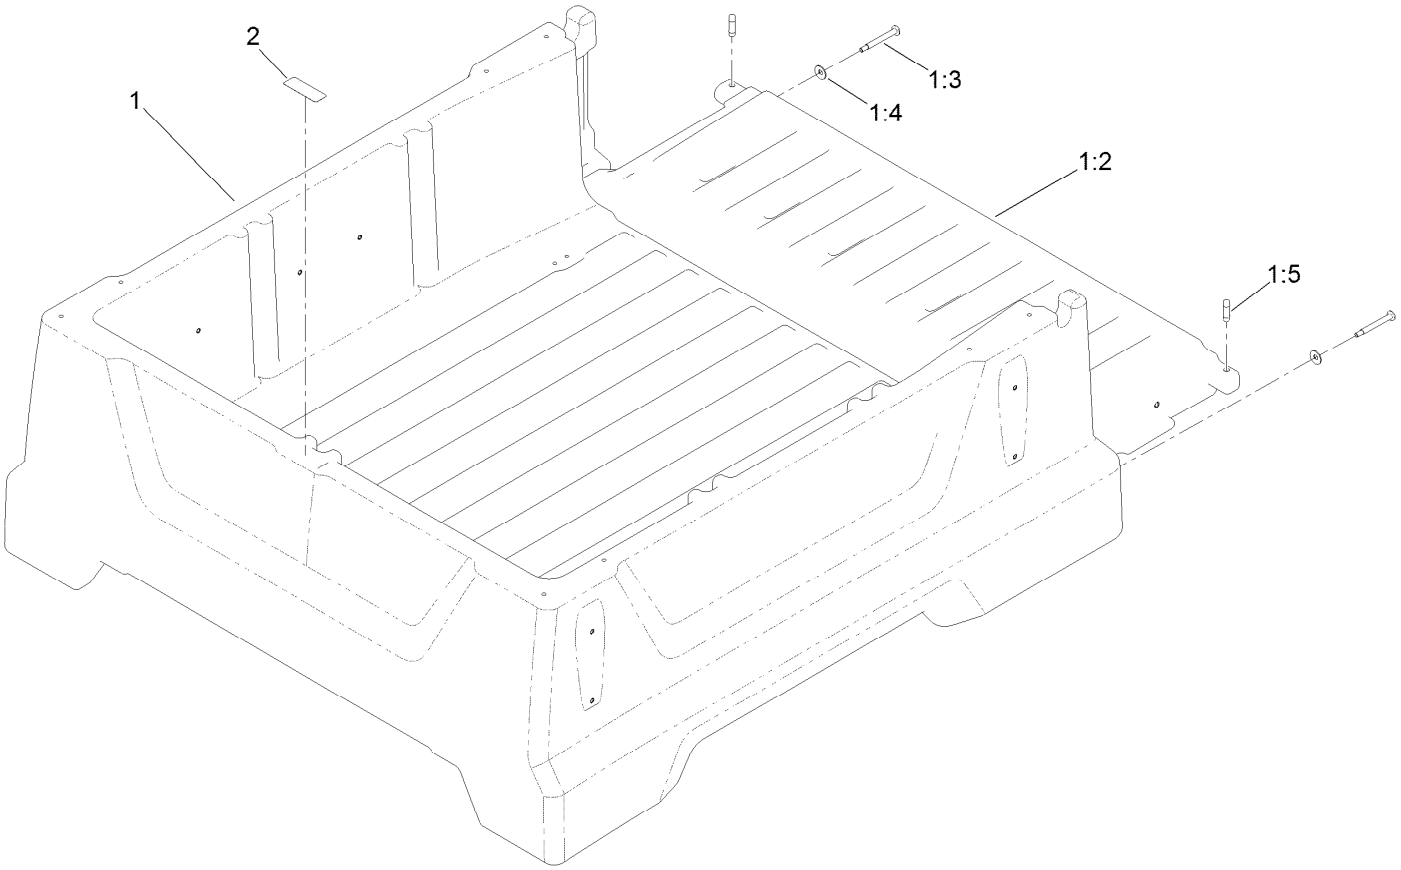


# Cargo Bed and Tailgate Assembly No. 131-8592

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | | 1 | Cargo Bed And Tailgate ASM ● |
| 1:2 | 132-0841 | 1 | Tailgate |
| 1:3 | 133-7100 | 2 | Screw-Shoulder, Bh (Torx) |
| 1:4 | 3290-456 | 2 | Washer-Belleville |
| 1:5 | 133-7146 | 2 | Plug-Tailgate, Anti-Rattle |
| 2 | 115-7739 | 1 | Decal-No Riders |


● Not serviced separately

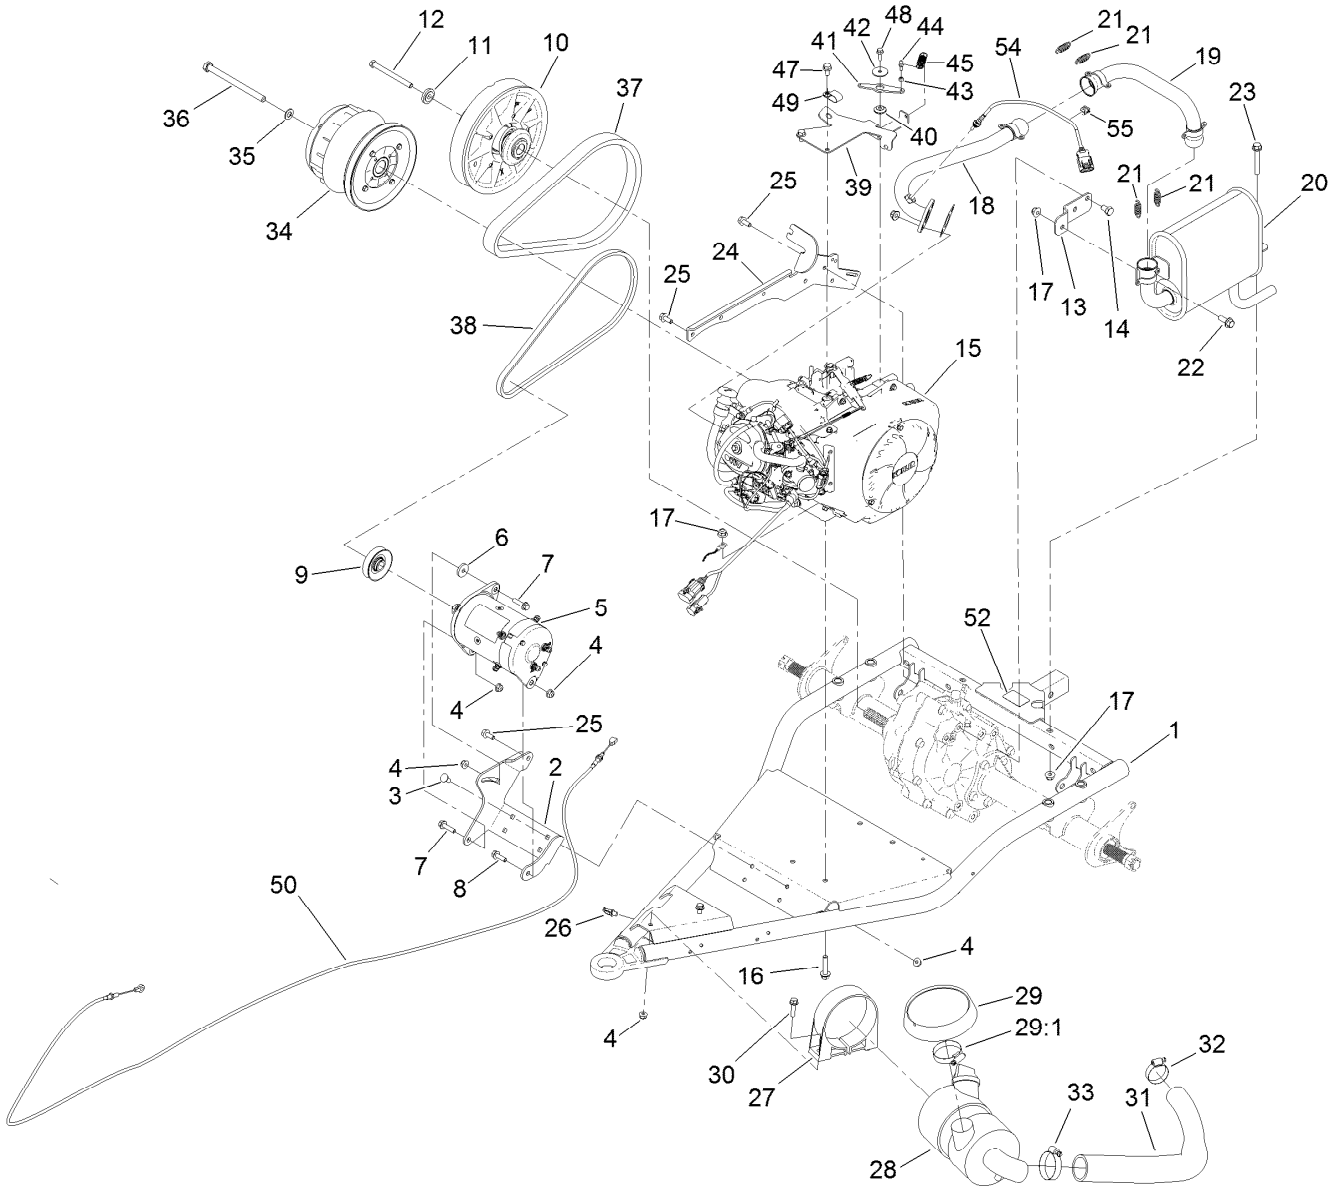


# Engine Assembly


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 131-8520-03 | 1 | Arm-Swing |
| 2 | 131-8503-03 | 1 | Bracket-Starter/Generator |
| 3 | 3230-23 | 4 | Screw-CARR |
| 4 | 104-8300 | 9 | Nut-HF, NI |
| 5 | 131-8444 | 1 | Starter/Generator ASM |
| 6 | 65-8270 | 1 | Washer |
| 7 | 119-4036 | 2 | Screw-HHF |
| 8 | 3234-29 | 1 | Screw-HHF |
| 9 | 121-6277 | 1 | Pulley-Drive |
| 10 | 119-6011 | 1 | Secondary Clutch ASM |
| 11 | 104-6563 | 1 | Washer-Stepped |
| 12 | 119-0723 | 1 | Screw-HH, Lock |
| 13 | 131-8329 | 1 | Bracket-Muffler |
| 14 | 70-8470 | 2 | Screw-HH |
| 15 | 137-9893 | 1 | Engine-Kohler, Ech440 |
| 16 | 3234-19 | 4 | Screw-HHF |
| 17 | 104-8301 | 6 | Nut-HF, NI |
| 18 | 136-6304 | 1 | Manifold-Exhaust |
| 19 | 131-8332 | 1 | Pipe-Intermediate |
| 20 | 131-8334 | 1 | Muffler |
| 21 | 104-6478 | 4 | Spring-Extension |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 22 | 3234-42 | 1 | Screw-HHF |
| 23 | 3234-39 | 1 | Screw-HHF |
| 24 | 131-8501-03 | 1 | Bar-Spanner |
| 25 | 95-4184 | 6 | Screw-HHF |
| 26 | 32180-030 | 1 | Clip-Tie |
| 27 | 95-5806 | 1 | Bracket-Mounting |
| 28 | 99-7120 | 1 | Air Cleaner ASM |
| 29 | 136-7859 | 1 | Rain Cap Kit |
| 29:1 | 1-643009 | 1 | Clamp-Hose |
| 30 | 3234-36 | 2 | Screw-HHF |
| 31 | 131-8489 | 1 | Hose-Intake, Air |
| 32 | 2412-111 | 1 | Clamp |
| 33 | 2412-92 | 1 | Clamp-Hose |
| 34 | 138-0095 | 1 | Primary Clutch ASM |
| 35 | 3256-25 | 1 | Washer-Flat |
| 36 | 131-8521 | 1 | Screw-HH |
| 37 | 131-8567 | 1 | Belt-Variable |
| 38 | 94-8803 | 1 | V-Belt, Impeller |
| 39 | 131-8505 | 1 | Bracket-Throttle |
| 40 | 131-8524 | 1 | Bushing-Flange |
| 41 | 131-8504 | 1 | Lever-Throttle |

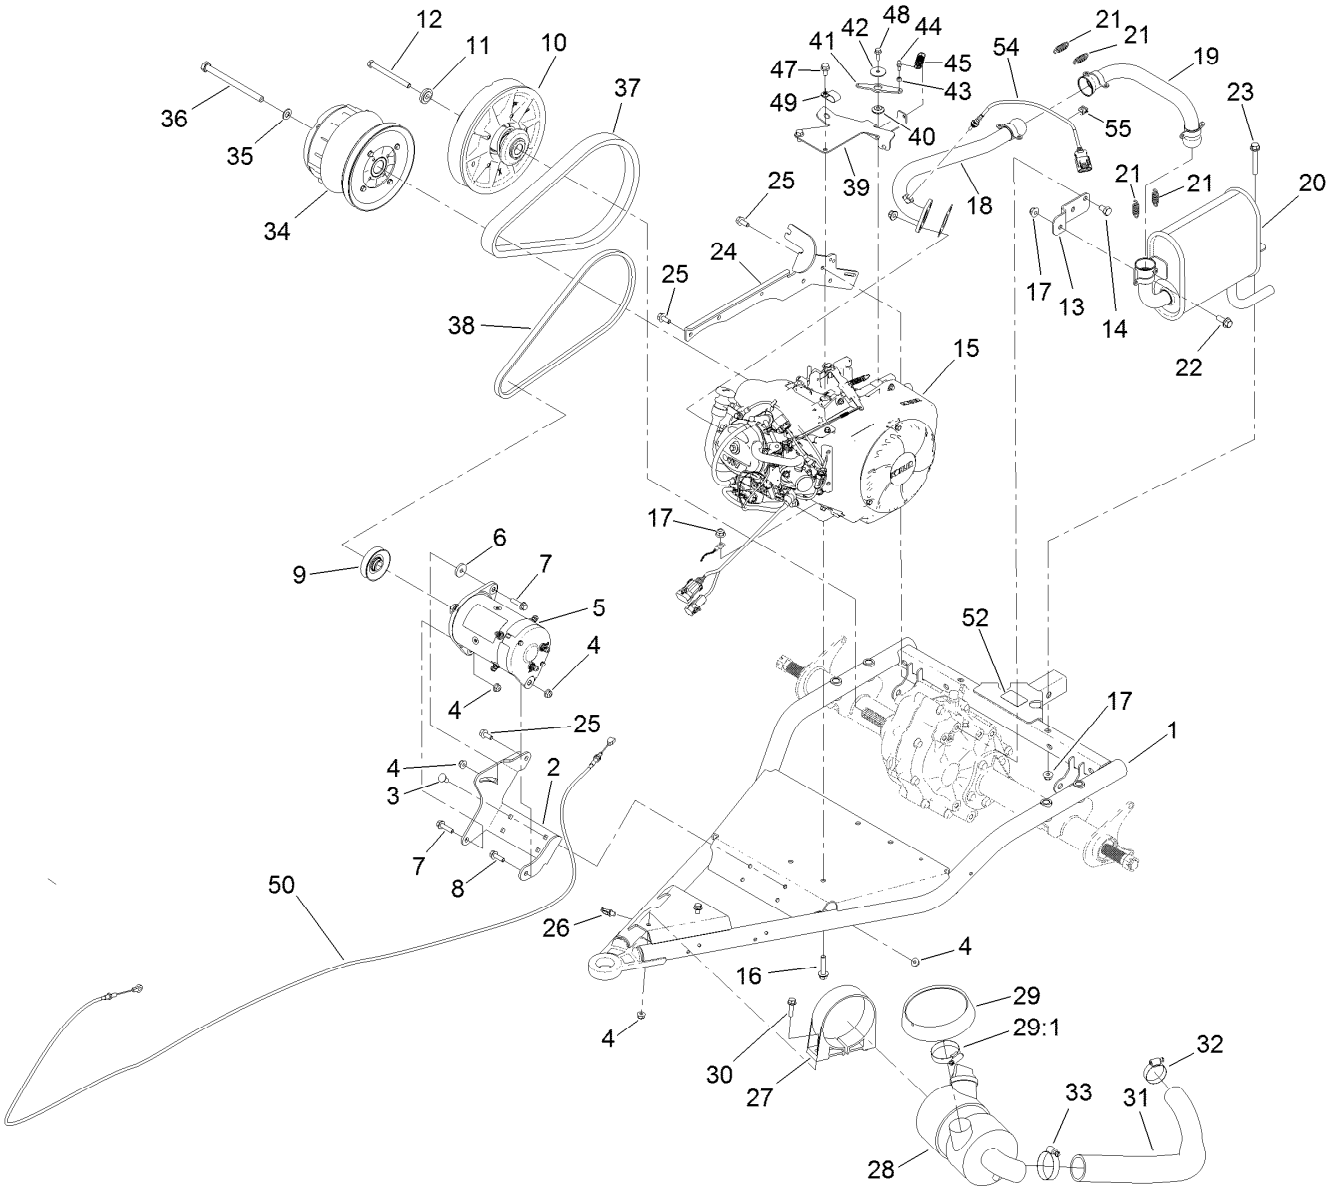


# Engine Assembly (continued)


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 42 | 3256-55 | 1 | Washer-Flat |
| 43 | 110-2619 | 1 | Keeper-Spring |
| 44 | 99-7847 | 1 | Ball-Stud |
| 45 | 71-5470 | 1 | Spring-Brake |
| 47 | 33104-016 | 2 | Screw-HHF |
| 48 | 33103-020 | 1 | Screw-HHF |
| 49 | 2412-105 | 1 | Clamp-Tube, Double |
| 50 | 127-8860 | 1 | Cable-Accelerator |
| 52 | 137-9984 | 1 | Decal-Load, Towing |
| 54 | 136-6348 | 1 | Sensor-O2 |
| 55 | 32180-226 | 1 | Clip-Edge, Parallel W/Tie |

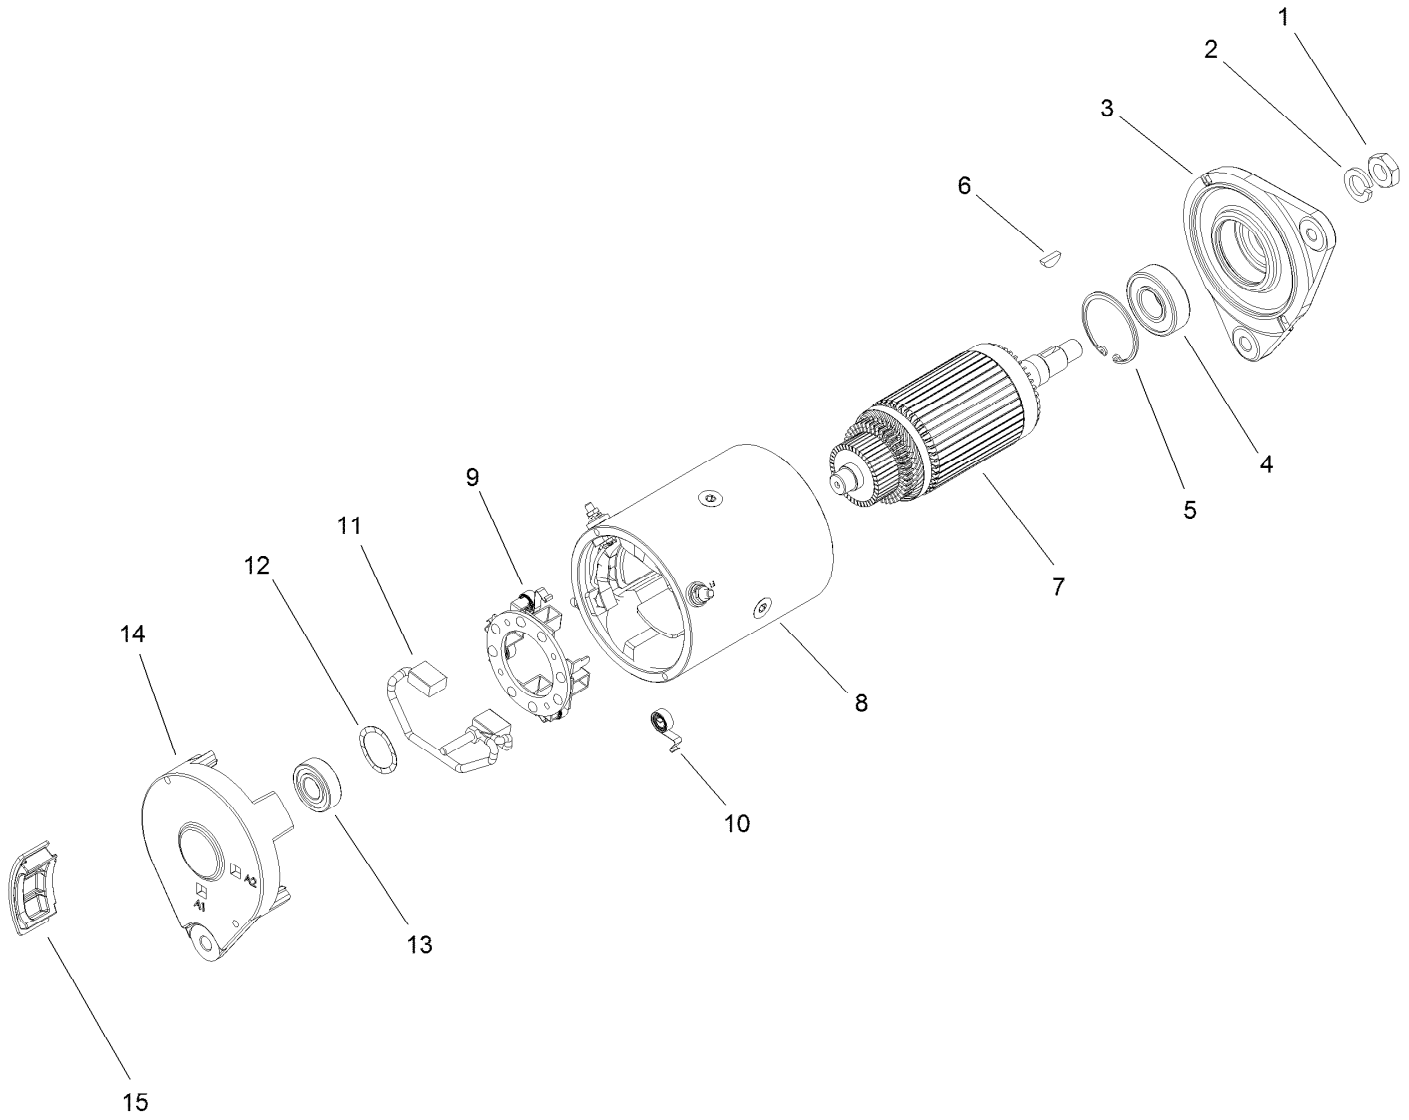


# Starter Generator Assembly No. 131-8444


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 119-9651 | 1 | Nut |
| 2 | 119-9652 | 1 | Washer-Lock |
| 3 | 133-0599 | 1 | Head-Drive End |
| 4 | 119-9655 | 1 | Bearing |
| 5 | 119-9656 | 1 | Ring-Retaining |
| 6 | 119-9657 | 1 | Key-Woodruff |
| 7 | 119-9658 | 1 | Armature ASM |
| 8 | | 1 | Frame And Field Assembly ● |
| 9 | 119-9661 | 1 | Brush Box ASM |
| 10 | 119-9660 | 4 | Spring-Brush |
| 11 | 119-9659 | 1 | Brush Lead And Terminal Service Kit |
| 12 | 119-9662 | 1 | Washer-Wave |
| 13 | 119-9663 | 1 | Bearing |
| 14 | | 1 | Head-End, Cummutator ● |
| 15 | 133-0600 | 4 | Plug-Rubber |

● Not serviced separately

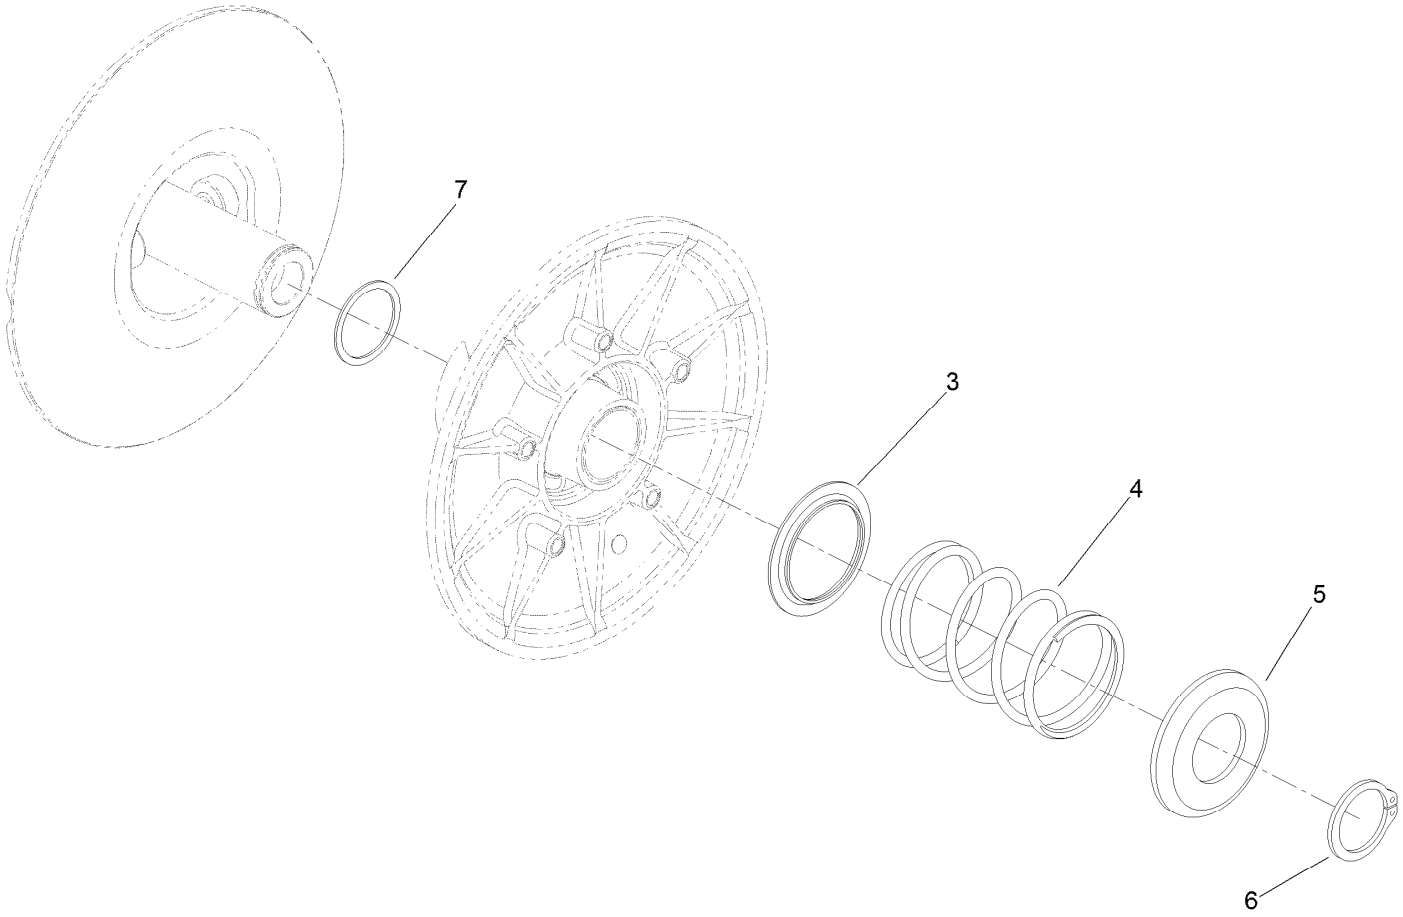


# Secondary Clutch Assembly No. 119-6011


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 3 | 119-0809 | 1 | Cup-Spring Retainer, Inner |
| 4 | 119-9360 | 1 | Spring-Compression, Black/Almond |
| 5 | 119-0810 | 1 | Cup-Spring Retainer, Outer |
| 6 | 119-0811 | 1 | Ring-Retaining |
| 7 | 119-6018 | 1 | Shim-Thrust |

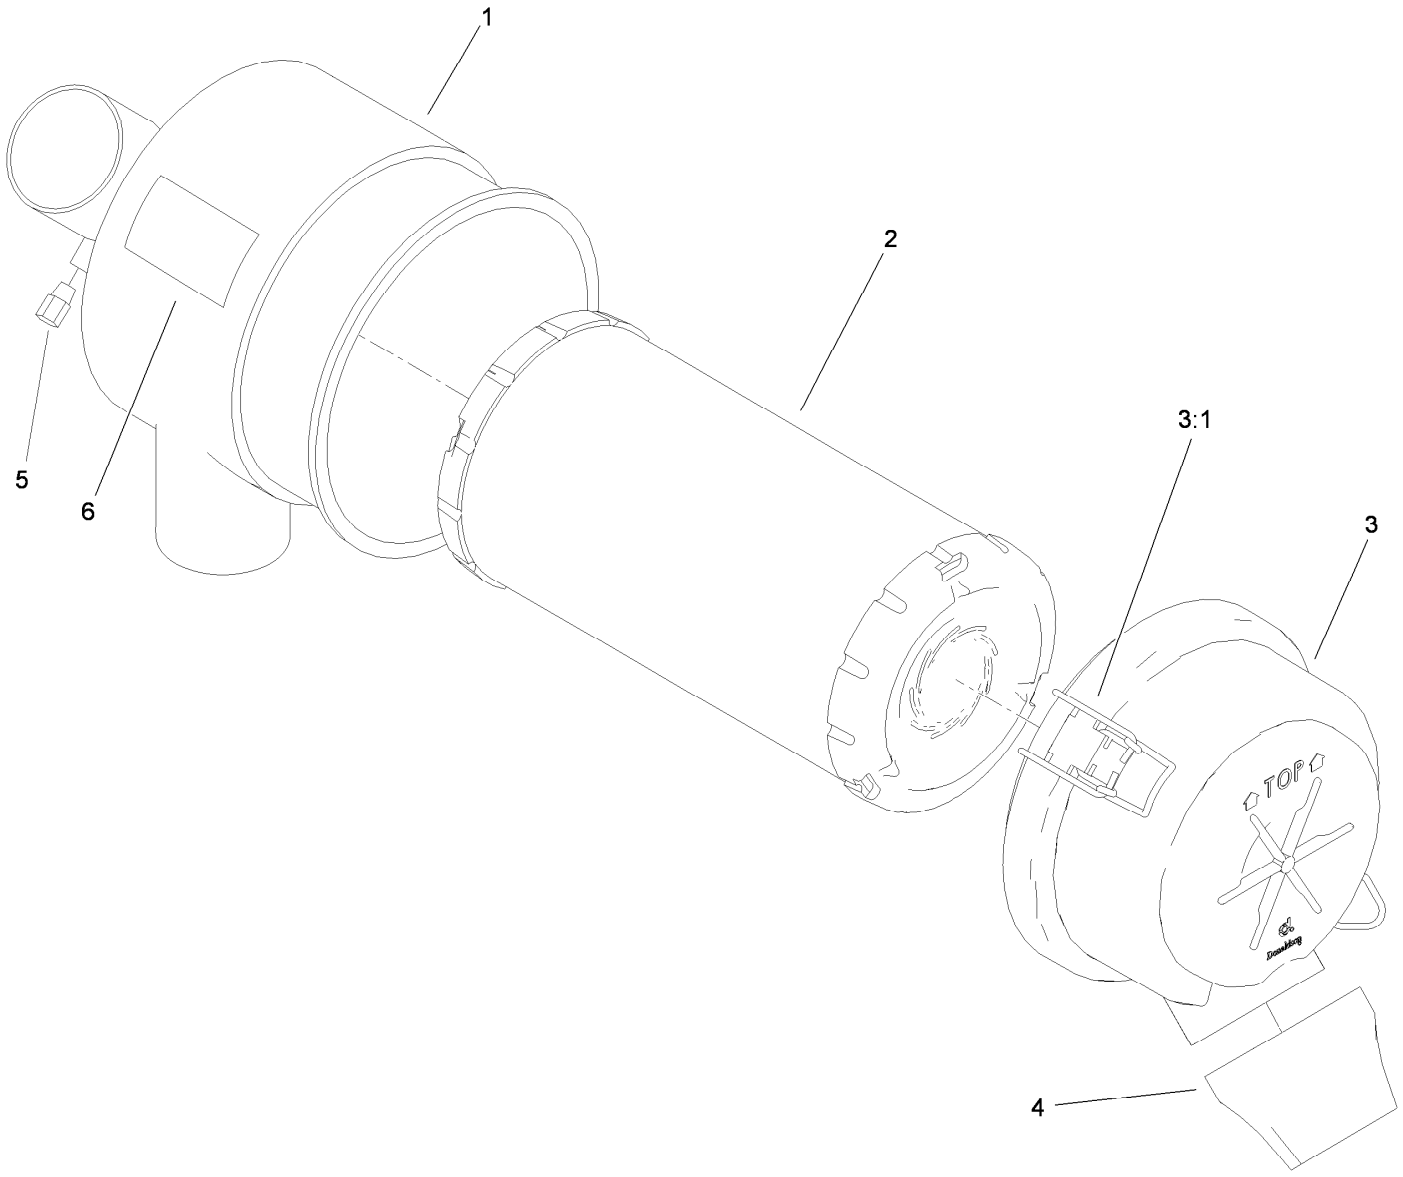


# Air Cleaner Assembly No. 99-7120

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | | 1 | Body ● |
| 2 | 108-3811 | 1 | Filter-Air |
| 3 | 94-3652 | 1 | Cover ASM |
| 3:1 | 1-643283 | 2 | Latch-Cleaner, Air |
| 4 | 87-9400 | 1 | Valve-Vacuator |
| 5 | | 1 | Plug ● |
| 6 | | 1 | Marking ● |


● Not serviced separately

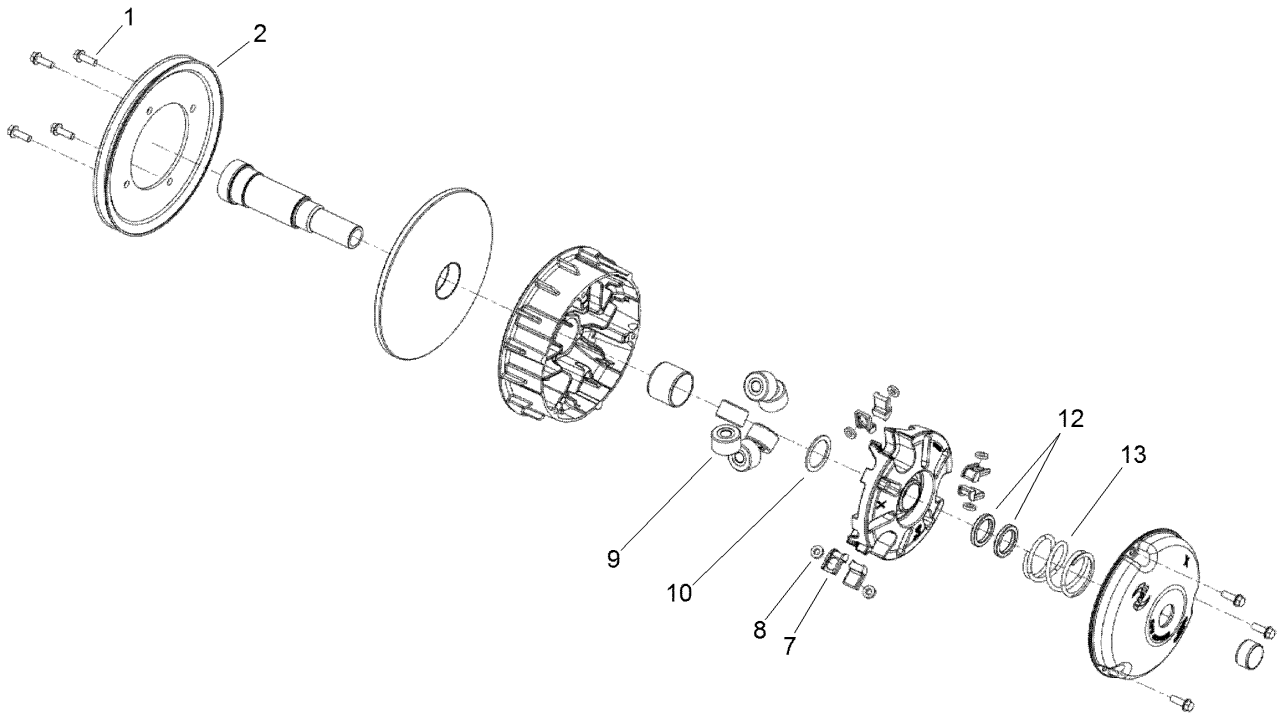


# Primary Clutch Assembly No. 138-0095

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 49-2040 | 7 | Screw-HWHTF |
| 2 | 119-0813 | 1 | Pulley-Primary |
| 7 | 127-8689 | 6 | Button-Primary, Torque |
| 8 | 127-8690 | 6 | Plug-Button, Torque |
| 9 | 119-0804 | 6 | Weight-Roller |
| 10 | 119-0812 | 1 | Shim-Spider |
| 12 | 119-0807 | 2 | Shim-Limiter |
| 13 | 119-9532 | 1 | Spring-Red/White |


# Rear Wheel and Transaxle Assembly

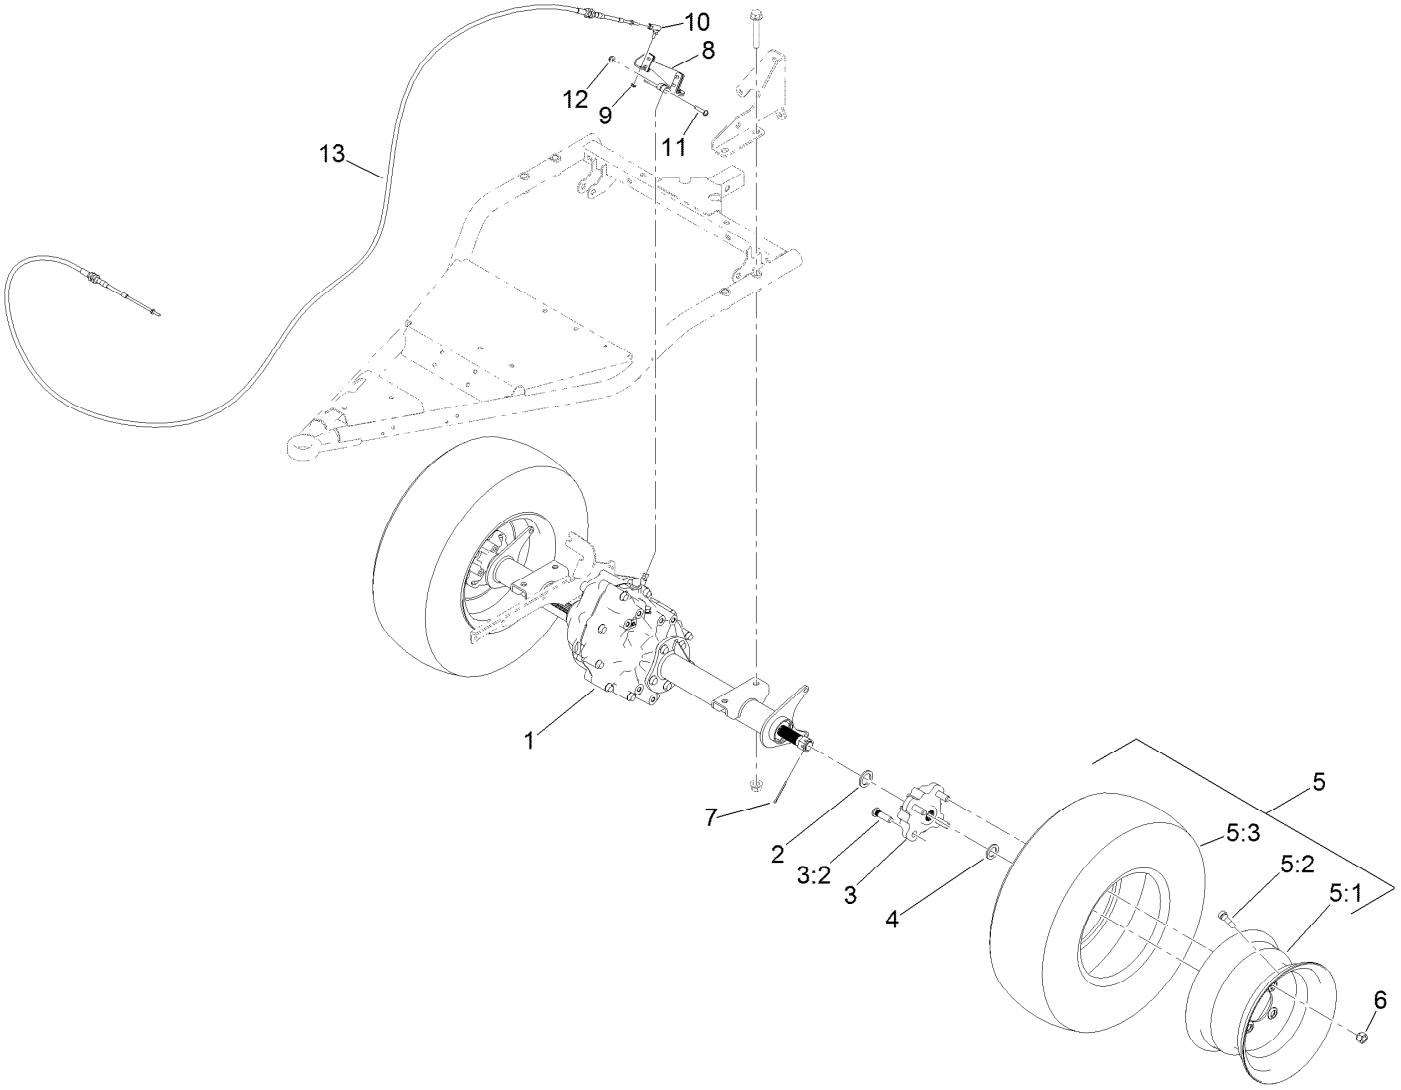

# Rear Wheel and Transaxle Assembly (continued)


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 131-3486 | 1 | Transaxle |
| 2 | 131-8570 | 2 | Spacer-Hardened |
| 3 | 127-8848 | 2 | Rear Hub ASM |
| 3:2 | 10-6830 | 4 | Stud-Type, Drive |
| 4 | 3-7898 | 2 | Washer-Thrust |
| 5 | 131-8319 | 2 | Tire/Wheel ASM |
| 5:1 | 131-8317 | 1 | Wheel |
| 5:2 | 232-27 | 1 | Stem-Valve |
| 5:3 | 131-8318 | 1 | Tire |
| 6 | 242-50 | 8 | Nut-Lug |
| 7 | 1-806800 | 2 | Pin-Cotter |
| 8 | 133-7260-03 | 1 | Arm-Shift |
| 9 | 3296-27 | 1 | Nut-Lock, NI |
| 10 | 2411-38 | 1 | Joint-Ball |
| 11 | 132-6777 | 1 | Screw-TTH |
| 12 | 104-7201 | 1 | Nut-HF |
| 13 | 127-8897 | 1 | Cable-Shift |

# Transaxle Assembly No. 131-3486

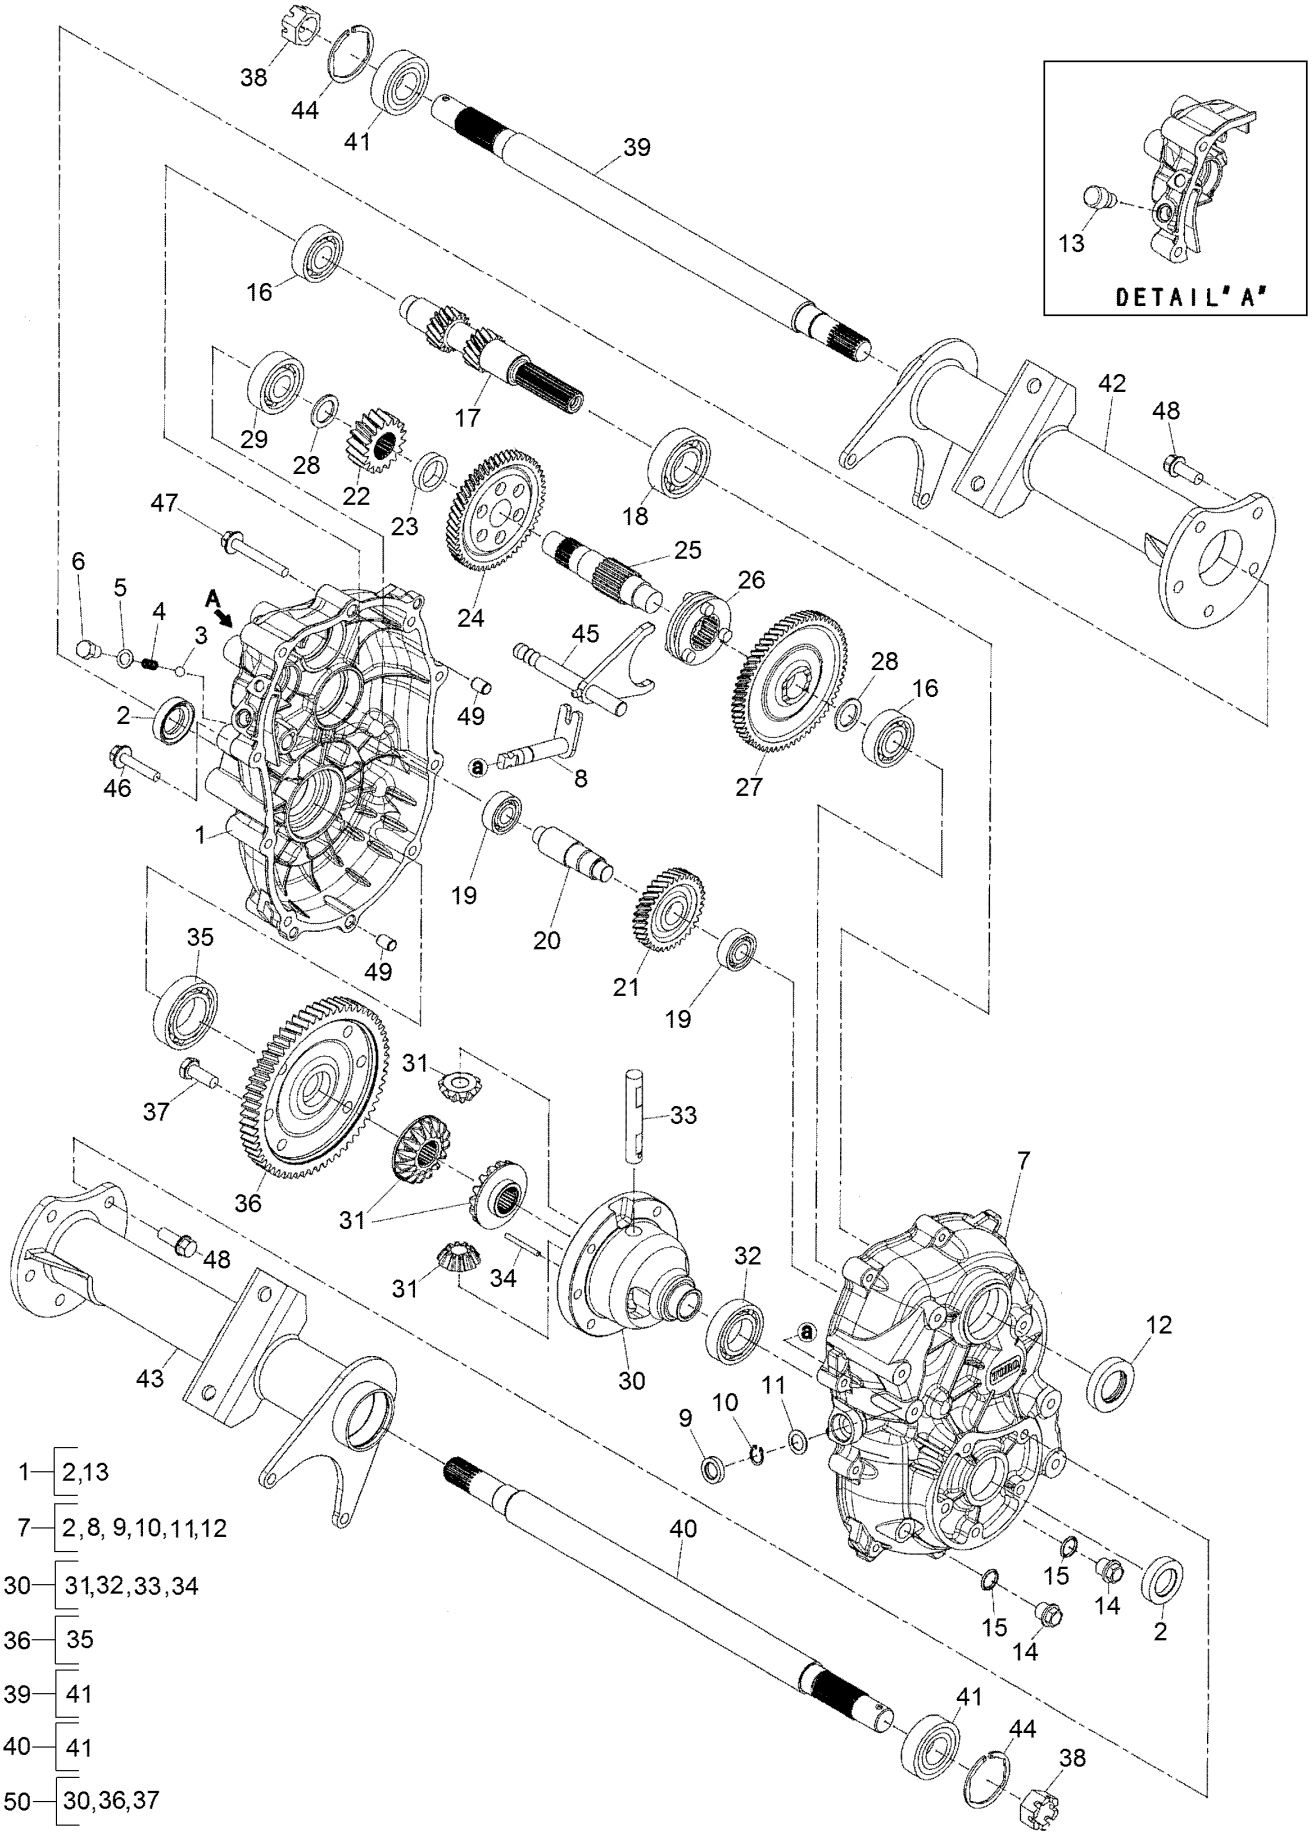

# Transaxle Assembly No. 131-3486 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 133-2400 | 1 | Case-LH |
| 2 | 133-2401 | 2 | Seal-Oil |
| 3 | 104-1660 | 1 | Ball-Steel |
| 4 | 104-1661 | 1 | Spring |
| 5 | 104-1662 | 1 | Gasket |
| 6 | 104-1663 | 1 | Bolt |
| 7 | 133-2402 | 1 | Case-RH |
| 8 | 133-2403 | 1 | Shaft-Select |
| 9 | 133-2446 | 1 | Seal-Oil |
| 10 | 133-2404 | 1 | Ring-Snap |
| 11 | 133-2405 | 1 | Spacer |
| 12 | 104-1607 | 1 | Seal-Oil |
| 13 | 133-2406 | 1 | Breather-Air |
| 14 | 133-2407 | 2 | Plug-Drain, Oil |
| 15 | 133-2408 | 2 | Gasket |
| 16 | 133-2409 | 2 | Bearing-Ball |
| 17 | 133-2410 | 1 | Shaft-Input |
| 18 | 133-2411 | 1 | Bearing-Ball |
| 19 | 133-2412 | 2 | Bearing-Ball |
| 20 | 133-2413 | 1 | Shaft-Counter |
| 21 | 133-2414 | 1 | Gear |
| 22 | 133-2415 | 1 | Gear |
| 23 | 133-2416 | 1 | Collar |
| 24 | 133-2417 | 1 | Gear |
| 25 | 133-2418 | 1 | Shaft-Center |
| 26 | 133-2419 | 1 | Clutch-Pin |
| 27 | 133-2420 | 1 | Gear |
| 28 | 133-2421 | 2 | Spacer |
| 29 | 133-2422 | 1 | Bearing-Ball |
| 30 | 133-2423 | 1 | Case-Differentail |
| 31 | 133-2424 | 1 | Set-Gear, Differential |
| 32 | 133-2425 | 1 | Bearing-Ball |
| 33 | 104-1644 | 1 | Shaft-Differential |
| 34 | 104-1645 | 1 | Pin |
| 35 | 133-2426 | 1 | Bearing-Ball |
| 36 | 133-2427 | 1 | Gear |
| 37 | 104-1649 | 6 | Bolt |
| 38 | 133-2428 | 2 | Nut-Castle |
| 39 | 133-2429 | 1 | Shaft-Axle, LH |
| 40 | 133-2430 | 1 | Shaft-Axle, RH |
| 41 | 133-2431 | 2 | Bearing-Ball |
| 42 | 133-2432 | 1 | Case-Axle, LH |
| 43 | 133-2433 | 1 | Case-Axle, RH |
| 44 | 133-2434 | 2 | Ring-Snap |
| 45 | 133-2435 | 1 | Shaft-Shift |
| 46 | 133-2436 | 1 | Bolt-Flange |
| 47 | 133-2437 | 9 | Bolt-Flange |
| 48 | 133-2438 | 10 | Bolt-Flange |
| 49 | 133-2439 | 2 | Pipe-Knock |
| 50 | 133-2440 | 1 | Differential ASM |

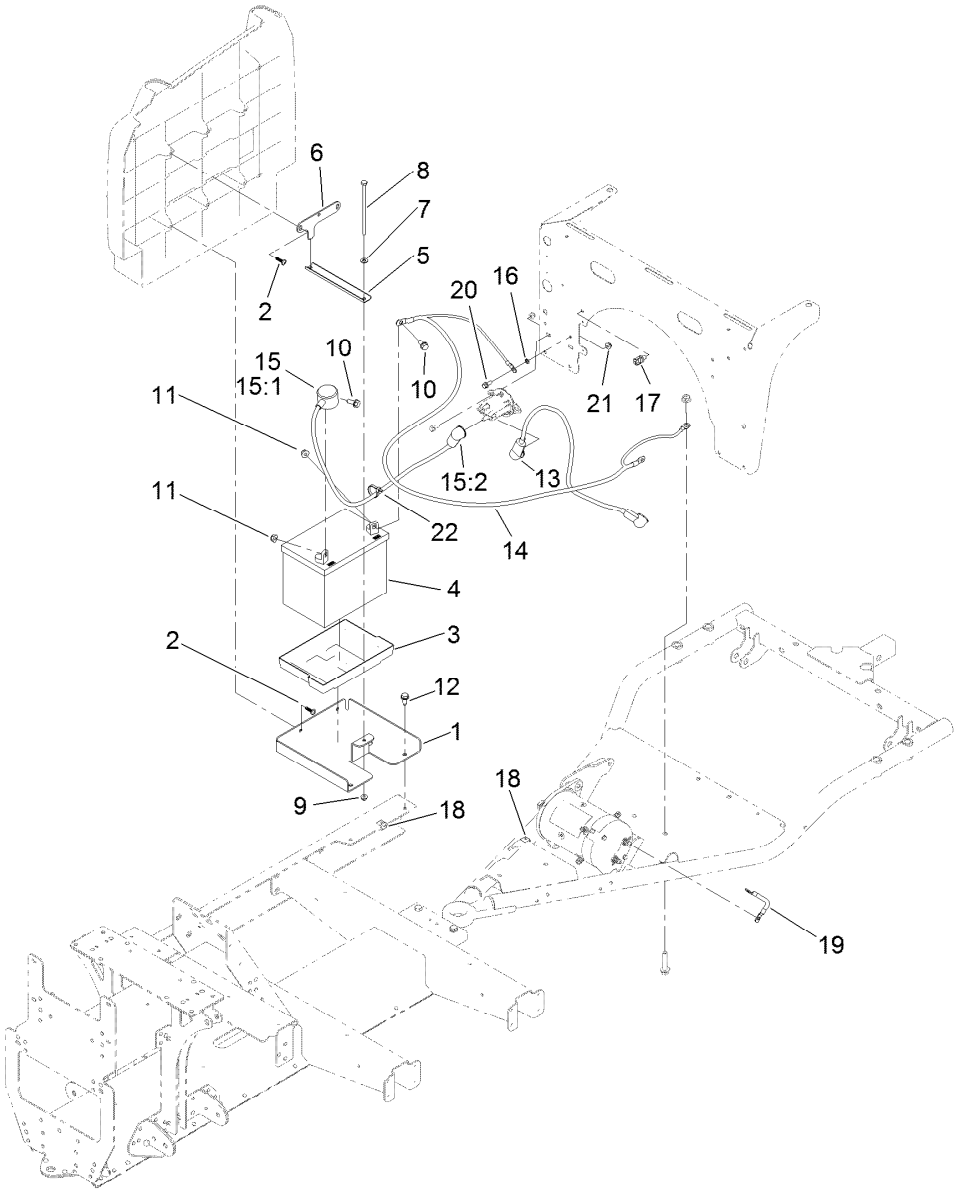



# Battery and Cable Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 127-7810-03 | 1 | Base-Battery |
| 2 | 120-2349 | 4 | Screw |
| 3 | 106948 | 1 | Tray-Battery |
| 4 | 104-8162 | 1 | Battery-Dry |
| 5 | 127-7816-03 | 1 | Channel-Clamp, Battery |
| 6 | 127-7814-03 | 1 | Plate-Clamp, Battery |
| 7 | 3256-22 | 1 | Washer-Flat |
| 8 | 321-47 | 1 | Screw-HH |
| 9 | 104-7201 | 1 | Nut-HF |
| 10 | 3234-5 | 2 | Screw-HHF |
| 11 | 104-8300 | 2 | Nut-HF, NI |
| 12 | 32144-70 | 2 | Screw-HWHTF |
| 13 | 122-0639 | 1 | Cable-Battery, Positive |
| 14 | 122-0638 | 1 | Cable-Battery, Negative |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 15 | 109-7621 | 1 | Positive Battery Cable ASM |
| 15:1 | 1-543393 | 1 | Insulator-Solenoid |
| 15:2 | 109-2407 | 1 | Insulator-Battery |
| 16 | 3255-7 | 1 | Washer-Lock/EXT |
| 17 | 32180-030 | 1 | Clip-Tie |
| 18 | 32180-082 | 3 | Clip-Edge W/Tie, Perpendicular |
| 19 | 122-1176 | 1 | Cable-Battery, Negative |
| 20 | 3234-33 | 1 | Screw-HHF |
| 21 | 104-7201 | 1 | Nut-HF |
| 22 | 3290-378 | 1 | Tie-Cable |
| 99 | 107-0392 | 1 | Protection-Terminal, Aerosol ● |


● Not illustrated

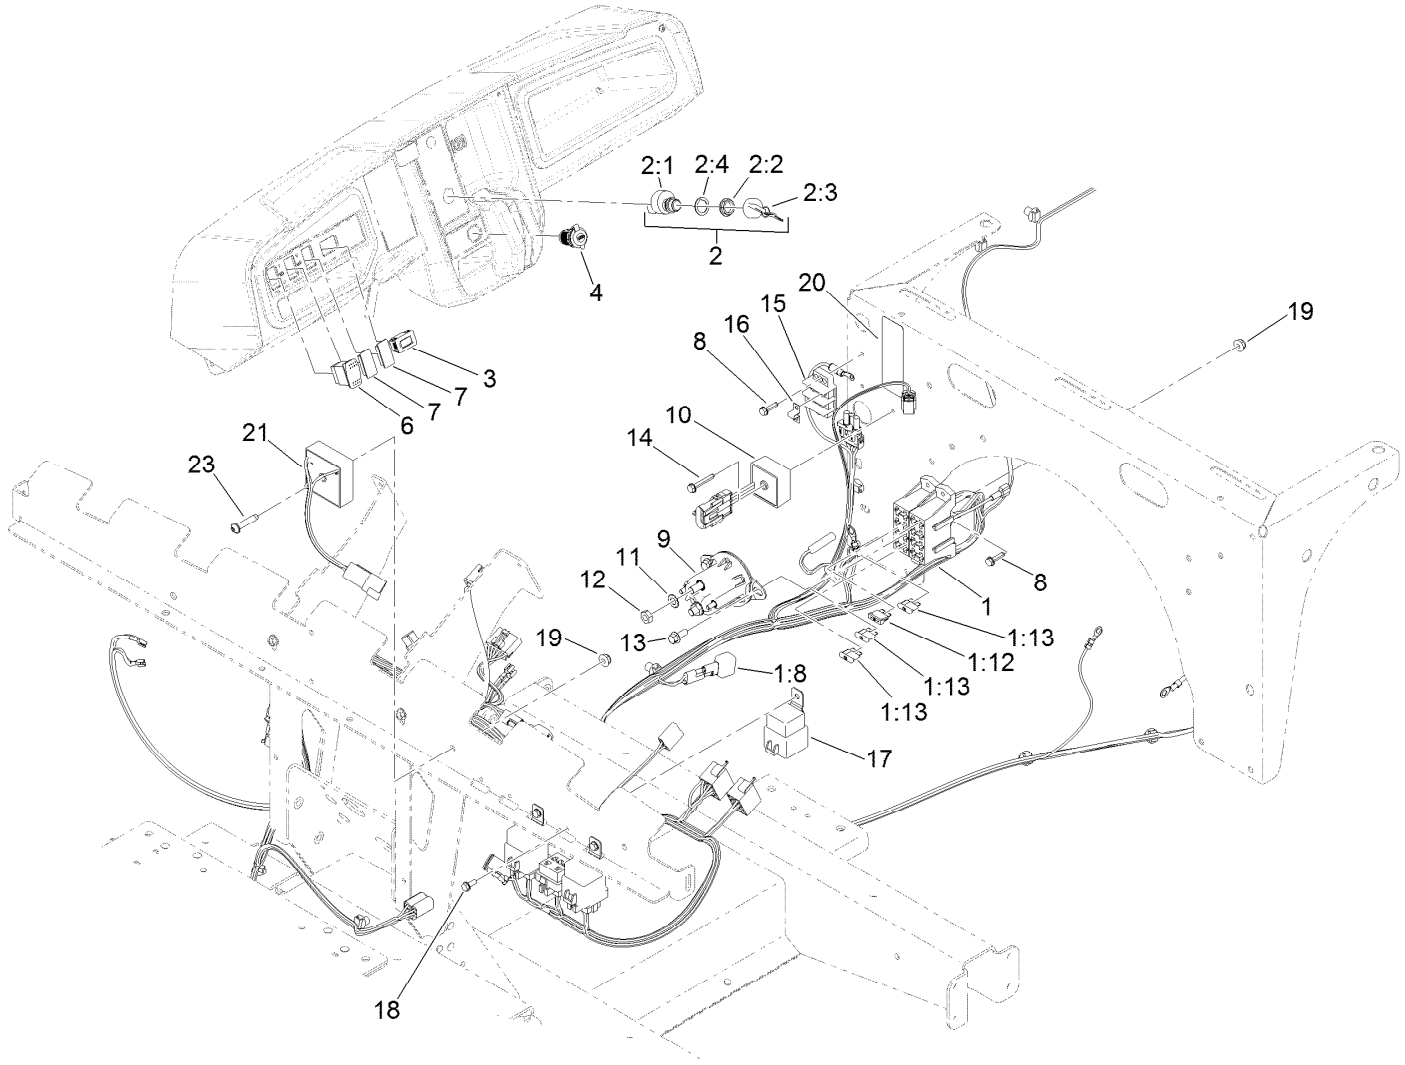


# Electrical Assembly


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 122-1030 | 1 | Harness-Wire |
| 1:8 | 100-4918 | 3 | Diode |
| 1:12 | 109355 | 1 | Fuse-Blade, 15 Amp |
| 1:13 | 218-578 | 3 | Fuse-Blade, 10 Amp |
| 2 | 122-1145 | 1 | Ignition Switch ASM |
| 2:1 | | 1 | Switch-Ignition ● |
| 2:2 | 108-8660 | 1 | Nut-Mounting |
| 2:3 | 106-5270 | 1 | Ignition Key Set |
| 2:4 | 108-8659 | 1 | Washer-Backup |
| 3 | 120-2244 | 1 | Hourmeter |
| 4 | 131-8388 | 1 | Socket-USB |
| 6 | 95-8999 | 1 | Switch |
| 7 | 99-7420 | 2 | Plug-Hole |
| 8 | 100-4351 | 4 | Screw-HWH |
| 9 | 114-3315 | 1 | Solenoid |
| 10 | 119-9492 | 1 | Regulator-Voltage |
| 11 | 3255-8 | 2 | Washer-Lock |
| 12 | 3220-2 | 2 | Nut-Jam |
| 13 | 3234-33 | 2 | Screw-HHF |
| 14 | 100-4352 | 1 | Screw-HWH |
| 15 | 42862 | 1 | Block-Terminal, Ground |
| 16 | 42863 | 1 | Strip-Jumper |
| 17 | 99-7430 | 3 | Relay-Mini 280 |
| 18 | 32144-1 | 3 | Screw-Taptite |
| 19 | 104-7201 | 4 | Nut-HF |
| 20 | 138-5599 | 1 | Decal-Fuse Block, EFI |
| 21 | 138-0085 | 1 | Timer-Delay, 30 Sec (1 Amp) |
| 23 | 132-6777 | 1 | Screw-TTH |

● Not serviced separately

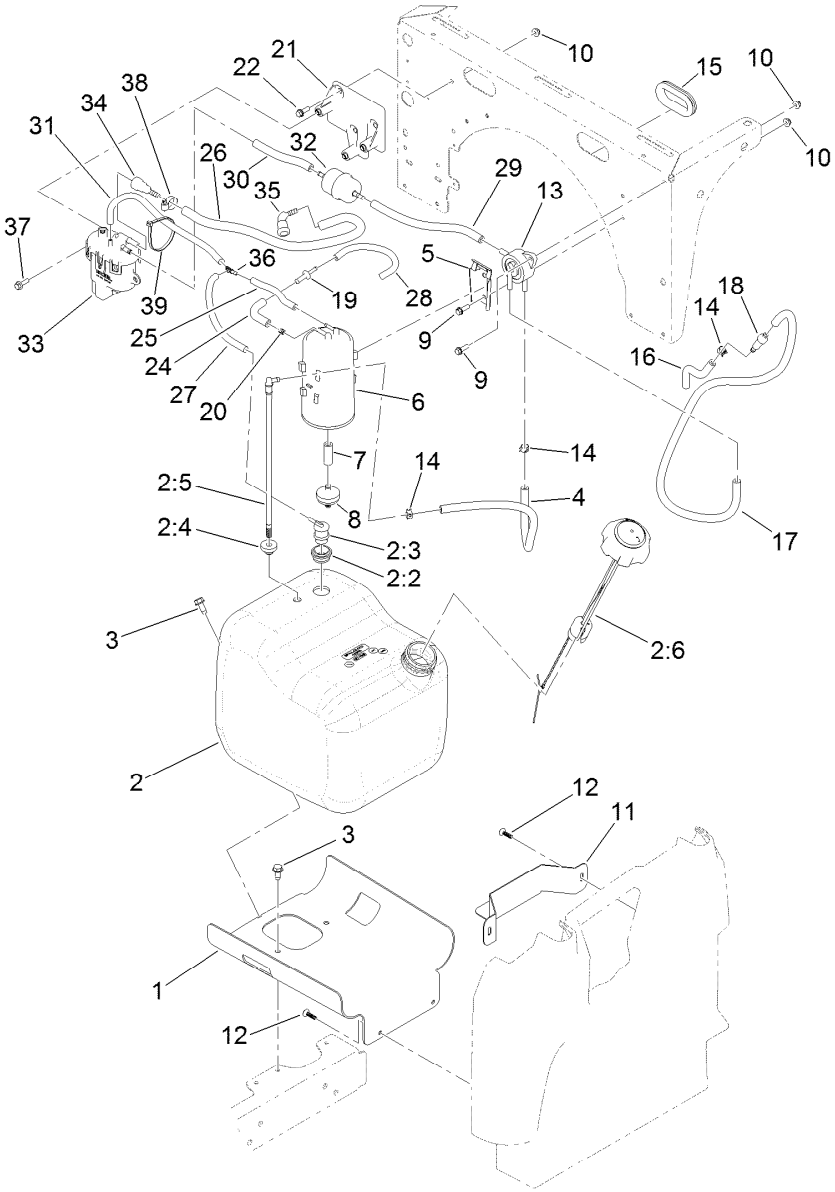


# Fuel System Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 127-7739-03 | 1 | Mount-Tank, Fuel |
| 2 | 127-7849 | 1 | Fuel Tank ASM |
| 2:2 | 114-0284 | 1 | Grommet |
| 2:3 | 114-0285 | 1 | Valve-Rollover |
| 2:4 | 46-6560 | 1 | Bushing |
| 2:5 | 115-9044 | 1 | Pipe-Stand |
| 2:6 | 131-8357 | 1 | Cap-Gauge |
| 3 | 32144-70 | 3 | Screw-HWHTF |
| 4 | 114-4428 | 1 | Hose-Fuel |
| 5 | 114-0292 | 1 | Bracket-Canister, Carbon |
| 6 | 127-8685 | 1 | Canister-Carbon |
| 7 | 106-5317 | 1 | Hose-Fuel |
| 8 | 115-7854 | 1 | Filter-Fuel, Inline |
| 9 | 32105-15 | 4 | Screw-HWH |
| 10 | 104-7201 | 7 | Nut-HF |
| 11 | 127-7845-03 | 1 | Bracket-Tank, Fuel |
| 12 | 120-2349 | 4 | Screw |
| 13 | 131-8526 | 1 | Pump-Fuel |
| 14 | 2412-98 | 8 | Clamp-Hose |
| 15 | 240-12 | 1 | Grommet |
| 16 | 109-0300 | 1 | Hose-Fuel |
| 17 | 110-3254 | 1 | Hose-Fuel |
| 18 | 138-5553 | 1 | Filter-Fuel, 250 Micron |
| 19 | 117-5399 | 1 | Adaptor-Orifice |
| 20 | 120-2038 | 1 | Cartridge-Valve, Check |
| 21 | 136-6346 | 1 | Bracket-Pump, Fuel |
| 22 | 115-5103 | 3 | Screw-HHF |
| 24 | 114-3765 | 1 | Hose-Fuel |
| 25 | 68-3632 | 1 | Hose-Fuel |
| 26 | 136-6343 | 1 | Hose-Fuel |
| 27 | 136-6345 | 1 | Hose-Fuel |
| 28 | 115-7871 | 1 | Hose-Fuel |
| 29 | 109-0282 | 1 | Hose-Fuel |
| 30 | 109-0650 | 1 | Hose-Fuel |
| 31 | 136-6344 | 1 | Hose-Fuel |
| 32 | 94-9695 | 1 | Filter-Fuel |
| 33 | 136-6347 | 1 | Pump-Fuel |
| 34 | 125-2921 | 1 | Fitting-Fuel |
| 35 | 121-5585 | 1 | Fitting-Fuel |
| 36 | 136-6339 | 1 | Fitting-Fuel |
| 37 | 33103-020 | 3 | Screw-HHF |

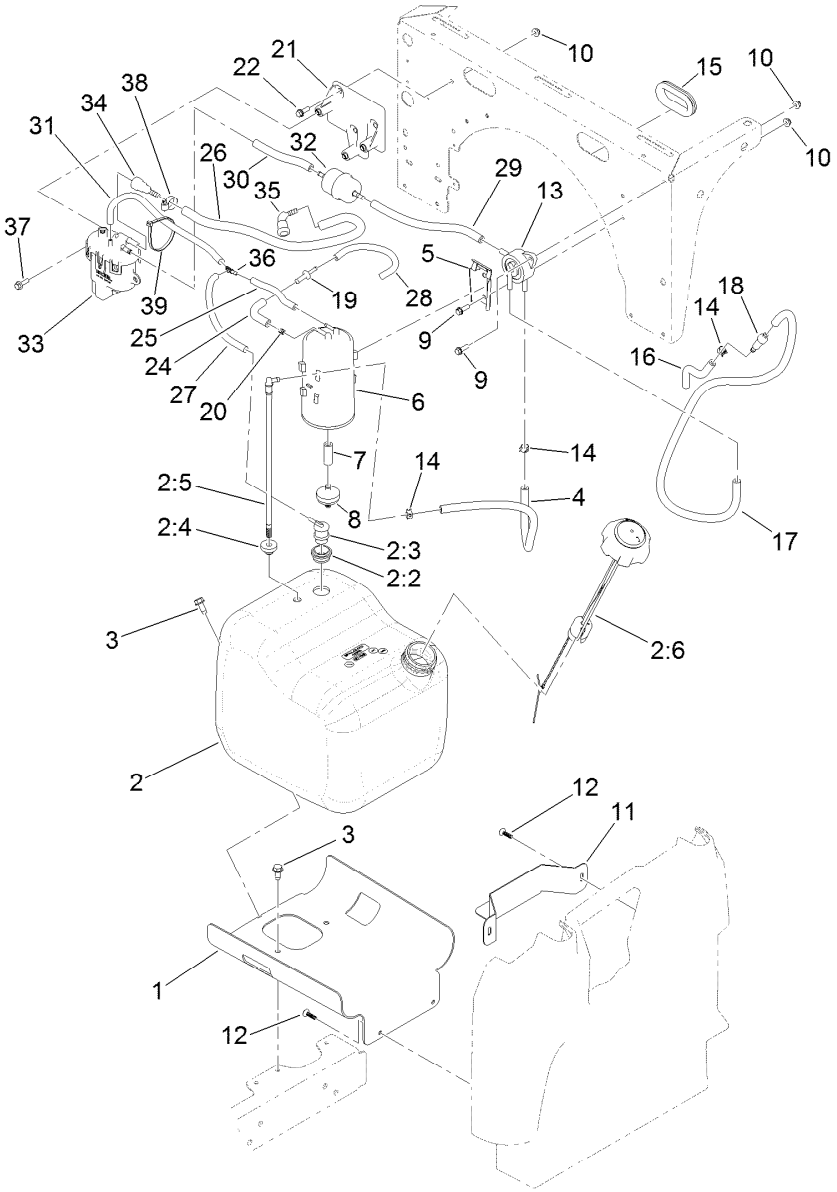


# Fuel System Assembly (continued)

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 38 | 2412-36 | 2 | Clamp-Hose |
| 39 | 3290-378 | 1 | Tie-Cable |

# Attachments and Accessories

## For 07060 Workman GTX EFI Utility Vehicle with Bench Seat

| Product Name | Model/Part |
|---|---|
| Multi-passenger Kit | 07133 |
| Bucket Seat Base Kit (2016) | 07134 |
| Bench Seat Base Kit (2016) | 07135 |
| 12V Electric Lift Kit | 07144 |
| Brush Guard Kit | 07145 |
| Front Hitch Kit, Workman GTX Series Utility Vehicles with Brush Guard | 07146 |
| Front Hitch Kit, Workman GTX or MDX Series Utility Vehicles without Brush Guard | 07147 |
| Steel Flat Bed Kit | 07148 |
| Extended Bed Kit | 07149 |
| Storage Box Kit | 07156 |
| Ball Picker Mounting Bracket Kit | 07157 |
| Brake and Signal Light Kit | 132-8579 |
| Walk Spreader Mounting Kit | 07029 |
| 6in L-Track Kit | 07158 |
| 2in L-Track Kit | 07159 |
| Hose Reel Mounting Kit | 07027 |
| Class 1 Draw Bar Kit | 133-3095 |
| Aggressive Tire Kit | 07423 |
| Horn Kit | 133-3016 |
| Reverse Alarm Kit | 133-3018 |
| Power Point Kit | 131-8550 |
| Parking Brake Alarm Kit | 133-3019 |
| Trash Can Mounting Kit | 07028 |
| Spark Arrestor Screen Kit | 133-7109 |
| Bed Rack Kit | 07031 |
| Cab Kit | 07142 |
| Canopy Kit | 07140 |
| Canopy Kit, Multi-passenger Workman GTX Utility Vehicle | 07141 |
| Mount-Ball | 133-7116 |
| Road Light and Homologation Kit | 133-7128 |
| 12V Electric Bed Lift Kit | 07167 |
| Front Spring Kit | 133-7145 |
| Canopy Mount Kit, Workman GTX Utility Vehicle with Extended Flatbed | 133-7160 |
| Tire-20 8.00-10 | 116-7333 |
| MVP Kit 400 Hour | 136-6280 |
| Cab Mount Kit, Workman GTX Utility Vehicle with Extended Flatbed | 133-7198 |
| Service Hood ASM | 133-7209 |
| ROPS Kit | 07032 |
| Crated Finishing Kit | 07045 |
| Cargo Bed Kit | 07046 |
| Bench Seat Base Kit | 07047 |
| Bucket Seat Base Kit | 07048 |
| Extension Kit | 07049 |
| Small Bedrack Mount Grip Kit | 136-6311 |
| Large Bedrack Mount Grip Kit | 136-6312 |
| Wireless Hourmeter Kit | 136-6323 |

# Attachments and Accessories (continued)

Optional Rear Tire GTX-K500 ..... 137-2785
Plate-Skid ..... 137-2886-03
Seat Hinge Kit ..... 133-7346

## Notes:

## Notes:




**Count on it.**