
Form No. 4504-318 Rev A

Parts Catalog

Z-SPRAY™

Model No. ZS5260—Serial No. 404314159 and Up

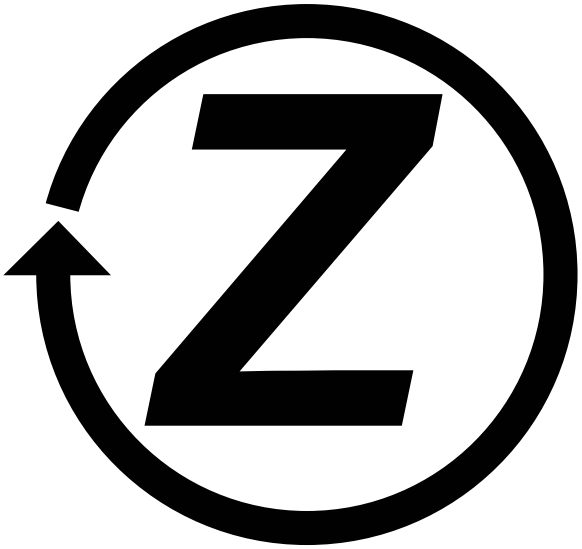

Original Instructions (EN)



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Main Frame Assembly 4
Motion Control Assembly 6
Park Brake Assembly 8
Tire and Wheel Assembly 10
Spray System Assembly 12
Hose Reel Tank Assembly 14
Manifold Assembly 16
Spray Boom Assembly 18
Liquid Valve Assembly 20
Hopper Assembly 22
Fuel Assembly 24
Engine Assembly 26
Hydraulic Assembly 28
Electrical Assembly 30

© 2019—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Main Frame Assembly

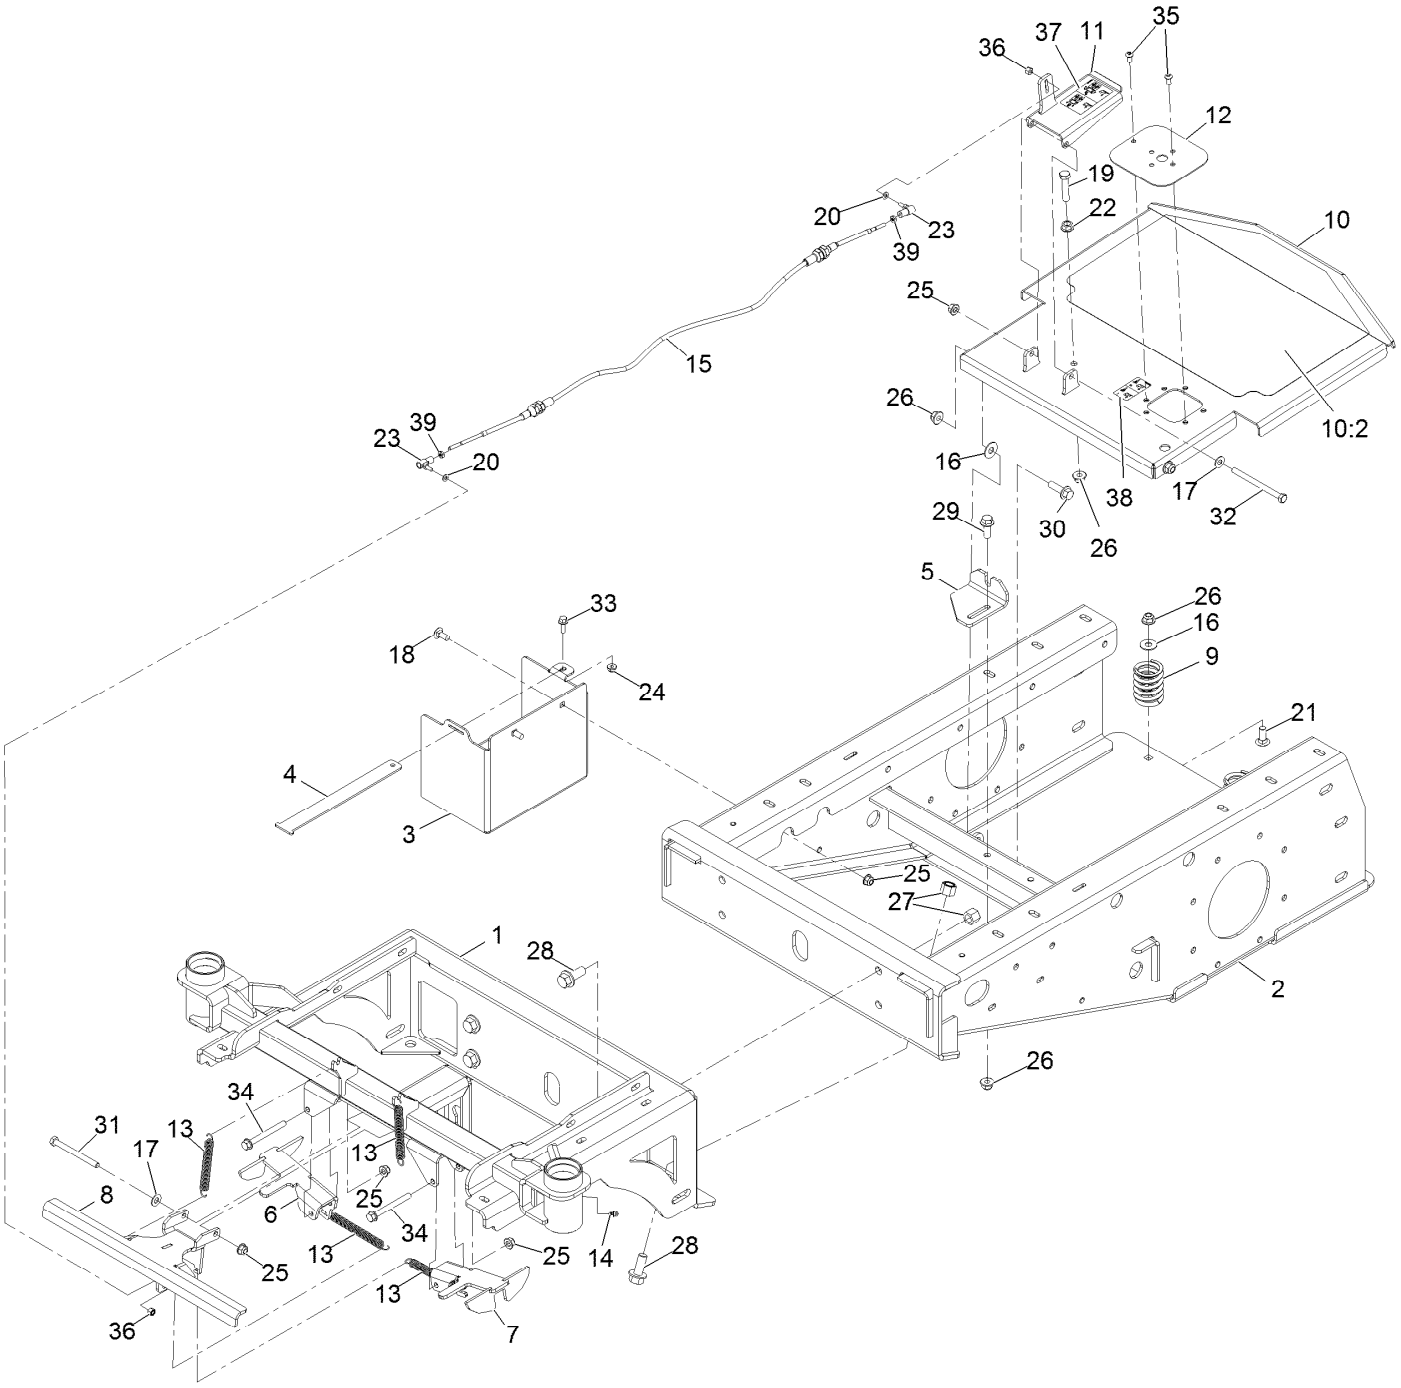

Main Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	135-5179	1	Frame-Front
2	135-5171	1	Frame-Rear
3	135-5199	1	Box-Battery
4	135-5493	1	Strap-Battery
5	135-5494	1	Bracket, Lower Cable
6	135-5195	1	Wing-Capture, Rt
7	135-5194	1	Wing-Capture, Lt
8	135-5369	1	Capture-Lcs
9	135-5654	3	Spring-Compression
10	135-5656	1	Plate-Foot
10:2	135-5655	1	Pad-Grip
11	135-5191	1	Pedal-Foot
12	135-5561	1	Panel, Foot Switch
13	135-5652	4	Spring-Extension
14	302-63	2	Fitting-Grease, Zerk
15	135-5644	1	Cable-Caster, Locking
16	1126	5	Washer-Flat
17	107-0279	2	Washer
18	126-0695	2	Screw-CARR
19	126-0710	1	Screw-HH
20	126-0759	2	Washer-Flat
21	126-0980	3	Screw-CARR
22	135-6806	1	Nut-Hex Flange
23	135-5682	2	Ball Joint-SS
24	135-6108	1	Nut-Hex Flange
25	135-6109	6	Nut-Hex Flange
26	135-6110	7	Nut-Hex Flange
27	HDW14426	6	Nut,1/2-13,NYL INS,ST/ST,18-8
28	135-6207	6	Screw-HHF
29	135-6208	1	Screw-HHF
30	135-6211	2	Screw-HHF
31	135-6217	1	Screw-HH
32	135-6218	1	Screw-HH
33	135-6221	1	Screw-HHF
34	135-6222	2	Screw-HHF
35	135-6367	2	Screw-HSBH
36	HDW05856	2	Nut,NYL Lock,#10-32,ST/ST 18-8
37	135-6430	1	Decal-Lock, Caster
38	135-6728	1	Decal-Spray Foot Button
39	520-0019	2	Nut,Hex Jam Mch Scr,10-32,Sst


Motion Control Assembly

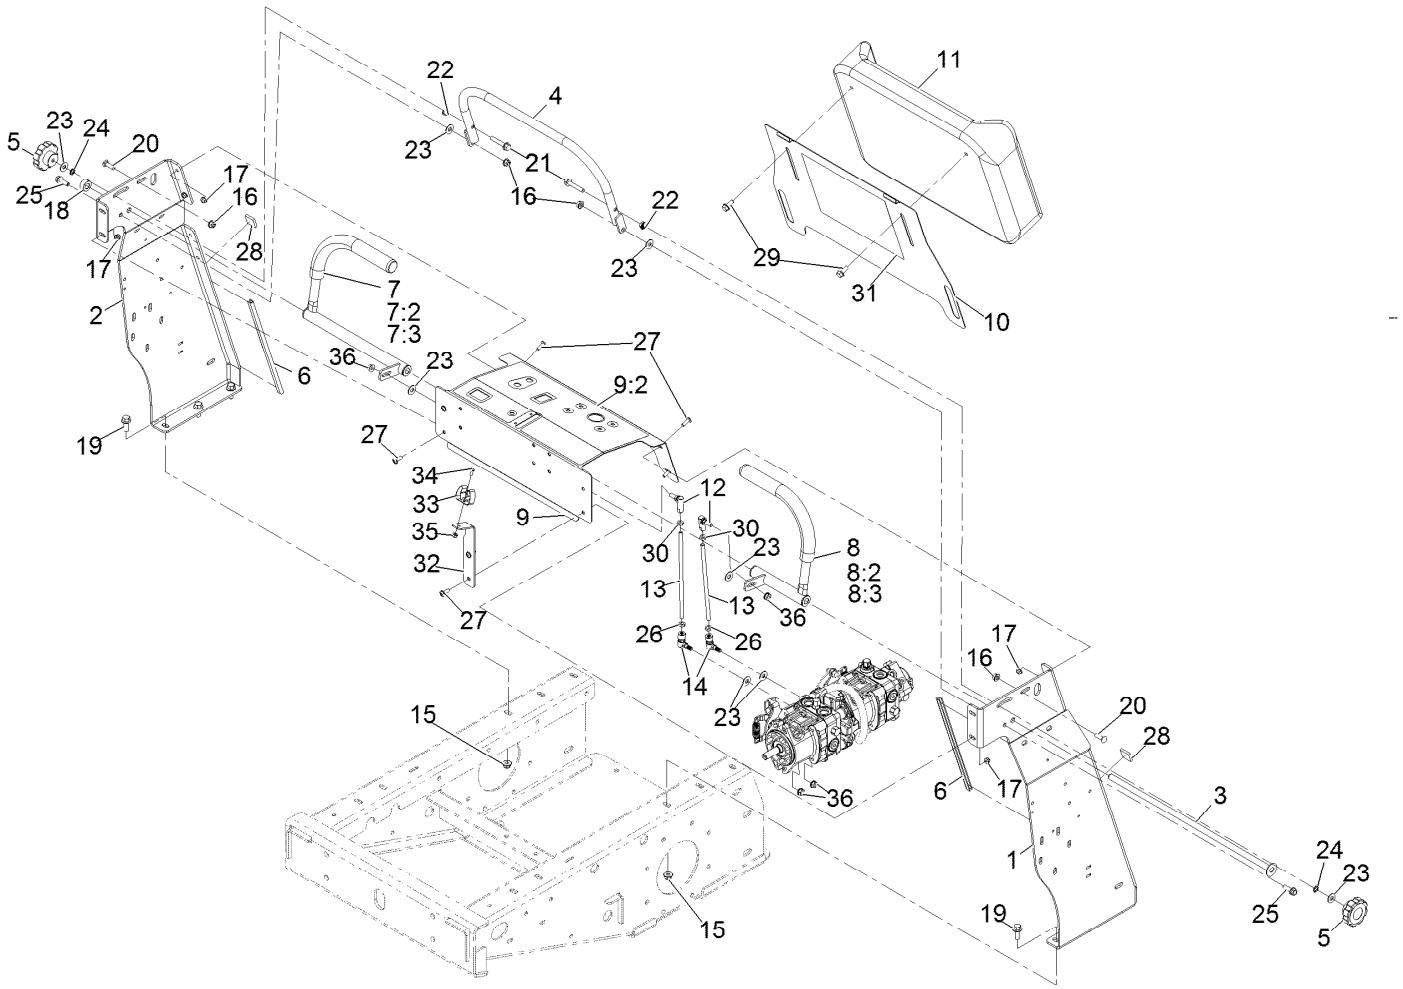

Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	135-5423	1	Upright-Tower, Lt
2	135-5425	1	Upright-Tower, Rt
3	135-5430	1	Rod-Pivot, Joy Stick
4	135-5427	1	Bar-Speed
5	135-5689	2	Knob-Fluted
6	135-5336	2	Strip-Trim, 12.0"
7	135-5738	1	Stick-Joy, Rt
7:2	1-633257	1	Grip-Control, Motion
7:3	135-5694	2	Bushing-Flange
8	135-5739	1	Stick-Joy, Lt
8:2	1-633257	1	Grip-Control, Motion
8:3	135-5694	2	Bushing-Flange
9	135-6123	1	Panel-Control
9:2	135-6223	1	Decal-Control Panel
10	135-5498	1	Plate, Knee Pad
11	135-5334	1	Pad-Knee, Z-Spray/Z-Plug
12	135-5257	2	Balljoint-SS
13	135-5681	2	Rod-Control, Motion
14	135-5718	2	Ball Joint-Quick Disconnect, SS
15	135-6110	6	Nut-Hex Flange
16	135-6109	4	Nut-Hex Flange
17	135-6108	8	Nut-Hex Flange
18	135-6192	1	Collar
19	135-6208	6	Screw-HHF
20	HDW17294	2	Bolt,Carriage,5/16-18X1,ST/ST 18-8
21	135-5779	2	Screw-HHF
22	118-1722	2	Nut,Hex Flange,5/16-18,Sst, Rie2006
23	HDW14535	8	Flat Washer, 5/16 Nom,ST/ST,18-8
24	135-6286	2	Washer-Lock
25	135-6272	2	Screw-HHF
26	107-0282	2	Nut-Hex
27	135-7080	8	Screw-Hsbhf
28	93-9155	2	Velcro
29	126-2712	2	Screw-HHF 5/16-18 X 3/4 SS
30	135-6512	2	Nut-Hex
31	135-6281	1	Decal-Spray Chart
32	135-5506	1	Mount-Gun
33	135-5661	1	Holder-Tool, Clip
34	135-6374	1	Screw-HSBH
35	135-6342	1	Nut-Hex Flange
36	107-0380	4	Nut-HHF


Park Brake Assembly

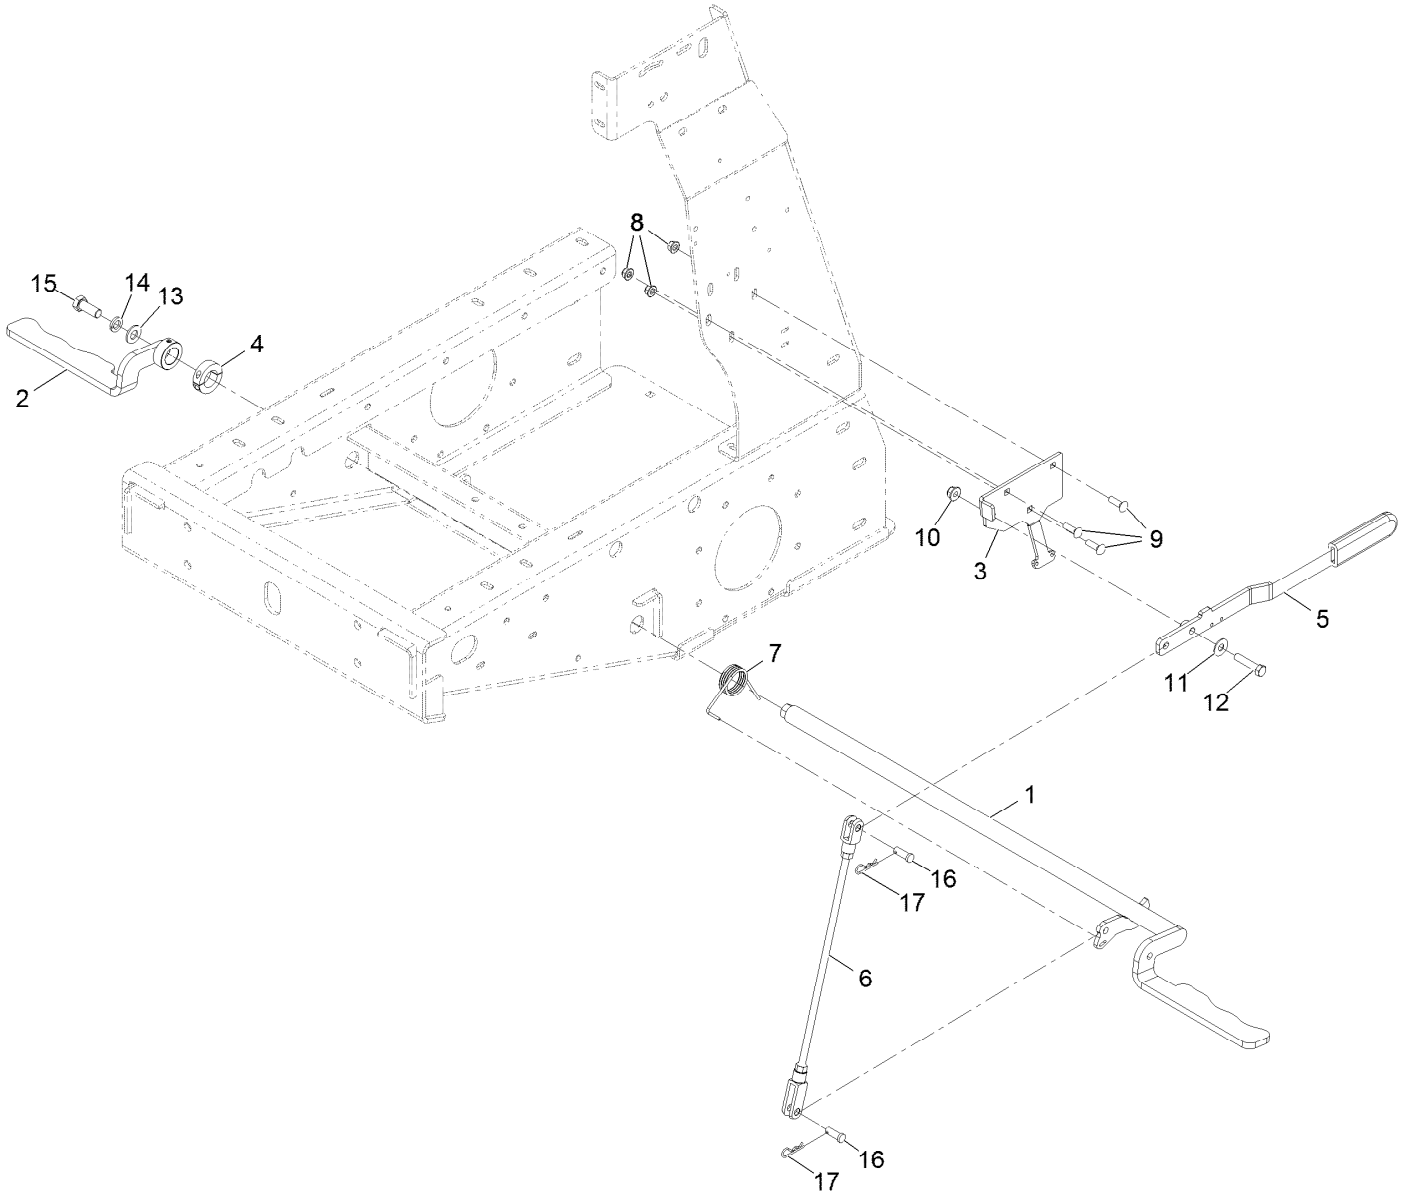

Park Brake Assembly (continued)

Ref.	Part Number	Qty.	Description
1	135-5380-03	1	Arm-Brake, Lt [black]
2	135-5376-03	1	Arm-Brake, Rt [black]
3	135-5432	1	Bracket-Handle, Brake
4	116-7271	1	Collar-Locking
5	135-6059	1	ASM, Handle-Brake
6	135-6066	1	ASM, Rod-Brake
7	135-6106	1	Spring-Torsion
8	135-6109	3	Nut-Hex Flange
9	HDW17294	3	Bolt,Carriage,5/16-18X1,ST/ST 18-8
10	104-8301	1	Nut-Nyloc 3/8-16 Flg
11	1126	1	Washer-Flat
12	323-52	1	Screw-HH 3/8-16 X 1 3/4
13	3256-26	1	Washer-1/2 SAE
14	3253-7	1	Washer-Lock 1/2
15	106-0378	1	Screw (.50-20Unfx1.25 Grade 8]
16	1-808284	2	Pin-Clevis
17	135-6284	2	Pin-Hair


Tire and Wheel Assembly

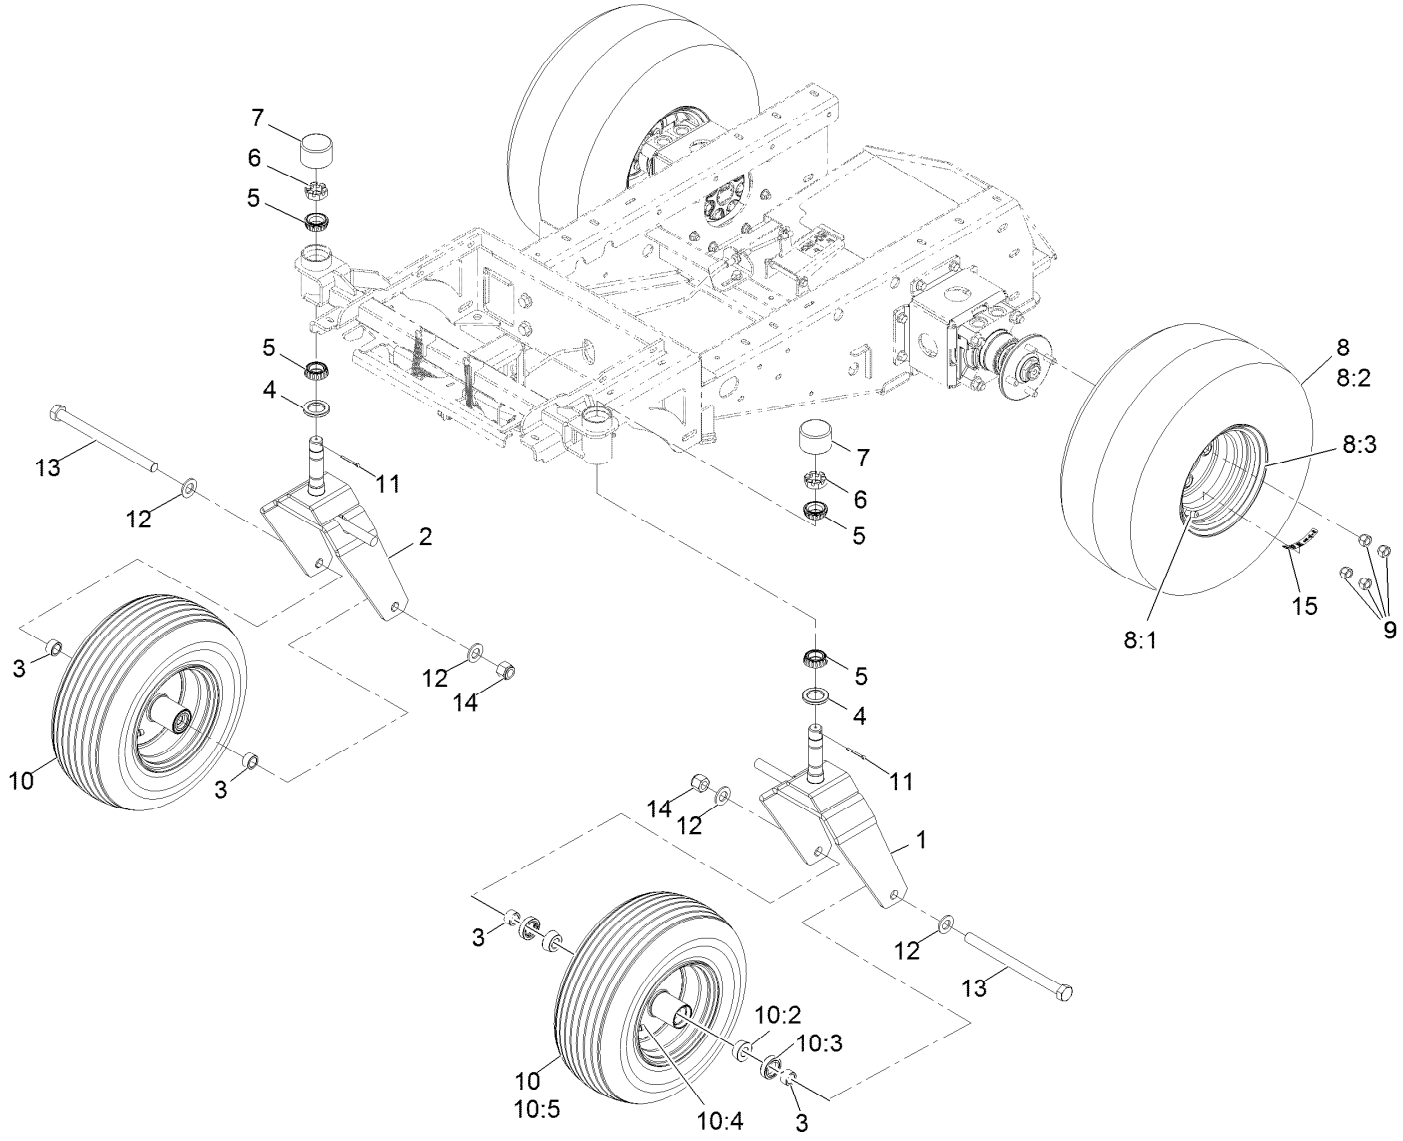

Tire and Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	135-5441-03	1	Caster-Lt [black]
2	135-5446-03	1	Caster-Rt [black]
3	135-5683	4	Spacer-Axle
4	1-543511	2	Seal-Grease
5	254-92	4	Cone-Bearing, Outer
6	1-809082	2	Nut-SHH
7	135-5756	2	Cap-Dust, Rubber
8	135-5968	2	Wheel And Tire ASM
8:1	135-5969	1	Rim-8 X 7, Black
8:2	120-6466	1	Tire
8:3	232-27	1	Stem-Valve
9	242-50	8	Nut-Lug
10	135-5974	2	Wheel And Tire
10:2	1-633585	2	Bearing-Cone, Taper
10:3	103-0063	2	Seal-Caster
10:4	5108	1	Valve
10:5	135-5976	1	Tire-Rib
11	135-6292	2	Pin-Cotter
12	3256-28	4	Washer-Flat
13	135-6300	2	Screw-HH
14	3296-51	2	Nut-Lock, NI
15	126-2055	2	Decal-Torque, Wheel Hub Lug

Spray System Assembly

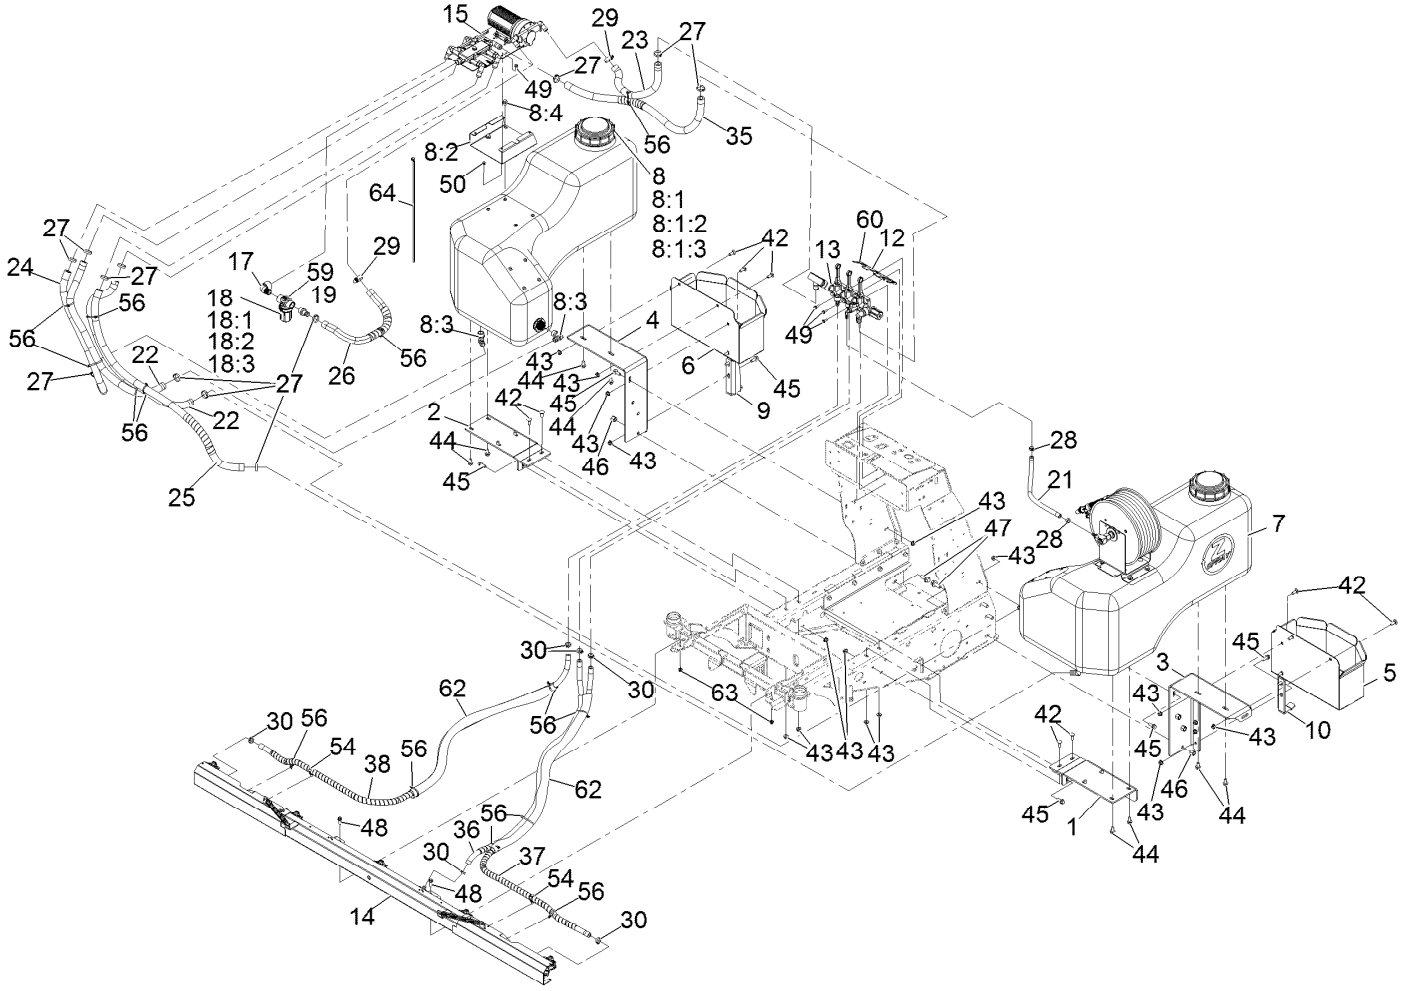


Spray System Assembly (continued)

Ref.	Part Number	Qty.	Description
1	135-5495	1	Mount-Tank, LH Wing
2	135-5496	1	Mount-Tank, RH Wing
3	135-5395	1	Mount-Box, Lt Fert
4	135-5397	1	Mount-Box, Rt Fert
5	135-5399	1	Box-Fert, Lt
6	135-5402	1	Box-Fert, Rt
7		1	ASM-Tank, Hose Reel ●
8		1	ASM-Tank, Rt ●
8:1	135-5918	1	ASM-Tank, Rt
8:1:2	135-5916	1	Cap-Tank, Spray
8:1:3	126-4393	2	Fitting-Bulkhead
8:2	135-5546	1	Platform, Liquid Valve Mount
8:3	135-5772	2	Fitting-Elbow, 90
8:4	135-7096	4	Screw-HHF
9	135-5408	1	Bracket-Anti-Tip, Rt
10	135-5406	1	Bracket-Anti-Tip, Lt
12	135-5570	1	Bracket-Manifold
13		1	ASM-Manifold ●
14		1	ASM-Boom ●
15		1	ASM, Liquid Valve ●
17	132-7706	1	Elbow-90DEG
18	135-5765	1	Strainer-Inline
18:1	126-7195	1	Bowl-Strainer
18:2	126-2272	1	Gasket-Head, Line Strainer
18:3	135-5766	1	Screen-Strainer, 50 Mesh
19	41257	1	Hosebarb
21	135-5321	1	Hose-Spray
22	135-6163	2	Hose-Spray
23	135-5324	1	Hose-Spray
24	135-5326	1	Hose-Spray
25	135-5327	1	Hose-Spray, Wrapped
26	135-5325	1	Hose-Spray, Wrapped
27	135-5890	12	Clamp-Oetiker, 167
28	135-5757	2	Clamp-Oetiker, 167
29	2412-129	2	Clamp-Hose
30	135-5692	6	Clamp-Oetiker, 167
35	135-6480	1	Hose-Spray, Wrapped
36	135-5294	1	Hose-Spray, Wrapped
37	135-5295	1	Hose-Spray, Wrapped
38	135-5296	1	Hose-Spray, Wrapped
42	126-0980	12	Screw-Carriage 3/8-16 X 1 SS
43	135-6110	22	Nut-Hex Flange
44	135-6274	12	Screw-HHF
45	135-6208	10	Screw-HHF
46	HDW14426	6	Nut,1/2-13,NYL INS,ST/ST,18-8
47	135-6207	6	Screw-HHF
48	135-6272	2	Screw-HHF
49	135-6221	7	Screw-HHF
50	135-6108	4	Nut-Hex Flange
54	32180-030	2	Clip-Tie
56	3290-378	14	Tie-Cable
59	135-6424	1	Decal-Cap, Strainer
60	135-6285	1	Decal-Valve, Boom
62	135-6484	2	Guard-Mesh
63	135-6109	2	Nut-Hex Flange
64	3290-379	3	Tie-Cable

● Not serviced separately

Hose Reel Tank Assembly

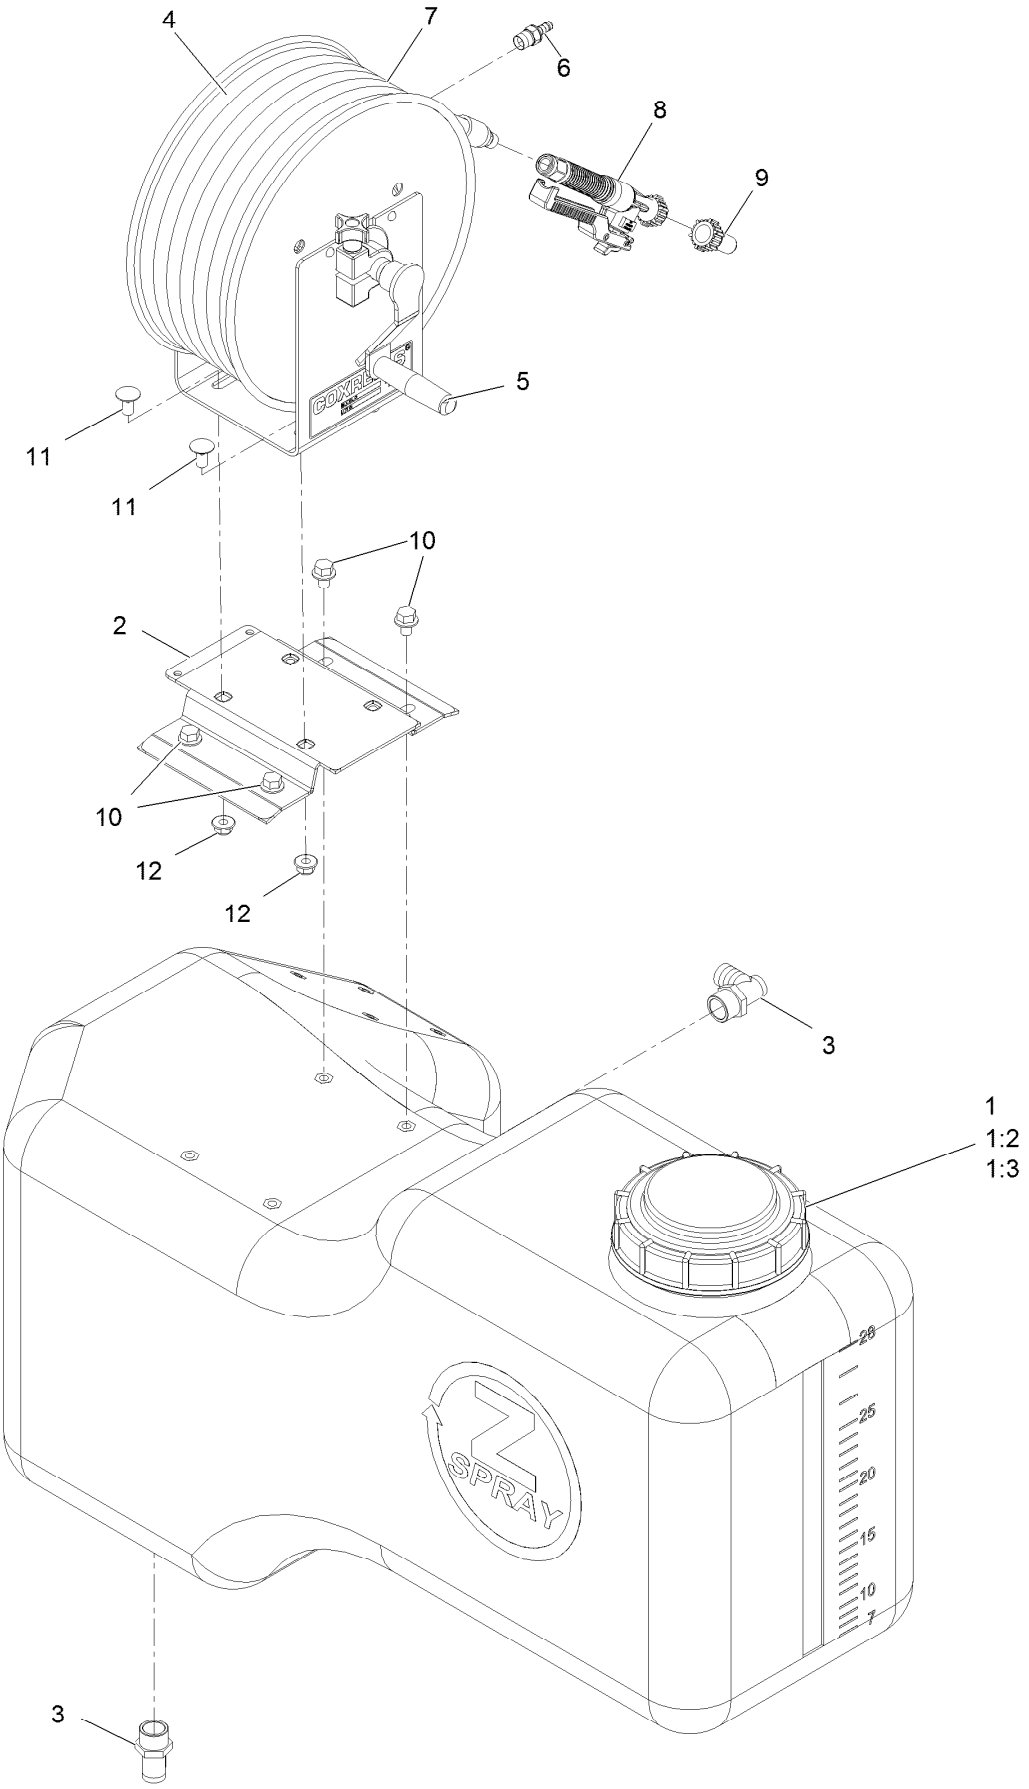


Hose Reel Tank Assembly (continued)

Ref.	Part Number	Qty.	Description
1	135-5917	1	ASM-Tank, Lt
1:2	135-5916	1	Cap-Tank, Spray
1:3	126-4393	2	Fitting-Bulkhead
2	135-5497	1	Mount-Reel, Hose
3	135-5772	2	Fitting-Elbow, 90
4	135-5787	1	Reel-Hose
5	135-6011	1	Crank-Reel
6	1-513200	2	Fitting,Male
7	135-5794	1	Hose-Spray, 75'
8	135-5773	1	Gun-Spray, Spot
9	135-5778	1	Tip-Spray, #12 Spot
10	135-7096	4	Screw-HHF
11	135-6271	4	Screw-Carriage
12	135-6110	4	Nut-Hex Flange
13	135-5757	1	Clamp-Oetiker, 167 ●

● Not illustrated


Manifold Assembly

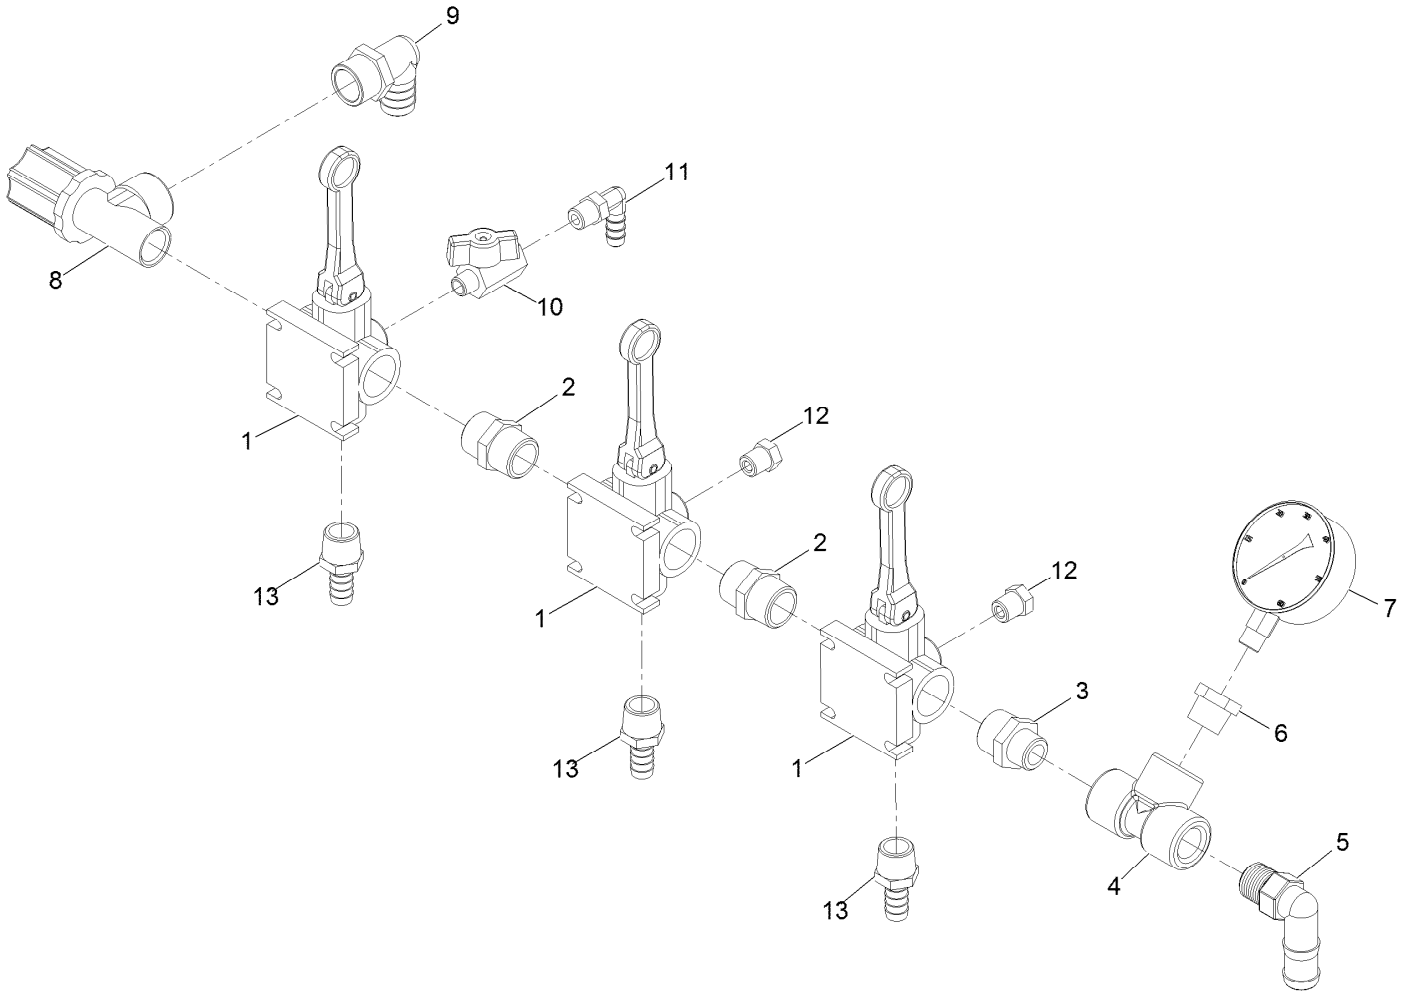

Manifold Assembly (continued)

Ref.	Part Number	Qty.	Description
1	135-5721	3	Valve-Directo
2	135-5741	2	Fitting-Nipple
3	135-5742	1	Fitting-Nipple
4	94-7100	1	Tee
5	92-8557	1	Elbow-90
6	135-5743	1	Fitting-Reducer
7	135-5740	1	Gauge
8	135-5736	1	Valve-Throttle
9	135-5772	1	Fitting-Elbow, 90
10	135-5737	1	Valve-Chrome, 1/4
11	135-5745	1	Fitting-Elbow, 90
12	135-5735	2	Plug-Valve
13	120-8671	3	Fitting-Hosebarb


Spray Boom Assembly

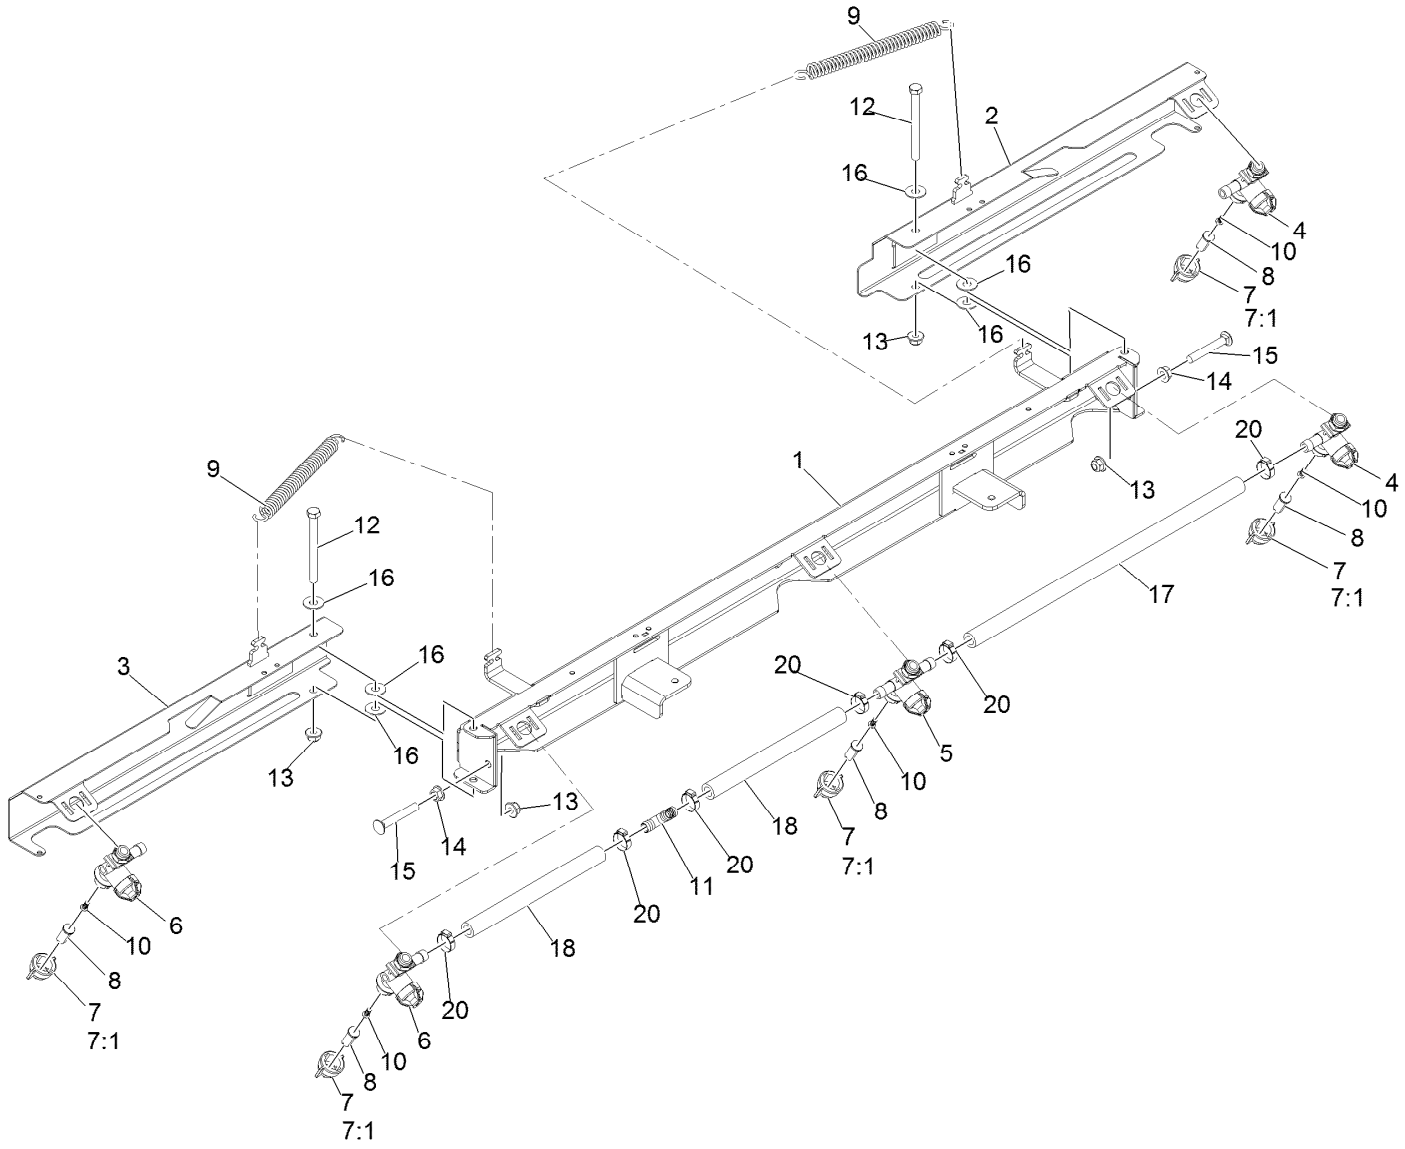

Spray Boom Assembly (continued)

Ref.	Part Number	Qty.	Description
1	135-5409	1	Boom-Center
2	135-5415	1	Boom-Wing, Rt
3	135-5419	1	Boom-Wing, Lt
4	135-5790	2	Body-Nozzle, Right
5	135-5789	1	Body-Nozzle, Center
6	135-5788	2	Body-Nozzle, Left
7	135-5781	5	Cap-Nozzle
7:1	40998	1	Seat-Gasket
8	135-5791	5	Tip-Spray
9	135-5780	2	Spring-Extension
10	126-3943	5	Strainer-Nozzle, 50M 5PSI Check
11	138-2751	1	Fitting-Tee, Barb
12	135-6310	2	Screw-HH
13	135-6110	4	Nut-Hex Flange
14	135-6806	2	Nut-Hex Flange
15	126-0702	2	Screw-CARR
16	1126	6	Washer-Flat
17	135-7106	1	Hose-Spray
18	135-7105	2	Hose-Spray
20	135-5692	6	Clamp-Oetiker, 167


Liquid Valve Assembly

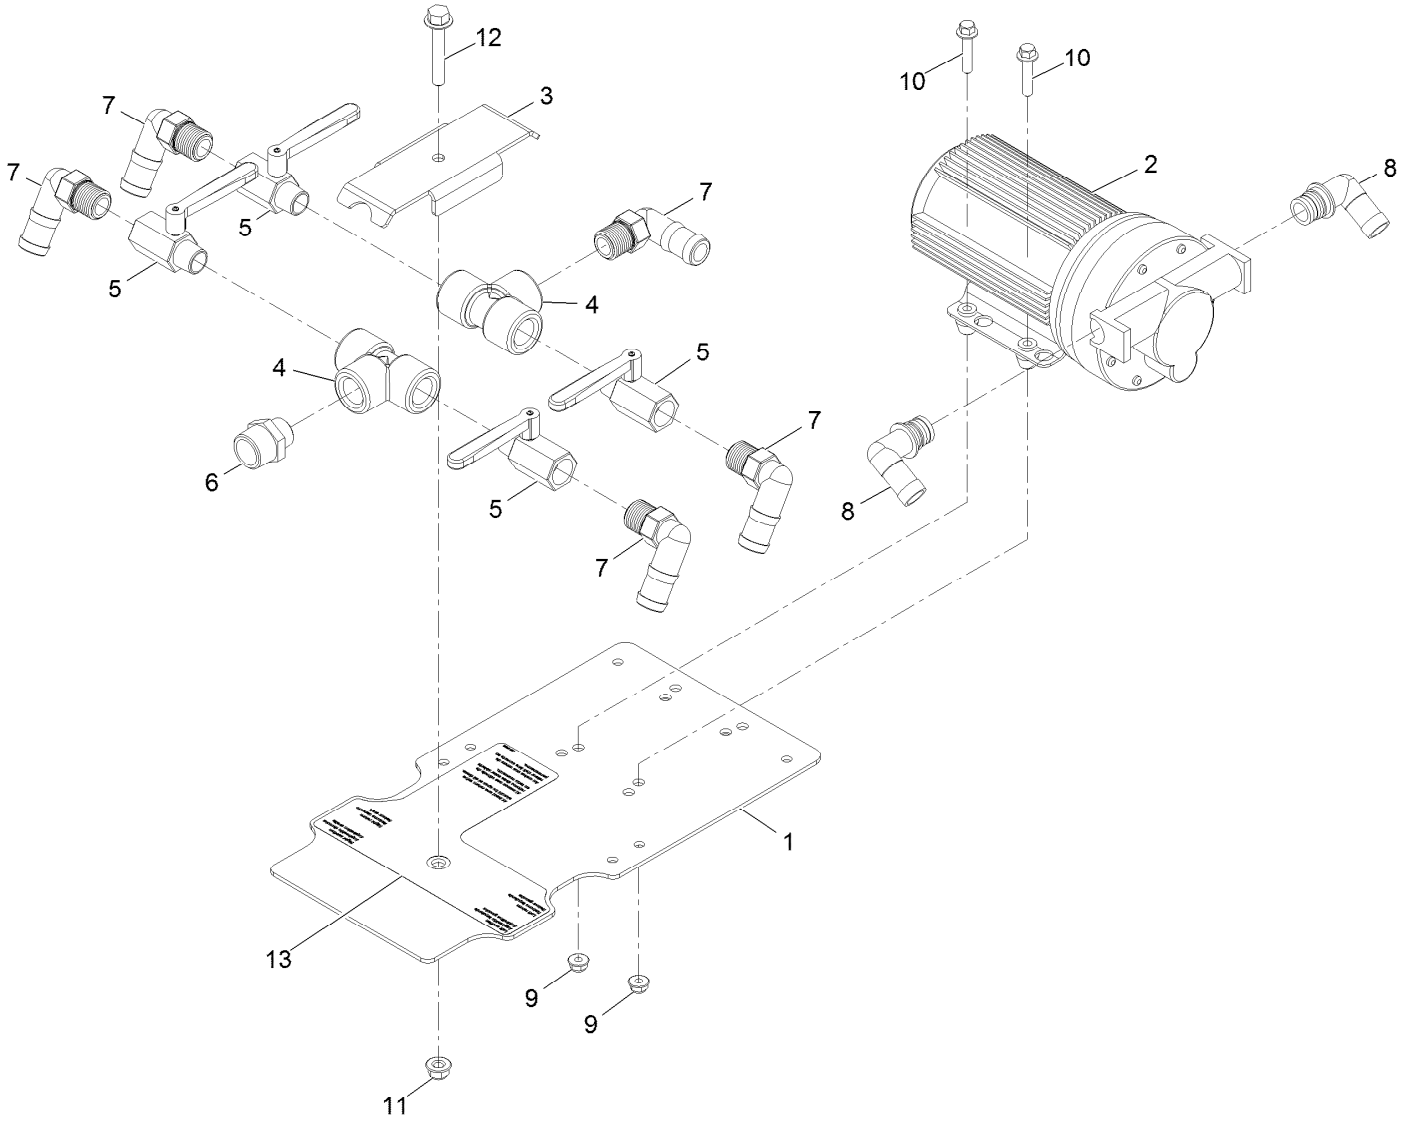

Liquid Valve Assembly (continued)

Ref.	Part Number	Qty.	Description
1	135-5491	1	Mount-Plate, Liquid Valve
2	135-5759	1	Pump-5.0 GPM
3	135-5504	1	Plate-Clamp, Liquid Valve Fittings
4	94-7100	2	Tee
5	135-5760	4	Valve-Chrome, 1/2
6	135-5742	1	Fitting-Nipple
7	92-8557	5	Elbow-90
8	135-6003	2	Fitting-Elbow, 3/4Qd X 3/4Barb
9	135-6108	4	Nut-Hex Flange
10	135-6312	4	Screw-HHF
11	135-6109	1	Nut-Hex Flange
12	126-2711	1	Screw-HHF
13	135-6420	1	Decal-Valve, Tank


Hopper Assembly

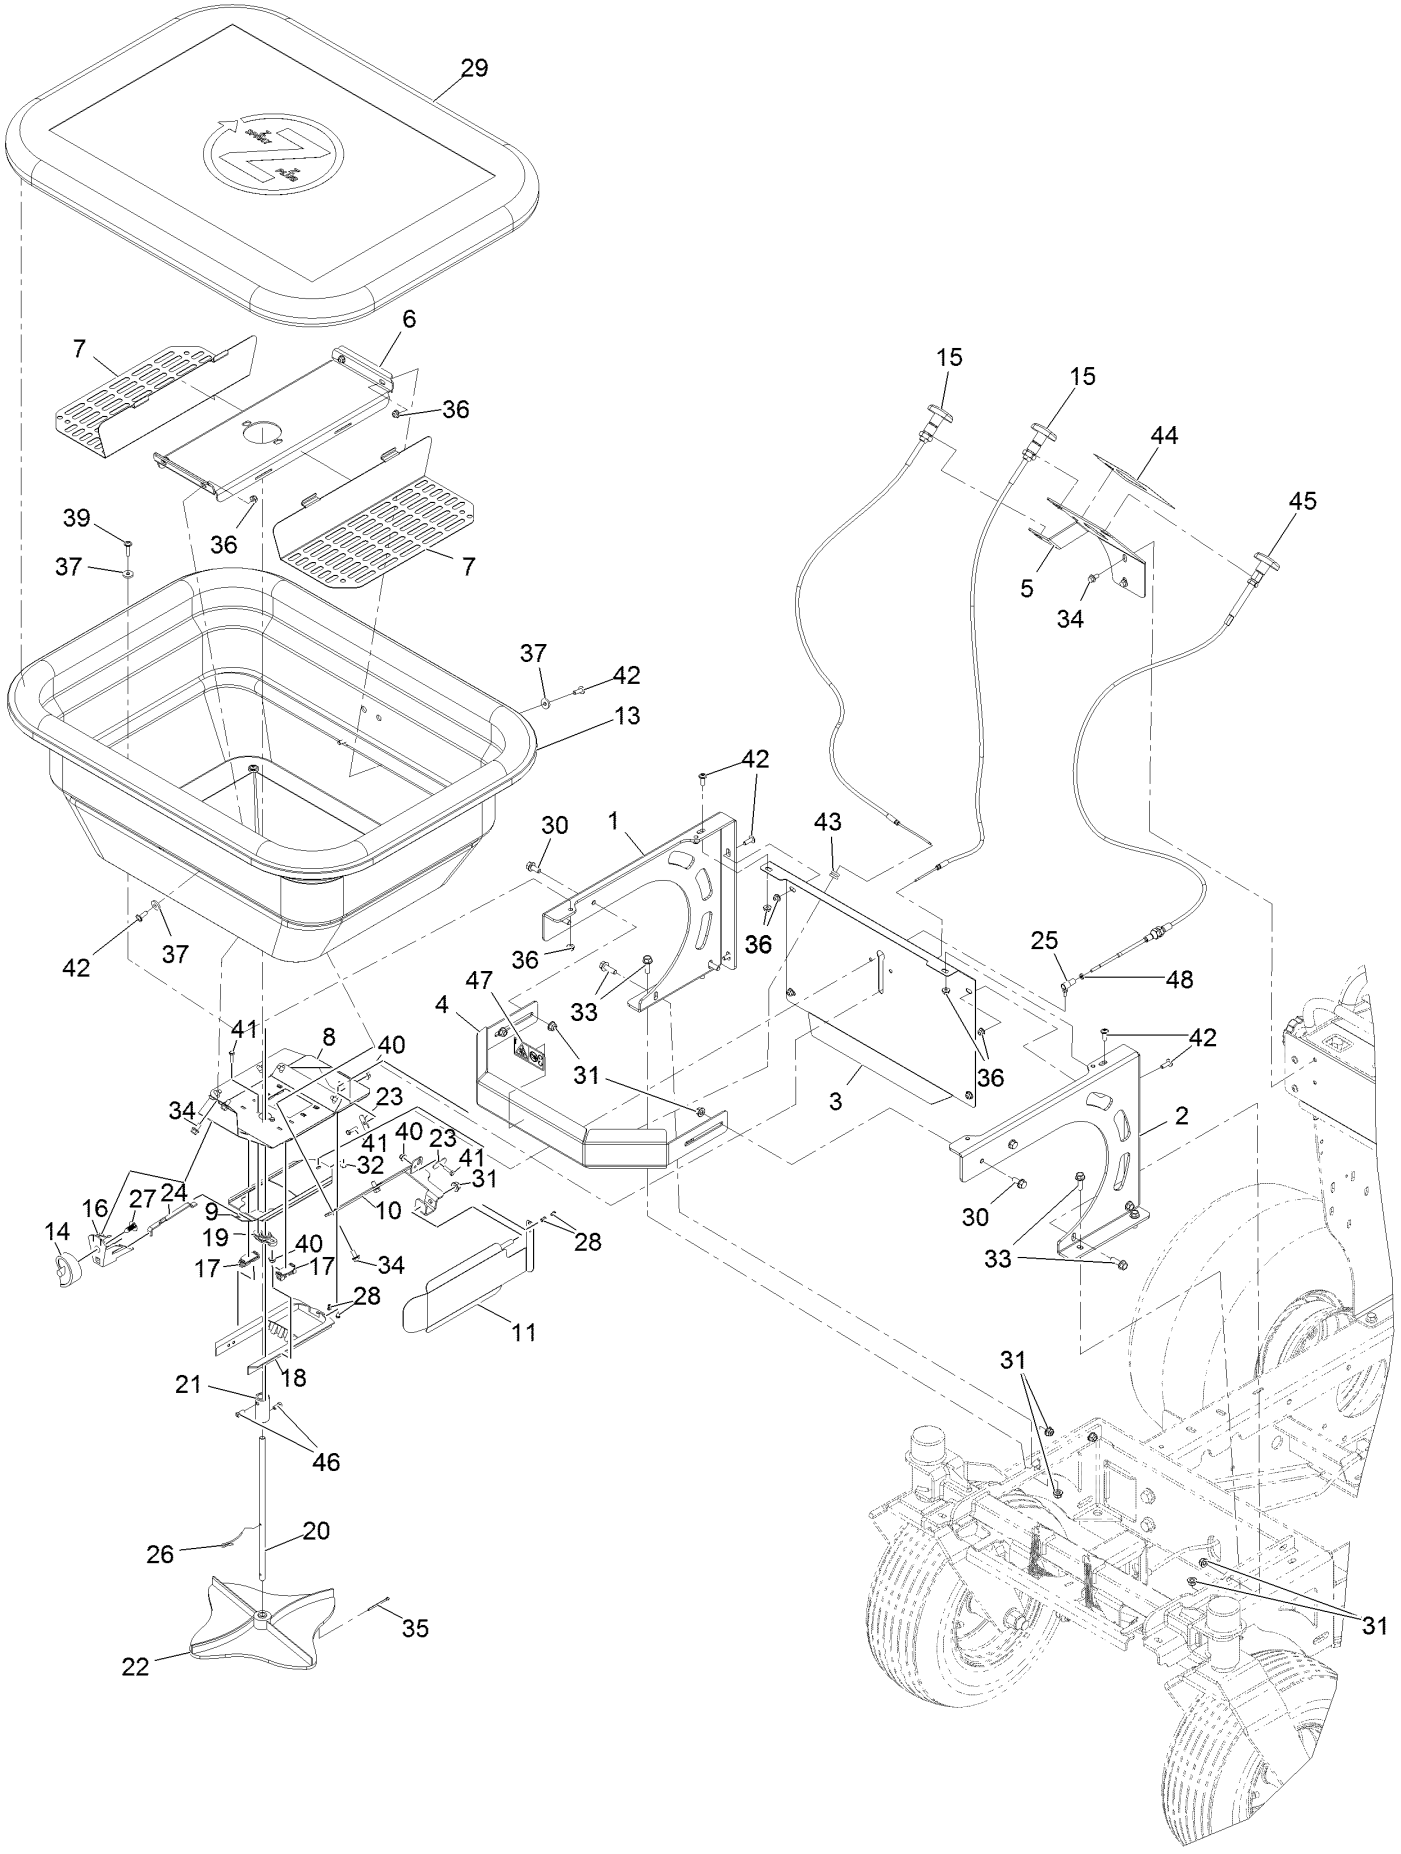

Hopper Assembly (continued)

Ref.	Part Number	Qty.	Description
1	135-5391	1	Side-Hopper, Rt
2	135-5393	1	Side-Hopper, Lt
3	135-5571	1	Backshield-Hopper
4	135-5567	1	Bumper-Front, Hopper
5	135-5505	1	Mount-Speedometer
6	135-5542	1	Pan-Hopper, 220
7	135-5544	2	Screen-Hopper, 220
8	135-5572	1	Plate-Base, Hopper
9	135-5573	1	Slide-Door, Hopper
10	135-5388	1	Mount-Deflector, Side
11	135-5589	1	Deflector-Side, Spreader
13	135-5985	1	Hopper-220Lb
14	126-0988	1	Dial
15	135-5931	2	Cable-Push/Pull
16	126-0985	1	Mount-Dial
17	126-0990	4	Guide-Rate, Gate
18	126-0991	1	Diffuser
19	135-5943	1	Bearing-Flange
20	135-5936	1	Shaft-Hopper, 220
21	135-5937	1	Coupler-SS
22	135-5954	1	Spinner-Spreader
23	135-5569	2	Retainer, Cable
24	135-5965	1	Linkage-Gate, Rate
25	135-5682	1	Ball Joint-SS
26	135-5957	1	Wire-Agitator
27	126-0986	1	Clip
28	135-5961	2	Retainer-Cable, Wire
29	135-6145	1	Cover-Hopper, Large
30	126-2712	4	Screw-HHF 5/16-18 X 3/4 SS
31	135-6109	13	Nut-Hex Flange
32	HDW05856	1	Nut,NYL Lock,#10-32,ST/ST 18-8
33	135-6272	8	Screw-HHF
34	135-6280	10	Screw-HHF
35	135-6340	1	Pin-Cotter
36	135-6108	14	Nut-Hex Flange
37	135-6341	8	Washer
39	135-7081	4	Screw-Hsbhf
40	135-6342	4	Nut-Hex Flange
41	135-6356	4	Screw-HH
42	135-7080	10	Screw-Hsbhf
43	135-5988	1	Grommet-Rubber
44	135-6279	1	Decal-Hopper Control
45	135-5935	1	Cable-Push/Pull
46	3241-7	2	Screw-SQH
47	135-6725	1	Decal-Dismemberment Hazard
48	520-0019	1	Nut,Hex Jam Mch Scr,10-32,Sst


Fuel Assembly

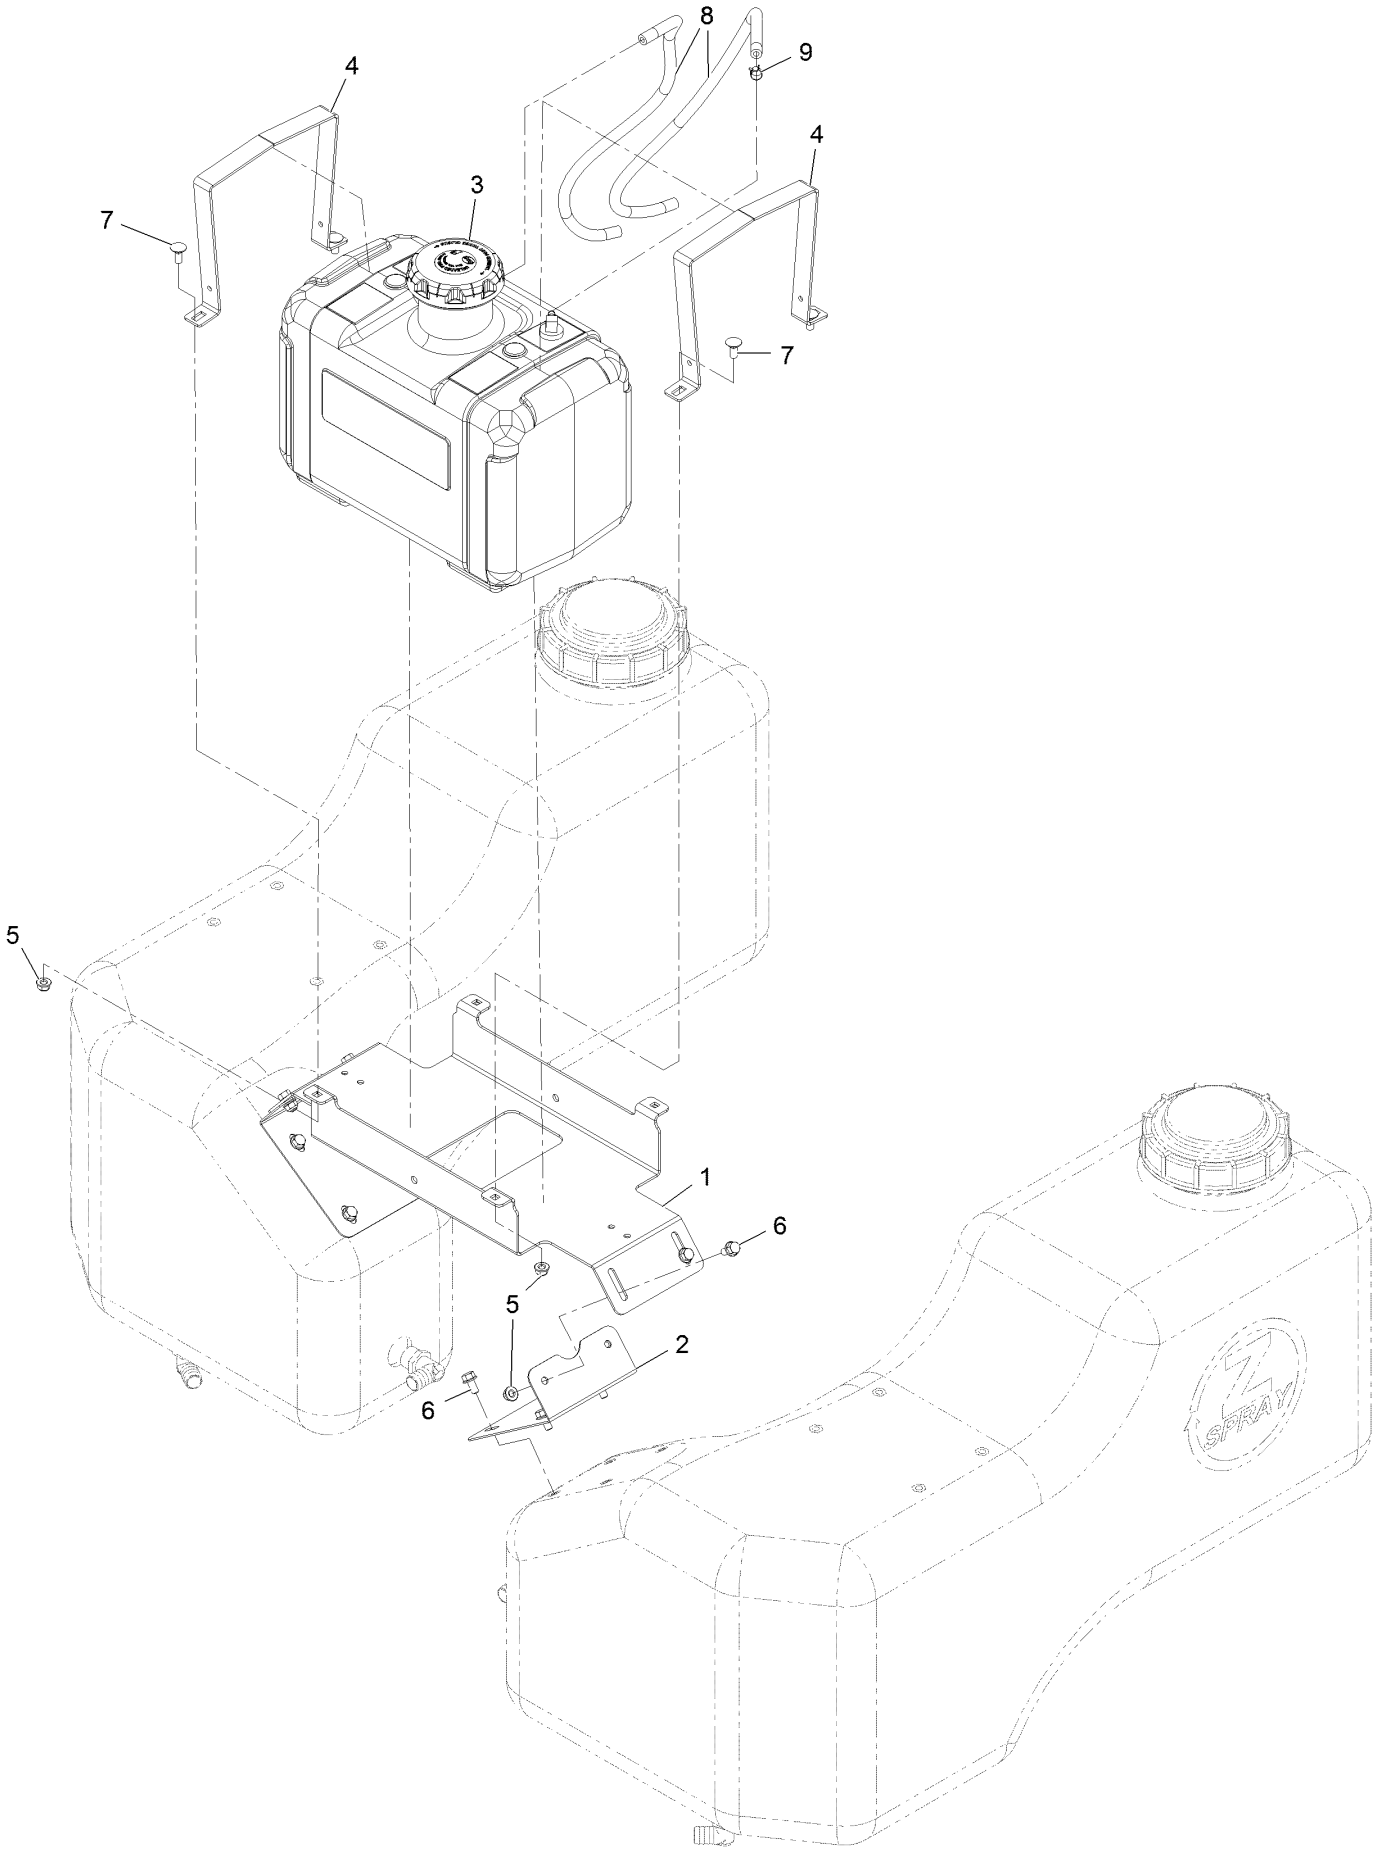

Fuel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	135-7209	1	Mount, Gas Tank
2	135-5555	2	Bracket-Support, Gas Tank
3	135-7172	1	ASM-Tank, 5 Gal.
4	135-7211	2	Strap, Gas Tank
5	135-6109	8	Nut-Hex Flange
6	135-7086	12	Screw-HHF
7	126-0695	4	Screw-CARR
8	109-1395	2	Hose-Fuel Line 27"
9	2412-98	1	Clamp-Hose


Engine Assembly

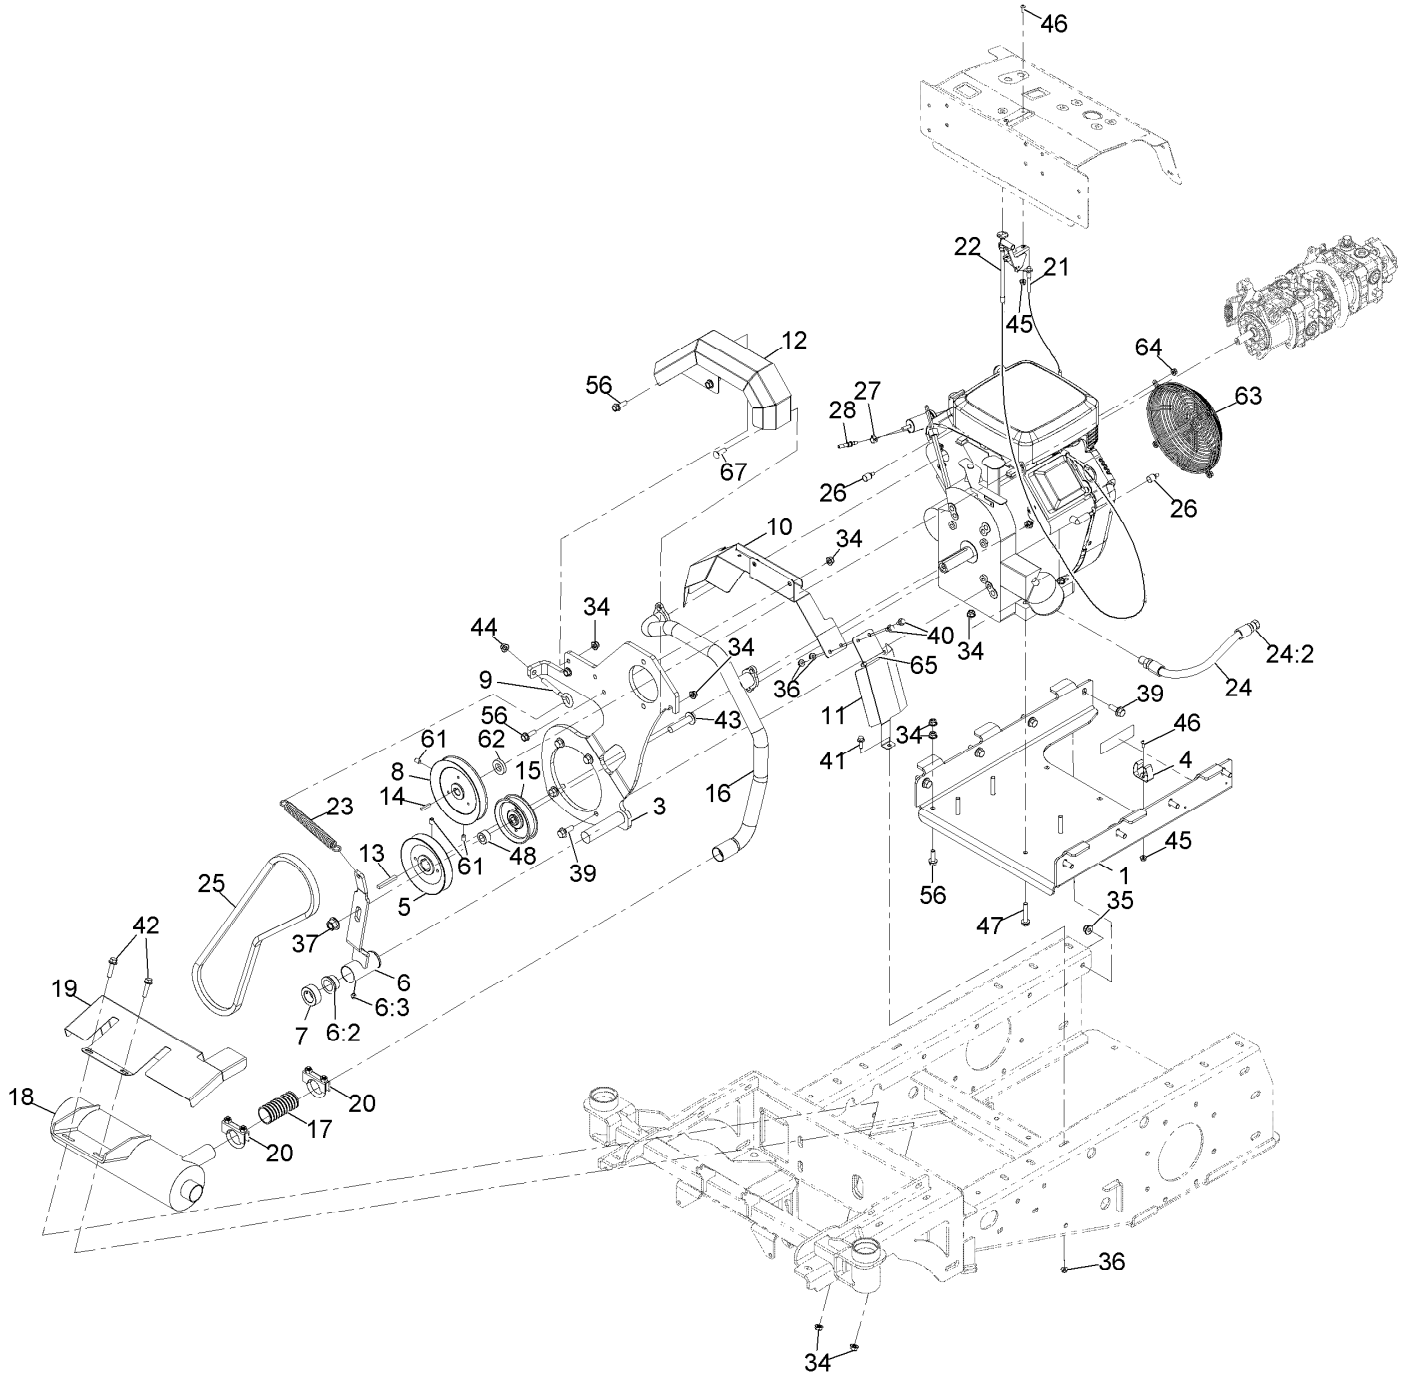

Engine Assembly (continued)

Ref.	Part Number	Qty.	Description
1	135-5492	1	Tray-Engine
3	135-5453-03	1	Bracket-Engine, Pump [black]
4	135-5661	1	Holder-Tool, Clip
5	135-5657	1	Pulley-Drive
6	135-5669	1	Arm-Tension, ASM
6:2	256-132	2	Bushing-Flange
6:3	302-63	1	Fitting-Grease, Zerk
7	135-5382	1	Collar
8	135-5663	1	Pulley-Drive, Pump
9	135-5667	1	Bolt-Eye
10	135-5565	1	Guard, Lower Muffler
11	135-5566	1	Guard, Lower Muffler
12	135-5552	1	Guard-Pulley
13	103-4177	1	Key
14	1-807272	1	Key
15	135-5662	1	Pulley-Idler, Flat
16	135-5670	1	Manifold-Exhaust
17	135-5658	1	Tube-Exhaust, Flex
18	135-5685	1	Muffler
19	135-5568	1	Shield-Heat, Muffler
20	2112-11	2	Clamp-Muffler
21	135-5260	1	Cable-Throttle
22	135-5707	1	Cable-Choke
23	135-5780	1	Spring-Extension
24	135-5365	1	ASM, Oil Drain Hose W/Plug
24:2	AU218-774	1	Plug
25	135-5664	1	Belt-V
26	135-5677	2	Tube-Heat Shrink, 1/2
27	2412-98	1	Clamp-Hose
28	135-5678	1	Barb-Fuel
34	135-6109	13	Nut-Hex Flange
35	135-6110	8	Nut-Hex Flange
36	135-6108	3	Nut-Hex Flange
37	99-5107	1	Nut-Lock
39	135-6208	12	Screw-HHF
40	135-6280	2	Screw-HHF
41	135-6221	1	Screw-HHF
42	135-6261	2	Screw-HHF
43	3234-46	1	Screw-HHF
44	104-8300	1	Nut-HF, NI
45	135-6342	3	Nut-Hex Flange
46	135-6374	3	Screw-HSBH
47	135-5779	4	Screw-HHF
48	116-2959	1	Spacer
56	135-6272	5	Screw-HHF
61	3246-17	3	Setscrew-HSH
62	1-323539	1	Spacer
63	135-6554	1	Guard-Wire, Vanguard
64	33003-00	4	Nut-HF
65	3290-378	1	Tie-Cable
67	HDW17294	1	Bolt,Carriage,5/16-18X1,ST/ST 18-8

Hydraulic Assembly

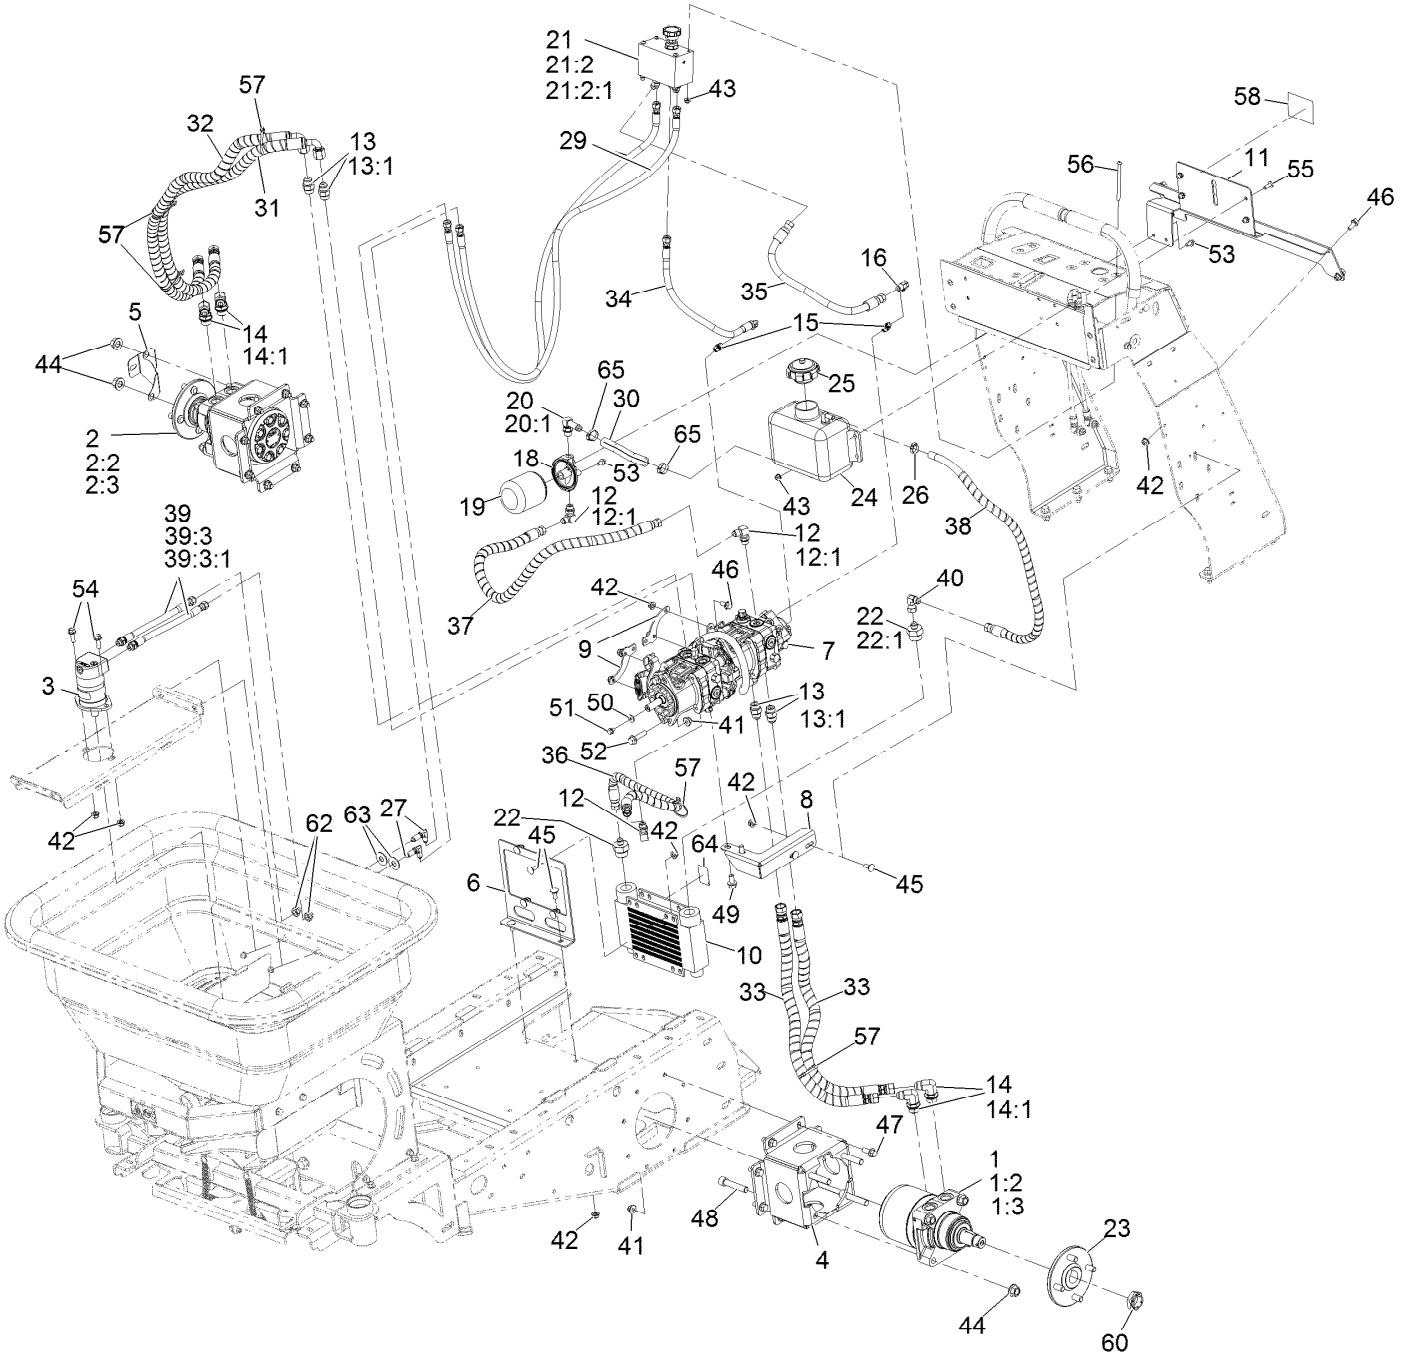


Hydraulic Assembly (continued)

Ref.	Part Number	Qty.	Description
1	135-5230	1	Motor, LH Wheel
1:2	3257-42	1	Key-Woodruff 5/16 X 1
1:3	103-6994	1	Seal Kit
2	135-5231	1	Motor, RH Wheel
2:2	3257-42	1	Key-Woodruff 5/16 X 1
2:3	103-6994	1	Seal Kit
3	135-5243	1	Motor-Hydraulic, Spreader
4	135-5448-03	2	Mount-Motor, Wheel [black]
5	135-5574	1	Bracket-Hopper, Speedometer Sensor
6	135-6483	1	Mount-Cooler
7	135-5665	1	Pump-Tandem
8	135-5551	1	Bracket-Support, Hydro Pump
9	135-5558	2	Extension, Hydro Pump
10	135-5679	1	Cooler-Oil
11	135-5550	1	Mount, Hydraulic Tank And Filter
12	103-1802	3	Fitting-Elbow, 90 DEG
12:1	237-42	1	O-Ring
13	353-388	4	Fitting-Straight
13:1	237-79	1	O-Ring
14	353-426	4	Fitting-90 DEG
14:1	237-80	1	O-Ring
15	353-545	2	Fitting-Straight
16	135-5680	1	Fitting-90 Swivel
18	104-7836	1	Filter-Head
19	135-5695	1	Filter-Hydraulic
20	109-6449	1	Fitting-Elbow, 90
20:1	237-42	1	O-Ring
21	135-5256	1	Manifold-Hopper, W/Out Relief
21:2	353-212	1	Fitting-Elbow, 45 DEG
21:2:1	237-42	1	O-Ring
22	AU218-5044	2	Adapter-Straight
22:1	237-81	1	O-Ring
23	135-5684	2	Hub-Wheel
24	135-5712	1	Tank-Hydraulic, Plastic
25	135-5713	1	Cap-Vented
26	135-5757	1	Clamp-Oetiker, 167
27	135-5796	2	Fitting-Elbow, 90
29	135-5357	2	Hose ASM, HYD HP
30	109-5577	1	Hose-Hydraulic
31	135-5458	1	Hose ASM, HYD HP
32	135-5460	1	Hose ASM, HYD HP
33	135-5457	2	Hose ASM, HYD HP
34	135-5360	1	Hose ASM, HYD HP
35	135-5361	1	Hose ASM, HYD LP
36	135-5384	1	Hose ASM, HYD LP
37	135-5385	1	Hose ASM, HYD LP
38	135-5456	1	Hose ASM, HYD LP
39	135-5359	2	Hose ASM, HYD HP
39:3		1	Fitting-Straight, Rigid ●
39:3:1	237-42	1	O-Ring
40	AU218-980	1	Fitting-Swivel, 90 DEG
41	135-6110	18	Nut-Hex Flange
42	135-6109	18	Nut-Hex Flange
43	135-6108	8	Nut-Hex Flange
44	99-5107	8	Nut-Lock 1/2-13
45	126-0695	8	Screw-CARR
46	126-2712	8	Screw-HHF 5/16-18 X 3/4 SS
47	135-6208	16	Screw-HHF
48	3274-71	8	Screw-HSH
49	135-6274	2	Screw-HHF
50	135-6273	1	Washer
51	81-1280	1	Screw-HHF
52	135-6278	2	Screw-HHF
53	135-6280	2	Screw-HHF
54	135-6272	2	Screw-HHF
55	135-7080	4	Screw-Hsbhf
56	135-6385	4	Screw-HSBH
57	3290-378	6	Tie-Cable
58	135-6398	1	Decal-Oil
60	116-1399	2	Locknut
62	3220-4	2	Nut-Jam
63	135-5586	2	Washer-SS, 1.25 OD, .503 ID
64	106-5517	1	Decal-Warning
65	135-5692	2	Clamp-Oetiker, 167

● Not serviced separately

Electrical Assembly

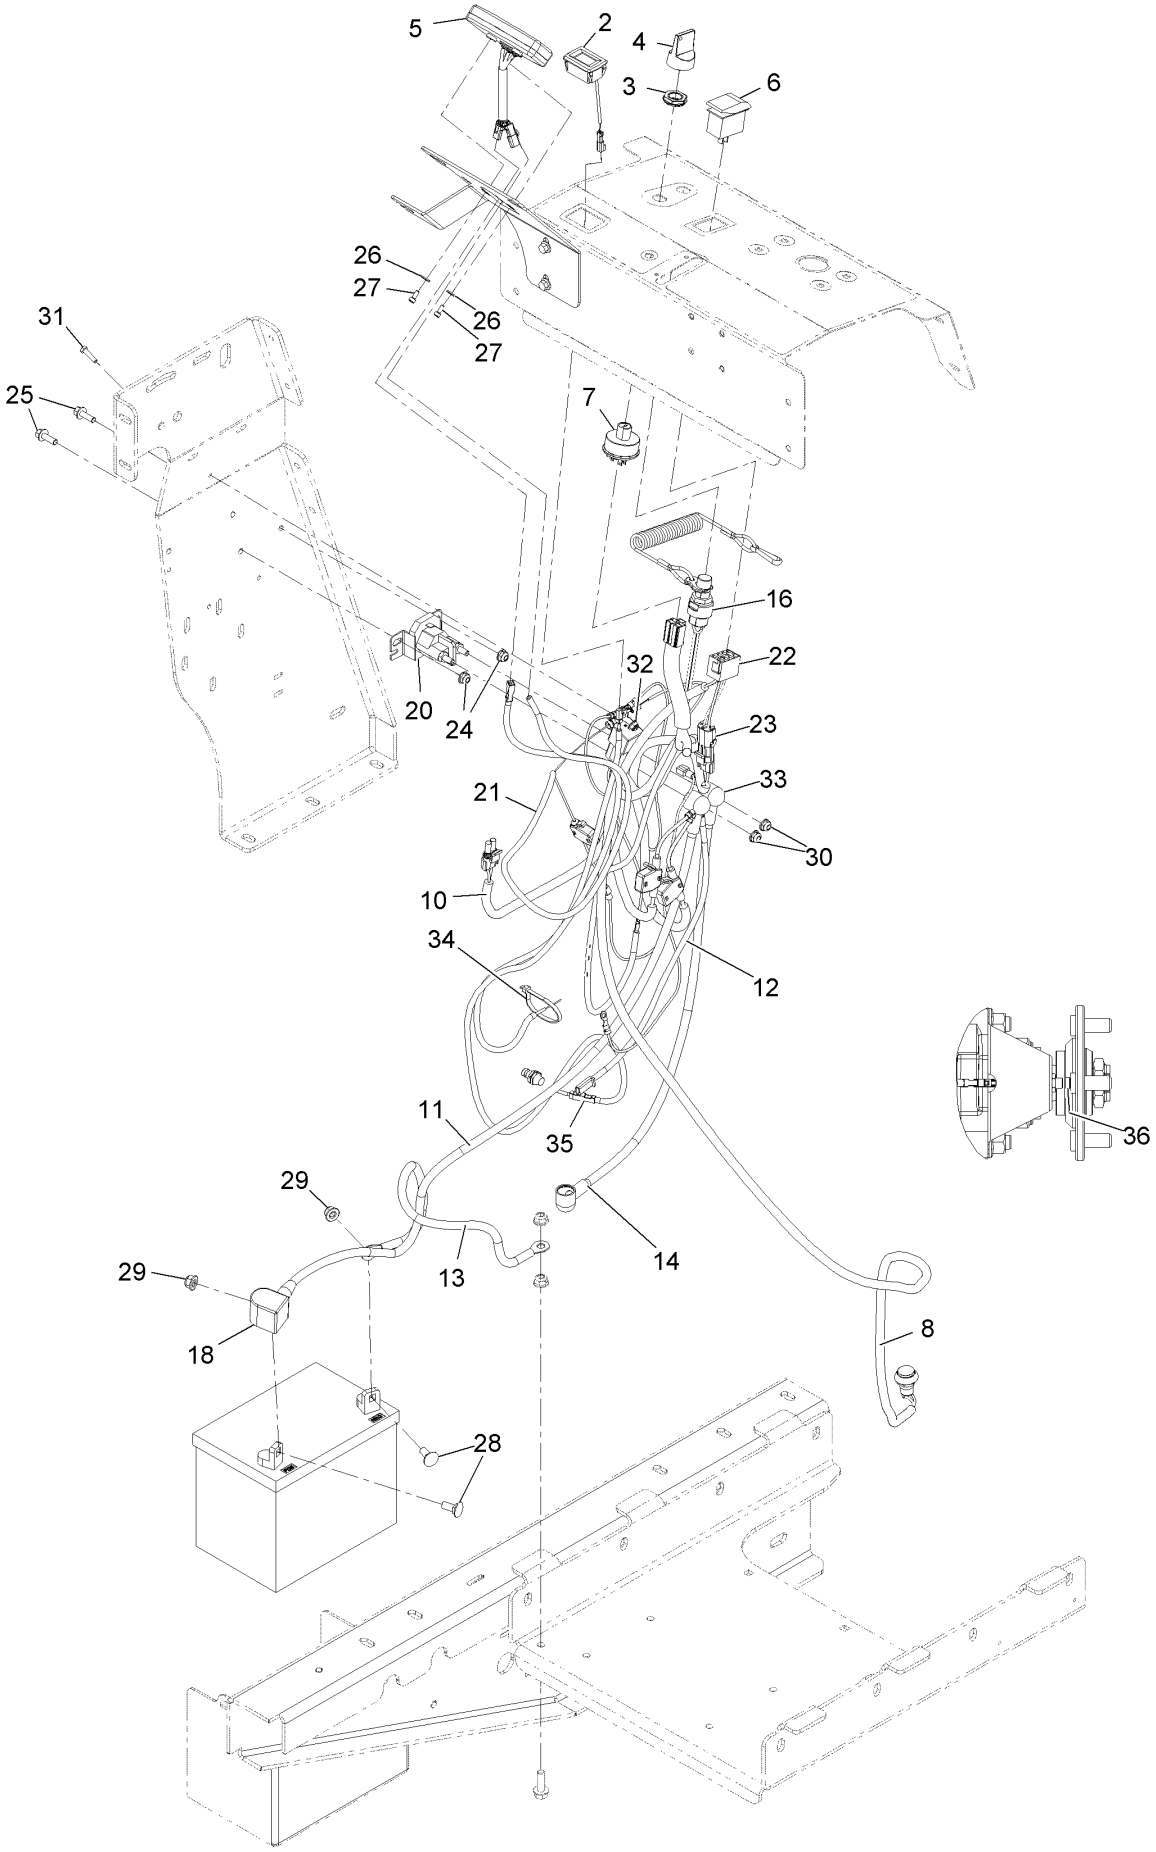

Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
2	135-5259	1	Meter-Tach/Hour
3	135-5715	1	Nut-Switch, Key
4	135-5708	1	Key-Umbrella
5	135-8900	1	Head Only, Striker
6	100-8469	1	Switch-Rocker
7	135-6052	1	Switch-Ignition
8	135-6054	1	Switch-Push Button
10	135-6113	1	Harness, Main
11	135-6114	1	Cable-Positive
12	135-6115	1	Wire-Solenoid
13	135-6116	1	Cable-Ground
14	135-6117	1	Cable-Positive
16	135-6121	1	Switch-Op
18	135-2304	1	Insulator-Battery
20	135-6189	1	Solenoid-Starter
21	135-6443	1	Harness-Striker
22	32160-008	1	Connector-Carling, 8F
23	32160-072	1	Connector-Wp,2M
24	135-6108	2	Nut-Hex Flange
25	135-6221	2	Screw-HHF
26	126-0759	2	Washer-Flat
27	135-6357	2	Screw-HSH
28	126-0695	2	Screw-CARR
29	135-6109	2	Nut-Hex Flange
30	104-7201	2	Nut-Nyloc 1/4-20 Flg
31	135-6356	1	Screw-HH
32	135-6342	1	Nut-Hex Flange
33	1-543393	3	Insulator-Solenoid
34	3290-378	9	Tie-Cable
35	135-8898	1	Cable-Trail Tech, Sensor
36	135-8903	1	Magnet, Speedometer
99	135-7317	1	Manual-User, Striker ●
99	135-7318	1	Card-Striker, Quick Start ●

● Not illustrated

