Form No. 3426-958 Rev A

TORO®

Count on it.

Parts Catalog

Debris Blower 600

Model No. 44536—Serial No. 403063082 and Up

Register at www.Toro.com.
Original Instructions (EN)

CE

3426-958 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.


For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Housing and Impeller Assembly 4
Drive Assembly 5
Chute and Roller Assembly 7
Drive Shaft Assembly No. 105-4924 9
Joint, Shaft and Guard Assembly No. 107-1144 10

© 2018—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420


Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

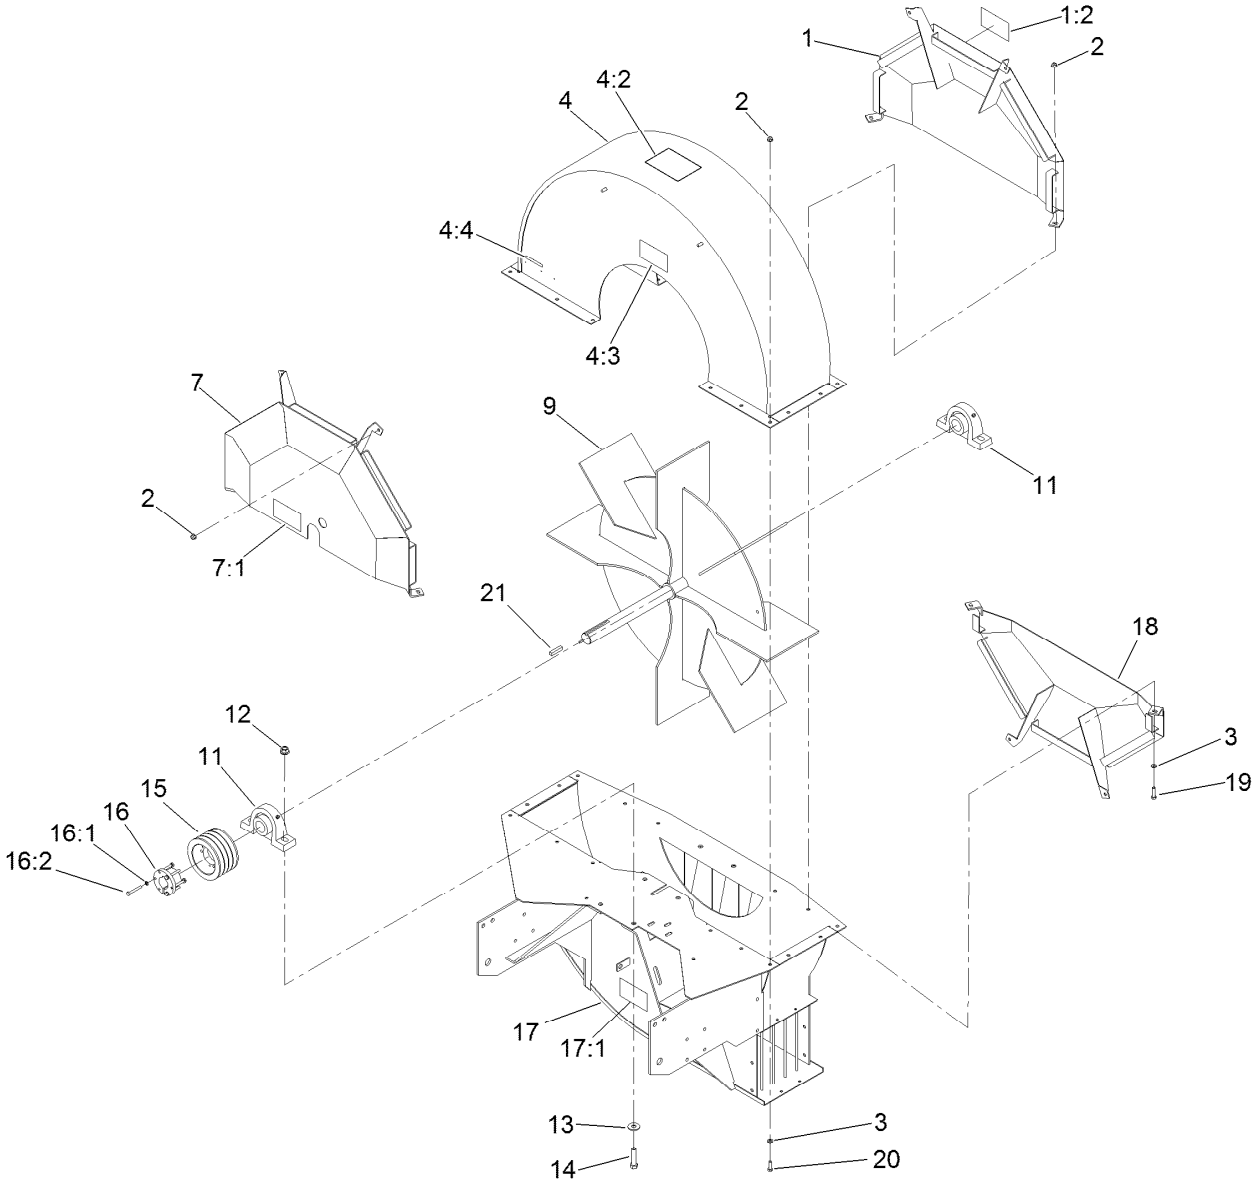

Housing and Impeller Assembly

Ref.	Part Number	Qty.	Description
1	105-0689	1	Shield-Fan
1:2	67-1300	1	Decal
2	104-8300	23	Nut-HF, NI
3	3256-23	17	Washer-Plain
4	107-1388	1	Blower Top ASM
4:2	98-3110	1	Decal-Caution
4:3	105-0709	2	Decal-Warning
4:4	133-8061	1	Decal-Warning
7	105-0713	1	Shield-Fan, Front
7:1	105-0709	1	Decal-Warning
9	106-0345-01	1	Impeller
11	105-0621	2	Bearing-Block, Pillow
12	99-5107	4	Nut-Lock

Ref.	Part Number	Qty.	Description
13	3256-6	4	Washer-Flat
14	325-9	4	Screw-HH
15	106-0354	1	Pulley
16	106-0359	1	Bushing-Pulley
16:1	321-11	3	Screw-HH
16:2	3253-3	3	Washer-Lock
17	107-1386	1	Frame ASM
17:1	105-0709	2	Decal-Warning
18	LDB11400-01	1	Shield-Fan, Lower
19	322-6	4	Screw-HH
20	322-5	13	Screw-HH
21	41-004-5241	1	Key

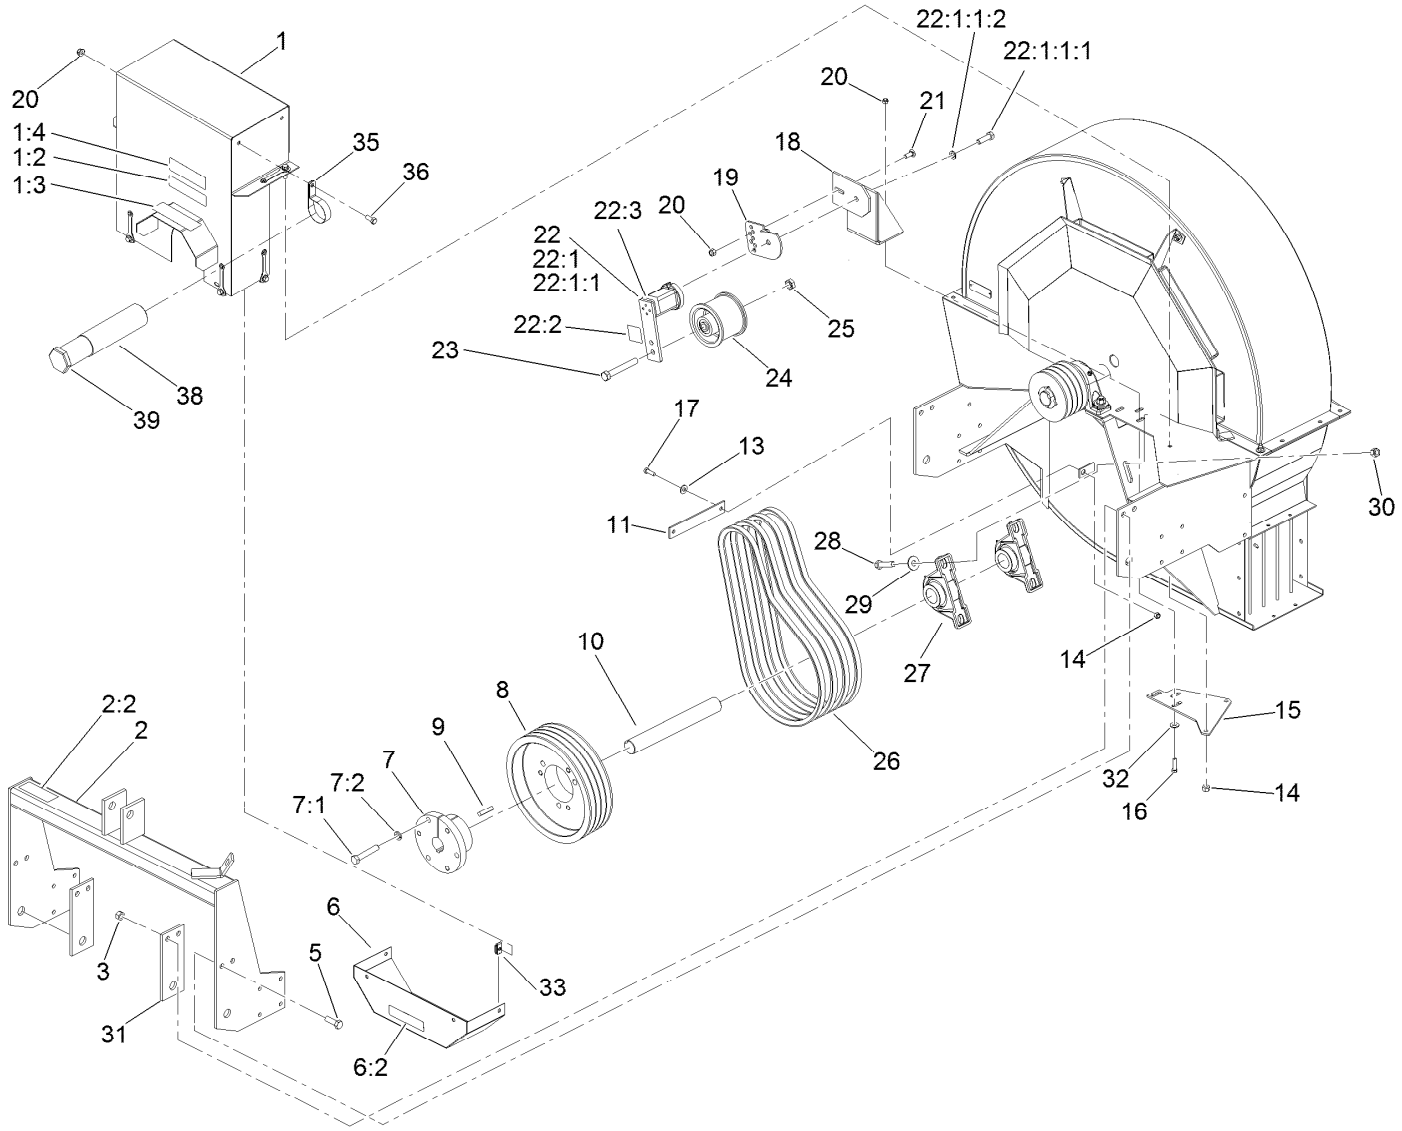


Drive Assembly

Ref.	Part Number	Qty.	Description
1	119-3011	1	Shield-Belt
1:2	93-7814	1	Decal-Danger
1:3	105-0628	1	Decal-Caution, U-Joint
1:4	105-0627	1	Decal-Caution
2	105-0714	1	Hitch ASM
2:2	105-0698	1	Decal-Caution
3	99-5107	4	Nut-Lock
5	325-6	4	Screw-HH
6	105-0686	1	Shield-Lower
6:2	93-7814	1	Decal-Danger
7	106-0361	1	Bushing-Pulley
7:1	325-11	3	Screw-HH
7:2	3253-7	3	Washer-Lock
8	106-0356	1	Pulley
9	41-004-5241	1	Key
10	LDB12100	1	Shaft-Input
11	LDB15700-01	1	Stabilizer-Shield
13	3256-23	1	Washer-Plain

Ref.	Part Number	Qty.	Description
14	104-8300	3	Nut-HF, NI
15	LDB14200-01	1	Support-Deck
16	323-8	3	Screw-HH
17	322-5	1	Screw-HH
18	LDB13200-01	1	Mount-Idler
19	105-4787-01	1	Stabilizer-Tensioner
20	104-8301	4	Nut-HF, NI
21	3231-2	1	Bolt-CARR
22	106-0334	1	Idler Tensioner ASM
22:1		1	Tensioner-Idler, Modified ●
22:1:1		1	Tensioner-Idler ●
22:1:1:1	33116-040	1	Screw-HH
22:1:1:2	3253-7	1	Washer-Lock
22:2	105-0668	1	Decal-Align
22:3	105-0669	1	Decal-Angle
23	3214-15	1	Screw-HH
24	105-4821	1	Idler-Pulley
25	3220-6	1	Nut-Jam


● Not serviced separately

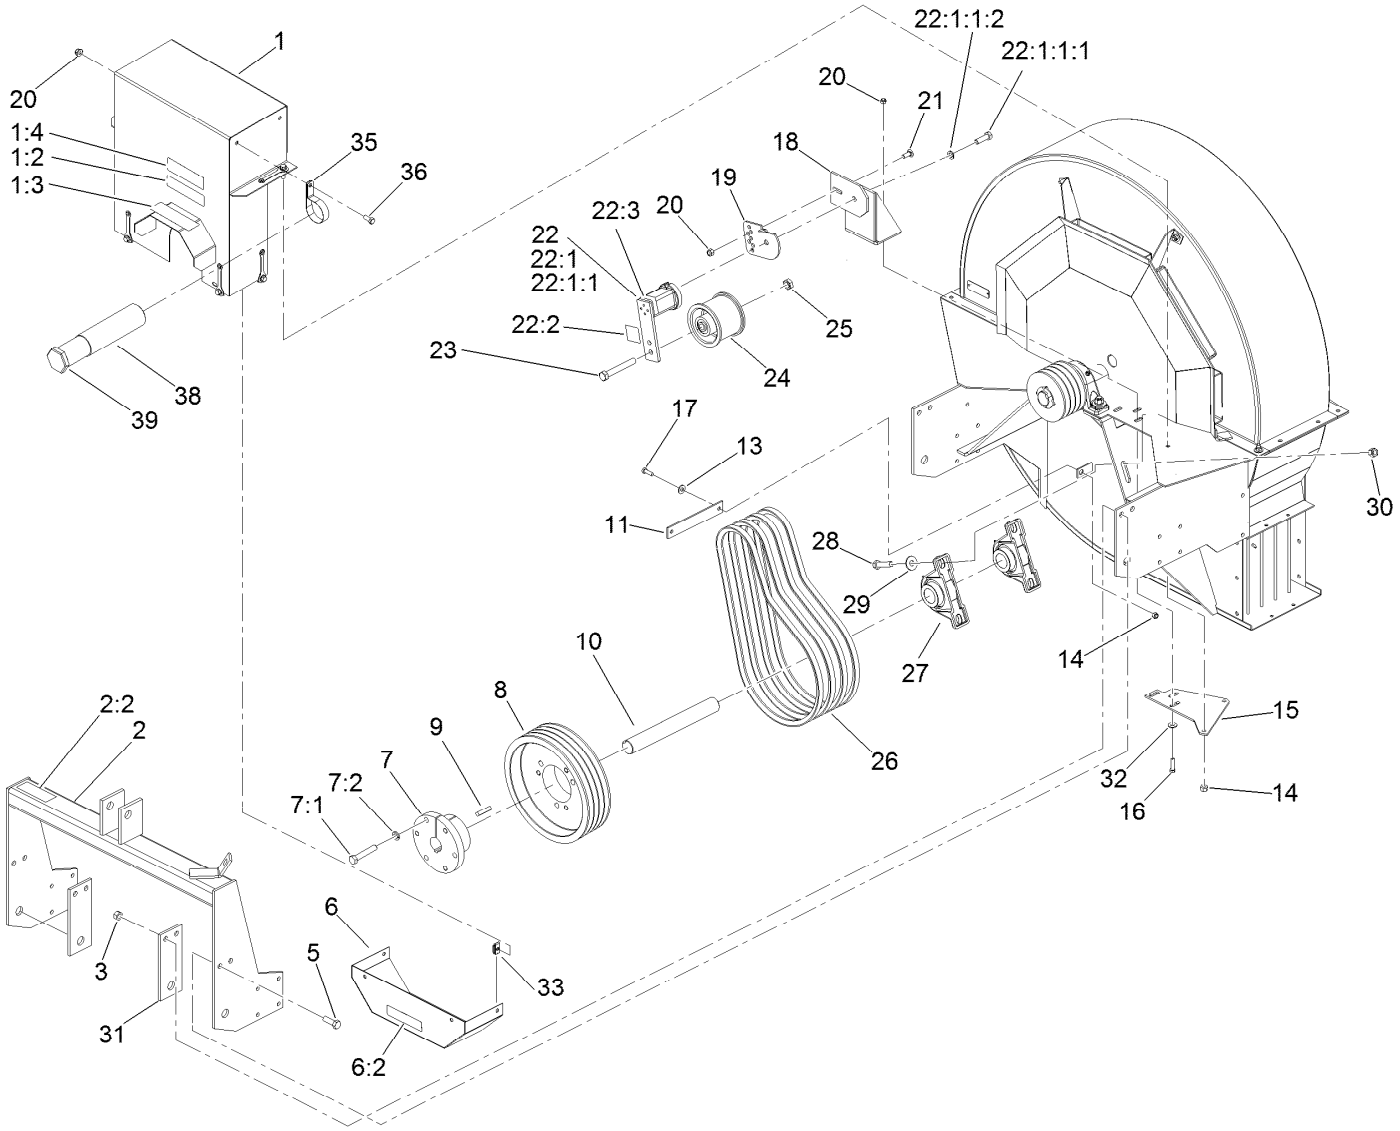

Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
26	LDB13000	4	V-Belt
27	105-0621	2	Bearing-Block, Pillow
28	325-9	4	Screw-HH
29	3256-6	4	Washer-Flat
30	99-5107	4	Nut-Lock
31	LDB10300-01	2	Stiffener-Hitch
32	3256-4	2	Washer-Flat
33	94-2413	4	Nut-U
35	2412-133	2	Clamp-R
36	323-5	2	Screw-HH
38	104-7050	1	Tube-Manual
39	104-7048	1	Cap-Housing


● Not serviced separately

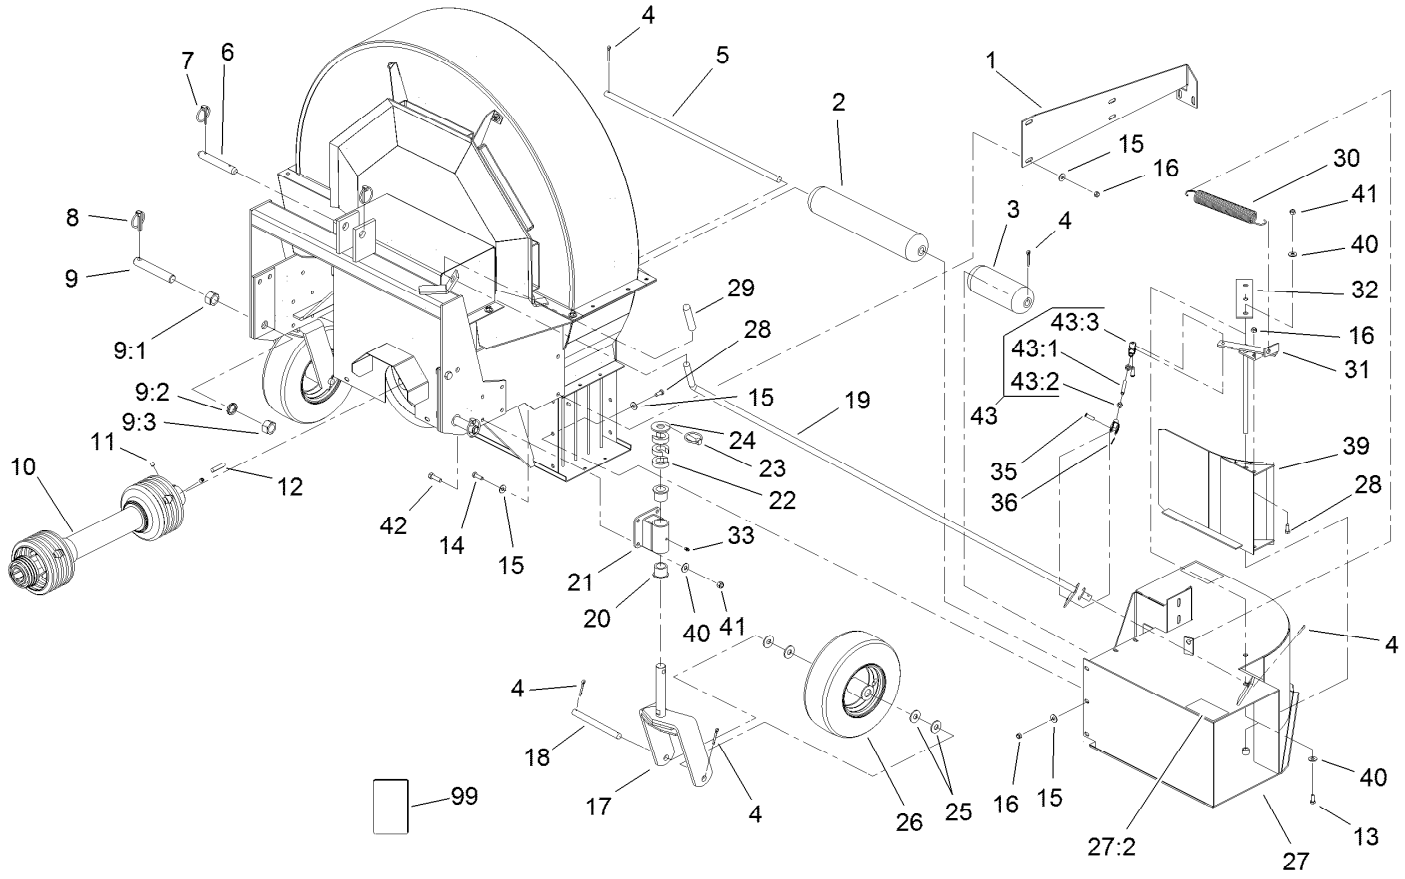

Chute and Roller Assembly


Ref.	Part Number	Qty.	Description
1	LDB11600-01	1	Brace-Discharge, Back
2	105-4823	1	Roller-Turf
3	LDB13300	1	Roller-Turf, Short
4	3272-22	7	Pin-Cotter
5	LDB13500	1	Axle-Roller
6	92-1233	1	Pin-Clevis
7	92-1298	2	Pin-Lynch
8	283-71	2	Pin-Lynch
9	01-252-0010	2	Lift Arm Pin Adjustment ASM
9:1	3220-8	1	Nut-Jam
9:2	3253-28	1	Washer-Lock/Sp
9:3	3219-8	1	Nut-Hex
10	105-4924	1	Driveshaft ASM
11	3247-2	2	Screw-Set, HSH
12	41-004-5241	1	Key
13	323-6	2	Screw-HH
14	322-5	6	Screw-HH
15	3256-23	32	Washer-Plain
16	3296-29	17	Nut-Lock, NI
17	LDB10900-01	2	Caster-Fork

Ref.	Part Number	Qty.	Description
18	LDB11000	2	Axle-Wheel, Caster
19	LDB10700-01	1	Handle-Diverter
20	LDB11103	4	Bushing-Flange
21	LDB11100-01	2	Mount-Caster
22	LDB12600	6	Spacer-Sloted
23	283-71	2	Pin-Lynch
24	3256-62	2	Washer-Flat
25	3256-7	8	Washer-Flat
26	LDB12500	2	Castor Wheel ASM
27	105-0688	1	Discharge-Chute
27:2	105-0708	2	Decal-Danger
28	322-3	13	Screw-HH
29	PT503-00	1	Cover-Handle
30	105-4825	1	Spring
31	LDB10600-01	1	Pivot-Diverter
32	LDB10800-01	1	Plate-Top, Pin
33	302-5	2	Fitting-Grease
35	283-1	2	Pin-Clevis
36	3272-10	2	Pin-Cotter
39	LDB11800-01	1	Gate ASM
40	3256-24	12	Washer-Flat

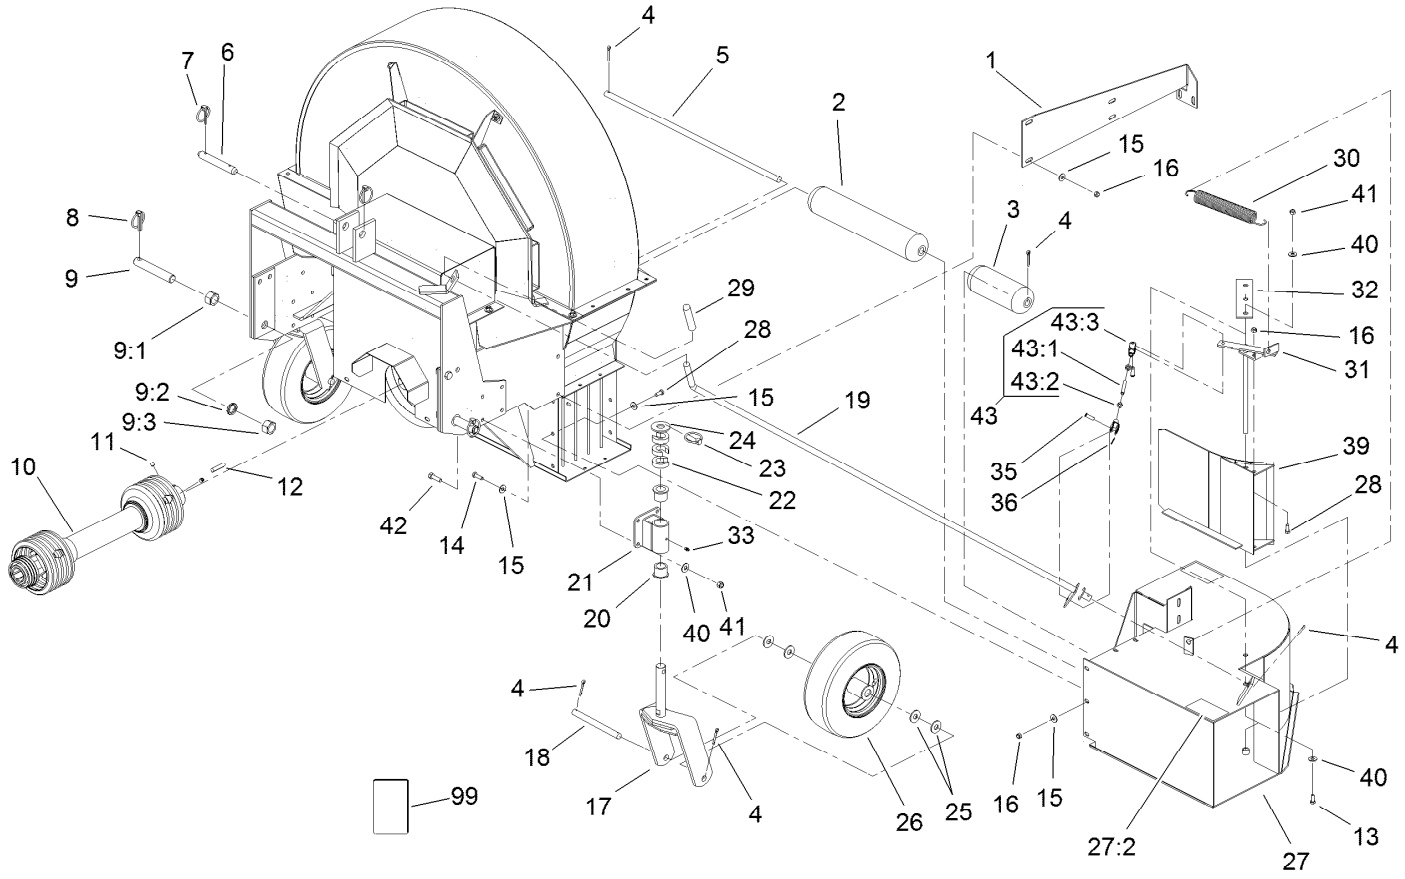


Chute and Roller Assembly (continued)

Ref.	Part Number	Qty.	Description
41	3296-39	10	Nut-Lock, NI
42	323-7	8	Screw-HH
43	115-6678	1	Chute Lever ASM
43:1	LDB14400	1	Rod-Threaded
43:2	3220-2	2	Nut-Jam
43:3	1-303105	2	Yoke-Adjustable
99	138-9038	1	Decal-Danger, Entanglement

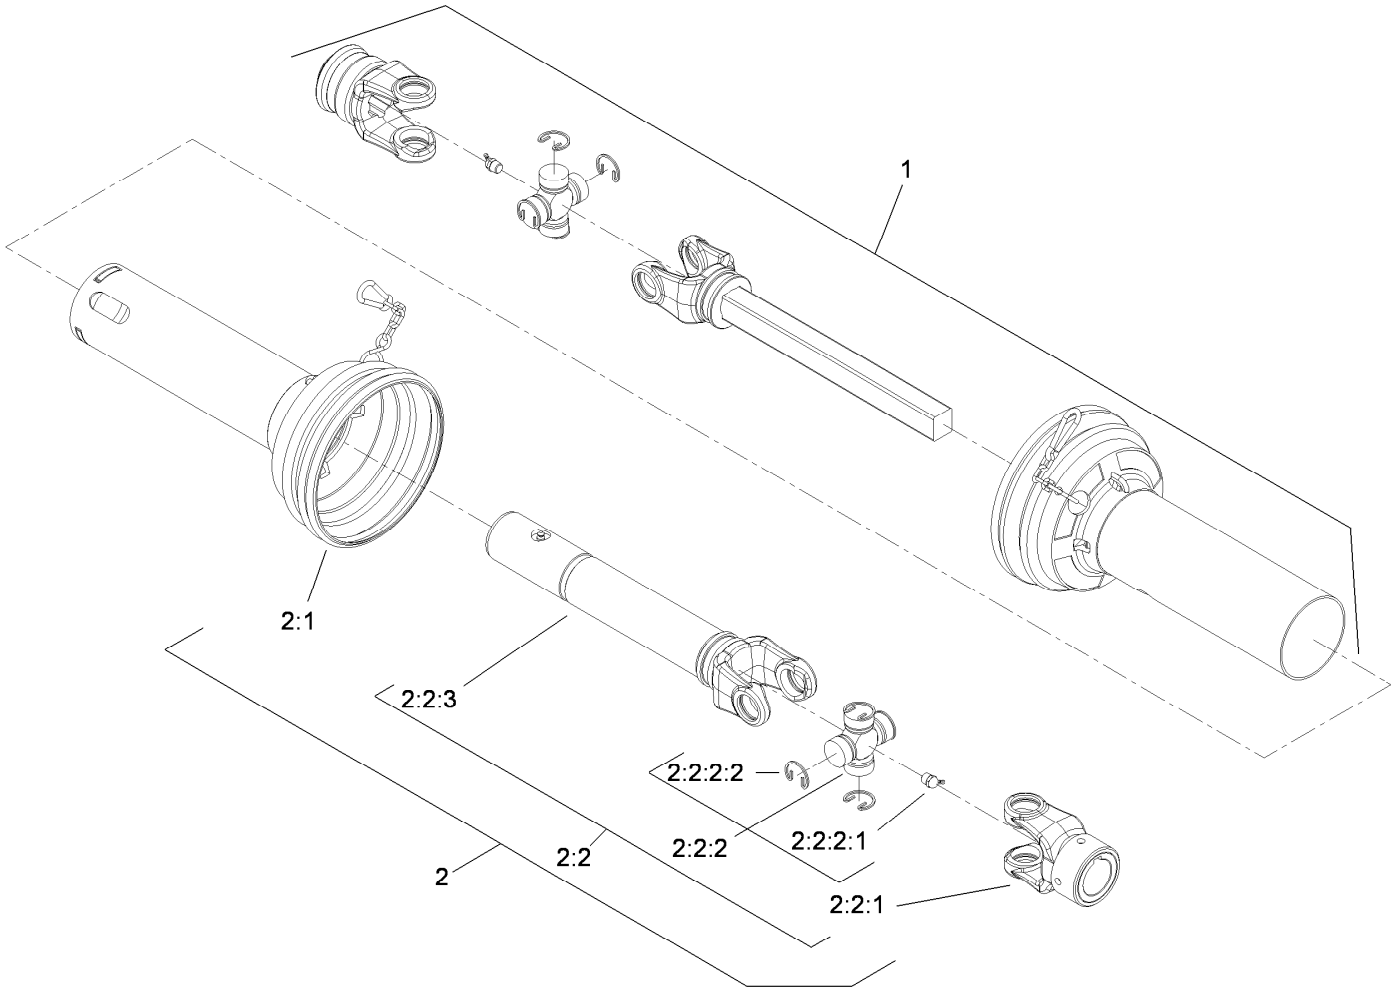

Drive Shaft Assembly No. 105-4924

Ref.	*Part Number*	*Qty.*	*Description*
1	107-1144	1	Joint And Shaft Half ASM
2	107-1146	1	Joint And Tube Half ASM
2:1	107-1155	1	Inner Guard
2:2	107-1147	1	Joint And Tube Half ASM
2:2:1	107-1158	1	Yoke
2:2:2	72-7990	1	Cross And Bearing Kit
2:2:2:1	302-10	1	Fitting-Grease
2:2:2:2	107-1161	4	Clip Retaining
2:2:3	107-1157	1	Yoke, Tube And Slip Sleeve ASM

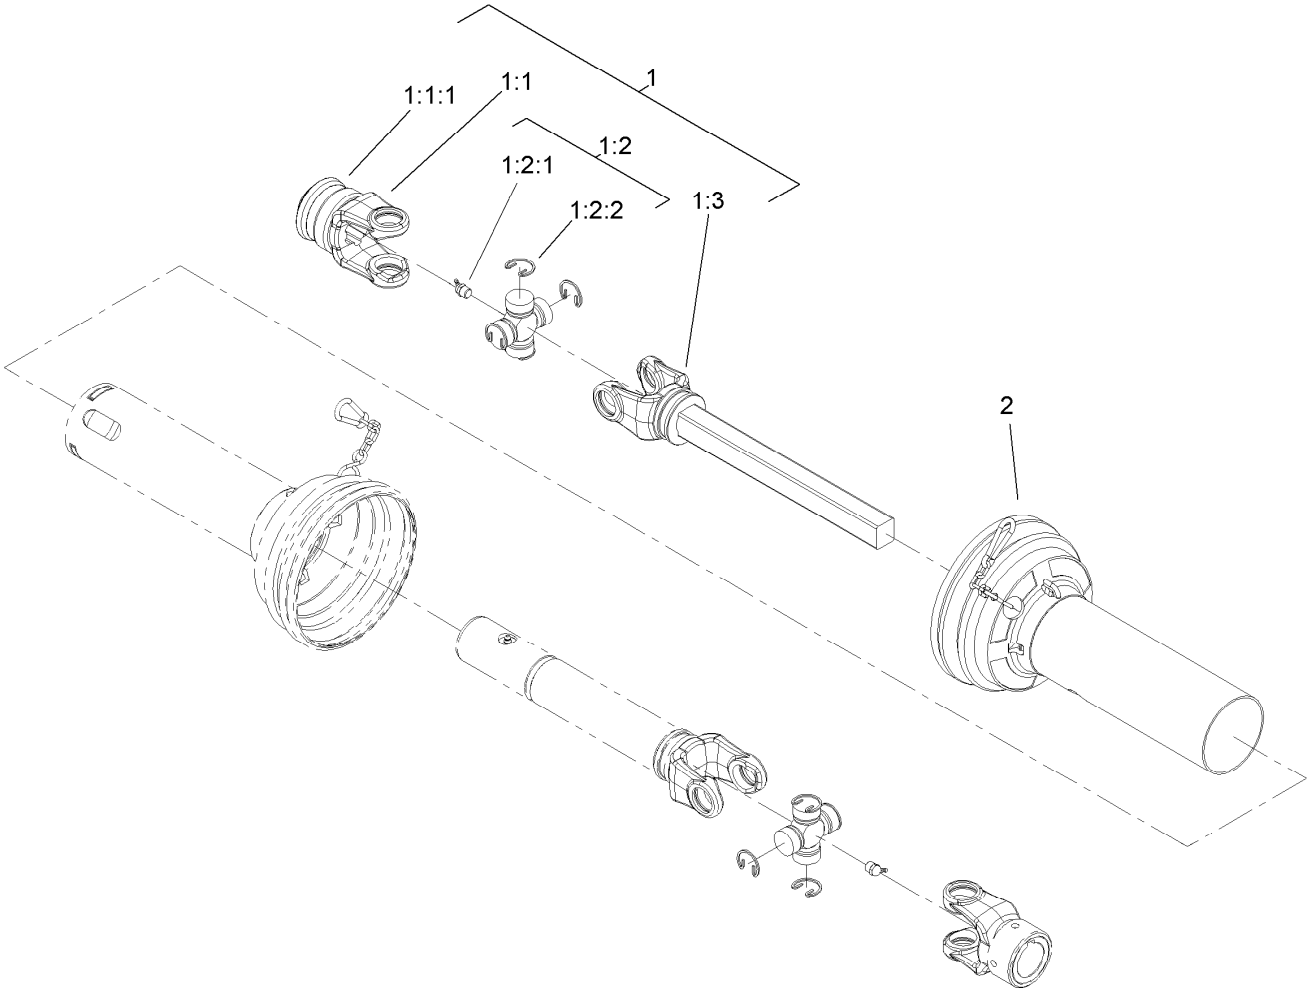

Joint, Shaft and Guard Assembly No. 107-1144

Ref.	*Part Number*	*Qty.*	*Description*
1	107-1145	1	Joint And Shaft Half ASM
1:1	107-1148	1	Yoke-Spring Lock ASM
1:1:1	99-4477	1	Yoke Spring Lock Repair Kit
1:2	72-7990	1	Cross And Bearing Kit
1:2:1	302-10	1	Fitting-Grease
1:2:2	107-1161	4	Clip Retaining
1:3	107-1149	1	Yoke And Shaft
2	107-1154	1	Outer Guard

Notes:



Count on it.