
FORM NO. 3322–622

TORO®

MODEL NO. 02202–90001 & UP

PARTS CATALOG

DEBRIS BLOWER
For Grounds Pro® 2000

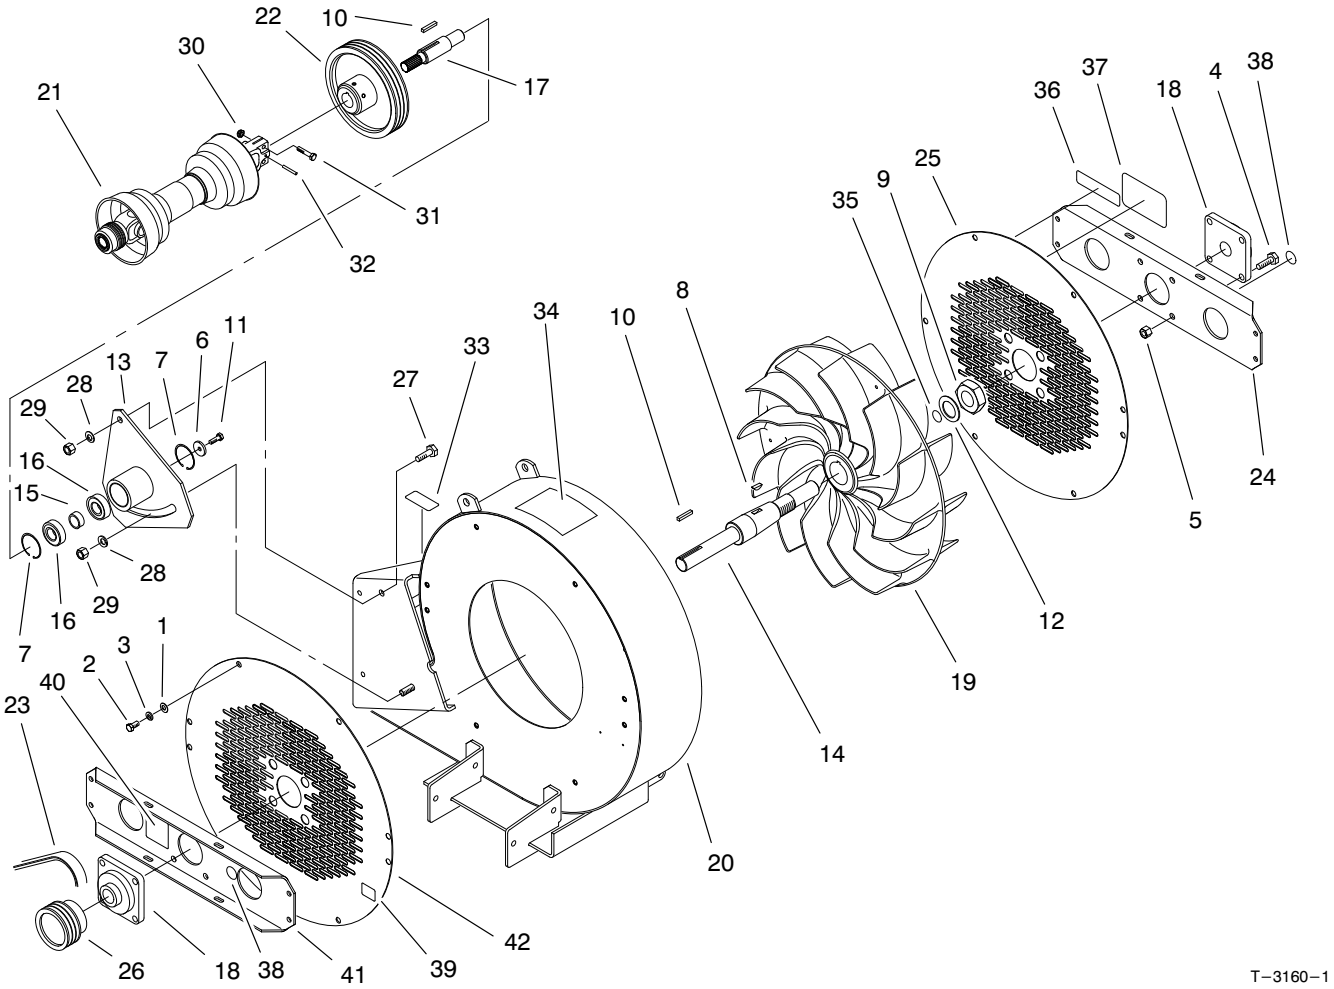

T–3160–1

BLOWER HOUSING ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	3256–24	Washer–Flat	16
2	323–5	Screw–HH	16
3	3253–21	Washer–Lock	16
4	324–6	Screw–HH	8
5	3296–48	Nut–Lock	8
6	71–5320	Washer–Support	1
7	32120–8	Ring–Retaining, Internal	2
8	3257–42	Key–Woodruff	1
9	3218–17	Nut–Hex. Jam	1
10	5–1718	Key–Square	2
11	33114–016	Screw–HH	1
12	77–0950	Washer	1
13	94–8968	Tensioner Assembly	1
14	94–8952	Shaft–Fan	1
15	94–8972	Spacer–Bearing	1
16	94–8978	Bearing Assembly	2
17	94–8973	Shaft	1
18	94–8987	Bearing Assembly	2
19	94–8950	Fan	1
†20		Housing Assembly	1
21	99–4482	PTO Shaft Assembly	1
22	99–4491	Pulley	1
23	99–4499	V–Belt	1
24	99–4481	Plate–Front Bearing (Incl. Ref. #38)	1
25	99–4479	Screen–Front (Incl. Ref. #36)	2
26	99–4518	Clutch–Overrunning	1
27	325–6	Screw–HH	1
28	3256–26	Washer–Flat	2
29	3296–23	Nut–Lock NI	2
30	3296–29	Nut–Lock NI	2
31	322–7	Screw–HH	2
32	32121–34	Pin–Roll	1

PROTOTYPE

© The TORO Company – 1998
All Rights Reserved

TPS

† Not Serviced Separately

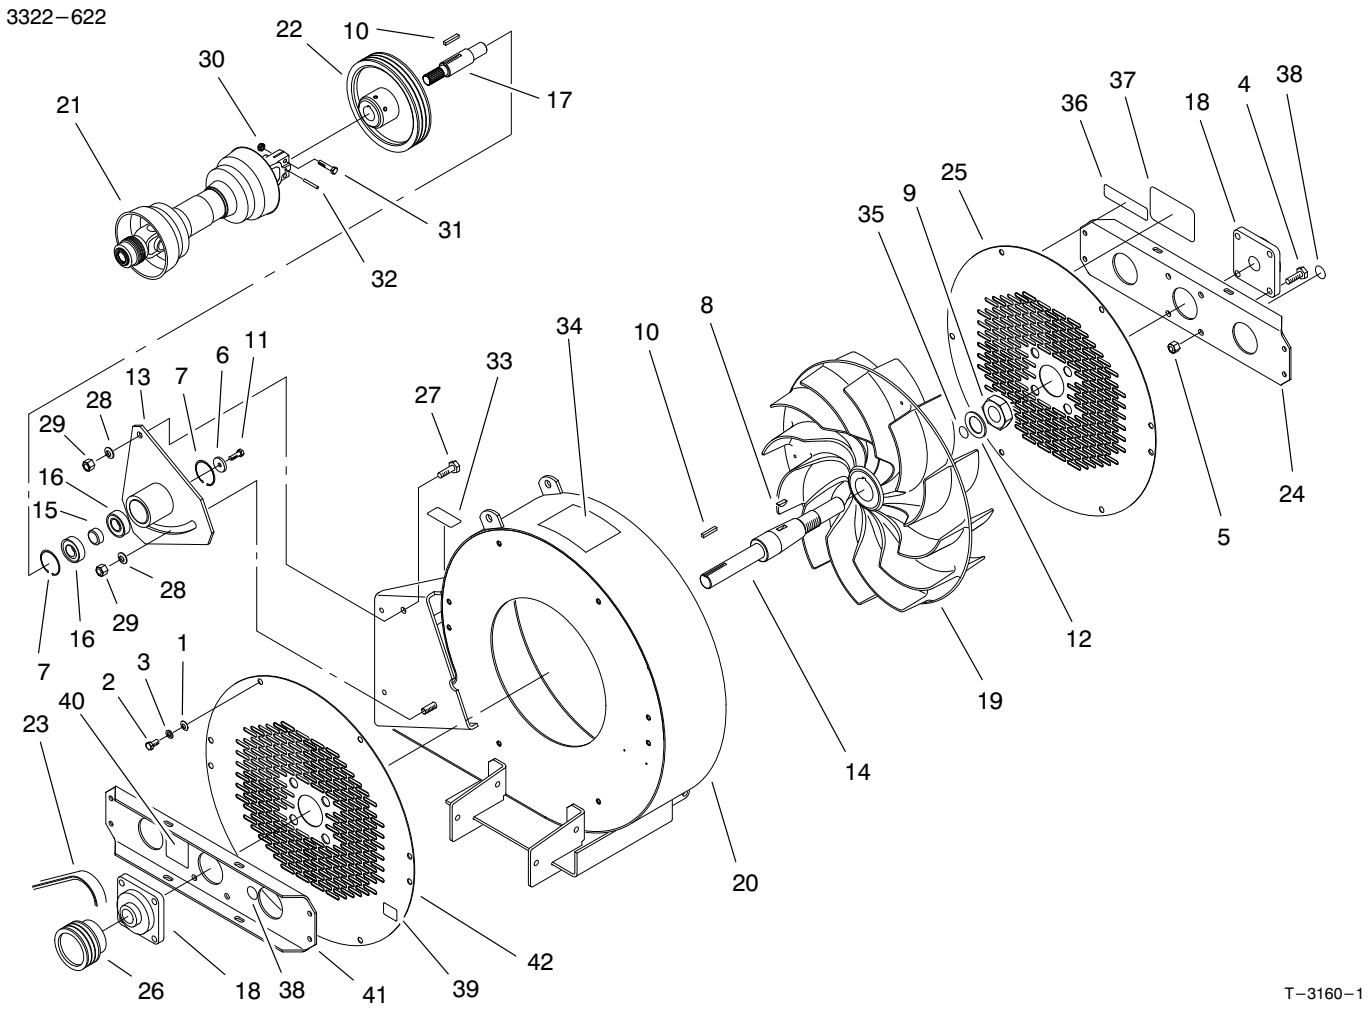


BLOWER HOUSING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
33	93−6674	Decal−Warning	1
34	98−3110	Decal−Caution CE	1
35	98−3111	Decal−Rotating	1
36	93−9083	Decal−Caution	1
37	67−1300	Decal−Toro	1
38	58−6520	Decal−Grease	2

Ref. No.	Part No.	Description	No. Used
39	93−7252	Decal−CE Mark	1
40	99−4486	Decal−Warning CE	1
41	99−4480	Plate−Back Bearing (Incl. Ref. #38 & 40)	1
42	98−5877	Screen	1

PROTOTYPE

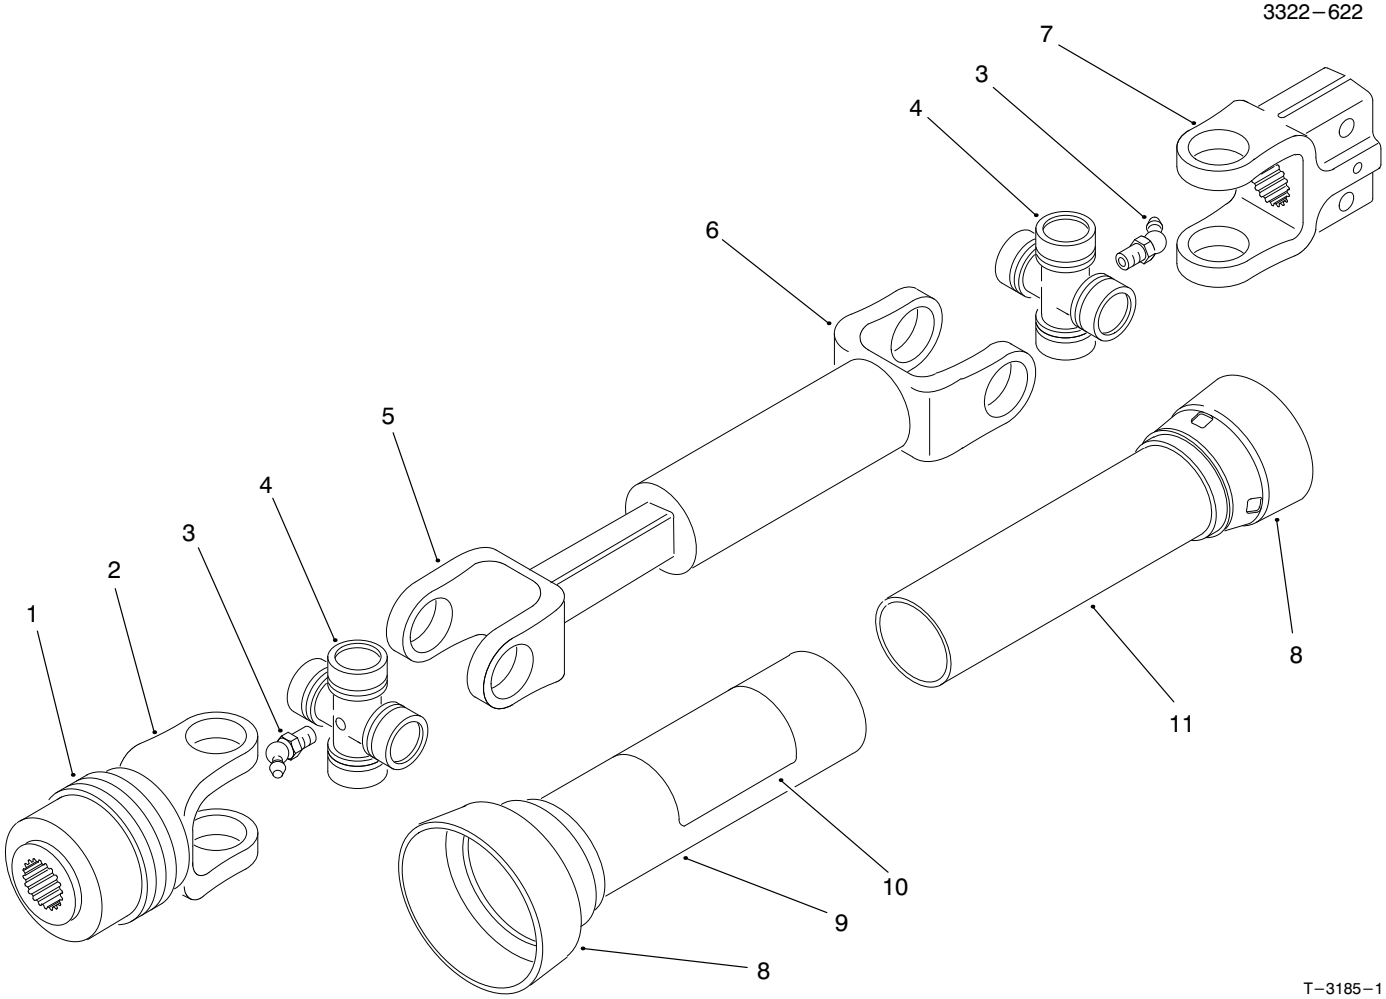


T–3185–1

POWER TAKE–OFF SHAFT ASSEMBLY NO. 99–4482

Ref. No.	Part No.	Description	No. Used
1	99–4477	Spring–Lok Repair Kit	1
2	99–4476	Spring–Lok Yoke Assembly	1
3	62–3820	Fitting–Grease	2
4	54–9180	U–Joint Kit	2
5	99–4475	Tube–Slip Yoke	1
6	99–4474	Shaft–Slip Yoke	1

Ref. No.	Part No.	Description	No. Used
7	54–9040	Yoke–End	1
8	99–4473	Non–Rotating Guard Kit	2
9	99–4472	Outer Guard Assembly (Incl. Ref. #10)	1
10	93–9862	Decal–Danger	1
11	99–4471	Guard–Inner	1

PROTOTYPE

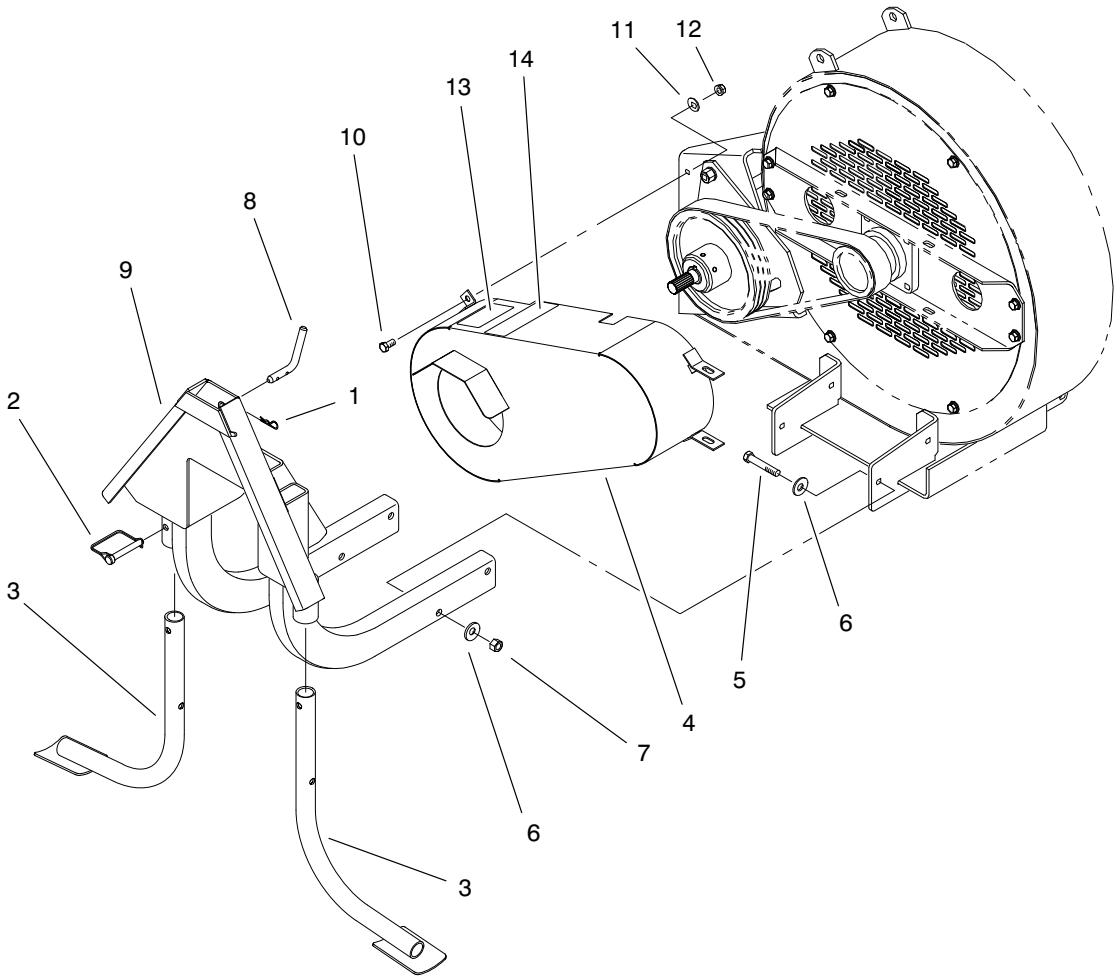

T−3161−1


LIFT FRAME & STAND ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3290−343	Pin−Cotter, Hair	1
2	93−4696	Pin−Snapper	2
3	98−5852	Support Tube Assembly	2
4	99−4478	Belt Cover Assembly (Incl. Ref. #13 & 14)	1
5	324−10	Screw−HH	4
6	3256−5	Washer−Flat	8
7	3296−48	Nut−Lock NI	4

Ref. No.	Part No.	Description	No. Used
8	98−5771	Pin−Lock	1
†9		A−Frame Assembly	1
10	323−5	Screw−HH	4
11	3256−24	Washer−Flat	4
12	3296−39	Nut−Lock NI	4
13	99−4487	Decal−Grease	1
14	98−3113	Decal−Caution	1

PROTOTYPE

† Not Serviced Separately

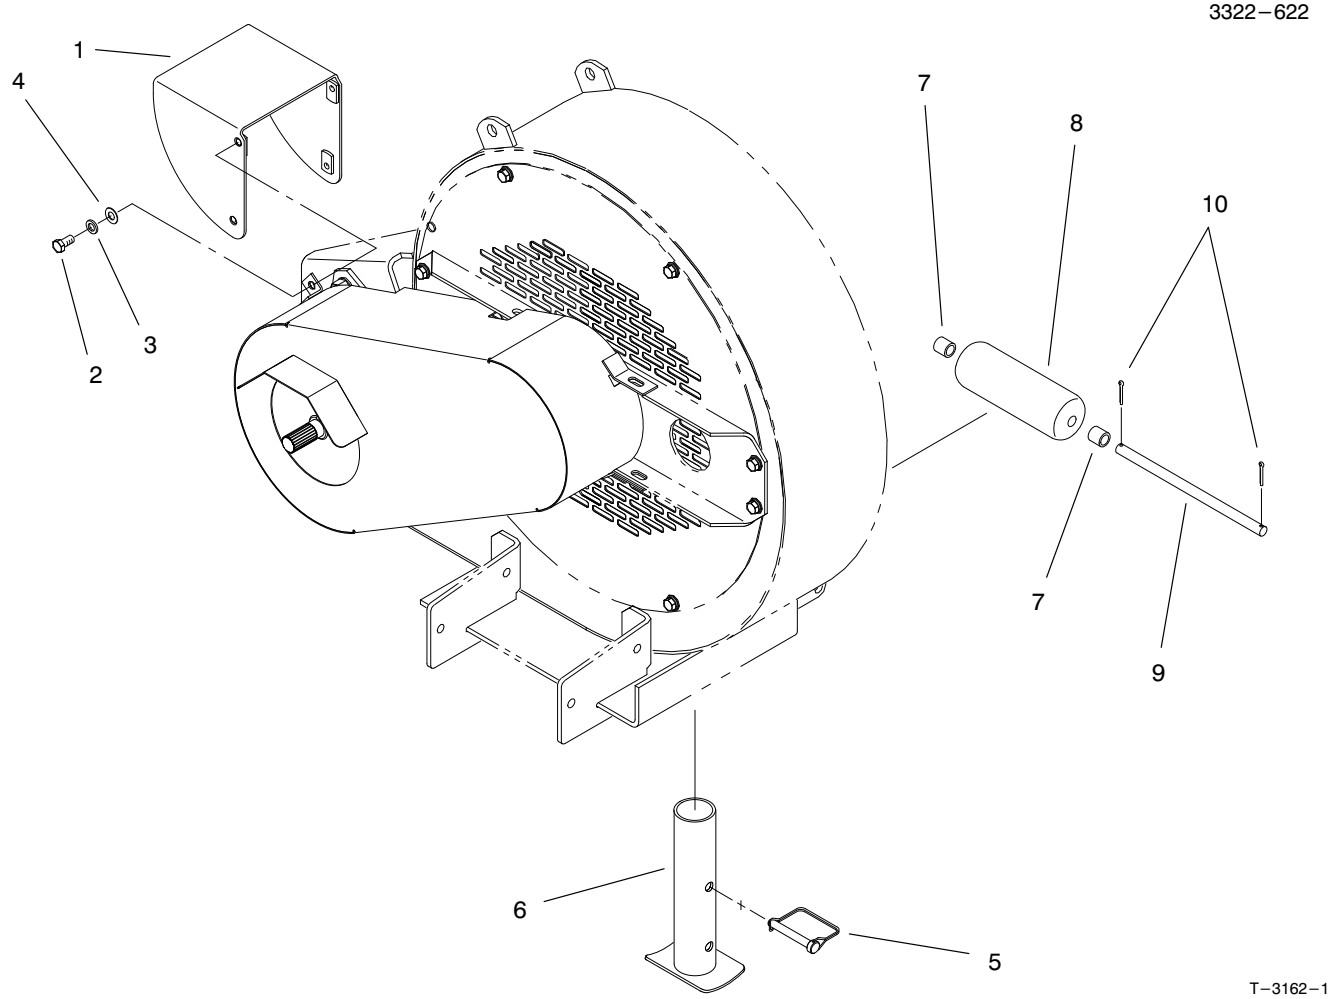

T–3162–1

ROLLER & CHUTE STAND ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	98–1140	Chute–Fan	1
2	323–4	Screw–HH	4
3	3253–21	Washer–Lock	4
4	3256–24	Washer–Flat	4
5	93–4696	Pin–Snapper	1

Ref. No.	Part No.	Description	No. Used
6	99–4541	Stand Assembly	1
7	99–4489	Spacer	2
8	31–0750	Roller	1
9	99–4490	Pin–Clevis	1
10	3272–11	Pin–Cotter	2

PROTOTYPE

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
5–1718	Key–Square	1	10	2
31–0750	Roller	5	8	1
54–9040	Yoke–End	3	7	1
54–9180	U–Joint Kit	3	4	2
58–6520	Decal–Grease	2	38	2
62–3820	Fitting–Grease	3	3	2
67–1300	Decal–Toro	2	37	1
71–5320	Washer–Support	1	6	1
77–0950	Washer	1	12	1
93–4696	Pin–Snapper	4	2	2
93–4696	Pin–Snapper	5	5	1
93–6674	Decal–Warning	2	33	1
93–7252	Decal–CE Mark	2	39	1
93–9083	Decal–Caution	2	36	1
93–9862	Decal–Danger	3	10	1
94–8950	Fan	1	19	1
94–8952	Shaft–Fan	1	14	1
94–8968	Tensioner Assembly	1	13	1
94–8972	Spacer–Bearing	1	15	1
94–8973	Shaft	1	17	1
94–8978	Bearing Assembly	1	16	2
94–8987	Bearing Assembly	1	18	2
98–1140	Chute–Fan	5	1	1
98–3110	Decal–Caution CE	2	34	1
98–3111	Decal–Rotating	2	35	1
98–3113	Decal–Caution	4	14	1
98–5771	Pin–Lock	4	8	1
98–5852	Support Tube Assembly	4	3	2
98–5877	Screen	2	42	1
99–4471	Guard–Inner	3	11	1
99–4472	Outer Guard Assembly	3	9	1
99–4473	Non–Rotating Guard Kit	3	8	2
99–4474	Shaft–Slip Yoke	3	6	1
99–4475	Tube–Slip Yoke	3	5	1
99–4476	Spring–Lok Yoke Assembly	3	2	1
99–4477	Spring–Lok Repair Kit	3	1	1
99–4478	Belt Cover Assembly	4	4	1
99–4479	Screen–Front	1	25	2
99–4480	Plate–Back Bearing	2	41	1
99–4481	Plate–Front Bearing	1	24	1
99–4482	PTO Shaft Assembly	1	21	1
99–4486	Decal–Warning CE	2	40	1
99–4487	Decal–Grease	4	13	1
99–4489	Spacer	5	7	2
99–4490	Pin–Clevis	5	9	1
99–4491	Pulley	1	22	1
99–4499	V–Belt	1	23	1
99–4518	Clutch–Overrunning	1	26	1
99–4541	Stand Assembly	5	6	1
322–7	Screw–HH	1	31	2
323–4	Screw–HH	5	2	4
323–5	Screw–HH	1	2	16
323–5	Screw–HH	4	10	4
324–6	Screw–HH	1	4	8
324–10	Screw–HH	4	5	4
325–6	Screw–HH	1	27	1
3218–17	Nut–Hex. Jam	1	9	1
3253–21	Washer–Lock	1	3	16
3253–21	Washer–Lock	5	3	4
3256–5	Washer–Flat	4	6	8
3256–24	Washer–Flat	1	1	10
3256–24	Washer–Flat	5	4	4
3256–24	Washer–Flat	4	11	4
3256–26	Washer–Flat	1	28	2
3257–42	Key–Woodruff	1	8	1
3272–11	Pin–Cotter	5	10	2
3290–343	Pin–Cotter, Hair	4	1	1
3296–23	Nut–Lock NI	1	29	2
3296–29	Nut–Lock NI	1	30	2
3296–39	Nut–Lock NI	4	12	4
3296–48	Nut–Lock	1	5	8
3296–48	Nut–Lock NI	4	7	4
32120–8	Ring–Retaining, Internal	1	7	2
32121–34	Pin–Roll	1	32	1
33114–016	Screw–HH	1	11	1

PROTOTYPE

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Debris Blower has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the front screen. In any correspondence concerning the Debris Blower, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:
1. Model and serial number of the Debris Blower.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page
Blower Housing Assembly	1–2
Power Take–Off Shaft Assembly No. 99–4482	3
Lift Frame & Stand Assembly	4
Roller & Chute Stand Assembly	5
TORO Part Number Index	6

PROTOTYPE

MAINTENANCE RECORD

Date								

PROTOTYPE

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.