
FORM NO. 3322–544 REV A

TORO®

MODEL NO. 53008–990001 & UP

PARTS CATALOG

TRIMMER

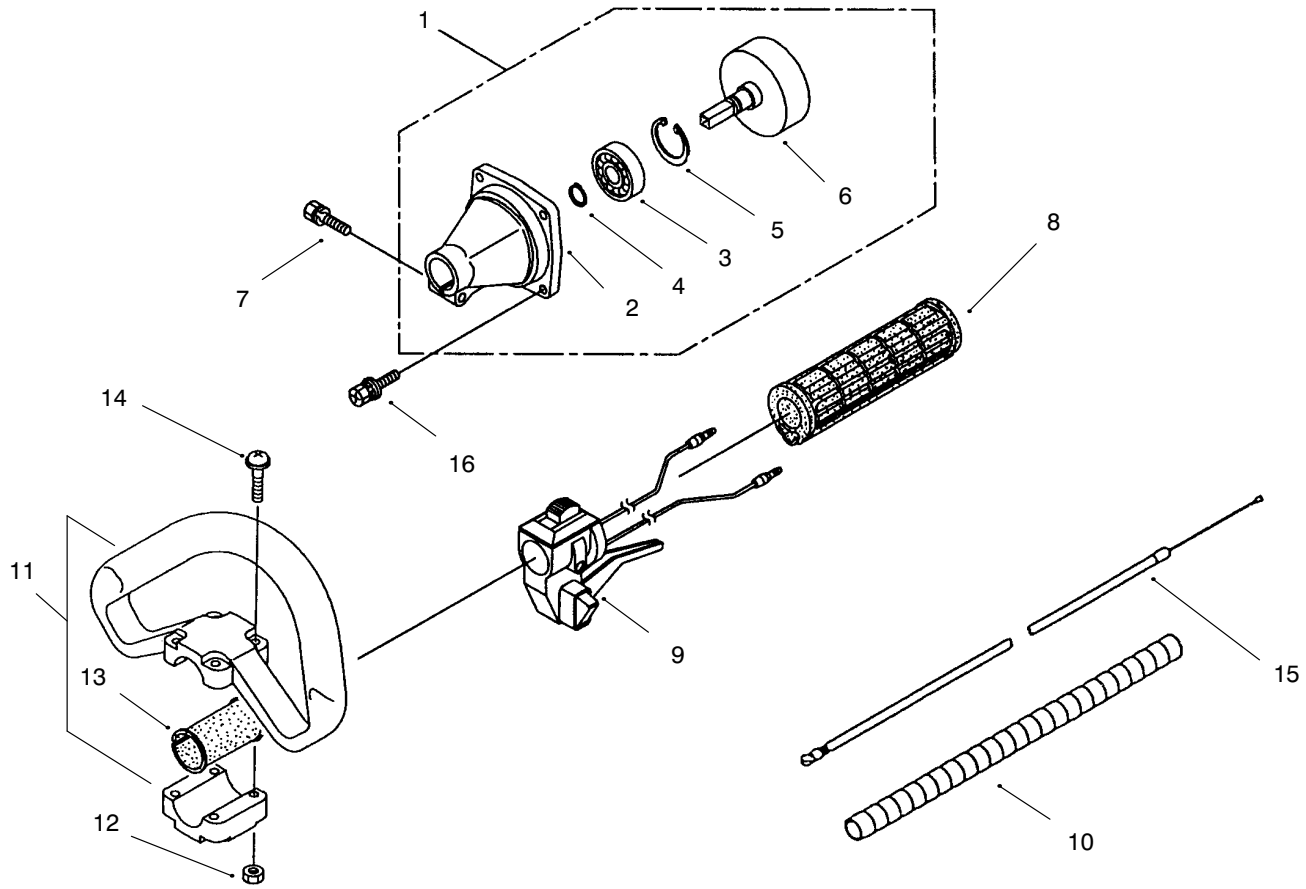

C–2803

CLUTCH AND HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	M218868	Clutch Case Asm (Incl. Ref. # 2–6)	1
2	M218869	Clutch Case	1
3	M012649	Bearing	1
4	M140273	Snap Ring	1
5	M016732	Snap Ring	1
6	M218492	Clutch Drum	1
7	M092561	Bolt	1
8	M215995	Grip–Shaft	1
9	M222952	Trigger–Throttle	1


Ref. No.	Part No.	Description	No. Used
10	M223052	Tube–Plastic	1
*	M223069	Loop Handle Asm (Incl. Ref. # 11–14)	1
11	M219032	Handle–Loop	1
12	M081027	Nut	4
13	M216004	Packing	1
14	M092088	Screw	4
15	M223051	Cable–Throttle	1
16	M817002	Bolt	4
*	95–6211	Glasses–Safety	1

* Not Illustrated

©The TORO Company – 1999 REV A
All Rights Reserved

TPS


ENGINE ASSEMBLY

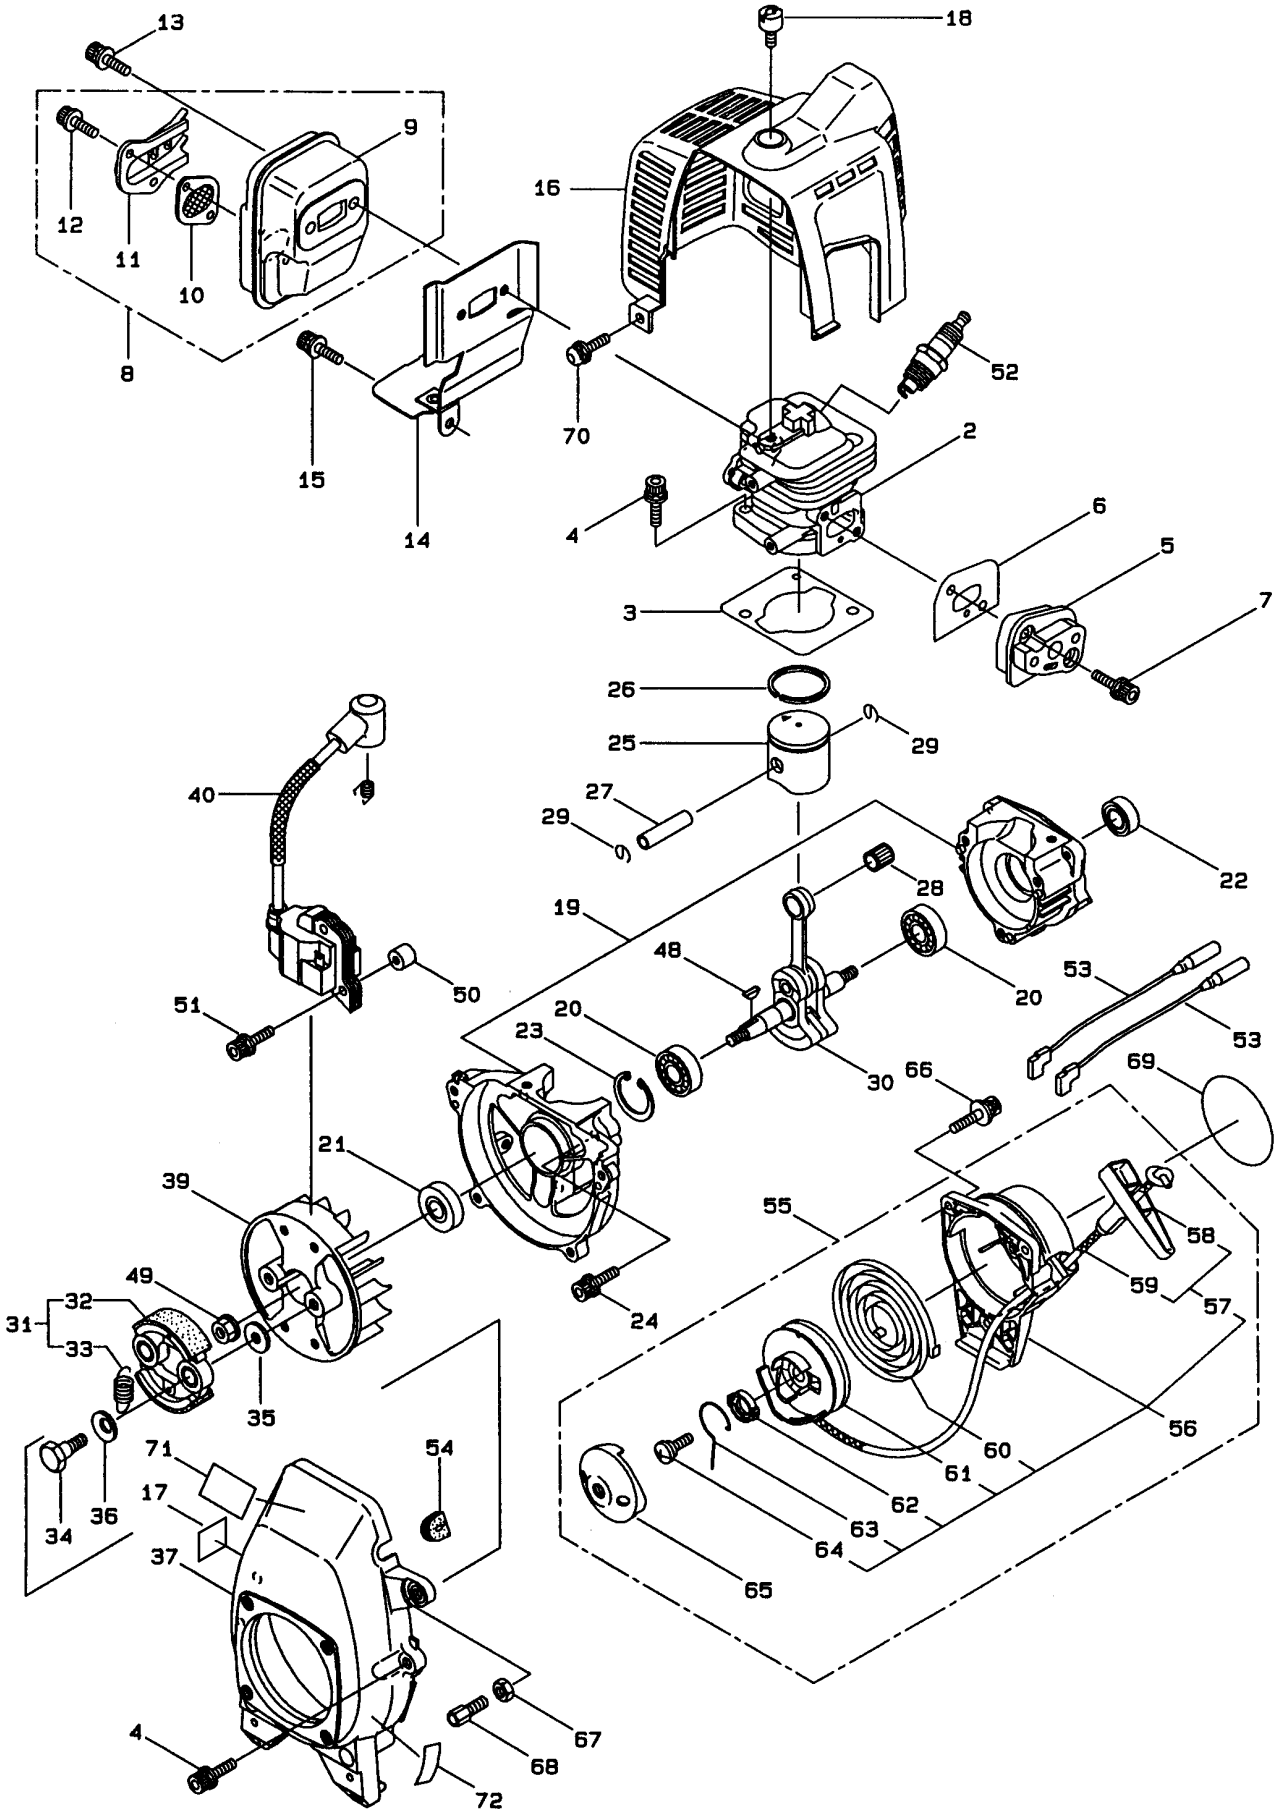

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	M266249	Cylinder	1
3	M267178	Gasket	1
4	M261250	Cap Screw	6
5	M265802	Insulator	1
6	M267049	Gasket	1
7	M265924	Cap Screw	2
8	M267051	Muffler Asm (Incl. Ref. # 9–12)	1
9	M267052	Muffler Comp.	1
10	M267056	Spark Arrester	1
11	M267053	Tail	1
12	M265107	Cap Screw	2
13	M266264	Cap Screw	2
14	M267189	Gasket Comp.	1
15	M261607	Cap Screw	1
16	M267270	Top Cover Asm	1
17	M267581	Decal–Caution	1
18	M264022	Knob	1
19	M267063	Crankcase	1
20	M261491	Bearing	2
21	M261492	Seal–Oil	1
22	M261386	Seal–Oil	1
23	M055185	Snap Ring	1
24	M261612	Cap Screw	3
25	M263569	Piston	1
26	M263789	Ring–Piston	1
27	M261036	Pin–Piston	1
28	M263957	Bearing–Needle	1
29	M261576	Clip–Piston	2
30	M267193	Crankshaft/Connecting Rod Asm	1
31	M264025	Clutch Asm (Incl. Ref. #32,33)	1
32	M264026	Shoe–Clutch	2
33	M264028	Spring–Clutch	1
34	M264505	Bolt	2
35	M261189	Washer	2
36	M261777	Washer–Wave	2
37	M267593	Cover–Fan (Incl. Ref.#17)	1
39	M265017	Rotor–Fan	1
40	M267173	Ignition Coil Asm	
48	M261076	Key–Woodruff	1
49	M261417	Nut–Rotor	1
50	M261078	Spacer	2
51	M261256	Cap Screw	2
52	M264652	Spark Plug	1
53	M267093	Wire–Coil Ground	2
54	M261202	Grommet	1
55	M267096	Recoil Starter Asm (Incl. Ref. #56–65)	1
56	M267097	Recoil Asm. (Incl. Ref. #57–64)	1
57	M267217	Rope Asm (Incl. Ref. #58,59)	1
58	M267219	Grip–Starter	1
59	M267218	Rope–Starter	1
60	M267214	Spring–Spiral	1
61	M267212	Pulley	1
62	M267215	Collar	1
63	M267216	Arm–Swing	1
64	M267213	Screw	1
65	M267098	Pulley–Starter	1
66	M265726	Cap Screw	3
67	M261878	Nut	1
68	M265409	Adapter	1
69	M266201	Decal–Toro (Round)	1
70	M267177	Screw	1
71	M266323	Decal–Toro	1
72	M267307	Decal	
*	M850266	Engine	1


CARBURETOR ASSEMBLY

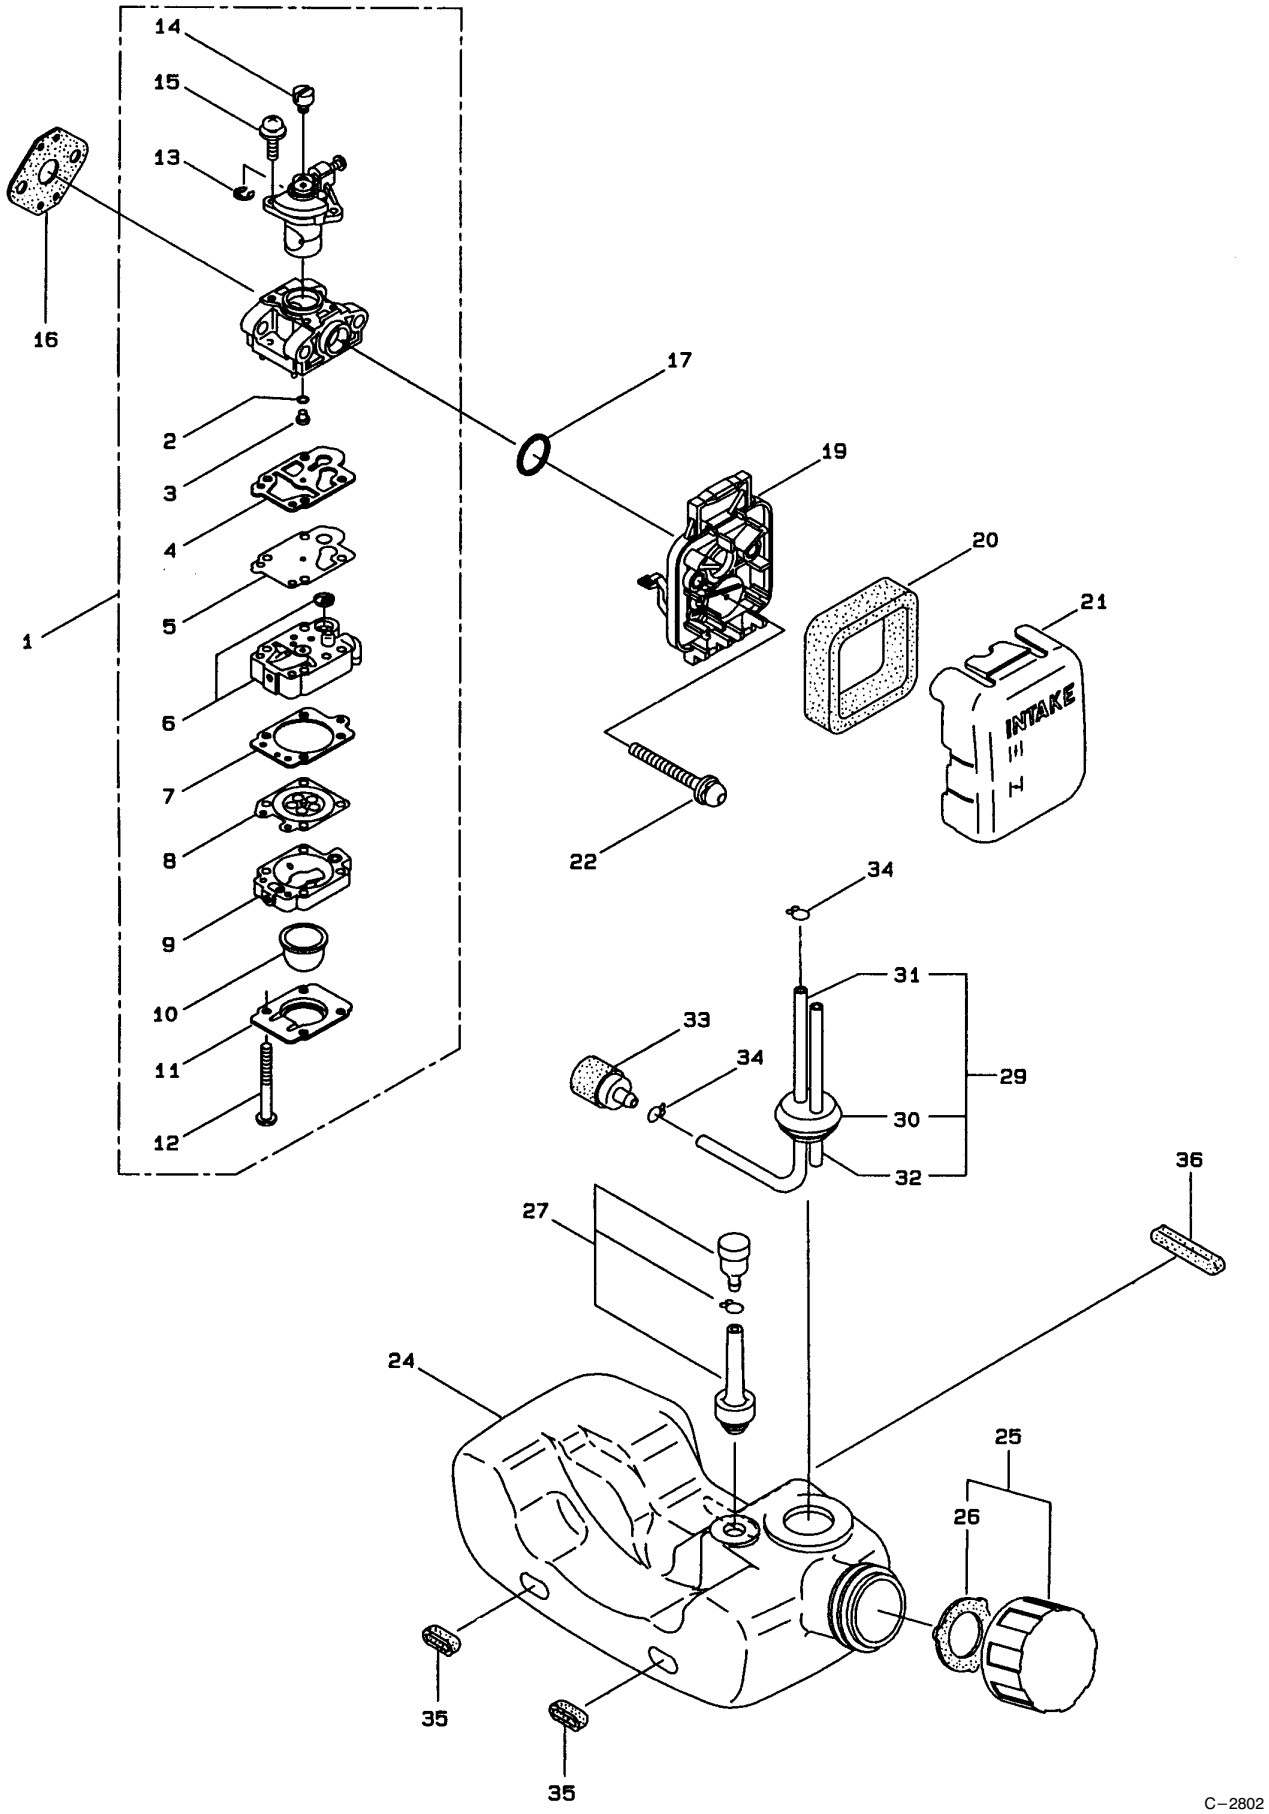

CARBURETOR AND FUEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	M267100	Carburetor Assembly (Incl. Ref. #2−15)	1
2	M261871	O−Ring	1
3	M267358	Main Jet	1
4	M262995	Gasket	1
5	M262994	Diaphragm−Fuel Pump	1
6	M264155	Body−Pump	1
7	M262993	Gasket	1
8	M261873	Diaphragm−Metering	1
9	M262991	Body−Purge	1
10	M261874	Bulb−Primer	1
11	M262992	Plate−Cover	1
12	M262996	Screw	4
13	M261876	E−Ring	1
14	M261658	Swivel	1
15	M264682	Screw	2
16	M261864	Gasket	1
17	M264691	O−Ring	1
19	M266433	Housing	1
20	M264695	Filter	1
21	M264709	Cover	1
22	M264016	Cap Screw	2
24	M267103	Fuel Tank	1
25	M264784	Fuel Tank Cap Assembly (Incl. Ref. # 26)	1
26	M261105	Gasket	1
27	M261696	Breather Assembly	1
29	M266955	Fuel Pipe Assembly (Incl. Ref. # 30−32)	1
30	M261115	Grommet	1
31	M265469	Fuel Pipe	1
32	M263038	Return Pipe	1
33	M264653	Fuel Filter Assembly	1
34	M261117	Clip	2
35	M264318	Pad	2
36	M263824	Pad	1

* Not Illustrated

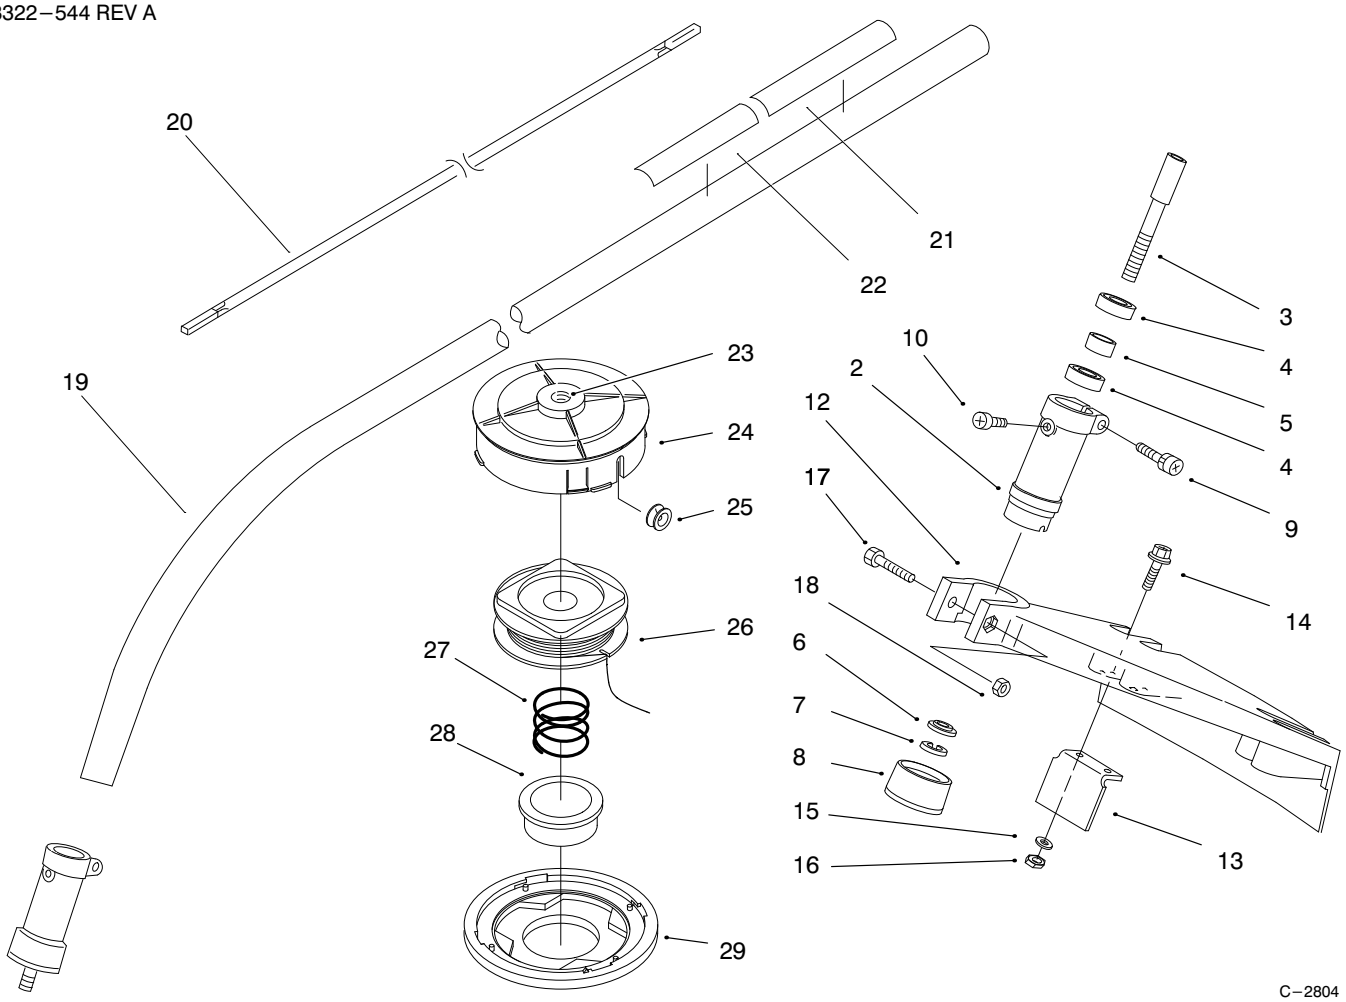

HEAD, SHAFT AND SHIELD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
*1	M215986	Bearing Head Asm (Incl. Ref. # 2−8)	1
2	M215987	Case−Bearing	1
3	M215988	Shaft−Attaching	1
4	M215989	Bearing	2
5	M215990	Spacer−Bearing	1
6	M215991	Washer	1
7	M015845	Washer−Spring	1
8	M215992	Adapter−Attaching Shaft	1
9	M092550	Bolt	1
10	M089736	Bolt	1
*11	M220246	Guard Asm (Incl. Ref. #12−18)	1
12	M215999	Guard	1
13	M216000	Cutter−String	1
14	M096043	Bolt	2
15	M012501	Washer−Spring	2
16	M081027	Nut	2

Ref. No.	Part No.	Description	No. Used
17	M089559	Bolt	1
18	M081030	Nut	1
19	M220079	Driveshaft Tube Asm (Incl. Ref. # 22)	1
20	M215985	Driveshaft	1
21	M221500	Decal−Toro	1
22	M221501	Decal−Caution	1
23	99−8516	Hub	1
24	95−7451	Housing	1
25	95−7450	Eyelet	2
26	95−7455	Spool with Line	1
*	95−7452	Spool	1
27	95−7465	Spring	1
28	95−7453	Button	1
29	95−7454	Cover	1
*	99−8520	4” Head Asm (Incl. Ref. #24−29)	

* Not Illustrated

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
M012501	Washer–Spring	6	15	2
M012649	Bearing	1	3	1
M015845	Washer–Spring	6	7	1
M016732	Snap Ring	1	5	1
M055185	Snap Ring	3	23	1
M081027	Nut	1	12	4
M081027	Nut	6	16	2
M081030	Nut	6	18	1
M089559	Bolt	6	17	1
M089736	Bolt	6	10	1
M092088	Screw	1	14	4
M092550	Bolt	6	9	1
M092561	Bolt	1	7	1
M096043	Bolt	6	14	2
M140273	Snap Ring	1	4	1
M215985	Driveshaft	6	20	1
M215986	Bearing Head Asm	6	*1	1
M215987	Case–Bearing	6	2	1
M215988	Shaft–Attaching	6	3	1
M215989	Bearing	6	4	2
M215990	Spacer–Bearing	6	5	1
M215991	Washer	6	6	1
M215992	Adapter–Attaching Shaft	6	8	1
M215995	Grip–Shaft	1	8	1
M215999	Guard	6	12	1
M216000	Cutter–String	6	13	1
M216004	Packing	1	13	1
M218492	Clutch Drum	1	6	1
M218868	Clutch Case Asm	1	1	1
M218869	Clutch Case	1	2	1
M219032	Handle–Loop	1	11	1
M220079	Driveshaft Tube Asm	6	19	1
M220246	Guard Asm	6	*11	1
M221500	Decal–Toro	6	21	1
M221501	Decal–Caution	6	22	1
M222952	Trigger–Throttle	1	9	1
M223051	Cable–Throttle	1	15	1
M223052	Tube–Plastic	1	10	1
M223069	Loop Handle Asm	1	*	1
M261036	Pin–Piston	3	27	1
M261076	Key–Woodruff	3	48	1
M261078	Spacer	3	50	2
M261105	Gasket	5	26	1
M261115	Grommet	5	30	1
M261117	Clip	5	34	2
M261189	Washer	3	35	2
M261202	Grommet	3	54	1
M261250	Cap Screw	3	4	6
M261256	Cap Screw	3	51	2
M261386	Seal–Oil	3	22	1
M261417	Nut–Rotor	3	49	1
M261491	Bearing	3	20	2
M261492	Seal–Oil	3	21	1
M261576	Clip–Piston	3	29	2
M261607	Cap Screw	3	15	1
M261612	Cap Screw	3	24	3
M261658	Swivel	5	14	1
M261696	Breather Assembly	5	27	1
M261777	Washer–Wave	3	36	2
M261864	Gasket	5	16	1
M261871	O–Ring	5	2	1
M261873	Diaphragm–Metering	5	8	1
M261874	Bulb–Primer	5	10	1
M261876	E–Ring	5	13	1
M261878	Nut	3	67	1
M262991	Body–Purge	5	9	1
M262992	Plate–Cover	5	11	1
M262993	Gasket	5	7	1
M262994	Diaphragm–Fuel Pump	5	5	1
M262995	Gasket	5	4	1
M262996	Screw	5	12	4
M263038	Return Pipe	5	32	1
M263569	Piston	3	25	1
M263789	Ring–Piston	3	26	1
M263824	Pad	5	36	1
M263957	Bearing–Needle	3	28	1
M264016	Cap Screw	5	22	2
M264022	Knob	3	18	1
M264025	Clutch Asm	3	31	1
M264026	Shoe–Clutch	3	32	2
M264028	Spring–Clutch	3	33	1
M264155	Body–Pump	5	6	1
M264318	Pad	5	35	2
M264505	Bolt	3	34	2
M264652	Spark Plug	3	52	1
M264653	Fuel Filter Assembly	5	33	1
M264682	Screw	5	15	2
M264691	O–Ring	5	17	1
M264695	Filter	5	20	1
M264709	Cover	5	21	1
M264784	Fuel Tank Cap Assembly	5	25	1
M265017	Rotor–Fan	3	39	1
M265107	Cap Screw	3	12	2
M265409	Adapter	3	68	1
M265469	Fuel Pipe	5	31	1
M265726	Cap Screw	3	66	3
M265802	Insulator	3	5	1
M265924	Cap Screw	3	7	2
M266201	Decal–Toro (Round)	3	69	1
M266249	Cylinder	3	2	1
M266264	Cap Screw	3	13	2
M266323	Decal–Toro	3	71	1
M266433	Housing	5	19	1
M266955	Fuel Pipe Assembly	5	29	1
M267049	Gasket	3	6	1
M267051	Muffler Asm	3	8	1
M267052	Muffler Comp.	3	9	1
M267053	Tail	3	11	1
M267056	Spark Arrester	3	10	1
M267063	Crankcase	3	19	1
M267093	Wire–Coil Ground	3	53	2
M267096	Recoil Starter Asm	3	55	1
M267097	Recoil Asm.	3	56	1
M267098	Pulley–Starter	3	65	1
M267100	Carburetor Assembly	5	1	1
M267103	Fuel Tank	5	24	1
M267173	Ignition Coil Asm	3	40	1
M267177	Screw	3	70	1
M267178	Gasket	3	3	1
M267189	Gasket Comp.	3	14	1
M267193	Crankshaft/Connecting	3	30	1
M267212	Pulley	3	61	1
M267213	Screw	3	64	1
M267214	Spring–Spiral	3	60	1
M267215	Collar	3	62	1
M267216	Arm–Swing	3	63	1
M267217	Rope Asm	3	57	1
M267218	Rope–Starter	3	59	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
M267219	Grip−Starter	3	58	1
M267270	Top Cover Asm	3	16	1
M267307	Decal	3	72	
M267358	Main Jet	5	3	1
M267581	Decal−Caution	3	17	1
M267593	Cover−Fan	3	37	1
M817002	Bolt	1	16	4
M850266	Engine	3	*	1
95−6211	Glasses−Safety	1	*	1
95−7450	Eyelet	6	25	2
95−7451	Housing	6	24	1
95−7452	Spool	6	*	1
95−7453	Button	6	28	1
95−7454	Cover	6	29	1
95−7455	Spool with Line	6	26	1
95−7465	Spring	6	27	1
99−8516	Hub	6	23	1
99−8520	4” Head Asm	6	*	

*Not Illustrated