Form No. 3322–739

# Steering Cylinder Kit

## 5xi Garden Tractor

**Part No. 99–8896**

## Parts Catalog

PROTOTYPE

### Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in illustrations and in part lists.

#### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2000
All Rights Reserved

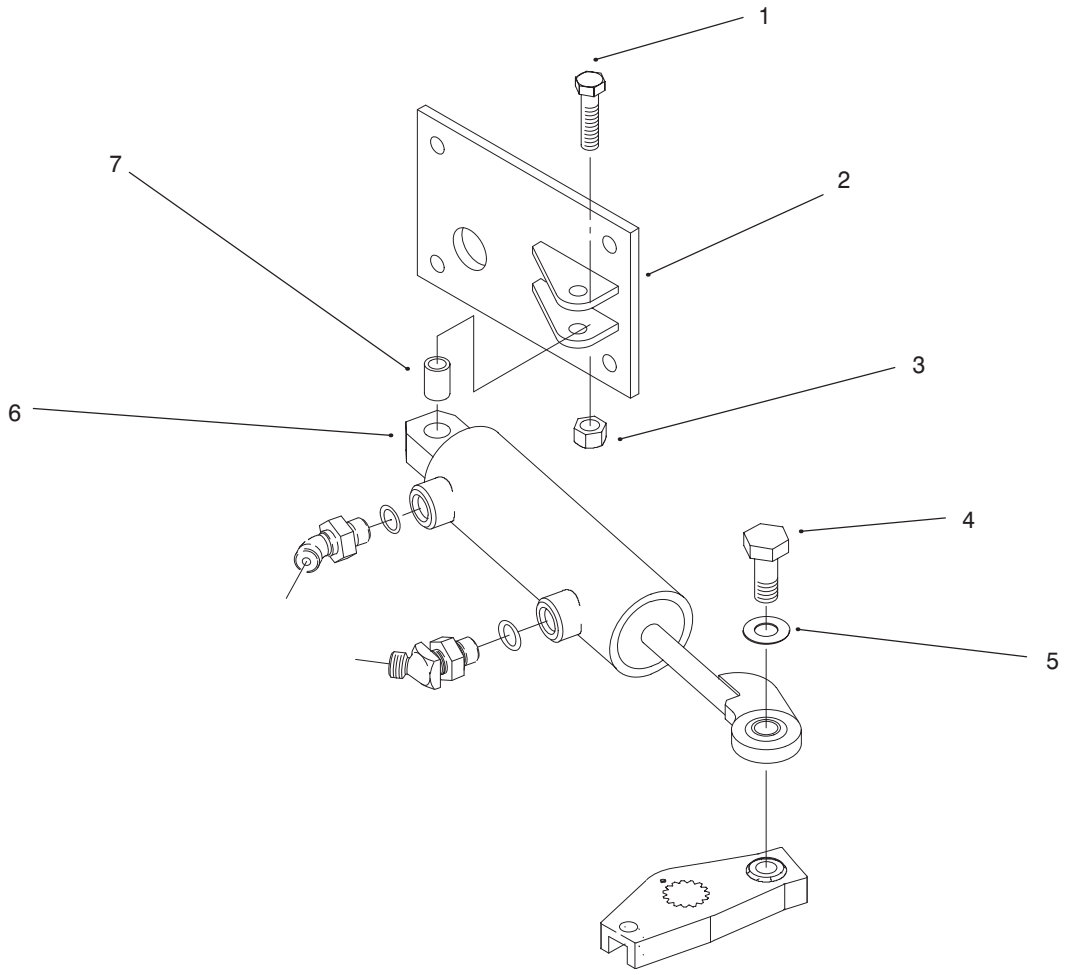


Sheet No.:1

# Cylinder Assembly

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 323–9 | 1 | Screw–HH |
| 2 | 99–3746–03 | 1 | Support–Cyl. Welded |
| 3 | 108881 | 1 | Nut–Differential |
| 4 | 94–7976 | 1 | Screw–HH |
| 5 | 98–3087 | 1 | Washer – Power Steering |
| 6 | 99–1909 | 1 | Cylinder–Power Steering |
| 7 | 99–2320 | 1 | Spacer–cylinder |

| Ref. No. | Part No. | Qty. | Description |
|---|---|---|---|

PROTOTYPE