FORM NO. 3322–759


TORO®

MODEL NO. 22400–990001 & UP

PARTS CATALOG

AUGER HEAD ATTACHMENT

for Toro® Sitework™ Systems

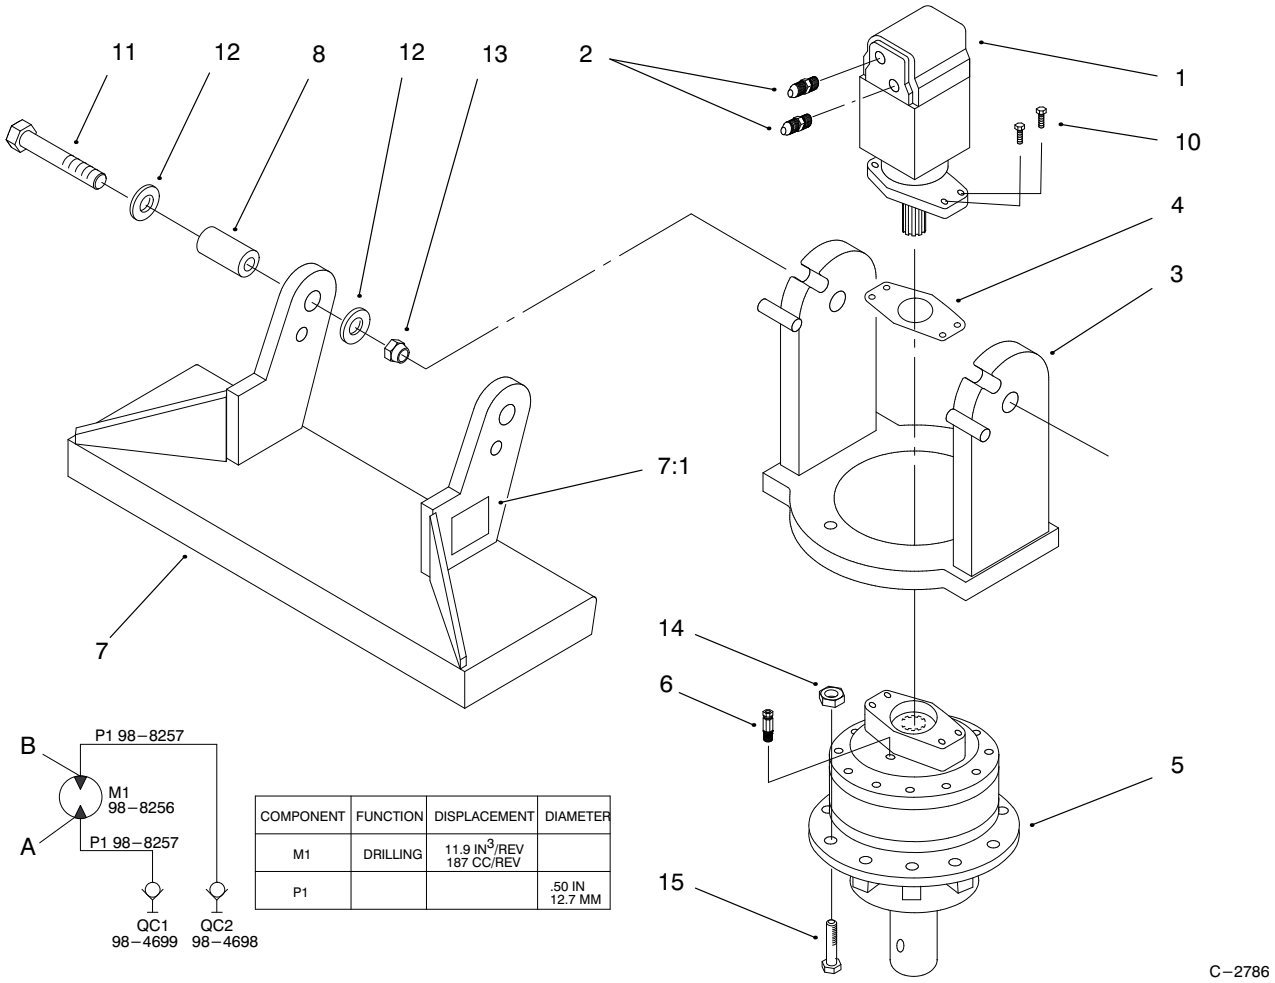

COMPONENT	FUNCTION	DISPLACEMENT	DIAMETER
M1	DRILLING	11.9 IN^3/REV 187 CC/REV	
P1			.50 IN 12.7 MM

AUGER HEAD ASSEMBLY


PROTOTYPE

Ref. No.	Part No.	Description	No. Used
1	98–8256	Hydraulic Motor	1
*	56–6890	Seal Kit for 98–8256	1
2	340–6	O–Ring Nipple	2
3	98–8258	Drive Housing	1
4	99–5032	Gasket	1
5	98–8260	Gear Planetary	1
6	98–8261	Breather Assembly	1
7	98–2705	Mount – Drive Head	1
7:1	99–9942	Decal Warning	2
8	99–1406	Pin – Pivot	2
10	3274–4	Screw – SHCS	4
11	325–12	Screw – HH	2
12	3256–26	Washer	4
13	3296–23	Nut – Hex	2
14	98–2703	Nut – Nylock	4
15	326–1	Screw – HH	4
*	98–8257	Hoses	2
*	98–4698	Male Coupler	1
*	98–4699	Female Coupler	1

* Not Illustrated

©The TORO Company – 1999
All Rights Reserved

TPS

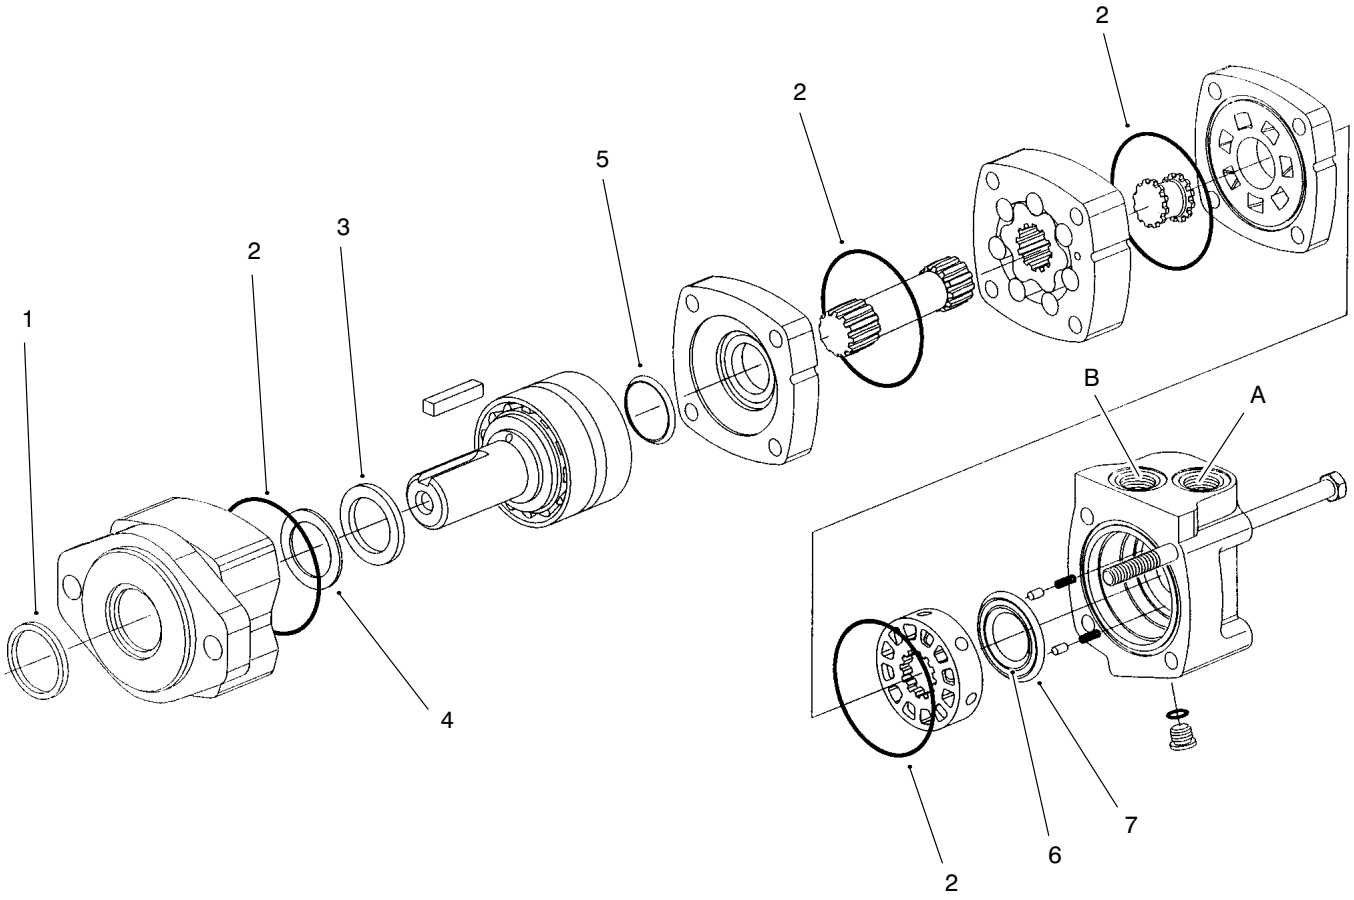

C−2754


HYDRAULIC MOTOR ASSEMBLY NO. 98−8256

Ref. No.	Part No.	Description	No. Used
†1		Seal − Dust	1
†2		Seal − O−Ring	4
†3		Seal − Shaft	1
†4		Back−up Washer	1
†5		Seal − Shaft	1

Ref. No.	Part No.	Description	No. Used
†6		Seal − Inner	1
†7		Seal − Outer	1
*	56−6890	Seal Kit (Incl. Ref # 1−7)	1

PROTOTYPE

† Not Serviced Separately
* Not Illustrated

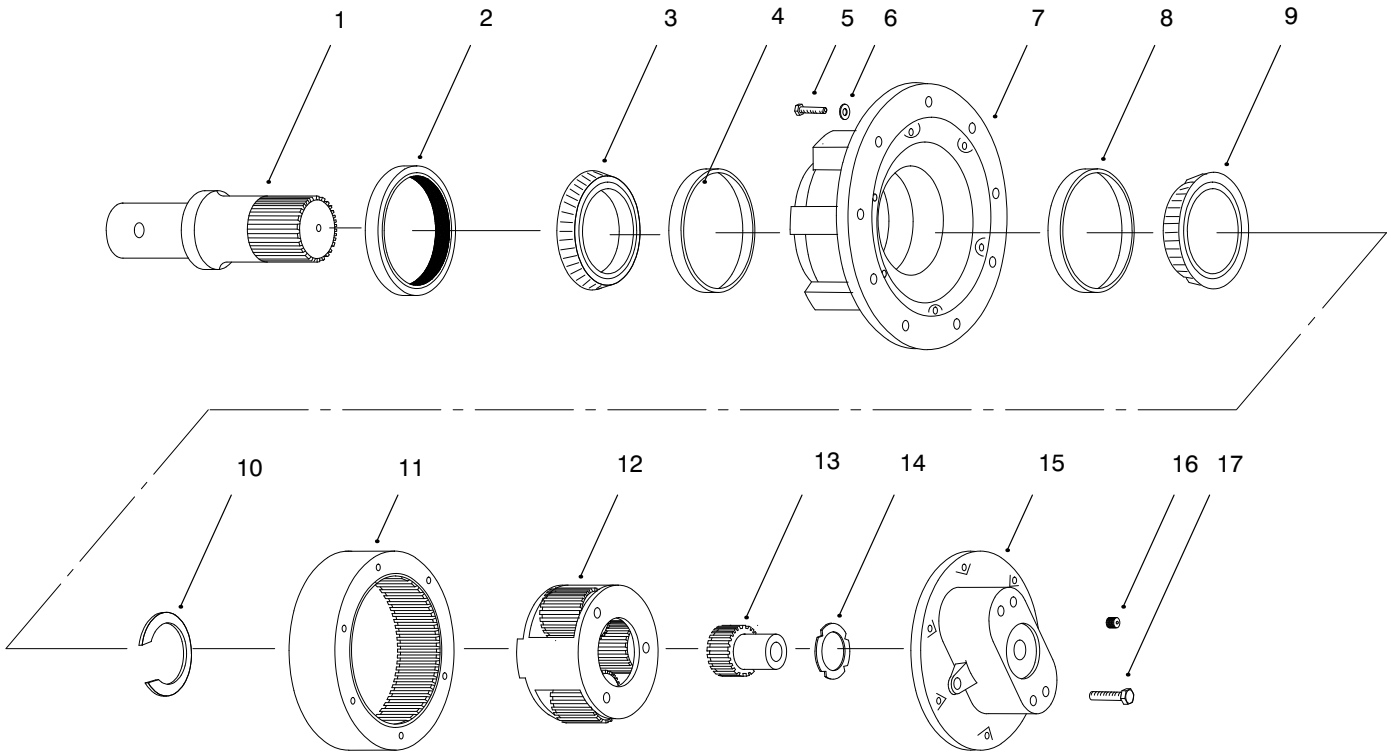

C–2745

PLANETARY GEAR ASSEMBLY NO. 98–8260

Ref. No.	Part No.	Description	No. Used
1	98–8264	Round Output Shaft	1
2	60–3830	Oil Seal	1
3	60–3840	Bearing Cone	1
4	60–3850	Bearing Cup	2
5	60–3890	Bolt	6
6	60–3910	Flat Washer	6
7	98–8265	Hub	1
9	60–3880	Bearing Cone	1
10	62–6450	Retaining Ring	1

Ref. No.	Part No.	Description	No. Used
11	98–8266	Ring Gear	1
12	98–8267	Carrier Assembly	1
13	98–8268	Sun Gear	1
14	60–3980	Thrust Washer	1
15	98–8271	Cover	1
16	98–8269	Magnetic Pipe Plug	1
17	98–8270	Bolt	8

PROTOTYPE

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
56−6890	Seal Kit	2	*	1
56−6890	Seal Kit for 98−8256	1	*	1
60−3830	Oil Seal	3	2	1
60−3840	Bearing Cone	3	3	1
60−3850	Bearing Cup	3	4	2
60−3880	Bearing Cone	3	9	1
60−3890	Bolt	3	5	6
60−3910	Flat Washer	3	6	6
60−3980	Thrust Washer	3	14	1
62−6450	Retaining Ring	3	10	1
98−2703	Nut − Nylock	1	14	4
98−2705	Mount − Drive Head	1	7	1
98−4698	Male Coupler	1	*	1
98−4699	Female Coupler	1	*	1
98−8256	Hydraulic Motor	1	1	1
98−8257	Hoses	1	*	2
98−8258	Drive Housing	1	3	1
98−8260	Gear Planetary	1	5	1
98−8261	Breather Assembly	1	6	1
98−8264	Round Output Shaft	3	1	1
98−8265	Hub	3	7	1
98−8266	Ring Gear	3	11	1
98−8267	Carrier Assembly	3	12	1
98−8268	Sun Gear	3	13	1
98−8269	Magnetic Pipe Plug	3	16	1
98−8270	Bolt	3	17	8
98−8271	Cover	3	15	1
99−1406	Pin − Pivot	1	8	2
99−5032	Gasket	1	4	1
99−9942	Decal Warning	1	7:1	2
325−12	Screw − HH	1	11	2
326−1	Screw − HH	1	15	4
3256−26	Washer	1	12	4
3274−4	Screw − SHCS	1	10	4
3296−23	Nut − Hex	1	13	2
340−6	O−Ring Nipple	1	2	2

PROTOTYPE

*Not Illustrated