FORM NO. 3322–764

TORO®

21” Recycler®/Rear Bagging

Int’l Walk Behind Mower

Model No. 20651 – 9900001 & Up

PROTOTYPE

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page
Housing, Handle Brackets, & Wheel Assembly	1
Gear Case Assembly	2
Engine & Blade Assembly	3
Gearcase & Wheel Assembly	4
Handle & Controls Assembly	5
Discharge Door Assembly	6
Grass Bagging Assembly	7
Engine Briggs & Stratton Model 12H802–1767–E1	8–14
Toro Part Number Index	15–17

Note:

Accessories

Description	Model / Parts No.
Chute Plug Kit	Model No. 59134

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HFW	hex flange washer
HH	hex head
HHF	hex head flange
HHST	hex head self tapping
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
INC	incorporated
LH	left hand
PH	pan head
PPH	Phillips pan head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
STD	standard
TAP	self tapping
TH	truss head
TTH	Torx truss head
WH	wing head

PROTOTYPE

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

© The TORO Company — 1999
All Rights Reserved

Service Assemblies

Parts within service assemblies have reference numbers in the form *X:Y. X* is the reference number of the service assembly and *Y* is a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form *X (Y). X* is the reference number. *Y* in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

PROTOTYPE

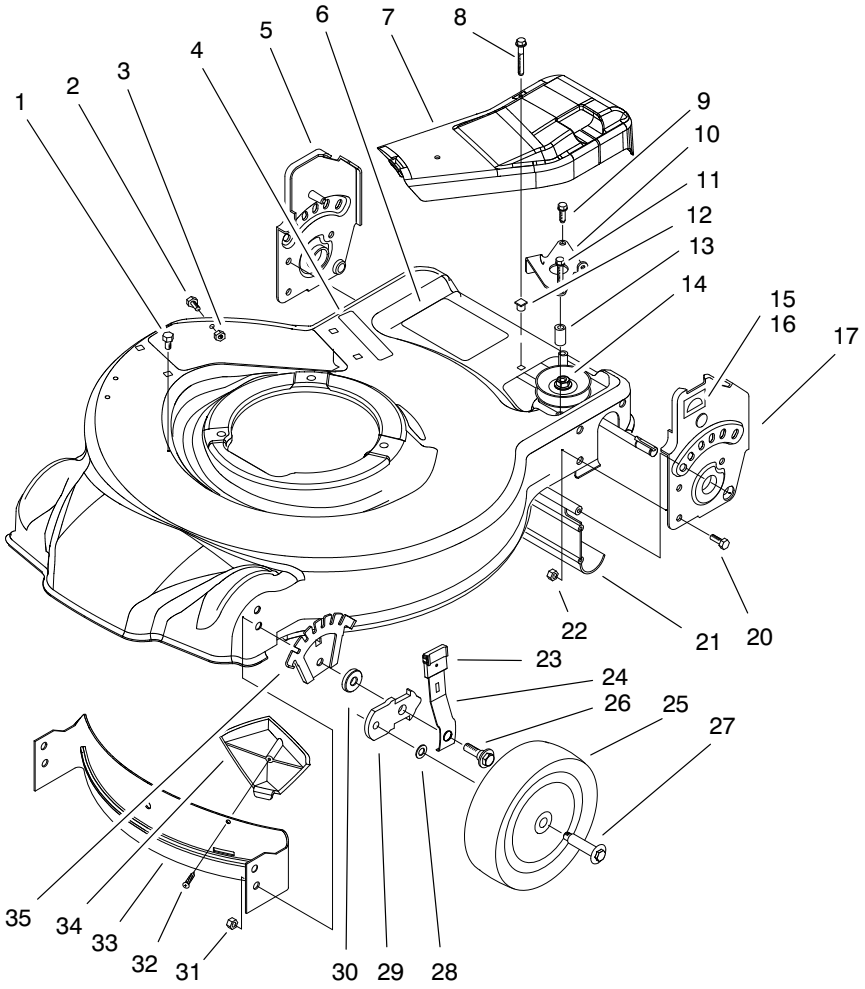


Sheet No.:2

Housing, Handle Brackets, & Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	32144–4	3	Screw–HH
2	32105–27	1	Screw
3	3296–2	1	Nut–Lock Esna
4	93–6667	1	Decal – Warning
5	93–0234	1	ASM – RH Handle Bracket
6	93–4105	1	Decal – Bag Door
7	93–0209	1	Cover – Transmission
8	32144–119	1	Screw–Pth
9	49–2040	1	Screw–Taptite
10	93–0228–03	1	Guide – Transmission
11	92–1616	1	Screw–Thread Forming
12	605120	1	Grommet
13	614673	1	Bushing – Actuator Plt
14	93–0240	1	ASM – Transmission
15	92–2915	1	Decal – HOC L
16	92–2914	1	Decal – HOC R
17	93–0233	1	ASM – LH Handle Bracket
20	322–3	6	Screw–HH
21	92–8647	1	Shield – Trailing
22	3296–29	6	Nut–Lock Ni
23	92–1008	4	Knob–Height Adj Lever
24	614687	2	Arm–Front Spring

Ref. No.	Part No.	Qty.	Description
25	92–9591	2	Assembly – 7” Wheel
26	614650	2	Bolt–Shoulder
27	614672	2	Bolt–Shoulder
28	40–1940	2	Washer–Wheel Bolt
29	95–7403–03	2	Brkt–Whl Ht Adj
30	92–4890	2	Washer – Wheel
31	3296–39	2	Nut–Lock Ni
32	93–0231	1	Screw – PPH
33	100–1179–03	1	Baffle Front – Weldment (Black)
34	93–0216	1	Kicker – Front
35	92–4881–03	2	Plate – Hght Adj

PROTOTYPE

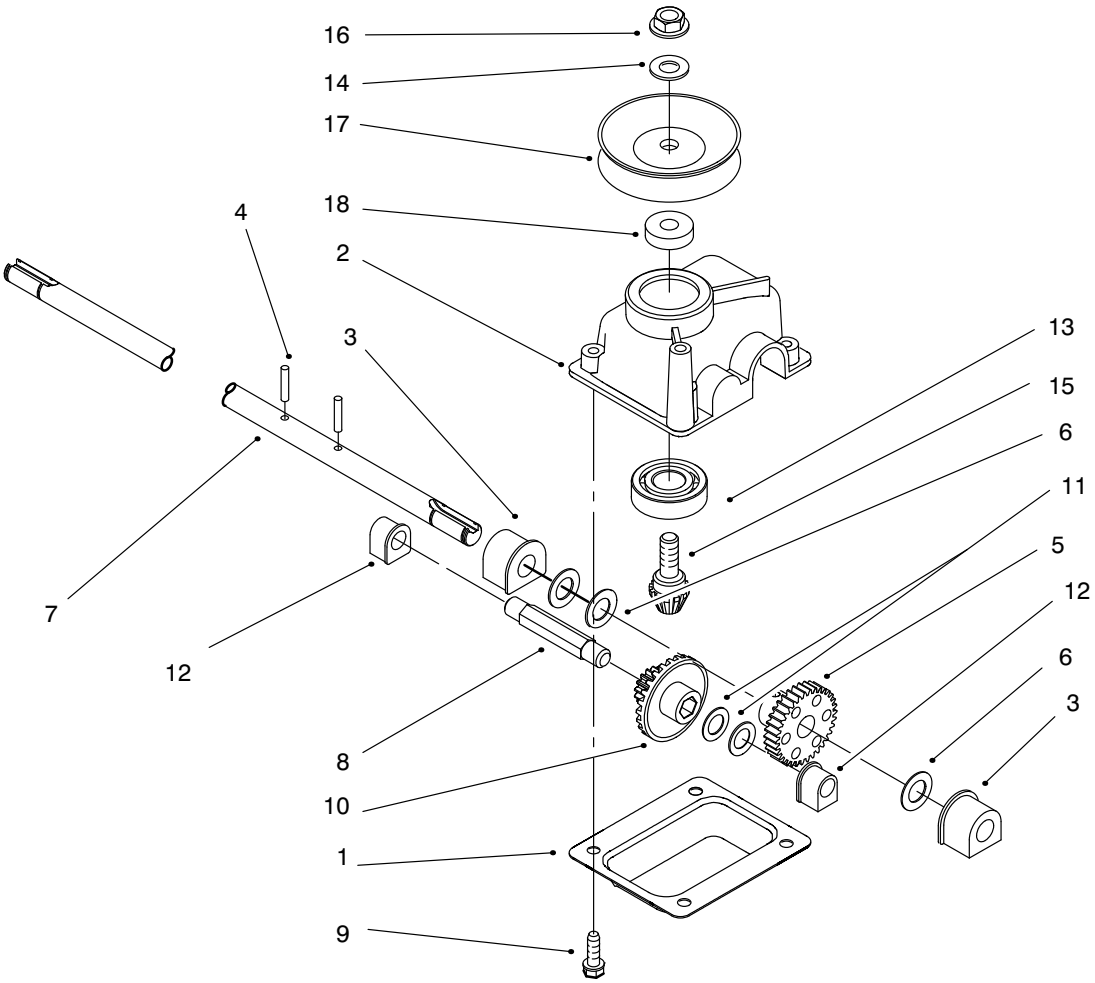


Sheet No.:A1

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description
1	614668–03	1	Gear Case Cover
2	92–7727	1	Gearcase
3	60–8850	2	Bushing–Output
4	3285–19	2	Pin–Groove
5	614596	1	Gear –34t
6	36–4780	2	Washer
7	93–0239	1	Shaft – Output
8	614696	1	Shaft–Intermediate
9	49–2040	4	Screw–Taptite
10	55–3760	1	15 T Pinion
11	36–4791	2	Thrust Washer
12	60–8750	2	Bushing
13	38–7820	1	Bearing–Ball
14	3256–24	1	Washer–Flat
15	60–8890	1	Bevel Pinion Gear
16	3296–5	1	Nut–Lock Ni
17	100–1176	2	Pulley Half
18	62–6660	1	Spacer

Ref. No.	Part No.	Qty.	Description

PROTOTYPE

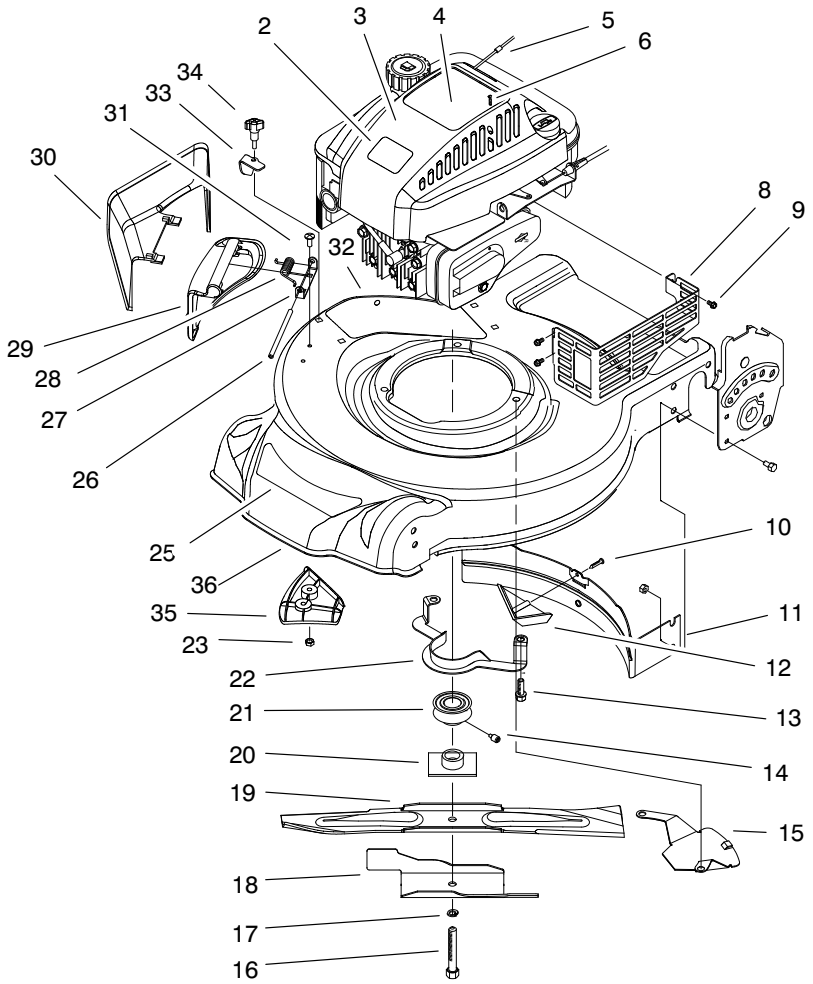


Sheet No.:3

Engine & Blade Assembly

Ref. No.	Part No.	Qty.	Description
2	98–3206	1	Nameplate – Toro
3	93–0243	1	Shroud–Quantum Wedge
4	93–4354	1	Decal – Recoil
5	2210–316	1	Stop–Rope F/W Engine
6	32144–121	2	Screw–Pan Hd
8	82–8550–03	1	Shield–Muffler
9	32144–73	3	Screw
10	93–0231	1	Screw – PPH
11	93–0223–03	1	Baffle – Rear (Black)
12	93–0217	1	Kicker – Rear
13	95–1726	3	Screw–Taptite w/Patch
14	613227	1	Screw – Set
15	93–4196–03	1	Shield – Grass
16	26–0671	1	Screw–Blade
17	3253–22	1	Washer–Lock/Sp
18	93–0219–03	1	Accelerator
19	93–0241	1	Blade – Steel Deck (Raw)
20	100–1178	1	ASM–Blade Driver – Gts 10
21	95–1878	1	Pulley
22	92–1024–03	1	Belt Guide
23	32128–32	2	Nut–Hex, Flange

Ref. No.	Part No.	Qty.	Description
25	99–6345	1	Decal – Deck (Int Steel)
26	99–5291	1	Rod–Cover (Steel Side Discharge)
27	99–5292	1	Bracket–Cover (Steel Side Discharge)
28	99–5293	1	Spring–Torsion (Steel Side Discharge)
29	99–5294	1	Cover–Side (Steel Side Discharge)
30	99–5295	1	Chute–Side (Side Discharge)
31	3229–11	2	Screw–CARR
33	100–1589–03	1	Clamp–Door
34	98–8332	1	Knob
35	99–6349	1	Baffle
36	99–5236	1	Housing Sp Steel (Service)

PROTOTYPE

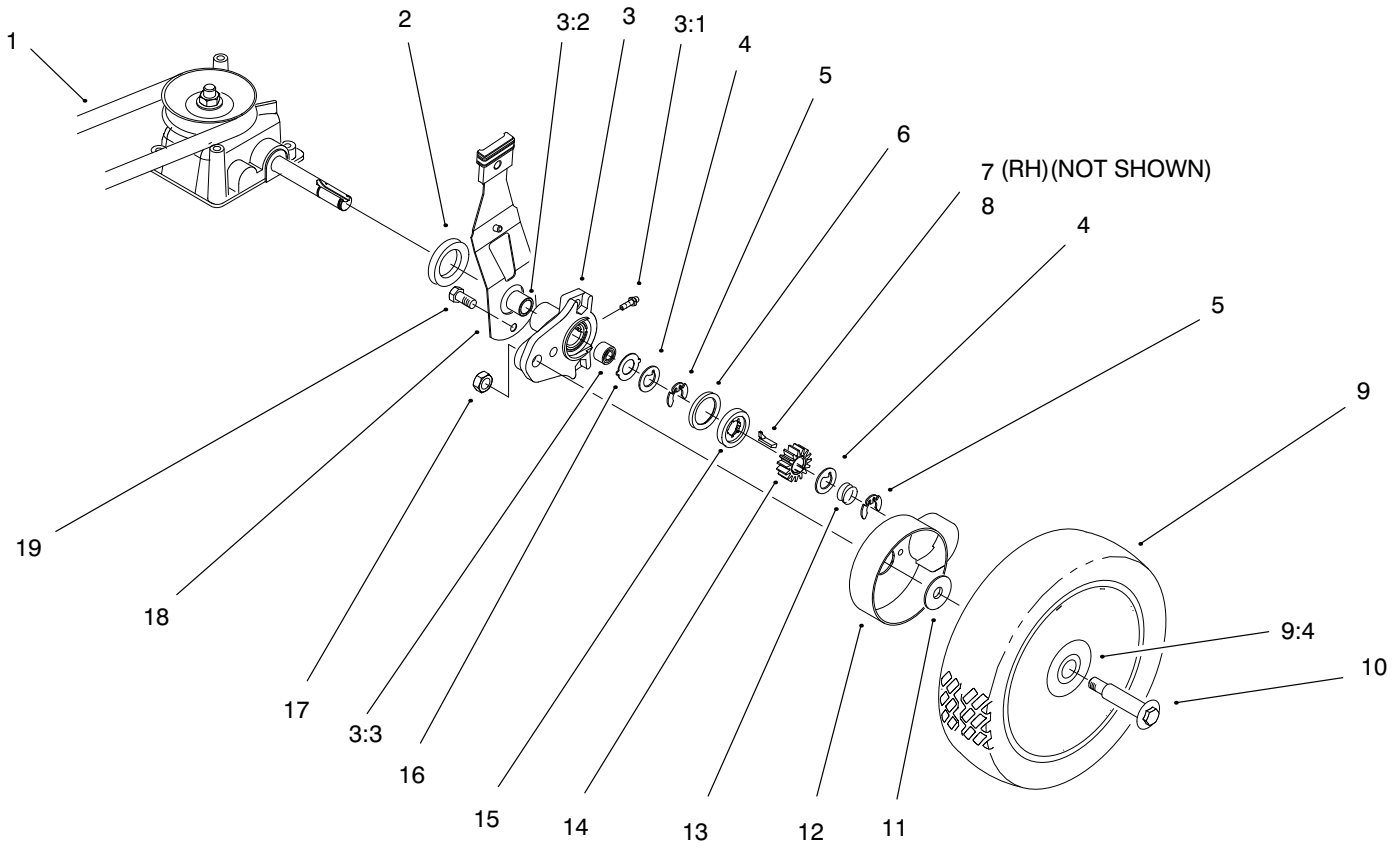


Sheet No.:4

Gearcase & Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	93–0232	1	Belt – V
2	614447	2	Spacer–Axle Shaft
3	92–7746	2	ASM: Rear Ht Adj Arm
3:1	302–56	1	Fitting–Zerk
3:2	47–2900	1	Bushing
3:3	70–9760	1	Bushing
4	65–4740	4	Washer–Keyed Thrust
5	65–2720	4	Klip Ring–Special
6	65–4710	2	Ring–Friction
7	66–6040	1	Key–Rocking
8	66–6050	1	Key–Rocking LH
9	92–9590	2	ASM – 8” Wheel
9:4	27–6250	2	Bushing
10	92–1057	2	Shoulder Bolt
11	614426	2	Washer–Stepped
12	94–1609	2	Cover–Wheel
13	65–4720	2	Spring–Compression
14	65–4750	2	Pinion–Gear,15t
15	65–4760	2	Washer
16	65–4730	2	Washer–Pivot Arm
17	610358	2	Nut–Jam, Locking
18	92–1004	2	Spring Arm ASM – Rear
19	32144–85	2	Screw–TAP

Ref. No.	Part No.	Qty.	Description

PROTOTYPE

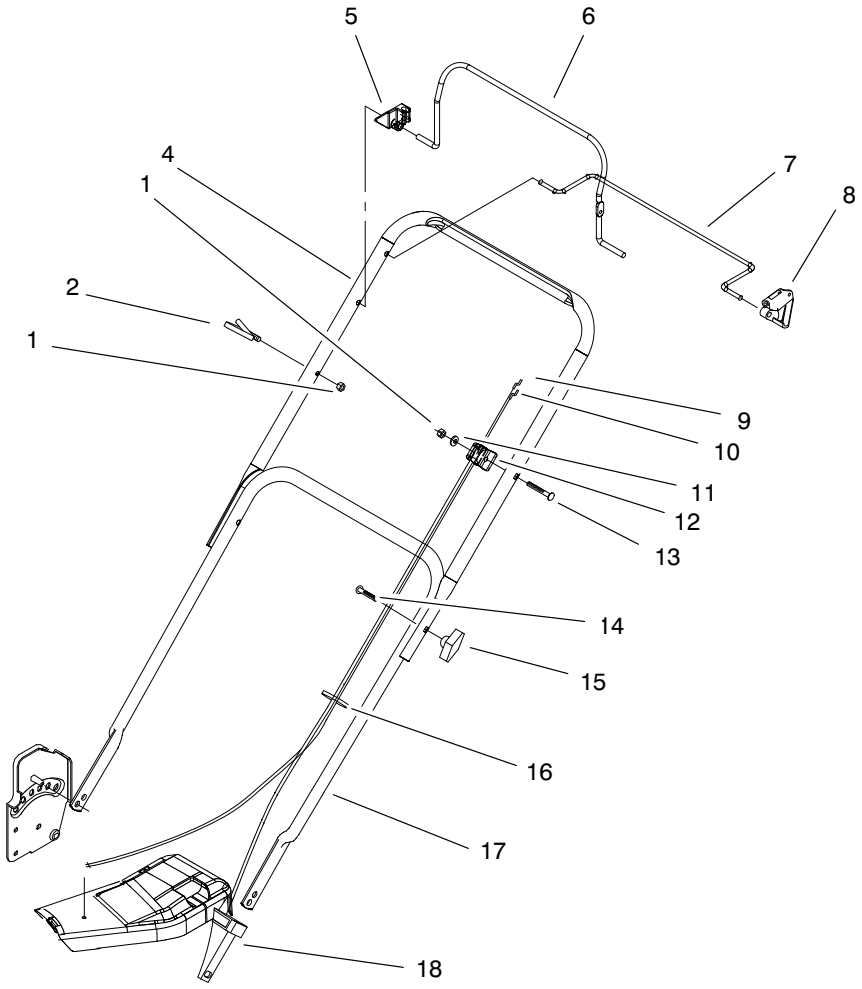


Sheet No.:5

Handle & Controls Assembly

Ref. No.	Part No.	Qty.	Description
1	3296–73	2	Nut–Lock
2	86–9671	1	Guide–Rope
4	99–1569–05	1	Handle–Upper
5	94–6097	1	Stop
6	99–1570–03	1	Bail–Brake
7	99–1571–03	1	Bail–Traction
8	92–5412	1	Stop–Pivot
9	99–1586	1	Cable–Traction
10	99–1587	1	Cable–Brake
11	3256–1	1	Washer–Flat
12	94–6096	1	Anchor – Cable
13	92–2269	1	Screw–Handle
14	92–2260	2	Screw–Handle
15	98–7134	2	Knob–Handle
16	3290–378	1	Tie–Cable
17	99–6021–05	1	Lower Handle
18	93–7380	1	Anchor – Cable

Ref. No.	Part No.	Qty.	Description

PROTOTYPE

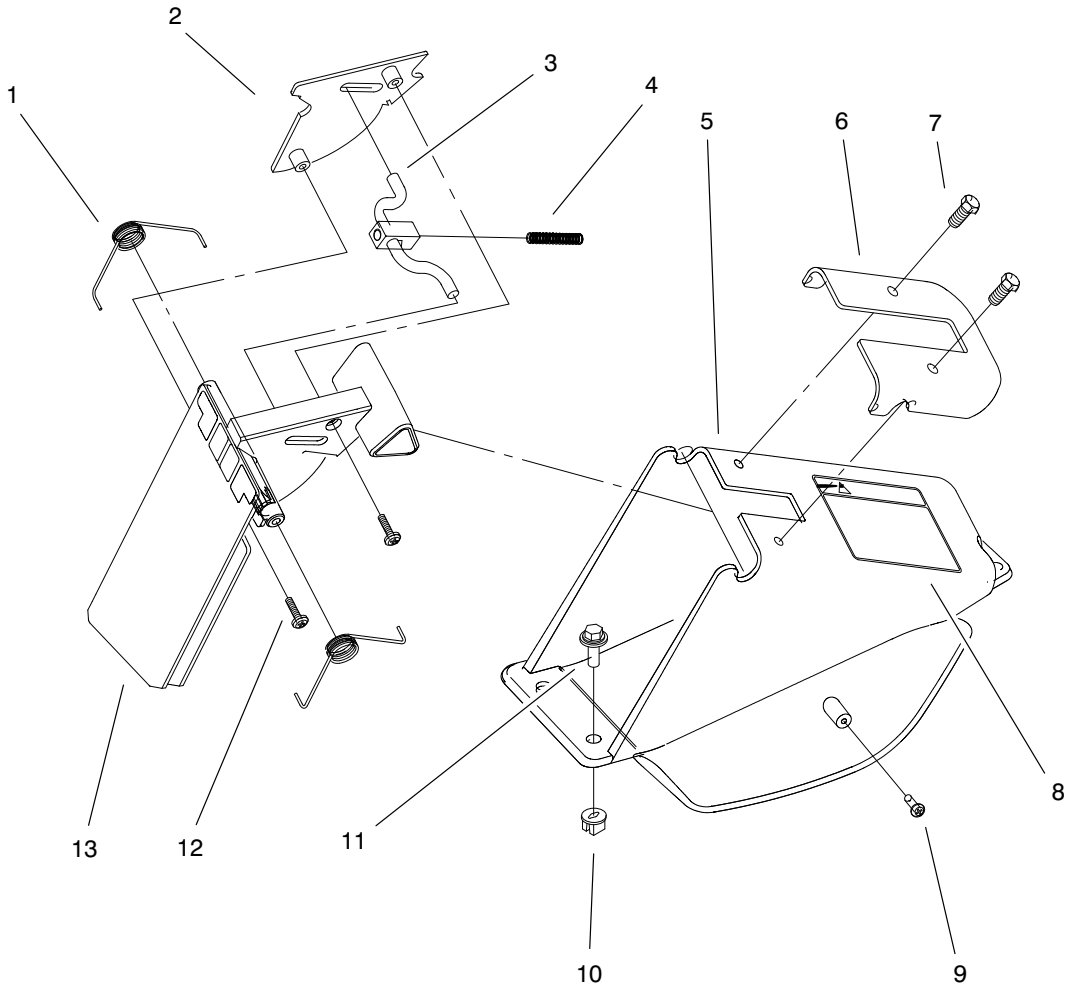


Sheet No.:6

Discharge Door Assembly

Ref. No.	Part No.	Qty.	Description
1	88–1090	2	RH Door Spring
2	33–0441	1	Door Cover
3	88–1800	1	Door Latch
4	33–0450	1	Latch Comp Spring
5	93–0263	1	Chute – Discharge
6	93–0267–03	1	Plate–Discharg Chute
7	46–8090	2	Screw–Plastite
8	92–8910	1	Decal – Danger
9	32144–111	1	Screw–Plask
10	93–0242	4	Grommet
11	46–6811	4	Screw/Washer
12	32144–32	2	Screw
13	93–0264	1	Door – Discharge

Ref. No.	Part No.	Qty.	Description

PROTOTYPE

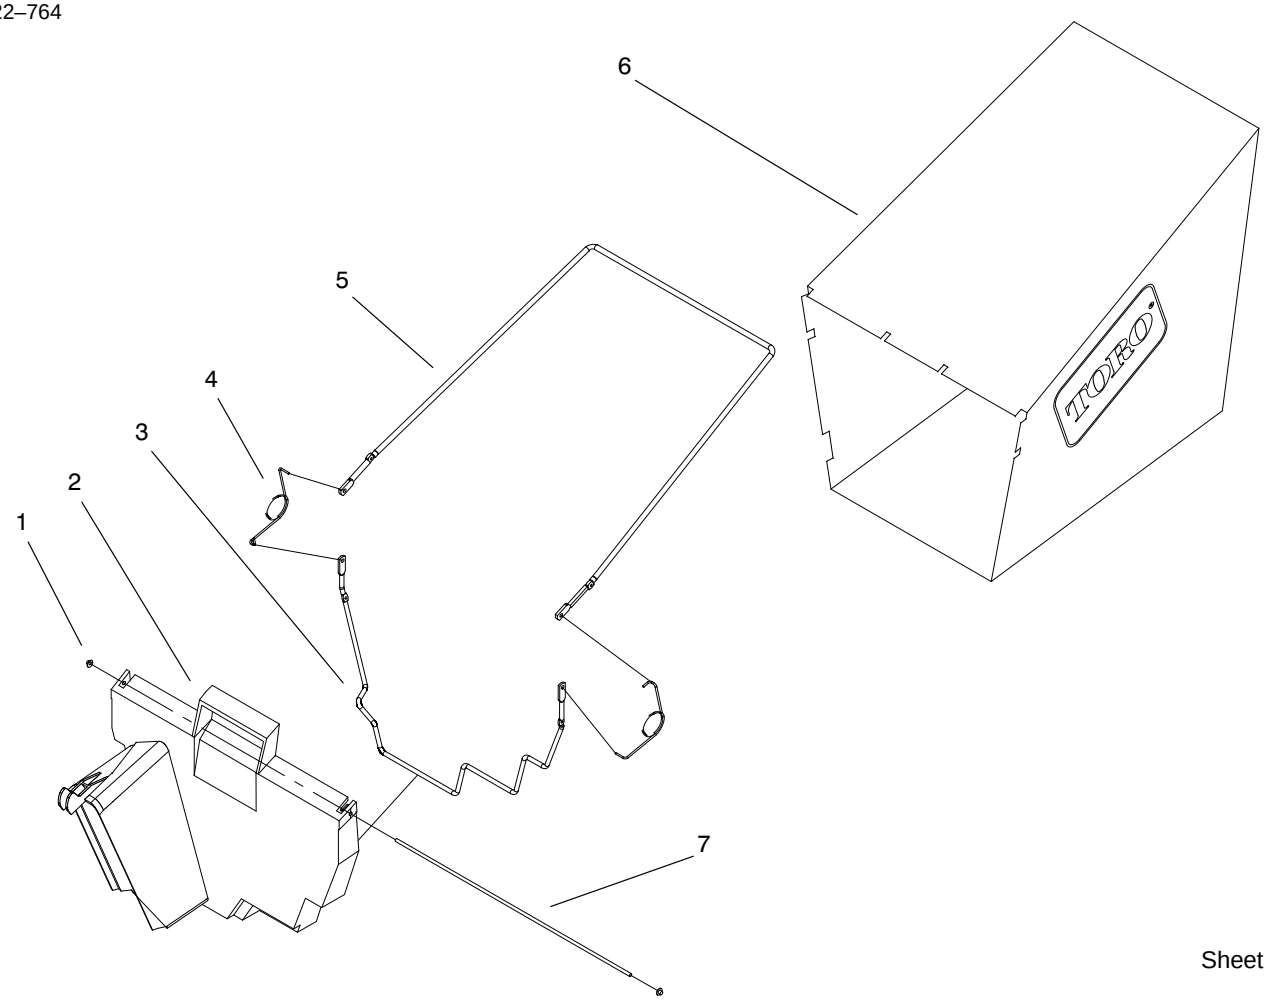


Sheet No.:7

Grass Bagging Assembly

Ref. No.	Part No.	Qty.	Description
1	3290–422	2	Nut–Push
2	93–0266	1	Door – Bag
3	93–0282	1	Frame – Lower Bag
4	36–6910	2	Spring
5	93–0281	1	Frame – Upper Bag
6	93–0284	1	Bag – Grass
7	93–0283	1	Hinge – Bag Door

Ref. No.	Part No.	Qty.	Description

PROTOTYPE

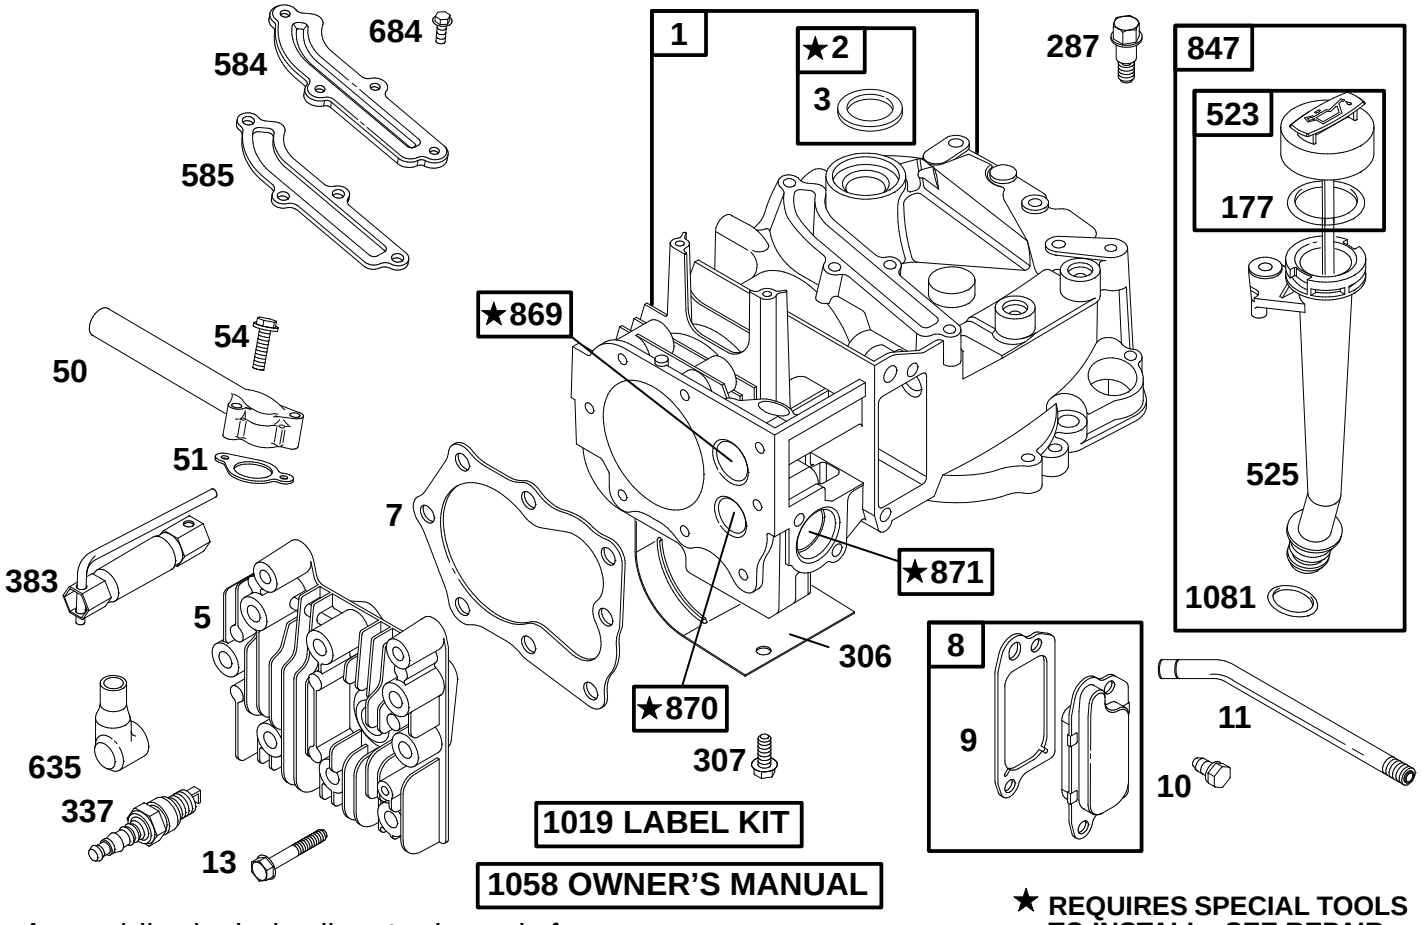

Assemblies include all parts shown in frames.

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.


ENGINE BRIGGS & STRATTON MODEL12H802–1767–E1

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	399269	Bushing	1
⋆3	299819	Seal–Oil	1
5	691160	Cylinder Head	1
⋆†7	272916	Cylinder Head Gasket	1
8	495786	Breather Assembly	1
⋆†9	272481	Breather Gasket	1
10	94650	Screw	
		(Breather Assy)	1
11	231685	Breather Tube	1
13	94547	Screw	
		(Cylinder Head)	1
50	497465	Intake Manifold	1
⋆51	272199	Intake Gasket	1
54	94526	Screw	
		(Intake Manifold)	1
⋆177	280393	O-Ring Seal	1
287	94511	Screw	
		(Dipstick Tube)	1
306	690450	Shield–Cylinder	1

Ref. No.	Part No.	Description	No. Used
307	690345	Screw	
		(Cylinder Shield)	1
337	802592	Sparkplug	1
383	89838	Wrench–Sparkplug	1
523	495264	Dipstick	1
525	495265	Dipstick Tube	1
584	692342	Breather Passage Cover	1
⋆585	272238	Breather Passage Gasket	1
635	66538	Boot–Sparkplug	1
684	94515	Screw	
		(Breather Passage Cover)	1
847	495263	Dipstick/Tube Assembly	1
869	691155	Seat–Valve	
		(Intake)	1
870	690380	Seat–Valve	
		(Exhaust)	1
871	262001	Bushing–Guide	1
1019	494256	Label Kit	1
1058	273693	Owner's Manual	1
⋆1081	280966	O-Ring Seal	1

PROTOTYPE

⋆ Included in Gasket Set–See Ref. 358.
● Included in Carburetor Kit–See Ref. 121.
◆ Included in Carburetor Gasket Set–See Ref. 977.
† Included in Valve Overhaul Gasket Set–See Ref. 1095.

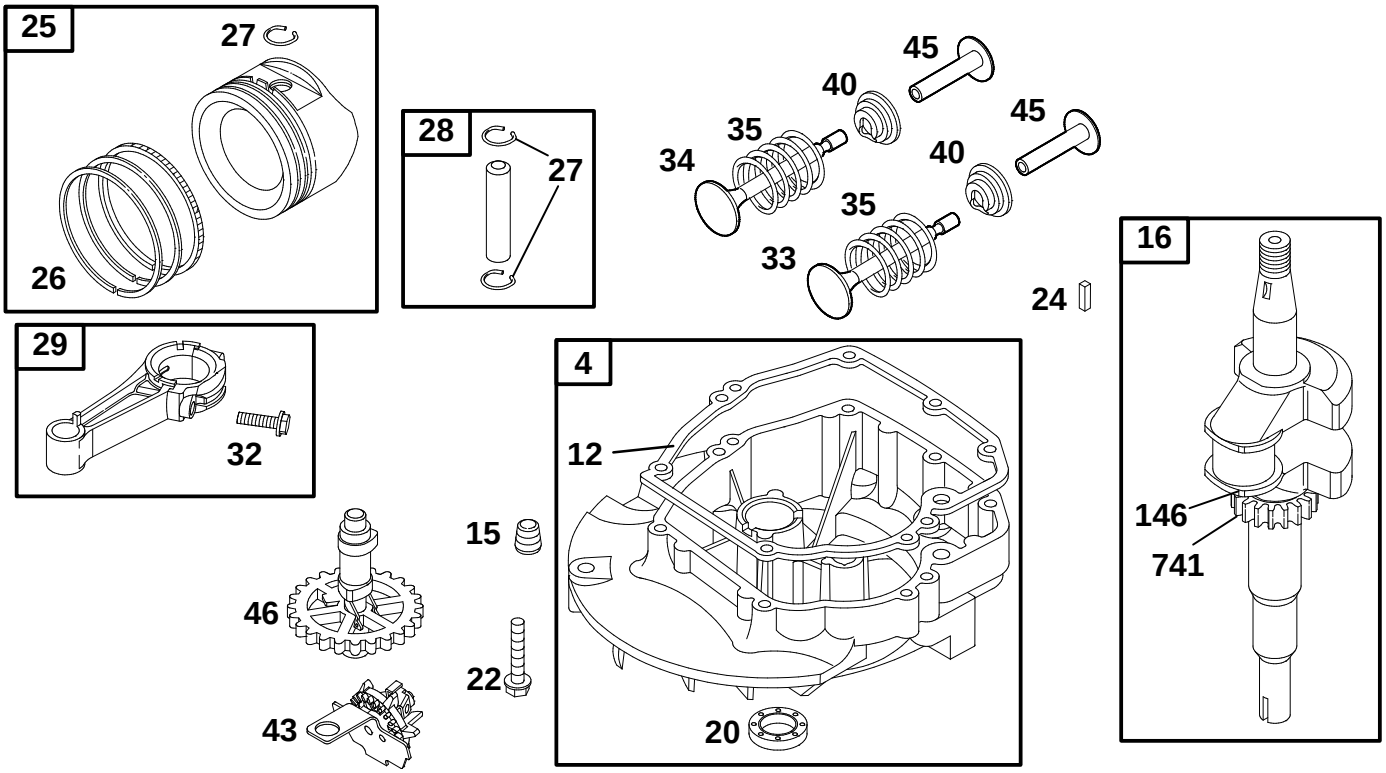


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL12H802–1767–E1

Ref. No.	Part No.	Description	No. Used
4	493279	Engine Sump	1
★12	272198	Crankcase Gasket	1
15	94880	Oil Drain Plug	1
16	694079	Crankshaft	1
★20	399781	Oil Seal	1
22	94220	Screw	
		(Engine Sump)	1
	94612	Screw	
		(Used in Hole Nearest Breather)	1
24	222698	Key–Flywheel	1
25	499429	Piston Assembly	
		(Standard)	1
	499430	Piston Assembly	
		(.010” O.S.)	1
	499431	Piston Assembly	
		(.020” O.S.)	1
	499432	Piston Assembly	
		(.030” O.S.)	1
26	499425	Ring Set	
		(Standard)	1
	499426	Ring Set	
		(.010” O.S.)	1
	499427	Ring Set	
		(.020” O.S.)	1
	499428	Ring Set	
		(.030” O.S.)	1
27	263190	Piston Pin Lock	1
28	499423	Piston Pin	
		(Standard)	1
	298908	Piston Pin	
		(.005” O.S.)	1
29	499424	Connecting Rod	
		(Standard)	1
32	94699	Screw	
		(Connecting Rod)	1
33	262651	Exhaust Valve	1
34	262652	Intake Valve	1
35	262224	Valve Spring	1
40	93312	Retainer–Valve	1
43	493737	Governor/Oil Slinger	1
45	262204	Valve Tappet	1
46	498275	Camshaft	1
146	94388	Key–Timing	1
741	262598	Gear–Timing	

PROTOTYPE

★ Included in Gasket Set–See Ref. 358.
● Included in Carburetor Kit–See Ref. 121.
◆ Included in Carburetor Gasket Set–See Ref. 977.
† Included in Valve Overhaul Gasket Set–See Ref. 1095.

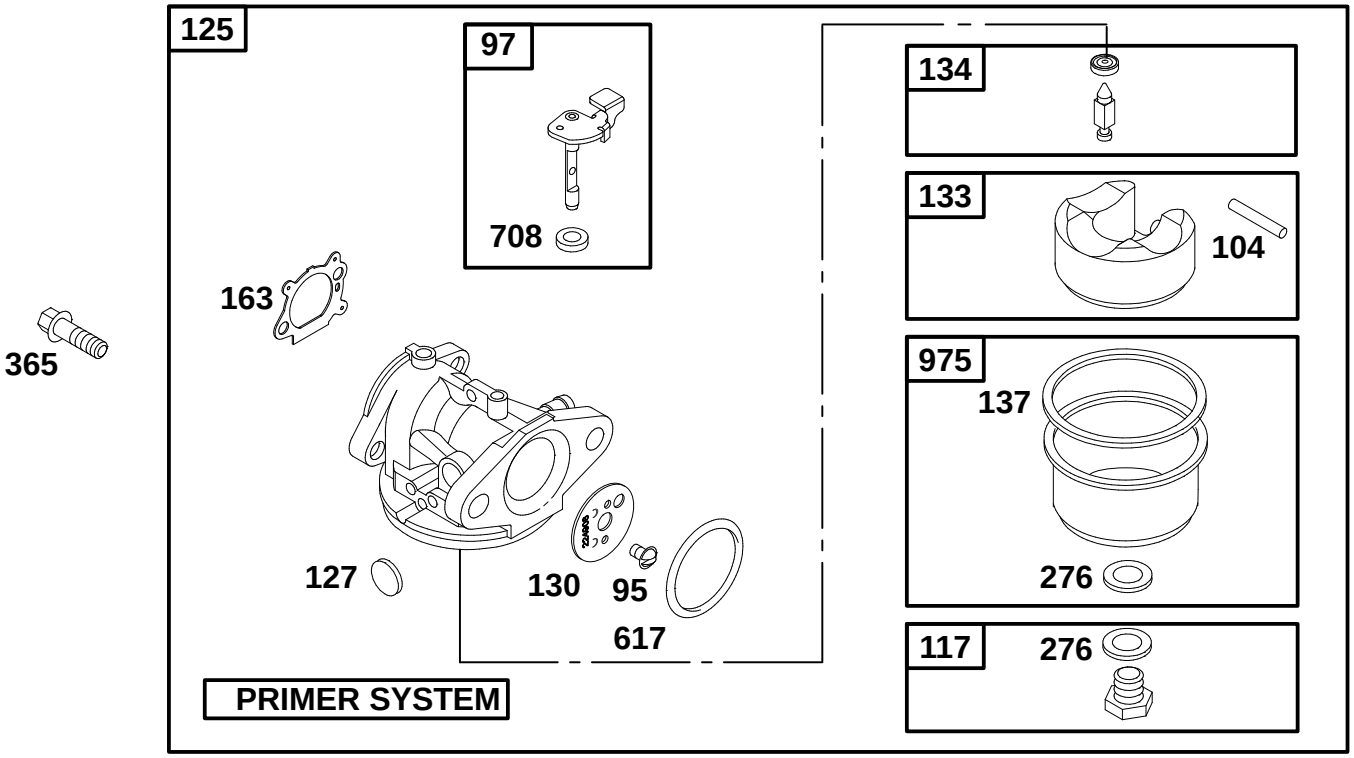


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL12H802–1767–E1

Ref. No.	Part No.	Description	No. Used
95	94098	Screw (Throttle Valve)	1
97	493267	Shaft–Throttle	1
●104	691242	Pin–Float Hinge	1
117	494870	Main Jet (Standard)	
	497315	Main Jet (High Altitude)	1
125	498170	Carburetor	1
●127		Plug–Welch (Sold in Kit Only)	1
130	691203	Valve–Throttle	1
133	398187	Float–Carburetor	1
●134	398188	Needle/Seat Kit	1
●◆137	693981	Gasket–Float Bowl	1
★●◆163	272653	Gasket–Air Cleaner	1
●◆276	271716	Sealing Washer	1
365	94525	Screw (Carburetor)	1
●◆617	270344	O–Ring Seal	1
●◆708	691321	Seal–Dust	1
975	493640	Bowl–Float	1

PROTOTYPE

★ Included in Gasket Set–See Ref. 358.
● Included in Carburetor Kit–See Ref. 121.
◆ Included in Carburetor Gasket Set–See Ref. 977.
† Included in Valve Overhaul Gasket Set–See Ref. 1095.

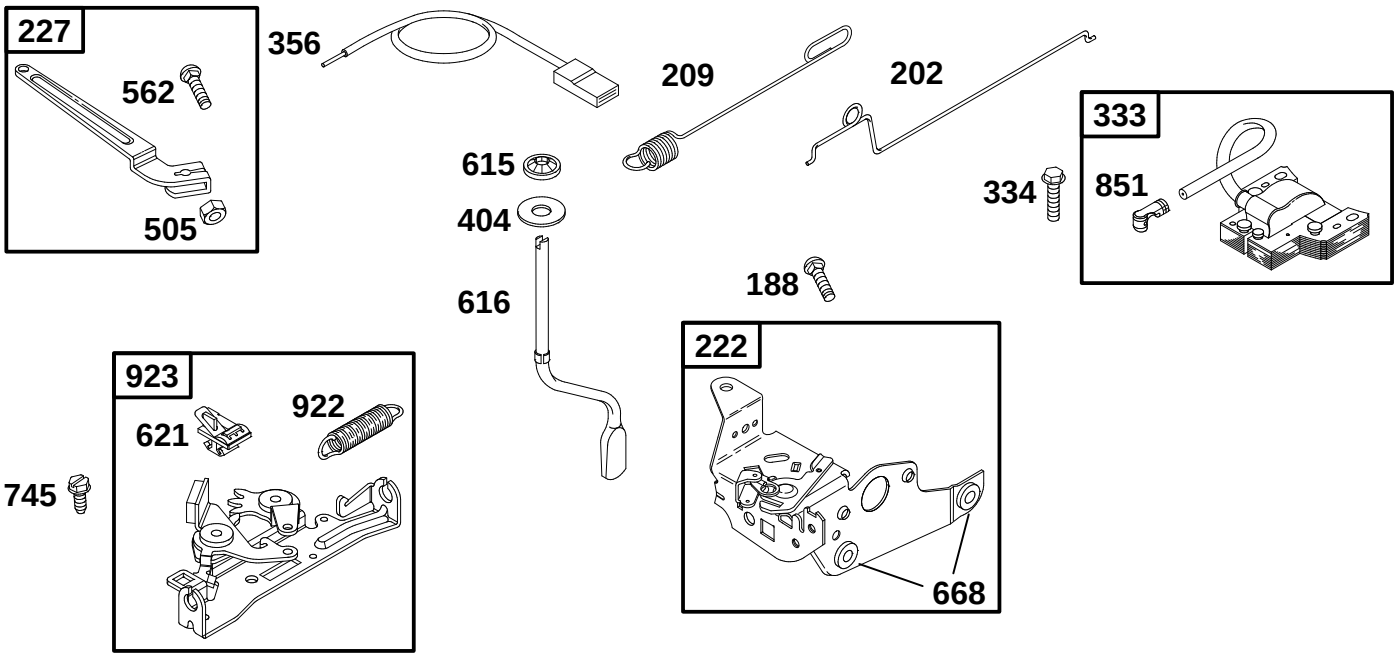

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL12H802–1767–E1

Ref. No.	Part No.	Description	No. Used
188	94644	Screw (Control Bracket)	1
202	262579	Link–Mechanical Governor	1
209	691292	Spring–Governor	1
222	499835	Bracket–Control	1
227	492349	Governor Control Lever	1
333	802574	Armature–Magneto	1
334	94731	Screw (Armature–Magneto)	1
356	497833	Wire–Stop	1
404	67072	Washer (Governor Crank)	1
505	231082	Nut (Governor Control Lever)	1

Ref. No.	Part No.	Description	No. Used
562	92613	Bolt (Governor Control Lever)	1
615	94474	Retainer–Governor Shaft	1
616	691306	Crank–Governor	1
621	396847	Switch–Stop	1
⋆668	493823	Spacer (Includes 2)	1
745	94512	Screw(Brake)	1
851	493880	Terminal–Cable	1
922	262640	Spring–Brake	1
923	493442	Brake	1

PROTOTYPE

⋆ Included in Gasket Set–See Ref. 358.
● Included in Carburetor Kit–See Ref. 121.
◆ Included in Carburetor Gasket Set–See Ref. 977.
† Included in Valve Overhaul Gasket Set–See Ref. 1095.

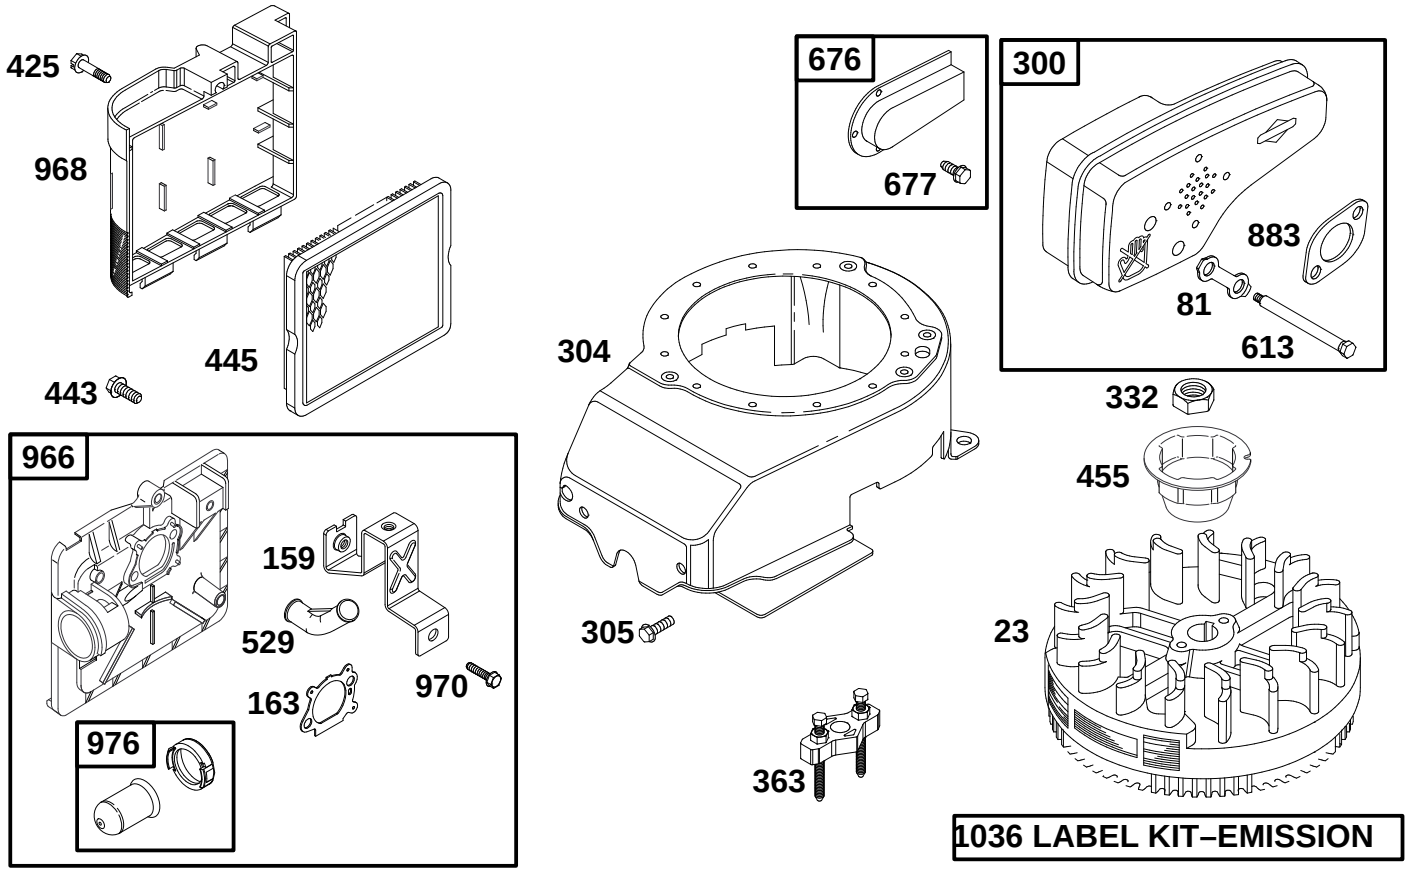

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL12H802–1767–E1

Ref. No.	Part No.	Description	No. Used
23	693821	Flywheel	1
81	223664	Muffler Screw Lock	1
159	224815	Air Cleaner Primer Bracket	1
★●◆163	272653	Gasket–Air Cleaner	1
300	497838	Muffler–Exhaust	1
304	493293	Housing–Blower	1
305	94744	Screw(Blower Housing)	1
332	92284	Nut(Flywheel)	1
363	19069	Flywheel–Puller	1
425	94872	Screw(Air Cleaner Cover)	1
443	94873	Screw(Air Cleaner Base)	1
445	491588	Filter–A/C Cartridge	1

Ref. No.	Part No.	Description	No. Used
455	691219	Cup–Flywheel	1
529	281299	Grommet	1
613	94231	Screw(Exhaust Muffler)	1
676	493871	Deflector–Muffler	1
677	94896	Screw(Deflector)	1
★†883	272253	Gasket–Exhaust	1
966	496116	Base–A/C Primer	1
968	281340	Cover–Air Cleaner	1
970	94749	Screw(A/C Primer Bracket)	1
976	496115	Primer–Carburetor	1
1036	499341	Label Kit–Emission	1

PROTOTYPE

★ Included in Gasket Set–See Ref. 358.
● Included in Carburetor Kit–See Ref. 121.
◆ Included in Carburetor Gasket Set–See Ref. 977.
† Included in Valve Overhaul Gasket Set–See Ref. 1095.

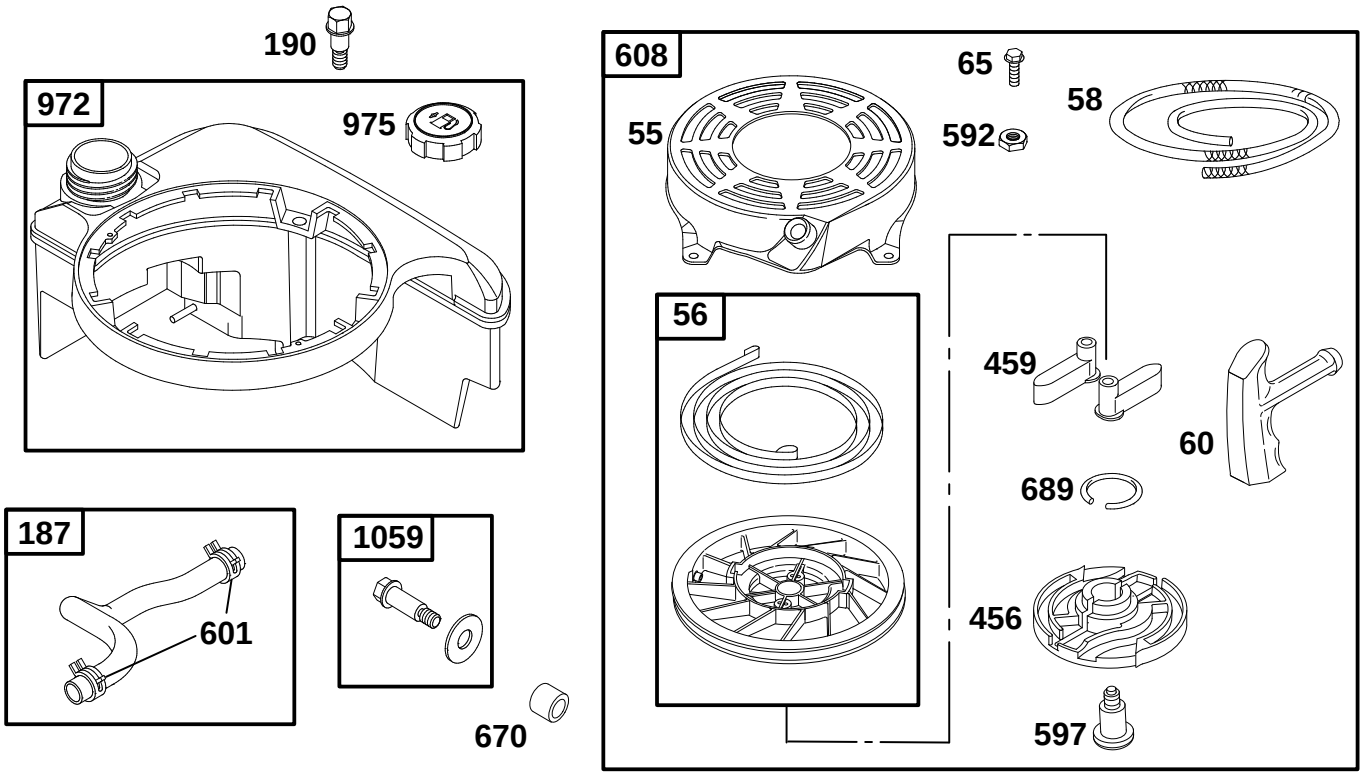

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL12H802–1767–E1

Ref. No.	Part No.	Description	No. Used
55	497440	Rewind Starter Housing	1
56	498144	Assy–Pulley/Spring	1
58	280399	Starter Rope	1
60	281434	Starter Rope Grip	1
65	94686	Screw (Rewind Starter)	1
187	492792	Line–Fuel	1
190	94511	Screw–Shoulder	1
456	281503	Plate–Pawl Friction	1
459	281505	Pawl–Rachet	1
592	92987	Nut (Rewind Starter)	1

Ref. No.	Part No.	Description	No. Used
597	94943	Screw (Pawl Friction Plate)	1
601	95162	Clamp–Fuel Line	1
608	497680	Starter–Rewind	1
670	280512	Spacer–Fuel Tank	1
689	263073	Spring–Friction	1
972	495224	Tank–Fuel	1
975	397974	Cap–Fuel Tank	1
1059	398540	Screw/Washer Kit	1

PROTOTYPE

★ Included in Gasket Set–See Ref. 358.
● Included in Carburetor Kit–See Ref. 121.
◆ Included in Carburetor Gasket Set–See Ref. 977.
† Included in Valve Overhaul Gasket Set–See Ref. 1095.

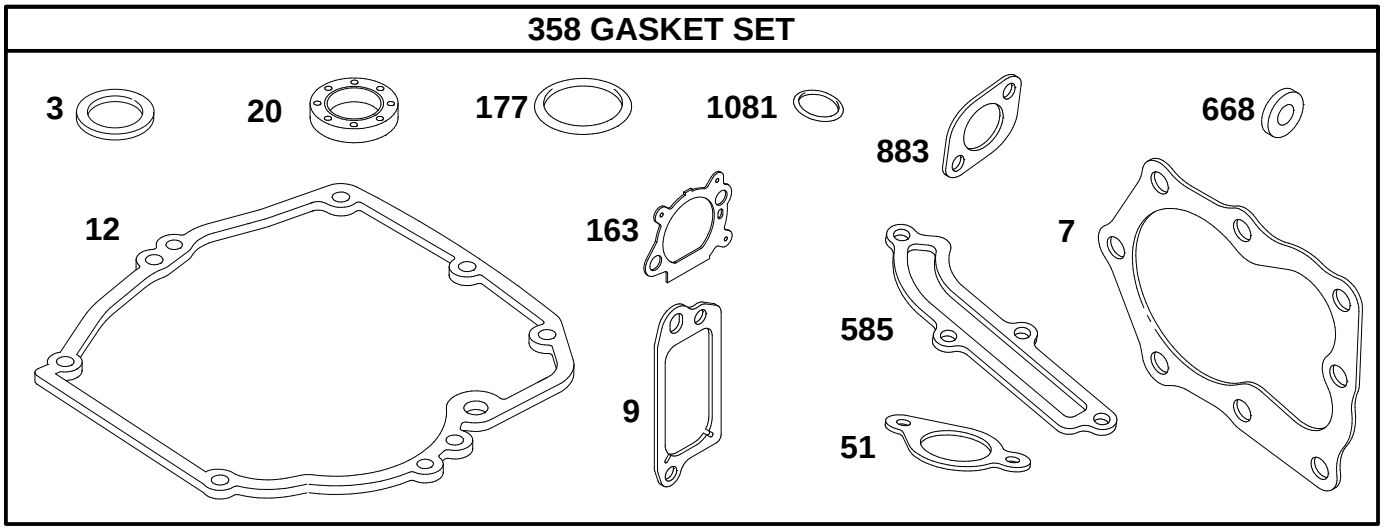

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL12H802–1767–E1

Ref. No.	Part No.	Description	No. Used
3	⋆299819	Oil Seal	1
⋆†7	272916	Cylinder Head Gasket	1
⋆†9	272481	Breather Gasket	1
⋆12	272198	Crankcase Gasket	1
⋆20	399781	Oil Seal	1
⋆51	272199	Intake Gasket	1
●104	231371	Pin–Float Hinge	1
●◆276	271716	Sealing Washer	1
⋆177	280393	O-Ring Seal	1
121	498260	Carburetor Kit	1
●127		Plug–Welch(Sold in Kit Only)	1
●134	398188	Needle/Seat Kit	1

Ref. No.	Part No.	Description	No. Used
●◆137	693981	Gasket–Bowl	1
⋆●◆163	272653	Gasket–Air Cleaner	1
358	497316	Gasket Set	1
⋆585	272238	Breather Passage Gasket	1
●◆617	270344	O–Ring Seal	1
●◆708	691321	Seal–Dust	1
⋆668	493823	Spacer(Includes 2)	1
⋆†883	272253	Gasket–Exhaust	1
977	498261	Gasket Set–Carburetor	1
⋆1081	280966	O-Ring Seal	1
1095	498528	Gasket Set–Valve Overhaul	1

PROTOTYPE

⋆ Included in Gasket Set–See Ref. 358.
● Included in Carburetor Kit–See Ref. 121.
◆ Included in Carburetor Gasket Set–See Ref. 977.
† Included in Valve Overhaul Gasket Set–See Ref. 1095.

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
605120	1	12	1	Grommet
610358	4	17	2	Nut−Jam, Locking
613227	3	14	1	Screw − Set
614426	4	11	2	Washer−Stepped
614447	4	2	2	Spacer−Axle Shaft
614596	2	5	1	Gear −34t
614650	1	26	2	Bolt−Shoulder
614672	1	27	2	Bolt−Shoulder
614673	1	13	1	Bushing − Actuator Plt
614687	1	24	2	Arm−Front Spring
614696	2	8	1	Shaft−Intermediate
26−0671	3	16	1	Screw−Blade
27−6250	4	9:4	2	Bushing
33−0441	6	2	1	Door Cover
33−0450	6	4	1	Latch Comp Spring
36−4780	2	6	2	Washer
36−4791	2	11	2	Thrust Washer
36−6910	7	4	2	Spring
38−7820	2	13	1	Bearing−Ball
40−1940	1	28	2	Washer−Wheel Bolt
46−6811	6	11	4	Screw/Washer
46−8090	6	7	2	Screw−Plastite
47−2900	4	3:2	1	Bushing
49−2040	1	9	1	Screw−Taptite
49−2040	2	9	4	Screw−Taptite
55−3760	2	10	1	15 T Pinion
60−8750	2	12	2	Bushing
60−8850	2	3	2	Bushing−Output
60−8890	2	15	1	Bevel Pinion Gear
62−6660	2	18	1	Spacer
65−2720	4	5	4	Klip Ring−Special
65−4710	4	6	2	Ring−Friction
65−4720	4	13	2	Spring−Compression
65−4730	4	16	2	Washer−Pivot Arm
65−4740	4	4	4	Washer−Keyed Thrust
65−4750	4	14	2	Pinion−Gear,15t
65−4760	4	15	2	Washer
66−6040	4	7	1	Key−Rocking
66−6050	4	8	1	Key−Rocking LH
70−9760	4	3:3	1	Bushing
82−8550−03	3	8	1	Shield−Muffler
86−9671	5	2	1	Guide−Rope
88−1090	6	1	2	RH Door Spring
88−1800	6	3	1	Door Latch
92−1004	4	18	2	Spring Arm ASM − Rear
92−1008	1	23	4	Knob−Height Adj Lever
92−1024−03	3	22	1	Belt Guide
92−1057	4	10	2	Shoulder Bolt
92−1616	1	11	1	Screw−Thread Forming
92−2260	5	14	2	Screw−Handle
92−2269	5	13	1	Screw−Handle
92−2914	1	16	1	Decal − HOC R
92−2915	1	15	1	Decal − HOC L
92−4881−03	1	35	2	Plate − Hght Adj
92−4890	1	30	2	Washer − Wheel
92−5412	5	8	1	Stop−Pivot
92−7727	2	2	1	Gearcase
92−7746	4	3	2	ASM: Rear Ht Adj Arm
92−8647	1	21	1	Shield − Trailing
92−8910	6	8	1	Decal − Danger
92−9590	4	9	2	ASM − 8” Wheel
92−9591	1	25	2	Assembly − 7” Wheel

*Not Illustrated

PROTOTYPE

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
93–0209	1	7	1	Cover – Transmission
93–0216	1	34	1	Kicker – Front
93–0217	3	12	1	Kicker – Rear
93–0219–03	3	18	1	Accelerator
93–0223–03	3	11	1	Baffle – Rear (Black)
93–0228–03	1	10	1	Guide – Transmission
93–0231	1	32	1	Screw – PPH
93–0231	3	10	1	Screw – PPH
93–0232	4	1	1	Belt – V
93–0233	1	17	1	ASM – LH Handle Bracket
93–0234	1	5	1	ASM – RH Handle Bracket
93–0239	2	7	1	Shaft – Output
93–0240	1	14	1	ASM – Transmission
93–0241	3	19	1	Blade – Steel Deck (Raw)
93–0242	6	10	4	Grommet
93–0243	3	3	1	Shroud–Quantum Wedge
93–0263	6	5	1	Chute – Discharge
93–0264	6	13	1	Door – Discharge
93–0266	7	2	1	Door – Bag
93–0267–03	6	6	1	Plate–Discharg Chute
93–0281	7	5	1	Frame – Upper Bag
93–0282	7	3	1	Frame – Lower Bag
93–0283	7	7	1	Hinge – Bag Door
93–0284	7	6	1	Bag – Grass
93–4105	1	6	1	Decal – Bag Door
93–4196–03	3	15	1	Shield – Grass
93–4354	3	4	1	Decal – Recoil
93–6667	1	4	1	Decal – Warning
93–7380	5	18	1	Anchor – Cable
94–1609	4	12	2	Cover–Wheel
94–6096	5	12	1	Anchor – Cable
94–6097	5	5	1	Stop
95–1726	3	13	3	Screw–Taptite w/Patch
95–1878	3	21	1	Pulley
95–7403–03	1	29	2	Brkt–Whl Ht Adj
98–3206	3	2	1	Nameplate – Toro
98–7134	5	15	2	Knob–Handle
98–8332	3	34	1	Knob
99–1569–05	5	4	1	Handle–Upper
99–1570–03	5	6	1	Bail–Brake
99–1571–03	5	7	1	Bail–Traction
99–1586	5	9	1	Cable–Traction
99–1587	5	10	1	Cable–Brake
99–5236	3	36	1	Housing Sp Steel (Service)
99–5291	3	26	1	Rod–Cover (Steel Side Discharge)
99–5292	3	27	1	Bracket–Cover (Steel Side Discharge)
99–5293	3	28	1	Spring–Torsion (Steel Side Discharge)
99–5294	3	29	1	Cover–Side (Steel Side Discharge)
99–5295	3	30	1	Chute–Side (Side Discharge)
99–6021–05	5	17	1	Lower Handle
99–6345	3	25	1	Decal – Deck (Int Steel)
99–6349	3	35	1	Baffle
100–1176	2	17	2	Pulley Half
100–1178	3	20	1	ASM–Blade Driver – Gts 10
100–1179–03	1	33	1	Baffle Front – Weldment (Black)
100–1589–03	3	33	1	Clamp–Door
2210–316	3	5	1	Stop–Rope F/W Engine
302–56	4	3:1	1	Fitting–Zerk
322–3	1	20	6	Screw–HH
3229–11	3	31	2	Screw–CARR
3253–22	3	17	1	Washer–Lock/Sp
3256–1	5	11	1	Washer–Flat

*Not Illustrated

PROTOTYPE

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3256−24	2	14	1	Washer−Flat
3285−19	2	4	2	Pin−Groove
3290−378	5	16	1	Tie−Cable
3290−422	7	1	2	Nut−Push
3296−2	1	3	1	Nut−Lock Esna
3296−5	2	16	1	Nut−Lock Ni
3296−29	1	22	6	Nut−Lock Ni
3296−39	1	31	2	Nut−Lock Ni
3296−73	5	1	2	Nut−Lock
32105−27	1	2	1	Screw
32128−32	3	23	2	Nut−Hex, Flange
32144−4	1	1	3	Screw−HH
32144−32	6	12	2	Screw
32144−73	3	9	3	Screw
32144−85	4	19	2	Screw−TAP
32144−111	6	9	1	Screw−Plask
32144−119	1	8	1	Screw−Pth
32144−121	3	6	2	Screw−Pan Hd
614668−03	2	1	1	Gear Case Cover

PROTOTYPE

*Not Illustrated